Form No. 3484-742 Rev A

TORO®

Count on it.

Parts Catalog

Blower Kit

GrandStand® Multi Force® Mower

Model No. 78593—Serial No. 422290000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3484-742 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Blower Frame Assembly 4
Idler Torsion Assembly No. 137-6449 6
Blower Hitch, Motor and Pulley Assembly 8
Hydraulic Motor Assembly No. 99-0156 10
Turbine and Fan Guard Assembly 12
Turbine Assembly No. 127-6277 14
Nozzle Assembly 16

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Blower Frame Assembly

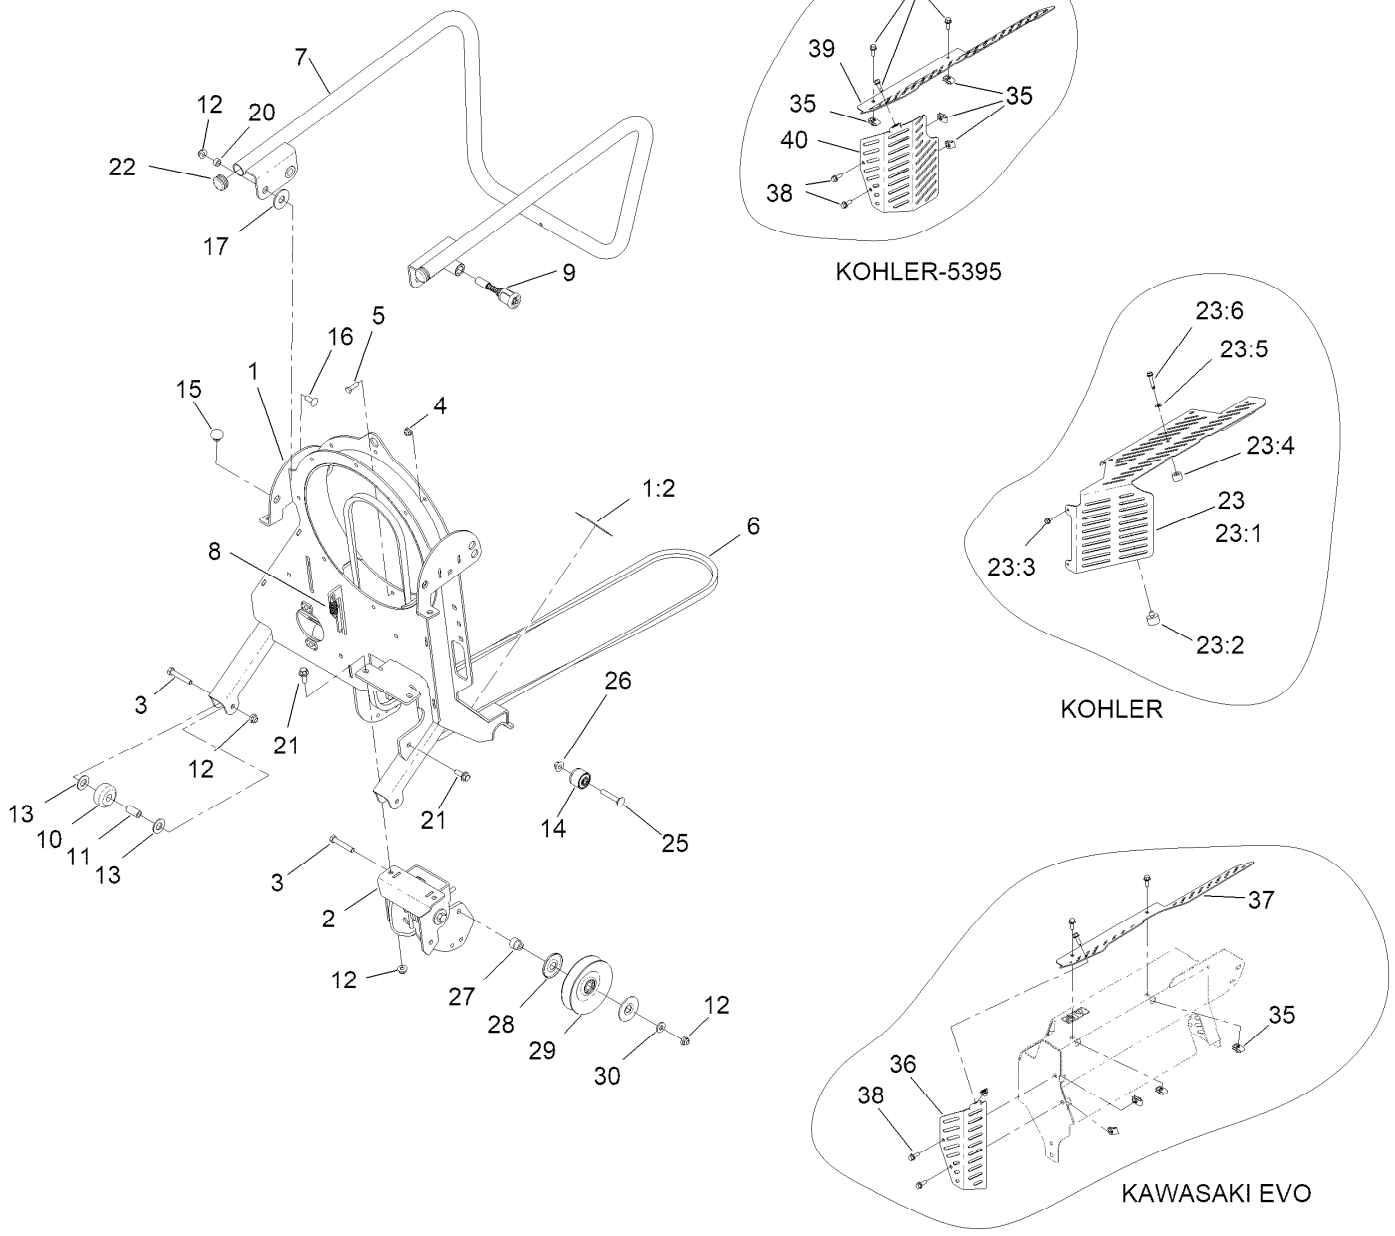

Blower Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-1110	1	Blower Frame ASM
1:2	119-0217	2	Decal-Danger
2	137-6449	1	Idler Torsion ASM
3	323-11	3	Screw-HH
4	119-4041	5	Nut-HF
5	322-5	1	Screw-HH
6	137-6376	1	Belt-V
7	137-6375-03	1	Kickstand-Blower
8	613386	1	Spring-Brake
9	116-0104	2	Pin-Spring
10	108-4293	2	Roller
11	108-6544	2	Spacer
12	119-4042	8	Nut-HF, NI
13	3256-27	4	Washer-Flat
14	138-1082	2	Pivot-Mount ASM
15	104-1412	2	Bumper-Rubber
16	3231-22	2	Screw-CARR
17	112-3788	2	Spacer
20	111044	2	Spacer
21	131-2220	3	Screw-HHF
22	138-0996	2	Cap-Tube
23	139-1482	1	Leaf Guard Kit
23:1	138-8846-03	1	Guard-Leaf
23:2	120-7893	2	Bumper-Grommet
23:3	32104-116	2	Screw-HWHTF
23:4	58-1540	1	Spacer-Nylon
23:5	136-7288	1	Washer-Nylon
23:6	32104-97	1	Screw-HWH Thd Cut
25	3231-7	2	Screw-CARR
26	32128-19	2	Nut-HF Lock,Large Flg
27	1-603496	1	Bushing-Idler
28	126-9195	2	Shield-Guard, Dust
29	1-603805	1	Pulley-Idler
30	9202414	1	Washer-Spacer
35	107069	5	Clip
36	163-4057-05	1	Guard-Leaf
37	163-4058-05	1	Guard-Leaf
38	120-9678	5	Screw-HHF
39	146-8533-05	1	Guard-Leaf,Mf Kohler
40	146-8534-05	1	Guard-Leaf,Mf Kohler


Idler Torsion Assembly No. 137-6449

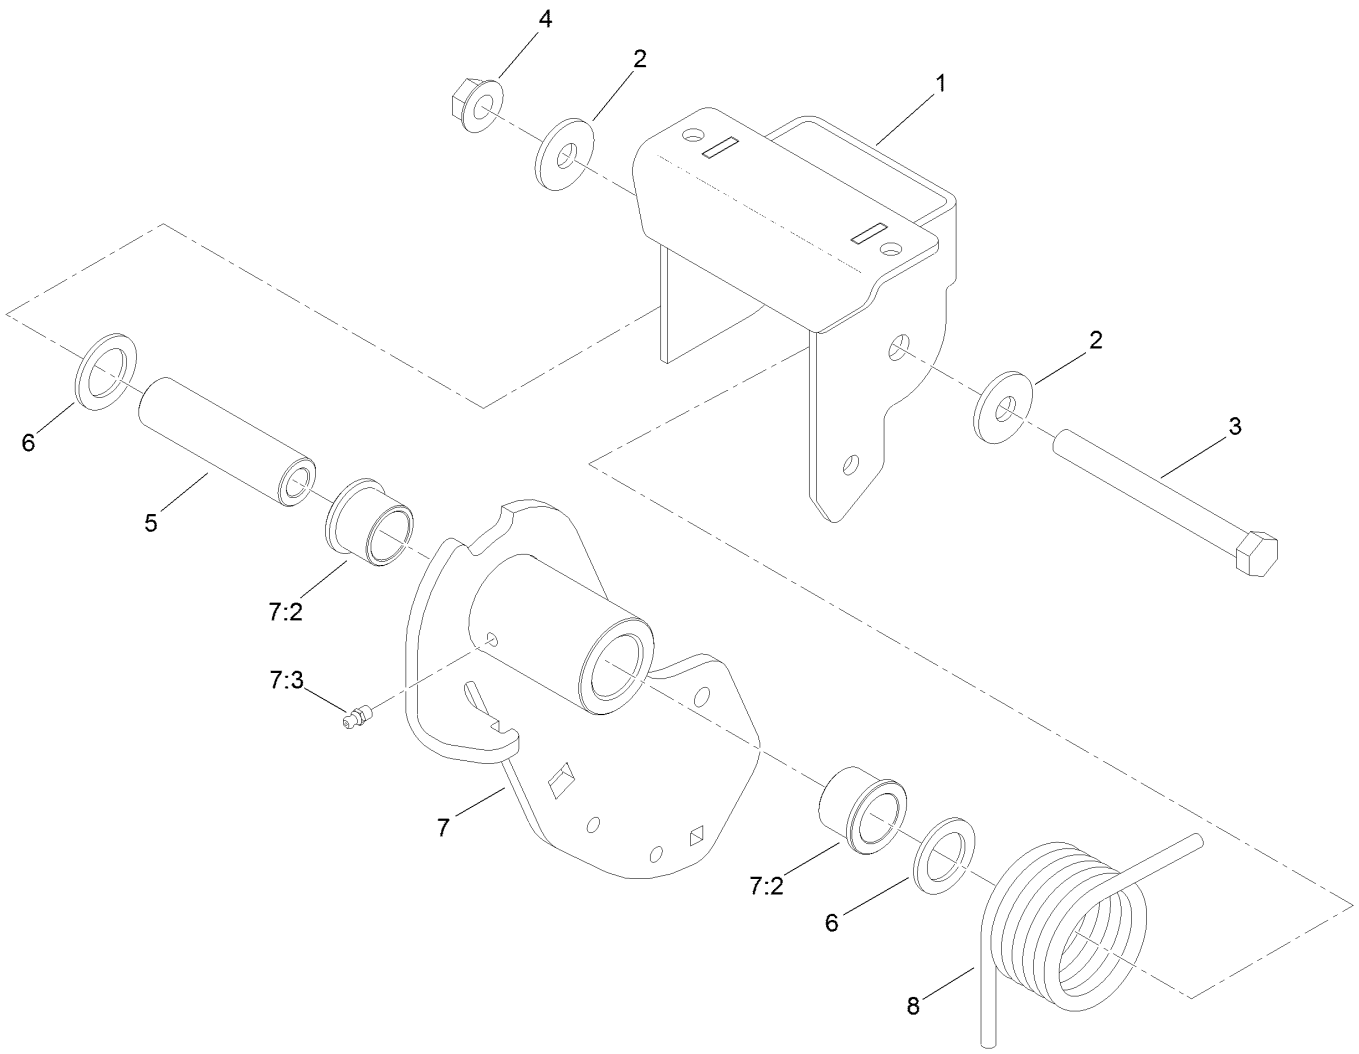

Idler Torsion Assembly No. 137-6449 (continued)

Ref.	Part Number	Qty.	Description
1	137-6359	1	Bracket-Tensioner, Idler
2	63-3340	2	Washer-Support
3	325-19	1	Screw-HH
4	32128-23	1	Nut-HF
5	136-7394	1	Spacer-Plain
6	136-5734	2	Spacer-Hardened
7	137-6400	1	Idler Tensioner Arm ASM
7:2	94-8949	2	Bushing-Flange
7:3	302-19	1	Fitting-Grease
8	108-1921	1	Spring-Torsion


Blower Hitch, Motor and Pulley Assembly

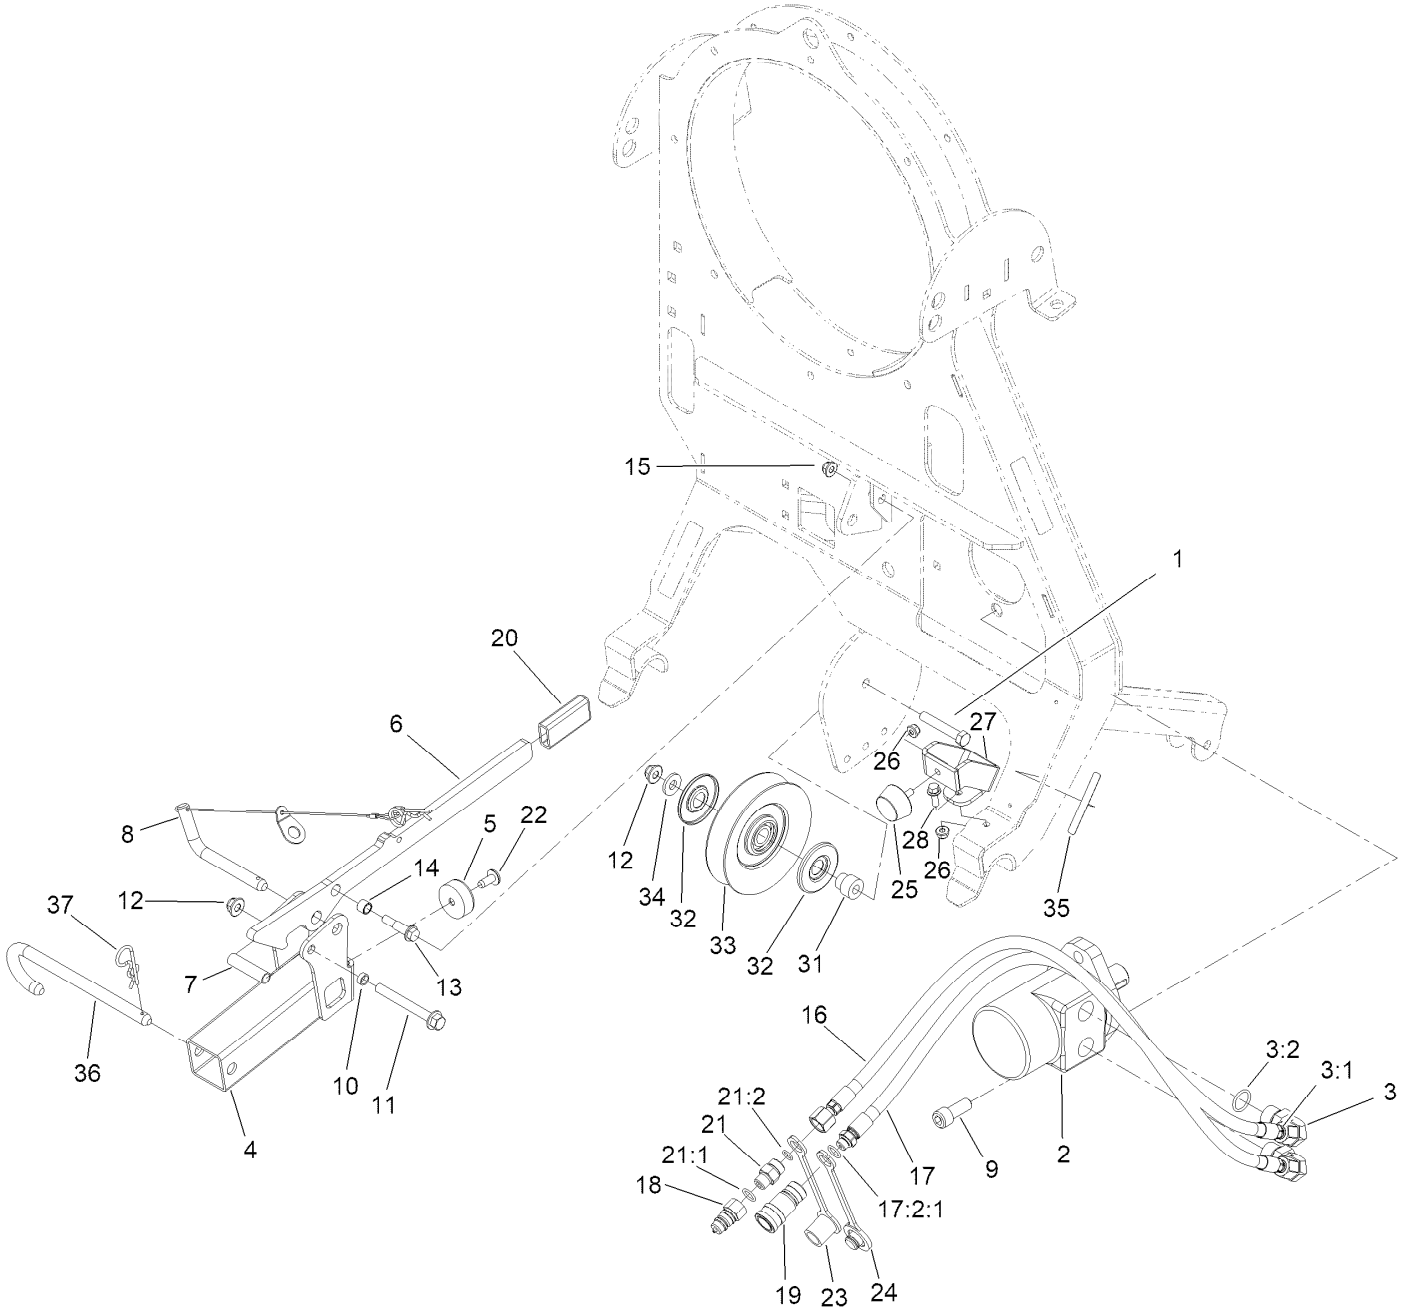

Blower Hitch, Motor and Pulley Assembly (continued)

Ref.	Part Number	Qty.	Description
1	323-11	1	Screw-HH
2	99-0156	1	HYD Motor ASM
3	340-130	2	Fitting-Elbow 90
3:1	237-22	1	O-Ring
3:2	237-80	1	O-Ring
4	137-6385-03	1	Blower Hitch ASM
5	133-0308	1	Bumper-Rubber
6	137-6386-03	1	Handle-Latch
7	93-2464	1	Spacer-Roller
8	119-8970	1	Pin-ROPS W/ Lanyard
9	3274-89	2	Screw-HSH
10	76-9100	1	Spacer
11	3234-41	1	Screw-HHF
12	119-4042	2	Nut-HF, NI
13	116-8607	1	Screw-Shoulder
14	131-3951	1	Bushing
15	119-4041	1	Nut-HF
16	137-6396	1	Hose ASM
17	137-6398	1	Hose ASM
17:2:1	237-42	1	O-Ring
18	63-1240	1	Nipple-Disconnect, Quick
19	63-1220	1	Coupler-Disconnect, Quick
20	116-4312	1	Grip-Flat
21	114-7783	1	Fitting-Straight
21:1	237-22	1	O-Ring
21:2	237-42	1	O-Ring
22	138-9753	1	Screw
23	353-985	1	Cap-Dust
24	353-984	1	Plug-Dust
25	131-8834	1	Bumper
26	119-4040	2	Nut-HF, NI
27	164-3247-03	1	Bracket-Stop
28	120-9678	1	Screw-HHF
31	1-603496	1	Bushing-Idler
32	126-9195	2	Shield-Guard, Dust
33	1-603805	1	Pulley-Idler
34	9202414	1	Washer-Spacer
35	133-8061	1	Decal-Warning
36	133-2021	1	Pin-Hitch
37	92-2762	1	Pin-Hair

Hydraulic Motor Assembly No. 99-0156

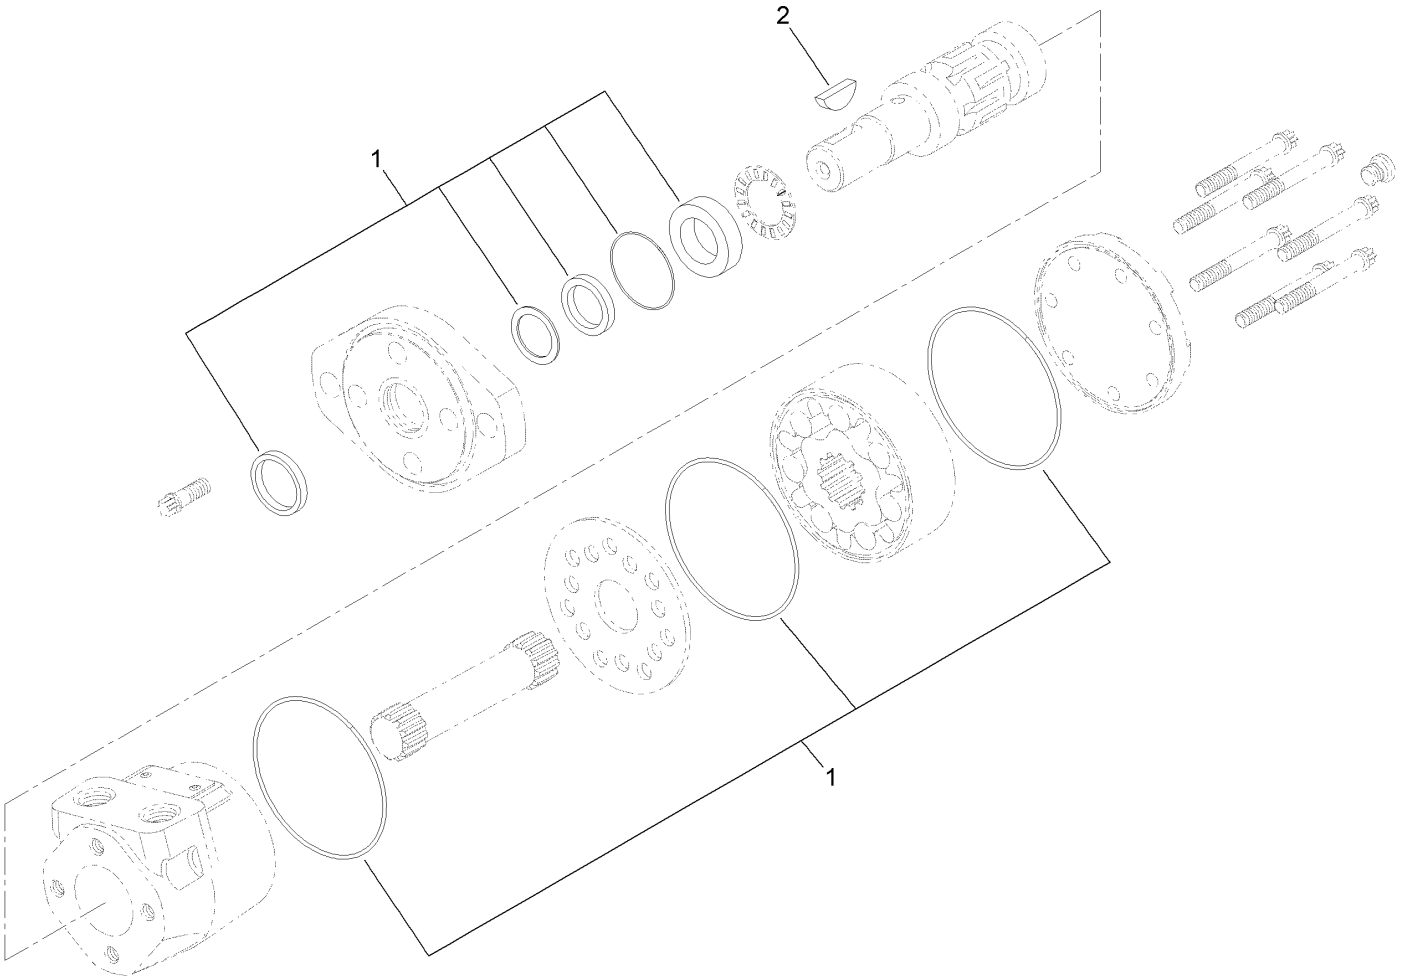


Hydraulic Motor Assembly No. 99-0156 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	100-1446	1	Seal Kit ●
2	3257-8	1	Key-Woodruff

● Not illustrated


Turbine and Fan Guard Assembly

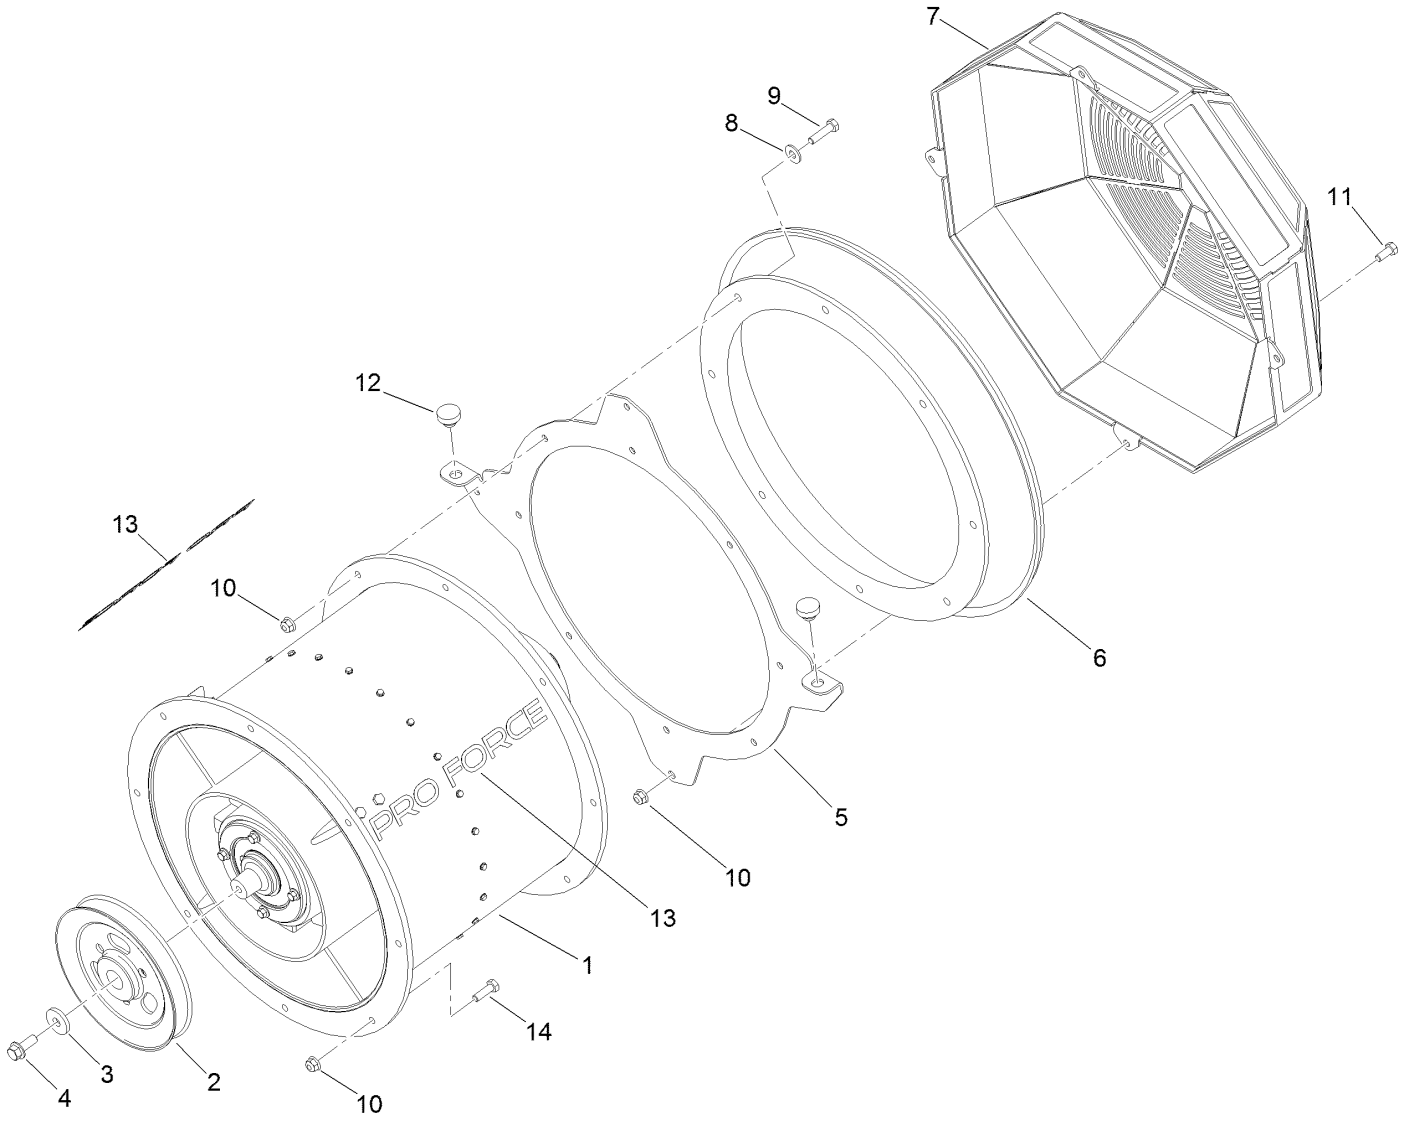

Turbine and Fan Guard Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-6277	1	Turbine ASM
2	138-1132	1	Pulley
3	99-2098	1	Washer
4	131-2220	1	Screw-HHF
5	137-6393-03	1	Bracket-Guard
6	117-8329	1	Bell-Inlet
7	127-6329-03	1	Guard-Fan
8	3256-3	8	Washer-Flat
9	322-6	8	Screw-HH
10	119-4041	13	Nut-HF
11	322-3	4	Screw-HH
12	104-1412	2	Bumper-Rubber
13	138-1117	2	Decal
14	322-5	5	Screw-HH


Turbine Assembly No. 127-6277

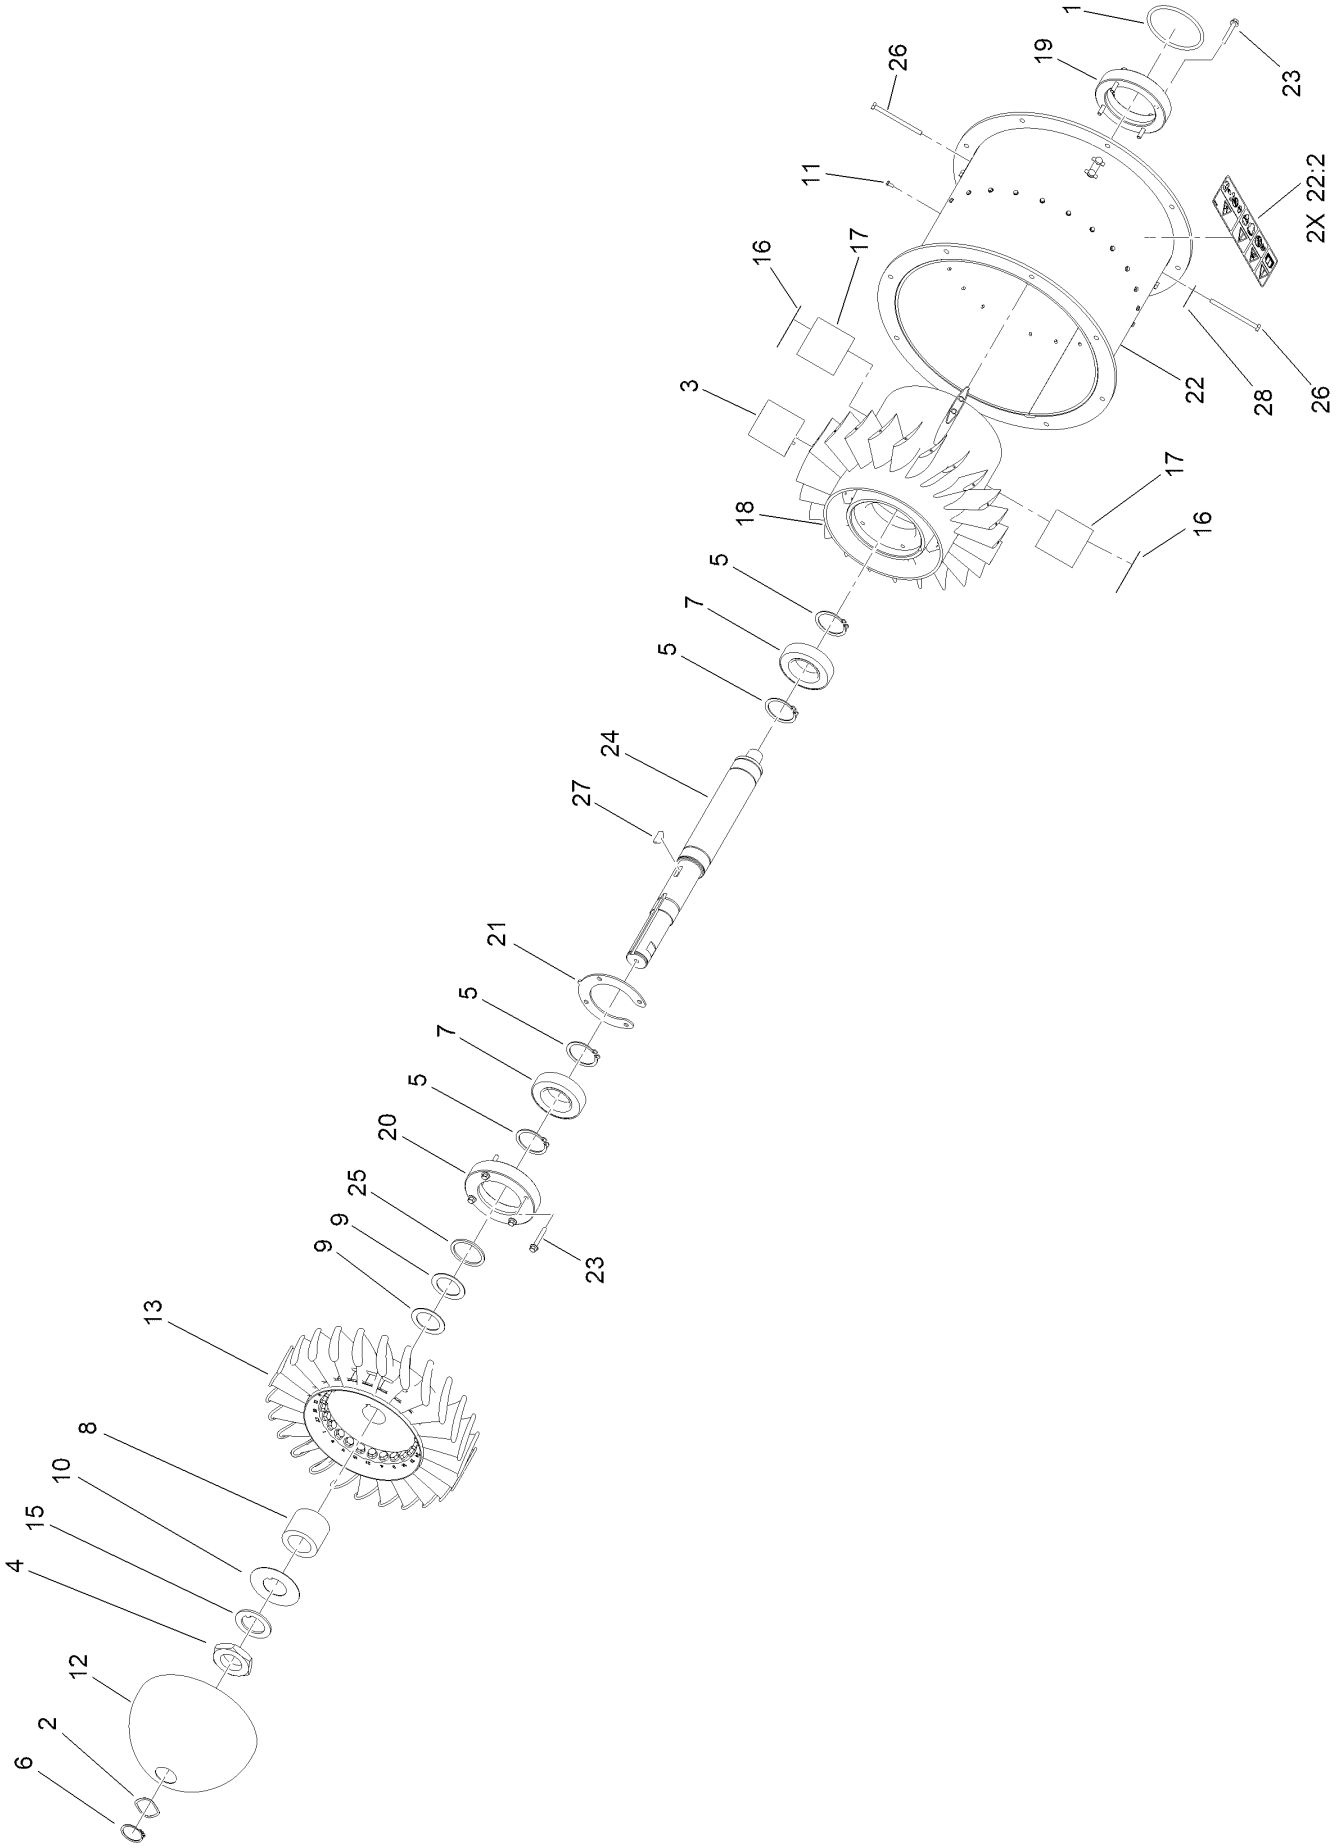

Turbine Assembly No. 127-6277 (continued)

Ref.	Part Number	Qty.	Description
1	92-9533	1	O-Ring
2	93-4632	1	Washer-Wavey
3	112-1871	24	Vane-Stator
4	112-1899	1	Nut
5	112-1951	4	Ring-Snap, EXT
6	112-1952	1	Ring-Snap, EXT
7	112-6764	2	Bearing-Ball
8	114-2164	1	Spacer
9	115-5131	2	Washer
10	115-9005	1	Washer-Tab
11	117-8303	24	Screw-HWH
12	131-9440	1	Cap-Front
13	117-8356	1	Rotor
15	119-6202	1	Washer-Tab
16	119-6207	2	Spacer-Fin
17	119-6444	4	Mount-Fin
18	145-7583	1	Inner Housing
19	120-6042	1	End-Oring
20	120-6061	1	Bearing-Cap
21	120-6063	1	End-Cap
22	125-4284	1	Vertical Housing ASM
22:2	137-3999	2	Decal-Danger
23	125-4287	8	Screw-HHF
24	127-6278	1	Shaft-Fan
25	127-6298	1	Spacer-Bearing
26	321-19	8	Screw-HH
27	3257-42	1	Key-Woodruff
28	140-6815	4	Tab-Locking

Nozzle Assembly

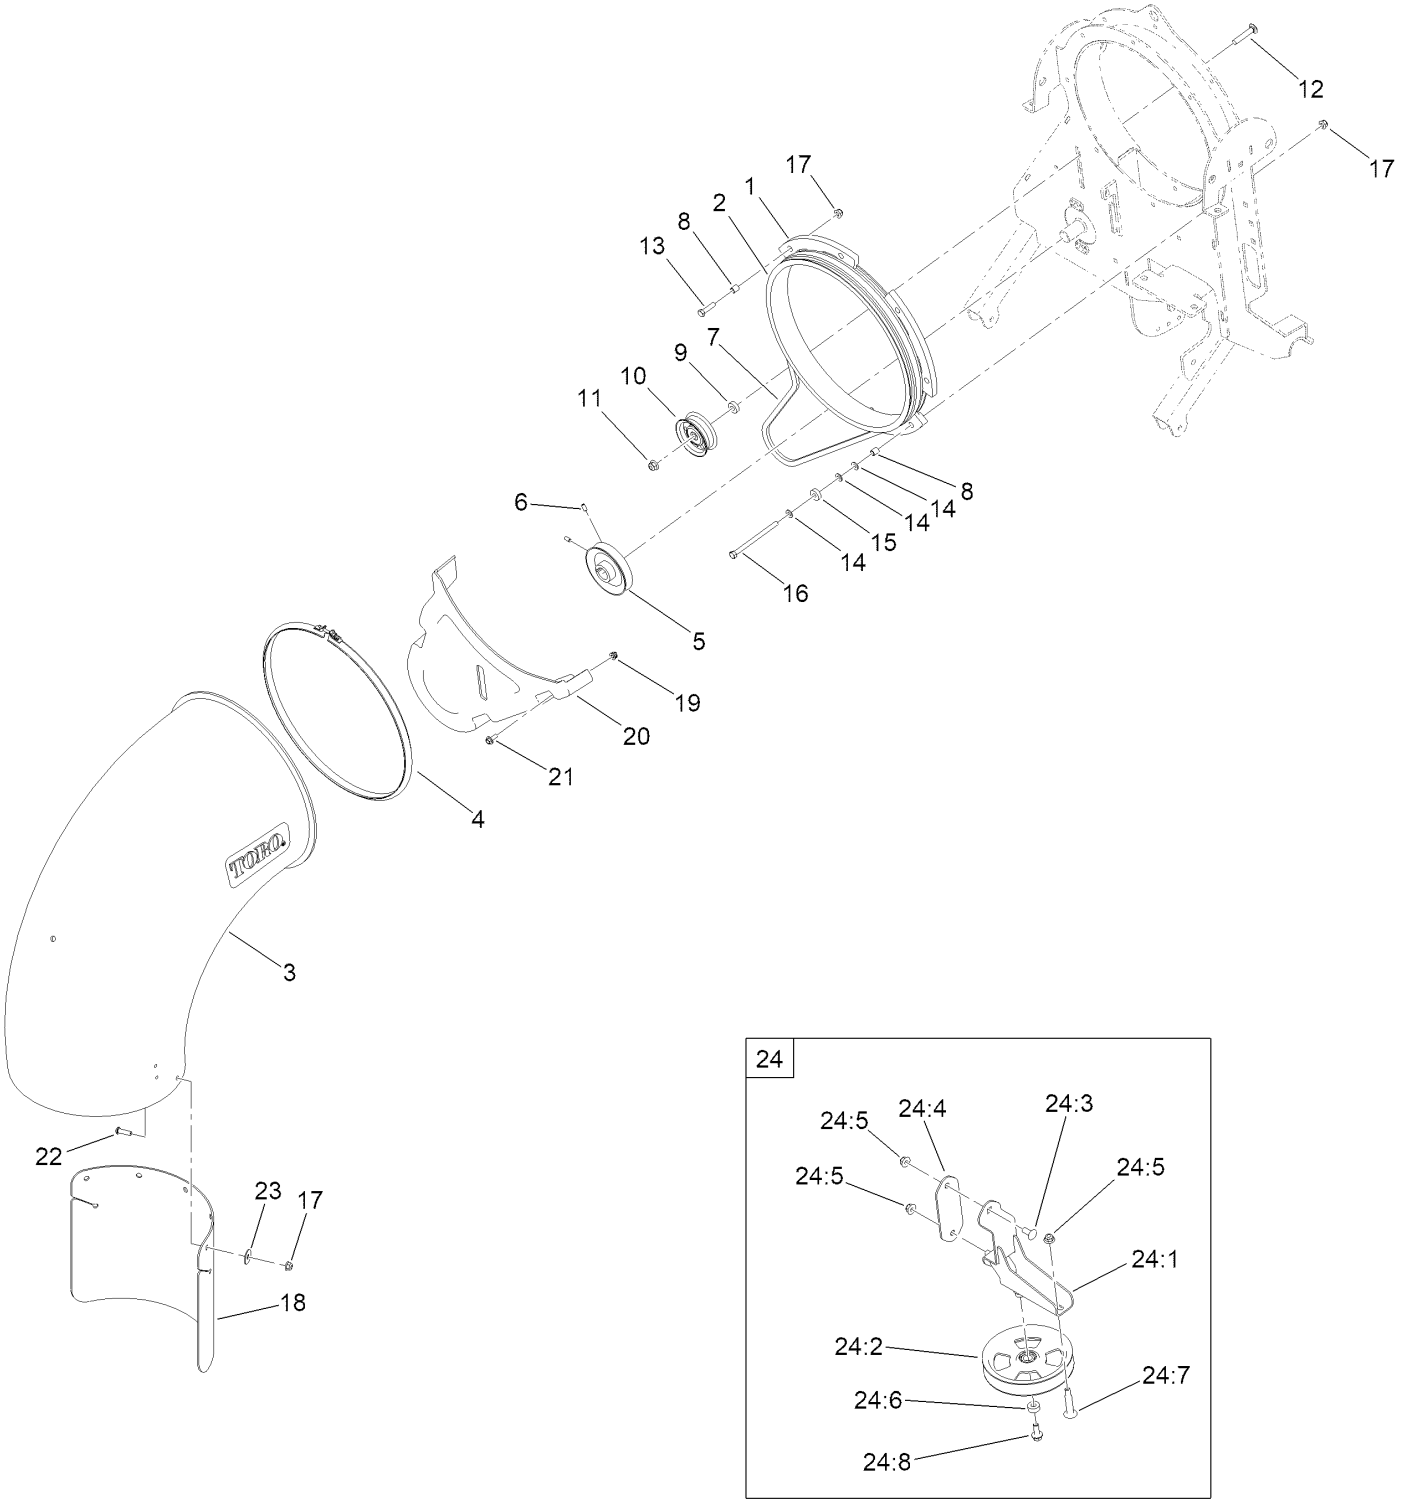

Nozzle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-9868	4	Guide-Nozzle
2	112-1874	1	Pulley-Nozzle
3	137-6374	1	Nozzle
4	112-6899	1	Clamp-Nozzle
5	138-5801	1	Pulley
6	3245-9	2	Screw-Set, HSH
7	137-6384	1	Belt-V
8	93-6859	8	Spacer
9	5-0652	1	Spacer
10	130-8362	1	Pulley-Idler, Flat
11	119-4042	1	Nut-HF, NI
12	117-9971	1	Bolt-Carriage
13	322-6	6	Screw-HH
14	3256-74	6	Washer-Flat
15	251-259	2	Bearing-Ball
16	322-38	2	Screw-HH
17	119-4041	13	Nut-HF
18	137-6379	1	Extension-Nozzle
19	94-1610	3	Nut-Clip
20	137-6389	1	Cover-Belt
21	46-6811	3	Screw-Thd Roll Sems
22	3274-104	5	Screw-HSBH
23	3256-35	5	Washer-Flat
24	139-1546	1	Idler Kit, Proforce
24:1	139-5524-03	1	Idler-Bracket [black]
24:2	132-9424	1	Pulley-Idler, Flat
24:3	3231-27	2	Screw-CARR
24:4	139-5525-03	1	Plate [black]
24:5	119-4042	3	Nut-HF, NI
24:6	104-8426	1	Spacer
24:7	92-1057	1	Bolt-Shoulder
24:8	3234-42	1	Screw-HHF

Notes:

Notes:



Count on it.