Form Number 3352-516

Mid-Size ProLine, T-Bar, Gear Drive, 15 HP
with 48in Side Discharge Mower

Model No. 30197 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel System Assembly	3
Transmission and Drive Assembly	4
Axle and Wheel Assembly	6
Upper Handle Assembly	8
Front Caster and Blade Brake Assembly	9
Spindle and Blade Assembly	11
Idler Pulley Assembly	12
Deck Assembly	13
Deflector Assembly No. 107-4140	14
Crankshaft Assembly Kohler CV15T 41624	15
Crankcase Assembly Kohler CV15T 41624	16
Oil Pan / Lubrication Assembly Kohler CV15T 41624	17
Head / Valve / Breather Assembly Kohler CV15T 41624	18
Ignition / Electrical Assembly Kohler CV15T 41624	19
Blower Housing and Baffle Assembly Kohler CV15T 41624	20
Starting System Assembly Kohler CV15T 41624	21
Fuel System Assembly Kohler CV15T 41624	22
Engine Control Assembly Kohler CV15T 41624	23
Air Intake / Filtration Assembly Kohler CV15T 41624	24
Exhaust Assembly Kohler CV15T 41624	25
Attachments and Accessories List	26

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated


❷ Not serviced separately

❸ Obtain Parts From Your Local Kohler Dealer

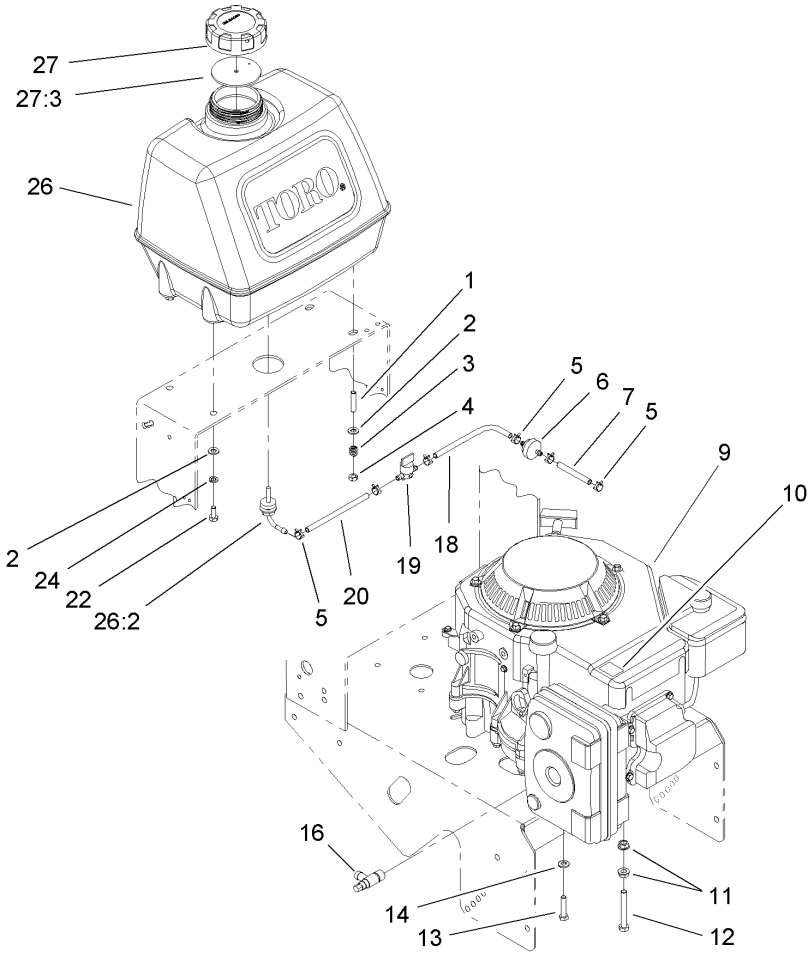

Engine and Fuel System Assembly


Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	6	Clamp
6	1-303197	1	Filter-Fuel
7	47-2983	1	Hose-Fuel
❷9		1	Engine-Kohler, Cv15t-41624
10	106-0699	1	Decal-Warning, Hot Surfaces
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	33114-025	4	Screw-HH
14	1-303334	4	Washer-Spring
16	103-1965	1	Valve-Drain, Oil
18	1-603776	1	Hose-Line, Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas

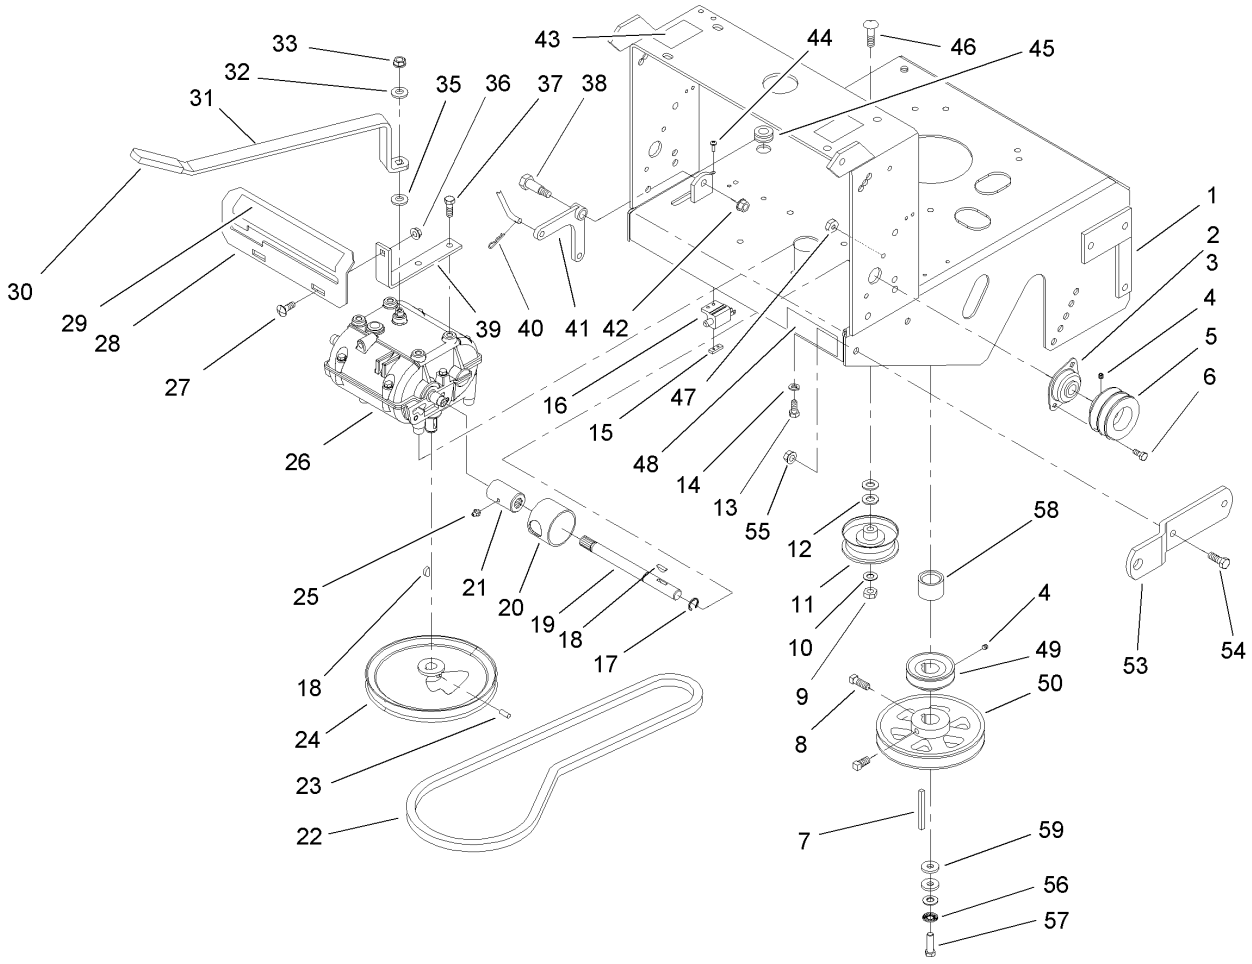

Transmission and Drive Assembly


Ref	Part No.	Qty.	Description
1	103-2923-01	1	Frame-Deck, Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513152	1	Switch-Closed, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission

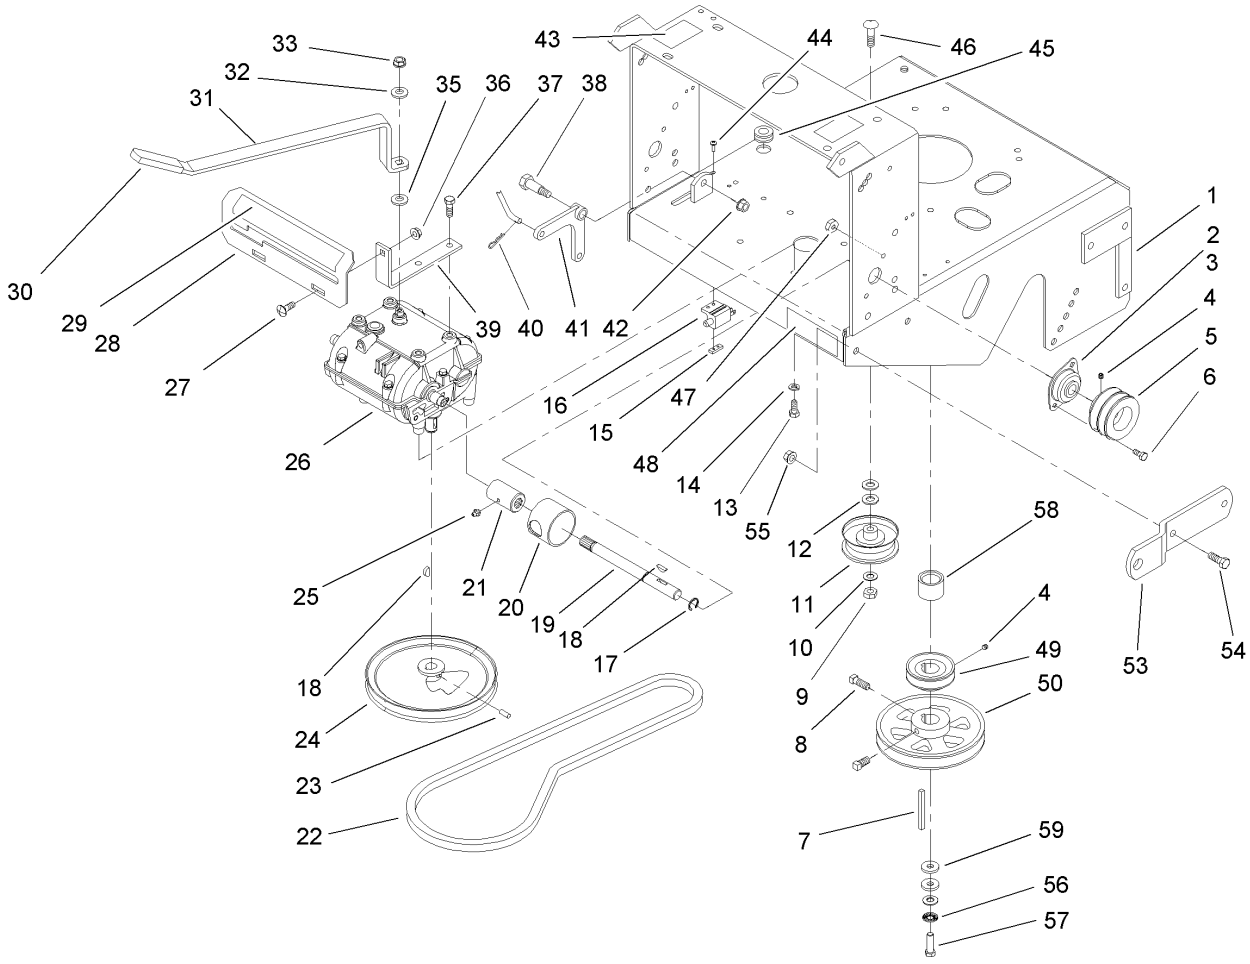

Transmission and Drive Assembly (continued)


Ref	Part No.	Qty.	Description
50	1-403160	1	Sheave
53	1-323318-01	2	Hitch-Sulky
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer

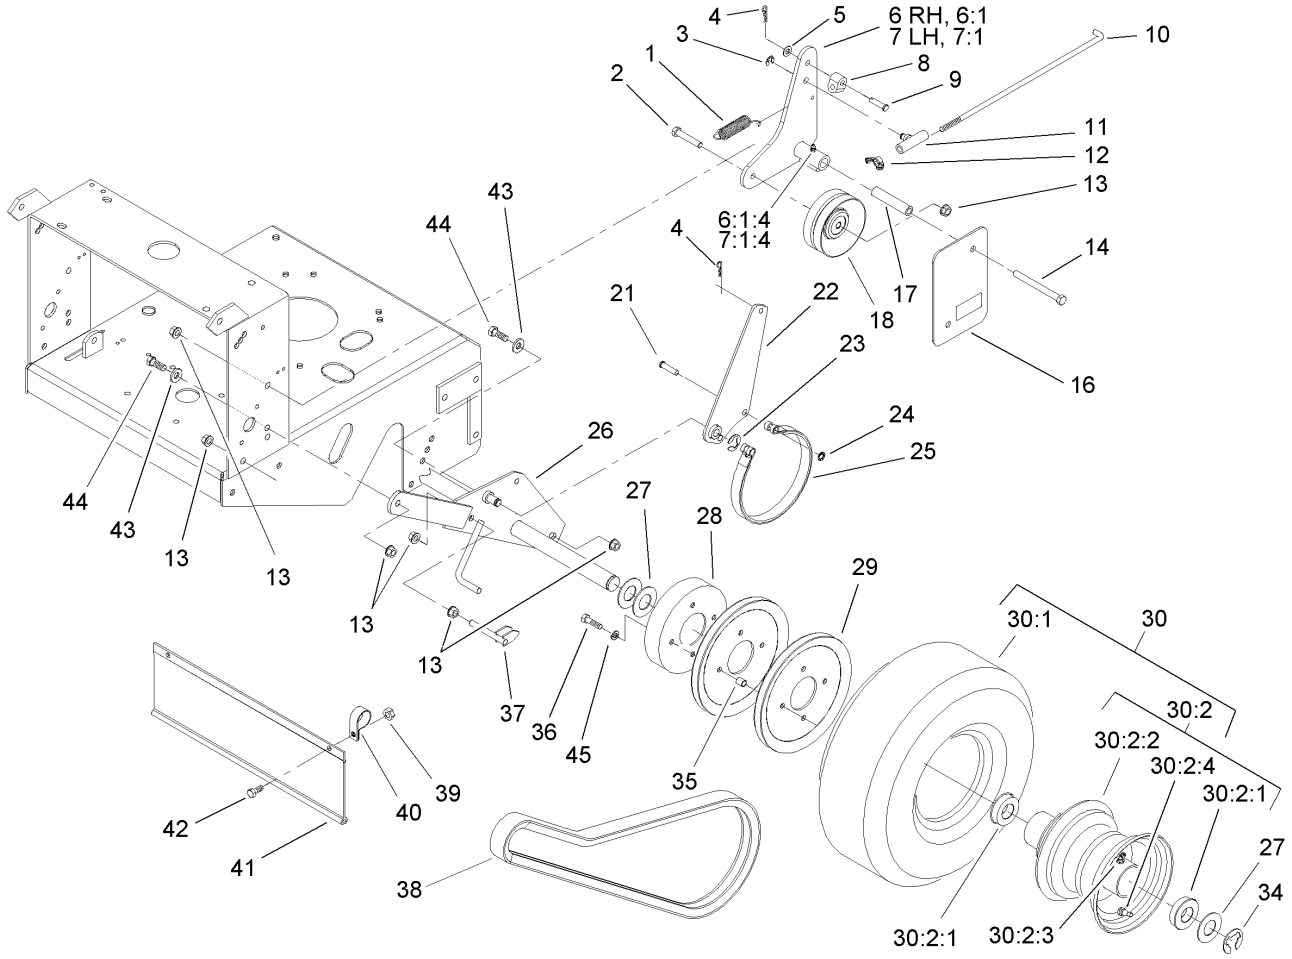

Axle and Wheel Assembly


Ref	Part No.	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Hair
5	3256-23	2	Washer-Flat
6	104-1321-03	1	RH Idler Arm ASM
❷6:1		1	RH Idler Arm ASM
6:1:4	302-19	1	Fitting-Grease
7	104-1322-03	1	LH Idler Arm ASM
❷7:1		1	LH Idler Arm ASM
7:1:4	302-19	1	Fitting-Grease
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External

Ref	Part No.	Qty.	Description
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322212-03	1	Axle ASM
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive
❷30		2	Wheel And Tire ASM
30:1	1-323720	1	Tire-Turfmaster
30:2	1-323328	1	Wheel And Hub ASM
30:2:1	1-323329	2	Bearing-Flanged
❷30:2:2		1	Rim ASM
❷30:2:3		1	Fitting-Grease
❷30:2:4		1	Stem-Valve
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville

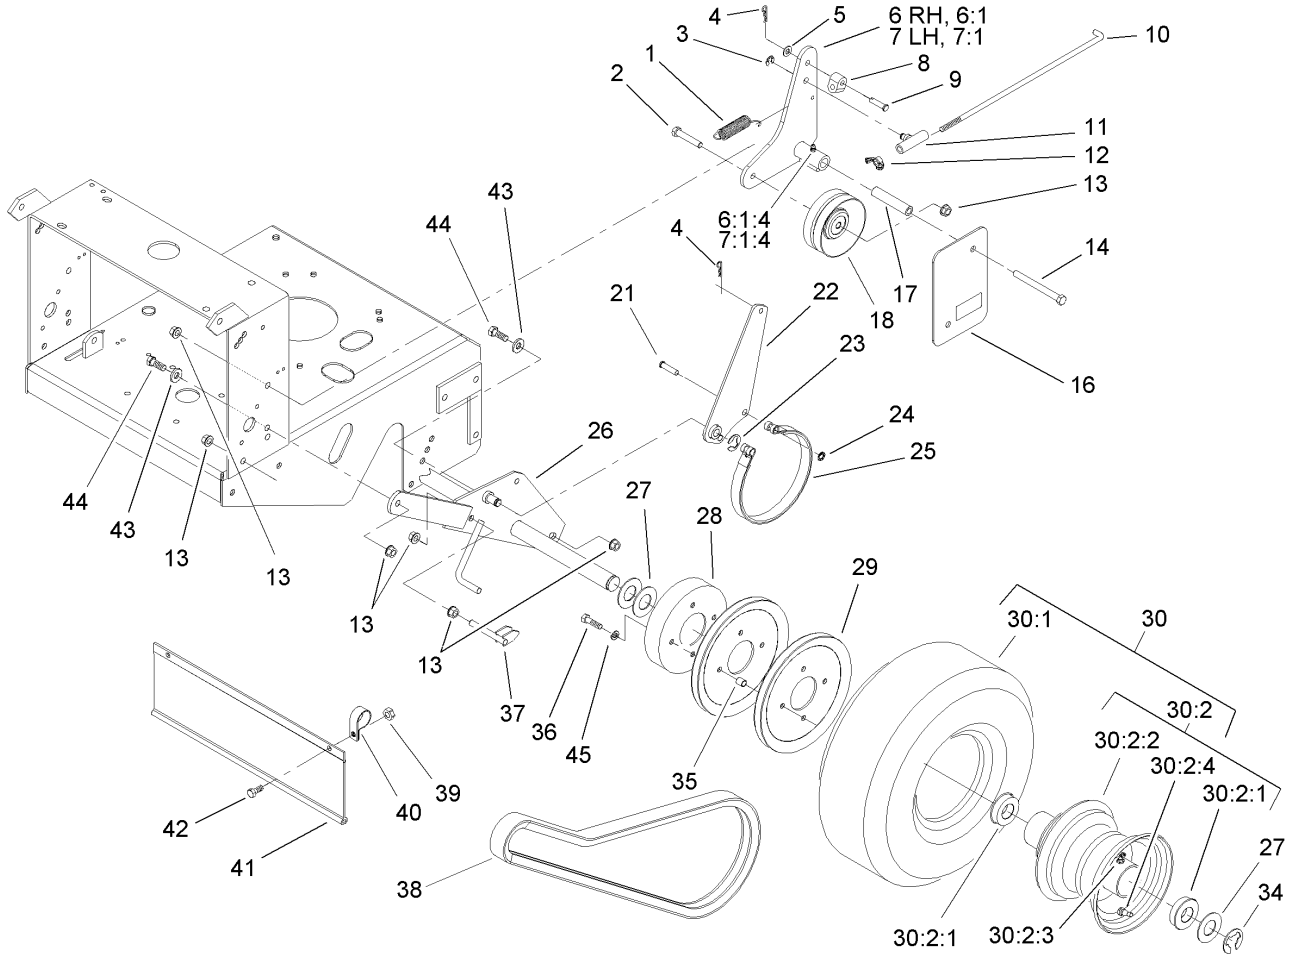

Axle and Wheel Assembly (continued)


Ref	Part No.	Qty.	Description
44	323-6	4	Screw-HH
45	1-373034	8	Washer

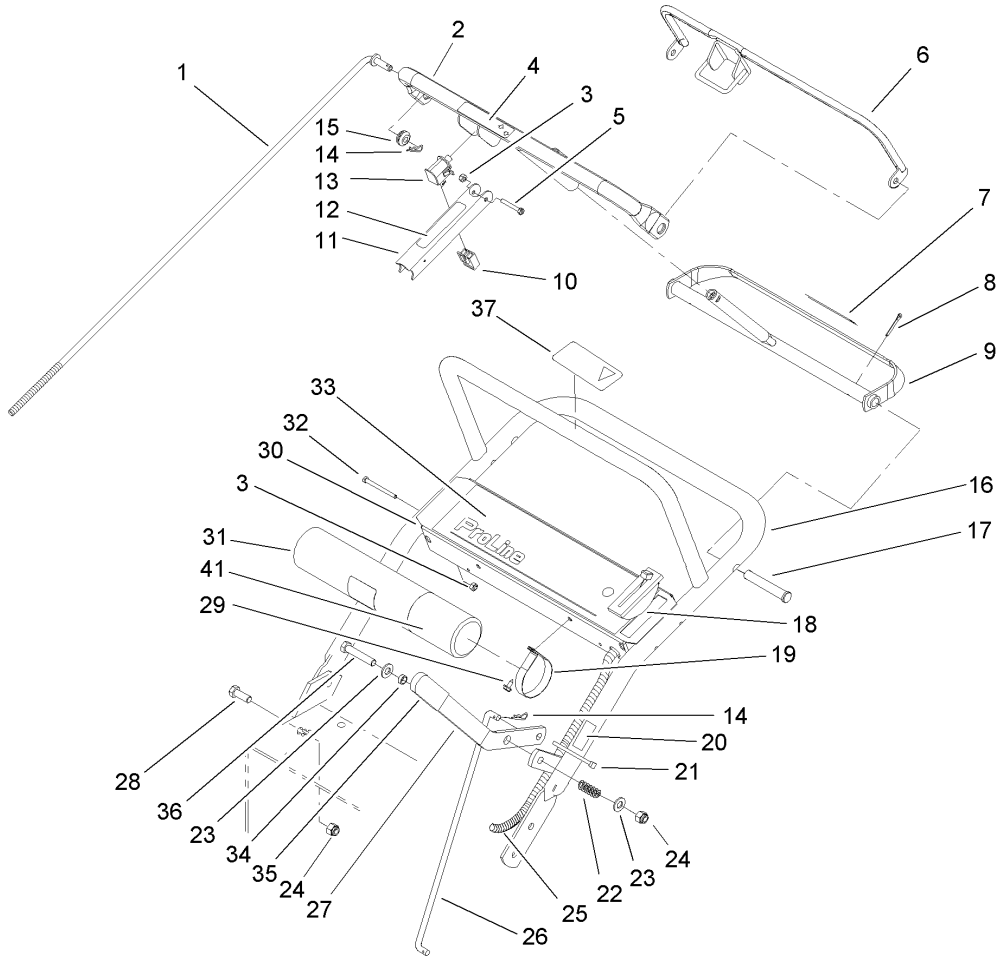

Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	98-3282	2	Rod-Control
2	95-5522-03	1	Control Bar ASM
3	3296-2	5	Nut-Lock
4	82-2290	1	Decal
5	32105-1	1	Screw-SHH
6	82-7680-03	1	Bail ASM
7	82-2280	1	Decal
8	3272-11	2	Pin-Cotter
9	99-8501-03	1	Control-Pivot ASM
10	218-595	1	Connector-Body
11	98-3261-03	1	Lever-Brake, Parking
12	98-3266	1	Decal
13	740275	1	Switch-Seat
14	1-806003	3	Pin-Hair
15	237-141	2	Grommet-Rubber
16	98-3267-03	1	Upper Handle ASM
17	283-55	2	Pin-Clevis
18	1-323637	1	Cable-Throttle
19	2412-120	2	R-Clamp
20	95-5537	1	Decal-Engage, Deck
21	1-303335	1	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-24	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI


Ref	Part No.	Qty.	Description
25	98-3258	1	Harness-Wire
26	98-3279	1	Linkage-Drive, Blade
27	98-3287-03	1	Lever-Engagement, Blade
28	323-6	4	Screw-HH
29	32104-76	2	Screw
30	1-304259	1	Panel-Control
31	104-7050	1	Housing-Manual
32	32105-14	4	Screw-SHH
33	106-0709	1	Decal
34	99-8509	1	Spacer
35	1-303020	1	Grip-Lever
36	323-10	1	Screw-HH
37	98-4387	1	Decal-Protection, Ear
41	104-7048	1	Cap-Housing

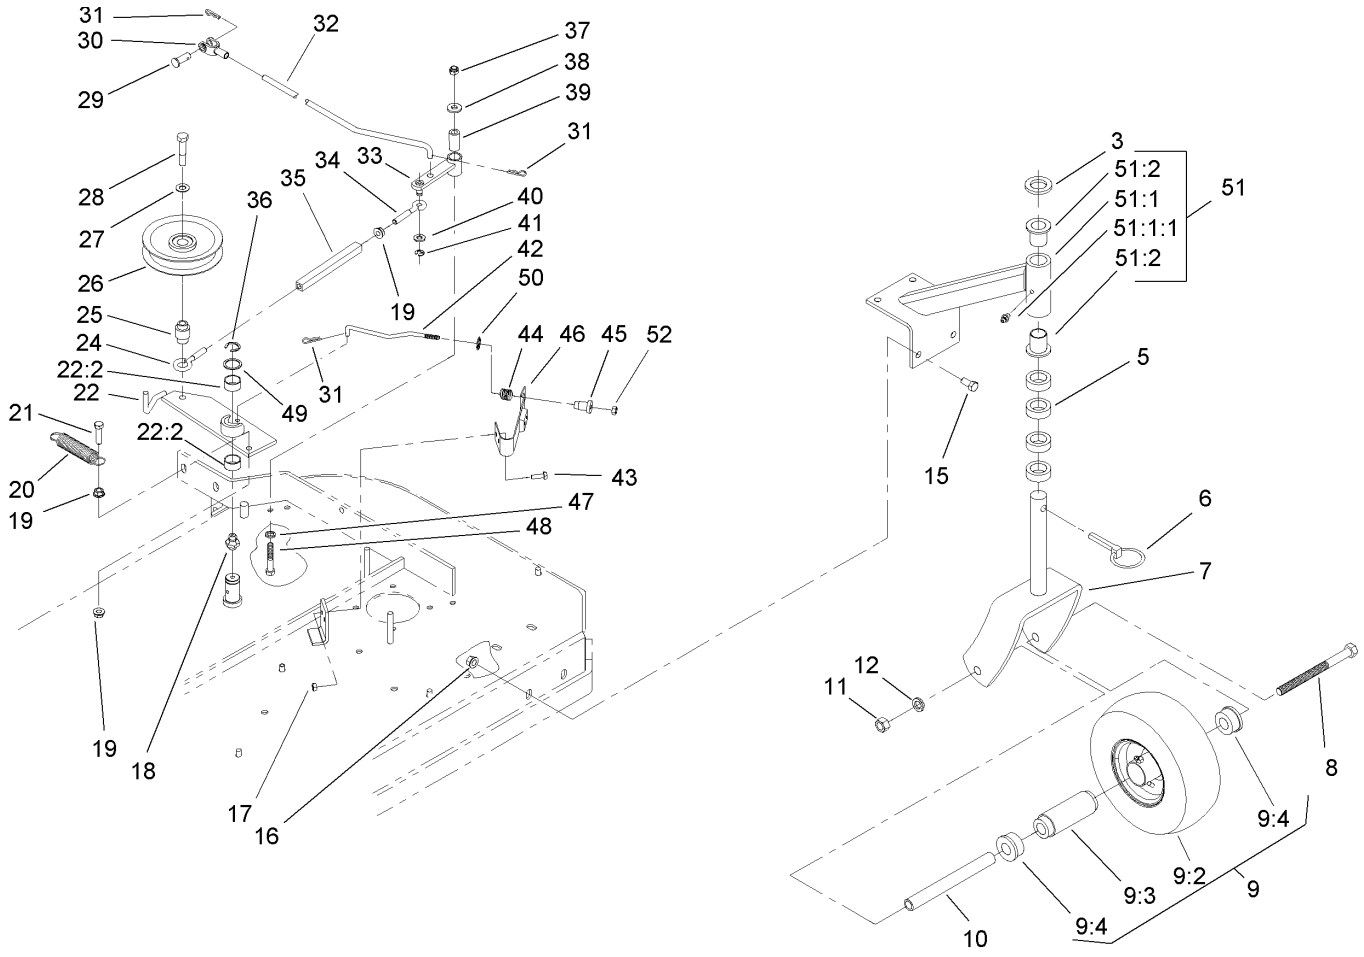

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler

Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323714	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad / Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

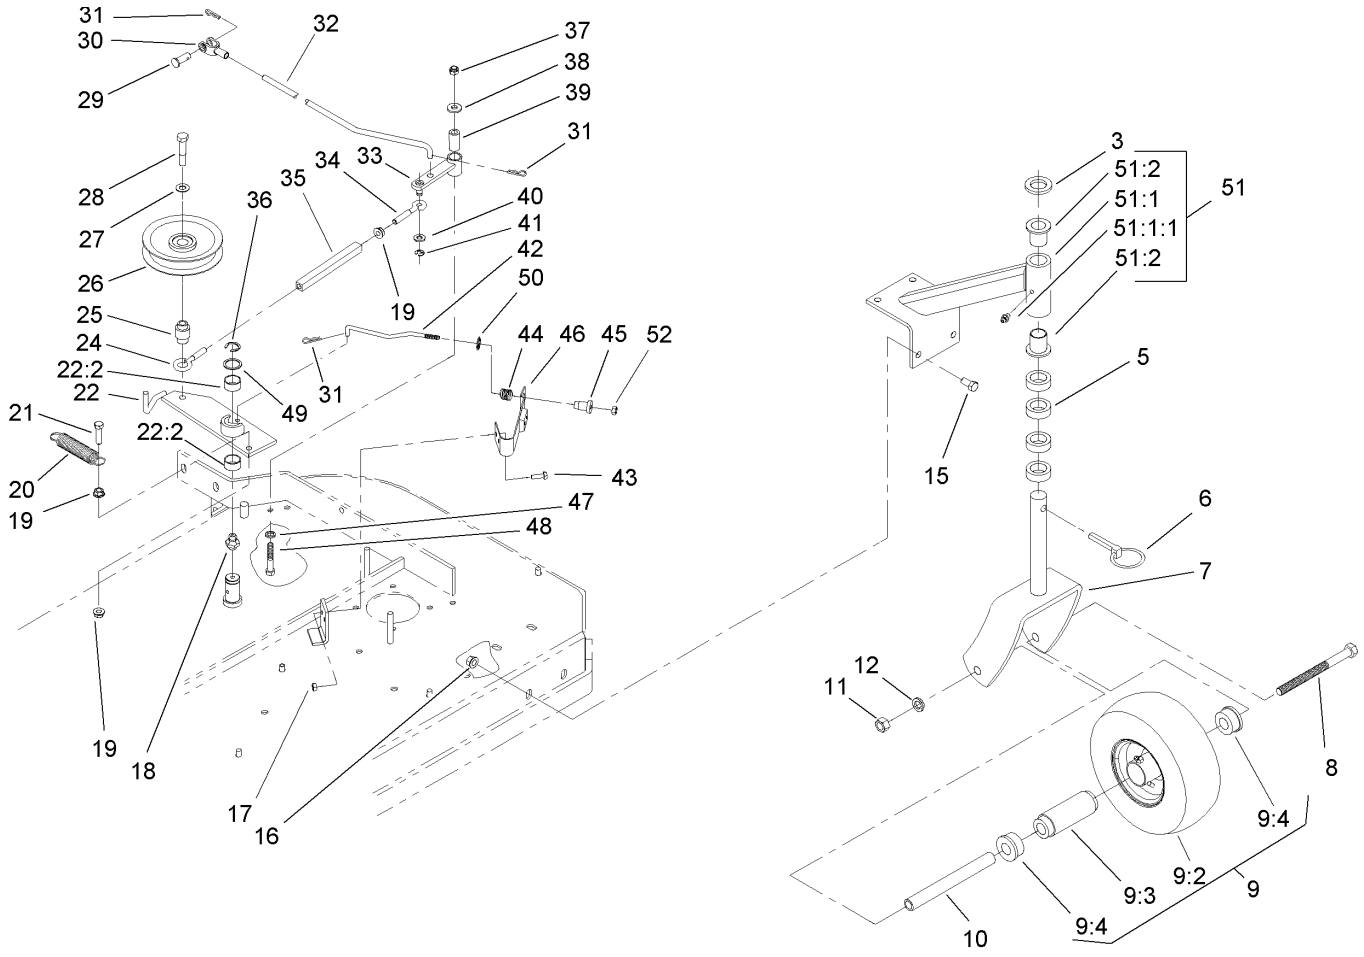


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
51	1-302203	2	Support ASM
❷51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI

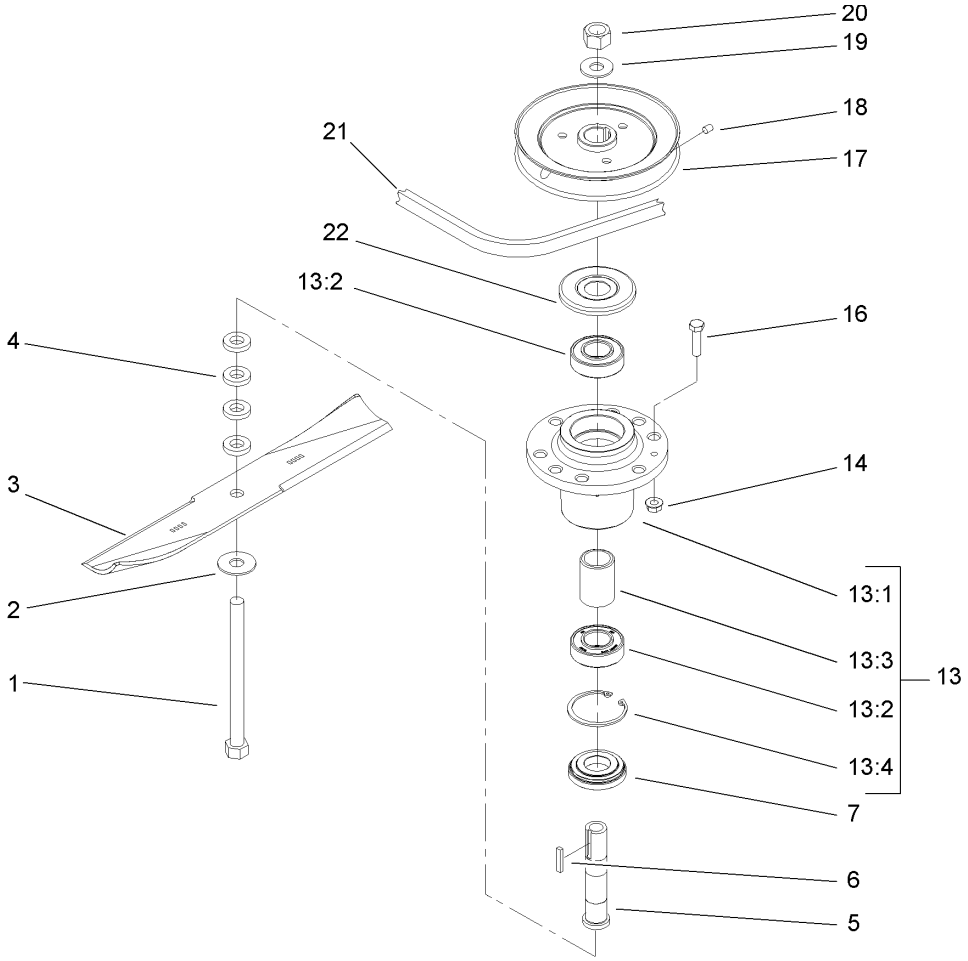


Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	1-800861	3	Screw-Cap, HH
2	1-513208	3	Washer-Spring
3	103-2507	3	Blade-Lift, Low
3	103-2527	3	Blade-Notched
4	1-323539	12	Spacer-Drive, Blade
5	1-323529	3	Tube-Spindle, Short
6	1-807267	3	Key
7	103-2535	3	Spacer-Guard, Bottom
13	107-4065	3	Cutter Housing ASM
13:1	103-7975	1	Housing-Spindle
13:2	103-2477	2	Bearing-Ball
13:3	103-2534	1	Spacer-Bearing
13:4	32120-8	1	Ring-Snap
14	3296-39	18	Nut-Lock, NI
16	323-7	18	Screw-HH
17	1-403183	3	Sheave
18	1-803310	3	Screw-Set
19	1-323339	3	Washer-Retainer, Sheave
20	3219-6	3	Nut-Hex
21	1-403171	1	Belt-Drive, Blade
22	103-1330	3	Guard-Bearing, Top

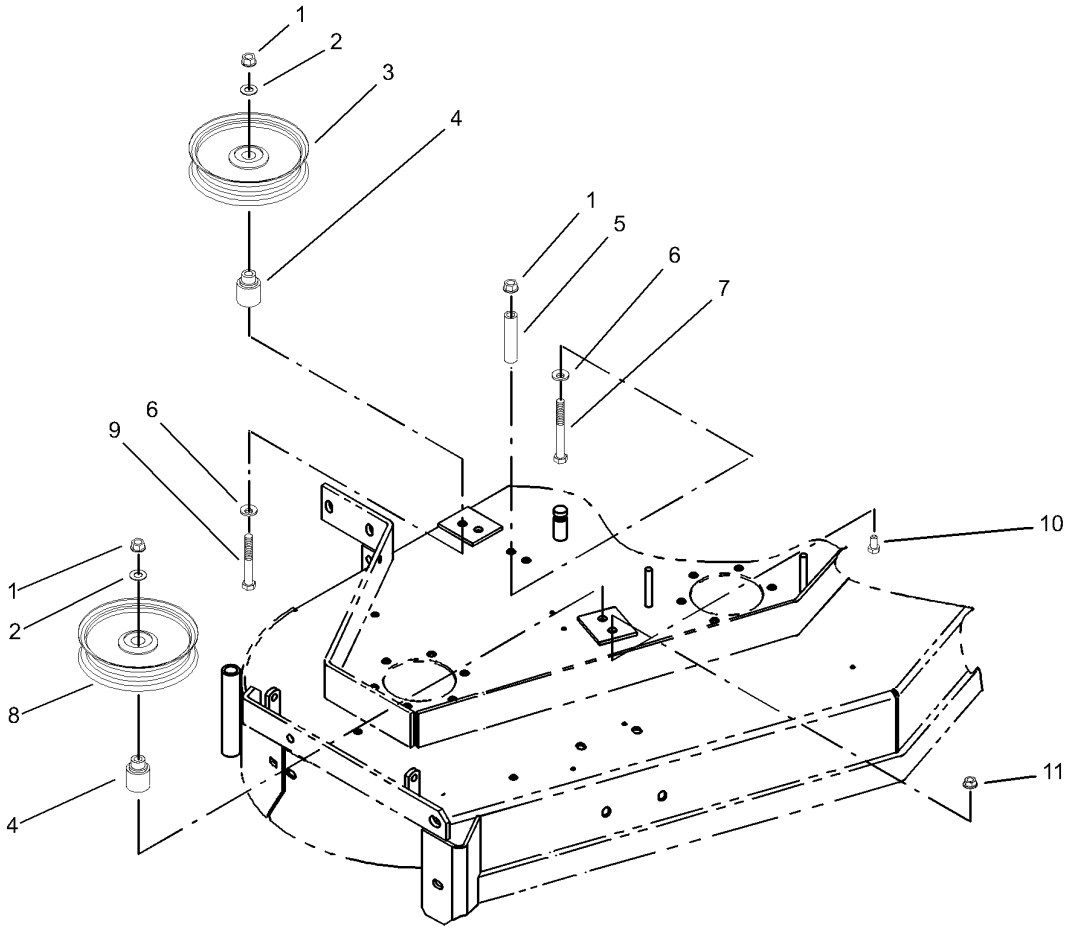


Idler Pulley Assembly

Ref	Part No.	Qty.	Description
1	3290-357	3	Nut-HHF
2	3256-24	2	Washer-Flat
3	1-403186	1	Idler-Pulley, Flat
4	1-403184	2	Bushing-Idler
5	1-403188	1	Spacer
6	98-5975	3	Washer-Belleville
7	323-20	1	Screw-HH
8	1-613098	1	Pulley-Idler
9	323-13	2	Screw-HH
10	322-2	2	Screw-HH
11	32128-20	2	Nut-HF

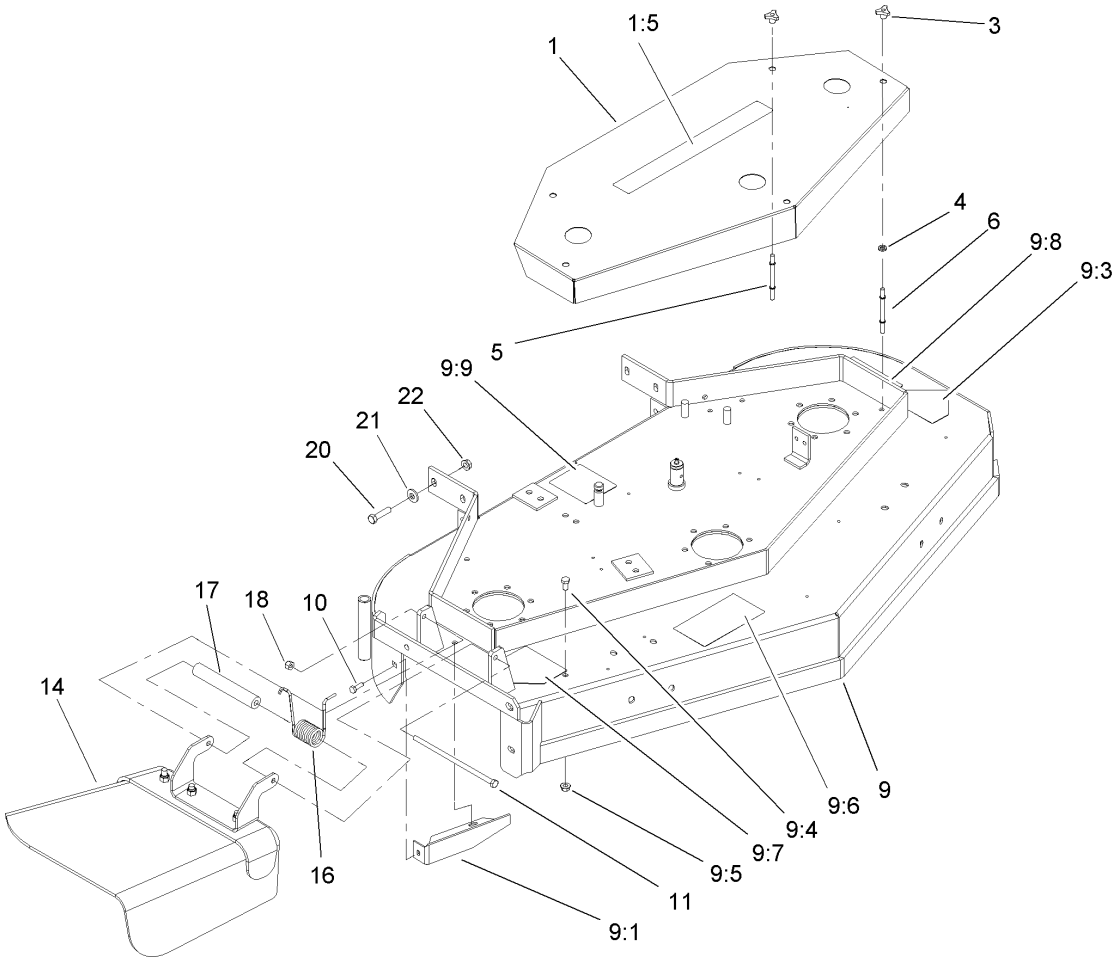


Deck Assembly

Ref	Part No.	Qty.	Description
1	1-404246	1	Shield-Belt
1:5	106-0712	1	Decal
3	106-4161	5	Knob-Handle
4	1-323417	5	Washer
5	1-303536	3	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	107-4215	1	Deck ASM
9:1	1-402107-01	1	Baffle-Dogleg
9:3	1-403005	1	Decal-Danger
9:4	322-2	4	Screw-HH
9:5	32128-20	4	Nut-HF
9:6	66-1340	1	Decal-Danger
9:7	93-1122	1	Decal-Danger
9:8	98-5130	1	Decal-Torque, Bolt
9:9	99-3943	1	Decal-Routing, Belt
10	322-2	7	Screw-HH
11	322-50	1	Screw-HH
14	107-4140	1	Deflector ASM
16	104-8554	1	Spring-Torsion
17	105-4622	1	Spacer
18	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF

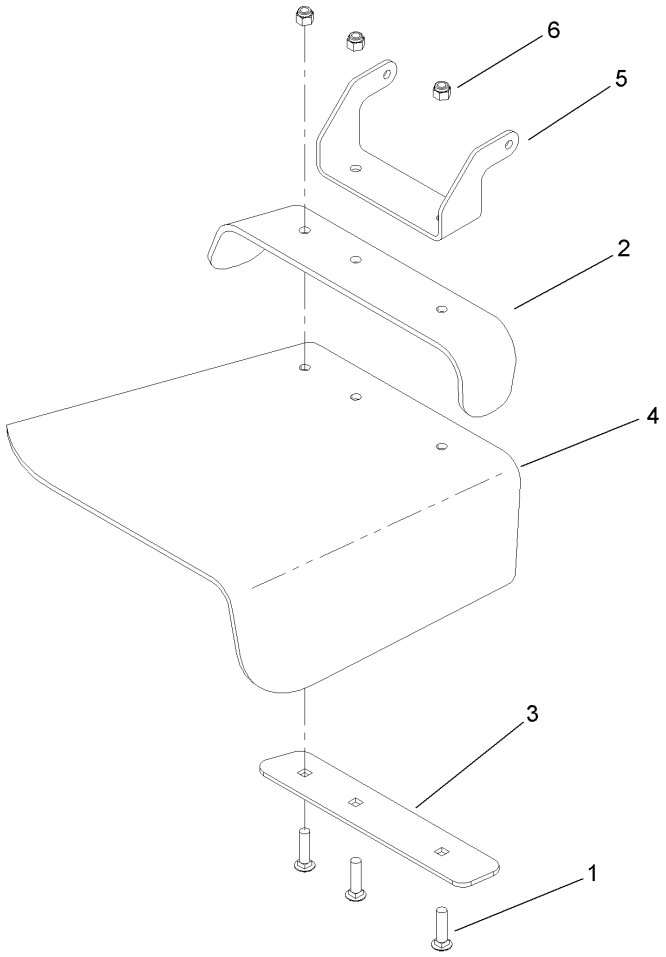


Deflector Assembly No. 107-4140

Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

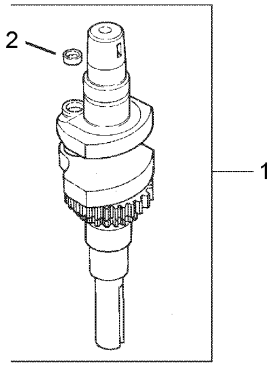

Crankshaft Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	12 014 30-S	1	Crankshaft (Includes 2)
❸2	12 139 01-S	1	Plug-Cup

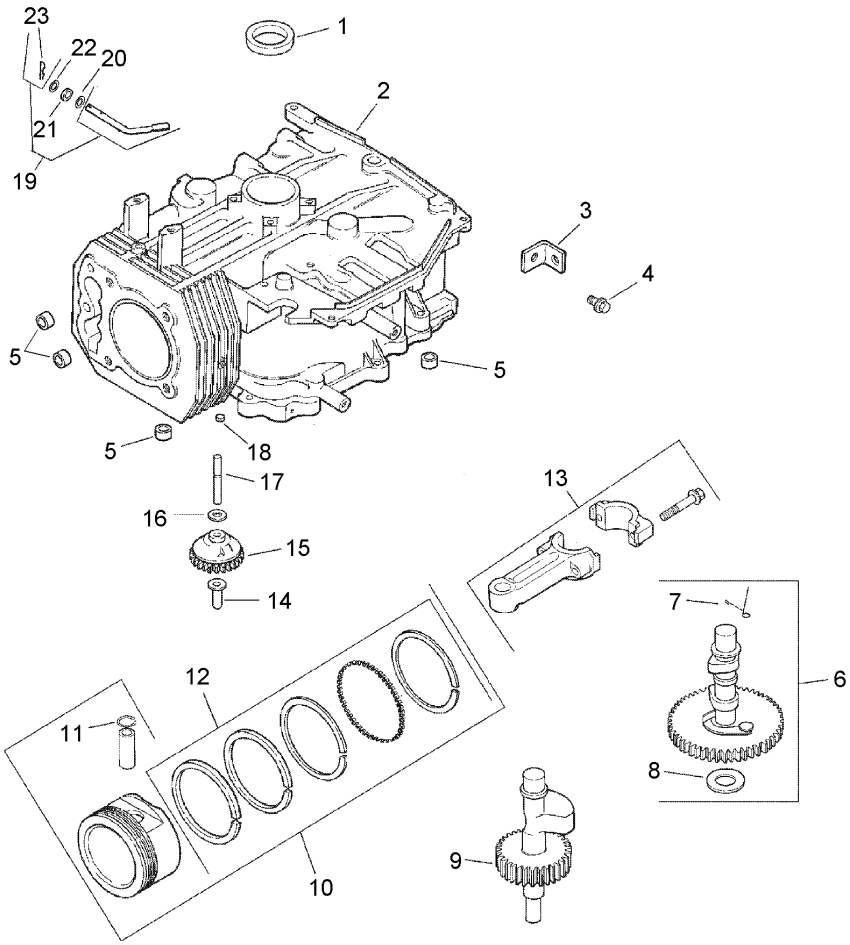

Crankcase Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	12 032 03-S	1	Seal-Oil, Front
❷❸2		1	Crankcase (Use: Short Block 12 522 18)
❸3	12 445 02-S	1	Strap-Lifting
❸4	M-839025-S	1	Screw-Hex Flange, M8x1.25x25
❸5	24 380 13-S	4	Pin-Locating
❸6	12 755 49-S	1	Camshaft Kit (Includes 7,8)
❸7	12 089 37-S	1	Spring-Actuating
❸8	12 422 08-S	1	Shim-Camshaft, Blue
❸8	12 422 09-S	1	Shim-Camshaft, Red
❸8	12 422 10-S	1	Shim-Camshaft, Yellow
❸8	12 422 11-S	1	Shim-Camshaft, Green
❸8	12 422 12-S	1	Shim-Camshaft, Gray
❸8	12 422 13-S	1	Shim-Camshaft, Black
❸8	12 422 07-S	1	Shim-Camshaft, White
❸9	12 144 27-S	1	Shaft-Balance
❸10	12 874 07-S	1	Piston W/ring Set (Std.) (Includes 11,12)
❸10	12 874 08-S	1	Piston W/ring Set (.25)
❸10	12 874 09-S	1	Piston W/ring Set (.50)
❸10	12 874 11-S	1	Piston W/ring Set (.08)
❸11	12 018 02-S	2	Retainer-Pin, Piston
❸12	12 108 07-S	1	Ring Set (Std. & .08)
❸12	12 108 08-S	1	Ring Set (.25)

Ref	Part No.	Qty.	Description
❸12	12 108 09-S	1	Ring Set (.50)
❸13	12 067 05-S	1	Rod-Connecting (Std.)
❸13	12 067 06-S	1	Rod-Connecting (.25)
❸14	12 380 01-S	1	Pin-Governor Regulating
❸15	12 043 05-S	1	Gear-Governor
❸16	M-631005-S	1	Washer-Plain (6 Mm)
❸17	12 144 02-S	1	Shaft-Governor Gear
❸18	52 139 09-S	1	Plug-Cup
❸19	12 755 64-S	1	Governor Cross Shaft Kit (Includes 23)
❸20	X-25-102-S	1	Washer-Plain, 1/4in
❸21	12 032 01-S	1	Seal-Cross Shaft, Governor
❸22	M-631015-S	1	Washer-Plain, 6mm
❸23	12 154 05-S	1	Clip-Pin, Hitch

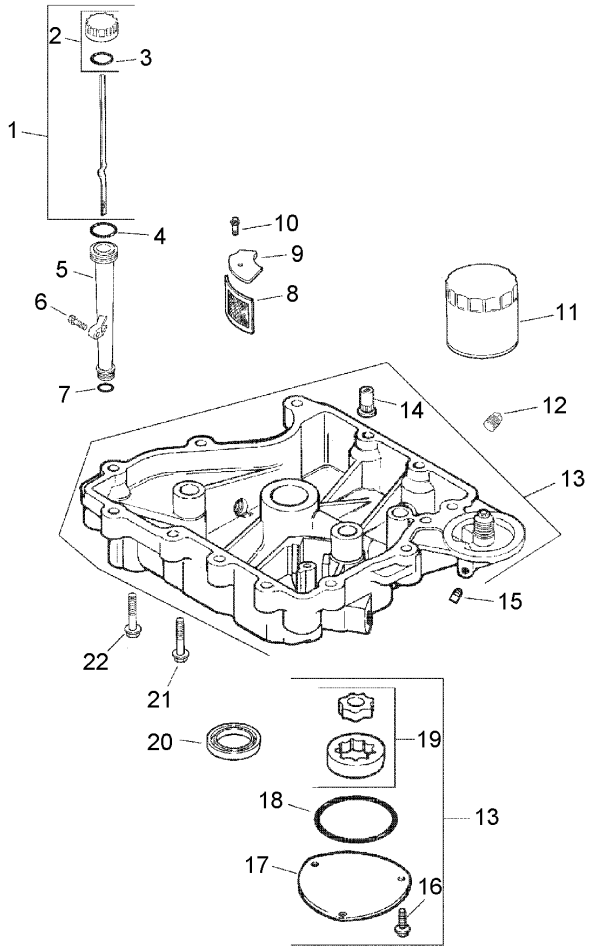

Oil Pan / Lubrication Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	12 038 01-S	1	Dipstick ASM (Includes 2,3)
❸2	25 755 13-S	1	Oil Fill Cap Kit (Includes 3)
❸3	25 153 02-S	1	O-Ring
❸4	12 153 02-S	1	O-Ring (Upper Oil Fill Tube)
❸5	12 123 04-S	1	Tube-Fill, Oil
❸6	M-545020-S	1	Screw-Hex Flange, M5x0.8x20
❸7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)
❸8	25 162 07-S	1	Screen-Pickup, Oil
❸9	12 096 03-S	1	Cover-Screen, Oil Pickup
❸10	M-545016-S	1	Screw-Hex Flange, M5x0.8x16
❸11	12 050 01-S	1	Filter-Oil
❸12	25 139 57-S	2	Plug-Sq. Hd. 3/8 N.p.t.f.
❸13	12 199 50-S	1	Oil Pan ASM (Includes 14,16-19)
❸14	25 462 09-S	1	Valve-Relief, Oil Pressure
❸15	25 139 52-S	1	Plug-Pipe, 1/8in
❸16	M-545016-S	3	Screw-Hex Flange, M5x0.8x16
❸17	12 096 34-S	1	Cover-Pump, Oil
❸18	12 153 06-S	1	O-Ring (Oil Pump Cover)
❸19	12 393 01-S	1	Oil Pump ASM
❸20	12 032 03-S	1	Seal-Oil, Front
❸21	24 086 16-S	11	Screw-Hex Flange, M8x1.25x45
❸22	24 086 17-S	1	Screw-Hex Flange, M8x1.25x45

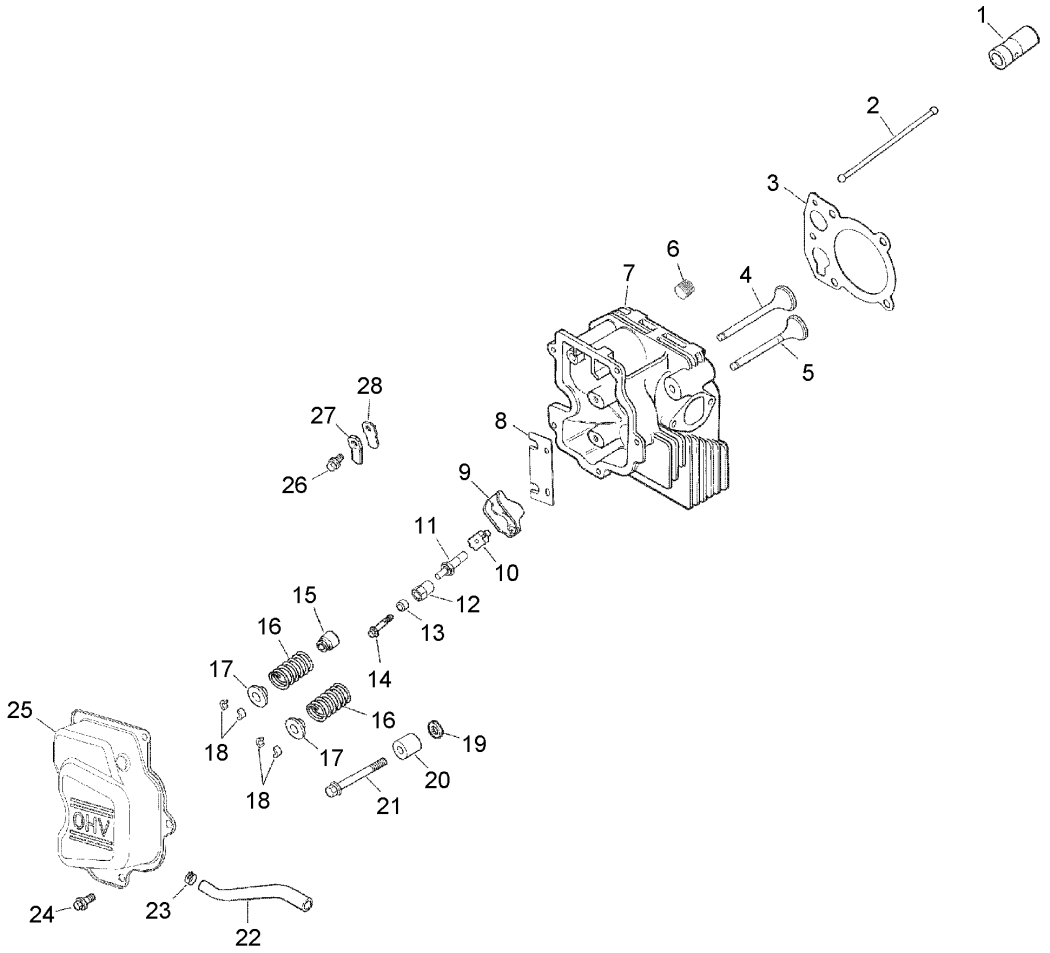

Head / Valve / Breather Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	25 351 01-S	2	Lifter-Valve
❸2	12 411 04-S	2	Rod-Push
❸3	12 041 10-S	1	Gasket-Head, Cylinder
❸4	12 017 01-S	1	Valve-Intake (Std.)
❸5	12 016 01-S	1	Valve-Exhaust (Std.)
❸6	25 139 60-S	1	Plug-Pipe, 1/8in Allen Head
❸7	12 318 19-S	1	Head-Cylinder
❸8	12 146 22-S	2	Plate-Guide
❸9	25 186 01-S	2	Arm-Rocker
❸10	25 599 01-S	2	Pivot-Arm, Rocker
❸11	25 072 12-S	2	Stud-Rocker
❸12	25 100 29-S	2	Nut-Hex
❸13	25 086 112-S	2	Screw-Set
❸14	M-640034-S	2	Screw-Hf, M6x1.0x34
❸15	66 032 05-S	2	Seal-Valve Stem
❸16	12 089 34-S	2	Spring-Valve
❸17	12 173 01-S	2	Cap-Spring, Valve
❸18	12 755 03-S	2	Retainer Kit
❸19	12 468 05-S	1	Washer-Plain, 13/32in
❸20	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port
❸21	20 086 02-S	5	Screw-Hf, M10x1.5x81
❸22	25 237 14-S	2	Clamp-Breather
❸23	12 326 18-S	1	Hose-Breather
❸24	M-645016-S	5	Screw-Hex Flange, M6x1.0x16

Ref	Part No.	Qty.	Description
❸25	12 096 47-S	1	Cover-Valve
❸26	M-545010-S	1	Screw-Hex Flange, M5x0.8x10
❸27	66 018 04-S	1	Retainer-Breather Reed
❸28	12 402 02-S	1	Reed-Breather
❶❸	12 017 02-S	1	Valve-Intake (.25)
❶❸	12 016 02-S	1	Valve-Exhaust (.25)

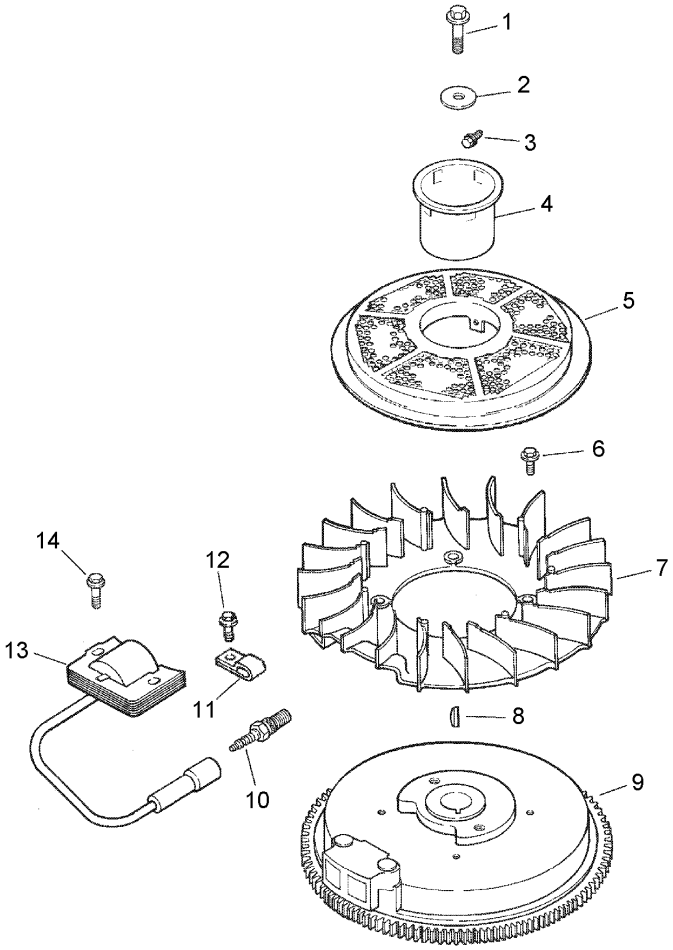


Ignition / Electrical Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 086 14-S	1	Screw-Hex Flange, M10x1.5x46
❸2	12 468 03-S	1	Washer-Plain (3/8)
❸3	M-545010-S	3	Screw-Hex Flange, M5x0.8x10
❸4	12 109 07-S	1	Cup-Drive, Starter
❸5	12 162 09-S	1	Screen-Grass
❸6	25 086 47-S	4	Bolt-Shoulder, M6x1.0x16
❸7	12 157 03-S	1	Fan
❸8	X-42-15-S	1	Key
❸9	12 025 56-S	1	Flywheel
❸10	12 132 02-S	1	Spark Plug
❸11	X-728-1-S	1	Clip
❸12	M-545010-S	3	Screw-Hex Flange, M5x0.8x10
❸13	12 584 05-S	1	Module-Ignition
❸14	M-545020-S	2	Screw-Hex Flange, M5x0.8x20
❶❸	25 086 110-S	2	Screw-Tapping, Slotted
❶❸	12 518 07-S	1	Lead-White (18in, 18 Gauge, Fully Insulated Female Disconnect Terminals)
❶❸	12 454 03-S	1	Tie-Wire

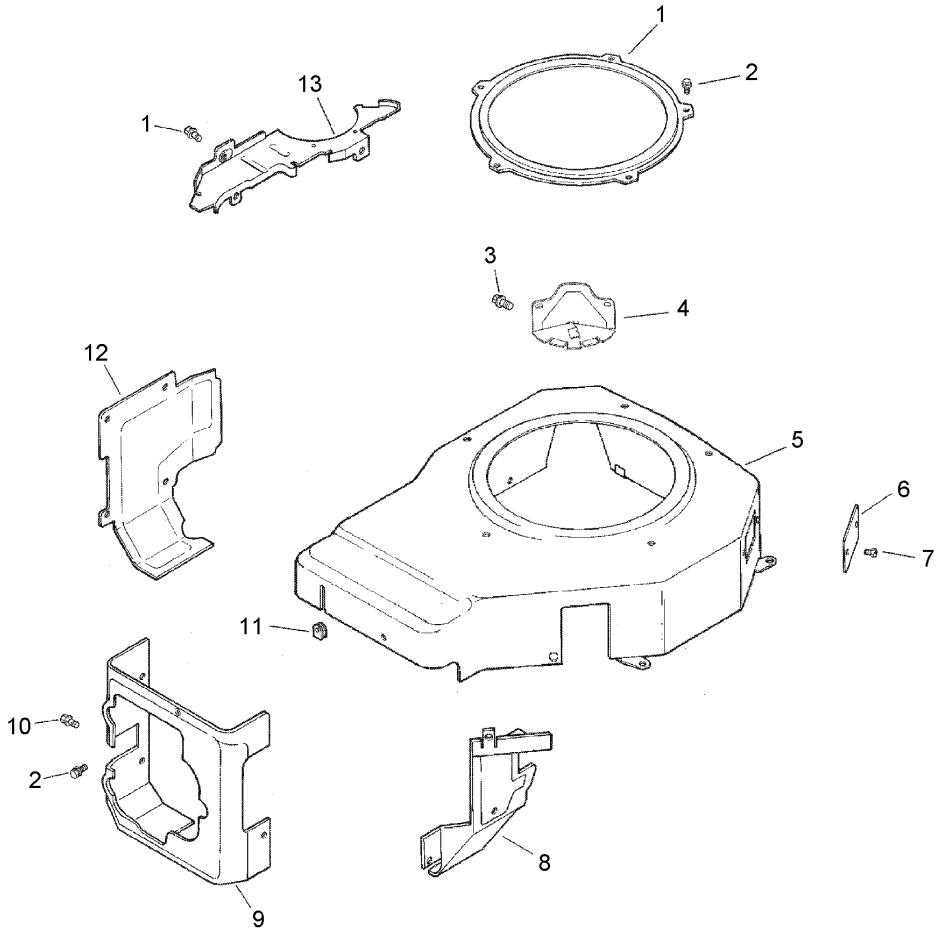


Blower Housing and Baffle Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 314 10-S	1	Guard-Screen, Grass
❸2	M-545010-S	8	Screw-Hex Flange, M5x0.8x10
❸3	M-550010-S	6	Screw-Hf, M5x0.8x10
❸4	12 096 29-S	1	Cover-Starter
❸5	12 027 53-S	1	Housing-Blower
❸6	12 096 27-S	1	Cover (Rectifier-regulator)
❸7	M-639016-S	2	Screw-Hf, M6x1.0x16
❸8	12 063 10-S	1	Baffle-Side, Intake
❸9	12 063 08-S	1	Baffle-Head, Cylinder
❸10	M-561016-S	1	Screw-Hf, M5x0.8x16
❸11	12 313 03-S	1	Grommet-Spark Plug
❸12	12 063 19-S	1	Baffle (Cylinder)
❸13	12 146 07-S	1	Plate-Housing, Blower
❶❸	12 113 124-S	1	Decal-15hp
❶❸	25 113 39-S	1	Decal-Clear Lamination

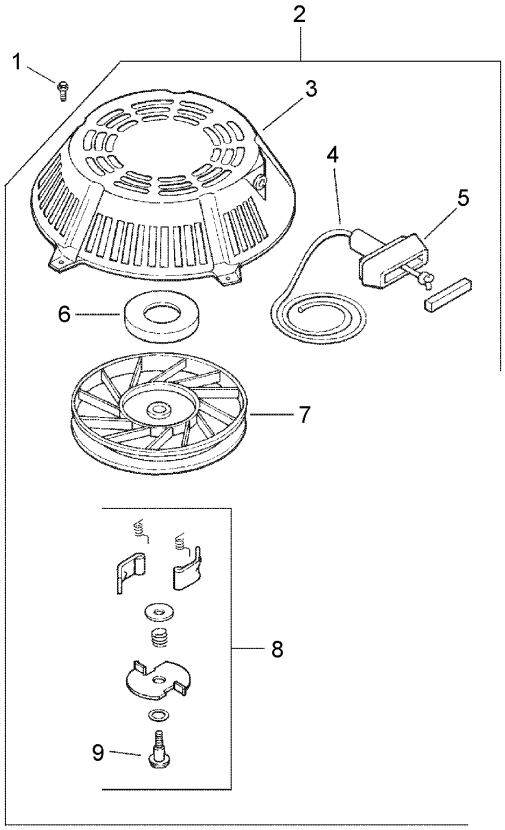


Starting System Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	M-550010-S	5	Screw-Hf, M5x0.8x10
❸2	12 165 01-S	1	Retractable Starter ASM (Includes 3-9)
❸3	12 081 01-S	1	Housing-Starter
❸4	12 160 01-S	1	Rope-Starter
❸5	25 166 01-S	1	Handle-Start, Recoil
❸6	12 089 06-S	1	Spring And Keeper
❸7	12 093 01-S	1	Pulley
❸8	12 757 06-S	1	Dog Repair Kit (Includes 9)
❸9	41 086 09-S	1	Screw-Pozidriv
❶❸	12 113 07-S	1	Decal-Starting

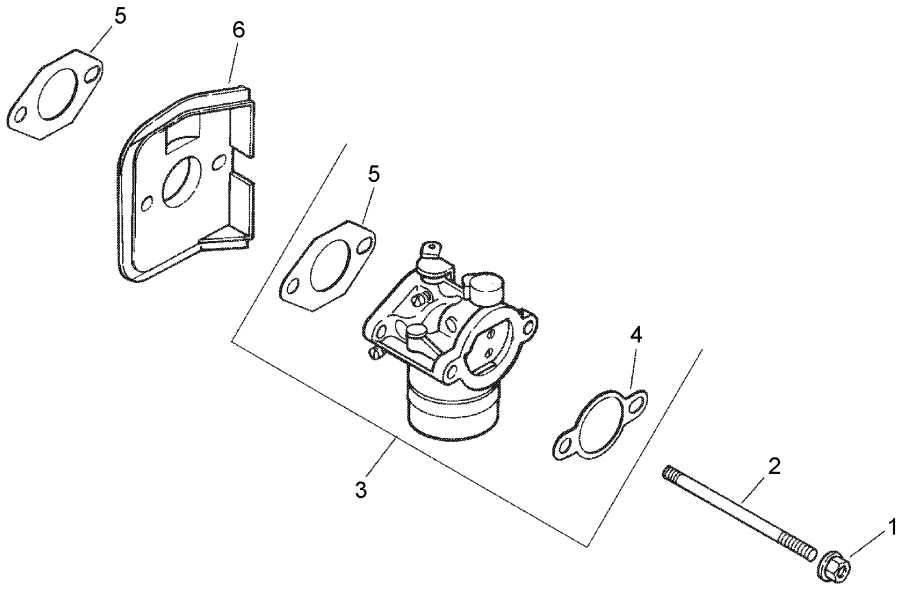


Fuel System Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	M-641060-S	2	Nut-Hex Flange, M6x1.0
❸2	M-629116-S	2	Stud-M6x1.0x116
❸3	12 853 140-S	1	Carburetor Kit (Includes 4, 5)
❸4	12 041 02-S	1	Gasket-Base, Air Cleaner
❸5	12 041 01-S	2	Gasket-Carburetor
❸6	12 265 04-S	1	Deflector-Heat
❶❸	12 757 02-S	1	Float Kit
❶❸	12 757 03-S	1	Carburetor Repair Kit
❶❸	12 757 08-S	1	Choke Repair Kit
❶❸	12 757 36-S	1	Throttle Shaft Bearing Kit
❶❸	12 757 37-S	1	Bowl Replacement Kit
❶❸	12 755 92-S	1	High Altitude Kit

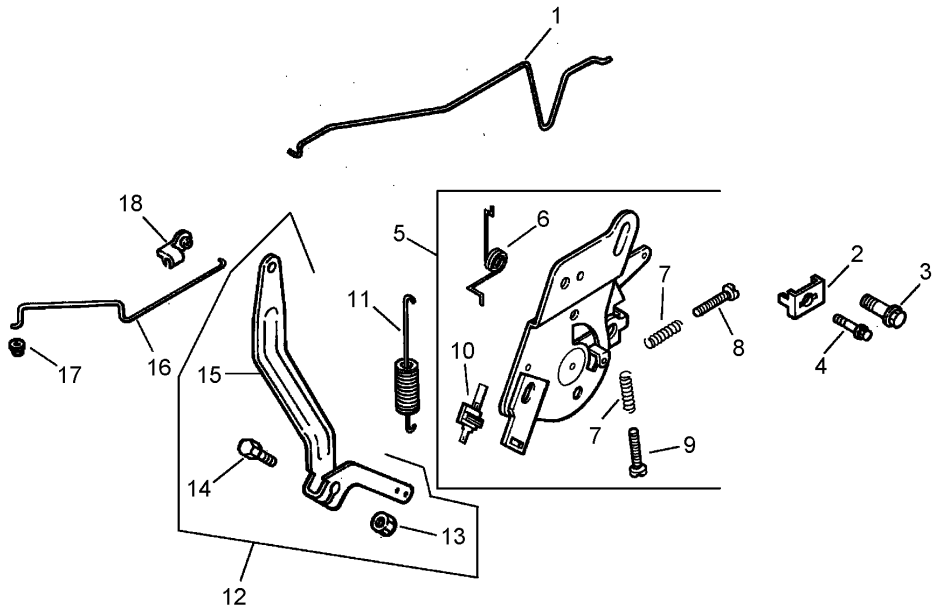


Engine Control Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 079 07-S	1	Linkage-Choke
❸2	12 237 01-S	1	Clamp-Cable
❸3	M-664020-S	2	Screw-Lobed Socket, M6x1.0x20
❸4	M-545016-S	2	Screw-Hex Flange, M5x0.8x16
❸5	12 536 06-S	1	Speed Control ASM (Includes 6-10)
❸6	12 089 23-S	1	Spring-Return, Choke
❸7	12 089 11-S	2	Spring-Control, Speed
❸8	12 086 39-S	1	Screw-Pan Head (W/loctite)
❸9	M-443020-S	1	Screw-Pan Head, M4x0.7x20
❸10	25 452 14-S	1	Terminal-Switch, Kill
❸11	12 089 19-S	1	Spring-Governor
❸12	12 755 83-S	1	Governor Lever Kit (Includes 13-15)
❸13	12 100 07-S	1	Nut-Hf, M6x1.0
❸14	52 211 04-S	1	Screw-Hf, M6x1.0x25
❸15	12 090 28-S	1	Lever-Governor
❸16	12 079 01-S	1	Linkage-Throttle
❸17	25 158 08-S	1	Bushing-Linkage Retaining
❸18	25 158 11-S	1	Bushing-Linkage Retaining

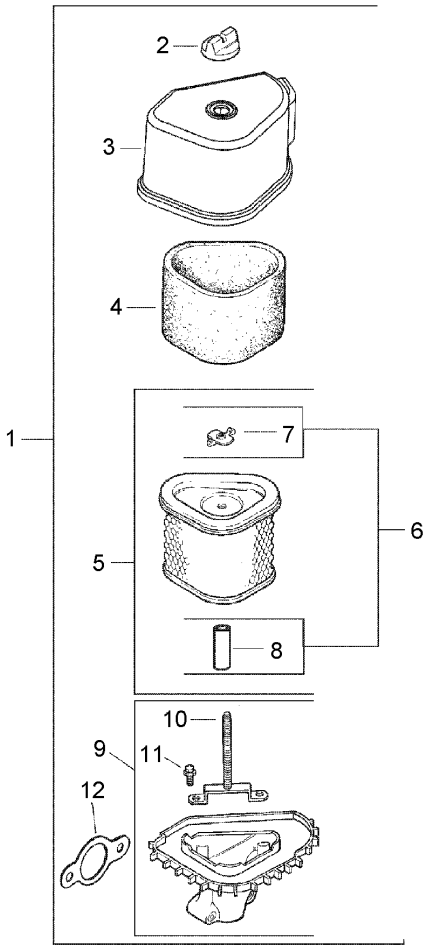

Air Intake / Filtration Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 743 04-S	1	Air Cleaner Kit (Includes 2-12)
❸2	20 341 01-S	1	Knob-Cover
❸3	12 096 44-S	1	Cover-Cleaner, Air
❸4	12 083 12-S	1	Precleaner
❸5	12 083 10-S	1	Element-Cleaner, Air (Includes 6-8)
❸6	12 743 12-S	1	Seal Kit (Includes 7, 8)
❸7	12 100 08-S	1	Nut-Wing
❸8	12 032 11-S	1	Seal
❸9	12 094 14-S	1	Base-Cleaner, Air (Includes 10, 11)
❸10	12 072 04-S	1	Stud-Plate, Mounting
❸11	12 086 01-S	2	Screw
❸12	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❸	12 113 04-S	1	Decal-Cleaner, Air

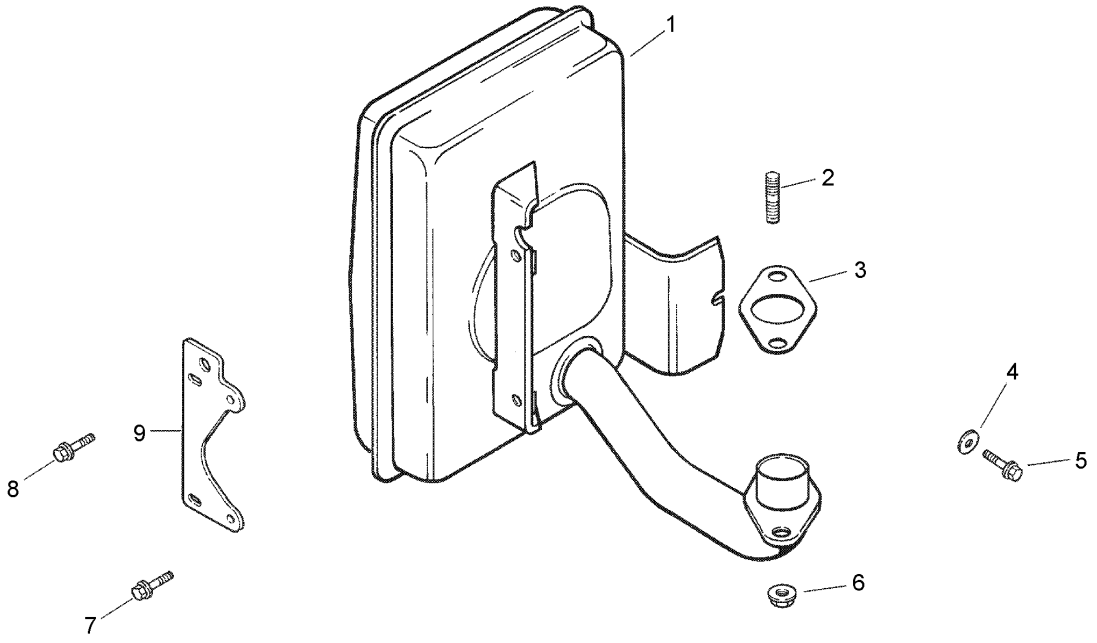

Exhaust Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 068 44-S	1	Muffler
❸2	25 072 04-S	2	Stud, M8x1.25x33
❸3	12 041 03-S	1	Gasket-Manifold, Exhaust
❸4	X-25-78-S	1	Washer-Plain, 1/4in
❸5	M-545016-S	1	Screw-Hex Flange, M5x0.8x16
❸6	M-841080-S	2	Nut-Hex Flange, M8x1.25
❸7	M-645016-S	2	Screw-Hex Flange, M6x1.0x16
❸8	M-645025-S	2	Screw-Hex Flange, M6x1.0x25
❸9	12 126 71-S	1	Bracket-Muffler
❶❸	12 112 20-S	2	Spacer
❶❸	12 522 18	1	Block-Short
❶❸	12 755 93-S	1	Gasket Set

Attachments and Accessories

For 30197 - Mid-Size ProLine T-Bar Gear, 15 HP with 48in Side Discharge Mow

Product Name	Model/Part
Atomic Blade and Decal Assembly	104-8595
Weight Kit	107-4100
Sulky	30109
48in Recycler Kit	30143
Soft Bag (3 bushel)	30198

NOTES


TORO®