Form Number 3352-526

Mid-Size ProLine, Pistol Grip, Gear Drive
with 32in Side Discharge Mower

Model No. 30518 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel System Assembly	3
Transmission and Drive Assembly	4
Wheel Drive Assembly	6
Upper Handle Assembly	8
Handle Assembly No. 106-2742	10
Deck Assembly	11
Deflector Assembly	12
Front Caster and Blade Brake Assembly	13
Spindle, Blade and Belt Assembly	15
Cylinder and Crankcase Assembly Kawasaki FH381V-AS25	16
Piston and Crankshaft Assembly Kawasaki FH381V-AS25	17
Valve and Camshaft Assembly Kawasaki FH381V-AS25	18
Lubrication-Equipment Assembly Kawasaki FH381V-AS25	19
Cooling Equipment Assembly Kawasaki FH381V-AS25	20
Electric-Equipment Assembly Kawasaki FH381V-AS25	21
Control-Equipment Assembly Kawasaki FH381V-AS25	22
Carburetor Assembly Kawasaki FH381V-AS25	23
Air-Filter and Muffler Assembly Kawasaki FH381V-AS25	24
Fuel Tank/Fuel Valve Assembly Kawasaki Model FH381V-AS25	25
Starter Assembly Kawasaki FH381V-AS25	26
Decal Assembly Kawasaki FH381V-AS25	27

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated

❷ Not serviced separately


❸ Obtain parts from your local Kawasaki dealer

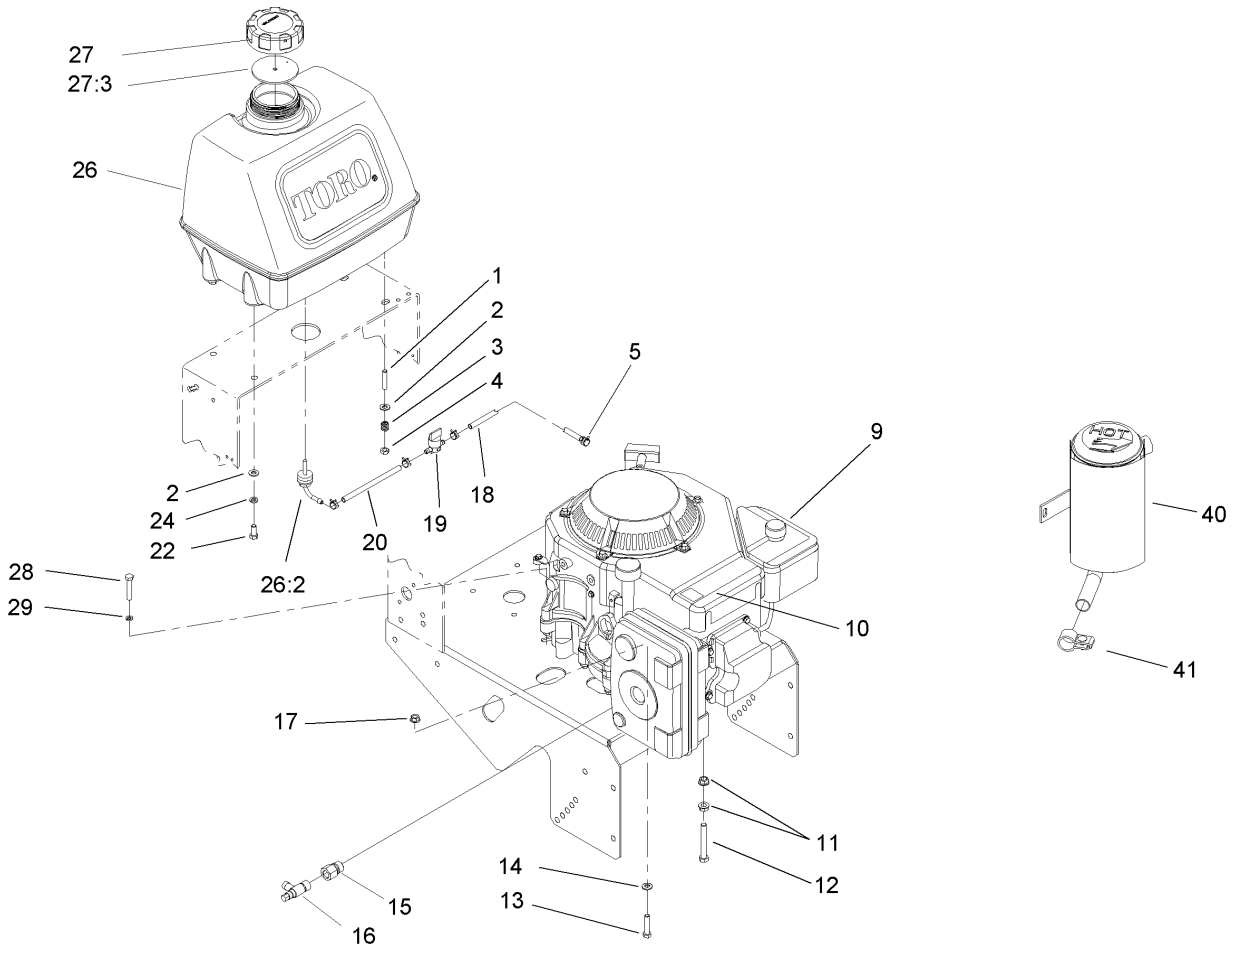

Engine and Fuel System Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❷9		1	Engine-Kawasaki, Fh381v-As25
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
17	32128-20	4	Nut-HF
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
28	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
29	1-805004	1	Washer-Lock
40	100-6467	1	Muffler
41	103-5465	1	Clamp-Muffler
❶99	1-303335	1	Tie-Plastic

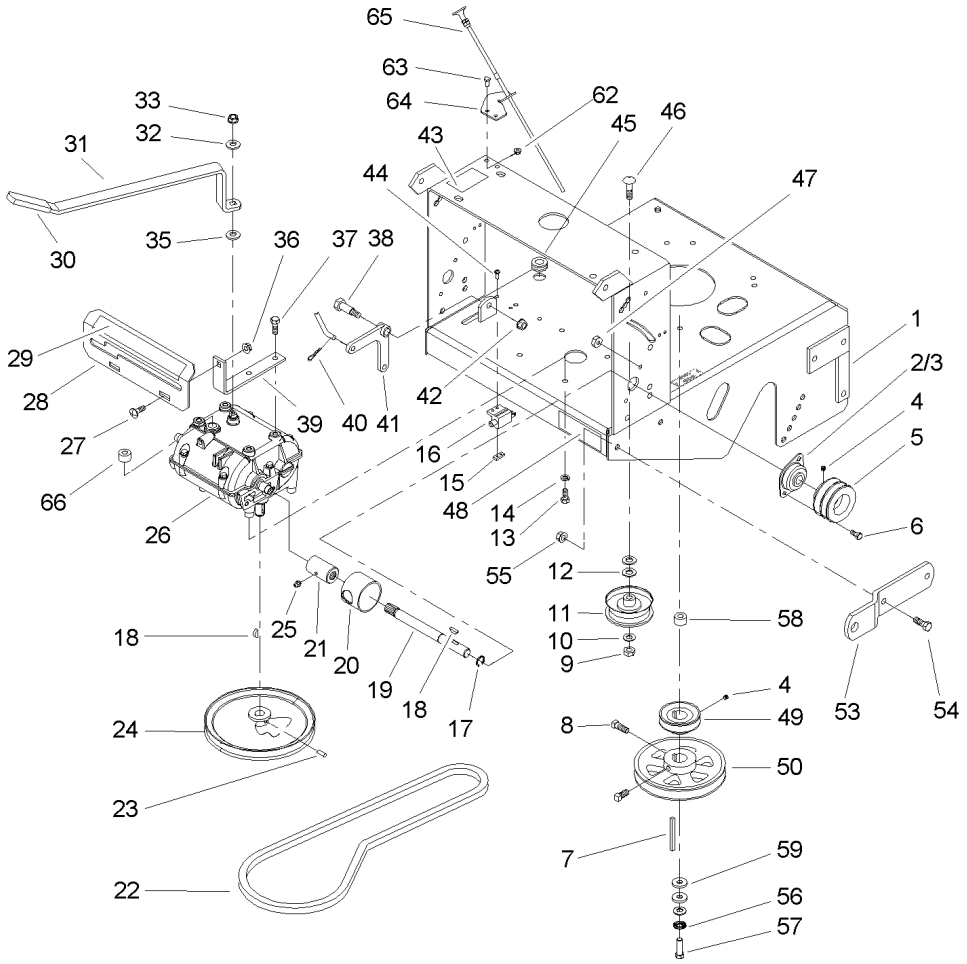

Transmission and Drive Assembly


Ref	Part No.	Qty.	Description
1	103-2923-01	1	Frame-Deck, Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission

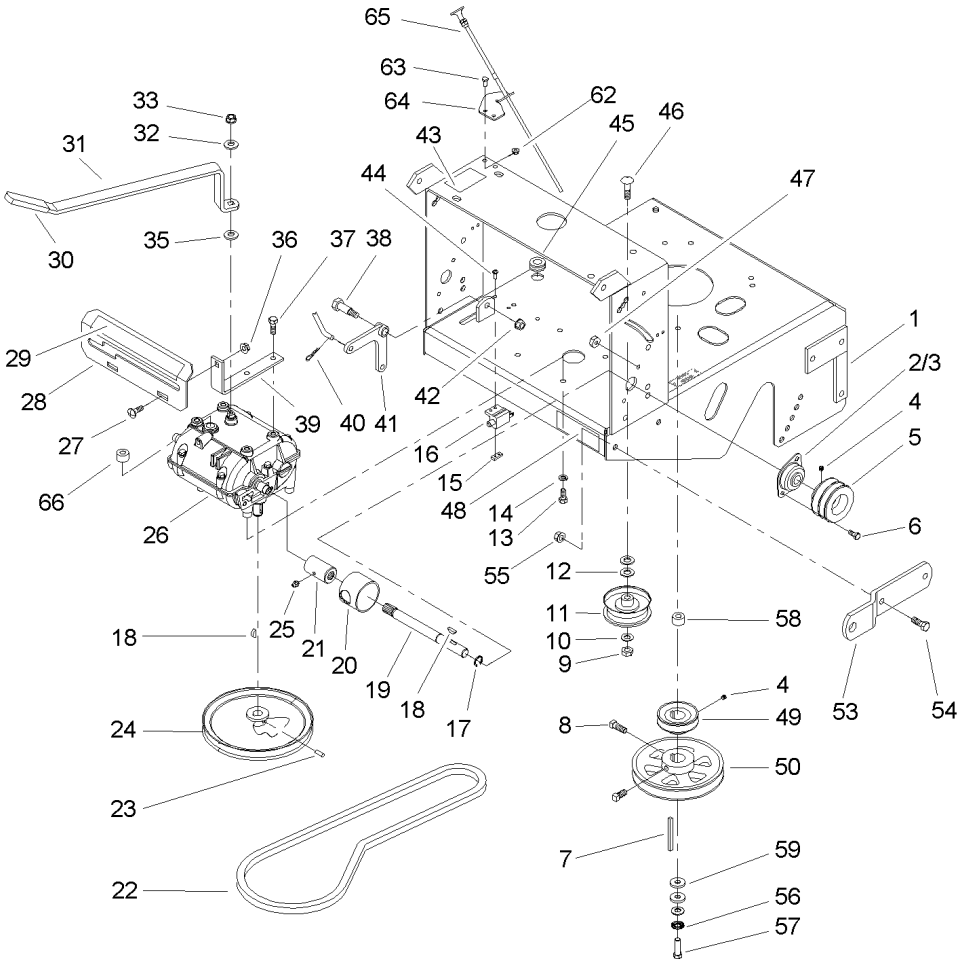

Transmission and Drive Assembly (continued)


Ref	Part No.	Qty.	Description
50	103-1667	1	Sheave
53	1-323318-01	2	Hitch-Sulky
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
63	321-3	2	Screw-HH
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral

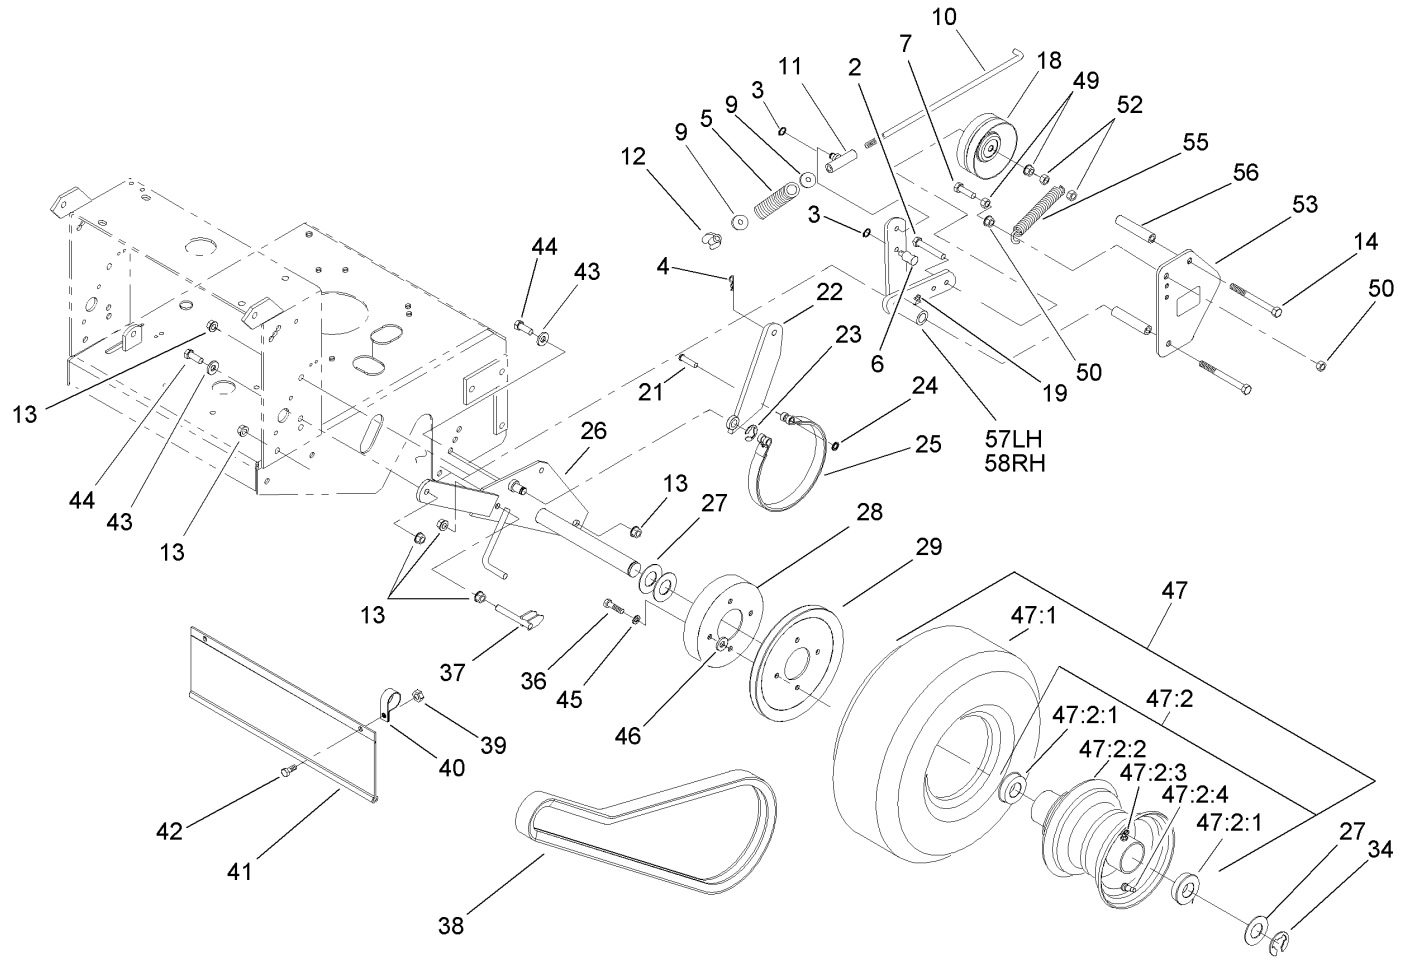

Wheel Drive Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake ASM
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322141-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
37	1-603430	2	Scraper
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock
❷47		2	Wheel And Tire ASM
47:1	1-323361	1	Tire
47:2	1-323360	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
❷47:2:2		1	Rim ASM
❷47:2:3		1	Fitting-Grease
❷47:2:4		1	Valve Stem And Cap
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension

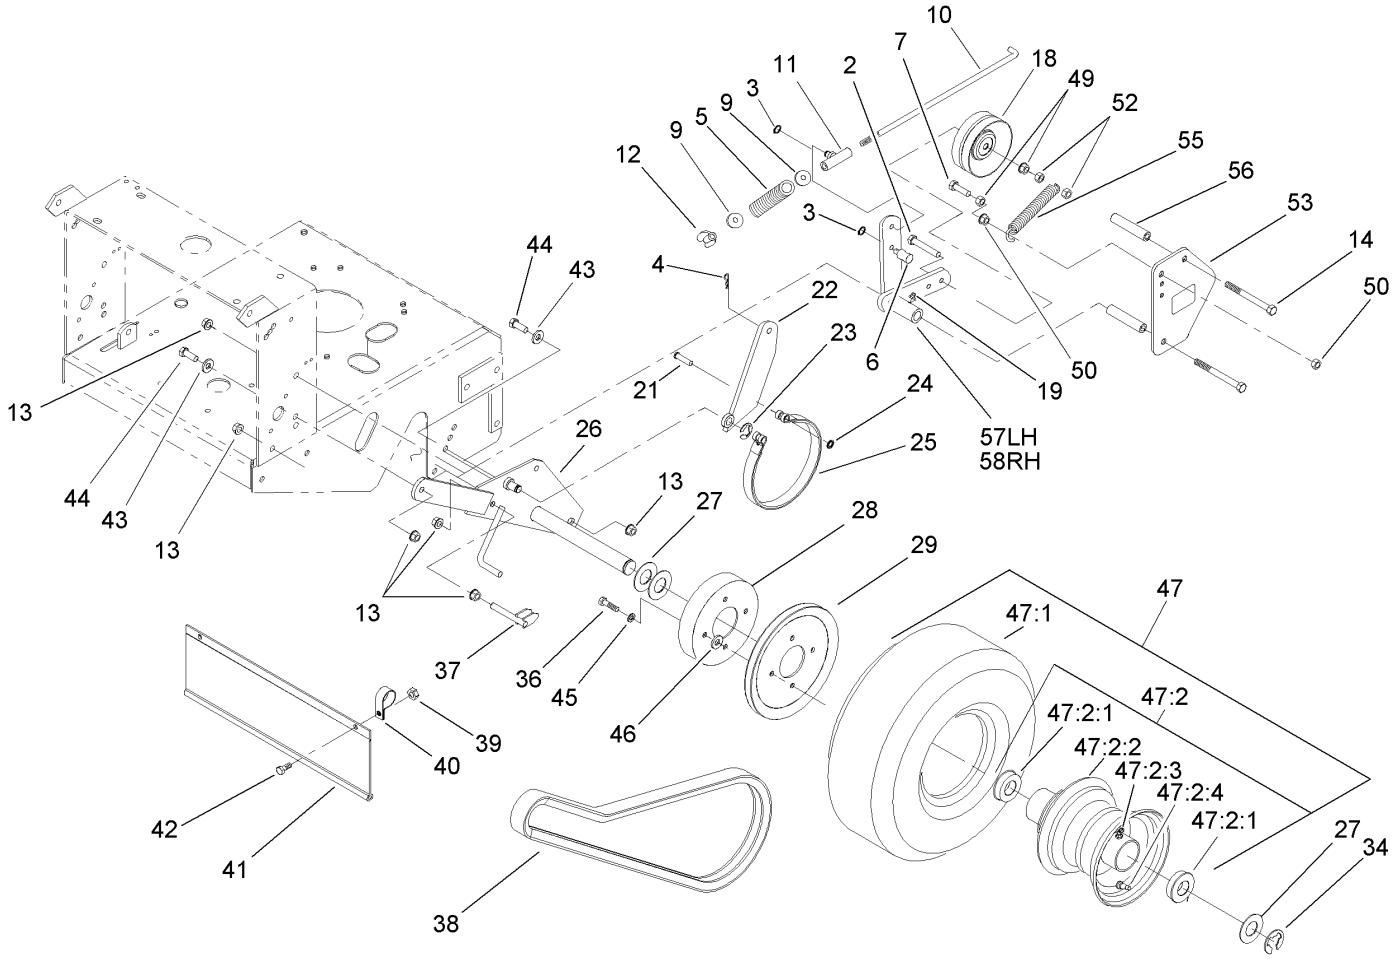

Wheel Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	103-2676	2	Spacer,shield
57	103-1615-03	1	Arm-Idler, LH
58	103-1616-03	1	Arm-Idler, RH

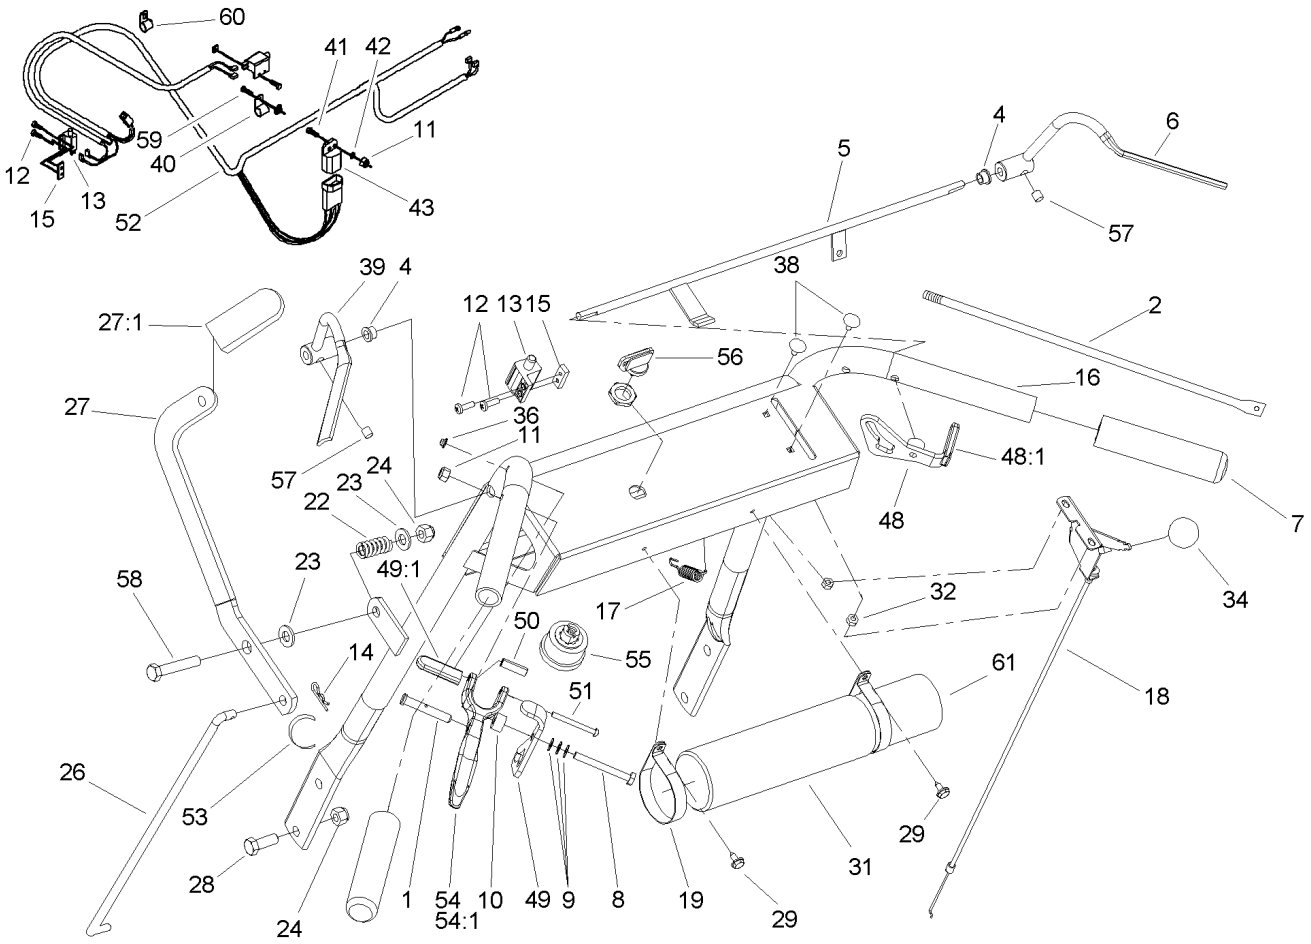

Upper Handle Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2742	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever

Ref	Part No.	Qty.	Description
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	1	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Interlock
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Drive Lever
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	1-403121	1	Switch-Key
56	63-8360	1	Key-Ignition

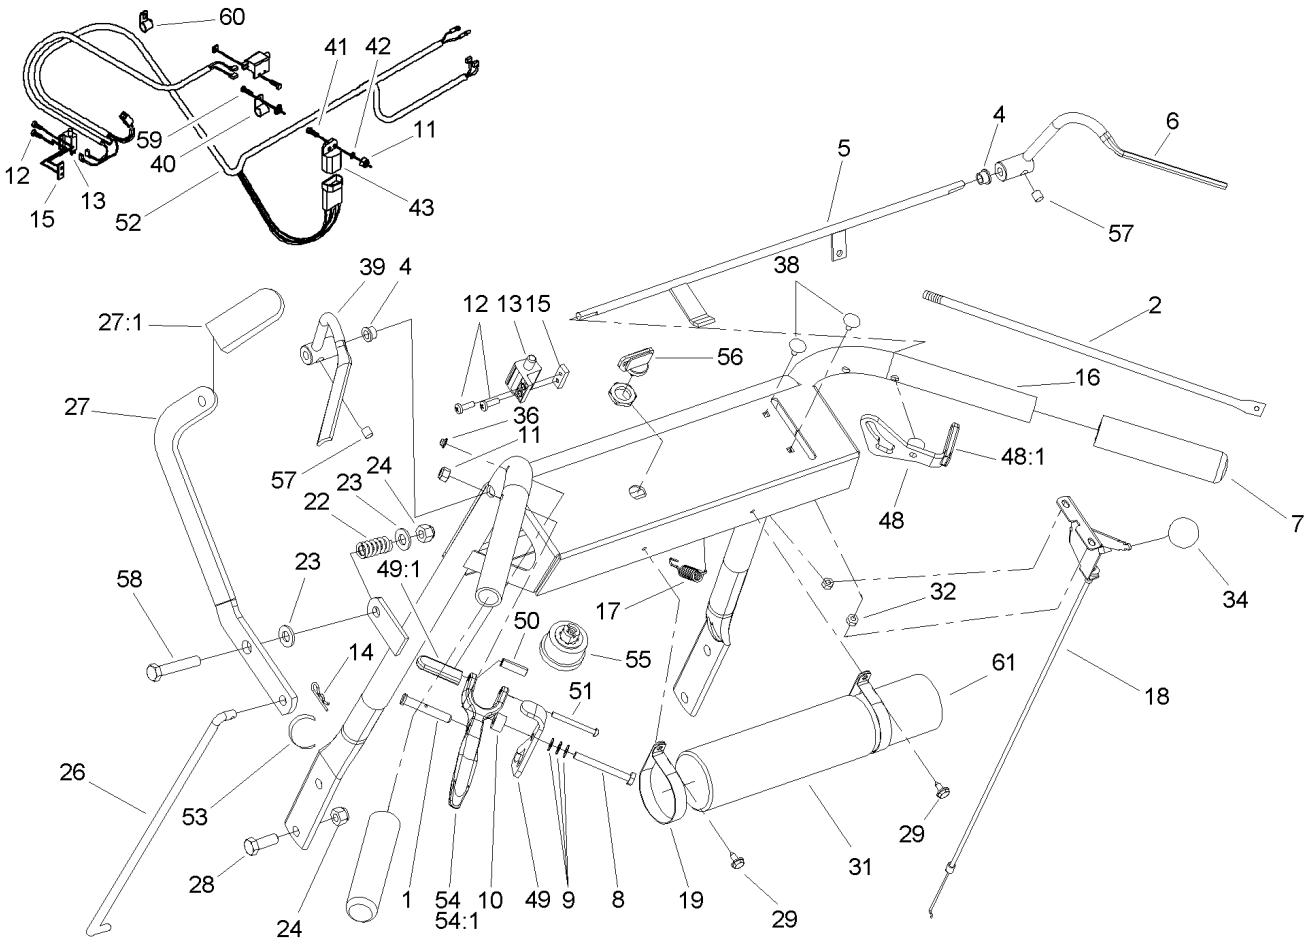


Upper Handle Assembly (continued)

Ref	Part No.	Qty.	Description
57	1-803322	4	Screw-Set
58	323-10	1	Screw-HH
59	33114-016	1	Screw-HH
60	1-413510	1	Clip-Loom
61	104-7048	1	Cap-Housing

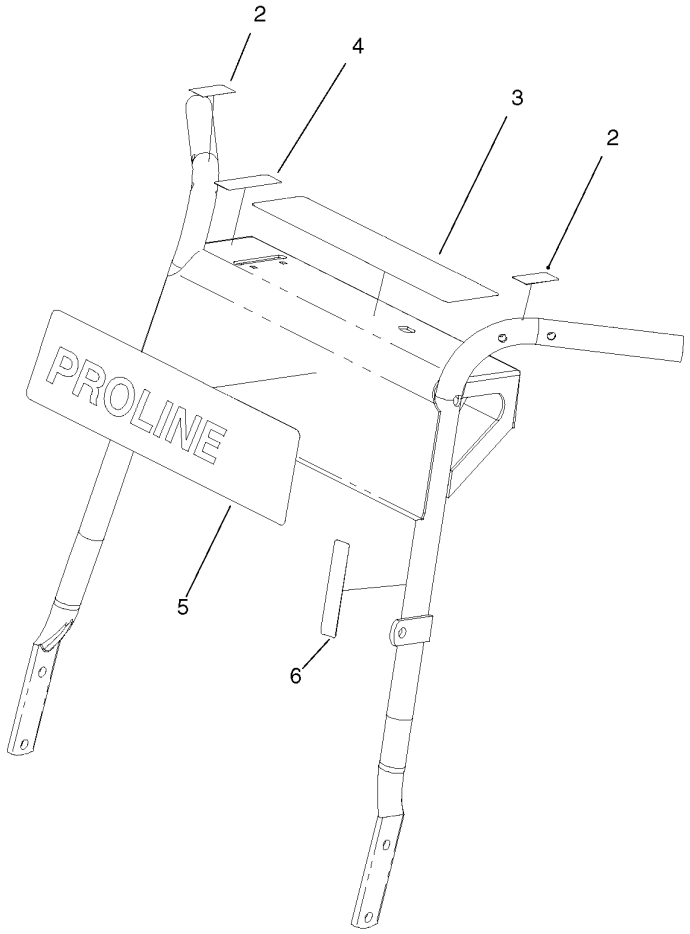


Handle Assembly No. 106-2742

Ref	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	106-0750	1	Decal
6	95-5537	1	Decal-Engage, Deck

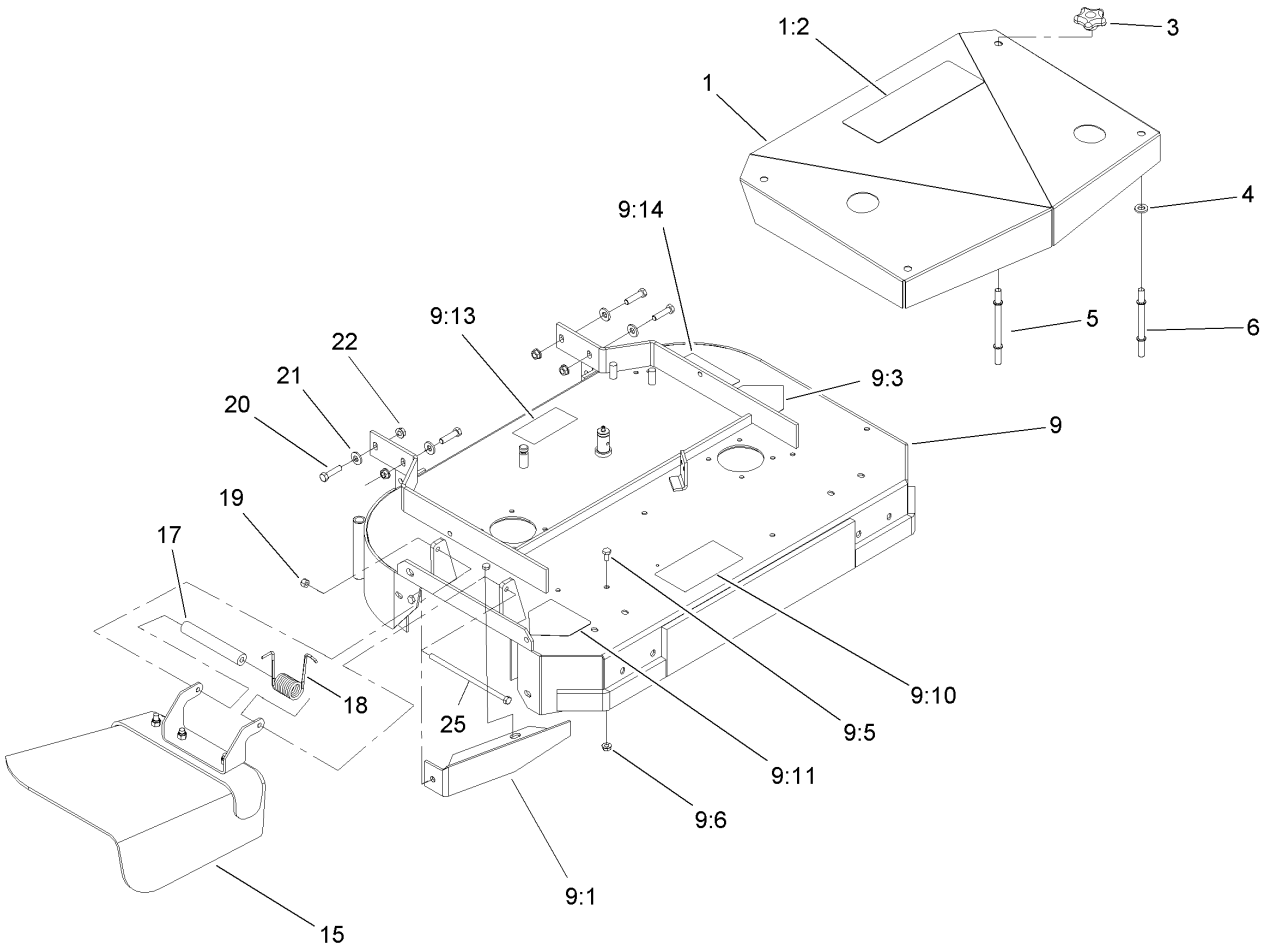


Deck Assembly

Ref	Part No.	Qty.	Description
1	1-324407	1	Shield-Belt
1:2	106-0710	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	107-4213	1	Deck ASM
9:1	1-302189-01	1	Baffle-Dogleg
9:3	1-403005	1	Decal-Danger
9:5	322-2	7	Screw-HH
9:6	32128-20	7	Nut-HF
9:10	66-1340	1	Decal-Danger
9:11	93-1122	1	Decal-Danger
9:13	98-3296	1	Decal-Routing, Belt
9:14	98-5130	1	Decal-Torque, Bolt
15	107-4140	1	Deflector ASM
17	105-4622	1	Spacer
18	104-8554	1	Spring-Torsion
19	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF
25	322-50	1	Screw-HH

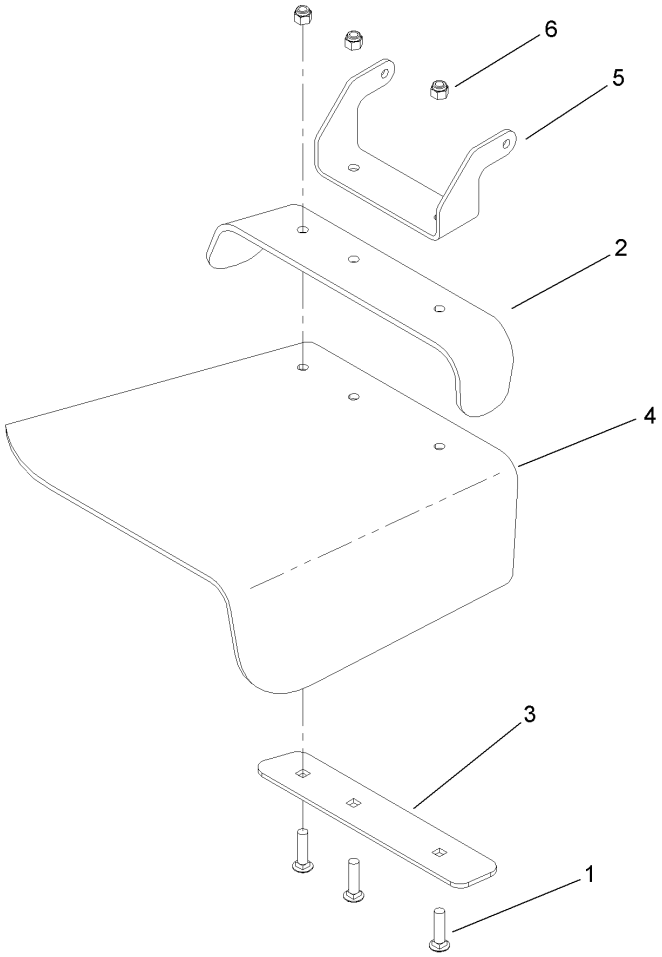

Deflector Assembly


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

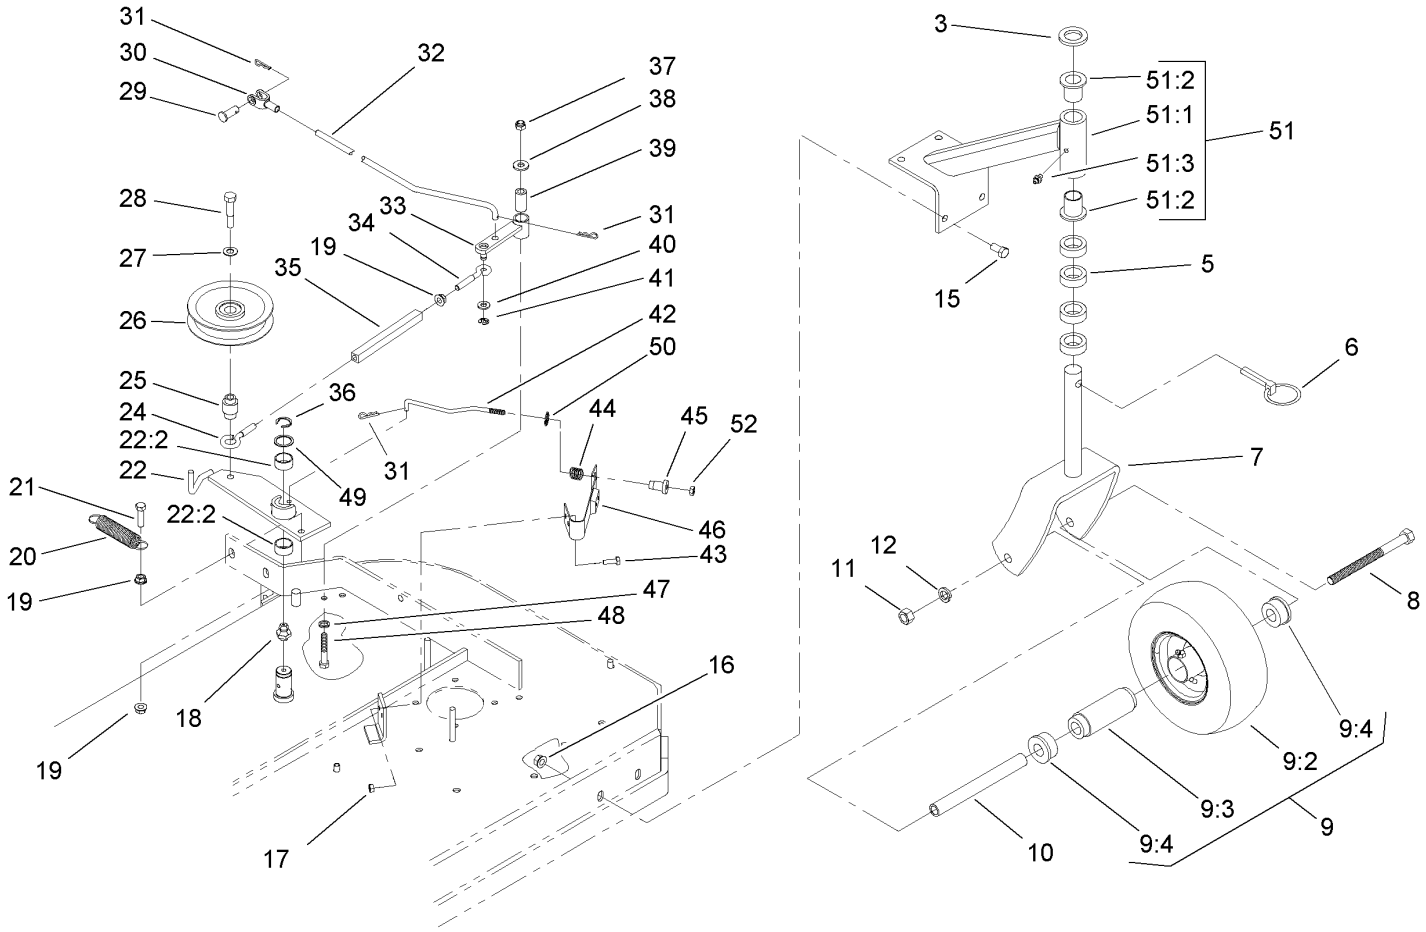

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler

Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad / Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

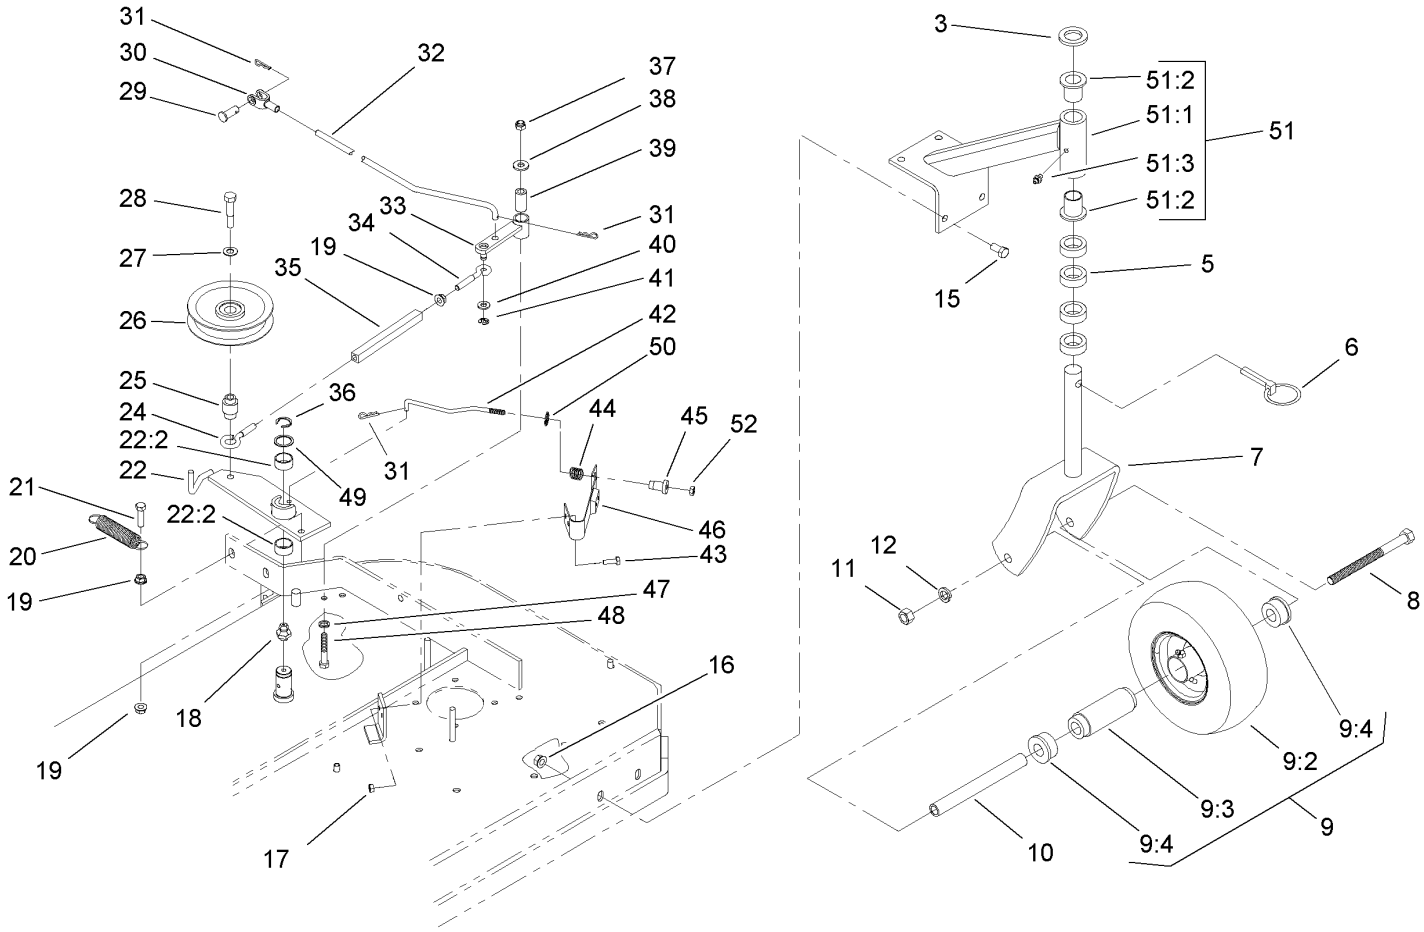


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
51	1-302203	2	Support ASM
❷51:1		1	Support-Caster
51:2	1-303514	2	Bearing-Flanged
51:3	302-52	1	Fitting-Grease
52	3296-56	1	Nut-Lock, NI

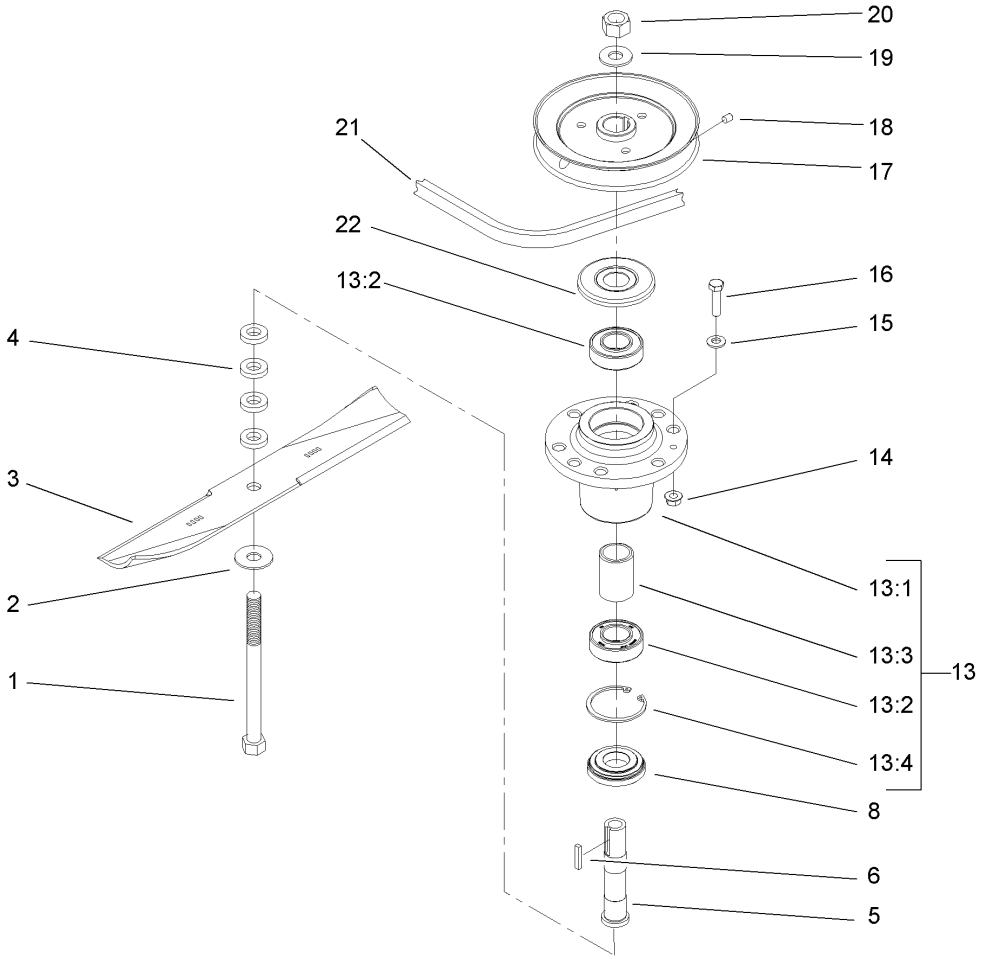

Spindle, Blade and Belt Assembly


Ref	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
3	103-2507	2	Blade-Lift, Low
3	103-2527	2	Blade-Notched
4	1-323539	8	Spacer-Drive, Blade
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
8	103-2535	2	Spacer-Guard, Bottom
13	103-8353	2	Cutter Housing ASM
13:1	103-7975	1	Housing-Spindle
13:2	103-2477	2	Bearing-Ball
13:3	103-2534	1	Spacer-Bearing
13:4	32120-8	1	Ring-Snap
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex
21	1-323745	1	Belt-Blade, Drive
22	103-1330	2	Guard-Bearing, Top

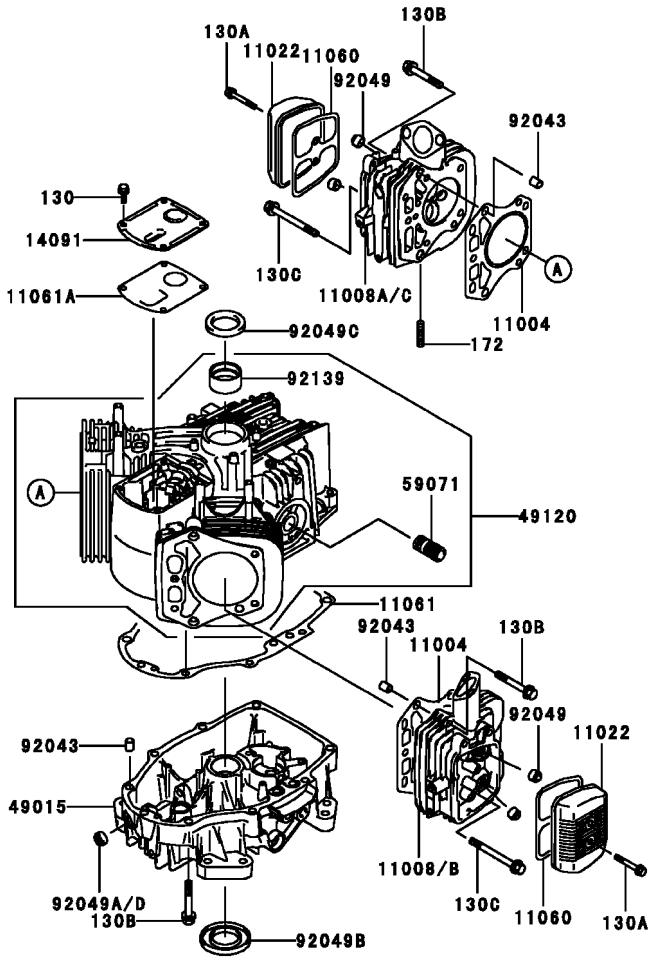

Cylinder and Crankcase Assembly
Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description
❸11004	11004-7008	2	Gasket-Head
❸11008	11008-7011	1	Head-Comp-Cylinder, No.2
❸11008A	11008-7017	1	Head-Comp-Cylinder, No.1
❸11008B	11008-7021	1	Head-Comp-Cylinder, #2
❸11008C	11008-7022	1	Head-Comp-Cylinder, #1
❸11022	11022-7003	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Case, Rocker
❸11061	11061-7007	1	Gasket-Cover, Crankcase
❸11061A	11061-7008	1	Gasket-Breather
❸14091	14091-7007	1	Cover
❸49015	49015-7032	1	Cover-Crankcase
❸49120	49120-7015	1	Crankcase-Comp
❸59071	59071-2079	1	Joint
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, Rvc2 (6x11x10.2)
❸92049A	92049-7005	1	Seal-Oil,so 8x14x5 HS
❸92049B	92049-7015	1	Seal-Oil, Sd (35x62x8 L Hs)
❸92049C	92049-7016	1	Seal-Oil, Sd (35x48x8 R Hs)
❸92049D	92049-7019	1	Seal-Oil, So (8x14x5 Hs)
❸92139	92139-7002	1	Bushing
❸130	130B0612	4	Bolt-Flanged
❸130A	130B0640	4	Bolt-Flanged
❸130B	130T0850	17	Bolt-Flanged
❸130C	130T0875	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❸172	172G0818	4	Bolt-Stud

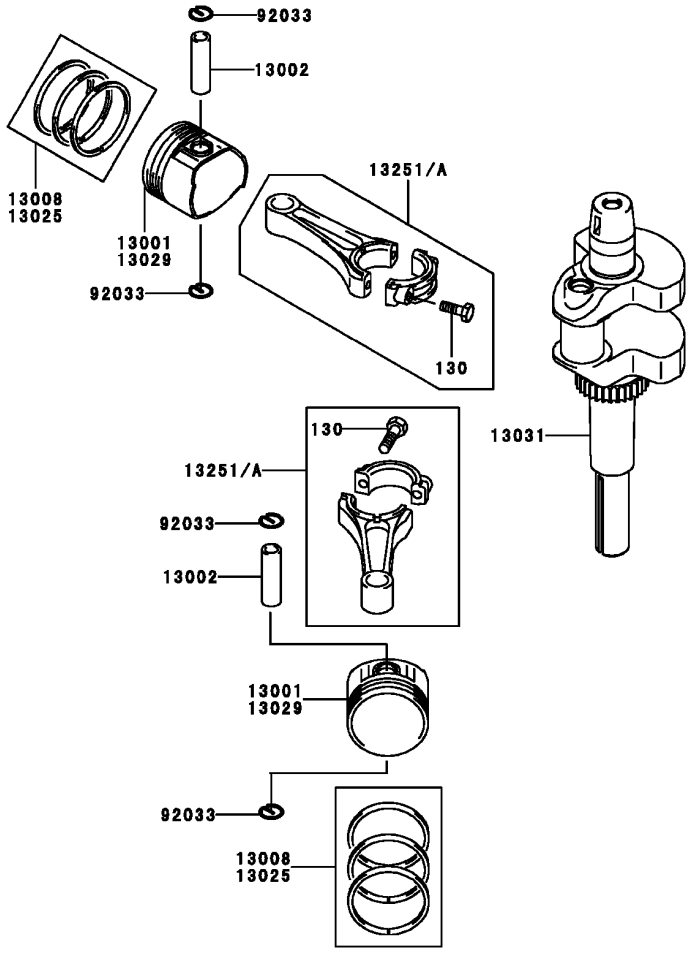


Piston and Crankshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸13001	13001-7009	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-7001	2	Ring-Set-Piston
❸13025	13025-7003	1	Ring-Set-Piston
❸13029	13029-7005	1	Piston-Engine
❸13031	13031-7033	1	Crankshaft-Comp
❸13251	13251-7007	2	Connecting Rod ASM
❸13251A	13251-7008	2	Connecting Rod Asm, U/s=0.50
❸92033	92033-7005	4	Ring-Snap
❸130	130G0630	4	Bolt-Flanged

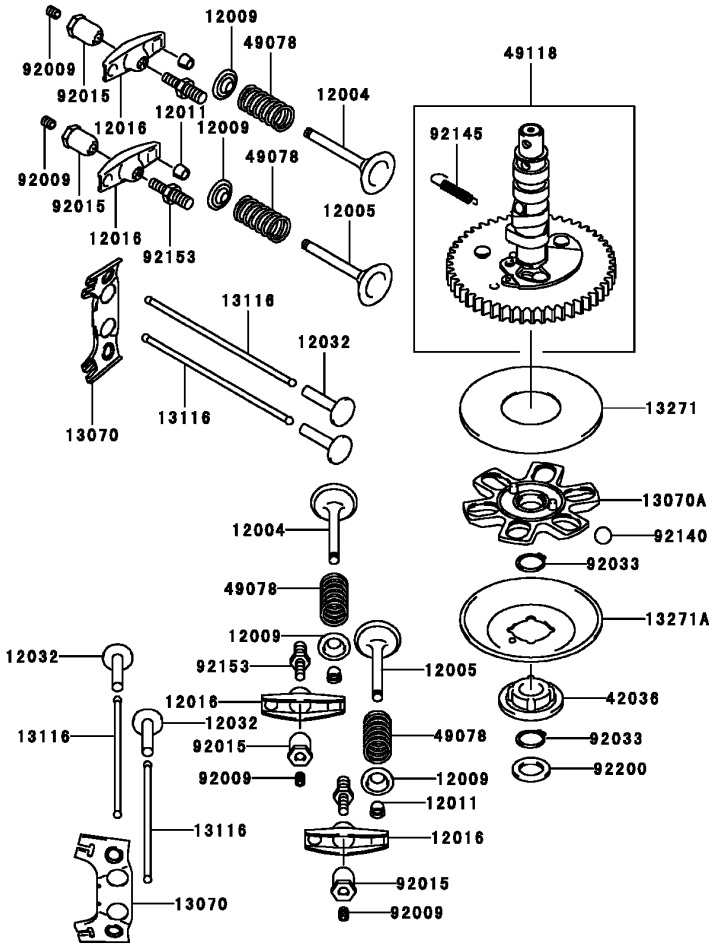


Valve and Camshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸12004	12004-7003	2	Valve-Intake
❸12005	12005-7003	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12011	12011-2056	8	Collet
❸12016	12016-7001	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036	42036-7009	1	Sleeve
❸49078	49078-7001	4	Spring-Valve, Engine
❸49118	49118-7009	1	Camshaft-Comp
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7002	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer

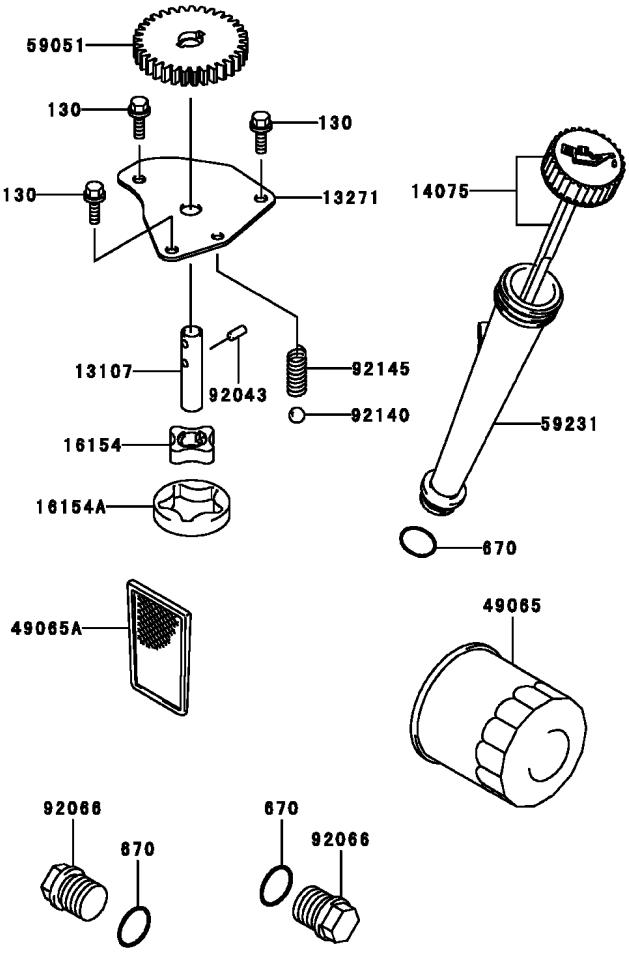


Lubrication-Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump (In)
❸16154A	16154-2054	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7003	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring
❸130	130B0612	3	Bolt-Flanged
❸670	670D2016	3	O-Ring (16mm)

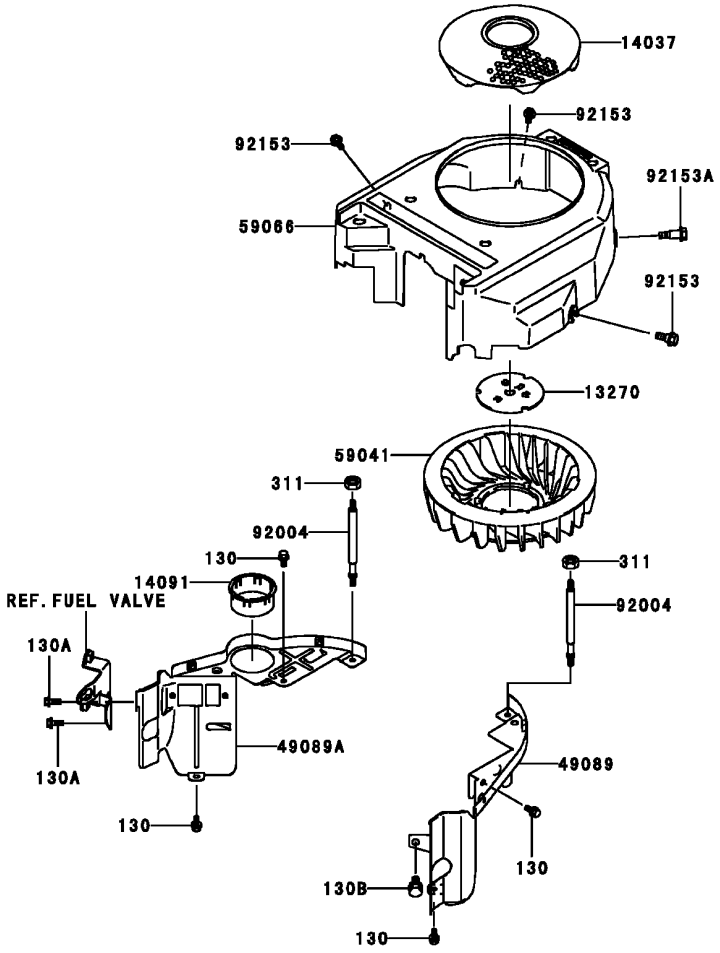


Cooling Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸13270	13270-7007	1	Plate
❸14037	14037-7021-9H	1	Screen
❸14091	14091-7009	1	Cover
❸49089	49089-7044	1	Shroud-Engine
❸49089A	49089-7045	1	Shroud-Engine
❸59041	59041-7010	1	Fan
❸59066	59066-7023	1	Housing-Fan
❸92004	92004-7007	2	Stud
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt
❸130	130B0612	4	Bolt-Flanged
❸130A	130B0616	2	Bolt-Flanged
❸130B	130B0816	1	Bolt-Flanged
❸311	311F0600	2	Nut-Hex

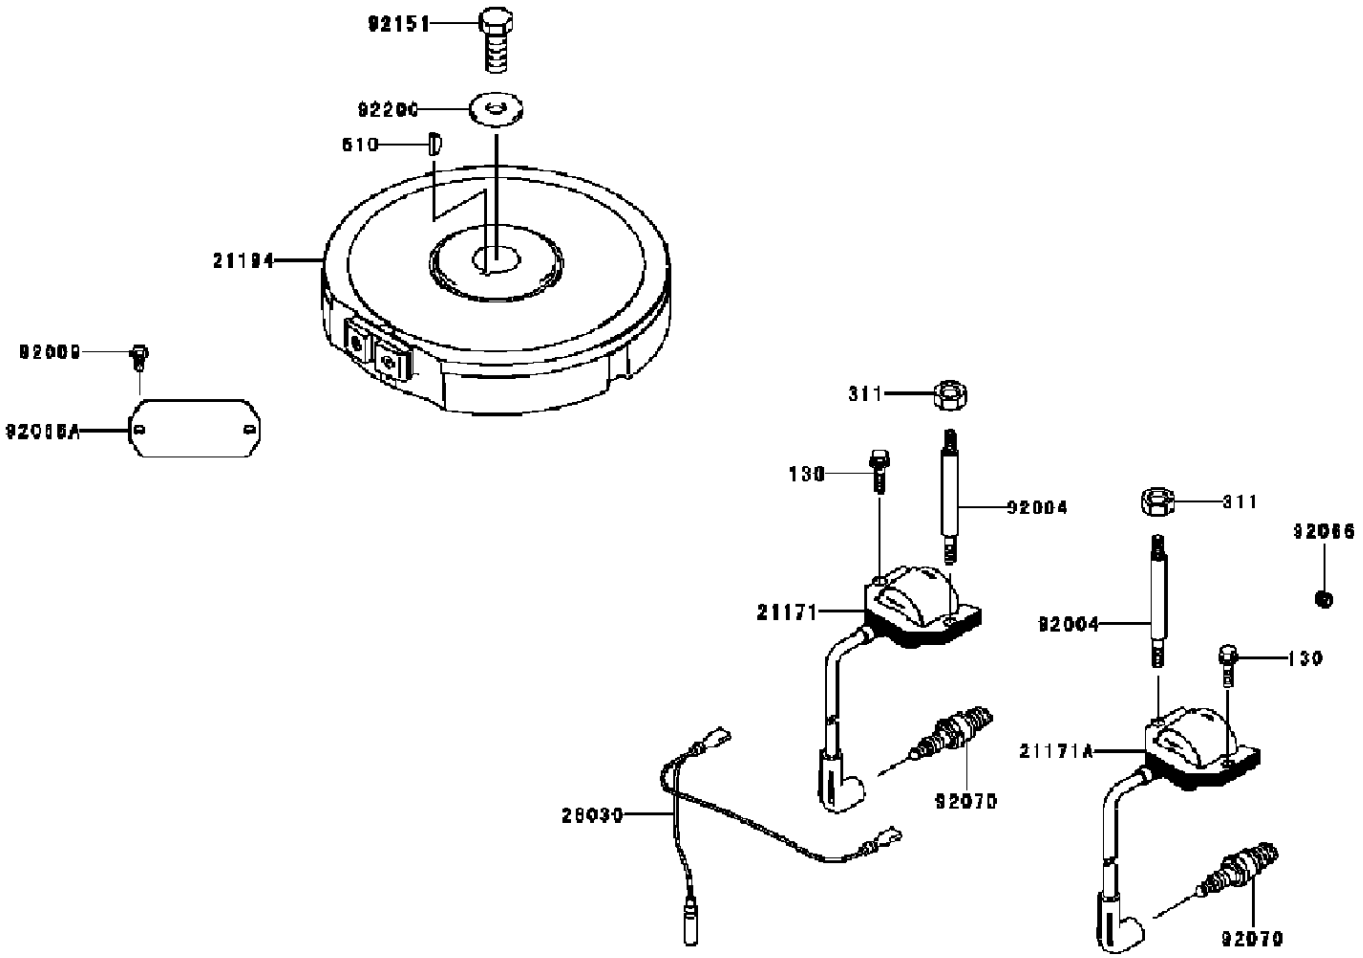


Electric-Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸21171	21171-7013	1	Ignition Coil ASM
❸21171A	21171-7014	1	Ignition Coil ASM
❸21194	21194-7013	1	Flywheel-Comp
❸26030	26030-7001	1	Harness
❸92004	92004-7008	2	Stud
❸92009	92009-2308	2	Screw
❸92066	92066-7002	1	Plug
❸92066A	92066-7005	1	Plug
❸92070	92070-7003	2	Plug-Spark (Rcj8y, Solid)
❸92151	92151-2097	1	Bolt (12x30)
❸92200	92200-7002	1	Washer
❸130	130B0620	2	Bolt-Flanged
❸311	311F0600	2	Nut-Hex
❸510	510A5100	1	Key-Woodruff

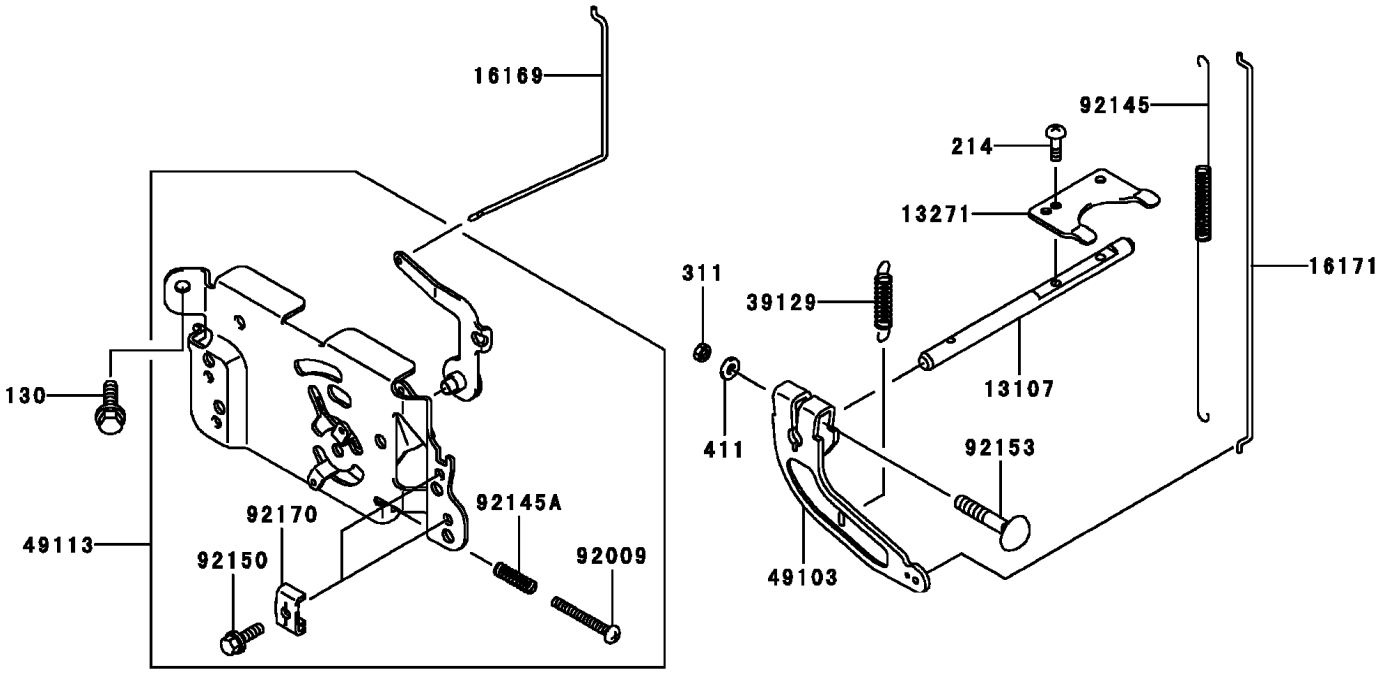

Control-Equipment Assembly
Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description
❸13107	13107-7010	1	Shaft
❸13271	13271-7018	1	Plate
❸16169	16169-7012	1	Link-Choke
❸16171	16171-7007	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113	49113-7024	1	Panel-Comp-Control
❸92009	92009-7007	1	Screw (4x35)
❸92145	92145-7003	1	Spring
❸92145A	92145-7005	1	Spring
❸92150	92150-2182	2	Bolt (5x18)
❸92153	92153-7005	1	Bolt,6x35
❸92170	92170-7001	2	Clamp
❸130	130B0612	2	Bolt-Flanged
❸214	214B0408	2	Screw-Pan
❸311	311B0600	1	Nut-Hex
❸411	411b0600	1	Washer-Plain

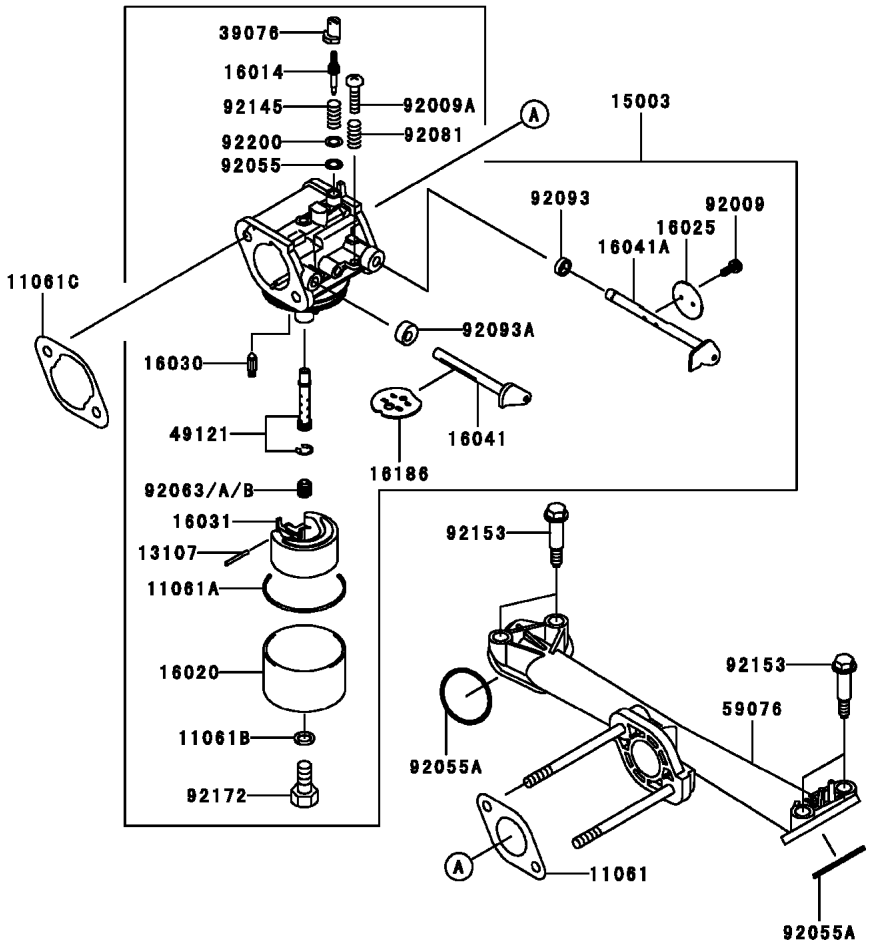

Carburetor Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸11061	11061-7004	1	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Cleaner, Air
❸13107	13107-7018	1	Shaft
❸15003	15003-7054	1	Carburetor-ASM
❸16014	16014-7002	1	Screw-Pilot
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Carburetor, Choke
❸16041A	16041-7018	1	Shaft-Carburetor, Throttle
❸16186	16186-7002	1	Choke Valve ASM
❸39076	39076-7001	1	Limiter
❸49121	49121-7002	1	Nozzle-Main
❸59076	59076-7005	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92055	92055-2174	1	Ring-O
❸92055A	92055-7007	2	Ring-O, Id=31
❸92063	92063-7027	1	Jet-Main-#78
❸92063A	92063-7030	1	Jet-Main-#75
❸92063B	92063-7031	1	Jet-Main-#72


Ref	Part No.	Qty.	Description
❸92081	92081-2234	1	Spring
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸92153	92153-7009	4	Bolt
❸92172	92172-7002	1	Screw
❸92200	92200-7014	1	Washer

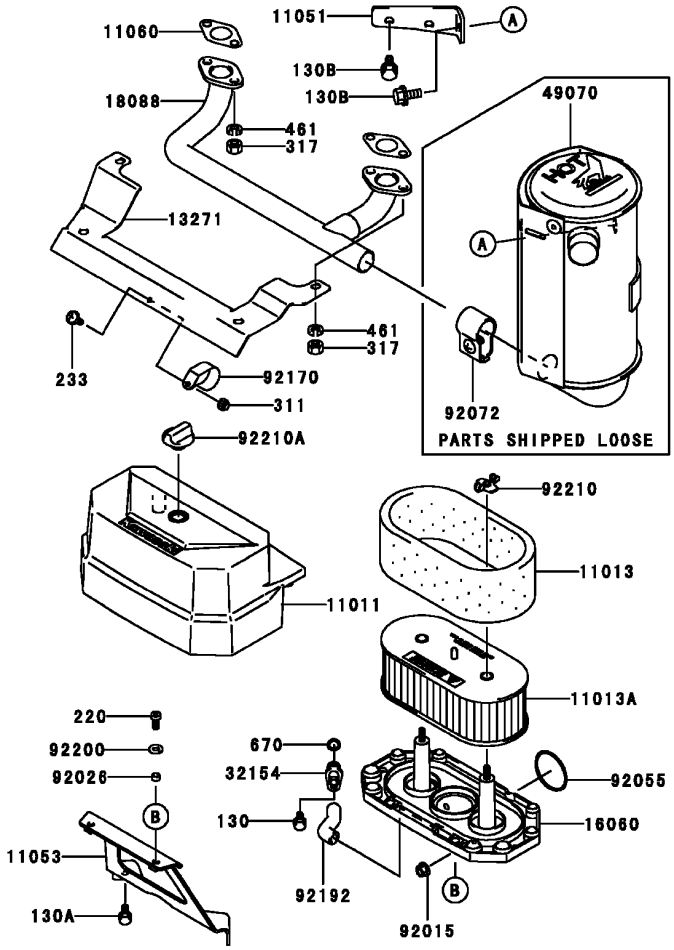

Air-Filter and Muffler Assembly
Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description
❸11011	11011-7035	1	Case-Air Filter
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11051	11051-7005-9H	1	Bracket
❸11053	11053-7022	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13271	13271-7022	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18088	18088-7001	1	Pipe-Exhaust
❸32154	32154-7006	1	Pipe
❸49070	49070-7015	1	Muffler-Comp
❸92015	92015-1193	2	Nut
❸92026	92026-7001	2	Spacer, 6.2x7.9x5
❸92055	92055-7015	1	O-Ring
❸92072	92072-7008	1	Band
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92200	92200-2070	2	Washer
❸92210	92210-7004	2	Nut
❸92210A	92210-7019	1	Nut
❸130	130B0610	1	Bolt-Flanged
❸130A	130B0612	2	Bolt-Flanged
❸130B	130B0816	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❸220	220B0614	2	Screw-Pan (Cross)
❸233	233B0416	1	Screw-Pan
❸311	311B0400	1	Nut-Hex
❸317	317R0800	4	Nut-Hex, Small
❸461	461F0800	4	Washer-Spring
❸670	670B2010	1	O-Ring

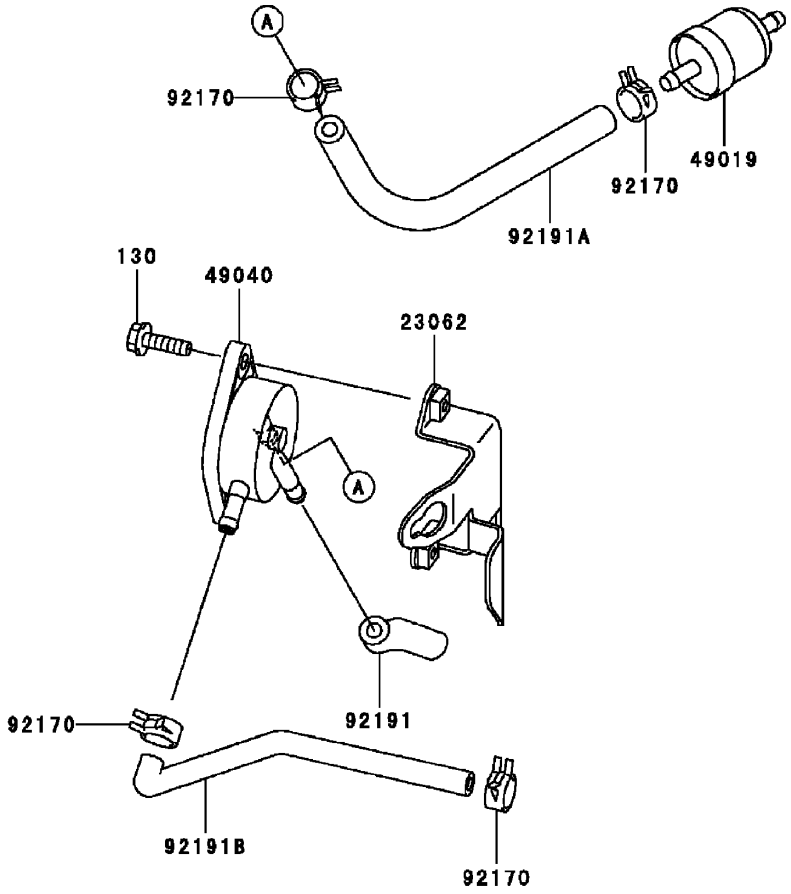

Fuel Tank/Fuel Valve Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❸23062	23062-7004-9H	1	Bracket-Comp
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92191A	92191-7003	1	Tube (6.35x12.7x160)
❸92191B	92191-7004	1	Tube
❸130	130B0620	2	Bolt-Flanged

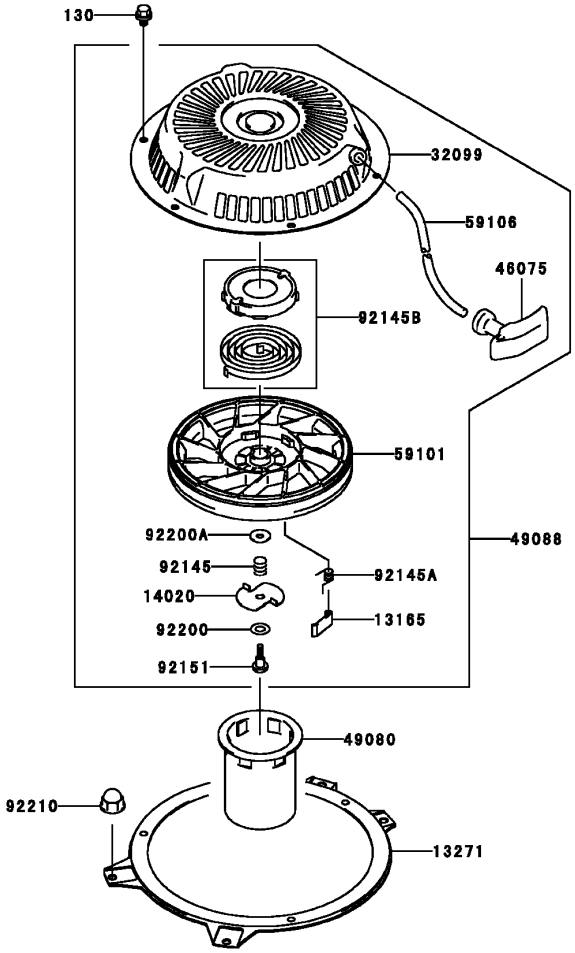

Starter Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸13165	13165-7001	2	Pawl-Starter, Recoil
❸13271	13271-7003-9H	1	Plate
❸14020	14020-7001	1	Retainer
❸32099	32099-7002	1	Case-Starter, Recoil
❸46075	46075-7001	1	Grip-Recoil, Starter
❸49080	49080-7001	1	Pulley-Starting
❸49088	49088-7013	1	Starter-Recoil
❸59101	59101-7001	1	Reel-Recoil
❸59106	59106-7001	1	Rope
❸92145	92145-7006	1	Spring
❸92145A	92145-7007	2	Spring
❸92145B	92145-7008	1	Spring
❸92151	92151-7008	1	Bolt
❸92200	92200-7004	1	Washer
❸92200A	92200-7005	1	Washer
❸92210	92210-0003	4	Nut
❸130	130B0608	3	Bolt-Flanged

56033



56070



56080



56080A



Decal Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❸56033	56033-7001	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56080	56080-2077	1	Label-Brand
❸56080A	56080-7025	1	Label-Brand


TORO®