Form Number 3352-528

Mid-Size ProLine, Pistol Grip, Gear Drive, 13 HP with 36in Side Discharge Mower

Model No. 30519 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel System Assembly	3
Transmission and Drive Assembly	4
Wheel Drive Assembly	6
Upper Handle Assembly	8
Handle Decal Assembly No. 106-2742	10
Deck Assembly	11
Deflector Assembly No. 107-4140	12
Front Caster and Blade Brake Assembly	13
Spindle Assembly	15
Cylinder and Crankcase Assembly Kawasaki FH381V-AS25	16
Piston and Crankshaft Assembly Kawasaki FH381V-AS25	17
Valve and Camshaft Assembly Kawasaki FH381V-AS25	18
Lubrication-Equipment Assembly Kawasaki FH381V-AS25	19
Cooling Equipment Assembly Kawasaki FH381V-AS25	20
Electric-Equipment Assembly Kawasaki FH381V-AS25	21
Control-Equipment Assembly Kawasaki FH381V-AS25	22
Carburetor Assembly Kawasaki FH381V-AS25	23
Air-Filter and Muffler Assembly Kawasaki FH381V-AS25	24
Fuel Tank/Fuel Valve Assembly Kawasaki Model FH381V-AS25	25
Starter Assembly Kawasaki FH381V-AS25	26
Decal Assembly Kawasaki FH381V-AS25	27
Attachments and Accessories List	28

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head


Footnotes

❶ Not illustrated

❷ Not serviced separately

❸ Obtain parts from Peerless Transmissions, model 700-070A


❹ Obtain parts from your local Kawasaki dealer

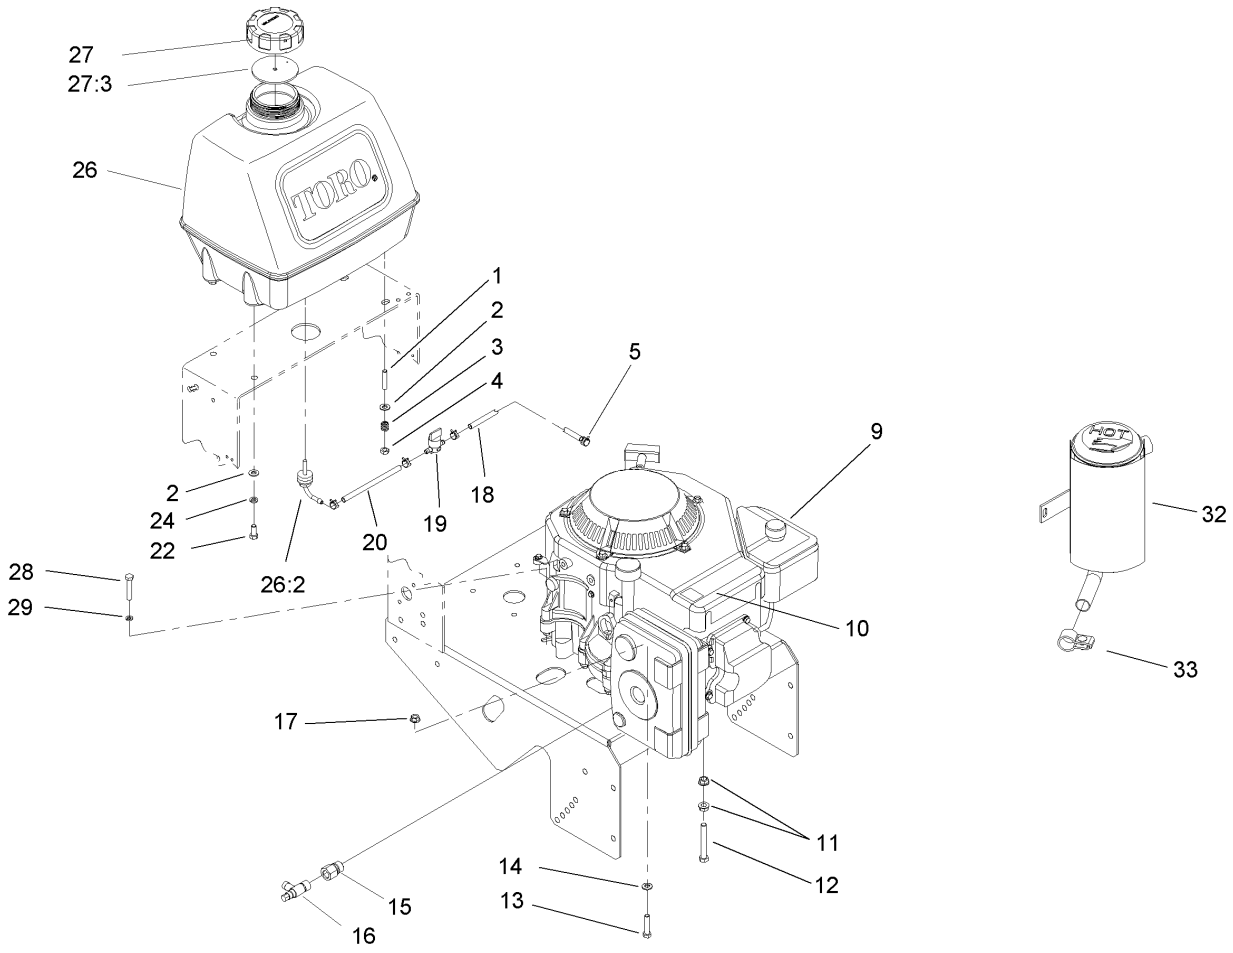

Engine and Fuel System Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❷9		1	Engine-Kawasaki, Fh381v-As25
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
17	32128-20	4	Nut-HF
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
28	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
29	1-805004	1	Washer-Lock
32	100-6467	1	Muffler
33	103-5465	1	Clamp-Muffler
❶99	1-303335	1	Tie-Plastic

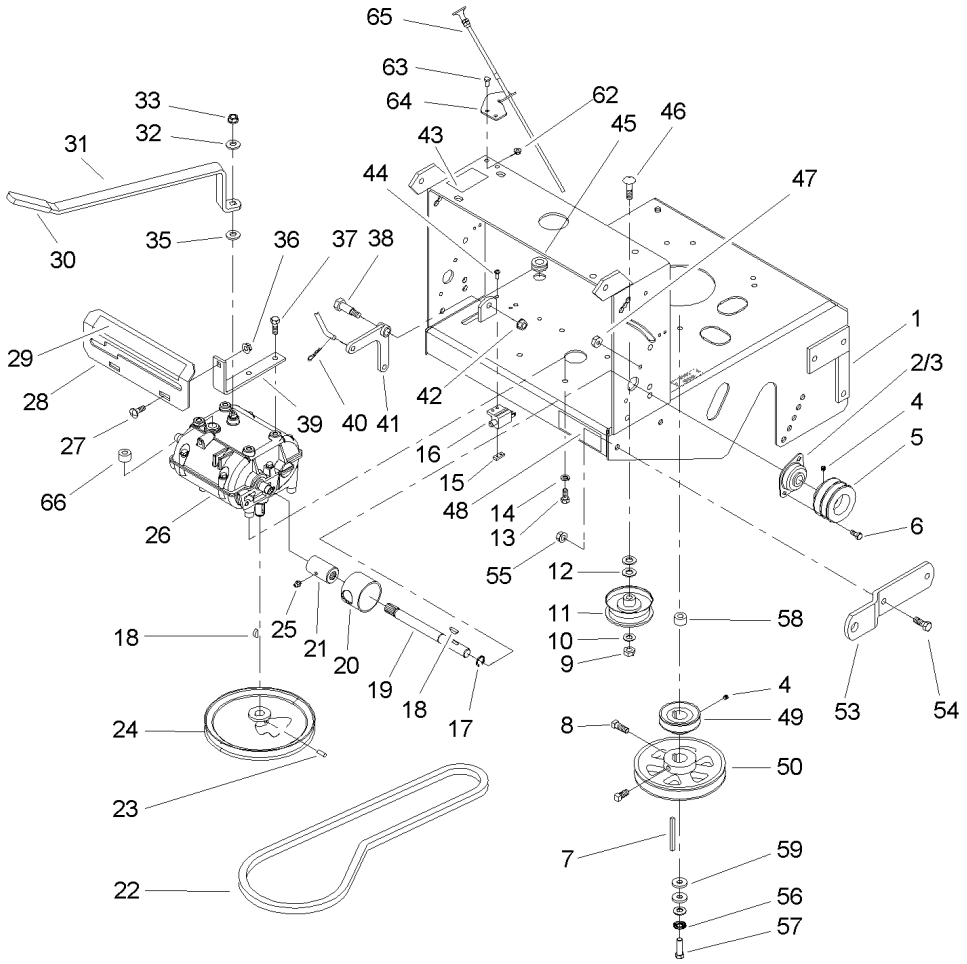

Transmission and Drive Assembly


Ref	Part No.	Qty.	Description
1	103-2923-01	1	Frame-Deck, Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
❸26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission

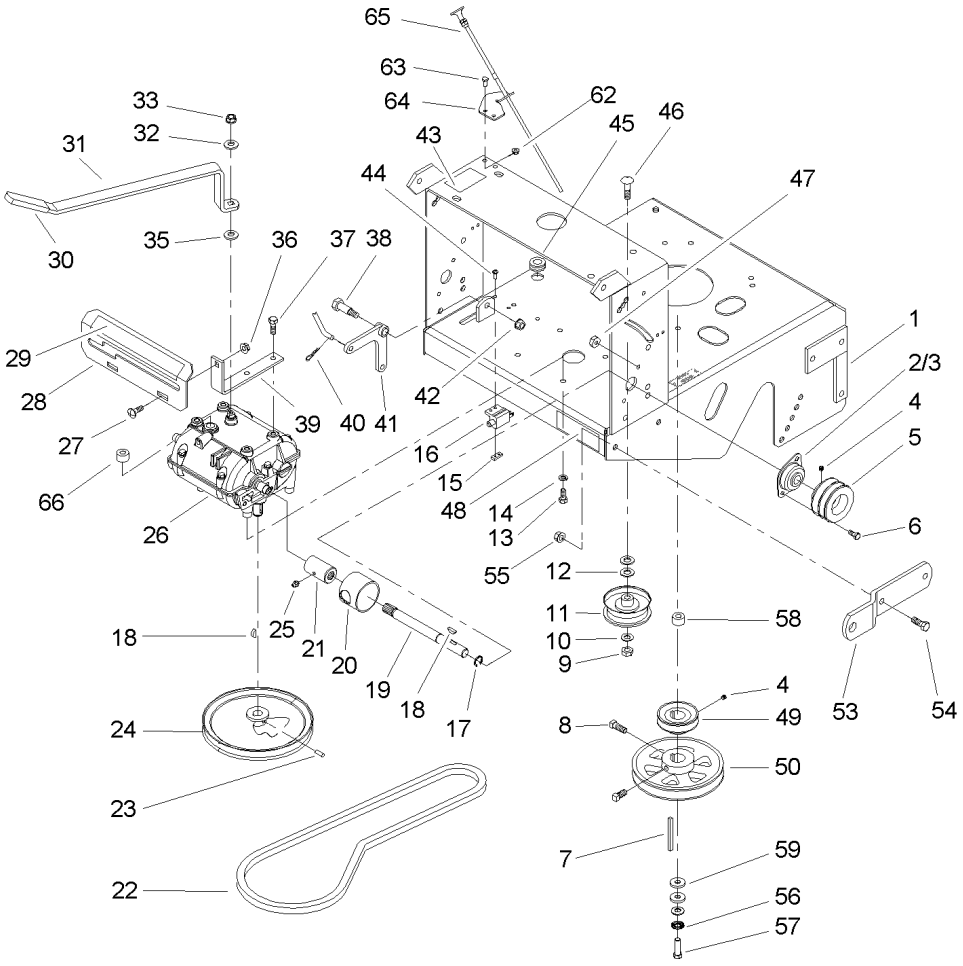

Transmission and Drive Assembly (continued)


Ref	Part No.	Qty.	Description
50	103-1668	1	Sheave
53	1-323318-01	2	Hitch-Sulky
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
63	321-3	2	Screw-HH
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral

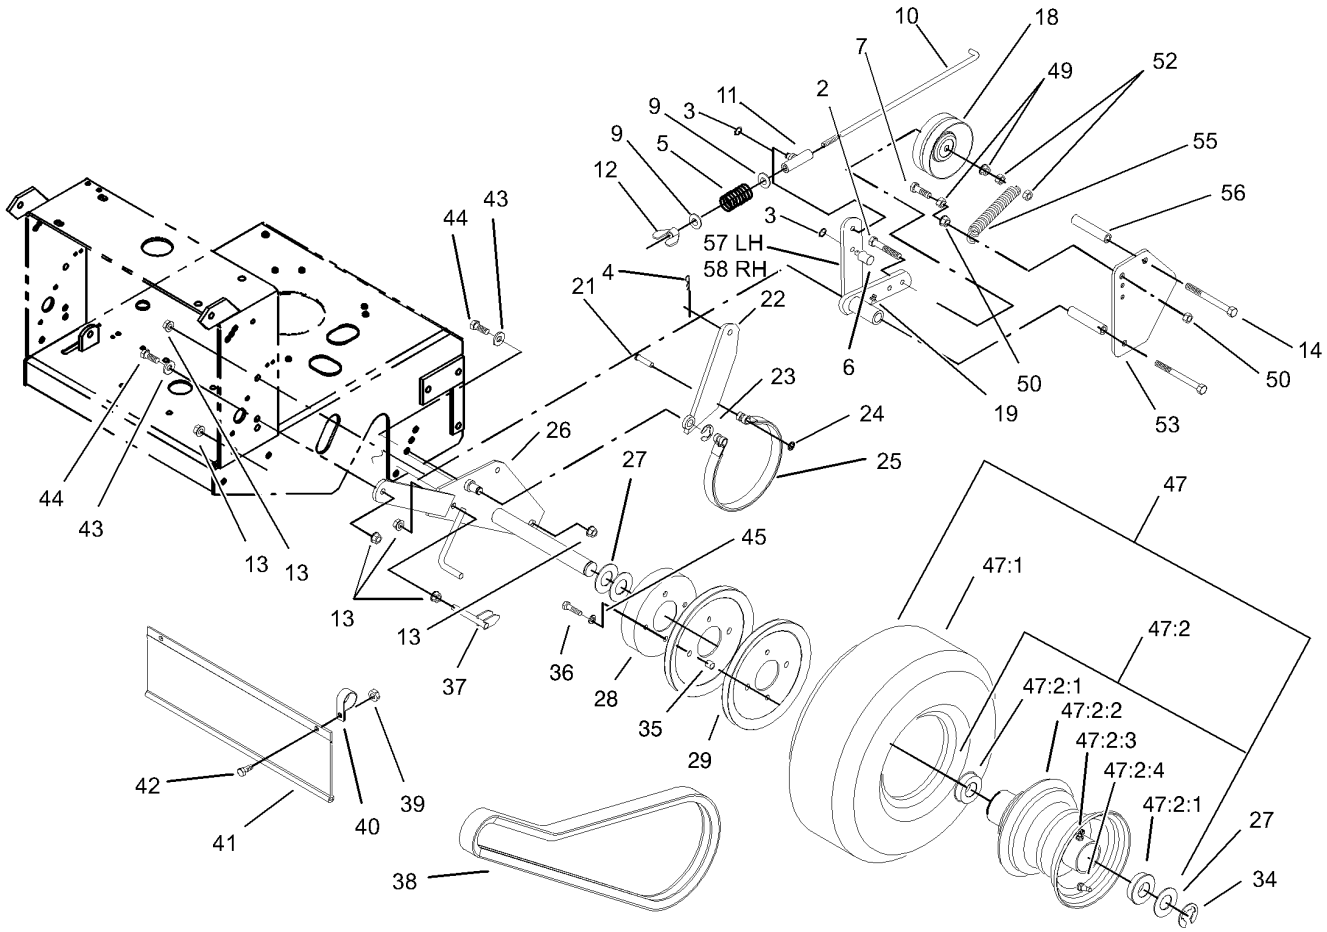

Wheel Drive Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake ASM
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
❷47		2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
❷47:2:2		1	Rim ASM
❷47:2:3		1	Fitting-Grease
❷47:2:4		1	Stem-Valve
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension

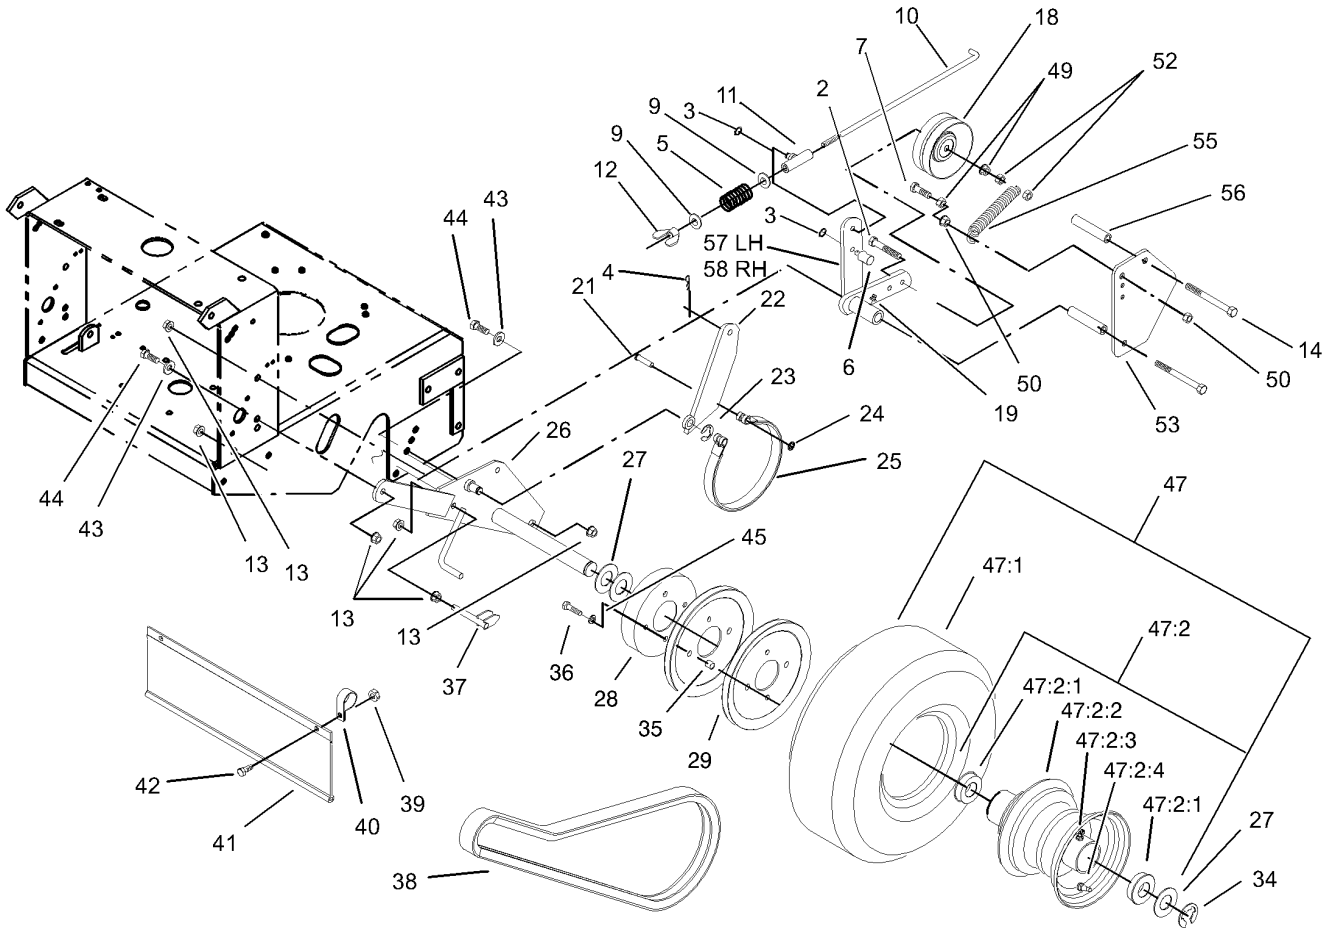

Wheel Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH
58	103-1616-03	1	Arm-Idler, RH

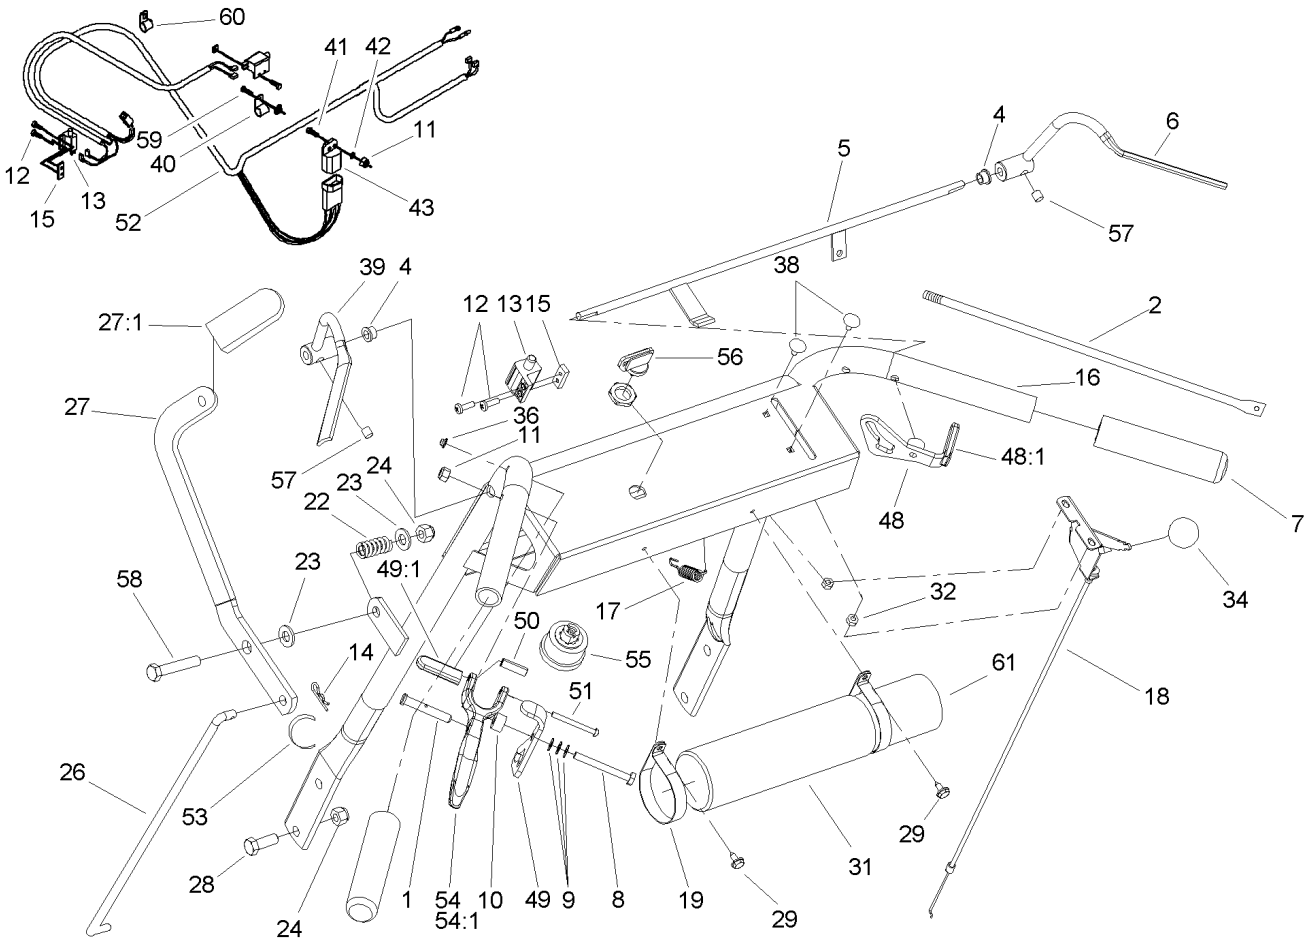

Upper Handle Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2742	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever

Ref	Part No.	Qty.	Description
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	1	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Interlock
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Drive Lever
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	1-403121	1	Switch-Key
56	63-8360	1	Key-Ignition

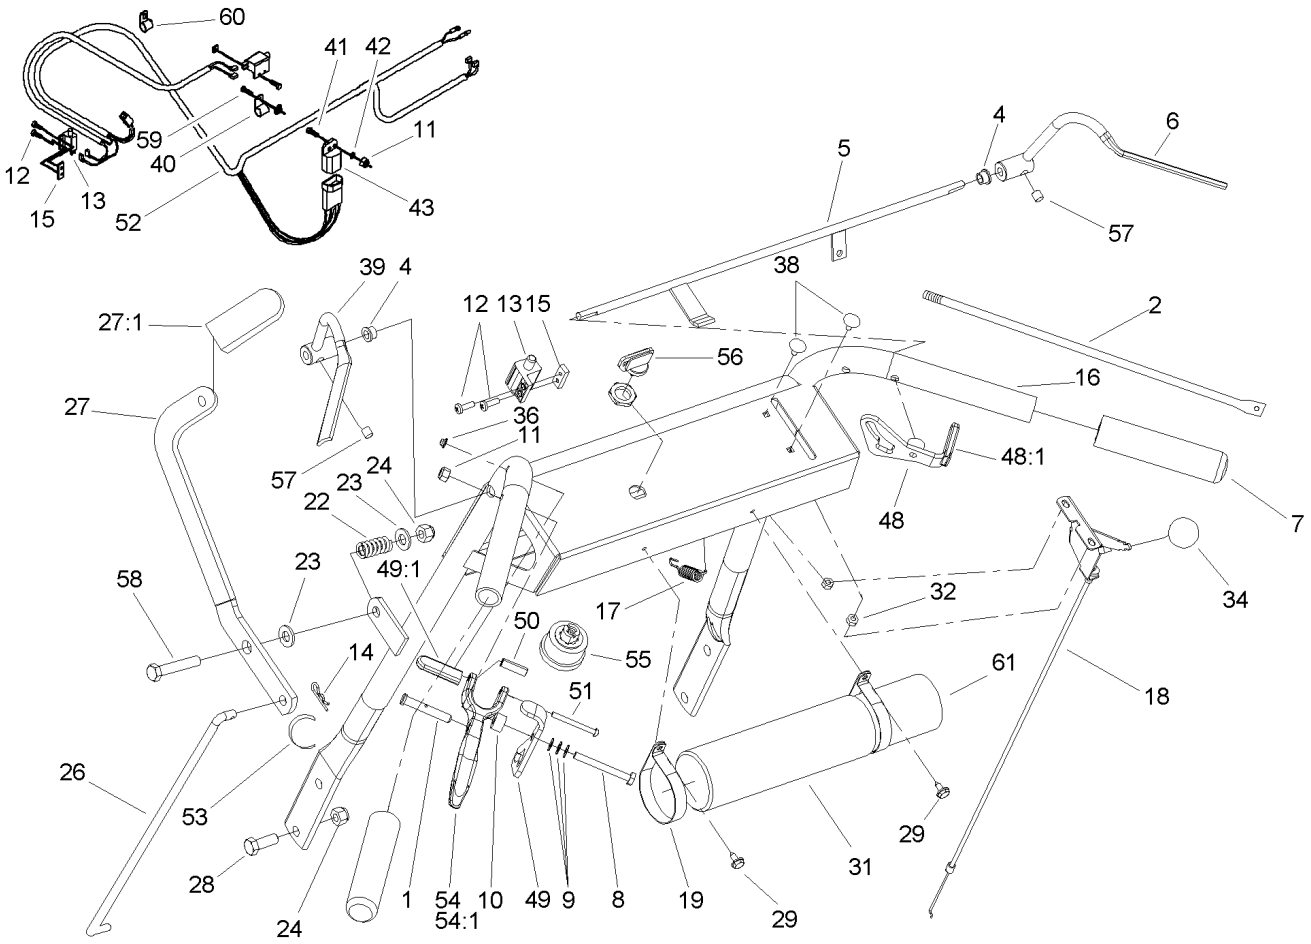


Upper Handle Assembly (continued)

Ref	Part No.	Qty.	Description
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
59	33114-016	1	Screw-HH
60	1-413510	1	Clip-Loom
61	104-7048	1	Cap-Housing

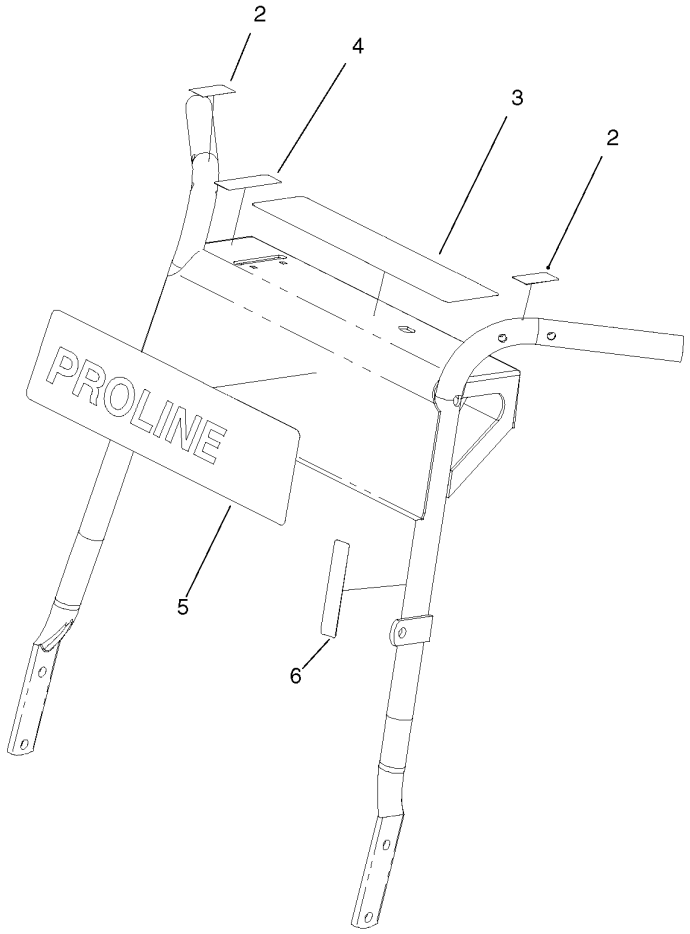


Handle Decal Assembly No. 106-2742

Ref	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	106-0750	1	Decal
6	95-5537	1	Decal-Engage, Deck

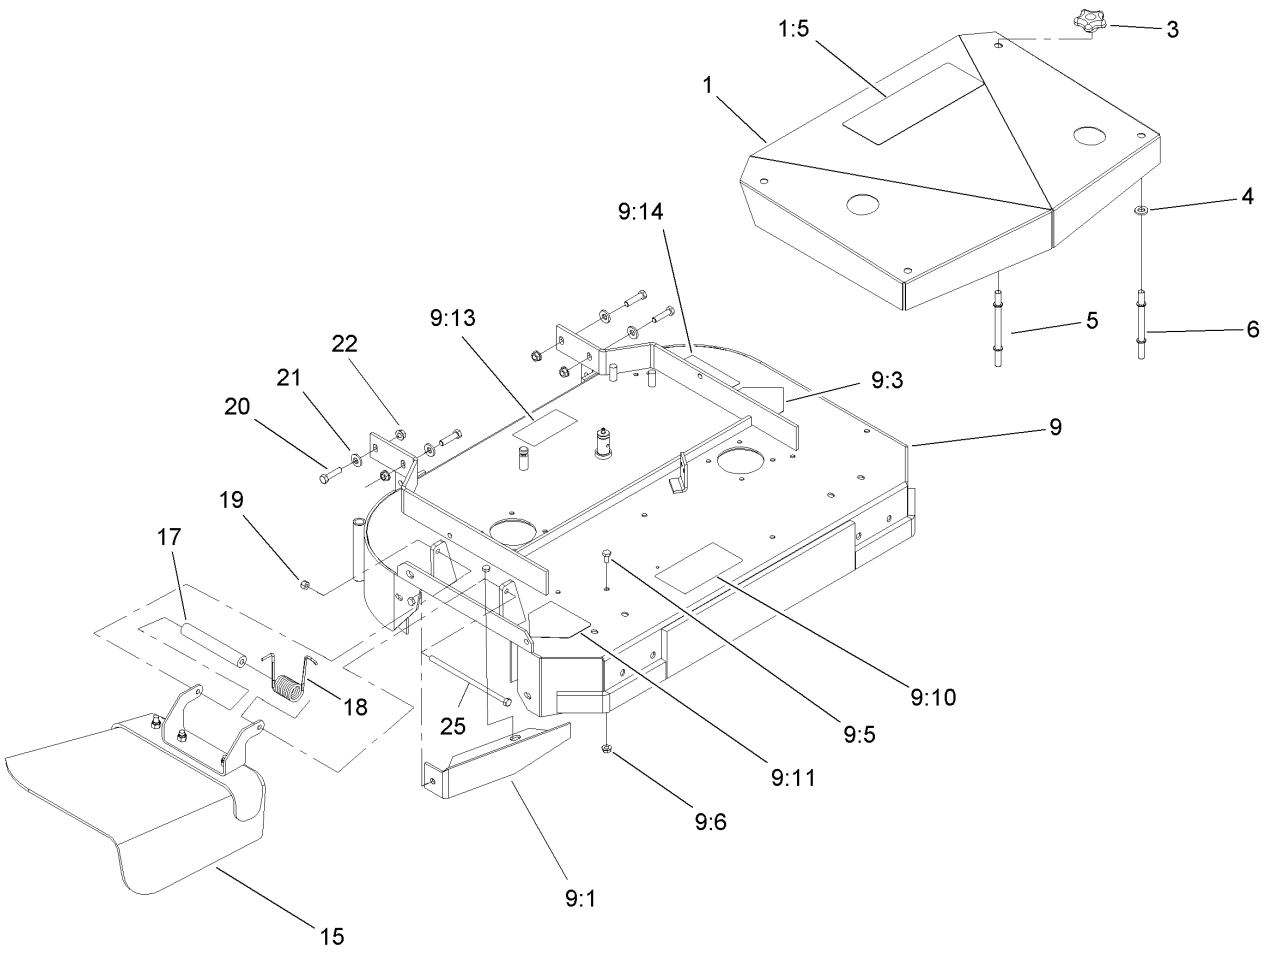


Deck Assembly

Ref	Part No.	Qty.	Description
1	1-304258	1	Belt Shield ASM
1:5	106-0711	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	107-4214	1	Deck ASM
9:1	1-302189-01	1	Baffle-Dogleg
9:3	1-403005	1	Decal-Danger
9:5	322-2	8	Screw-HH
9:6	32128-20	8	Nut-HF
9:10	66-1340	1	Decal-Danger
9:11	93-1122	1	Decal-Danger
9:13	98-3296	1	Decal-Routing, Belt
9:14	98-5130	1	Decal-Torque, Bolt
15	107-4140	1	Deflector ASM
17	105-4622	1	Spacer
18	104-8554	1	Spring-Torsion
19	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF
25	322-50	1	Screw-HH

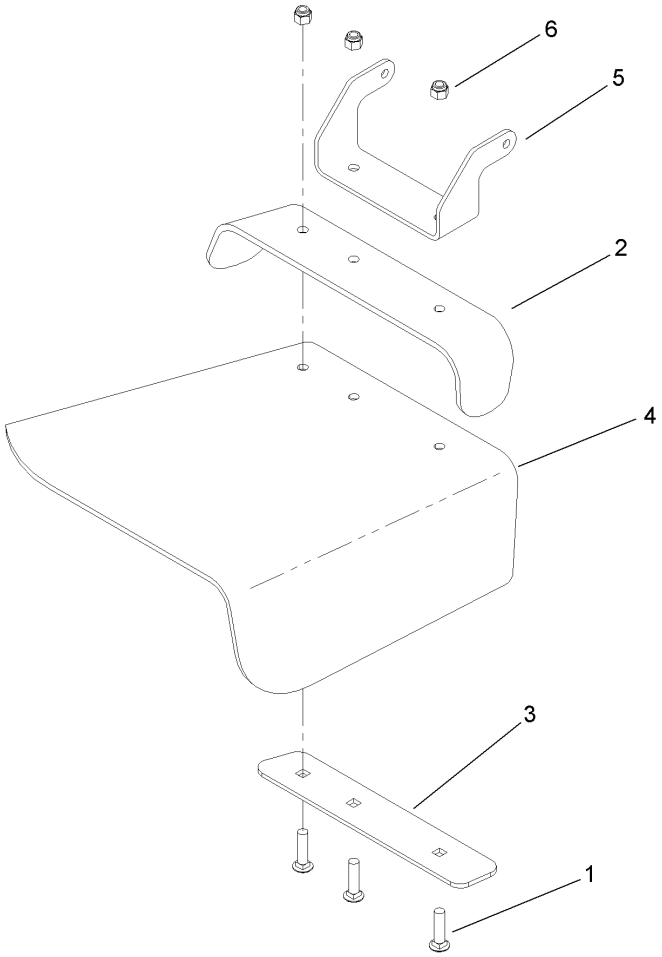

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

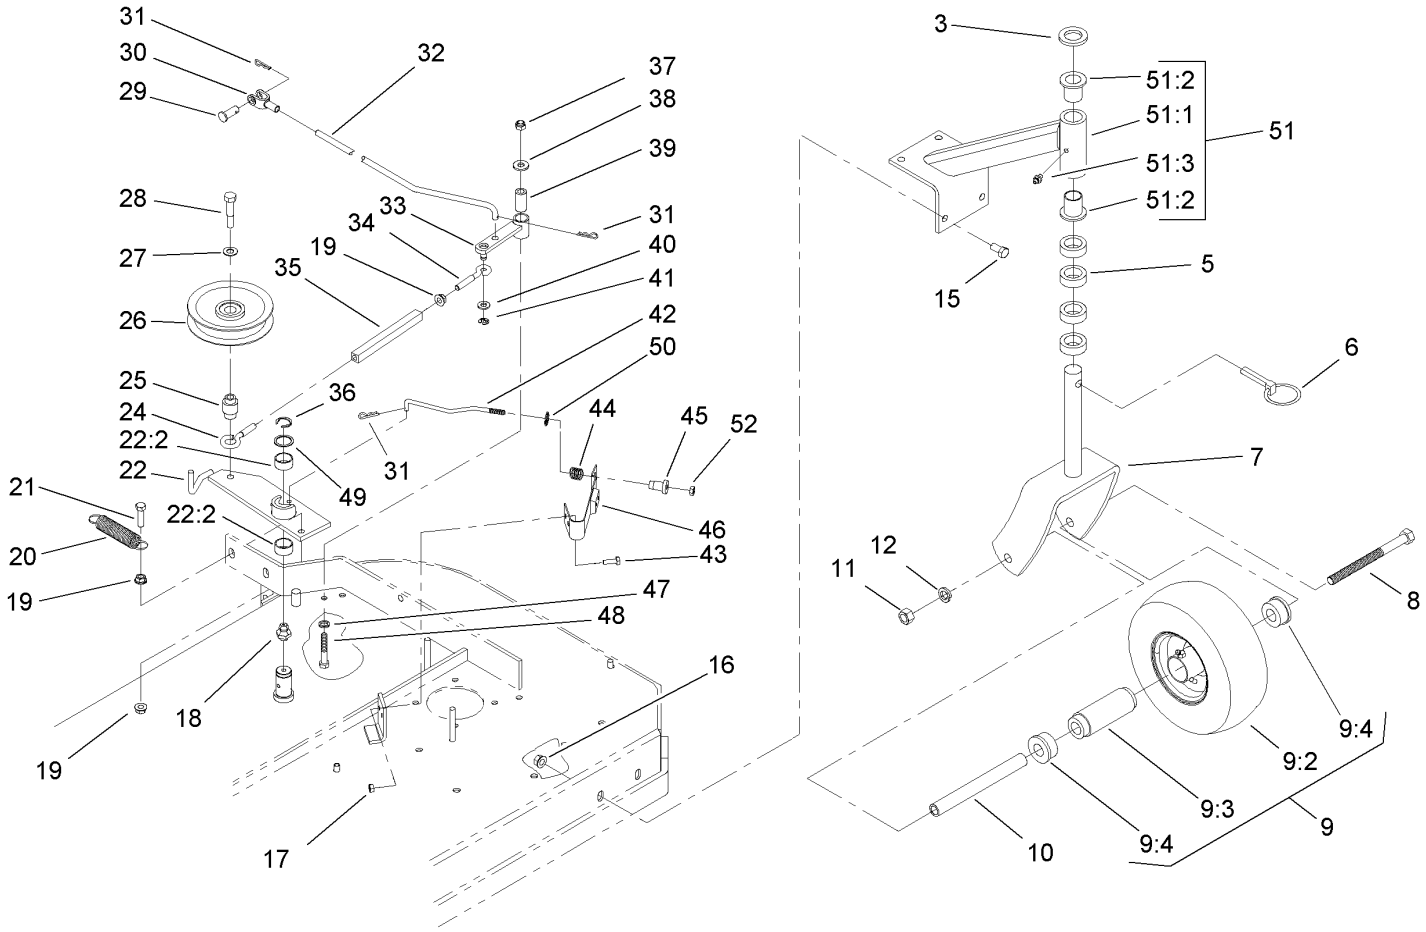

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler

Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323715	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad / Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

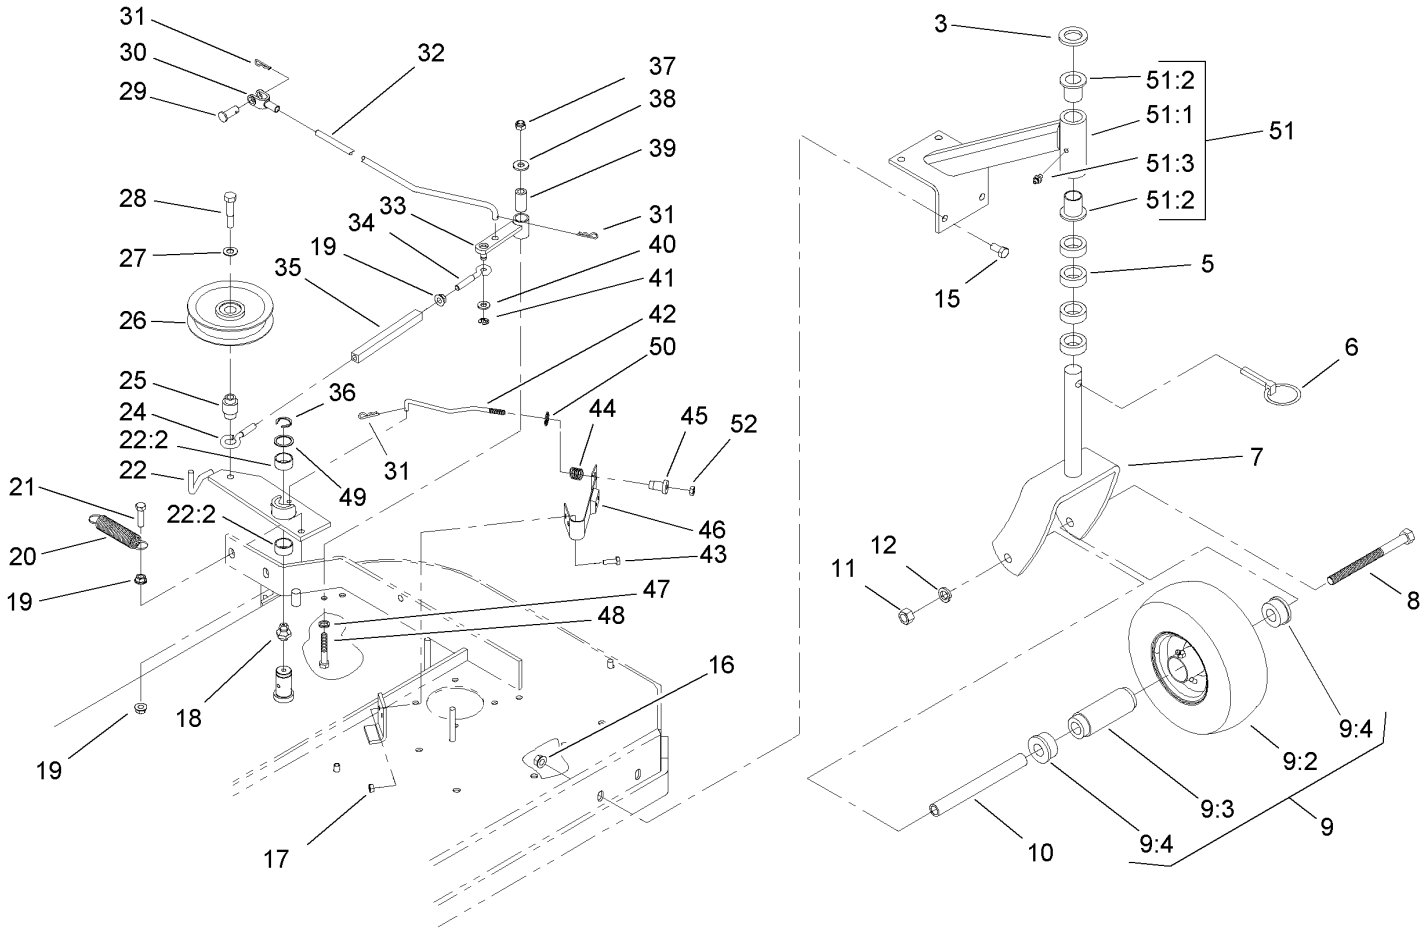


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
51	1-302203	2	Support ASM
❷51:1		1	Support-Caster
51:2	1-303514	2	Bearing-Flanged
51:3	302-52	1	Fitting-Grease
52	3296-56	1	Nut-Lock, NI

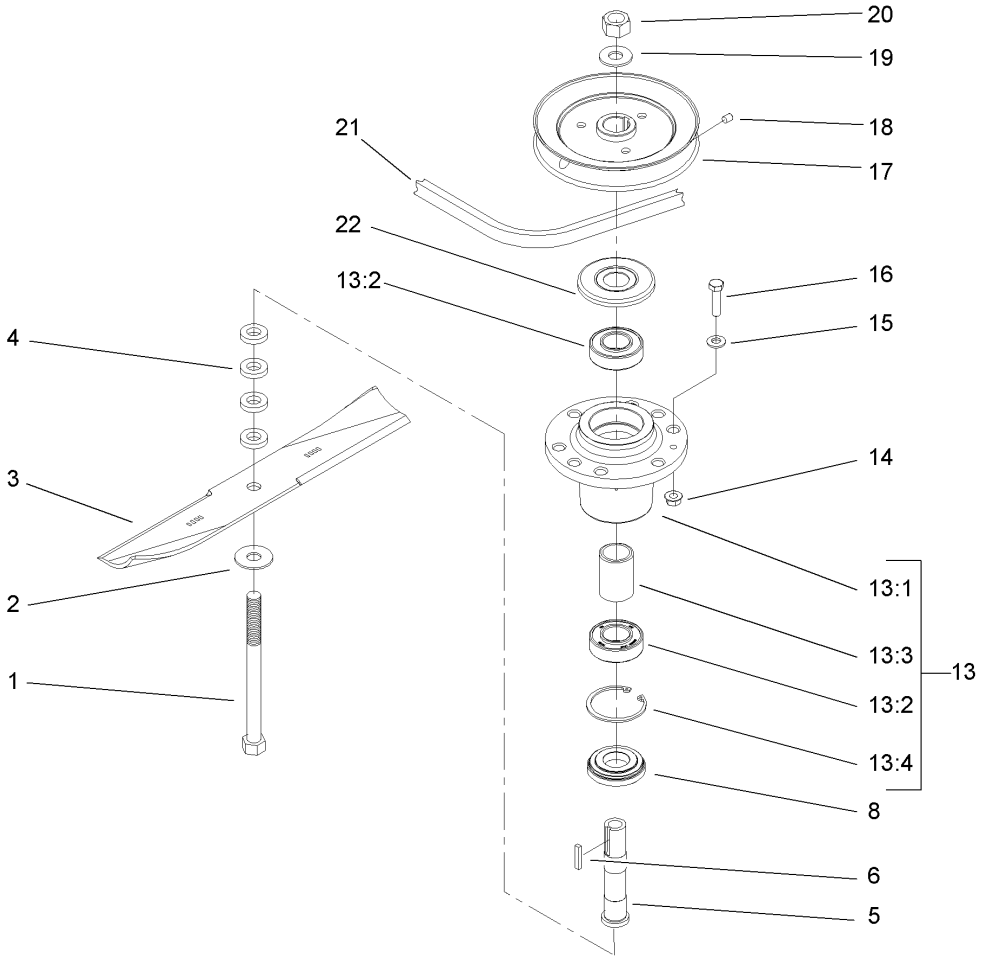

Spindle Assembly


Ref	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
3	103-2528	2	Blade-Notched
3	103-2508	2	Blade-Lift, Low
4	1-323539	8	Spacer-Drive, Blade
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
8	103-2535	2	Spacer-Guard, Bottom
❷13		2	Cutter Housing ASM
13:1	103-7975	1	Housing-Spindle
13:2	103-2477	2	Bearing-Ball
13:3	103-2534	1	Spacer-Bearing
13:4	32120-8	1	Ring-Snap
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex
21	1-323737	1	Belt-Blade, Drive
22	103-1330	2	Guard-Bearing, Top

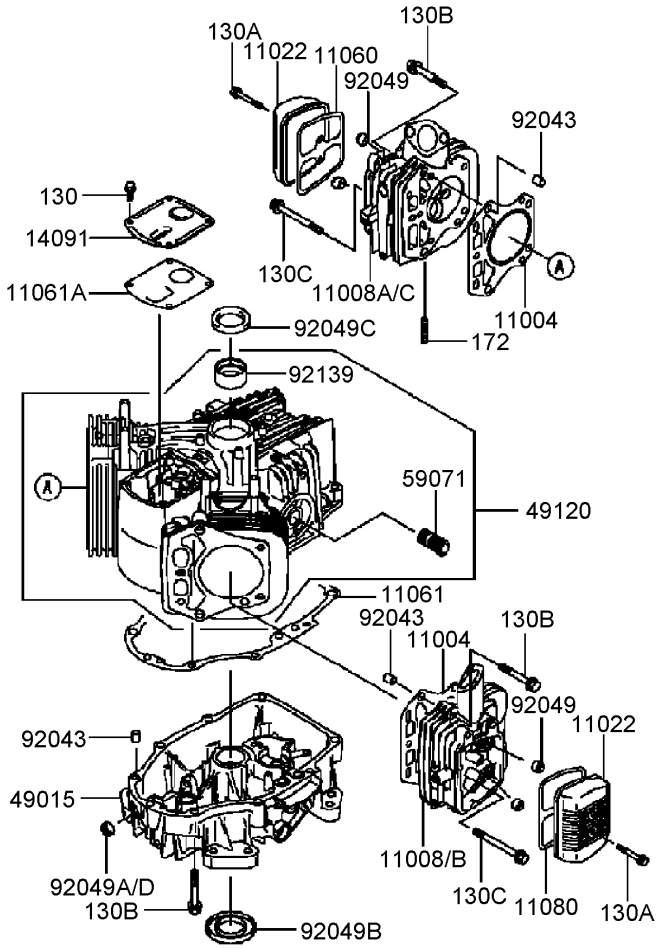

Cylinder and Crankcase Assembly
Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description
❹11004	11004-7008	2	Gasket-Head
❹11008	11008-7011	1	Head-Comp-Cylinder, No.2
❹11008A	11008-7017	1	Head-Comp-Cylinder, No.1
❹11008B	11008-7021	1	Head-Comp-Cylinder, No. 2
❹11008C	11008-7022	1	Head-Comp-Cylinder, No. 1
❹11022	11022-7003	2	Case-Rocker
❹11060	11060-7001	2	Gasket-Case, Rocker
❹11061	11061-7007	1	Gasket-Cover, Crankcase
❹11061A	11061-7008	1	Gasket-Breather
❹14091	14091-7007	1	Cover
❹49015	49015-7032	1	Cover-Crankcase
❹49120	49120-7015	1	Crankcase-Comp
❹59071	59071-2079	1	Joint
❹92043	92043-7001	6	Pin
❹92049	92049-7001	4	Seal-Oil, Rvc2 (6x11x10.2)
❹92049A	92049-7005	1	Seal-Oil,so 8x14x5 HS
❹92049B	92049-7015	1	Seal-Oil, Sd (35x62x8 L Hs)
❹92049C	92049-7016	1	Seal-Oil, Sd (35x48x8 R Hs)
❹92049D	92049-7019	1	Seal-Oil, So (8x14x5 Hs)
❹92139	92139-7002	1	Bushing
❹130	130B0612	4	Bolt-Flanged
❹130A	130B0640	4	Bolt-Flanged
❹130B	130T0850	17	Bolt-Flanged
❹130C	130T0875	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❹172	172G0818	4	Bolt-Stud

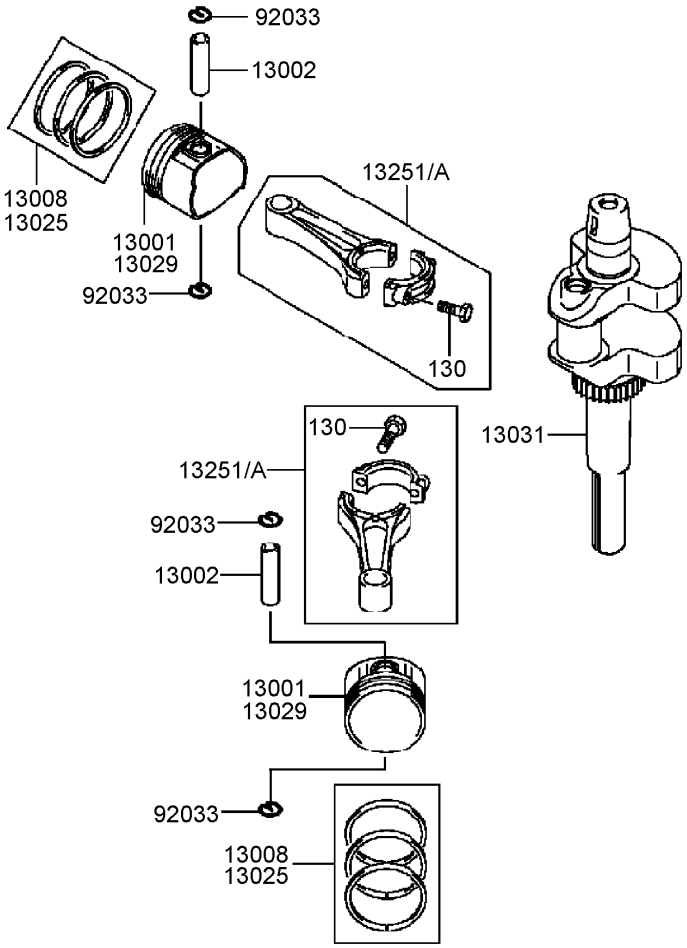


Piston and Crankshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹13001	13001-7009	2	Piston-Engine
❹13002	13002-7001	2	Pin-Piston
❹13008	13008-7001	2	Ring Set-Piston
❹13025	13025-7003	1	Ring Set-Piston (L,0.50)
❹13029	13029-7005	1	Piston-Engine (L,0.50)
❹13031	13031-7033	1	Crankshaft-Comp
❹13251	13251-7007	2	Connecting Rod ASM
❹13251A	13251-7008	2	Connecting Rod ASM (U/s=0.50)
❹92033	92033-7005	4	Ring-Snap
❹130	130G0630	4	Bolt-Flanged

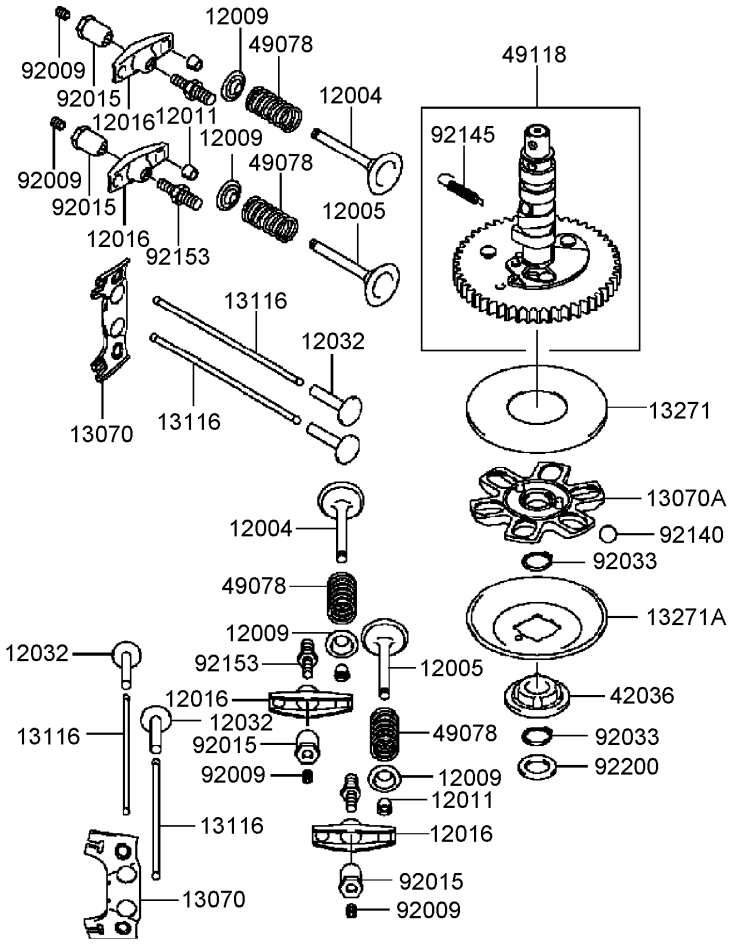


Valve and Camshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹12004	12004-7003	2	Valve-Intake
❹12005	12005-7003	2	Valve-Exhaust
❹12009	12009-7001	4	Retainer-Spring, Valve
❹12011	12011-2056	8	Collet
❹12016	12016-7001	4	Arm-Rocker
❹12032	12032-7001	4	Tappet
❹13070	13070-7001	2	Guide
❹13070A	13070-7004	1	Guide
❹13116	13116-2057	4	Rod-Push
❹13271	13271-7007	1	Plate
❹13271A	13271-7021	1	Plate-Governor
❹42036	42036-7009	1	Sleeve
❹49078	49078-7001	4	Spring-Valve, Engine
❹49118	49118-7009	1	Camshaft-Comp
❹92009	92009-2341	4	Screw
❹92015	92015-2253	4	Nut
❹92033	92033-7001	2	Ring-Snap
❹92140	92140-7002	6	Ball
❹92145	92145-7001	1	Spring
❹92153	92153-7019	4	Bolt
❹92200	92200-7001	1	Washer

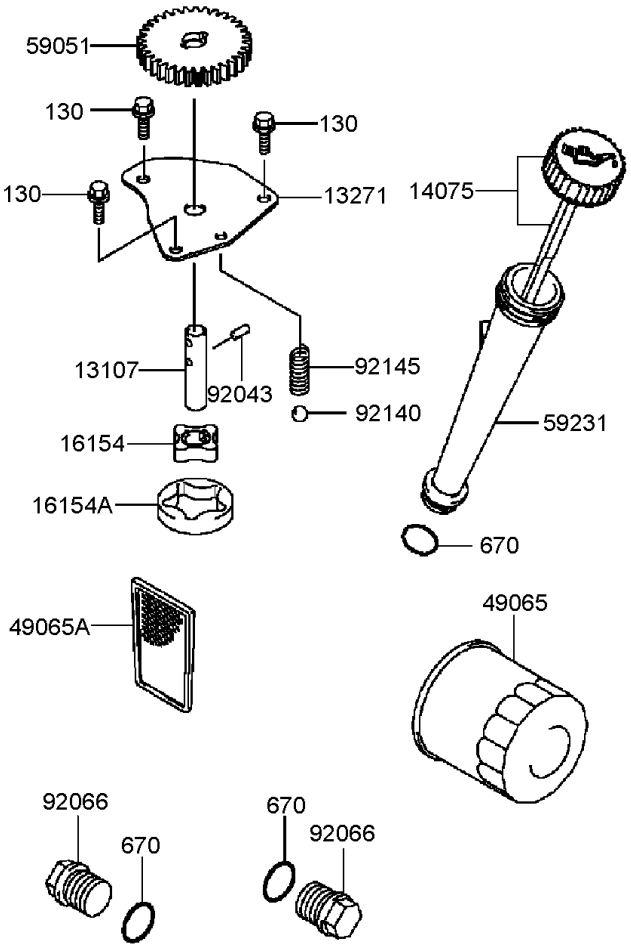


Lubrication-Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹13107	13107-7009	1	Shaft
❹13271	13271-7017	1	Plate
❹14075	14075-7009	1	Cap ASM
❹16154	16154-2053	1	Rotor-Pump (In)
❹16154A	16154-2054	1	Rotor-Pump (Out)
❹49065	49065-2078	1	Filter-Oil
❹49065A	49065-7004	1	Filter-Oil
❹59051	59051-7011	1	Gear-Spur
❹59231	59231-7003	1	Filler
❹92043	92043-7003	2	Pin
❹92066	92066-7003	2	Plug
❹92140	92140-7003	1	Ball
❹92145	92145-7002	1	Spring
❹130	130B0612	3	Bolt-Flanged
❹670	670D2016	3	O-Ring (16mm)

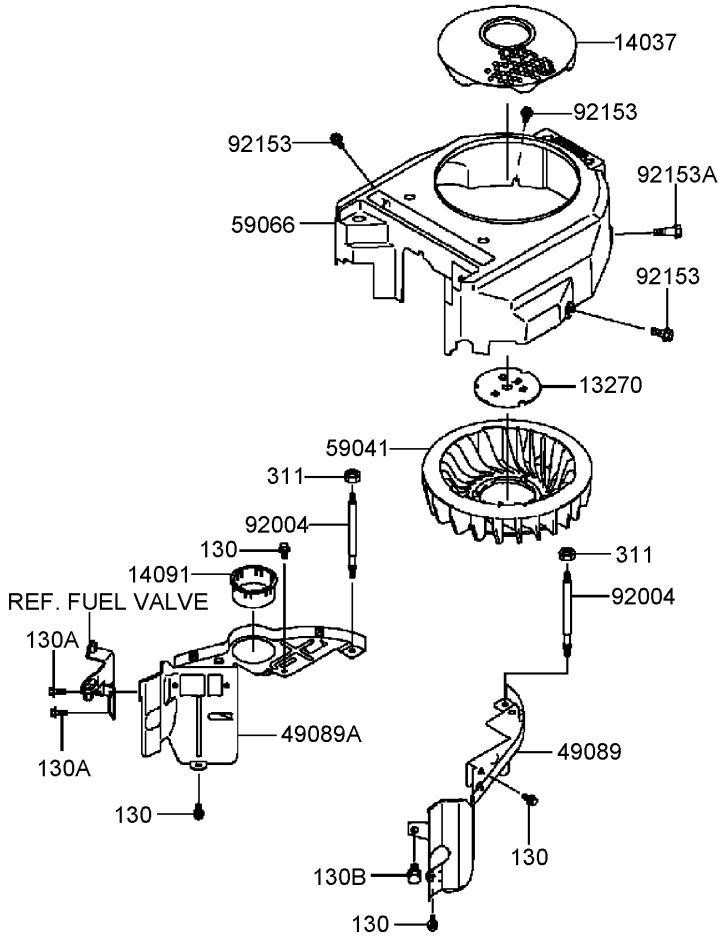


Cooling Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹13270	13270-7007	1	Plate
❹14037	14037-7021-9H	1	Screen
❹14091	14091-7009	1	Cover
❹49089	49089-7044	1	Shroud-Engine
❹49089A	49089-7045	1	Shroud-Engine
❹59041	59041-7010	1	Fan
❹59066	59066-7023	1	Housing-Fan
❹92004	92004-7007	2	Stud
❹92153	92153-7007	3	Bolt
❹92153A	92153-7008	1	Bolt
❹130	130B0612	4	Bolt-Flanged
❹130A	130B0616	2	Bolt-Flanged
❹130B	130B0816	1	Bolt-Flanged
❹311	311F0600	2	Nut-Hex

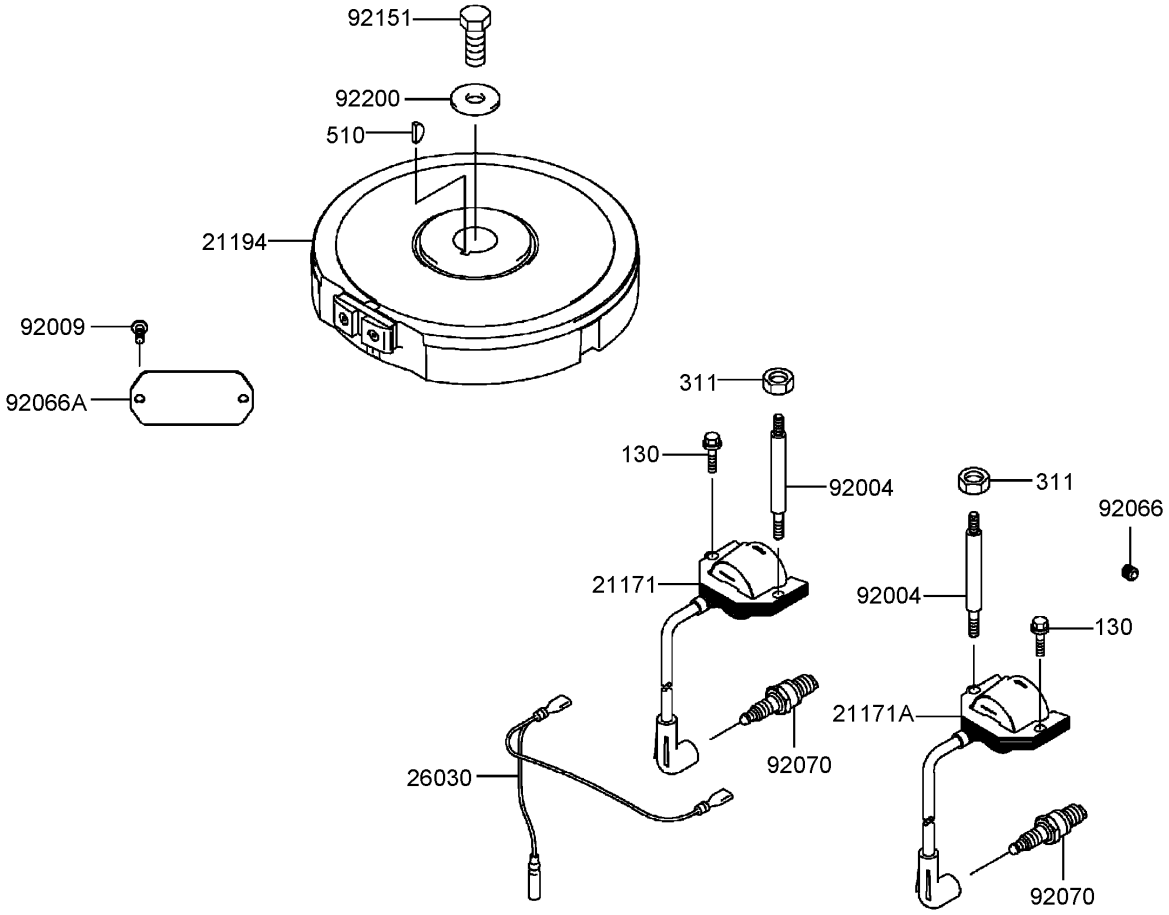


Electric-Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹21171	21171-7013	1	Ignition Coil ASM
❹21171A	21171-7014	1	Ignition Coil ASM
❹21194	21194-7013	1	Flywheel-Comp
❹26030	26030-7001	1	Harness
❹92004	92004-7008	2	Stud
❹92009	92009-2308	2	Screw
❹92066	92066-7002	1	Plug
❹92066A	92066-7005	1	Plug
❹92070	92070-7003	2	Plug-Spark (Rcj8y, Solid)
❹92151	92151-2097	1	Bolt (12x30)
❹92200	92200-7002	1	Washer
❹130	130B0620	2	Bolt-Flanged
❹311	311F0600	2	Nut-Hex
❹510	510A5100	1	Key-Woodruff

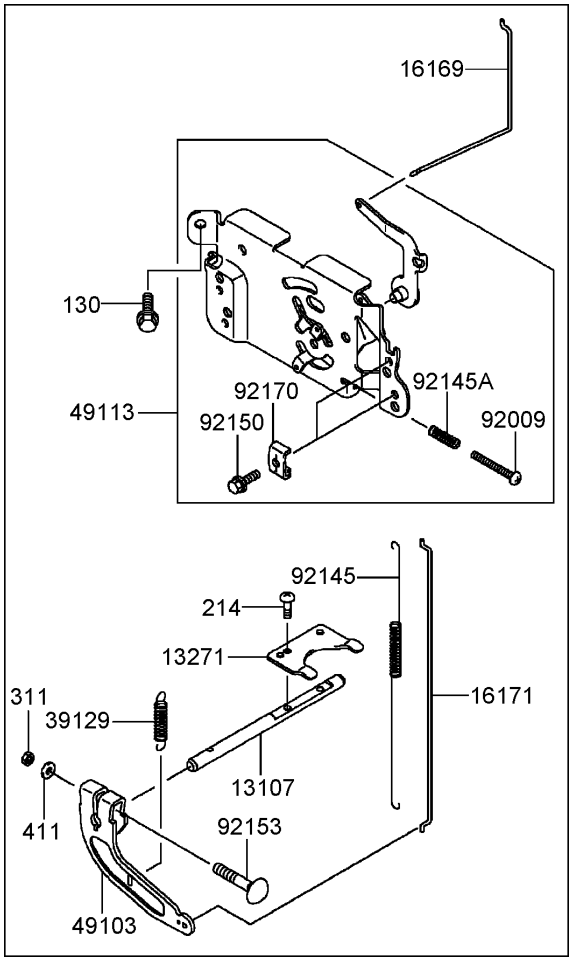

Control-Equipment Assembly
Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description
❹13107	13107-7010	1	Shaft
❹13271	13271-7018	1	Plate
❹16169	16169-7012	1	Link-Choke
❹16171	16171-7007	1	Link
❹39129	39129-7003	1	Spring-Governor
❹49103	49103-7004	1	Arm-Governor
❹49113	49113-7024	1	Panel-Comp-Control
❹92009	92009-7007	1	Screw (4x35)
❹92145	92145-7003	1	Spring
❹92145A	92145-7005	1	Spring
❹92150	92150-2182	2	Bolt (5x18)
❹92153	92153-7005	1	Bolt,6x35
❹92170	92170-7001	2	Clamp
❹130	130B0612	2	Bolt-Flanged
❹214	214B0408	2	Screw-Pan
❹311	311B0600	1	Nut-Hex
❹411	411b0600	1	Washer-Plain

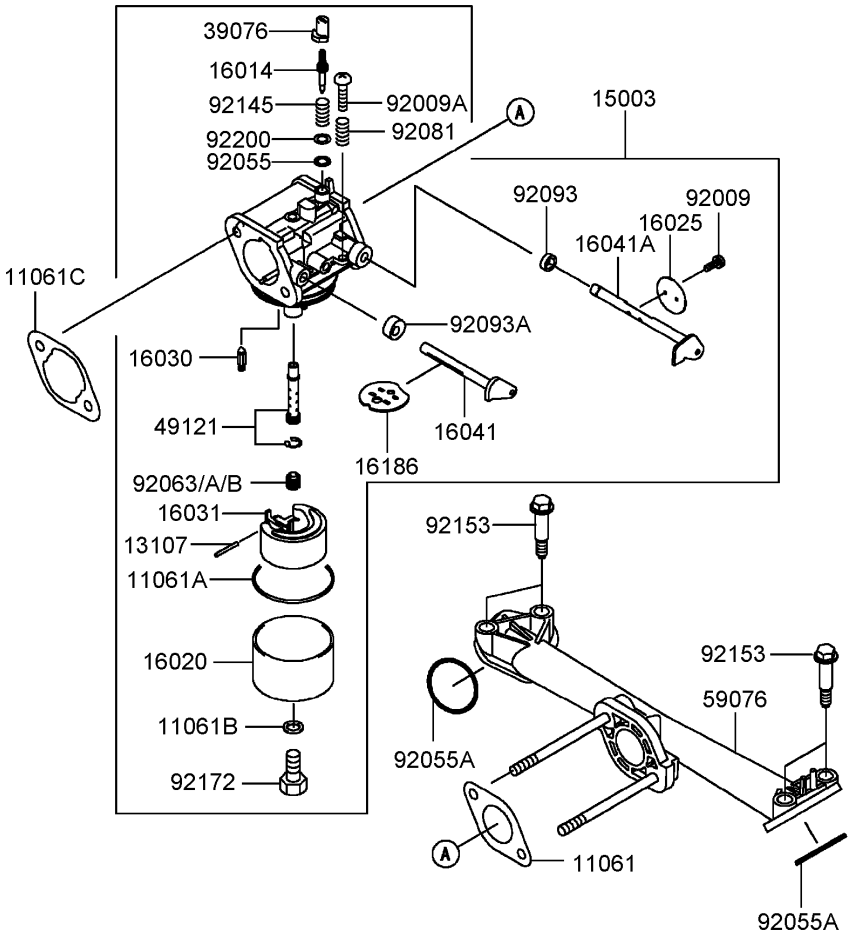

Carburetor Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹11061	11061-7004	1	Gasket-Insulator
❹11061A	11061-7009	1	Gasket-Chamber
❹11061B	11061-7010	1	Gasket-Screw
❹11061C	11061-7018	1	Gasket-Cleaner, Air
❹13107	13107-7018	1	Shaft
❹15003	15003-7054	1	Carburetor ASM
❹16014	16014-7002	1	Screw-Pilot
❹16020	16020-7003	1	Chamber-Float
❹16025	16025-7006	1	Valve-Throttle
❹16030	16030-7003	1	Valve-Float
❹16031	16031-7002	1	Float
❹16041	16041-7016	1	Shaft-Carburetor, Choke
❹16041A	16041-7018	1	Shaft-Carburetor, Throttle
❹16186	16186-7002	1	Choke Valve ASM
❹39076	39076-7001	1	Limiter
❹49121	49121-7002	1	Nozzle-Main
❹59076	59076-7005	1	Manifold-Intake
❹92009	92009-2083	2	Screw
❹92009A	92009-2349	1	Screw
❹92055	92055-2174	1	O-Ring
❹92055A	92055-7007	2	O-Ring (Id=31)
❹92063	92063-7027	1	Jet-Main (No. 78)
❹92063A	92063-7030	1	Jet-Main (No. 75)
❹92063B	92063-7031	1	Jet-Main (No. 72)


Ref	Part No.	Qty.	Description
❹92081	92081-2234	1	Spring
❹92093	92093-2100	1	Seal
❹92093A	92093-7003	1	Seal
❹92145	92145-7015	1	Spring
❹92153	92153-7009	4	Bolt
❹92172	92172-7002	1	Screw
❹92200	92200-7014	1	Washer

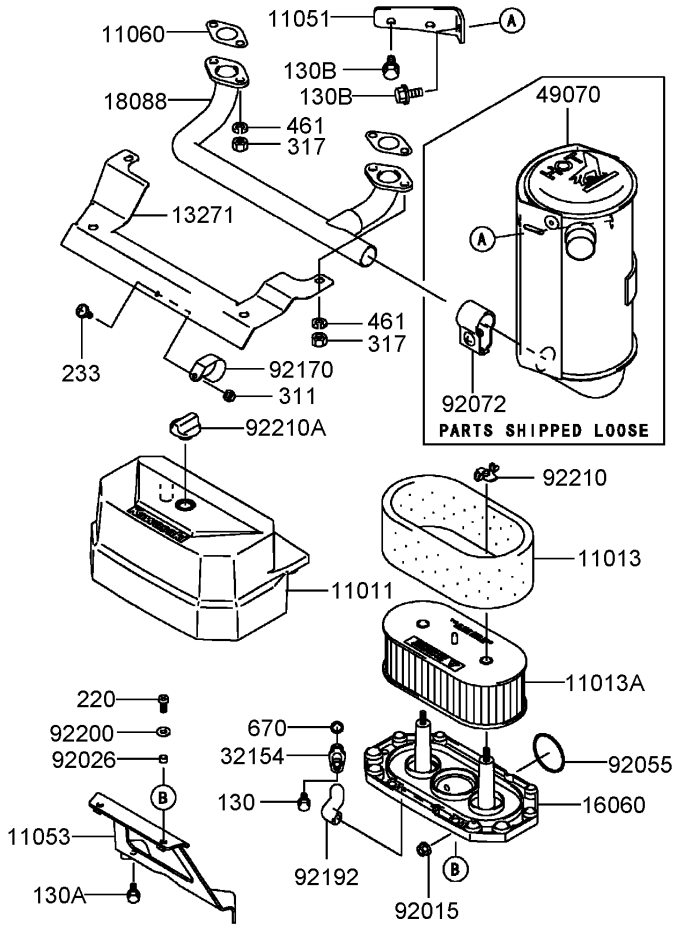

Air-Filter and Muffler Assembly
Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description
❹11011	11011-7035	1	Case-Filter, Air
❹11013	11013-7025	1	Element-Filter, Air
❹11013A	11013-7031	1	Element-Filter, Air
❹11051	11051-7005-9H	1	Bracket
❹11053	11053-7022	1	Bracket
❹11060	11060-7021	2	Gasket-Muffler
❹13271	13271-7022	1	Plate
❹16060	16060-7016	1	Pipe-Intake
❹18088	18088-7001	1	Pipe-Exhaust
❹32154	32154-7006	1	Pipe
❹49070	49070-7015	1	Muffler-Comp
❹92015	92015-1193	2	Nut
❹92026	92026-7001	2	Spacer (6.2x7.9x5)
❹92055	92055-7015	1	O-Ring
❹92072	92072-7008	1	Band
❹92170	92170-7002	1	Clamp
❹92192	92192-7010	1	Tube
❹92200	92200-2070	2	Washer
❹92210	92210-7004	2	Nut
❹92210A	92210-7019	1	Nut
❹130	130B0610	1	Bolt-Flanged
❹130A	130B0612	2	Bolt-Flanged
❹130B	130B0816	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❹220	220B0614	2	Screw-Pan (Cross)
❹233	233B0416	1	Screw-Pan
❹311	311B0400	1	Nut-Hex
❹317	317R0800	4	Nut-Hex, Small
❹461	461F0800	4	Washer-Spring
❹670	670B2010	1	O-Ring (10mm)

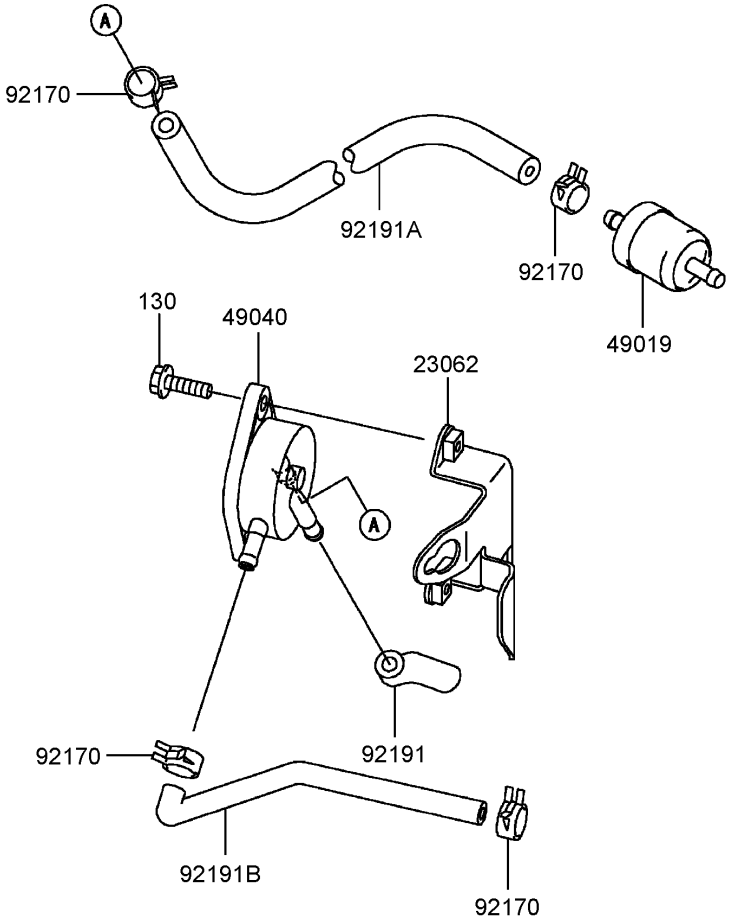

Fuel Tank/Fuel Valve Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❹23062	23062-7004-9H	1	Bracket-Comp
❹49019	49019-7001	1	Filter-Fuel
❹49040	49040-7001	1	Pump-Fuel
❹92170	92170-2088	4	Clamp
❹92191	92191-7002	1	Tube
❹92191A	92191-7003	1	Tube (6.35x12.7x160)
❹92191B	92191-7004	1	Tube
❹130	130B0620	2	Bolt-Flanged

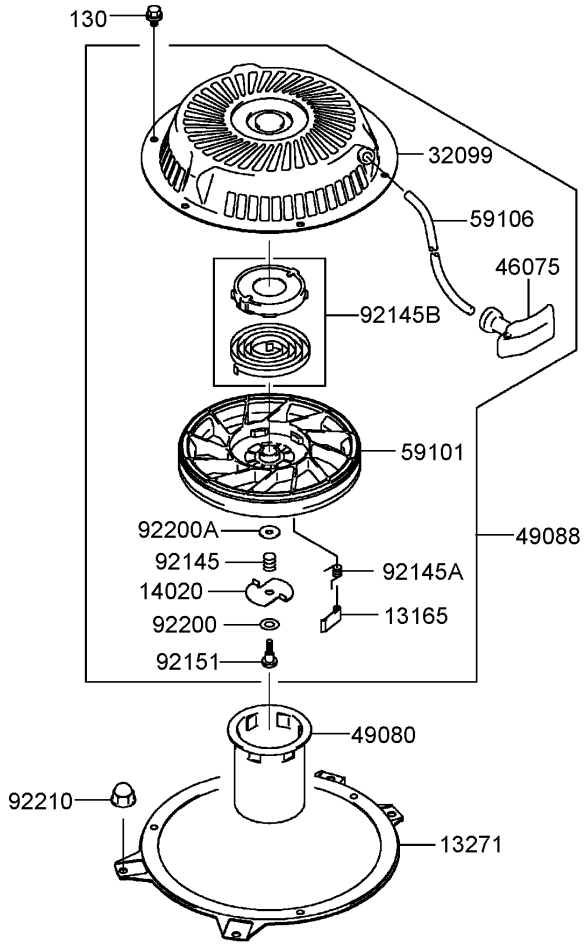

Starter Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹13165	13165-7001	2	Pawl-Starter, Recoil
❹13271	13271-7003-9H	1	Plate
❹14020	14020-7001	1	Retainer
❹32099	32099-7002	1	Case-Recoil, Starter
❹46075	46075-7001	1	Grip-Recoil, Starter
❹49080	49080-7001	1	Pulley-Starting
❹49088	49088-7013	1	Starter-Recoil
❹59101	59101-7001	1	Reel-Recoil
❹59106	59106-7001	1	Rope
❹92145	92145-7006	1	Spring
❹92145A	92145-7007	2	Spring
❹92145B	92145-7008	1	Spring
❹92151	92151-7008	1	Bolt
❹92200	92200-7004	1	Washer
❹92200A	92200-7005	1	Washer
❹92210	92210-0003	4	Nut
❹130	130B0608	3	Bolt-Flanged

56033



56070



56080



56080A



Decal Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description
❹56033	56033-7001	1	Label-Manual
❹56070	56070-7001	1	Label-Warning
❹56080	56080-2077	1	Label-Brand
❹56080A	56080-7025	1	Label-Brand

Attachments and Accessories

For 30519 - Mid-Size ProLine Pistol Grip Gear, 13 HP with 36in Side Discharge Mower

Product Name	Model/Part
Atomic Blade with Decal ASM	104-8590
Weight Kit	107-4100
Sulky	30109
36in Recycler Kit	30142
Soft Bag (3 bushel)	30198

NOTES

NOTES

NOTES


TORO®