Form Number 3352-815

44in Side Discharge Mower
2005 and After XL 440H Lawn Tractor

Model No. 79110 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Spindle and Blade Assembly	 3	Pulley and Brake Assembly	 5
Chute and Recycler Assembly	 4	Decal and Belt Assembly	 6


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . Blade Brake Clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
ROPS. . . . . roll over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head

Footnotes


❶ Not serviced separately

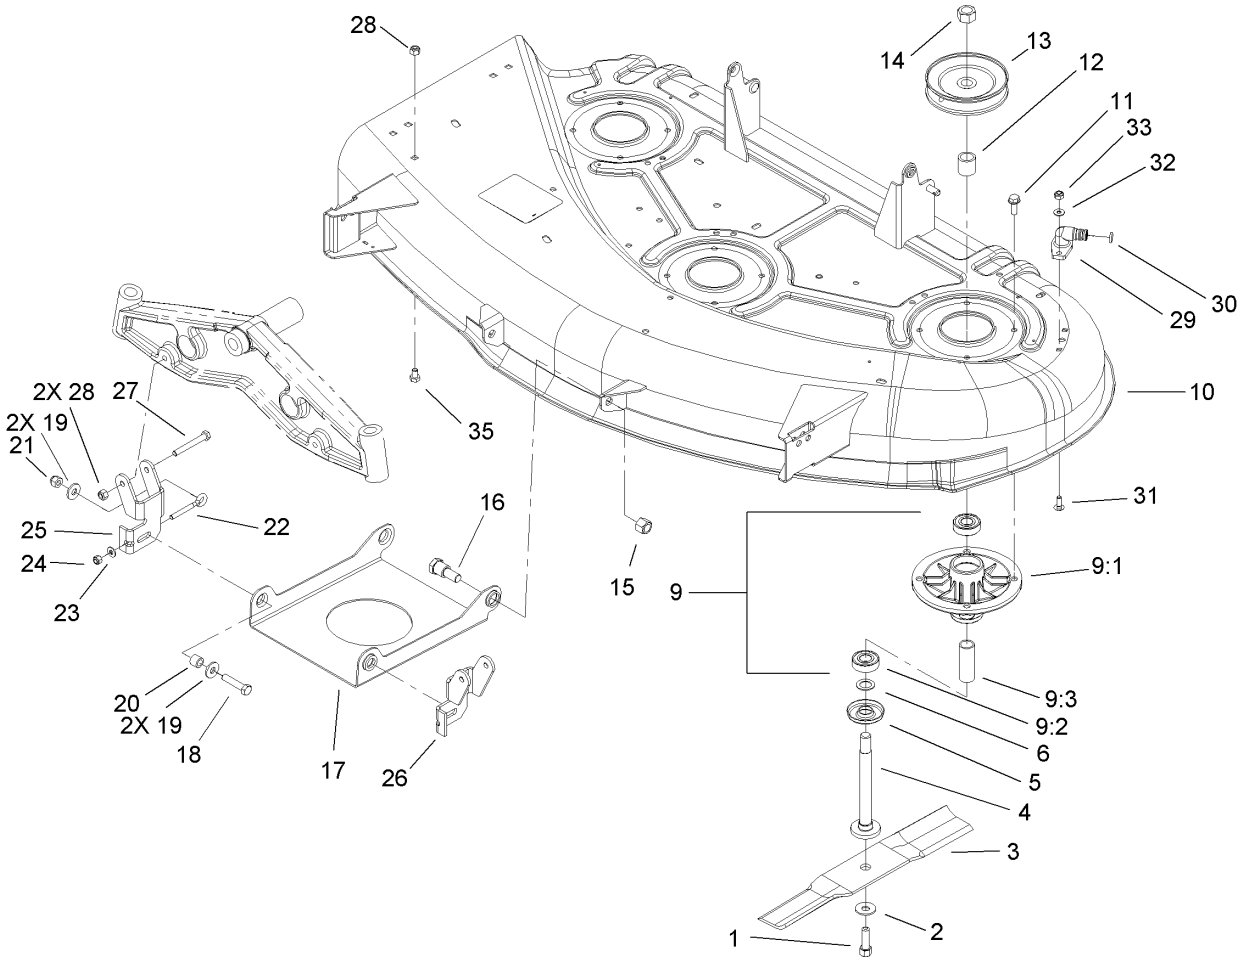

Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	26-0671	3	Screw-Blade
2	3290-465	3	Washer-Belleville
3	54-0010-03	3	Blade
4	80-4342	3	Shaft-Spindle
5	80-4360	3	Shield-Bearing
6	80-4380	3	Spacer
❶9		3	Spindle ASM
9:1	88-4510	1	Housing-Spindle
9:2	100-1048	2	Bearing-Ball
9:3	62-3661	1	Spacer-Bearing
10	95-7851	1	Deck ASM
11	32144-41	12	Screw-Taptite
12	88-5360	3	Spacer
13	88-5330	3	Pully-Deck
14	3219-6	3	Nut-Hex
15	3296-23	2	Nut-Lock, NI
16	94-5823	2	Bolt-Shoulder
17	93-3881-03	1	Pan-Front Deck, Suspension
18	323-9	2	Screw-HH
19	80-6990	4	Washer-Hardened
20	93-9847	2	Spacer
21	3296-39	2	Nut-Lock, NI
22	61-9980	2	Screw-Adjusting
23	3256-22	2	Washer-Flat


Ref	Part No.	Qty.	Description
24	3296-42	2	Nut-Lock, NI
25	93-9849-03	1	Bracket-RH
26	93-9848-03	1	Bracket-LH
27	322-12	2	Screw-HH
28	3296-29	3	Nut-Lock, NI
29	95-2747	1	Fitting-Washout
30	46-6290	1	O-Ring
31	3229-1	2	Screw-CARR
32	3256-1	2	Washer-Flat
33	3296-16	2	Nut-Lock, NI
35	322-1	1	Screw-HH

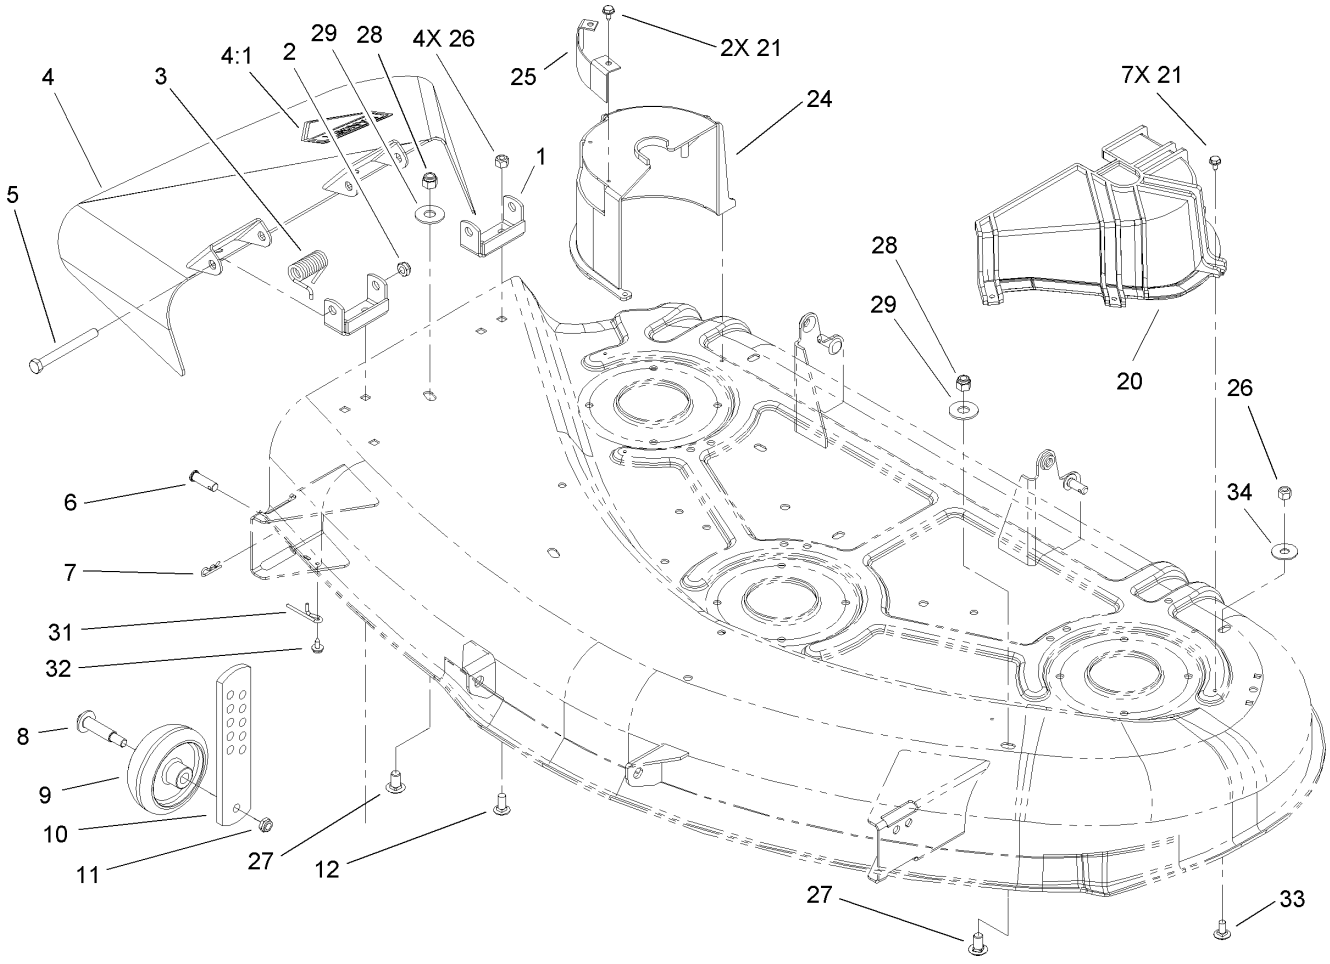

Chute and Recycler Assembly


Ref	Part No.	Qty.	Description
1	29-5590-03	2	Bracket-Pivot
2	3296-5	2	Nut-Lock
3	40-6230	2	Spring
4	93-9745	1	Deflector ASM
4:1	93-7010	1	Decal-Danger
5	3211-15	2	Screw-HH
6	283-2	2	Pin-Clevis
7	3290-307	2	Pin-Hair
8	56-6591	2	Bolt-Wheel
9	701756	2	Wheel-Gage
10	93-8010	2	Plate-Gage, Wheel
11	3296-59	2	Nut-Lock, NI
12	3230-23	4	Screw-CARR
20	93-3866	1	Cover-Belt, LH
21	32104-76	9	Screw
24	93-3865	1	Cover-Belt, RH
25	93-3876-03	1	Insert-Belt Cover
26	3296-29	5	Nut-Lock, NI
27	3231-21	2	Screw-CARR
28	3296-39	2	Nut-Lock, NI
29	3256-5	2	Washer-Flat
31	94-1981	2	Spring-Gage, Wheel
32	32104-76	2	Screw
33	3230-18	1	Screw-CARR

Ref	Part No.	Qty.	Description
34	52-2860	1	Washer

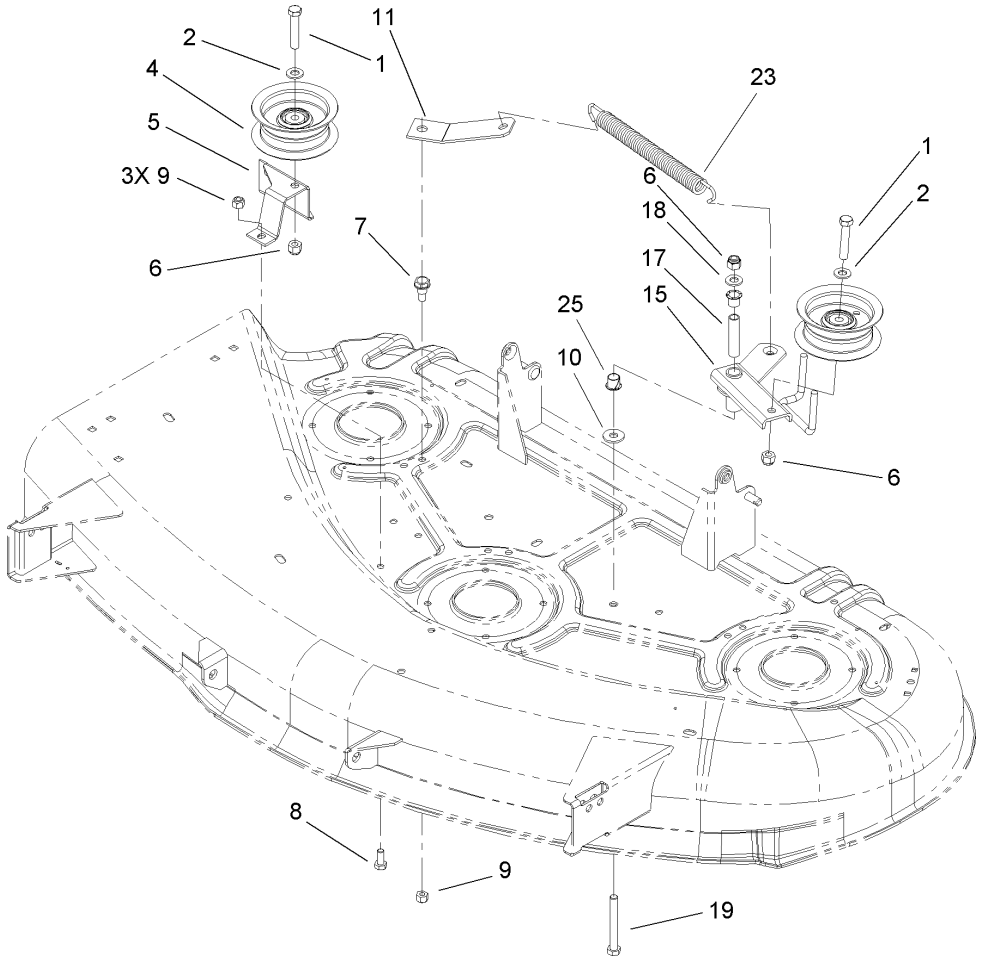

Pulley and Brake Assembly

Ref	Part No.	Qty.	Description
1	323-10	2	Screw-HH
2	3256-24	2	Washer-Flat
4	88-5630	2	Pulley-Idler, Flat
5	93-3860-03	1	Bracket-Idler
6	3296-39	3	Nut-Lock, NI
7	92-6986	1	Bolt-Shoulder
8	322-3	3	Screw-HH
9	3296-29	4	Nut-Lock, NI
10	80-6990	1	Washer-Hardened
11	107-4923	1	Bracket-Spring
15	94-1986-03	1	Bellcrank
17	94-1988	1	Spacer-Pivot
18	3256-24	1	Washer-Flat
19	323-14	1	Screw-HH
23	93-3850	1	Spring-Engage, Deck
25	256-257	2	Bushing-Nyliner

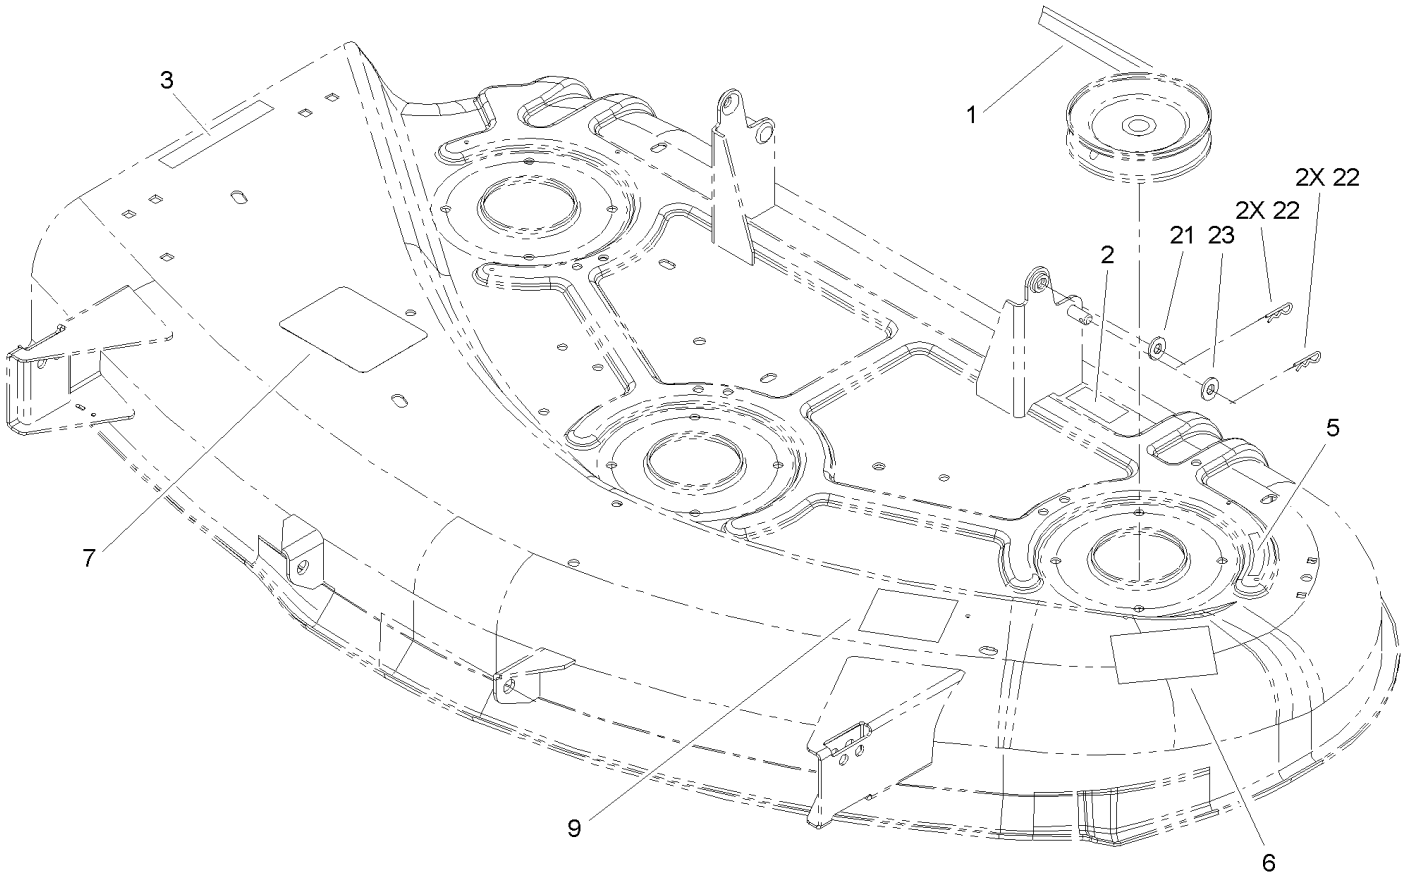

Decal and Belt Assembly

Ref	Part No.	Qty.	Description
1	105-2473	1	V-Belt, 44In Deck
2	93-6674	2	Decal-Warning
3	93-7009	1	Decal-Danger
5	93-6677	2	Decal-Shield, Danger
6	93-7010	2	Decal-Danger
7	93-3777	1	Decal-Install, Belt
9	93-7282	1	Decal-Adjustment, Wheel
21	3256-24	2	Washer-Flat
22	3290-307	4	Pin-Hair
23	80-6990	2	Washer-Hardened

NOTES


TORO®