Form Number 3352-832

Road Light Kit
2005 and After Groundsmaster® 580-D

Model No. 30613

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Road Light Assembly	3	Right Hand Tail Light Assembly No. 108-8007	5
Road Light and Canopy Assembly	4	Left Hand Tail Light Assembly No. 108-8008	6


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
EXT	external	NPTF	national pipe thread fine
FH	flat head	PPH	phillips pan head
GA	gauge	PPHTF	phillips pan head thread forming
HF	hex flange	PRH	phillips round head
HH	hex head	PTH	phillips truss head
HHF	hex head flange	PTO	power take off
HHFTF	hex head flange thread forming	RH	right hand
HJ	hex jam	ROPS	roll over protection system
HLH	hex lag head	SFH	slotted fillister head
HOC	height-of-cut	SHH	slotted hex head
HS	hex	SHWH	slotted hex washer head
HSBH	hex socket button head	SPH	slotted pan head
HSFH	hex socket flat head	SQH	square head
HSH	hex socket head	SRH	slotted round head
HWH	hex washer head	STD	standard
HWHTF	hex washer head thread forming	TAP	self tapping

Footnotes


❶ Not illustrated

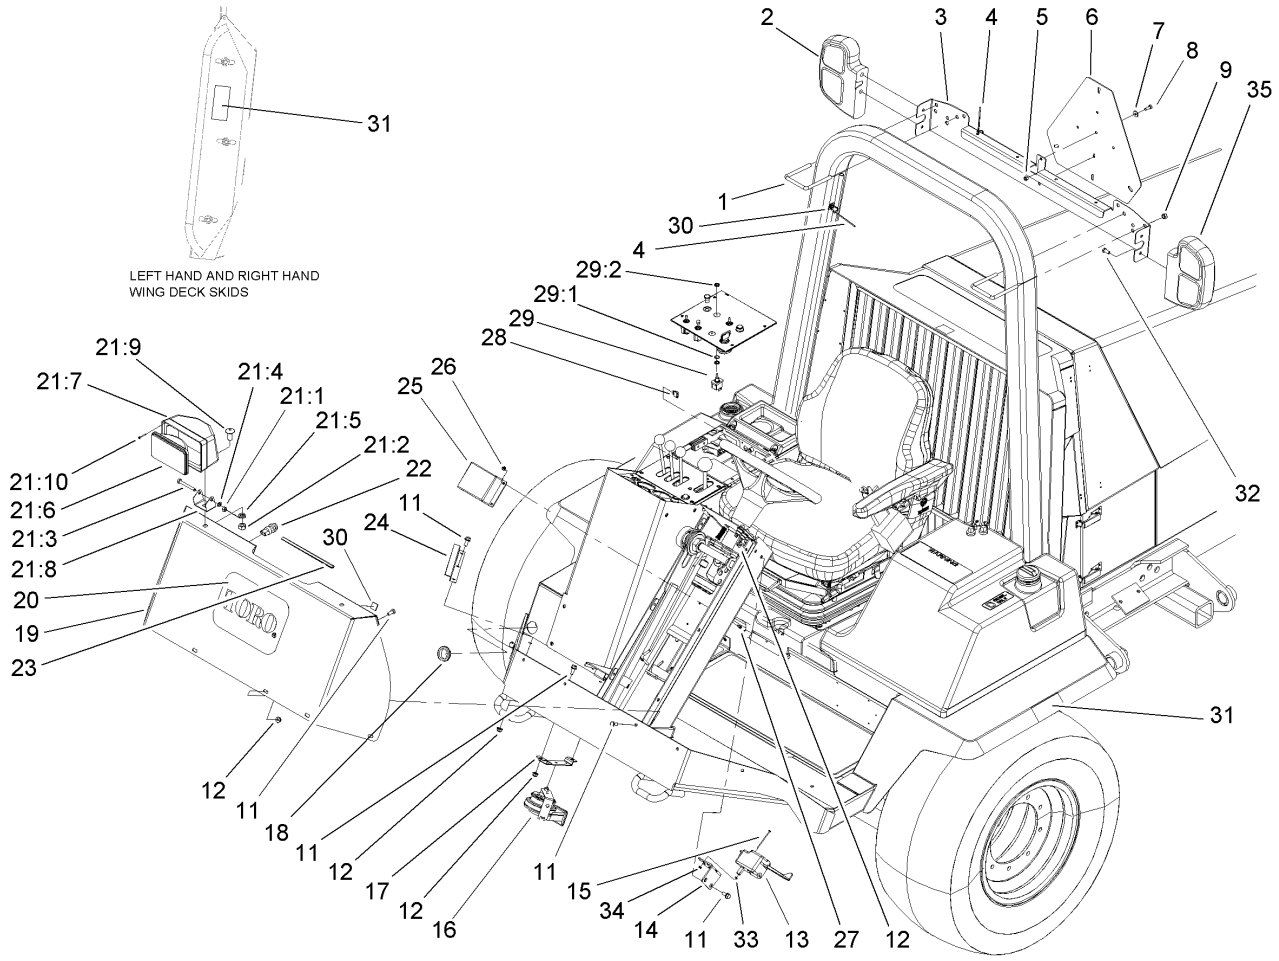

Road Light Assembly

Ref	Part No.	Qty.	Description
1	100-7067	2	U-Bolt
2	108-8007	1	Flasher-Tail Light, RH
3	108-1514-03	1	Bracket-Light
4	100-2894	14	Tie-Cable
5	3296-42	2	Nut-Lock, NI
6	92-7760	1	Emblem-Vehicle, Slow Moving
7	3256-78	2	Washer-Flat
8	321-4	2	Screw-HH
9	104-8301	4	Nut-Flange, NI
11	3234-5	14	Screw-HHF
12	104-8300	14	Nut-Flange, NI
13	108-8005	1	Controller-Signal
14	108-8063-01	1	Bracket-Turn Signal
15	108-8064	2	Screw-PPH
16	116749	1	Horn
17	18-2820	1	Mount-Horn
18	240-3	1	Grommet-Rubber
19	108-8015-03	1	Shroud-Roadlight
20	67-7310	1	Decal
21	92-6565	2	Headlight ASM
21:1	3217-6	1	Nut-Hex
21:2	3217-9	1	Nut-Hex
21:3	322-12	1	Screw-HH
21:4	3253-4	1	Washer-Lock


Ref	Part No.	Qty.	Description
21:5	3253-7	1	Washer-Lock
21:6	92-6595	1	Lamp-Sealed Beam
21:7	92-6596	1	Bezel
21:8	92-6597	1	Bracket-Mounting
21:9	92-6598	1	Bolt-Carriage, Drilled
21:10	92-6599	4	Screw-Phillips
22	18-2830	1	Button-Horn
23	66-8110	1	Trim-Hood
24	74-2400-01	1	Cover-Wire
25	105-4515	1	Flasher-Rate, Dual
26	32149-7	4	Nut-Keps
27	32105-8	4	Screw-SHH
28	109355	1	Fuse-15 Amp
29	93-5269	1	Switch-Toggle
29:1	3254-20	1	Washer-Lock, Int
29:2	218-498	2	Nut-Lock
30	95-0690	8	Pad-Mounting
31	108-8014	4	Tape-Reflective
32	33114-020	4	Screw-HH
33	3217-29	2	Nut-Hex
34	3296-9	2	Nut-Lock
35	108-8008	1	Flasher-Tail Light, LH
❶99	218-579	4	Terminal-Spade, Male

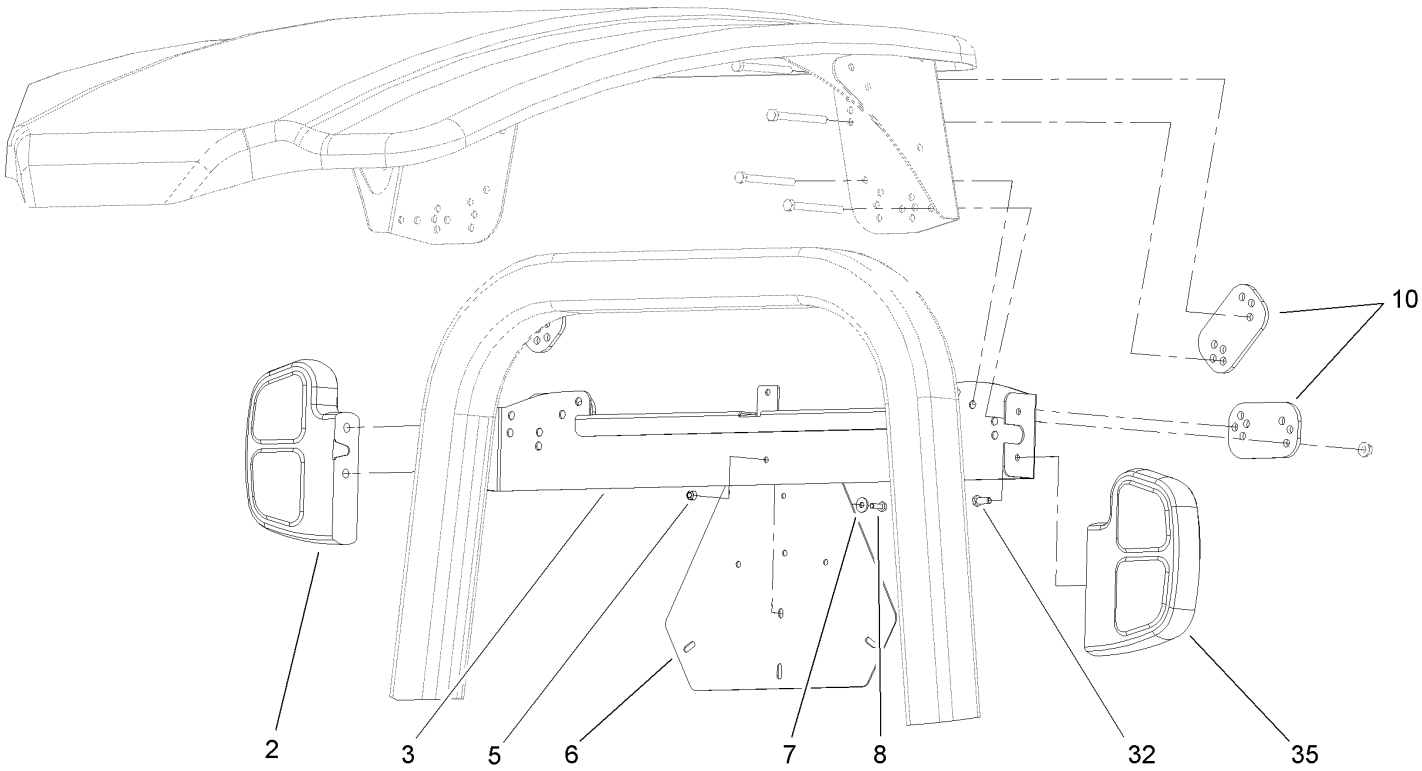

INSTALLATION TO ROPS WITH
UNIVERSAL JODALE PERRY CANOPY


Road Light and Canopy Assembly

Ref	Part No.	Qty.	Description
2	108-8007	1	Flasher-Tail Light, RH
3	108-1514-03	1	Bracket-Light
5	3296-42	2	Nut-Lock, NI
6	92-7760	1	Emblem-Vehicle, Slow Moving
7	3256-78	2	Washer-Flat
8	321-4	2	Screw-HH
10	108-8013-03	4	Plate-Backup
32	33114-020	4	Screw-HH
35	108-8008	1	Flasher-Tail Light, LH

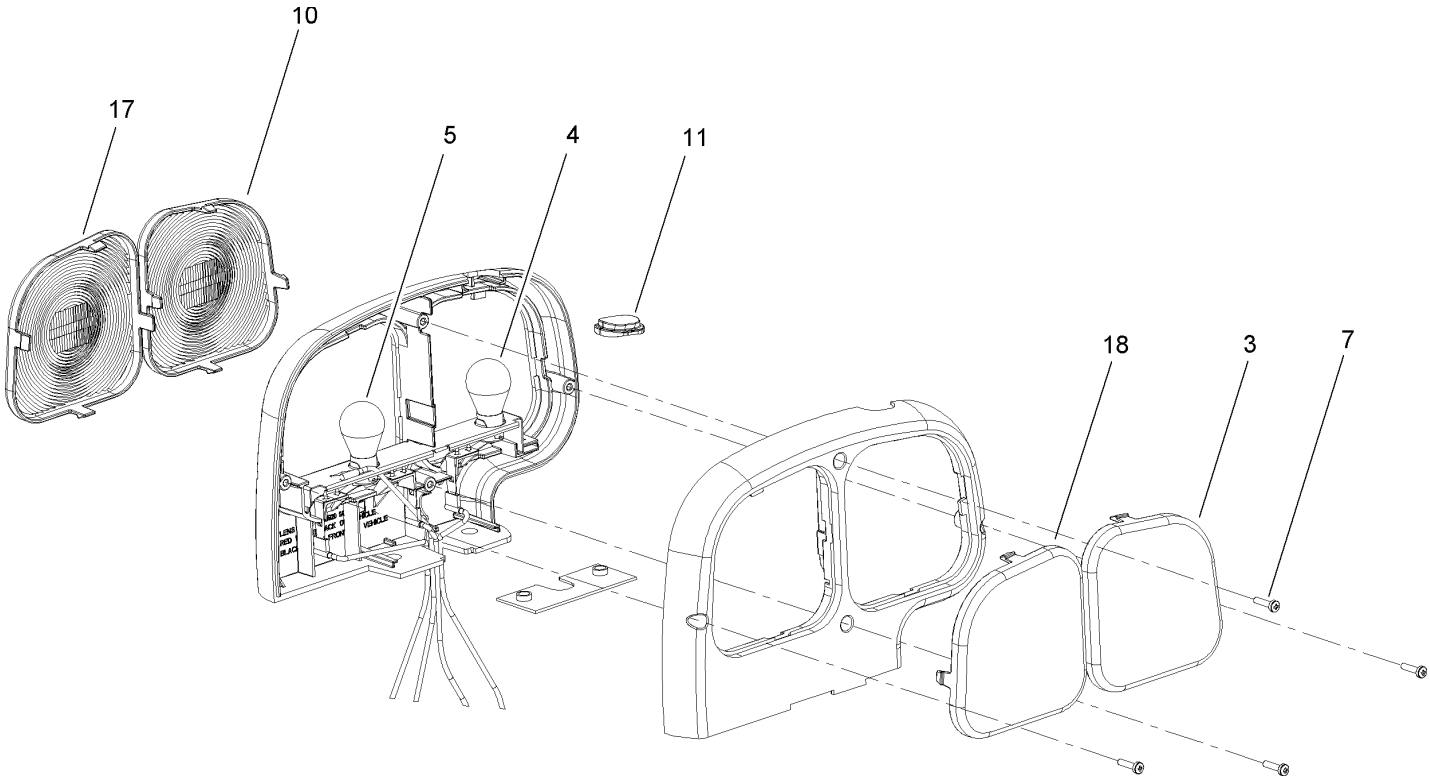

Right Hand Tail Light Assembly No. 108-8007

Ref	Part No.	Qty.	Description
3	108-8056	1	Lens-Amber, Base
4	7228	1	Bulb
5	108-8054	1	Bulb
7	108-8053	4	Screw
10	108-8057	1	Lens-Amber, Cover
11	108-8055	1	Lens-Amber, Window
17	108-8060	1	Lens-Red, Base
18	108-8059	1	Lens-Black, Cover

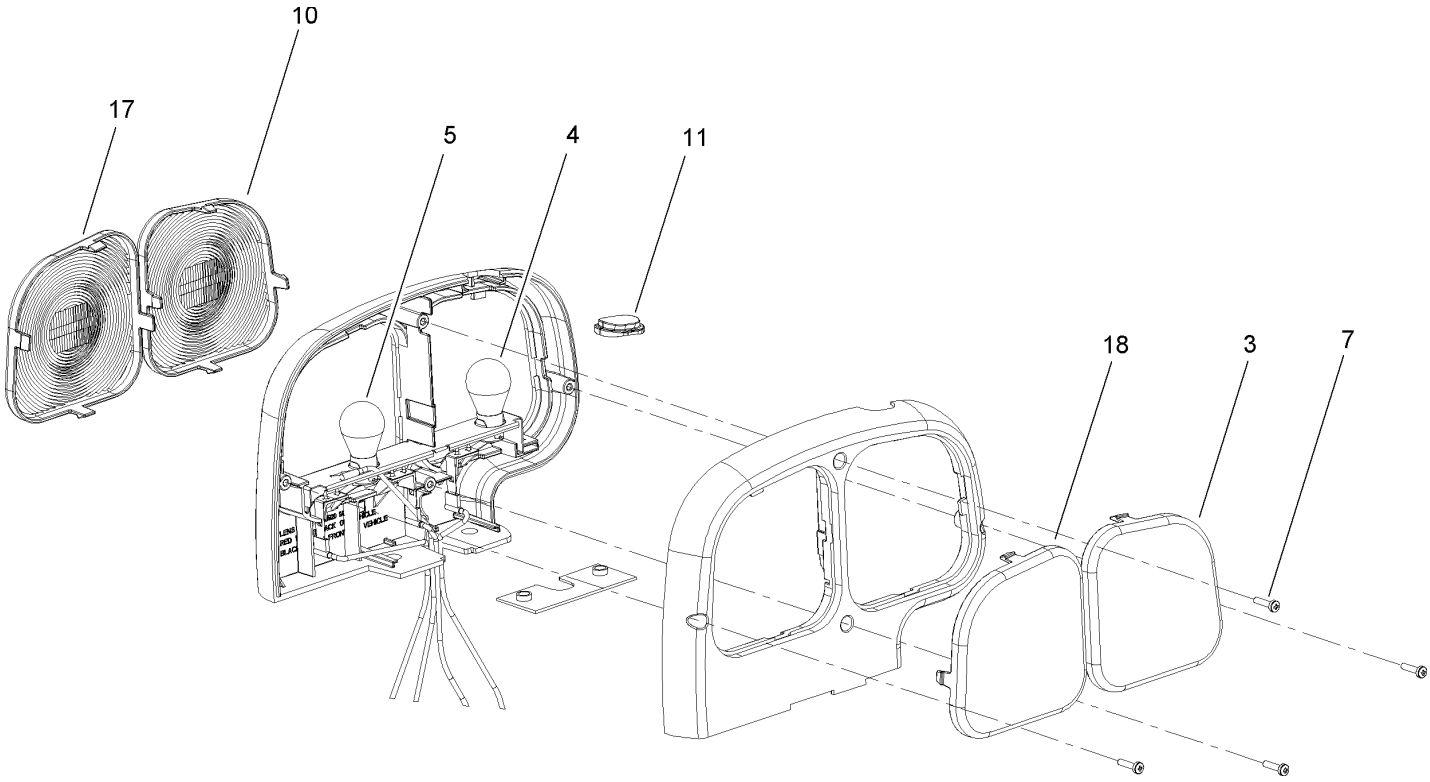

Left Hand Tail Light Assembly No. 108-8008

Ref	Part No.	Qty.	Description
3	108-8056	1	Lens-Amber, Base
4	7228	1	Bulb
5	108-8054	1	Bulb
7	108-8053	4	Screw
10	108-8057	1	Lens-Amber, Cover
11	108-8055	1	Lens-Amber, Window
17	108-8061	1	Lens-Red, Cover
18	108-8058	1	Lens-Black, Base

NOTES


TORO®