Form Number 3352-867

Super Recycler®
Lawn Mower

Model No. 20058 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Housing Assembly	3
Housing Assembly No.108-4750	4
Height-of-Cut Assembly	5
Transmission Assembly	6
Gear Case Assembly No. 108-8140	7
Engine Assembly	8
Handle Assembly	9
Upper Handle Assembly	10
Electric Start Assembly	11
Grass Bag Assembly	12
Cylinder Assembly Briggs and Stratton 125K07-0188-E1	13
Crankshaft Assembly Briggs and Stratton 125K07-0188-E1	14
Crankcase Assembly Briggs and Stratton 125K07-0188-E1	15
Carburetor Assembly Briggs and Stratton 125K07-0188-E1	16
Air Cleaner Assembly Briggs and Stratton 125K07-0188-E1	17
Governor Assembly Briggs and Stratton 125K07-0188-E1	18
Muffler and Fuel Tank Assembly Briggs and Stratton 125K07-0188-E1	19
Blower Housing Assembly Briggs and Stratton 125K07-0188-E1	20
Rewind Starter Assembly Briggs and Stratton 125K07-0188-E1	21
Electric Starter Assembly Briggs and Stratton 125K07-0188-E1	22
Engine Gasket Set Assembly Briggs and Stratton 125K07-0188-E1	23
Attachments and Accessories List	24

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . Blade Brake Clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
ROPS. . . . . roll over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head

Footnotes


❶ Obtain parts from your local Briggs & Stratton dealer

❷ For use only on Models with BBC

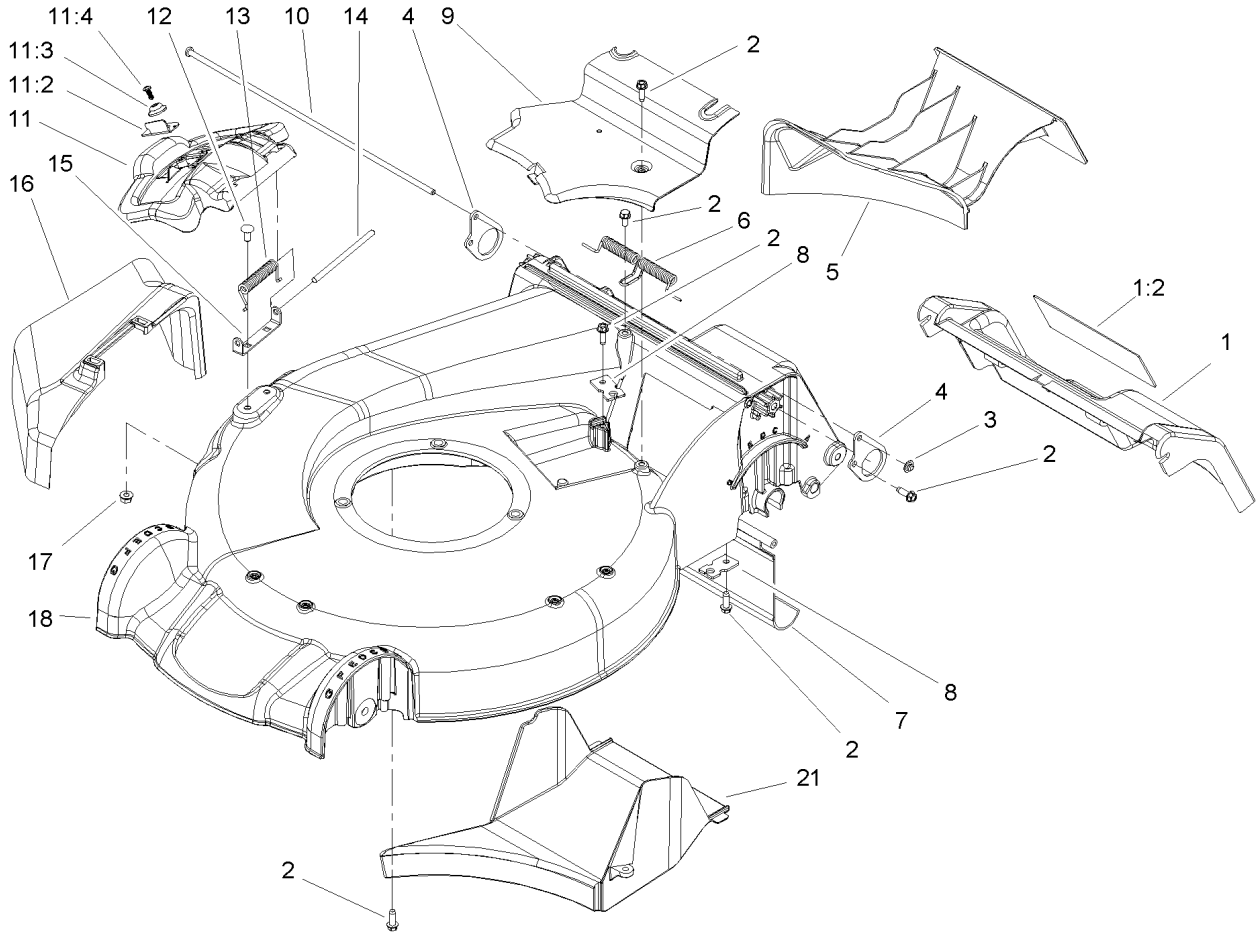


Housing Assembly

Ref	Part No.	Qty.	Description
1	105-1323	1	Rear Door ASM
1:2	105-1295	1	Decal-Warning
2	49-2040	8	Screw-TAP
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	2	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-4750	1	Housing ASM
21	107-7495	1	Tunnel-Discharge

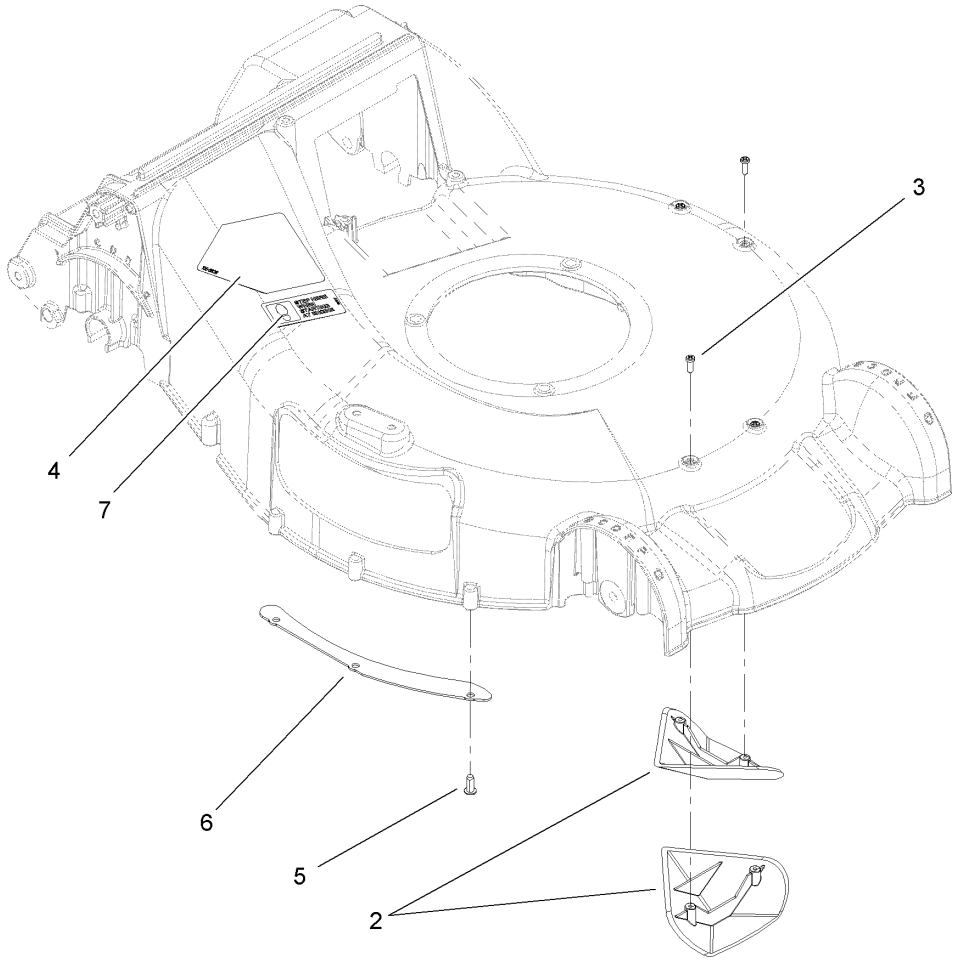


Housing Assembly No.108-4750

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	105-6838	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
❷7	108-8117	1	Decal-Foot Placement

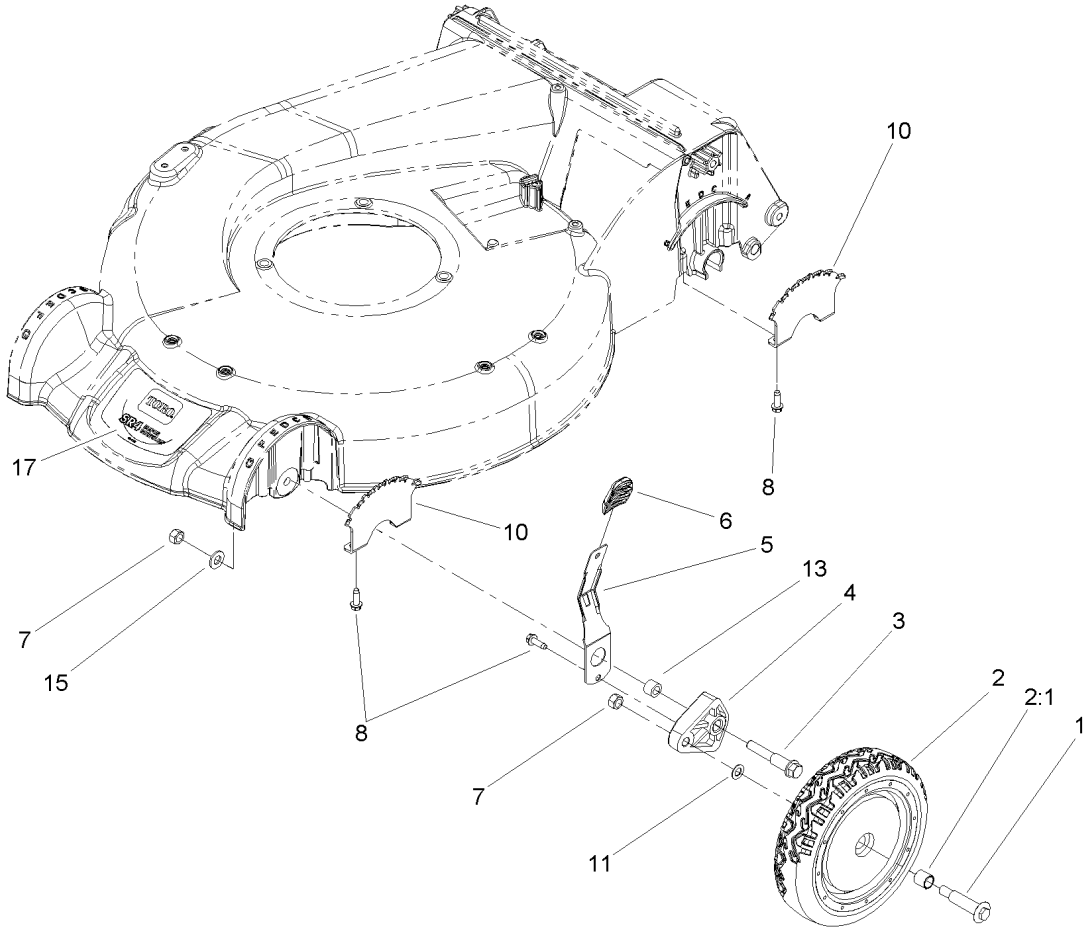

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3708	2	Wheel ASM
2:1	27-6250	2	Bushing
3	107-7498	2	Screw-Shoulder, HOC
4	107-7492	2	Arm-Pivot
5	107-7491	2	Spring Arm
6	105-3042	2	Knob-Lever, HOC
7	603773	4	Nut
8	49-2040	10	Screw-TAP
10	107-7478	4	Plate-HOC
11	40-1940	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	108-4840	1	Decal

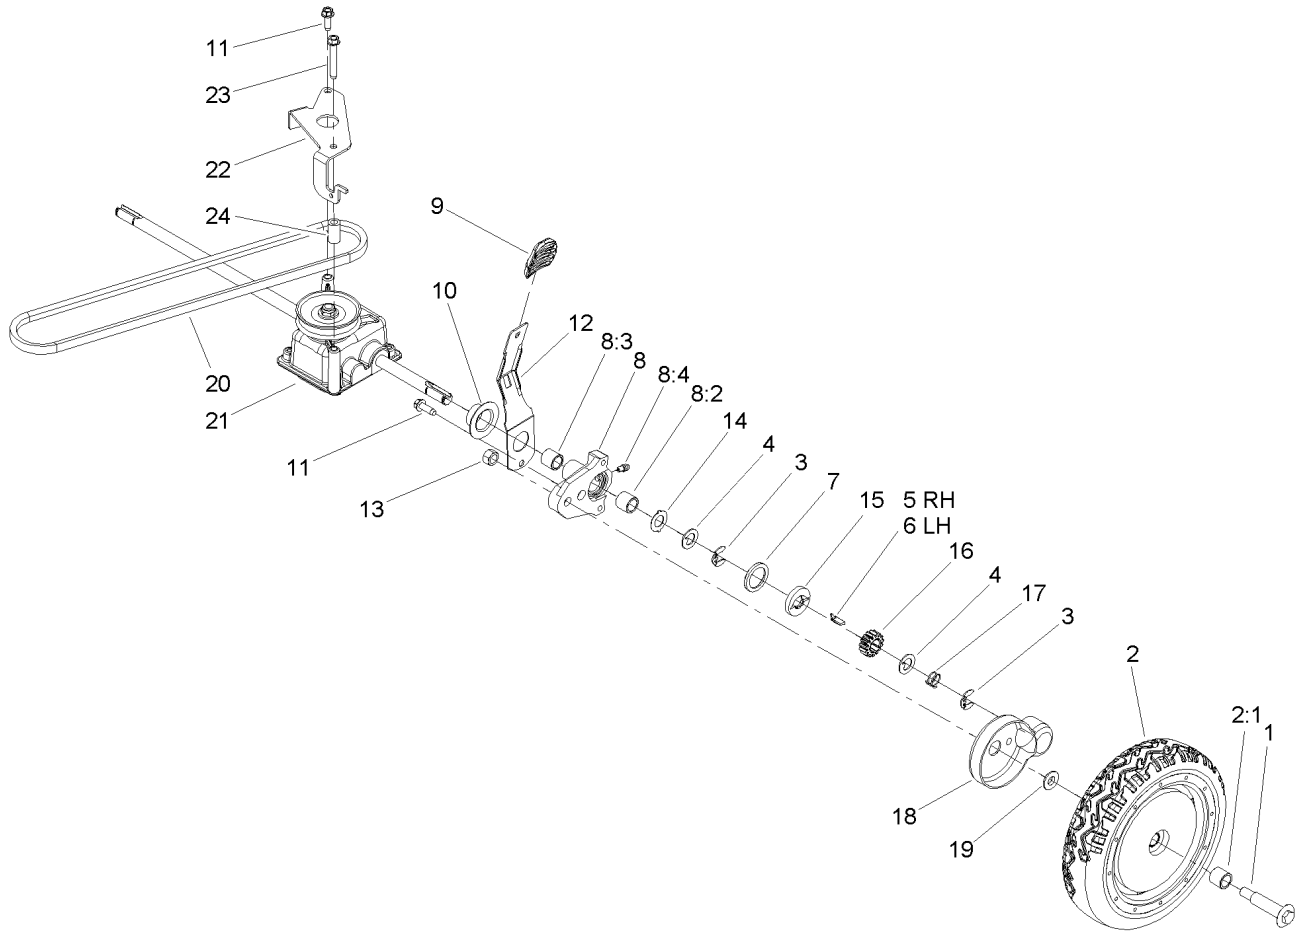

Transmission Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-TAP
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel
20	99-1597	1	V-Belt

Ref	Part No.	Qty.	Description
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWH, TAP
24	614673	1	Bushing-Plate, Actuator

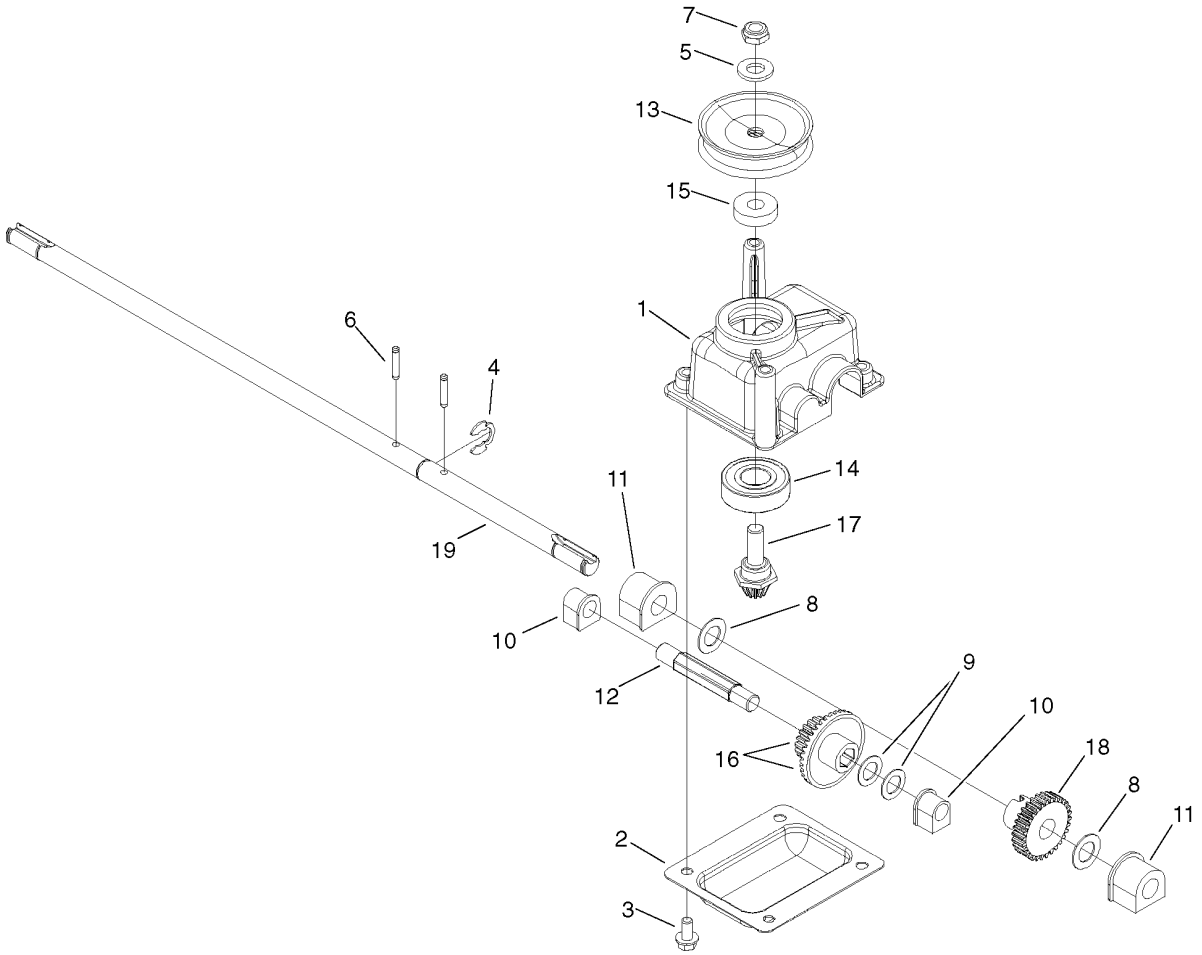

Gear Case Assembly No. 108-8140


Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19T Spur, 37T Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30T
19	108-8141	1	Shaft-Output

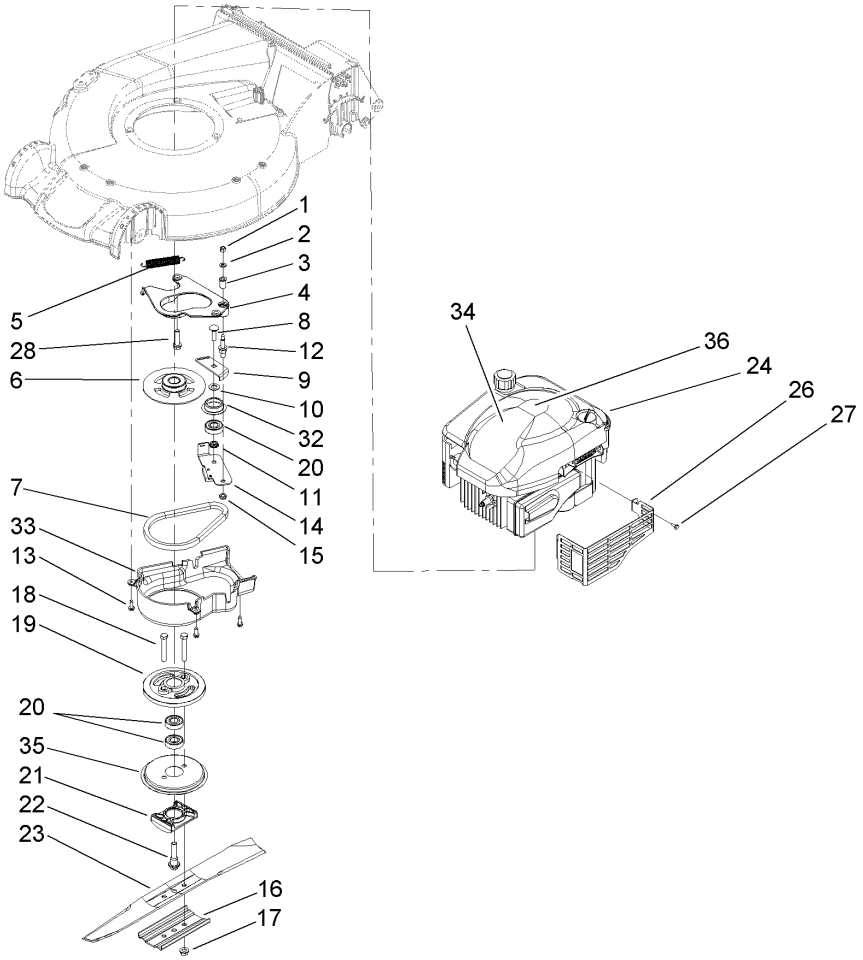

Engine Assembly

Ref	Part No.	Qty.	Description
1	3296-42	1	Nut-Lock, NI
2	3256-16	1	Washer-Flat
3	107-0797	1	Bushing
4	107-0761	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	107-0753	1	Pulley
7	107-0796	1	Belt
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	49-2040	3	Screw-TAP
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	108-3765	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	107-7486	1	Bolt-Crank
23	108-3762-03	1	Blade-Recycling


Ref	Part No.	Qty.	Description
❶24		1	Engine-Briggs And Stratton, 125K02-0188-E1
26	104-7577-03	1	Shield-Muffler
27	32144-1	3	Screw-Taptite
28	32144-102	3	Screw-HWH
32	108-3790	1	Retainer-Belt
33	107-7488	1	Cover
34	108-8133	1	Decal
35	108-3787	1	Disc
36	108-8131	1	Decal-Recoil

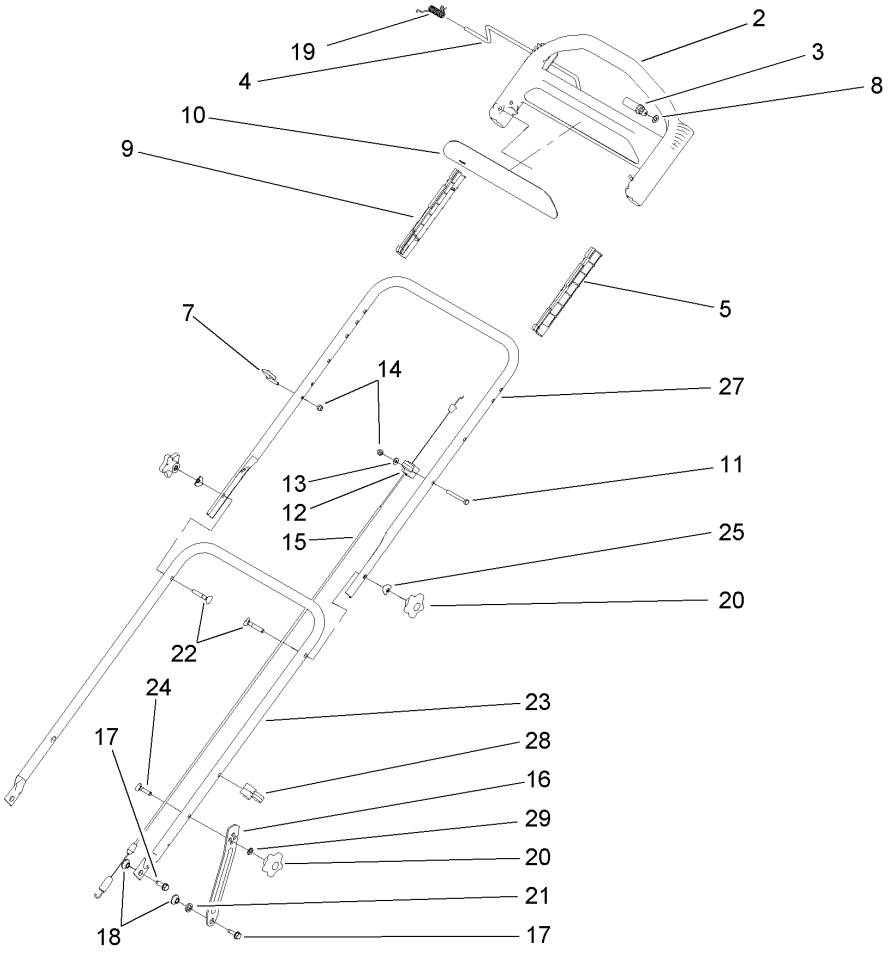

Handle Assembly


Ref	Part No.	Qty.	Description
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	321-50	1	Screw-HH
12	92-7729	1	Anchor-Cable, Upper
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	107-3790	1	Cable-Traction
16	107-3780-03	2	Support-Handle
17	701243	4	Screw-HWH, TAP
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	106-4161	4	Knob-Handle
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-4095	2	Screw-Handle
25	107-3844	2	Washer
27	107-3781-05	1	Handle-Upper

Ref	Part No.	Qty.	Description
28	106-6805	1	Guide-Cable
29	3255-8	2	Washer-Lock

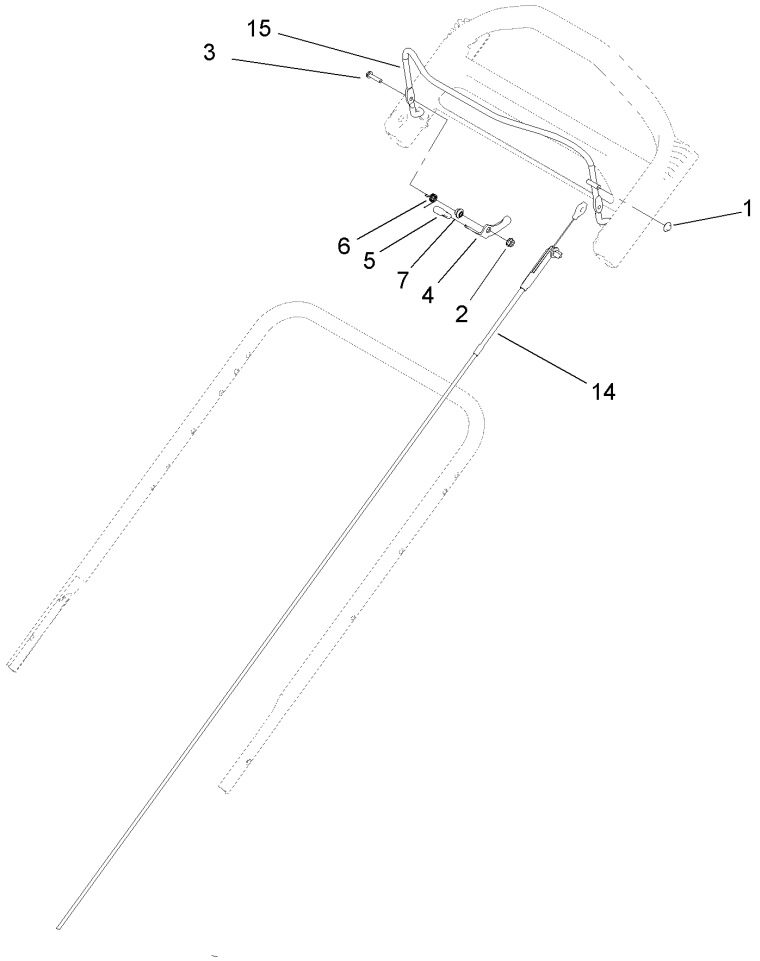


Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	3290-337	1	Nut-Speed
2	32128-17	1	Nut-Lock, Flange
3	106-9169	1	Screw
4	106-6802	1	Lever
5	106-6803	1	Knob
6	107-7462	1	Spring-Torsion
7	107-7463	1	Spacer
14	108-3760	1	Cable ASM
15	108-3788-03	1	Bail-Brake

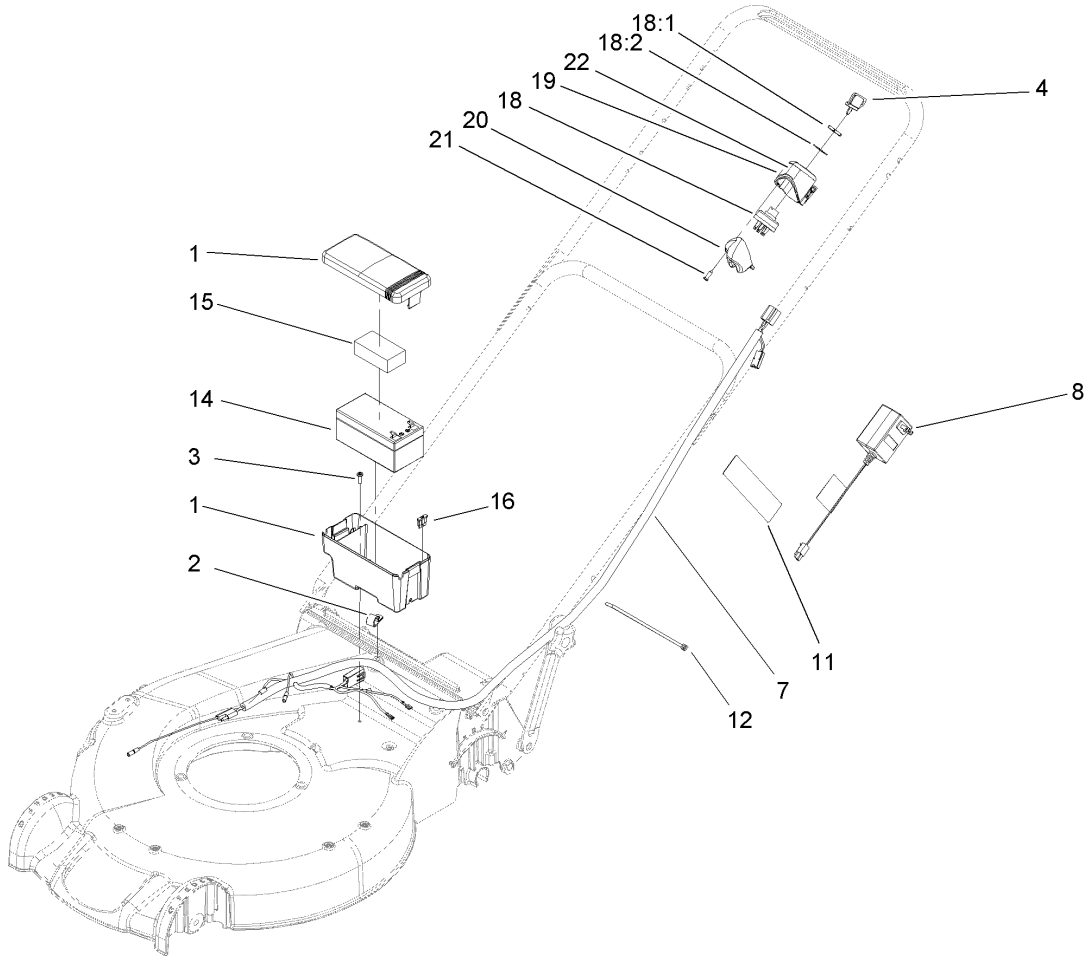


Electric Start Assembly

Ref	Part No.	Qty.	Description
1	108-4844	1	Battery Box ASM
2	2412-73	1	Clamp-R
3	32144-32	1	Screw
4	63-8360	1	Key-Ignition
7	108-4839	1	Harness-Wire
8	104-7401	1	Charger-12 Volt
11	104-7953	1	Decal-Harness
12	614249	2	Strap-Tie
14	106-8397	1	Battery-12 Volt
15	107-3774	1	Foam-Battery, Top
16	99-6124	2	Fuse-40 Amp
18	23-0660	1	Switch-Starter
18:1	218-461	1	Nut-HH
18:2	3254-5	1	Washer-Tooth
19	108-3795	1	Housing-Key Switch
20	108-3796	1	Cover-Switch
21	32144-111	2	Screw-PPH
22	108-9751	1	Decal-Ingnition Switch

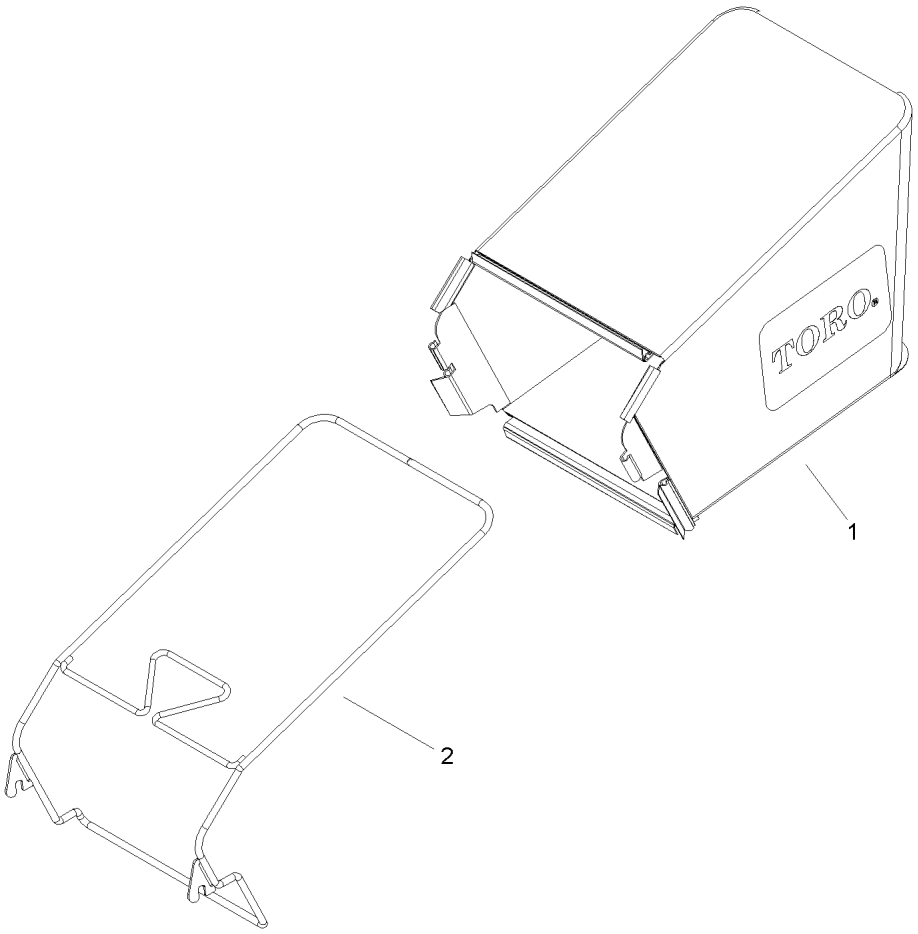

Grass Bag Assembly


Ref	Part No.	Qty.	Description
1	107-3789	1	Grass Bag ASM
2	107-3785-03	1	Bag Frame ASM

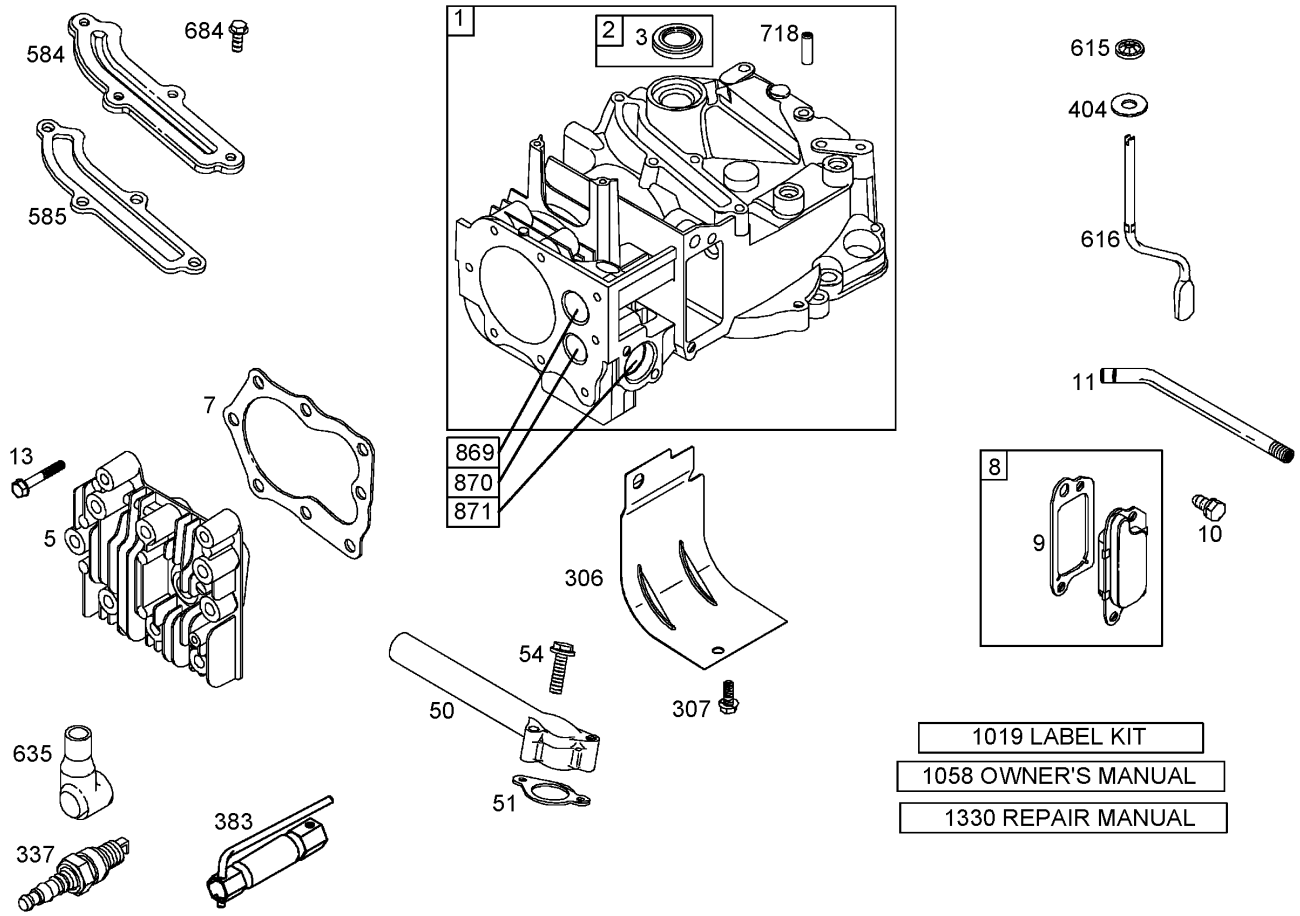



Cylinder Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶1	697322	1	Cylinder ASM
❶2	399269	1	Bushing/Seal Kit
❶3	299819	1	Seal–Oil (Magneto Side)
❶5	691160	1	Head–Cylinder
❶7	692249	1	Gasket–Head, Cylinder
❶8	695250	1	Breather ASM
❶9	699472	1	Gasket–Breather
❶10	691125	1	Screw (Breather ASM)
❶11	691781	1	Tube–Breather
❶13	690912	1	Screw (Cylinder Head)
❶50	497465	1	Manifold–Intake
❶51	272199	1	Gasket–Intake
❶54	691650	1	Screw (Intake Manifold)
❶306	690450	1	Shield-Cylinder
❶307	690345	1	Screw (Cylinder Shield)
❶337	802592	1	Plug–Spark
❶383	89838	1	Wrench-Plug, Spark
❶404	690272	1	Washer (Governor Crank)
❶584	697734	1	Cover–Passage, Breather
❶585	691879	1	Gasket–Passage, Breather
❶615	690340	1	Retainer–Shaft, Governor
❶616	698801	1	Crank–Governor
❶635	66538	1	Boot–Plug, Spark
❶684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
❶718	690959	1	Pin-Locating
❶869	691155	1	Seat–Valve (Intake)
❶870	690380	1	Seat–Valve (Exhaust)
❶871	262001	1	Bushing–Guide (Exhaust)
❶871	63709	1	Bushing–Guide (Intake)
❶1019	494256	1	Label Kit
❶1058	275177	1	Manual-Owner's
❶1330	270962	1	Manual-Repair

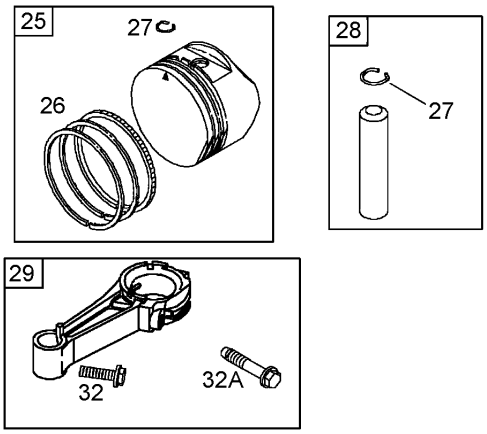


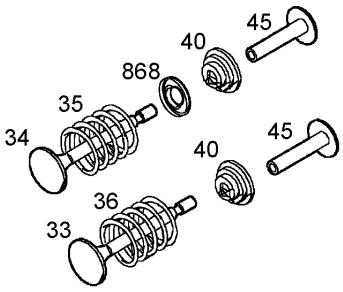

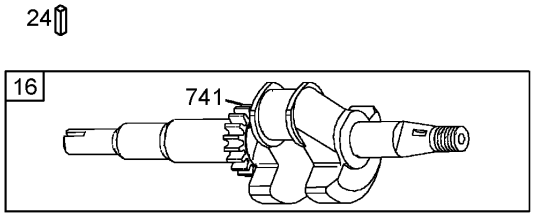


Crankshaft Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶16	791061	1	Crankshaft
❶24	222698	1	Key (Flywheel)
❶25	790359	1	Piston ASM (Standard)
❶25	791326	1	Piston ASM (.020In Oversize)
❶26	790360	1	Ring Set (Standard)
❶26	791324	1	Ring Set (.020In Oversize)
❶27	691866	1	Lock–Pin, Piston
❶28	499423	1	Pin-Piston
❶28	298908	1	Pin-Piston (.005In Undersize)
❶29	499424	1	Rod-Connecting
❶32	691664	1	Screw (Connecting Rod)
❶32A	695759	1	Screw (Connecting Rod)
❶33	262651	1	Valve–Exhaust
❶34	262652	1	Valve–Intake
❶35	691270	1	Spring–Valve (Intake)
❶36	691270	1	Spring–Valve (Exhaust)
❶40	692194	1	Retainer–Valve
❶45	690548	1	Tappet–Valve
❶741	790345	1	Gear–Timing
❶868	697338	1	Seal–Valve

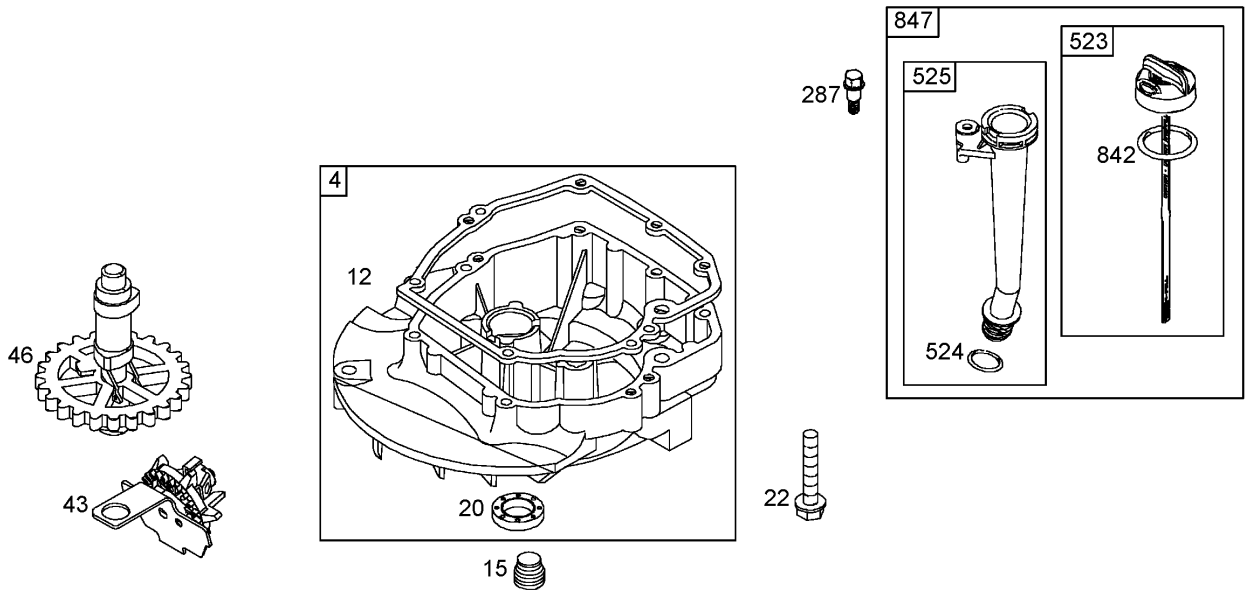


Crankcase Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶4	493279	1	Sump–Engine
❶12	692232	1	Gasket–Crankcase
❶15	691680	1	Plug–Drain, Oil
❶20	399781	1	Seal–Oil
❶22	691092	1	Screw (Engine Sump)
❶43	691997	1	Slinger–Governor/Oil
❶46	691449	1	Camshaft
❶287	690940	1	Screw (Dipstick Tube)
❶523	499621	1	Dipstick
❶524	692296	1	Seal-O Ring
❶525	495265	1	Tube-Dipstick
❶842	691031	1	Seal-O Ring (Dipstick Tube)
❶847	692047	1	Dipstick/Tube ASM

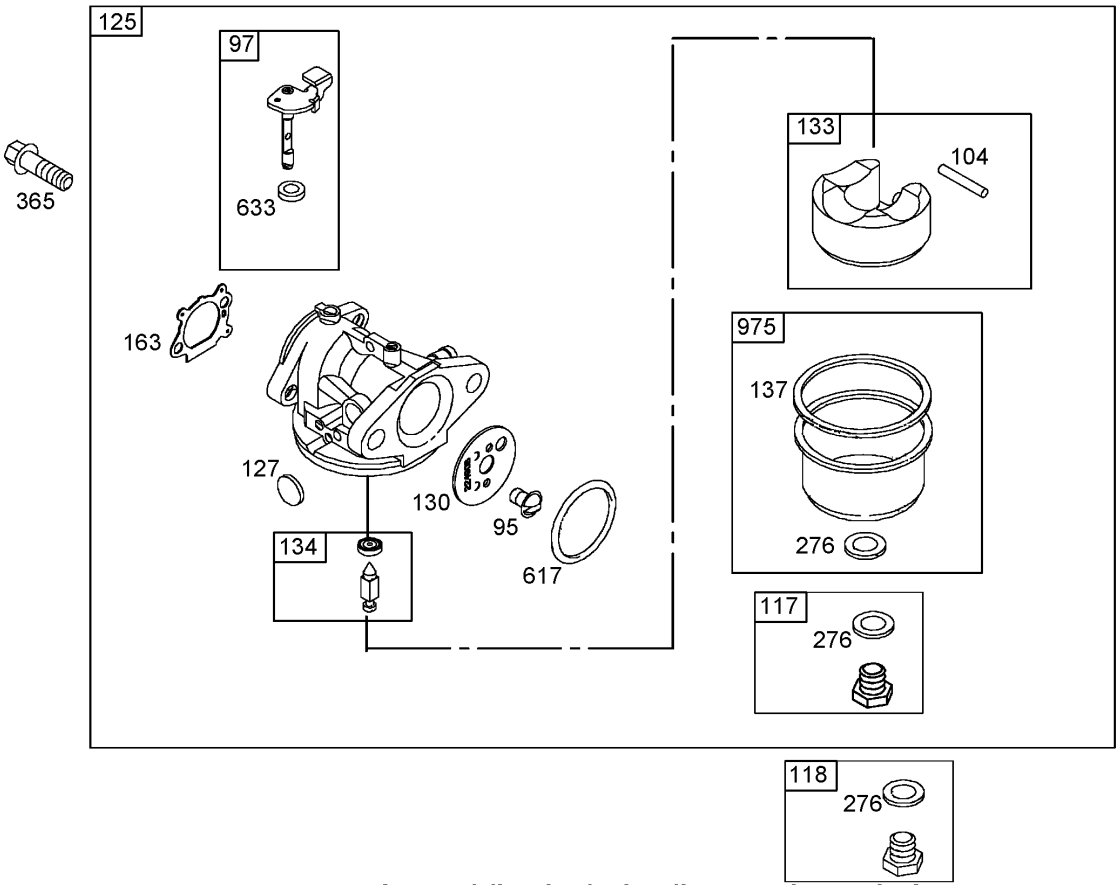


Carburetor Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶95	691636	1	Screw (Throttle Valve)
❶97	696565	1	Shaft–Throttle
❶104	691242	1	Pin–Hinge, Float
❶117	498978	1	Jet–Main (Standard)
❶118	497466	1	Main Jet (High Altitude)
❶125	498170	1	Carburetor
❶127	694468	1	Plug–Welch
❶130	696564	1	Valve–Throttle
❶133	398187	1	Float–Carburetor
❶134	398188	1	Needle/Seat Kit
❶137	693981	1	Gasket–Bowl, Float
❶163	272653	1	Gasket–Cleaner, Air
❶276	271716	1	Washer–Sealing
❶365	692524	1	Screw (Carburetor)
❶617	270344	1	Seal–O Ring (Intake Manifold)
❶633	691321	1	Seal
❶975	493640	1	Bowl–Float

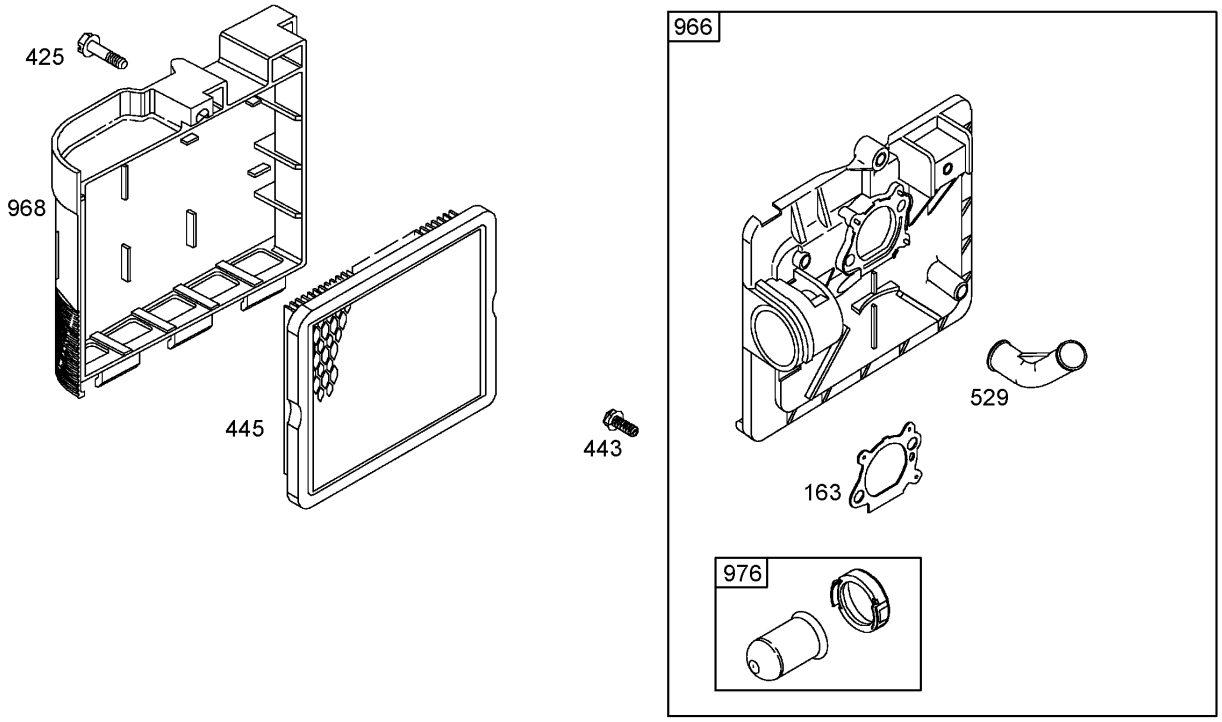


Air Cleaner Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶163	272653	1	Gasket–Cleaner, Air
❶425	690670	1	Screw (Air Cleaner Cover)
❶443	692523	1	Screw (Air Cleaner Primer Base)
❶445	491588	1	Filter–Cartridge, Air Cleaner
❶529	691923	1	Grommet
❶966	496116	1	Base–Primer, Air Cleaner
❶968	692298	1	Cover–Cleaner, Air
❶976	694395	1	Primer–Carburetor

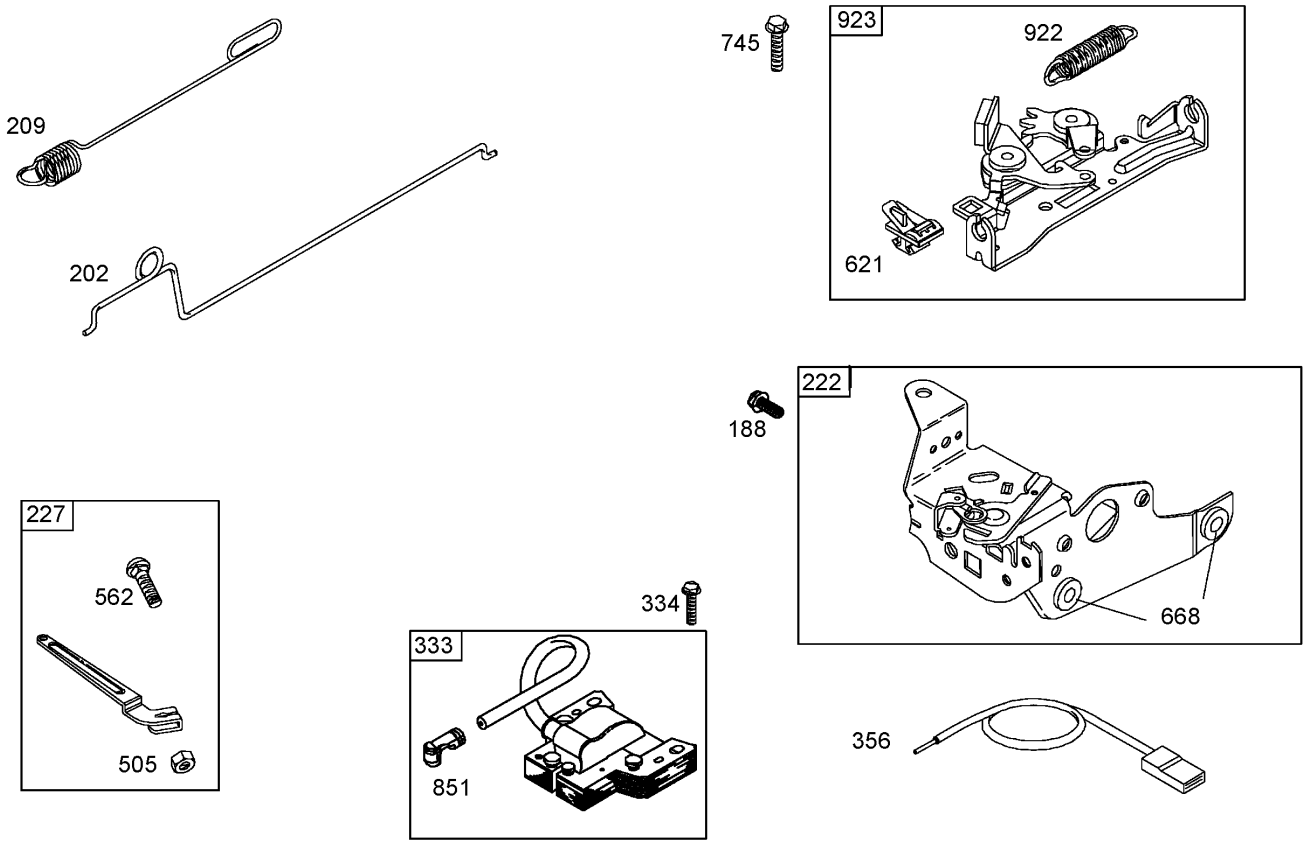


Governor Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶188	693399	1	Screw (Control Bracket)
❶202	691829	1	Link–Governor, Mechanical
❶209	691292	1	Spring–Governor
❶222	791128	1	Bracket-Control
❶227	690783	1	Lever–Control, Governor
❶333	802574	1	Armature–Magneto
❶334	691061	1	Screw (Magneto Armature)
❶356	690791	1	Wire-Stop
❶505	691251	1	Nut (Governor Control Lever)
❶562	691119	1	Bolt (Governor Control Lever)
❶621	692310	1	Switch–Stop
❶668	493823	1	Spacer
❶745	691648	1	Screw (Brake)
❶851	493880	1	Terminal-Plug, Spark
❶922	691831	1	Spring–Brake
❶923	691994	1	Brake ASM

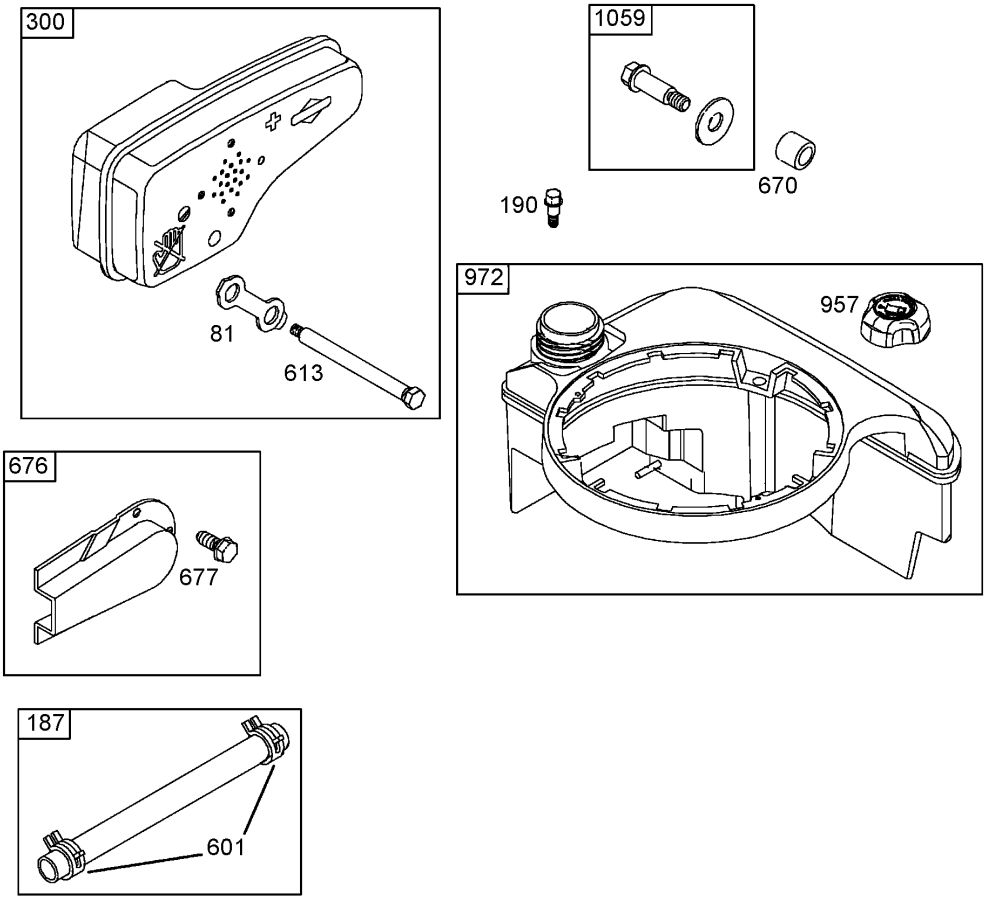


Muffler and Fuel Tank Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶81	691740	1	Lock–Screw, Muffler
❶187	691371	1	Line–Fuel (Cut To Required Length)
❶190	690940	1	Screw (Fuel Tank)
❶300	692038	1	Muffler
❶601	95162	1	Clamp-Hose
❶613	691340	1	Screw (Muffler)
❶670	692294	1	Spacer–Tank, Fuel
❶676	493871	1	Deflector–Muffler
❶677	690661	1	Screw (Muffler Deflector)
❶957	692046	1	Cap–Tank, Fuel
❶972	699374	1	Tank–Fuel
❶1059	692311	1	Screw/Washer Kit

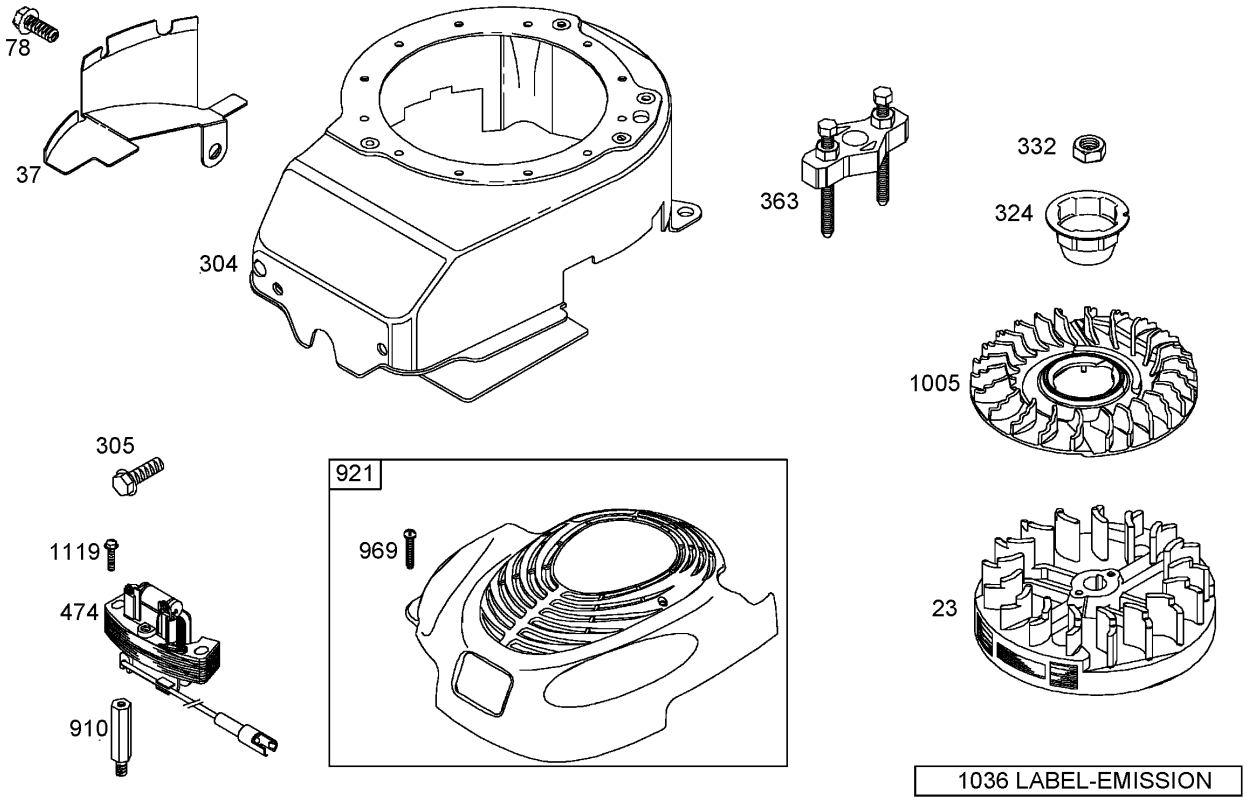


Blower Housing Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶23	691992	1	Flywheel
❶37	694086	1	Guard–Flywheel
❶78	691108	1	Screw (Flywheel Guard)
❶304	493294	1	Housing-Blower
❶305	691108	1	Screw (Blower Housing)
❶324	695161	1	Cup/Screen ASM
❶332	690662	1	Nut (Flywheel)
❶363	19069	1	Puller–Flywheel
❶474	691991	1	Alternator
❶910	691094	1	Stud (Alternator)
❶921	790036	1	Cover–Housing, Blower
❶969	691138	1	Screw (Blower Housing Cover)
❶1005	691346	1	Fan–Flywheel
❶1036	790411	1	Label–Emission
❶1119	692979	1	Screw (Alternator)

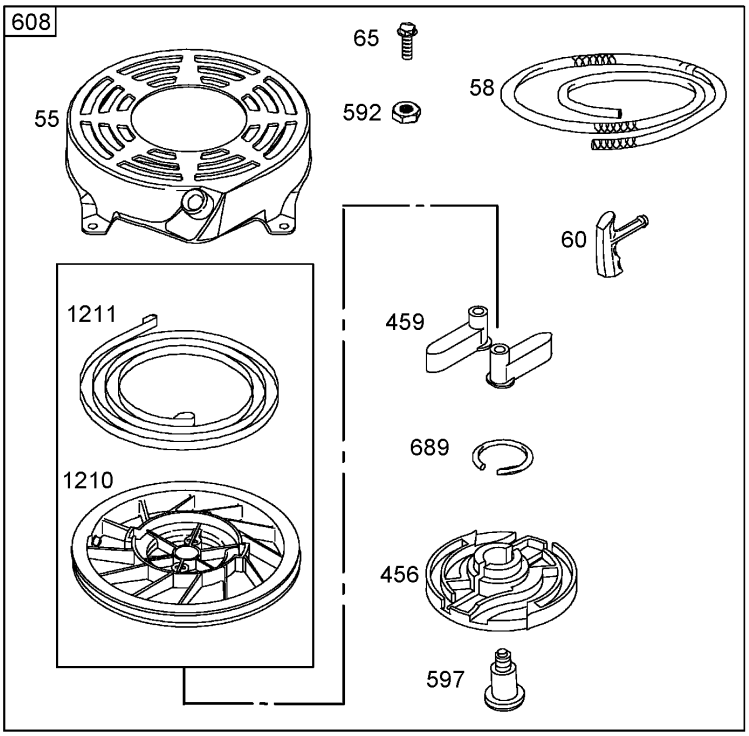


Rewind Starter Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶55	691421	1	Housing–Starter, Rewind
❶58	697316	1	Rope–Starter (Cut To Required Length)
❶60	281434	1	Grip–Rope, Starter
❶65	690837	1	Screw (Rewind Starter)
❶456	692299	1	Plate–Friction, Pawl
❶459	281505	1	Ratchet–Pawl
❶592	690800	1	Nut (Rewind Starter)
❶597	691696	1	Screw (Pawl Friction Plate)
❶608	497680	1	Starter–Rewind
❶689	691855	1	Spring–Friction
❶1210	498144	1	Pulley/Spring ASM (Pulley)
❶1211	498144	1	Pulley/Spring ASM (Spring)

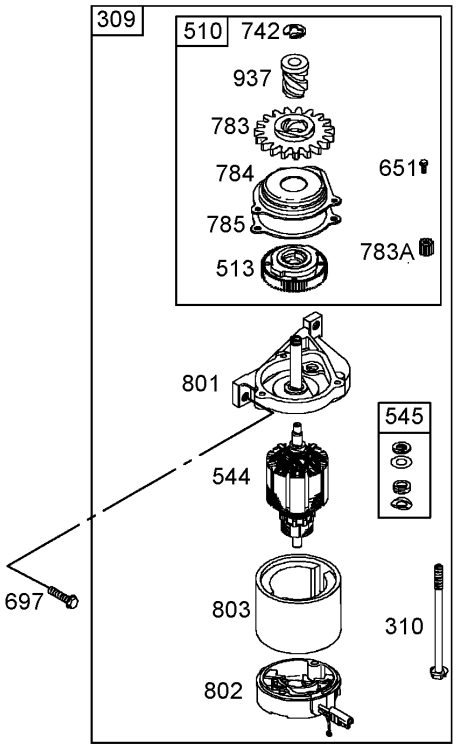

Electric Starter Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶309	695550	1	Motor–Starter
❶310	692327	1	Bolt (Starte Motor)
❶510	494147	1	Drive–Starter
❶513	692358	1	Clutch–Drive
❶544	690786	1	Armature–Starter
❶545	492919	1	Washer Set
❶651	690345	1	Screw (Starter Gear Cover)
❶697	691127	1	Screw (Drive Cap)
❶742	93941	1	Retainer–E Ring
❶783	691918	1	Gear–Pinion
❶783A	691269	1	Gear–Pinion
❶784	692341	1	Cover–Gear, Starter
❶785	692352	1	Gasket–Cover, Starter
❶801	690782	1	Cap–Drive
❶802	65267	1	Cap-End
❶803	695266	1	Housing–Starter
❶937	691325	1	Spline–Starter

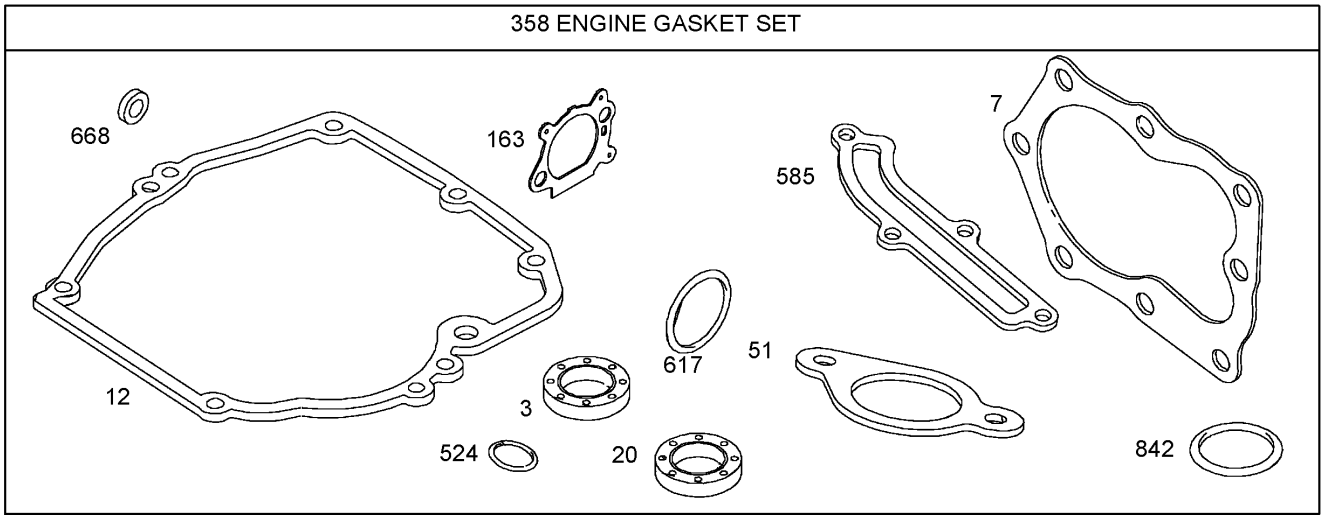

Engine Gasket Set Assembly
Briggs and Stratton 125K07-0188-E1

Ref	Part No.	Qty.	Description
❶3	299819	1	Seal–Oil (Magneto Side)
❶7	692249	1	Gasket–Head, Cylinder
❶12	692232	1	Gasket–Crankcase
❶20	399781	1	Seal–Oil (PTO Side)
❶51	272199	1	Gasket–Intake
❶163	272653	1	Gasket–Cleaner, Air
❶358	497316	1	Gasket Set–Engine
❶524	692296	1	Seal-O Ring (Dipstick Tube)
❶585	691879	1	Gasket–Passage, Breather
❶617	270344	1	Seal–O Ring (Intake Manifold)
❶668	493823	1	Spacer
❶842	691031	1	Seal-O Ring (Dipstick)

Attachments and Accessories

For 20058 - Super Recycler Lawn Mower

Product Name	Model/Part
Blade-Bagging	108-3759-03
Traction Assist Handle Kit	108-8120

NOTES

NOTES

NOTES


TORO®