Form Number 3352-890

Z450 Z Master®

With 48in TURBO FORCE Side Discharge Mower

Model No. 74414 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Front Frame Assembly	3
Caster Wheel Assembly No. 1-634662	4
Height of Cut Assembly	5
Main Frame Assembly	6
Fuel System Assembly	7
Parking Brake Assembly	8
Motion Control Assembly	9
Hydraulic System Assembly	10
Hydraulic Pump Assembly No. 103-1942	12
Pump Idler and Belt Assembly	13
Engine, Clutch and Muffler Assembly	14
Deck Connection Assembly	15
Deck Assembly No. 107-1670	16
Idler Assembly	18
Spindle Assembly No. 107-8504	19
Deck Decal Assembly No. 107-1669	20
Rubber Deflector Assembly No. 108-4060	21
Electrical System Assembly	22
Seat and Bracket Assembly	23
Seat Assembly No. 107-1867	24
Roll-Over-Protection-System Assembly	25
Roll-Over-Protection-System Assembly No. 107-8093	26
Crankshaft Assembly Kohler CV20S PRO-65593	27
Crankcase Assembly Kohler CV20S PRO-65593	28
Oil Pan/Lubrication Assembly Kohler CV20S PRO-65593	29
Head/Valve/Breather Assembly Kohler CV20S PRO-65593	30
Ignition/Electrical Assembly Kohler CV20S PRO-65593	31
Blower Assembly Kohler CV20S PRO-65593	32
Starter Assembly Kohler CV20S PRO-65593	33
Fuel System Assembly Kohler CV20S PRO-65593	34
Engine Control Assembly Kohler CV20S PRO-65593	35
Air Intake/Filtration Assembly Kohler CV20S PRO-65593	36
Exhaust Assembly Kohler CV20S PRO-65593	37

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated

❷ Not serviced separately


❸ Obtain Parts From Kohler

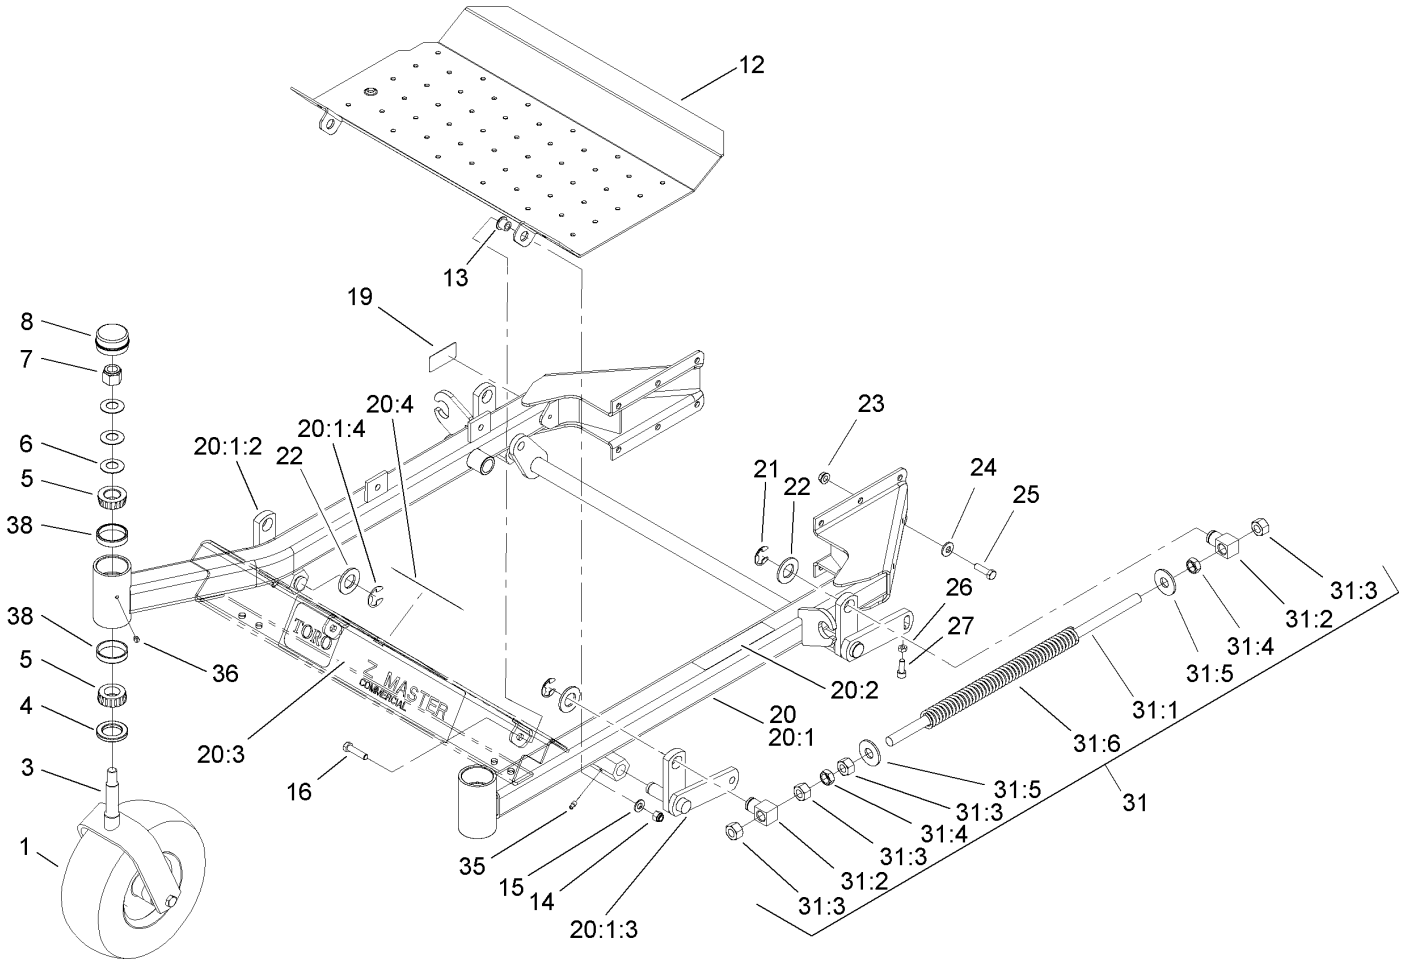

Front Frame Assembly


Ref	Part No.	Qty.	Description
1	1-634662	2	Caster Wheel ASM
3	1-632511-01	2	Caster
4	1-543511	2	Seal-Grease
5	254-94	4	Bearing-Cone, Tapered
6	1-633508	6	Washer-Bellville
7	3296-51	2	Nut-Lock, NI
8	1-543513	2	Cap-Grease
12	108-5007-03	1	Floor Pan
13	86-2180	2	Bushing-Flange
14	3296-39	2	Nut-Lock, NI
15	3256-24	2	Washer-Flat
16	323-8	2	Screw-HH
19	105-2625	1	Decal-Std, Safety
20	107-1650	1	Front Frame ASM
❷20:1		1	Frame-Front
20:1:2	99-3872-01	1	RH Lift Arm ASM
20:1:3	99-3871-01	1	LH Lift Arm ASM
20:1:4	32151-103	2	Ring-Snap
20:2	1-633818	1	Decal-Warning
20:3	106-7451	1	Decal
20:4	107-2112	1	Decal-Warning
21	32151-103	4	Ring-Snap
22	3256-29	6	Washer-Flat
23	3290-357	12	Nut-HHF

Ref	Part No.	Qty.	Description
24	98-5975	12	Washer-Belleville
25	323-7	12	Screw-HH
26	3218-2	2	Nut-Jam
27	3274-18	2	Screw-HSH
31	1-634439	2	Front Frame Spring ASM
31:1	1-633096	1	Rod-Lift, Deck
31:2	1-633441	2	Swivel-Deck Mount, Rear
31:3	3217-11	4	Nut-Hex
31:4	3218-6	2	Nut-Jam
31:5	3256-7	2	Washer-Flat
31:6	1-633064	1	Spring-Support, Deck
35	302-19	4	Fitting-Grease
36	1-811010	2	Plug
38	254-72	4	Bearing-Cup, Tapered

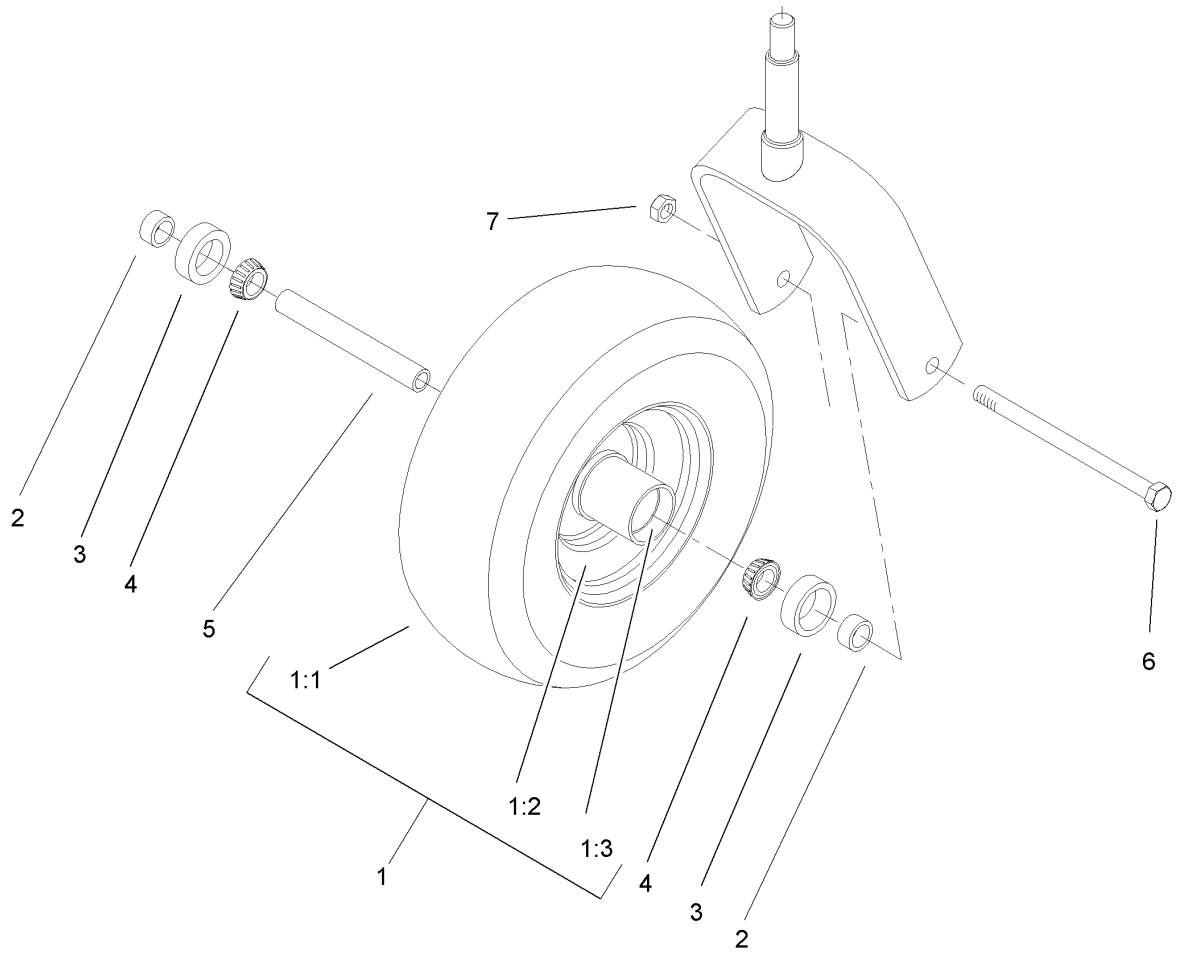


Caster Wheel Assembly No. 1-634662

Ref	Part No.	Qty.	Description
1	1-633582	1	Wheel And Tire ASM
1:1	1-633002	1	Tire
1:2	1-633583	1	Wheel
1:3	1-633584	2	Bearing-Cup
2	1-633581	2	Spacer-Bearing
3	1-633580	2	Seal-Bearing
4	1-633585	2	Bearing-Cone, Taper
5	1-633579	1	Spacer-Caster, Front
6	325-36	1	Screw-HH
7	3296-45	1	Nut-Lock, NI

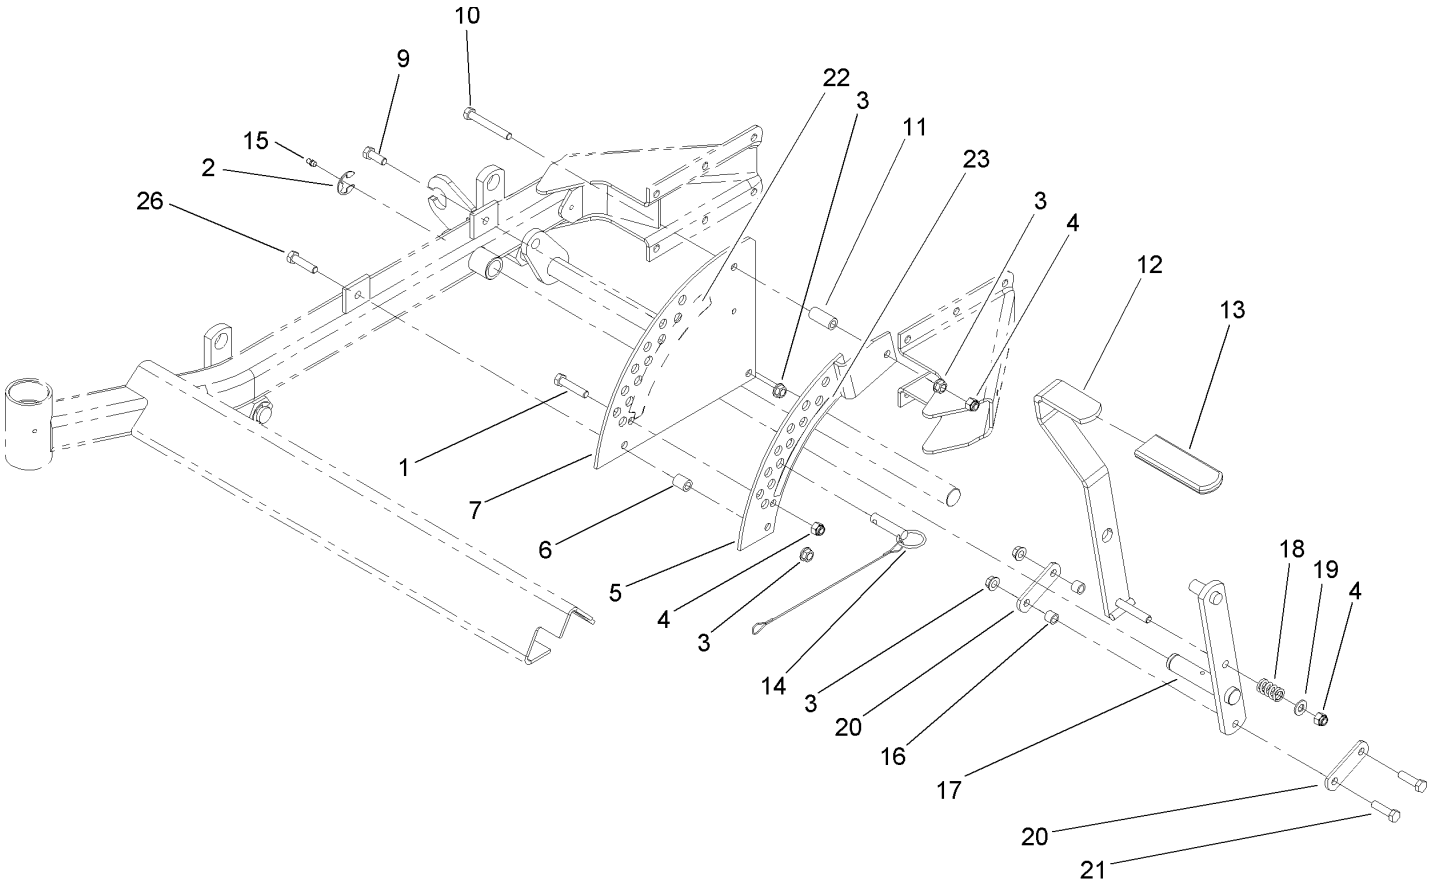


Height of Cut Assembly

Ref	Part No.	Qty.	Description
1	323-9	1	Screw-HH
2	32151-103	1	Ring-Snap
3	3290-357	5	Nut-HHF
4	3296-39	3	Nut-Lock, NI
5	1-652235-01	1	Plate-Lift, Deck
6	1-633080	1	Bushing-Lever, Lift
7	1-653230-01	1	Plate-Lift, Deck
9	323-6	1	Screw-HH
10	323-13	1	Screw-HH
11	1-633082	1	Bushing-Lever, Lift
12	103-2078-03	1	Handle-Lift
13	1-633295	1	Grip-Lever, Lift
14	106-9951	1	Hitch Pin ASM
15	302-19	1	Fitting-Grease
16	103-1918	2	Bushing
17	106-6598-03	1	Lift Arm ASM
18	1-633325	1	Spring-Compression
19	3256-24	1	Washer-Flat
20	1-633068	2	Arm-Lift, Deck
21	323-29	2	Screw-HH
22	108-1051	1	Decal-Deck Height, Outer
23	108-1050	1	Decal-Deck Height, Inner
26	323-8	1	Screw-HH

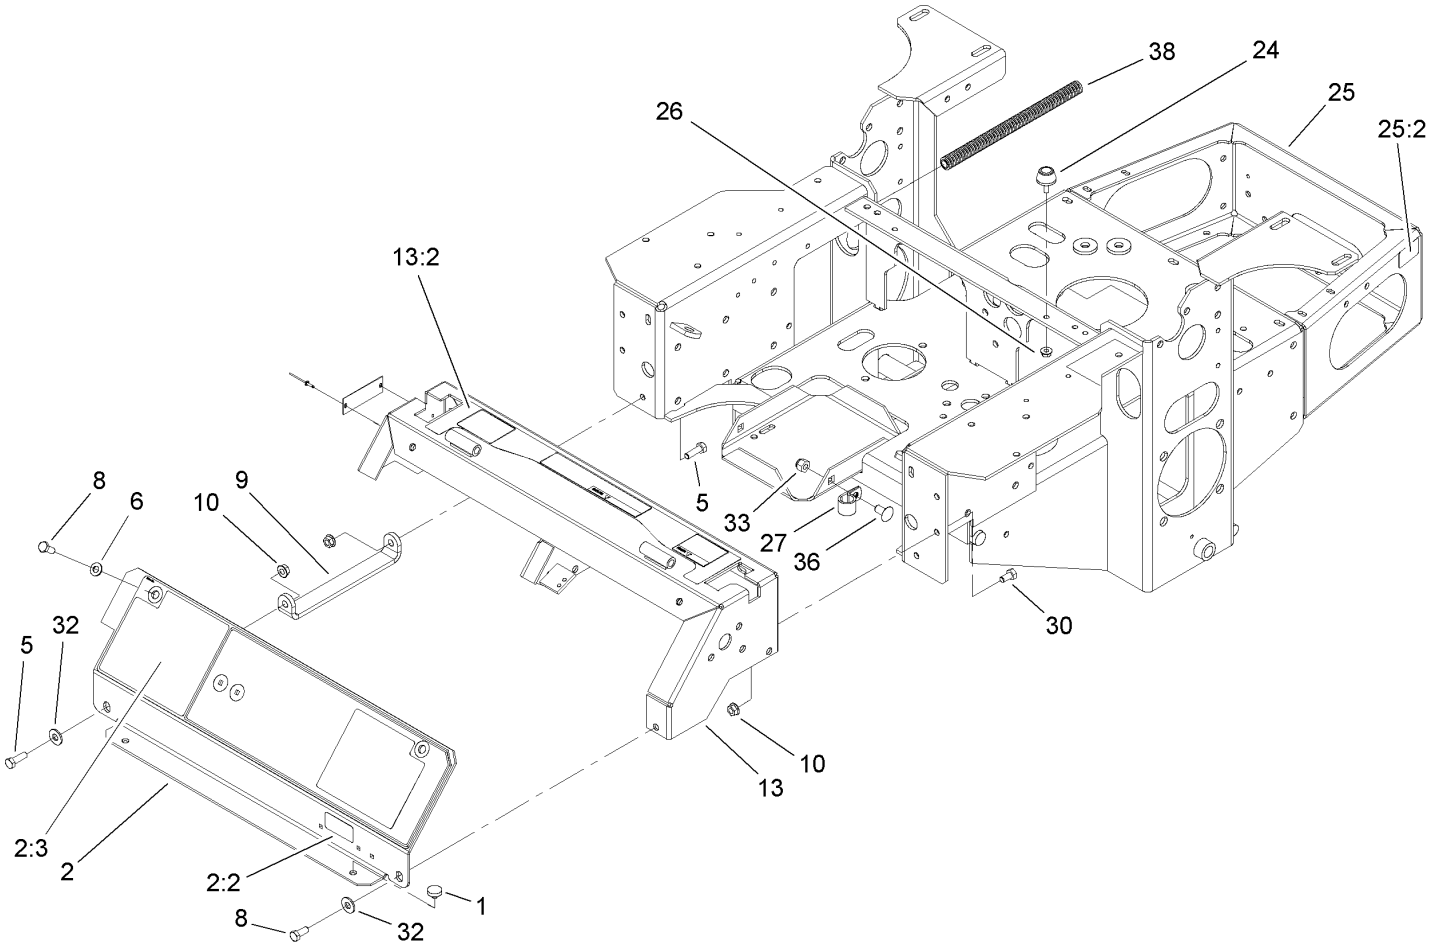

Main Frame Assembly


Ref	Part No.	Qty.	Description
1	1-513658	2	Bumper
2	108-1864	1	Panel ASM
2:2	98-4387	1	Decal-Protection, Ear
2:3	107-8445	1	Decal-Cover, Panel
5	322-5	2	Screw-HH
6	3256-23	2	Washer-Flat
8	322-3	3	Screw-HH
9	1-653089-03	1	Bracket
10	32128-20	6	Nut-HF
13	108-5997	1	Console Asm, Z400 (W/ Decals)
13:2	108-5995	1	Decal, Top Console Z400
24	1-523420	2	Bumper
25	108-2783	1	Main Frame ASM
25:2	65-2690	2	Decal-Surface, Hot
26	32128-33	2	Nut-HF
27	1-633396	1	Clip-Loom
30	322-2	4	Screw-HH
32	3256-3	2	Washer-Flat
33	3296-39	1	Nut-Lock, NI
36	3231-21	1	Screw-CARR
38	24-7922	2	Cover-Shaft, Drive

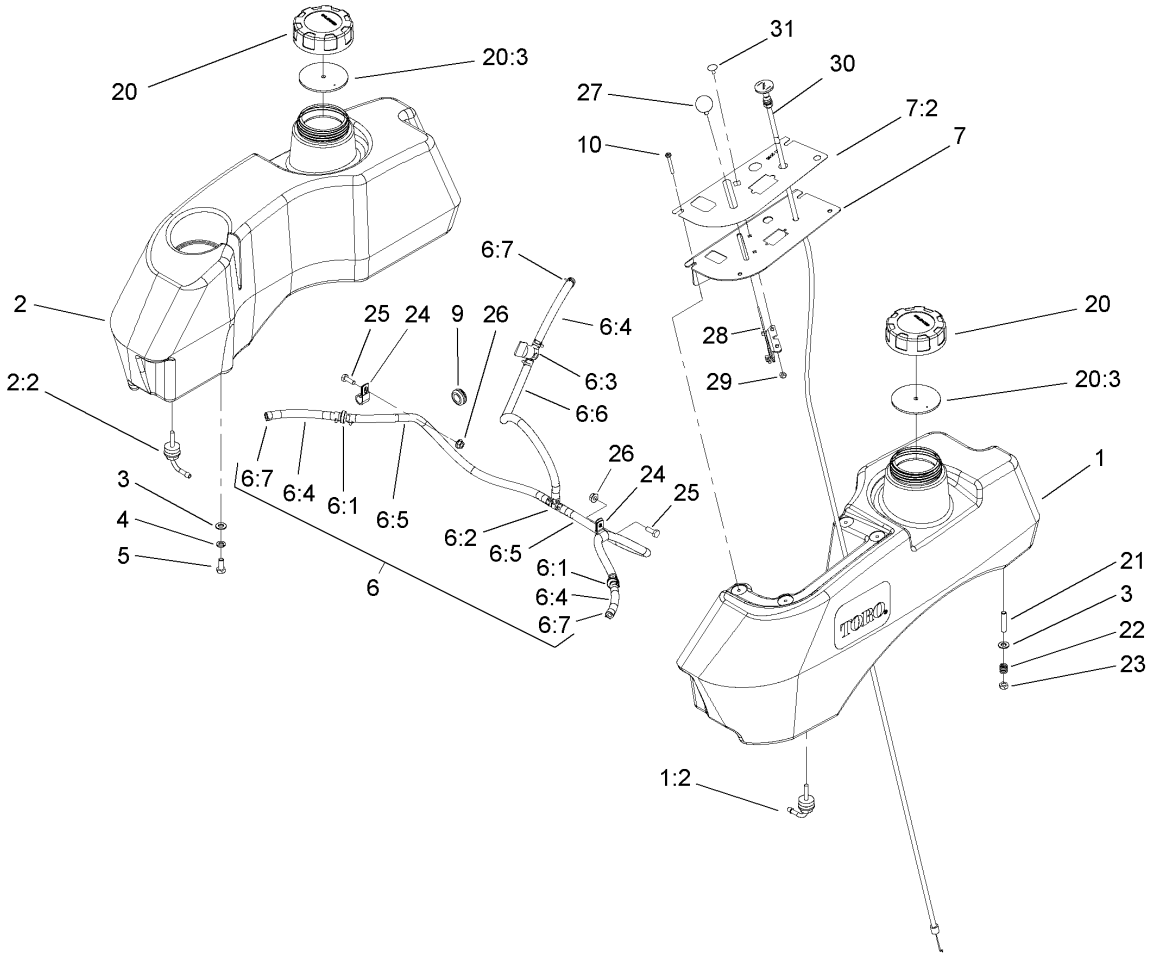

Fuel System Assembly

Ref	Part No.	Qty.	Description
1	107-2146	1	LH Fuel Tank ASM
1:2	103-2605	1	Fitting-Fuel, Bulkhead
2	106-9975	1	RH Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	3256-23	8	Washer-Flat
4	1-805005	4	Washer-Lock
5	322-3	4	Screw-HH
6		1	Fuel Line ASM
6:1	99-5000	2	Valve-Check, Fuel
6:2	99-5005	1	Fitting-Tee, Barbed
6:3	1-603770	1	Valve-Fuel
6:4	99-7190	3	Hose-Fuel
6:5	99-3185	2	Hose-Fuel
6:6	106-8720	1	Hose-Fuel
6:7	1-303077	12	Clamp
7	107-2149	1	Control Panel ASM
7:2	107-2148	1	Decal-Panel, Control
9	1-543296	2	Grommet
10	32122-30	4	Screw-Pth
20	88-3980	2	Gas Cap ASM
20:3	88-4010	1	Gasket-Cap, Gas
21	1-633023	4	Stud
22	1-633349	4	Spring-Tank, Fuel
23	3296-47	4	Nut-Lock, NI


Ref	Part No.	Qty.	Description
24	1-513762	2	Clip-Loom
25	321-4	2	Screw-HH
26	32128-33	2	Nut-HF
27	1-513592	1	Knob-Ball
28	1-633696	1	Throttle Cable ASM
29	3296-2	2	Nut-Lock
30	103-4090	1	Control-Choke
31	1-807513	2	Bolt-CARR

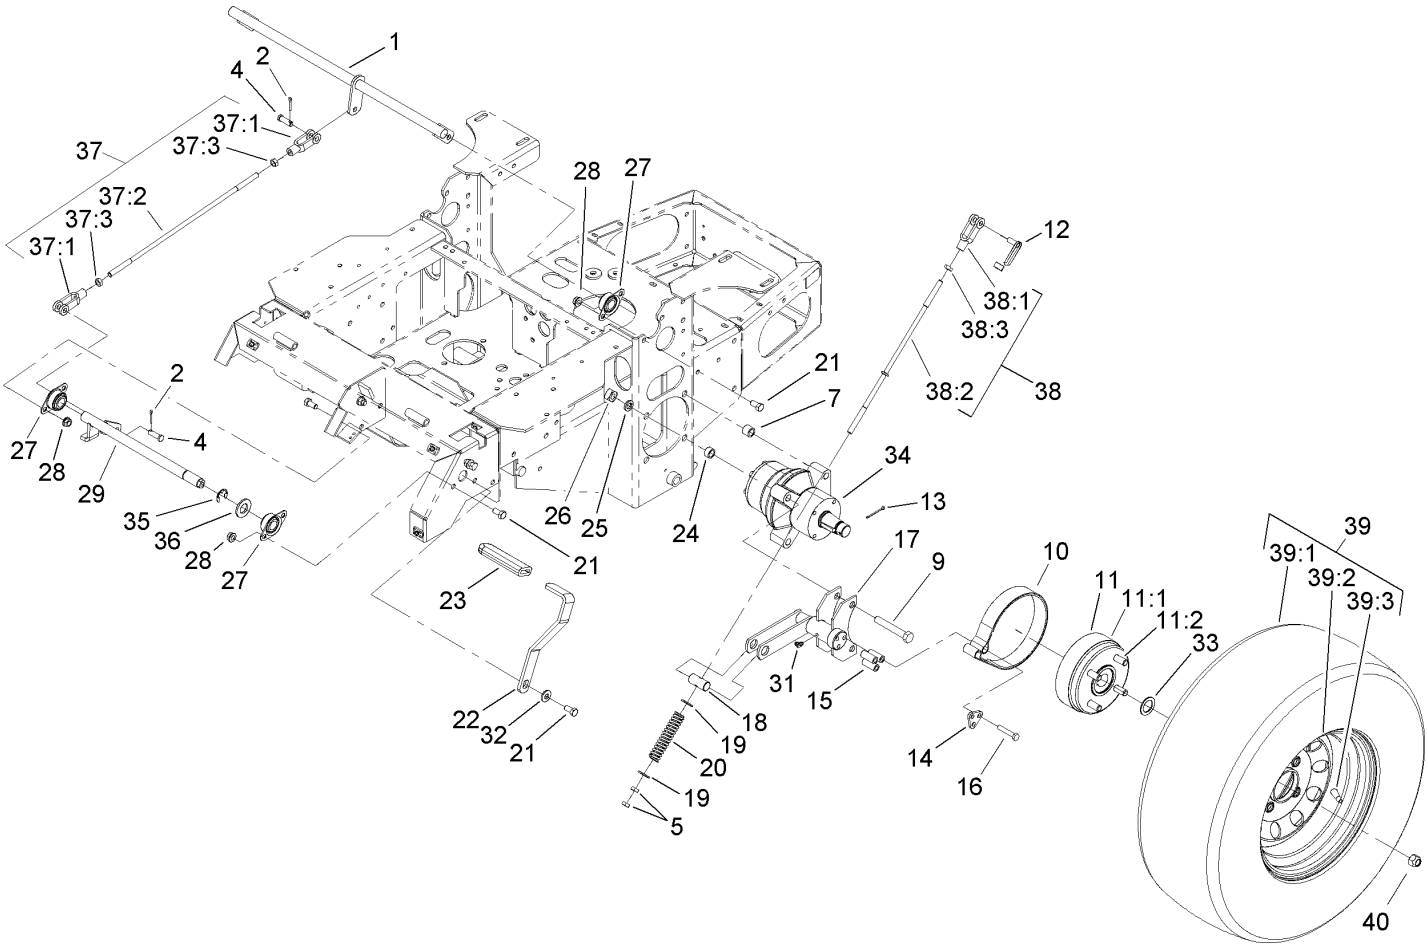

Parking Brake Assembly

Ref	Part No.	Qty.	Description
1	1-652073-03	1	Crank-Brake, Park
2	3272-10	2	Pin-Cotter
4	1-808285	2	Pin-Clevis
5	3219-3	4	Nut-Hex
7	1-653068	4	Spacer-Wheel
9	325-13	8	Screw-HH
10	103-0355	2	Band-Brake
11	103-0590	2	Hub And Wheel ASM
11:1	103-0589	1	Wheel Hub ASM
11:2	1-633926	4	Stud-Wheel
12	103-2399	2	Pin-Spring, Clevis
13	1-806800	2	Pin-Cotter
14	103-0374	2	Retainer-Band, Brake
15	103-0384	6	Spacer
16	322-9	6	Screw-HH
17	103-0352-03	2	Bracket-Brake
18	1-633144	2	Pin-Trunion
19	3256-4	4	Washer-Flat
20	1-633454	2	Spring-Brake
21	323-4	9	Screw-HH
22	1-653074-03	1	Handle-Brake, Park
23	1-633268	1	Grip-Lever, Brake
24	1-653069	4	Spacer-Wheel
25	3253-7	8	Washer-Lock


Ref	Part No.	Qty.	Description
26	103-0131	8	Nut-Square
27	1-633102	4	Bearing-Flange, Side
28	3290-357	8	Nut-HHF
29	103-3116	1	Shaft-Brake, Parking
31	1481	2	Fitting-Grease
32	98-5975	1	Washer-Belleville
33	1-523157	2	Washer-Spacer
34	103-5333	2	Motor-Wheel
35	32151-48	1	E-Ring
36	3256-28	1	Washer-Flat
37	103-4328	1	Brake Rod ASM
37:1	1-633131	2	Yoke-Linkage, Brake
37:2	1-653061	1	Linkage-Handle, Brake
37:3	3219-3	2	Nut-Hex
38	103-4329	2	Brake Rod ASM
38:1	1-633131	1	Yoke-Linkage, Brake
38:2	103-0356	1	Rod-Brake
38:3	3219-3	1	Nut-Hex
39	1-653159	2	Wheel And Tire ASM
39:1	1-653160	1	Tire
39:2	1-653161	1	Wheel
39:3	232-27	1	Stem-Valve
40	242-50	8	Nut-Lug

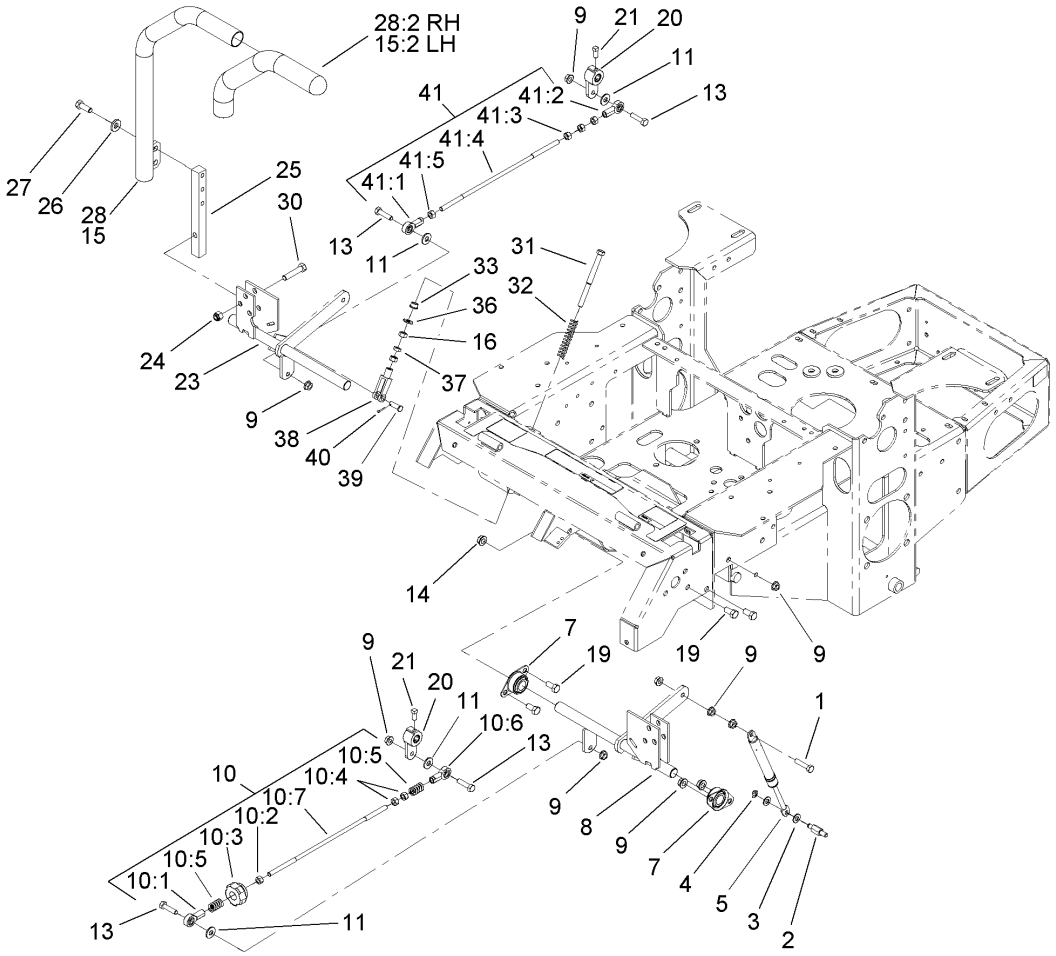

Motion Control Assembly

Ref	Part No.	Qty.	Description
1	1-403180	2	Screw-HH
2	103-4101	2	Pin-Damper
3	3256-23	4	Washer-Flat
4	32120-35	2	E-Ring
5	103-4079	2	Damper-Control, Motion
7	1-633102	4	Bearing-Flange, Side
8	103-4774	1	Control-Motion, LH
9	32128-20	12	Nut-HF
10	103-4326	1	Tracking Rod ASM
10:1	1-543017	1	Balljoint-RH
10:2	3219-2	1	Nut-Hex
10:3	103-3060	1	Knob-Tracking
10:4	1-804524	2	Nut
10:5	1-323245	2	Spring-Compression
10:6	1-633152	1	Balljoint-Thread, LH
10:7	103-3066	1	Link-Rod, Tracking
11	3256-3	4	Washer-Flat
13	322-6	4	Screw-HH
14	3290-357	6	Nut-HHF
15	106-9982	1	LH Lever ASM
15:2	106-9987	1	Grip-Control, Motion
16	3219-2	4	Nut-Hex
19	323-4	6	Screw-HH
20	103-3717	2	Arm-Control


Ref	Part No.	Qty.	Description
21	1-803022	2	Screw-Set
23	103-4773	1	Control-Motion, RH
24	3296-39	6	Nut-Lock, NI
25	103-0407	2	Arm-Shaft, Control
26	98-5975	4	Washer-Belleville
27	323-6	4	Screw-HH
28	106-9983	1	RH Lever ASM
28:2	106-9987	1	Grip-Control, Motion
30	323-9	6	Screw-HH
31	1-603737	2	Bolt-Return, Neutral
32	1-603807	2	Spring-Return, Neutral
33	1-603735	2	Bushing-Flanged
36	3256-2	2	Washer-Flat
37	3220-2	2	Nut-Jam
38	1-303105	2	Yoke-Adjustable
39	1-808280	2	Pin-Clevis
40	3272-5	2	Pin-Cotter
41	103-4327	1	Tracking ASM
41:1	1-543017	1	Balljoint-RH
41:2	1-633152	1	Balljoint-Thread, LH
41:3	1-804524	1	Nut
41:4	103-3066	1	Link-Rod, Tracking
41:5	3219-2	3	Nut-Hex

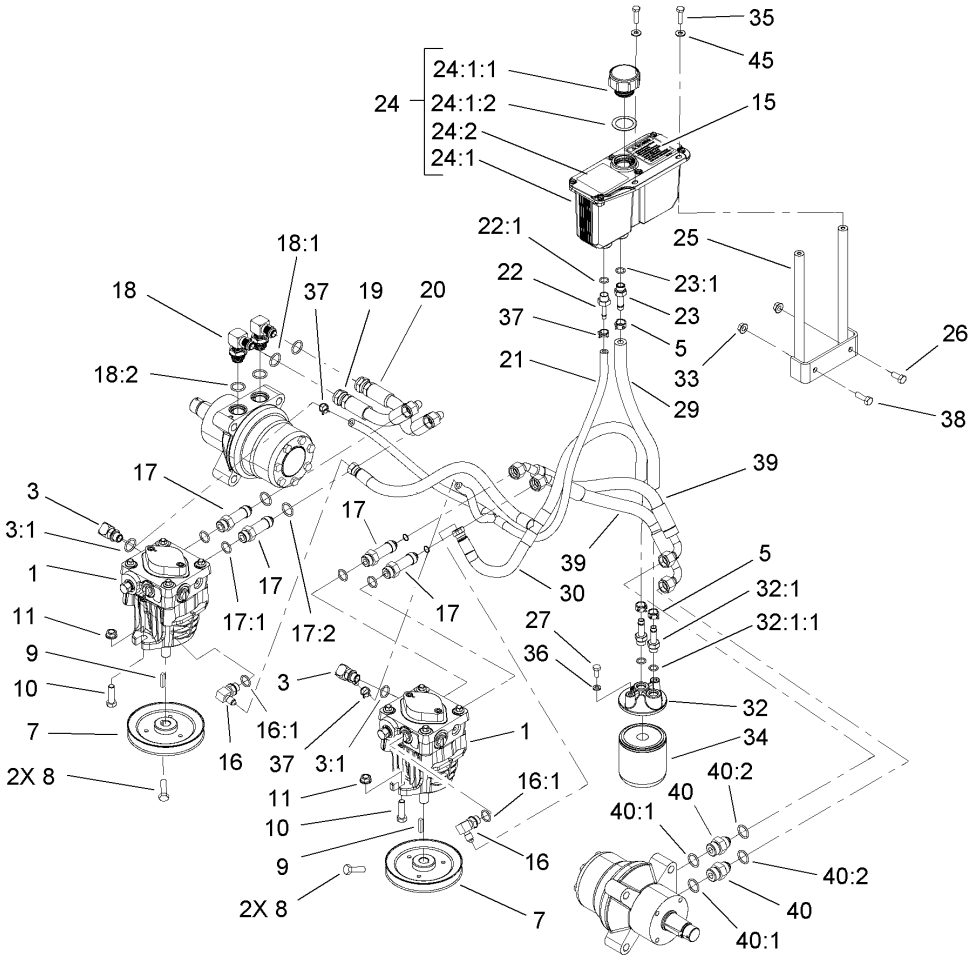

Hydraulic System Assembly


Ref	Part No.	Qty.	Description
1	103-1942	2	Pump-HYD
3	103-1799	2	Elbow-90 DEG
3:1	237-42	1	O-Ring
5	103-1988	3	Clamp-Hose
7	1-653156	2	Pulley
8	1-803050	4	Screw-Set
9	1-807272	2	Key
10	323-7	4	Screw-HH
11	3290-357	4	Nut-HHF
15	103-2644	1	Decal-Exhaust
16	103-1802	2	Fitting-Hyd, 90 DEG
16:1	1-603921	1	O-Ring
17	103-1940	4	Adapter-Hyd, Straight
17:1	237-79	1	O-Ring
17:2	1-603992	1	O-Ring
18	1-633605	2	Fitting-Hyd, 90 DEG
18:1	1-603992	1	O-Ring
18:2	237-80	1	O-Ring
19	1-653186	1	Hose-Front
20	1-653187	1	Hose-Rear, RH
21	103-2357	1	HYD Hose ASM
22	103-1801	1	Adapter-Straight
22:1	237-42	1	O-Ring
23	103-1912	1	Adapter-Straight

Ref	Part No.	Qty.	Description
23:1	237-42	1	O-Ring
24	103-1947	1	HYD Reservoir ASM
❷24:1		1	Reservoir-HYD
24:1:1	103-1948	1	Cap-Reservoir, HYD
24:1:2	103-1949	1	Gasket-Cap
24:2	1-523552	1	Decal-Tank, HYD
25	103-3071-03	1	Stand-Reservoir
26	322-3	1	Screw-HH
27	321-3	2	Screw-HH
29	103-3077	1	HYD Hose ASM
30	103-2930	1	HYD Hose ASM
32	103-2889	1	Filter Head ASM
32:1	103-1912	2	Adapter-Straight
32:1:1	237-42	1	O-Ring
33	32128-20	2	Nut-HF
34	1-633750	1	Filter-HYD
34	1-633752	1	Filter-Hyd, Winter
35	321-6	2	Screw-HH
36	1-805004	2	Washer-Lock
37	103-1716	3	Clamp-Hose
38	322-5	1	Screw-HH
39	103-3809	2	Hose-LH
40	1-603991	2	Fitting-Straight
40:1	237-80	1	O-Ring

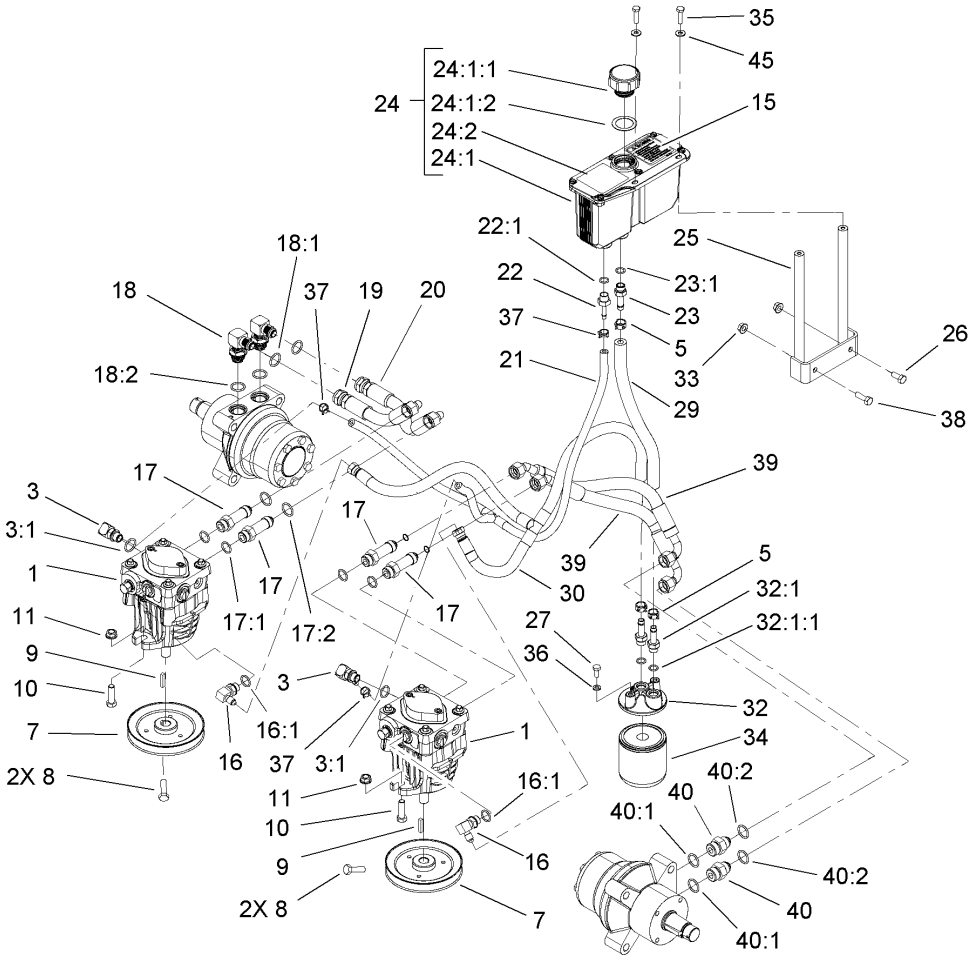


Hydraulic System Assembly (continued)

Ref	Part No.	Qty.	Description
40:2	1-603992	1	O-Ring
45	3256-22	2	Washer-Flat

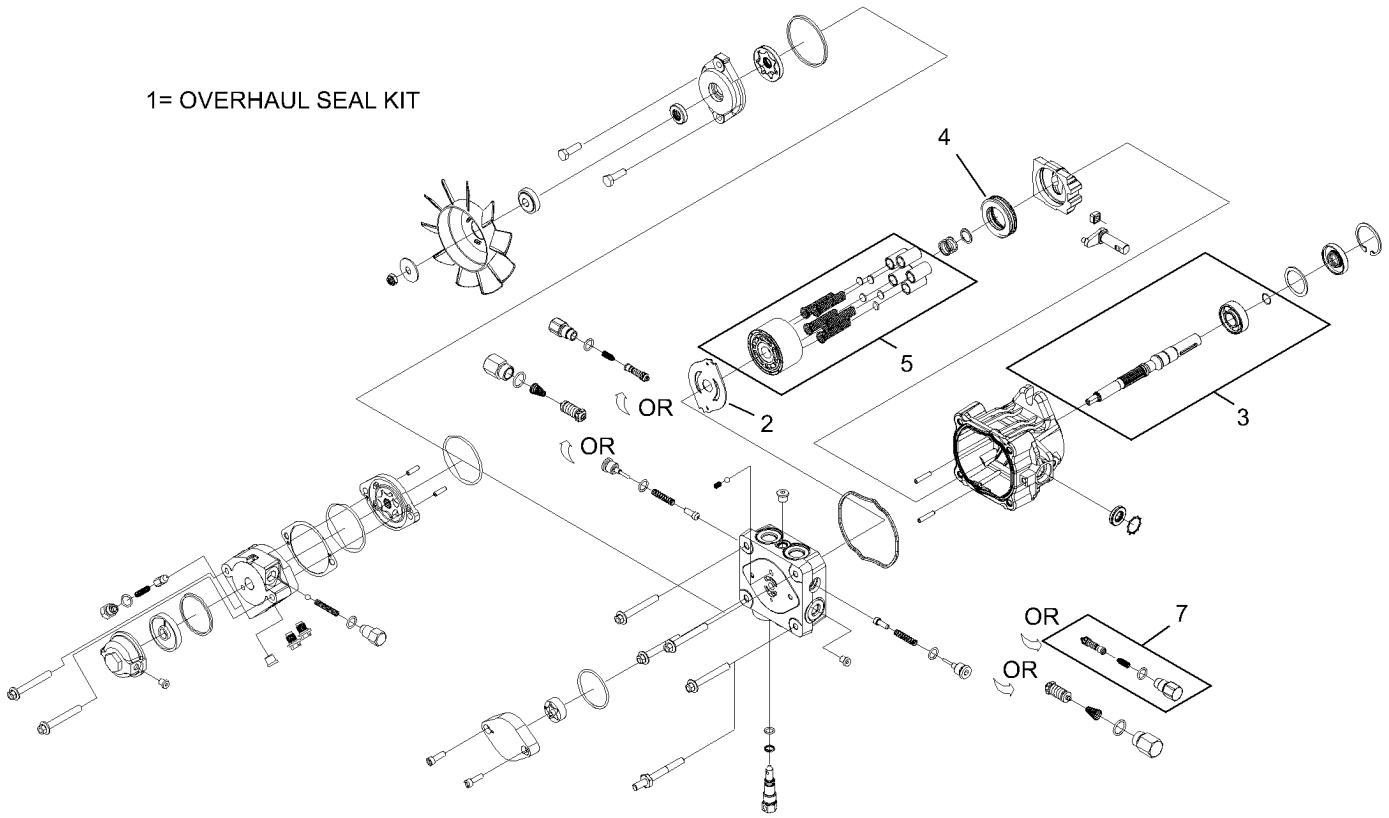


Hydraulic Pump Assembly No. 103-1942

Ref	Part No.	Qty.	Description
1	105-6184	1	Seal Kit
2	105-6185	1	Plate-Valve
3	103-2664	1	Input Shaft Kit
4	94-6922	1	Bearing-Thrust
5	103-2666	1	Cylinder Block Kit
7	106-2053	1	Shock Valve Kit

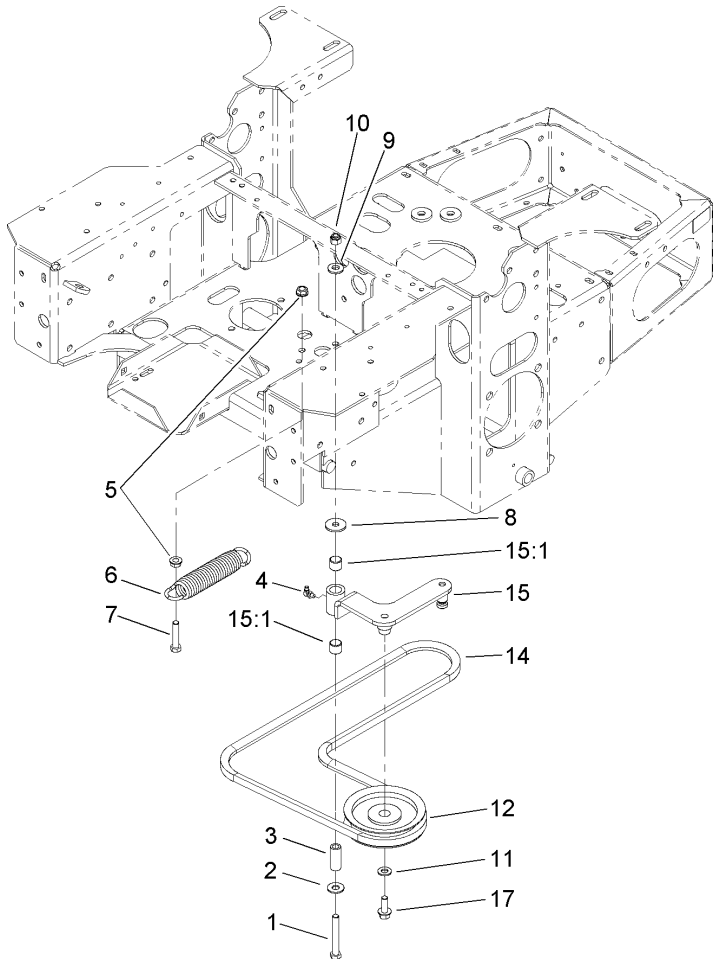

Pump Idler and Belt Assembly


Ref	Part No.	Qty.	Description
1	323-13	1	Screw-HH
2	3256-4	1	Washer-Flat
3	1-603044	1	Bushing
4	302-40	1	Fitting-Grease
5	3290-357	2	Nut-HHF
6	103-4480	1	Spring-Extension
7	323-9	1	Screw-HH
8	63-8410	1	Washer
9	98-5975	1	Washer-Belleville
10	3296-39	1	Nut-Lock, NI
11	3256-24	1	Washer-Flat
12	1-603843	1	Pulley-Idler
14	107-3960	1	Belt
15	103-4482	1	Idler Arm ASM
15:1	103-4681	2	Sleeve-Bearing
17	3234-11	1	Screw-HHF

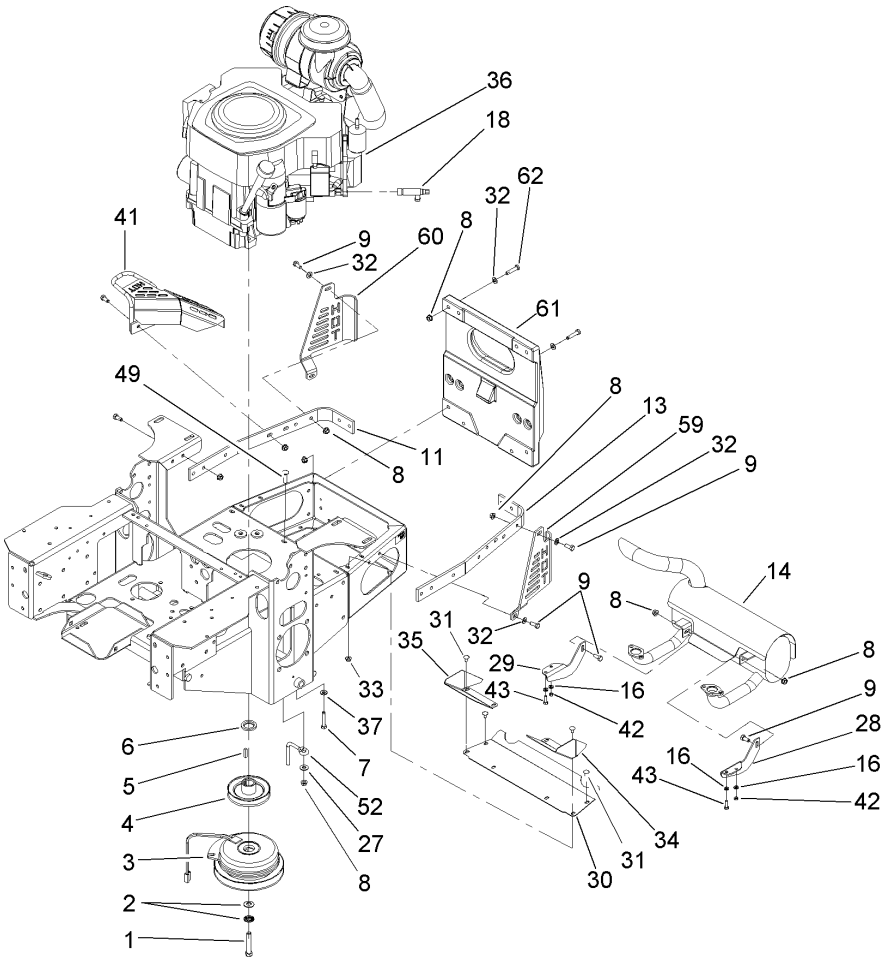

Engine, Clutch and Muffler Assembly


Ref	Part No.	Qty.	Description
1	3212-10	1	Screw-HH
2	1-603610	2	Washer-Spring
3	103-0690	1	Clutch
4	103-3913	1	Pulley
5	1-807259	1	Key
6	103-2308	1	Spacer-Crankshaft
7	322-9	4	Screw-HH
8	32128-20	34	Nut-HF
9	322-3	15	Screw-HH
11	103-3078-03	1	Strap-Guard, RH
13	103-3164-03	1	Strap-Guard, LH
14	103-2760	1	Muffler
16	1-805004	4	Washer-Lock
18	103-1963	1	Valve-Drain, Oil
27	3256-3	1	Washer-Flat
28	103-2987-03	1	Bracket-Muffler, LH
29	103-2988-03	1	Bracket-Muffler, RH
30	103-2740-03	1	Deflector-Short
31	3229-10	6	Screw-CARR
32	3256-23	12	Washer-Flat
33	32128-33	6	Nut-HF
34	103-3094-03	1	Deflector-Air, Lh,kc
35	103-3095-03	1	Deflector-Air, Rh,kc
❷36		1	Engine-Kohler, Cv20s-65601

Ref	Part No.	Qty.	Description
37	1-303334	4	Washer-Spring
41	103-3218-03	1	Guard-Tailpipe
42	33013-00	2	Nut-Hex
43	33113-020	2	Screw-HH
49	3230-3	1	Screw-CARR
52	108-1058	1	Rod-Belt
59	103-3287-03	1	Guard-Muffler, LH
60	103-3288-03	1	Guard-Muffler, RH
61	107-8421-03	1	Weight-Notched, 60 Lb
62	322-7	8	Screw-HH

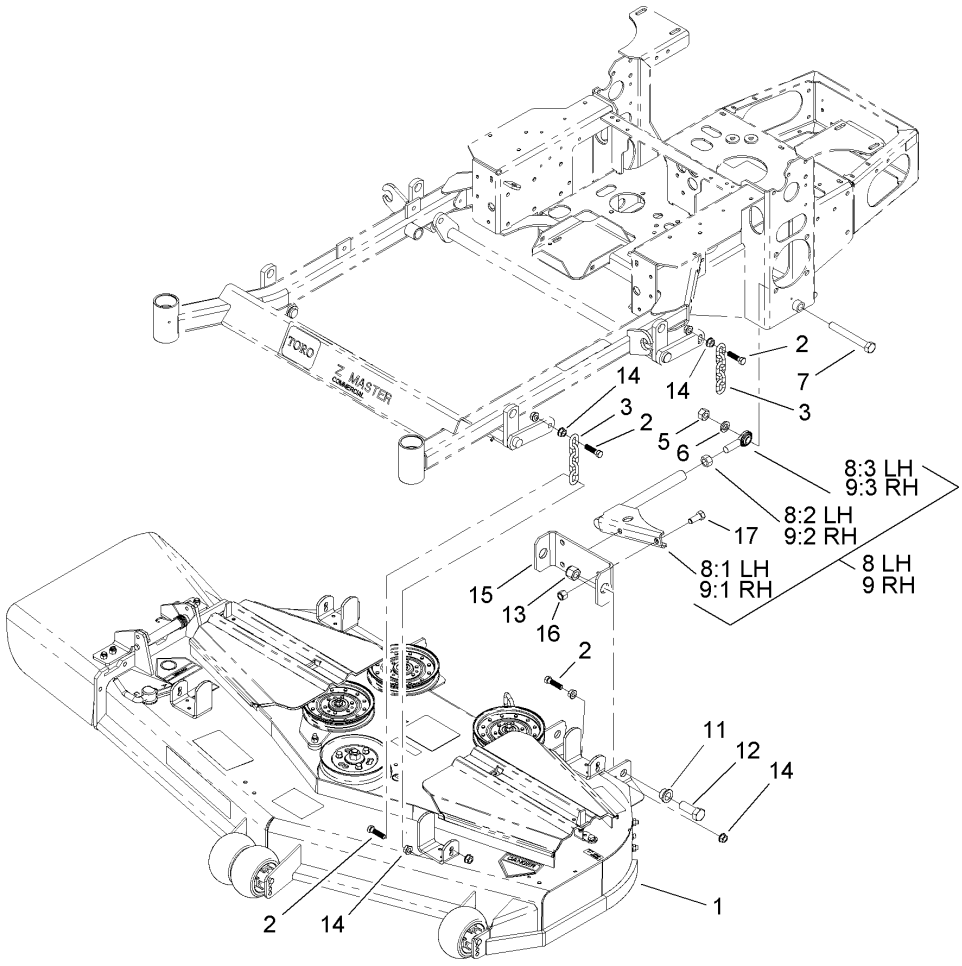

Deck Connection Assembly


Ref	Part No.	Qty.	Description
1	107-3190	1	Deck ASM
2	103-1898	8	Screw-HH
3	1-633447	4	Chain-Lift, Deck
5	3217-11	2	Nut-Hex
6	3253-8	2	Washer-Lock
7	1-800344	2	Screw-HH
8	107-3150	1	LH Strut ASM
8:1	107-3103-01	1	Strut-Compact
8:2	3219-6	1	Nut-Hex
8:3	1-633029	1	Balljoint-Spherical
9	107-1659	1	RH Strut ASM
9:1	107-3103-01	1	Strut-Compact
9:2	1-633029	1	Balljoint-Spherical
9:3	3219-6	1	Nut-Hex
11	93-2877	4	Bushing
12	328-24	4	Screw-HH
13	3296-51	4	Nut-Lock, NI
14	32128-37	16	Nut-HF
15	107-3100-01	2	Base-Strut
16	3296-23	4	Nut-Lock, NI
17	325-5	4	Screw-HH

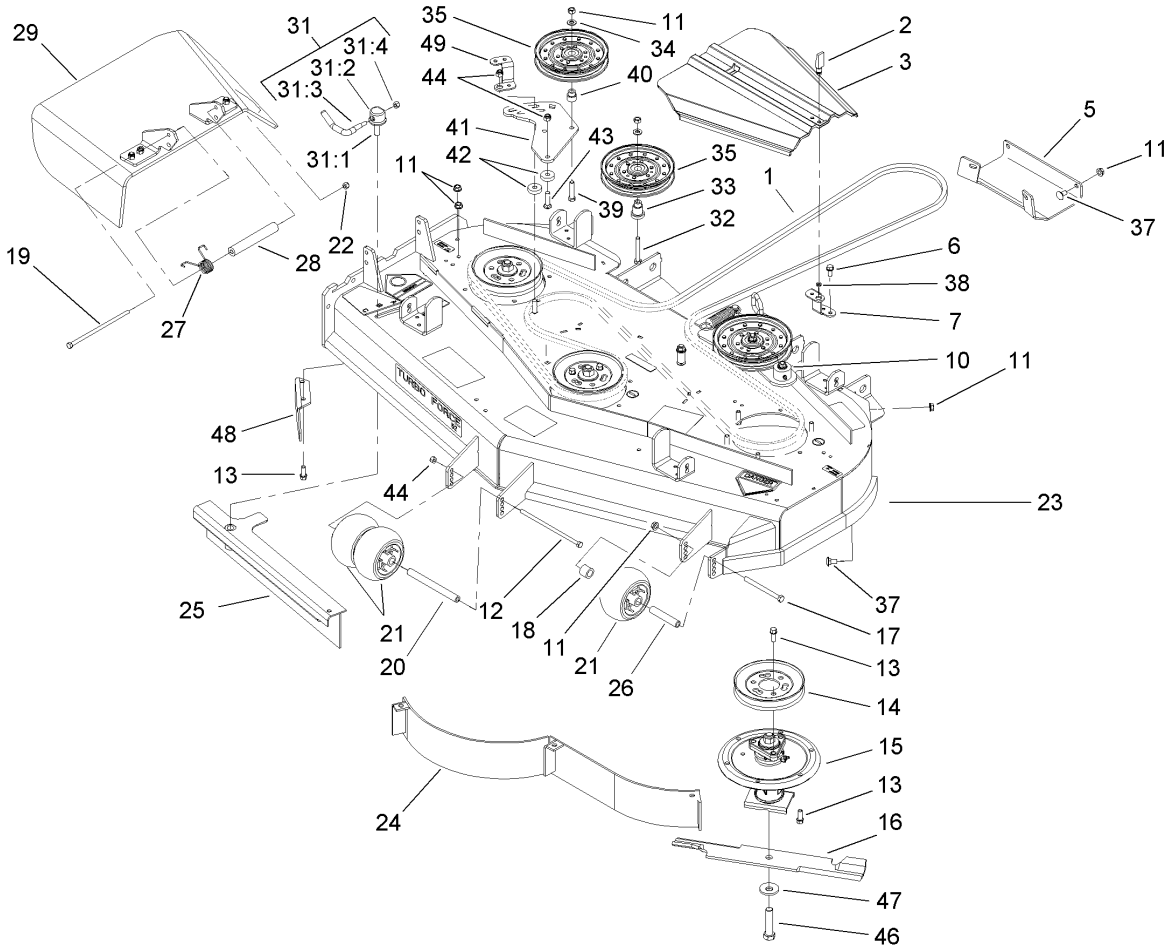

Deck Assembly No. 107-1670


Ref	Part No.	Qty.	Description
1	106-7369	1	Belt-V
2	74-5950	2	Latch-Swell
3	107-8536	2	Cover-Belt
5	106-7358-01	1	Plate-Skid
6	32144-70	3	Screw-HH
7	108-2177-01	3	Bracket-Cover, Tall
❷10		1	Idler ASM
11	3290-357	36	Nut-HHF
12	323-28	1	Screw-HH
13	92-1624	33	Screw
14	107-1683	3	Pulley
15	107-8504	3	Spindle ASM
16	105-7781-03	3	Blade-Hi Flow, 18in
17	323-23	1	Screw-HH
18	98-7913	1	Tube-Spacer
19	322-50	1	Screw-HH
20	98-5967	1	Spacer-Wheel
21	1-603299	3	Roller-Anti Scalp
22	3296-29	1	Nut-Lock, NI
23	107-1669	1	Deck Decal ASM
24	105-7754-01	1	Baffle ASM
25	105-7755-01	1	Baffle ASM
26	98-7912	1	Tube-Spanner
27	107-1663	1	Spring-Torsion

Ref	Part No.	Qty.	Description
28	105-4622	1	Spacer
29	108-4060	1	Rubber Deflector ASM
31	107-1664	1	Lever ASM
31:1	106-3239	1	Screw-Lock
31:2	107-1644	1	Cap-Lock
31:3	106-3241	1	Lever-Lock
31:4	3296-29	1	Nut-Lock, NI
32	323-12	1	Screw-HH
33	106-3214	1	Mount-Pulley
34	3256-24	3	Washer-Flat
35	1-633109	2	Idler-Flat
37	3231-1	10	Screw-CARR
38	99-3058	2	Washer
39	323-9	1	Screw-HH
40	1-603496	1	Bushing-Idler
41	107-8516-01	1	Plate-Idler
42	105-7788	2	Spacer
43	3231-4	2	Screw-CARR
44	3296-39	6	Nut-Lock, NI
46	103-0862	3	Screw-Cap
47	103-0865	3	Washer-Blade Bolt, Heavy
48	106-3216-01	1	Baffle-Discharge
49	108-2178-01	1	Bracket-Cover, Short
❶99	105-7779-03	3	Blade-Recycler

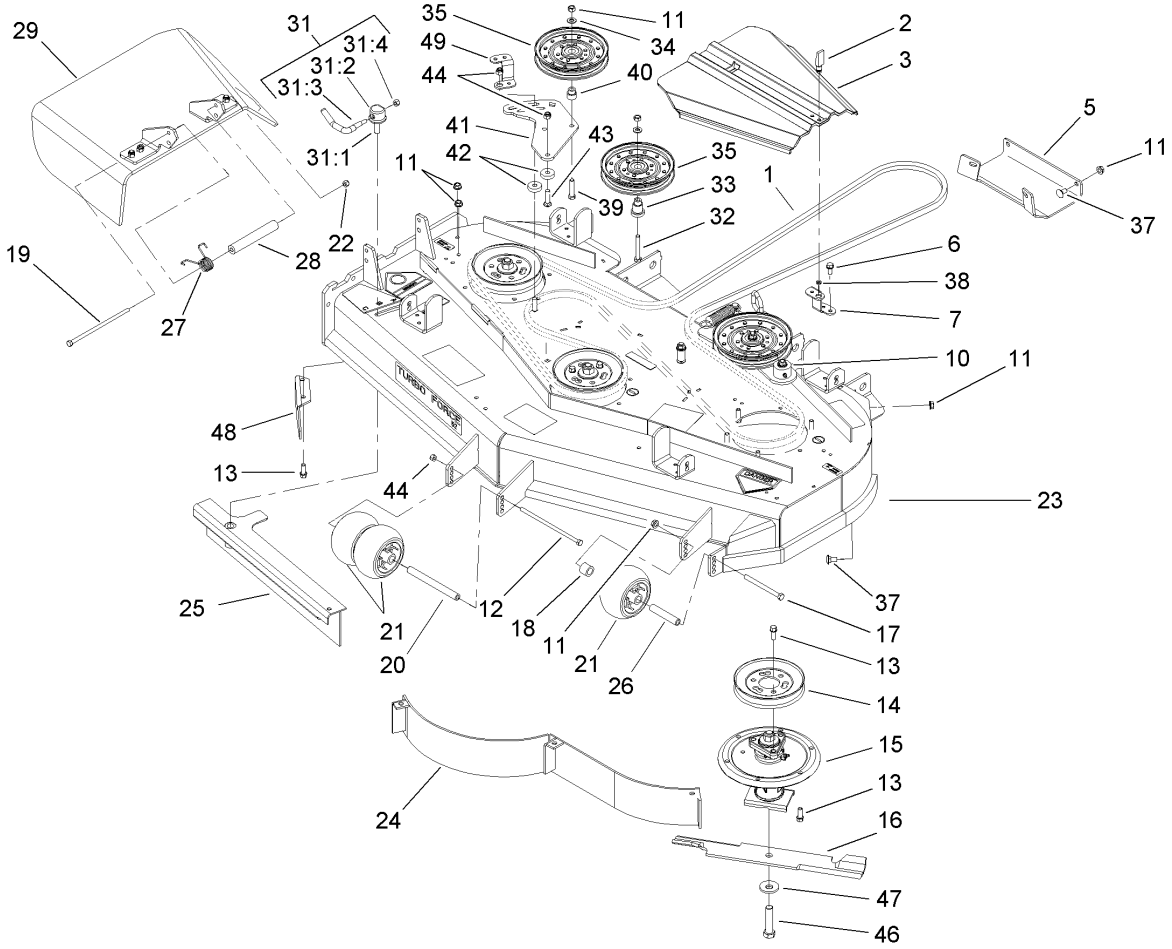


Deck Assembly No. 107-1670 (continued)

Ref	Part No.	Qty.	Description
❶99	105-7794-03	3	Blade-Med Flow
❶99	105-7795-03	3	Blade-Low Flow
❶99	105-7796-03	3	Blade-Atomic

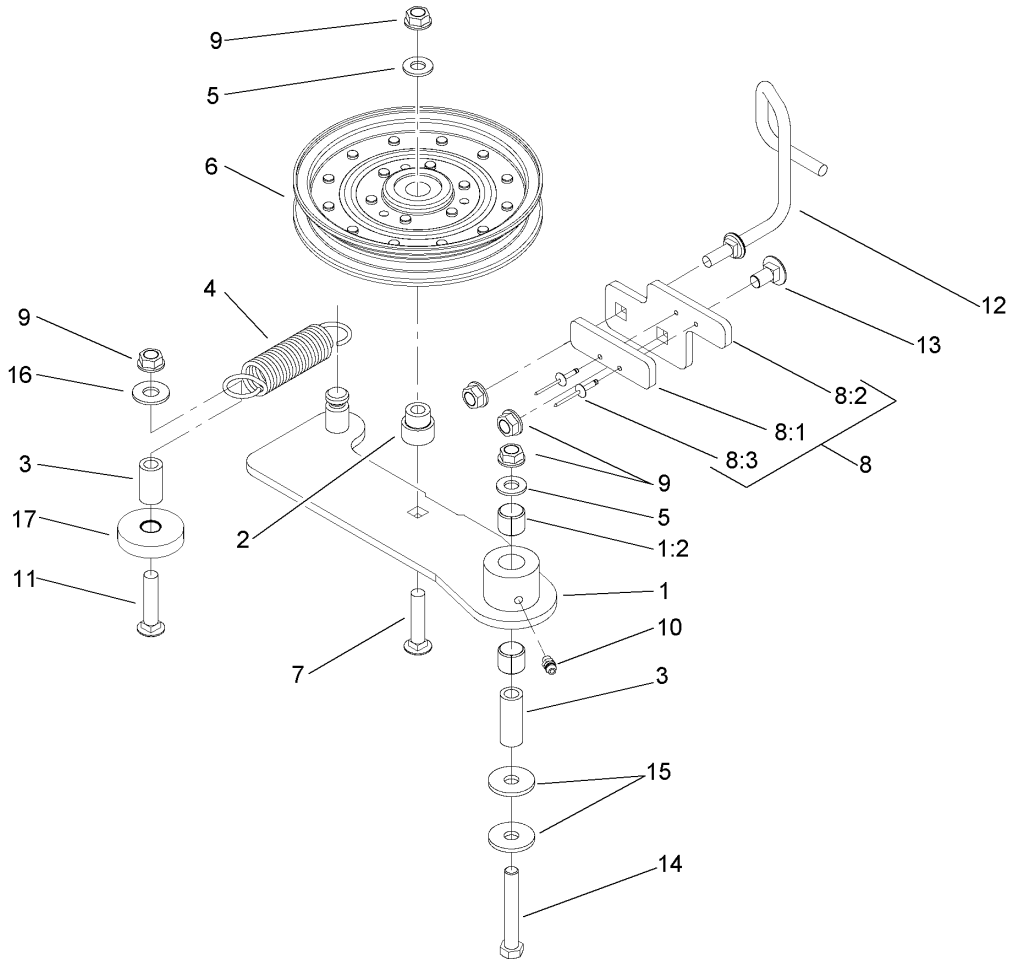


Idler Assembly

Ref	Part No.	Qty.	Description
1	108-4062	1	Idler Arm ASM
1:2	103-4681	2	Sleeve-Bearing
2	1-603496	1	Bushing-Idler
3	1-603044	2	Bushing
4	1-603402	1	Spring-Extension
5	3256-24	2	Washer-Flat
6	1-633109	1	Idler-Flat
7	3231-6	1	Screw-CARR
❷8		1	Stop Pad ASM
8:1	106-3229	1	Pad-Bumber
8:2	107-1697-01	1	Plate-Stop
8:3	3269-24	2	Rivet
9	3290-357	5	Nut-HHF
10	302-5	1	Fitting-Grease
11	3231-31	1	Screw-CARR
12	108-4072	1	Guide-Belt
13	3231-1	1	Screw-CARR
14	323-12	1	Screw-HH
15	2844	2	Washer
16	3256-4	1	Washer-Flat
17	108-2239	1	Stop-Plastic

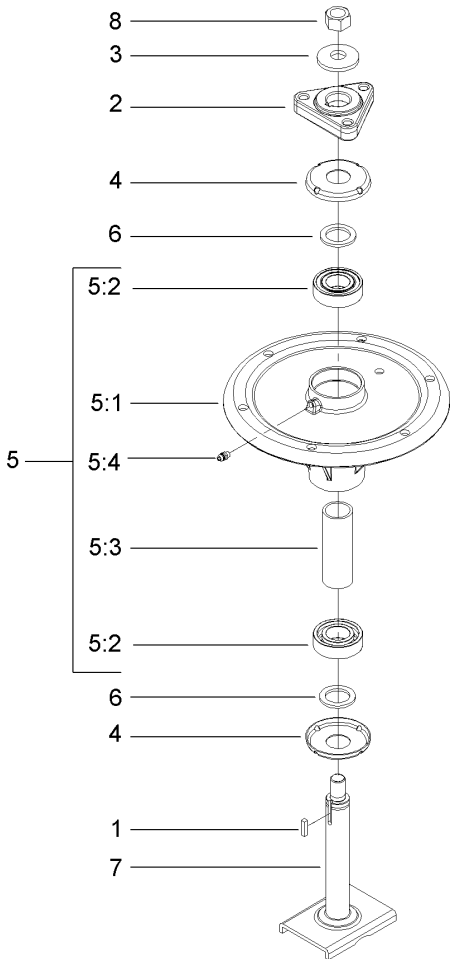


Spindle Assembly No. 107-8504

Ref	Part No.	Qty.	Description
1	10-8040	1	Key-Square
2	106-3277	1	Hub-Pulley
3	103-0865	1	Washer-Blade Bolt, Heavy
4	106-3204	2	Shield-Bearing
❷5		1	Spindle Bearing ASM
5:1	106-3211	1	Housing-Spindle
5:2	113514	2	Bearing-Ball
5:3	107-8502	1	Spacer-Bearing
5:4	302-5	1	Fitting-Grease
6	3-8514	2	Washer-Thrust
7	107-8501	1	Spindle ASM
8	3219-6	1	Nut-Hex

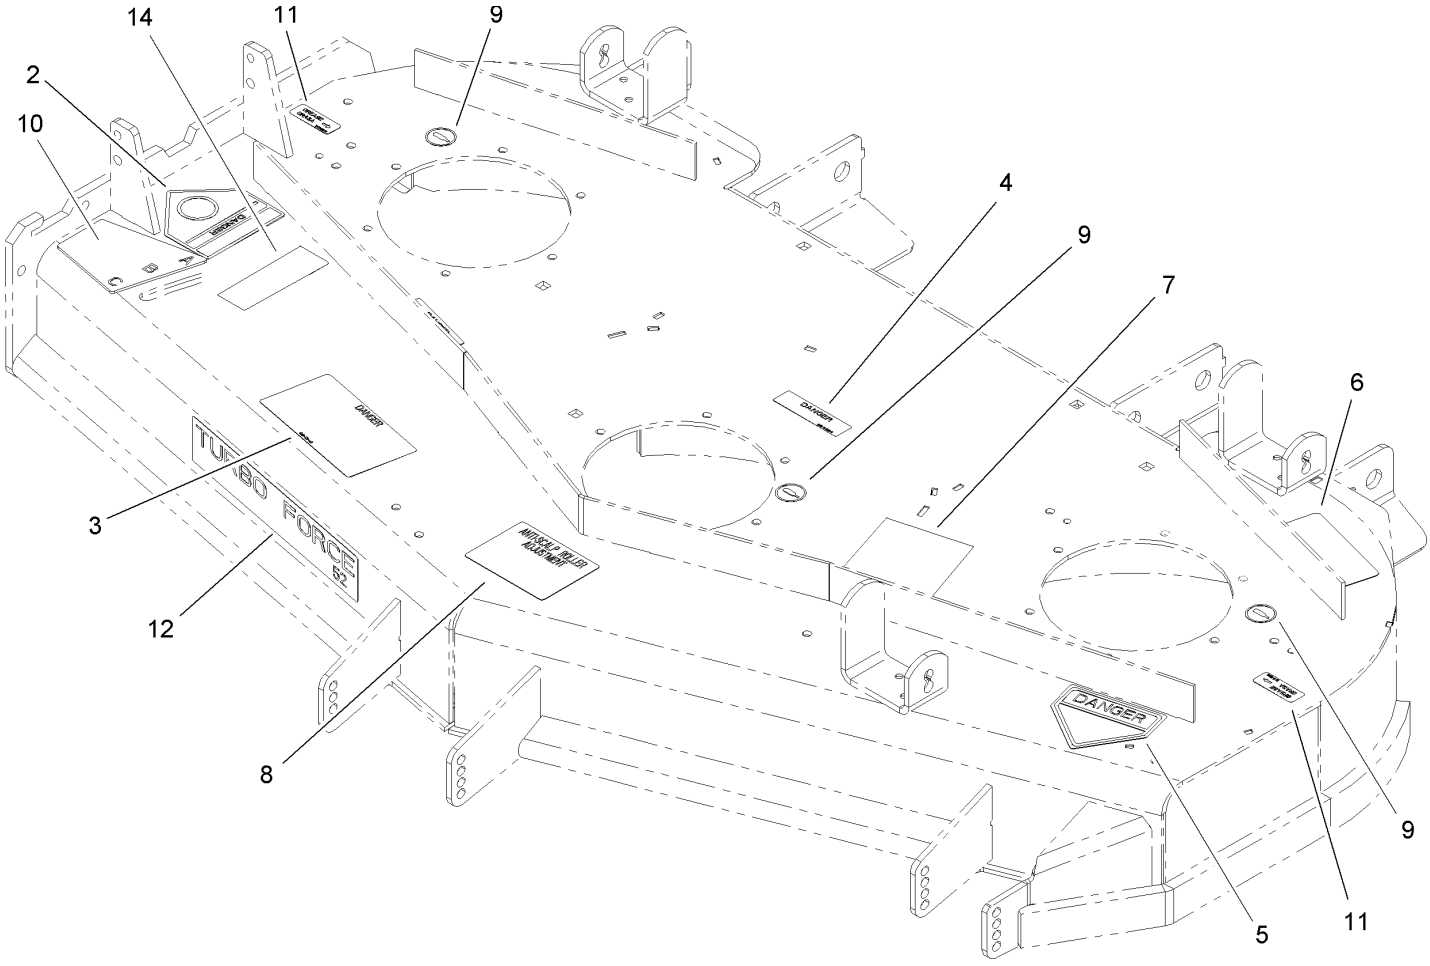


Deck Decal Assembly No. 107-1669

Ref	Part No.	Qty.	Description
2	54-9220	1	Decal-Danger
3	66-1340	1	Decal-Danger
4	98-5954	3	Decal-Missing, Cover
5	1-403005	1	Decal-Danger
6	68-8340	1	Decal-Torque
7	107-1687	1	Decal-Aid, Service
8	105-7798	1	Decal-Anti Scalp
9	58-6520	3	Decal-Grease
10	107-1622	1	Decal-Adjustment, Baffle
11	107-1613	2	Decal-Grease
12	107-1618	1	Decal-Turbo Force
14	104-8569	1	Decal-Warning

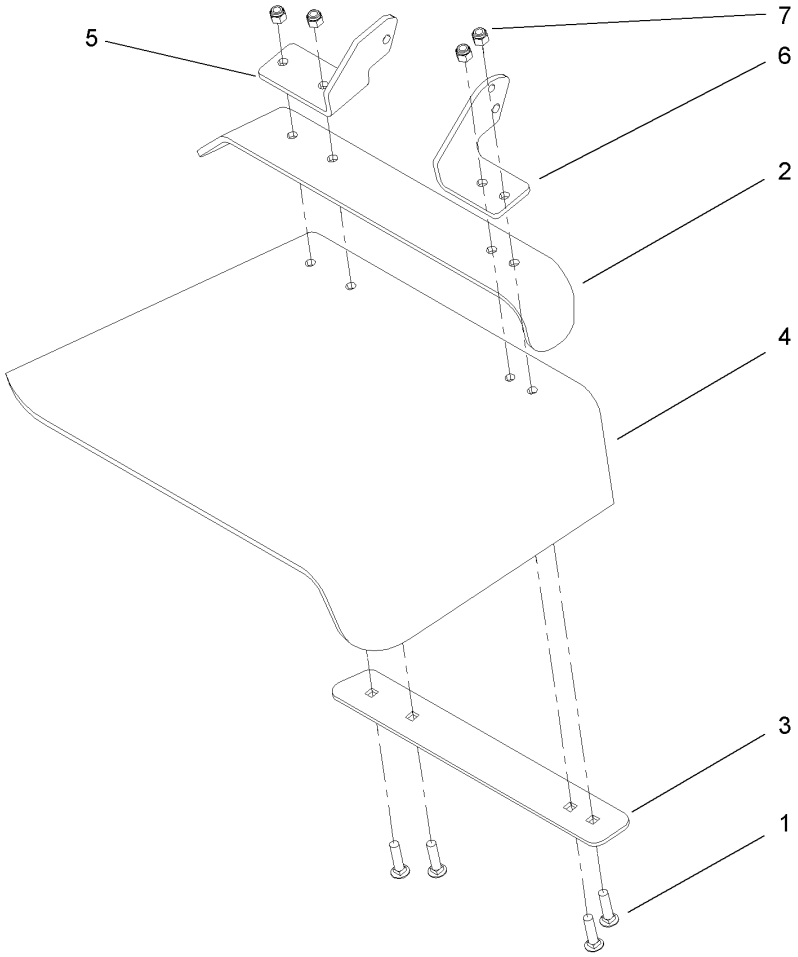

Rubber Deflector Assembly No. 108-4060


Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	107-1617	1	Defelector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	108-4058-01	1	Plate-Hinge, Front
7	3296-39	4	Nut-Lock, NI

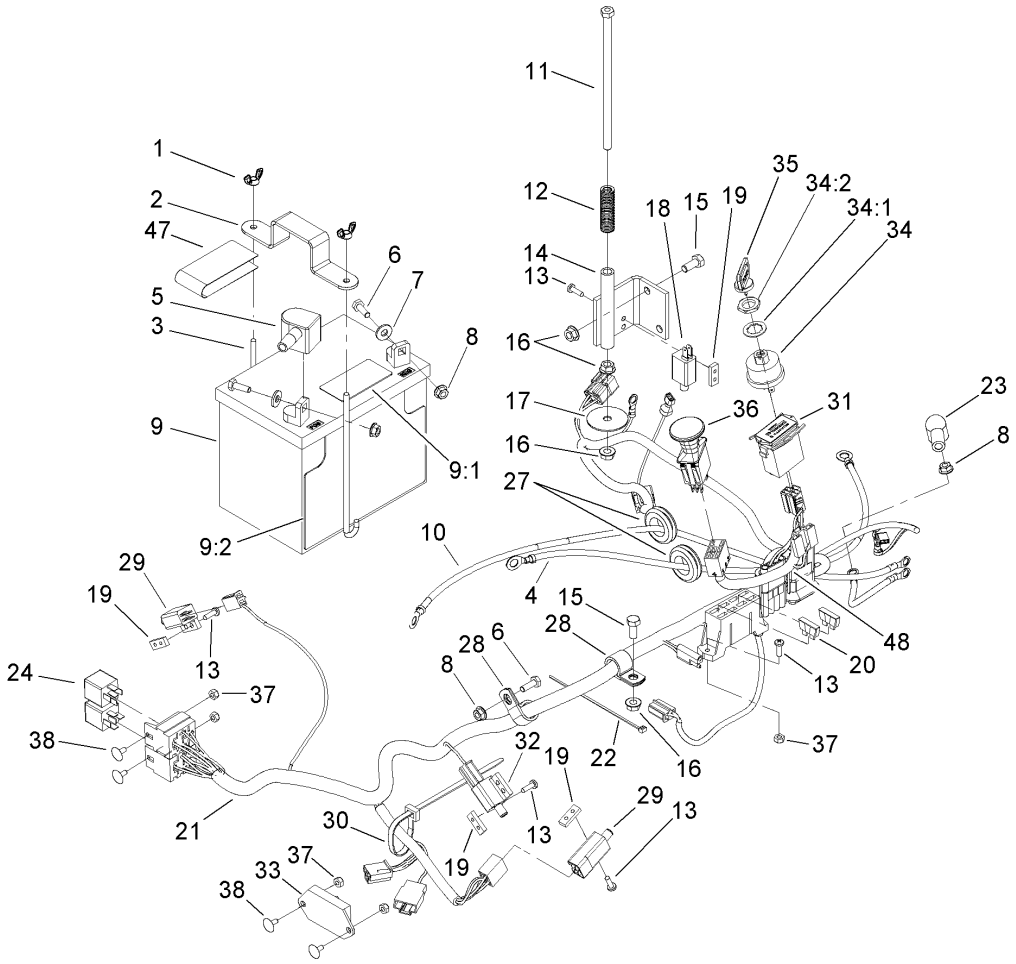

Electrical System Assembly


Ref	Part No.	Qty.	Description
1	1-543792	2	Wingnut
2	1-633652-03	1	Strap-Holddown
3	1-633651	2	Bolt-Holddown
4	103-0705	1	Cable-Ground, Negative
5	1-543391	1	Insulator-Battery
6	321-4	3	Screw-HH
7	3256-2	2	Washer-Flat
8	32128-33	3	Nut-HF
9	105-1692	1	Battery
9:1	104-4163	1	Decal-Battery
9:2	104-4164	1	Decal-Battery
10	1-523281	1	Wire-Starter
11	1-800282	1	Screw-HH
12	1-523415	1	Spring-Switch, Seat
13	1-803075	10	Screw-Head, Truss
14	1-652072-03	1	Bracket-Switch, Seat
15	322-3	3	Screw-HH
16	32128-20	5	Nut-HF
17	1-653036	1	Washer
18	1-513152	1	Switch-Closed, Normally
19	1-633181	4	Plate-Tapped
20	1-816001	2	Fuse-Blade Type, 20 Amp
21	107-8052	1	Harness-Electrical
22	1-303287	2	Tie-Plastic

Ref	Part No.	Qty.	Description
23	1-543393	1	Insulator-Solenoid
24	1-643275	2	Relay
27	1-543286	3	Grommet
28	1-633396	2	Clip-Loom
29	1-513051	2	Switch-Open, Normally
30	1-303335	4	Tie-Plastic
31	1-513374	1	Meter-Hour
32	1-633111	1	Switch
33	100-6186	1	Module-Delay, Seat
34	88-9830	1	Key Switch ASM
34:1	3254-5	1	Washer-Tooth
34:2	218-461	1	Nut-HH
35	63-8360	2	Key-Ignition
36	1-633673	1	Switch-Delta
37	3296-2	6	Nut-Lock
38	1-807513	4	Bolt-CARR
47	107-9309	1	Decal-Instructions, Charging
48	107-8054	1	Harness-Electrical, Control Panel

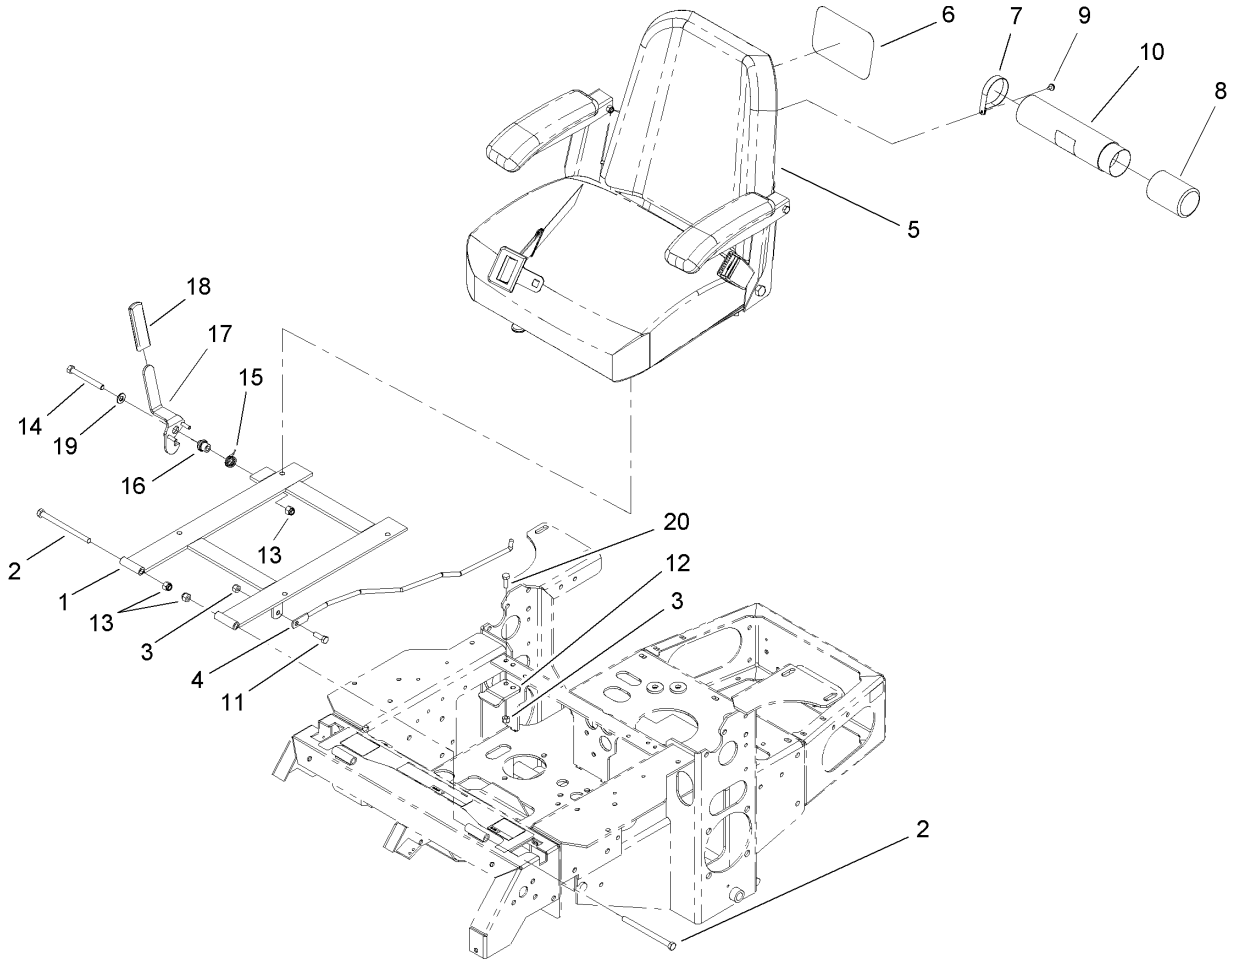


Seat and Bracket Assembly

Ref	Part No.	Qty.	Description
1	107-3052-03	1	Seat Support Frame ASM
2	323-39	2	Screw-HH
3	3296-29	3	Nut-Lock, NI
4	103-1731	1	Rod-Retainer, Seat
5	107-1867	1	Seat ASM
6	99-4693	1	Decal
7	2412-120	2	R-Clamp
8	104-7048	1	Cap-Housing
9	32104-76	2	Screw
10	104-7050	1	Housing-Manual
11	322-5	1	Screw-HH
12	103-5961	1	Catch-Latch, Seat
13	3296-39	3	Nut-Lock, NI
14	323-20	1	Screw-HH
15	107-0076	1	Spring-Torsion
16	107-0075	1	Bushing-Latch, Seat
17	107-3083	1	Latch ASM
18	62-9130	1	Grip-Handle
19	3256-24	1	Washer-Flat
20	322-4	2	Screw-HH

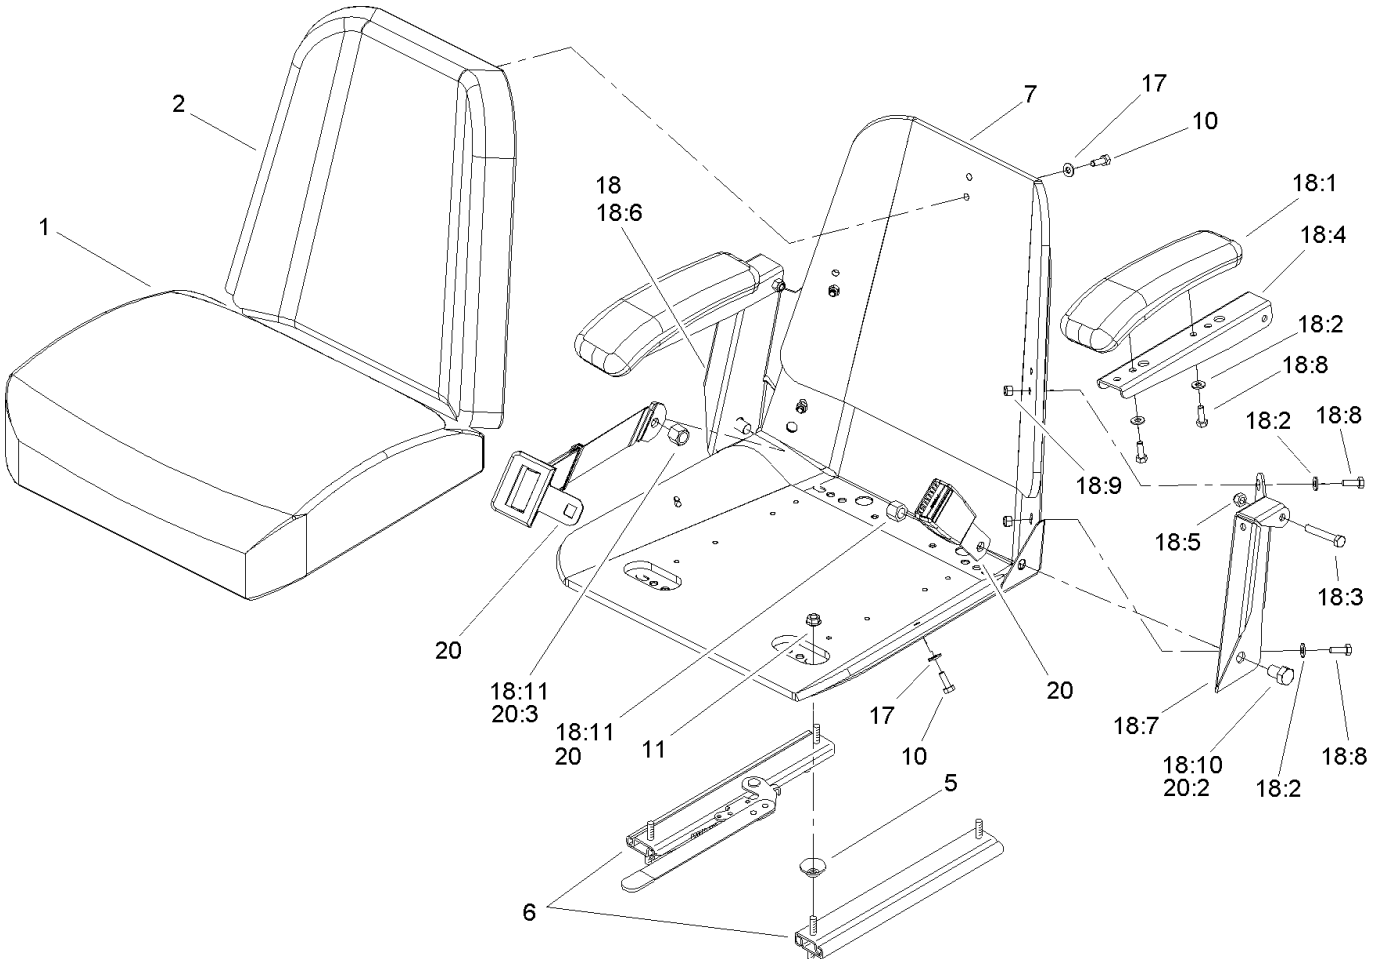


Seat Assembly No. 107-1867

Ref	Part No.	Qty.	Description
1	103-0290	1	Cushion-Seat, Bottom
2	104-7754	1	Cushion-Seat, Back
5	1-543401	4	Spacer-Track
6	1-643255	1	Track-Seat
7	1-633859	1	Frame-Seat
10	321-30	11	Screw-HH
11	32128-20	4	Nut-HF
17	3256-22	11	Washer-Flat
18	105-3620	1	Armrest Kit
18:1	1-633710	2	Cushion-Armrest
18:2	3256-22	4	Washer-Flat
18:3	322-10	2	Screw-HH
18:4	105-3623	2	Channel-Armrest
18:5	32153-3	2	Nut-Lock, Side
18:6	105-3621	1	Bracket-Armrest, RH
18:7	105-3622	1	Bracket-Armrest, LH
18:8	321-30	6	Screw-HH
18:9	3296-42	4	Nut-Lock, NI
18:10	325-2	2	Screw-HH
18:11	3296-23	2	Nut-Lock, NI
20	103-4469	1	Seatbelt Kit
20:2	3212-4	2	Screw-HH
20:3	3296-38	2	Nut-Lock NI

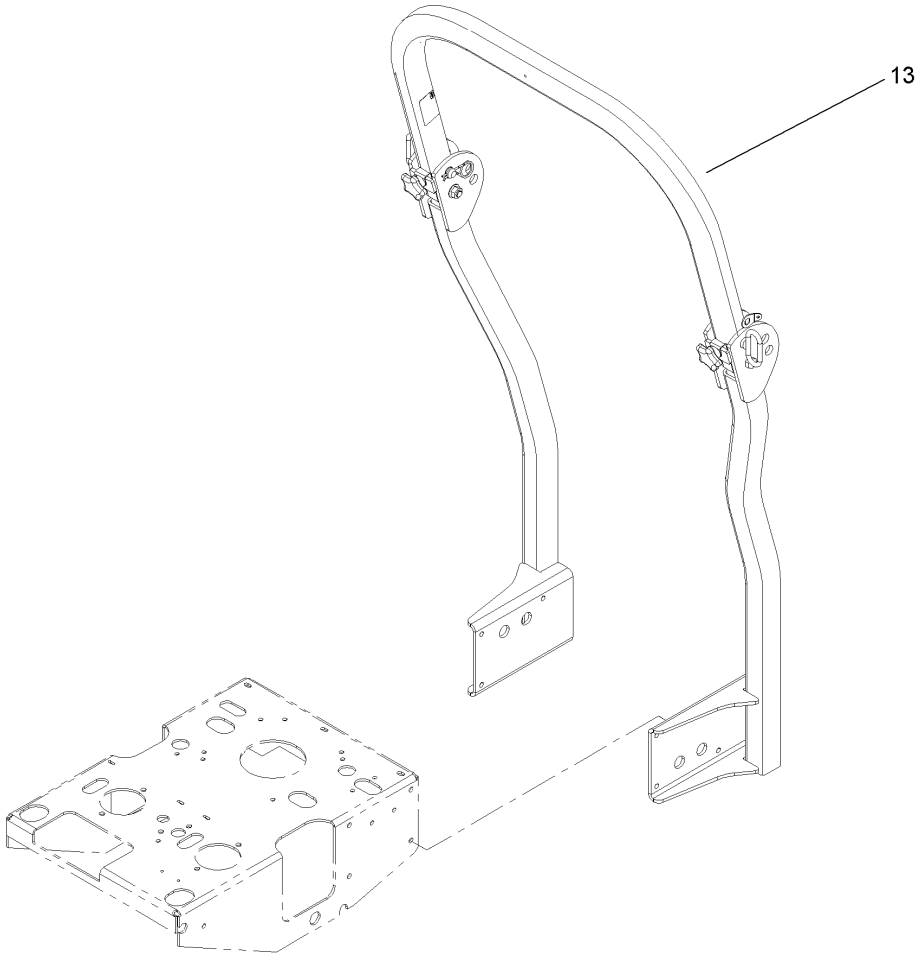

Roll-Over-Protection-System Assembly


Ref	Part No.	Qty.	Description
13	107-8093	1	Rops ASM

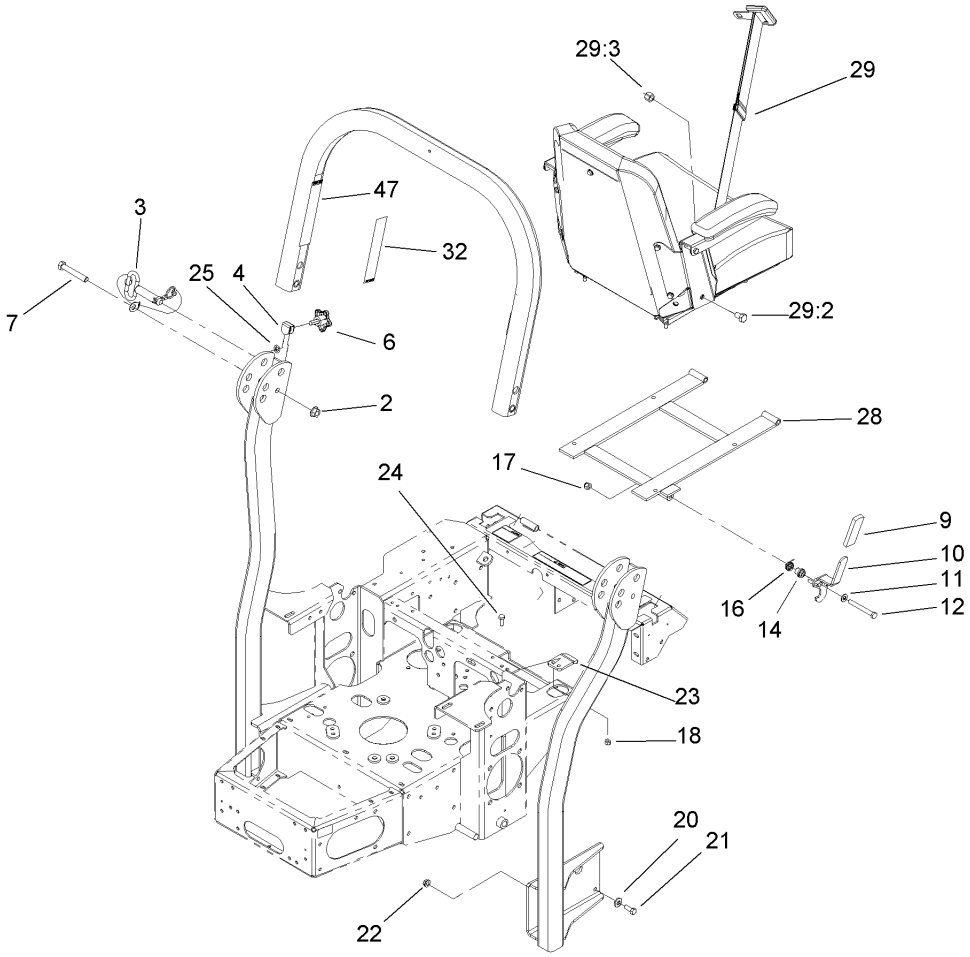

Roll-Over-Protection-System Assembly No. 107-8093


Ref	Part No.	Qty.	Description
2	32128-23	2	Nut-HF
3	103-4553	2	Rops Fold Pin ASM
4	107-3124	2	Clip
6	106-0887	2	Knob
7	325-13	2	Screw-HH
9	62-9130	1	Grip-Handle
10	107-3083	1	Latch ASM
11	3256-24	1	Washer-Flat
12	323-20	1	Screw-HH
14	107-0075	1	Bushing-Latch, Seat
16	107-0076	1	Spring-Torsion
17	3296-39	1	Nut-Lock, NI
18	3296-29	2	Nut-Lock, NI
20	98-5975	8	Washer-Belleville
21	323-6	8	Screw-HH
22	3290-357	8	Nut-HHF
23	107-3059	1	Catch-Latch, Seat
24	322-4	2	Screw-HH
25	107-3154	2	Nut-Push
28	107-3052-03	1	Seat Support Frame ASM
29	103-4469	1	Seatbelt Kit
29:2	3212-4	2	Screw-HH
29:3	3296-38	2	Nut-Lock NI
32	107-3069	1	Decal-Warning, Folding Rops

Ref	Part No.	Qty.	Description
47	107-2102	1	Decal-Warning, Folding Rops

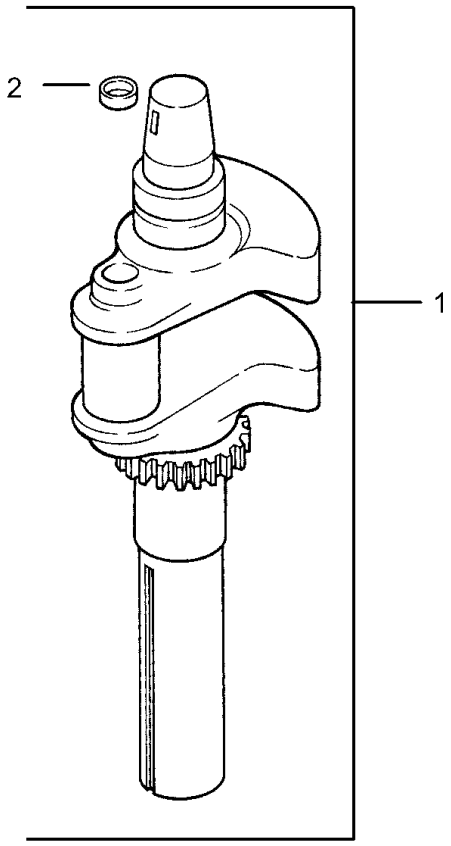

Crankshaft Assembly
Kohler CV20S PRO-65593


Ref	Part No.	Qty.	Description
❸1	24 014 32-S	1	Crankshaft (Includes 2)
❸2	52 139 09-S	1	Plug-Cup

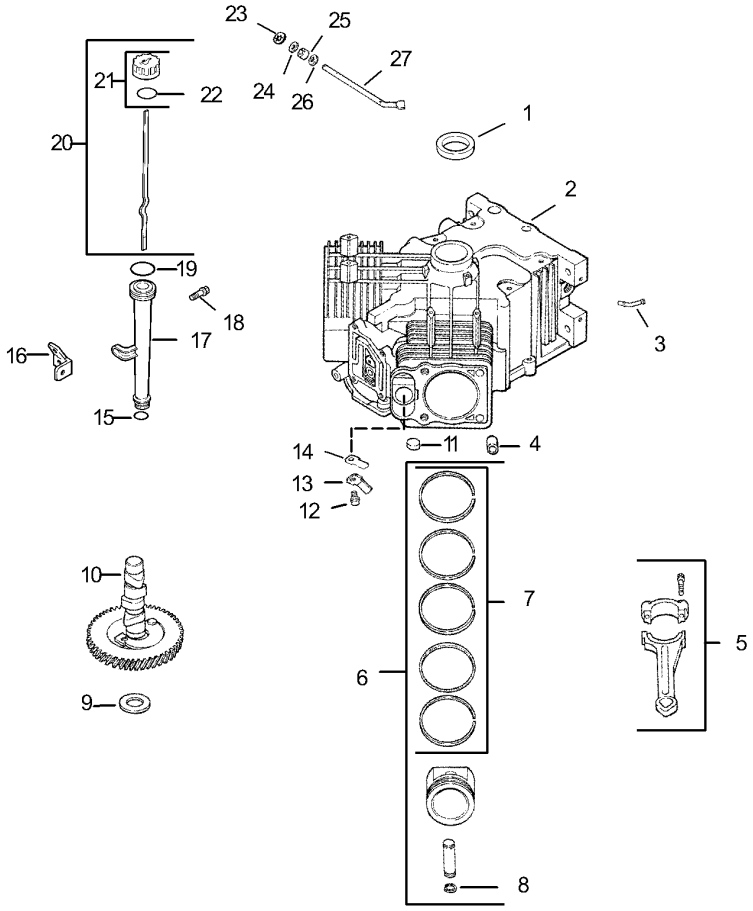

Crankcase Assembly
Kohler CV20S PRO-65593


Ref	Part No.	Qty.	Description
❸1	24 032 01-S	1	Seal-Oil, Front
❸2	N/A	1	Short Block
❸3	24 294 13-S	1	Fitting
❸4	24 380 13-S	6	Pin-Locating
❸5	24 067 13-S	2	Rod-Connecting (Std.)
❸	24 067 14-S	2	Rod-Connecting (.25)
❸6	24 874 17-S	2	Piston W/ring Set (Std.)(Includes 7, 8)
❸	24 874 14-S	2	Piston W/ring (.08)
❸	24 874 18-S	2	Set-Piston W/ring (.25)
❸	24 874 19-S	2	Set-Piston W/ring (.50)
❸7	24 108 11-S	2	Ring Set (Std.)
❸	24 108 12-S	2	Ring Set (.25)
❸	24 108 13-S	2	Set-Ring (.50)
❸8	24 018 01-S	4	Retainer-Piston Pin
❸9	12 422 09-S	1	Shim-Camshaft, Red
❸	12 422 13-S	1	Shim-Camshaft, Black
❸	12 422 07-S	1	Shim-Camshaft, White
❸	12 422 08-S	1	Shim-Camshaft, Blue
❸	12 422 10-S	1	Shim-Camshaft, Yellow
❸	12 422 11-S	1	Shim-Camshaft, Green
❸	12 422 12-S	1	Shim-Camshaft, Gray
❸10	24 012 10-S	1	Camshaft (Includes 11, 12)
❸11	52 139 09-S	1	Plug-Cup

Ref	Part No.	Qty.	Description
❸12	M-545010-S	2	Screw-Hex Flange, M5x0.8x10
❸13	24 018 04-S	2	Retainer-Reed
❸14	24 402 05-S	2	Reed, Breather
❸15	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)
❸16	24 126 19-S	1	Bracket-Tube, Oil Fill
❸17	12 123 04-S	1	Tube-Fill, Oil
❸18	M-545016-S	1	Screw-Hex Flange, M5x0.8x16
❸19	12 153 02-S	1	O-Ring (Upper Oil Fill Tube)
❸20	24 038 04-S	1	Dipstick Assembly (Includes 21, 22)
❸21	25 755 13-S	1	Kit, Oil Fill Cap (Includes 22)
❸22	12 153 03-S	1	O-Ring (Oil Fill Cap)
❸23	24 018 09-S	1	Retainer-Ring
❸24	M-931010-S	1	Washer-Plain (9 Mm)
❸25	28 032 09-S	1	Seal-Governor Cross Shaft
❸26	24 468 15-S	1	Washer-Flat (1/4)
❸27	24 144 38-S	1	Shaft-Cross, Governor

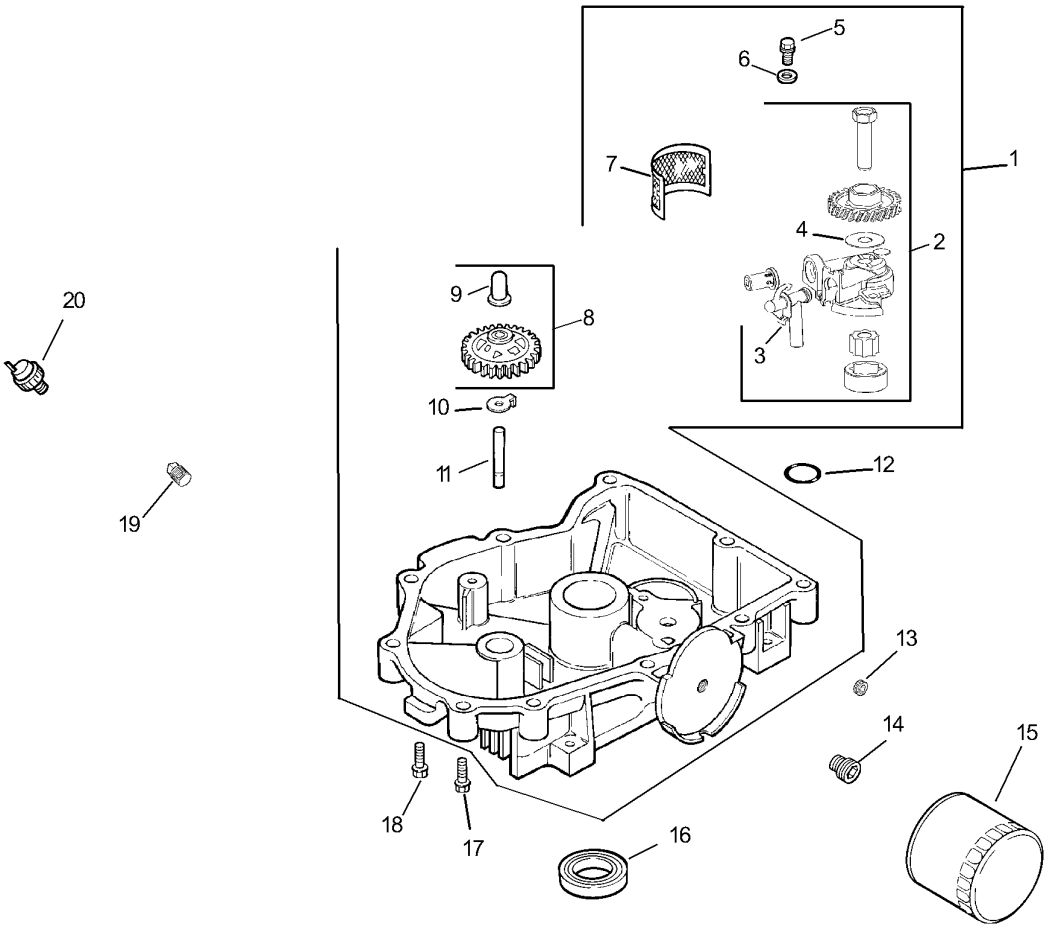

Oil Pan/Lubrication Assembly
Kohler CV20S PRO-65593


Ref	Part No.	Qty.	Description
❸1	24 199 07-S	1	Pan, Oil Assembly (Includes 2-10)
❸2	24 393 37-S	1	Oil Pump ASM
❸2	24 393 37-S	1	Pump Assembly, Oil (Includes 3, 4) For Sn 3229000001 And Later
❸3	24 381 11-S	1	Tube, Oil Pickup
❸4	24 153 01-S	1	O-Ring, Oil Pick-Up
❸5	M-645025-S	2	Screw-Hex Flange, M6x1.0x25
❸6	M-631005-S	2	Washer-Plain (6 Mm)
❸7	24 162 26-S	1	Screen, Oil
❸8	24 043 12-S	1	Kit, Governor Gear W/pin (Includes 9)
❸9	12 380 01-S	1	Pin-Governor Regulating
❸10	52 448 02-S	1	Tab-Locking
❸11	12 144 02-S	1	Shaft-Governor Gear
❸12	24 153 08-S	1	O-Ring
❸13	25 139 62-S	1	Plug, Pipe 3/8in Hex Ctsk
❸14	24 136 01-S	1	Nipple-Oil Filter
❸15	52 050 02-S	1	Filter-Oil
❸16	52 032 08-S	1	Seal-Oil (Pto End)
❸17	24 086 17-S	1	Screw-Hex Flange, M8x1.25x45
❸18	24 086 16-S	9	Screw-Hex Flange, M8x1.25x45
❸19	25 139 57-S	1	Plug-Sq. Hd. 3/8 N.p.t.f.
❸20	24 099 03-S	1	Switch-Pressure, Oil

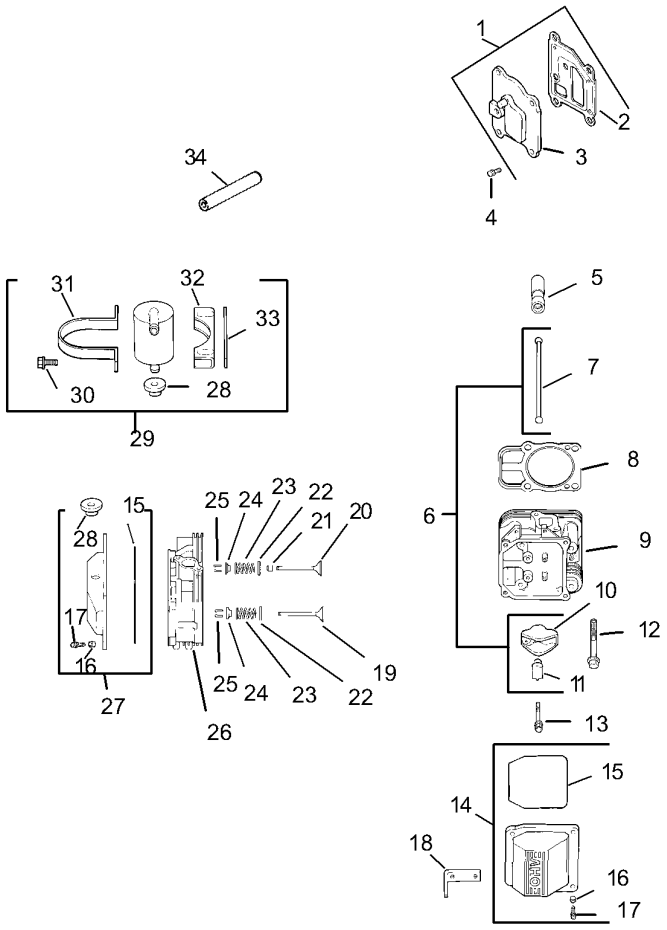

Head/Valve/Breather Assembly
Kohler CV20S PRO-65593

Ref	Part No.	Qty.	Description
❸1	24 033 03-S	1	Kit, Breather Cover W/gasket (Includes 2, 3)
❸2	24 041 23-S	1	Gasket-Breather
❸3	24 096 87-S	1	Cover, Breather
❸4	M-645020-S	4	Screw-Hex Flange, M6x1.0x20
❸5	25 351 01-S	4	Lifter-Valve
❸6	24 755 66-S	1	Kit, Valve Train (Includes 7, 10, 11)
❸7	24 411 05-S	4	Rod-Push
❸8	24 041 08-S	2	Gasket-Cylinder Head
❸9	24 318 12-S	1	Head Assembly, #2 Cylinder
❸10	25 186 01-S	4	Arm-Rocker
❸11	24 599 01-S	4	Pivot-Rocker Arm
❸12	12 086 16-S	8	Screw-Hf, Reduced
❸13	M-640034-S	4	Screw-Hf, M6x1.0x34
❸14	24 755 75-S	1	Kit, Valve Cover Plain (Includes 15-17)
❸15	24 153 16-S	1	O-Ring
❸16	24 112 08-S	4	Spacer
❸17	M-651030-S	4	Screw-Hex Flange, M6x1.0x30
❸18	24 445 01-S	1	Strap-Lifting
❸19	24 016 01-S	2	Valve-Exhaust (Std.)
❸	24 016 02-S	2	Valve-Exhaust (.25)
❸20	24 017 01-S	2	Valve-Intake (Std.)
❸	24 017 02-S	2	Valve-Intake (.25)


Ref	Part No.	Qty.	Description
❸21	24 032 05-S	2	Seal-Valve Stem
❸22	235011-S	4	Retainer-Spring
❸23	24 089 02-S	4	Spring-Valve
❸24	12 173 01-S	4	Cap-Spring, Valve
❸25	12 755 03-S	4	Retainer Kit
❸26	24 318 11-S	1	Head Assembly, #1 Cylinder
❸27	24 755 76-S	1	Kit, Valve Cover/breather (Includes 15-17, 28)
❸28	25 313 03-S	1	Grommet, Rubber
❸29	24 755 57-S	1	Kit, Breather Separator (Includes 28, 30-33)
❸30	M-545016-S	2	Screw-Hex Flange, M5x0.8x16
❸31	24 445 02-S	1	Strap, Breather
❸32	24 126 44-S	1	Bracket, Breather Separator
❸33	24 112 12-S	1	Spacer
❸34	24 326 54-S	1	Hose, Breather

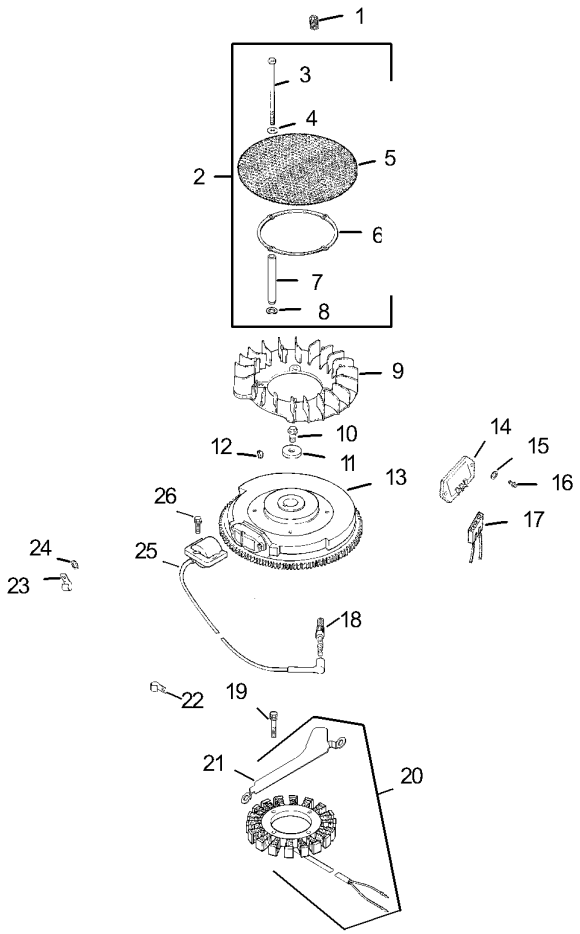

Ignition/Electrical Assembly
Kohler CV20S PRO-65593

Ref	Part No.	Qty.	Description
❸1	25 086 43-S	1	Screw-Set
❸2	24 755 79-S	1	Kit, Chopper Screen (Includes 3-8,and 41 037 10-S)
❸3	M-603100-S	4	Screw-Hex. Hd., M6x1.0x100
❸4	X-25-53-S	4	Washer-Plain, 1/4in
❸5	24 162 25-S	1	Screen-Grass
❸6	24 141 06-S	1	Ring-Support
❸7	24 112 14-S	4	Spacer
❸8	24 468 11-S	1	Washer-Spring
❸9	24 157 08-S	1	Fan
❸10	12 086 14-S	1	Screw-Hex Flange, M10x1.5x46
❸11	12 468 03-S	1	Washer-Plain (3/8)
❸12	X-42-15-S	1	Key
❸13	24 025 01-S	1	Flywheel
❸14	25 403 03-S	1	Rectifier-Regulator, 15 Amp
❸15	X-25-92-S	2	Washer-Plain (3/16)
❸16	24 086 18-S	2	Screw-Phillips Head, 11-16x7/8
❸17	236602-S	1	Connector (3 Contact)
❸18	12 132 06-S	2	Spark Plug
❸19	M-548025-S	2	Screw-Hex. Cap, M5x0.8x25
❸20	54 755 09-S	1	Kit, 15 Amp Stator (Includes 21)
❸21	24 126 71-S	1	Bracket-Wire, Stator
❸22	235173-S	1	Clip-Cable
❸23	48 154 02-S	1	Clip-Cable


Ref	Part No.	Qty.	Description
❸24	X-25-63-S	1	Washer-Plain (1/4)
❸25	24 584 25-S	2	Kit, Ignition Module (Includes 5)
❸26	M-561025-S	4	Screw-Hsh, M5x0.8x25
❶❸	X-22-11-S	1	Washer-Lock, 1/4in
❶❸	24 176 109-S	1	Harness, Wiring
❶❸	24 518 12-S	1	Lead-Black (5in, 12 Gauge, Insulated Grip Barrel Eyelet Terminals)
❶❸	24 113 18-S	1	Decal-Screen, Grass
❶❸	25 454 03-S	3	Tie-Cable

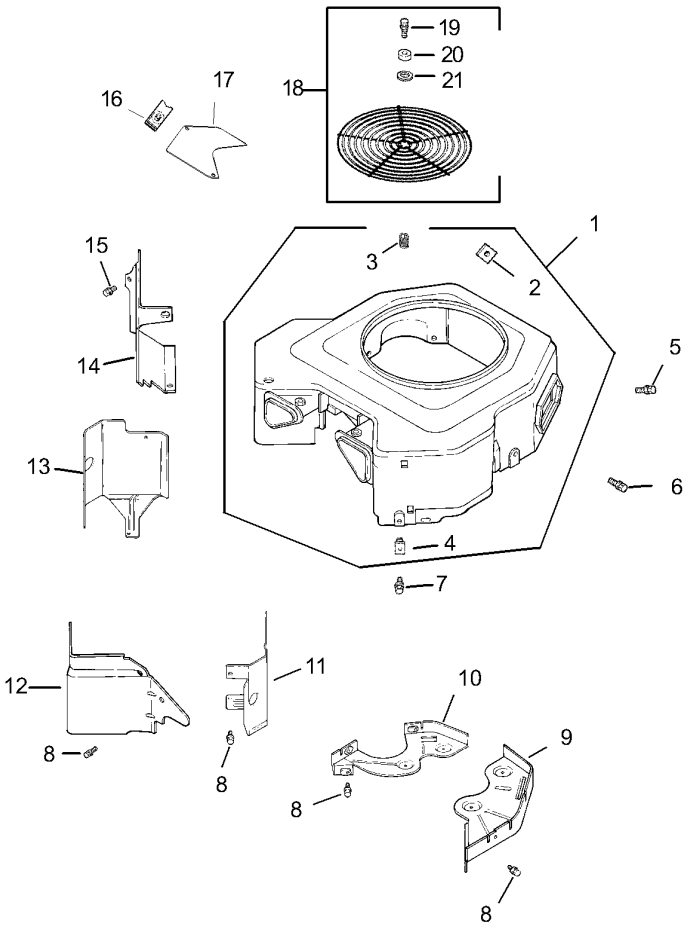

Blower Assembly
Kohler CV20S PRO-65593


Ref	Part No.	Qty.	Description
❸1	24 027 119-S	1	Housing, Blower (Includes 2-4 & 24 332 01-S)
❸2	24 100 01-S	2	Nut-Plastic
❸3	25 086 43-S	1	Screw-Set
❸4	24 100 02-S	2	Nut-Plastic
❸5	M-551016-S	1	Screw-Hex Flange, M5x0.8x16
❸6	M-545016-S	3	Screw-Hex Flange, M5x0.8x16
❸7	M-545020-S	4	Screw-Hex Flange, M5x0.8x20
❸8	M-645016-S	10	Screw-Hex Flange, M6x1.0x16
❸9	24 146 16-S	1	Plate-Backing, # 2 Side
❸10	24 146 20-S	1	Plate-Backing, # 1 Side
❸11	24 063 20-S	1	Baffle-Cylinder Barrel, # 2 Side
❸12	24 063 14-S	1	Baffle, Valley-#2 Side
❸13	24 063 58-S	1	Baffle-Cylinder Barrel, # 1 Side
❸14	24 063 60-S	1	Baffle, Valley-No.1 Side
❸15	M-545010-S	2	Screw-Hex Flange, M5x0.8x10
❸16	24 096 63-S	2	Panel, Access
❸17	25 154 02-S	4	Clip
❸18	24 755 94-S	1	Kit, Guard (Includes 19-21 &24 332 01-S)
❸19	24 086 39-S	3	Screw, Pan Hd.
❸20	24 112 09-S	3	Spacer
❸21	24 468 10-S	3	Washer, Plain 1/4
❶❸	24 332 01-S	3	Insert-Threaded

Ref	Part No.	Qty.	Description
❶❸	24 113 95-S	1	Decal-Hp

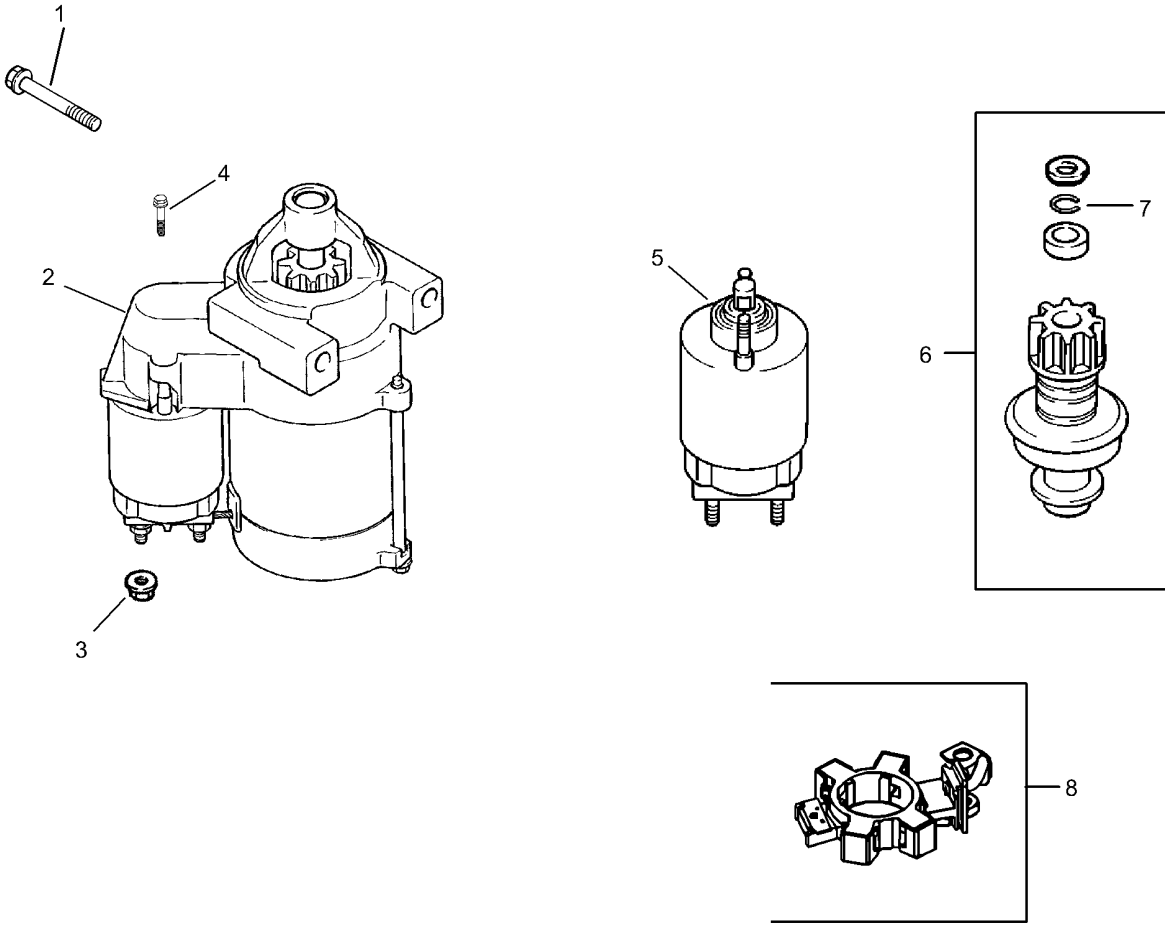

Starter Assembly
Kohler CV20S PRO-65593


Ref	Part No.	Qty.	Description
❸1	M-839080-S	2	Screw-Hex Flange, M8x1.25x80
❸2	25 098 09-S	1	Starter, Solenoid Shift (Includes 3-8)
❸3	M-841080-S	1	Nut-Hex Flange, M8x1.25
❸4	25 086 113-S	3	Screw-External Torx Head
❸5	25 435 05-S	1	Kit, Solenoid (Includes 4)
❸6	25 755 33-S	1	Kit, Drive (Includes 7)
❸7	25 141 05-S	1	Ring
❸8	25 221 01-S	1	Brush Kit

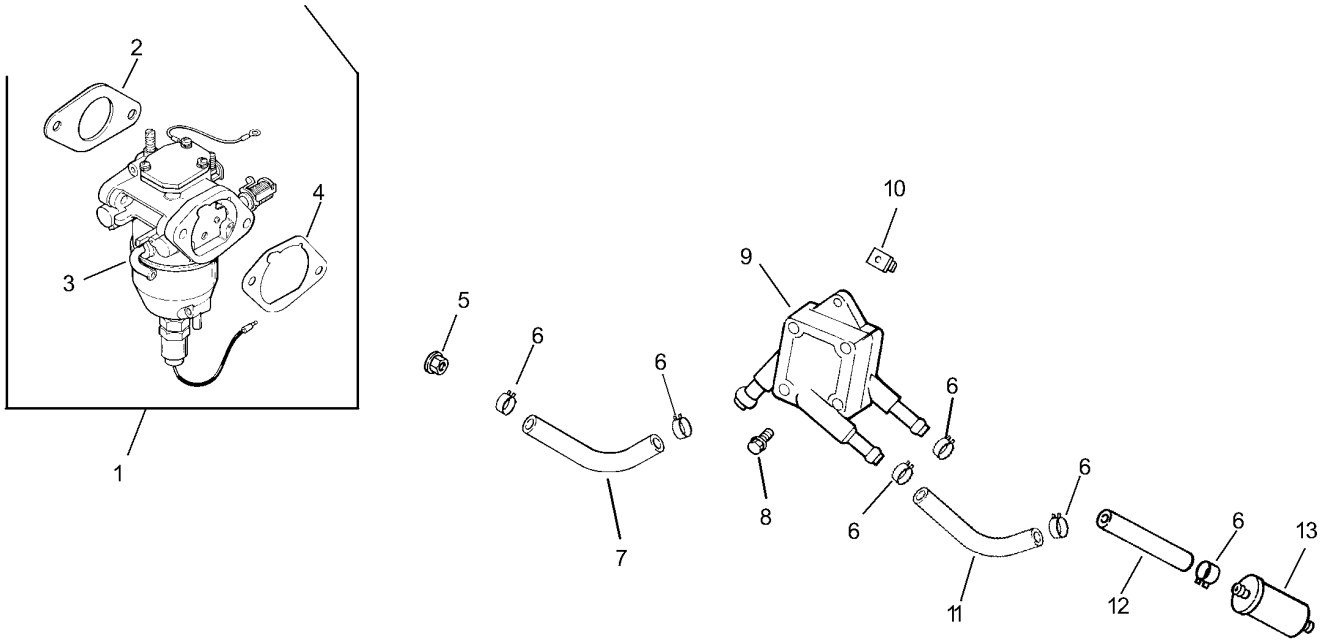

Fuel System Assembly
Kohler CV20S PRO-65593

Ref	Part No.	Qty.	Description
❸1	24 853 99-S	1	Kit, Carburetor W/gaskets (Includes 2-4)
❸2	24 041 15-S	1	Gasket, Carburetor
❸3	24 053 99	1	Carburetor Assembly (For Information Only Not Available Separately)(Service With Kits 24 234 02-S, 24 757 18-S, 24 757 19-S, 24 757 20-S, 24 757 21-S And 24 757 22-S)
❸4	24 041 14-S	1	Gasket, Air Cleaner
❸5	M-641060-S	2	Nut-Hex Flange, M6x1.0
❸6	25 237 14-S	6	Clamp-Breather
❸7	25 353 04-S	1	Line, Fuel 6-1/4
❸8	24 086 12-S	2	Screw-Hex Cap, M6x1.7x18
❸9	24 393 16-S	1	Pump-Fuel
❸10	24 100 01-S	2	Nut-Plastic
❸11	24 353 03-S	1	Line, Fuel 10-1/2
❸12	52 353 22-S	1	Line, Fuel 12"
❸13	24 050 02-S	1	Filter-Fuel
❶❸	24 234 02-S	1	Bowl, Float
❶❸	24 431 01-S	1	Sleeve-Insulating
❶❸	24 757 18-S	1	Kit, Overhaul W/gaskets
❶❸	24 757 19-S	1	Kit, Choke Repair W/gaskets
❶❸	24 757 20-S	1	Kit, Gasket W/gaskets
❶❸	24 757 21-S	1	Kit, Accelerator Pump W/gaskets


Ref	Part No.	Qty.	Description
❶❸	24 757 22-S	1	Kit, Solenoid Replacement W/gaskets

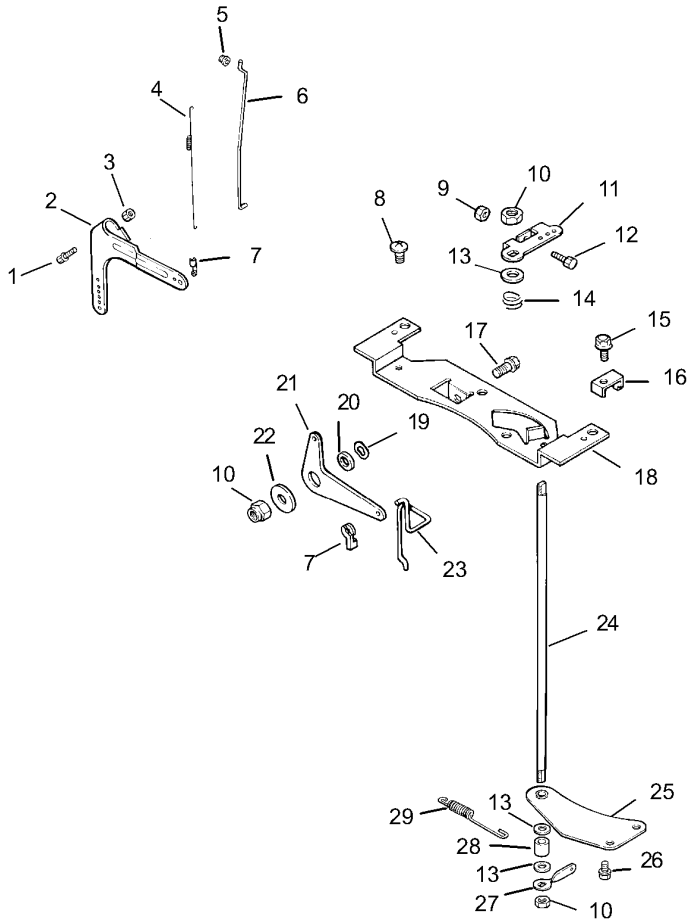

Engine Control Assembly
Kohler CV20S PRO-65593

Ref	Part No.	Qty.	Description
❸1	24 211 03-S	1	Bolt-Rd. Hd. Sq. Neck
❸2	24 090 33-S	1	Lever-Governor
❸3	M-641060-S	1	Nut-Hex Flange, M6x1.0
❸4	24 089 01-S	1	Spring-Linkage
❸5	25 158 08-S	1	Bushing-Linkage Retaining
❸6	24 079 04-S	1	Linkage, Throttle
❸7	25 158 11-S	2	Bushing-Linkage Retaining
❸8	24 086 06-S	2	Screw-Phillips Head, 11-16x3/4in
❸9	M-446030-S	1	Nut-Hf, M4x0.7
❸10	M-647060-S	3	Nut-Hex Lock
❸11	24 090 09-S	1	Lever, Throttle Control
❸12	M-401030-S	1	Screw-Hf, M4x0.7x30
❸13	X-25-72-S	3	Washer, Plain 1/4
❸14	24 089 20-S	1	Spring, Throttle Shaft
❸15	M-545016-S	2	Screw-Hex Flange, M5x0.8x16
❸16	12 237 01-S	2	Clamp-Cable
❸17	M-639016-S	1	Screw-Hf, M6x1.0x16
❸18	24 126 111-S	1	Bracket, Control
❸19	277341-S	1	Washer, Spring 3/8
❸20	25 431 01-S	1	Spacer
❸21	24 090 20-S	1	Lever, Choke
❸22	X-25-52-S	1	Washer
❸23	24 079 10-S	1	Linkage, Choke
❸24	24 144 11-S	1	Shaft, Throttle


Ref	Part No.	Qty.	Description
❸25	24 126 17-S	1	Bracket, Throttle Shaft
❸26	M-645016-S	3	Screw-Hex Flange, M6x1.0x16
❸27	24 090 12-S	1	Lever, Throttle Control
❸28	24 112 10-S	1	Spacer
❸29	24 089 45-S	1	Spring-Governor

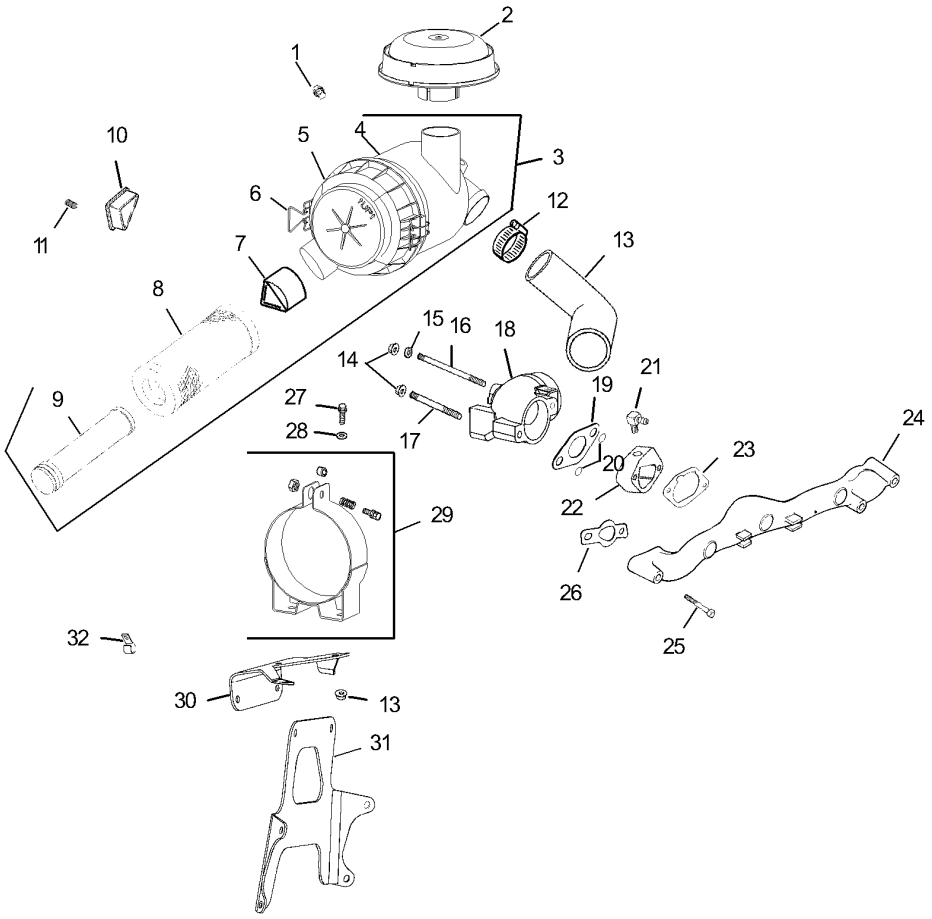

Air Intake/Filtration Assembly
Kohler CV20S PRO-65593

Ref	Part No.	Qty.	Description
❸1	25 139 20-S	1	Plug-Pipe
❸2	25 324 02-S	1	Hood-Air Cleaner
❸3	25 048 07-S	1	Assembly, Air Cleaner (Includes 4-9)
❸4	25 081 01-S	1	Housing-Heavy Duty Air Cleaner
❸5	25 096 06-S	1	Cover ASM
❸6	25 154 05-S	2	Clip
❸7	24 462 07-S	1	Valve-Dust Ejector
❸8	25 083 01-S	1	Element-Air, Primary
❸9	25 083 04-S	1	Element-Air, Safety
❸10	24 096 17-S	2	Cover-Blower Housing
❸11	25 086 91-S	2	Screw-Tapping (Used To Mount 5 Wire Connector On Harness)
❸12	25 237 07-S	2	Clamp, Hose
❸13	24 326 53-S	1	Hose, Air Cleaner
❸14	M-647060-S	4	Nut-Hex Lock
❸15	25 468 01-S	1	Washer-Copper
❸16	24 072 10-S	1	Stud M6x1.0x60
❸17	M-629140-S	1	Stud, Carburetorm6x1.0x40
❸18	24 029 43-S	1	Adapter, Elbow
❸19	24 041 44-S	1	Gasket, Air Cleaneradapter
❸20	25 153 05-S	2	O-Ring, Heavy-Duty Air Cleaner
❸21	25 155 38-S	1	Connector, Hose
❸22	24 029 57-S	1	Adapter, Remoteheavy-Duty Air Cleaner

Ref	Part No.	Qty.	Description
❸23	24 041 14-S	1	Gasket, Air Cleaner
❸24	24 164 06-S	1	Manifold, Intake
❸25	25 086 84-S	4	Screw-Hf, M6x1.0x55
❸26	24 041 01-S	2	Gasket-Manifold, Intake
❸27	X-25-73-S	2	Washer-Plain
❸28	25 126 02-S	1	Air Cleaner Bracket ASM
❸29	24 126 104-S	1	Bracket, Air Cleaner Mounting
❸30	24 126 105-S	1	Bracket, Main Support
❶❸	47 154 01-S	1	Clip-Cable
❶❸	25 113 27-S	1	Decal-Cleaner, Air
❶❸	25 454 04-S	1	Tie, Wire

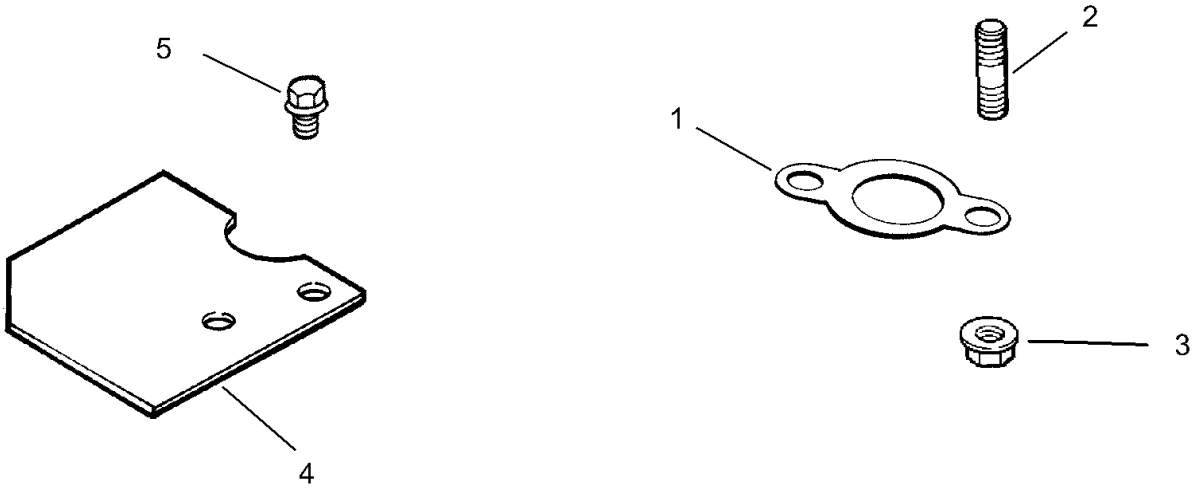

Exhaust Assembly
Kohler CV20S PRO-65593

Ref	Part No.	Qty.	Description
❸1	24 041 49-S	2	Gasket-Exhaust
❸2	25 072 04-S	4	Stud, M8x1.25x33
❸3	M-841080-S	4	Nut-Hex Flange, M8x1.25
❸4	24 265 09-S	2	Deflector, Heat
❸5	M-645016-S	2	Screw-Hex Flange, M6x1.0x16
❶❸	24 072 08-S	2	Stud, Exhaust
❶❸	M-641060-S	2	Nut-Hex Flange, M6x1.0
❶❸	24 522 226	1	Short Block
❶❸	24 782 24	1	Miniblock
❶❸	24 755 107-S	1	Gasket Set

NOTES

NOTES


TORO®