Form Number 3352-972

43cm Recycler® Mower

Model No. 21012 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Housing Assembly	 3	Engine Installation Assembly	 6
Rear Axle Assembly	 4	Grass Bag Assembly	 7
Blade Assembly	 5	Handle Assembly	 8


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PPH. . . . . phillips pan head
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
ROPS. . . . . roll over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard

Footnotes


❶ Not serviced separately

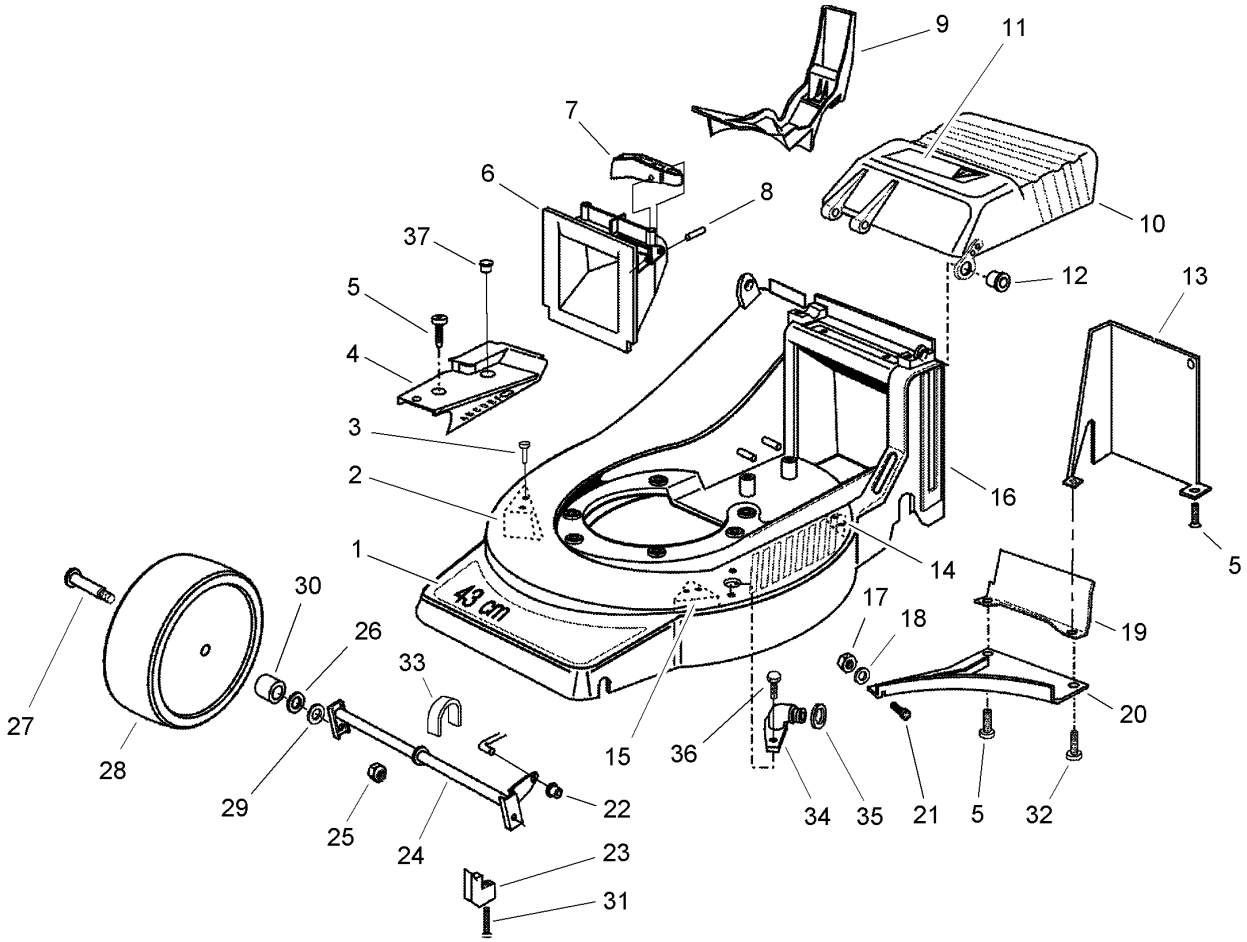

Housing Assembly


Ref	Part No.	Qty.	Description
1	95-6839	1	Decal
2	93-3730	1	Kicker
3	32144-111	6	Screw-PPH
4	106-4750	1	Cover-Belt
5	95-6941	4	Screw
6	93-4054	1	Grip-Lower
7	98-3236	1	Trigger-Height Of Cut
8	3284-5	1	Pin-Spiral
9	93-3790	1	Plug
10	99-1700	1	Discharge Door ASM
11	99-1708	1	Decal-Danger
12	93-3794	1	Bushing-Door
13	98-1429	1	Cover-Shield
14	93-3750	1	Kicker
15	93-3740	1	Kicker
16	106-4751	1	Housing
17	3296-2	1	Nut-Lock
18	3256-21	1	Washer-Flat
19	93-4110	1	Baffle-Bagger, Rear
20	93-3720	1	Baffle
21	3250-13	1	Screw-PPH
22	32112-11	1	Nut-Push
23	98-3216	2	Retainer-Axle
24	93-4080	1	Axle-Front

Ref	Part No.	Qty.	Description
25	99-1711	2	Nut-Lock
26	40-1940	4	Washer
27	99-1712	2	Bolt-Wheel
28	93-4081	2	Wheel-Front
29	99-1713	2	Washer-Wave
30	93-7024	4	Bushing
31	93-3793	2	Screw-Retainer
32	94-1864	1	Screw-Baffle
33	98-3222	2	Cap-Axle, Front
34	95-2747	1	Fitting-Washout
35	46-6290	1	O-Ring
36	46-6811	2	Screw-HWH
37	95-6908	2	Cap-Cover

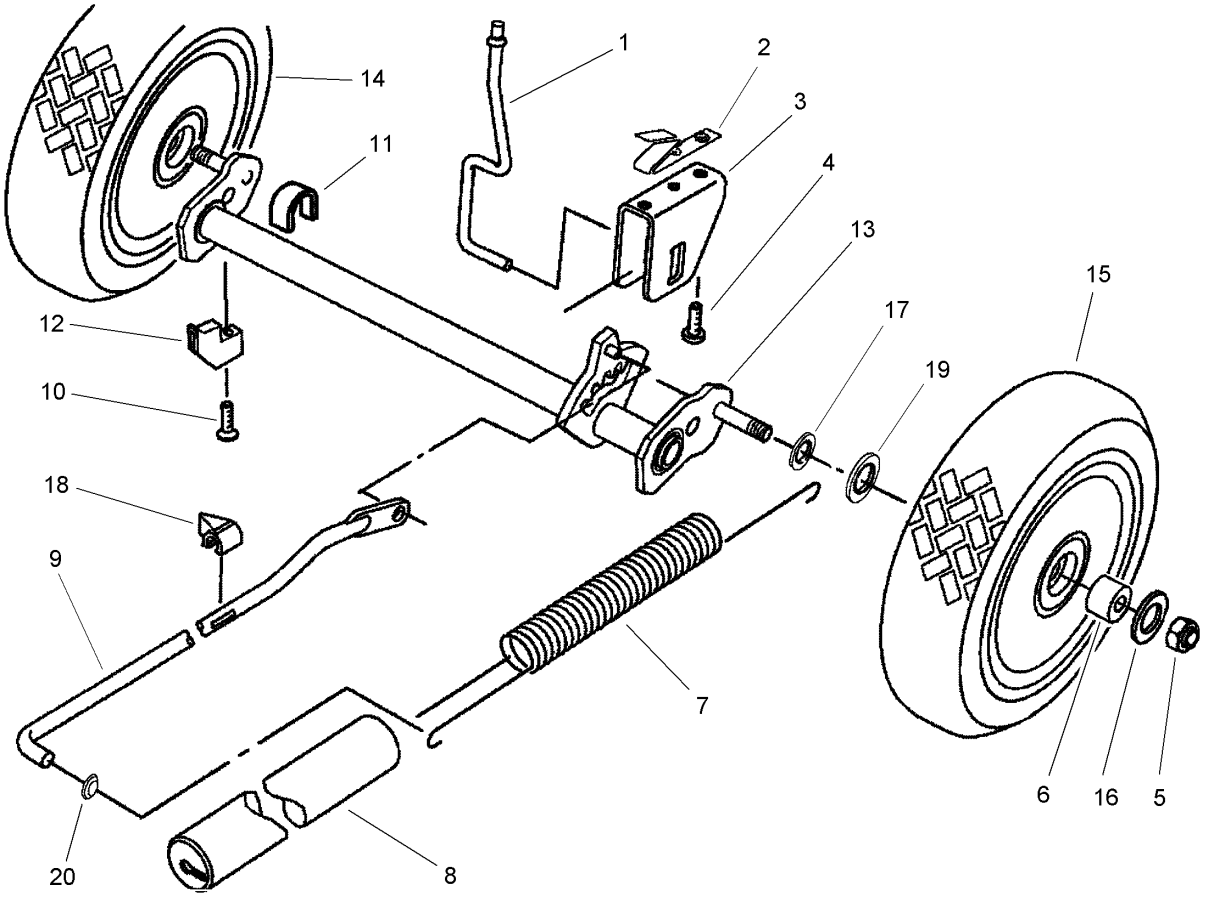


Rear Axle Assembly

Ref	Part No.	Qty.	Description
1	98-3232	1	Rod-Trigger
2	93-4062	1	Spring-Return, Trigger
3	93-4066	1	Saddle-Height Of Cut
4	93-4095	2	Screw-Baffle
5	93-4098	2	Nut-Wheel
6	93-7023	4	Bushing
7	71-7740	1	Spring-Counterbalance
8	71-8450	1	Cover-Spring
9	93-4065	1	Rod-Link
10	93-3793	2	Screw-Retainer
11	98-3226	2	Cap-Axle, Rear
12	98-3216	2	Retainer-Axle
13	93-4079	1	Axle-Rear
14	93-8492	1	Wheel-Rear
15	94-3313	2	Wheel-Smart, Rear
16	93-4097	2	Washer-Wheel
17	94-6723	2	Cap-Axle, Rear
18	71-7980	1	Indicator-Height Of Cut
19	94-6722	2	Washer-Wave
20	32112-11	1	Nut-Push

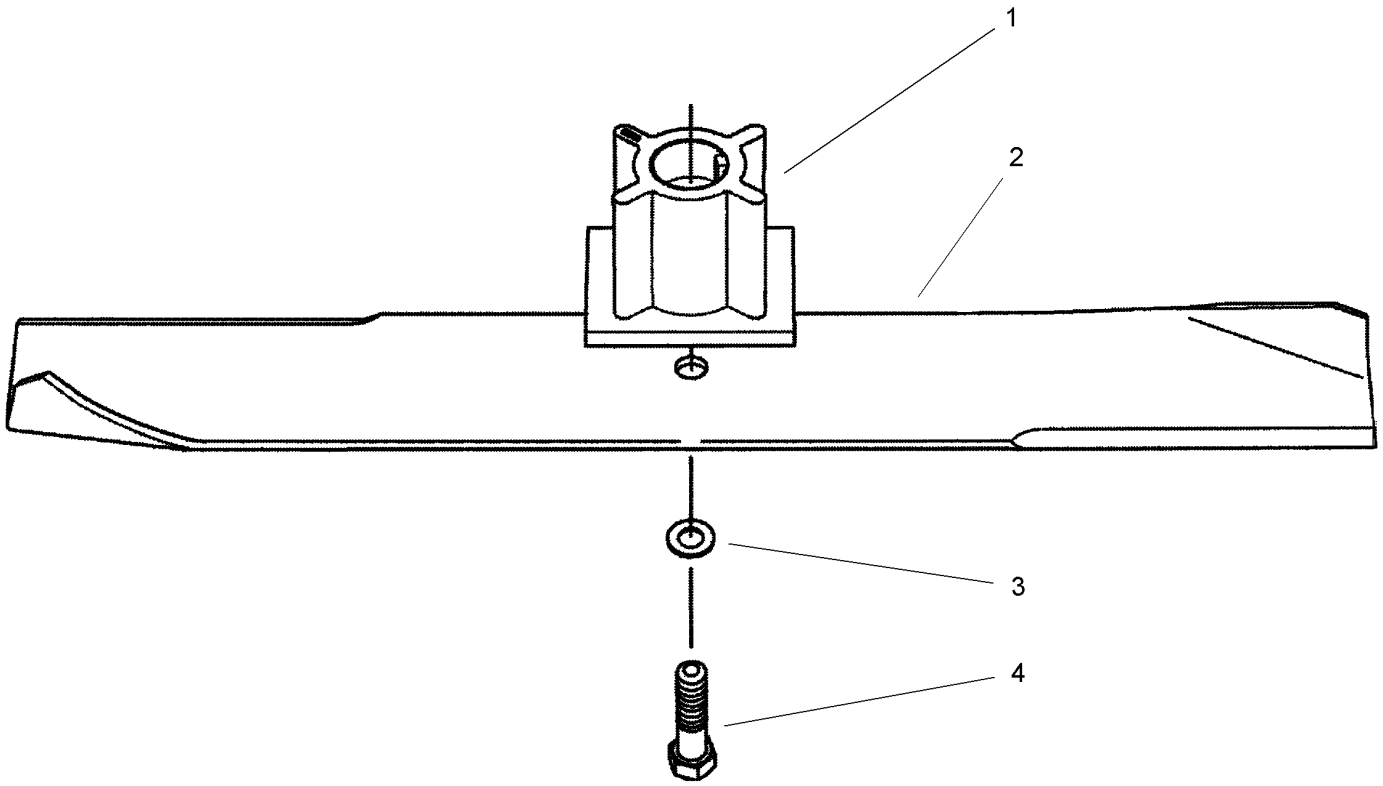


Blade Assembly

Ref	Part No.	Qty.	Description
1	93-4091	1	Retainer-Blade
2	98-1430	1	Blade-Recyler
3	3253-22	1	Washer-Lock
4	26-0672	1	Bolt-Blade

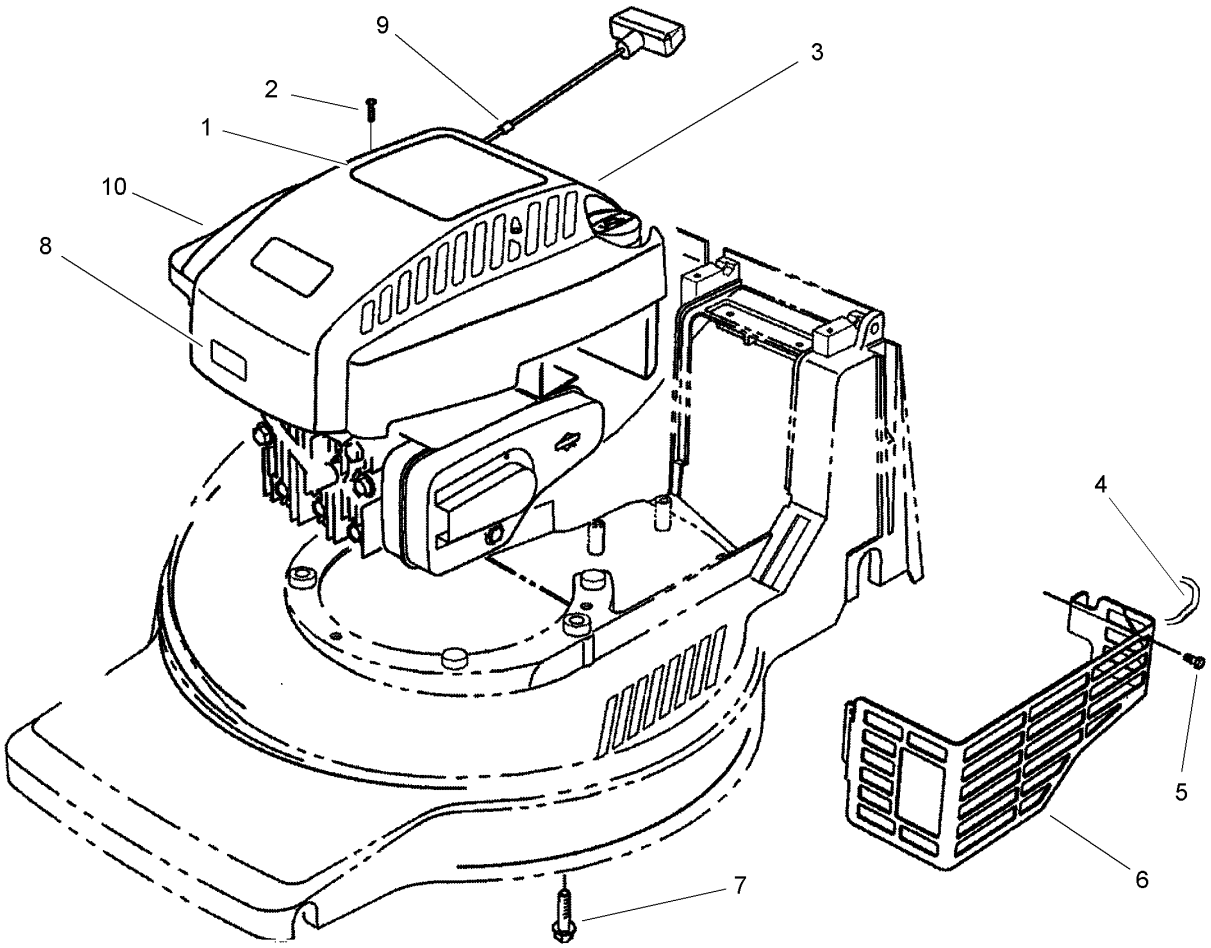


Engine Installation Assembly

Ref	Part No.	Qty.	Description
1	95-6838	1	Decal-Shroud
2	32144-121	2	Screw-PPH
3	93-0243	1	Shroud-Engine
4	3290-378	1	Tie-Cable
5	32144-73	1	Screw-HWH
6	82-8550	1	Shield-Muffler
7	32144-102	3	Screw-HWH
8	98-3206	1	Decal
9	2210-316	1	Stop-Rope
❶10		1	Engine

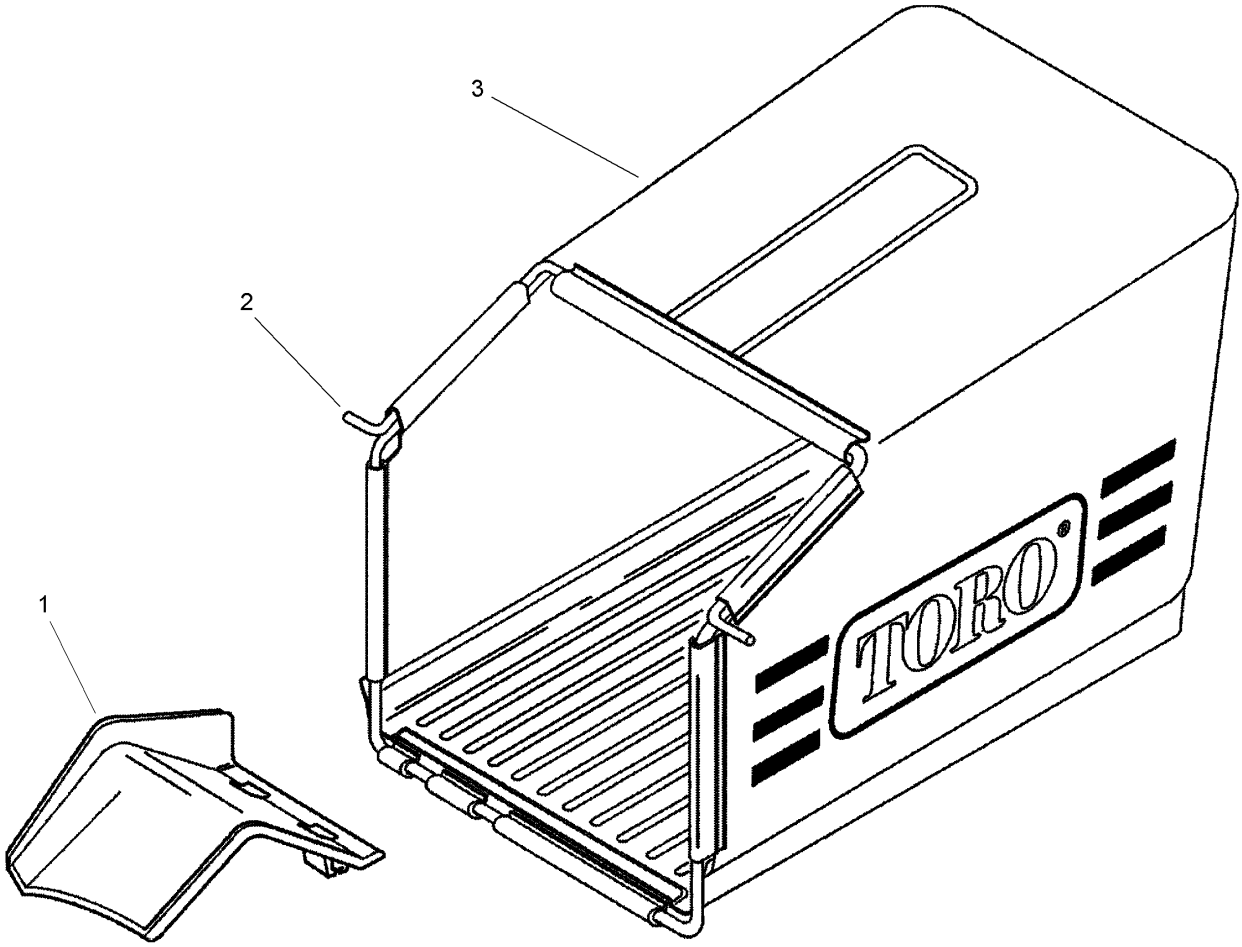

Grass Bag Assembly

Ref	Part No.	Qty.	Description
1	93-4087	1	Remover-Bag, Grass
2	93-4085	1	Frame-Bag
3	93-4086	1	Bag-Grass

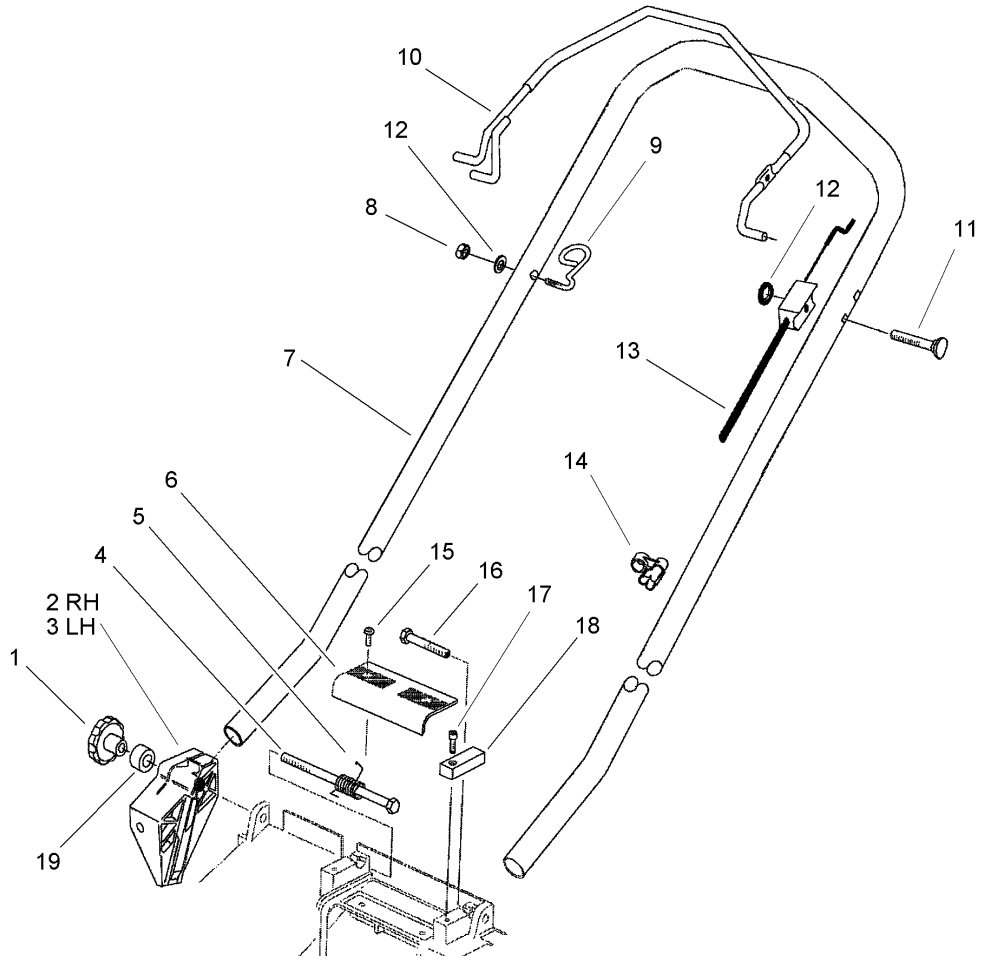

Handle Assembly

Ref	Part No.	Qty.	Description
1	19-4050	2	Knob
2	99-1710	1	Mount-Handle, Right
3	99-1705	1	Mount-Handle, Left
4	93-4058	1	Bolt-Long
5	93-4057	1	Spring-Door
6	71-7860	1	Grip-Upper
7	95-6946	1	Handle
8	3296-73	4	Nut-Lock, NI
9	95-4457	1	Guide-Rope
10	98-1431	1	Bail-Brake
11	95-6948	1	Bolt
12	3256-1	3	Washer-Flat
13	95-6947	1	Cable-Brake
14	93-4084	2	Clamp-Cable
15	32144-97	2	Screw-Pph, Plastite
16	93-4060	1	Bolt-Short
17	93-4094	2	Screw-Cap, Hinge
18	93-4056	2	Cap-Bolt
19	99-1717	2	Spacer-Mount, Handle

NOTES

NOTES

NOTES


TORO®