Form Number 3353-824 Rev A

Auger Head and
Universal Swivel Auger Head
Compact Utility Loaders

Model No. 22802 - 230000001 and up.

Model No. 22803 - 230000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Auger Head Assembly	3
Universal Auger Head Assembly	4
Hydraulic Motor Assembly No. 98-8256 and 100-4657	5
Planetary Gear Assembly No. 105-0311-03	6
Attachments and Accessories List	7

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over-protection-system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

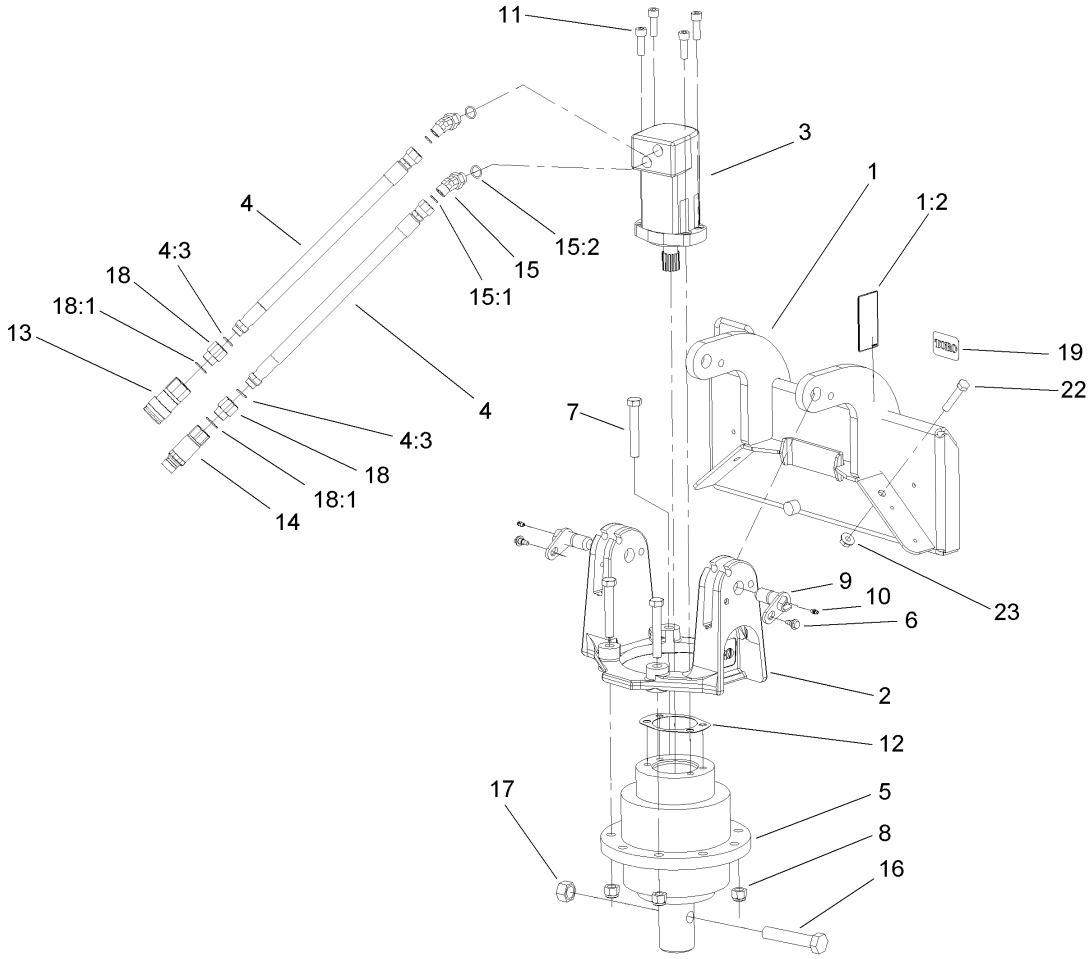

Auger Head Assembly

Ref	Part No.	Qty.	Description
1	105-0322	1	Auger Mount ASM
1:2	105-0326	2	Decal-Danger
2	105-0316-03	1	Yoke
3	98-8256	1	Hydraulic Motor ASM
4	105-0321	2	HYD Hose ASM
4:3	237-79	1	O-Ring
5	105-0311-03	1	Drive-Planetary
6	99-5105	2	Bolt-Shoulder
7	327-16	4	Screw-HH
8	3296-53	4	Nut-Lock, NI
9	99-1414	2	Pin-Pivot
10	302-5	2	Fitting-Grease
11	3274-4	4	Screw-HSH
12	99-5032	1	Gasket
13	104-6134	1	Coupler-Face, Flush
❶13:1	105-8396	1	Seal Kit
14	100-4701	1	Nipple-Connect, Pressure
❶14:1	100-6120	1	Seal Kit
15	340-89	2	Fitting-HYD, 45 DEG
15:1	237-30	1	O-Ring
15:2	237-80	1	O-Ring
16	98-9062	1	Screw
17	3217-15	1	Nut-Hex
18	100-4617	2	Adapter-HYD


Ref	Part No.	Qty.	Description
18:1	237-80	1	O-Ring
19	92-7981	1	Decal
22	325-11	1	Screw-HH
23	32128-49	1	Nut-HHF

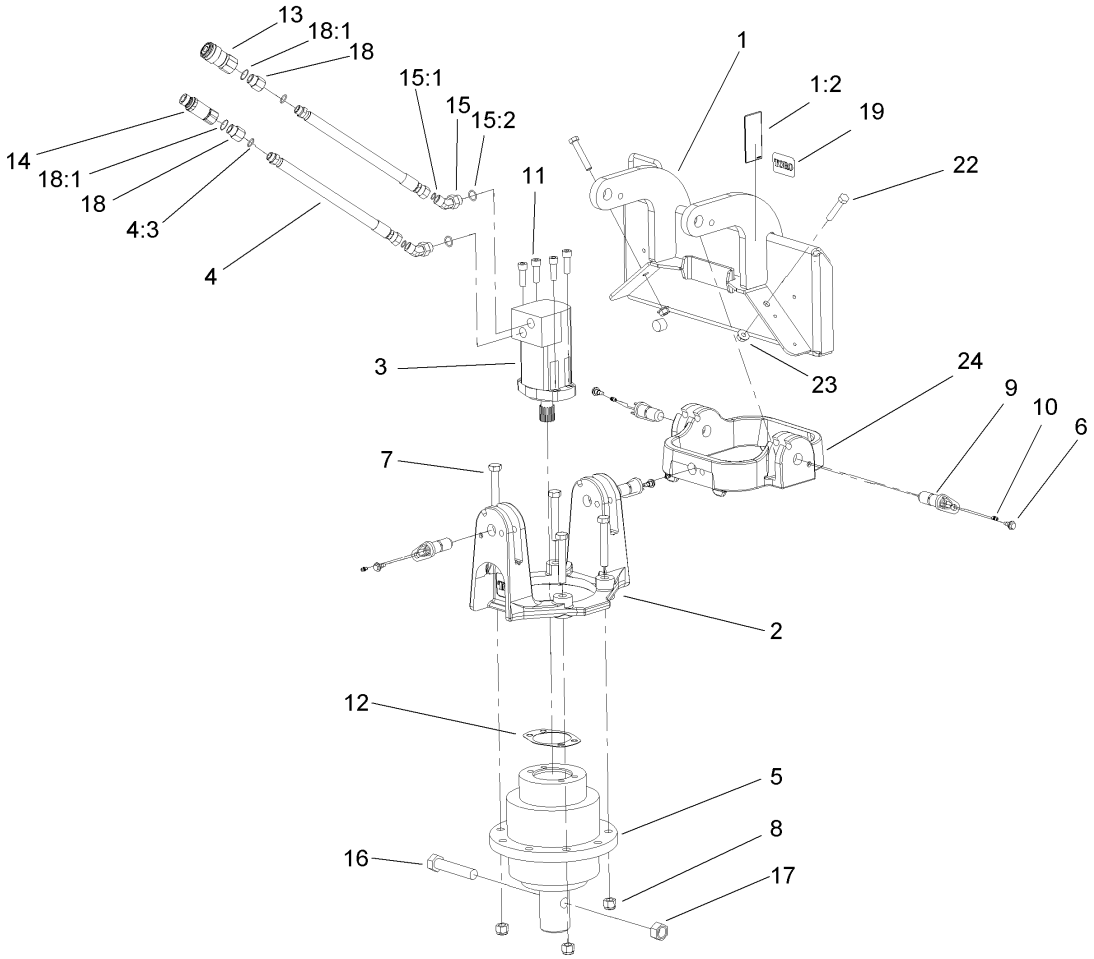

Universal Auger Head Assembly

Ref	Part No.	Qty.	Description
1	105-0329	1	Auger Mount ASM
1:2	105-0326	2	Decal-Danger
2	105-0316-03	1	Yoke
3	100-4657	1	Hydraulic Motor ASM
4	105-0321	2	HYD Hose ASM
4:3	237-79	1	O-Ring
5	105-0311-03	1	Drive-Planetary
6	99-5105	4	Bolt-Shoulder
7	327-16	4	Screw-HH
8	3296-53	4	Nut-Lock, NI
9	99-1414	4	Pin-Pivot
10	302-5	4	Fitting-Grease
11	3274-4	4	Screw-HSH
12	99-5032	1	Gasket
13	104-6134	1	Coupler-Face, Flush
❶13:1	105-8396	1	Seal Kit
14	100-4701	1	Nipple-Connect, Pressure
❶14:1	100-6120	1	Seal Kit
15	340-89	2	Fitting-HYD, 45 DEG
15:1	237-30	1	O-Ring
15:2	237-80	1	O-Ring
16	98-9062	1	Screw
17	3217-15	1	Nut-Hex
18	100-4617	2	Adapter-HYD


Ref	Part No.	Qty.	Description
18:1	237-80	1	O-Ring
19	92-7981	1	Decal
22	325-11	2	Screw-HH
23	32128-49	2	Nut-HHF
24	105-0315-03	1	Swivel

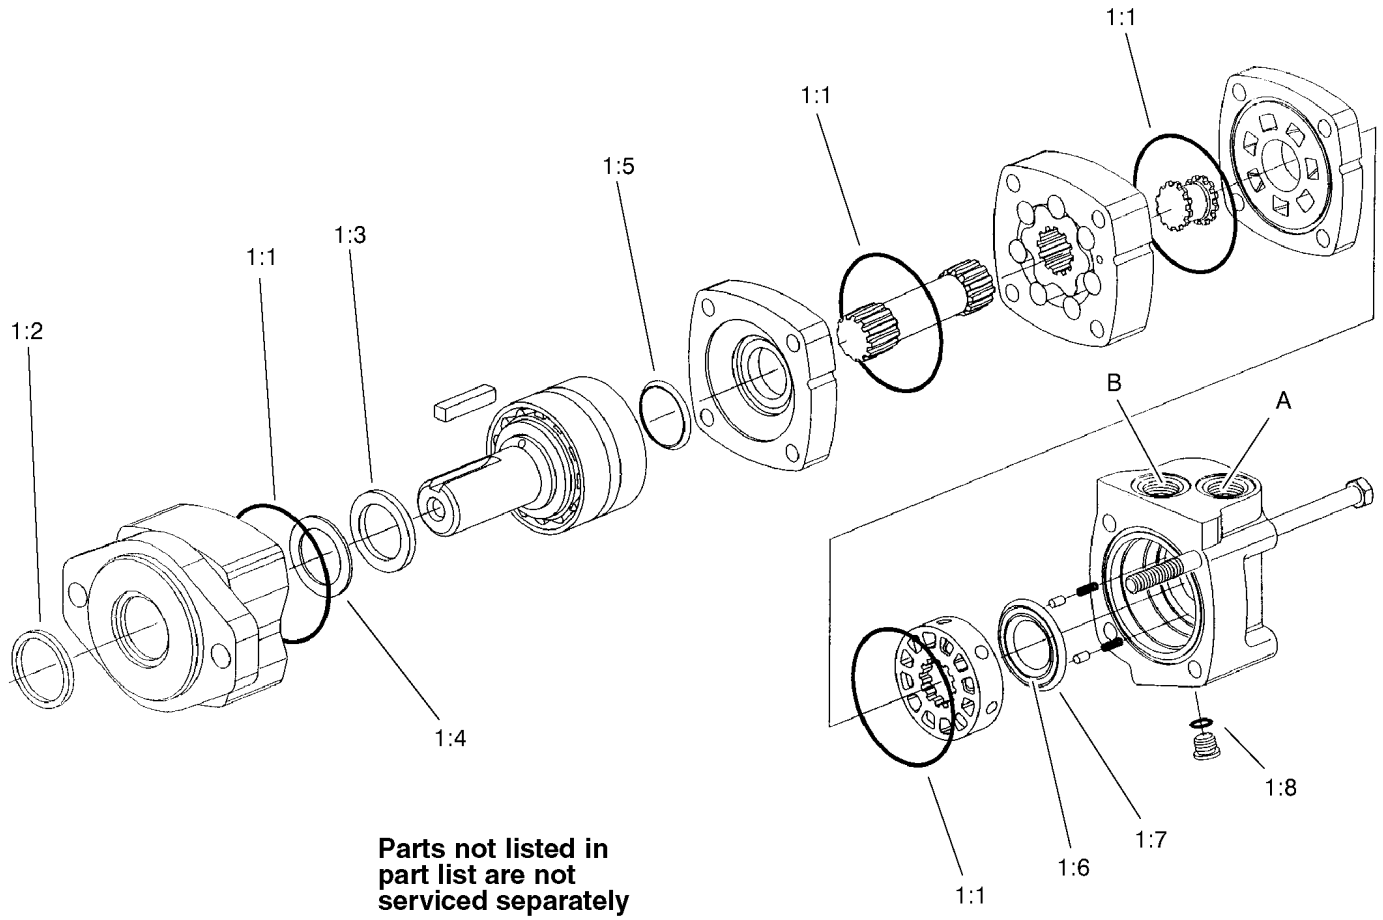

Parts not listed in part list are not serviced separately

Hydraulic Motor Assembly No. 98-8256 and 100-4657

Ref	Part No.	Qty.	Description
1	56-6890	1	Kit-Seal
❷1:1		4	O-Ring
❷1:2		1	Seal-Exclusion, Shaft
❷1:3		1	Seal-Shaft
❷1:4		1	Ring-Back-Up
❷1:5		1	Seal-Face, Shaft
❷1:6		1	Seal-Face, Inner
❷1:7		1	Seal-Face, Outer
❷1:8		1	O-Ring

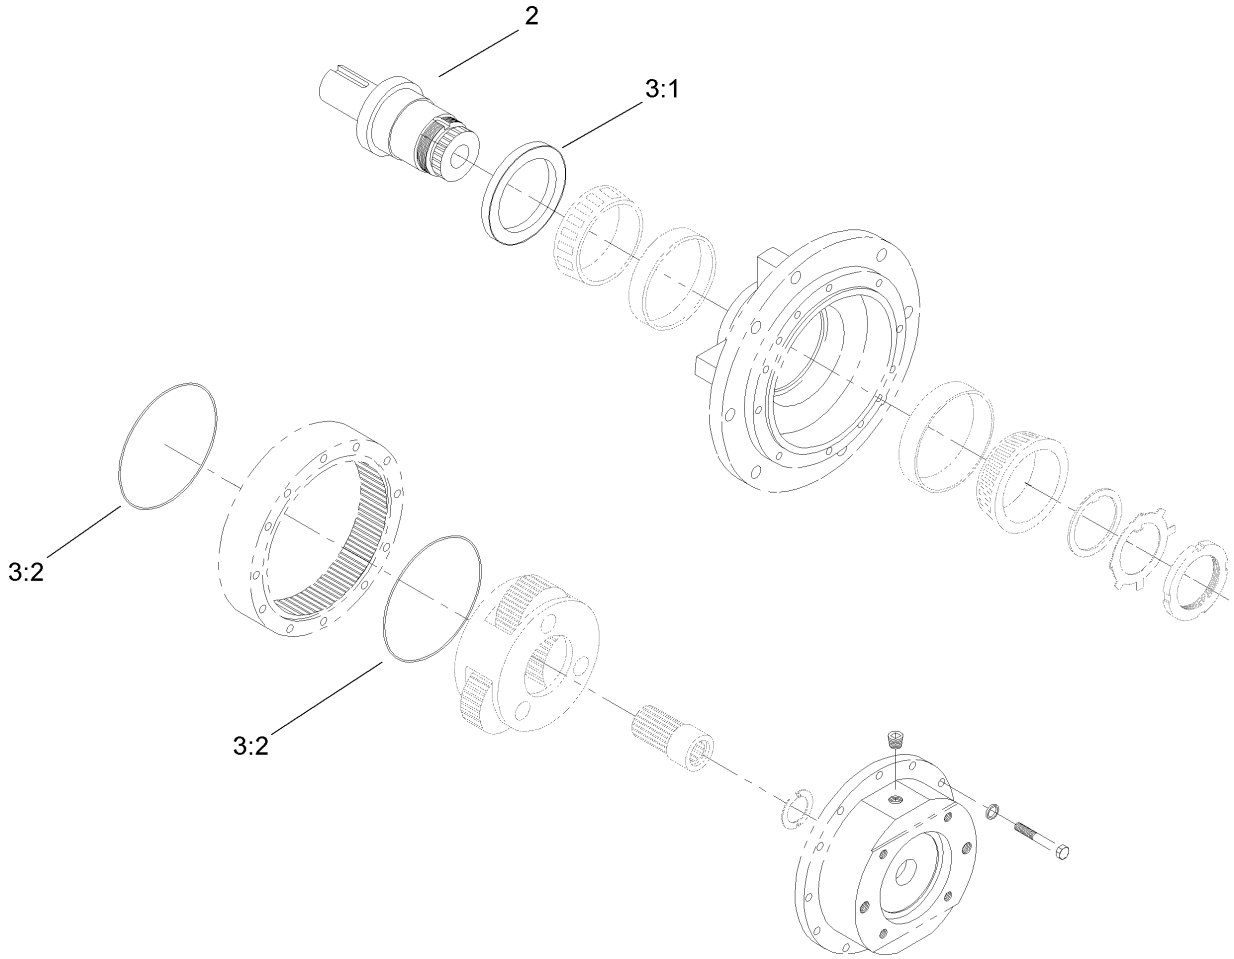

Planetary Gear Assembly No. 105-0311-03

Ref	Part No.	Qty.	Description
2	104-6091	1	Shaft-Output
3	104-6092	1	Kit-Seal
3:1		1	Seal-Shaft
3:2		2	O-Ring

Attachments and Accessories

For 22802 - Auger Head, Compact Utility Loaders

Product Name	Model/Part
6" Auger	22402
9" Auger	22403
12" Auger	22404
15" Auger	22405
18" Auger	22406
24" Auger	22407
30" Auger	22408
Cement Bowl	22442
12" Auger Extension	22448
24" Auger Extension	22449
Capstan Adaptor	22450
Screw Anchor Adaptor	22451
Rock Auger	22454

Attachments and Accessories

For 22803 - Universal Swivel Auger Head, Compact Utility Loaders

Product Name	Model/Part
6" Auger	22402
9" Auger	22403
12" Auger	22404
15" Auger	22405
Cement Bowl	22442
12" Auger Extension	22448
24" Auger Extension	22449
Capstan Adaptor	22450
Screw Anchor Adaptor	22451
Rock Auger	22454


TORO®