Form Number 3354-146 Rev A

Sonic Boom™ Kit
Multi-Pro® Turf Sprayers

Model No. 41217 - 230000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Multi Pro 1200 and 1250 Sprayer System Assembly	3
Multi Pro 5600 and 5700 Sprayer System Assembly	4
Workman 200 Sprayer System Assembly	5
Sensor Assembly	6

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over-protection-system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

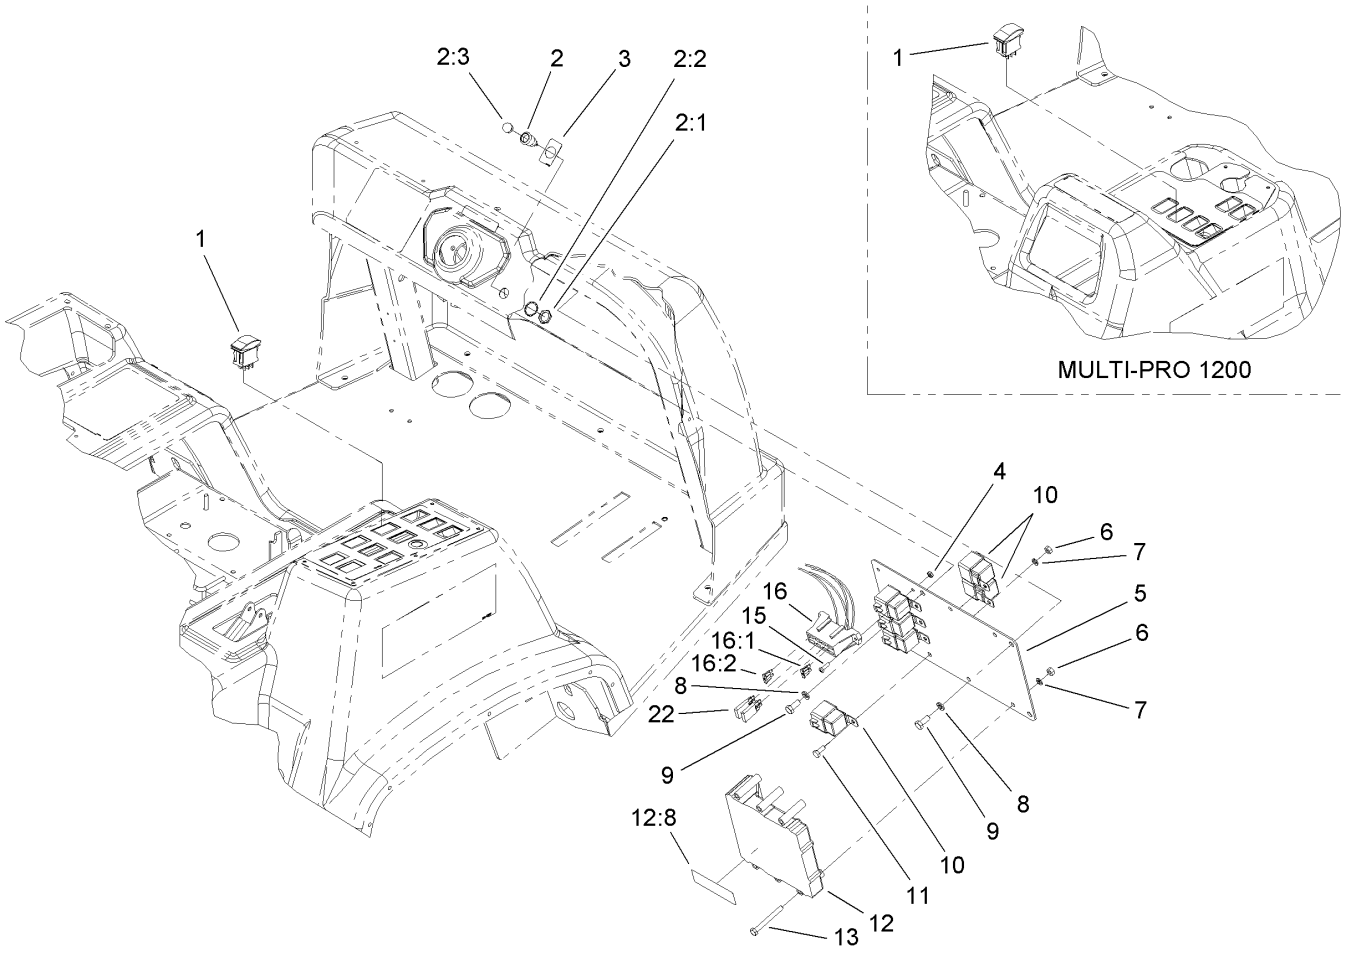

Multi Pro 1200 and 1250 Sprayer System Assembly

Ref	Part No.	Qty.	Description
1	100-8590	1	Switch-Rocker, Dpdt (On-Off-On)
2	44-2210	1	Light-Indicator, Red
2:1	218-535	1	Nut-Hex
2:2	218-536	1	Washer-Lock
2:3	218-533	1	Lens
❷2:4		1	Bulb
3	94-8582	1	Decal
4	3217-26	2	Nut-Hex
5	94-8564-03	1	Plate-Mount, Ecu
6	3217-5	8	Nut-Hex
7	3253-3	8	Washer-Lock
8	3253-4	2	Washer-Lock
9	322-3	2	Screw-HH
10	99-7430	6	Relay
11	321-3	4	Screw-HH
12	92-5720	1	Controller
12:8	93-8053	1	Decal
13	321-15	4	Screw-HH
15	3290-500	2	Screw-PPH
16	108-9497	1	Harness-Wire
16:1	110928	1	Fuse-5 Amp
16:2	218-578	1	Fuse-10 Amp
❶16:3	108-9493	2	Diode-Tvs
❶16:4	85-4650	1	Connector


Ref	Part No.	Qty.	Description
22	108-3736	2	Breaker-Circuit, 30A

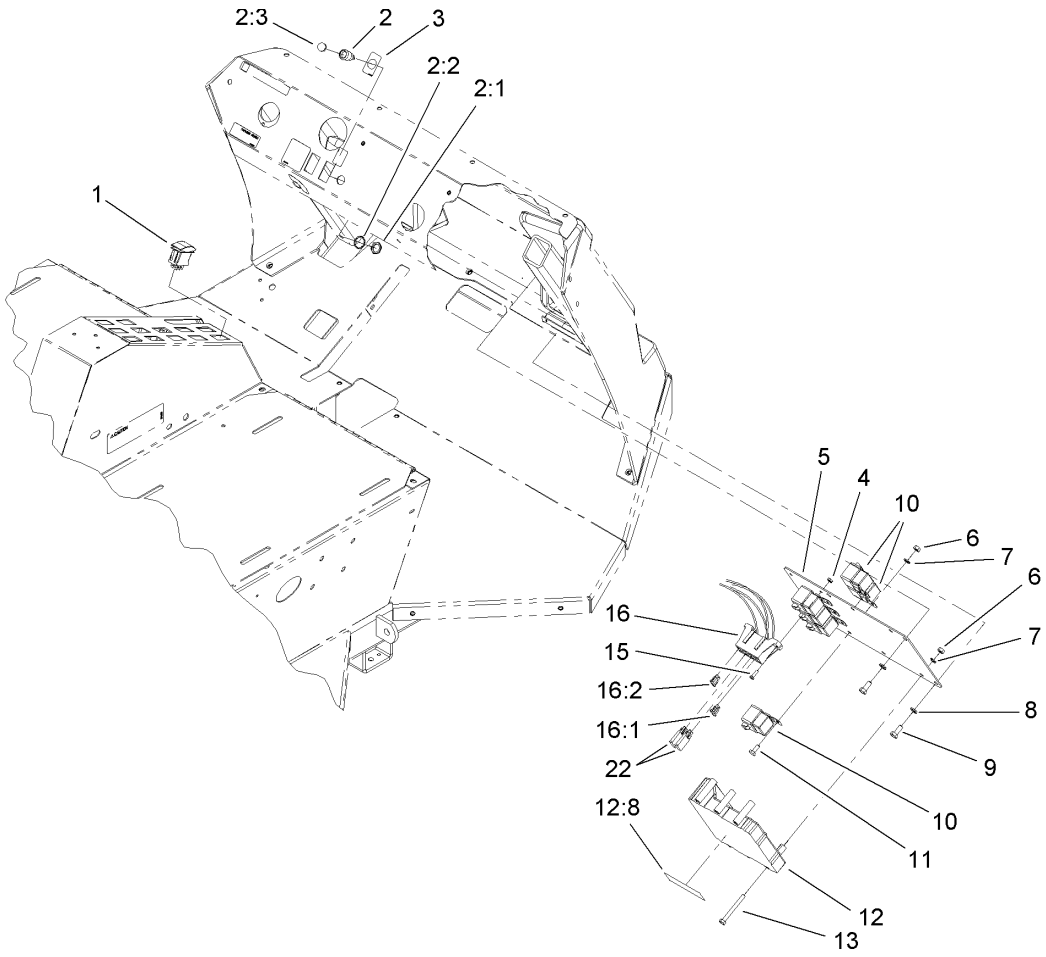

Multi Pro 5600 and 5700 Sprayer System Assembly


Ref	Part No.	Qty.	Description
1	100-8590	1	Switch-Rocker, Dpdt (On-Off-On)
2	44-2210	1	Light-Indicator, Red
2:1	218-535	1	Nut-Hex
2:2	218-536	1	Washer-Lock
2:3	218-533	1	Lens
❷2:4		1	Bulb
3	94-8582	1	Decal
4	3217-26	2	Nut-Hex
5	94-8564-03	1	Plate-Mount, Ecu
6	3217-5	8	Nut-Hex
7	3253-3	8	Washer-Lock
8	3253-4	2	Washer-Lock
9	322-3	2	Screw-HH
10	99-7430	6	Relay
11	321-3	4	Screw-HH
12	92-5720	1	Controller
12:8	93-8053	1	Decal
13	321-15	4	Screw-HH
15	3290-500	2	Screw-PPH
16	108-9497	1	Harness-Wire
16:1	110928	1	Fuse-5 Amp
16:2	218-578	1	Fuse-10 Amp
❷16:3	108-9493	2	Diode-Tvs
❷16:4	85-4650	1	Connector

Ref	Part No.	Qty.	Description
22	108-3736	2	Breaker-Circuit, 30A

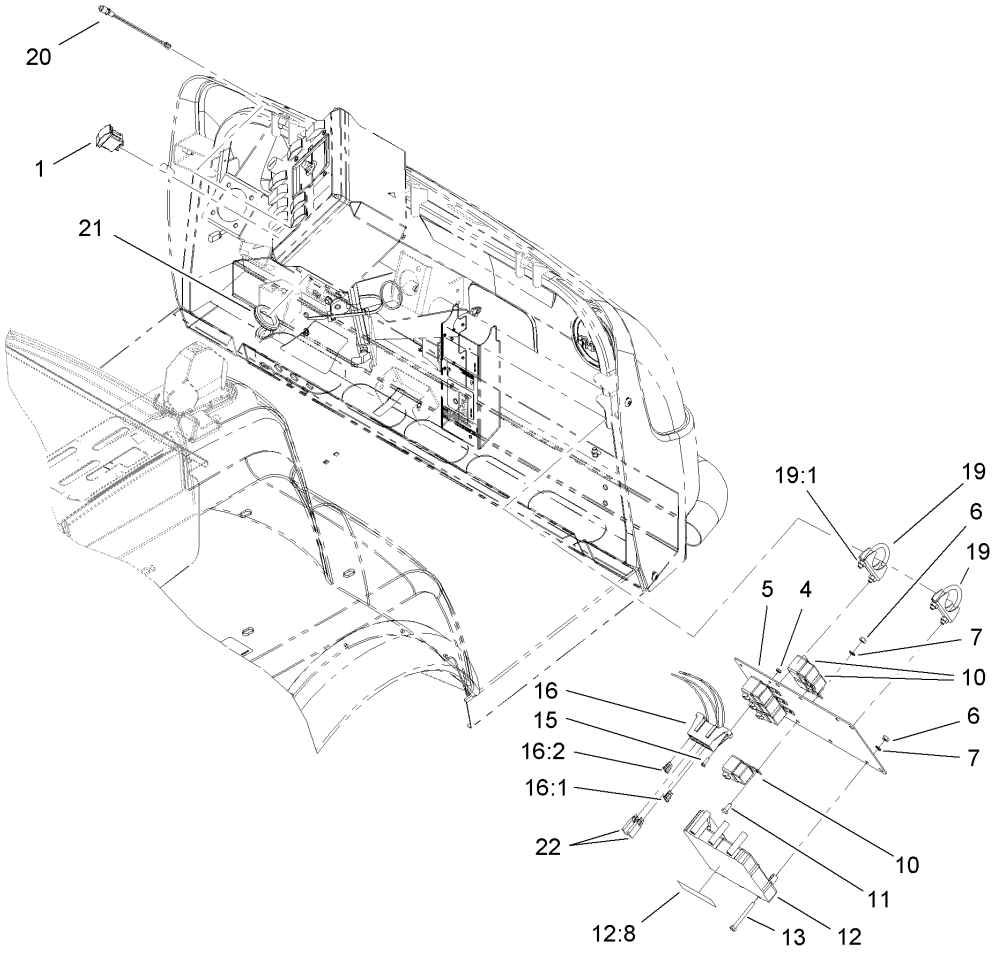

Workman 200 Sprayer System Assembly

Ref	Part No.	Qty.	Description
1	100-8590	1	Switch-Rocker, Dpdt (On-Off-On)
4	3217-26	2	Nut-Hex
5	94-8564-03	1	Plate-Mount, Ecu
6	3217-5	8	Nut-Hex
7	3253-3	8	Washer-Lock
10	99-7430	6	Relay
11	321-3	4	Screw-HH
12	92-5720	1	Controller
12:8	93-8053	1	Decal
13	321-15	4	Screw-HH
15	3290-500	2	Screw-PPH
16	108-9497	1	Harness-Wire
16:1	110928	1	Fuse-5 Amp
16:2	218-578	1	Fuse-10 Amp
❶16:3	108-9493	2	Diode-Tvs
❶16:4	85-4650	1	Connector
19	2112-6	2	Clamp-Muffler
19:1	3218-2	2	Nut-Jam
20	106-1403	1	Light-Indicator
21	240-2	1	Grommet-Rubber
22	108-3736	2	Breaker-Circuit, 30A
❶99	108-3599	1	Software-Boom, Sonic
❶99	94-8604	1	Decal

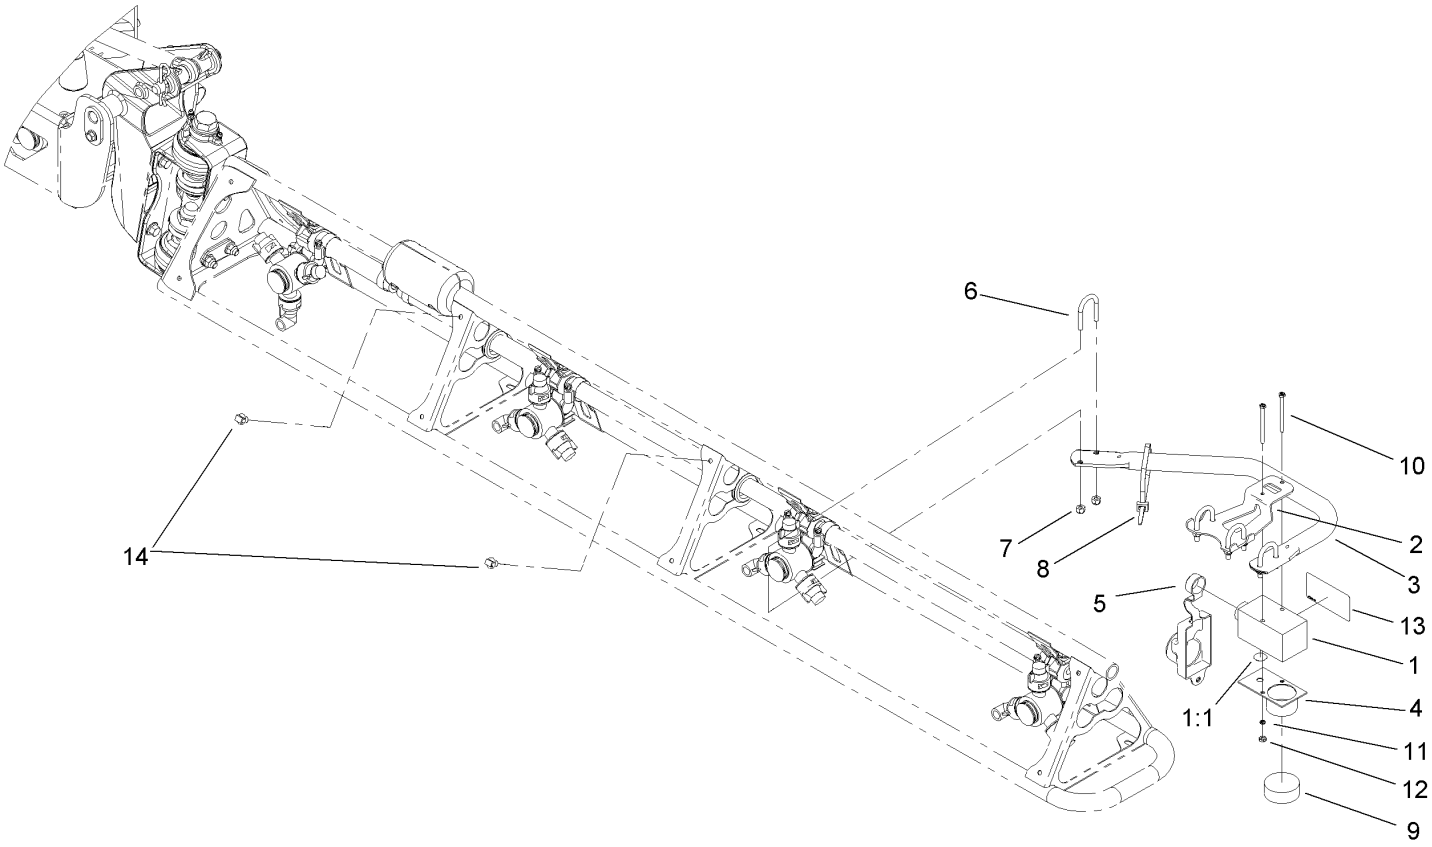

Sensor Assembly

Ref	Part No.	Qty.	Description
1	94-6869	2	Sensor-Sonic, Ultra
1:1	106-5232	1	Patch-Goretex
2	108-3615-03	2	Bracket-Sensor, Sonic
3	108-3617-03	2	Tube-Protection
4	107-8753-03	2	Sensor Shield ASM
5	108-3623	2	Cover-Sonic
6	92-0010	8	U-Bolt
7	32146-17	16	Nut-Lock
8	3290-378	16	Tie-Cable
9	95-2247	2	Foam-Shield, Sensor
10	32105-30	4	Screw-SHH
11	3253-17	4	Washer-Lock / Sp
12	3217-26	4	Nut-Hex
13	94-8576	2	Decal
14	32180-030	4	Clip-Harness
❶15	110-1652	2	Harness-Wire, Adapter

NOTES


TORO®