Form Number 3352-779 Rev B

XL 440H
Lawn Tractor

Model No. 71429 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame and Body Assembly	3
Hood and Tower Assembly	4
Rear Body and Seat Assembly	5
Steering Assembly	6
Fixed Steering Assembly	7
Engine Assembly	8
Traction Brake Assembly	9
Wheel and Tire Assembly	10
Transaxle Component Assembly	11
Transaxle Installation Assembly	12
Height-of-Cut Assembly	13
Electrical Assembly	14
Spindle and Blade Assembly	15
Chute and Recycler Assembly	16
Pulley and Brake Assembly	17
Deck Assembly No. 95-6107	18
Cylinder Assembly Briggs and Stratton 31F777-0162-E1	19
Cylinder Head Assembly Briggs and Stratton 31F777-0162-E1	20
Crankshaft Assembly Briggs and Stratton 31F777-0162-E1	21
Crankcase Assembly Briggs and Stratton 31F777-0162-E1	22
Oil Filter, Tube and Pump Assembly Briggs and Stratton 31F777-0162-E1	23
Carburetor Assembly Briggs and Stratton 31F777-0162-E1	24
Governor Assembly Briggs and Stratton 31F777-0162-E1	25
Blower Housing Assembly Briggs and Stratton 31F777-0162-E1	26
Starter Assembly Briggs and Stratton 31F777-0162-E1	27
Gasket Assembly Briggs and Stratton 31F777-0162-E1	28
Carburetor Overhaul Kit Assembly Briggs and Stratton 31F777-0162-E1	29
Attachments and Accessories List	30


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head


Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Included in Engine Gasket Set-Ref. 358.
❹ Included in Valve Gasket Set-Ref. 1095.
❺ Included in Carburetor Overhaul Kit-Ref. 121.
❻ Included in Carburetor Gasket Set-Ref. 977.
❼ Obtain from your local Briggs & Stratton dealer

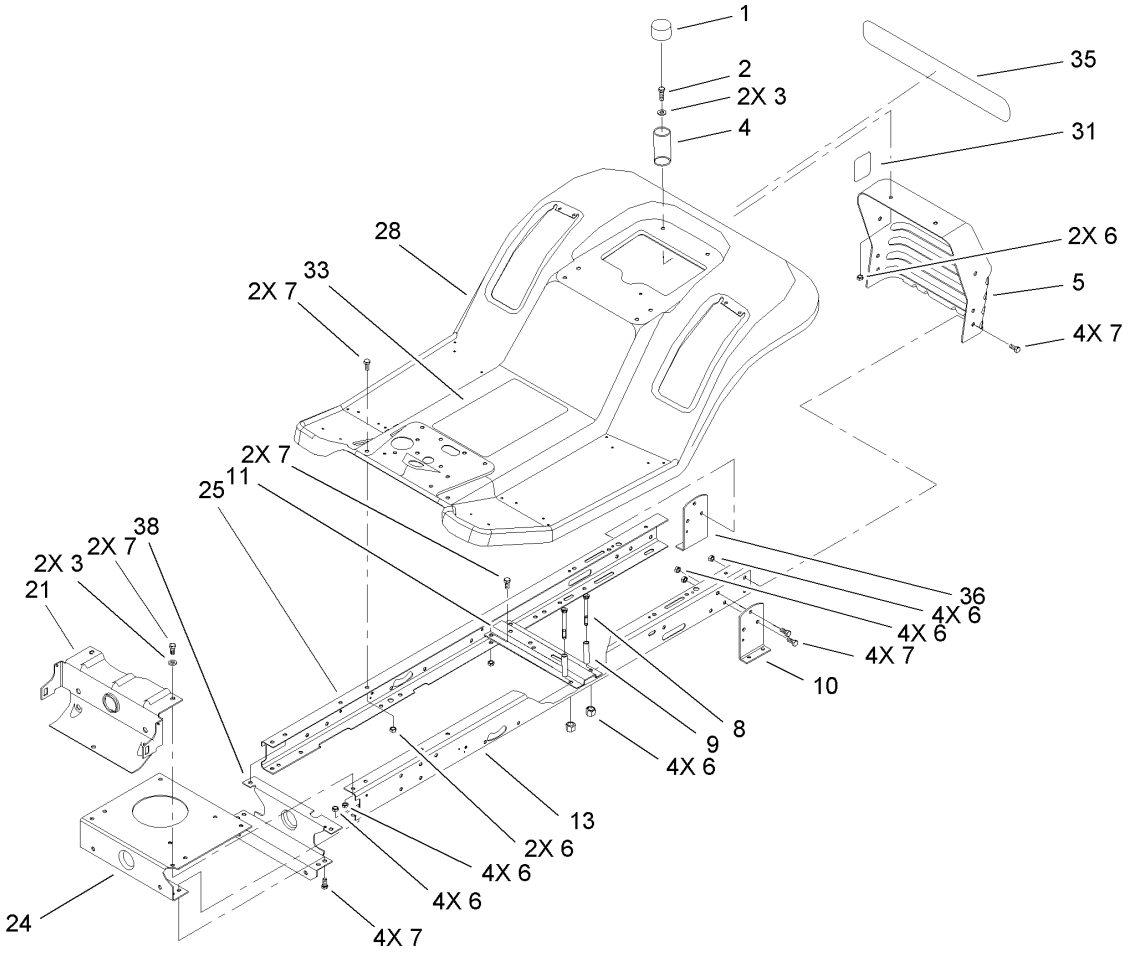

Frame and Body Assembly


Ref	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	4	Washer-Flat
4	88-6220	2	Spring-Compression
5	99-2957-03	1	Panel-Rear, Hitch
6	3296-29	24	Nut-Lock, NI
7	322-3	20	Screw-HH
8	322-12	2	Screw-HH
9	88-5470	2	Spacer-Axle, Front
10	93-3857-03	1	Bracket-Mounting, LH
11	88-4620-03	1	Bracket-Idler, Pivot
13	99-2958-03	1	Rail-Frame, LH
21	98-3576-03	1	Support-Axle, Front
24	88-4630-03	1	Plate-Engine, Mounting
25	99-2959-03	1	Rail-Frame, RH
28	99-2971	1	Rear Body ASM
31	100-7449	1	Decal
33	108-7817	1	Decal
35	105-2498	1	Decal
36	93-3856-03	1	Bracket-Mounting, RH
38	93-3831-03	1	Support-Rear

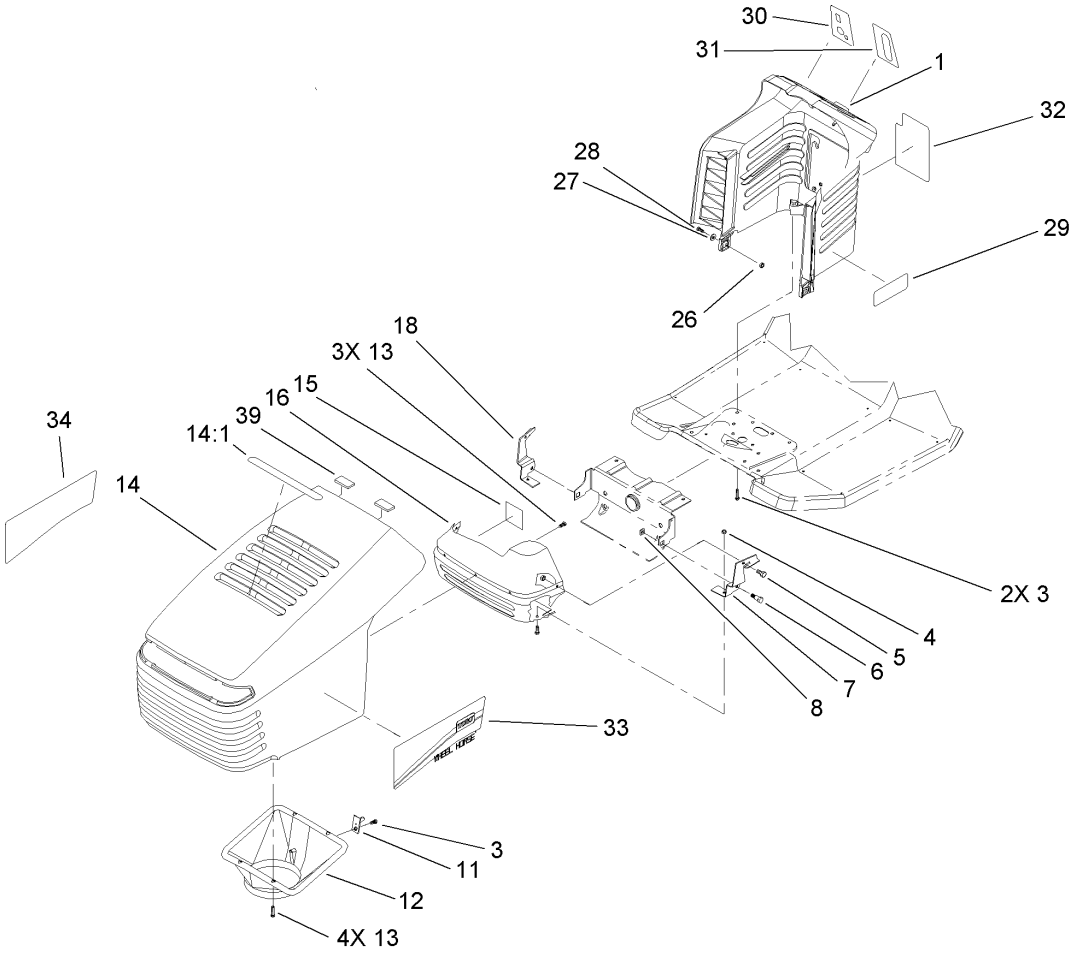

Hood and Tower Assembly


Ref	Part No.	Qty.	Description
1	107-4920	1	Tower-Steering
3	46-8091	3	Screw-HWH
4	3296-42	4	Nut-Lock, NI
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-Hinge, LH
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch-Pin
12	93-3891	1	Duct-Air, Hood
13	46-8090	7	Screw-Plastite
14	92-8650	1	Hood ASM
14:1	92-5748	1	Decal
15	92-5782	3	Tape-Foil
16	93-3864-03	1	Shield-Heat
18	88-6040-03	1	Bracket-Hinge, RH
26	3296-29	2	Nut-Lock, NI
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH
29	108-7805	2	Decal
30	99-8139	1	Decal
31	92-2461	1	Decal
32	107-4921	1	Decal-Danger
33	105-2497	1	Decal
34	105-2496	1	Decal

Ref	Part No.	Qty.	Description
39	94-1980	2	Foam-Hood

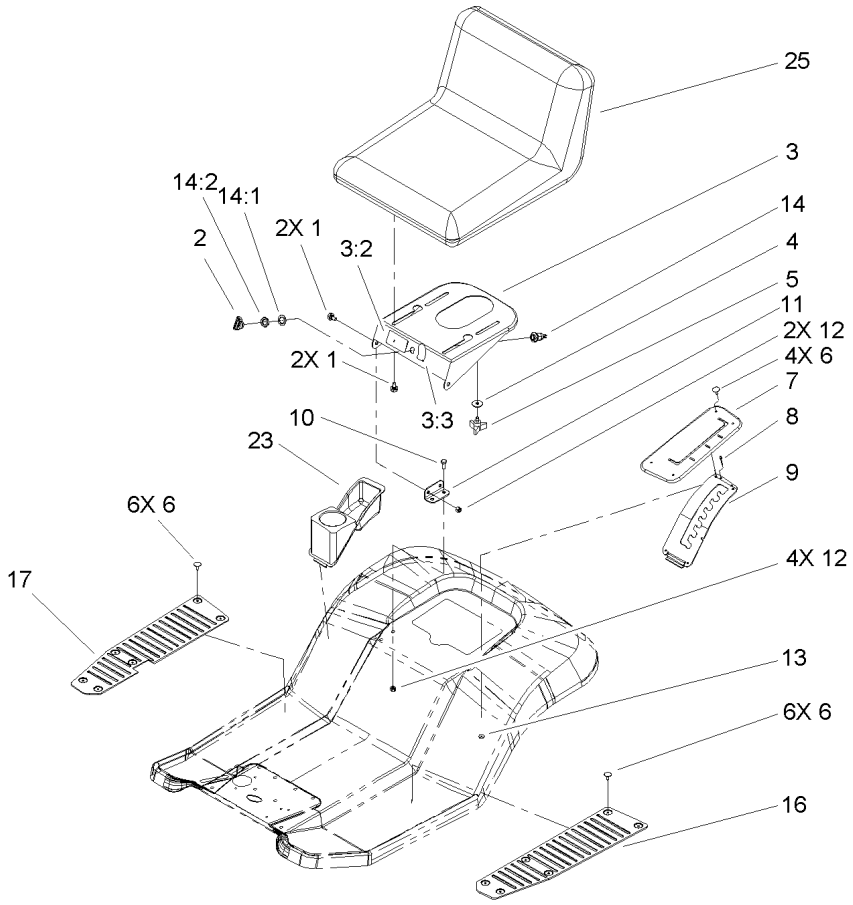

Rear Body and Seat Assembly


Ref	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	63-8360	1	Key-Ignition
3	106-6436	1	Seat Support ASM
3:2	99-2985	1	Decal-Danger
3:3	99-5339	1	Decal
4	5-4460	2	Washer-Pivot
5	92-9674	2	Knob
6	3290-479	16	Fastener-Panel
7	88-5170	1	Cover-HOC
8	3290-282	2	Rivet-Pop
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Hinge, Seat
12	3296-29	6	Nut-Lock, NI
13	3269-26	2	Washer-Flat
14	46-5780	1	Switch-Starter
14:1	3254-5	1	Washer-Tooth
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-Foot, LH
17	88-5230	1	Mat-Foot, RH
23	88-4990	1	Tray-Fender
25	106-6440	1	Seat

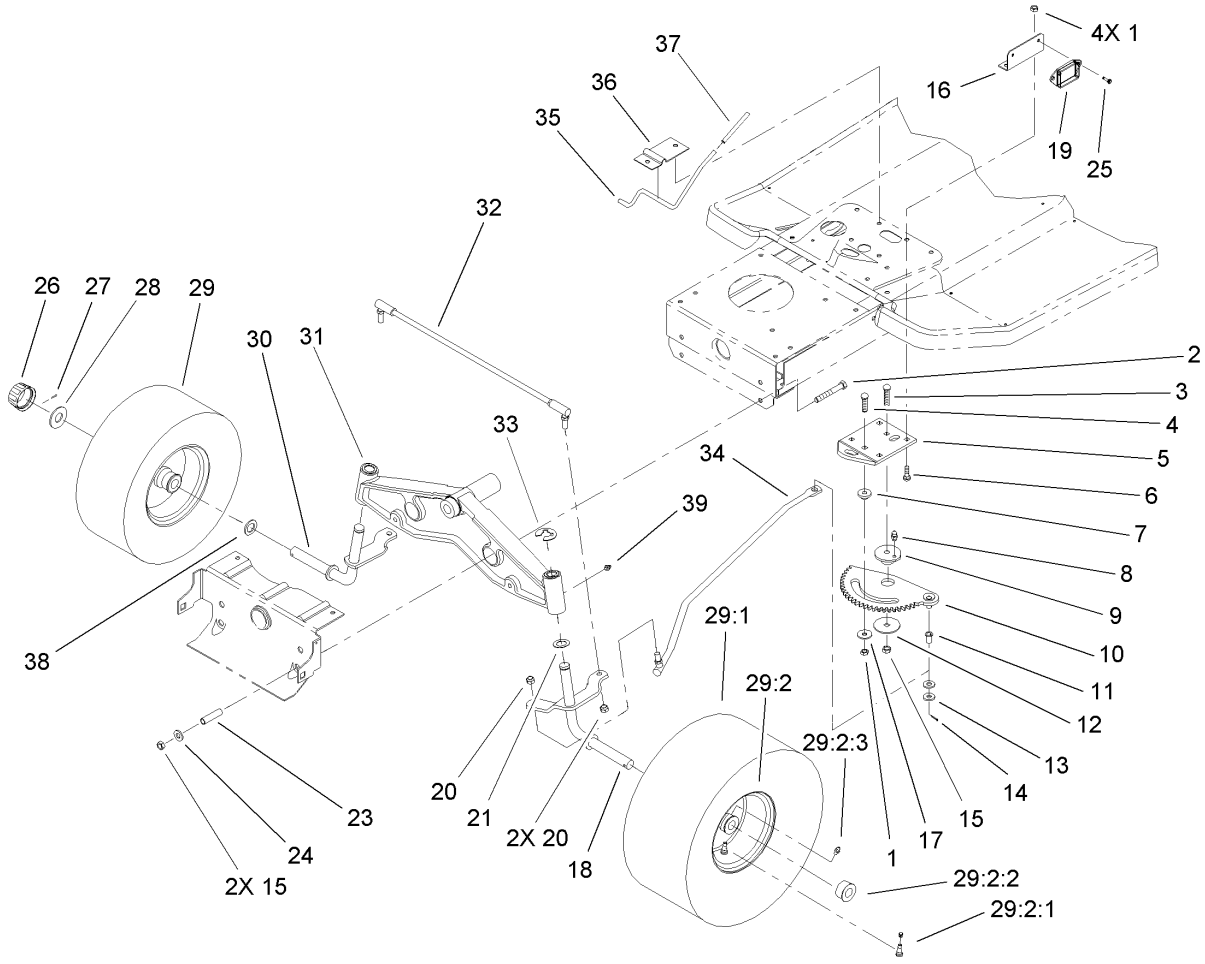

Steering Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	1	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	2	Washer-Flat
14	3272-10	1	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	93-3833-03	1	Spindle-LH
19	99-3701	1	Module-Clutch
20	3296-5	3	Nut-Lock
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3256-24	2	Washer-Flat
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
❷29		2	Front Wheel And Tire ASM
29:1	99-2988	1	Tire
29:2	88-4370	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
❶29:99	232-39	1	Tube
30	92-7889-03	1	RH Spindle ASM
31	99-2955-03	1	Axle-Front
32	93-3873	1	Tie Rod ASM
33	32151-48	2	E-Ring
34	93-3840	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking
38	3-6498	4	Washer-Thrust
39	302-5	2	Fitting-Grease

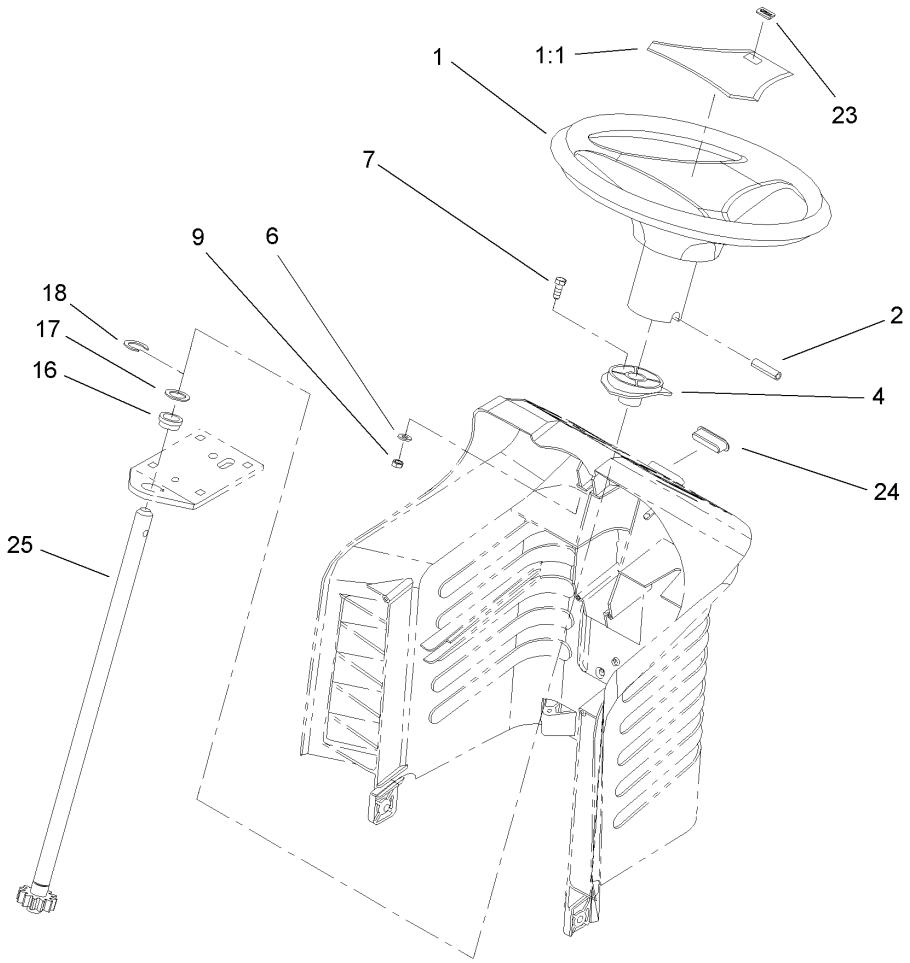

Fixed Steering Assembly


Ref	Part No.	Qty.	Description
1	98-1467	1	Wheel-Steering
1:1	98-1468	1	Cover-Wheel, Steering
2	32121-111	1	Pin-Roll
4	88-4190	1	Bushing-Sliding
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
9	3296-42	2	Nut-Lock, NI
16	88-5150	1	Bearing-Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	E-Ring
23	98-1459	1	Decal
24	88-4150	1	Plug
25	88-6380	1	Shaft-Steering, Long

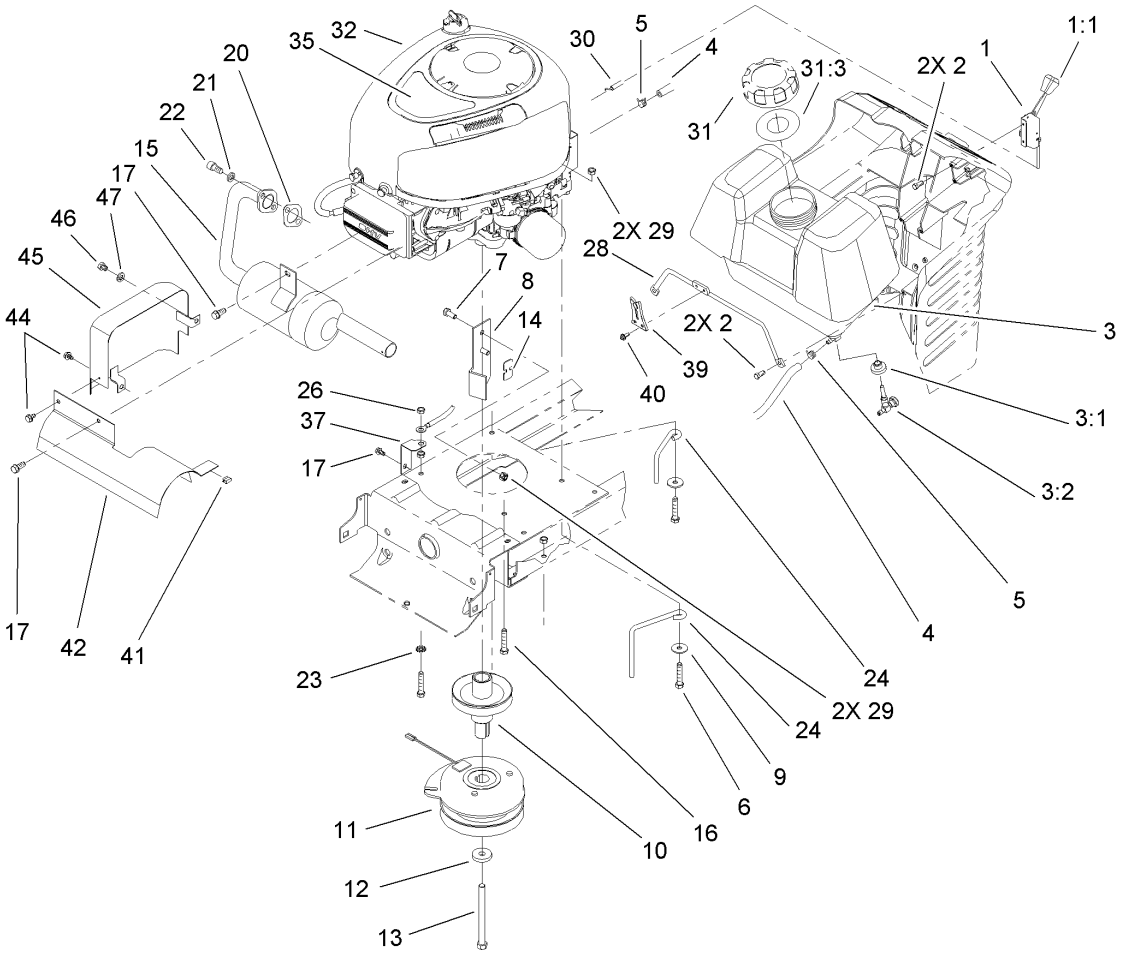

Engine Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Fuel
5	2412-98	2	Clamp
6	322-9	3	Screw-HH
7	322-3	2	Screw-HH
8	107-4914-03	1	Stop-Clutch
9	5-4460	2	Washer-Pivot
10	107-4916	1	Pulley-Engine
11	108-9511	1	Clutch-PTO, Electric
12	112843	1	Washer
13	3212-19	1	Screw-HH
14	98-5023	1	Bumper
15	99-6845	1	Muffler
16	9267154	1	Screw
17	9266714	3	Screw-HWH
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock


Ref	Part No.	Qty.	Description
24	93-3855	2	Guide-Belt, RH
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod-Tank, Gas
29	3296-29	4	Nut-Lock, NI
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
❷❼32		1	Engine-Briggs And Stratton, 31F777-0162-E1
35	107-4906	1	Decal-Engine
37	93-3809	1	Bracket-Ground
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	93-3880-03	1	Shield-Muffler
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock

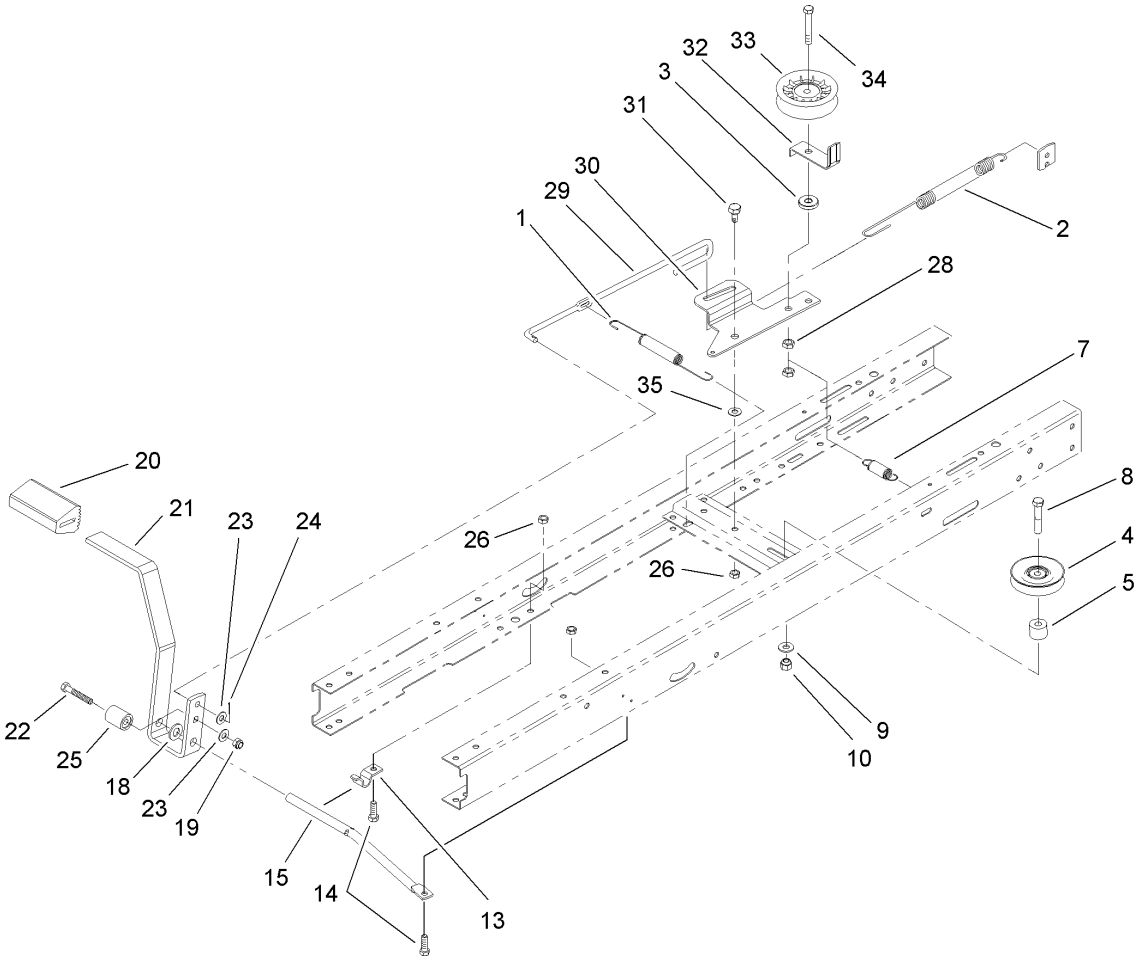

Traction Brake Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	100-7422	1	Spring-Brake
3	92-4890	1	Washer
4	92-7102	1	Pulley-Idler
5	92-5791	1	Spacer
7	88-6330	1	Spring-Extension
8	323-10	1	Screw-HH
9	3256-3	1	Washer-Flat
10	3296-39	1	Nut-Lock, NI
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
18	3256-26	1	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch / Brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Plastic
26	3296-29	3	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch / Brake
30	88-6070	1	Arm-Idler

Ref	Part No.	Qty.	Description
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-11	1	Screw-HH
35	5-4460	1	Washer-Pivot

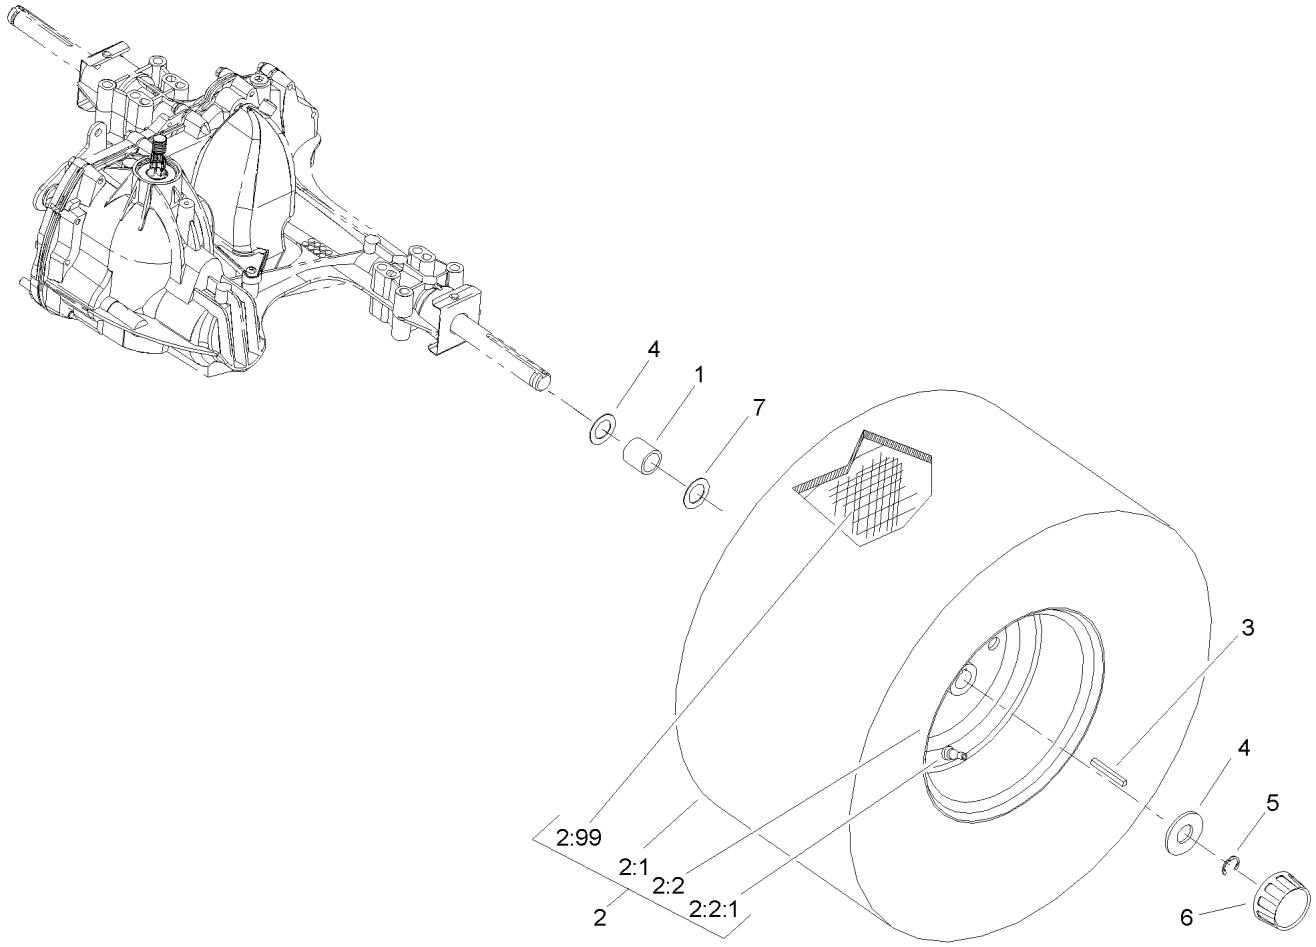


Wheel and Tire Assembly

Ref	Part No.	Qty.	Description
1	104-4161	2	Spacer-Wheel
❷2		2	Rear Wheel And Tire ASM
2:1	99-2994	1	Tire
2:2	88-4390	1	Rim ASM
2:2:1	232-27	1	Stem-Valve
2:99	93-3893	1	Tube-Inner
3	7-0036	2	Key-Square
4	28-2480	4	Washer
5	32151-48	2	E-Ring
6	61-9780	2	Cap-Hub
7	3-6498	2	Washer-Thrust

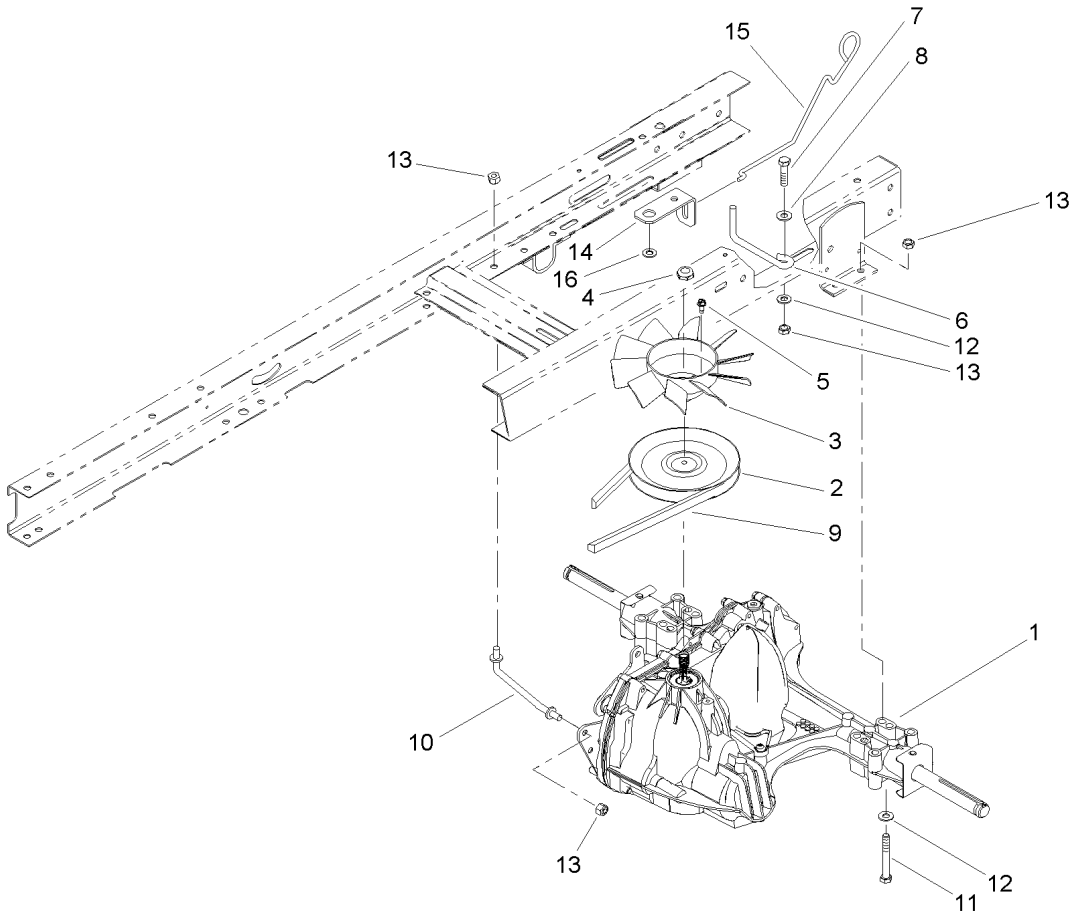

Transaxle Component Assembly


Ref	Part No.	Qty.	Description
1	104-1760	1	Transaxle ASM
2	104-1753	1	Pulley
3	104-2162	1	Fan
4	3296-28	1	Nut-Lock, NI
5	9134304	3	Screw
6	93-3868	1	Guide-Belt, Transmission
7	322-5	1	Screw-HH
8	5-4460	1	Washer-Pivot
9	88-6250	1	V-Belt
10	100-6225	1	Strap-Torque
11	322-13	4	Screw-HH
12	3256-23	3	Washer-Flat
13	3296-29	7	Nut-Lock, NI
14	100-7406	1	Bracket-Bypass
15	100-7407	1	Wire-Bypass
16	3256-3	1	Washer-Flat

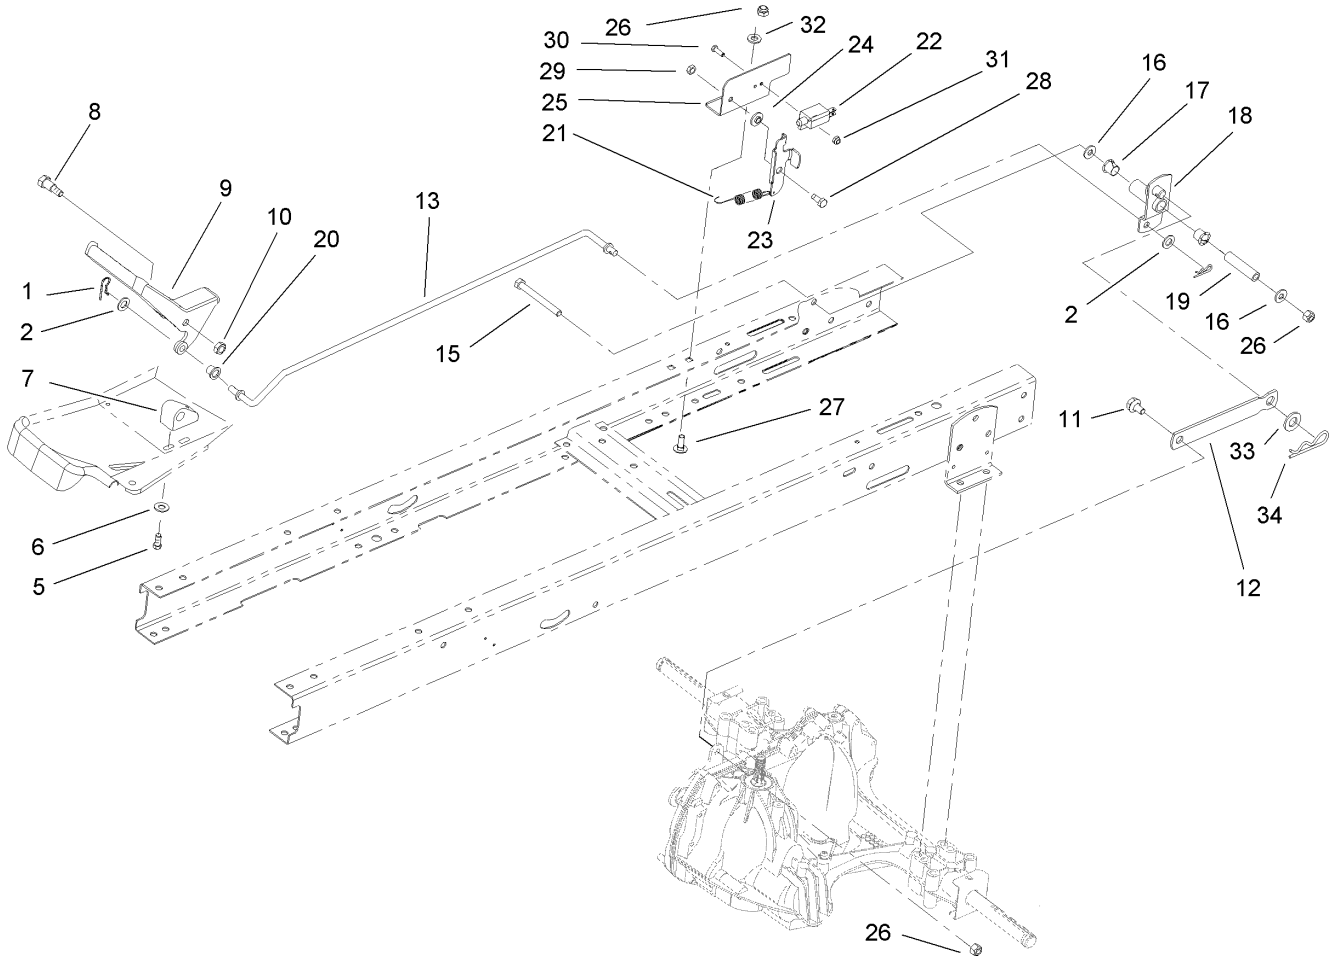

Transaxle Installation Assembly


Ref	Part No.	Qty.	Description
1	3290-307	2	Pin-Hair
2	3256-38	2	Washer-Flat
5	46-8090	2	Screw-Plastite
6	3256-22	2	Washer-Flat
7	88-4690	1	Block-Pivot
8	23-0310	1	Bolt-Shoulder
9	99-6120-05	1	Pedal-Control, Speed
10	3296-59	1	Nut-Lock, NI
11	37-8770	1	Bolt-Shoulder
12	99-6849	1	Link-Control, Speed
13	99-6839	1	Rod-Control, Speed
15	322-14	1	Screw-HH
16	3256-2	2	Washer-Flat
17	256-257	2	Bushing-Nyliner
18	99-6835-03	1	Pivot ASM
19	99-6832	1	Spacer-Pivot
20	99-6121	1	Bushing
21	99-6805	1	Spring-Extension
22	95-1653	1	Switch-Pole, Single
23	99-6807	1	Bracket-Pivot
24	99-6808	1	Washer-Stepped
25	99-6806	1	Bracket-Adjustment
26	3296-29	4	Nut-Lock, NI
27	3230-18	2	Screw-CARR

Ref	Part No.	Qty.	Description
28	99-6810	1	Screw-HH
29	3296-42	1	Nut-Lock, NI
30	3290-392	2	Screw-HHF
31	3296-1	2	Nut-Lock
32	3256-23	2	Washer-Flat
33	3256-26	1	Washer-Flat
34	9335054	1	Pin-Hair

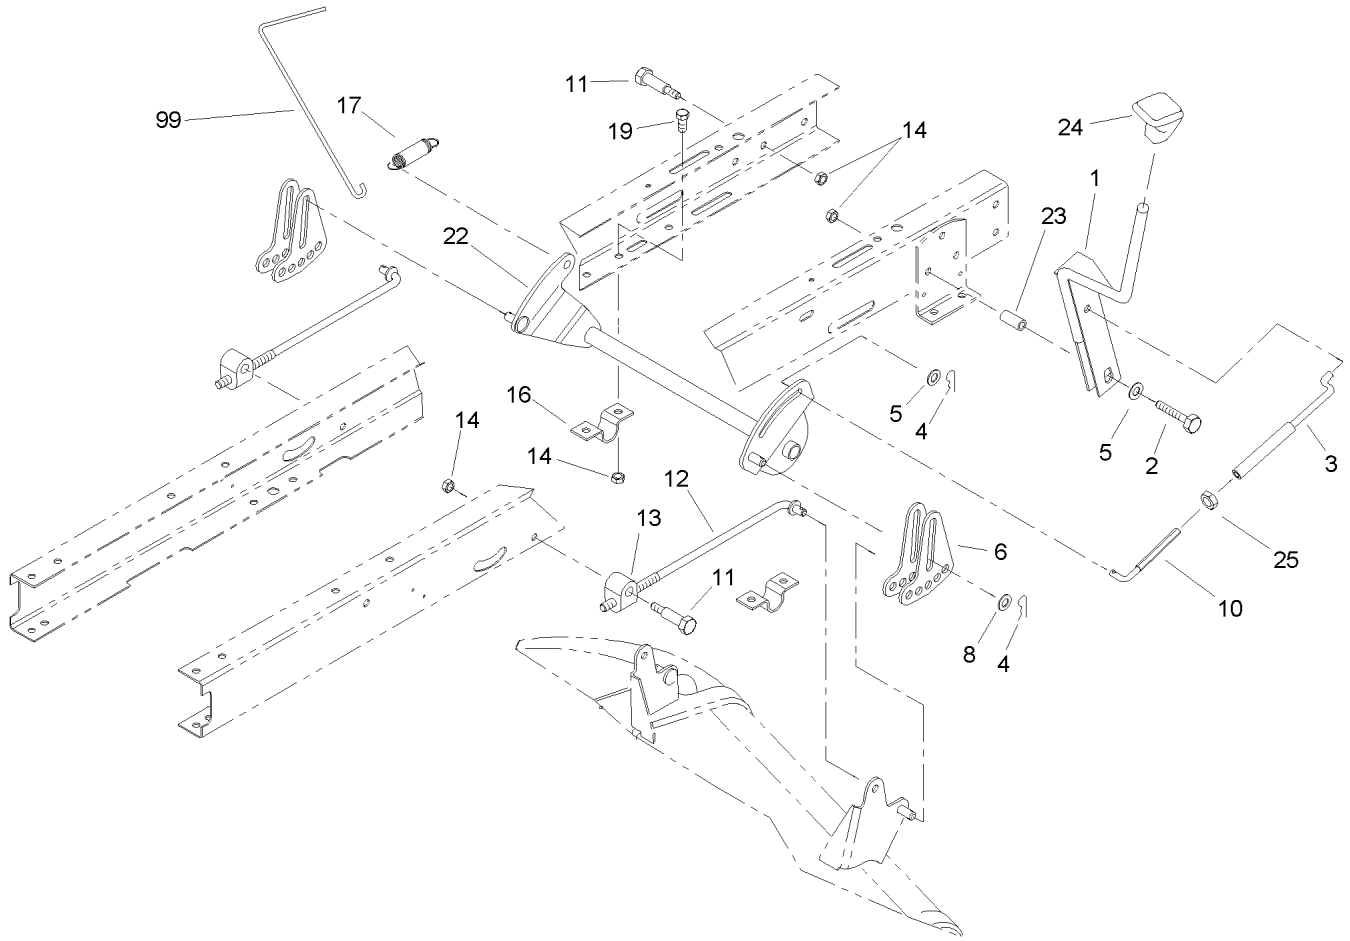

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description
1	93-3822-03	1	Lever ASM
2	322-32	1	Screw-HH
3	93-3885	1	Tube
4	3290-307	3	Pin-Hair
5	3256-24	2	Washer-Flat
6	88-5570-03	4	Link-Adjusting, HOC
8	80-6990	2	Washer-Hardened
10	93-3888	1	Link-HOC
11	7-0030	3	Bolt-Shoulder
12	88-5450	2	Rod-Hanger, Rear
13	88-4230	2	Trunnion-HOC
14	3296-29	8	Nut-Lock, NI
16	88-4730	2	Clamp-Pivot, HOC
17	93-3808	1	Spring-Extension
19	322-3	4	Screw-HH
22	93-7660-03	1	Pivot-HOC
23	65-7210	1	Spacer
24	94-5565	1	Knob-Shift
25	3218-2	1	Nut-Jam
99	92-5771	1	Rod-Removal, Spring

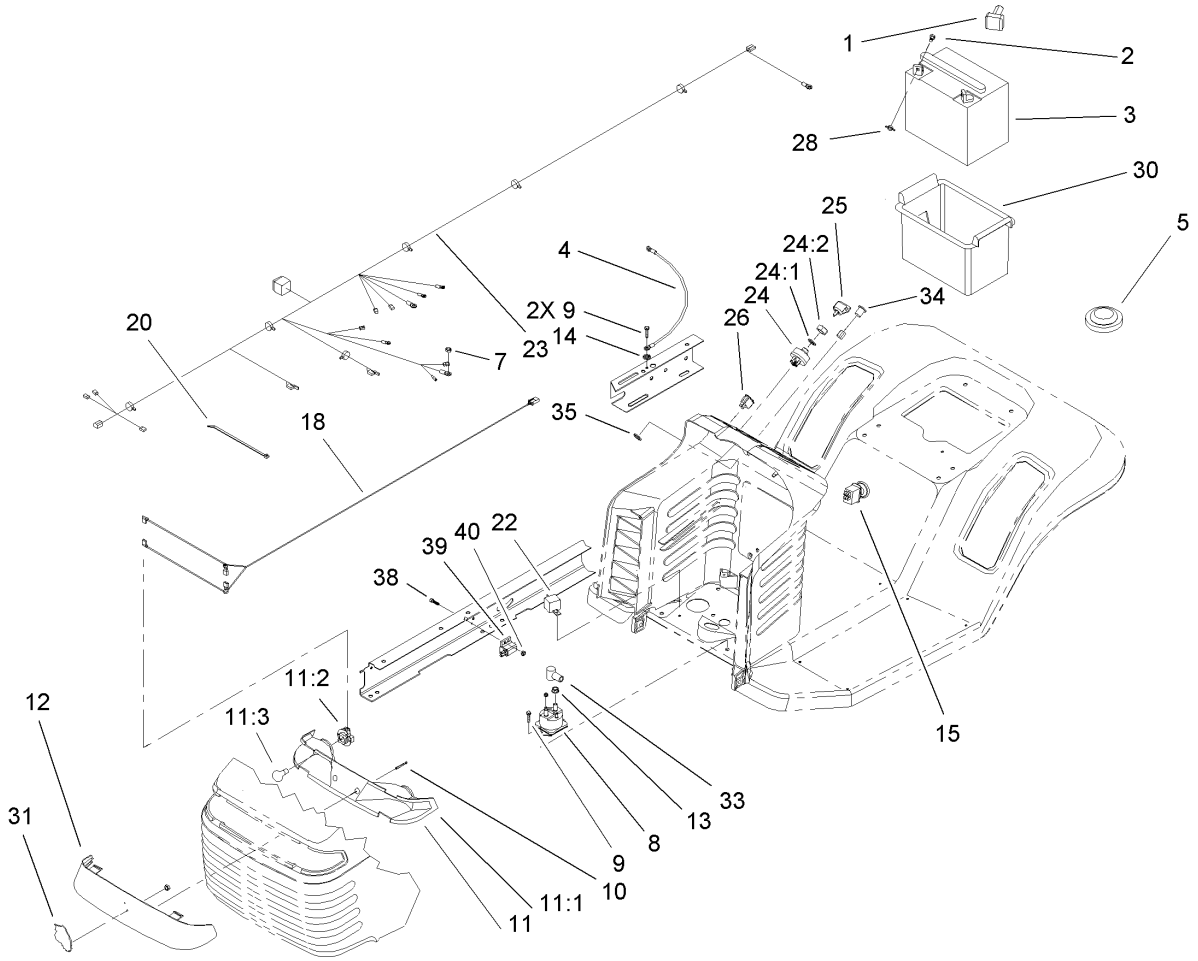

Electrical Assembly

Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut-Keps
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
10	32144-32	2	Screw
11	88-3970	1	Reflector And Lamp ASM
11:1	93-8741	1	Reflector
11:2	116262	2	Socket-Headlight
11:3	7228	2	Bulb
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut-Keps
14	3255-7	2	Washer-Lock / EXT
15	93-9998	1	Switch-PTO
18	99-1935	1	Harness-Headlight
20	614249	1	Strap-Tie
22	98-7249	1	Relay
23	107-4912	1	Harness-Wire
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH


Ref	Part No.	Qty.	Description
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal
34	95-7652	1	Light-Indicator
35	32151-80	1	Nut-Push-On, Circular
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

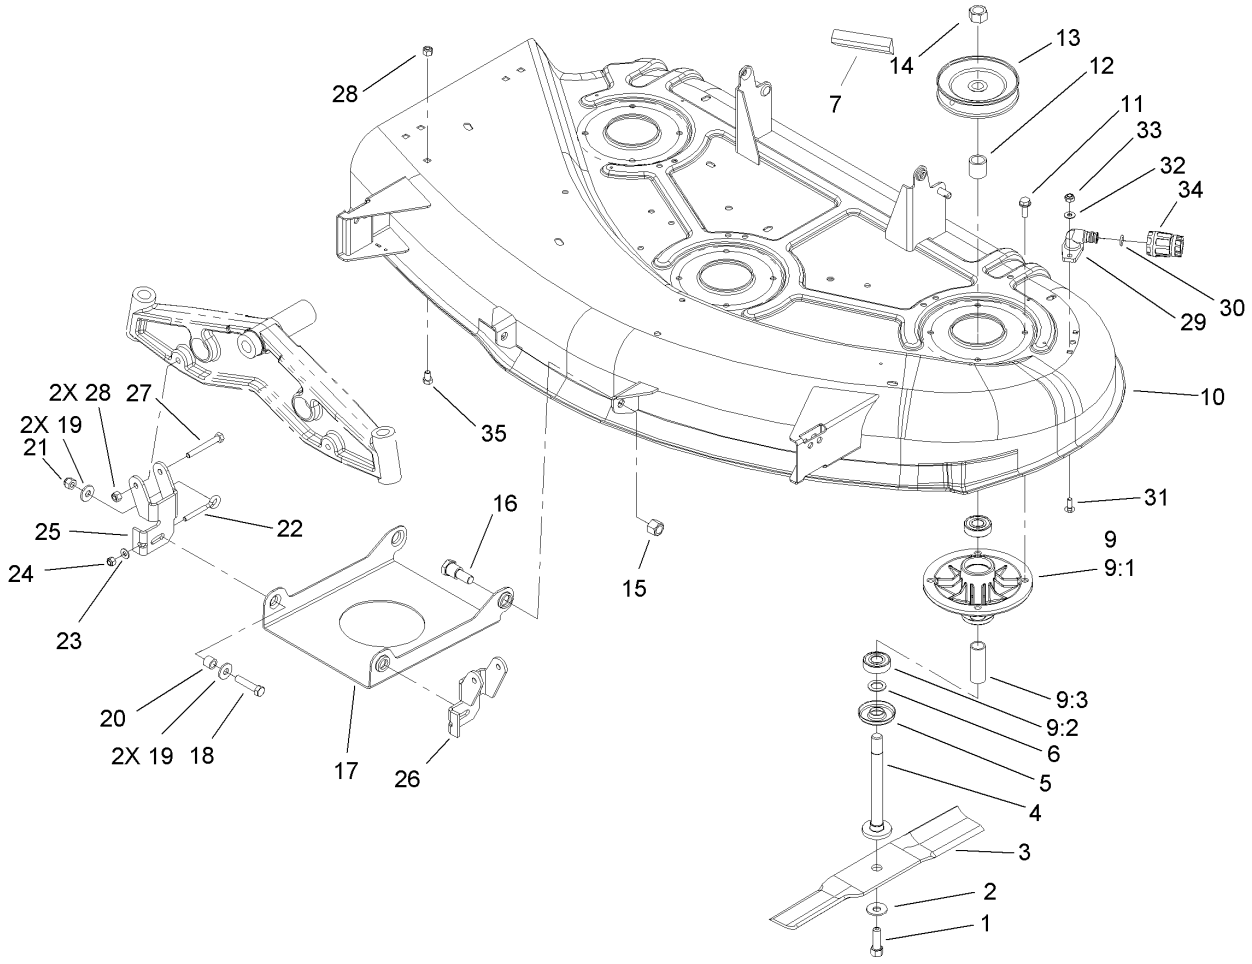

Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	26-0671	3	Screw-Blade
2	3290-465	3	Washer-Belleville
3	54-0010	3	Blade
4	80-4342	3	Shaft-Spindle
5	80-4360	3	Shield-Bearing
6	80-4380	3	Spacer
7	105-2473	1	V-Belt, 44In Deck
❷9		3	Spindle ASM
9:1	88-4510	1	Housing-Spindle
9:2	100-1048	2	Bearing-Ball
9:3	62-3661	1	Spacer-Bearing
10	95-6107	1	Deck ASM
11	32144-41	12	Screw-Taptite
12	88-5360	3	Spacer
13	107-1724	3	Pulley ASM
14	3219-6	3	Nut-Hex
15	3296-23	2	Nut-Lock, NI
16	94-5823	2	Bolt-Shoulder
17	93-3881-03	1	Pan-Front Deck, Suspension
18	323-9	2	Screw-HH
19	80-6990	4	Washer-Hardened
20	93-9847	2	Spacer
21	3296-39	2	Nut-Lock, NI
22	61-9980	2	Screw-Adjusting


Ref	Part No.	Qty.	Description
23	3256-22	2	Washer-Flat
24	3296-42	2	Nut-Lock, NI
25	93-9849-03	1	Bracket-RH
26	93-9848-03	1	Bracket-LH
27	322-12	2	Screw-HH
28	3296-29	3	Nut-Lock, NI
29	95-2747	1	Fitting-Washout
30	46-6290	1	O-Ring
31	3229-1	2	Screw-CARR
32	3256-1	2	Washer-Flat
33	3296-16	2	Nut-Lock, NI
34	95-3270	1	Connector-Hose
35	322-1	1	Screw-HH

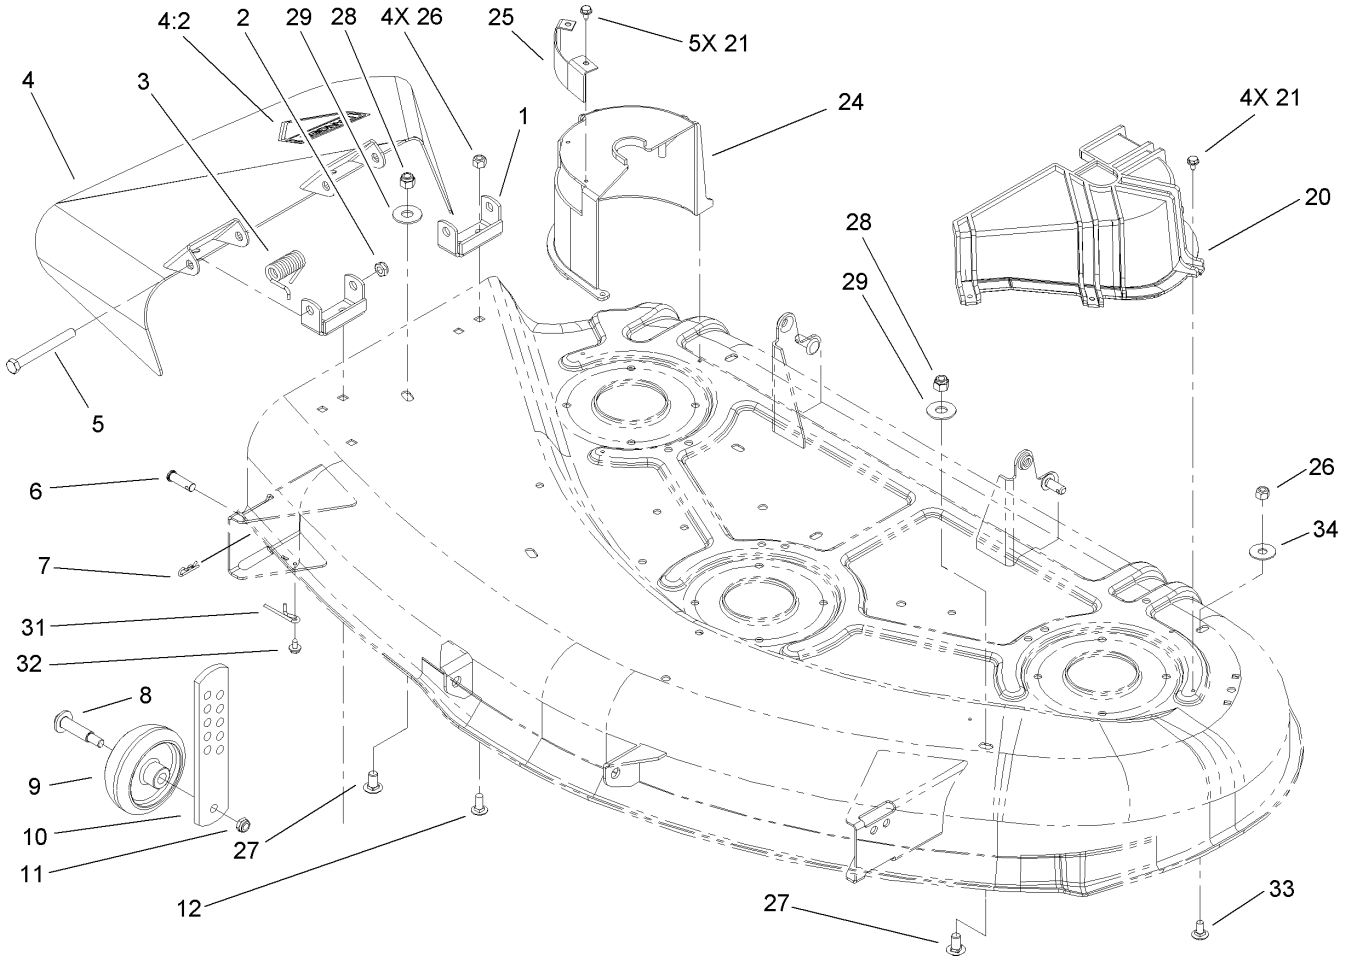

Chute and Recycler Assembly


Ref	Part No.	Qty.	Description
1	29-5590-03	2	Bracket-Pivot
2	3296-5	2	Nut-Lock
3	40-6230	2	Spring
4	100-6206	1	Deflector ASM
4:2	43-8480	1	Decal-Danger
5	3211-15	2	Screw-HH
6	283-2	2	Pin-Clevis
7	3290-307	2	Pin-Hair
8	56-6591	2	Bolt-Wheel
9	701756	2	Wheel-Gage
10	93-8010	2	Plate-Gage, Wheel
11	3296-59	2	Nut-Lock, NI
12	3230-23	4	Screw-CARR
20	93-3866	1	Cover-Belt, LH
21	32104-76	9	Screw
24	93-3865	1	Cover-Belt, RH
25	93-3876-03	1	Insert-Belt Cover
26	3296-29	5	Nut-Lock, NI
27	3231-21	2	Screw-CARR
28	3296-39	2	Nut-Lock, NI
29	3256-5	2	Washer-Flat
31	94-1981	2	Spring-Gage, Wheel
32	32104-76	2	Screw
33	3230-18	1	Screw-CARR

Ref	Part No.	Qty.	Description
34	52-2860	1	Washer

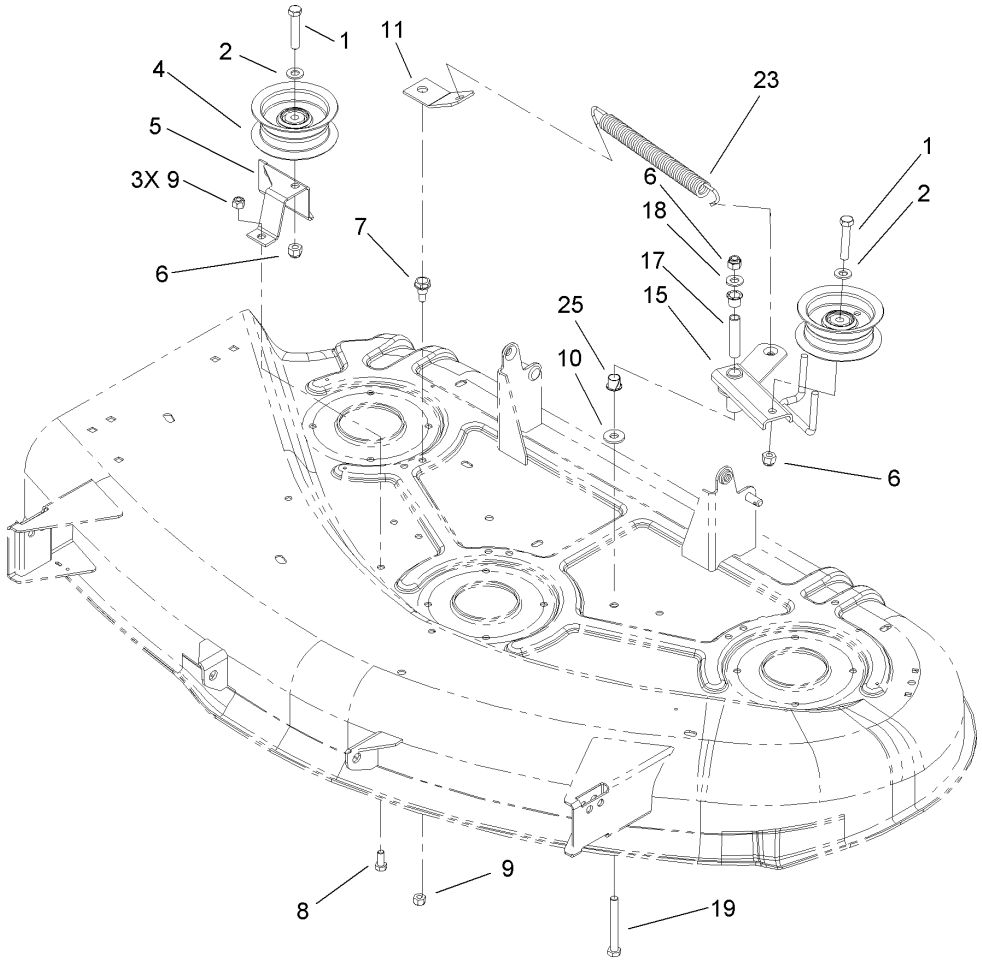


Pulley and Brake Assembly

Ref	Part No.	Qty.	Description
1	323-10	2	Screw-HH
2	3256-24	2	Washer-Flat
4	88-5630	2	Pulley-Idler, Flat
5	93-3860-03	1	Bracket-Idler
6	3296-39	3	Nut-Lock, NI
7	92-6986	1	Bolt-Shoulder
8	322-3	3	Screw-HH
9	3296-29	4	Nut-Lock, NI
10	80-6990	1	Washer-Hardened
11	107-4917	1	Bracket-Spring
15	94-1986-03	1	Bellcrank
17	94-1988	1	Spacer-Pivot
18	3256-24	1	Washer-Flat
19	323-14	1	Screw-HH
23	93-3850	1	Spring-Engage, Deck
25	256-257	2	Bushing-Nyliner

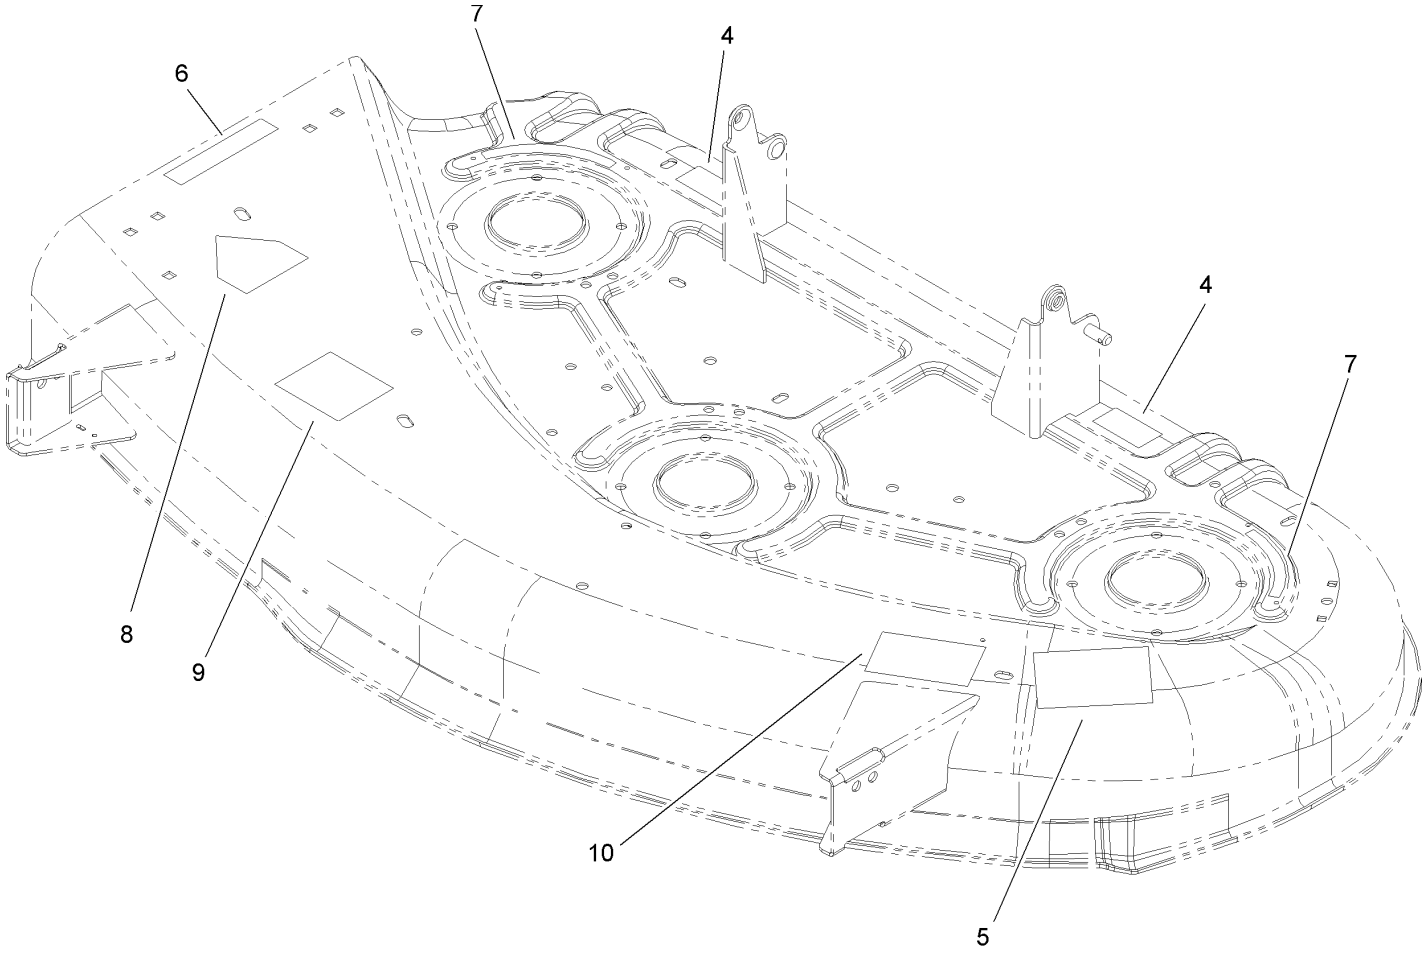

Deck Assembly No. 95-6107


Ref	Part No.	Qty.	Description
4	55-4300	2	Decal-Warning
5	66-1340	1	Decal-Danger
6	68-3650	1	Decal-Danger, Deflector
7	68-3660	2	Decal-Danger, Shield
8	93-1122	1	Decal-Danger
9	93-3777	1	Decal-Install, Belt
10	93-7282	1	Decal-Adjustment, Wheel

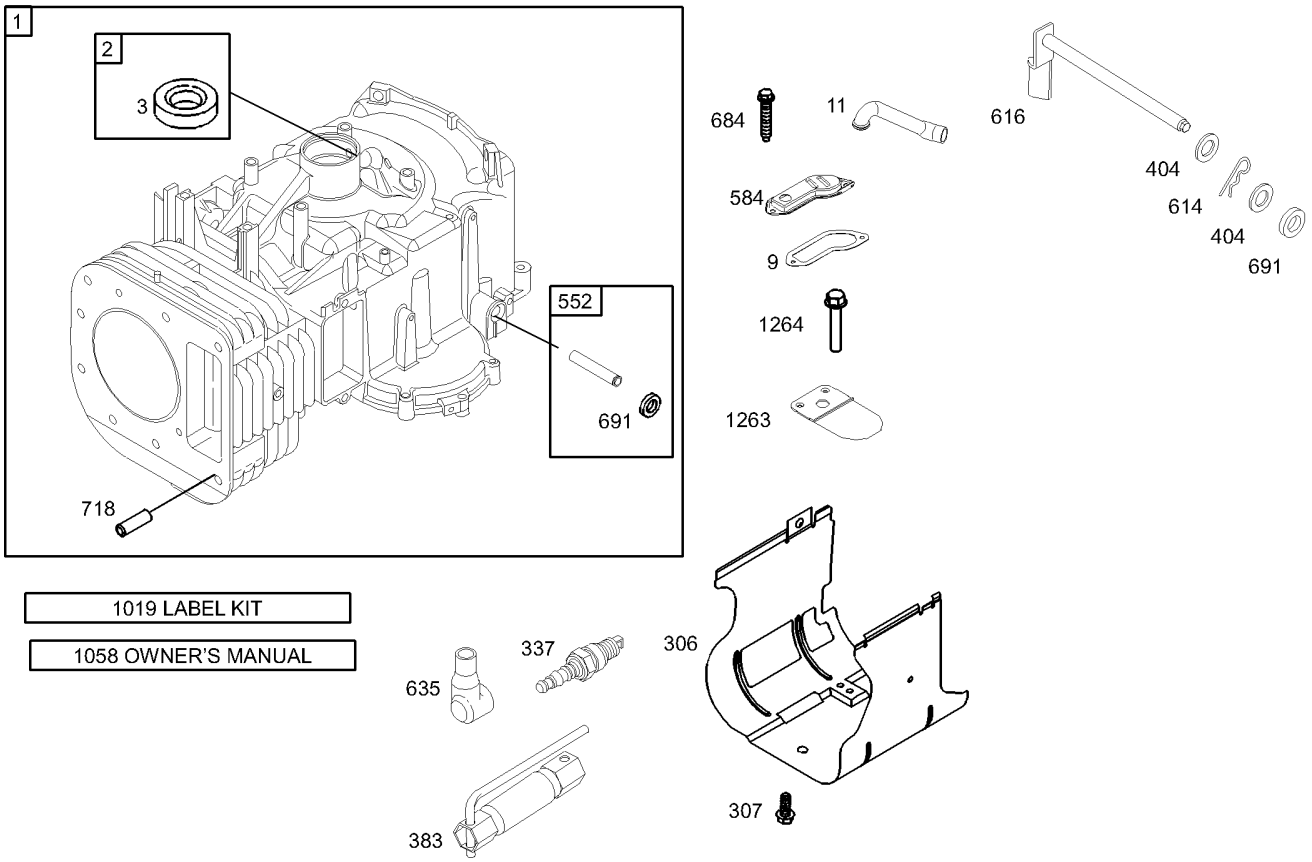

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 31F777-0162-E1


Ref	Part No.	Qty.	Description
❼1	697174	1	Cylinder ASM
❼2	399265	1	Bushing / Seal Kit
❸❼3	391086	1	Seal-Oil
❸❼9	697109	1	Gasket-Breather
❼11	697113	1	Tube-Breather
❼48	697762	1	Short Block ASM
❼306	697107	1	Shield–Cylinder
❼307	691003	1	Screw
❼337	491055	1	Plug-Spark
❼383	89838	1	Wrench-Plug, Spark
❼404	691691	1	Washer
❼552	697144	1	Bushing-Crank, Governor
❼584	697112	1	Cover-Passage, Breather
❼614	691620	1	Pin-Cotter
❼616	692012	1	Crank-Governor
❼635	691909	1	Boot-Plug, Spark
❼684	697157	1	Screw
❸❼691	692407	1	Seal-Shaft, Governor
❼718	690959	1	Pin-Locating
❼1019	697143	1	Label Kit
❼1058	275038	1	Owner's Manual
❼1263	697124	1	Reed-Breather
❼1264	697104	1	Screw

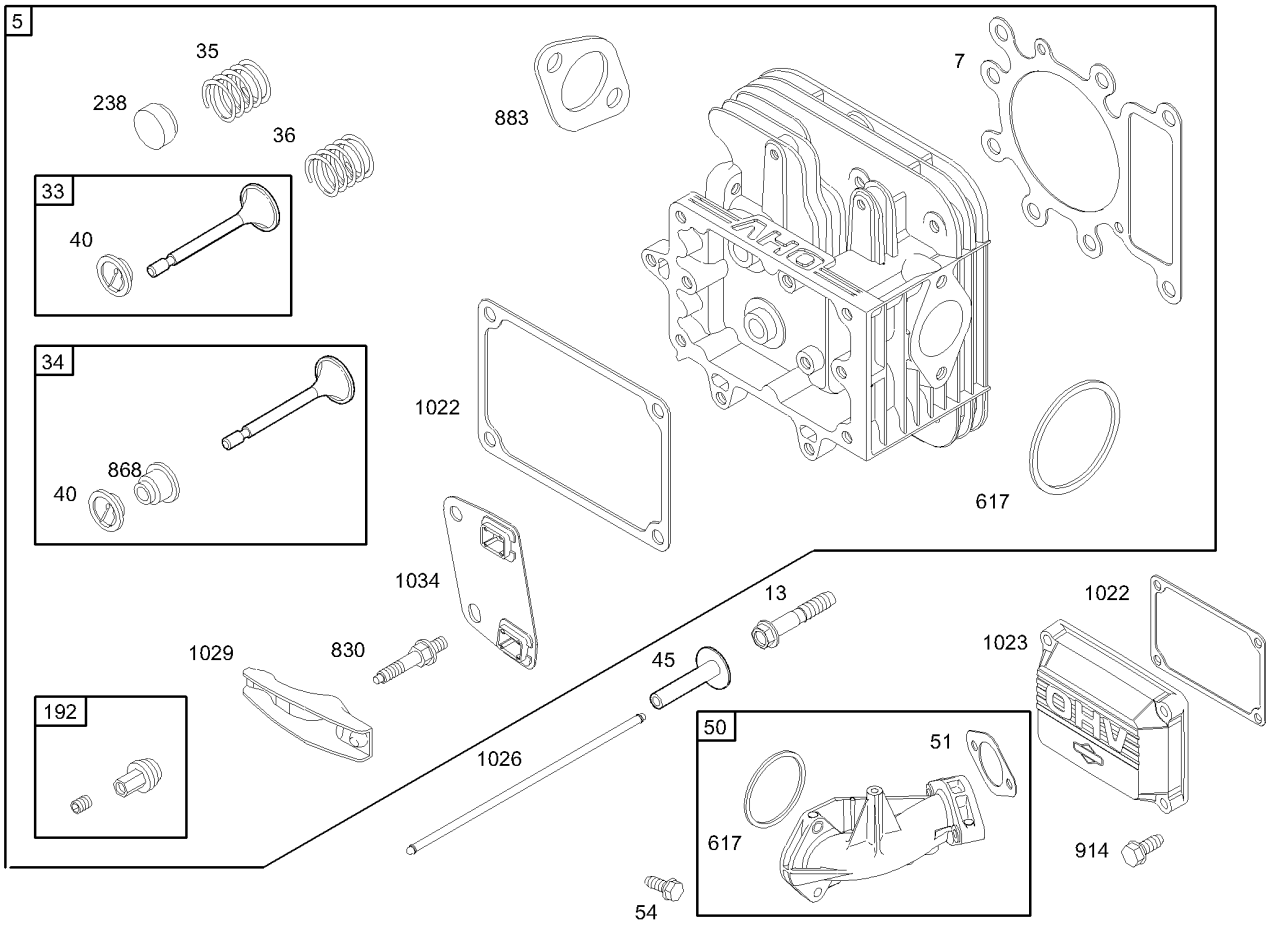

Cylinder Head Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❼5	698147	1	Head-Cylinder
❸❹7 ❼	692410	1	Gasket–Cylinder Head
❼13	690360	1	Screw
❼33	495856	1	Valve-Exhaust
❼34	495857	1	Valve-Intake
❼35	691279	1	Spring-Valve
❼36	691279	1	Spring-Valve
❼40	691752	1	Retainer-Valve
❼45	690564	1	Tappet-Valve
❼50	690193	1	Manifold–Intake
❸❹51 ❺❻	692137	1	Gasket-Intake
❼54	691148	1	Screw
❼192	691986	1	Adjustor-Arm, Rocker
❼238	691843	1	Cap-Valve
❸❺617 ❼	692138	1	Seal
❼830	691095	1	Stud-Arm, Rocker
❸❹868 ❼	690968	1	Seal-Valve
❼883	692236	1	Gasket–Exhaust
❼914	690960	1	Screw
❸❼1022	272475	1	Gasket-Cover, Rocker
❼1023	692492	1	Cover-Rocker


Ref	Part No.	Qty.	Description
❼1026	692003	1	Rod–Push, Intake
❼	692011	1	Rod–Push, Exhaust
❼1029	691751	1	Arm-Rocker
❼1034	690822	1	Guide-Rod, Push

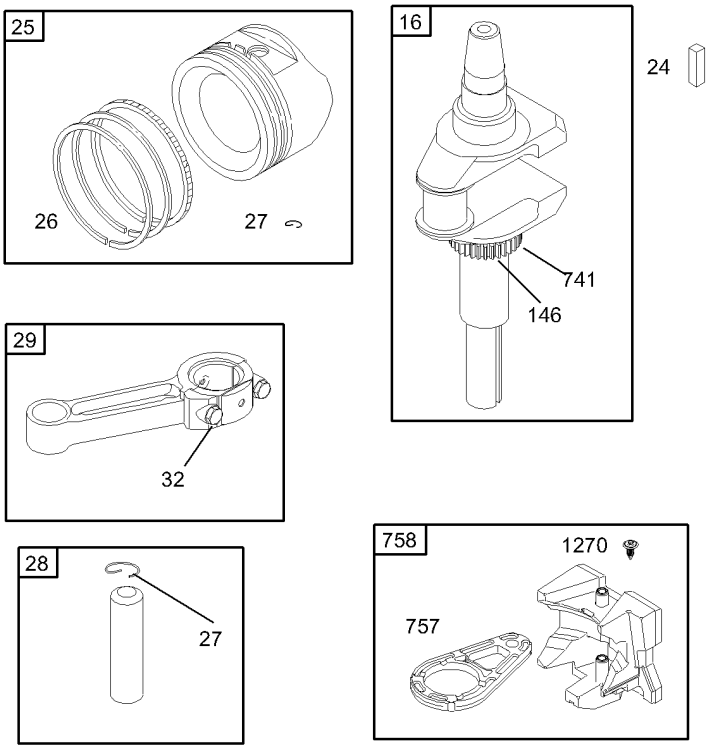

Assemblies include all parts shown in frames.

Crankshaft Assembly
Briggs and Stratton 31F777-0162-E1


Ref	Part No.	Qty.	Description
❼16	697127	1	Crankshaft
❼24	222698	1	Key
❼25	697159	1	Piston ASM (Standard)
❼	697160	1	Piston ASM (.010" Oversize)
❼	697162	1	Piston ASM (.020" Oversize)
❼	697163	1	Piston ASM (.030" Oversize)
❼26	697164	1	Ring Set (Standard)
❼	697165	1	Ring Set (.010" Oversize)
❼	697171	1	Ring Set (.020" Oversize)
❼	697172	1	Ring Set (.030" Oversize)
❼27	698469	1	Lock-Pin, Piston
❼28	697099	1	Pin-Piston (Standard)
❼29	697126	1	Rod–Connecting (Standard)
❼	697264	1	Rod-Connecting (.020In Undersize)
❼32	692852	1	Screw
❼146	690979	1	Key-Timing
❼741	697128	1	Gear-Timing
❼757	697607	1	Link-Counterweight
❼758	697134	1	Counterweight
❼1270	697156	1	Plug-Counterweight, Avs

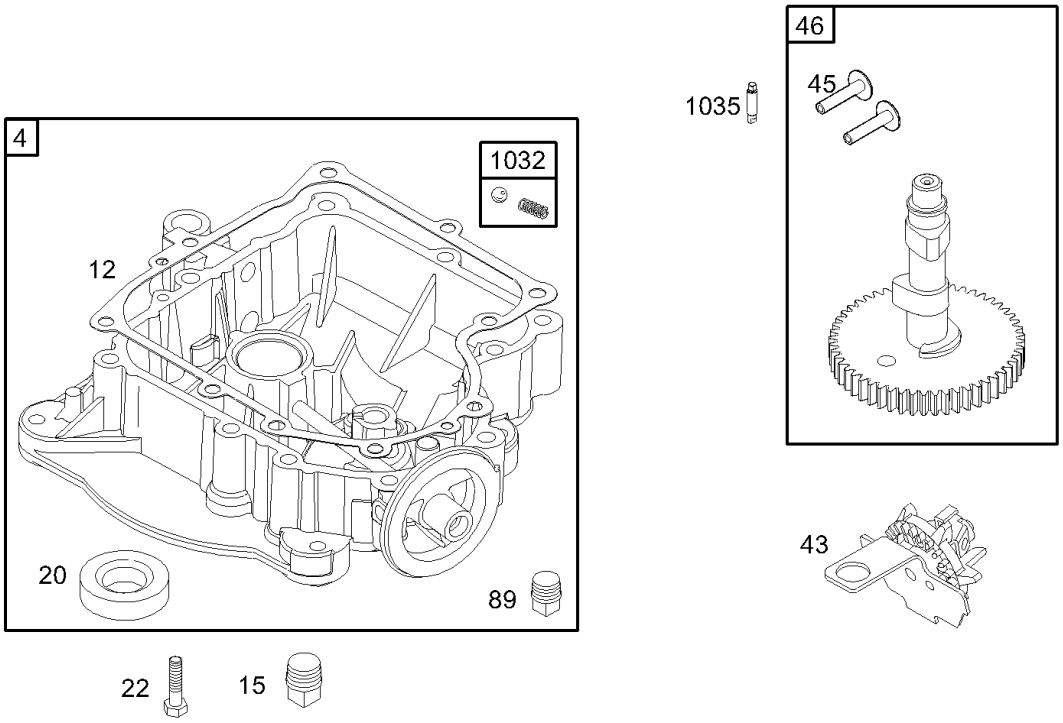

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 31F777-0162-E1


Ref	Part No.	Qty.	Description
❼4	697188	1	Sump–Engine
❸❼12	697110	1	Gasket-Crankcase
❼15	690946	1	Plug-Drain, Oil
❸❼20	690947	1	Seal-Oil
❼22	692125	1	Screw
❼43	691968	1	Slinger-Governor / Oil
❼45	690564	1	Tappet-Valve
❼46	693450	1	Camshaft
❼89	690283	1	Plug
❼1032	491710	1	Ball–Pump, Oil
❼1035	693784	1	Shaft–Pump

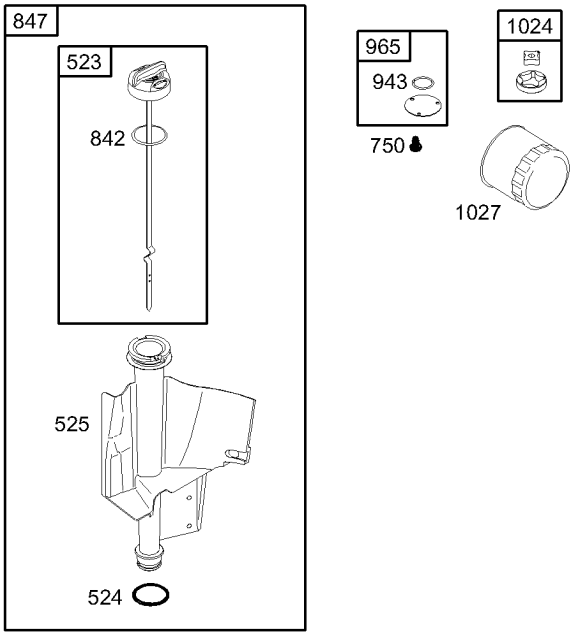

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❼523	697086	1	Dipstick
❸❼524	691032	1	Seal
❼525	697184	1	Tube-Dipstick
❼750	691033	1	Screw
❸❼842	691031	1	Seal-O Ring
❼847	697611	1	Dipstick And Tube ASM
❸❼943	690589	1	Seal–O Ring
❼965	499613	1	Cover–Pump, Oil
❼1024	499054	1	Pump–Oil
❼1027	492932	1	Filter-Oil

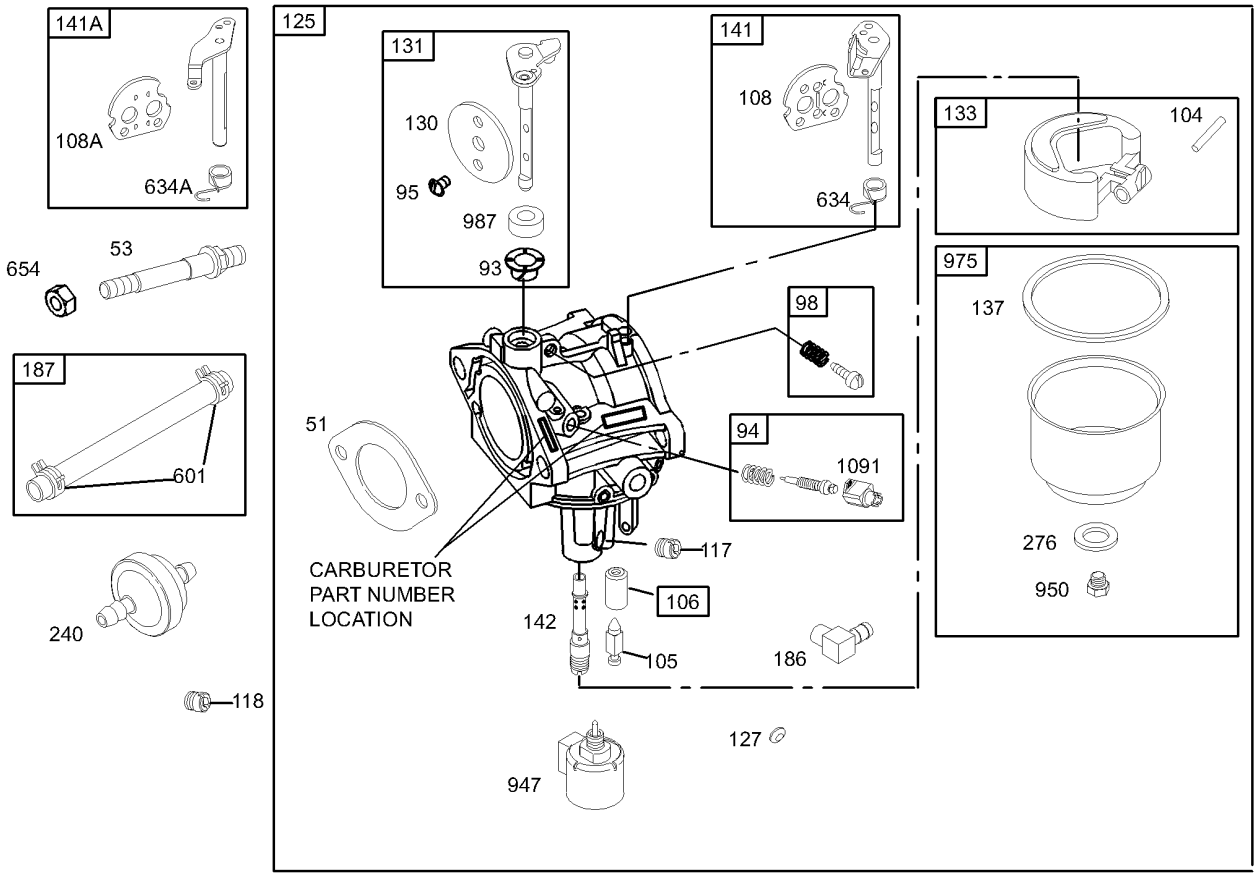


Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❻	692137	1	Gasket-Intake
❼53	690227	1	Stud
❺❼93	690602	1	Bushing-Shaft, Throttle
❼94	498030	1	Idle Mixture Kit
❺❼95	691636	1	Screw
❼98	495800	1	Idle Speed Kit
❺❼104	690525	1	Pin-Hinge, Float
❺❼105	231855	1	Valve-Needle, Float
❺❼106	690577	1	Seat-Inlet
❼108	690464	1	Valve–Choke
❼108A	692344	1	Valve–Choke
❺❼117	694352	1	Jet–Main (Standard)
❼118	697228	1	Jet–Main (High Altitude)
❼125	697190	1	Carburetor
❼127	695005	1	Plug–Welch
❼130	691750	1	Valve–Throttle
❼131	494379	1	Throttle Shaft Kit
❼133	494381	1	Float-Carburetor
❺❻137 ❼	281165	1	Gasket-Bowl, Float
❼141	495097	1	Choke Shaft Kit
❼141A	495931	1	Choke Shaft Kit
❺❼142	697140	1	Nozzle–Carburetor

Ref	Part No.	Qty.	Description
❼186	698174	1	Connector-Hose
❼187	697098	1	Line-Fuel
❼240	394358	1	Filter-Fuel
❺❻276 ❼	692255	1	Washer-Sealing
❼601	95162	1	Clamp-Hose
❺❼634	690801	1	Spring / Seal ASM
❺❼634A	690802	1	Spring / Seal ASM
❼654	690958	1	Nut
❼947	694393	1	Solenoid–Fuel
❼950	691657	1	Screw
❼975	495933	1	Bowl–Float
❺❼987	691326	1	Seal-Shaft, Throttle
❼1091	691333	1	Cap-Limiter

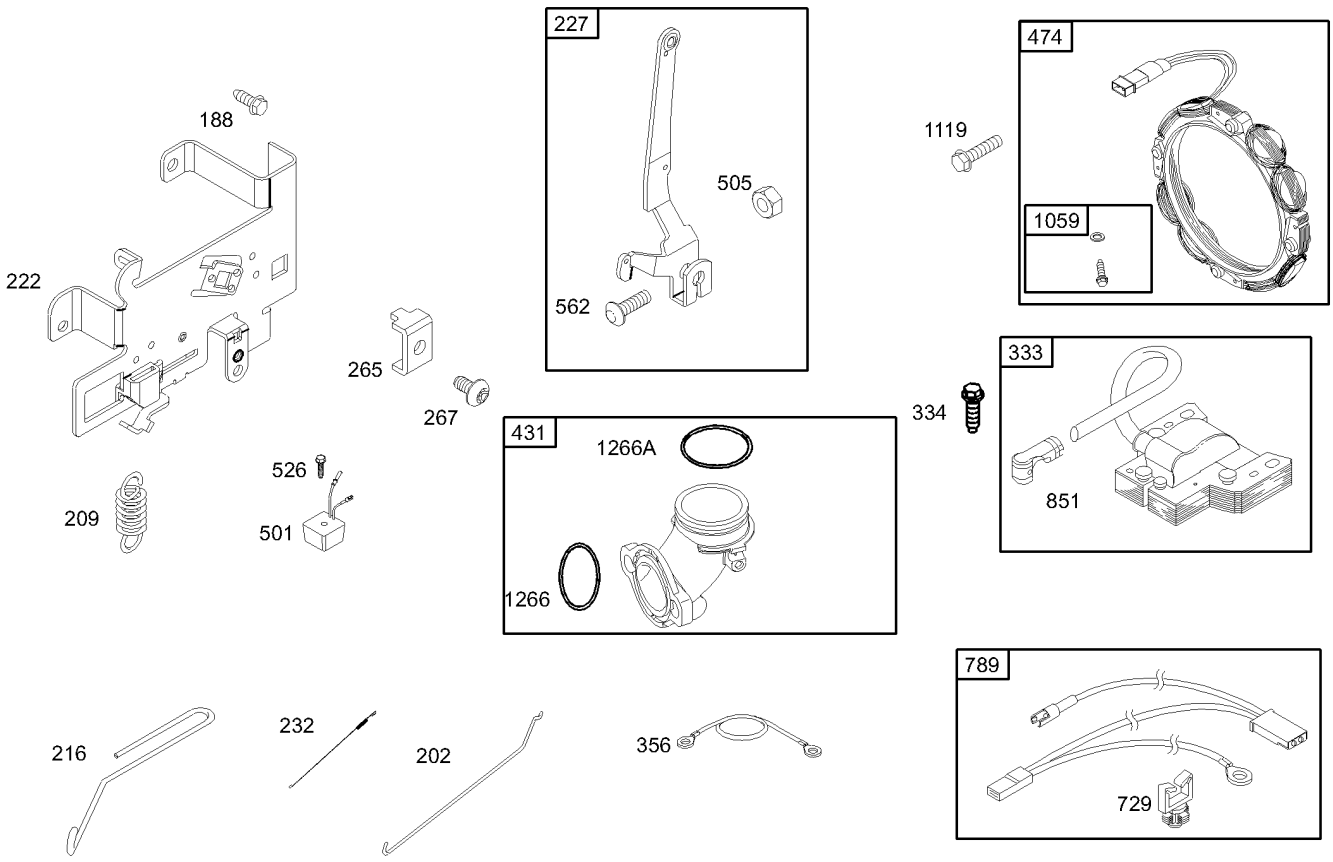


Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❼188	691693	1	Screw
❼202	691841	1	Link-Governor, Mechanical
❼209	692208	1	Spring-Governor
❼216	691840	1	Link-Choke
❼222	694042	1	Bracket-Control
❼227	691374	1	Lever-Control, Governor
❼232	691842	1	Spring-Link, Governor
❼265	691024	1	Clamp-Casing
❼267	695134	1	Screw
❼333	492341	1	Armature-Magneto
❼334	691061	1	Screw
❼356	697089	1	Stop–Wire
❼431	697122	1	Elbow-Intake
❼474	696458	1	Alternator
❼501	691185	1	Regulator
❼505	691251	1	Nut
❼526	697348	1	Screw
❼562	691119	1	Screw
❼729	691335	1	Clip–Wire
❼789	692037	1	Wiring–Harness
❼851	493880	1	Terminal-Spark Plug
❼1059	698516	1	Screw/Washer Kit
❼1119	691183	1	Screw
❸❼1266	691917	1	Seal-O Ring


Ref	Part No.	Qty.	Description
❸❼1266A	697123	1	Seal-O Ring

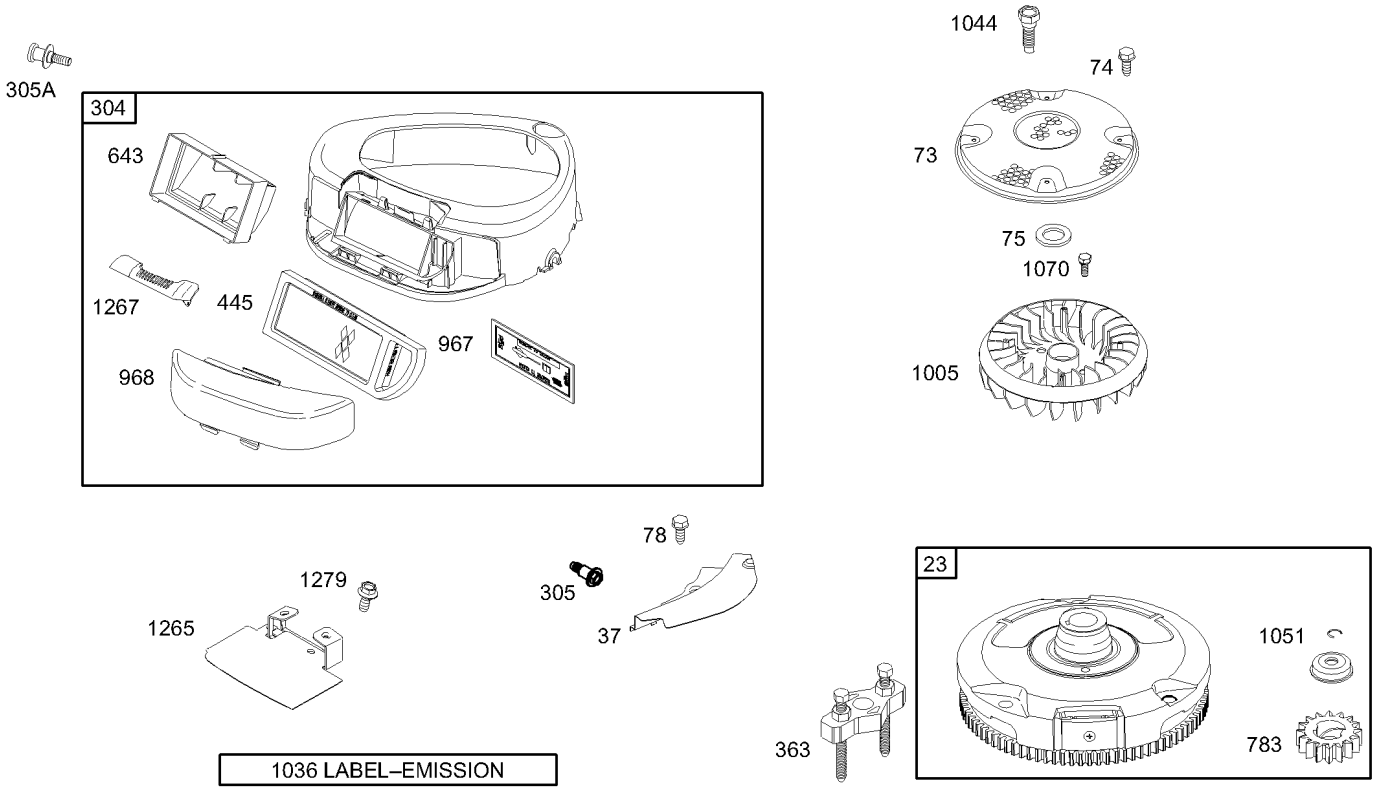


Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❼23	693556	1	Flywheel
❼37	697108	1	Guard–Flywheel
❼73	697133	1	Screen-Rotating
❼74	697897	1	Screw
❼75	690582	1	Washer-Flywheel
❼78	691003	1	Screw
❼304	698804	1	Housing-Blower
❼305	697102	1	Screw
❼305A	697103	1	Screw
❼363	19203	1	Puller-Flywheel
❼445	697014	1	Filter-Air Cleaner Cartridge
❼643	697155	1	Retainer-Air Filter
❼783	693713	1	Gear-Pinion
❼1070	690372	1	Screw
❼967	697015	1	Filter–Pre Cleaner
❼968	697084	1	Cover-Cleaner, Air
❼1005	697111	1	Fan–Flywheel
❼1036	695700	1	Label–Emission
❼1044	691658	1	Screw-Crankshaft Extension
❼1051	691265	1	Ring-Retaining
❼1070	690372	1	Screw
❼1265	697125	1	Support–Housing, Blower
❼1267	697135	1	Latch-Blower Housing
❼1279	690960	1	Screw

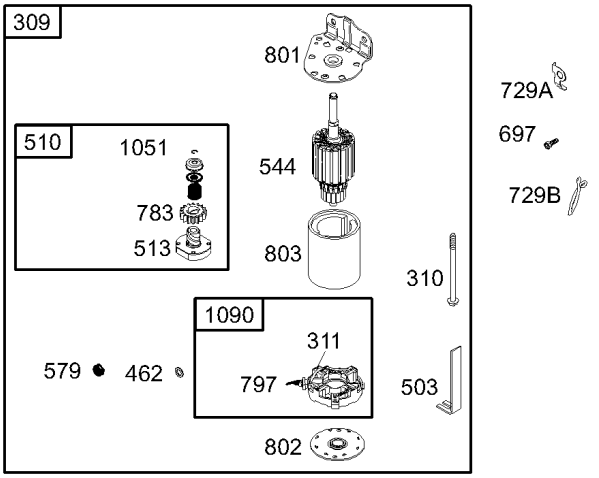


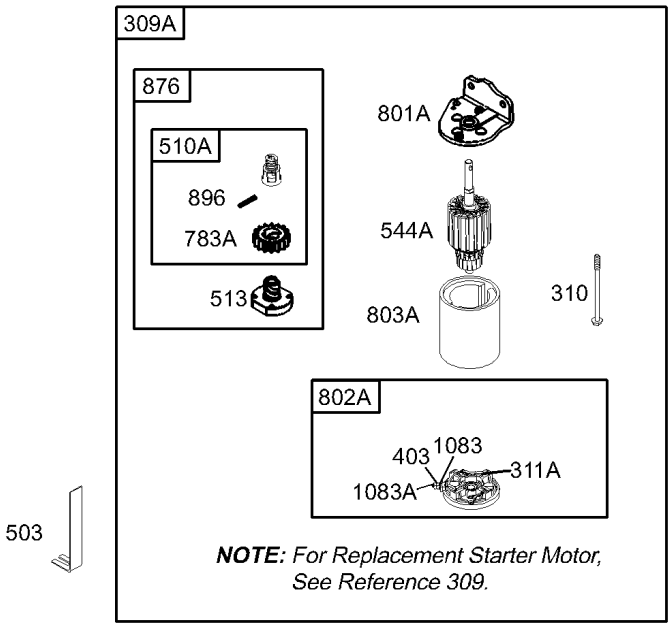


Starter Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❼309	693551	1	Motor-Starter
❼309A		1	Motor-Starter(For Replacementstarter Motor, See Ref.309)
❼310	690323	1	Bolt
❼311	497608	1	Brush Set
❼311A	395538	1	Brush Set
❼403	690288	1	Washer (End Cap)
❼462	691261	1	Washer
❼503	691532	1	Strap-Starter
❼510	693699	1	Drive-Starter
❼510A	495878	1	Drive-Starter
❼513	692024	1	Clutch-Drive
❼544	692034	1	Armature-Starter
❼544A	390837	1	Armature-Starter
❼579	691029	1	Nut
❼697	690372	1	Screw
❼729A	691224	1	Clip-Wire
❼729B	694123	1	Clip–Wire
❼783	693713	1	Gear-Pinion
❼783A	693059	1	Gear-Pinion
❼797	693167	1	Nut
❼801	691283	1	Cap-Drive
❼801A	691429	1	Cap-Drive

Ref	Part No.	Qty.	Description
❼802	691286	1	Cap-End
❼802A	395537	1	Cap-End
❼803	693757	1	Housing-Starter
❼803A	398159	1	Housing-Starter
❼876	495877	1	Kit-Gear
❼896	691641	1	Pin-Drive Retainer
❼1051	691265	1	Ring-Retaining
❼1090	691293	1	Retainer-Brush
❼1083	690958	1	Nut
❼1083A	691626	1	Nut (End Cap)

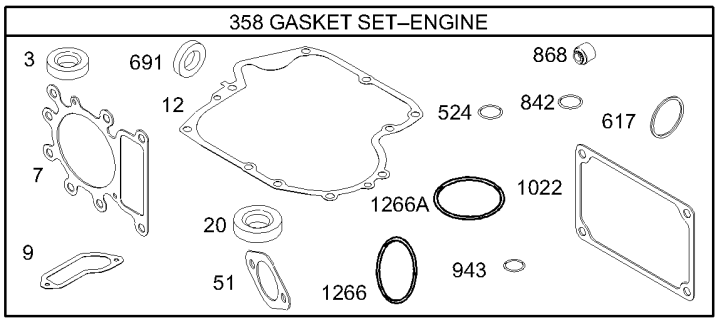


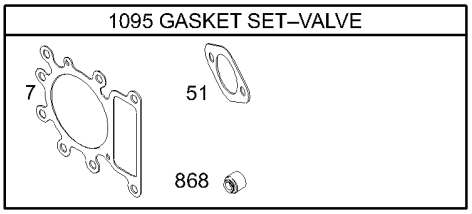


Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❸❼3	391086	1	Seal-Oil
❸❹7 ❼	692410	1	Gasket–Cylinder Head
❸❼9	697109	1	Gasket-Breather
❸❼12	697110	0	Gasket-Crankcase
❸❼20	690947	1	Seal-Oil
❸❹51 ❺❻	692137	1	Gasket-Intake
❼358	697191	1	Gasket Set–Engine
❸❺617 ❼	692138	1	Seal
❸❼524	691032	1	Seal
❸❼691	692407	1	Seal-Shaft, Governor
❸❼842	691031	1	Seal-O Ring
❸❹868 ❼	690968	1	Seal-Valve
❸❼943	690589	1	Seal–O Ring
❸❼1022	272475	1	Gasket-Cover, Rocker
❼1095	691581	1	Valve Gasket Set
❸❺1266 ❼	691917	1	Seal-O Ring
❸❺1266A ❼	697123	1	Seal-O Ring

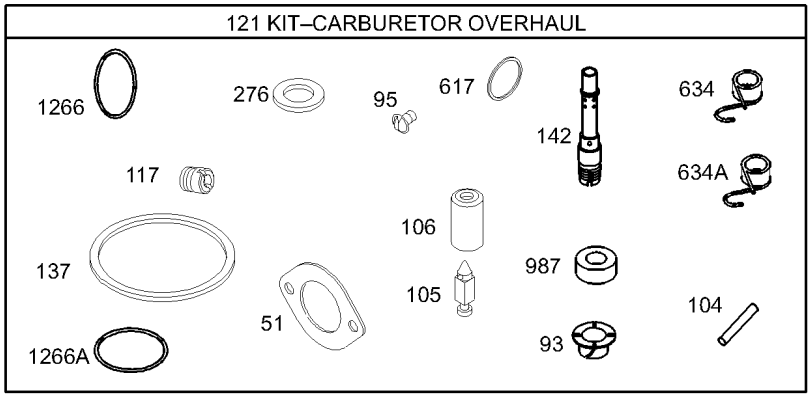

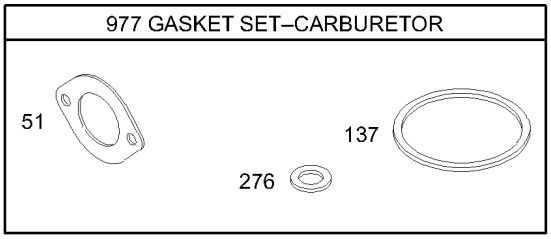

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❻	692137	1	Gasket-Intake
❺❼93	690602	1	Bushing-Shaft, Throttle
❺❼95	691636	1	Screw
❺❼104	690525	1	Pin-Hinge, Float
❺❼105	231855	1	Valve-Needle, Float
❺❼106	690577	1	Seat-Inlet
❺❼117	694352	1	Jet–Main (Standard)
❼121	697241	1	Carburetor Overhaul Kit
❺❻137 ❼	281165	1	Gasket-Bowl, Float
❺❼142	697140	1	Nozzle–Carburetor
❺❻276 ❼	692255	1	Washer-Sealing
❸❺617 ❼	692138	1	Seal
❺❼634	690801	1	Spring / Seal ASM
❺❼634A	690802	1	Spring / Seal ASM
❼977	690192	1	Carburetor Gasket Set
❺❼987	691326	1	Seal-Shaft, Throttle
❸❺1266 ❼	691917	1	Seal-O Ring
❸❺1266A ❼	697123	1	Seal-O Ring

Attachments and Accessories

For 71429 - XL 440H Lawn Tractor

Product Name	Model/Part
Counterweight Kit	100-6230
8in Rear Wheel Weight Kit	59159
11.0 cu. ft. Vac Bagger	79102
42in Snow Blade	79150
44in Baffle Kit	79174
10 cu. ft. Dump Cart	79901
Snow Cab	79912
Sunshade	79913
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tractor Rack	79990
Tire Chain Kit	82722
Snow Blade Completing Package	93-3806
Tower Kit	98-9880

NOTES


TORO®