Form Number 3354-302 Rev A

ProCore® 880 Aerator

Model No. 09702 - 250000001 and up.
Model No. 09702TE - 250000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Hood Assembly	3	Gear Box Assembly No. 100-5381	10
Roller Leg Assembly	4	Tine Arm Assembly	11
Decal Assembly	5	Rotalink Assembly	12
Roller Assembly	6	Crankshaft Assembly	13
3 Point Linkage Assembly	7	Idler Assembly	14
PTO Assembly No. 104-0932	8	Turf Guards	15
Drive Shaft Assembly	9	Attachments and Accessories List	16

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over-protection-system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

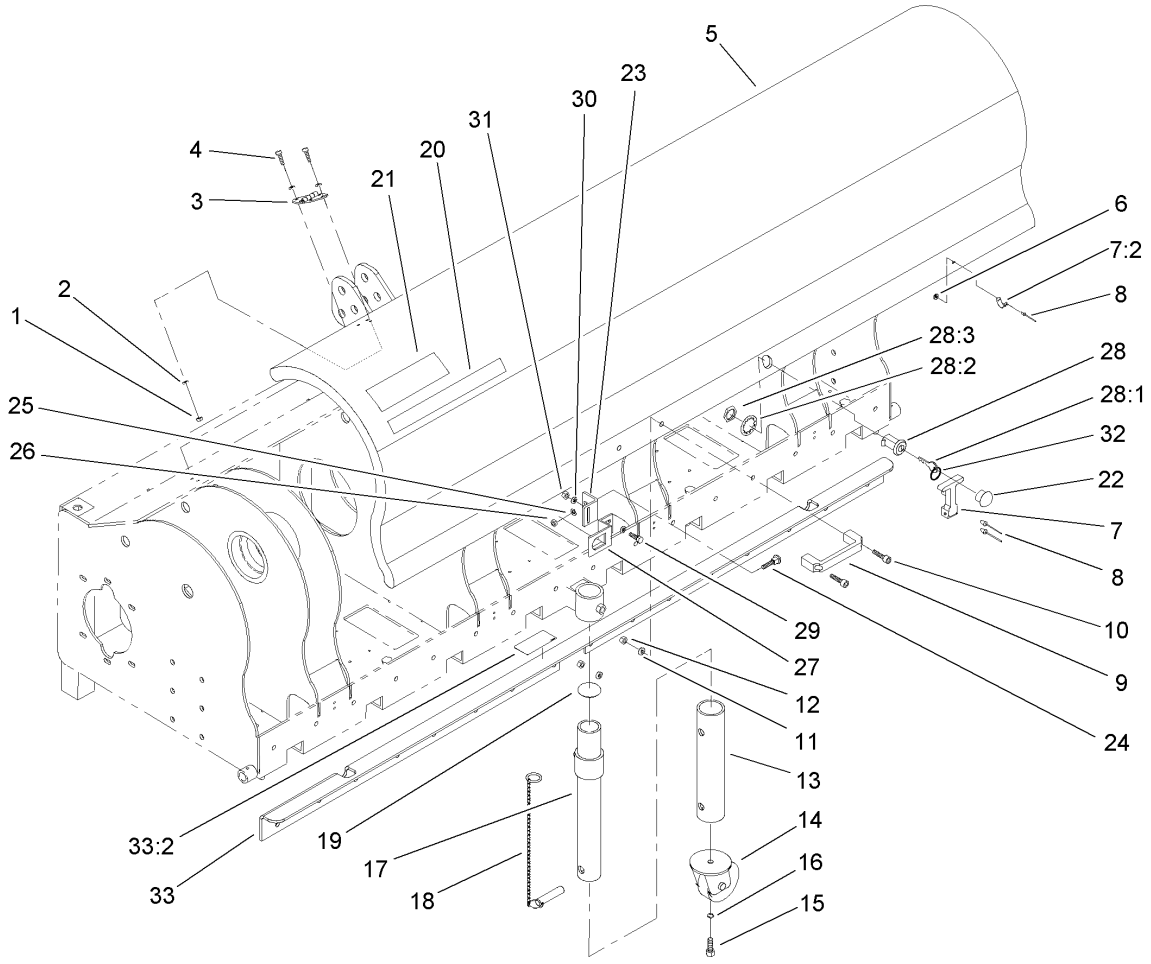

Hood Assembly


Ref	Part No.	Qty.	Description
1	33023-00	12	Nut-Lock (Only On: 09702Te)
2	33093-00	36	Washer-Flat (Only On: 09702Te)
3	100-5352	4	Hinge-Hood
4	33113-020	24	Screw-HH
5	100-5447	1	Hood
6	3269-10	4	Washer-Back
7	59-9740	2	Flex Draw Latch ASM
7:2	249-40	1	Keeper
8	3269-24	8	Rivet
9	100-5353	1	Handle-Hood
10	100-7601	2	Screw-HSH
11	33094-00	2	Washer-Plain
12	33024-00	2	Nut-Lock
13	104-0971	1	Tube-Castor, Outer
14	100-5370	1	Wheel-Caster
15	33116-045	1	Screw-HH
16	3253-7	1	Washer-Lock
17	104-0970	1	Tube-Castor, Inner
18	100-7551	1	Pin ASM
19	100-7563	1	Cap-Plastic
20	100-3618	1	Decal
21	92-1242	1	Decal
22	104-1453	1	Grommet (Only On: 09702)
23	100-3637	1	Bracket-Ce (Only On: 09702Te)

Ref	Part No.	Qty.	Description
24	33124-020	2	Screw-CARR (Only On: 09702Te)
25	33094-00	2	Washer-Flat (Only On: 09702Te)
26	33024-00	2	Nut-Lock (Only On: 09702Te)
27	98-9316	1	Latch-Hood (Only On: 09702Te)
28	98-9315	1	Latch-Locking (Only On: 09702Te)
28:1	99-8350	2	Key-Latch, Locking (Only On: 09702Te)
❷28:2		1	Washer-Switch (Only On: 09702Te)
❷28:3		1	Nut-Switch (Only On: 09702Te)
29	33113-030	2	Screw-HH (Only On: 09702Te)
30	33093-00	4	Washer-Flat (Only On: 09702Te)
31	33023-00	2	Nut-Lock (Only On: 09702Te)
32	98-9321	1	Ring-Key (Only On: 09702Te)
33	104-9908	1	Angle
33:2	100-3614	1	Decal-Warning

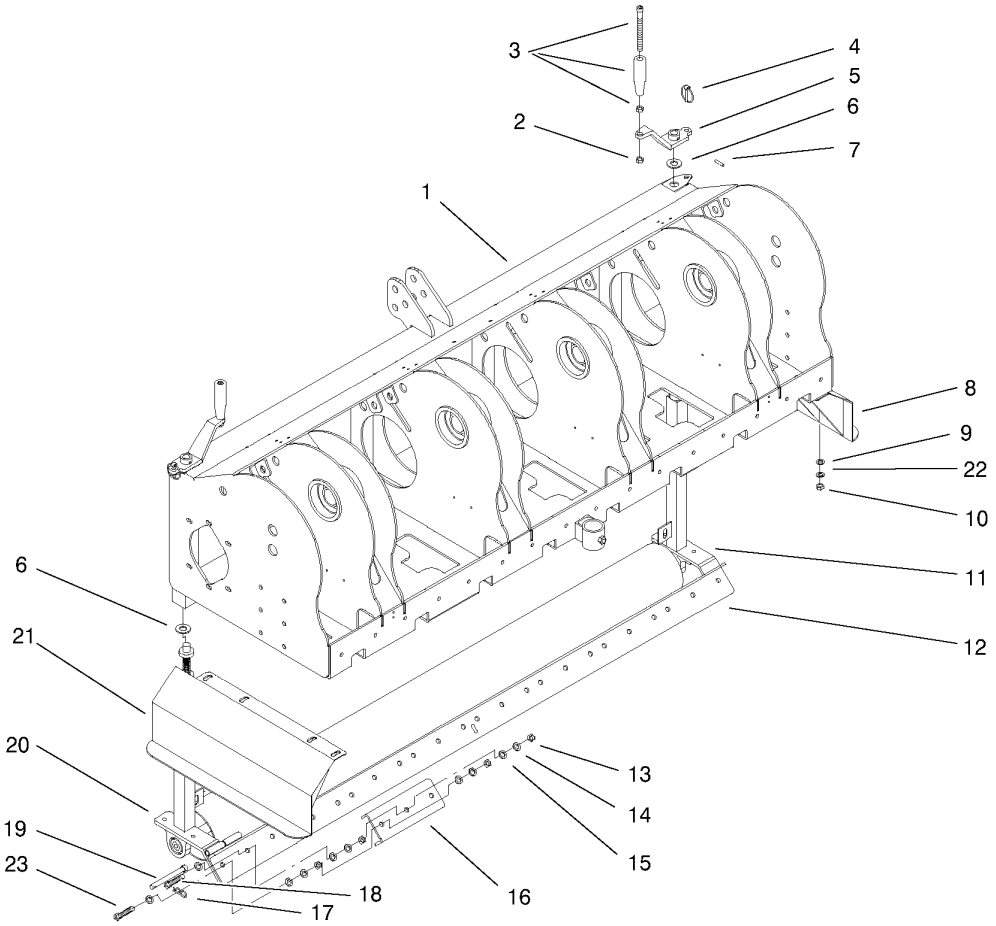


Roller Leg Assembly

Ref	Part No.	Qty.	Description
1	106-2100	1	Frame ASM
2	33016-00	2	Nut-Hex
3	100-5359	2	Handle ASM
4	100-5389	2	Pin-Lynch
5	100-5356	2	Handle-Control, Depth
6	106-2114	4	Washer-Flat
7	100-5440	2	Pin-Spring, Slotted
8	100-5448-03	1	Guard-Side, RH
9	33095-00	8	Washer-Flat
10	33015-00	8	Nut-Hex
11	100-5425-03	1	RH Roller Leg ASM
12	100-7571-03	1	Bracket-Finger, Turf
13	33016-00	48	Nut-Hex
14	43-5940	48	Lockwasher-Spring
15	33096-00	72	Washer-Flat
16	100-5423-03	8	Clamp-Guard, Turf
17	3290-355	2	Pin-Hair
18	104-0935	22	Screw-HH
19	100-7564	2	Pin-Bracket, Turf
20	100-5424-03	1	LH Roller Leg ASM
21	100-7568-03	1	Guard-Side, LH
22	48-9590	8	Washer-Lock
23	104-0934	2	Screw-HH

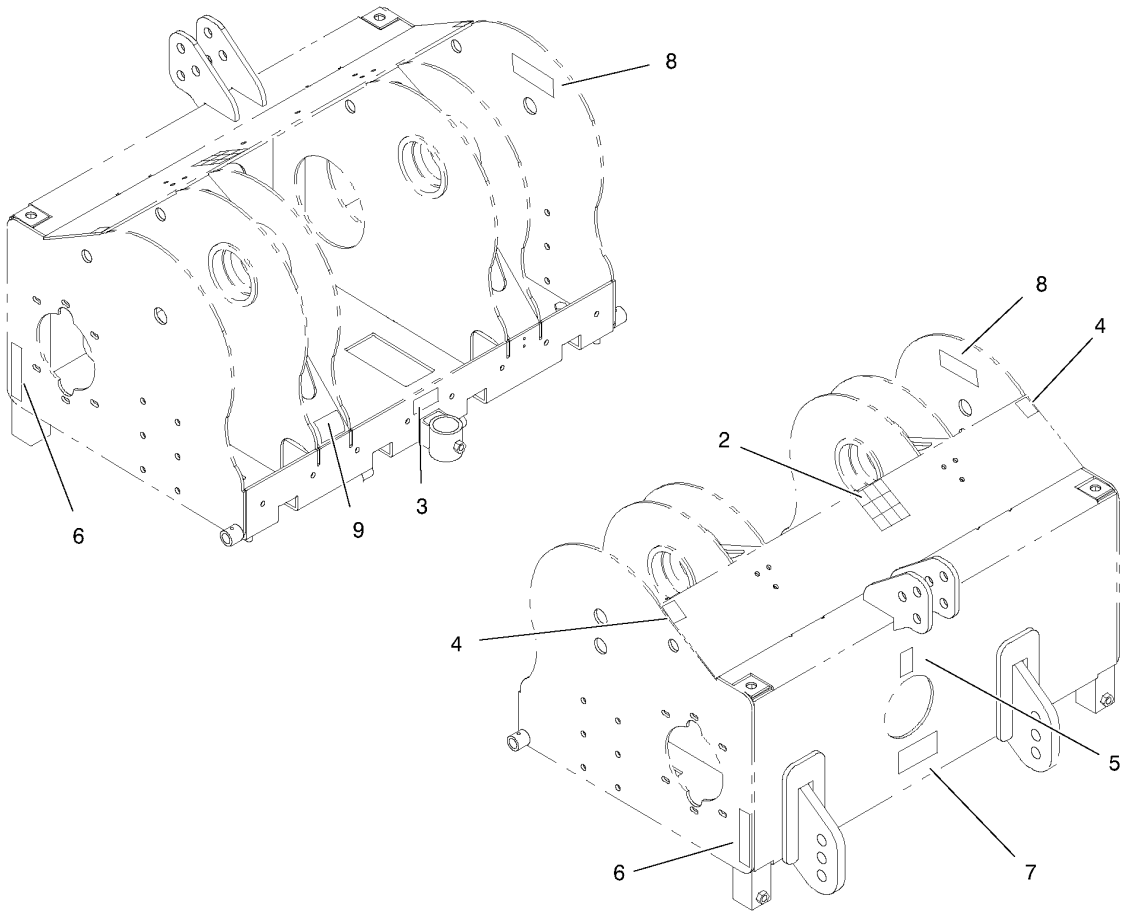


Decal Assembly

Ref	Part No.	Qty.	Description
2	100-3615	1	Decal-Warning
3	100-3614	1	Decal-Warning
4	100-5444	2	Decal-Depth Adjustment
5	100-5443	1	Decal-540 Rpm
6	100-5442	2	Decal-Depth Gauge
7	100-3613	1	Decal-Warning
8	93-9879	2	Decal-Warning
9	100-3612	1	Decal-Warning

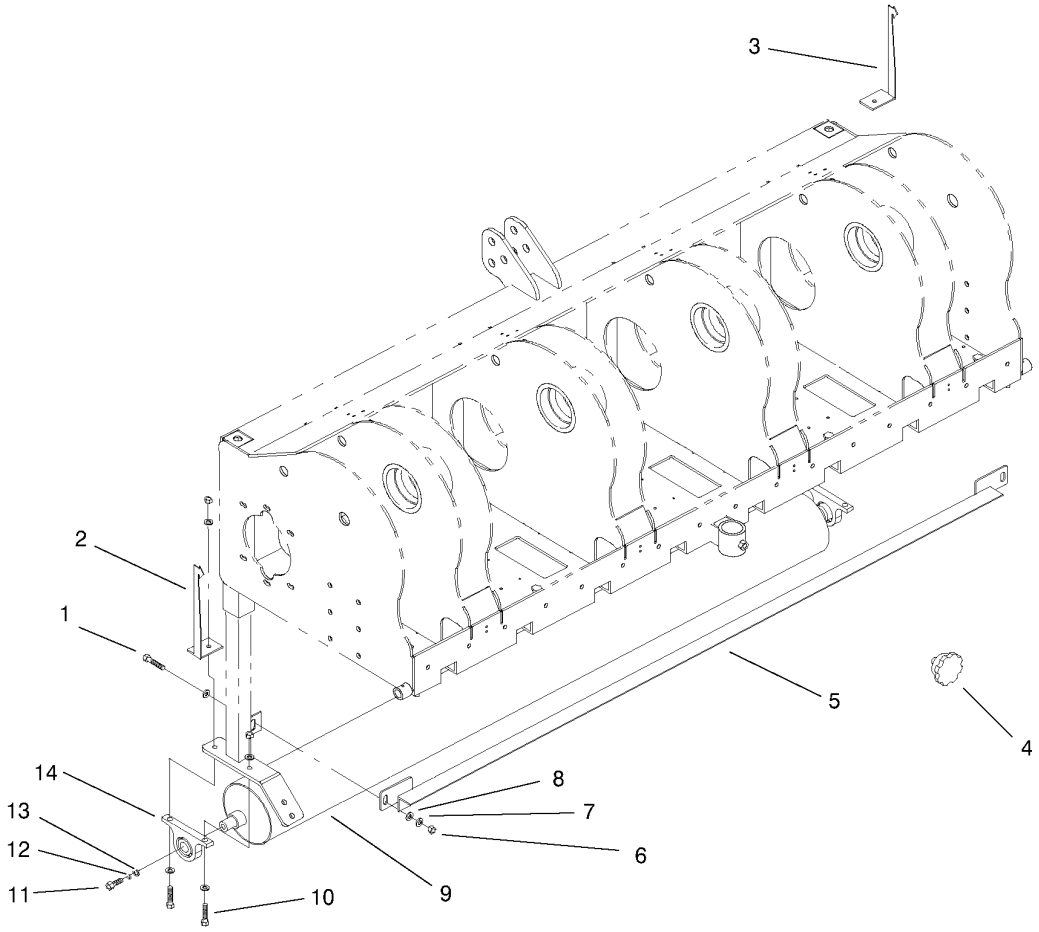


Roller Assembly

Ref	Part No.	Qty.	Description
1	33115-030	2	Screw-HH
2	100-5363-03	1	Indicator-Depth, LH
3	100-5364-03	1	Indicator-Depth, RH
4	100-5371	1	Knob-Castor
5	100-7555-03	1	Plate-Scraper
6	33025-00	6	Nut-Lock
7	48-9590	2	Washer-Lock
8	33095-00	12	Washer-Flat
9	100-7553-03	1	Roller ASM
10	33115-045	4	Screw-HH
11	33116-025	2	Screw-HH
12	43-5940	2	Lockwasher-Spring
13	33096-00	2	Washer-Flat
14	100-5368	2	Bearing-Roller

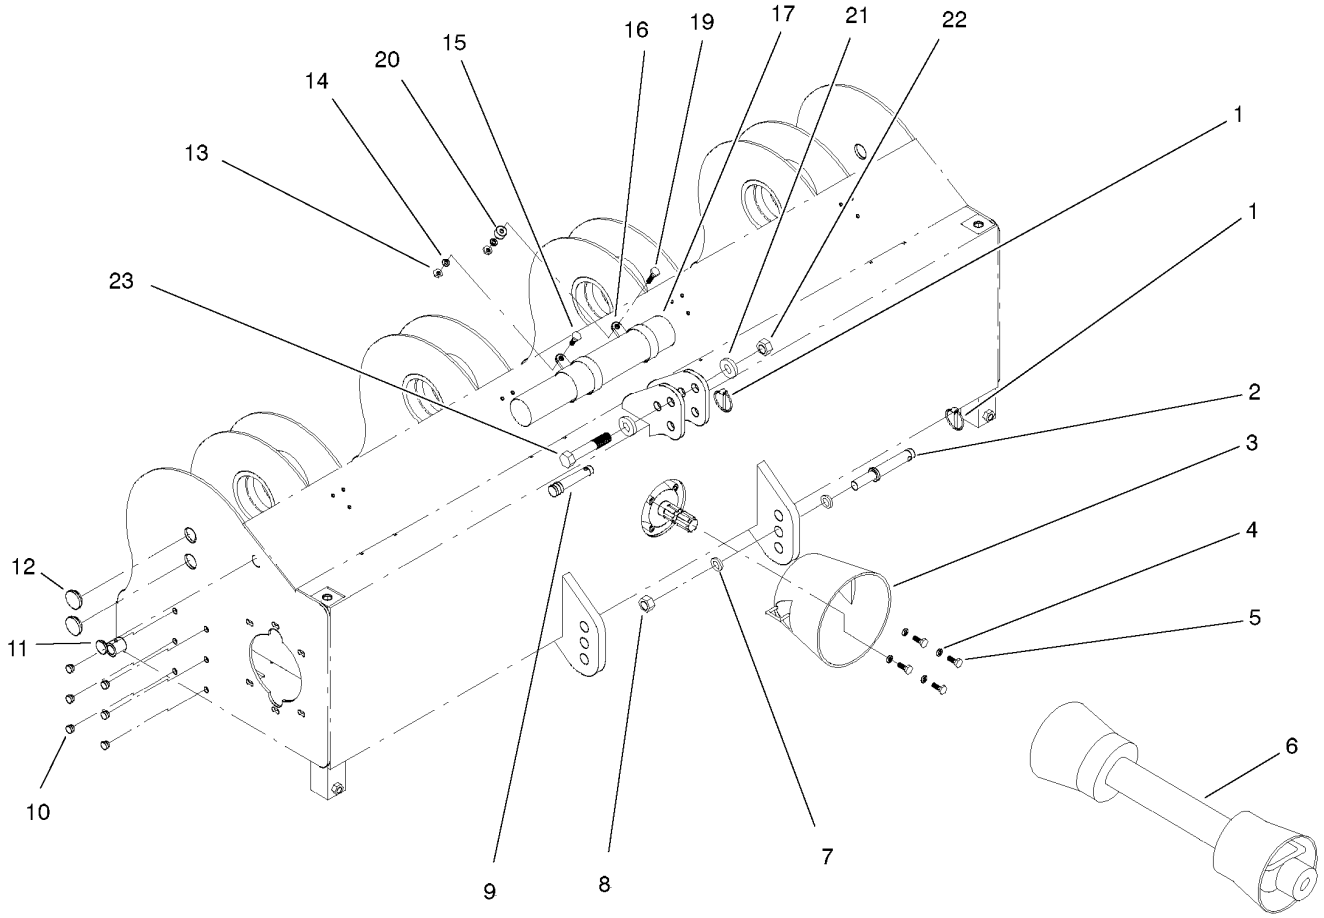


3 Point Linkage Assembly

Ref	Part No.	Qty.	Description
1	100-5389	3	Pin-Lynch
2	100-5373	2	Pin-Link, Bottom
3	100-5374	1	Guard-PTO
4	3253-7	4	Washer-Lock
5	33114-020	4	Screw-HH
6	104-0932	1	PTO
7	100-7641	4	Washer-Flat
8	3219-8	2	Nut-Hex
9	100-5372	1	Pin-Link, Top
10	100-5445	12	Plug-Plastic
11	100-5446	4	Plug-Plastic
12	100-5375	4	Plug-Plate, End
13	33025-00	2	Nut-Lock
14	33095-00	2	Washer-Flat
15	33115-020	1	Screw-HH
16	2412-133	2	R-Clamp
17	74-0720	1	Tube-Manual
19	33115-045	1	Screw-HH
20	104-9903	1	Washer
21	3256-8	2	Washer-Flat
22	3296-51	1	Nut-Lock, NI
23	328-8	1	Screw-HH

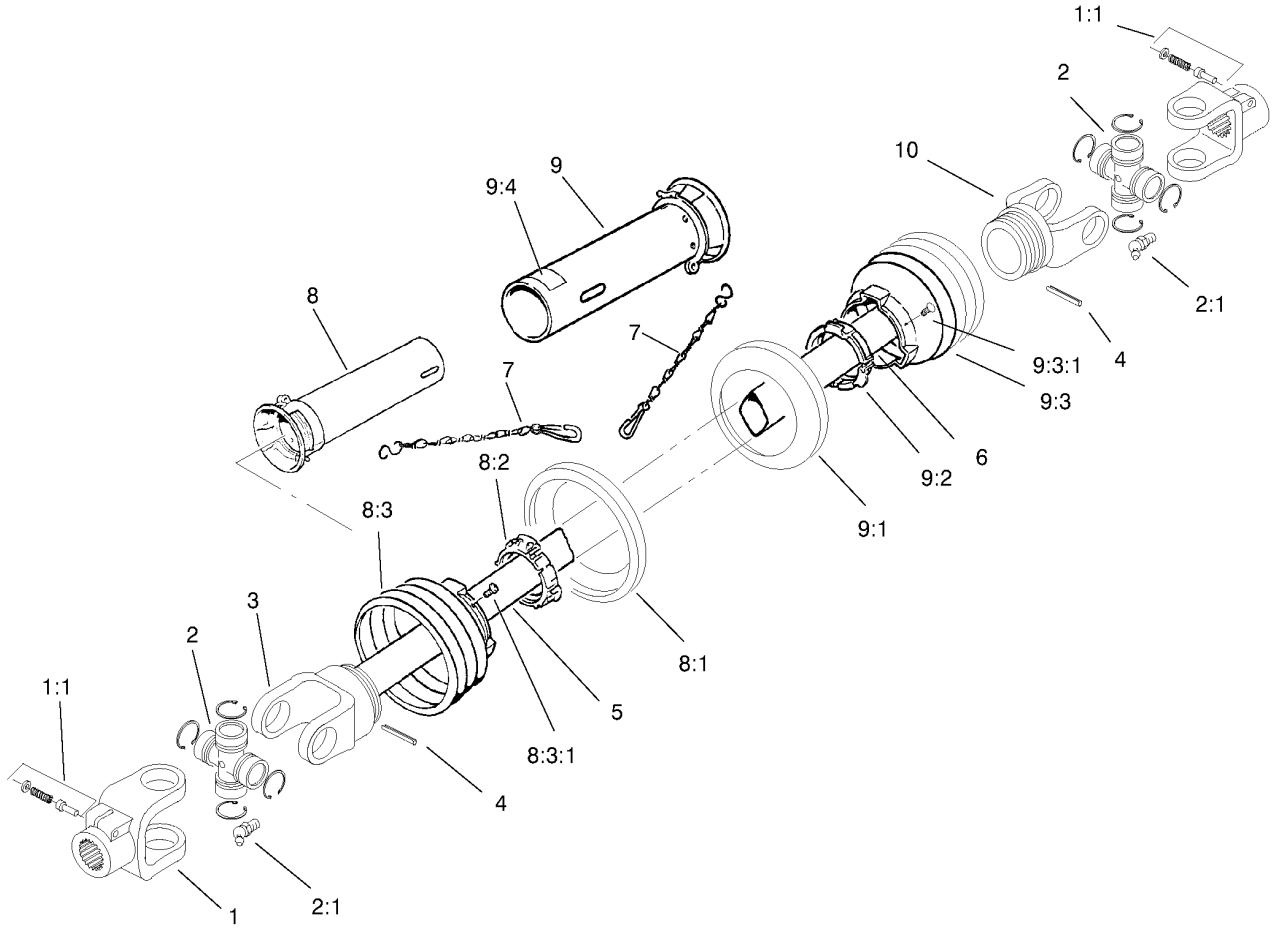


PTO Assembly No. 104-0932

Ref	Part No.	Qty.	Description
1	104-0938	2	Yoke
1:1	104-0916	1	Pin-Yoke
2	77-4720	2	Cross And Bearing Kit
2:1	104-0919	1	Fitting-Lube
3	104-0940	1	Yoke-Inboard
4	104-0941	2	Pin-Spring
5	104-0922	1	Tube-Profile, Inner
6	104-0942	1	Tube-Profile, Outer
7	77-4760	2	Chain-Safety
8	104-0937	1	Guard-PTO
8:1	93-7734	1	Collar-Reinforced
8:2	104-0923	1	Ring-Bearing
8:3	104-0944	1	Cone-Guard
8:3:1	84-6360	1	Screw
9	104-0936	1	Guard-PTO
9:1	93-7734	1	Collar-Reinforced
9:2	104-0923	1	Ring-Bearing
9:3	104-0944	1	Cone-Guard
9:3:1	84-6360	1	Screw
9:4	93-7729	1	Decal-Ce
10	104-0943	1	Yoke-Inboard

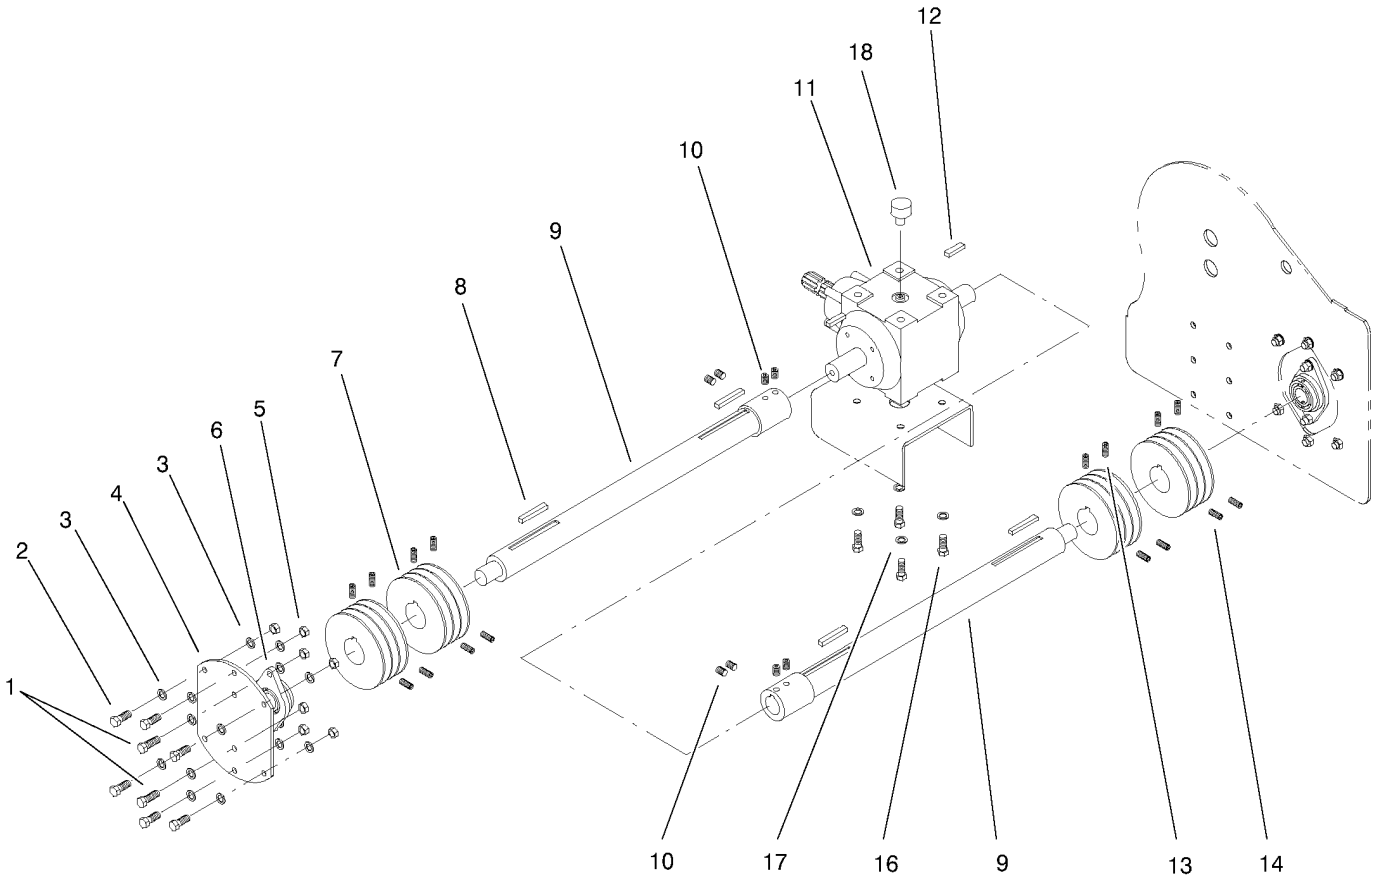


Drive Shaft Assembly

Ref	Part No.	Qty.	Description
1	33115-035	4	Screw-HH
2	33115-030	12	Screw-HH
3	33095-00	32	Washer-Flat
4	100-5376-03	2	Plate-End
5	33025-00	16	Nut-Lock
6	100-5377	2	Bearing-Roller
7	100-5385	4	Pulley-Drive
8	100-5378	4	Key-Pulley, Drive
9	100-3644	2	Shaft-Drive
10	100-3638	8	Screw-Set
11	100-5381	1	Gearbox
12	100-5380	2	Key-Shaft, Drive
13	100-3694	8	Screw-Set
14	100-7643	8	Screw-Set
16	33116-025	4	Screw-HH
17	3253-7	4	Washer-Lock
18	104-0915	1	Breather

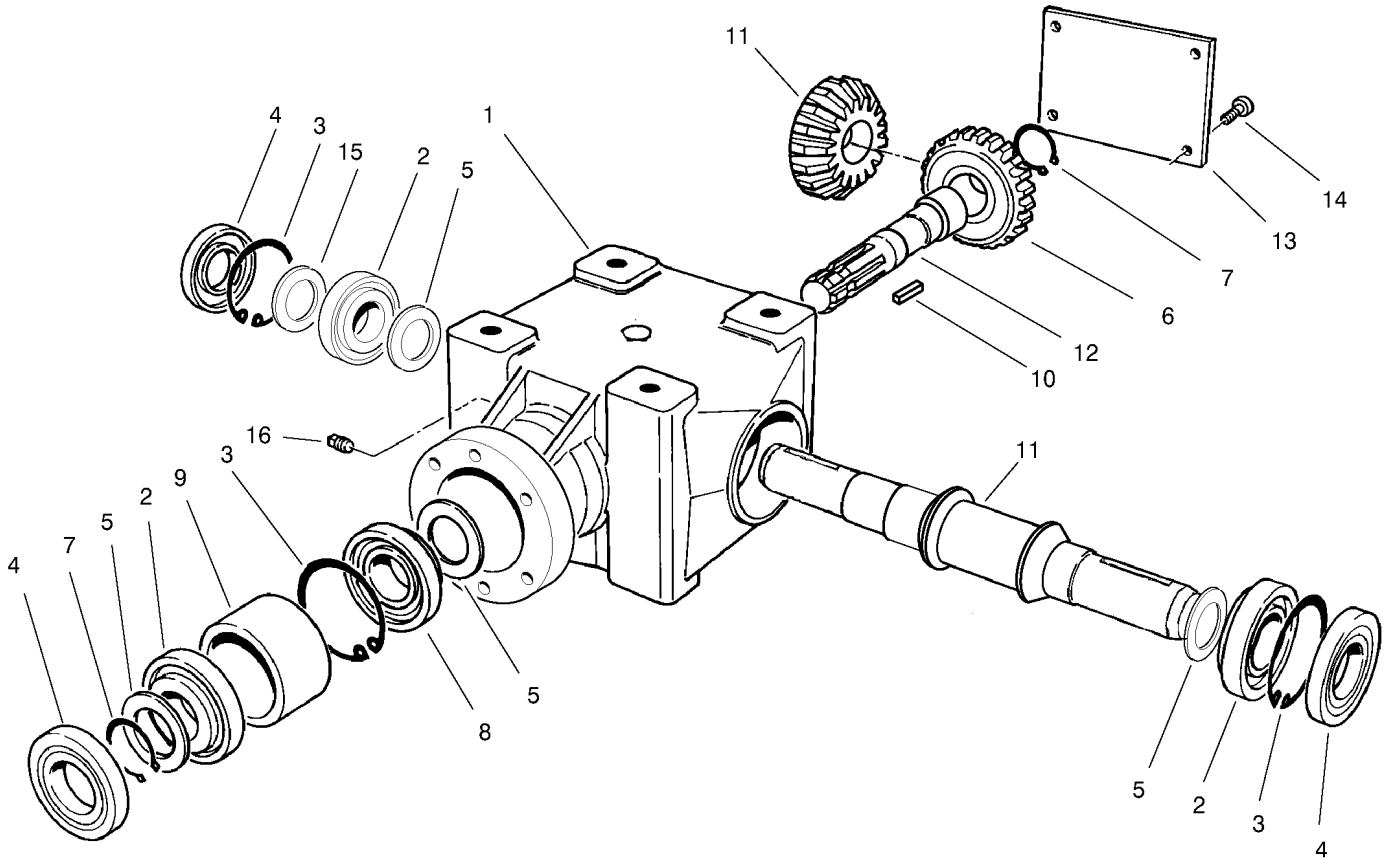


Gear Box Assembly No. 100-5381

Ref	Part No.	Qty.	Description
1	104-0900	1	Case
2	104-0901	3	Bearing
3	104-0902	3	Ring-Snap
4	104-0903	3	Seal
5	104-0904	4	Shim Kit
6	104-0905	1	Gear
7	74-2960	2	Ring-Retaining
8	104-0906	1	Bearing
9	104-0907	1	Spacer
10	104-0908	1	Key-Parallel
11	104-0909	1	Pinion And Shaft ASM
12	104-0910	1	Shaft
13	104-0911	1	Cover
14	104-0912	4	Bolt
15	104-0913	1	Shim
16	104-0914	3	Plug

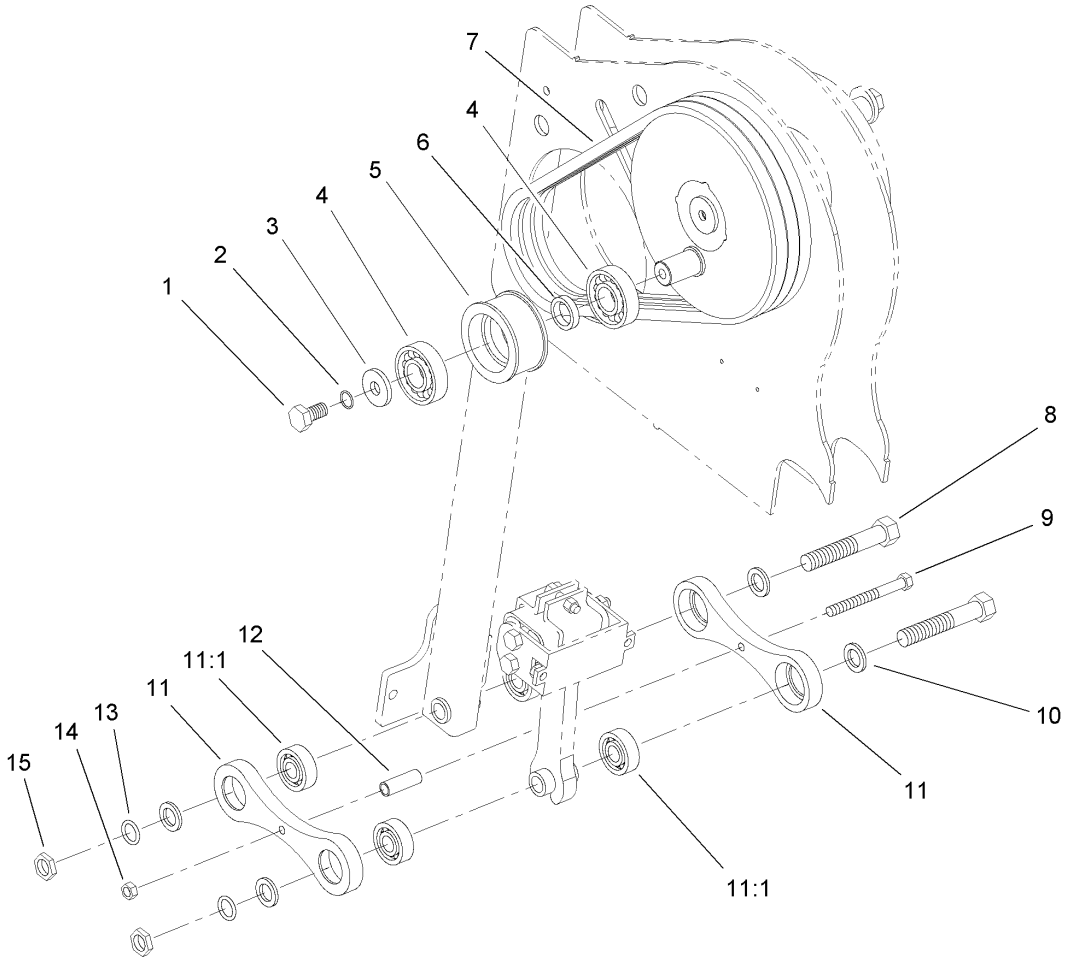


Tine Arm Assembly

Ref	Part No.	Qty.	Description
1	33118-035	8	Screw-HH
2	69-8420	8	Washer-Lock
3	104-9868	8	Washer-Flat
4	100-5386	16	Bearing-Roller
5	100-5387-03	8	Tine Arm ASM
6	100-5390	8	Spacer-Tube
7	100-5392	12	Belt-5Vx
8	33119-120	16	Screw-HH
9	33115-120	8	Screw-HH
10	33099-00	32	Washer-Flat
11	100-7640	16	Bottom Link ASM
11:1	100-7621	2	Bearing-Ball
12	100-5391	8	Tube-Spacer
13	100-7607	16	Washer-Lock
14	33025-00	8	Nut-Lock
15	100-7606	16	Nut-Jam

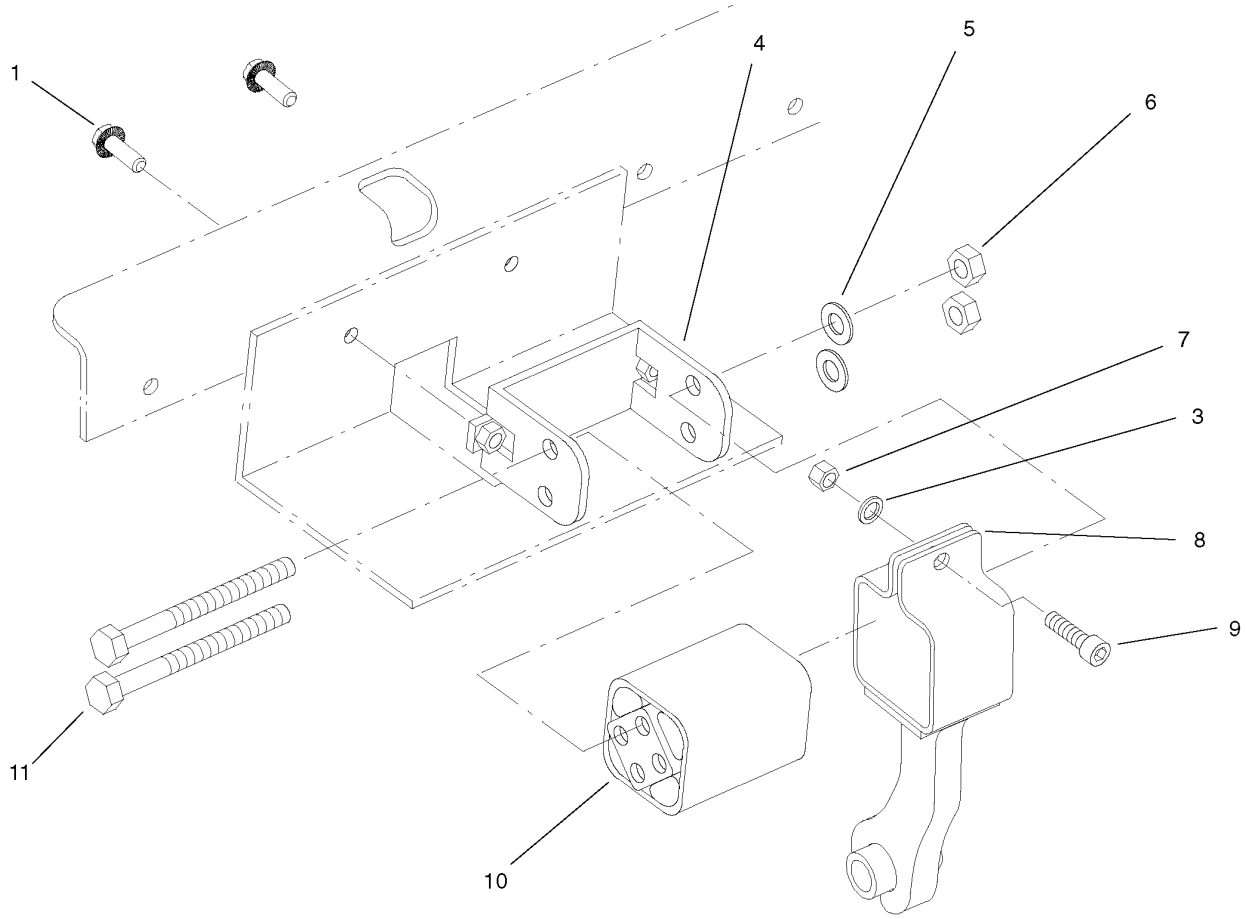


Rotalink Assembly

Ref	Part No.	Qty.	Description
1	104-9900	16	Screw-Flange, Serrated
3	33095-00	8	Washer-Flat
4	100-5393-03	8	Bracket-Rotalink
5	33096-00	16	Washer-Flat
6	33026-00	16	Nut-Lock
7	33025-00	8	Nut-Lock
8	104-9870-03	8	Rotalink Arm ASM
9	100-7602	8	Screw-HSH
10	106-2113	8	Element-Rotalink
11	33116-140	16	Screw-HH

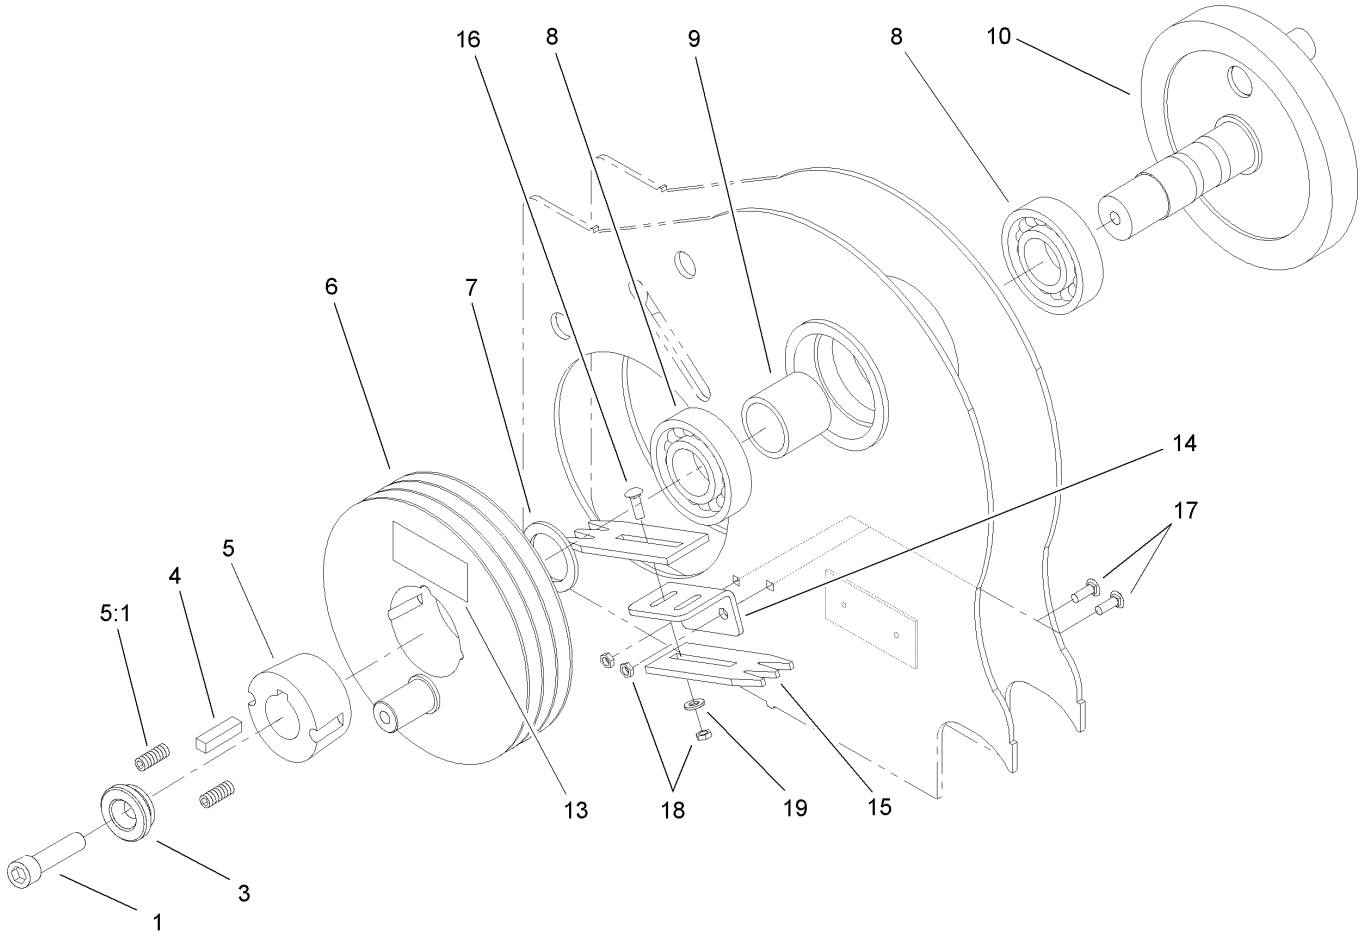

Crankshaft Assembly


Ref	Part No.	Qty.	Description
1	108-6751	4	Capscrew-HSH
3	108-2116	4	Retainer-Pulley
4	108-6794	4	Key-Rectangle
5	100-5399	4	Bushing-Taperlock
5:1	108-6757	2	Screw-Set, Special
6	104-9892	4	Pulley-Driven
7	100-5401	4	Spacer-Pulley
8	100-5396	8	Bearing-Roller
9	100-5397	4	Spacer-Bearing
10	108-2114	4	Flywheel ASM
13	100-3611	4	Decal
14	100-7581	4	Bracket-Scraper
15	100-7583	8	Scraper-Pulley (3 Finger)
16	33124-030	8	Screw-CARR
17	33124-020	8	Screw-CARR
18	33024-00	16	Nut-Lock
19	33094-00	8	Washer-Plain

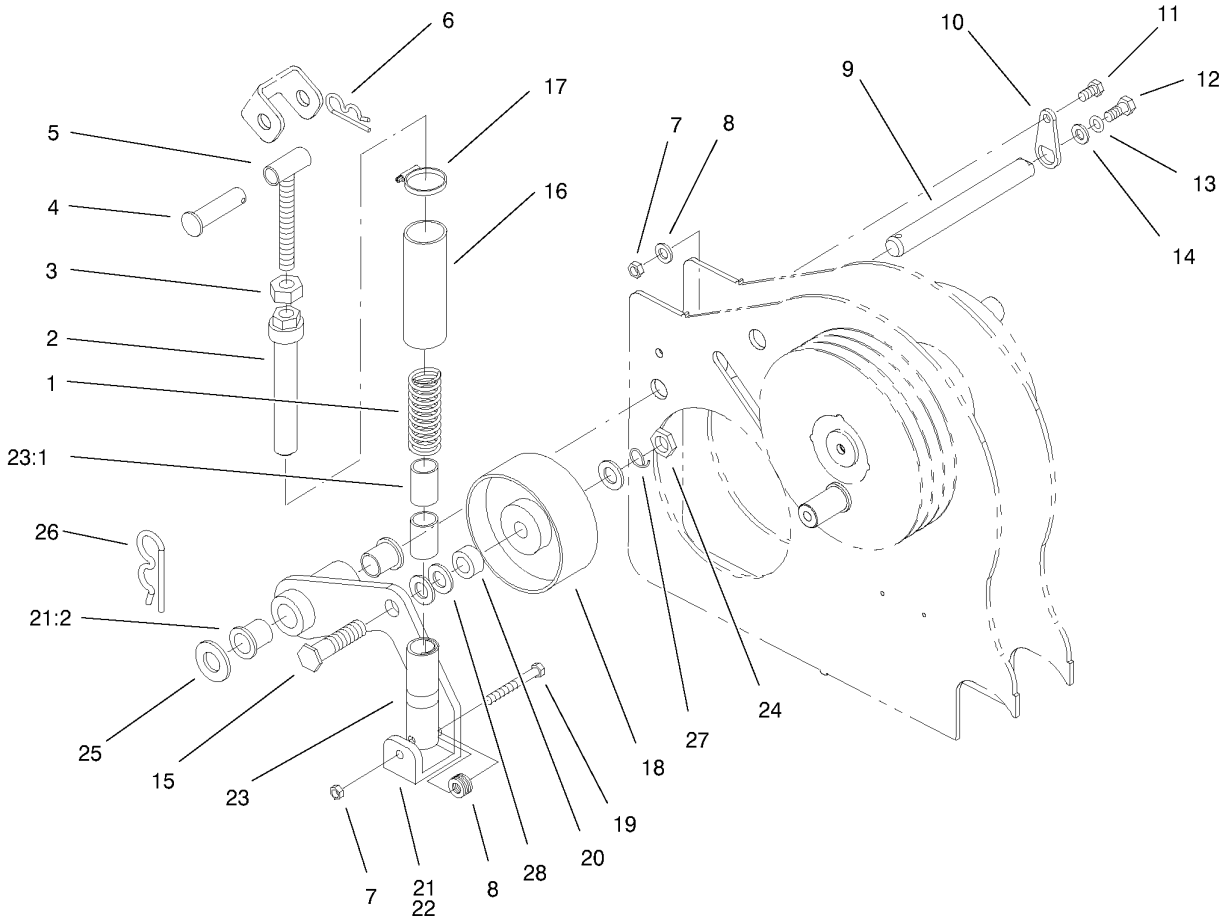

Idler Assembly


Ref	Part No.	Qty.	Description
1	100-5426	4	Spring-Compression
2	100-7561	4	Tube-Idler
3	33018-00	4	Nut-Hex
4	100-5435	4	Pin-Idler
5	100-7560	4	T-Bolt, Idler
6	3290-343	4	Pin-Hair
7	33025-00	8	Nut-Lock
8	33095-00	24	Washer-Flat
9	100-5433	4	Shaft-Idler
10	100-7559	4	Tab-Lock, Shaft
11	33115-025	4	Screw-HH
12	33116-025	4	Screw-HH
13	43-5940	4	Lockwasher-Spring
14	33096-00	4	Washer-Flat
15	100-7587	4	Bolt-Special
16	100-7633	4	Tube-Rubber
17	100-7632	4	Clamp-Hose
18	100-7631	4	Pulley-Idler
19	33115-080	4	Screw-HH
20	100-7584	4	Spacer-Idler
21	100-5429	2	RH Idler Arm ASM
21:2	94-8949	2	Bushing-Flange
❶22	100-5432	2	LH Idler Arm ASM
❶22:2	94-8949	2	Bushing-Flange

Ref	Part No.	Qty.	Description
23	100-7639	4	Guide Tube ASM
23:1	100-7629	2	Bushing-Sleeve
24	3218-7	4	Nut-Jam
25	100-7605	4	Washer-Flat
26	100-5431	4	Hairpin
27	3253-9	4	Washer-Lock
28	33099-00	12	Washer-Flat

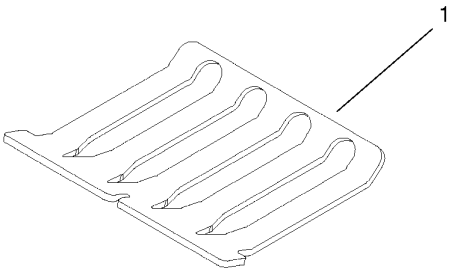


3 TINE HEAD

3 TINE HD HEAD

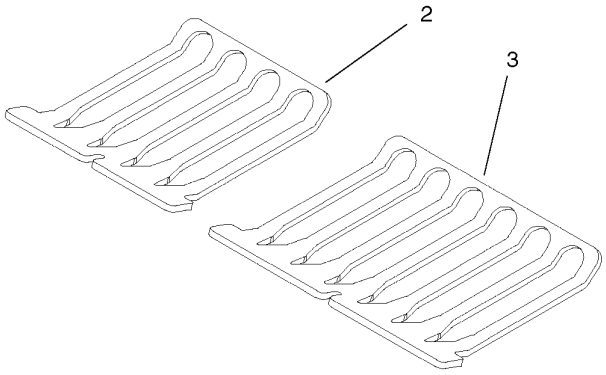


4 TINE HEAD

4 TINE HD HEAD

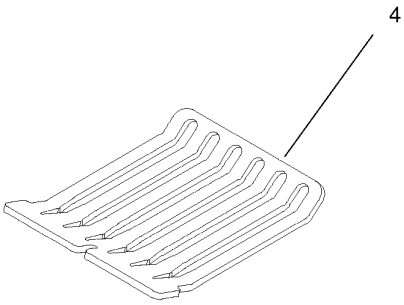

NEEDLE (6) TINE HEAD

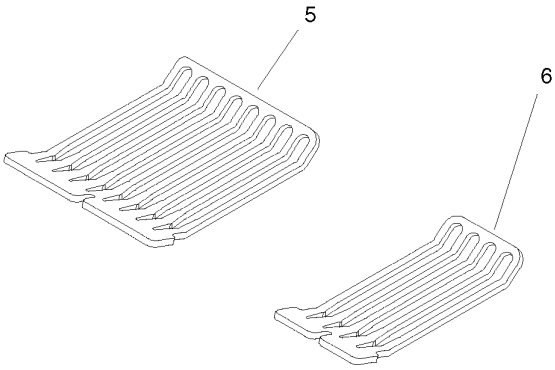

MINI (8) TINE HEAD

Turf Guards

Ref	Part No.	Qty.	Description
1	100-5414	5	Guard-Turf, 3 Tine 5 Finger
2	100-5416	1	Guard-Turf, 4 Tine 5 Finger
3	100-5417	4	Guard-Turf, 4 Tine 7 Finger
4	100-5419	7	Guard-Turf, 6 Tine 7 Finger
5	100-5420	5	Guard-Turf, 8 Tine 9 Finger
6	100-5421	4	Guard-Turf, 8 Tine 5 Finger

Attachments and Accessories

For 09702 - ProCore 880 Aerator

Product Name	Model/Part
Contour Following Kit	09154
Needle Tine Head	09720
Mini Tine Head	09721
3-Tine Head	09722
4-Tine Head	09723
3-Tine Heavy Duty Head	09733
4-Tine Heavy Duty Head	09734
Procore 880 Ce Kit	108-6798

Attachments and Accessories

For 09702TE - ProCore 880 Aerator

Product Name	Model/Part
Contour Following Kit	09154
Needle Tine Head	09720
Mini Tine Head	09721
3-Tine Head	09722
4-Tine Head	09723
3-Tine Heavy Duty Head	09733
4-Tine Heavy Duty Head	09734

NOTES

NOTES

NOTES


TORO®