



Lower Shroud Replacement Kit

2002–2005 CCR™ 2450 and 3650 GTS

North American Snowthrowers

Part No. 108-7338

Form No. 3353-673 Rev B

Installation Instructions

Contents of the Kit

DESCRIPTION	QUANTITY
Lower shroud	1
Heat shield cover	1
Choke shield	1
Rubber spring cover	1
Spring	1
Cable	1
Cable adjuster	1

Removing the Lower Shroud from the Snowthrower

1. Remove the 2 screws that secure the lower shroud to the snowthrower.

Note: Save the screws you removed to secure the new lower shroud to the snowthrower.




2. Pull the top of the shroud to the rear until the choke lever (A above) clears the slot.
3. Remove the shroud and discard it.
4. Remove the rubber choke shield from the choke lever and discard the shield (if applicable).

Removing the Old Cable Components

CCR 3650 GTS Models only



1. Unhook the Z-fitting end of the cable from the control bar.

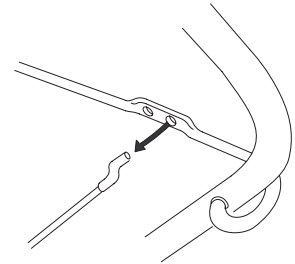

2. Unhook the other (spring) end of the cable.
3. Open up the cable guide on the handle and remove the cable.
4. Discard the old cable, spring, adjuster, and rubber spring cover.

Installing the New Lower Shroud onto the Snowthrower


1. Install the new choke seal.

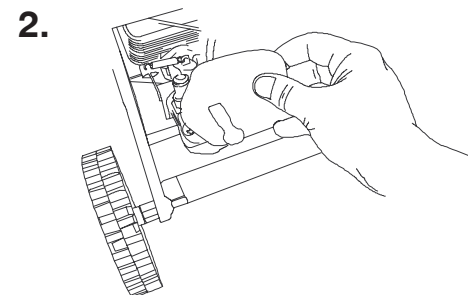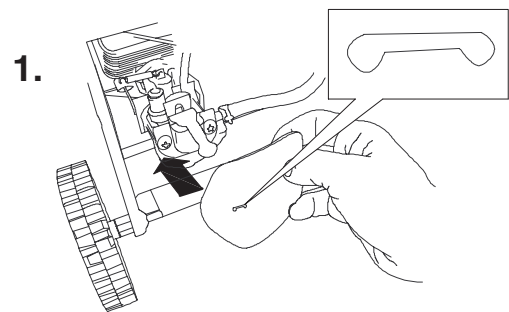

2. As you install the new lower shroud onto the snowthrower, guide the choke lever through the slot.

3. Secure the new lower shroud with the 2 screws you previously removed.

Note: Ensure that the lip of the new lower shroud (A) rests on top of cross tube (B) of the snowthrower.

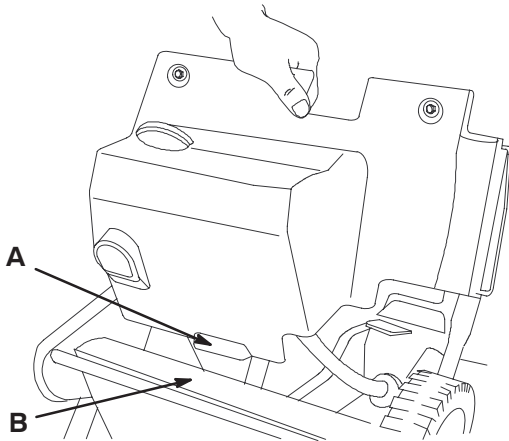


Installing the New Cable Components


CCR 3650 GTS Models only

1. Install the Z-fitting end of the new cable in the hole where you removed the spring (at the bottom of the snowthrower) in step 2 of Removing the Old Cable Components.
2. Insert the cable into the cable guide and install the cable guide.
3. Attach the new adjuster to the cable.

Note: Insert the Z-fitting into the third hole from the lower end of the adjuster.
4. Attach the new spring to the end of the adjuster.
5. Adjust the cable according to the instructions in the *Operator's Manual*.
6. Install the rubber cover over the new spring and adjuster.

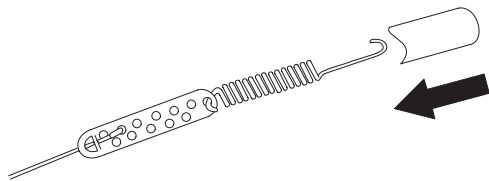



7. Hook the cable spring into the **bottom** hole of the control bar.

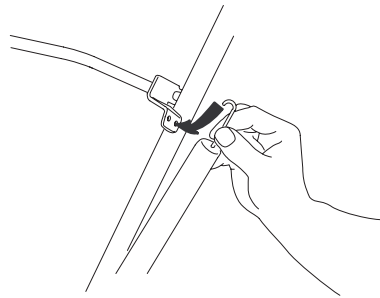

Installing the Heat Shield Cover

Install the heat shield cover over the vent openings as shown and carefully snap the cover into place.

Note: Insert the tabs of the cover into the vent openings so that the cover is up and back, then gradually slide the cover down and forward as you insert the hooks (B) on the cover into the vent openings.

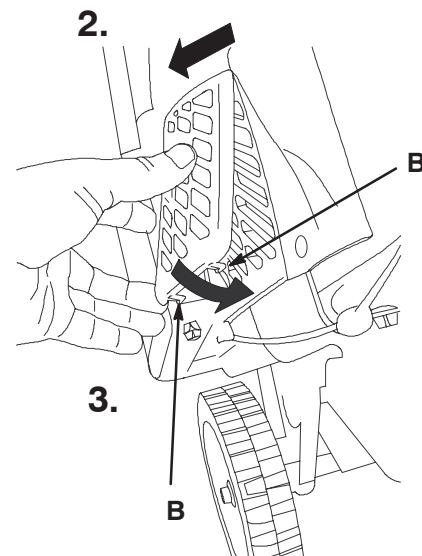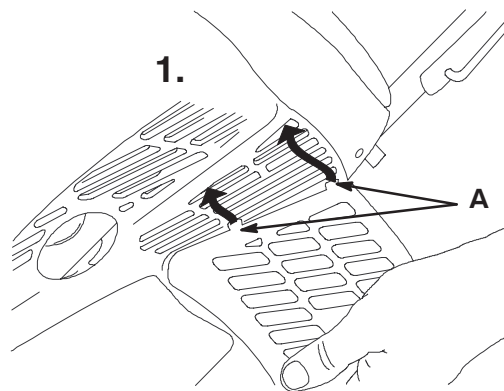



Kit de remplacement de carénage inférieur

CCR™ 2450 et 3650 GTS, 2002–2005

Déneigeuses pour l'Amérique du Nord

Réf. 108-7338

Form No. 3353-673 Rév. B

Instructions d'installation

Contenu du kit

DESCRIPTION	QUANTITÉ
Carénage inférieur	1
Bouclier thermique	1
Déflexeur de starter	1
Couvercle de ressort en caoutchouc	1
Ressort	1
Câble	1
Dispositif de réglage du câble	1

Retrait du carénage inférieur de la déneigeuse

1. Retirez les 2 vis qui fixent le carénage inférieur sur la déneigeuse.

Remarque : Mettez les vis de côté ; elles vous serviront pour monter le nouveau carénage inférieur sur la machine.




2. Tirez le haut du carénage en arrière jusqu'à ce que la manette de starter (A ci-dessus) passe par la fente.
3. Déposez le carénage et mettez-le au rebut.
4. Déposez le déflexeur en caoutchouc de la manette de starter et mettez-le au rebut (le cas échéant).

Dépose des anciens composants du câble

Modèles CCR 3650 GTS uniquement


1. Décrochez le raccord en Z au bout du câble de la barre de commande.

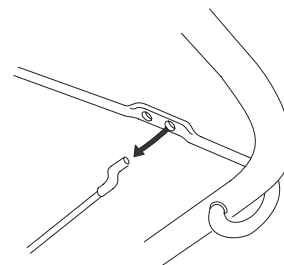

2. Décrochez l'autre extrémité (ressort) du câble.
3. Ouvrez le guide-câble sur le guidon et retirez le câble.
4. Mettez au rebut les anciens câble, ressort, dispositif de réglage et couvercle de ressort en caoutchouc.

Montage du nouveau carénage inférieur sur la déneigeuse


1. Montez le nouveau joint de starter.

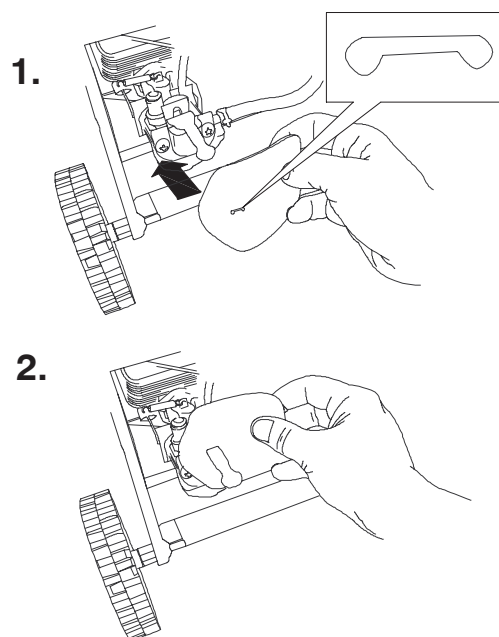

2. Quand vous montez le nouveau carénage inférieur sur la déneigeuse, faites passer la manette de starter dans la fente.

3. Fixez le nouveau carénage inférieur au moyen des 2 vis retirées précédemment.

Remarque : Vérifiez que la lèvre du nouveau carénage inférieur (A) est en appui sur le haut du tube transversal (B) de la déneigeuse.

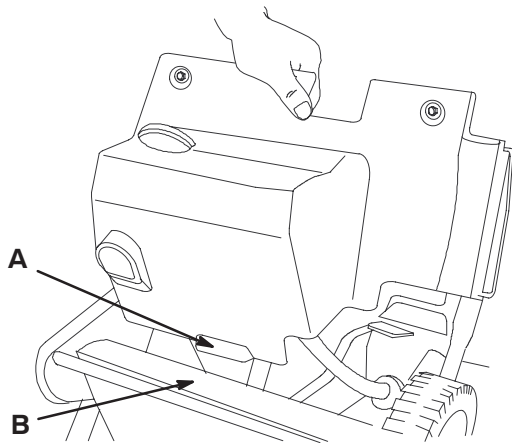

Montage des nouveaux composants du câble

Modèles CCR 3650 GTS uniquement

1. Montez le raccord en Z du nouveau câble dans le trou d'où vous avez retiré le ressort (au bas de la déneigeuse) à l'étape 2 de la section Dépose des anciens composants du câble.

2. Insérez le câble dans son guide et montez le guide-câble.


3. Fixez le nouveau dispositif de réglage au câble.

Remarque : Insérez le raccord en Z dans le troisième trou à l'extrémité inférieure du dispositif de réglage.


4. Fixez le nouveau ressort à l'extrémité du dispositif de réglage.

5. Réglez le câble selon les instructions du *Manuel de l'utilisateur*.

6. Placez le couvercle en caoutchouc sur le nouveau ressort et le nouveau dispositif de réglage.

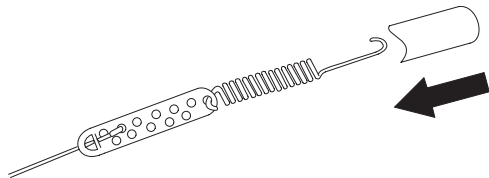

7. Accrochez le ressort de câble dans le trou inférieur de la barre de commande.

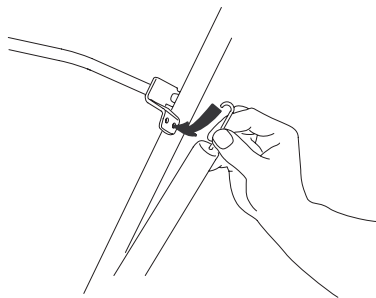

Montage du bouclier thermique

Montez le bouclier thermique sur les ouvertures d'aération comme illustré et enclenchez-le en place avec précaution.

Remarque : Insérez les languettes du couvercle dans les ouvertures d'aération de sorte que le bouclier est relevé et en arrière. Faites coulisser graduellement le couvercle vers le bas et en avant en insérant les crochets (B) du bouclier dans les ouvertures d'aération.

