Form Number 3354-353 Rev A

Super Recycler®
Lawn Mower

Model No. 20054 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Housing Assembly	3
Housing Assembly No. 108-4750	4
Height-of-Cut Assembly	5
Transmission Assembly	6
Gear Case Assembly No. 108-8140	7
Engine Assembly	8
Handle Assembly	9
Cylinder Assembly Briggs and Stratton 125K02-0189-E1	10
Crankshaft Assembly Briggs and Stratton 125K02-0189-E1	11
Crankcase Assembly Briggs and Stratton 125K02-0189-E1	12
Carburetor Assembly Briggs and Stratton 125K02-0189-E1	13
Air Cleaner Assembly Briggs and Stratton 125K02-0189-E1	14
Governor Assembly Briggs and Stratton 125K02-0189-E1	15
Muffler and Fuel Tank Assembly Briggs and Stratton 125K02-0189-E1	16
Blower Housing Assembly Briggs and Stratton 125K02-0189-E1	17
Starter Assembly Briggs and Stratton 125K02-0189-E1	18
Engine Gasket Set Assembly Briggs and Stratton 125K02-0189-E1	19
Carburetor Overhaul Kit and Gasket Set Assemblies Briggs and Stratton 125K02-0189-E1	20
Attachments and Accessories List	21


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head


Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Briggs & Stratton dealer
❹ For use only on Models with BBC

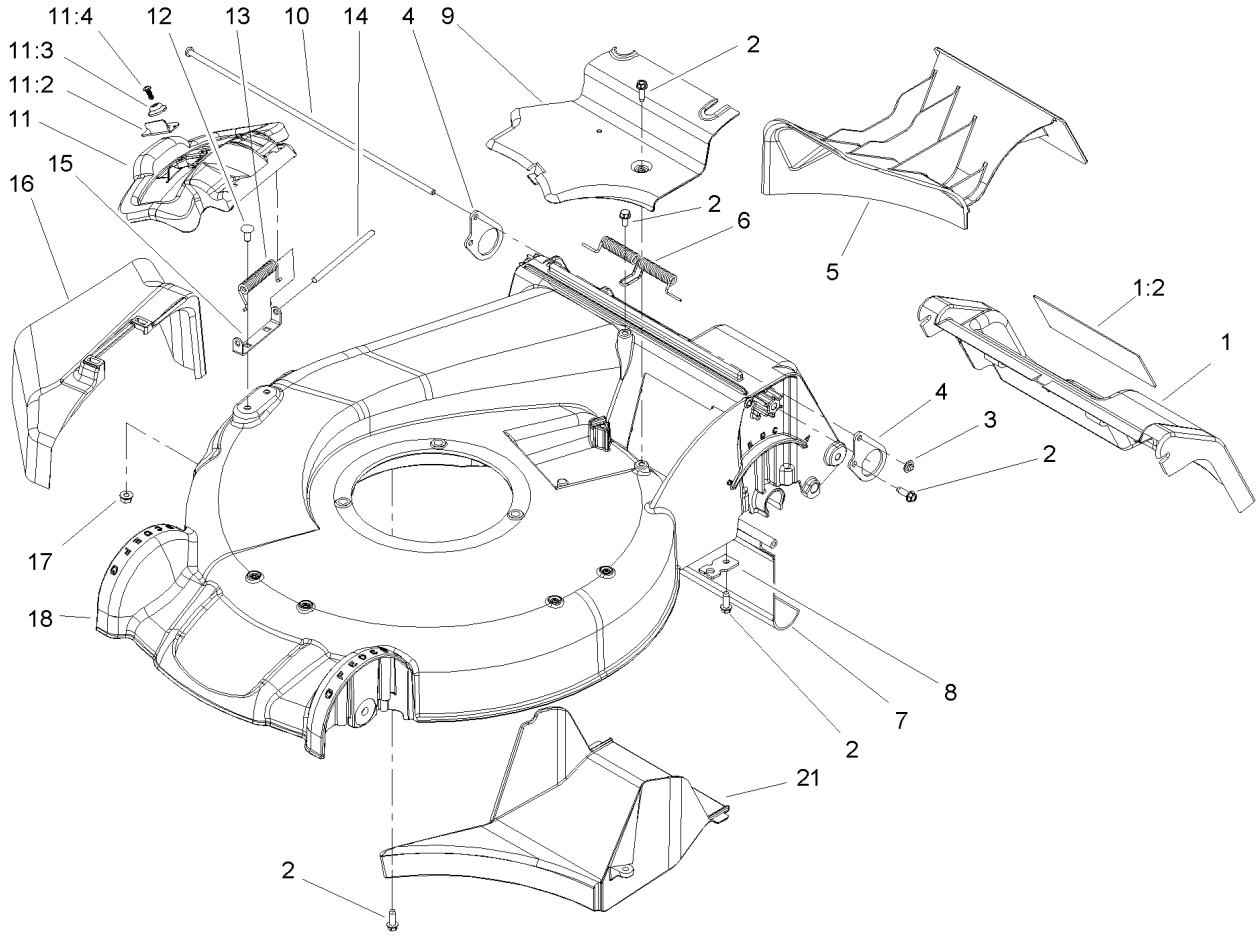


Housing Assembly

Ref	Part No.	Qty.	Description
1	105-1323	1	Rear Door ASM
1:2	105-1295	1	Decal-Warning
2	49-2040	7	Screw-HWHTF
3	3290-337	1	Nut-Speed
4	107-7493	2	Plate-Support, Door
5	107-7490	1	Plug-Mulch
6	105-3032	1	Spring-Door, Rear
7	107-7496	1	Shield-Trailing
8	107-7497	1	Bracket-Cable, Traction
9	107-7494	1	Cover-Belt
10	107-7499	1	Rod-Support, Door
11	107-3717	1	Discharge Door ASM
11:2	107-0795	1	Latch-Door
11:3	107-7456	1	Cap-Door
11:4	107-7461	1	Screw-Plastite
12	3229-11	2	Screw-CARR
13	99-5293	1	Spring-Torsion
14	99-5291	1	Rod-Cover
15	99-5292	1	Bracket-Cover
16	108-3753	1	Chute-Discharge, Side
17	32128-32	2	Nut-HHF
18	108-4750	1	Housing ASM
21	107-7495	1	Tunnel-Discharge

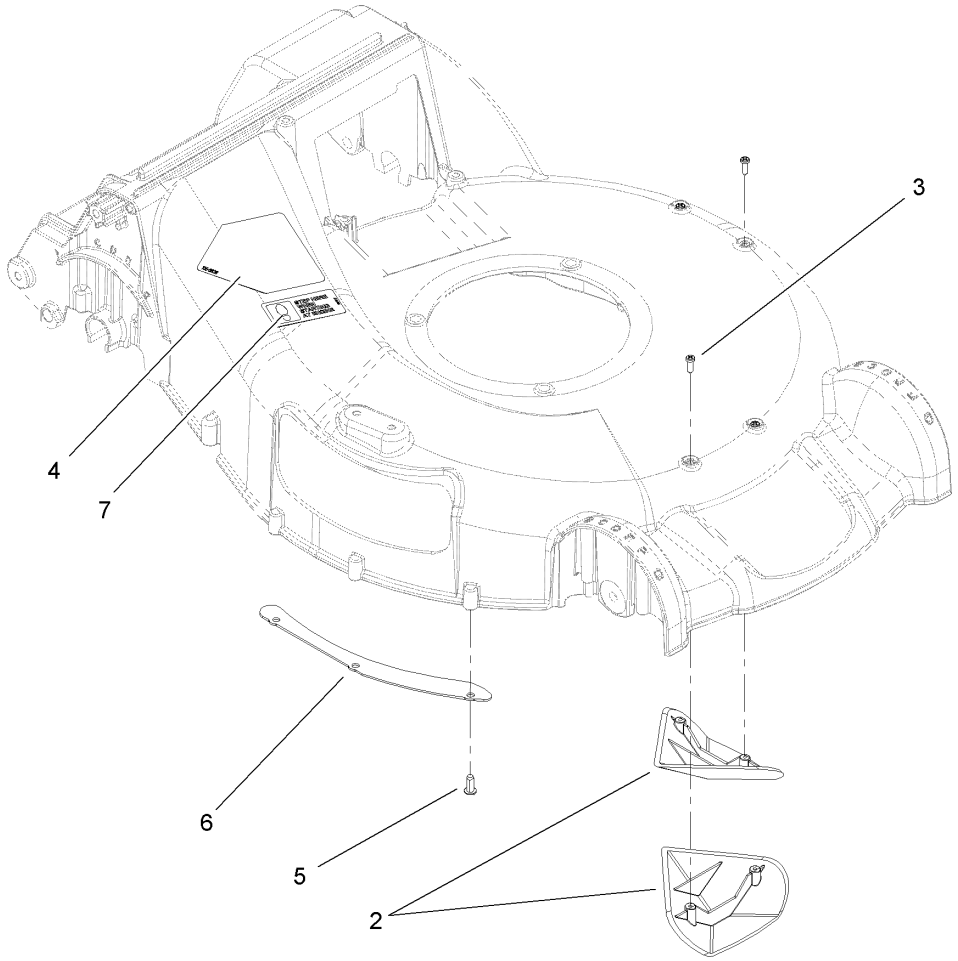


Housing Assembly No. 108-4750

Ref	Part No.	Qty.	Description
2	108-3798	2	Kicker-Housing
3	32144-111	4	Screw-PPH
4	105-6838	1	Decal-Danger
5	63-8590	3	Screw
6	105-1316-03	1	Sheet-Lip
❹7	108-8117	1	Decal-Foot Placement

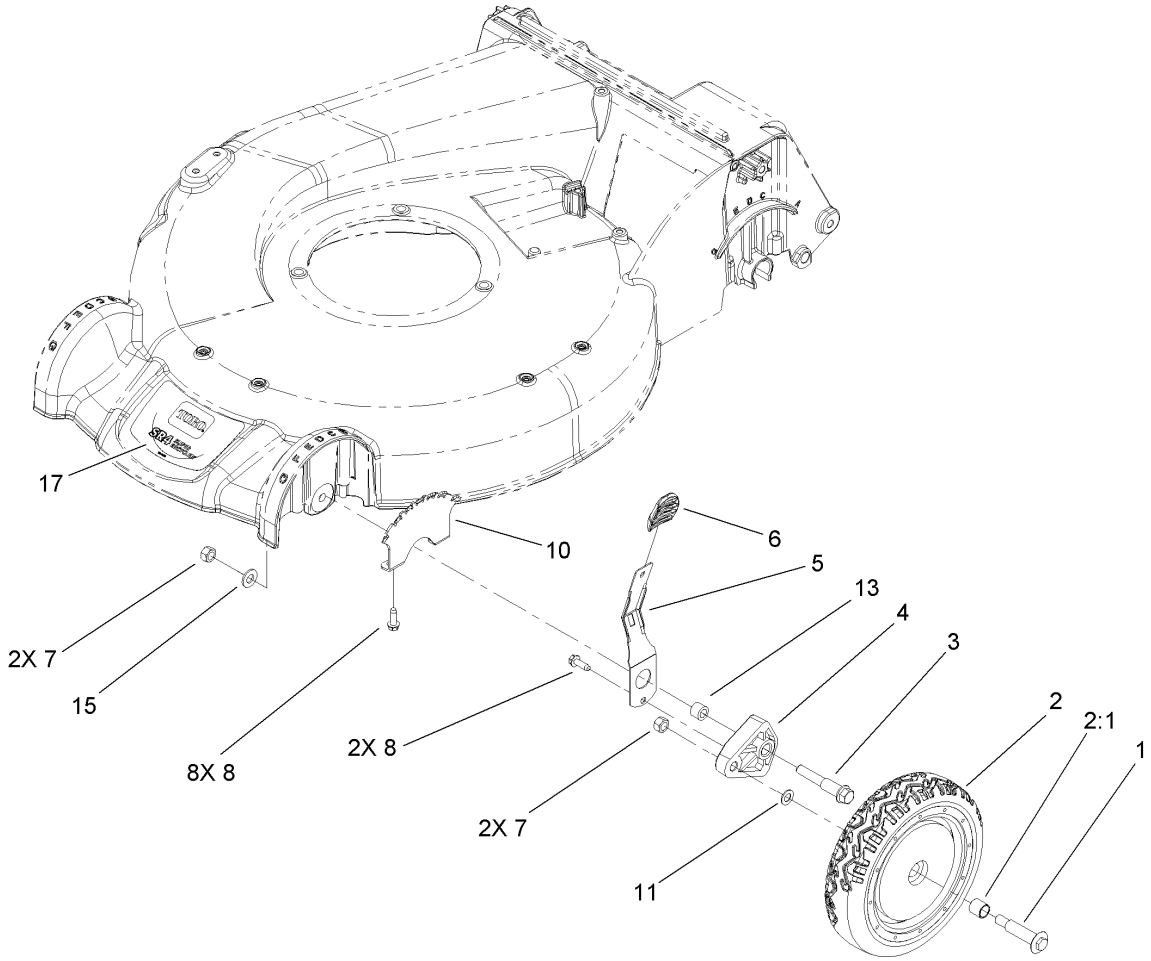

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3708	2	Wheel ASM
2:1	27-6250	2	Bushing
3	107-7498	2	Screw-Shoulder, HOC
4	107-7492	2	Arm-Pivot
5	107-7491	2	Spring Arm
6	105-3042	2	Knob-Lever, HOC
7	603773	4	Nut
8	49-2040	10	Screw-HWHTF
10	107-7478	4	Plate-HOC
11	40-1940	2	Washer
13	52-2480	2	Spacer-Wheel
15	3256-24	2	Washer-Flat
17	108-8168	1	Decal

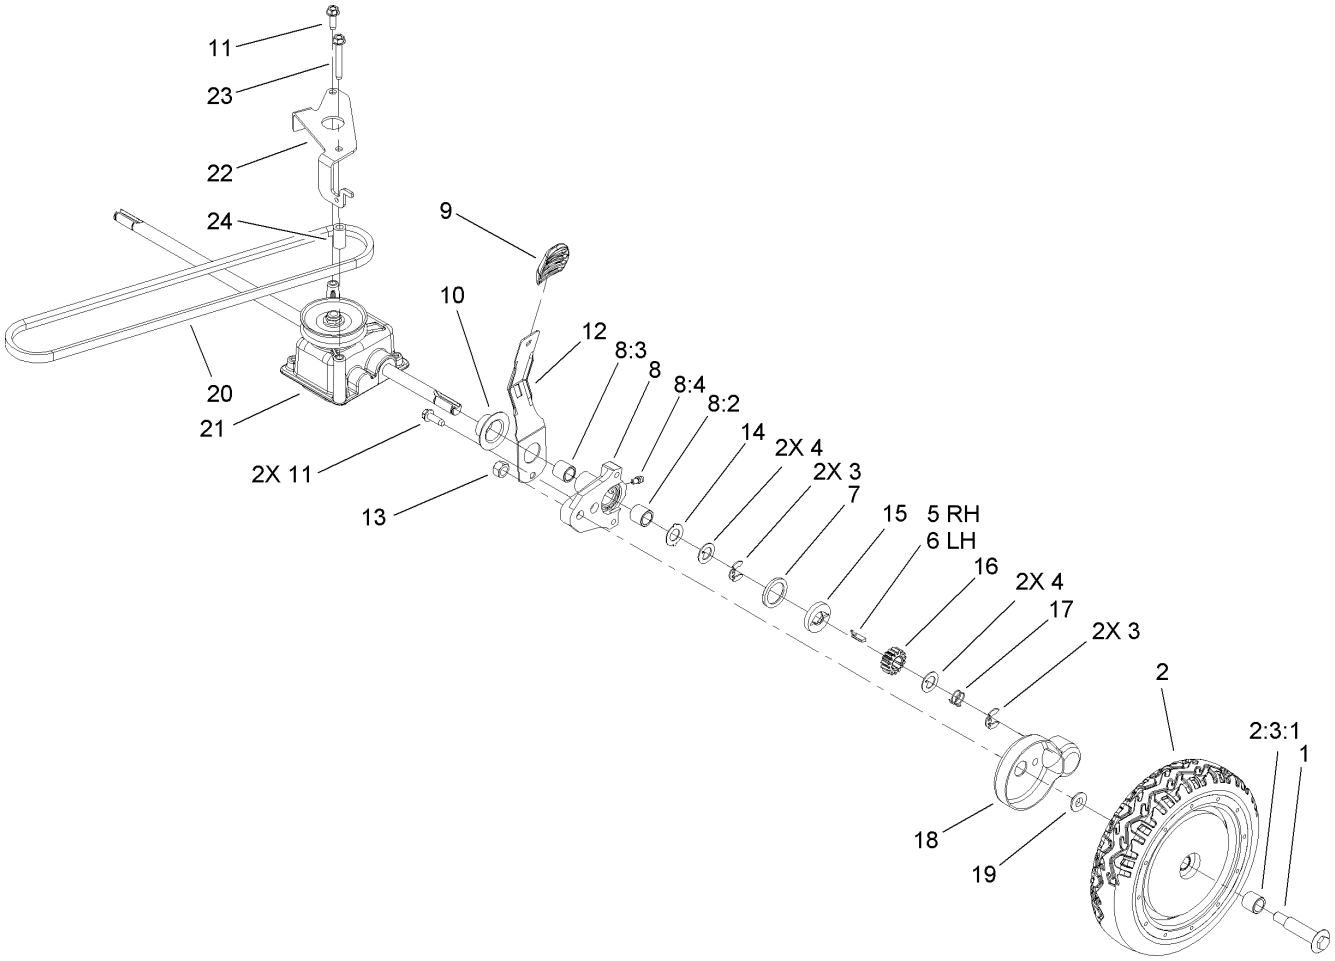

Transmission Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	107-3709	2	Wheel Gear ASM
❶❷2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
❶5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	105-3042	2	Knob-Lever, HOC
10	42-3520	2	Cap-End
11	49-2040	3	Screw-HWHTF
12	107-7491	2	Spring Arm
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel

Ref	Part No.	Qty.	Description
20	99-1597	1	V-Belt
21	108-8140	1	Gear Case ASM
22	107-7483-03	1	Bracket-Gearbox
23	92-1616	1	Screw-HWHTF
24	614673	1	Bushing-Plate, Actuator

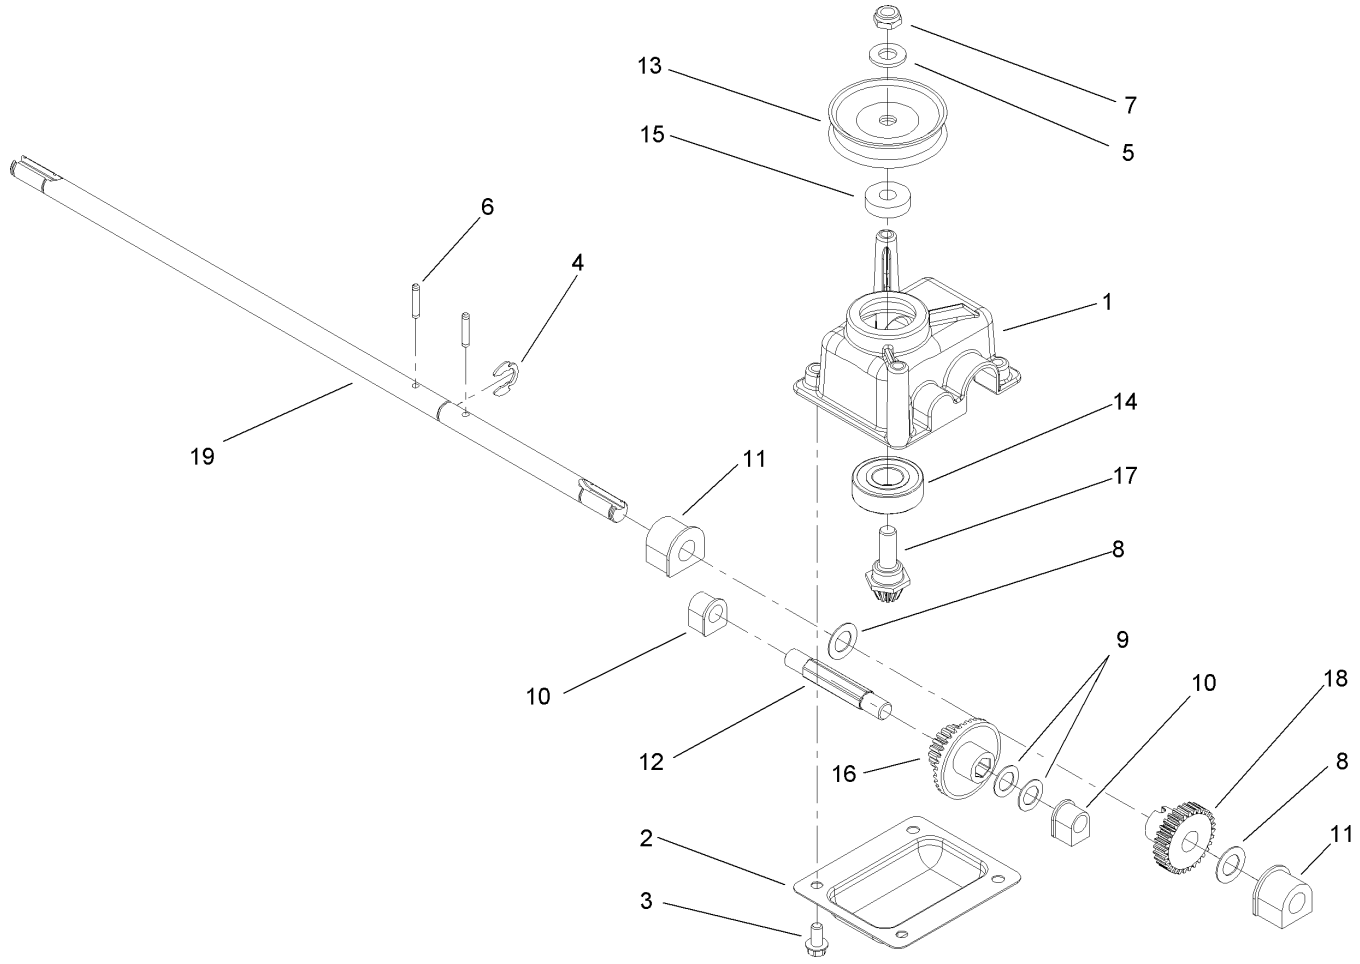


Gear Case Assembly No. 108-8140

Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19T Spur, 37T Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30T
19	108-8141	1	Shaft-Output

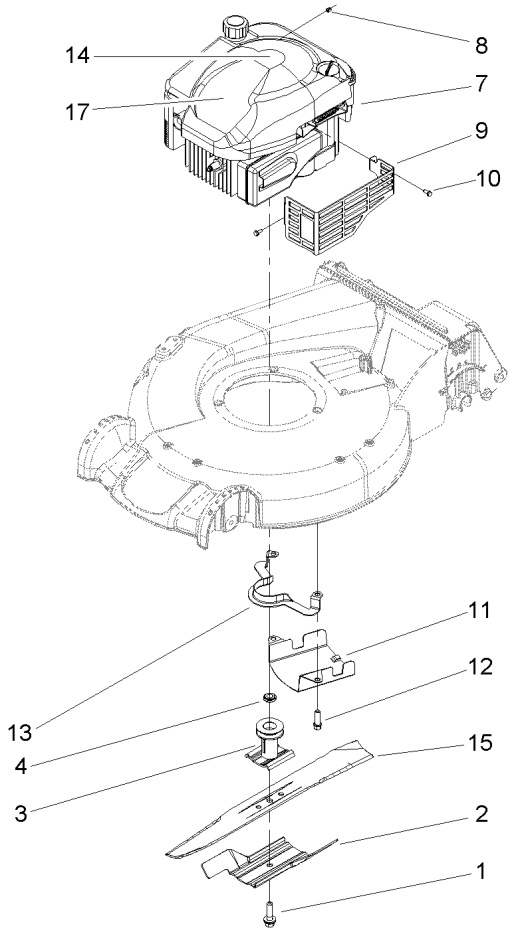

Engine Assembly


Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	105-6848-03	1	Accelerator-Blade
3	106-3987	1	Blade Driver ASM
4	106-3999	1	Spacer-Driver
❷❸7		1	Engine-Briggs And Stratton, 125K02-0189-E1
8	2210-316	1	Stop-Rope Need Order
9	104-7577-03	1	Shield-Muffler
10	32144-1	3	Screw-Taptite
11	107-7489-03	1	Shield-Grass
12	95-1727	3	Screw-Taptite
13	108-8110-03	1	Guide-Belt
14	108-8130	1	Decal-Recoil
15	108-3762-03	1	Blade-Recycling
17	108-9774	1	Decal

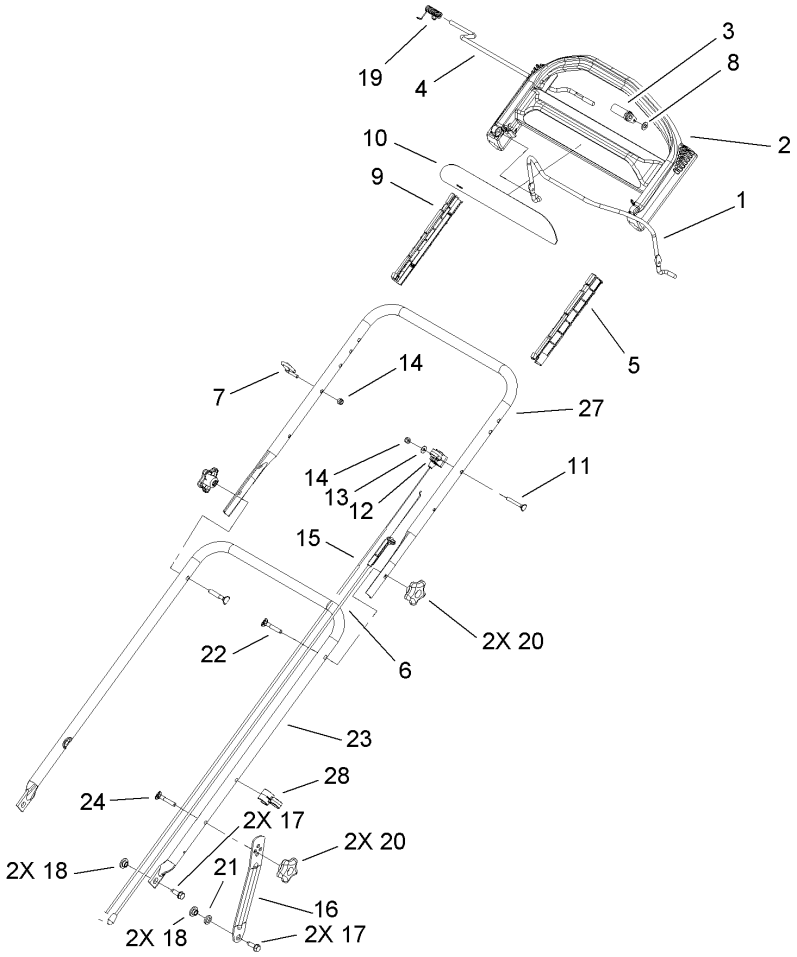

Handle Assembly

Ref	Part No.	Qty.	Description
1	104-8679-03	1	Bail-Brake
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
6	108-8157	1	Cable-Brake
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	108-8134	1	Decal-Handle
11	95-4453	1	Screw
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	108-8158	1	Cable-Traction
16	108-8145-03	2	Support-Handle
17	701243	4	Screw-HWHTF
18	27-6600	4	Spacer-Coupling
19	104-8690	1	Spring-Torsion
20	108-8162	4	Knob-Locking
21	55-9670	2	Washer
22	92-2260	2	Screw-Handle
23	107-7476-05	1	Handle-Lower
24	92-2260	2	Screw-Handle


Ref	Part No.	Qty.	Description
27	107-3783-05	1	Handle-Upper
28	106-6805	1	Guide-Cable

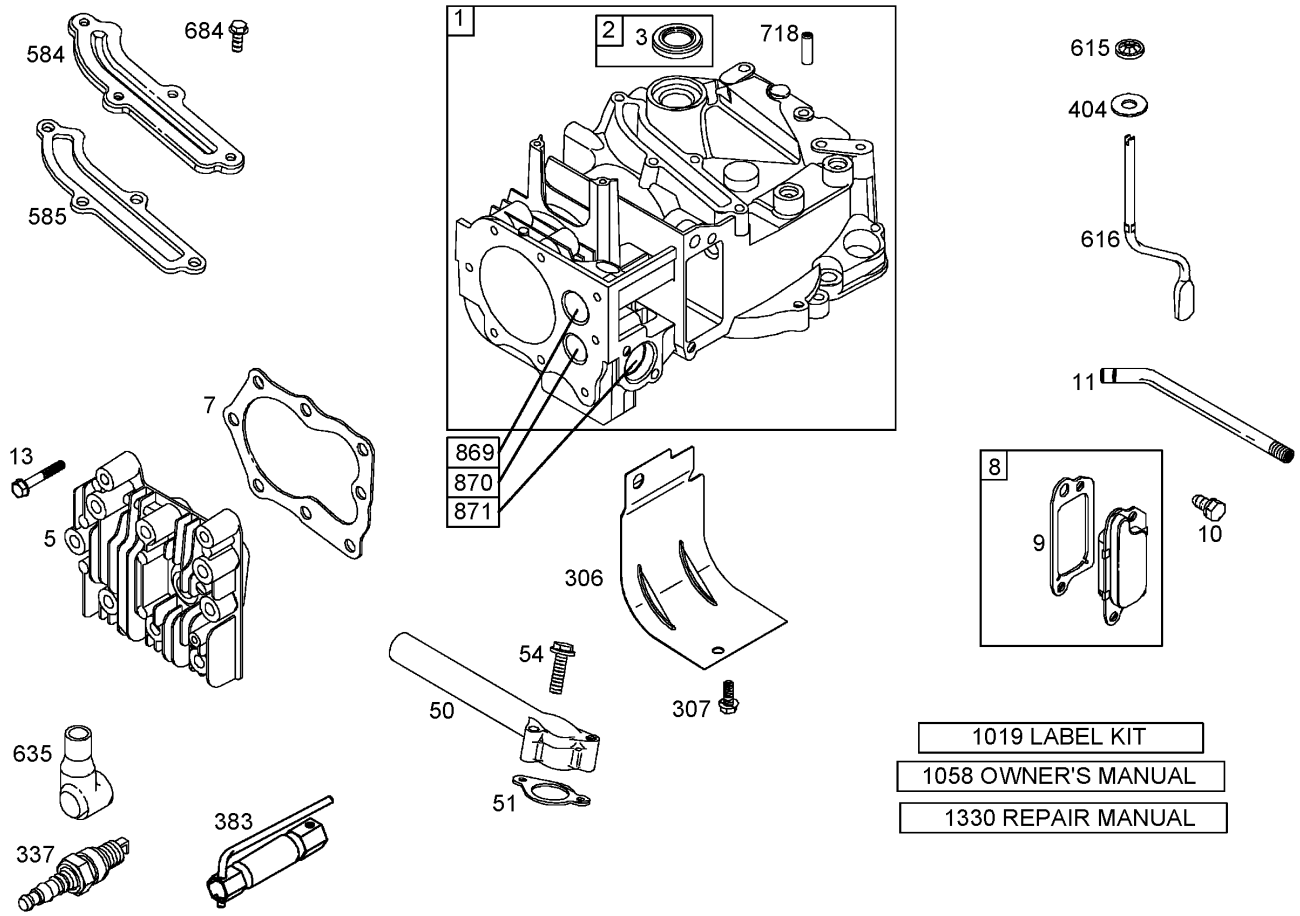

Cylinder Assembly
Briggs and Stratton 125K02-0189-E1


Ref	Part No.	Qty.	Description
❸1	697322	1	Cylinder ASM
❸2	399269	1	Bushing/Seal Kit
❸3	299819	1	Seal–Oil (Magneto Side)
❸5	691160	1	Head–Cylinder
❸7	692249	1	Gasket–Head, Cylinder
❸8	695250	1	Breather ASM
❸9	699472	1	Gasket–Breather
❸10	691125	1	Screw (Breather Side)
❸11	691781	1	Tube–Breather
❸13	690912	1	Screw (Cylinder Head)
❸50	497465	1	Manifold–Intake
❸51	272199	1	Gasket–Intake
❸54	691650	1	Screw (Intake Manifold)
❸306	690450	1	Shield-Cylinder
❸307	690345	1	Screw (Cylinder Shield)
❸337	802592	1	Plug–Spark
❸383	89838	1	Wrench-Plug, Spark
❸404	690272	1	Washer (Governor Crank)
❸584	697734	1	Cover–Passage, Breather
❸585	691879	1	Gasket–Passage, Breather
❸615	690340	1	Retainer–Shaft, Governor
❸616	698801	1	Crank–Governor
❸635	66538	1	Boot–Plug, Spark
❸684	690345	1	Screw (Breather Passage Cover)

Ref	Part No.	Qty.	Description
❸718	690959	1	Pin-Locating
❸869	691155	1	Seat–Valve (Intake)
❸870	690380	1	Seat–Valve (Exhaust)
❸871	262001	1	Bushing–Guide (Exhaust)
❸871	63709	1	Bushing–Guide (Intake)
❸1019	494256	1	Label Kit
❸1058	275177	1	Manual-Owner's
❸1330	270962	1	Manual-Repair

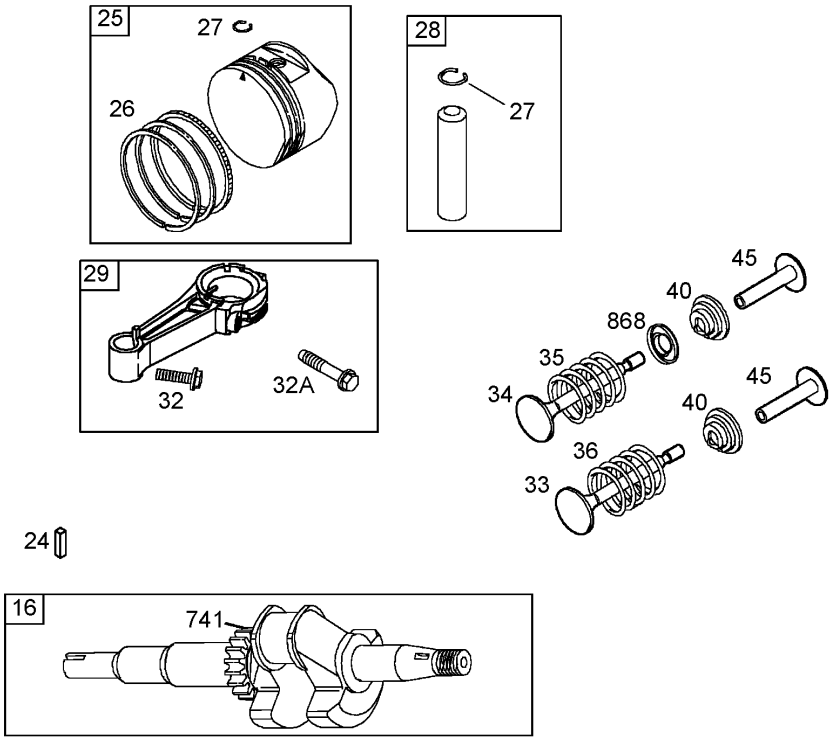


Crankshaft Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸16	696009	1	Crankshaft
❸24	222698	1	Key
❸25	790359	1	Piston ASM (Standard)
❸25	791326	1	Piston ASM (.020In Oversize)
❸26	790360	1	Ring Set (Standard)
❸26	791324	1	Ring Set (.020In Oversize)
❸27	691866	1	Lock–Pin, Piston
❸28	499423	1	Pin-Piston (STD)
❸28	298908	1	Pin-Piston (.005In Undersize)
❸29	499424	1	Rod-Connecting
❸32	691664	1	Screw (Connecting Rod)
❸32A	695759	1	Screw (Connecting Rod)
❸33	262651	1	Valve–Exhaust
❸34	262652	1	Valve–Intake
❸35	691270	1	Spring–Valve (Intake)
❸36	691270	1	Spring–Valve (Exhaust)
❸40	692194	1	Retainer–Valve
❸45	690548	1	Tappet–Valve
❸741	790345	1	Gear–Timing
❸868	697338	1	Seal–Valve

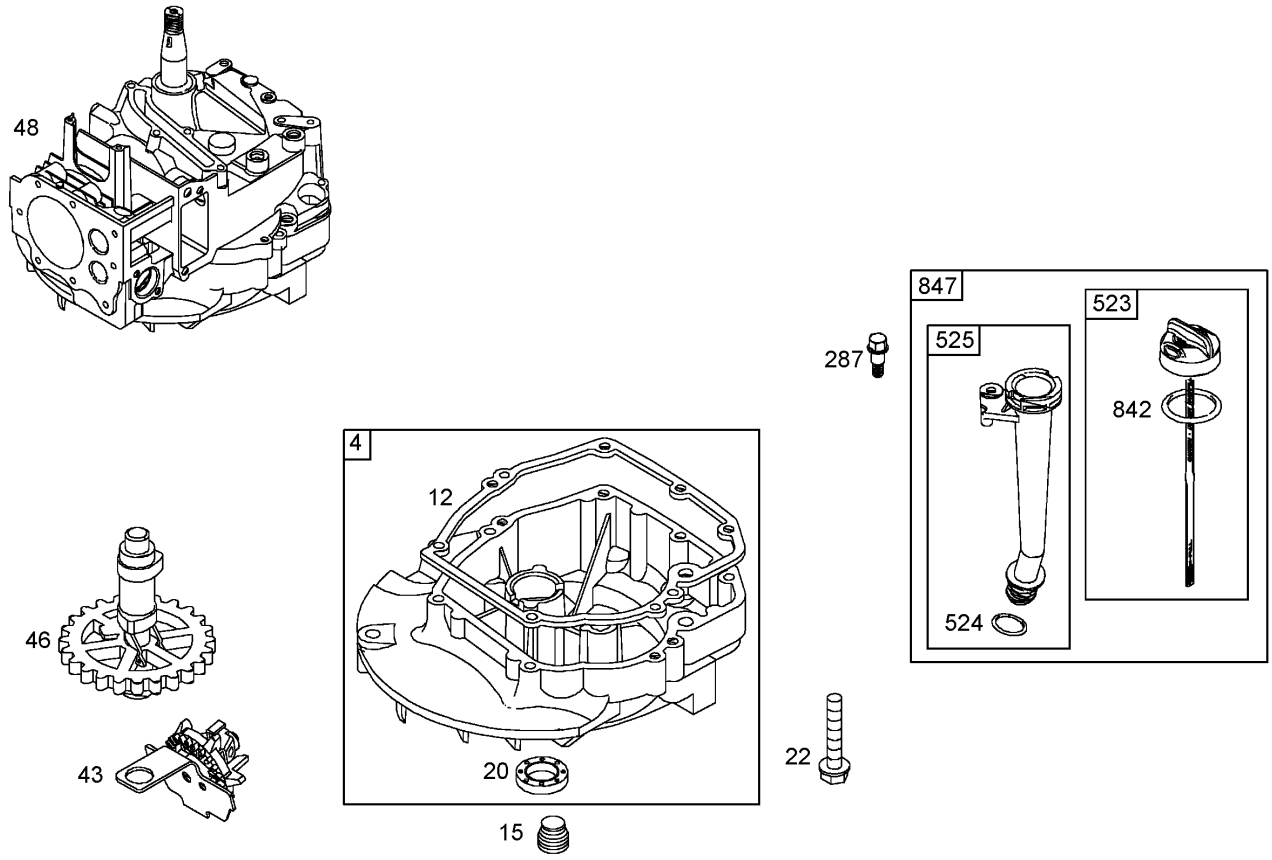


Crankcase Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸4	493279	1	Sump–Engine
❸12	692232	1	Gasket–Crankcase
❸15	691680	1	Plug–Drain, Oil
❸20	399781	1	Seal–Oil
❸22	691092	1	Screw (Engine Sump)
❸43	691997	1	Slinger–Governor/Oil
❸46	691449	1	Camshaft
❸48	696276	1	Short Block
❸287	690940	1	Screw (Dipstick Tube)
❸523	499621	1	Dipstick
❸524	692296	1	Seal-Tube, Dipstick
❸525	495265	1	Tube-Dipstick
❸842	691031	1	Seal-O Ring (Dipstick Tube)
❸847	692047	1	Dipstick/Tube ASM

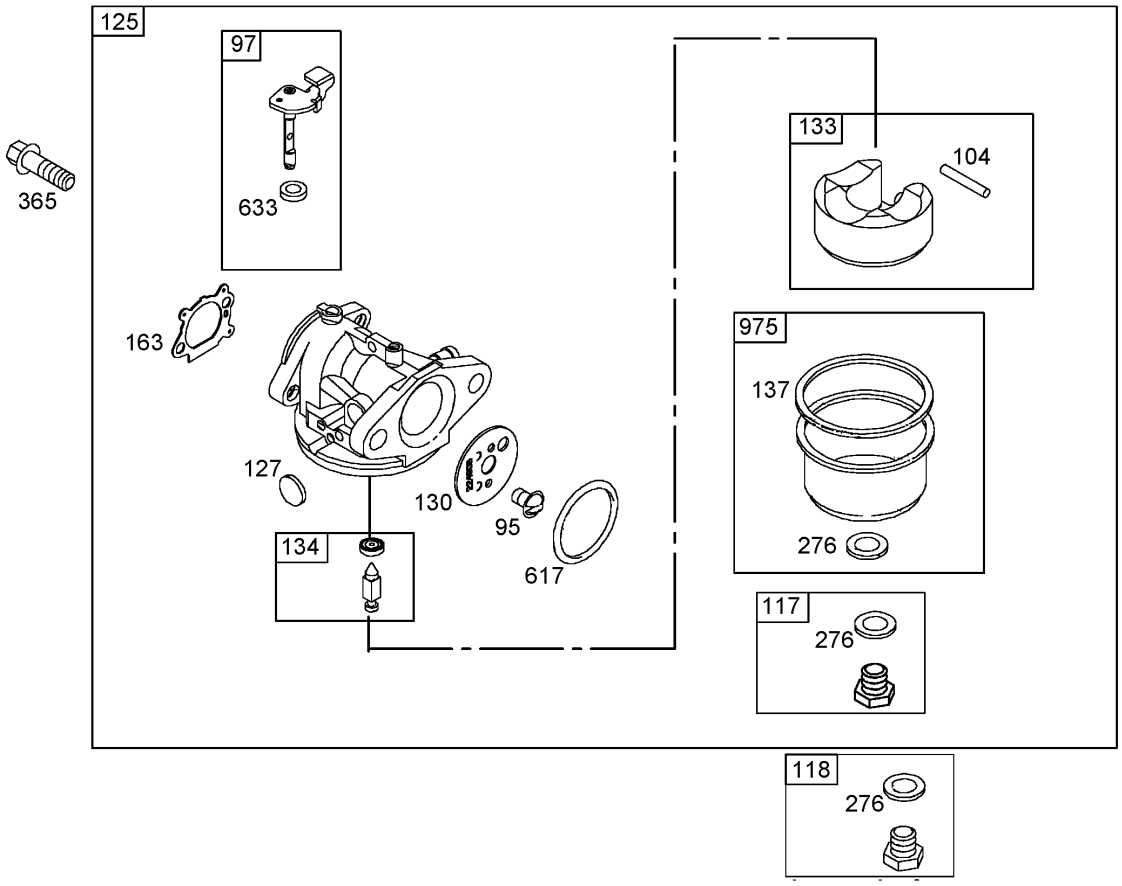


Carburetor Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸95	691636	1	Screw (Throttle Valve)
❸97	696565	1	Shaft–Throttle
❸104	691242	1	Pin–Hinge, Float
❸117	498978	1	Jet–Main (Standard)
❸118	497466	1	Main Jet (High Altitude)
❸125	498170	1	Carburetor
❸127	694468	1	Plug–Welch
❸130	696564	1	Valve–Throttle
❸133	398187	1	Float–Carburetor
❸134	398188	1	Needle/Seat Kit
❸137	693981	1	Gasket–Bowl, Float
❸163	272653	1	Gasket–Cleaner, Air
❸276	271716	1	Washer–Sealing
❸365	692524	1	Screw (Carburetor)
❸617	270344	1	Seal–O Ring (Intake Manifold)
❸633	691321	1	Seal (Choke/Throttle Shaft)
❸975	493640	1	Bowl–Float

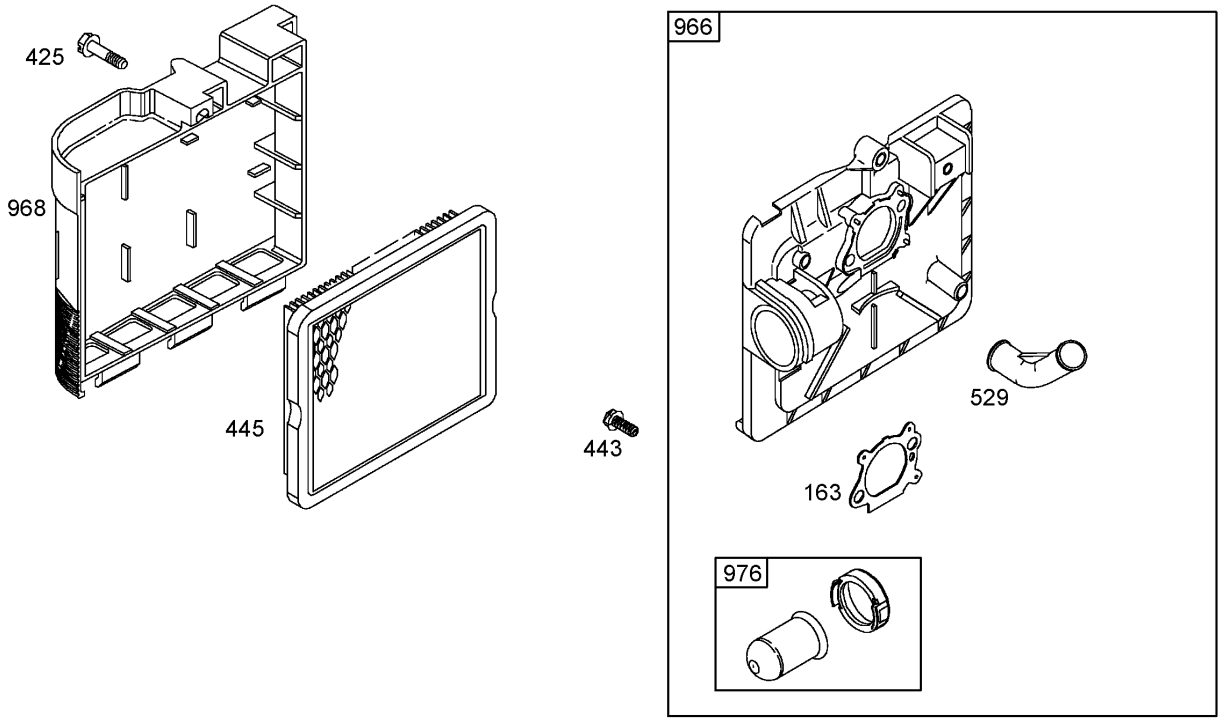


Air Cleaner Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸163	272653	1	Gasket–Cleaner, Air
❸425	690670	1	Screw (Air Cleaner Cover)
❸443	692523	1	Screw (Air Cleaner Primer Base)
❸445	491588	1	Filter–Cartridge, Air Cleaner
❸529	691923	1	Grommet
❸966	496116	1	Base–Primer, Air Cleaner
❸968	692298	1	Cover–Cleaner, Air
❸976	694395	1	Primer–Carburetor

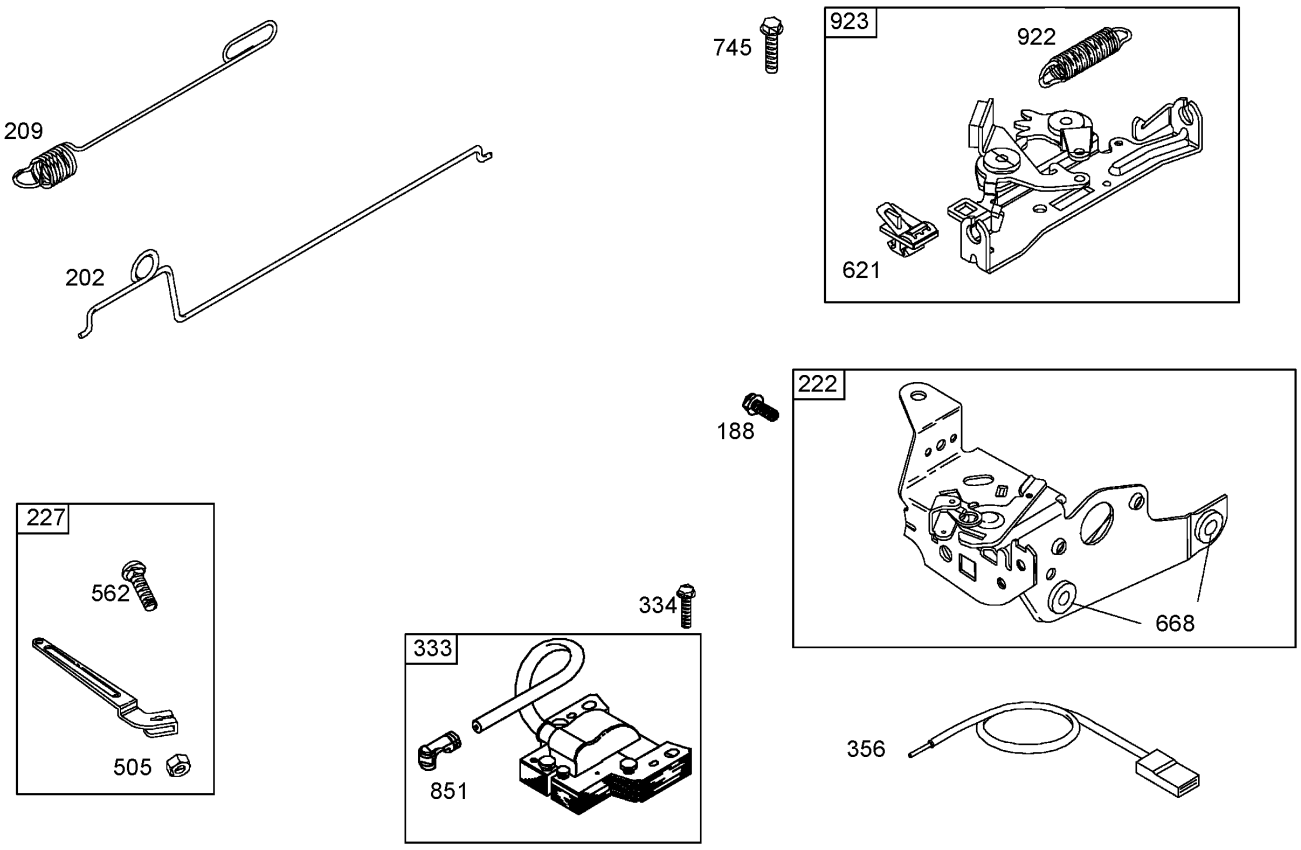


Governor Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸188	693399	1	Screw (Control Bracket)
❸202	691829	1	Link–Governor, Mechanical
❸209	691292	1	Spring–Governor
❸222	791128	1	Bracket-Control
❸227	690783	1	Lever–Control, Governor
❸333	802574	1	Armature–Magneto
❸334	691061	1	Screw (Magneto Armature)
❸356	692390	1	Wire-Stop
❸505	691251	1	Nut (Governor Control Lever)
❸562	691119	1	Bolt (Governor Control Lever)
❸621	692310	1	Switch-Stop
❸668	493823	1	Spacer
❸745	691648	1	Screw (Brake)
❸851	493880	1	Terminal-Spark Plug
❸922	691831	1	Spring–Brake
❸923	691994	1	Brake ASM

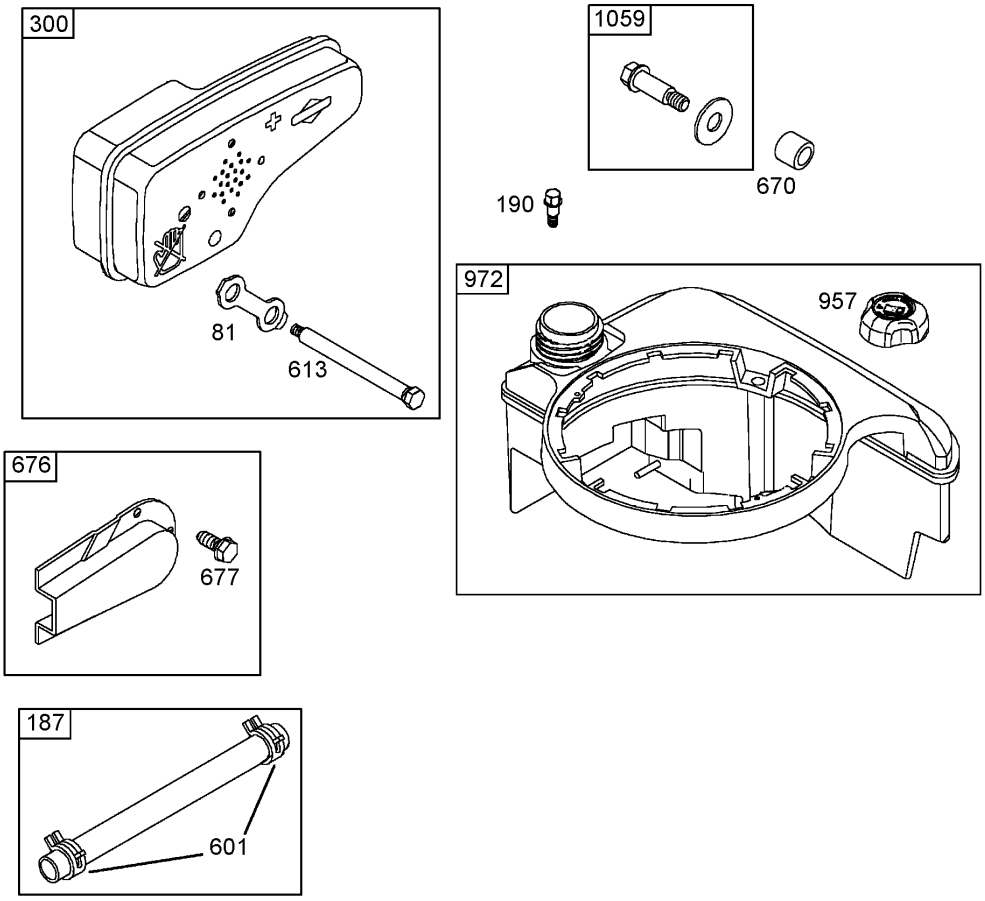


Muffler and Fuel Tank Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸81	691740	1	Lock–Screw, Muffler
❸187	691050	1	Line-Fuel (Cut To Required Length)
❸190	690940	1	Screw (Fuel Tank)
❸300	692038	1	Muffler
❸601	95162	1	Clamp-Hose
❸613	691340	1	Screw (Muffler)
❸670	692294	1	Spacer–Tank, Fuel
❸676	493871	1	Deflector–Muffler
❸677	690661	1	Screw (Muffler Deflector)
❸957	692046	1	Cap–Tank, Fuel
❸972	699374	1	Tank–Fuel
❸1059	692311	1	Screw/Washer Kit

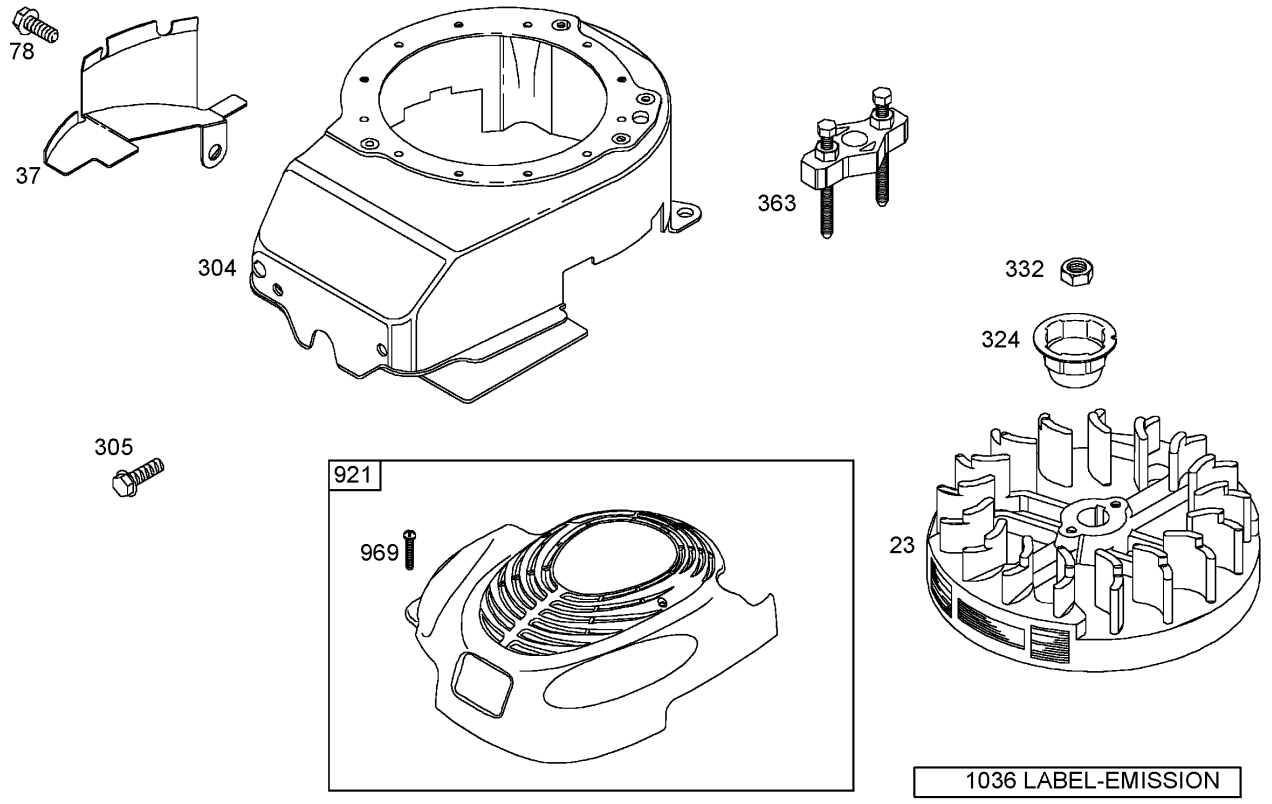


Blower Housing Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸23	692315	1	Flywheel
❸37	694086	1	Guard–Flywheel
❸78	691108	1	Screw (Flywheel Guard)
❸304	493293	1	Housing–Blower
❸305	691108	1	Screw (Blower Housing)
❸324	695161	1	Cup/Screen ASM
❸332	690662	1	Nut (Flywheel)
❸363	19069	1	Puller–Flywheel
❸921	790036	1	Cover–Housing, Blower
❸969	691138	1	Screw (Blower Housing Cover)
❸1036	790411	1	Label–Emission

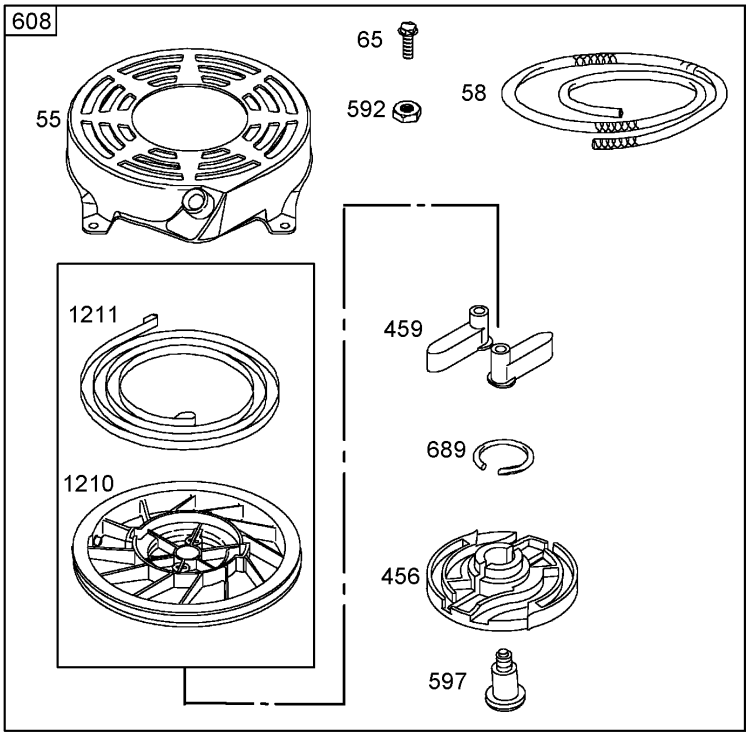


Starter Assembly
Briggs and Stratton 125K02-0189-E1


Ref	Part No.	Qty.	Description
❸55	691421	1	Housing–Starter, Rewind
❸58	791362	1	Rope–Starter (Cut To Required Length)
❸65	690837	1	Screw (Rewind Starter)
❸456	692299	1	Plate–Friction, Pawl
❸459	281505	1	Ratchet–Pawl
❸592	690800	1	Nut (Rewind Starter)
❸597	691696	1	Screw (Pawl Friction Plate)
❸608	791363	1	Starter–Rewind
❸689	691855	1	Spring–Friction
❸1210	498144	1	Pulley/Spring ASM (Pulley)
❸1211	498144	1	Pulley/Spring ASM (Spring)

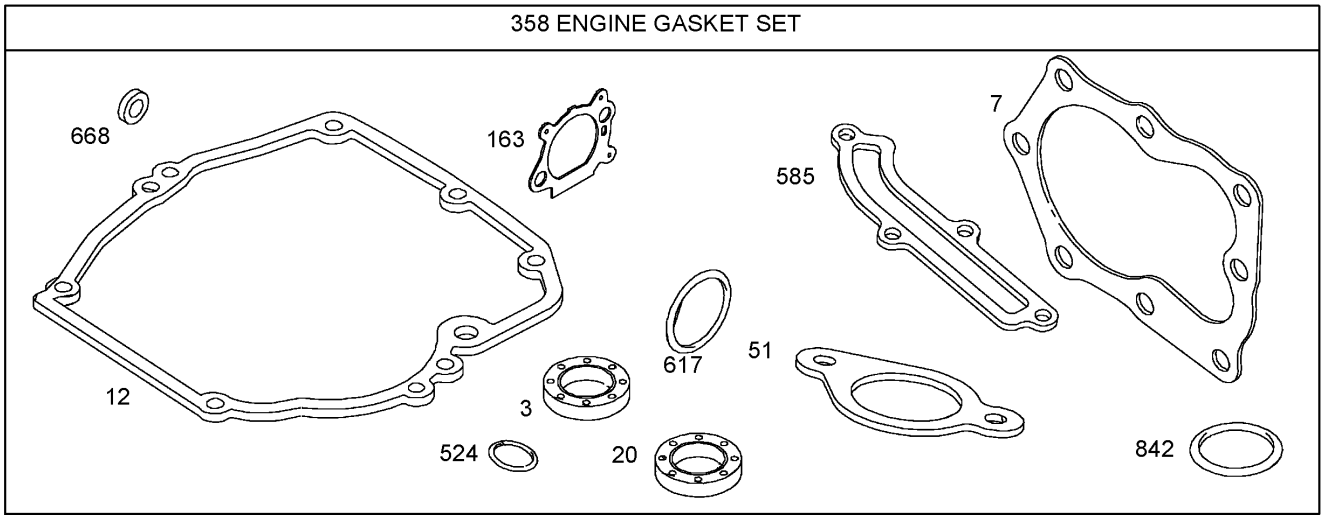

Engine Gasket Set Assembly
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸3	299819	1	Seal–Oil (Magneto Side)
❸7	692249	1	Gasket–Head, Cylinder
❸12	692232		Gasket–Crankcase
❸20	399781	1	Seal–Oil (PTO Side)
❸51	272199	1	Gasket–Intake
❸163	272653	1	Gasket–Cleaner, Air
❸358	497316	1	Engine Gasket Set
❸524	692296	1	Seal–Oil (Dipstick Tube)
❸585	691879	1	Gasket–Passage, Breather
❸617	270344	1	Seal–O Ring (Intake Manifold)
❸668	493823	1	Spacer
❸842	691031	1	Seal-O Ring (Dipstick)

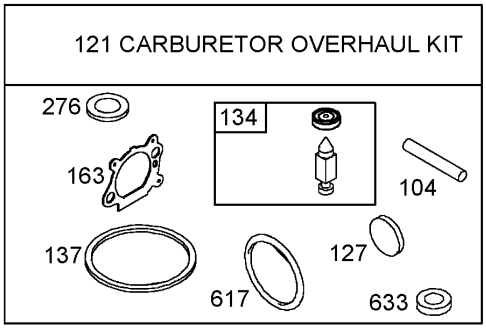

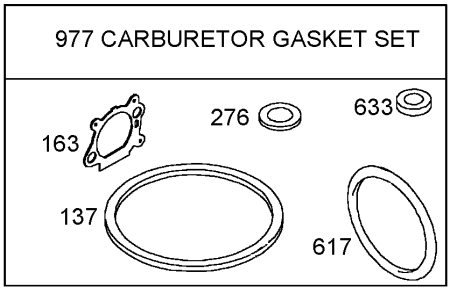

Carburetor Overhaul Kit and Gasket Set Assemblies
Briggs and Stratton 125K02-0189-E1

Ref	Part No.	Qty.	Description
❸104	691242	1	Pin–Hinge, Float
❸121	498260	1	Carburetor Overhaul Kit
❸127	694468	1	Plug–Welch
❸134	398188	1	Needle/Seat Kit
❸137	693981	1	Gasket–Bowl, Float
❸163	272653	1	Gasket–Cleaner, Air
❸276	271716	1	Washer–Sealing
❸617	270344	1	Seal–O Ring (Intake Manifold)
❸633	691321	1	Seal (Choke/Throttle Shaft)
❸977	498261	1	Carburetor Gasket Set

Attachments and Accessories

For 20054 - Super Recycler Lawn Mower

Product Name	Model/Part
Blade-Bagging	108-3759-03
Traction Assist Handle Kit	108-8120

NOTES

NOTES


TORO®