Form Number 3354-457 Rev A

Commercial Side-Discharge Lawnmower

Model No. 22243 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© Lawn-Boy Inc. - 2006
All Rights Reserved

Register your product at www.LawnBoy.co

Contents

Description	Page
Housing Assembly	3
Gear Case Assembly No. 92-7869	4
Gear Case and Wheel Assembly	5
Engine, Blade and Fuel Tank Assembly	6
Handle Assembly	7
Cylinder Assembly Briggs and Stratton 12W802-1701-B1	8
Crankshaft Assembly Briggs and Stratton 12W802-1701-B1	9
Crankcase Assembly Briggs and Stratton 12W802-1701-B1	10
Carburetor Assembly Briggs and Stratton 12W802-1701-B1	11
Air Cleaner Assembly Briggs and Stratton 12W802-1701-B1	12
Governor Assembly Briggs and Stratton 12W802-1701-B1	13
Muffler and Fuel Tank Assembly Briggs and Stratton 12W802-1701-B1	14
Blower Housing Assembly Briggs and Stratton 12W802-1701-B1	15
Starter Assembly Briggs and Stratton 12W802-1701-B1	16
358 Engine Gasket Set Assembly Briggs and Stratton 12W802-1701-B1	17
121 Carburetor Overhaul Kit and 977 Carburetor Gasket Set Briggs and Stratton 12W802-1701-B1	18


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not serviced separately
❷ Obtain from your local Briggs & Stratton dealer
❸ Included in Carburetor Overhaul Kit (Ref. No. 121)
❹ Included in Engine Gasket Set (Ref. No. 358)
❺ Included in Carburetor Gasket Set (Ref. No. 977)

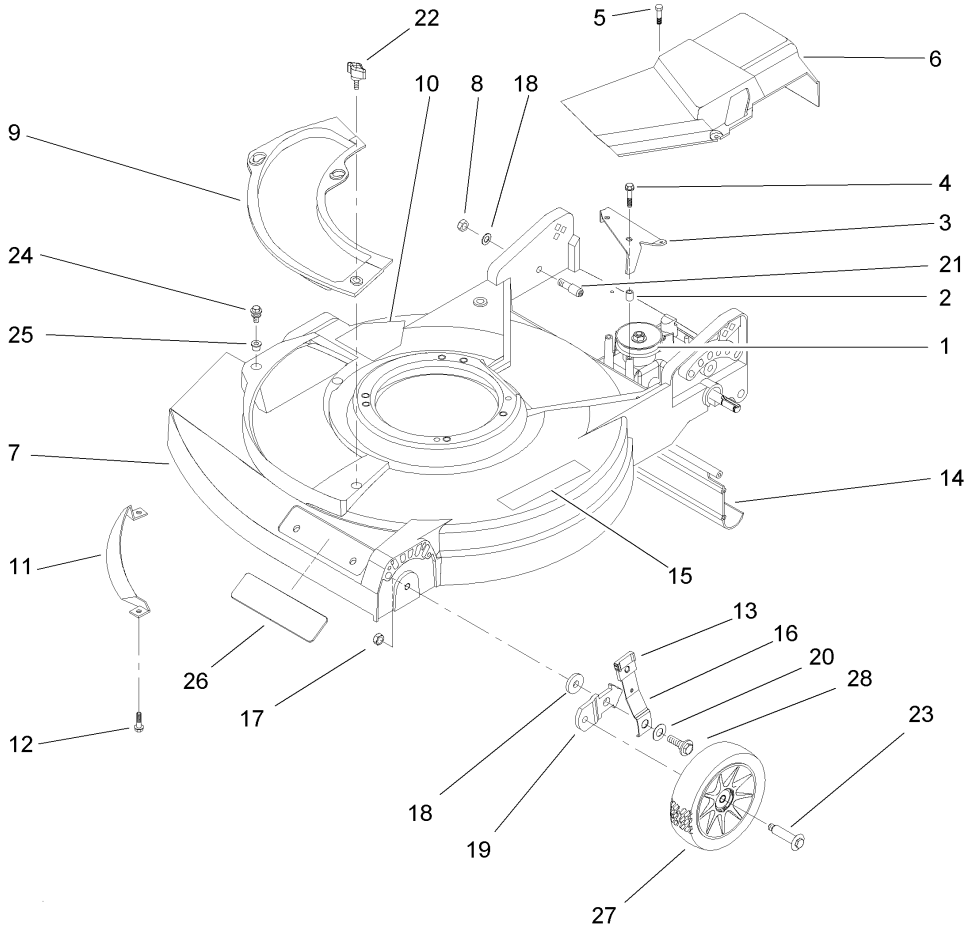

Housing Assembly

Ref	Part No.	Qty.	Description
1	92-7869	1	Gear Case ASM
2	46-5551	2	Spacer
3	92-7699-03	1	Bracket-Actuator
4	32144-110	2	Screw-HWH
5	32144-112	2	Screw-HWH
6	98-4493	1	Cover-Drive
7	108-9333	1	Housing ASM
8	603773	2	Nut
9	95-7052	1	Plate-Opening, Chute
10	43-8480	1	Decal-Danger
11	608175	1	Bar-Toe
12	46-6811	2	Screw-HWH
13	92-1008	4	Knob-Lever, Height Adjustment
14	92-7736	1	Shield-Trailing
15	93-7250	1	Decal-Warning
16	92-1006	2	Front Spring Arm ASM
17	3296-39	2	Nut-Lock, NI
18	40-1940	4	Washer
19	95-7403-03	2	Bracket-Height Adjustment, Wheel
20	3290-413	2	Washer-Belleville
21	92-9673	2	Bolt-Shoulder
22	98-8332	1	Knob
23	603567	2	Bolt
24	614677	2	Screw-Sems


Ref	Part No.	Qty.	Description
25	94-1610	3	Nut-Clip
26	108-9397	1	Decal
27	684159	2	Wheel And Tire ASM
28	92-4856	2	Bolt-Shoulder

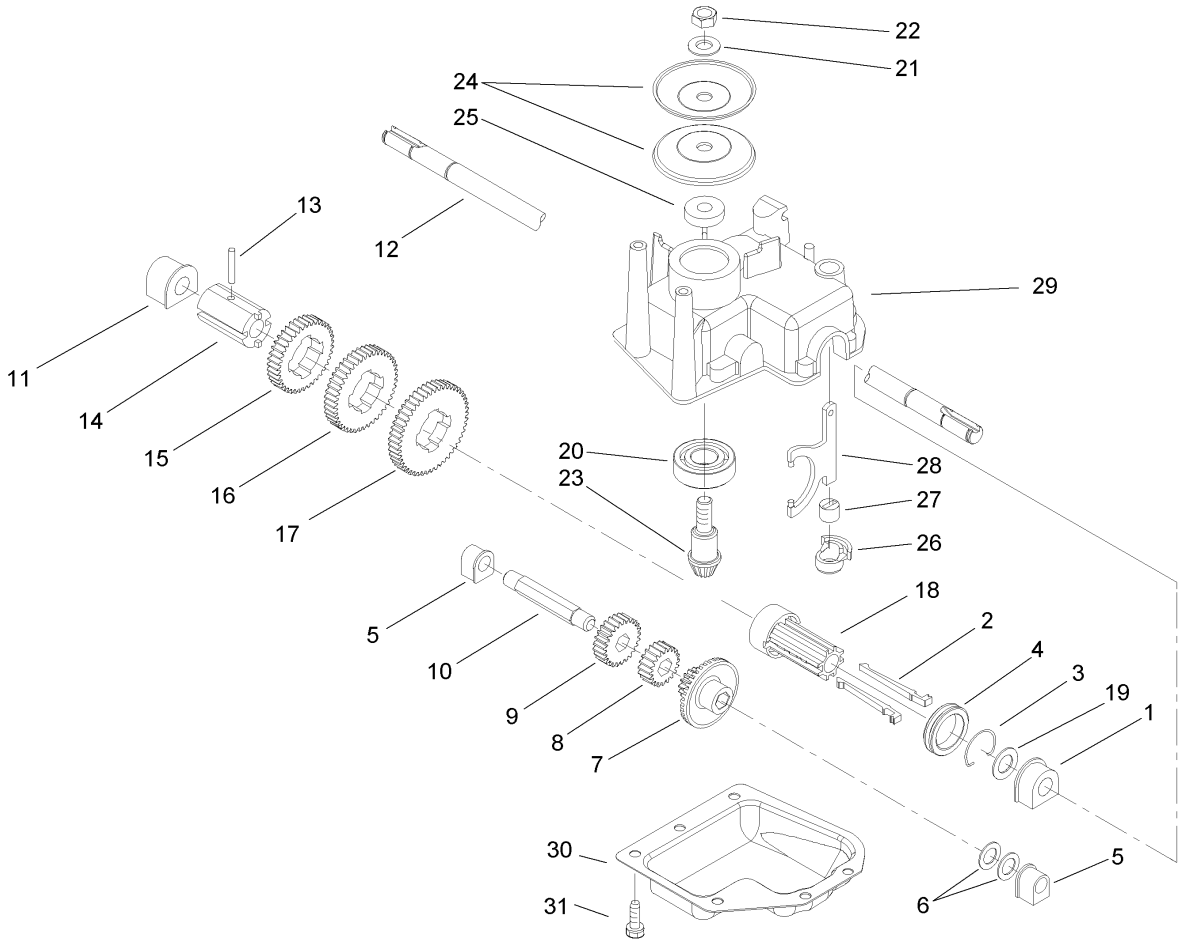

Gear Case Assembly No. 92-7869

Ref	Part No.	Qty.	Description
1	60-8770	1	Bushing-Output
2	76-0760	2	Key-Shift
3	65-5250	1	Clip-Spring
4	76-0770	1	Collar-Shift
5	60-8750	2	Bushing
6	36-4791	2	Washer-Thrust
7	104-7668	1	Gear-15T Spur, 37T Bevel
8	55-3780	1	Pinion-20T
9	55-3800	1	Pinion-25T
10	60-8800	1	Shaft-Intermediate
11	60-8850	1	Bushing
12	65-4770	1	Shaft-Output
13	3285-19	1	Pin-Groove
14	60-8790	1	Sleeve-Gear
15	55-3810	1	Gear-39T
16	55-3790	1	Gear-44T
17	55-3770	1	Gear-49T
18	76-0780	1	Sleeve-Key, Shift
19	36-4780	1	Washer
20	100-1048	1	Bearing-Ball
21	3256-24	1	Washer-Flat
22	3296-5	1	Nut-Lock
23	92-5790	1	Pinion
24	100-1176	2	Pulley-Half


Ref	Part No.	Qty.	Description
25	92-5791	1	Spacer
26	60-8810	1	Retainer-Fork, Shift
27	29-9570	1	Bushing-Yoke
28	60-8870	1	Yoke-Shift
29	60-8710	1	Case-Gear, Upper
30	60-8730-03	1	Cover-Case, Gear
31	49-2040	6	Screw-HWHTF

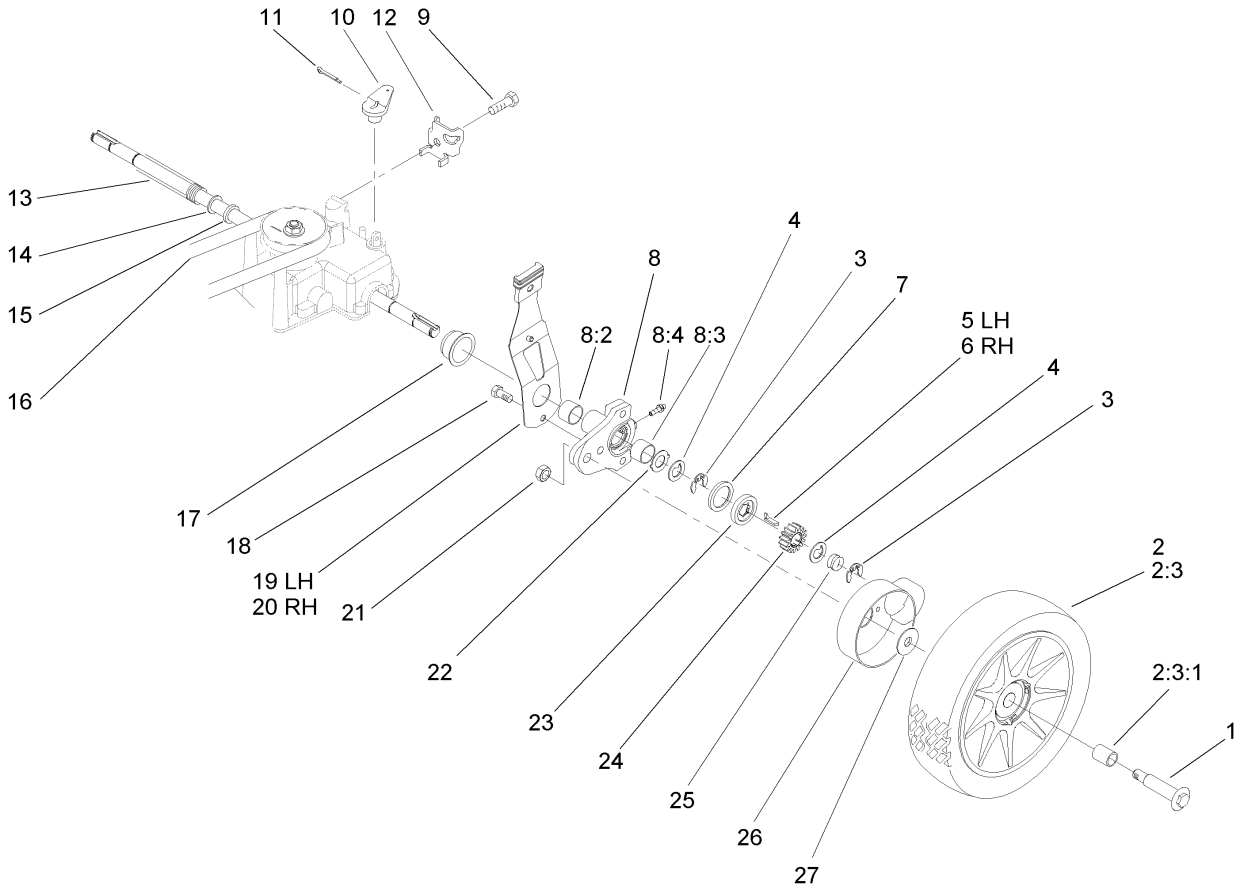

Gear Case and Wheel Assembly

Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	95-1714	2	Wheel And Gear ASM
❶2:3		1	8 Inch Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Grease
9	32144-70	1	Screw-HWHTF
10	60-8821	1	Lever-Shift
11	3272-10	1	Pin-Cotter
12	82-8780	1	Clamp-Cable
13	24-7920	1	Cover-Shaft, Drive
14	303259	1	Washer
15	605255	1	Washer
16	92-1043	1	V-Belt
17	92-6535	2	Ring-Isolator
18	32144-85	2	Screw-HWH
19	92-6540	1	LH Rear Spring Arm ASM


Ref	Part No.	Qty.	Description
20	92-6539	1	RH Rear Spring Arm ASM
21	603773	2	Nut
22	65-4730	2	Washer-Arm, Pivot
23	65-4760	2	Washer-Clutch
24	65-4750	2	Gear-Pinion
25	65-4720	2	Spring-Compression
26	94-1609	2	Cover-Wheel
27	614426	2	Washer-Stepped

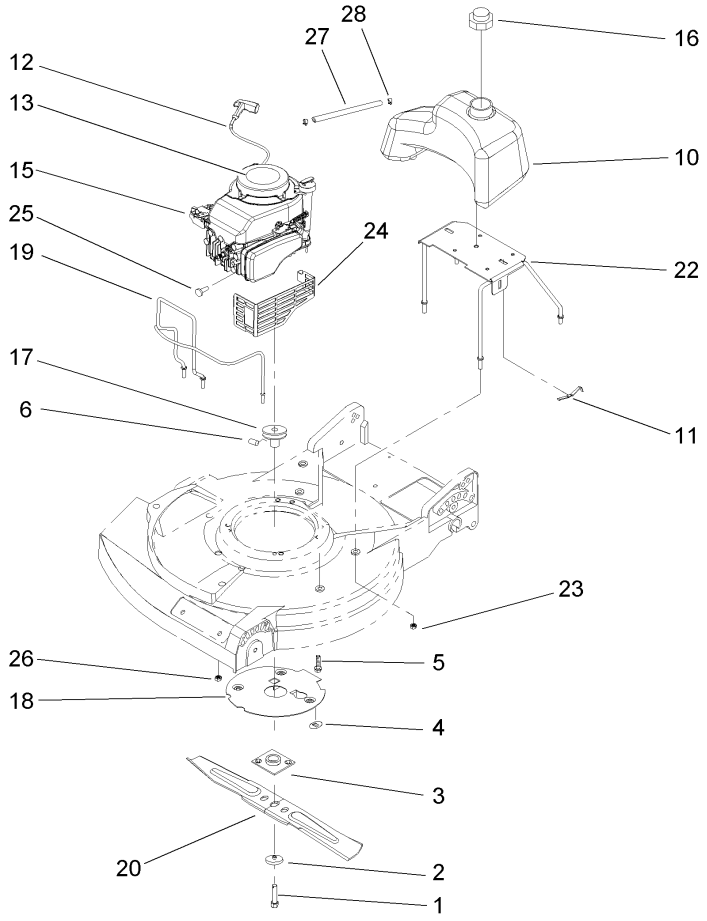

Engine, Blade and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	92-8626	1	Spacer-Blade
3	100-2899	1	Plate And Collar ASM
4	92-4877	3	Push Nut
5	92-1648	3	Screw-Mount, Engine
6	104-0214	1	Screw-Set
10	98-4497	1	Tank-Fuel
11	609830	2	Spring
12	92-1701	1	Stop-Rope
13	108-9334	1	Decal-Recoil
❷15		1	Engine-Briggs And Stratton, 12W8021701B1
16	108-9381	1	Gas Cap ASM
17	95-1878	1	Pulley
18	108-9376-03	1	Shield-Grass
19	108-7470	1	Guard-Muffler
20	612543	1	Blade
20	612543-03	1	Blade-20.88 Inch
22	98-4459-03	1	Tank Bracket ASM
23	3296-29	4	Nut-Lock, NI
24	104-7577-03	1	Shield-Muffler
25	32144-1	3	Screw-Taptite
26	32152-2	2	Nut-Lock, Cone
27	110-1824	1	Gas-Line


Ref	Part No.	Qty.	Description
28	2412-98	2	Clamp

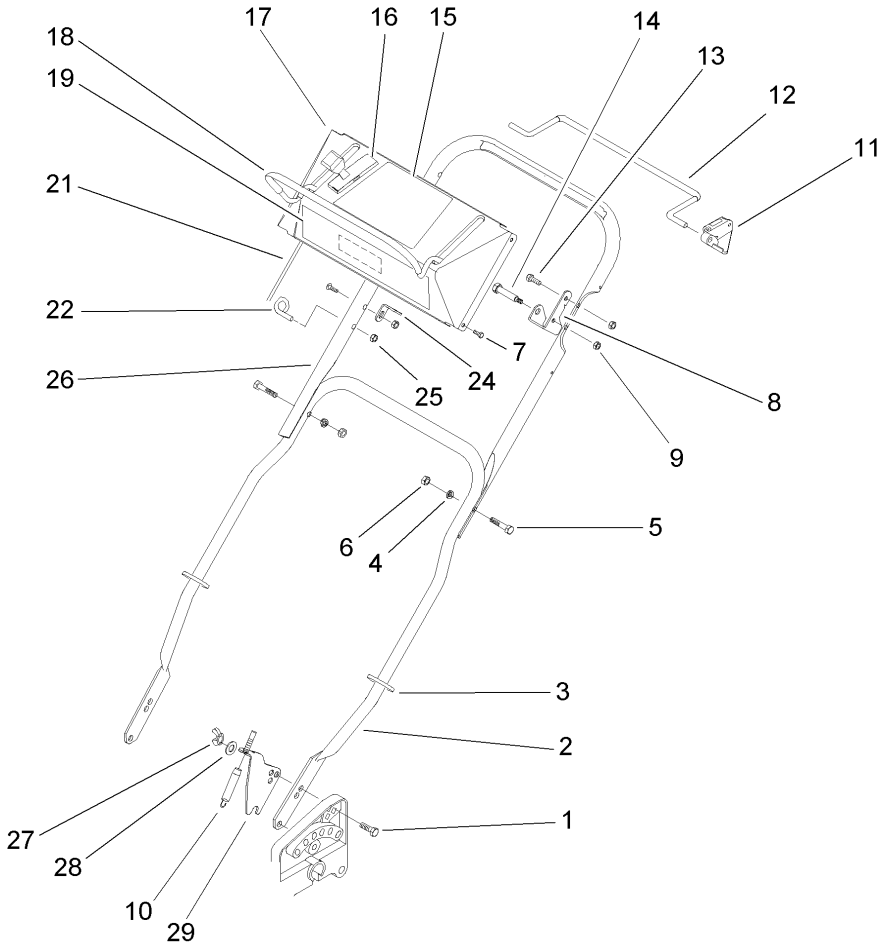

Handle Assembly

Ref	Part No.	Qty.	Description
1	3230-29	2	Screw-CARR
2	100-2890-05	1	Handle-Lower
3	614249	3	Strap-Tie
4	609739	2	Washer-Curved
5	322-9	2	Screw-HH
6	3296-29	2	Nut-Lock, NI
7	92-9665	4	Screw-Thread Cut
8	92-1094	1	Bracket-Stop, Bail
9	3296-73	3	Nut-Lock, NI
10	108-9390	1	Cable-Traction
11	107-0757	1	Stop-Pivot
12	92-1001-03	1	Bail-Control
13	321-4	1	Screw-HH
14	613050	1	Bolt
15	108-9336	1	Decal-Control Panel
16	108-9391	1	Cable-Ground Speed
17	108-7519-03	1	Panel-Control
18	92-1093	1	Bail-Engine Control
19	108-9337	1	Decal-Panel, Front
21	100-6368	1	Brake Cable ASM
22	86-9671	1	Guide-Rope
24	92-2928	1	Bracket-Anchor, Cable
25	3296-56	1	Nut-Lock, NI
26	100-2892-05	1	Handle-Upper


Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	3256-23	2	Washer-Flat
29	92-7899-03	1	Bracket-Cable, Traction

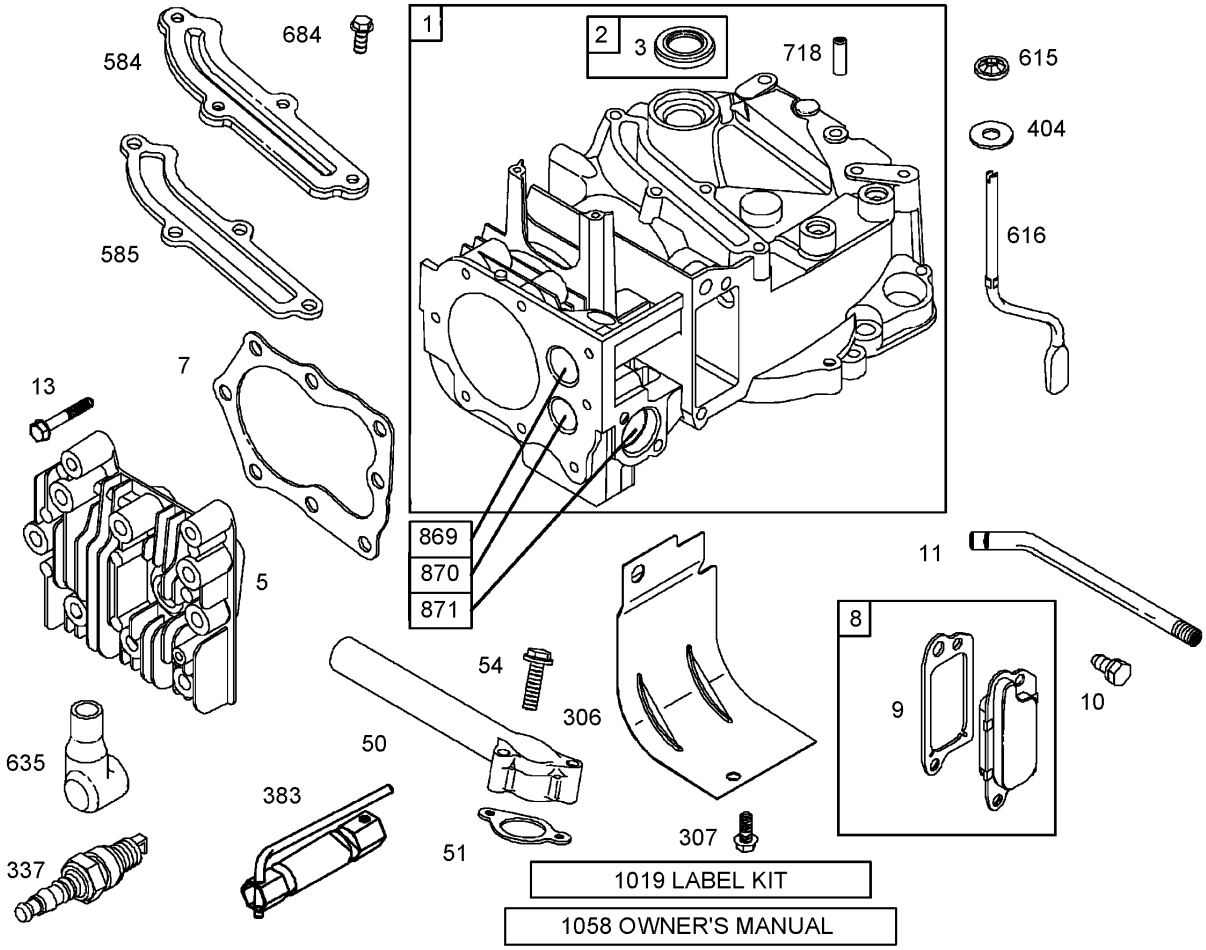

Cylinder Assembly
Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description
❷1	697324	1	Cylinder ASM
❷2	399269	1	Bushing/Seal Kit
❷❹3	299819	1	Seal–Oil
❷5	691160	1	Head–Cylinder
❷7	692249	1	Gasket–Head, Cylinder
❷8	695250	1	Breather ASM
❷❹9	696125	1	Gasket-Breather
❷10	691125	1	Screw
❷11	691781	1	Tube–Breather
❷13	690912	1	Screw
❷50	497465	1	Manifold–Intake
❷❹51	272199	1	Gasket–Intake
❷54	691650	1	Screw
❷306	690450	1	Shield-Cylinder
❷307	690345	1	Screw
❷337	697451	1	Plug–Spark
❷383	89838	1	Wrench-Plug, Spark
❷404	690272	1	Washer
❷584	697734	1	Cover–Passage, Breather
❷❹585	691879	1	Gasket–Passage, Breather
❷615	690340	1	Retainer–Shaft, Governor
❷616	698801	1	Crank–Governor
❷635	66538	1	Boot–Plug, Spark
❷684	690345	1	Screw

Ref	Part No.	Qty.	Description
❷718	690959	1	Pin-Locating
❷869	691155	1	Seat–Valve (Intake)
❷870	690380	1	Seat–Valve (Exhaust)
❷871	262001	1	Bushing–Guide (Exhaust)
❷871	63709	1	Bushing–Guide (Intake)
❷1019	494256	1	Label Kit
❷1058	275177	1	Manual-Owner's

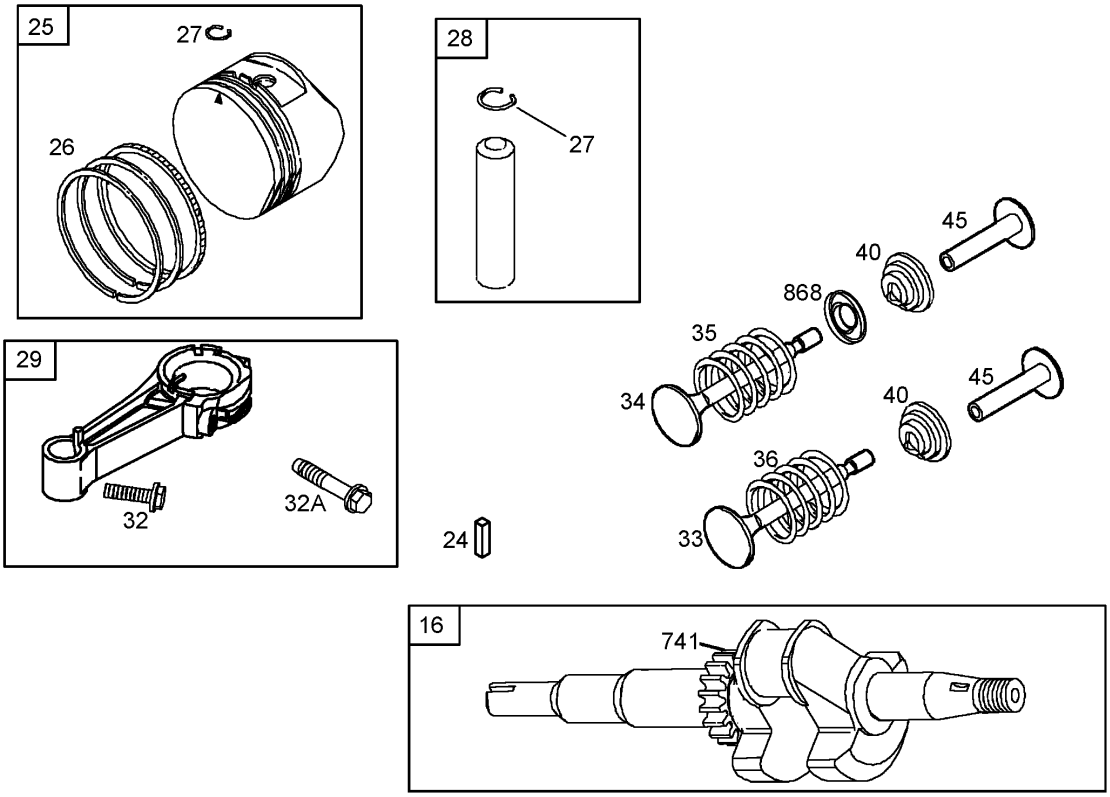


Crankshaft Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷16	694079	1	Crankshaft
❷24	222698	1	Key
❷25	791096	1	Piston ASM
❷25	691325	1	Spline–Starter
❷26	791098	1	Ring Set
❷26	691324	1	Cover-Cleaner, Air
❷27	691866	1	Lock–Pin, Piston
❷28	499423	1	Pin-Piston (STD)
❷28	298908	1	Pin-Piston (.005In Undersize)
❷29	499424	1	Rod-Connecting
❷32	691664	1	Screw
❷32A	695759	1	Screw
❷33	262651	1	Valve–Exhaust
❷34	262652	1	Valve–Intake
❷35	691270	1	Spring–Valve
❷36	691270	1	Spring–Valve
❷40	692194	1	Retainer–Valve
❷45	690548	1	Tappet–Valve
❷741	790345	1	Gear–Timing
❷868	697338	1	Seal–Valve

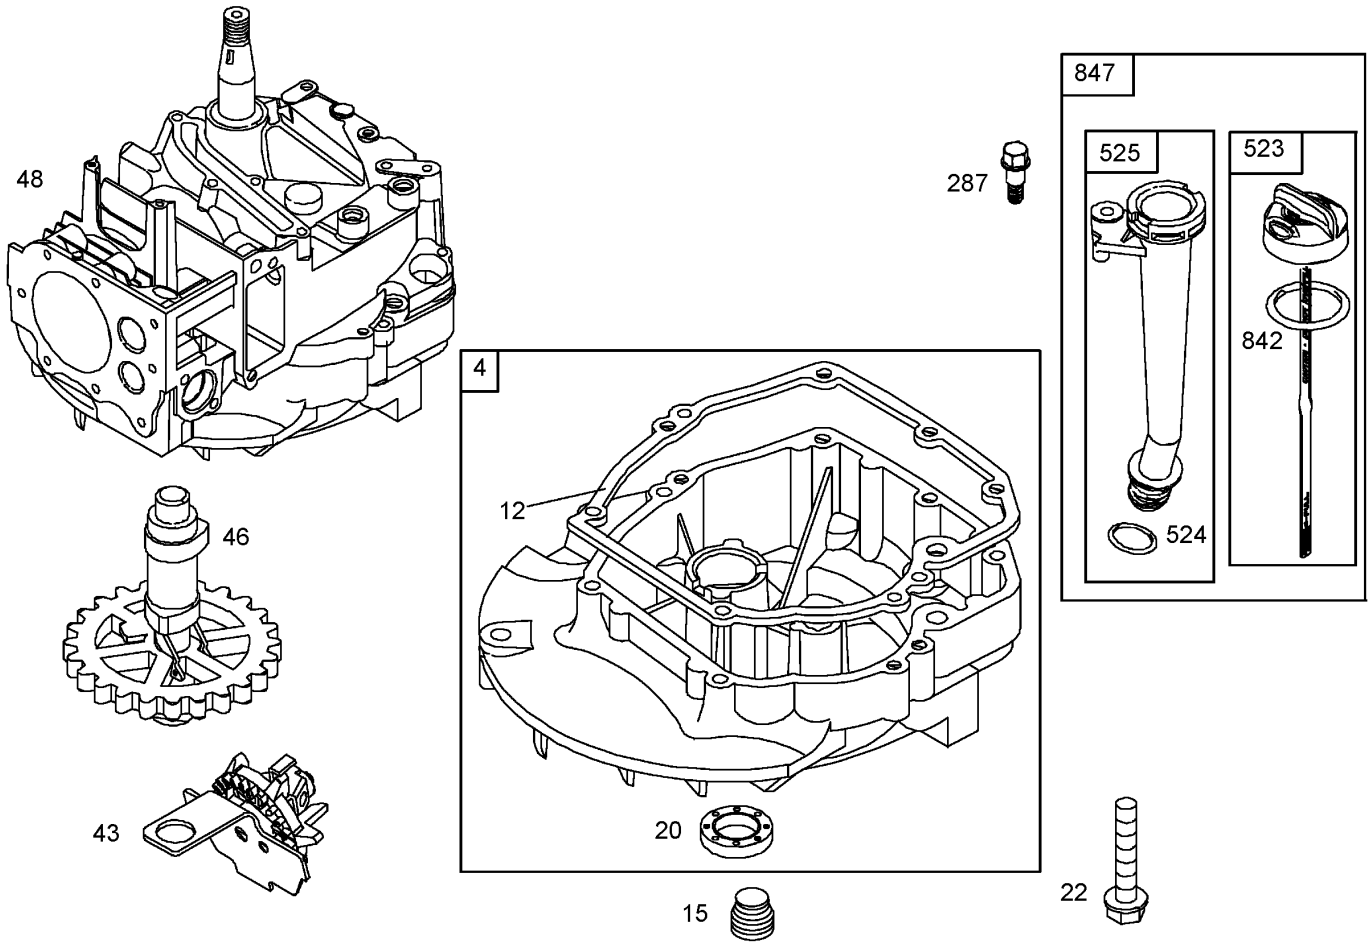


Crankcase Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷4	493279	1	Sump–Engine
❷❹12	692232	1	Gasket–Crankcase
❷15	691680	1	Plug–Drain, Oil
❷❹20	399781	1	Seal–Oil
❷22	691092	1	Screw (Engine Sump)
❷43	691997	1	Slinger–Governor/Oil
❷46	691449	1	Camshaft
❷48	694810	1	Short Block
❷287	690940	1	Screw
❷523	499621	1	Dipstick
❷❹524	692296	1	Seal-O Ring
❷525	495265	1	Tube-Dipstick
❷❹842	691031	1	Seal-O Ring
❷847	692047	1	Dipstick/Tube ASM

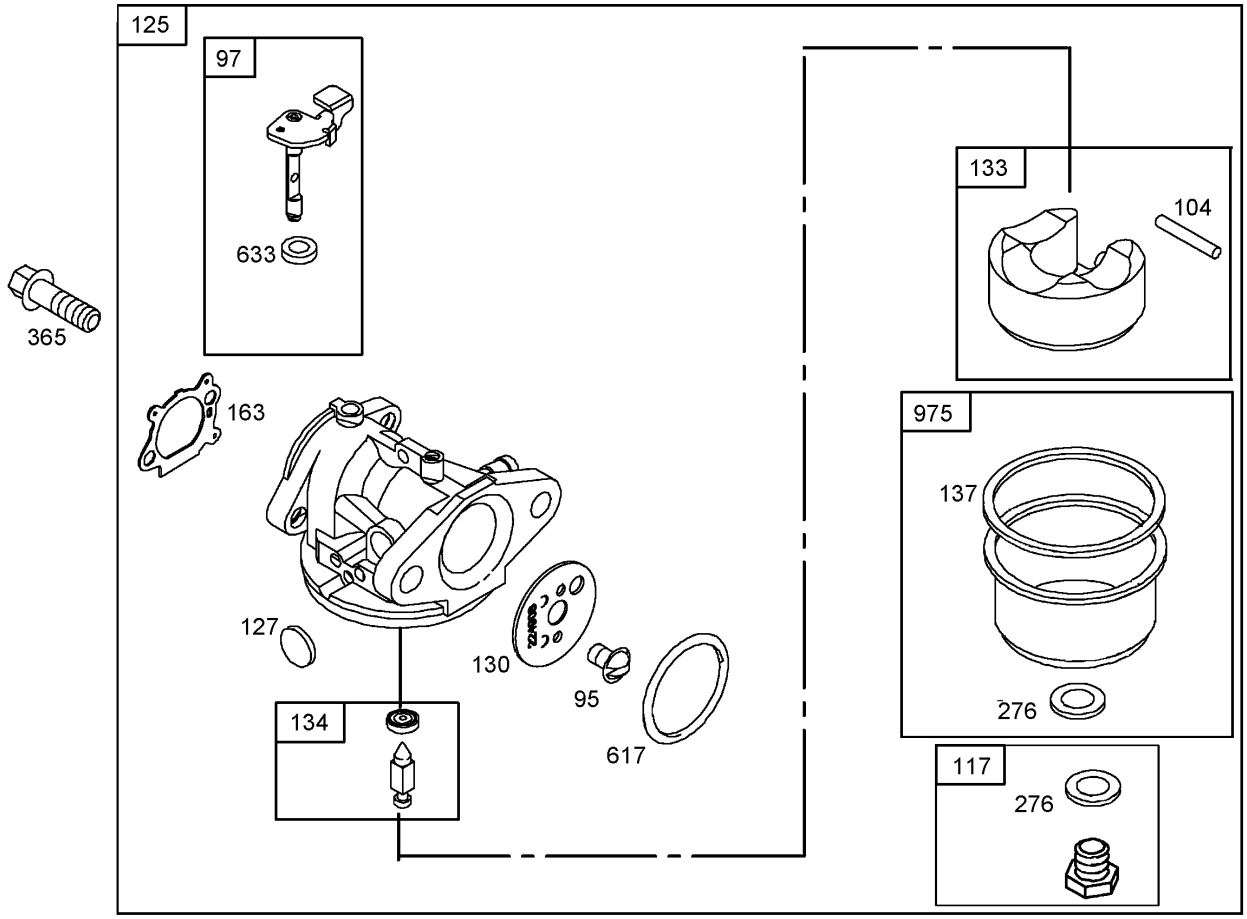


Carburetor Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷95	691636	1	Screw
❷97	493267	1	Shaft And Lever
❷❸104	691242	1	Pin–Hinge, Float
❷117	497466	1	Main Jet (High Altitude)
❷125	498254	1	Carburetor
❷❸127	694468	1	Plug–Welch
❷130	691203	1	Valve–Throttle
❷133	398187	1	Float–Carburetor
❷❸134	398188	1	Needle/Seat Kit
❷❸137 ❺	693981	1	Gasket–Bowl, Float
❷❸163 ❺	272653	1	Gasket–Cleaner, Air
❷❸276 ❺	271716	1	Washer–Sealing
❷365	692524	1	Screw
❷❸617 ❺	270344	1	Seal–O Ring
❷❸633 ❺	691321	1	Seal-Shaft, Choke/Throttle
❷975	493640	1	Bowl–Float

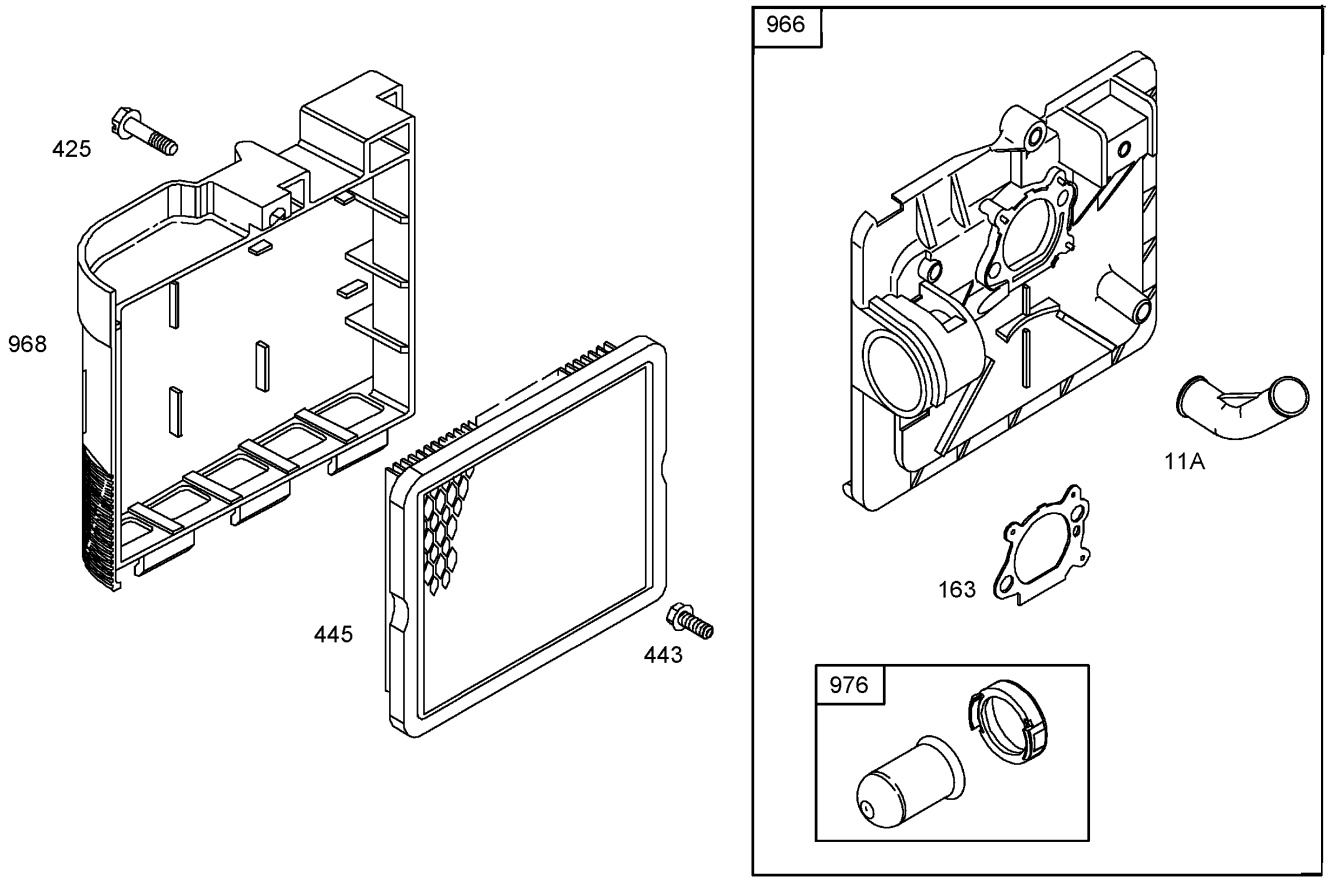


Air Cleaner Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷11A	6919	1	Bolt-Hex, Hollow (3/8-16 X 3/4)
❷❸163 ❺	272653	1	Gasket–Cleaner, Air
❷425	693318	1	Screw
❷443	690349	1	Screw (Air Cleaner Primer Base)
❷445	491588	1	Filter–Cartridge, Air Cleaner
❷966	691439	1	Base–Primer, Air Cleaner
❷968	791457	1	Cover–Cleaner, Air
❷976	694395	1	Primer–Carburetor

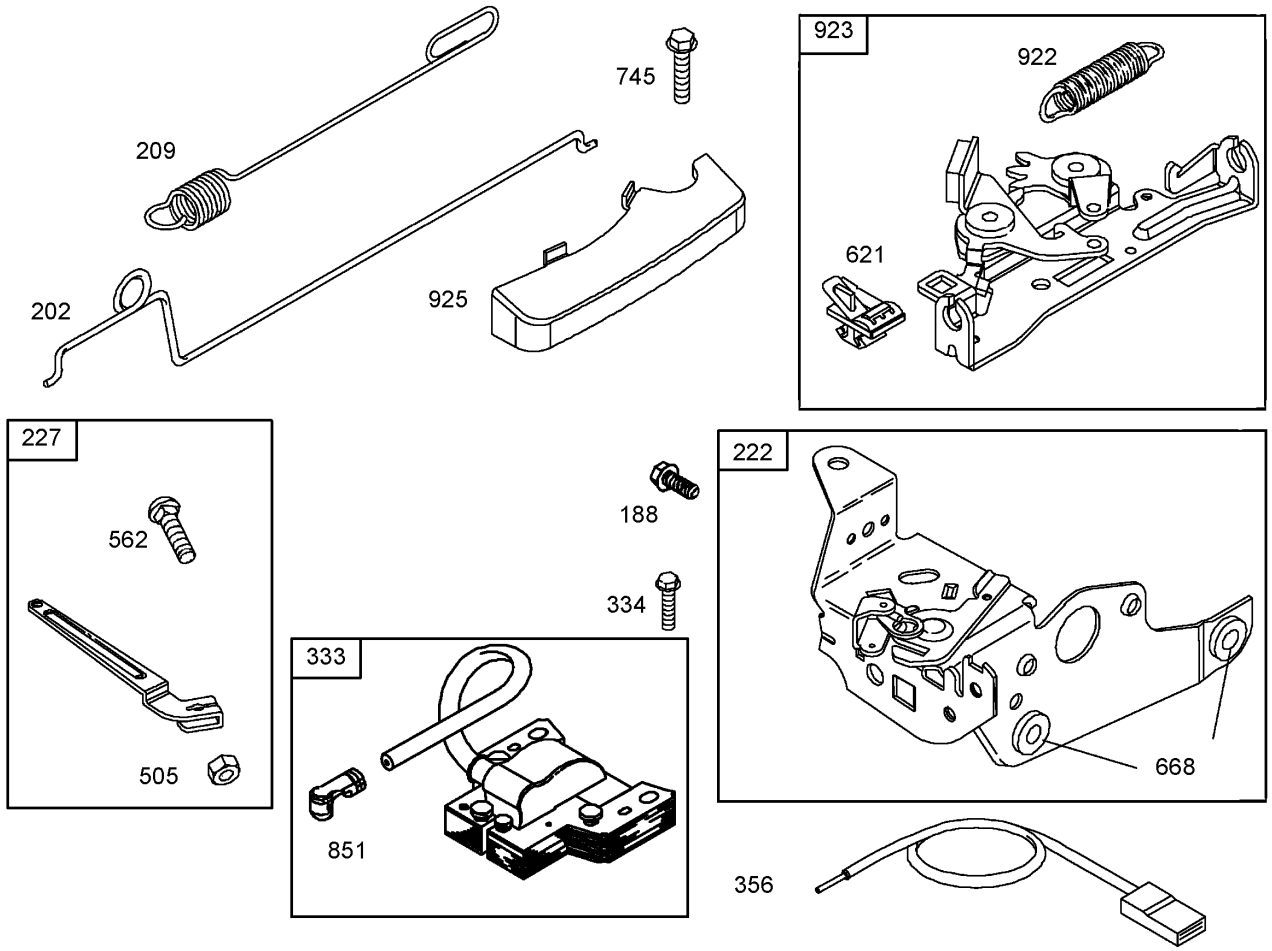


Governor Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷188	690877	1	Screw (Control Bracket)
❷202	691829	1	Link–Governor, Mechanical
❷209	691292	1	Spring–Governor
❷222	698163	1	Bracket–Control
❷227	690783	1	Lever–Control, Governor
❷333	802574	1	Armature–Magneto
❷334	691061	1	Screw
❷356	692390	1	Wire-Stop
❷505	691251	1	Nut
❷562	691119	1	Screw
❷621	692310	1	Switch-Stop
❷❹668	493823	1	Spacer
❷745	691648	1	Screw (Brake)
❷851	493880	1	Terminal-Spark Plug
❷922	691831	1	Spring–Brake
❷923	691994	1	Brake ASM
❷925	690595	1	Cover–Linkage

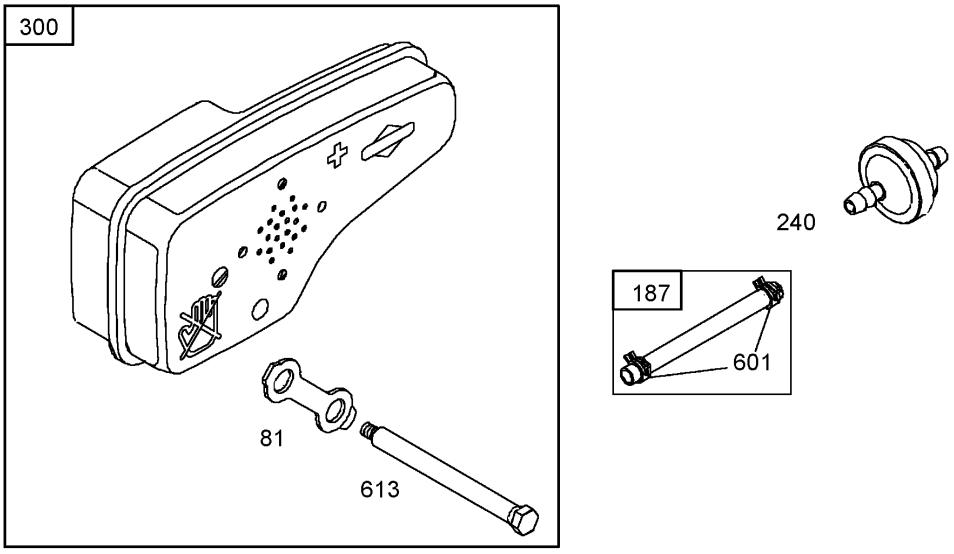


Muffler and Fuel Tank Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷81	691740	1	Lock–Screw, Muffler
❷187	691050	1	Line-Fuel (Cut To Required Length)
❷240	298090	1	Filter
❷300	692038	1	Muffler
❷601	95162	1	Clamp-Hose
❷613	691340	1	Screw

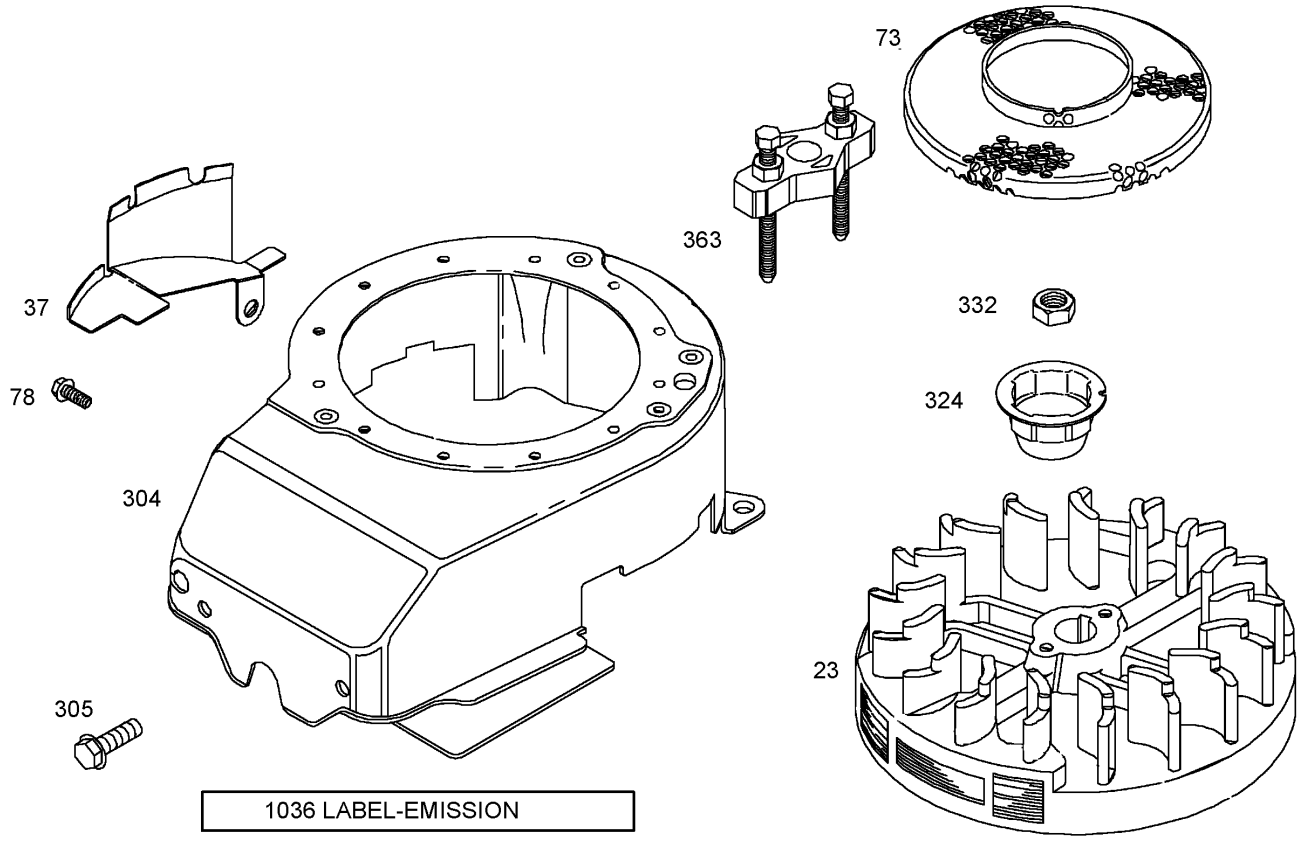


Blower Housing Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷23	692315	1	Flywheel
❷37	694086	1	Guard–Flywheel
❷73	691222	1	Screen–Rotating
❷78	691108	1	Screw (Flywheel Guard)
❷304	493293	1	Housing–Blower
❷305	691108	1	Screw
❷324	695161	1	Cup/Screen ASM
❷332	690662	1	Nut
❷363	19069	1	Puller–Flywheel
❷1036	790412	1	Label–Emission

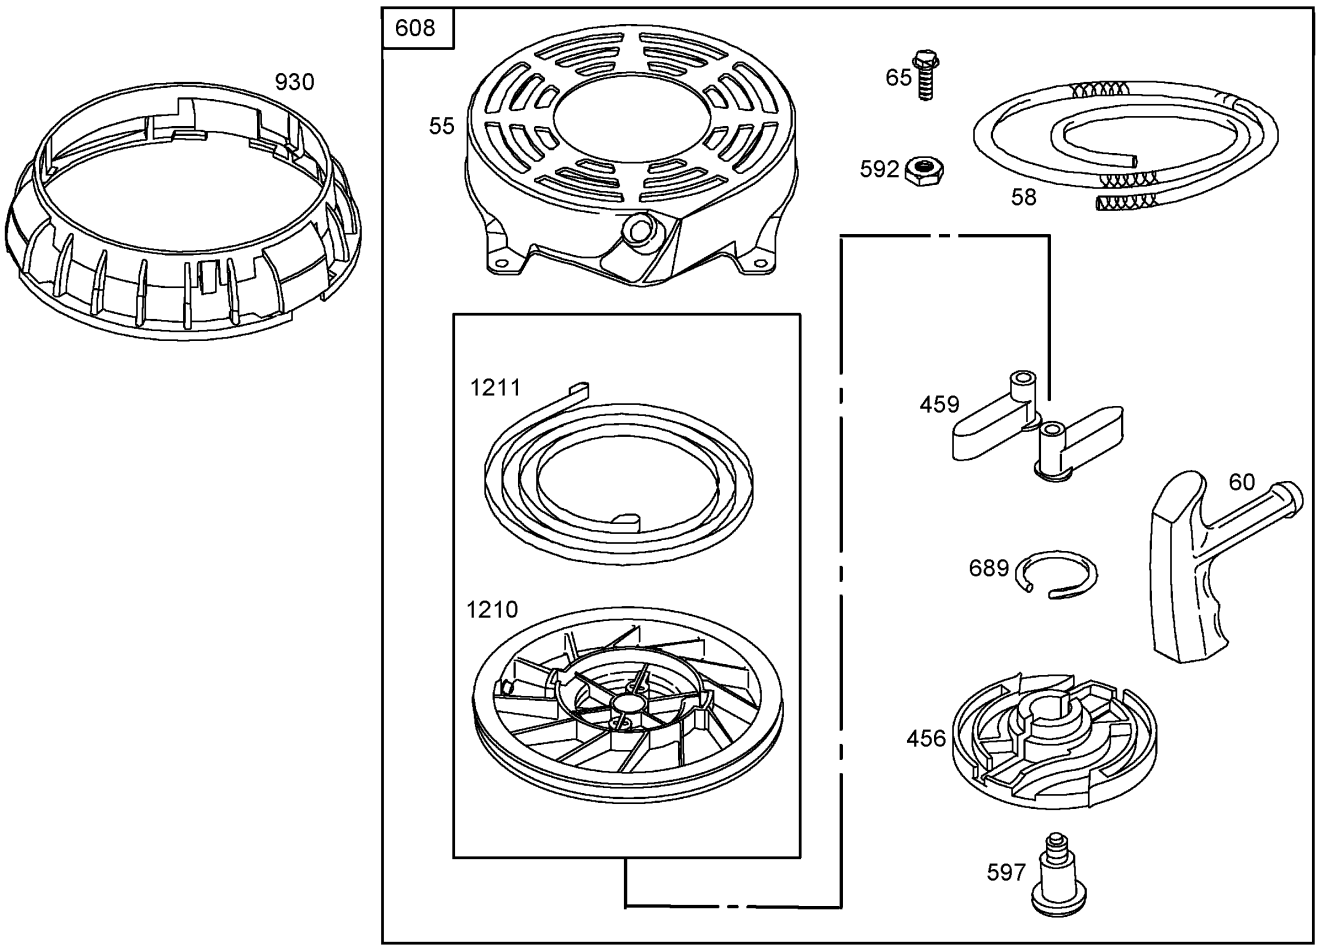


Starter Assembly
Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description
❷55	691421	1	Housing–Starter, Rewind
❷58	697316	1	Rope–Starter (Cut To Required Length)
❷60	281434	1	Grip–Rope, Starter
❷65	690837	1	Screw
❷456	692299	1	Plate–Friction, Pawl
❷459	281505	1	Ratchet–Pawl
❷592	690800	1	Nut
❷597	691696	1	Screw
❷608	497680	1	Starter–Rewind
❷689	691855	1	Spring–Friction
❷930	791454	1	Guard–Rewind
❷1210	498144	1	Pulley/Spring ASM (Pulley)
❷1211	498144	1	Pulley/Spring ASM (Spring)

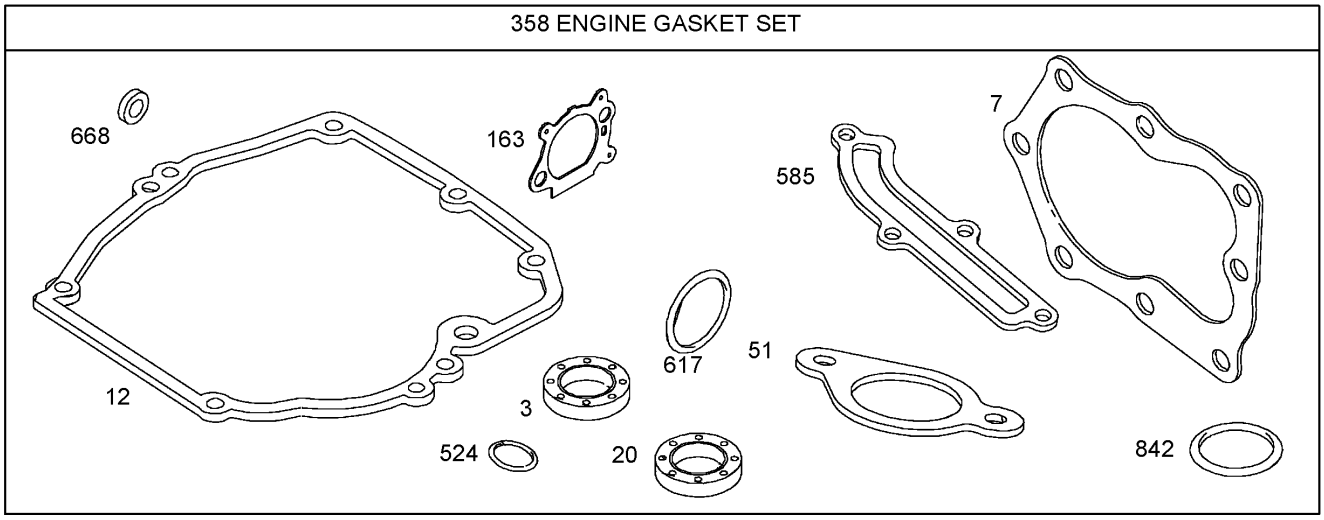

358 Engine Gasket Set Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷3	299819	1	Seal–Oil (Magneto Side)
❷7	692249	1	Gasket–Head, Cylinder
❷12	692232	1	Gasket–Crankcase (.015 Thick, STD)
❷20	399781	1	Seal–Oil (PTO Side)
❷51	272199	1	Gasket–Intake
❷❸163 ❺	272653	1	Gasket–Cleaner, Air
❷358	497316	1	Engine Gasket Set
❷524	692296	1	Seal-O Ring (Dipstick Tube)
❷585	691879	1	Gasket–Passage, Breather
❷❸617 ❺	270344	1	Seal–O Ring (Intake Manifold)
❷668	493823	1	Spacer
❷842	691031	1	Seal-O Ring (Dipstick)

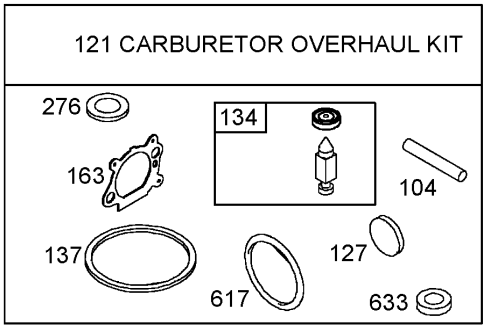

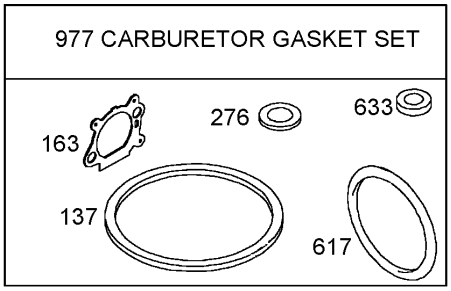

121 Carburetor Overhaul Kit and 977 Carburetor Gasket Set
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
❷104	691242	1	Pin–Hinge, Float
❷121	498260	1	Carburetor Overhaul Kit
❷127	694468	1	Plug–Welch
❷134	398188	1	Needle/Seat Kit
❷137	693981	1	Gasket–Bowl, Float
❷❹163	272653	1	Gasket–Cleaner, Air
❷276	271716	1	Washer–Sealing
❷❹617	270344	1	Seal–O Ring (Intake Manifold)
❷633	691321	1	Seal-Shaft, Choke/Throttle
❷977	498261	1	Carburetor Gasket Set

NOTES


LAWN·BOY®