Form Number 3354-879 Rev A

55cm Recycler® Lawnmower

Model No. 20656 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck, Side Chute and Rear Door Assembly	3
Front Axle Assembly	4
Rear Axle and Transmission Assembly	5
Transmission Assembly No. 106-3956	6
Engine and Blade Assembly	7
Handle Assembly	8
Electric Start Assembly	9
Rear Bag Assembly	10
Cylinder Assembly Briggs and Stratton 122K05-0171-E1	11
Carburetor Overhaul Kit Assembly Briggs and Stratton 122K05-0171-E1 Carburetor Overhaul Kit Assembly	12
Crankshaft Assembly Briggs and Stratton 122K05-0171-E1	13
Crankcase Assembly Briggs and Stratton 122K05-0171-E1	14
Carburetor Assembly Briggs and Stratton 122K05-0171-E1	15
Air Cleaner Assembly Briggs and Stratton 122K05-0171-E1	16
Governor Assembly Briggs and Stratton 122K05-0171-E1	17
Muffler and Fuel Tank Assembly Briggs and Stratton 122K05-0171-E1	18
Blower Housing Assembly Briggs and Stratton 122K05-0171-E1	19
Starter Assembly Briggs and Stratton 122K05-0171-E1	20
Starter Assembly Briggs and Stratton 122K05-0171-E1	21
Gasket Assembly Briggs and Stratton 122K05-0171-E1	22


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Included in Engine Gasket Set-Ref. 358.
❹ Included in Carburetor Overhaul Kit-Ref. 121.
❺ Included in Carburetor Gasket Set-Ref. 977.
❻ Obtain from your local Briggs & Stratton dealer

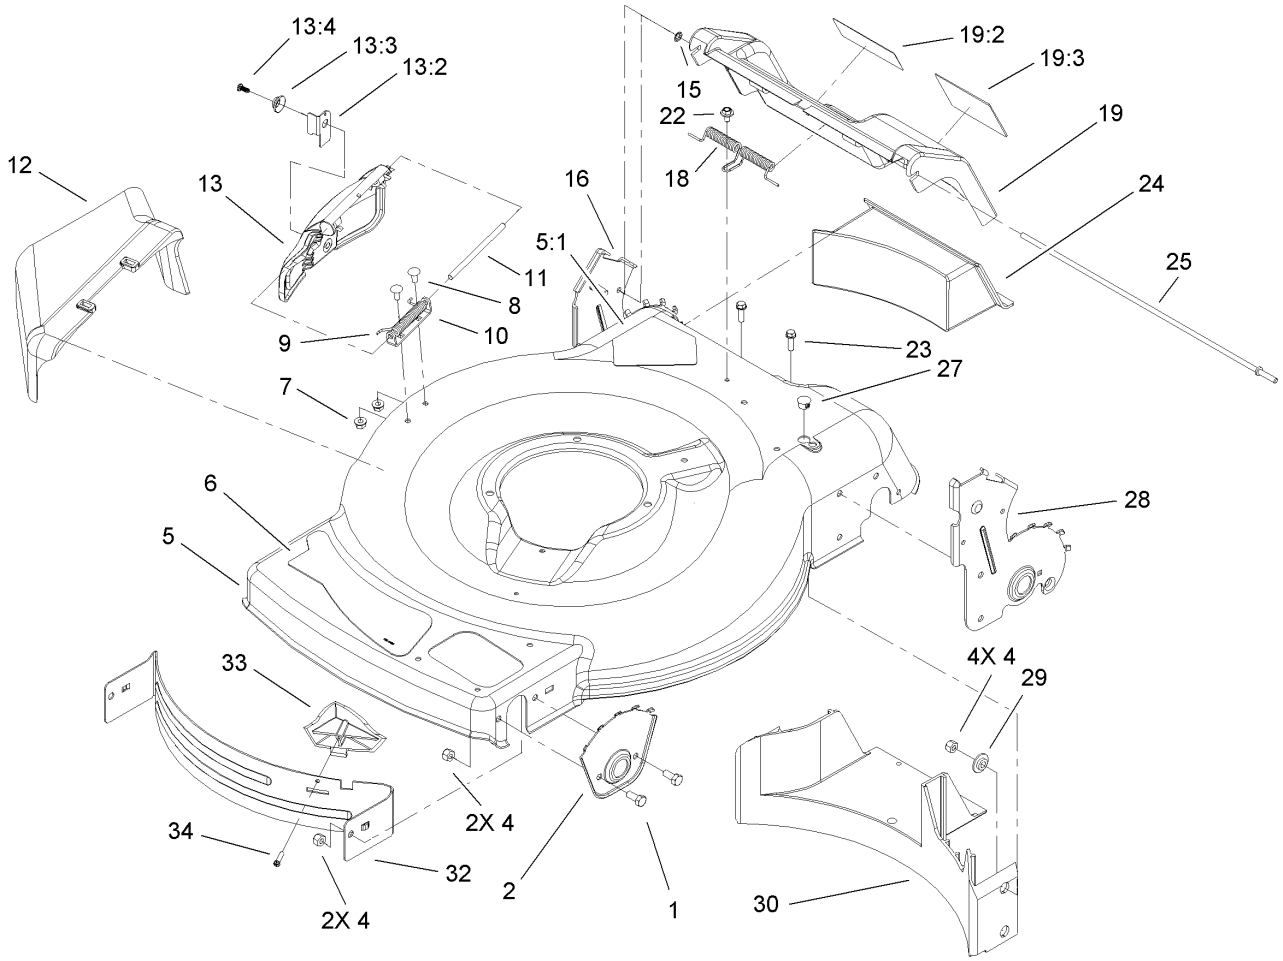

Deck, Side Chute and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-HOC, Front
4	3296-29	8	Nut-Lock, NI
5	104-7916	1	Housing
5:1	94-8072	1	Decal-Danger
6	105-1297	1	Decal-Deck
7	32128-32	2	Nut-HHF
8	3229-11	2	Screw-CARR
9	99-5293	1	Spring-Torsion
10	99-5292	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Discharge, Side
13	106-8376	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Nut-Push
16	107-0790	1	RH Rear HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	105-1324	1	Rear Door ASM
19:2	104-7909	1	Decal-Warning
19:3	104-7908	1	Decal-Warning
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH

Ref	Part No.	Qty.	Description
24	105-1842	1	Plug-Discharge, Rear
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	107-0783	1	LH Rear HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-1834	1	Baffle-Rear
32	107-0793-03	1	Baffle-Front
33	107-0752	1	Kicker-Front
34	32144-111	1	Screw-PPH

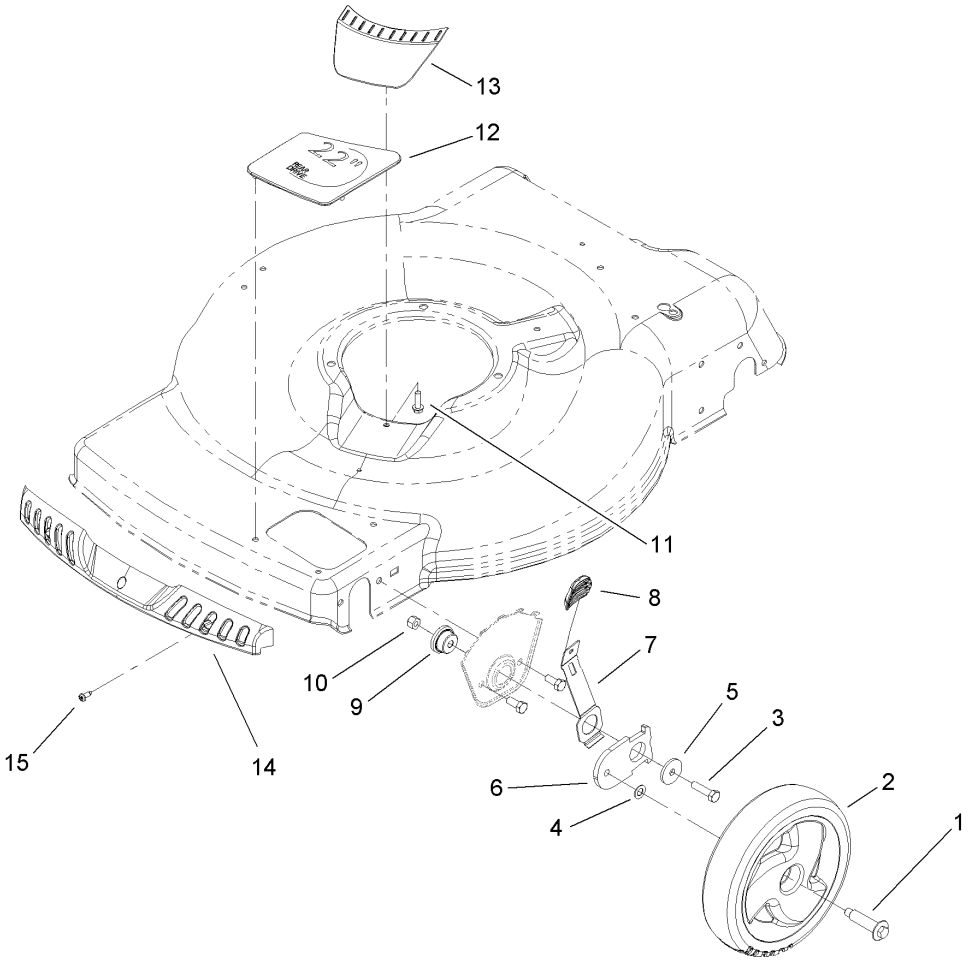

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-1814	2	Wheel ASM
3	322-6	2	Screw-HH
4	110-7466	2	Washer-Wheel Bolt
5	105-3048	2	Washer-Flat
6	105-1807	2	Arm-Pivot, Front
7	105-1809	2	Arm-Spring
8	105-3042	2	Knob-Lever, HOC
9	105-1818	2	Bushing-Mount, HOC
10	3296-29	2	Nut-Lock, NI
11	46-8091	1	Screw-HWH
12	104-9398	1	Cover-Cutout, Hp
13	105-3005	1	Cover-Belt Opening
14	104-9359	1	Bumper-Mower
15	105-6849	3	Screw-Thread Forming

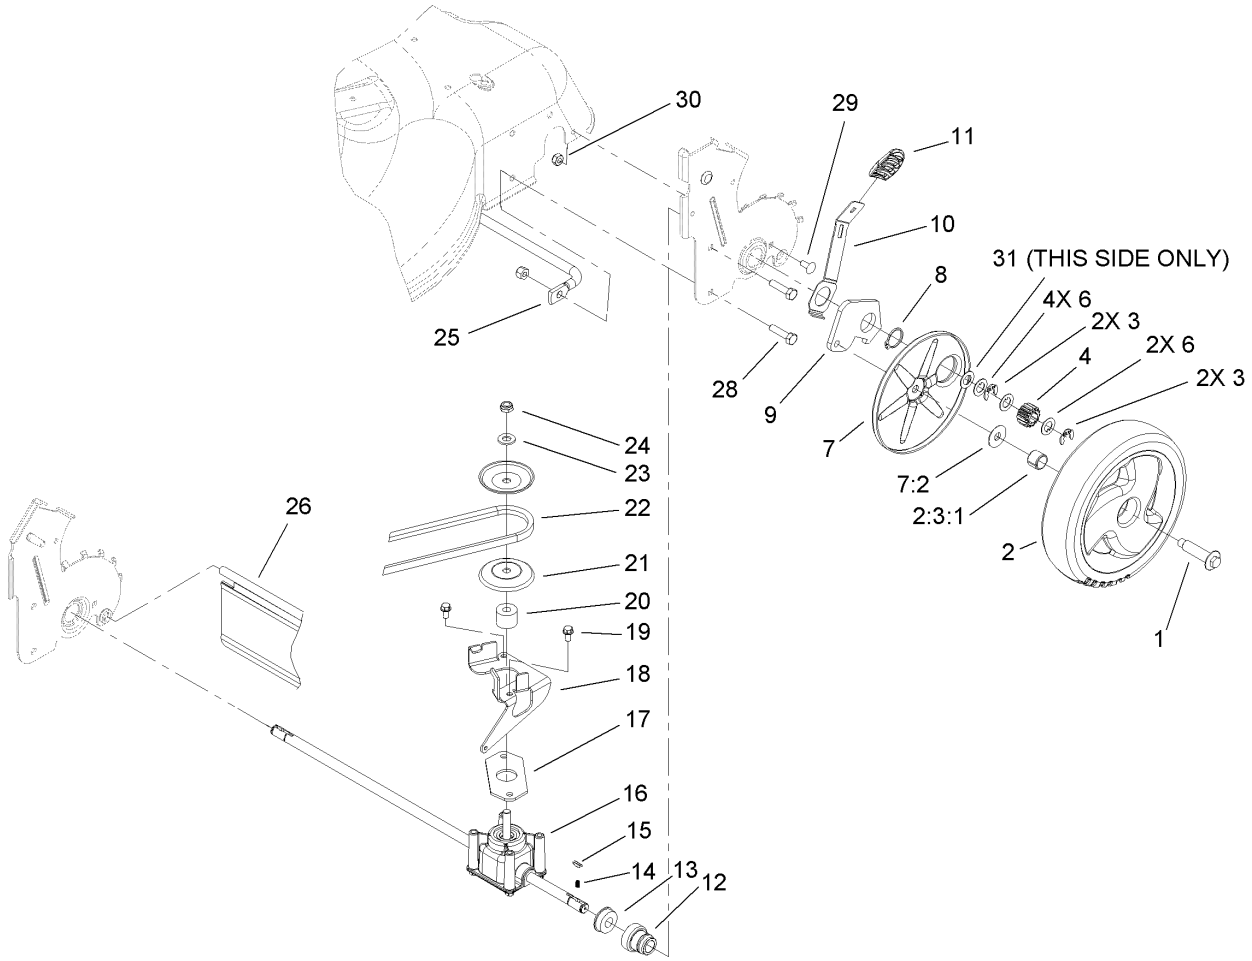

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-3036	2	Wheel Gear ASM
❶❷2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7	108-3794	2	Cover-Wheel
❶❷7:1		1	Cover
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	105-1819	2	Arm-Pivot, Rear
10	105-1809	2	Arm-Spring
11	105-3042	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	106-3956	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	106-6809-03	1	Bracket-Pivot
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half

Ref	Part No.	Qty.	Description
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat
24	3296-5	1	Nut-Lock
25	105-1811	1	Brace-Plate, HOC
26	105-1843	1	Shield-Trailing
28	322-6	4	Screw-HH
29	3229-11	2	Screw-CARR
30	3296-16	2	Nut-Lock, NI
31	36-4780	1	Washer

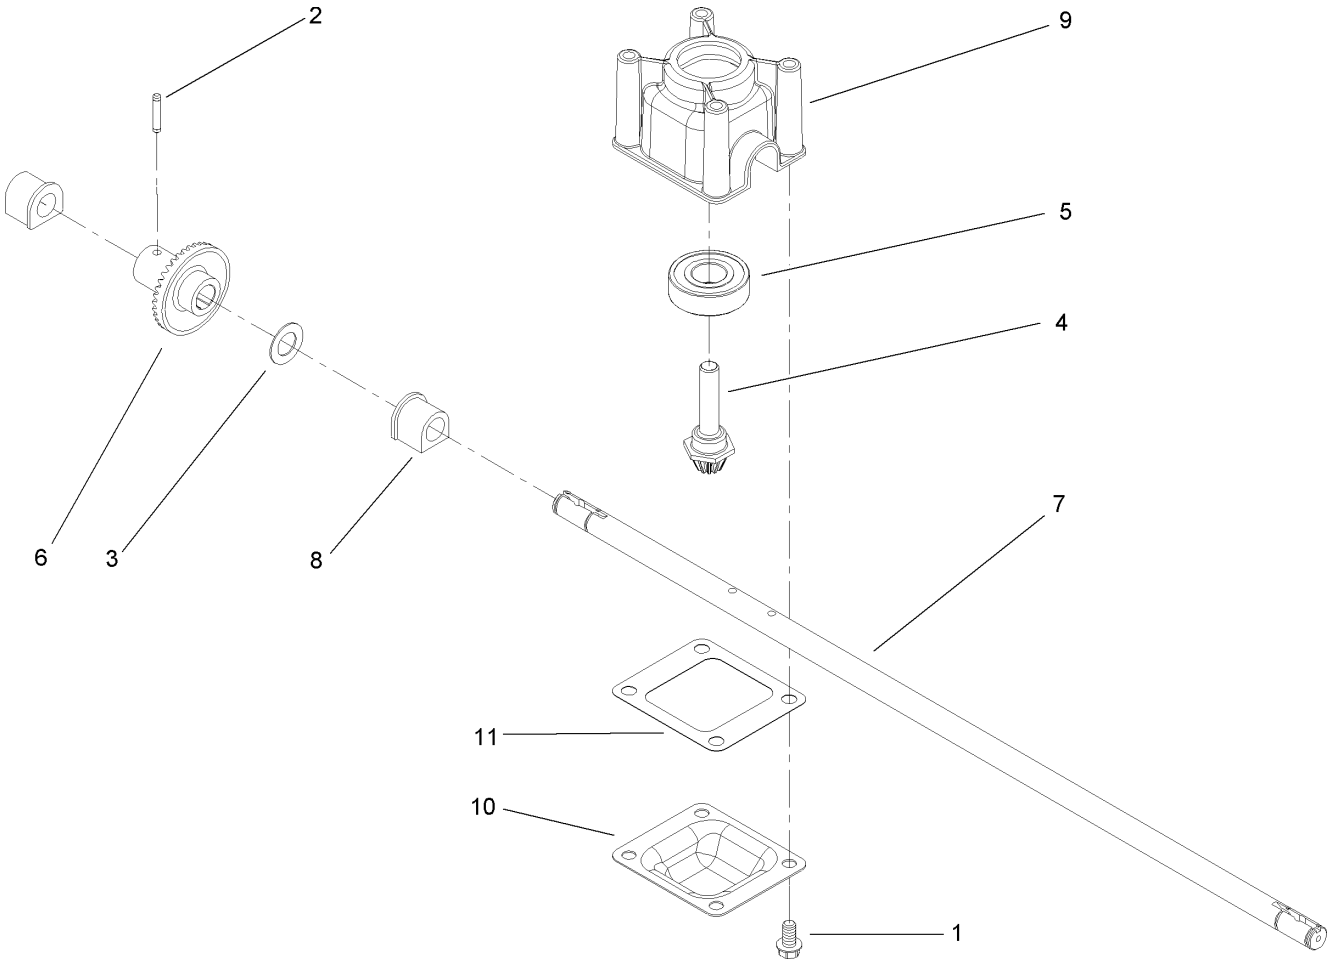


Transmission Assembly No. 106-3956

Ref	Part No.	Qty.	Description
1	32144-4	4	Screw-HWH
2	3285-19	1	Pin-Groove
3	36-4780	1	Washer
4	92-5790	1	Pinion
5	100-1048	1	Bearing-Ball
6	104-8671	1	Gear-Bevel, 37T
7	106-3957	1	Shaft-Output
8	104-8673	2	Bushing-Shaft, Output
9	104-8674	1	Gearcase-Upper
10	104-8675-03	1	Cover-Gearcase
11	105-6839	1	Gasket-Gearcase

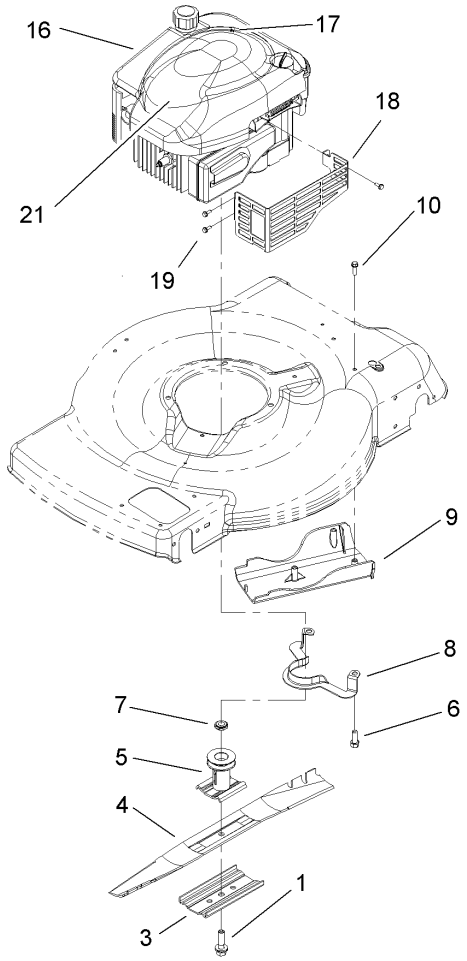


Engine and Blade Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
3	105-6848-03	1	Accelerator-Blade
4	104-8697-03	1	Blade-22 Inch
5	106-3987	1	Blade Driver ASM
6	95-1726	3	Screw-Taptite
7	106-3999	1	Spacer-Driver
8	105-3030-03	1	Guide-Belt
9	105-1835	1	Cover-Belt, Rear
10	46-8091	3	Screw-HWH
❷❻16		1	Engine-Briggs And Stratton, 122K05-0171-E1
17	2210-316	1	Stop-Rope
18	104-7577-03	1	Shield-Muffler
19	32144-1	3	Screw-Taptite
21	107-3748	1	Decal-Recoil

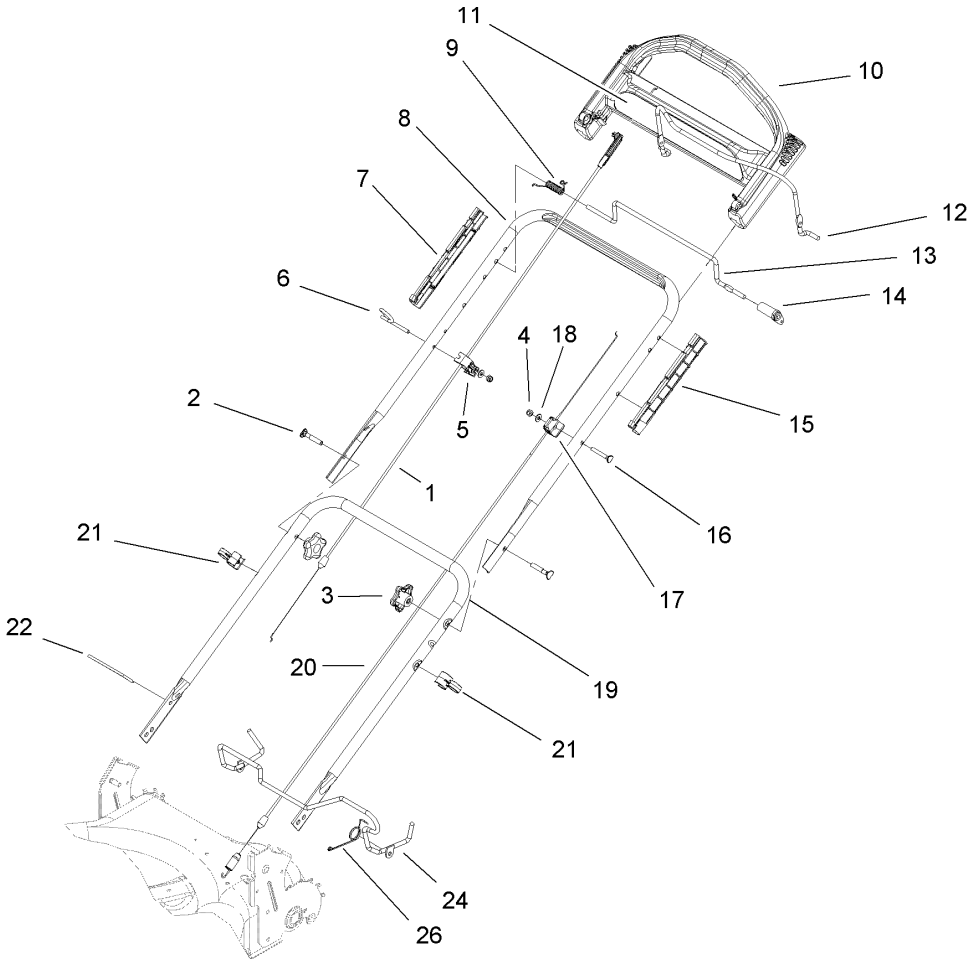


Handle Assembly

Ref	Part No.	Qty.	Description
1	104-8676	1	Cable-Brake
2	92-2260	2	Screw-Handle
3	106-4161	2	Knob-Handle
4	3296-73	2	Nut-Lock, NI
5	106-8331	1	Anchor-Cable
6	106-8330	1	Guide-Rope
7	105-6841	2	Guide-RH
8	104-8680-05	1	Handle-Upper
9	104-8690	1	Spring-Torsion
10	104-8678	1	Handle-Control
11	107-3762	1	Decal-Handle
12	104-8679-03	1	Bail-Brake
13	99-1588	1	Bar-Control, Traction
14	99-1589	1	Lever-Traction
15	105-6842	2	Guide-LH
16	321-50	1	Screw-HH
17	92-7729	1	Anchor-Cable, Upper
18	3256-1	2	Washer-Flat
19	107-0784-05	1	Handle-Lower
20	105-1844	1	Cable-Traction
21	106-6805	2	Guide-Cable
22	614249	1	Strap-Tie
24	107-0768	1	Release Lever ASM
26	107-7472	1	Spring-Torsion

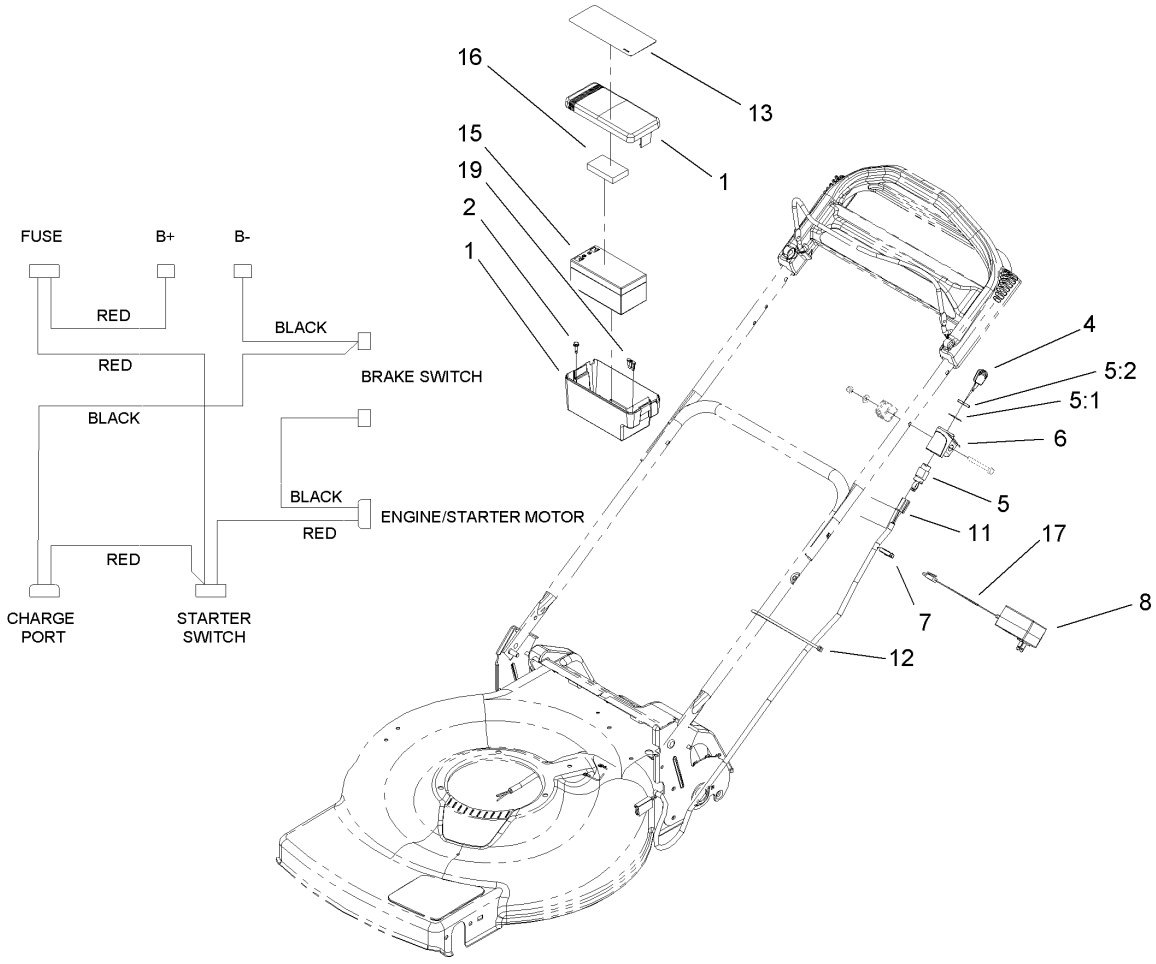


Electric Start Assembly

Ref	Part No.	Qty.	Description
1	108-4844	1	Battery Box ASM
2	105-6849	2	Screw-Thread Forming
4	700918	1	Key
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	108-9760	1	Mount-Switch
7	106-8378	1	Harness-Wire
8	98-2391	1	Charger-European, 12V Dc
11	104-7953	1	Decal-Harness
12	614249	2	Strap-Tie
13	108-4791	1	Decal-Instructional
15	106-8397	1	Battery-12 Volt
16	107-3774	1	Foam-Battery, Top
17	107-3749	1	Adapter-Charger
19	99-6124	2	Fuse-40 Amp

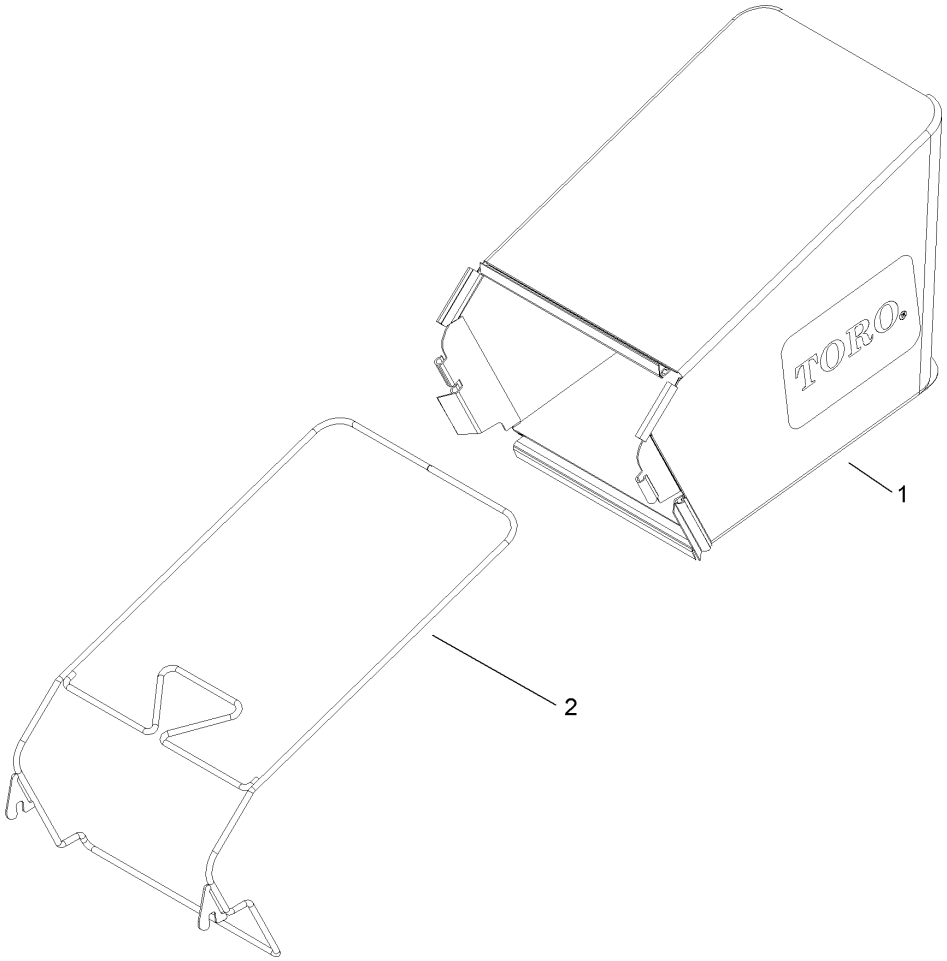

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	107-3779	1	Grass Bag ASM
2	107-3785-03	1	Bag Frame ASM

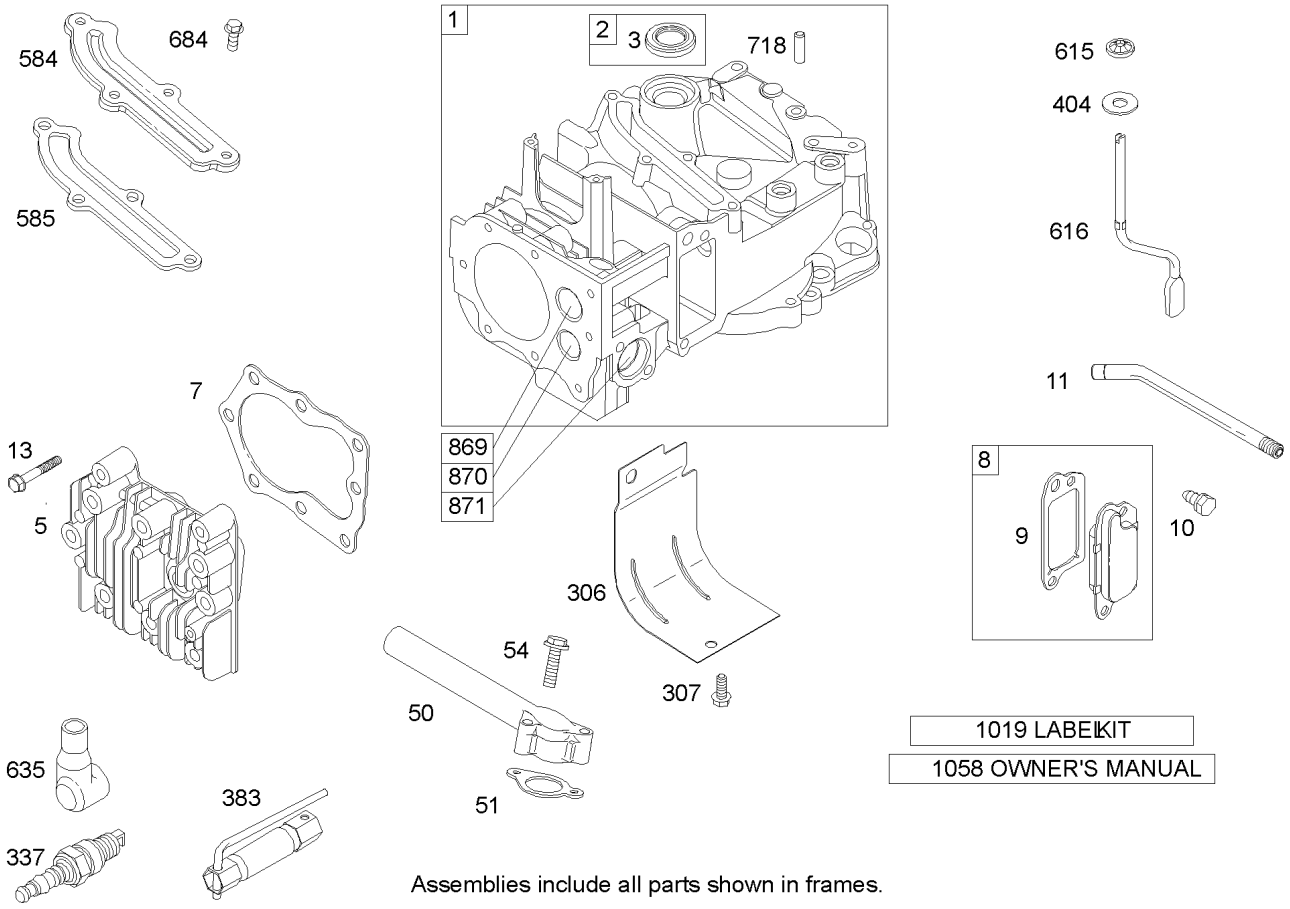


Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 122K05-0171-E1

Ref	Part No.	Qty.	Description
❻1	697322	1	Cylinder ASM
❻2	399269	1	Bushing/Seal Kit
❸❻3	299819	1	Seal–Oil
❻5	691160	1	Head–Cylinder
❸❻7	692249	1	Gasket–Head, Cylinder
❻8	695250	1	Breather ASM
❻9	699472	1	Gasket–Breather
❻10	691125	1	Screw
❻11	691781	1	Tube–Breather
❻13	690912	1	Screw
❻50	497465	1	Manifold–Intake
❸❻51	272199	1	Gasket–Intake
❻54	691650	1	Screw
❻306	690450	1	Shield-Cylinder
❻307	690345	1	Screw
❻337	802592	1	Plug–Spark
❻383	89838	1	Wrench-Plug, Spark
❻404	690272	1	Washer
❻584	697734	1	Cover–Passage, Breather
❸❻585	691879	1	Gasket–Passage, Breather
❻615	690340	1	Retainer–Shaft, Governor
❻616	698801	1	Crank–Governor
❻635	66538	1	Boot–Plug, Spark
❻684	690345	1	Screw


Ref	Part No.	Qty.	Description
❻718	690959	1	Pin-Locating
❻869	691155	1	Seat–Valve (Intake)
❻870	690380	1	Seat–Valve (Exhaust)
❻871	262001	1	Bushing–Guide (Exhaust)
❻871	63709	1	Bushing–Guide (Intake)
❻1019	494256	1	Label Kit
❻1058	275177	1	Manual-Owner's

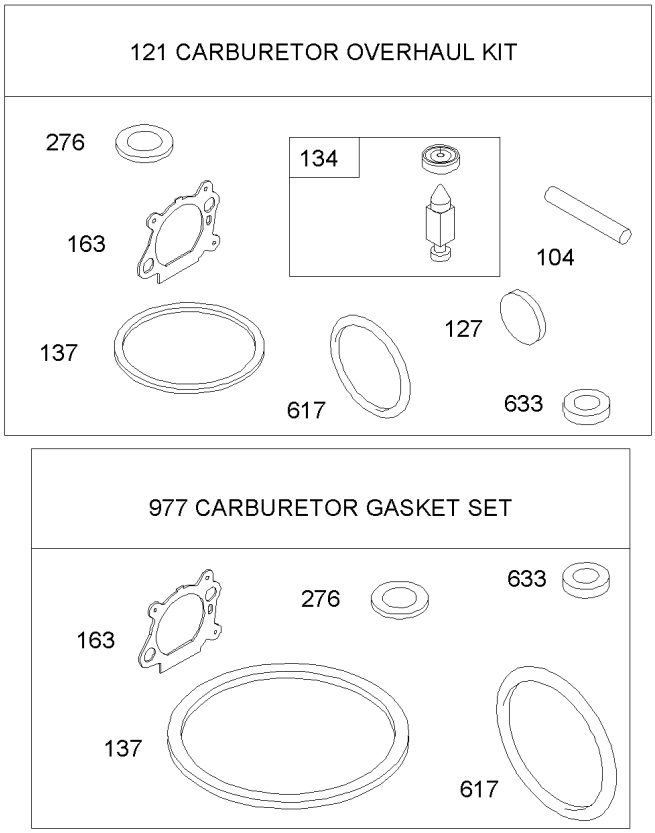

Assemblies include all parts shown in frames.


Carburetor Overhaul Kit Assembly
Briggs and Stratton 122K05-0171-E1

Ref	Part No.	Qty.	Description
❹❻104	691242	1	Pin–Hinge, Float
❹❻121	498260	1	Carburetor Overhaul Kit
❹❻127	694468	1	Plug–Welch
❹❻134	398188	1	Needle/Seat Kit
❹❺137 ❻	693981	1	Gasket–Bowl, Float
❸❹163 ❺❻	272653	1	Gasket–Cleaner, Air
❹❺276 ❻	271716	1	Washer–Sealing
❸❹617 ❻	270344	1	Seal–O Ring
❹❺633 ❻	691321	1	Seal-Shaft, Choke/Throttle
❻977	498261	1	Carburetor Gasket Set

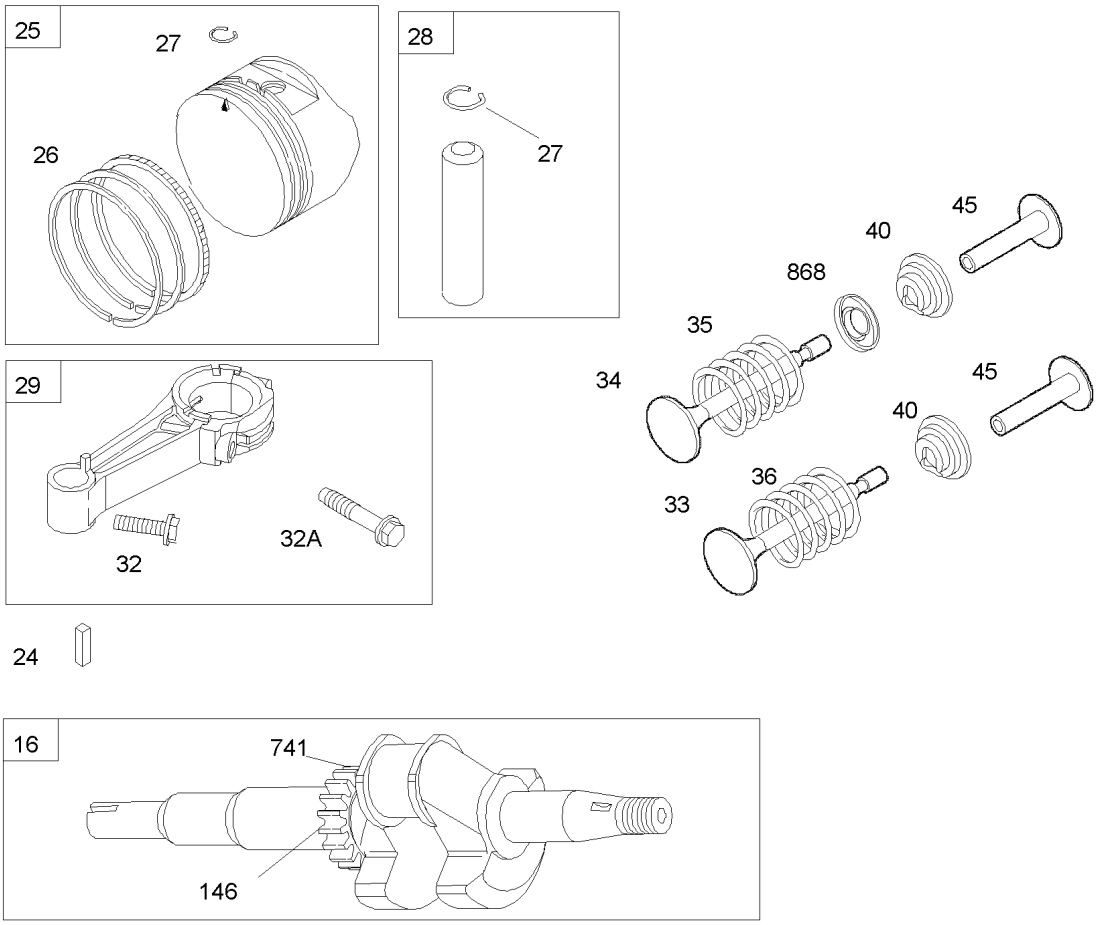

Crankshaft Assembly
Briggs and Stratton 122K05-0171-E1


Ref	Part No.	Qty.	Description
❻16	696009	1	Crankshaft
❻24	222698	1	Key
❻25	697339	1	Piston ASM (Standard)
❻25	697341	1	Piston ASM (.020In Oversize)
❻26	499425	1	Ring Set (Standard)
❻26	499427	1	Ring Set (.020In Oversize)
❻27	691866	1	Lock–Pin, Piston
❻28	499423	1	Pin-Piston (STD)
❻	298908	1	Pin-Piston (.005In Undersize)
❻29	499424	1	Rod-Connecting
❻32	691664	1	Screw
❻32A	695759	1	Screw
❻33	262651	1	Valve–Exhaust
❻34	262652	1	Valve–Intake
❻35	691270	1	Spring–Valve
❻36	691270	1	Spring–Valve
❻40	692194	1	Retainer–Valve
❻45	690548	1	Tappet–Valve
❻146	690979	1	Key-Timing
❻741	691830	1	Gear–Timing
❻868	697338	1	Seal–Valve

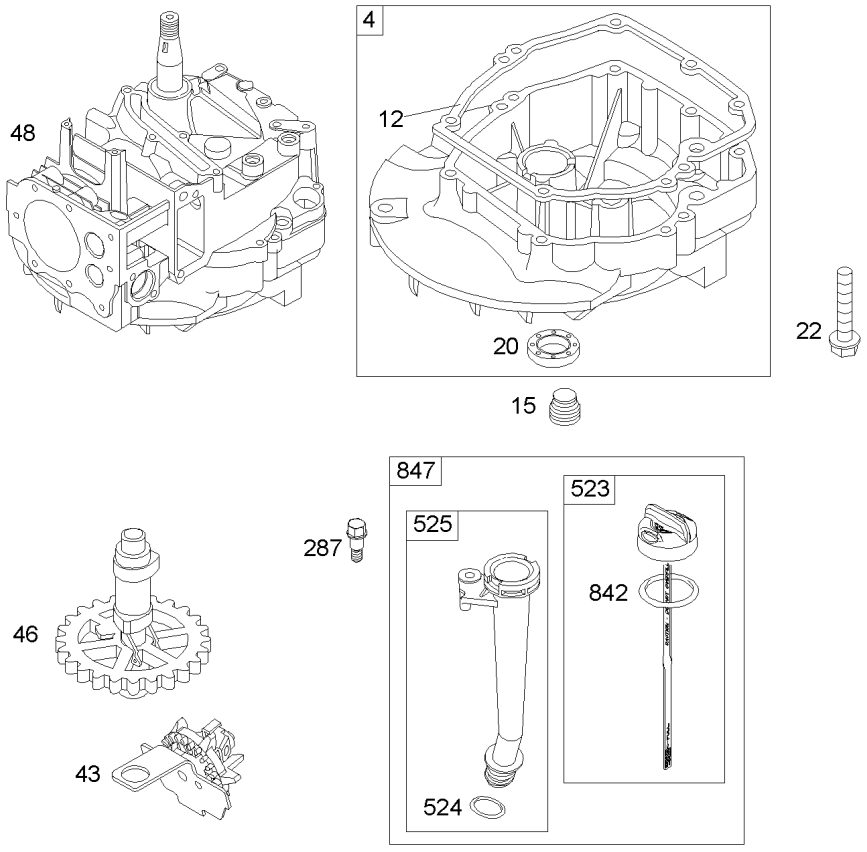

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 122K05-0171-E1


Ref	Part No.	Qty.	Description
❻4	493279	1	Sump–Engine
❸❻12	692232	1	Gasket–Crankcase
❻15	691680	1	Plug–Drain, Oil
❸❻20	399781	1	Seal–Oil
❻22	691092	1	Screw
❻43	691997	1	Slinger–Governor/Oil
❻46	691449	1	Camshaft
❻48	696276	1	Short Block
❻287	690940	1	Screw
❻523	499621	1	Dipstick
❸❻524	692296	1	Seal-O Ring
❻525	495265	1	Tube-Dipstick
❸❻842	691031	1	Seal-O Ring
❻847	692047	1	Dipstick/Tube ASM

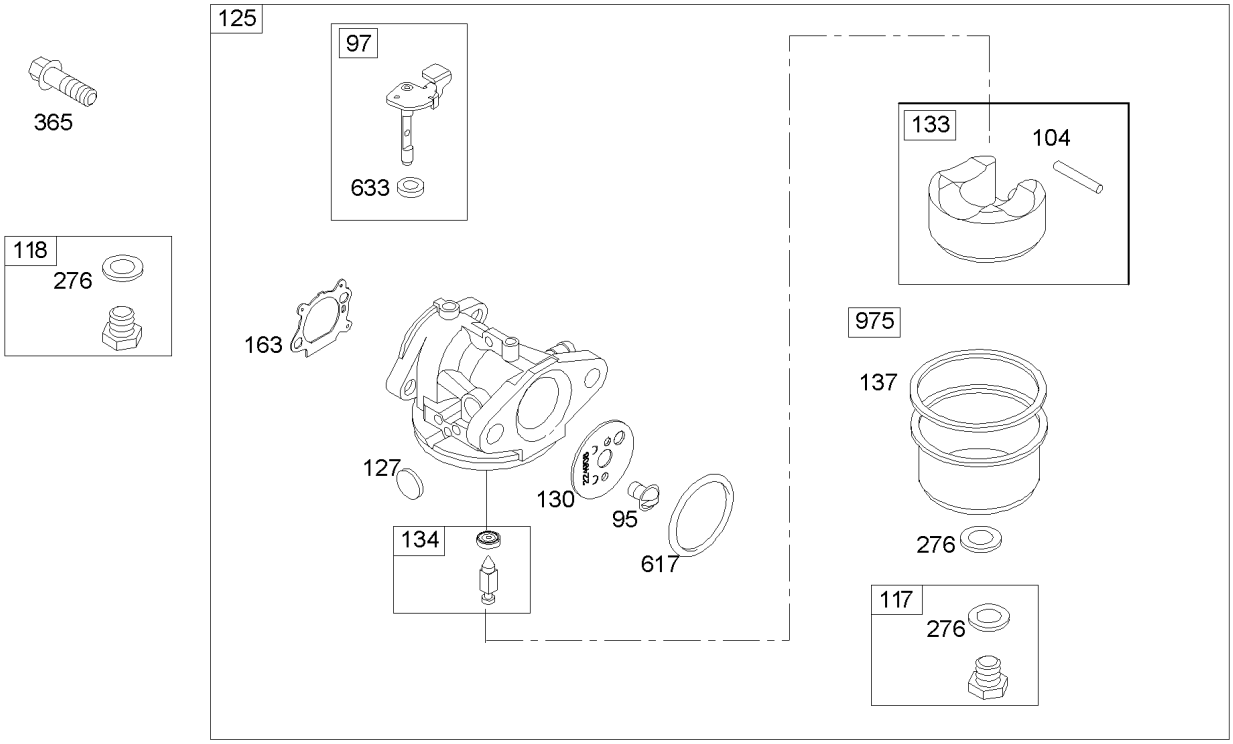

Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 122K05-0171-E1


Ref	Part No.	Qty.	Description
❻95	691636	1	Screw
❻97	696565	1	Shaft–Throttle
❹❻104	691242	1	Pin–Hinge, Float
❻117	498978	1	Jet–Main (Standard)
❻118	494870	1	Jet–Main (High Altitude)
❻125	498170	1	Carburetor
❹❻127	694468	1	Plug–Welch
❻130	696564	1	Valve–Throttle
❻133	398187	1	Float–Carburetor
❹❻134	398188	1	Needle/Seat Kit
❹❺137 ❻	693981	1	Gasket–Bowl, Float
❸❹163 ❺❻	272653	1	Gasket–Cleaner, Air
❹❺276 ❻	271716	1	Washer–Sealing
❻365	692524	1	Screw
❹❺617 ❻	270344	1	Seal–O Ring
❹❺633 ❻	691321	1	Seal-Shaft, Choke/Throttle
❻975	493640	1	Bowl–Float

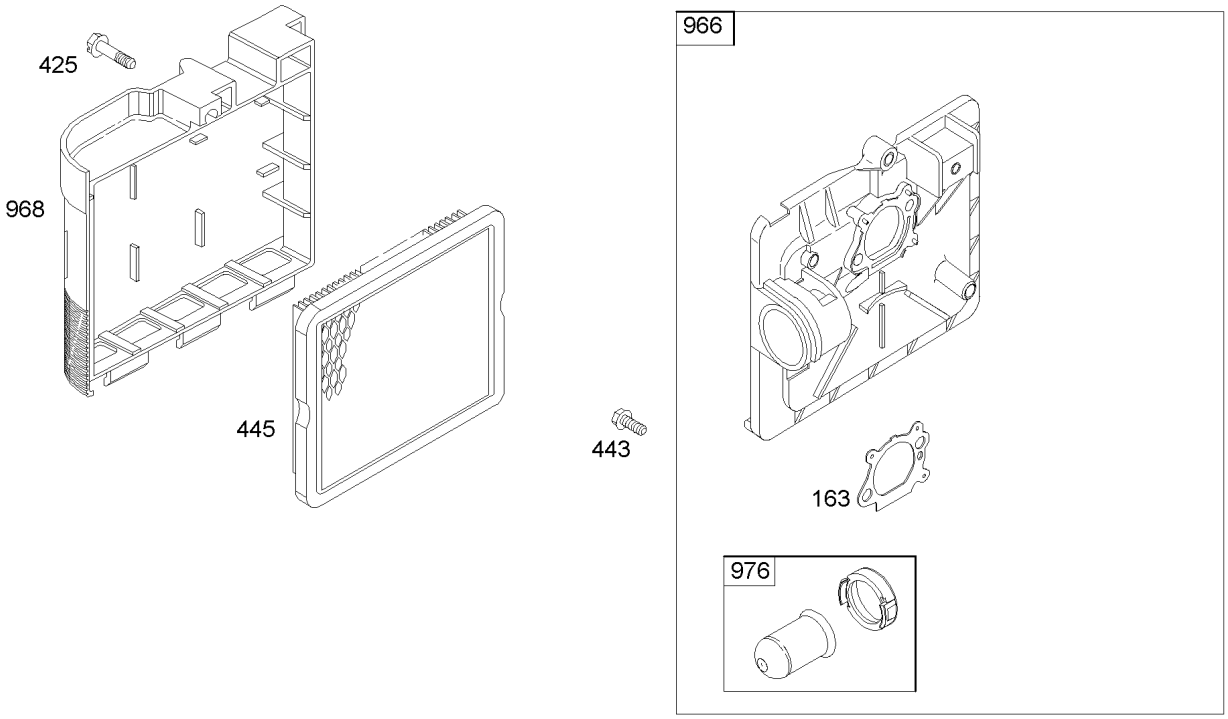

Assemblies include all parts shown in frames.

Air Cleaner Assembly
Briggs and Stratton 122K05-0171-E1


Ref	Part No.	Qty.	Description
❸❹163 ❺❻	272653	1	Gasket–Cleaner, Air
❻425	690670	1	Screw
❻443	692523	1	Screw
❻445	491588	1	Filter–Cartridge, Air Cleaner
❻966	496116	1	Base–Primer, Air Cleaner
❻968	692298	1	Cover–Cleaner, Air
❻976	694395	1	Primer–Carburetor

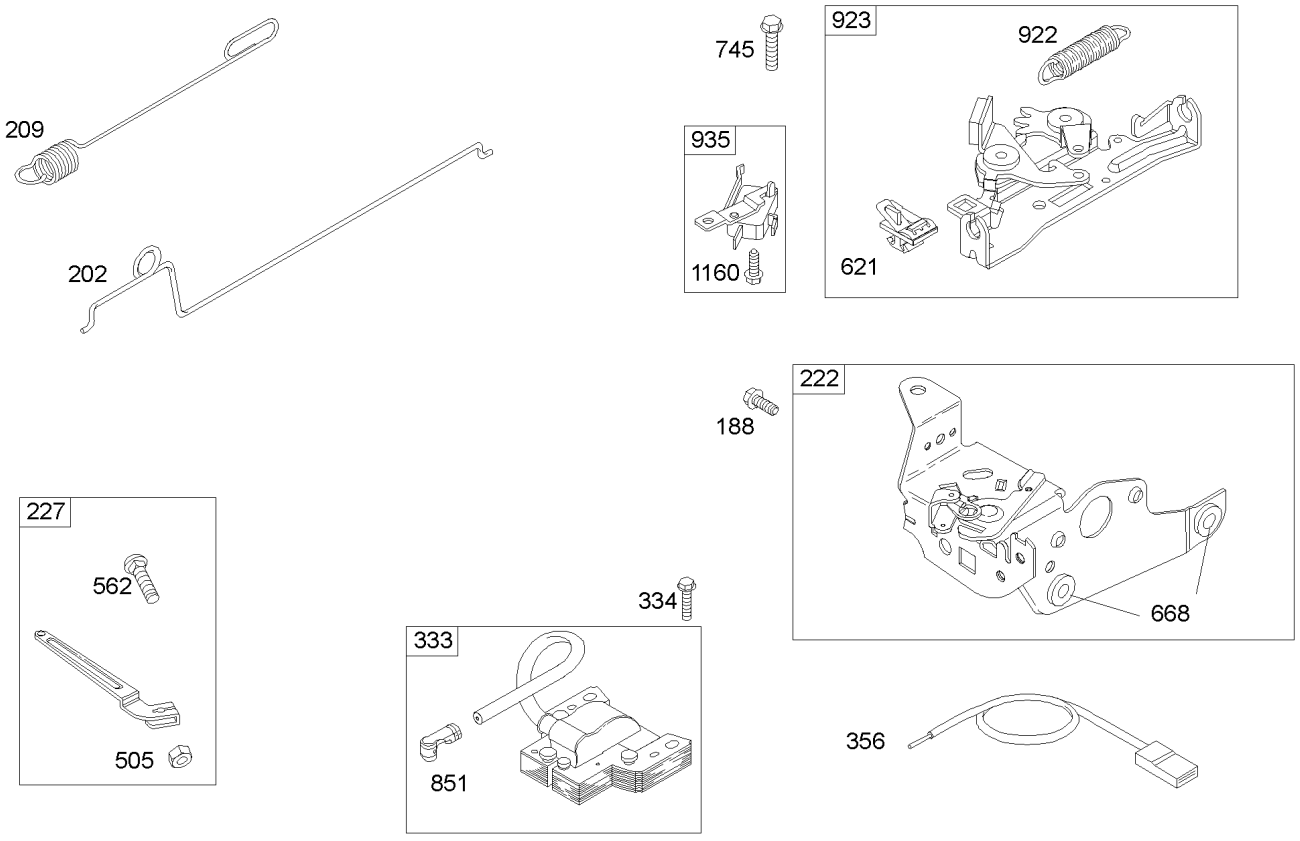

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 122K05-0171-E1


Ref	Part No.	Qty.	Description
❻188	693399	1	Screw
❻202	691829	1	Link–Governor, Mechanical
❻209	691852	1	Spring–Governor
❻222	692467	1	Bracket–Control
❻227	690783	1	Lever–Control, Governor
❻333	802574	1	Armature–Magneto
❻334	691061	1	Screw
❻356	692390	1	Wire-Stop
❻505	691251	1	Nut
❻562	691119	1	Screw
❻621	692310	1	Switch-Stop
❸❻668	493823	1	Spacer
❻745	691648	1	Screw
❻851	493880	1	Terminal-Spark Plug
❻922	691831	1	Spring–Brake
❻923	691994	1	Brake ASM
❻935	398758	1	Switch–Interlock
❻1160	691627	1	Screw Interlock Switch)

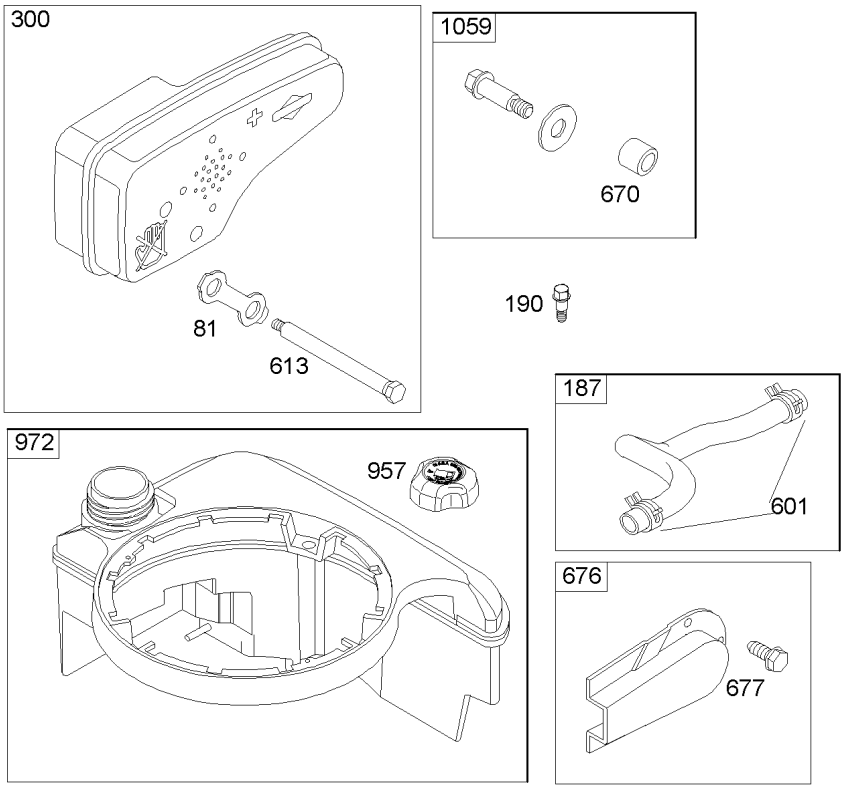

Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly
Briggs and Stratton 122K05-0171-E1


Ref	Part No.	Qty.	Description
❻81	691740	1	Lock–Screw, Muffler
❻187	691371	1	Line–Fuel (Cut To Required Length)
❻190	690940	1	Screw
❻300	692038	1	Muffler
❻601	95162	1	Clamp-Hose
❻613	691340	1	Screw
❻670	692294	1	Spacer–Tank, Fuel
❻676	493871	1	Deflector–Muffler
❻677	690661	1	Screw
❻957	692046	1	Cap–Tank, Fuel
❻972	699374	1	Tank–Fuel
❻1059	692311	1	Screw/Washer Kit

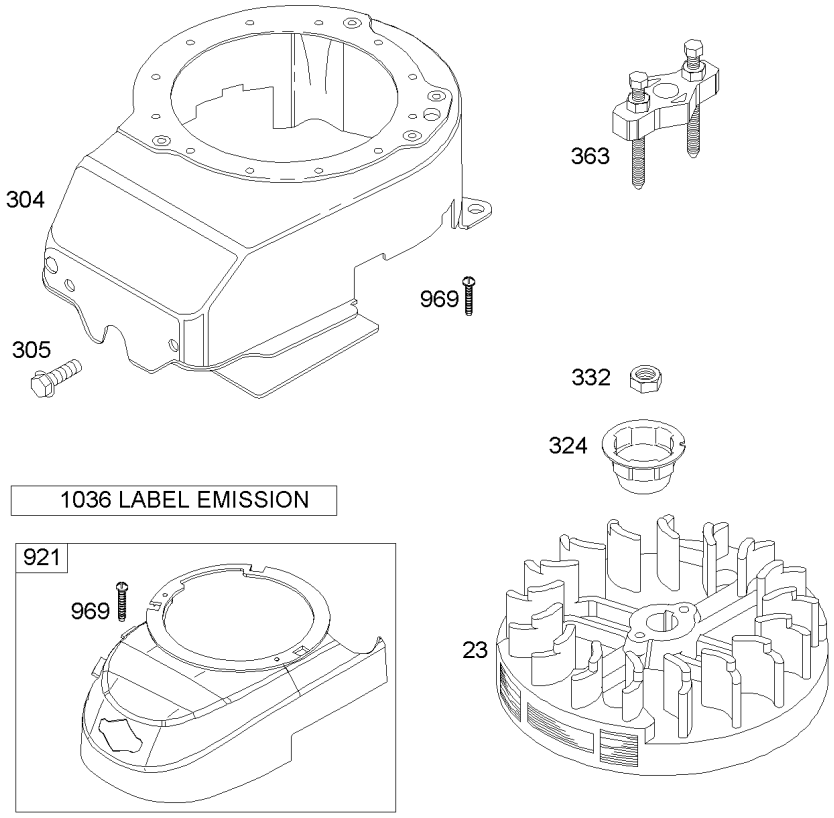

Assemblies include all parts shown in frames.


Blower Housing Assembly
Briggs and Stratton 122K05-0171-E1

Ref	Part No.	Qty.	Description
❻23	691987	1	Flywheel
❻304	493293	1	Housing–Blower
❻305	691108	1	Screw
❻324	695161	1	Cup/Screen ASM
❻332	690662	1	Nut
❻363	19069	1	Puller–Flywheel
❻921	790036	1	Cover–Housing, Blower
❻969	691138	1	Screw
❻1036	697457	1	Label–Emission

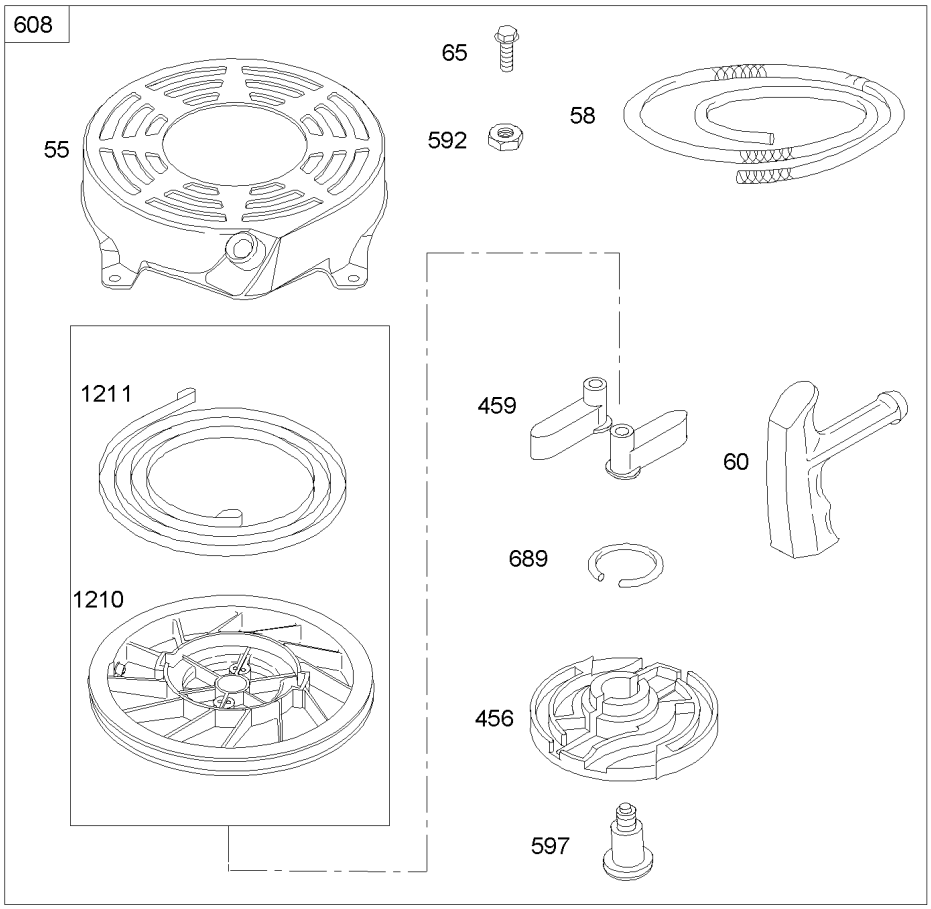

Starter Assembly
Briggs and Stratton 122K05-0171-E1


Ref	Part No.	Qty.	Description
❻55	691421	1	Housing–Starter, Rewind
❻58	697316	1	Rope–Starter (Cut To Required Length)
❻60	281434	1	Grip–Rope, Starter
❻65	690837	1	Screw
❻456	692299	1	Plate–Friction, Pawl
❻459	281505	1	Ratchet–Pawl
❻592	690800	1	Nut
❻597	691696	1	Screw
❻608	497680	1	Starter–Rewind
❻689	691855	1	Spring–Friction
❻1210	498144	1	Pulley/Spring ASM
❻1211	498144	1	Pulley/Spring ASM

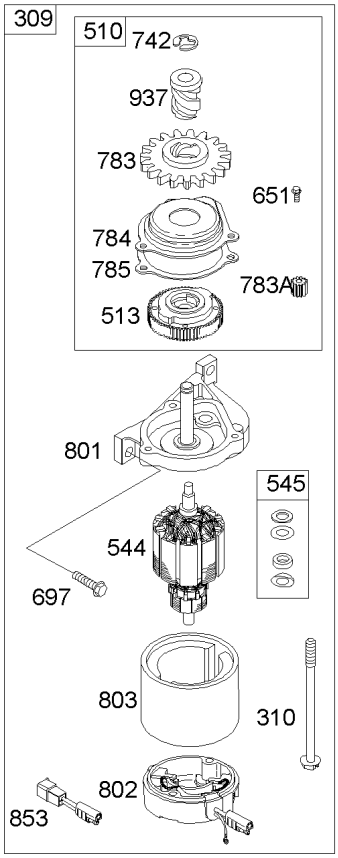

Assemblies include all parts shown in frames.

Starter Assembly
Briggs and Stratton 122K05-0171-E1

Ref	Part No.	Qty.	Description
❻309	695550	1	Motor–Starter
❻310	692327	1	Bolt
❻510	494147	1	Drive–Starter
❻513	692358	1	Clutch–Drive
❻544	690786	1	Armature–Starter
❻545	492919	1	Washer Set
❻651	690345	1	Screw
❻697	691127	1	Screw
❻742	93941	1	Retainer–E Ring
❻783	691918	1	Gear–Pinion
❻783A	691269	1	Gear–Pinion
❻784	692341	1	Cover–Gear, Starter
❻785	692352	1	Gasket–Cover, Starter
❻801	690782	1	Cap–Drive
❻802	695267	1	Cap–End
❻803	695266	1	Housing–Starter
❻853	695268	1	Adapter–Wire
❻937	691325	1	Spline–Starter

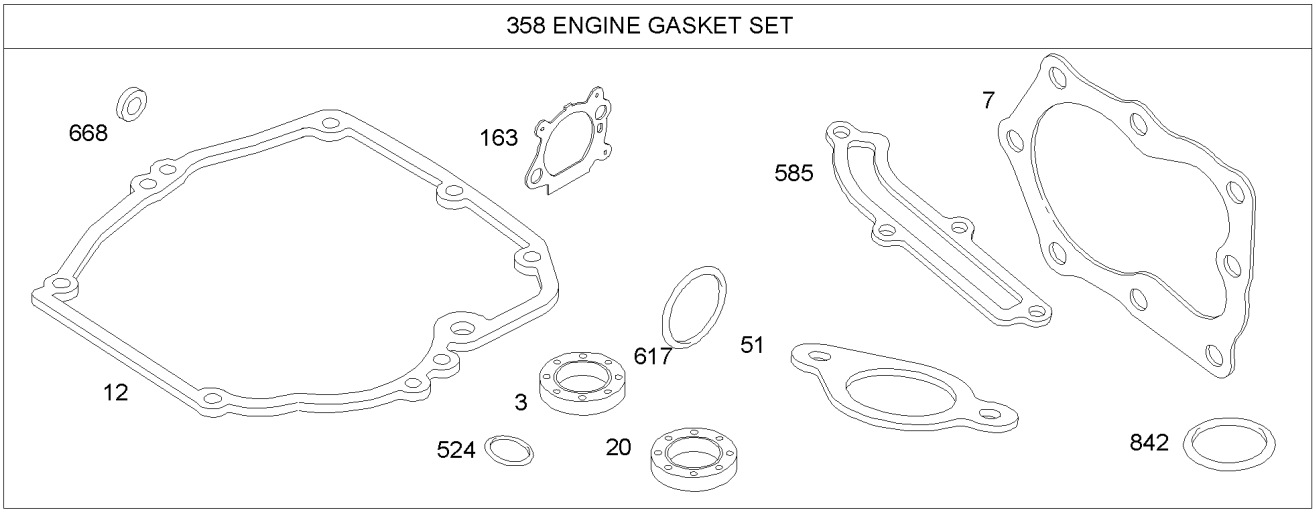

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 122K05-0171-E1

Ref	Part No.	Qty.	Description
❸❻3	299819	1	Seal–Oil
❸❻7	692249	1	Gasket–Head, Cylinder
❸❻12	692232	1	Gasket–Crankcase
❹❻20	399781	1	Seal–Oil
❸❻51	272199	1	Gasket–Intake
❸❹163	272653	1	Gasket–Cleaner, Air
❺❻ ❻358	497316	1	Engine Gasket Set
❸❻524	692296	1	Seal-O Ring
❸❻585	691879	1	Gasket–Passage, Breather
❸❹617	270344	1	Seal–O Ring
❺❻ ❸❻668	493823	1	Spacer
❸❻842	691031	1	Seal-O Ring

NOTES


TORO®