Form Number 3354-981 Rev A

Workman® e2050
Utility Vehicle

Model No. 07280 - 260000201 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Hood and Fender Assembly	3
Solenoid Assembly No. 104-7135	4
Pedal Assembly	5
Frame Assembly	6
Seat Base and Charger Assembly	7
Offboard 48 Volt Charger Assembly No. 110-2575	8
Front Tire and Steering Assembly	9
Tire, Wheel and Hub Assembly	10
Controller Assembly	11
Battery and Transaxle Assembly	12
Electric Motor Assembly No. 104-7335	13
Axle Assembly No 104-7378	14
Left Hand Brake Assembly No. 108-2419	15
Right Hand Brake Assembly No. 108-2420	16
Steering Assembly	17
Steering Gearbox Assembly No. 99-7660	18
Box and Tailgate Installation Assembly	19
Box and Tailgate Assembly	20
Attachments and Accessories List	21

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over-protection-system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

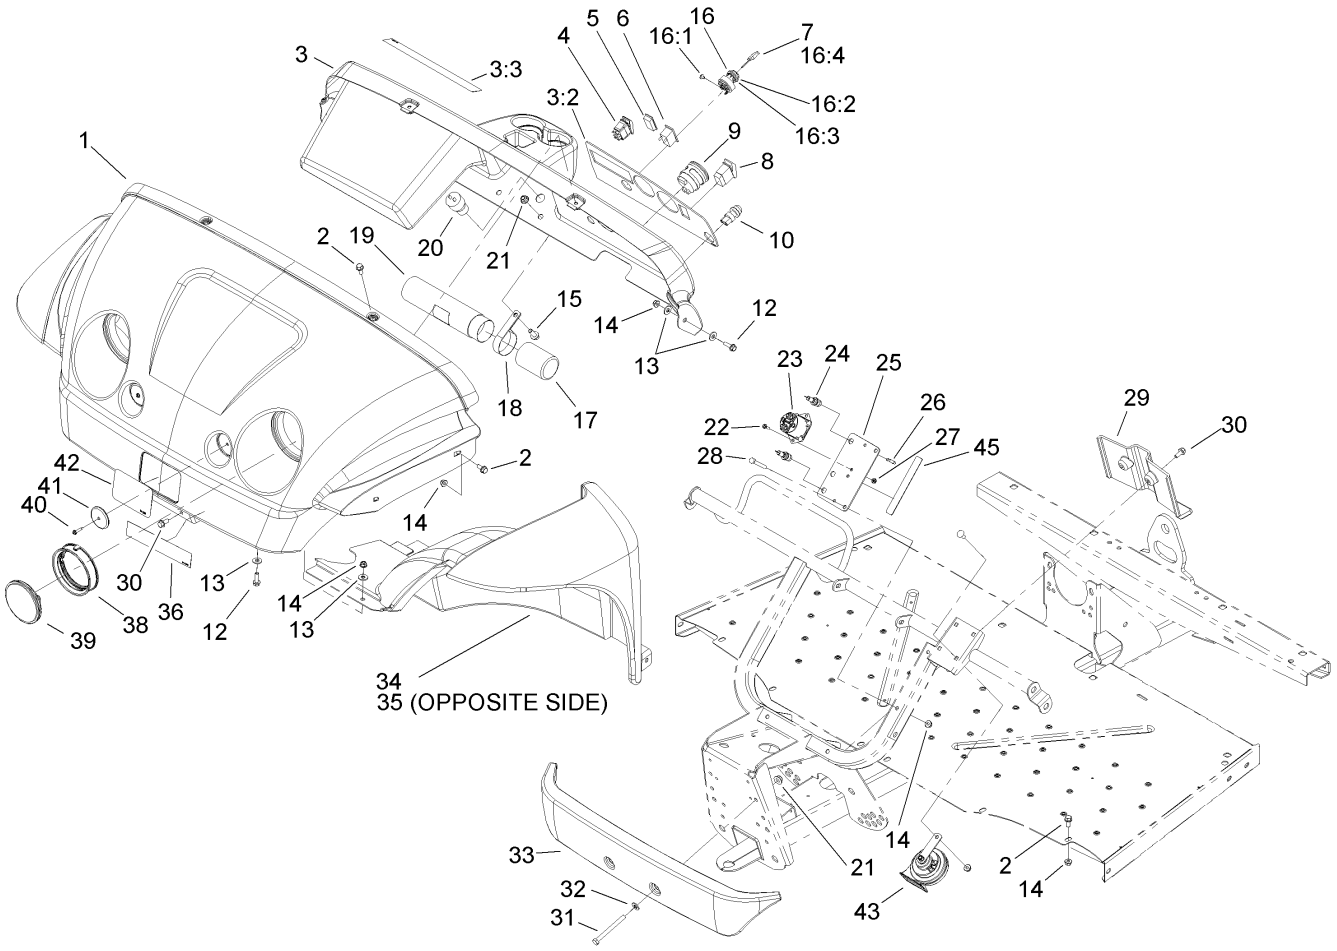

Hood and Fender Assembly


Ref	Part No.	Qty.	Description
1	104-7003	1	Hood
2	3234-5	14	Screw-HHF
3	104-7216	1	Electric Dash ASM
3:2	104-7214	1	Decal-Dash, Electric
3:3	104-7215	1	Decal-Danger, Electric Vehicle
4	107-0255	1	Switch
5	99-7420	2	Plug-Hole
6	104-7129	1	Light-Indicator
7	99-7418	1	Key-Ignition
8	107-0747	1	Switch-Rocker
9	107-0260	1	Guage-Hour/Battery Level, 48 Volt
10	18-2830	1	Button-Horn
12	3234-17	4	Screw-HHF
13	3256-3	8	Washer-Flat
14	104-8300	16	Nut-Flange, NI
15	3234-11	2	Screw-HHF
16	107-0348	1	Switch-Key, 48V
16:1	3250-28	3	Screw F/W
16:2	108-8659	1	Washer-Backup
16:3	108-8660	1	Nut-Mounting
16:4	108-6994	1	Key-Ignition
17	104-7048	1	Cap-Housing
18	2412-133	2	R-Clamp
19	104-7050	1	Housing-Manual

Ref	Part No.	Qty.	Description
20	94-5245	1	Switch-Key
21	104-8301	4	Nut-Flange, NI
22	32105-13	2	Screw-SHH
23	104-7135	1	Solenoid
24	218-489	2	Holder-Fuse
25	104-7252	1	Mount-Solenoid
26	98-8876	2	Fuse-10 Amp
27	32149-7	2	Nut-Keps
28	322-11	2	Screw-HH
29	104-7075	1	Cover-Channel
30	104-7206	4	Screw HHF
31	323-42	2	Screw-HH
32	3256-24	2	Washer-Flat
33	99-7733	1	Bumper-Plastic
34	104-7076	1	LH Fender ASM
35	104-7077	1	RH Fender ASM
36	104-7120	1	Decal-Electric
38	99-7311	2	Mount-Headlight
39	104-7312	2	Headlight
40	32144-89	2	Screw-Forming, Thread
41	99-7312	2	Reflector
42	99-7339	1	Decal
43	107-0358	1	Horn
45	107-0287	1	Decal-Fuse

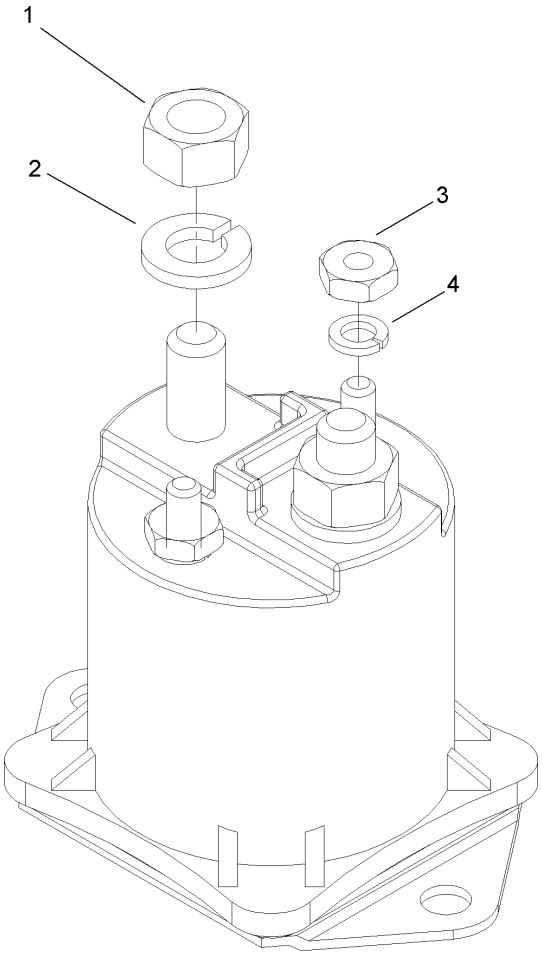

Solenoid Assembly No. 104-7135


Ref	Part No.	Qty.	Description
1	3217-6	2	Nut-Hex
2	3253-4	2	Washer-Lock
3	3219-14	2	Nut-Hex
4	3253-17	2	Washer-Lock / Sp

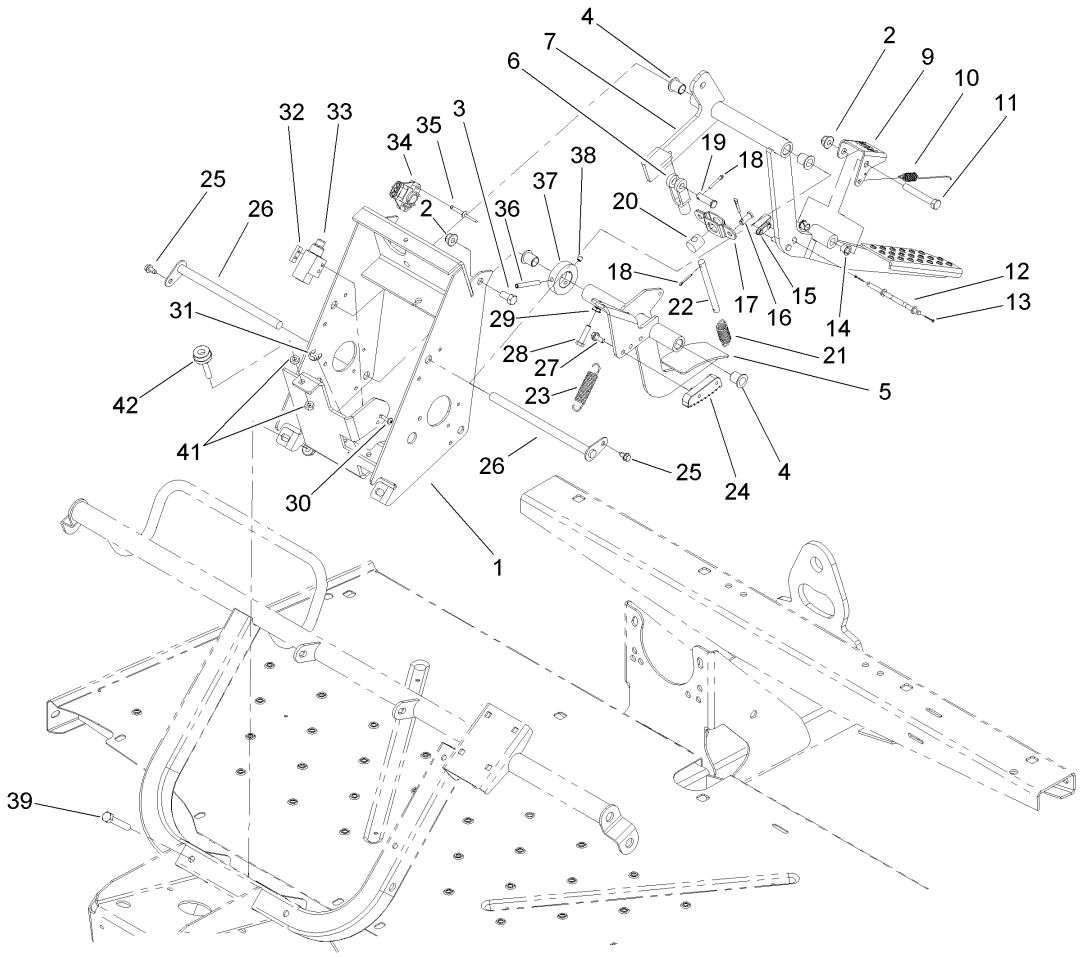

Pedal Assembly

Ref	Part No.	Qty.	Description
1	110-2605-03	1	Frame-Pedals
2	104-8301	5	Nut-Flange, NI
3	323-4	2	Screw-HH
4	256-155	4	Bushing-Flange
5	110-2607-03	1	Pedal-Throttle
6	1-633131	1	Yoke-Linkage, Brake
7	104-7170-03	1	Pedal-Brake
9	104-6613	1	Pedal-Park
10	92-6945	1	Spring-Extension
11	323-12	1	Screw-HH
12	104-6616	1	Rod-Park
13	3272-4	3	Pin-Cotter
14	52-2891	2	Bushing-Link, Steering
15	104-6624	1	Detent-Brake
16	283-62	2	Pin-Clevis
17	104-6599	1	Pivot-Brake
18	3272-10	4	Pin-Cotter
19	283-2	1	Pin-Clevis
20	104-6598	1	Pin-Pivot
21	613386	1	Spring-Brake
22	104-6597	1	Rod-Threaded
23	104-6415	1	Spring-Return, Pedal
24	104-6614	1	Pawl-Brake
25	12-3270	2	Screw


Ref	Part No.	Qty.	Description
26	104-7164	2	Pivot-Pedals
27	3234-33	2	Screw-HHF
28	321-7	2	Screw-HH
29	32149-2	2	Nut-Keps
30	104-7221	2	Screw-PPH
31	32120-47	2	Ring-Retaining, External
32	1-633181	1	Plate-Tapped
33	99-7407	1	Switch
34	104-7365	1	Sensor-Position, Rotary
35	107-0386	2	Rivet-Blind
36	32121-78	1	Pin-Roll
37	104-7301	1	Collar
38	3245-32	2	Screw-HSH
39	323-11	2	Screw-HH
41	3218-2	2	Nut-Jam
42	32141-36	1	Screw-Adjustment, Level

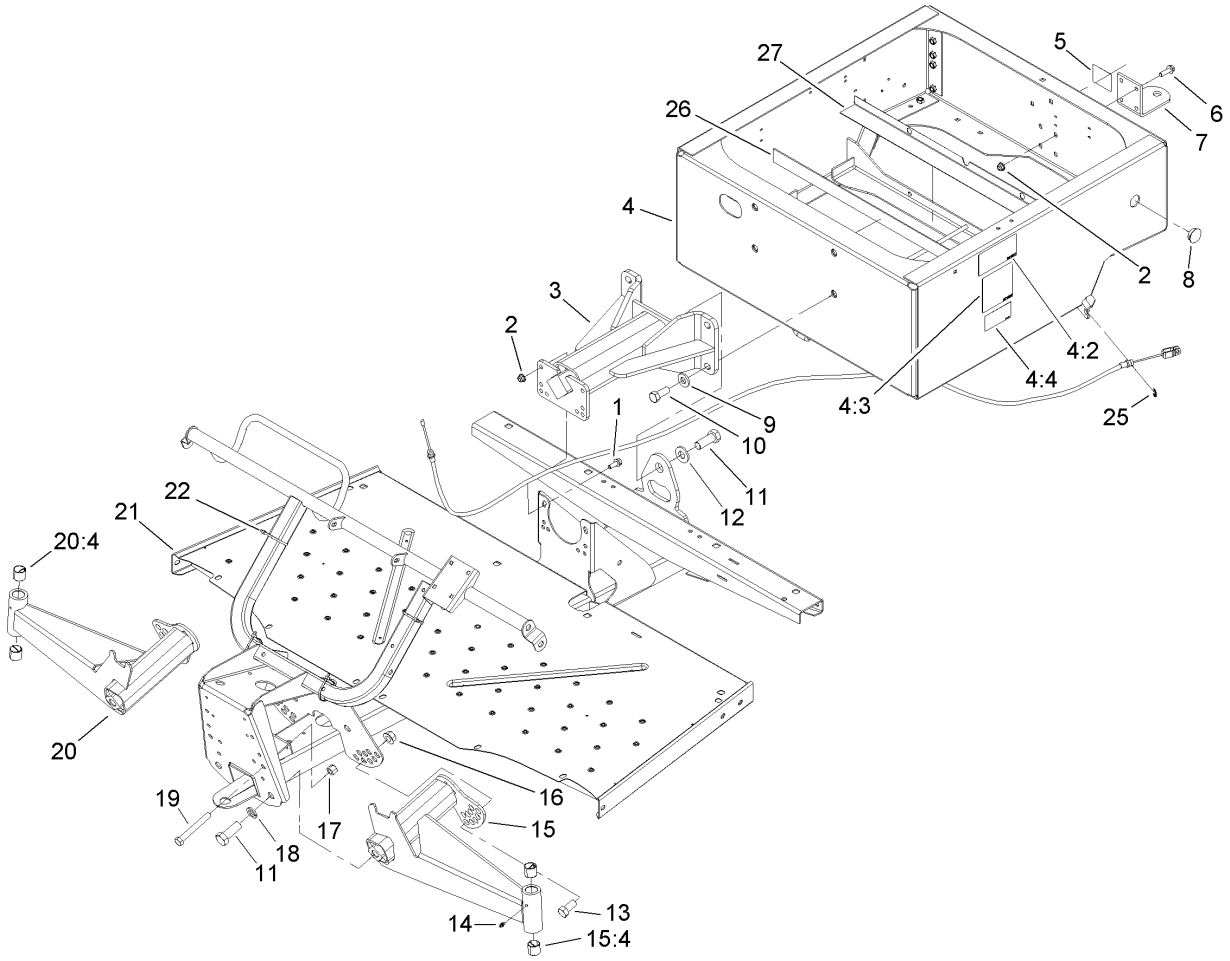

Frame Assembly


Ref	Part No.	Qty.	Description
1	3234-11	4	Screw-HHF
2	104-8301	8	Nut-Flange, NI
3	99-7700	1	Pivot Yoke ASM
4	104-7130	1	Rear Frame ASM
4:2	104-7207	2	Decal-Electric
4:3	107-0257	1	Decal-Polarity
4:4	104-7131	1	Decal-Capacity, Electric
5	99-7350	1	Decal-Information
6	3234-24	4	Screw-HHF
7	99-7654-03	1	Hitch-Duty, Light
8	94-1402	1	Plug-Hole
9	99-7667	4	Washer-Flat
10	327-4	4	Screw-HH
11	328-24	5	Screw-HH
12	87-3060	1	Washer-Hardened
13	3214-2	2	Screw-HH
14	302-5	2	Fitting-Grease
15	99-7685	1	LH A-Arm ASM
15:4	3-0348	2	Bushing
16	32128-54	2	Nut-HF
17	3296-23	2	Nut-Lock, NI
18	3254-7	4	Washer-Lock, Int
19	325-17	2	Screw-HH
20	99-7684	1	RH A-Arm ASM

Ref	Part No.	Qty.	Description
20:4	3-0348	2	Bushing
21	104-7197-03	1	Front Frame ASM
22	3290-379	11	Tie-Cable
25	32120-47	2	Ring-Retaining, External
26	107-0252	1	Pad-Battery
27	107-0267	4	Isolator-Battery

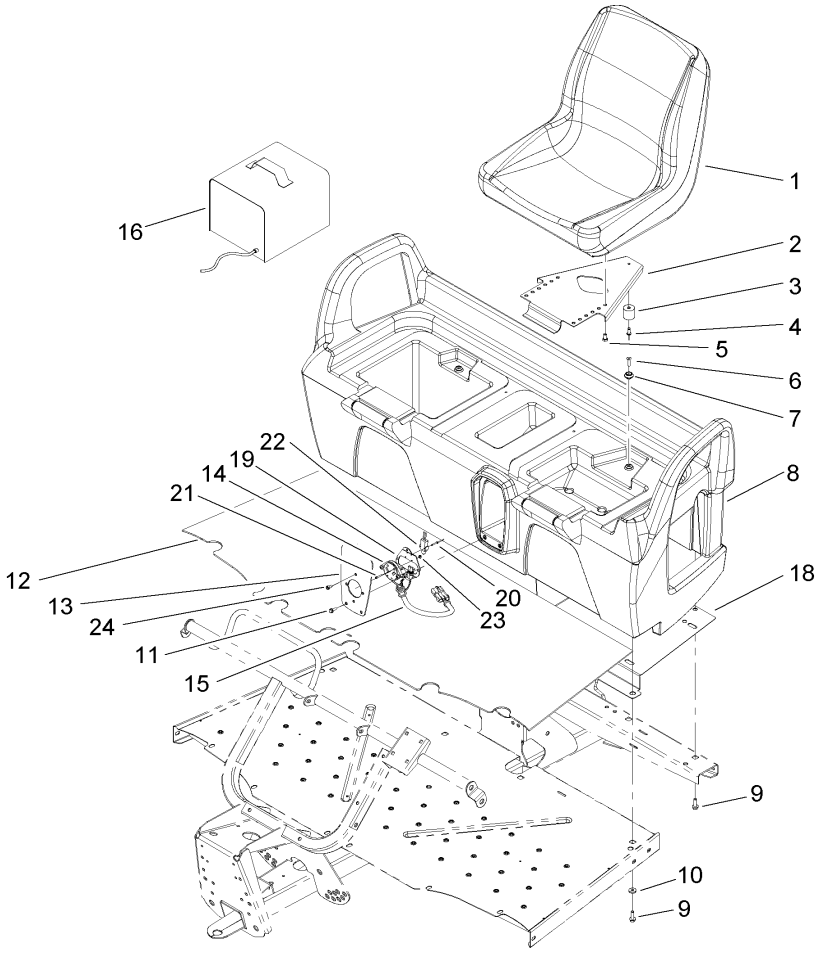


Seat Base and Charger Assembly

Ref	Part No.	Qty.	Description
1	106-6672	2	Seat
2	99-7829	2	Bracket-Seat
3	99-7830	2	Rubber Receptical ASM
4	3290-412	2	Rivet
5	33114-016	8	Screw-HH
6	32108-5	2	Screw-FH
7	99-7833	2	Post-Holding
8	104-6401	1	Seat Base ASM
9	3234-17	8	Screw-HHF
10	88-7200	8	Washer-Flat
11	32105-15	4	Screw
12	104-6590	1	Mat-Floor
13	107-0370	1	Plate-Receptacle
14	107-0288	1	Receptacle-Charger
15	107-0746	1	Harness-Wire, Charger
16	110-2575	1	Charger-48V, Offboard
18	107-0359-03	1	Tray-Seatbase
19	107-0716	1	Bracket-Mount, Socket
20	107-0333	2	Rivet-Pop
21	107-0334	2	Screw-HSH
22	99-3410	1	Switch
23	3296-9	2	Nut-Lock
24	32104-17	4	Screw-HWH

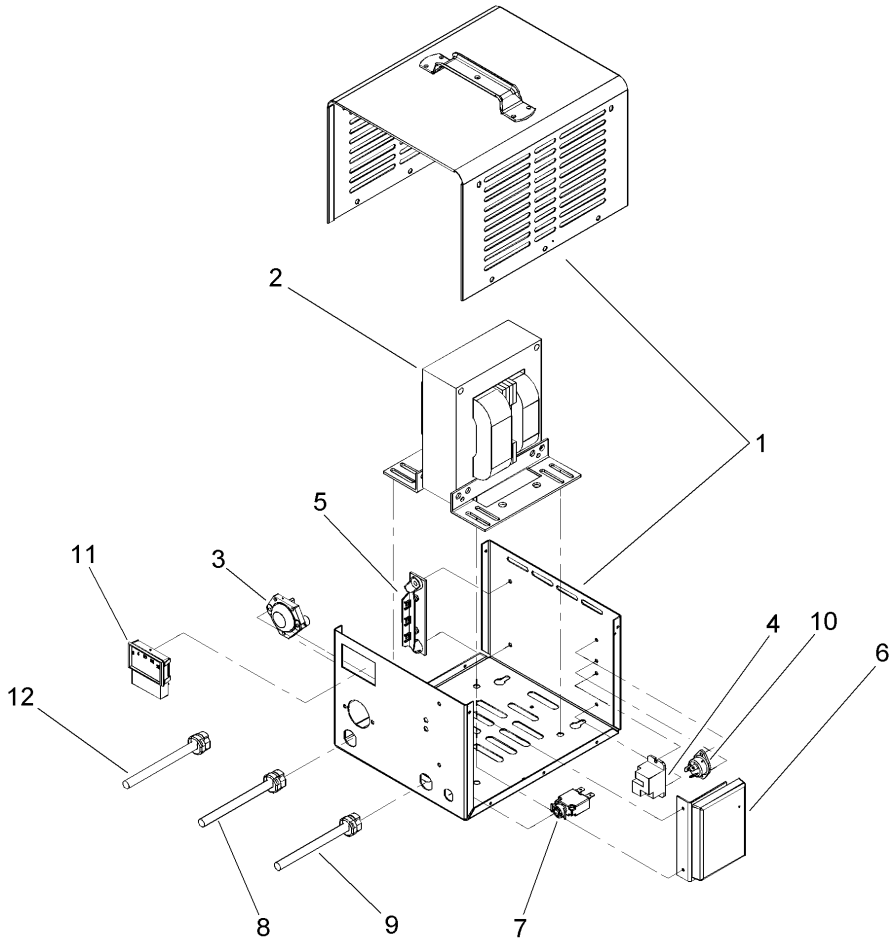


Offboard 48 Volt Charger Assembly No. 110-2575

Ref	Part No.	Qty.	Description
❷1		1	Case ASM
❷2		1	Transformer ASM
3	108-1161	1	Fuse ASM
4	108-1162	1	Relay-48V Dc
5	108-1163	1	Diode ASM
6	110-2573	1	Control Board ASM
7	110-2579	1	Breaker-Circuit
8	108-1166	1	Kit-Cordset, 8.5 Ft Dc
9	108-1167	1	Kit-Cordset, 72 In, Ac, Us
10	108-1168	1	Scr, W / Terminals
11	108-1169	1	Ammeter
12	108-3071	1	Kit-Cordset 20 Ft Dc

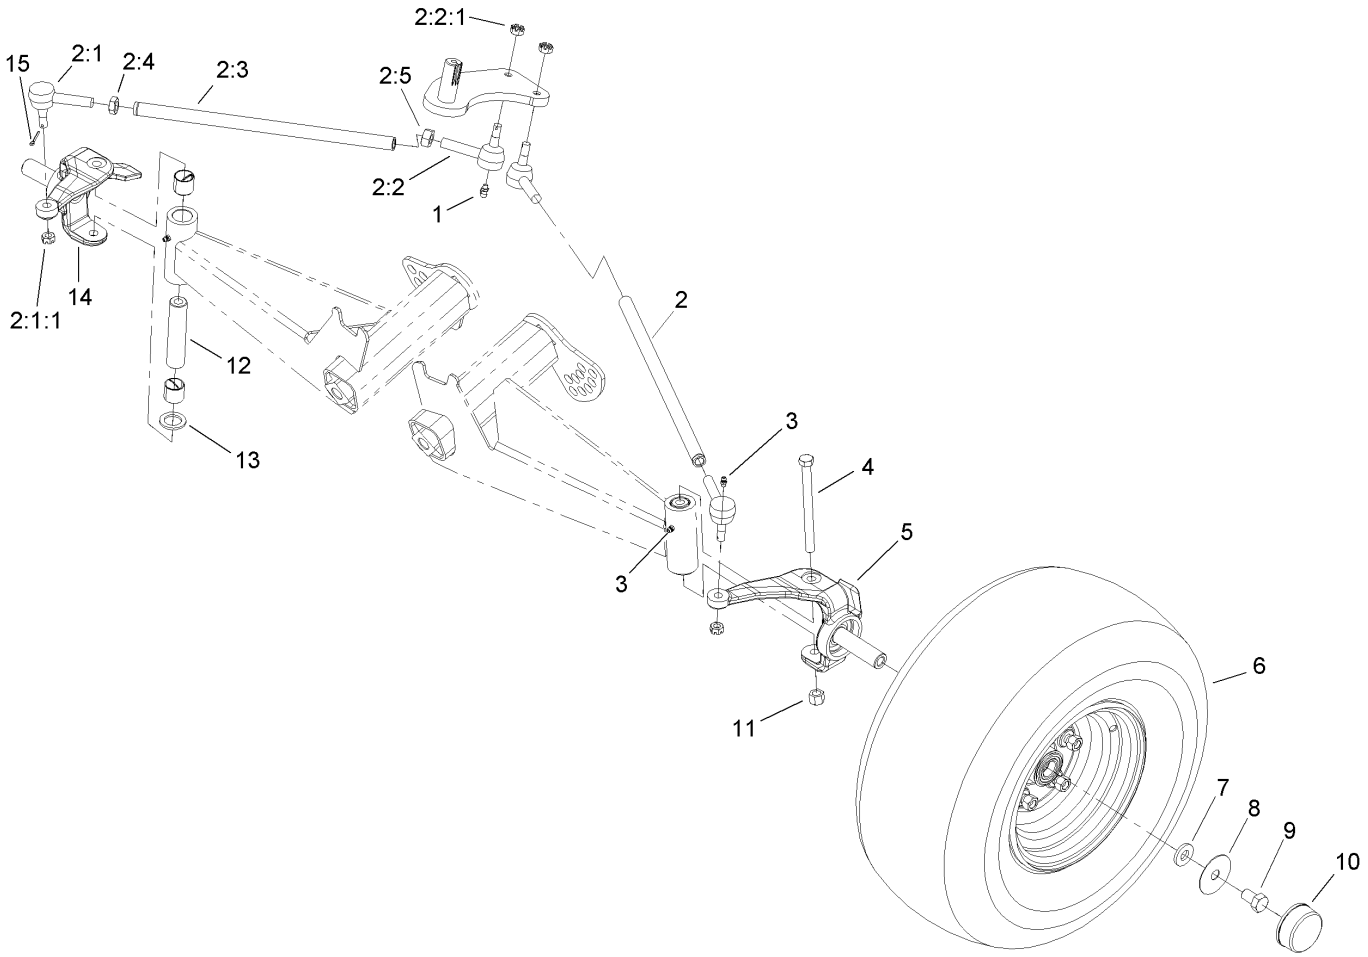


Front Tire and Steering Assembly

Ref	Part No.	Qty.	Description
1	302-60	2	Fitting-Grease, 90 DEG
❷2		2	Rod-Tie
2:1	112772	1	Joint-Ball, RH
2:1:1	915031	1	Nut
2:2	112771	1	Joint-Ball, LH
2:2:1	915031	1	Nut
2:3	99-7600-03	1	Rod-Tie
2:4	3220-11	1	Nut-Jam
2:5	3218-21	1	Nut-Jam
3	302-5	2	Fitting-Grease
4	325-20	2	Screw-HH
5	99-7486-03	1	Spindle-LH
❷6		2	Tire, Wheel And Hub ASM
7	99-7667	2	Washer-Flat
8	99-7719	2	Washer
9	327-2	2	Screw-HH
10	94-7871	2	Cap-Dust
11	3296-23	2	Nut-Lock, NI
12	99-7499	2	Sleeve-Kingpin
13	256-115	2	Washer-Thrust
14	99-7487-03	1	Spindle-RH
15	3272-7	4	Pin-Cotter

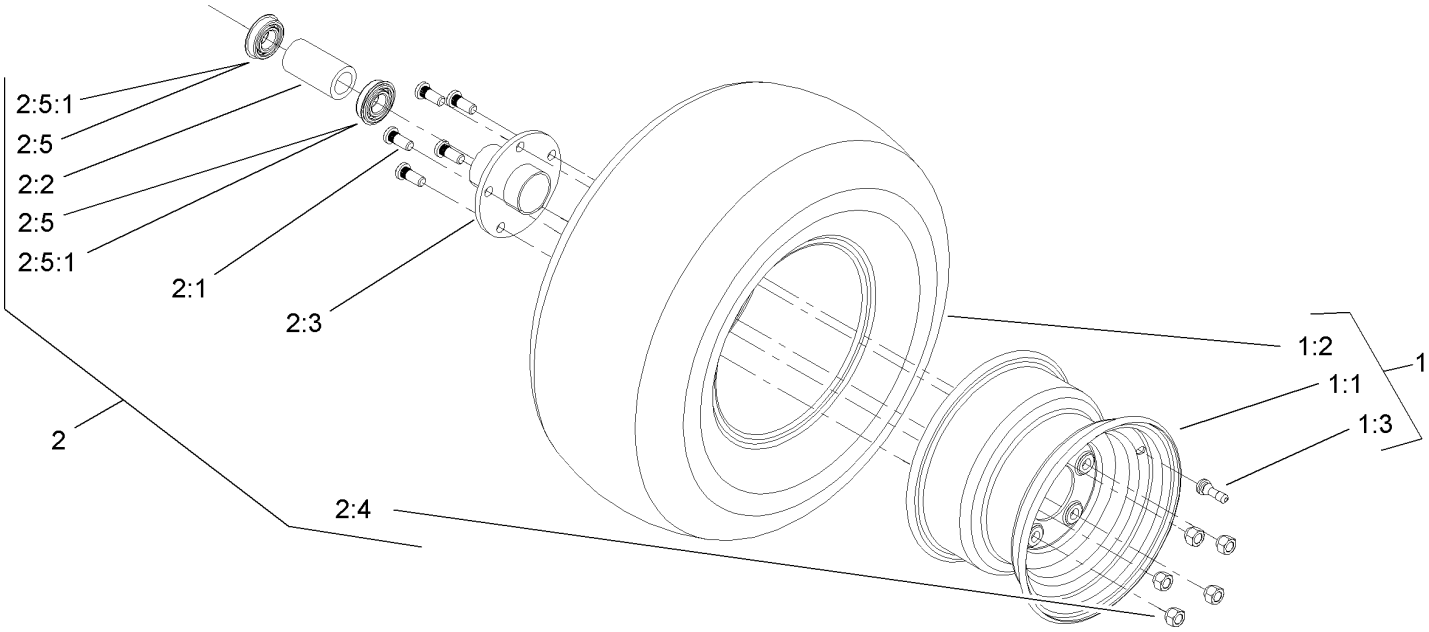

Tire, Wheel and Hub Assembly


Ref	Part No.	Qty.	Description
1	104-7290	1	Tire \ Wheel ASM
1:1	104-7288	1	Wheel
1:2	104-7289	1	Tire
1:3	232-27	1	Stem-Valve
2	104-7287	1	Hub And Flange ASM
2:1	104-7283	5	Stud
2:2	104-7284	1	Spacer
2:3	104-7286	1	Hub And Flange
2:4	242-50	5	Nut-Lug
2:5	94-7538	2	Bearing
2:5:1	94-2053	1	Ring-Snap

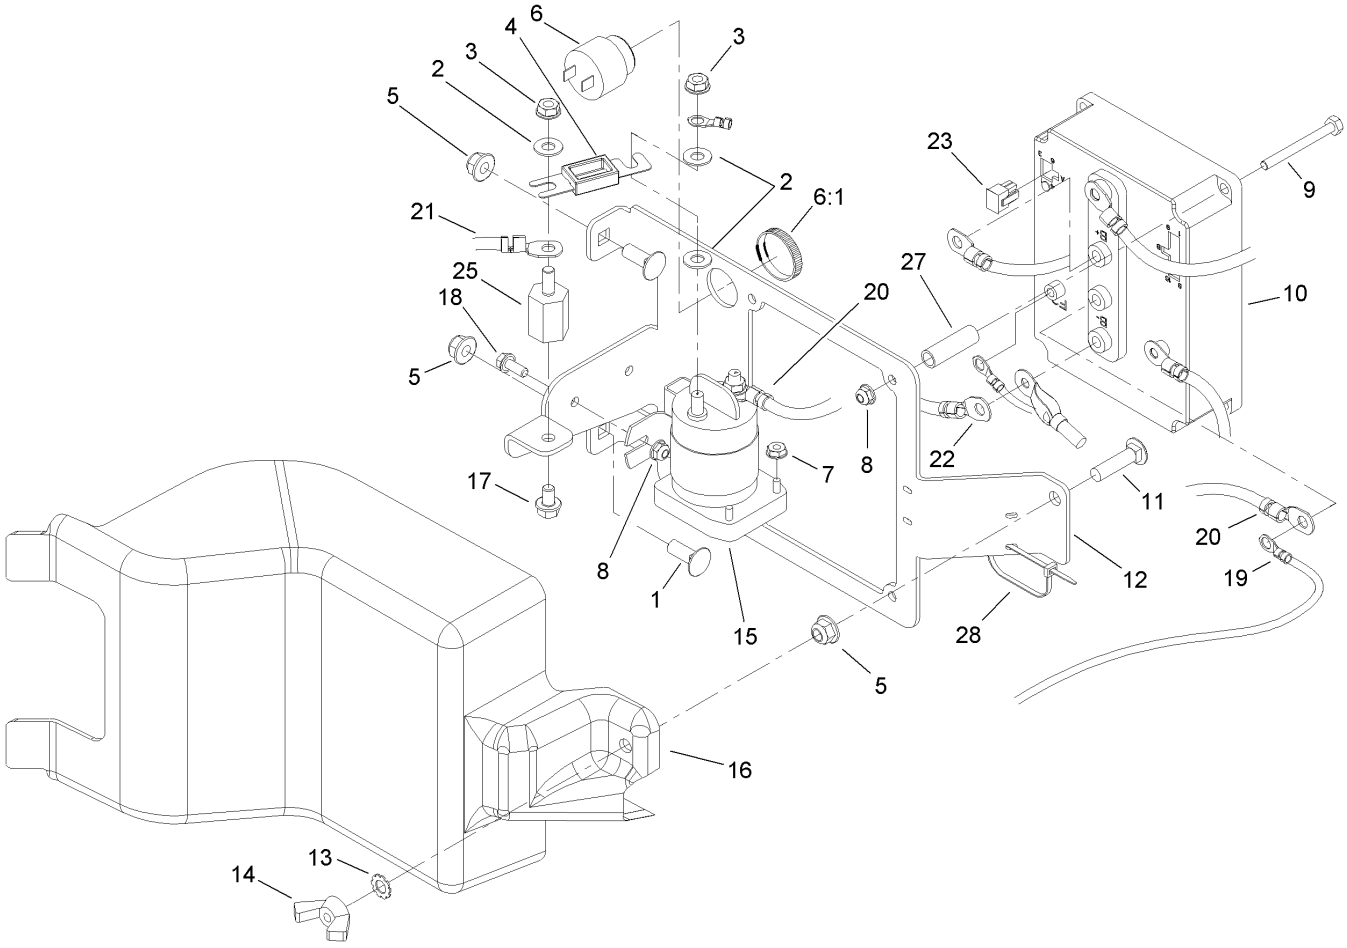

Controller Assembly

Ref	Part No.	Qty.	Description
1	3231-22	2	Screw-CARR
2	107-0394	3	Washer-Flat
3	107-0380	3	Nut-HHF
4	104-7320	1	Fuse
5	104-8301	3	Nut-Flange, NI
6	94-5582	1	Alarm-Audio
6:1	104-5107	1	Nut-Plastic, Knurled
7	32149-8	2	Nut-Keps
8	104-7201	6	Nut-HF
9	321-15	4	Screw-HH
10	110-2569	1	Controller-Sevcon
11	3231-4	1	Screw-CARR
12	104-7137-03	1	Mount-Controler
13	3255-9	1	Washer-Lock, EXT
14	32103-3	1	Nut-Wing
15	104-7136	1	Contactor-48V
16	104-7138	1	Cover-Controller
17	100-1719	1	Screw-Flange
18	3234-33	2	Screw-HHF
19	107-0730	1	Harness-Wire, Electric Mid Duty
20	107-0740	1	Cable-Battery, Positive
21	107-0741	1	Cable-Battery, Positive
22	107-0742	1	Cable-Battery, Negative
23	32160-130	1	Connector


Ref	Part No.	Qty.	Description
❶24	107-0737	1	Harness-Wire, Battery Cable
25	107-0286	1	Isolator
27	107-0285	4	Spacer
28	3290-379	2	Tie-Cable

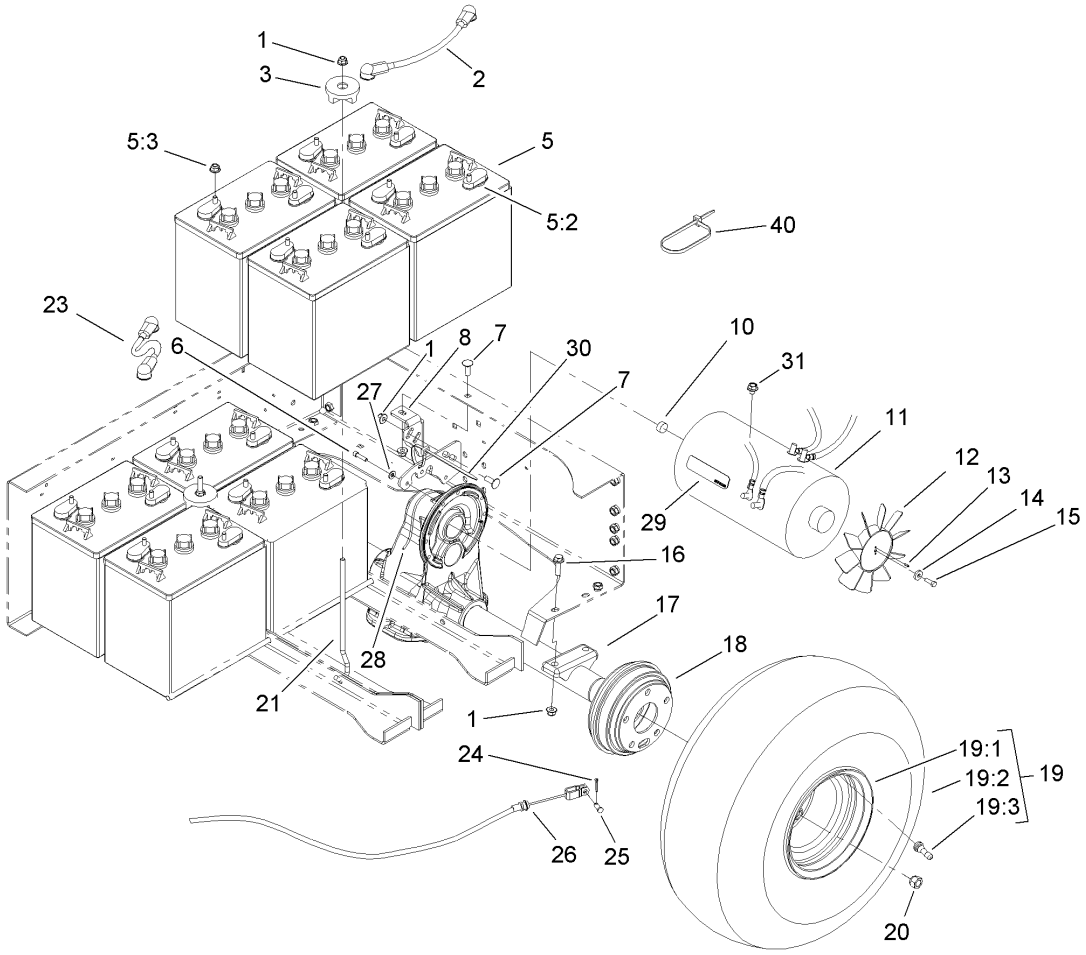

Battery and Transaxle Assembly


Ref	Part No.	Qty.	Description
1	104-8301	11	Nut-Flange, NI
2	107-0739	1	Cable-Battery, Positive
3	104-7149	2	Hold Down ASM
❷5		8	Battery
5:2	107-0289	2	Cover-Terminal, Battery
5:3	107-0388	2	Nut
6	3274-26	6	Screw-HSH
7	3231-22	5	Screw-CARR
8	104-7249-03	1	Bracket-Support
10	104-7243	1	Damper-Rubber
11	104-7335	1	Motor-Electric
12	107-0259	1	Fan-10 Blade, Clockwise
13	32121-68	2	Pin-Roll
14	73-3580	1	Washer
15	3274-8	1	Screw-HSH
16	3234-24	4	Screw-HHF
17	104-7378	1	Transaxle-Electric
18	104-6500	2	Drum-Brake
19	104-7290	2	Tire \ Wheel ASM
19:1	104-7288	1	Wheel
19:2	104-7289	1	Tire
19:3	232-27	1	Stem-Valve
20	242-50	10	Nut-Lug
21	104-7339	2	Rod-Battery

Ref	Part No.	Qty.	Description
23	107-0738	6	Cable-Battery, Positive
24	3272-10	2	Pin-Cotter
25	283-62	2	Pin-Clevis
26	104-7324	2	Cable-Brake
27	3256-22	6	Washer-Flat
28	5-4542	1	Line-Gas
29	107-0356	1	Decal-Motor
30	3290-379	12	Tie-Cable
31	107-0376	1	Screw-HSFH
40	3290-378	2	Tie-Cable

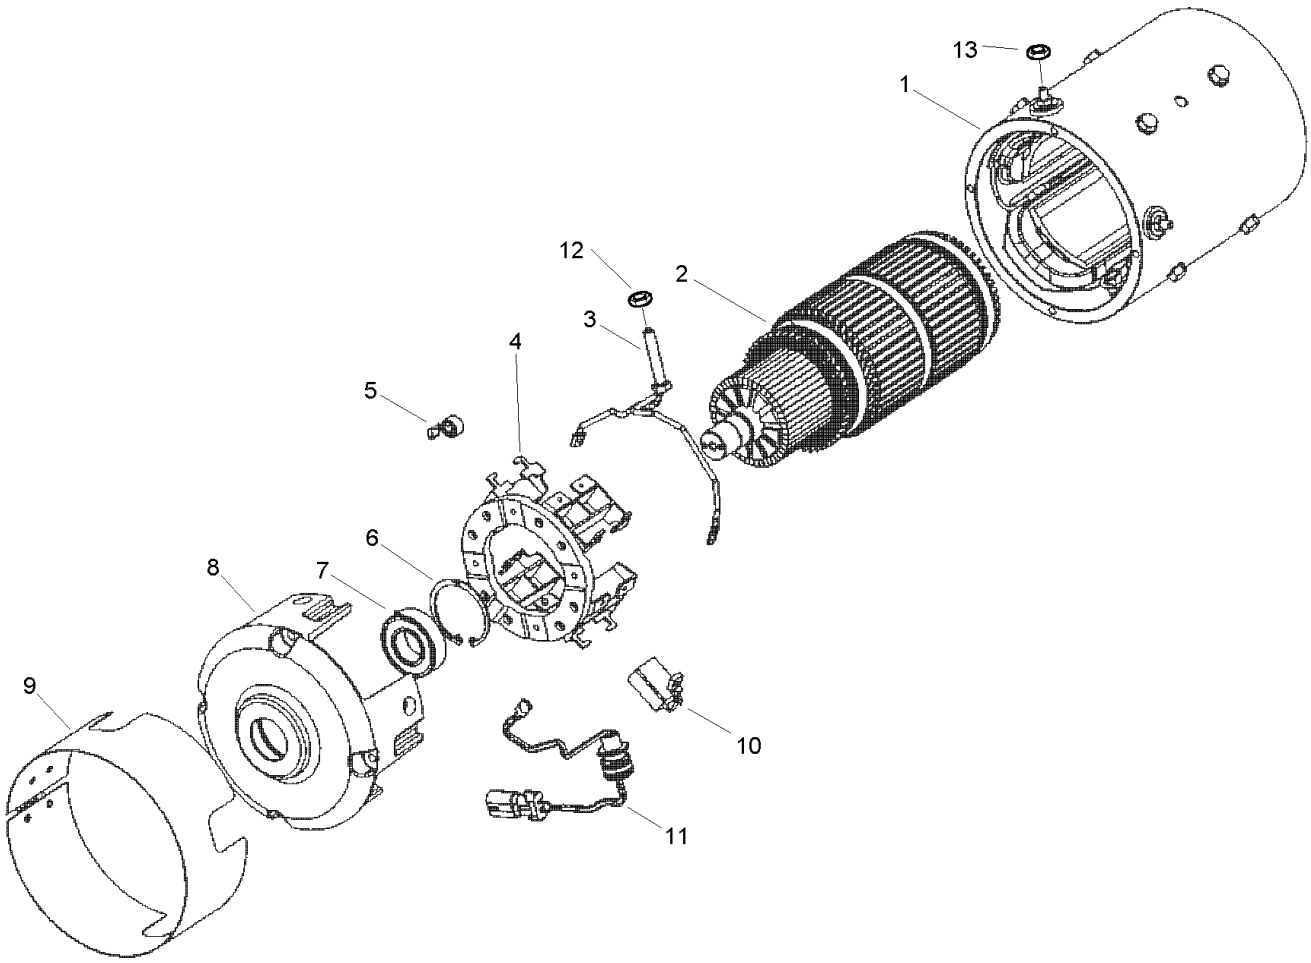

Electric Motor Assembly No. 104-7335


Ref	Part No.	Qty.	Description
❷1		1	Frame And Field ASM
❷2		1	Armature ASM
3	108-1151	2	Brush Lead ASM
4	108-1152	1	Brush Box ASM
5	108-1153	8	Spring-Brush
6	108-1154	1	Ring-Retaining
7	108-1155	1	Bearing
8	108-1156	1	Head-Commutator
9	108-1157	1	Headband ASM
10	108-1158	8	Brush
11	108-1159	1	Thermal Sensor ASM
12	3218-13	2	Nut-Jam, Brass
13	3218-14	2	Nut-Jam, Brass

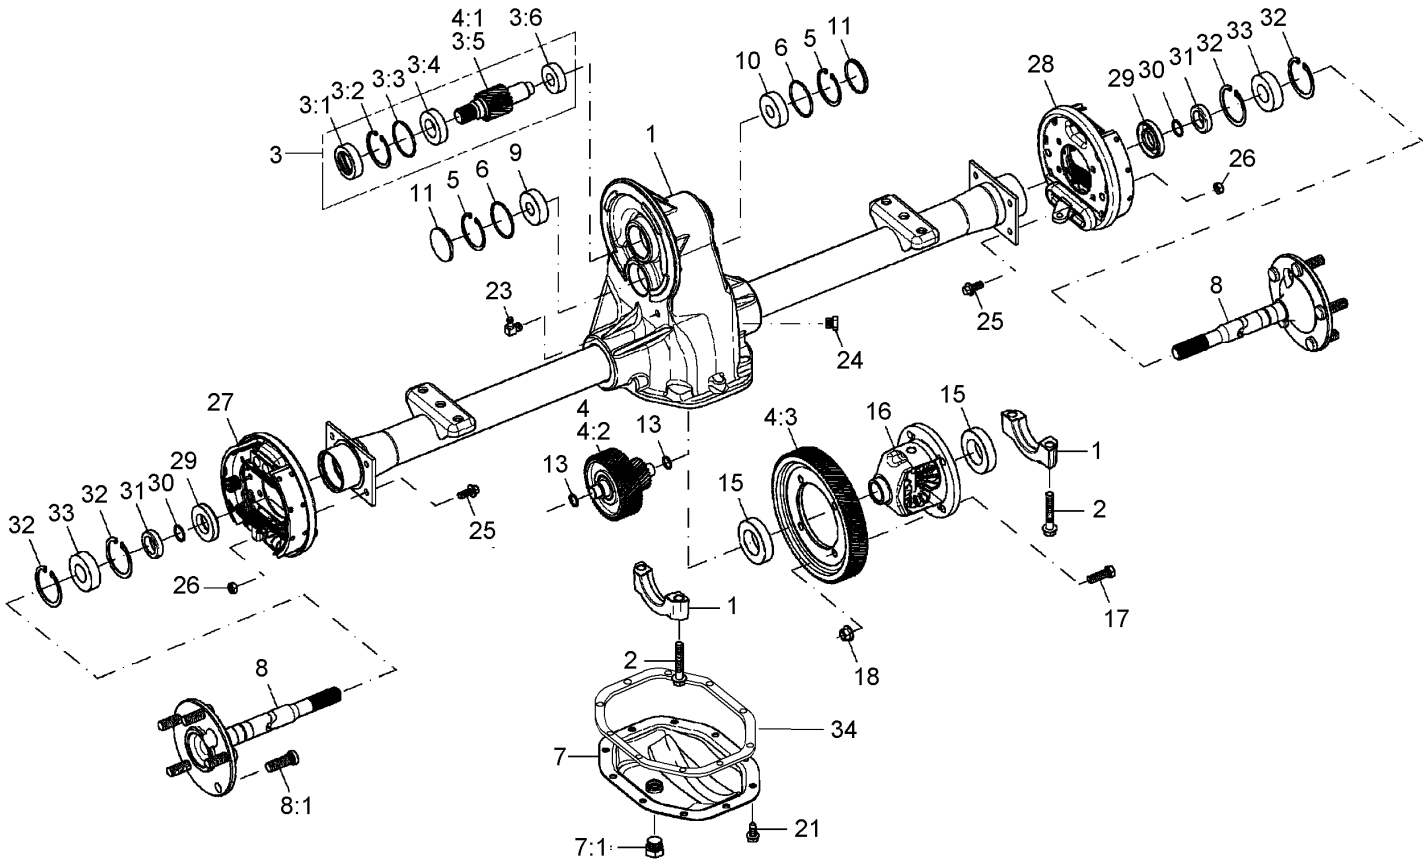

Axle Assembly No 104-7378


Ref	Part No.	Qty.	Description
❷1		1	Housing ASM
2	108-2401	4	Bolt-Cap, Bearing
3	108-2402	1	Input Shaft Kit
3:1	108-2403	1	Seal-Oil
3:2	108-2404	1	Ring-Retaining
3:3	108-2405	1	O-Ring
❷3:4		1	Bearing-Ball
❷3:5		1	Shaft-Input
❷3:6		1	Bearing-Ball
4	108-2409	1	Internal Gear Kit
❷4:1		1	Shaft-Input
❷4:2		1	Gear-Intermediate
4:3	110-2541	1	Gear-Drive, Final
❷4:3		1	Gear-Drive, Final
5	108-2404	2	Ring-Retaining
6	108-2405	2	O-Ring
7	108-2416	1	Cover Kit
7:1	108-2415	1	Plug-HH
8	108-2426	1	Axle Shaft Kit
8:1	106-9205	5	Stud-Wheel
9	108-2406	1	Bearing-Ball
10	108-2407	1	Bearing-Ball
11	108-2408	2	Plug-Cap, End
13	108-2410	2	O-Ring

Ref	Part No.	Qty.	Description
15	108-2411	2	Bearing-Ball
16	108-2412	1	Differential ASM
17	108-2413	4	Screw-Hex
18	108-2414	4	Nut-Lock
21	108-2427	10	Screw-Tapping
23	108-2428	1	Elbow-90 Degree
24	108-2429	1	Plug-HH
25	108-2417	8	Screw-Head, Flange
26	108-2418	8	Nut-Lock
27	108-2419	1	LH Brake ASM
28	108-2420	1	RH Brake ASM
29	108-2421	2	Seal-Oil
30	108-2422	2	Ring-Retaining
31	108-2423	2	Ring-Retaining, Wheel Bearing
32	108-2424	4	Ring-Retaining
33	108-2425	2	Bearing-Ball
34	108-3148	1	Gasket

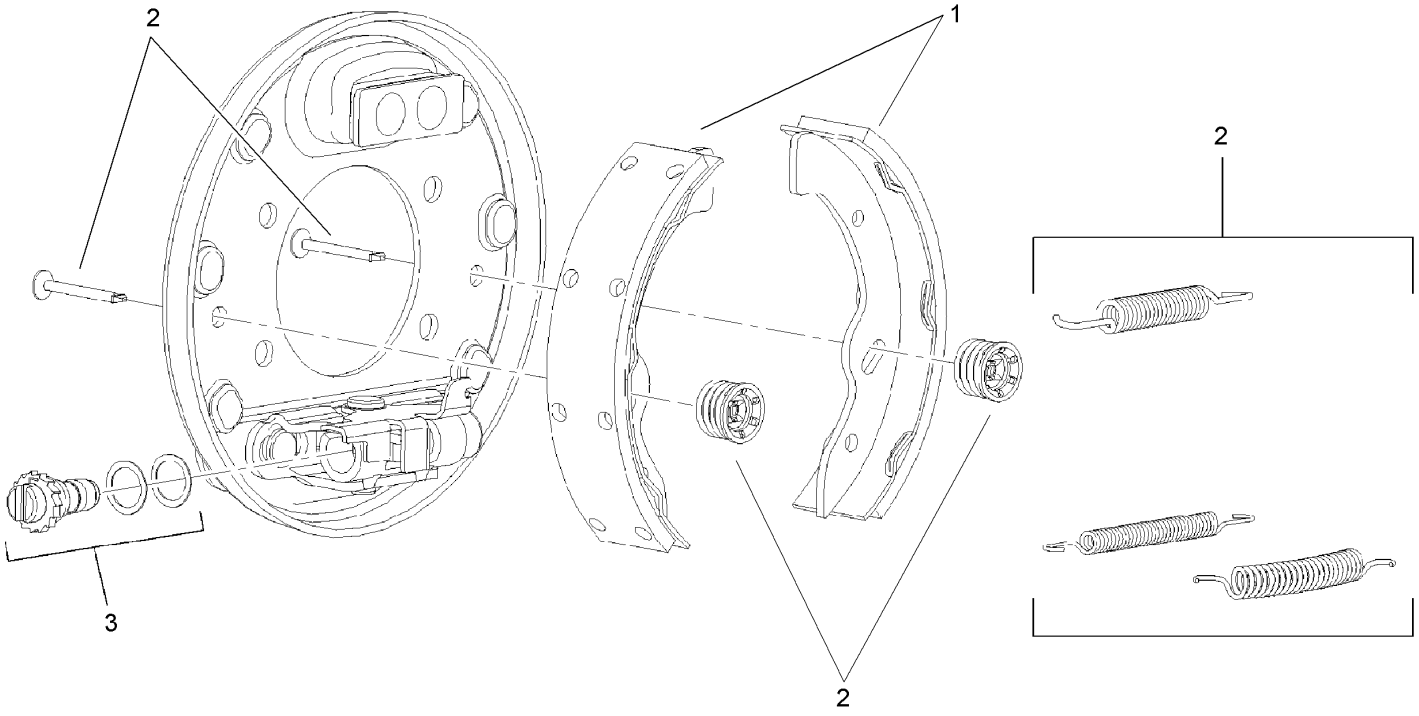


Left Hand Brake Assembly No. 108-2419

Ref	Part No.	Qty.	Description
1	108-6995	1	Shoe And Lining Kit (Set Of 4)
2	104-1244	1	Spring Kit
3	104-1245	1	LH Adjuster Kit

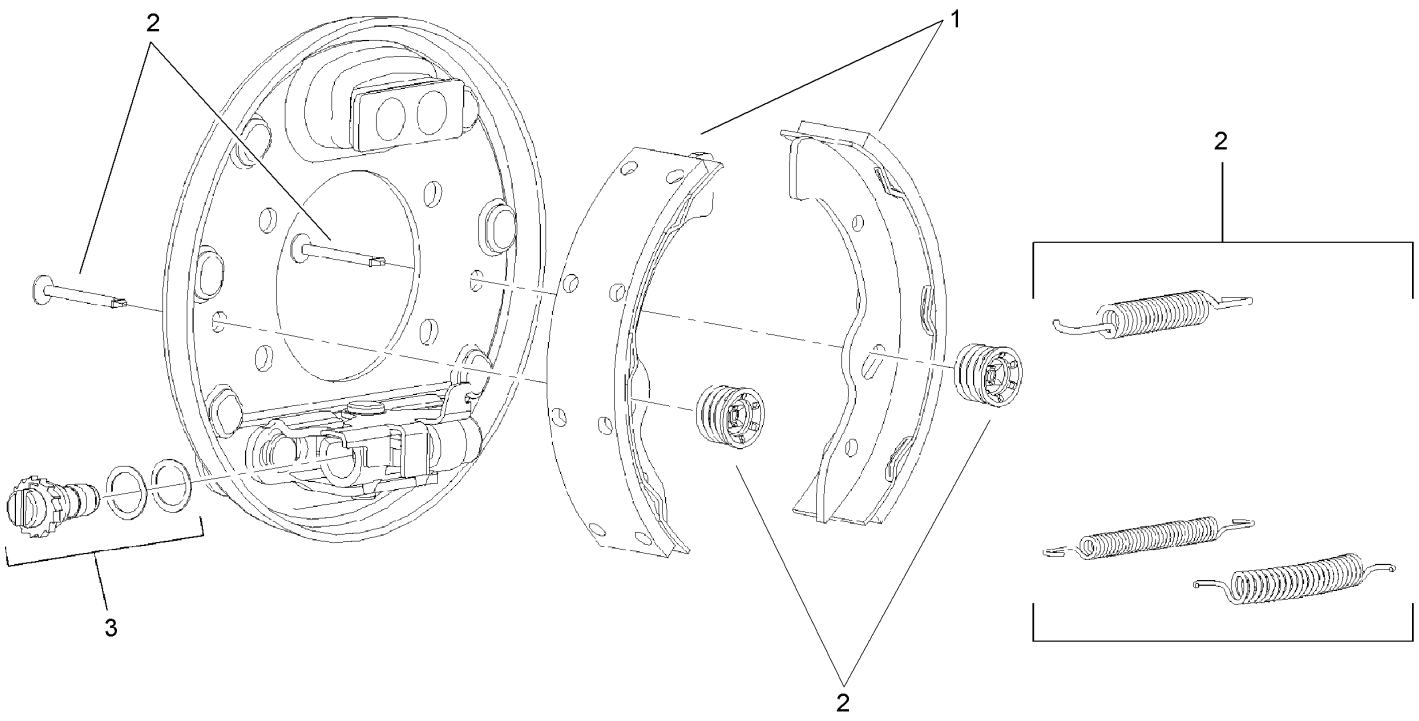


Right Hand Brake Assembly No. 108-2420

Ref	Part No.	Qty.	Description
1	108-6995	1	Shoe And Lining Kit (Set Of 4)
2	104-1244	1	Spring Kit
3	104-1246	1	RH Adjuster Kit

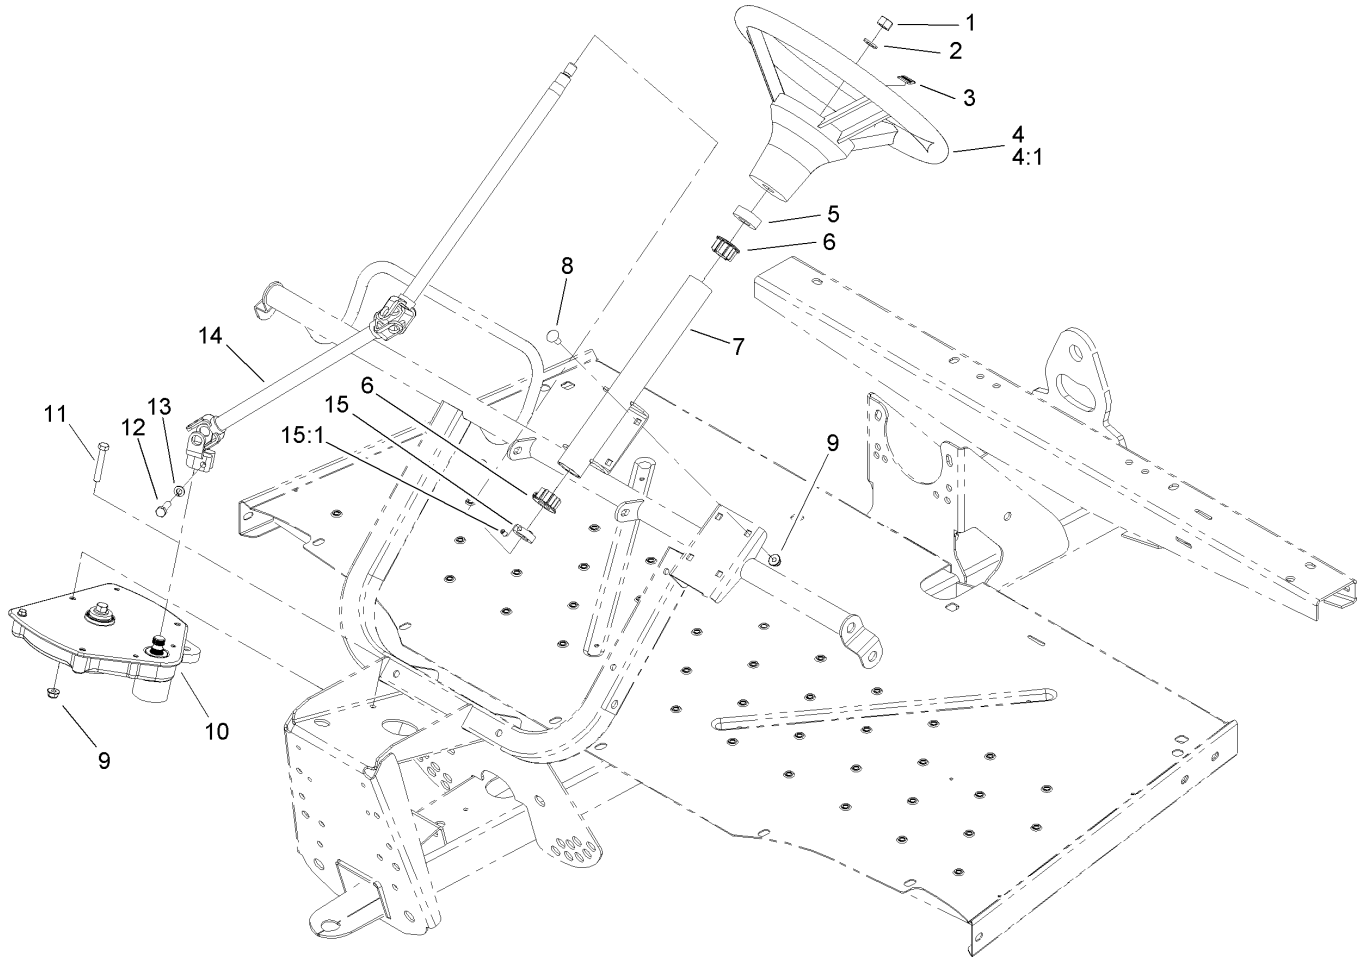


Steering Assembly

Ref	Part No.	Qty.	Description
1	3277-1	1	Nut-Hex
2	48-8070	1	Washer-Lock
3	98-1459	1	Decal
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	21-9260	1	Cover-Dust
6	93-1146	2	Bushing-Upper, Steering
7	99-7651-03	1	Column-Steering
8	3230-1	4	Bolt-CARR
9	104-8300	7	Nut-Flange, NI
10	99-7660	1	Steering Gearbox ASM
11	322-10	3	Screw-HH
12	48-7730	1	Screw-HH
13	3253-4	1	Washer-Lock
14	99-7653	1	Shaft-Steering
15	111383	1	Collar
15:1	3245-32	1	Screw-HSH

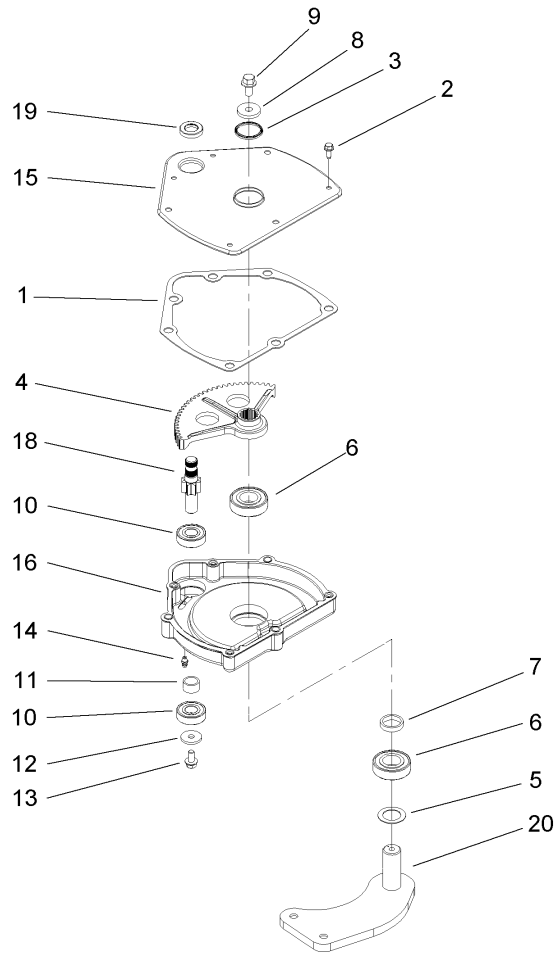


Steering Gearbox Assembly No. 99-7660

Ref	Part No.	Qty.	Description
1	94-2135	1	Gasket
2	32144-10	4	Screw-HWH
3	103118	1	Seal
4	99-7843	1	Sector-Gear
5	3256-42	1	Washer-Flat
6	251-82	2	Bearing-Ball
7	94-2218	1	Spacer-Shaft, Output
8	104-6563	1	Washer-Stepped
9	104-7156	1	Screw-HHF
10	38-7820	2	Bearing-Ball
11	94-2217	1	Spacer-Shaft, Input
12	1-613235	1	Washer
13	98-3498	1	Screw-HH
14	302-5	1	Fitting-Grease
15	99-7656-03	1	Cover-Housing, Steering
16	99-7658	1	Housing-Steering
18	99-7650	1	Gear-Pinion
19	99-7657	1	Seal-Oil
20	99-7601-03	1	Arm-Pitman

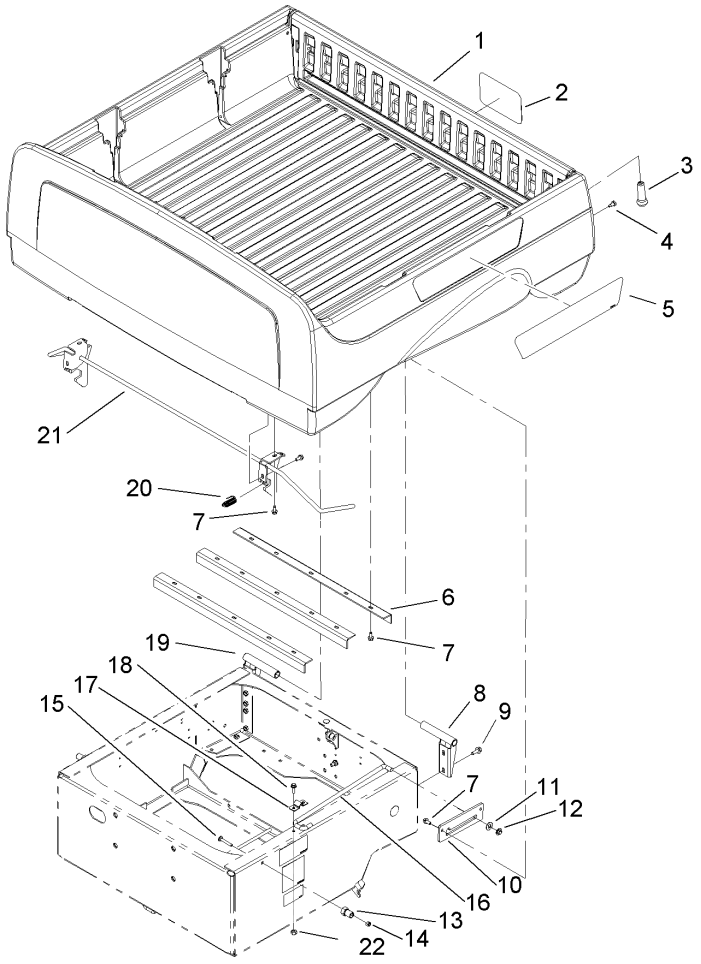

Box and Tailgate Installation Assembly

Ref	Part No.	Qty.	Description
1	104-7204	1	Box And Tailgate ASM
2	104-7213	1	Decal
3	99-7984	2	Knob-Soft Grip, Push-On
4	87-8460	2	Bumper-Rubber
5	104-7265	2	Decal
6	99-7864-03	3	Brace-Box
7	3234-5	18	Screw-HHF
8	99-7308-03	1	LH Pivot Bracket ASM
9	3234-11	4	Screw-HHF
10	99-7894	1	Bracket-Rod, Prop
11	3256-26	1	Washer-Flat
12	32112-14	1	Nut-Push
13	104-7248	2	Pin-Latch
14	3296-29	2	Nut-Lock, NI
15	3230-7	2	Screw-CARR
16	99-7895	1	Rod-Prop
17	99-7896	1	Bracket-U, Prop Rod
18	3234-17	2	Screw-HHF
19	99-7309-03	1	RH Pivot Bracket ASM
20	5-7290	2	Spring-Tension
21	104-7244	1	Rod-Latch
22	104-8300	2	Nut-Flange, NI

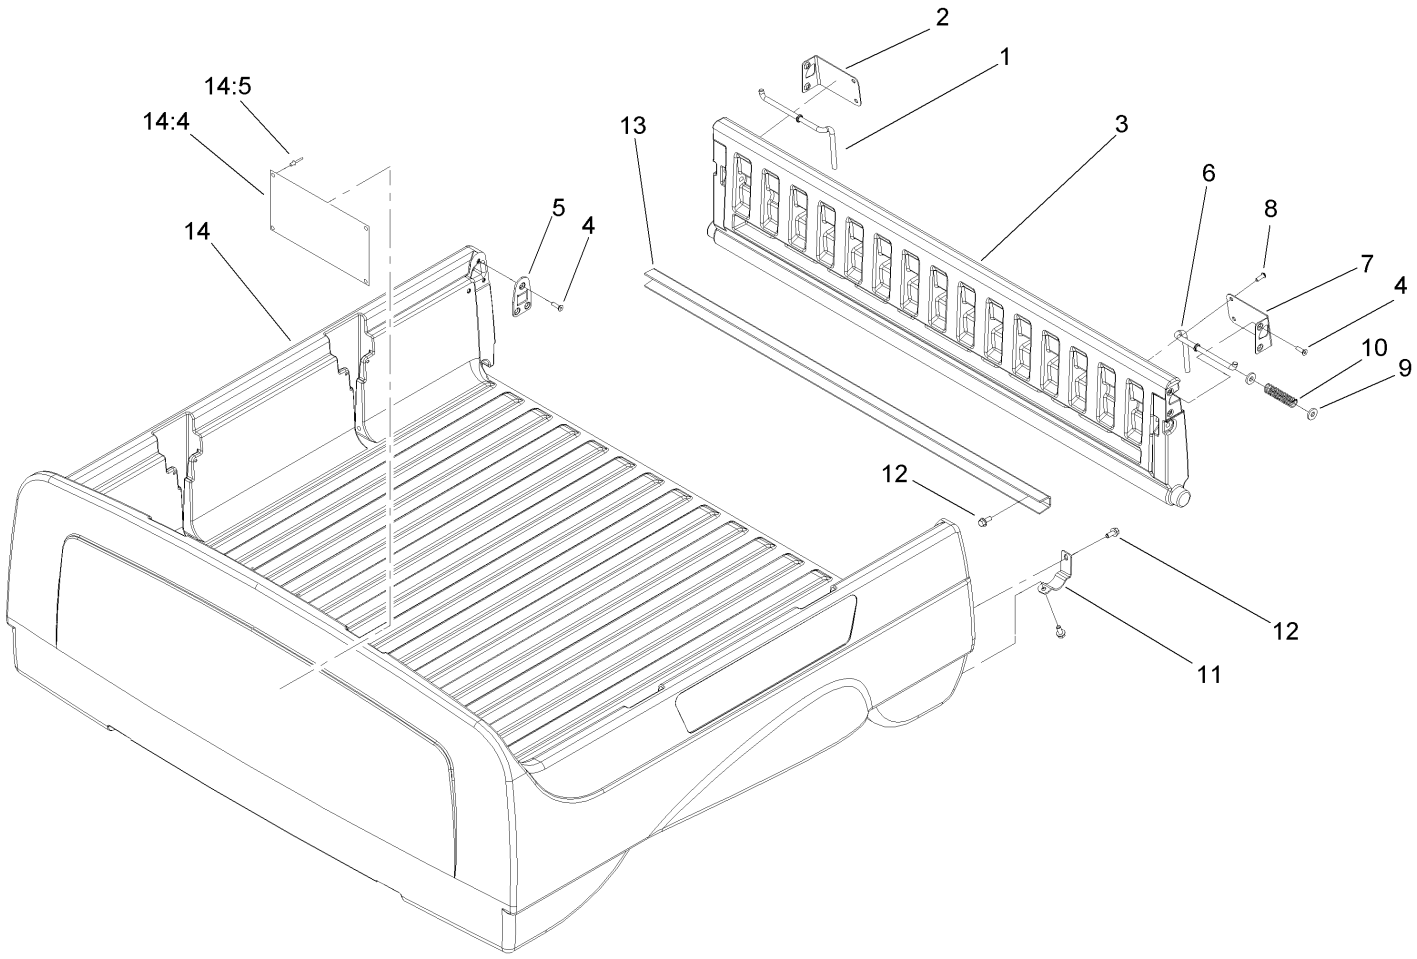

Box and Tailgate Assembly

Ref	Part No.	Qty.	Description
1	99-7860	1	Rod-Latch, Right
2	99-7858	1	Bracket-Tailgate Latch, Right
3	99-7893	1	Tailgate ASM
4	99-7334	10	Screw
5	99-7852	2	Plate-Striker
6	99-7859	1	Rod-Latch, Left
7	99-7857	1	Bracket-Tailgate Latch, Left
8	99-7335	4	Screw
9	99-7861	4	Washer-Latch
10	61-8880	2	Spring
11	99-7286	2	Bracket-Pivot, Tailgate
12	3234-5	10	Screw-HHF
13	99-7867	1	Channel-Tailgate
14	104-7203	1	Box ASM
14:4	99-7954	1	Decal-No Riders
14:5	3290-415	4	Rivet

Attachments and Accessories

For 07280 - Workman e2050 Utility Vehicle

Product Name	Model/Part
Stand Alone Windshield Kit	07221
Electric Bed Lift Kit	07260
Rear Lift Kit	07261
Roll-Over-Protection-System	07276
Receiver Hitch Kit	07278
Heavy-Duty Bumper Kit	07282
12V Converter Kit	07286
Stake Side Kit	07290
Cab	07291
Folding Windshield Kit	07293
Windshield Kit	07294
Heavy-Duty Brushguard and Bumper Kit	07296
Canopy Kit	07297
Tire	104-7289
Brake and Signal Light Kit	107-8020
Vinyl Enclosure	79979

NOTES

NOTES


TORO®