Form Number 3326-999 Rev A

Cab Kit
for Workman® 3000/4000 Series Vehicles

Model No. 07225 - 220000001 and up.
Model No. 07249 - 220000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com


Contents

Description	Page	Description	Page
Front and Rear Window Assembly	 3	Seat Belt Installation Assembly	 6
Frame Assembly	 4	Radiator Modification Assembly	 7

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

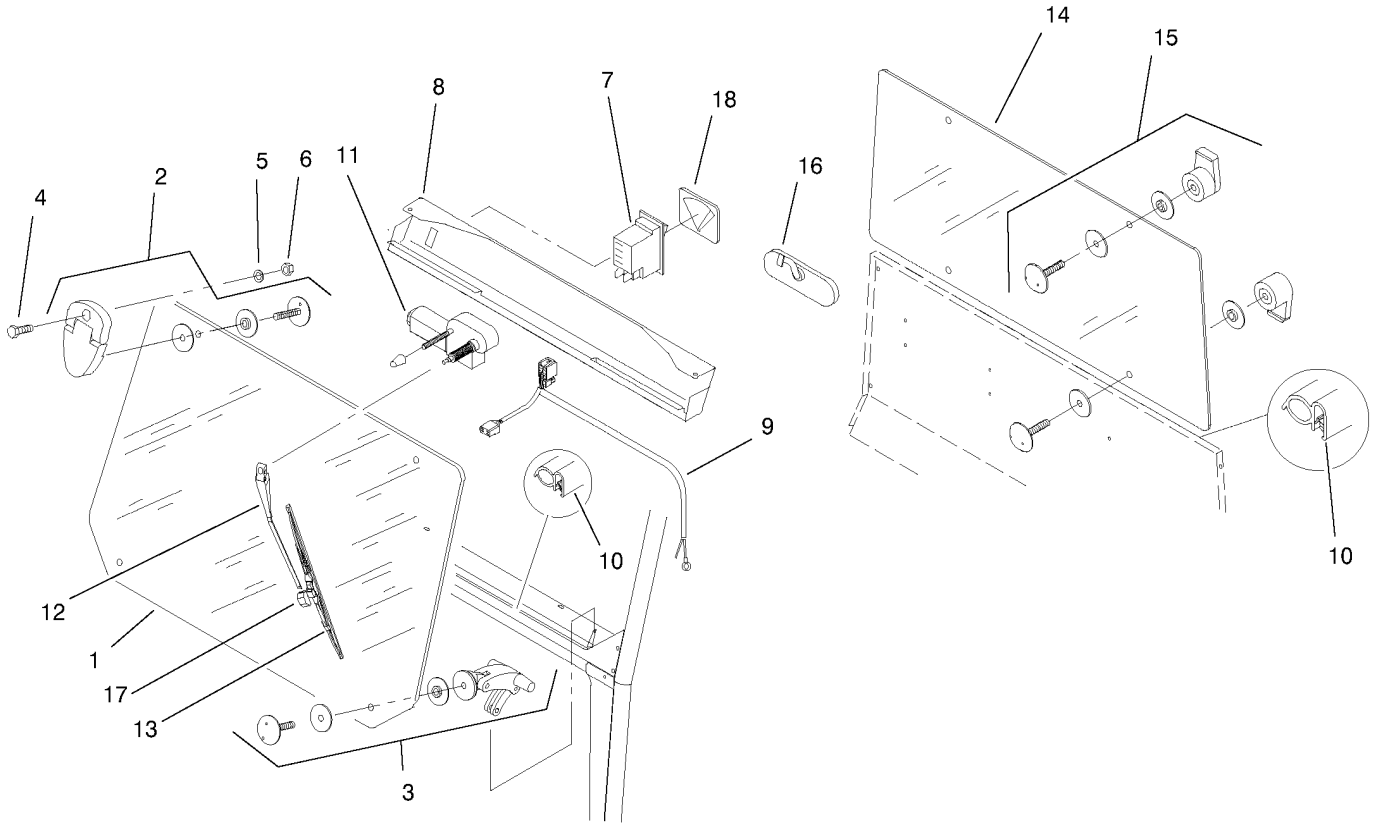

Front and Rear Window Assembly


Ref	Part No.	Qty.	Description
1	95-7301	1	Glass-Front
2	95-7336	2	Hinge
3	95-7337	2	Opener-Window
4	33114-045	2	Screw-HH
5	3256-23	2	Washer-Flat
6	48-9510	2	Nut
7	95-7344	1	Switch-Wiper
8	100-9400-06	1	Panel-Cover, Upper (Only On: 07225)
8	95-7345-01	1	Panel-Cover, Upper (Only On: 07249)
9	95-7372	1	Harness-Wire
10	95-7338	2	Seal
11	95-7339	1	Motor-Wiper
12	95-7340	1	Arm-Wiper
13	95-7341	1	Blade-Wiper
14	95-7303	1	Glass-Rear
15	95-7342	4	Glass Fixation Kit
16	99-1098	1	Mirror-Rear View (Only On: 07225)
17	99-1101	1	Connector-Wiper
18	100-9379	1	Lens-Wiper

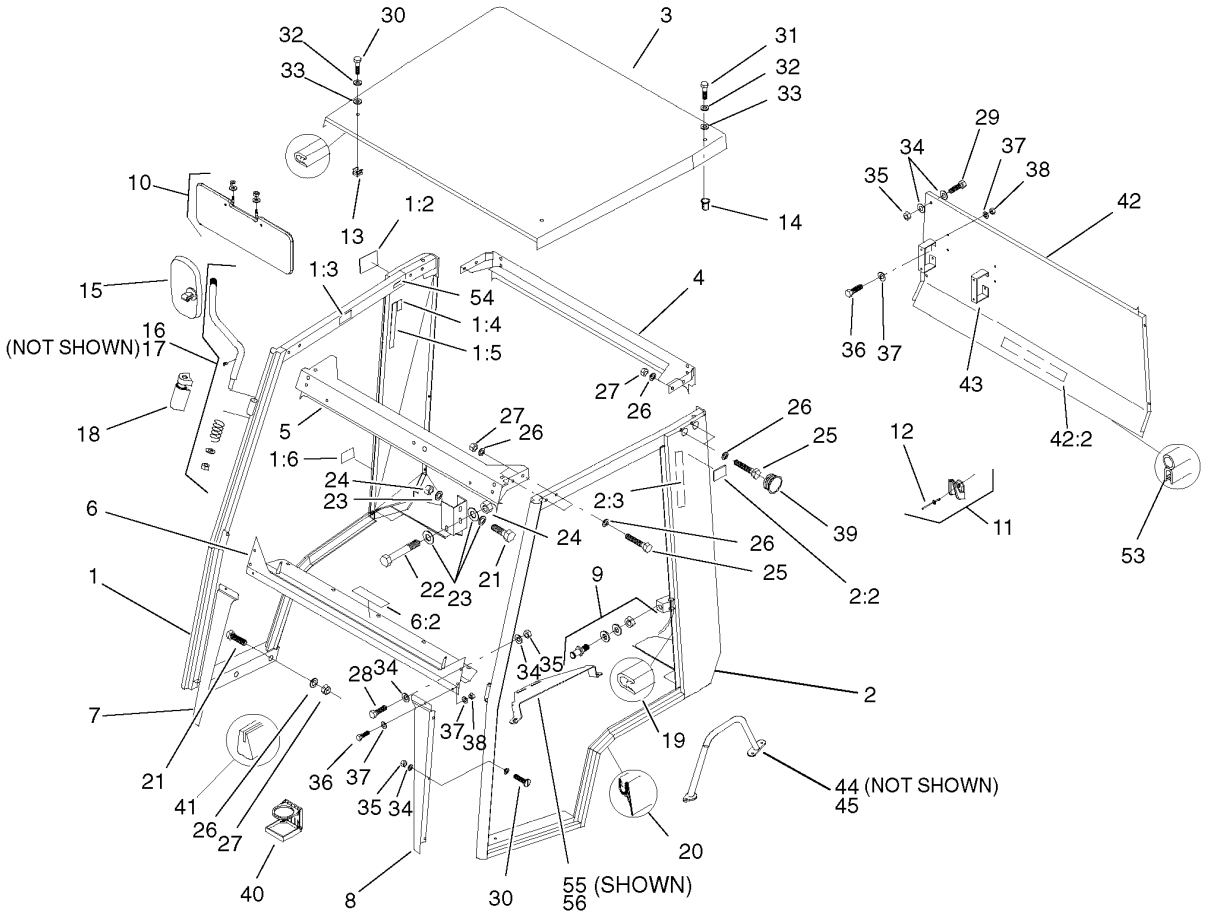

Frame Assembly


Ref	Part No.	Qty.	Description
1	100-9388	1	RH Side Panel ASM (Only On: 07225)
1	100-9386	1	RH Side Panel ASM (Only On: 07249)
1:2	67-1300	1	Decal
1:3	94-5275	1	Decal (G. V. W.)
1:4	94-5276	1	Decal-Rollover
1:5	87-5980	1	Decal-ROPS
1:6	87-5930	1	Decal-Caution, Fuel
2	100-9387	1	LH Side Panel ASM (Only On: 07249)
2	100-9389	1	LH Side Panel ASM (Only On: 07225)
2:2	67-1300	1	Decal
2:3	87-5980	1	Decal-ROPS
3	95-7315-06	1	Roof
4	95-7316-03	1	Bar-Front
5	95-7317-03	1	Bar-Front
6	100-9391	1	Front Dash ASM
6:2	94-5274	1	Decal-Danger
7	95-7319-03	1	Molding-RH
8	95-7320-03	1	Molding-LH
9	95-7321	2	Striker
10	95-7322	2	Visor-Sun (Only On: 07249)
11	95-7323	2	Hook-Coat

Ref	Part No.	Qty.	Description
12	3290-382	2	Rivet-Pop
13	95-7304	2	Nut-Special, Spring Clip
14	95-7343	2	Nut-Special, Barrel
15	95-7324	2	Mirror (Only On: 07249)
16	95-7325	1	Support-RH (Only On: 07249)
17	95-7326	1	Support-LH (Only On: 07249)
18	95-7327	2	Cover (Only On: 07249)
19	95-7328	2	Seal
20	95-7373	2	Seal-Lower, Cab
21	33116-035	6	Screw-HH
22	33116-090	4	Screw-HH
23	3256-26	12	Washer-Flat
24	48-9540	6	Nut-Lock, Hex NI
25	33115-060	8	Screw-HH
26	3256-4	28	Washer-Flat
27	48-9520	14	Nut
28	33114-020	4	Screw-HH
29	33114-035	6	Screw-HH
30	33114-045	8	Screw-HH
31	43-3220	2	Capscrew-HH
32	95-7370	4	Washer-Seal
33	95-7371	4	Washer-Seal
34	3256-23	32	Washer-Flat
35	48-9510	16	Nut

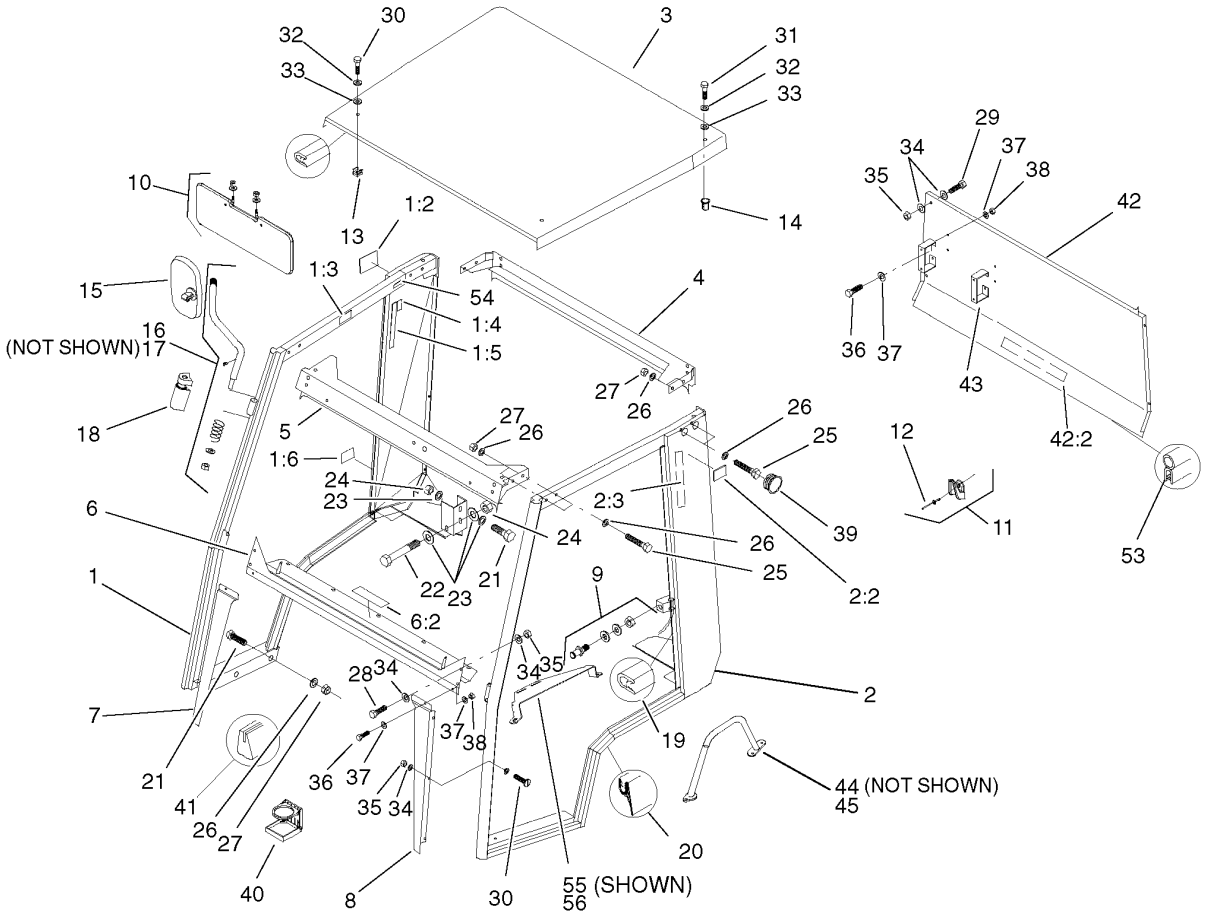

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
36	33113-016	10	Screw-HH
37	3256-16	20	Washer-Flat
38	49-7810	10	Nut-Lock
39	95-7329	4	Plug
40	95-7330	1	Holder-Cup
41	95-7331	1	Seal
42	100-9390	1	Rear Panel ASM
42:2	87-7930	1	Decal-Warning
43	95-7333-03	1	Bracket
44	95-7334-06	1	Bail-RH (Only On: 07225)
44	95-7334-01	1	Bail-RH (Only On: 07249)
45	95-7335-01	1	Bail-LH (Only On: 07249)
45	95-7335-06	1	Bail-LH (Only On: 07225)
53	95-7374	1	Seal-Rear, Lower
55	105-1703-03	1	Mount-Seat, LH
56	105-1704-03	1	Strap-Seat Pad, RH

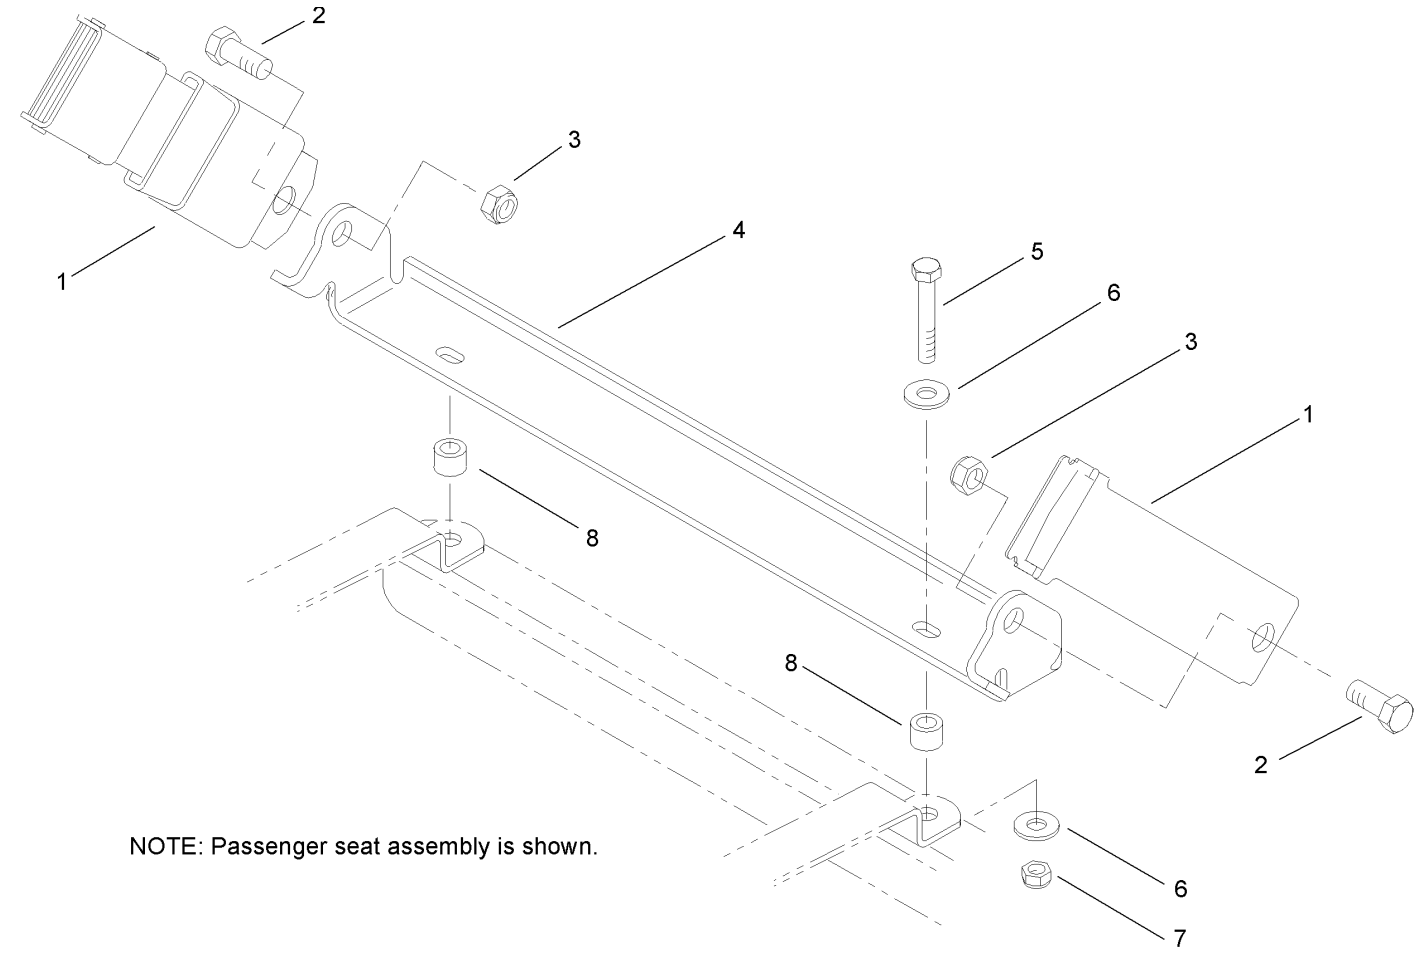

NOTE: Passenger seat assembly is shown.

Seat Belt Installation Assembly

Ref	Part No.	Qty.	Description
1	110-0413	2	Seatbelt-Retractable
2	3212-4	4	Screw-HH
3	3296-38	4	Nut-Lock, NI
4	87-7280-03	2	Bracket-Belt, Seat
5	322-10	4	Screw-HH
6	3256-3	8	Washer-Flat
7	3296-29	4	Nut-Lock, NI
8	52-2480	4	Spacer-Wheel

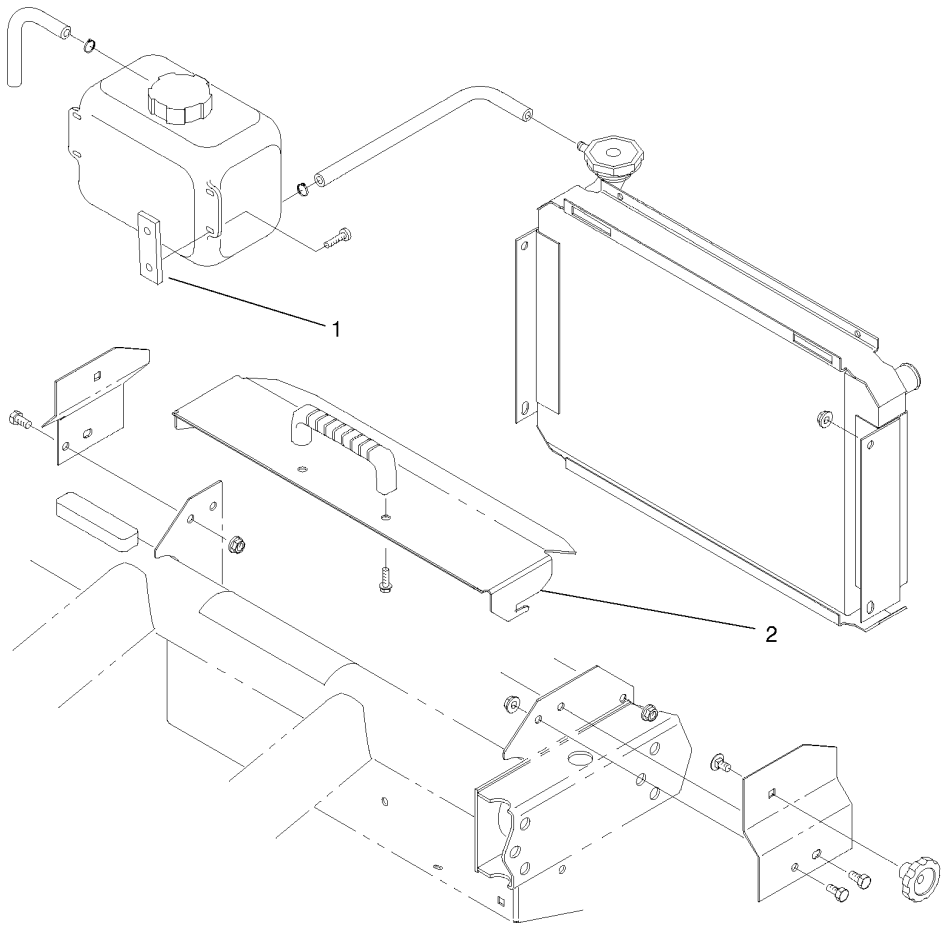

Radiator Modification Assembly

Ref	Part No.	Qty.	Description
1	94-5280-03	1	Spacer-Tank, Overflow
2	94-5273-03	1	Cover-Radiator, Cab


TORO®