Form Number 3355-310 Rev A

XL 320 Lawn Tractor

Model No. 71209 - 250005001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame and Body Assembly	3
Hood and Tower Assembly	4
Rear Body and Seat Assembly	5
Steering Component Assembly	6
Fixed Steering Assembly	7
OHV Engine System Component Assembly	8
Traction Clutch Assembly	9
Shifter Assembly	10
5 Speed Transaxle Assembly	11
32 Inch Deck Component Assembly	12
32 Inch Deck Blade Drive and Brake Assembly	13
Height-of-Cut Assembly	14
Electrical Component Assembly	15
Engine Assembly	16
32 Inch Deck Components Assembly	17
Cylinder Assembly Briggs and Stratton 219907-0170-E1	18
Cylinder Head Assembly Briggs and Stratton 219907-0170-E1	19
Crankshaft Assembly Briggs and Stratton 219907-0170-E1	20
Crankcase Assembly Briggs and Stratton 219907-0170-E1	21
Oil Filter, Tube and Pump Assembly Briggs and Stratton 219907-0170-E1	22
Carburetor Assembly Briggs and Stratton 219907-0170-E1	23
Governor Assembly Briggs and Stratton 219907-0170-E1	24
Blower Housing Assembly Briggs and Stratton 219907-0170-E1	25
Starter Assembly Briggs and Stratton 219907-0170-E1	26
Gasket Assembly Briggs and Stratton 219907-0170-E1	27
Carburetor Overhaul Kit Assembly Briggs and Stratton 219907-0170-E1	28
Attachments and Accessories List	29


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over-protection-system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head


Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Included in Engine Gasket Set-Ref. 358.
❹ Included in Valve Gasket Set-Ref. 1095.
❺ Included in Carburetor Overhaul Kit-Ref. 121.
❻ Obtain from your local Briggs & Stratton dealer

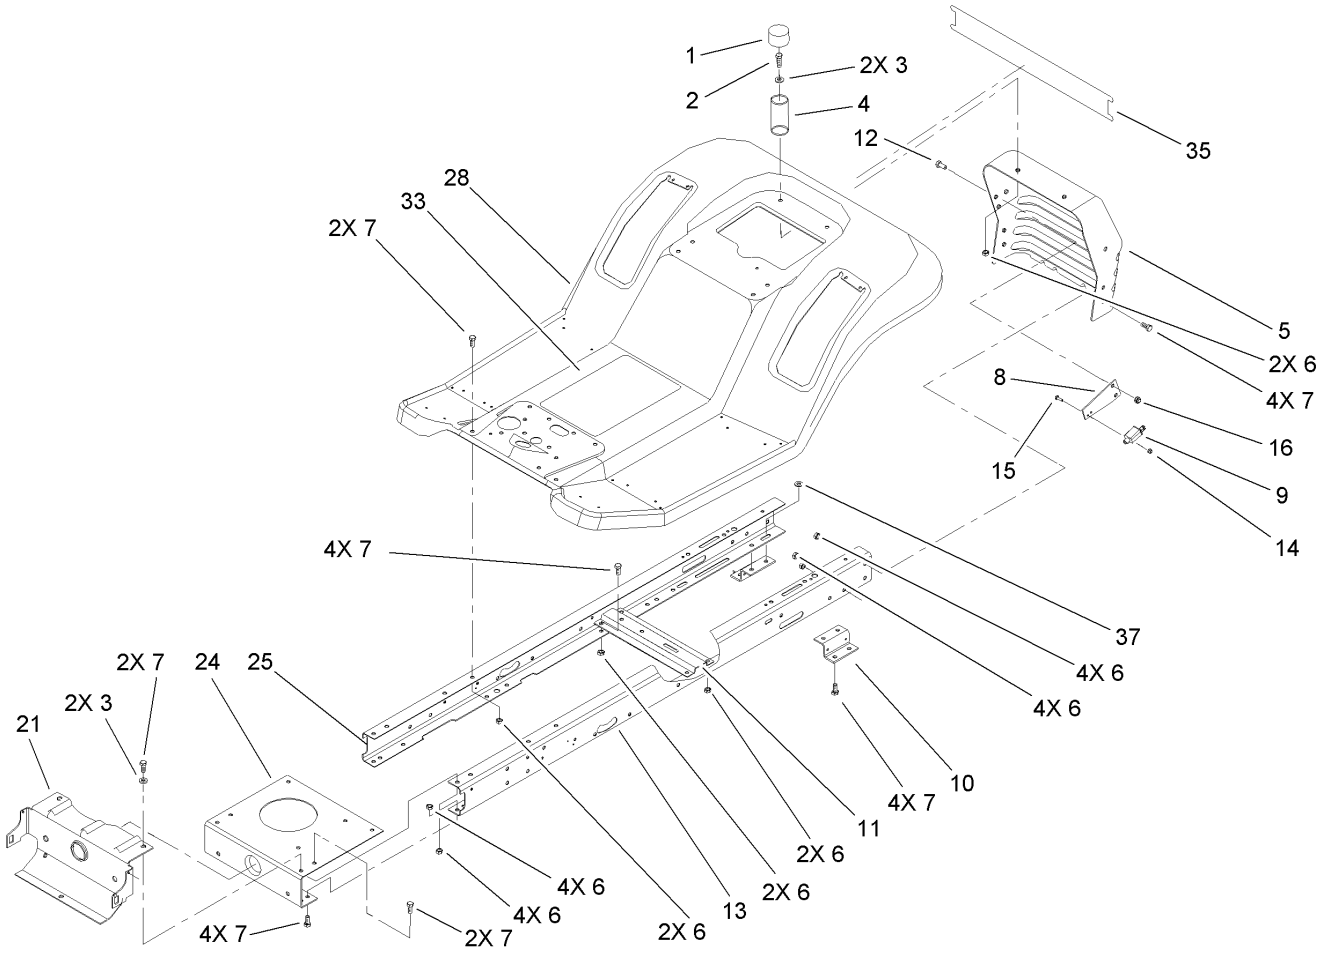

Frame and Body Assembly


Ref	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	4	Washer-Flat
4	88-6220	2	Spring-Compression
5	99-2957-03	1	Panel-Rear, Hitch
6	3296-29	24	Nut-Lock, NI
7	322-3	22	Screw-HH
8	99-2953-03	1	Plate-Switch
9	95-1653	1	Switch-Pole, Single
10	94-1967-03	2	Bracket-Mounting, Transmission
11	88-4620-03	1	Bracket-Idler, Pivot
12	322-3	2	Screw-HH
13	99-2958-03	1	Rail-Frame, LH
14	3296-1	2	Nut-Lock
15	3290-392	2	Screw-HHF
16	3296-29	2	Nut-Lock, NI
21	98-3575-03	1	Support-Front, Axle
24	88-4630-03	1	Plate-Engine, Mounting
25	99-2959-03	1	Rail-Frame, RH
28	99-2971	1	Rear Body ASM
33	93-6675	1	Decal-Gear
35	105-2498	1	Decal
37	3256-23	2	Washer-Flat

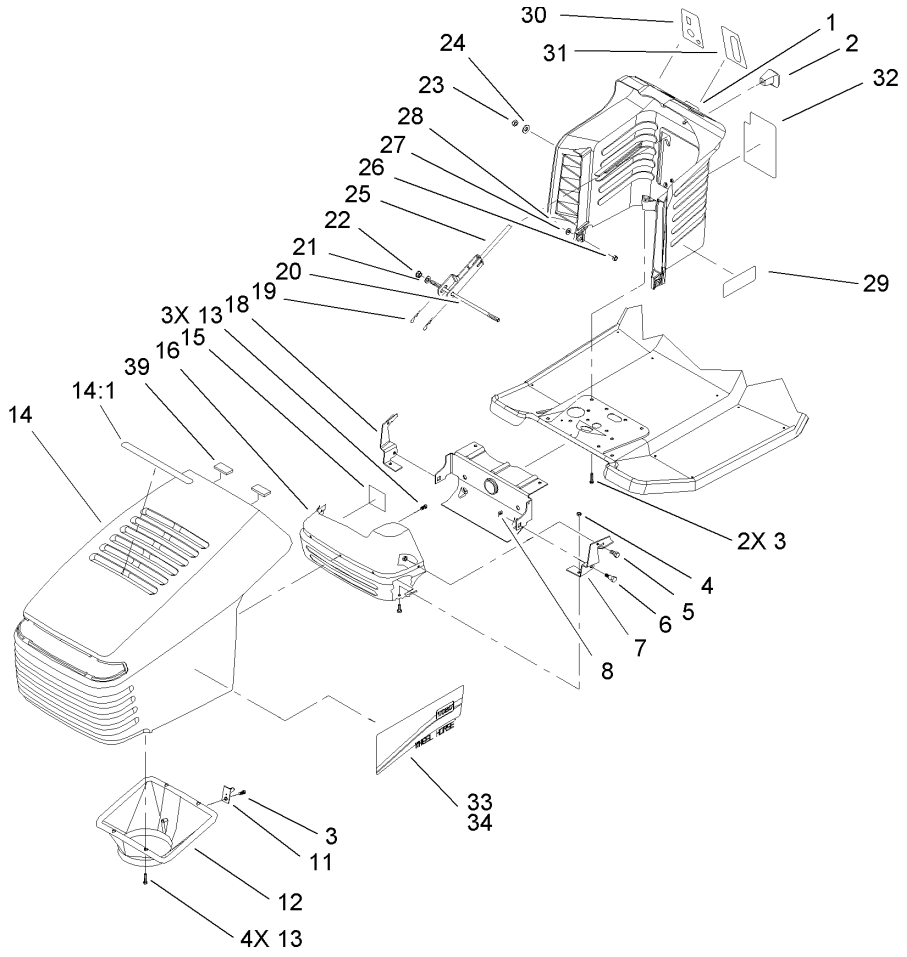

Hood and Tower Assembly

Ref	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering
2	94-5565	1	Knob-Shift
3	46-8091	3	Screw-HWH
4	3296-42	4	Nut-Lock, NI
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-Hinge, LH
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch-Pin
12	93-3891	1	Duct-Air, Hood
13	46-8090	7	Screw-Plastite
14	92-8650	1	Hood ASM
14:1	92-5748	1	Decal
15	92-5782	3	Tape-Foil
16	93-3864-03	1	Shield-Heat
18	88-6040-03	1	Bracket-Hinge, RH
19	3290-307	2	Pin-Hair
20	100-7401	1	Rod-Tower, Pivot
21	3256-24	2	Washer-Flat
22	3218-3	2	Nut-Jam
23	100-7402	2	Nut-Cap
24	100-7403	2	Washer-Flat
25	88-5190-03	1	Lever-Deck, Engage
26	3296-29	2	Nut-Lock, NI


Ref	Part No.	Qty.	Description
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH
29	108-7802	2	Decal-Tower
30	99-8142	1	Decal-Ignition
31	92-5730	1	Decal-Throttle
32	93-6673	1	Decal-Deck, Engage
33	105-2497	1	Decal
34	105-2496	1	Decal
39	94-1980	2	Foam-Hood

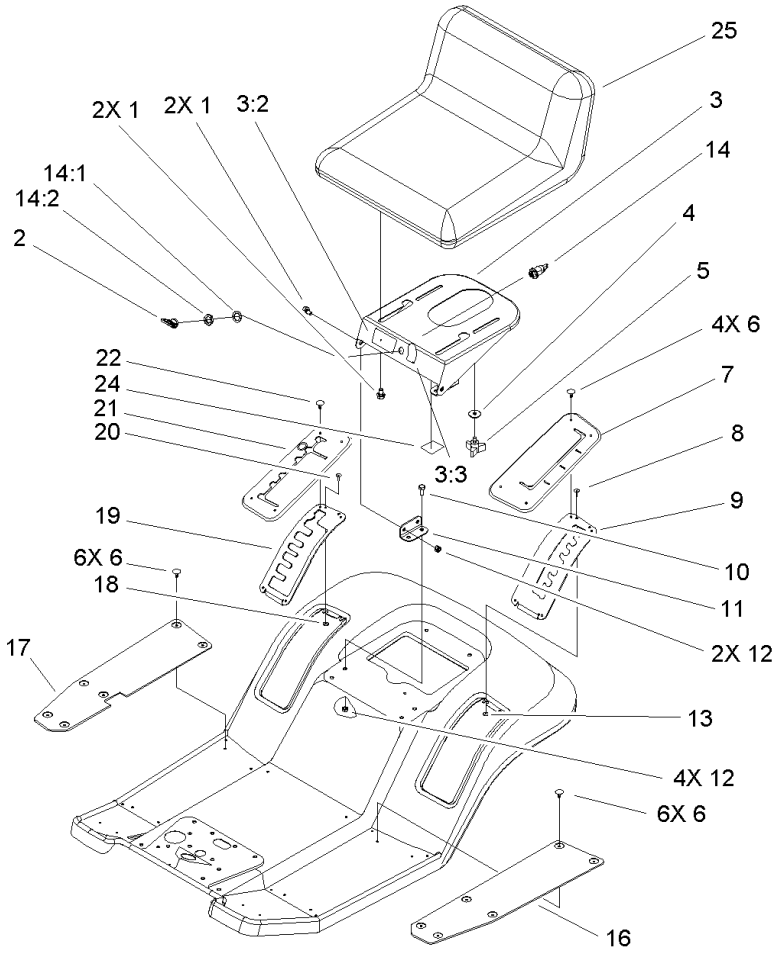

Rear Body and Seat Assembly

Ref	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	63-8360	1	Key-Ignition
3	106-6437	1	Seat Support ASM
3:2	99-2986	1	Decal-Danger
3:3	99-5340	1	Decal-Switch
4	5-4460	2	Washer-Pivot
5	92-9674	2	Knob
6	3290-479	16	Fastener-Panel
7	93-7657	1	Cover-HOC
8	3290-282	2	Rivet-Pop
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Hinge, Seat
12	3296-29	6	Nut-Lock, NI
13	3269-26	2	Washer-Flat
14	46-5780	1	Switch-Starter
14:1	3254-5	1	Washer-Tooth
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-Foot, LH
17	88-5220	1	Mat-Foot, RH
18	3269-26	2	Washer-Flat
19	88-5020-03	1	Plate-Gate, Shift
20	3290-282	2	Rivet-Pop
21	93-7656	1	Cover-Shift


Ref	Part No.	Qty.	Description
22	3290-479	4	Fastener-Panel
24	105-2699	1	Decal-Noise
25	106-6439	1	Seat-11 Inch

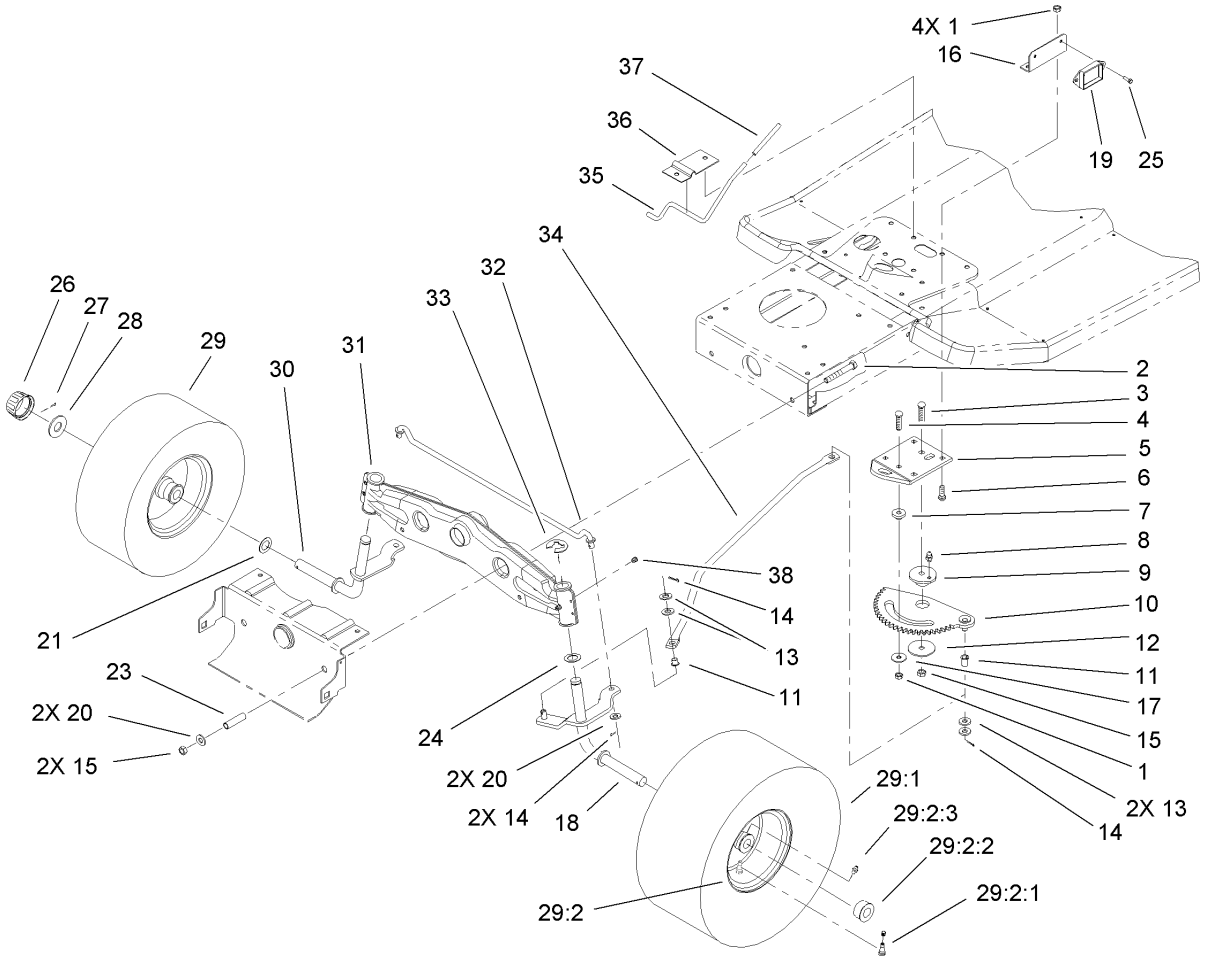

Steering Component Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	2	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	LH Spindle ASM
19	99-3700	1	Module
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3-6498	2	Washer-Thrust
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
❷29		2	Front Wheel And Tire ASM
29:1	99-2992	1	Tire
29:2	88-4360	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:99	232-38	1	Tube
30	92-7889-03	1	RH Spindle ASM
31	17-3579-03	1	Front Axle ASM
32	88-5380	1	Tie Rod-Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking
38	302-5	2	Fitting-Grease

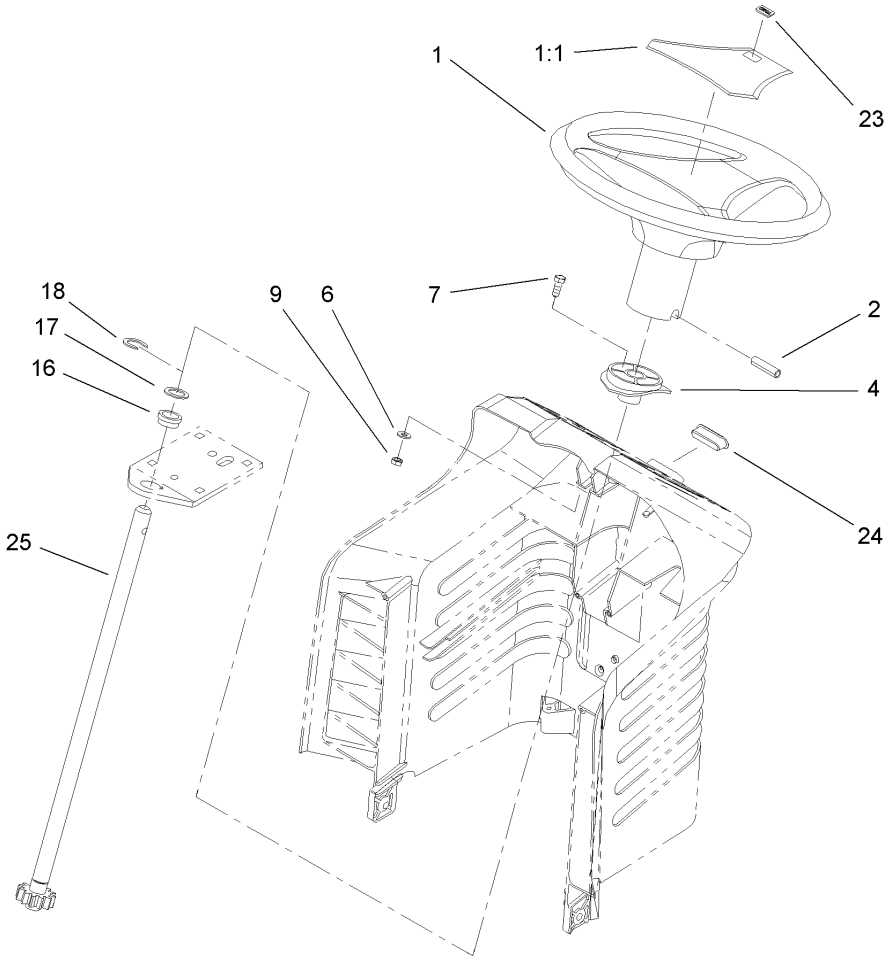

Fixed Steering Assembly


Ref	Part No.	Qty.	Description
1	98-1467	1	Wheel-Steering
1:1	98-1468	1	Cover-Wheel, Steering
2	32121-111	1	Pin-Roll
4	88-4190	1	Bushing-Sliding
6	3256-22	2	Washer-Flat
7	321-4	2	Screw-HH
9	3296-42	2	Nut-Lock, NI
16	88-5150	1	Bearing-Flange
17	3-6498	1	Washer-Thrust
18	32151-48	1	E-Ring
23	98-1459	1	Decal
24	88-4150	1	Plug
25	88-6380	1	Shaft-Steering, Long

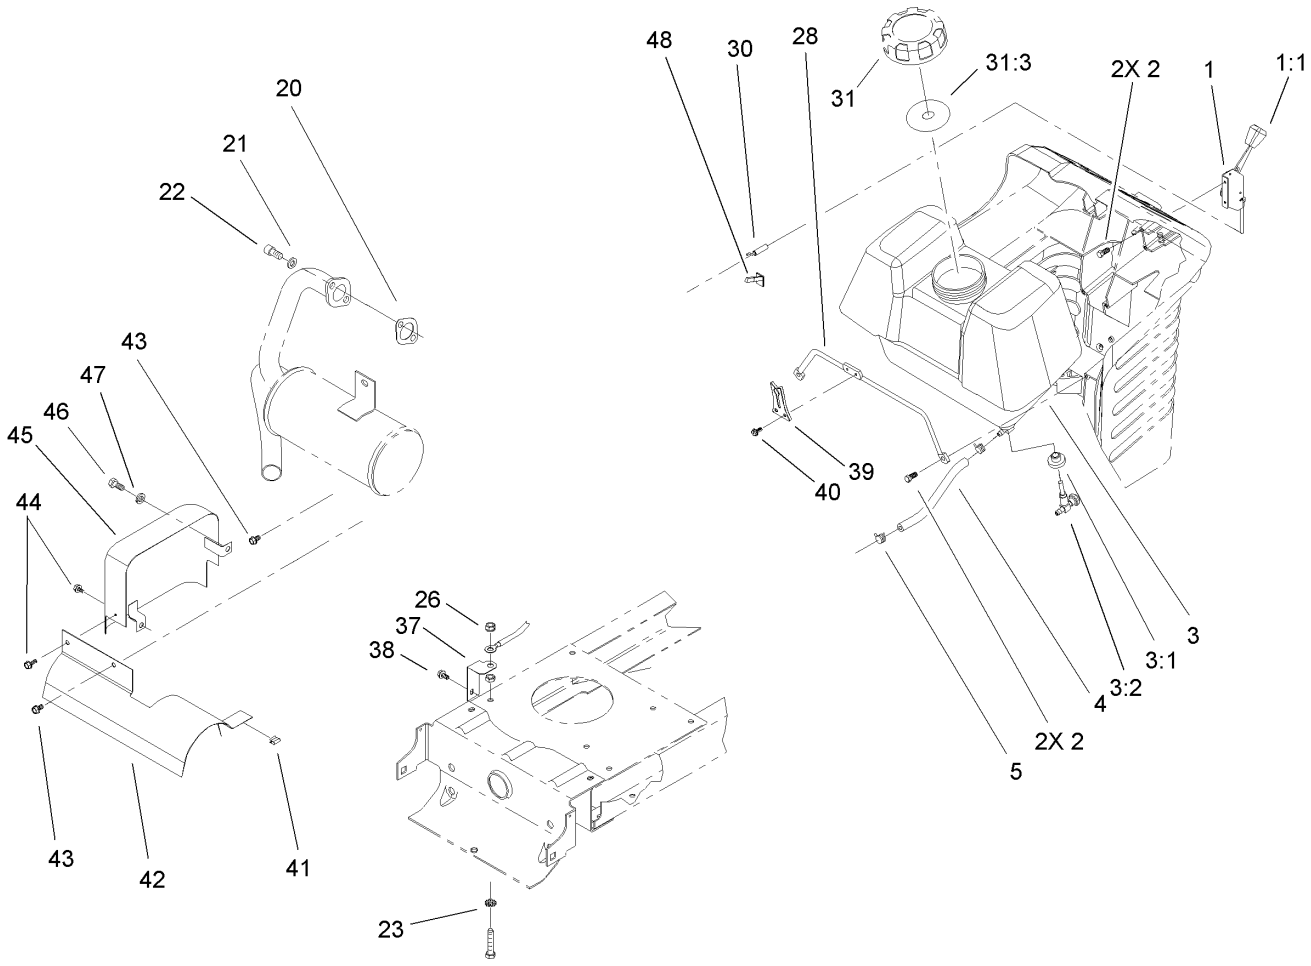

OHV Engine System Component Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	107-9297	1	Fuel-Hose, 8.5 Inch
5	2412-98	2	Clamp
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod-Tank, Gas
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	105-2462-03	1	Shield-Muffler
43	9266714	2	Screw-HWH


Ref	Part No.	Qty.	Description
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock
48	88-4490	1	Reducer-Throttle, Rpm

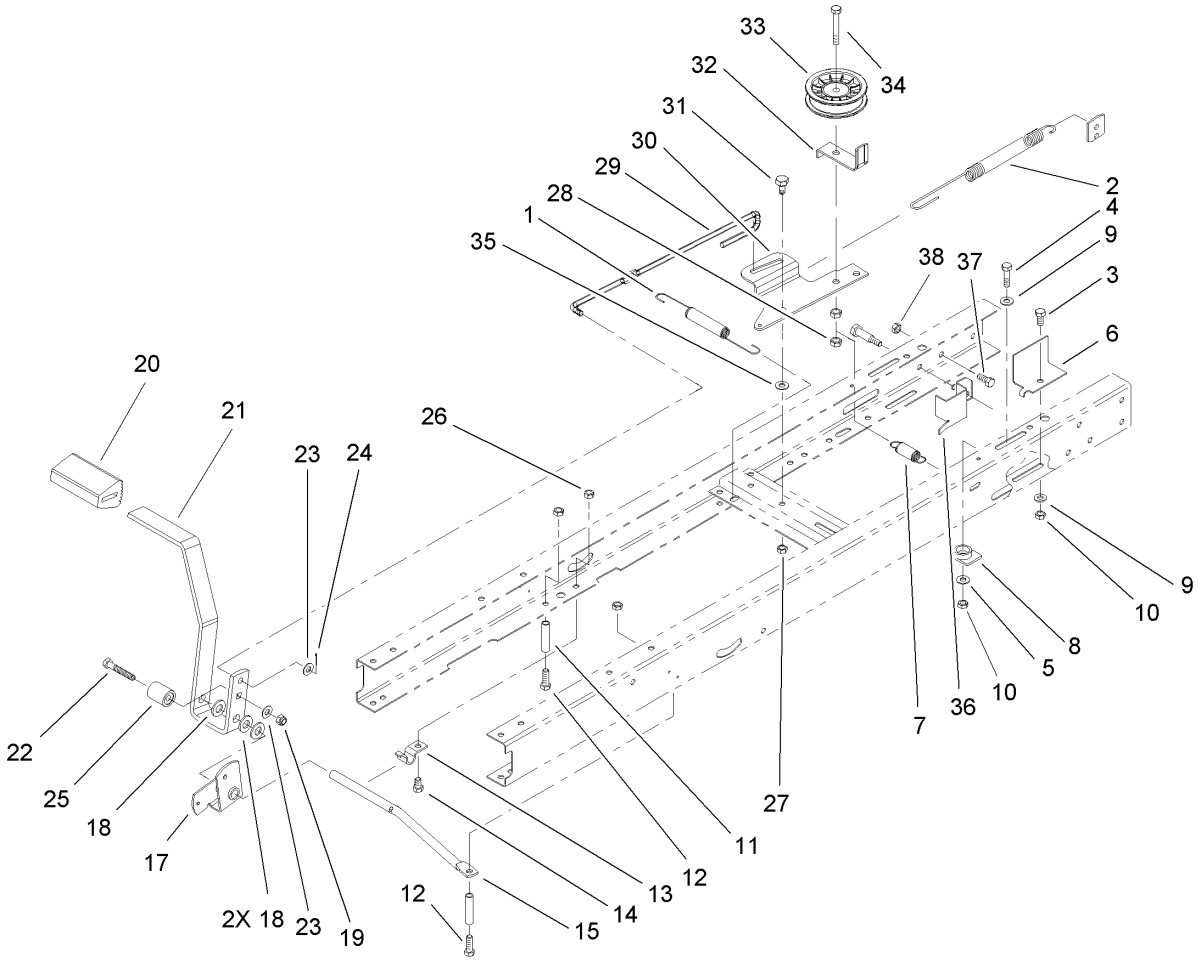

Traction Clutch Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	94-4295	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Pivot
6	94-5433	1	Bracket-Belt, Guide
7	88-6330	1	Spring-Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock, NI
11	46-5590	2	Tubing-Spacer
12	322-12	2	Screw-HH
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	1	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
17	88-4800-03	1	Bellcrank
18	3256-26	3	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch / Brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Plastic

Ref	Part No.	Qty.	Description
26	3296-29	3	Nut-Lock, NI
27	3296-29	1	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch / Brake
30	88-6070	1	Arm-Idler
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-10	1	Screw-HH
35	5-4460	1	Washer-Pivot
36	94-4926	1	Bracket-Belt, Guide
37	322-3	1	Screw-HH
38	3296-29	1	Nut-Lock, NI

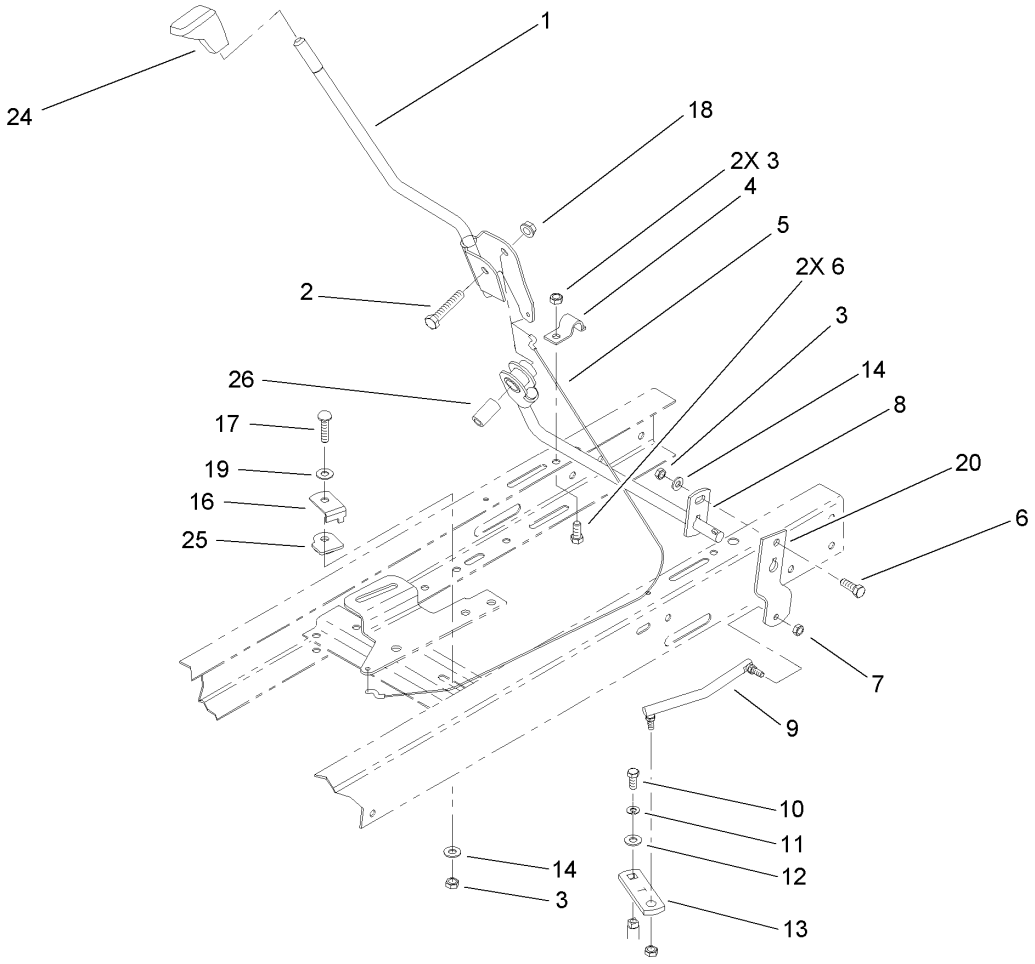


Shifter Assembly

Ref	Part No.	Qty.	Description
1	94-1991-03	1	Lever-Shift ASM
2	323-10	1	Screw-HH
3	3296-29	4	Nut-Lock, NI
4	88-4810	2	Clamp-Shift, Pivot
5	55-9321	1	Cable-Clutch
6	322-3	3	Screw-HH
7	3296-3	2	Nut-Lock
8	94-1993-03	1	Shift Pivot ASM
9	94-5432	1	Link-Shift
10	329-23	1	Screw-HH
11	3253-3	1	Washer-Lock
12	7-5461	1	Spacer
13	88-5340	1	Lever-Shift
14	3256-23	2	Washer-Flat
16	88-5930	1	Keeper-Cable
17	3230-3	1	Screw-CARR
18	3296-39	1	Nut-Lock, NI
19	3256-25	1	Washer-Flat
20	94-1968	1	Lever-Pivot, Shift
24	94-5565	1	Knob-Shift
25	84-5610	1	Guide-Cable
26	94-1997	1	Bushing-Shift, Lever

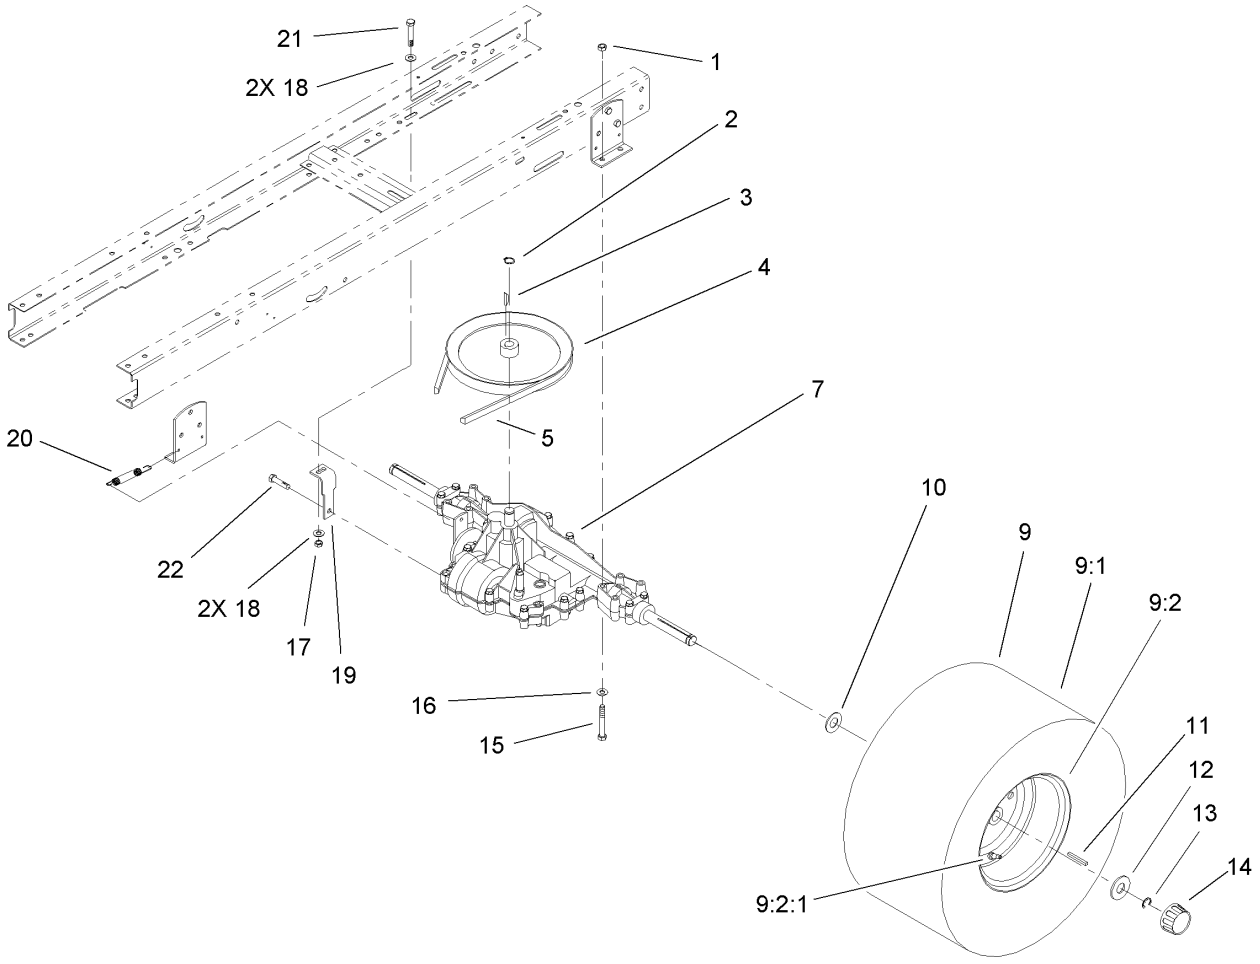

5 Speed Transaxle Assembly


Ref	Part No.	Qty.	Description
1	3296-29	4	Nut-Lock, NI
2	32120-64	1	Ring-Snap, External
3	3257-23	1	Key-Woodruff
4	88-4840	1	Pulley-Transmission
5	94-4291	1	V Belt-Traction
7	94-6022	1	Transaxle
❷9		2	Rear Wheel And Tire ASM
9:1	99-2336	1	Tire
9:2	88-4380	1	Rim ASM
9:2:1	232-27	1	Stem-Valve
❶9:99	231-91	1	Tube
10	3-6498	2	Washer-Thrust
11	7-0036	2	Key-Square
12	28-2480	2	Washer
13	32151-48	2	E-Ring
14	61-9780	2	Cap-Hub
15	322-12	4	Screw-HH
16	3256-23	4	Washer-Flat
17	3296-29	2	Nut-Lock, NI
18	3256-23	4	Washer-Flat
19	94-1969	2	Strap-Torque
20	26-6701	1	Spring-Return, Brake
21	322-3	2	Screw-HH
22	32144-14	2	Screw-HWH

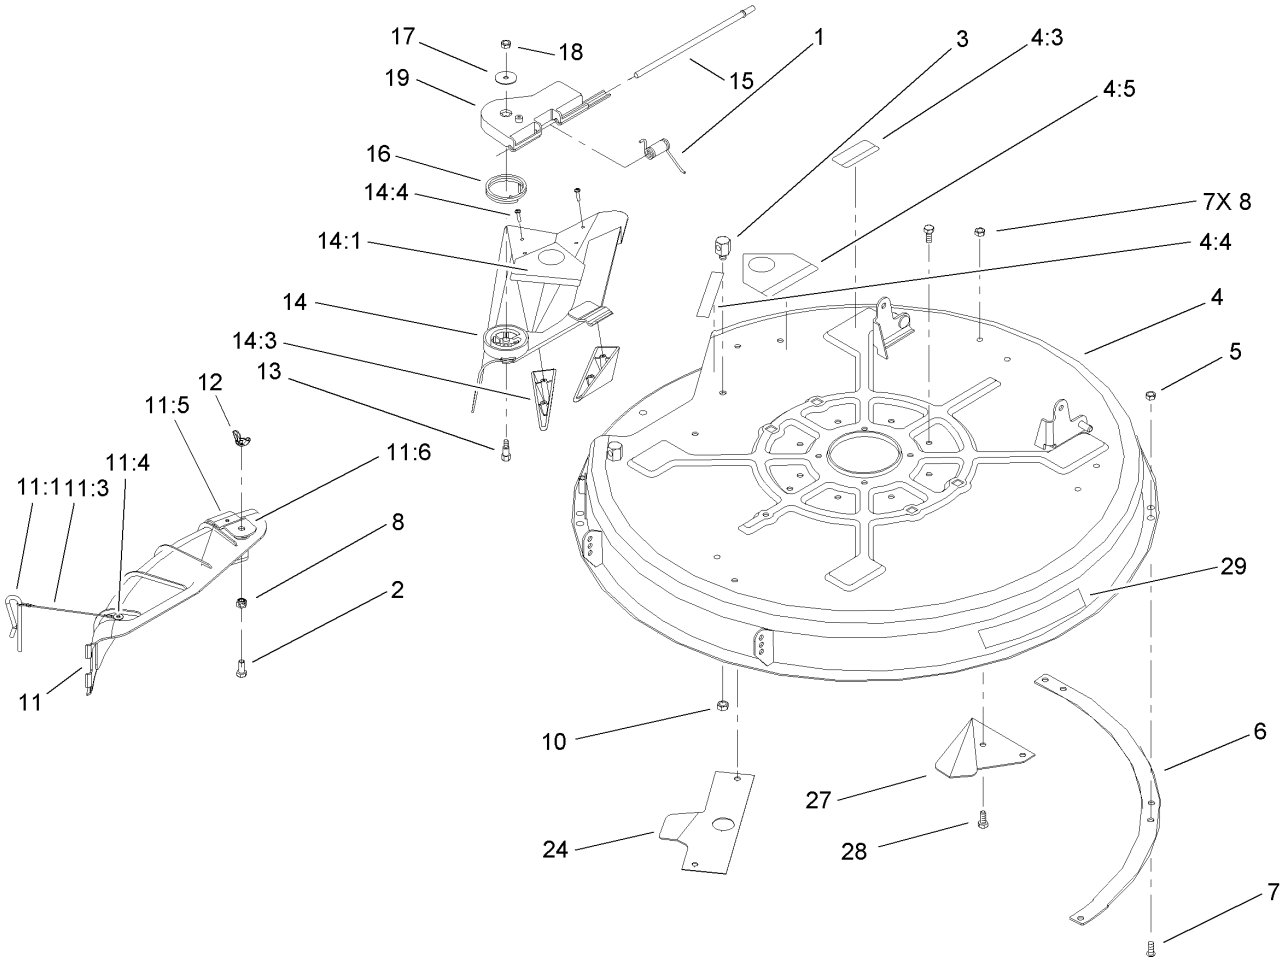

32 Inch Deck Component Assembly

Ref	Part No.	Qty.	Description
1	92-2493	1	Spring
2	322-6	1	Screw-HH
3	28-7350	1	Post-Pivot
4	95-7483	1	Deck ASM
4:3	93-6674	2	Decal-Warning
4:4	93-7009	1	Decal-Danger
4:5	93-7010	2	Decal-Danger
5	3296-29	8	Nut-Lock, NI
6	80-4490-03	4	Ring-Deck
7	322-3	8	Screw-HH
8	3296-29	8	Nut-Lock, NI
10	3296-59	1	Nut-Lock, NI
11	82-6151	1	Discharge Cover ASM
11:1	28-8130	1	Pin-Locking, Chute
11:3	28-8070	1	Lanyard
11:4	3290-282	2	Rivet-Pop
11:5	3256-49	1	Washer-Flat
11:6	83-7010-03	1	Brace
12	32103-2	1	Nut-Wing
13	92-8916	1	Bolt-Shoulder
14	93-7694	1	32 Inch Deflector ASM
14:1	93-7010	1	Decal-Danger
14:3	93-7696	2	Kicker
14:4	93-0231	4	Screw-PPH


Ref	Part No.	Qty.	Description
15	88-6150	1	Rod-Hinge, Deflector
16	88-6160	1	Spring-Torsion
17	3256-58	1	Washer-Flat
18	3296-42	1	Nut-Lock, NI
19	88-4540	1	Pivot-Hinge, Deflector
24	92-2494-03	1	Ramp-Deflector
27	80-2630-03	4	Kicker
28	322-3	7	Screw-HH
29	106-6406	1	Decal-Recycler

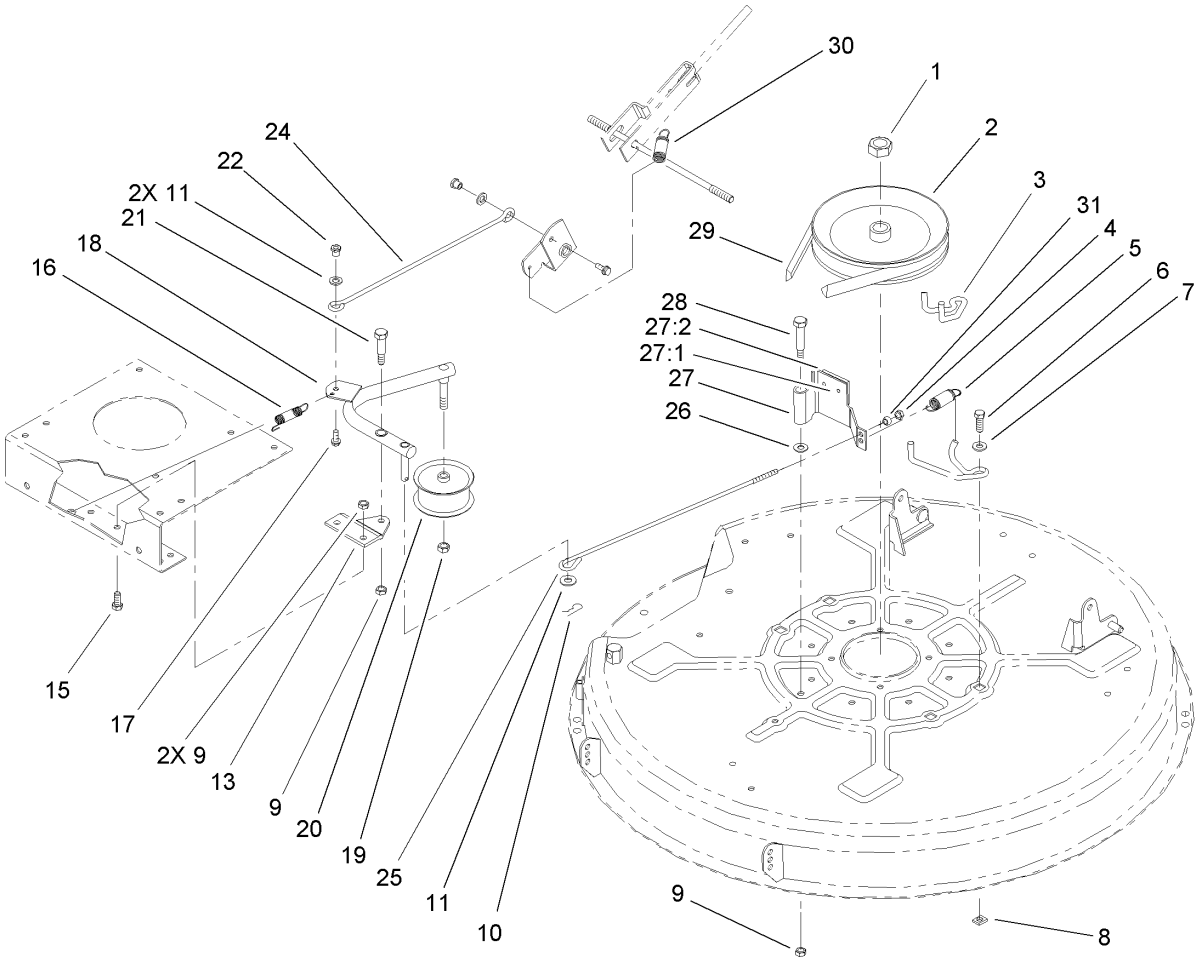

32 Inch Deck Blade Drive and Brake Assembly


Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	88-5060	1	Pulley-Deck
3	88-5760	2	Guide-Belt, Deck
4	3296-42	1	Nut-Lock, NI
5	88-6330	1	Spring-Extension
6	322-5	2	Screw-HH
7	5-4460	2	Washer-Pivot
8	3290-496	2	Nut-Retainer
9	3296-29	4	Nut-Lock, NI
10	3290-307	1	Pin-Hair
11	3256-24	3	Washer-Flat
13	88-5370-03	1	Plate-Mounting, Idler
15	322-3	2	Screw-HH
16	26-6700	1	Spring-Return, Brake
17	3234-13	2	Screw-HHF
18	88-5850-03	1	Arm-Idler
19	3296-39	1	Nut-Lock, NI
20	56-9870	1	Pulley-Idler
21	7-0030	1	Bolt-Shoulder
22	47-4990	2	Post-Mounting, Linkage
24	88-5980	1	Rod-Engage, Deck
25	88-5690	1	Rod-Brake, Deck
26	3256-23	1	Washer-Flat
27	88-6110	1	Brake Arm ASM

Ref	Part No.	Qty.	Description
27:1	3290-282	2	Rivet-Pop
27:2	56-9830	1	Pad-Brake
28	88-4590	1	Bolt-Shoulder
29	88-6260	1	V-Belt
30	88-6420	1	Cable Spring ASM
31	67-0710	1	Ball-Swivel, Stop

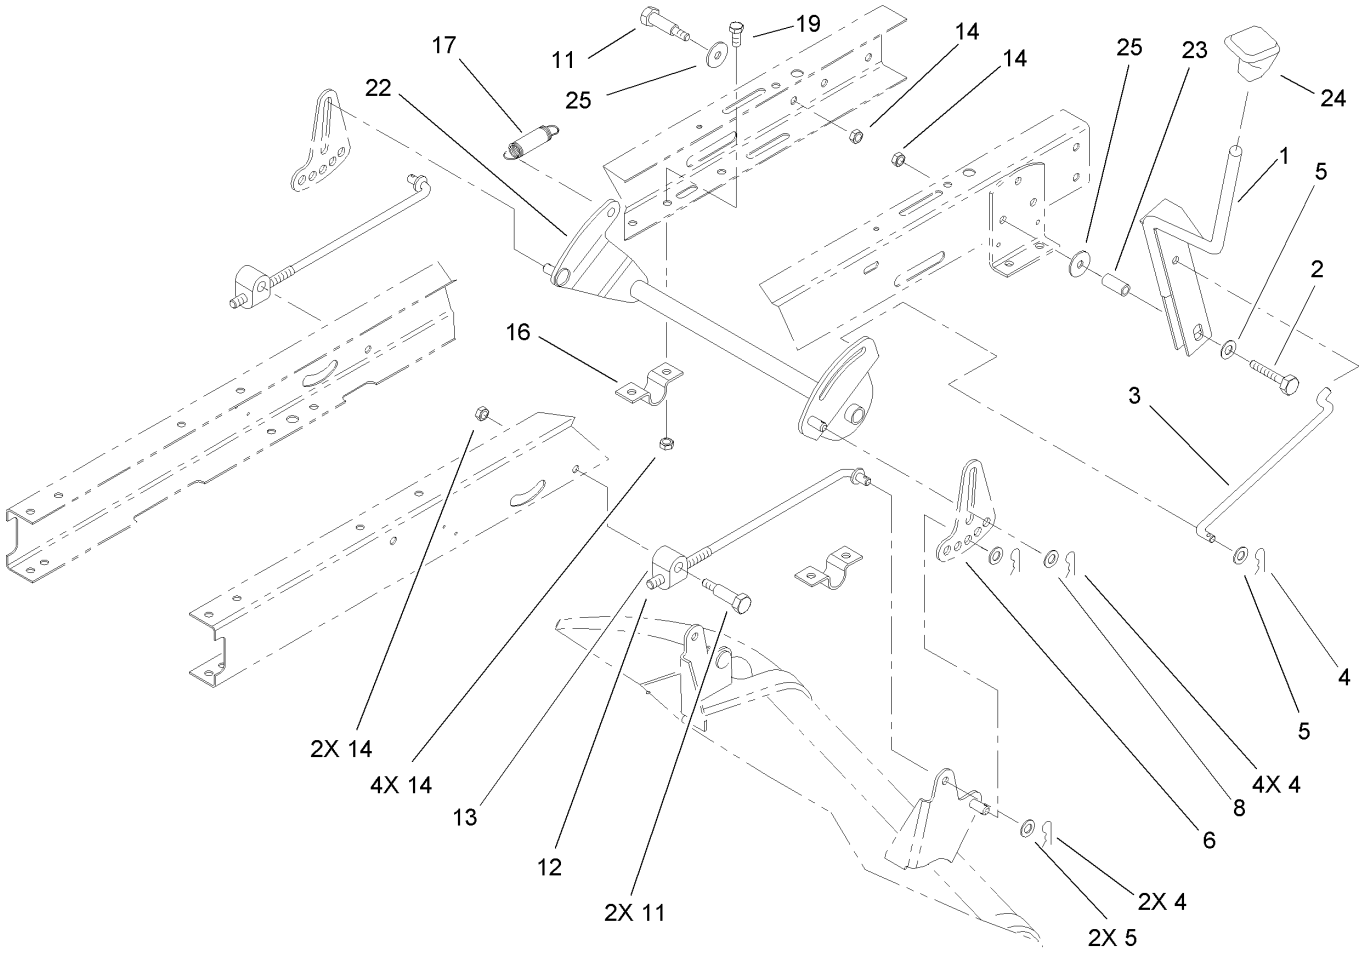

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description
1	93-3822-03	1	Lever ASM
2	322-32	1	Screw-HH
3	88-5900	1	Link-HOC
4	3290-307	7	Pin-Hair
5	3256-24	4	Washer-Flat
6	88-5570-03	2	Link-Adjusting, HOC
8	80-6990	4	Washer-Hardened
11	7-0030	3	Bolt-Shoulder
12	88-5450	2	Rod-Hanger, Rear
13	88-4230	2	Trunnion-HOC
14	3296-29	8	Nut-Lock, NI
16	88-4730	2	Clamp-Pivot, HOC
17	88-6460	1	Spring-Extension
19	322-3	4	Screw-HH
22	88-5110-03	1	Pivot ASM
23	65-7210	1	Spacer
24	94-5565	1	Knob-Shift
25	5-4460	2	Washer-Pivot

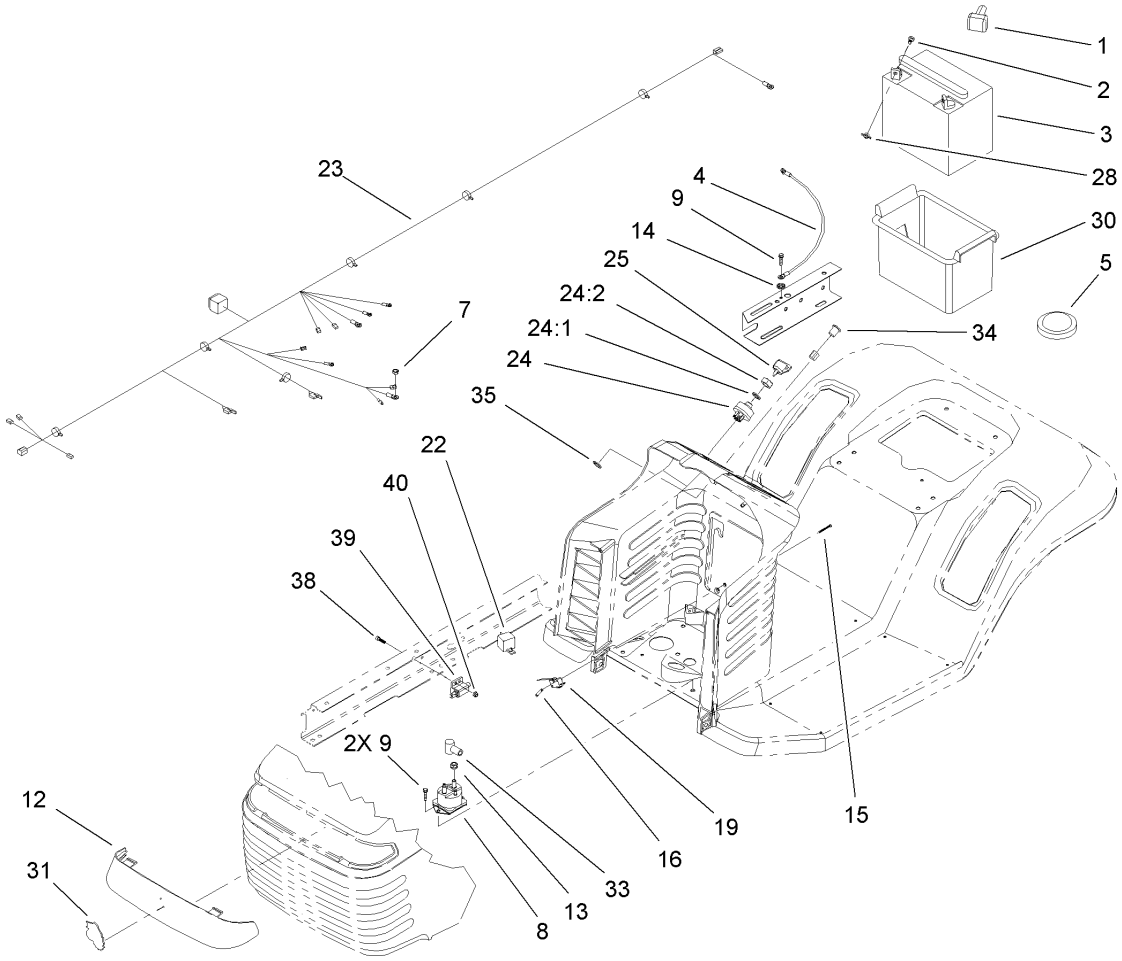

Electrical Component Assembly


Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut-Keps
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut-Keps
14	3255-7	2	Washer-Lock / EXT
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay
23	106-6434	1	Harness-Wire
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal

Ref	Part No.	Qty.	Description
34	95-7652	1	Light-Indicator
35	32151-80	1	Nut-Push-On, Circular
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

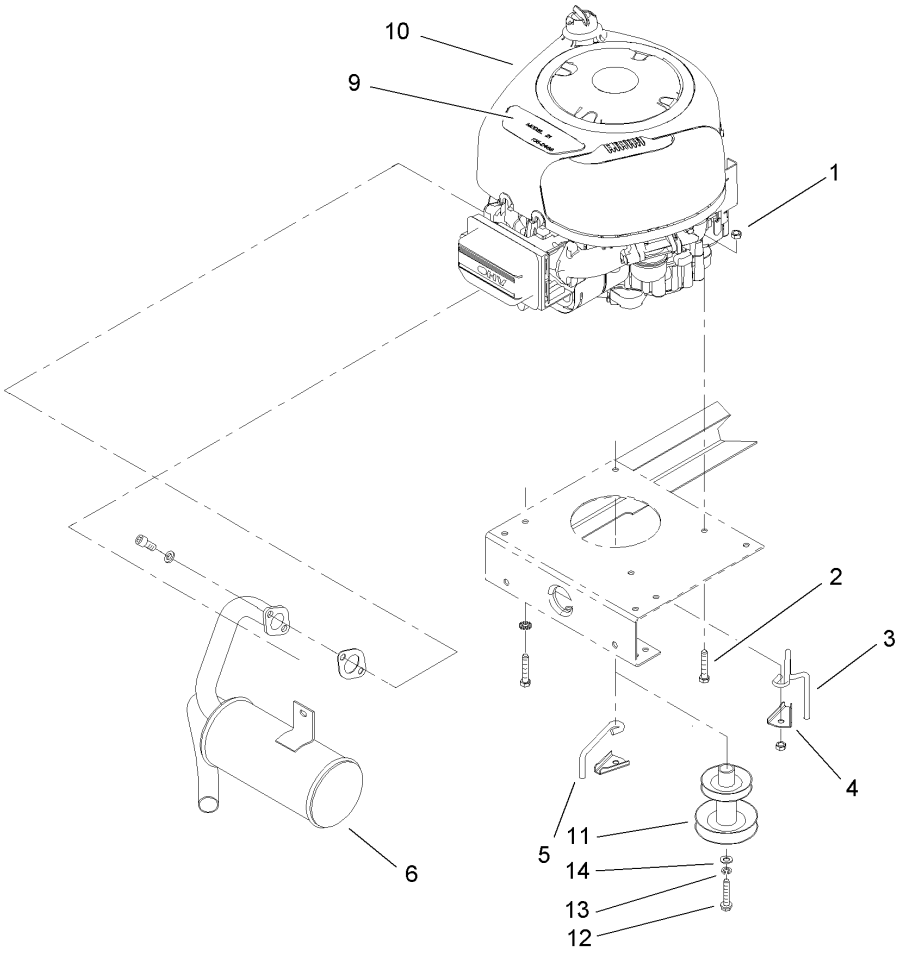

Engine Assembly


Ref	Part No.	Qty.	Description
1	3296-29	3	Nut-Lock, NI
2	322-9	4	Screw-HH
3	88-6060	1	Guide-Belt, LH
4	76-3820	2	Anchor-Guide, Belt
5	88-5490	1	Guide-Belt, RH
6	105-2461	1	Muffler-Exhaust
9	107-4903	1	Decal-Engine
❷10		1	Engine-Briggs & Stratton, 219907-0170-E1
11	88-5050	1	Pulley-Engine
12	62-3760	1	Screw-HH
13	3253-22	1	Washer-Lock
14	3256-25	1	Washer-Flat

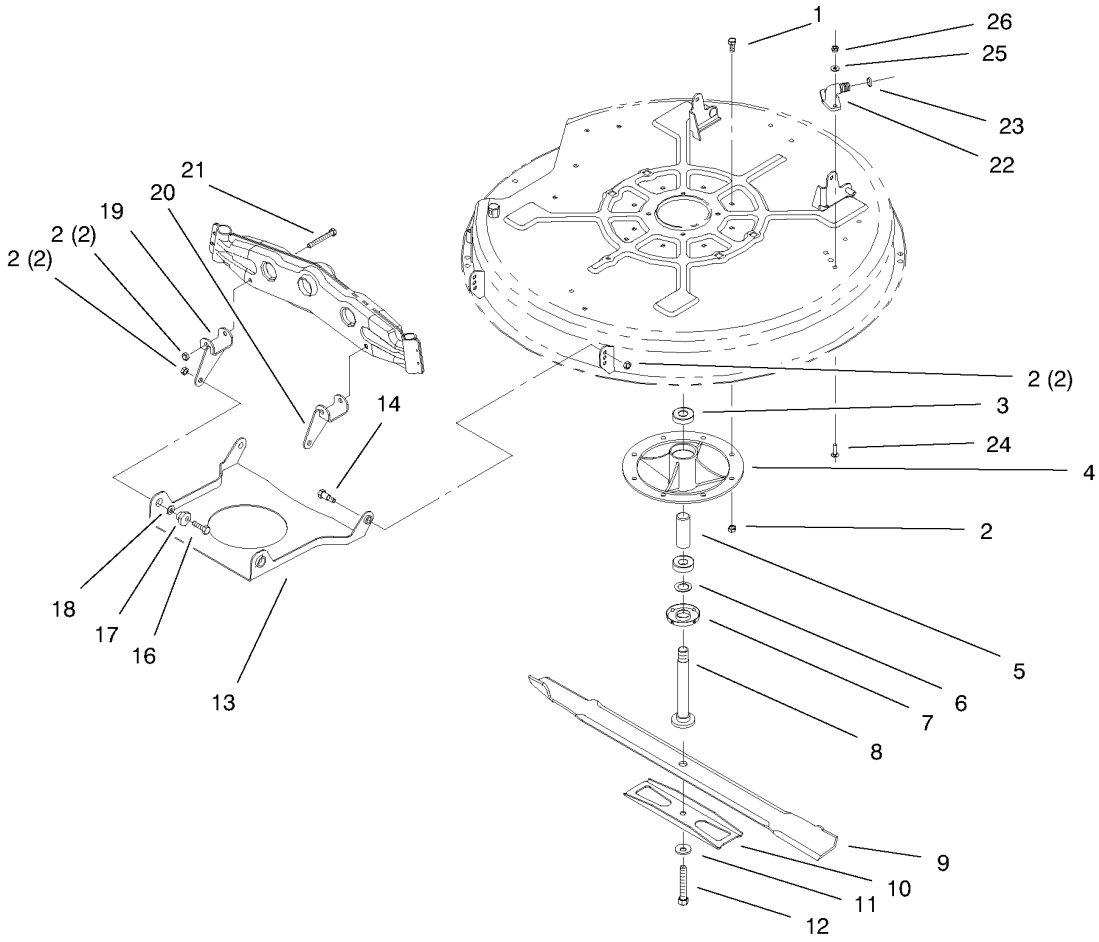

32 Inch Deck Components Assembly

Ref	Part No.	Qty.	Description
1	322-3	8	Screw-HH
2	3296-29	14	Nut-Lock, NI
3	251-297	2	Bearing-Ball
4	56-7030	1	Spindle
5	83-7020	1	Spacer-Bearing
6	80-4390	1	Spacer-Hardned
7	80-4370	1	Shield-Bearing
8	80-4350	1	Shaft-Spindle
9	80-4430	1	Blade-Recycler
10	80-4570-03	1	Stiffener
11	3290-465	1	Washer-Belleville
12	26-0671	1	Screw-Blade
13	88-4940-03	1	Suspension-Pan, Front
14	28-0540	2	Bolt-Shoulder
16	322-6	2	Screw-HH
17	106661	2	Cam
18	3256-23	2	Washer-Flat
19	88-5640-03	1	Bracket-RH
20	88-5650-03	1	Bracket-LH
21	322-12	2	Screw-HH
22	95-2747	1	Fitting-Washout
23	46-6290	1	O-Ring
24	3229-1	2	Screw-CARR
25	3256-1	2	Washer-Flat


Ref	Part No.	Qty.	Description
26	3296-16	2	Nut-Lock, NI

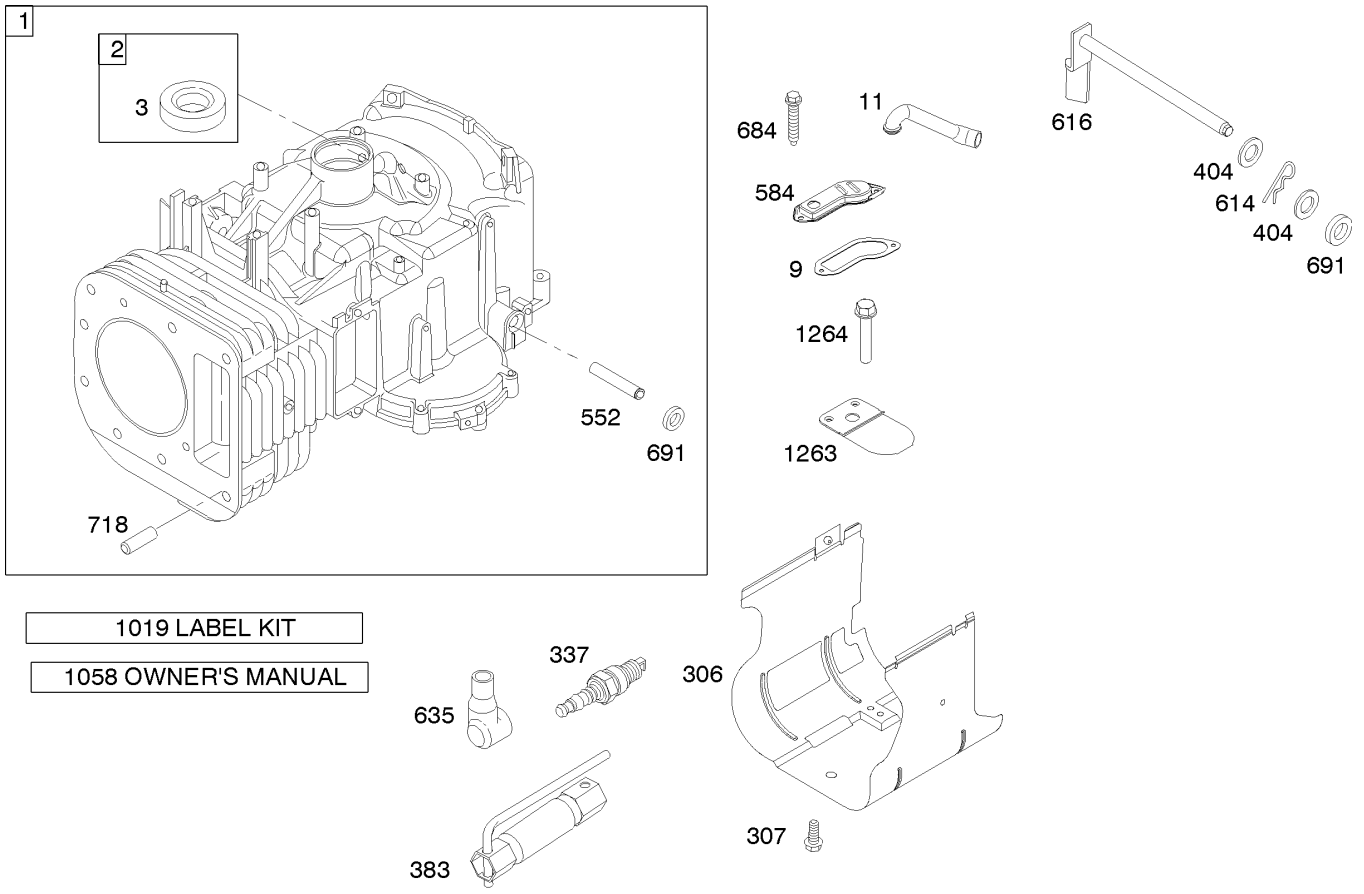

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description
❻1	697377	1	Cylinder ASM
❻2	399265	1	Bushing / Seal Kit
❸❻3	391086	1	Seal-Oil
❸❻9	697109	1	Gasket-Breather
❻11	697113	1	Tube-Breather
❻306	697359	1	Shield-Cylinder
❻307	691003	1	Screw
❻337	691043	1	Spark Plug
❻383	89838	1	Wrench-Plug, Spark
❻404	691691	1	Washer
❻552	697144	1	Bushing-Crank, Governor
❻584	697112	1	Cover-Passage, Breather
❻614	691620	1	Pin-Cotter
❻616	692012	1	Crank-Governor
❻635	691909	1	Boot-Plug, Spark
❻684	697157	1	Screw
❸❻691	692407	1	Seal-Shaft, Governor
❻718	690959	1	Pin-Locating
❻1019	697143	1	Label Kit
❻1058	275038	1	Owner's Manual
❻1263	697124	1	Reed-Breather
❻1264	697104	1	Screw

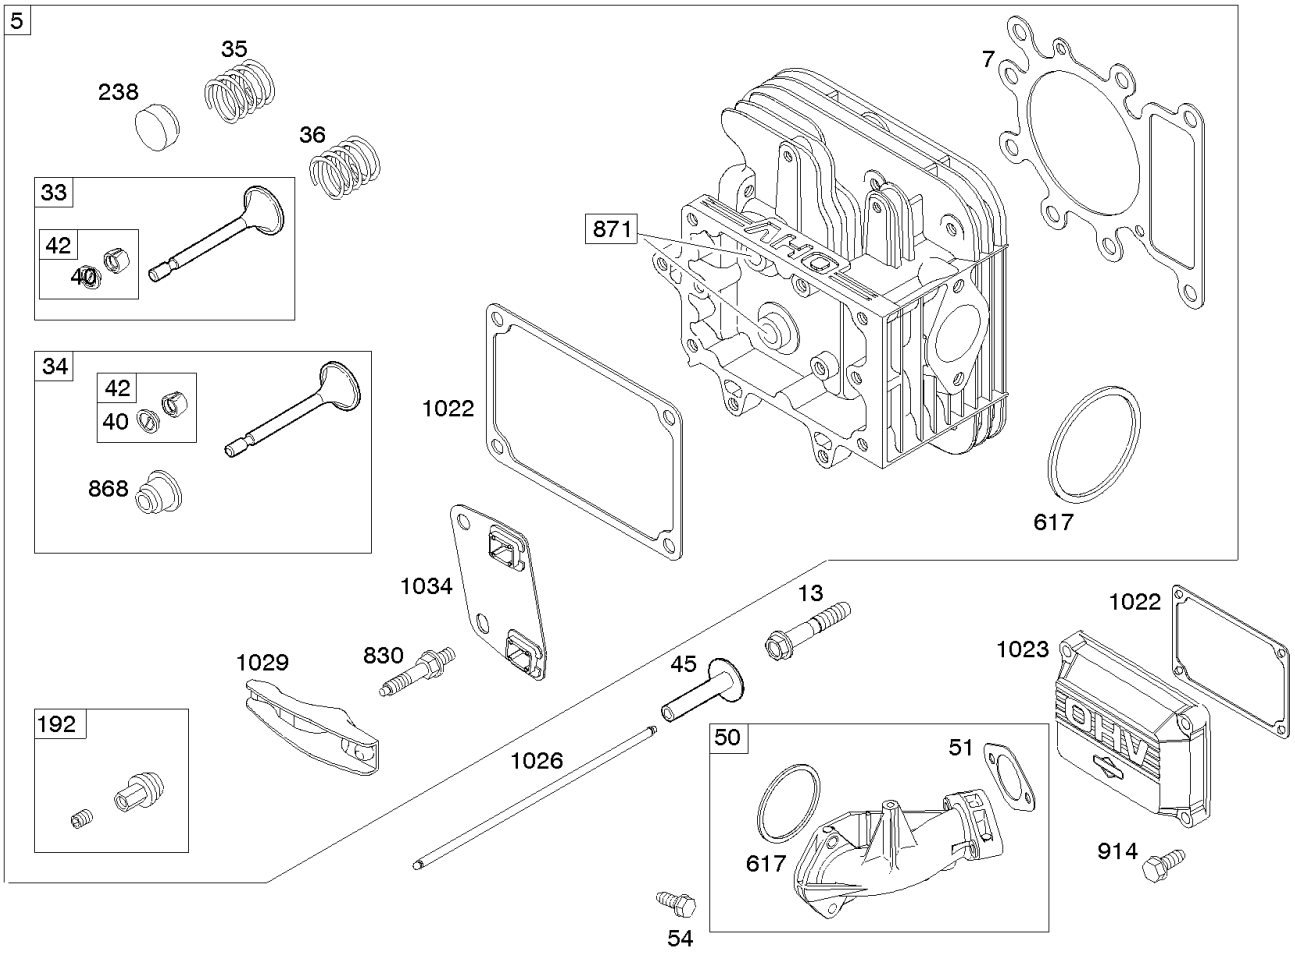



Cylinder Head Assembly
Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description
❻5	697396	1	Head-Cylinder
❸❹7 ❻	273280	1	Gasket-Head, Cylinder
❻13	690360	1	Screw
❻33	695760	1	Valve-Exhaust
❻34	695761	1	Valve-Intake
❻35	691279	1	Spring-Valve
❻36	691279	1	Spring-Valve
❻40	690964	1	Retainer-Valve
❻42	499586	1	Keeper-Valve
❻45	690564	1	Tappet-Valve
❻50	697361	1	Manifold-Intake
❸❹51 ❺❻	692137	1	Gasket-Intake
❻54	691148	1	Screw
❻192	691986	1	Adjustor-Arm, Rocker
❻238	691843	1	Cap-Valve
❸❺617 ❻	692138	1	Seal
❻830	691095	1	Stud-Arm, Rocker
❸❹868 ❻	690968	1	Seal-Valve
❻871	690969	1	Bushing-Valve Guide
❻914	690960	1	Screw
❸❹1022 ❻	272475	1	Gasket-Cover, Rocker


Ref	Part No.	Qty.	Description
❻1023	692492	1	Cover-Rocker
❻1026	697394	1	Rod-Push (Intake)
❻	697395	1	Rod-Push (Exhaust)
❻1029	691751	1	Arm-Rocker
❻1034	690822	1	Guide-Rod, Push

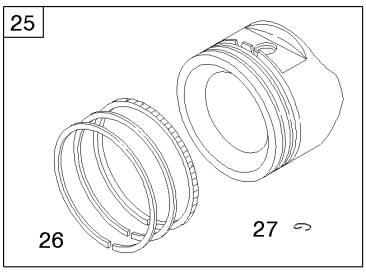

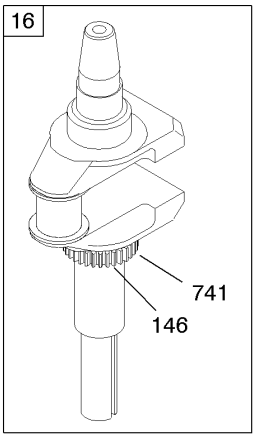

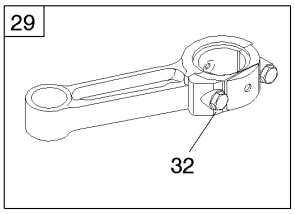

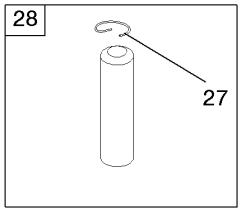

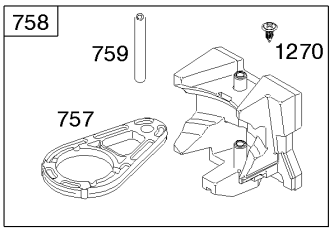



Assemblies include all parts shown in frames.


Crankshaft Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
❻16	697390	1	Crankshaft
❻24	222698	1	Key
❻25	698371	1	Piston ASM (Standard)
❻	698373	1	Piston ASM (.020In Oversize)
❻26	698375	1	Ring Set (Standard)
❻	698377	1	Ring Set (.020In Oversize)
❻27	698469	1	Lock-Pin, Piston
❻28	697099	1	Pin-Piston (Standard)
❻29	697364	1	Rod-Connecting (Standard)
❻32	692852	1	Screw
❻146	691639	1	Key-Timing
❻741	697128	1	Gear-Timing
❻757	697607	1	Link-Counterweight
❻758	697391	1	Counterweight
❻759	697392	1	Pin-Counterweight
❻1270	697156	1	Plug-Counterweight, Avs

48 SHORT BLOCK

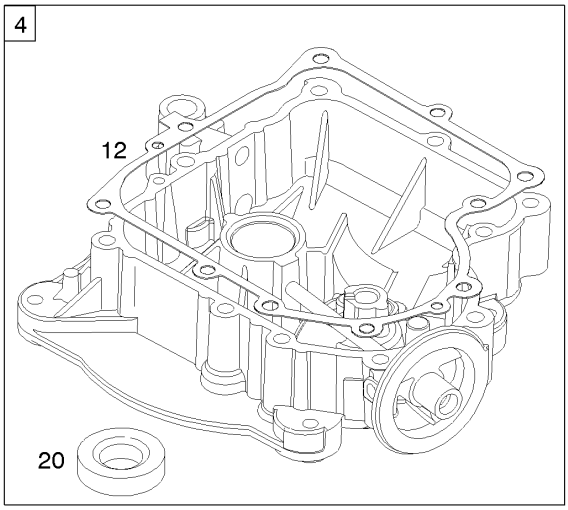

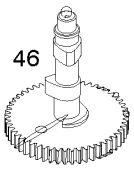








Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description
❻4	697106	1	Sump-Engine
❸❻12	697110	1	Gasket-Crankcase
❻15	690946	1	Plug-Drain, Oil
❸❻20	690947	1	Seal-Oil
❻22	692125	1	Screw
❻43	691968	1	Slinger-Governor / Oil
❻46	699016	1	Camshaft
❻48	697740	1	Short Block

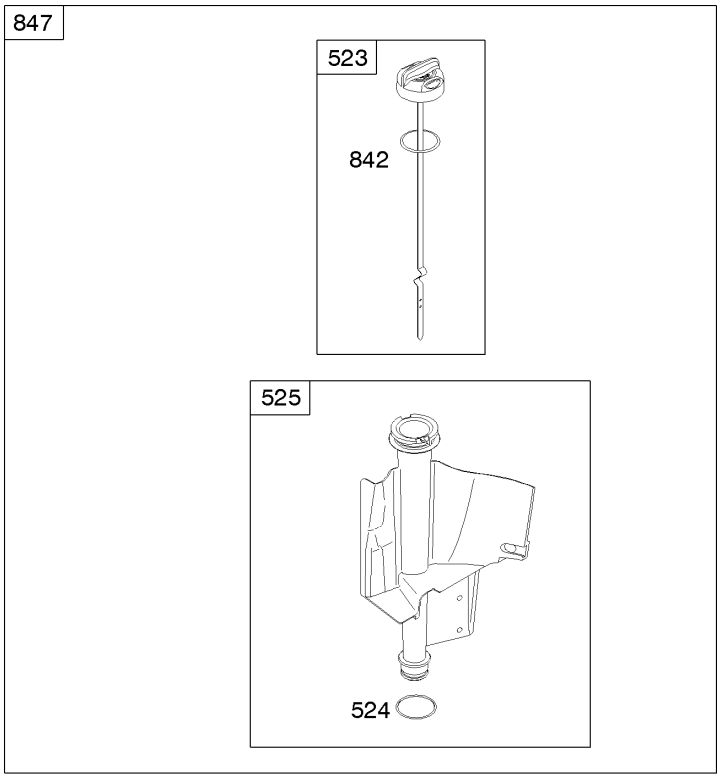

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
❻523	697086	1	Dipstick
❸❻524	691032	1	Seal
❻525	697184	1	Tube-Dipstick
❸❻842	691031	1	Seal-O Ring
❻847	697611	1	Dipstick And Tube ASM

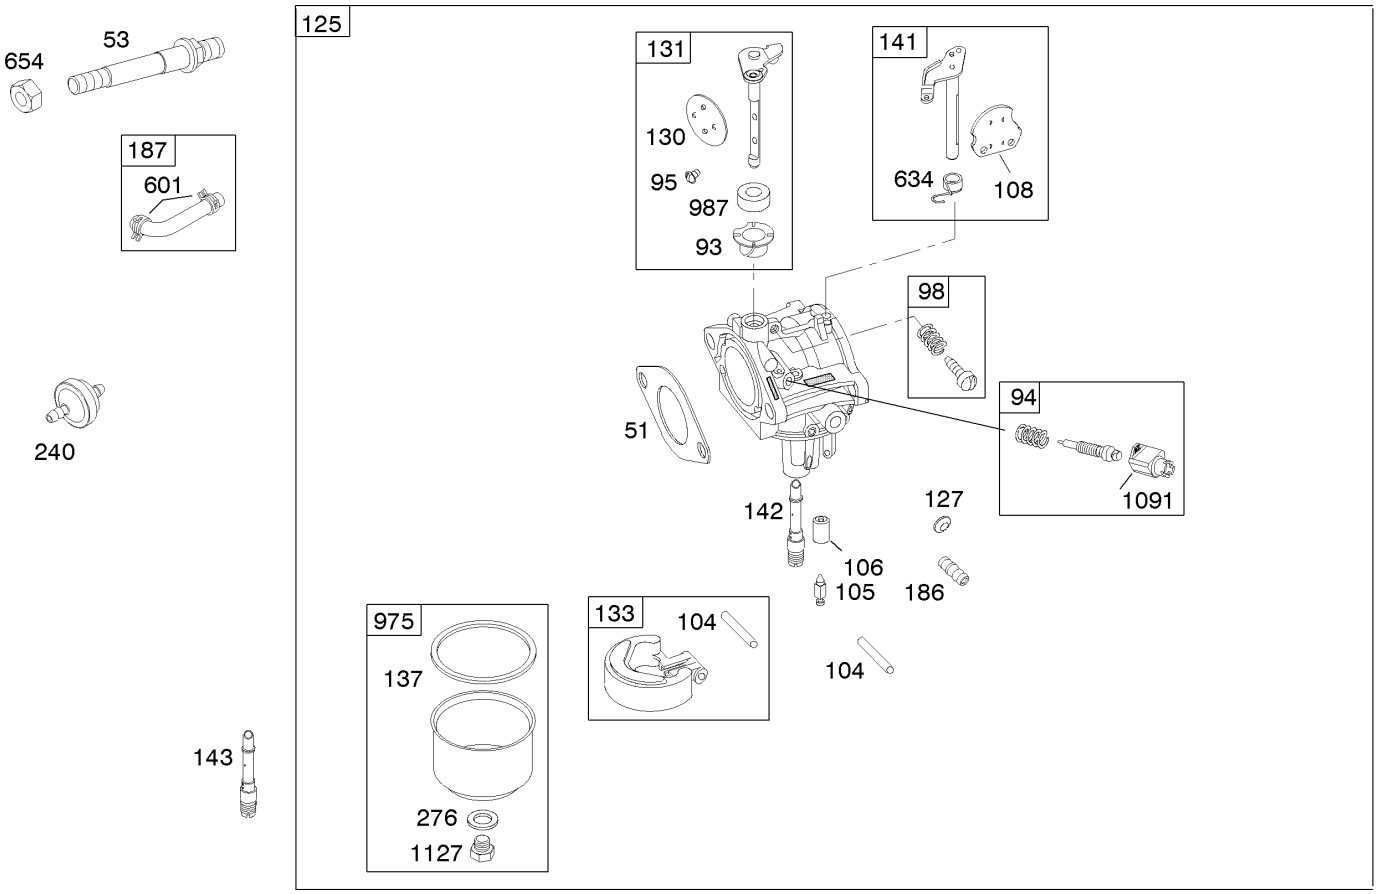


Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❻	692137	0	Gasket-Intake
❻53	690227	1	Stud
❺❻93	60602	1	Bushing-Throttle Shaft
❻94	498030	1	Idle Mixture Kit
❺❻95	691636	1	Screw
❻98	495800	1	Idle Speed Kit
❺❻104	690525	1	Pin-Hinge, Float
❺❻105	231855	1	Valve-Needle, Float
❺❻106	690577	1	Seat-Inlet
❻108	691227	1	Valve-Choke (Manual Choke)
❻125	790019	1	Carburetor
❺❻127	694524	1	Plug-Welch
❻130	698774	1	Valve-Throttle
❻131	790175	1	Throttle Shaft Kit
❻133	494381	1	Float-Carburetor
❺❻137	281165	1	Gasket-Bowl, Float
❻141	699027	1	Choke Shaft Kit (Manual Choke)
❺❻142	790025	1	Nozzle-Carburetor
❻143	790028	1	Nozzle-Carburetor (High Altitude)
❻186	698174	1	Connector-Hose
❻187	699331	1	Line-Fuel (Molded)
❻240	394358	1	Filter-Fuel
❺❻276	692255	1	Washer-Sealing


Ref	Part No.	Qty.	Description
❻601	95162	1	Clamp-Hose
❻634	690802	1	Spring / Seal ASM
❻654	690958	1	Nut
❻975	495933	1	Bowl–Float
❺❻987	691326	1	Seal-Shaft, Throttle
❻1091	691333	1	Cap-Limiter
❻1127	691657	1	Screw

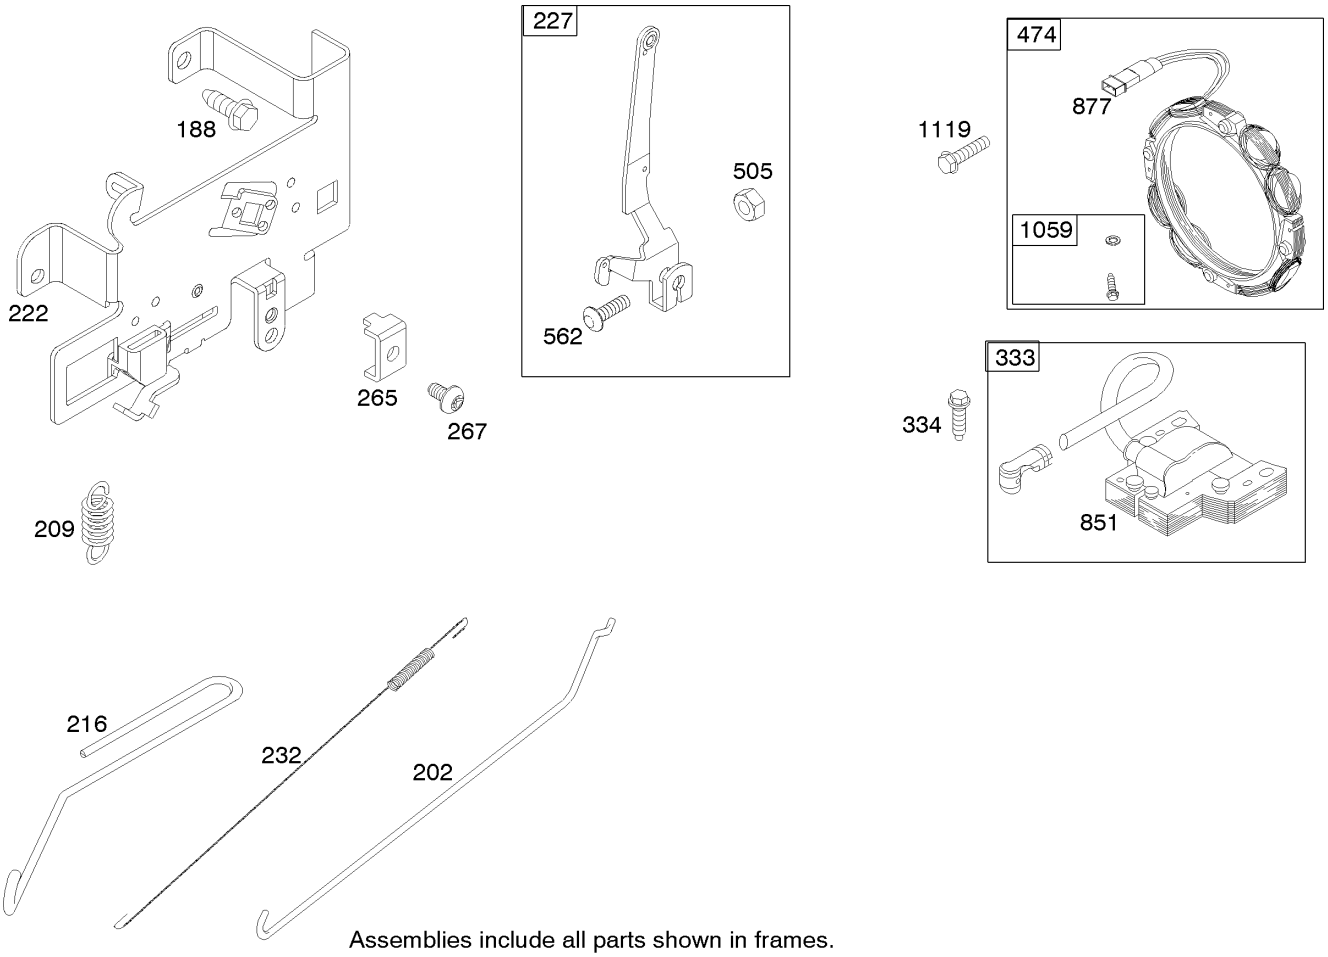

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
❻188	691693	0	Screw
❻202	691841	1	Link-Governor, Mechanical
❻209	692208	1	Spring-Governor
❻216	691840	1	Link-Choke
❻222	694042	1	Bracket-Control
❻227	691374	1	Lever-Control, Governor
❻232	691842	1	Spring-Link, Governor
❻265	691024	1	Clamp-Casing
❻267	695134	1	Screw
❻333	492341	1	Armature-Magneto
❻334	691061	1	Screw
❻474	696459	1	Alternator
❻505	691251	1	Nut
❻562	691119	1	Screw
❻851	493880	1	Terminal-Spark Plug
❻877	393456	1	Wire-Connector / Alternator
❻1119	691183	1	Screw
❻1059	698516	1	Screw/Washer Kit

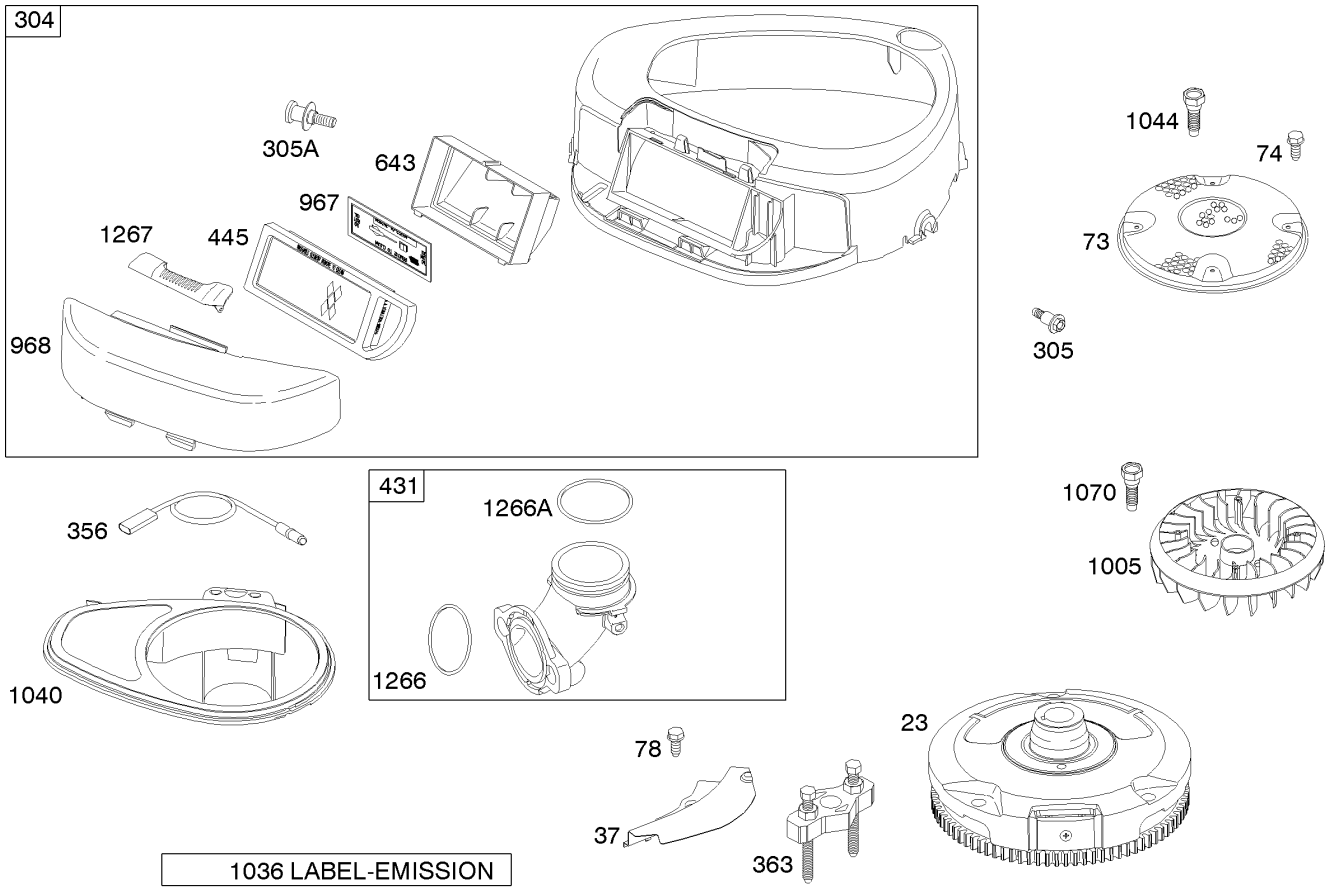


Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description
❻23	698281	1	Flywheel
❻37	697352	1	Guard-Flywheel
❻73	697133	1	Screen-Rotating
❻74	697897	1	Screw
❻75	690582	1	Washer-Flywheel
❻78	691003	1	Screw
❻304	698473	1	Housing-Blower
❻305	697102	1	Screw
❻305A	697103	1	Screw
❻356	690807	1	Wire-Stop
❻363	19203	1	Puller-Flywheel
❻431	697122	1	Elbow-Intake
❻445	698413	1	Retainer-Air Filter
❻643	697155	1	Retainer-Air Filter
❻967	697292	1	Filter-Pre Cleaner
❻968	697420	1	Cover-Air Cleaner
❻1005	699044	1	Fan-Flywheel
❻1036	697221	1	Decal-Emission
❻1040	698368	1	Plate-Trim
❻1044	698139	1	Screw
❻1070	690372	1	Screw
❸❺1266❻	691917	1	Seal-O Ring


Ref	Part No.	Qty.	Description
❸❺1266A❻	697123	1	Seal-O Ring
❻1267	697419	1	Latch-Housing, Blower

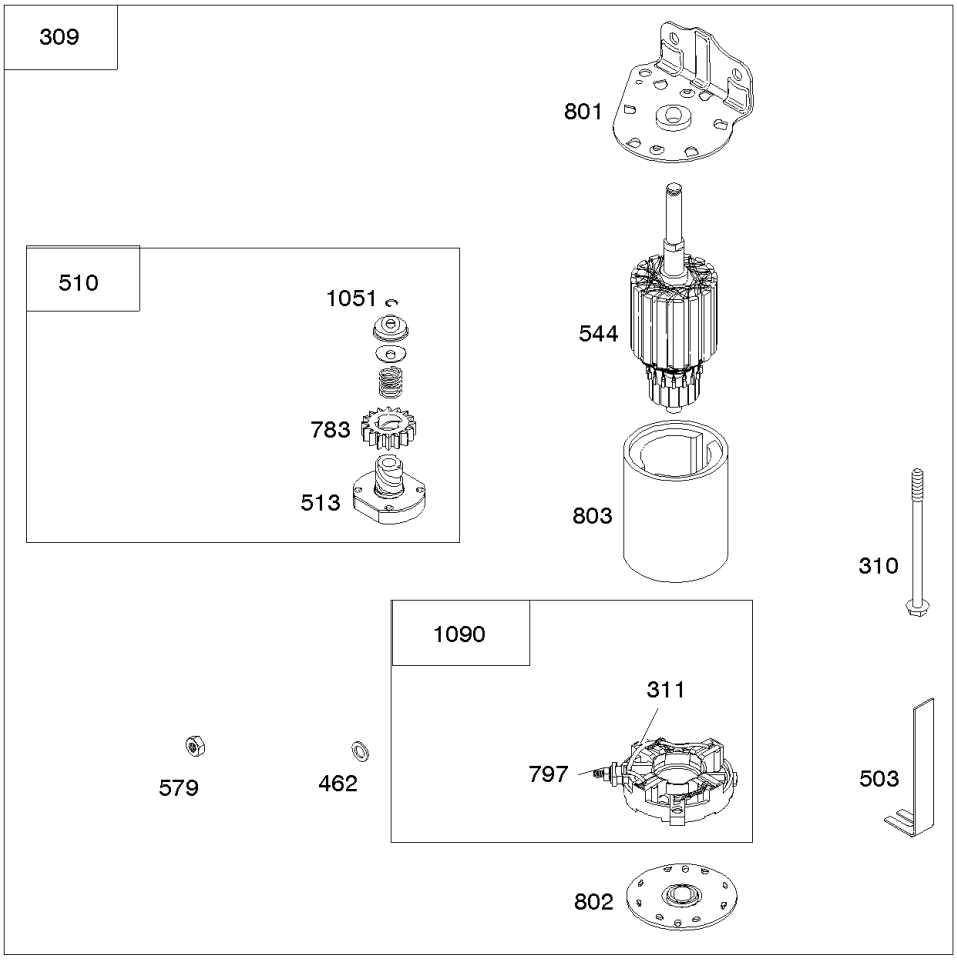

Starter Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
❻309	693551	1	Motor-Starter
❻310	690323	1	Bolt
❻311	497608	1	Brush Set
❻462	691261	1	Washer
❻503	691532	1	Strap-Starter
❻510	693699	1	Drive-Starter
❻513	692024	1	Clutch-Drive
❻544	692034	1	Armature-Starter
❻579	691029	1	Nut
❻697	690372	1	Screw
❻729	691224	1	Clip-Wire
❻783	693713	1	Gear-Pinion
❻797	693167	1	Nut
❻801	691283	1	Cap-Drive
❻802	691286	1	Cap-End
❻803	693757	1	Housing-Starter
❻1051	691265	1	Ring-Retaining
❻1090	691293	1	Retainer-Brush

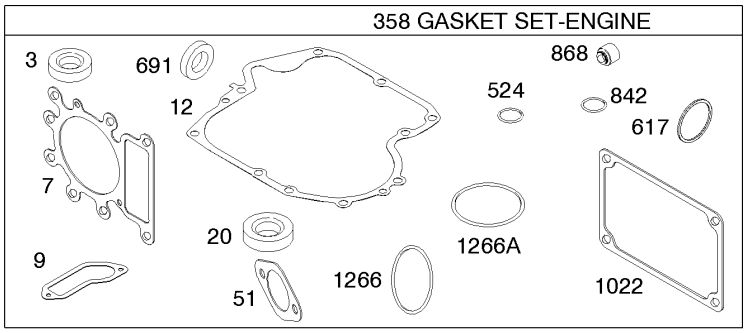


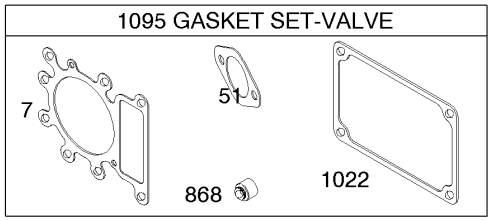

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
❸❻3	391086	1	Seal-Oil
❸❹7 ❻	273280	1	Gasket-Head, Cylinder
❸❻9	697109	1	Gasket-Breather
❸❻12	697110	1	Gasket-Crankcase
❸❻20	690947	1	Seal-Oil
❸❹51 ❺❻	692137	1	Gasket-Intake
❻358	697151	1	Engine Gasket Set
❸❹617 ❺❻	692138	1	Seal
❸❻524	691032	1	Seal
❸❻691	692407	1	Seal-Shaft, Governor
❸❻842	691031	1	Seal-O Ring
❸❹868 ❻	690968	1	Seal-Valve
❸❹1022 ❻	272475	1	Gasket-Cover, Rocker
❻1095	691581	1	Valve Gasket Set
❸❺1266 ❻	691917	1	Seal-O Ring
❸❺1266A ❻	697123	0	Seal-O Ring

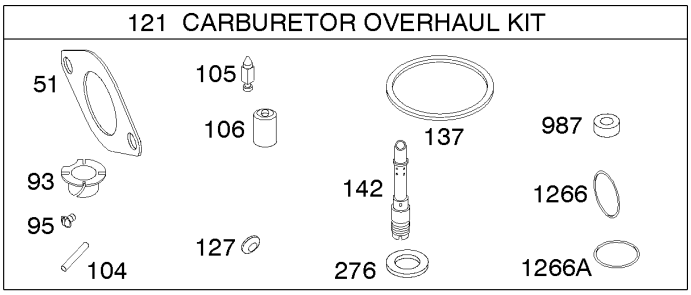

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❻	692137	0	Gasket-Intake
❺❻93	690602	1	Bushing-Shaft, Throttle
❺❻95	691636	1	Screw
❺❻104	690525	1	Pin-Hinge, Float
❺❻105	231855	1	Valve-Needle, Float
❺❻106	690577	1	Seat-Inlet
❻121	790031	1	Carburetor Overhaul Kit
❺❻127	694524	1	Plug-Welch
❺❻137	281165	1	Gasket-Bowl, Float
❺❻142	790025	1	Nozzle-Carburetor
❺❻276	692255	1	Washer-Sealing
❸❺617 ❻	692138	1	Seal
❺❻987	691326	1	Seal-Shaft, Throttle
❸❺1266 ❻	691917	0	Seal-O Ring
❸❺1266A ❻	697123	1	Seal-O Ring

Attachments and Accessories

For 71209 - XL 320 Lawn Tractor

Product Name	Model/Part
Tire Chains	47-7220
8 Inch Rear Wheel Weight Kit	59159
32 Inch Recycler Kit	59167
9.0 cu. ft. Twin Bagger	79086
6.0 cu. ft. Easy-Empty Grass Catcher	79096
10 cu. ft. Dump Cart	79901
Sunshade	79913
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tractor Rack	79990
Headlight Kit	92-6301
Tower Kit	98-9880

NOTES

NOTES


TORO®