Form Number 3354-232 Rev B

# Workman® 2110 Utility Vehicle

**Model No. 07277TC - 260000001 and up.**

## Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page |
|---|---|
| Hood and Fender Assembly | 3 |
| Pedal Assembly | 4 |
| Shifter Assembly | 5 |
| Frame Assembly | 6 |
| Seat Base Assembly | 7 |
| Front Tire and Steering Assembly | 8 |
| Engine and Clutch Assembly | 9 |
| Drive Clutch Assembly No. 108-7013 | 11 |
| Starter Generator Assembly No. 99-7108 | 12 |
| Rear Tire and Transaxle Assembly | 13 |
| Transaxle Assembly No. 107-0360 | 14 |
| Driven Clutch Assembly No. 99-7104 | 16 |
| Left Hand Brake Assembly No. 104-6807 | 17 |
| Right Hand Brake Assembly No. 104-6806 | 18 |
| Drivetrain Mounting, Battery and Air Cleaner Assembly | 19 |
| Air Cleaner Assembly No. 99-7120 | 20 |
| Upper Steering Assembly | 21 |
| Steering Gearbox Assembly No. 99-7660 | 22 |
| Box and Tailgate Installation Assembly | 23 |
| Box and Tailgate Assembly | 24 |
| Hydraulic Brake Assembly | 25 |
| Left Hand Caliper Assembly No. 107-0361 | 26 |
| Right Hand Caliper Assembly No. 107-0362 | 27 |
| Master Cylinder Assembly No. 104-6782 | 28 |
| Cylinder Assembly Briggs and Stratton 303440-1326-E1 | 29 |
| Crankcase Assembly Briggs and Stratton 303440-1326-E1 | 30 |
| Crankshaft Assembly Briggs and Stratton 303440-1326-E1 | 31 |
| Cylinder Head Assembly Briggs and Stratton 303440-1326-E1 | 32 |
| Oil Filter, Tube and Pump Assembly Briggs and Stratton 303440-1326-E1 | 33 |
| Carburetor Assembly Briggs and Stratton 303440-1326-E1 | 34 |
| Intake Manifold Assembly Briggs and Stratton 303440-1326-E1 | 35 |
| Governor Assembly Briggs and Stratton 303440-1326-E1 | 36 |
| Flywheel Assembly Briggs and Stratton 303440-1326-E1 | 37 |
| Blower Housing Assembly Briggs and Stratton 303440-1326-E1 | 38 |
| Gasket Assembly Briggs and Stratton 303440-1326-E1 | 39 |
| Carburetor Overhaul Kit Assembly Briggs and Stratton 303440-1326-E1 | 40 |
| Attachments and Accessories List | 41 |


# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| | |
|---|---|
| AR | as required |
| ASM | assembly |
| BBC | blade brake clutch |
| CARR | carriage |
| DEG | degrees |
| EXT | external |
| FH | flat head |
| GA | gauge |
| HF | hex flange |
| HH | hex head |
| HHF | hex head flange |
| HHFTF | hex head flange thread forming |
| HJ | hex jam |
| HLH | hex lag head |
| HOC | height-of-cut |
| HSBH | hex socket button head |
| HSFH | hex socket flat head |
| HSH | hex socket head |
| HWH | hex washer head |
| HWHTF | hex washer head thread forming |
| HYD | hydraulic |
| INC | incorporated |
| LH | left hand |
| NI | nylon insert |
| NPTF | national pipe thread fine |
| PFH | phillips flat head |
| PPH | phillips pan head |
| PPHTF | phillips pan head thread forming |
| PRH | phillips round head |
| PTH | phillips truss head |
| PTO | power-take-off |
| RH | right hand |
| ROPS | roll-over-protection-system |
| SFH | slotted fillister head |
| SHH | slotted hex head |
| SHWH | slotted hex washer head |
| SPH | slotted pan head |
| SQH | square head |
| SRH | slotted round head |
| STD | standard |
| TAP | self tapping |
| TTH | torx truss head |

# Footnotes

❶ Not illustrated


❷ Not serviced separately

❸ Included in Engine Gasket Set-Ref. 358.

❹ Included in Valve Gasket Set-Ref. 1095.

❺ Included in Carburetor Overhaul Kit-Ref. 121.


❻ Obtain from your local Briggs & Stratton dealer

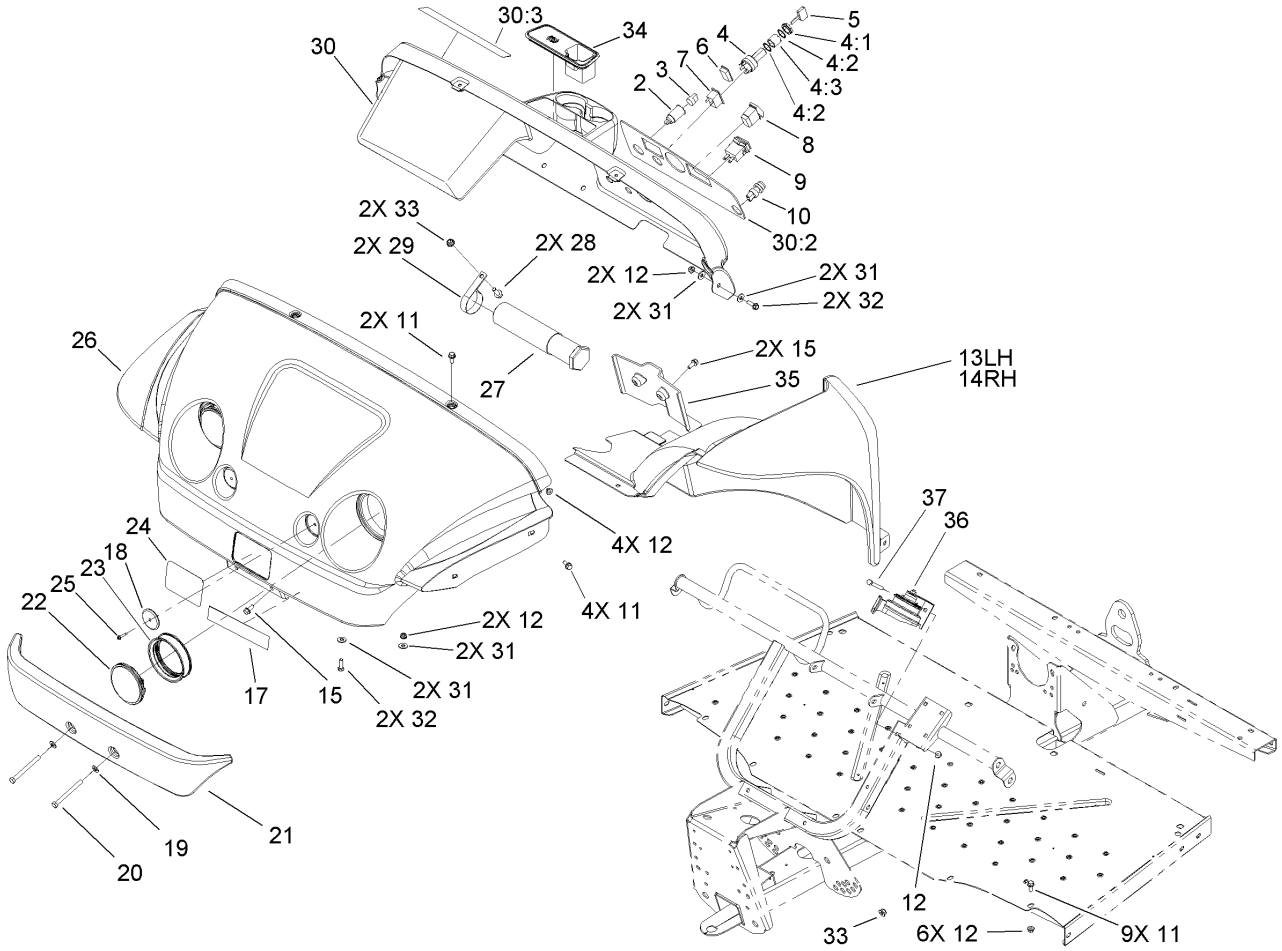


# Hood and Fender Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 2 | 99-7411 | 1 | Point-Power |
| 3 | 99-7416 | 1 | Cap |
| 4 | 104-6929 | 1 | Switch-Ignition |
| 4:1 | 104-7042 | 1 | Nut-Switch, Plastic |
| 4:2 | 104-7019 | 2 | Washer-Lock, Internal |
| 4:3 | 104-7021 | 1 | Spacer-Switch |
| 5 | 99-7418 | 2 | Key-Ignition |
| 6 | 99-7420 | 1 | Plug-Hole |
| 7 | 99-7410 | 1 | Light-Oil |
| 8 | 95-8999 | 1 | Switch |
| 9 | 94-4208 | 1 | Hourmeter |
| 10 | 18-2830 | 1 | Button-Horn |
| 11 | 3234-5 | 14 | Screw-HHF |
| 12 | 104-8300 | 15 | Nut-Flange, NI |
| 13 | 104-7076 | 1 | LH Fender ASM |
| 14 | 104-7077 | 1 | RH Fender ASM |
| 15 | 104-7206 | 4 | Screw HHF |
| 17 | 104-7267 | 1 | Decal |
| 18 | 99-7312 | 2 | Reflector |
| 19 | 3256-24 | 2 | Washer-Flat |
| 20 | 323-42 | 2 | Screw-HH |
| 21 | 99-7733 | 1 | Bumper-Plastic |
| 22 | 99-7310 | 2 | Headlight |
| 23 | 99-7311 | 2 | Mount-Headlight |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 24 | 99-7339 | 1 | Decal |
| 25 | 32144-89 | 2 | Screw-Forming, Thread |
| 26 | 104-7003 | 1 | Hood |
| 27 | 74-0720 | 1 | Tube-Manual |
| 28 | 3234-11 | 2 | Screw-HHF |
| 29 | 2412-133 | 2 | R-Clamp |
| 30 | 107-0700 | 1 | Dash ASM |
| 30:2 | 107-0699 | 1 | Decal-Panel, Control |
| 30:3 | 104-6581 | 1 | Decal-Danger |
| 31 | 3256-3 | 8 | Washer-Flat |
| 32 | 3234-17 | 4 | Screw-HHF |
| 33 | 104-8301 | 4 | Nut-Flange, NI |
| 34 | 104-6930 | 1 | Plug-Rubber |
| 35 | 104-7075 | 1 | Cover-Channel |
| 36 | 116749 | 1 | Horn |
| 37 | 322-11 | 1 | Screw-HH |

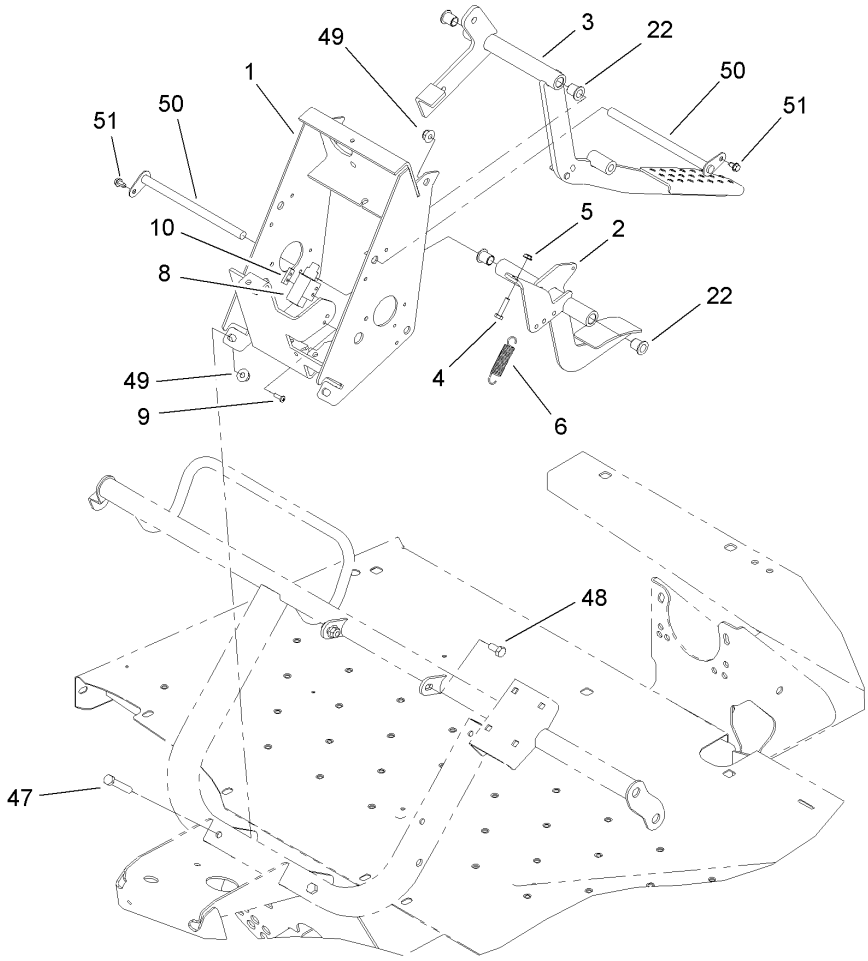



# Pedal Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 110-2605-03 | 1 | Frame-Pedals |
| 2 | 110-2607-03 | 1 | Pedal-Throttle |
| 3 | 104-7170-03 | 1 | Pedal-Brake |
| 4 | 321-7 | 2 | Screw-HH |
| 5 | 32149-2 | 2 | Nut-Keps |
| 6 | 104-6415 | 1 | Spring-Return, Pedal |
| 8 | 99-7407 | 1 | Switch |
| 9 | 104-7221 | 2 | Screw-PPH |
| 10 | 1-633181 | 1 | Plate-Tapped |
| 22 | 256-155 | 4 | Bushing-Flange |
| 47 | 323-11 | 2 | Screw-HH |
| 48 | 323-4 | 2 | Screw-HH |
| 49 | 104-8301 | 4 | Nut-Flange, NI |
| 50 | 104-7164 | 2 | Pivot-Pedals |
| 51 | 12-3270 | 2 | Screw |

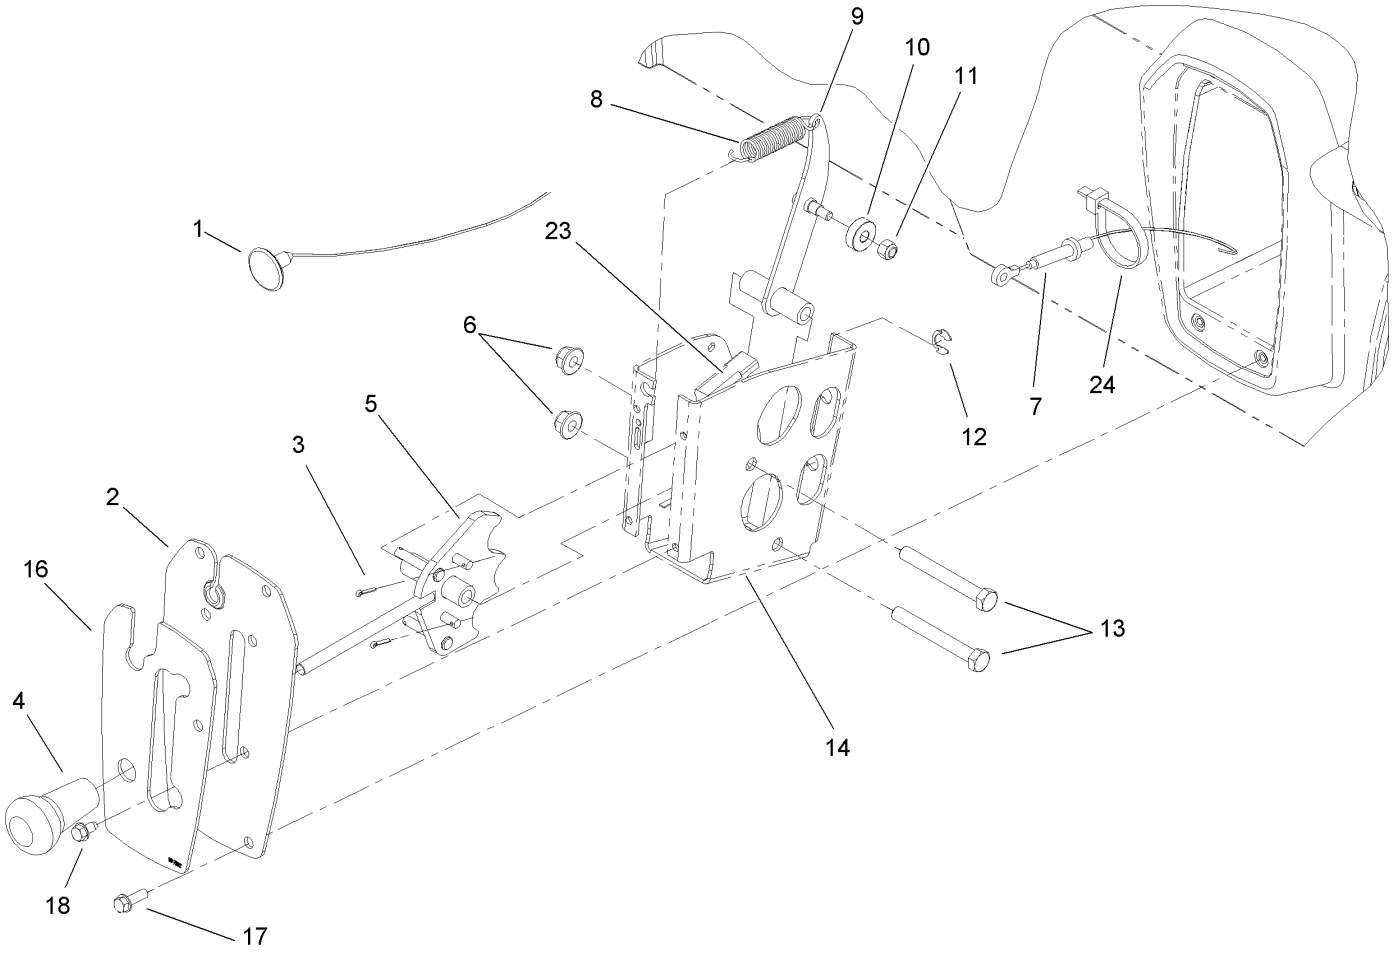


# Shifter Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 99-7111 | 1 | Cable-Choke |
| 2 | 99-7887-03 | 1 | Plate-Shifter |
| 3 | 3272-5 | 2 | Pin-Cotter |
| 4 | 99-7981 | 1 | Knob-Grip, Soft |
| 5 | 108-3139 | 1 | Lever-Shift |
| 6 | 104-8301 | 2 | Nut-Flange, NI |
| 7 | 104-6896 | 2 | Cable-Shift |
| 8 | 104-6415 | 1 | Spring-Return, Pedal |
| 9 | 108-3138 | 1 | Arm-Detent |
| 10 | 251-307 | 1 | Bearing-Ball |
| 11 | 3296-42 | 1 | Nut-Lock, NI |
| 12 | 32151-101 | 2 | E-Ring |
| 13 | 323-14 | 2 | Screw-HH |
| 14 | 108-3141-03 | 1 | Bracket-Shift |
| 16 | 99-7952 | 1 | Decal-Shifter |
| 17 | 32105-15 | 4 | Screw |
| 18 | 12-3270 | 4 | Screw |
| 23 | 99-7408 | 1 | Switch-Reverse |
| 24 | 3290-378 | 1 | Tie-Cable |

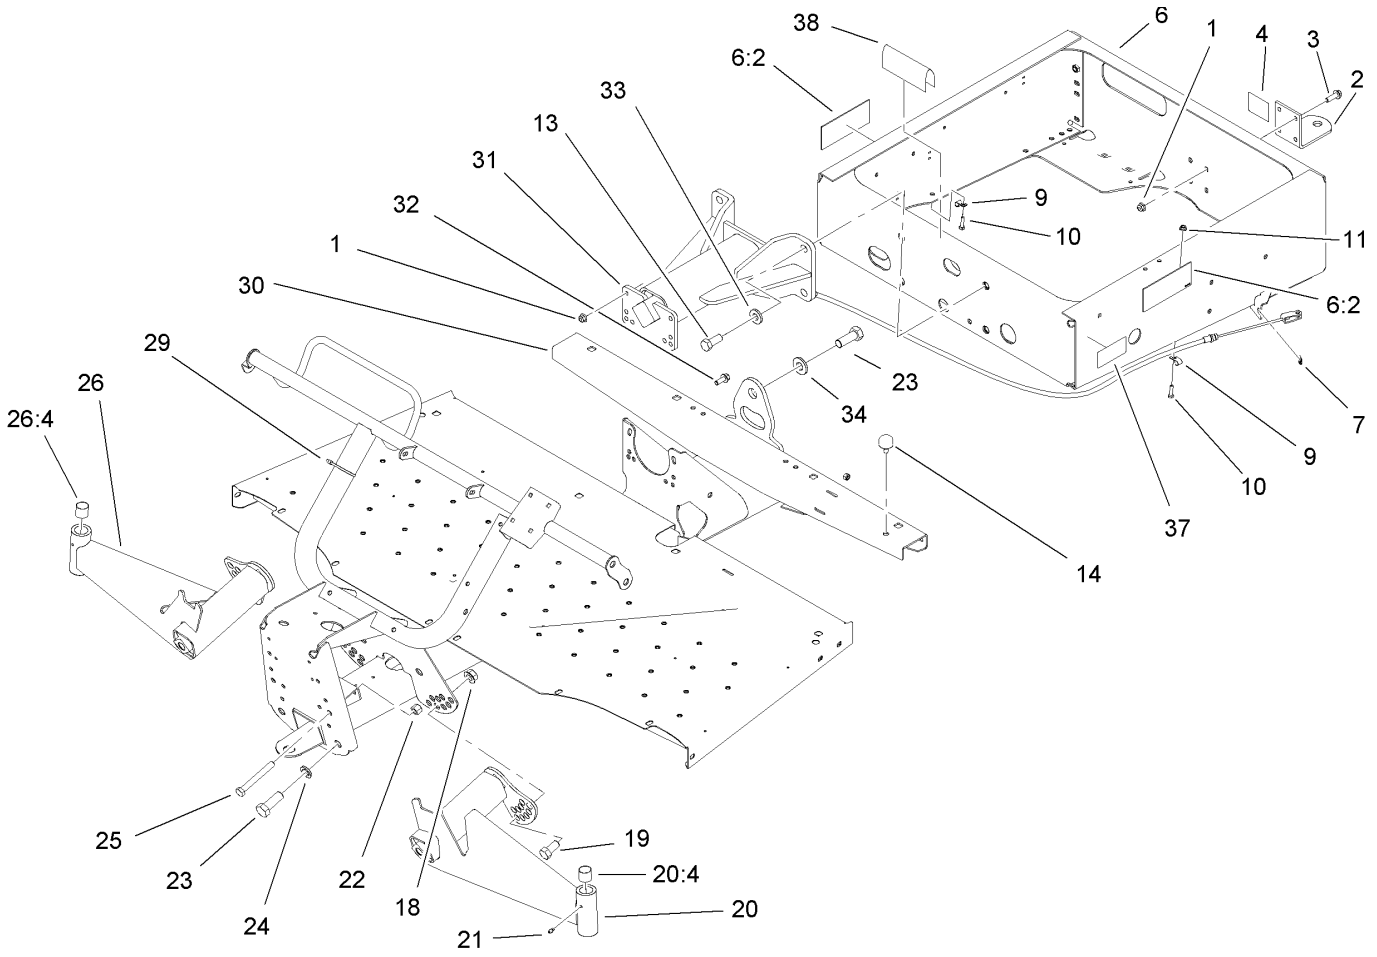


# Frame Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-8301 | 8 | Nut-Flange, NI |
| 2 | 99-7654-03 | 1 | Hitch-Duty, Light |
| 3 | 3234-24 | 4 | Screw-HHF |
| 4 | 99-7350 | 1 | Decal-Information |
| 6 | 108-3137 | 1 | Rear Frame ASM |
| 6:2 | 99-7345 | 2 | Decal-Warning |
| 7 | 32120-47 | 2 | Ring-Retaining, External |
| 9 | 2412-89 | 2 | Clamp |
| 10 | 321-6 | 2 | Screw-HH |
| 11 | 32128-33 | 2 | Nut-HF |
| 13 | 327-4 | 4 | Screw-HH |
| 14 | 87-2440 | 1 | Bumper-Rubber |
| 18 | 32128-54 | 2 | Nut-HF |
| 19 | 3214-2 | 2 | Screw-HH |
| 20 | 99-7685 | 1 | LH A-Arm ASM |
| 20:4 | 3-0348 | 2 | Bushing |
| 21 | 302-5 | 2 | Fitting-Grease |
| 22 | 3296-23 | 2 | Nut-Lock, NI |
| 23 | 328-24 | 5 | Screw-HH |
| 24 | 3254-7 | 4 | Washer-Lock, Int |
| 25 | 325-17 | 2 | Screw-HH |
| 26 | 99-7684 | 1 | RH A-Arm ASM |
| 26:4 | 3-0348 | 2 | Bushing |
| 29 | 3290-379 | 12 | Tie-Cable |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 30 | 104-7197-03 | 1 | Front Frame ASM |
| 31 | 99-7700 | 1 | Pivot Yoke ASM |
| 32 | 3234-11 | 4 | Screw-HHF |
| 33 | 99-7667 | 4 | Washer-Flat |
| 34 | 87-3060 | 1 | Washer-Hardened |
| 37 | 104-6591 | 1 | Decal-Capacity |
| 38 | 95-5686 | 1 | Trim |

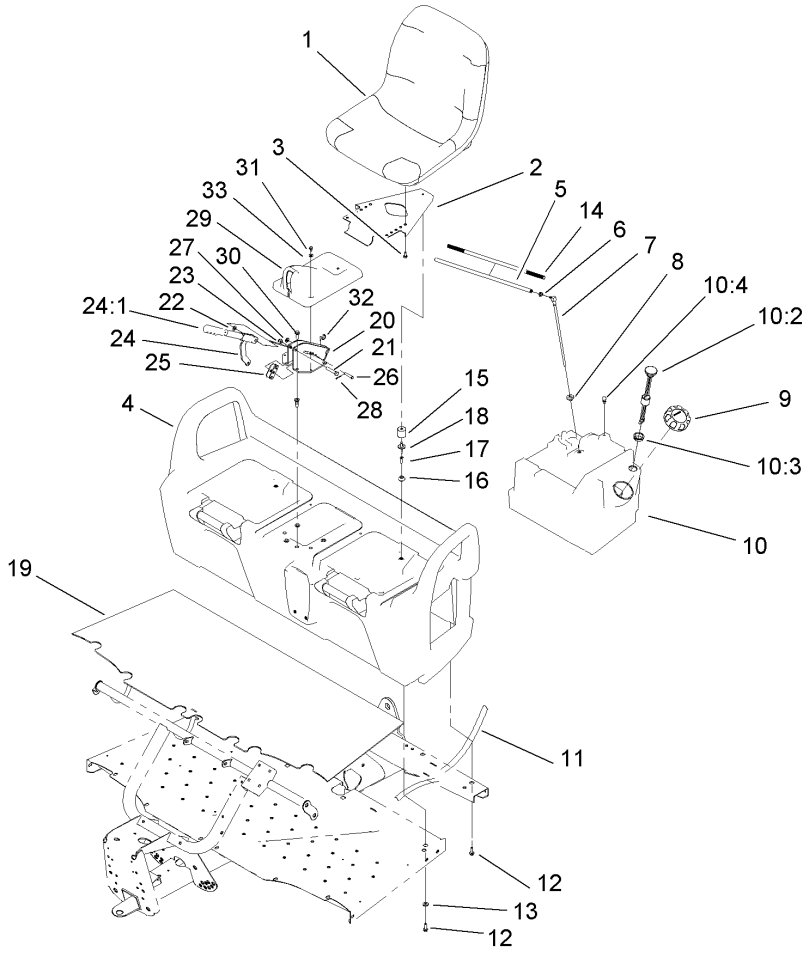


# Seat Base Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 106-6672 | 2 | Seat |
| 2 | 99-7829 | 2 | Bracket-Seat |
| 3 | 33114-016 | 8 | Screw-HH |
| 4 | 104-6847 | 1 | Seat Base ASM |
| 5 | 108-4582 | 1 | Hose-Fuel |
| 6 | 2412-98 | 1 | Clamp |
| 7 | 99-7264 | 1 | Pipe-Stand |
| 8 | 46-6560 | 1 | Bushing |
| 9 | 95-4192 | 1 | Unleaded Gas Cap ASM |
| 10 | 99-7323 | 1 | Fuel Tank ASM |
| 10:2 | 99-7262 | 1 | Gauge-Fuel |
| 10:3 | 95-8972 | 1 | Grommet |
| 10:4 | 99-7267 | 1 | Vent-Air |
| 11 | 3339-175 | 1 | Strapping-Web, 48 Inch |
| 12 | 3234-17 | 8 | Screw-HHF |
| 13 | 88-7200 | 8 | Washer-Flat |
| 14 | 99-7129 | 1 | Conduit-Line, Fuel |
| 15 | 99-7830 | 2 | Rubber Receptical ASM |
| 16 | 99-7833 | 2 | Post-Holding |
| 17 | 32108-5 | 2 | Screw-FH |
| 18 | 3290-412 | 2 | Rivet |
| 19 | 104-6590 | 1 | Mat-Floor |
| 20 | 104-6844-03 | 1 | Support-Brake, Park |
| 21 | 323-10 | 1 | Screw-HH |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 22 | 3290-477 | 1 | Washer-Curved |
| 23 | 3296-39 | 1 | Nut-Lock, NI |
| 24 | 104-6842 | 1 | Lever-Brake, Park |
| 24:1 | 106-7972 | 1 | Grip-Handle |
| 25 | 87-3480 | 1 | Bracket-Equalizer, Cable |
| 26 | 94-3829 | 1 | Pin-Clevis |
| 27 | 3256-23 | 1 | Washer-Flat |
| 28 | 3272-6 | 1 | Pin-Cotter |
| 29 | 104-7014 | 1 | Cover-Brake, Parking |
| 30 | 3234-17 | 4 | Screw-HHF |
| 31 | 12-3270 | 2 | Screw |
| 32 | 32120-47 | 2 | Ring-Retaining, External |
| 33 | 3256-1 | 2 | Washer-Flat |

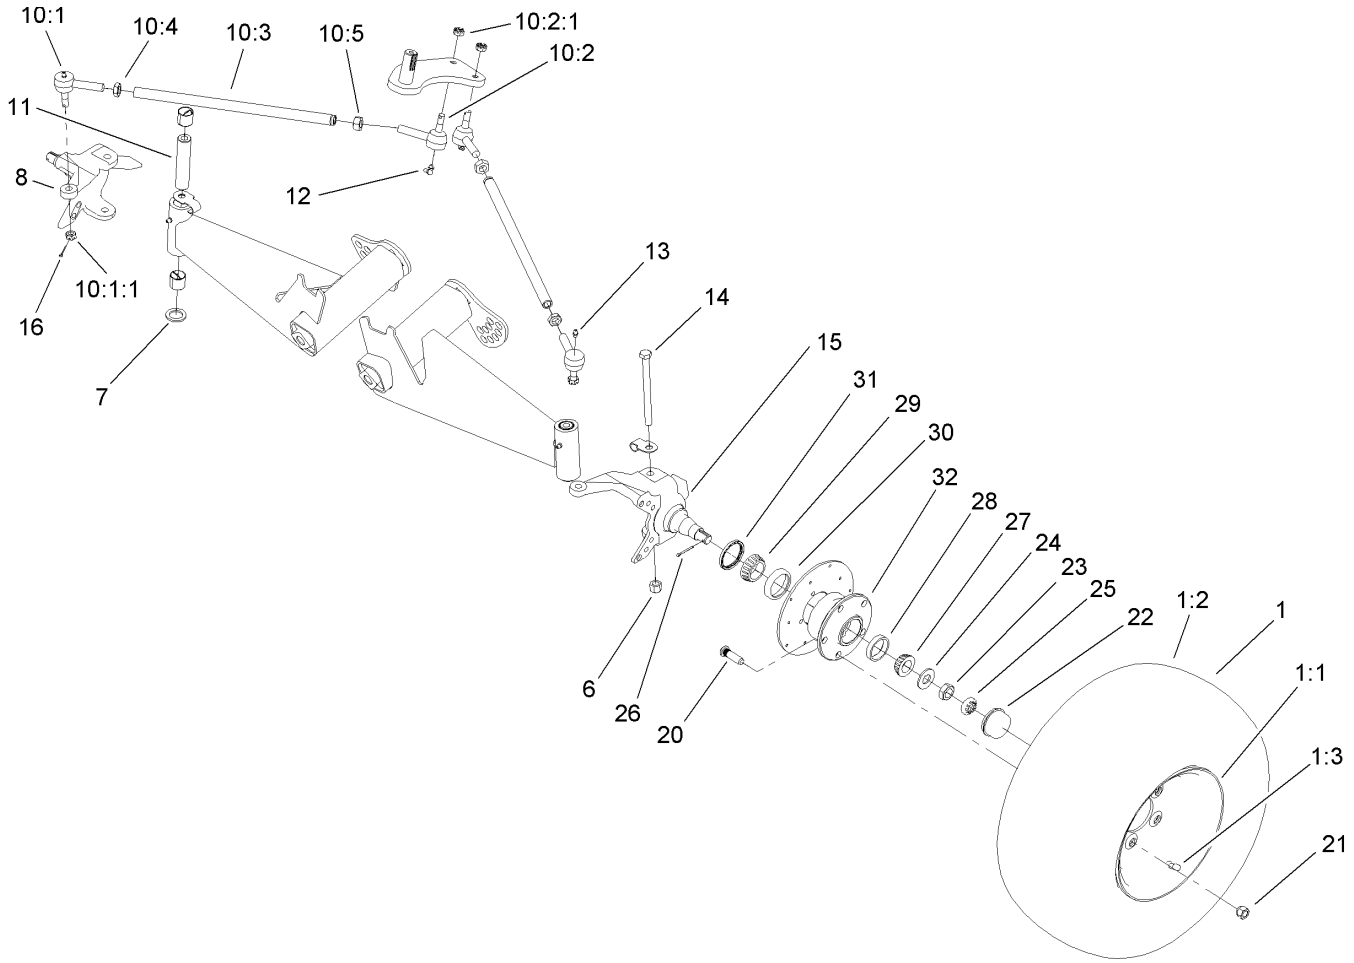


# Front Tire and Steering Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-7290 | 2 | Tire \ Wheel ASM |
| 1:1 | 104-7288 | 1 | Wheel |
| 1:2 | 104-7289 | 1 | Tire |
| 1:3 | 232-27 | 1 | Stem-Valve |
| 6 | 3296-23 | 2 | Nut-Lock, NI |
| 7 | 256-115 | 2 | Washer-Thrust |
| 8 | 104-6877 | 1 | Spindle-Disc, RH |
| ❷10 | | 2 | Rod-Tie |
| 10:1 | 112772-03 | 1 | Joint-Ball, RH |
| 10:1:1 | 915031 | 1 | Nut |
| 10:2 | 112771-03 | 1 | Joint-Ball, LH |
| 10:2:1 | 915031 | 1 | Nut |
| 10:3 | 99-7600-03 | 1 | Rod-Tie |
| 10:4 | 3220-11 | 1 | Nut-Jam |
| 10:5 | 3218-21 | 1 | Nut-Jam |
| 11 | 99-7499 | 2 | Sleeve-Kingpin |
| 12 | 302-60 | 2 | Fitting-Grease, 90 DEG |
| 13 | 302-5 | 2 | Fitting-Grease |
| 14 | 325-20 | 2 | Screw-HH |
| 15 | 104-6876 | 1 | Spindle-Disc, LH |
| 16 | 3272-7 | 4 | Pin-Cotter |
| 20 | 10-6830 | 10 | Stud-Type, Drive |
| 21 | 242-50 | 10 | Nut-Lug |
| 22 | 241-119 | 2 | Cap-Dust |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 23 | 3220-7 | 2 | Nut-Jam |
| 24 | 93-0309 | 2 | Washer-Tab |
| 25 | 93-0307 | 2 | Nut-Lock, Retainer |
| 26 | 3272-12 | 2 | Pin-Cotter |
| 27 | 254-94 | 2 | Bearing-Cone, Tapered |
| 28 | 254-72 | 2 | Bearing-Cup, Tapered |
| 29 | 254-106 | 2 | Cone-Bearing, Tapered |
| 30 | 254-107 | 2 | Cup-Bearing, Tapered |
| 31 | 108-7019 | 2 | Seal-Shaft |
| 32 | 104-6809 | 2 | Hub |

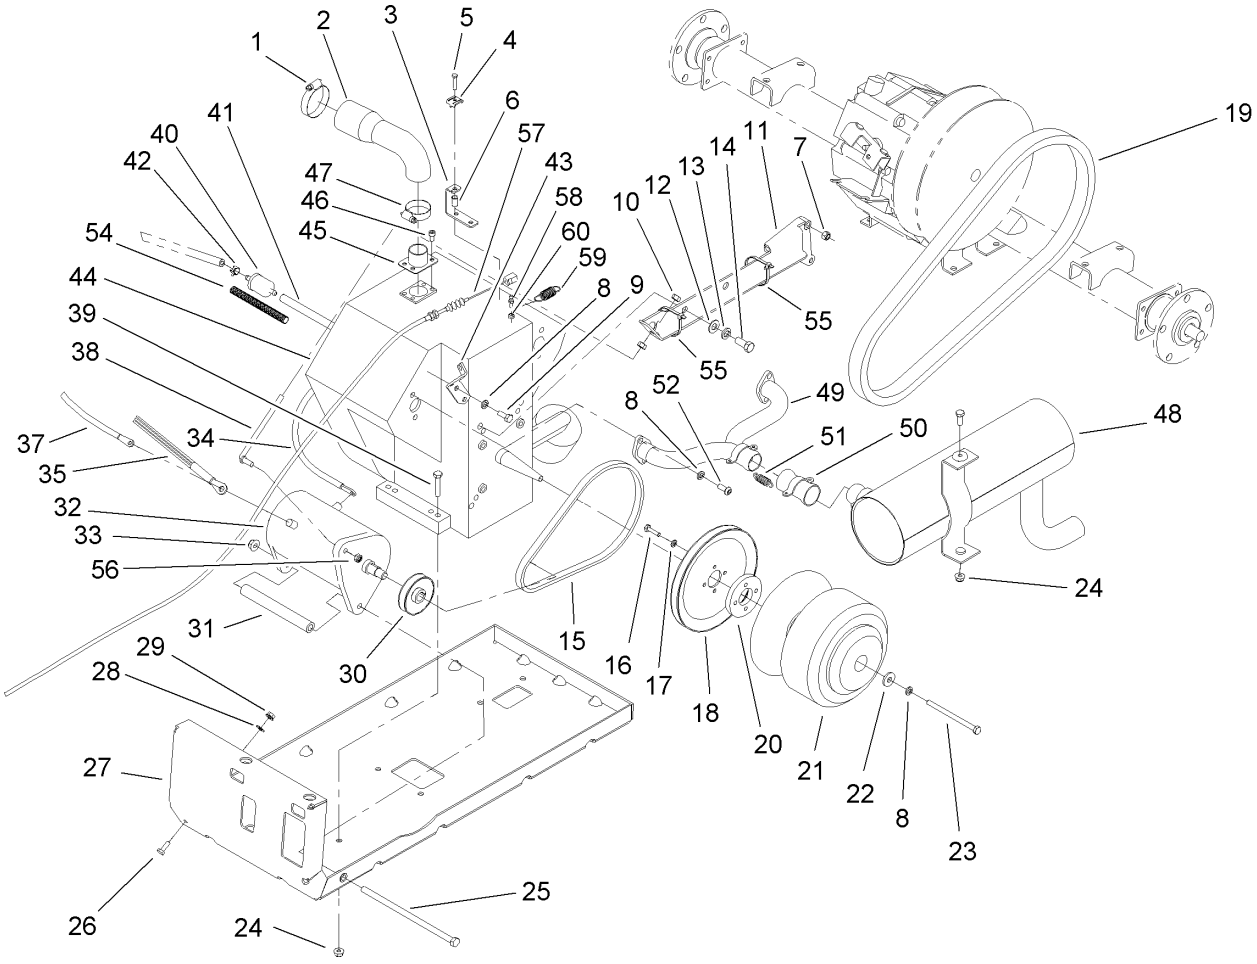


# Engine and Clutch Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 2412-130 | 1 | Clamp-Hose |
| 2 | 99-7106 | 1 | Hose-Intake |
| 3 | 107-0319 | 1 | Bracket-Cable |
| 4 | 81-1690 | 1 | Clamp-Cable |
| 5 | 3290-432 | 1 | Screw-HH |
| 6 | 32148-14 | 1 | Insert-Threaded |
| 7 | 33024-00 | 2 | Nut-Lock |
| 8 | 3253-4 | 6 | Washer-Lock |
| 9 | 66-3160 | 2 | Screw-Cap |
| 10 | 3217-6 | 2 | Nut-Hex |
| 11 | 104-6631-03 | 1 | Torque Arm ASM |
| 12 | 3256-25 | 2 | Washer-Flat |
| 13 | 3253-6 | 2 | Washer-Lock |
| 14 | 324-4 | 2 | Screw-HH |
| 15 | 99-7133 | 1 | V-Belt-Starter |
| 16 | 321-6 | 4 | Screw-HH |
| 17 | 3253-3 | 4 | Washer-Lock |
| 18 | 99-7131 | 1 | Pulley-Engine |
| 19 | 99-7144 | 1 | Belt-Drive |
| 20 | 99-7064 | 1 | Spacer-Starter |
| 21 | 108-7013 | 1 | Clutch-Drive |
| 22 | 5-0838 | 1 | Washer |
| 23 | 99-7201 | 1 | Screw-HH |
| 24 | 104-8300 | 5 | Nut-Flange, NI |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 25 | 99-7203 | 1 | Screw |
| 26 | 321-4 | 1 | Screw-HH |
| 27 | 104-6433-03 | 1 | Mount-Engine |
| 28 | 3255-8 | 1 | Washer-Lock |
| 29 | 32128-32 | 1 | Nut-HHF |
| 30 | 99-7130 | 1 | Pulley-Starter |
| 31 | 99-7053 | 1 | Pivot-Starter |
| 32 | 99-7108 | 1 | Generator-Starter |
| 33 | 104-8301 | 2 | Nut-Flange, NI |
| 34 | 99-7403 | 1 | Cable-Negitive |
| 35 | 99-7437 | 1 | Harness-Wire, Engine |
| 37 | 104-6926 | 1 | Cable-Positive |
| 38 | 104-6629 | 1 | Rod-Starter |
| 39 | 322-8 | 4 | Screw-HH |
| 40 | 94-2690 | 1 | Filter-Fuel |
| 41 | 109-0678 | 1 | Hose-Fuel |
| 42 | 2412-98 | 3 | Clamp |
| 43 | 104-7152 | 1 | Bracket-Cable, Throttle |
| 44 | 107-0353 | 1 | Engine-Briggs & Stratton, 303440-1326-E1 |
| 45 | 99-7083 | 1 | Bracket-Intake |
| 46 | 99-7202 | 4 | Screw |
| 47 | 2412-3 | 1 | Clamp-Hose |
| 48 | 104-6475 | 1 | Muffler-Engine |

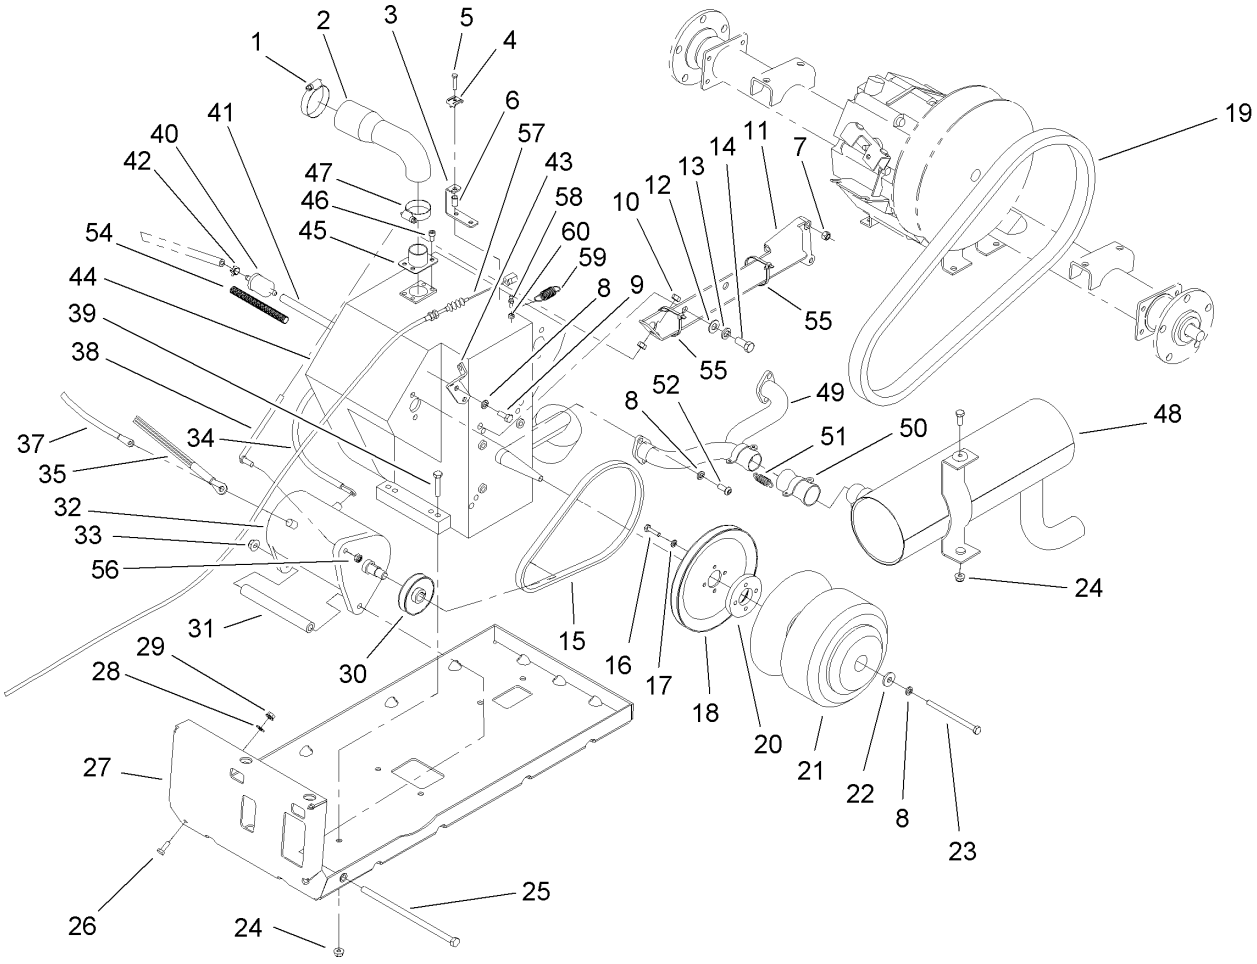



# Engine and Clutch Assembly (continued)

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 49 | 104-6476 | 1 | Manifold-Engine |
| 50 | 104-6477 | 1 | Coupler-Exhaust |
| 51 | 104-6478 | 4 | Spring-Coupler, Exhaust |
| 52 | 3274-96 | 4 | Screw |
| 54 | 99-7377 | 1 | Conduit-Line, Fuel |
| 55 | 3290-379 | 2 | Tie-Cable |
| 56 | 3296-20 | 1 | Nut-Lock, NI |
| 57 | 108-7017 | 1 | Cable-Accelerator |
| 58 | 99-7847 | 1 | Ball-Stud |
| 59 | 71-5470 | 1 | Spring-Brake |
| 60 | 110-2619 | 1 | Keeper-Spring |

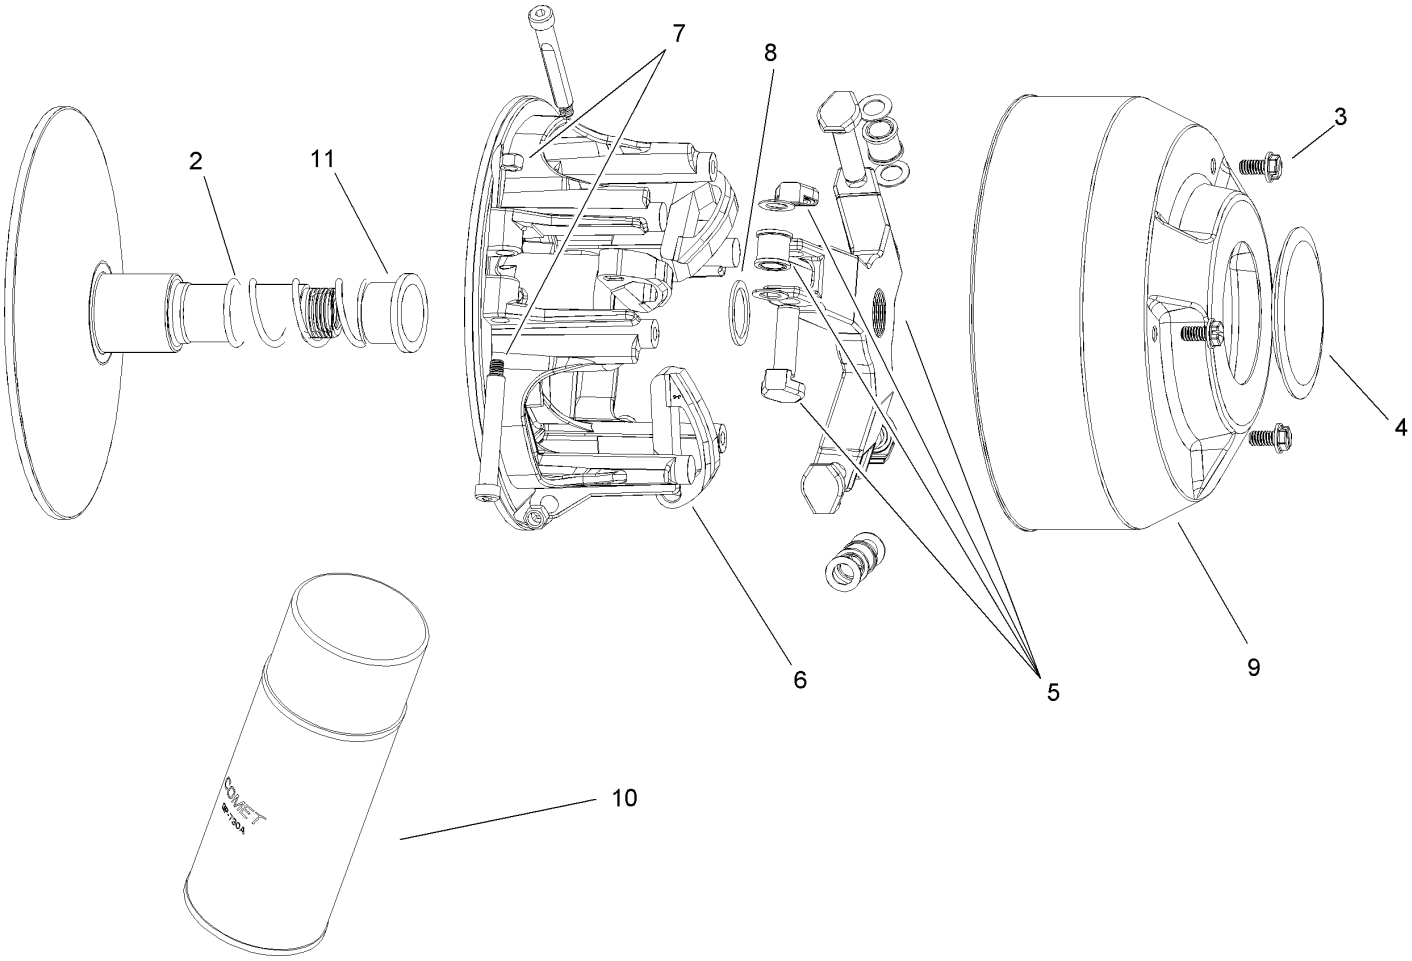


# Drive Clutch Assembly No. 108-7013


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 2 | 104-1686 | 1 | Spring |
| 3 | 3234-26 | 3 | Screw |
| 4 | 104-1690 | 1 | Cap |
| 5 | 108-3047 | 1 | Spider ASM |
| 6 | 108-7008 | 1 | Arm-Cam (Set Of 3) |
| 7 | 104-4256 | 1 | Pivot Bolt And Nut Kit |
| 8 | 104-1687 | 1 | Spacer |
| 9 | 104-1691 | 1 | Cover |
| 10 | 104-7011 | 1 | Lubricant-Dry |
| 11 | 108-3048 | 1 | Spacer-Clutch |

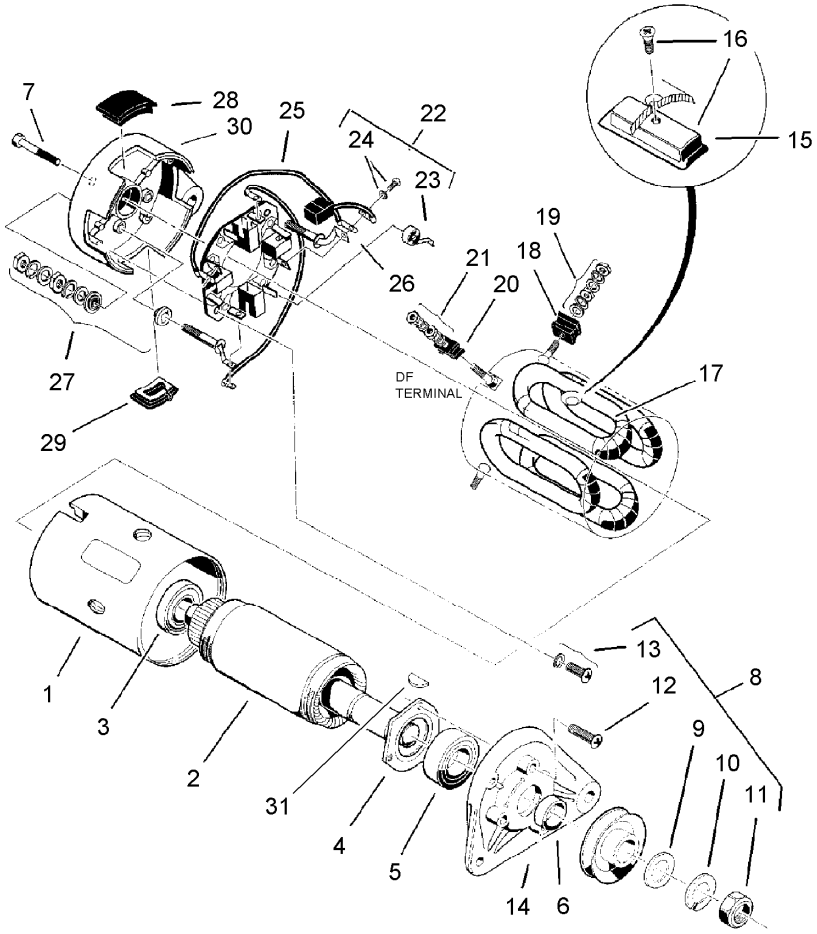


# Starter Generator Assembly No. 99-7108

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷1 | | 1 | Yoke |
| 2 | 104-1210 | 1 | Armature Kit |
| 3 | 104-1211 | 1 | Bearing-Ball, Rear |
| 4 | 104-1212 | 1 | Retainer |
| 5 | 104-1213 | 1 | Bearing-Ball, Front |
| 6 | 104-1214 | 1 | Spacer |
| 7 | 104-1215 | 2 | Bolt |
| ❷8 | | 1 | Nut And Screw Set |
| 9 | 104-1216 | 1 | Washer-Plain |
| 10 | 104-1217 | 1 | Washer-Spring |
| 11 | 104-1218 | 1 | Nut-Hex |
| ❷12 | | 3 | Screw-Flange |
| 13 | 104-1219 | 2 | Set-Screw |
| 14 | 104-1220 | 1 | Bracket-Front |
| ❷15 | | 4 | Pole |
| 16 | 104-1221 | 1 | Set-Pole And Screw |
| 17 | 104-1222 | 1 | Field Stator Coil ASM |
| ❷18 | | 2 | F Mold |
| 19 | 104-1223 | 2 | Set-Screw |
| ❷20 | | 1 | D F Mold |
| 21 | 104-1224 | 1 | Set-Screw |
| 22 | 104-1225 | 1 | Brush Holder Kit |
| 23 | 104-1226 | 4 | Spring-Brush |
| 24 | 104-1227 | 1 | Brush And Screw Set |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷25 | | 2 | Brush Connector ASM |
| ❷26 | | 2 | A Terminal ASM |
| 27 | 104-1228 | 2 | Screw And Mold ASM |
| ❷28 | | 1 | Cover Set |
| ❷29 | | 1 | Cover B |
| ❷30 | | 1 | Bracket-Rear |
| 31 | 3257-3 | 1 | Key-Woodruff |

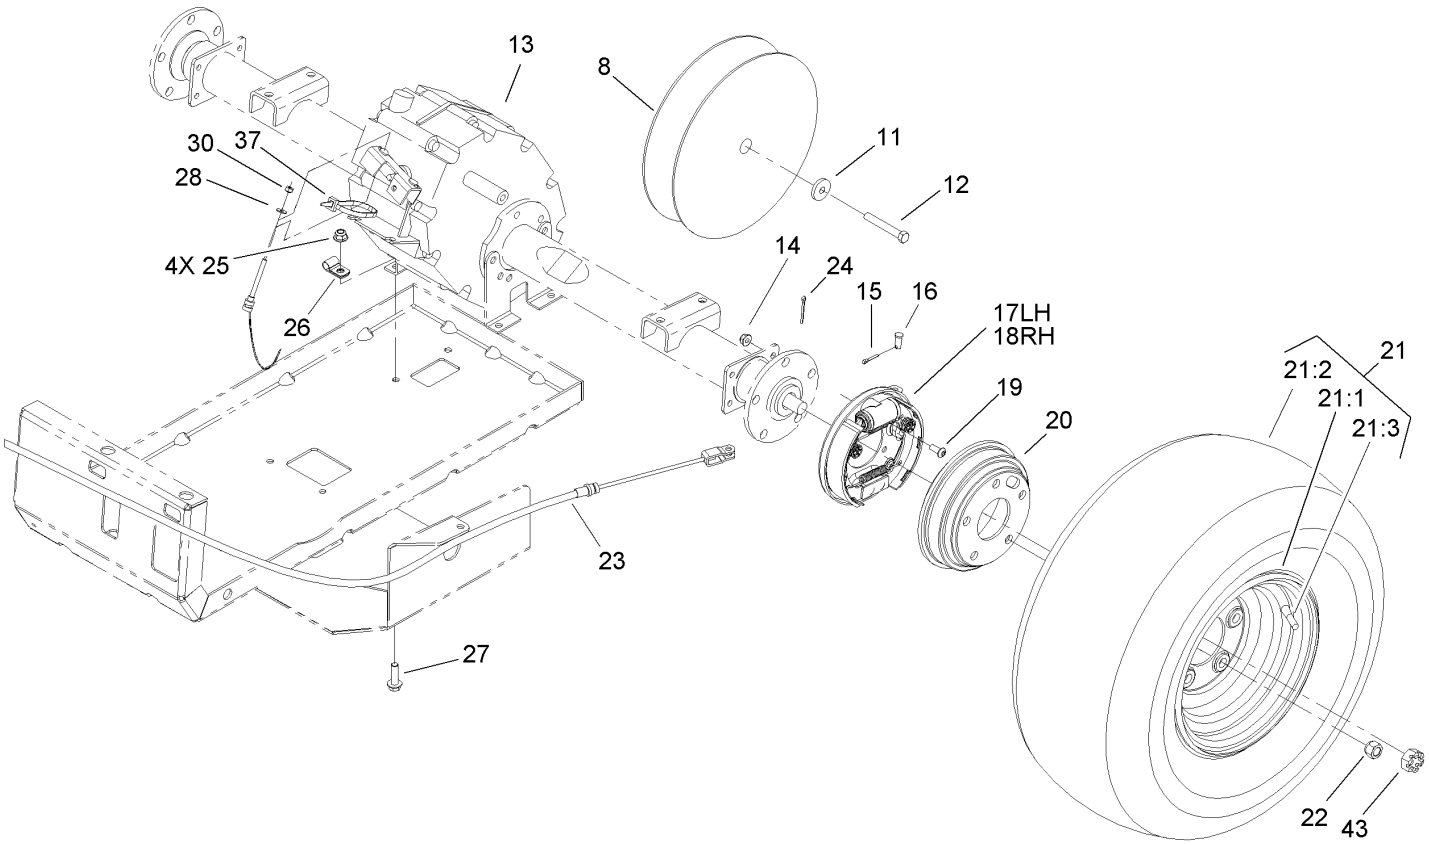



# Rear Tire and Transaxle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 8 | 99-7104 | 1 | Clutch-Driven |
| 11 | 104-6563 | 1 | Washer-Stepped |
| 12 | 104-6564 | 1 | Screw-HH |
| 13 | 107-0360 | 1 | Transaxle |
| 14 | 104-8300 | 8 | Nut-Flange, NI |
| 15 | 3272-10 | 2 | Pin-Cotter |
| 16 | 283-62 | 2 | Pin-Clevis |
| 17 | 104-6807 | 1 | LH Brake ASM |
| 18 | 104-6806 | 1 | RH Brake ASM |
| 19 | 3274-55 | 8 | Screw-HSBH |
| 20 | 104-6500 | 2 | Drum-Brake |
| 21 | 104-7282 | 2 | Tire And Wheel ASM |
| 21:1 | 104-7279 | 1 | Wheel |
| 21:2 | 104-7281 | 1 | Tire |
| 21:3 | 232-27 | 1 | Stem-Valve |
| 22 | 242-50 | 10 | Nut-Lug |
| 23 | 104-6846 | 2 | Cable-Brake, Park |
| 24 | 3272-42 | 2 | Pin-Cotter |
| 25 | 104-8301 | 4 | Nut-Flange, NI |
| 26 | 2412-10 | 1 | R-Clamp |
| 27 | 3234-24 | 4 | Screw-HHF |
| 28 | 3256-49 | 2 | Washer-Flat |
| 30 | 3296-2 | 2 | Nut-Lock |
| 37 | 3290-378 | 1 | Tie-Cable |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 43 | 104-1656 | 2 | Nut-Castle |


# Transaxle Assembly No. 107-0360

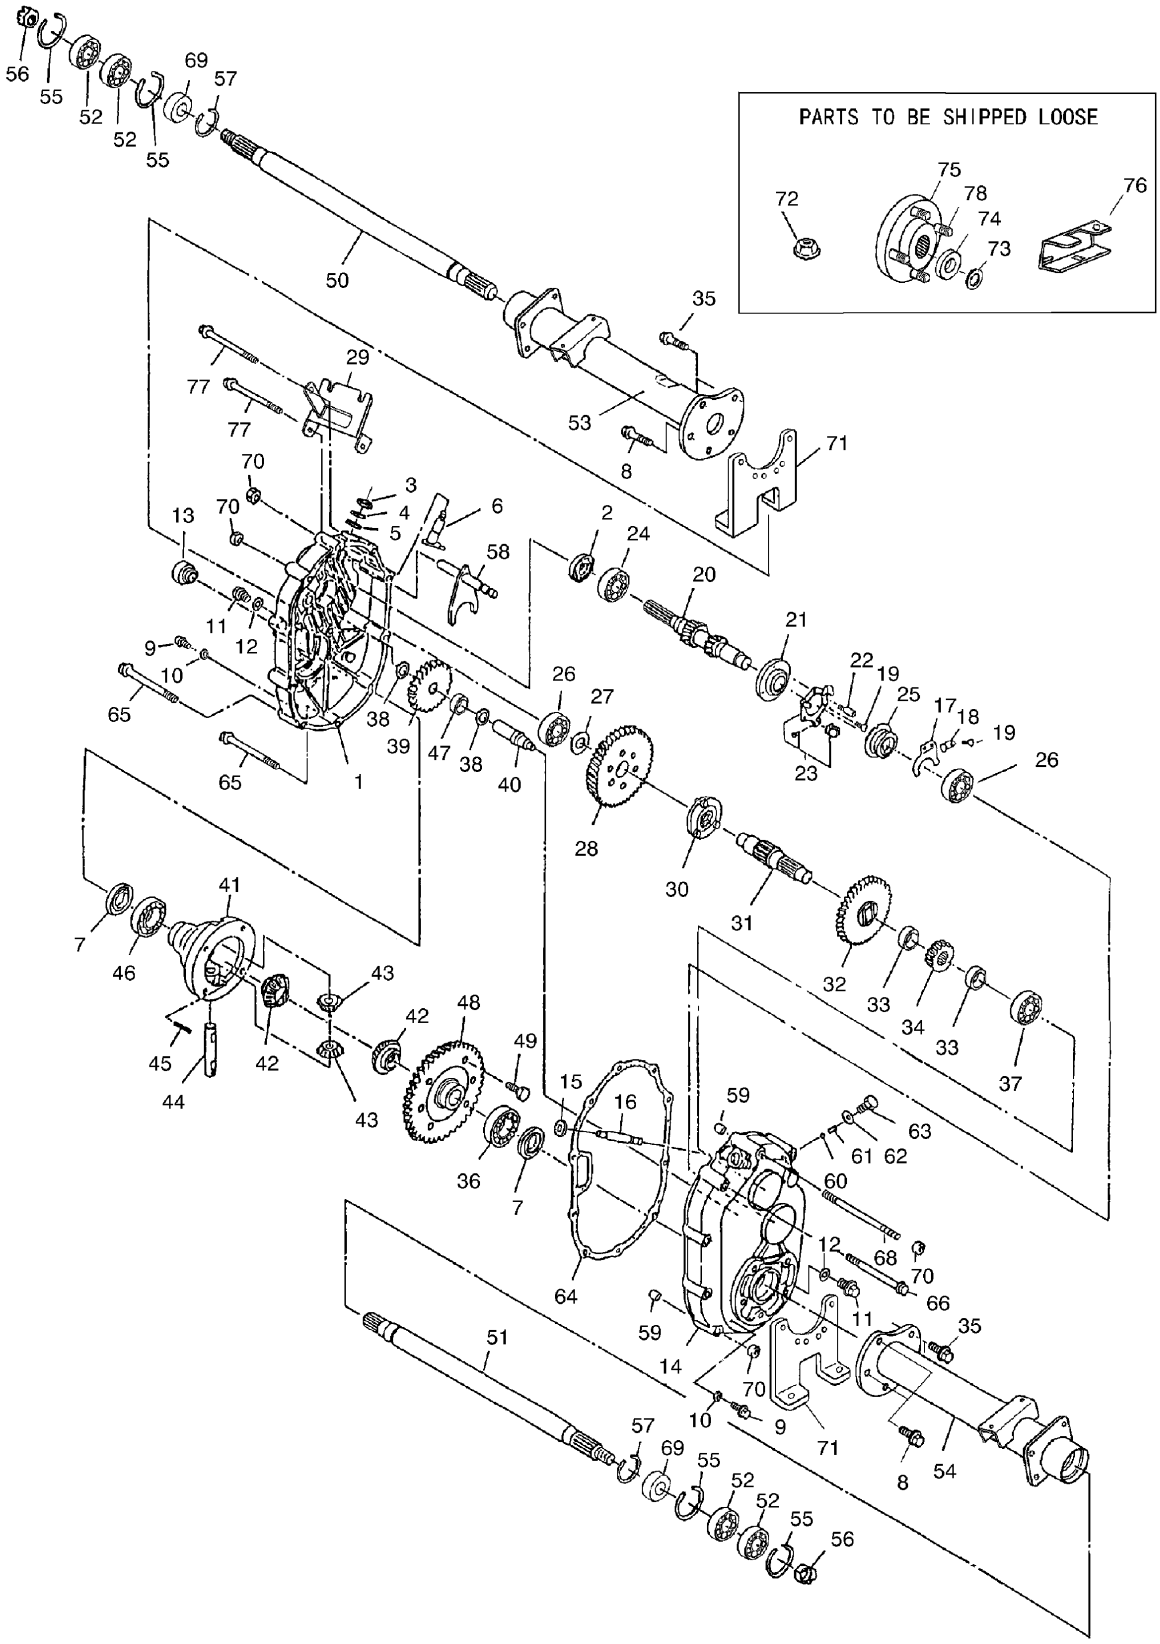

# Transaxle Assembly No. 107-0360


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-1601 | 1 | Case-LH, Complete |
| 2 | 104-1602 | 1 | Seal-Oil |
| 3 | 104-1603 | 1 | Seal-Oil |
| 4 | 104-1604 | 1 | Ring-Snap |
| 5 | 104-1605 | 1 | Spacer |
| 6 | 104-1606 | 1 | Shaft-Selector |
| 7 | 104-1607 | 2 | Seal-Oil |
| 8 | 104-1608 | 4 | Bolt-Flange |
| 9 | 104-1609 | 2 | Plug-Check, Oil |
| 10 | 104-1610 | 2 | Gasket |
| 11 | 104-1611 | 2 | Plug-Drain, Oil |
| 12 | 104-1612 | 2 | Gasket |
| 13 | 104-1613 | 1 | Plug-Filler, Oil |
| 14 | 104-1614 | 1 | Case-Complete, RH |
| 15 | 104-1615 | 1 | Seal-Oil |
| 16 | 104-1616 | 1 | Shaft-Governor |
| 17 | 104-1617 | 1 | Fork-Governor |
| 18 | 104-1618 | 1 | Stopper |
| 19 | 104-1619 | 4 | Screw And Washer ASM |
| 20 | 104-7020 | 1 | Shaft-Input, Complete |
| 21 | 104-1621 | 1 | Base-Governor |
| 22 | 104-1622 | 1 | Pin-Lock |
| 23 | 104-1623 | 1 | Unit-Plate, Governor |
| 24 | 104-1624 | 1 | Bearing-Ball |
| 25 | 104-1625 | 1 | Sleeve-Governor |
| 26 | 104-1626 | 2 | Bearing-Ball |
| 27 | 104-1627 | 1 | Spacer |
| 28 | 104-1628 | 1 | Gear |
| 29 | 104-1629 | 1 | Bracket-Wire, Change |
| 30 | 104-1630 | 1 | Clutch-Pin |
| 31 | 104-1631 | 1 | Shaft-Center |
| 32 | 104-1632 | 1 | Gear-47 |
| 33 | 104-1633 | 2 | Collar |
| 34 | 104-1634 | 1 | Gear |
| 35 | 104-1635 | 6 | Bolt-Flange |
| 36 | 104-1636 | 1 | Bearing-Ball |
| 37 | 104-1637 | 1 | Bearing-Ball |
| 38 | 104-1638 | 2 | Spacer |
| 39 | 104-1639 | 1 | Gear-34 |
| 40 | 104-1640 | 1 | Shaft-Counter |
| 41 | 104-1641 | 1 | Case-Differential |
| 42 | 104-1642 | 2 | Gear-Side, Differential |
| 43 | 104-1643 | 2 | Pinion-Differential |
| 44 | 104-1644 | 1 | Shaft-Differential |
| 45 | 104-1645 | 1 | Pin |
| 46 | 104-1646 | 1 | Bearing-Ball |
| 47 | 104-1647 | 1 | Bearing-Needle |
| 48 | 104-1648 | 1 | Gear-62 |
| 49 | 104-1649 | 6 | Bolt |
| 50 | 104-1650 | 1 | Shaft-Axle, LH |
| 51 | 104-1651 | 1 | Shaft-Axle, RH |
| 52 | 104-1652 | 4 | Bearing-Ball |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 53 | 104-1653 | 1 | Case-Axle, LH |
| 54 | 104-1654 | 1 | Case-Axle, RH |
| 55 | 104-1655 | 4 | Ring-Snap |
| 56 | 104-1656 | 2 | Nut-Castle |
| 57 | 104-1657 | 2 | Ring-Snap |
| 58 | 104-6870 | 1 | Shaft-Shift, Complete |
| 59 | 104-1659 | 2 | Knock-Pipe |
| 60 | 104-1660 | 1 | Ball-Steel |
| 61 | 104-1661 | 1 | Spring |
| 62 | 104-1662 | 1 | Gasket |
| 63 | 104-1663 | 1 | Bolt |
| 64 | 104-1664 | 1 | Gasket |
| 65 | 104-1665 | 6 | Bolt-Flange |
| 66 | 104-1666 | 1 | Bolt-Flange |
| 68 | 104-6866 | 1 | Bolt |
| 69 | 104-6867 | 2 | Collar |
| 70 | 33004-00 | 11 | Nut-HF |
| 71 | 104-1671 | 2 | Bracket-Axle |
| 72 | 104-1672 | 1 | Nut-Lock |
| 73 | 104-1673 | 2 | Washer-Spring |
| 74 | 104-1674 | 2 | Washer |
| 75 | 104-1675 | 2 | Hub |
| 76 | 104-6860 | 1 | Lever-Select |
| 77 | 104-6869 | 2 | Bolt-Flange |
| 78 | 104-8649 | 10 | Stud |

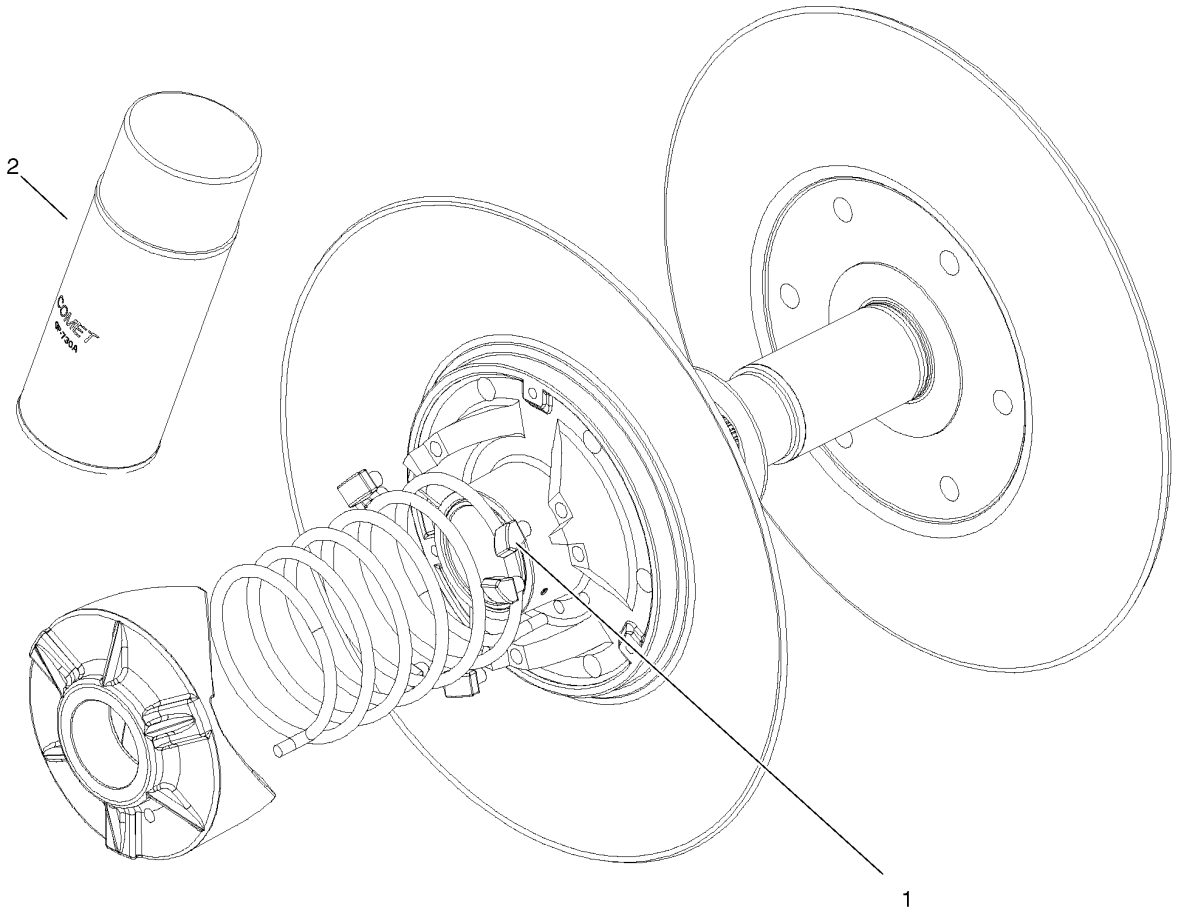



# Driven Clutch Assembly No. 99-7104

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-4257 | 1 | Button Kit |
| 2 | 104-7011 | 1 | Lubricant-Dry |

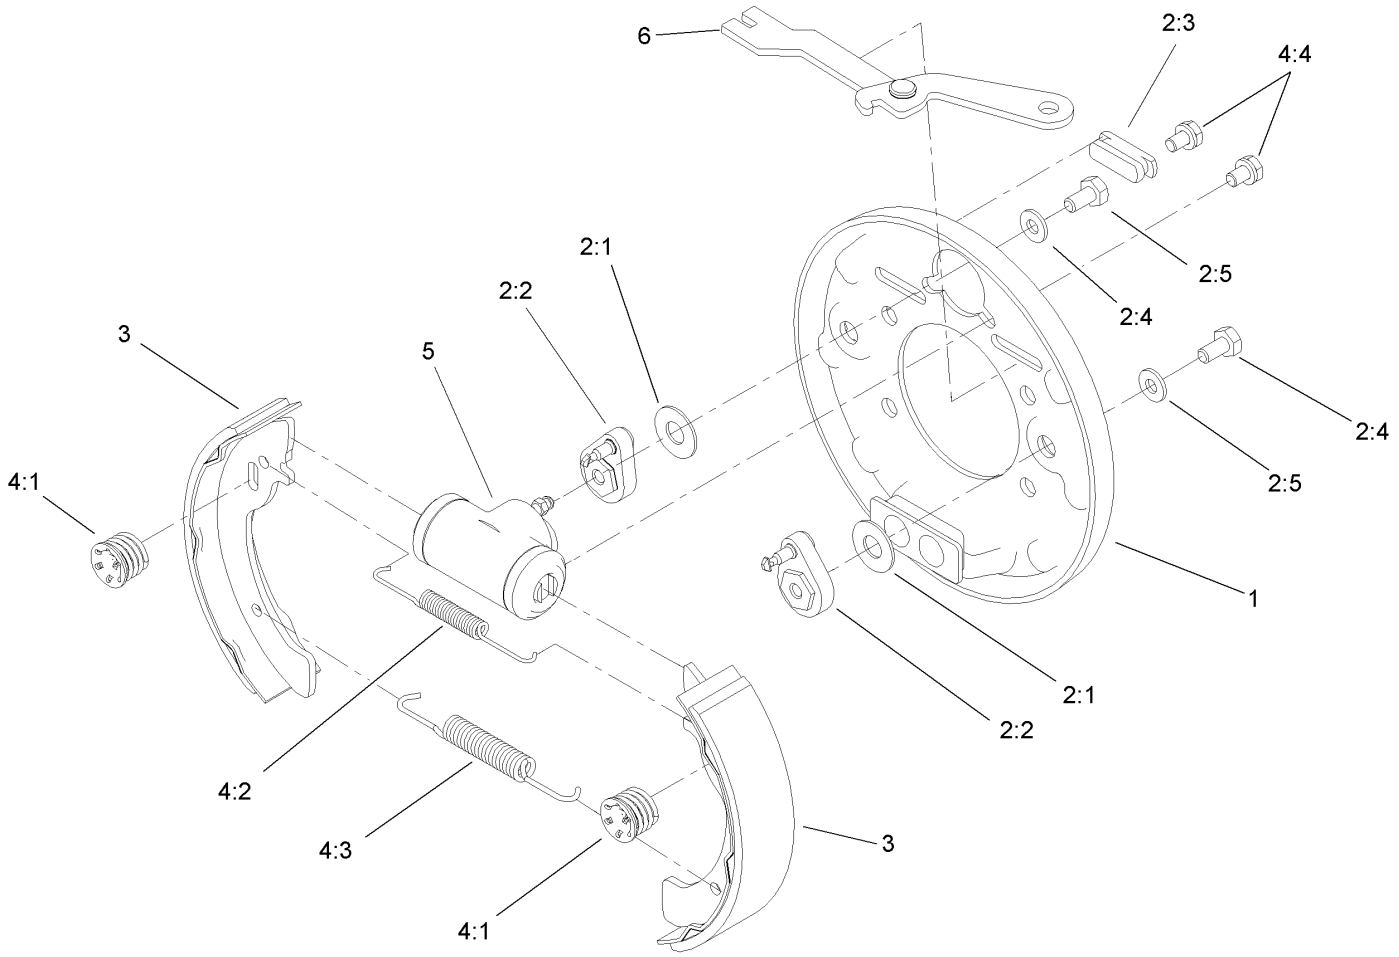



# Left Hand Brake Assembly No. 104-6807

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-8586 | 1 | Backing Plate ASM |
| 2 | 104-6820 | 1 | Adjuster Kit |
| 2:1 | 100-8585 | 2 | Washer-Bellville |
| 2:2 | 100-8588 | 2 | Adjuster Lever ASM |
| 2:3 | 100-8584 | 2 | Cover-Dust |
| ❷2:4 | | 2 | Screw |
| ❷2:5 | | 2 | Bolt |
| 3 | 104-6818 | 4 | Shoe And Lining Kit |
| 4 | 104-6819 | 1 | Hardware Kit |
| 4:1 | 100-8583 | 2 | Shoe Hold Down Spring ASM |
| 4:2 | 100-8581 | 2 | Spring-Upper |
| 4:3 | 100-8582 | 2 | Spring-Lower |
| ❷4:4 | | 2 | Bolt And Washer |
| 5 | 104-6824 | 1 | Wheel Cylinder ASM |
| 6 | 104-6825 | 1 | LH Park Brake Lever ASM |

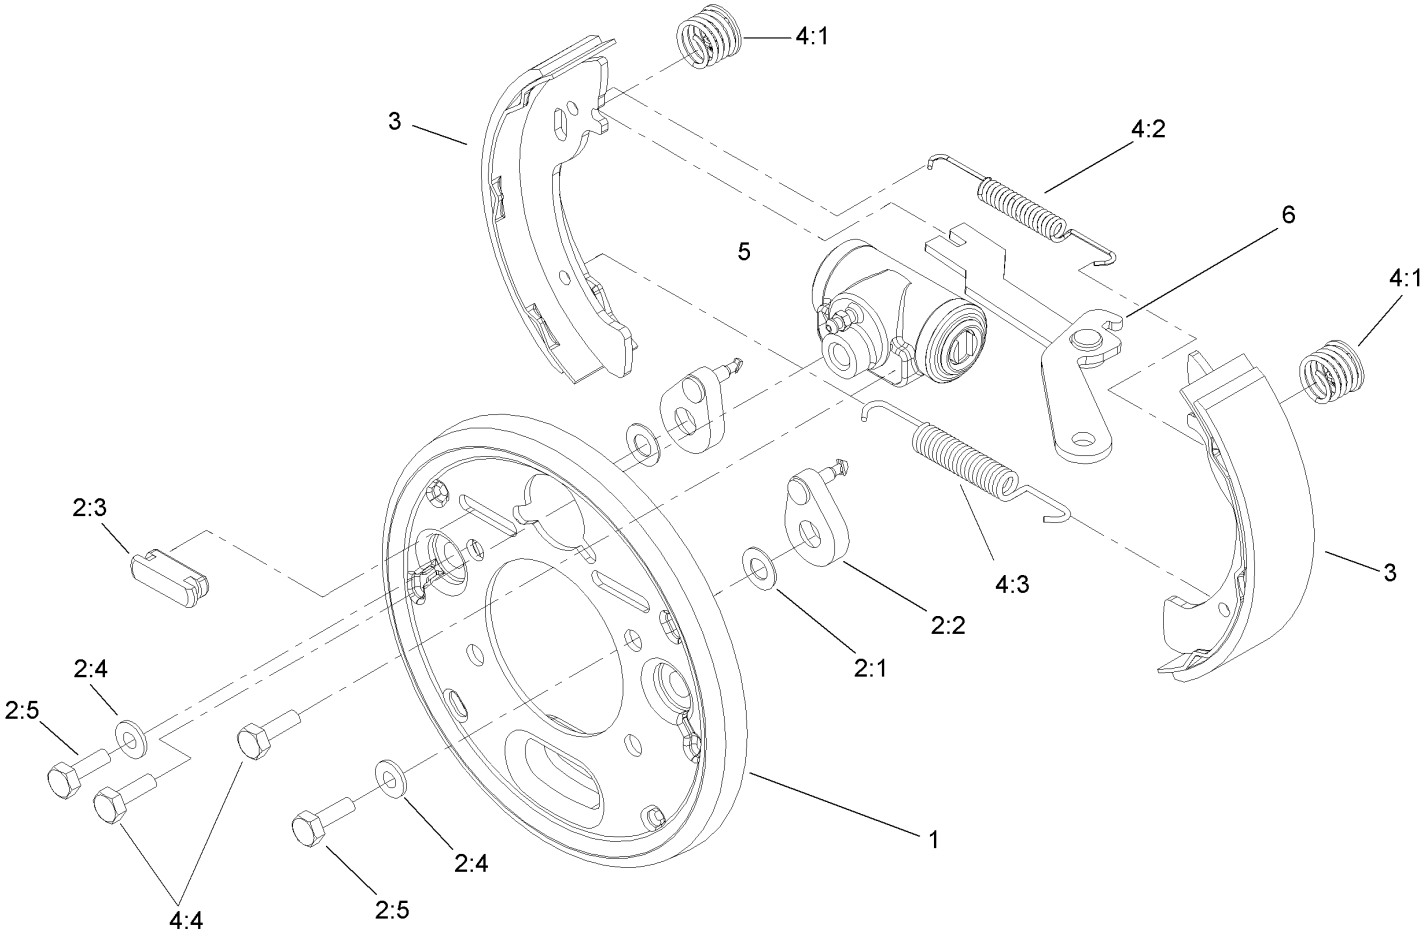


# Right Hand Brake Assembly No. 104-6806


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-8586 | 1 | Backing Plate ASM |
| 2 | 104-6820 | 1 | Adjuster Kit |
| 2:1 | 100-8585 | 2 | Washer-Bellville |
| 2:2 | 100-8588 | 2 | Adjuster Lever ASM |
| 2:3 | 100-8584 | 2 | Cover-Dust |
| ❷2:4 | | 2 | Screw |
| ❷2:5 | | 2 | Bolt |
| 3 | 104-6818 | 4 | Shoe And Lining Kit |
| 4 | 104-6819 | 1 | Hardware Kit |
| 4:1 | 100-8583 | 2 | Shoe Hold Down Spring ASM |
| 4:2 | 100-8581 | 2 | Spring-Upper |
| 4:3 | 100-8582 | 2 | Spring-Lower |
| ❷4:4 | | 2 | Bolt & Washer |
| 5 | 104-6824 | 1 | Wheel Cylinder ASM |
| 6 | 104-6826 | 1 | RH Park Brake Lever ASM |

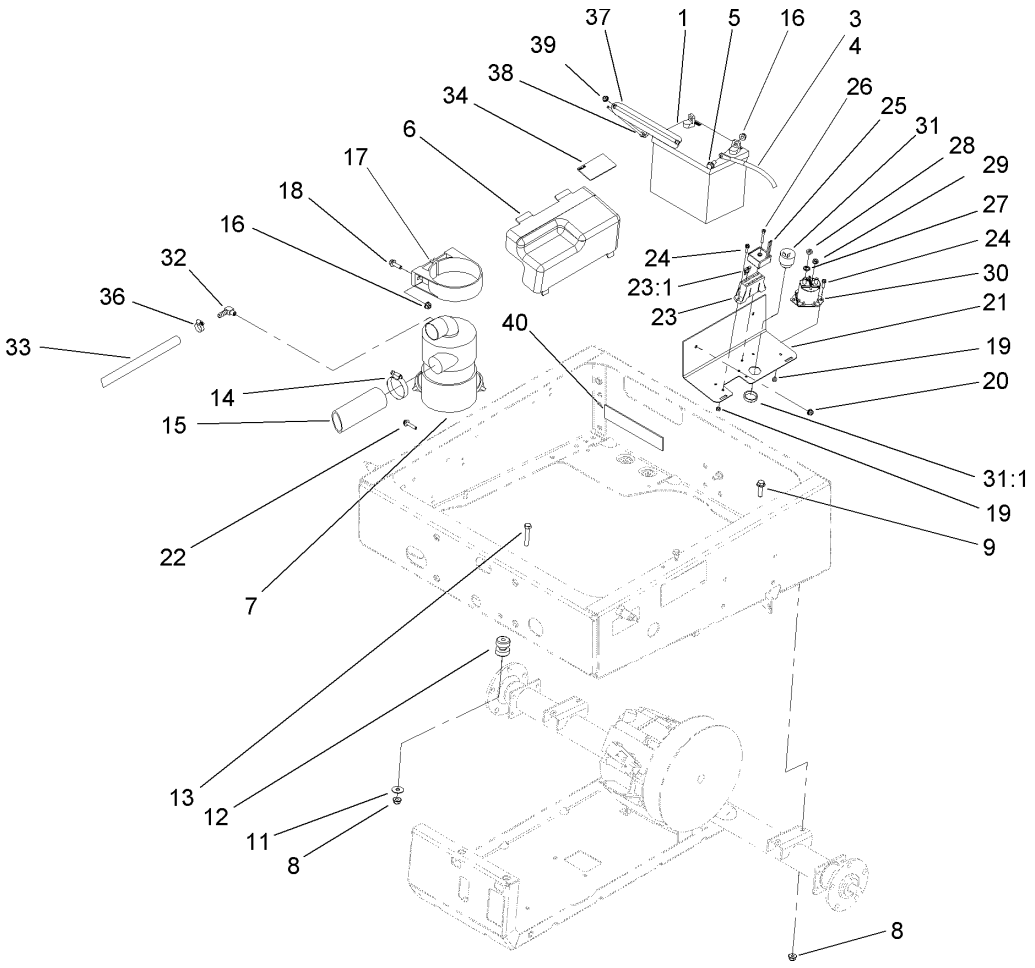


# Drivetrain Mounting, Battery and Air Cleaner Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-8162 | 1 | Battery |
| 3 | 99-7415 | 1 | Cable-Negitive |
| 4 | 99-7404 | 1 | Cable-Positive |
| 5 | 3234-5 | 2 | Screw-HHF |
| 6 | 99-7325 | 1 | Cover-Electrical |
| 7 | 99-7120 | 1 | Filter-Air |
| 8 | 104-8301 | 6 | Nut-Flange, NI |
| 9 | 3234-24 | 4 | Screw-HHF |
| 11 | 3256-35 | 2 | Washer-Flat |
| 12 | 95-2596 | 2 | Mount-Iso |
| 13 | 323-10 | 2 | Screw-HH |
| 14 | 2412-130 | 1 | Clamp-Hose |
| 15 | 104-6528 | 1 | Hose-Intake |
| 16 | 104-8300 | 4 | Nut-Flange, NI |
| 17 | 95-5806 | 1 | Bracket-Mounting |
| 18 | 3234-17 | 2 | Screw-HHF |
| 19 | 3296-2 | 5 | Nut-Lock |
| 20 | 32128-32 | 2 | Nut-HHF |
| 21 | 99-7051-03 | 1 | Mount-Component |
| 22 | 3234-21 | 2 | Screw-Cap |
| 23 | 107-0669 | 1 | Harness-Wire, Main |
| 23:1 | 218-578 | 3 | Fuse-10 Amp |
| ❶23:2 | 100-4918 | 1 | Diode |
| 24 | 32105-13 | 4 | Screw-SHH |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 25 | 104-6927 | 1 | Regulator |
| 26 | 32105-1 | 1 | Screw-SHH |
| 27 | 3255-8 | 2 | Washer-Lock |
| 28 | 3218-2 | 2 | Nut-Jam |
| 29 | 32149-8 | 2 | Nut-Keps |
| 30 | 99-7406 | 1 | Solenoid |
| 31 | 80-9330 | 1 | Alarm-Audio |
| 31:1 | 104-5107 | 1 | Nut-Plastic, Knurled |
| 32 | 99-7230 | 1 | Fitting-90 DEG |
| 33 | 99-7842 | 1 | Hose-Breather |
| 34 | 99-7352 | 1 | Decal-Information |
| 36 | 2412-36 | 2 | Clamp-Hose |
| 37 | 92-5018-03 | 1 | Clamp-Battery |
| 38 | 95-4042 | 2 | Hook-Retain, Battery |
| 39 | 104-7201 | 2 | Nut-HF |
| 40 | 104-7102 | 1 | Pad-Battery |

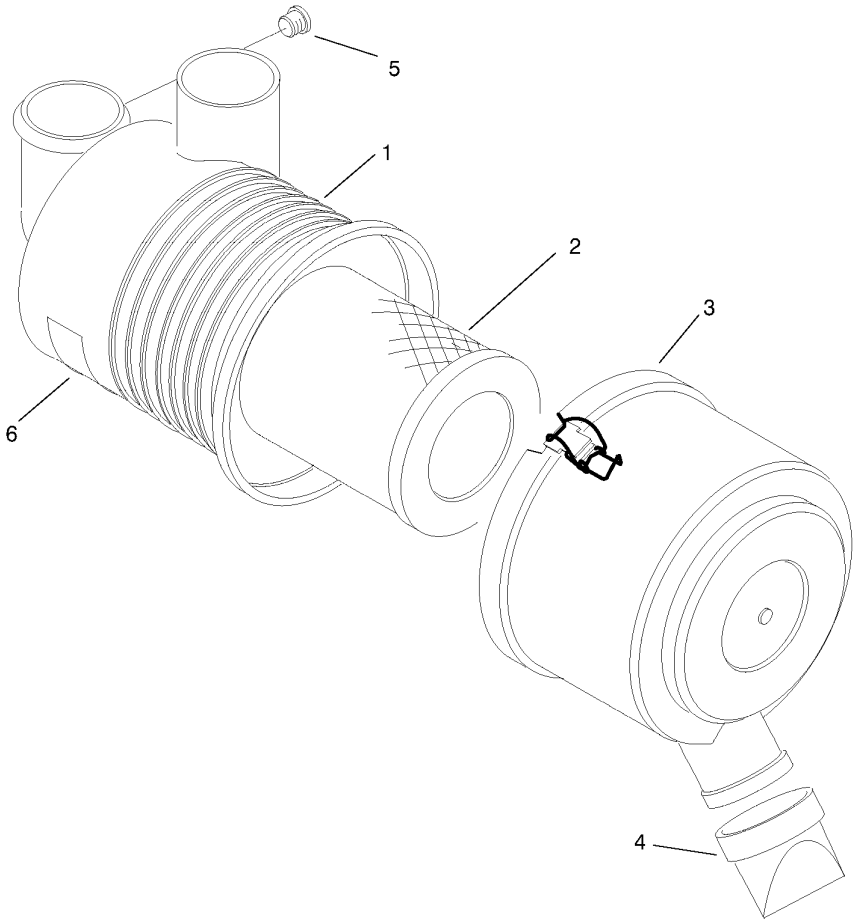



# Air Cleaner Assembly No. 99-7120

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷1 | | 1 | Body |
| 2 | 108-3811 | 1 | Filter-Air |
| 3 | 94-3652 | 1 | Cover ASM |
| 4 | 87-9400 | 1 | Valve-Vacuator |
| ❷5 | | 1 | Plug |
| ❷6 | | 1 | Marking |

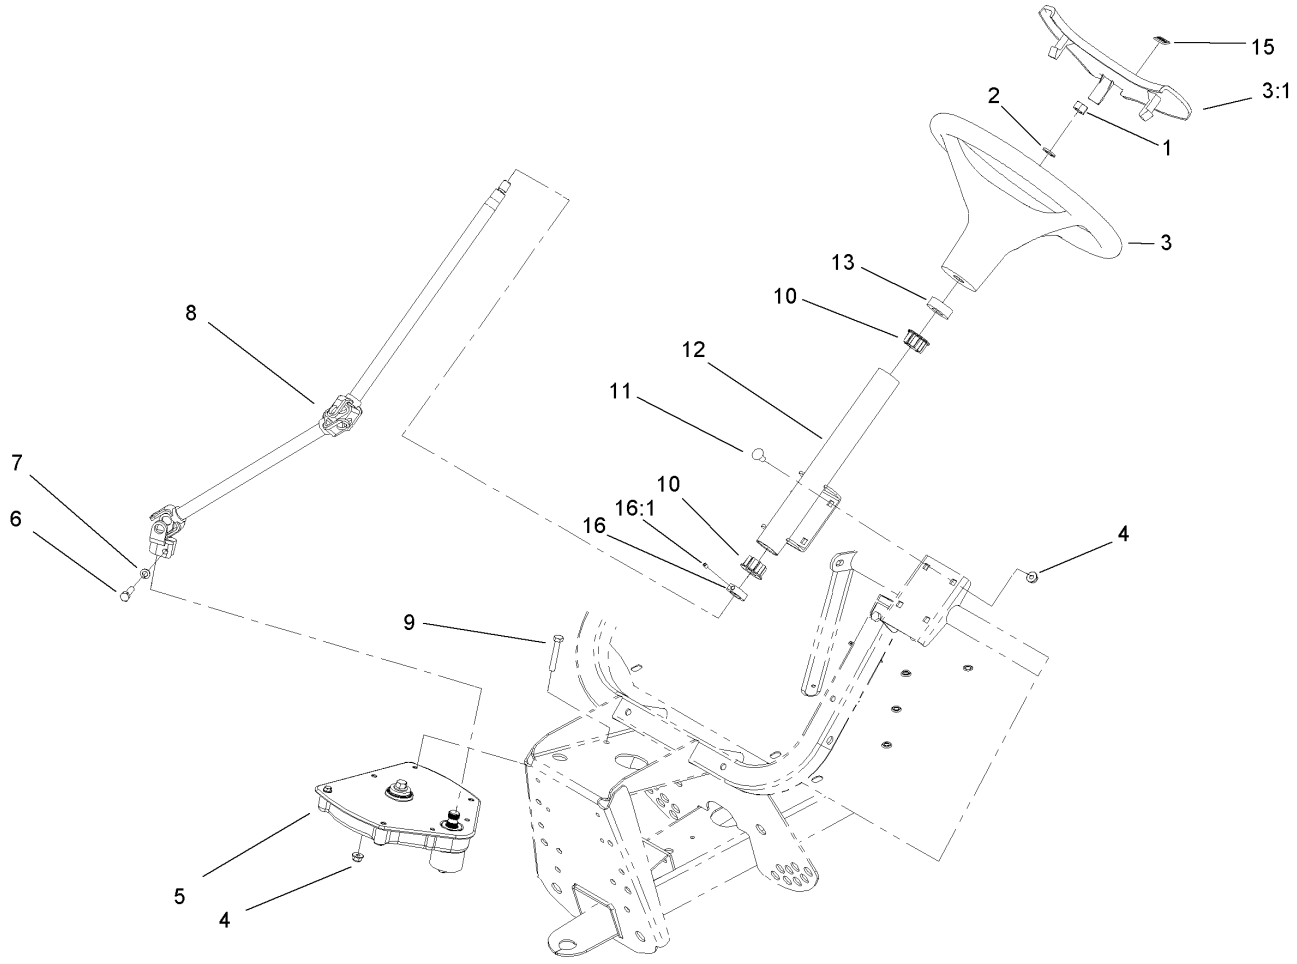



# Upper Steering Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3277-1 | 1 | Nut-Hex |
| 2 | 48-8070 | 1 | Washer-Lock |
| 3 | 98-1471 | 1 | Wheel-Steering |
| 3:1 | 98-1468 | 1 | Cover-Wheel, Steering |
| 4 | 104-8300 | 7 | Nut-Flange, NI |
| 5 | 99-7660 | 1 | Steering Gearbox ASM |
| 6 | 48-7730 | 1 | Screw-HH |
| 7 | 3253-4 | 1 | Washer-Lock |
| 8 | 99-7653 | 1 | Shaft-Steering |
| 9 | 322-10 | 3 | Screw-HH |
| 10 | 93-1146 | 2 | Bushing-Upper, Steering |
| 11 | 3230-1 | 4 | Bolt-CARR |
| 12 | 99-7651-03 | 1 | Column-Steering |
| 13 | 21-9260 | 1 | Cover-Dust |
| 15 | 98-1459 | 1 | Decal |
| 16 | 111383 | 1 | Collar |
| 16:1 | 3245-32 | 1 | Screw-HSH |

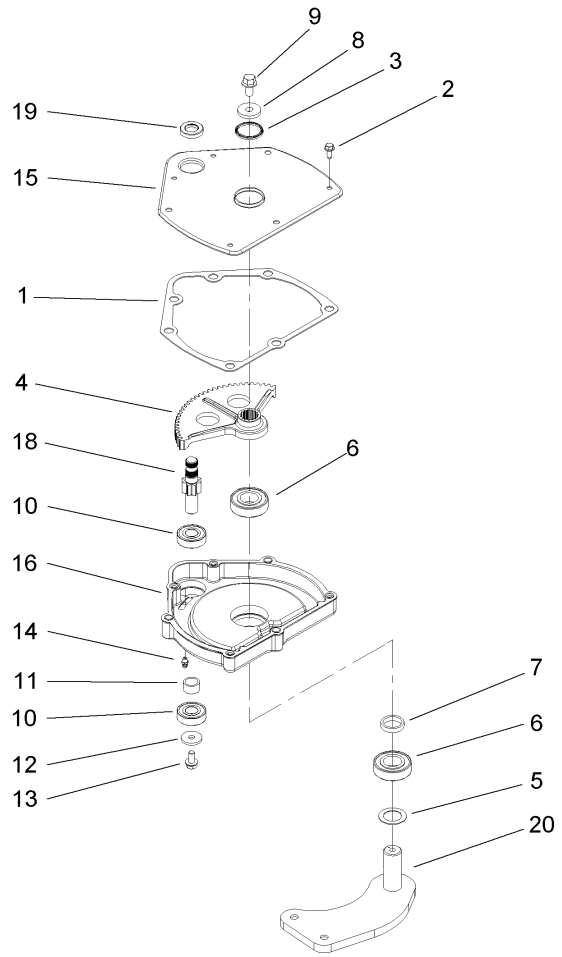



# Steering Gearbox Assembly No. 99-7660

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 94-2135 | 1 | Gasket |
| 2 | 32144-10 | 4 | Screw-HWH |
| 3 | 103118 | 1 | Seal |
| 4 | 99-7843 | 1 | Sector-Gear |
| 5 | 3256-42 | 1 | Washer-Flat |
| 6 | 251-82 | 2 | Bearing-Ball |
| 7 | 94-2218 | 1 | Spacer-Shaft, Output |
| 8 | 104-6563 | 1 | Washer-Stepped |
| 9 | 104-7156 | 1 | Screw-HHF |
| 10 | 38-7820 | 2 | Bearing-Ball |
| 11 | 94-2217 | 1 | Spacer-Shaft, Input |
| 12 | 1-613235 | 1 | Washer |
| 13 | 98-3498 | 1 | Screw-HH |
| 14 | 302-5 | 1 | Fitting-Grease |
| 15 | 99-7656-03 | 1 | Cover-Housing, Steering |
| 16 | 99-7658 | 1 | Housing-Steering |
| 18 | 99-7650 | 1 | Gear-Pinion |
| 19 | 99-7657 | 1 | Seal-Oil |
| 20 | 99-7601-03 | 1 | Arm-Pitman |

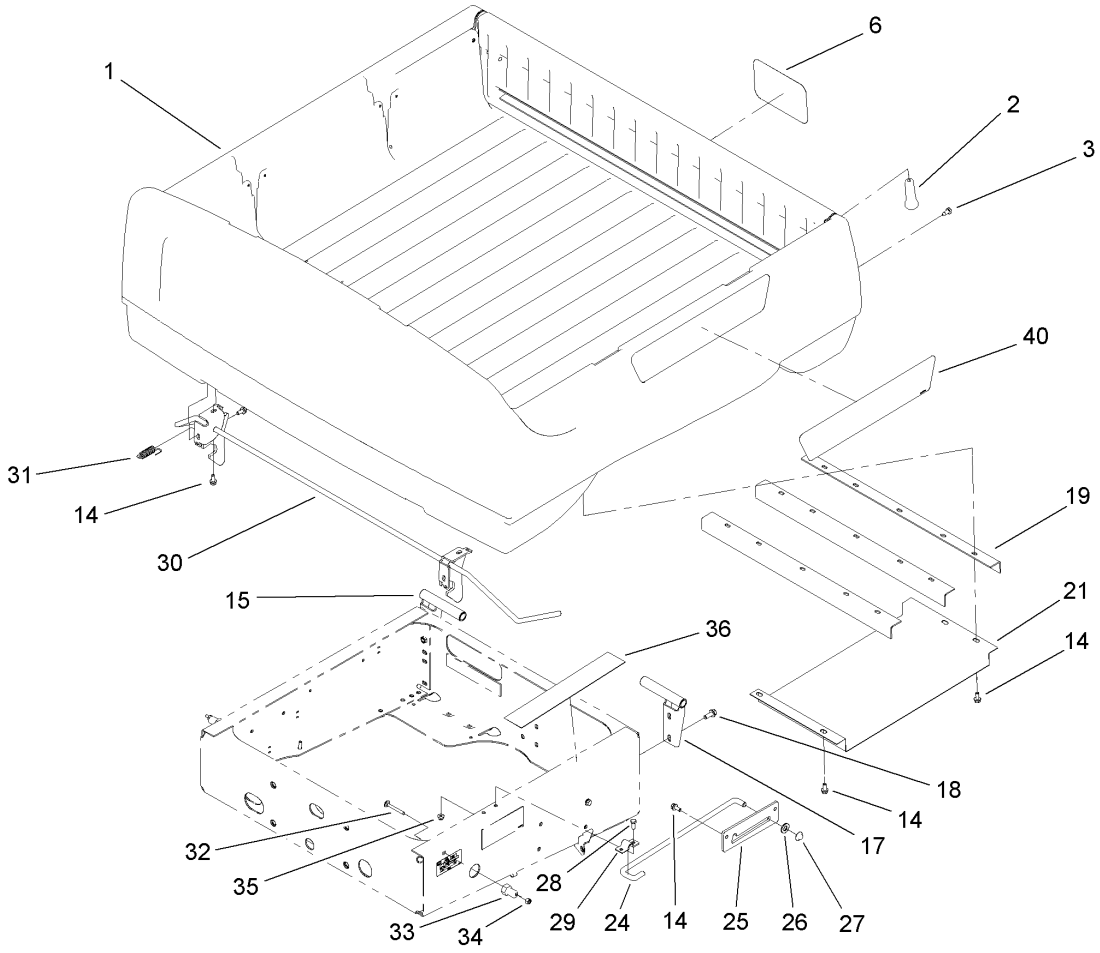



# Box and Tailgate Installation Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷1 | | 1 | Box And Tailgate ASM |
| 2 | 99-7984 | 2 | Knob-Soft Grip, Push-On |
| 3 | 87-8460 | 2 | Bumper-Rubber |
| 6 | 104-7213 | 1 | Decal |
| 14 | 3234-5 | 18 | Screw-HHF |
| 15 | 99-7309-03 | 1 | RH Pivot Bracket ASM |
| 17 | 99-7308-03 | 1 | LH Pivot Bracket ASM |
| 18 | 3234-11 | 4 | Screw-HHF |
| 19 | 99-7864-03 | 3 | Brace-Box |
| 21 | 99-7870 | 1 | Shield-Heat |
| 24 | 99-7895 | 1 | Rod-Prop |
| 25 | 99-7894 | 1 | Bracket-Rod, Prop |
| 26 | 3256-26 | 1 | Washer-Flat |
| 27 | 32112-14 | 1 | Nut-Push |
| 28 | 3234-17 | 2 | Screw-HHF |
| 29 | 99-7896 | 1 | Bracket-U, Prop Rod |
| 30 | 104-7244 | 1 | Rod-Latch |
| 31 | 5-7290 | 2 | Spring-Tension |
| 32 | 3230-7 | 2 | Screw-CARR |
| 33 | 104-7248 | 2 | Pin-Latch |
| 34 | 3296-29 | 2 | Nut-Lock, NI |
| 35 | 104-8300 | 1 | Nut-Flange, NI |
| 36 | 104-6859 | 1 | Shield-Heat |
| 40 | 104-7265 | 2 | Decal |

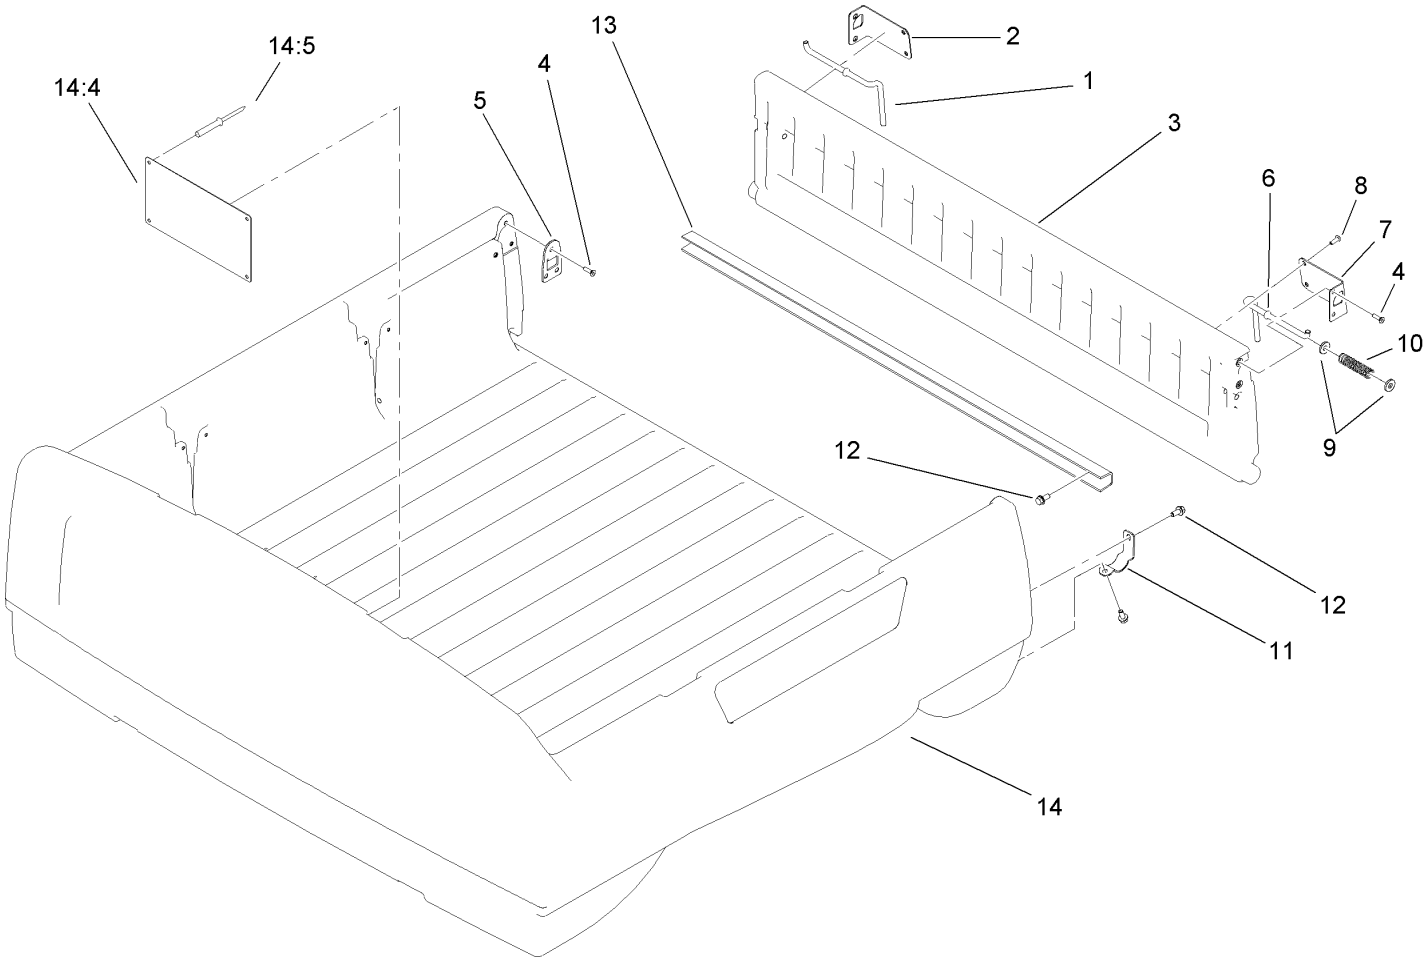


# Box and Tailgate Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 99-7860 | 1 | Rod-Latch, Right |
| 2 | 99-7858 | 1 | Bracket-Tailgate Latch, Right |
| 3 | 99-7893 | 1 | Tailgate ASM |
| 4 | 99-7334 | 10 | Screw |
| 5 | 99-7852 | 2 | Plate-Striker |
| 6 | 99-7859 | 1 | Rod-Latch, Left |
| 7 | 99-7857 | 1 | Bracket-Tailgate Latch, Left |
| 8 | 99-7335 | 4 | Screw |
| 9 | 99-7861 | 4 | Washer-Latch |
| 10 | 61-8880 | 2 | Spring |
| 11 | 99-7286 | 2 | Bracket-Pivot, Tailgate |
| 12 | 3234-5 | 10 | Screw-HHF |
| 13 | 99-7867 | 1 | Channel-Tailgate |
| 14 | 104-7203 | 1 | Box ASM |
| 14:4 | 99-7954 | 1 | Decal-No Riders |
| 14:5 | 3290-415 | 4 | Rivet |

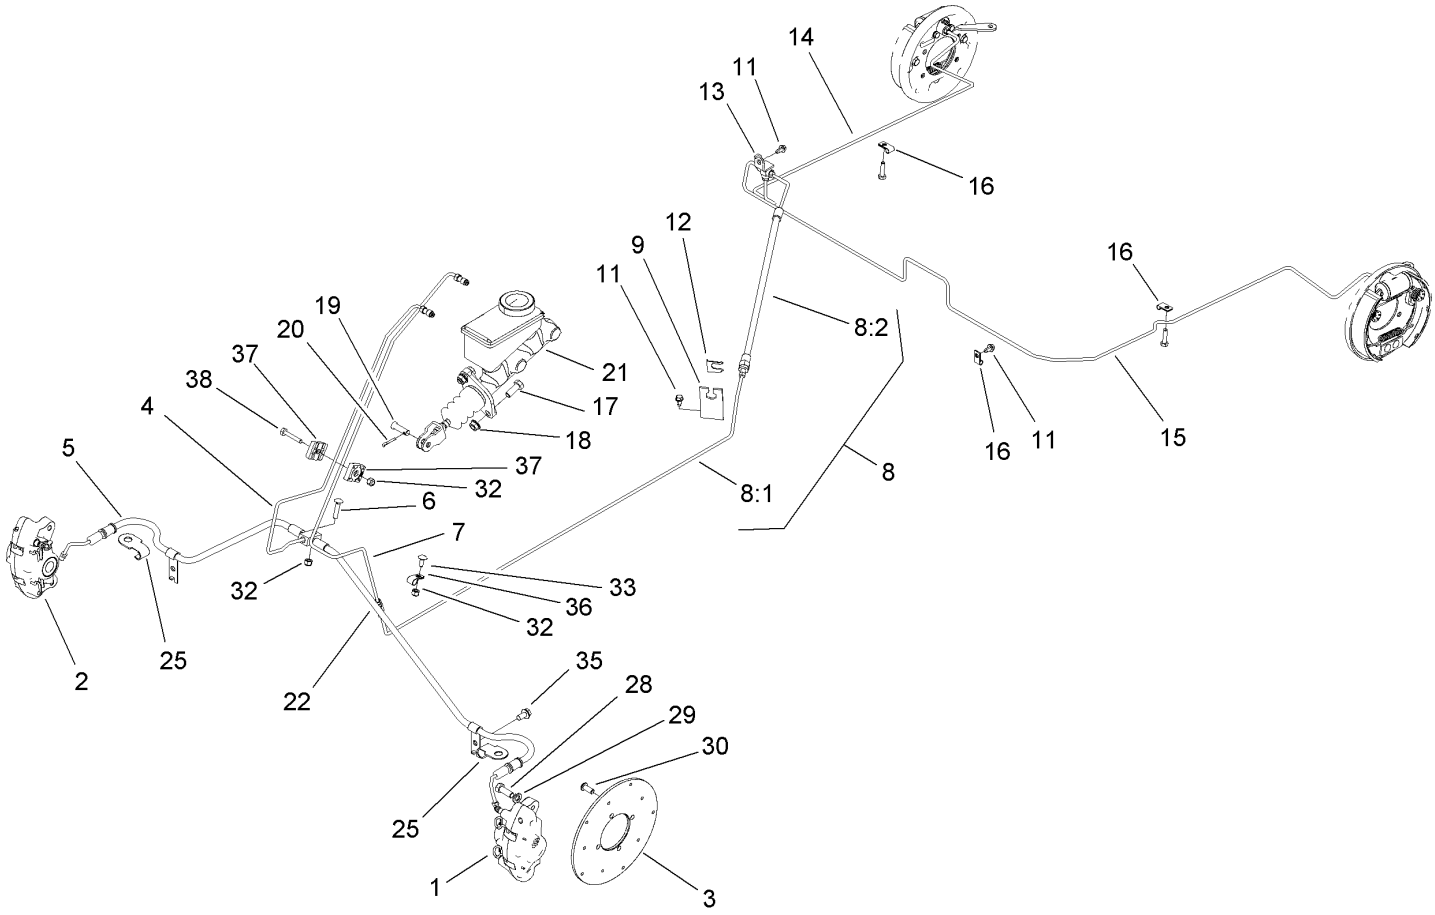


# Hydraulic Brake Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 107-0361 | 1 | Caliper, LH |
| 2 | 107-0362 | 1 | Caliper, RH |
| 3 | 104-6891 | 2 | Rotor |
| 4 | 104-6798 | 1 | Tube-Front, Brake |
| 5 | 104-7256 | 1 | Front Hose ASM |
| 6 | 3229-3 | 1 | Screw-CARR |
| 7 | 104-6793 | 1 | Tube-Brake, Rear |
| ❷8 | | 1 | Complete Rear Brake Hose ASM |
| 8:1 | 104-6794 | 1 | Tube-Brake, Rear |
| 8:2 | 104-6795 | 1 | Hose-Brake, Rear |
| 9 | 104-6799 | 1 | Bracket-Hose, Brake |
| 11 | 12-3270 | 3 | Screw |
| 12 | 104-7092 | 1 | Clip |
| 13 | 87-3560 | 1 | Tee |
| 14 | 104-6796 | 1 | Tube-Brake Rear, RH |
| 15 | 110-2604 | 1 | Tube-Brake Rear, LH |
| 16 | 2412-72 | 3 | Clip-Closed, Insulated |
| 17 | 323-6 | 2 | Screw-HH |
| 18 | 3290-357 | 2 | Nut-HHF, Whiz |
| 19 | 283-2 | 1 | Pin-Clevis |
| 20 | 3272-10 | 1 | Pin-Cotter |
| 21 | 104-6782 | 1 | Cylinder-Master |
| 22 | 87-3570 | 1 | Union |
| 25 | 104-7073 | 2 | Bracket-Hose |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 28 | 323-6 | 4 | Screw-HH |
| 29 | 3253-21 | 4 | Washer-Lock |
| 30 | 3274-55 | 8 | Screw-HSBH |
| 32 | 3296-42 | 3 | Nut-Lock, NI |
| 33 | 3229-11 | 1 | Screw-CARR |
| 35 | 32144-14 | 2 | Screw-HWH |
| 36 | 2412-89 | 1 | Clamp |
| 37 | 87-7660 | 2 | Clamp-Tube |
| 38 | 321-9 | 1 | Screw-HH |

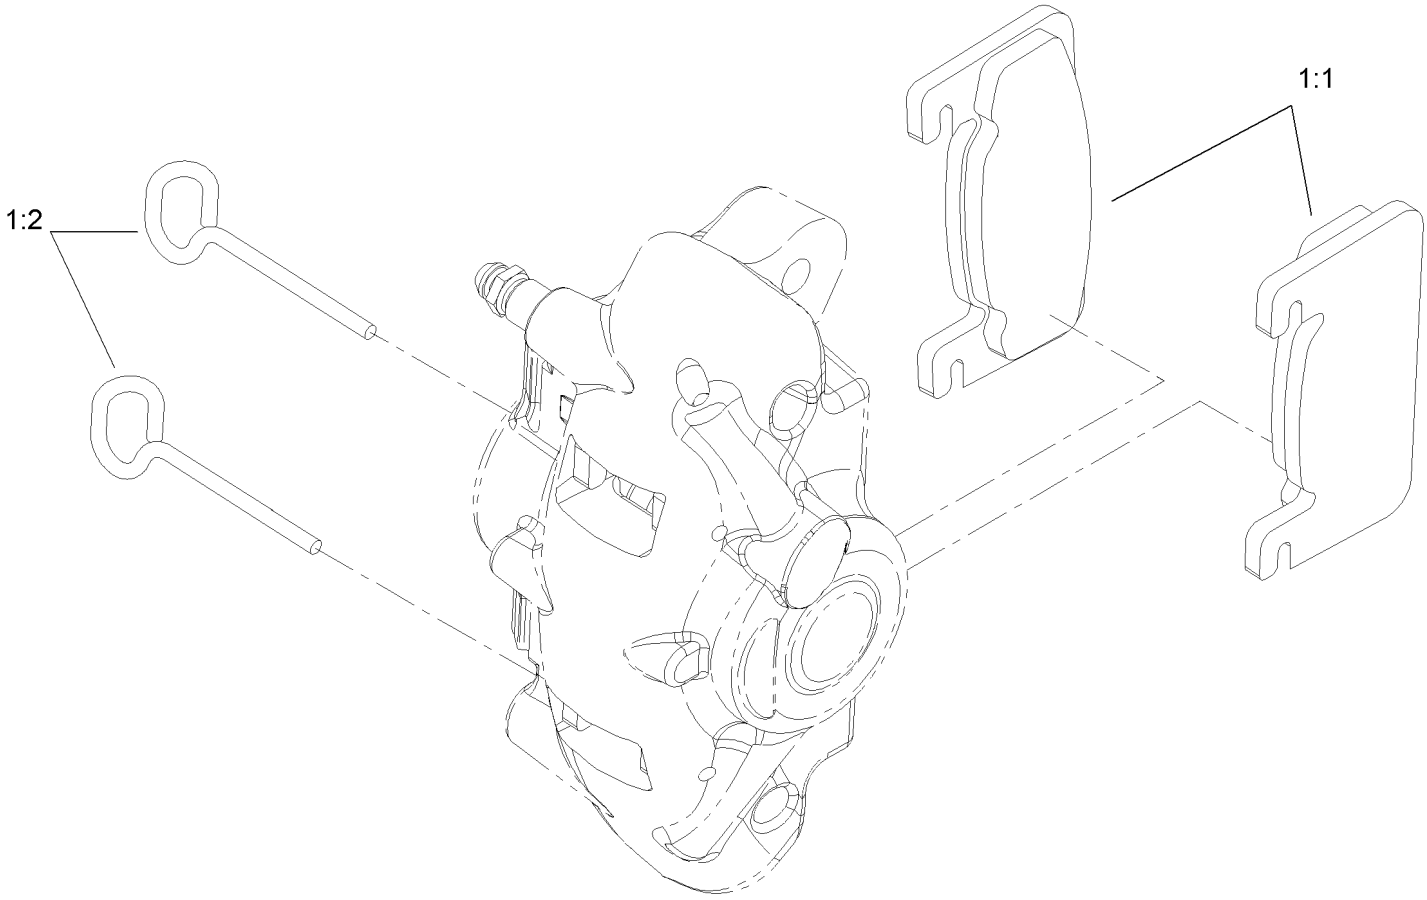



# Left Hand Caliper Assembly No. 107-0361

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 107-0708 | 1 | Friction Pad And Pin Kit |
| ❷1:1 | | 2 | Brake Pad ASM |
| ❷1:2 | | 2 | Pin |

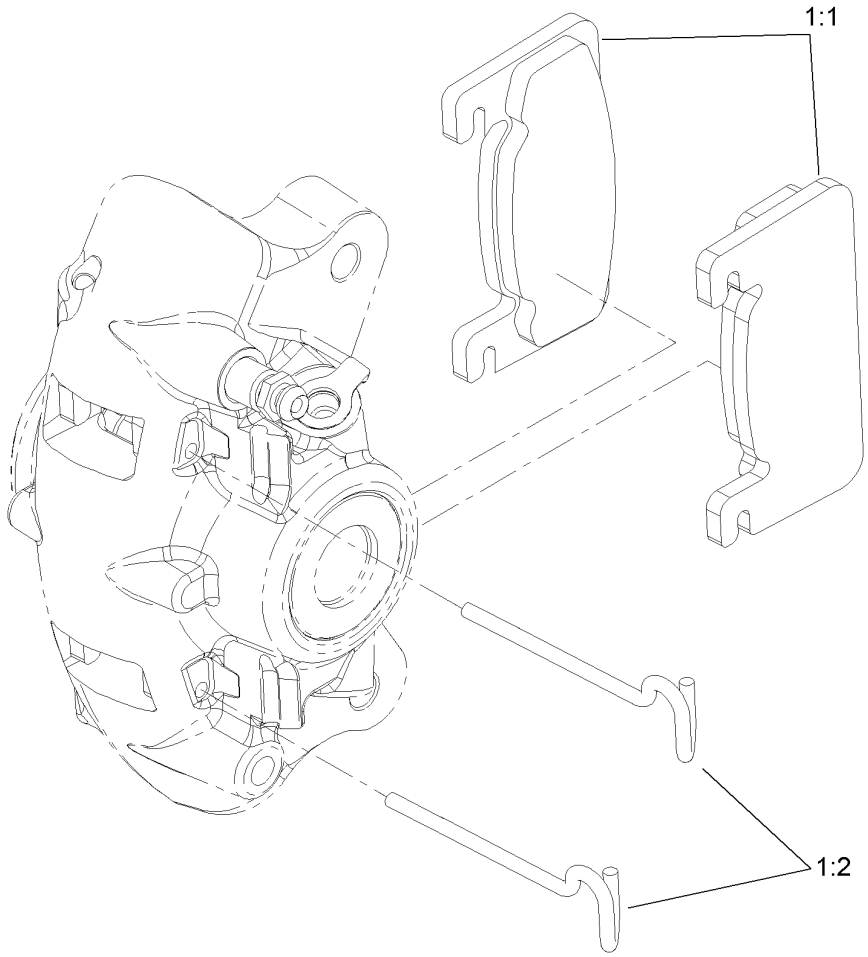



# Right Hand Caliper Assembly No. 107-0362

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 107-0708 | 1 | Friction Pad And Pin Kit |
| ❷1:1 | | 2 | Brake Pad ASM |
| ❷1:2 | | 2 | Pin |

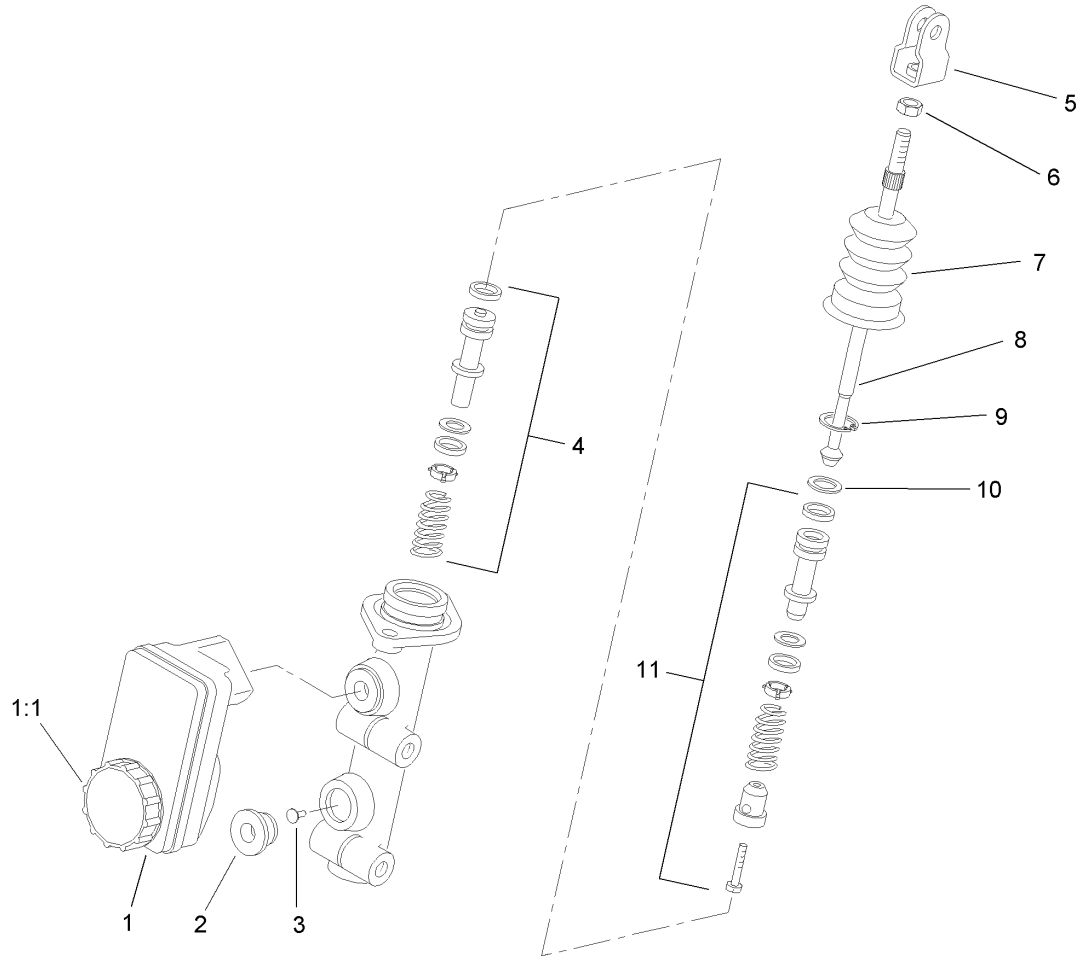


# Master Cylinder Assembly No. 104-6782

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 104-6845 | 1 | Reservoir ASM |
| 1:1 | 92-4112 | 1 | Cap ASM |
| 2 | 93-8971 | 2 | Seal-Port, Flange |
| 3 | 92-4103 | 1 | Pin-Stop |
| 4 | 92-4102 | 1 | Secondary Piston ASM |
| 5 | 92-4110 | 1 | Clevis |
| 6 | 21-0360 | 1 | Nut-Hex |
| 7 | 94-5209 | 1 | Cover-Dust |
| 8 | 94-5210 | 1 | Rod-Push |
| 9 | 92-4109 | 1 | Ring-Snap |
| 10 | 92-4108 | 1 | Retainer-Washer |
| 11 | 92-4101 | 1 | Primary Piston ASM |

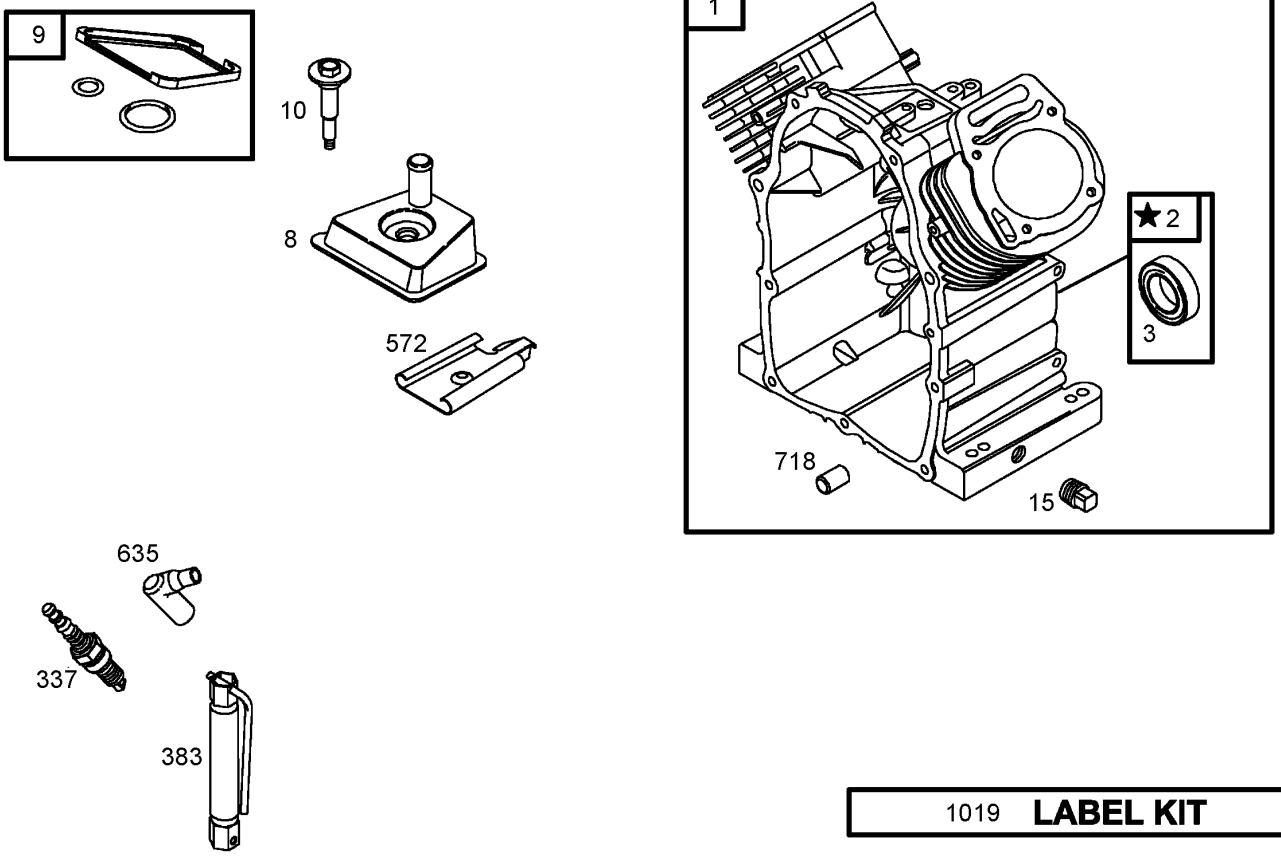



1019 **LABEL KIT**

Assemblies include all parts shown in frames.

# Cylinder Assembly

# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻1 | 692178 | 1 | Cylinder ASM |
| ❻2 | 808534 | 1 | Bushing / Seal Kit |
| ❸❻3 | 805101 | 1 | Seal-Oil |
| ❻8 | 808984 | 1 | Breather ASM |
| ❸❻9 | 809094 | 1 | Gasket-Breather |
| ❻10 | 690751 | 1 | Screw |
| ❻15 | 690946 | 1 | Plug-Drain, Oil |
| ❻337 | 496018 | 1 | Plug-Spark |
| ❻383 | 19374 | 1 | Wrench-Spark Plug |
| ❻572 | 690686 | 1 | Baffle-Breather |
| ❻635 | 692076 | 1 | Boot-Spark Plug |
| ❻718 | 690684 | 1 | Pin-Locating |
| ❻1019 | 808036 | 1 | Label Kit |

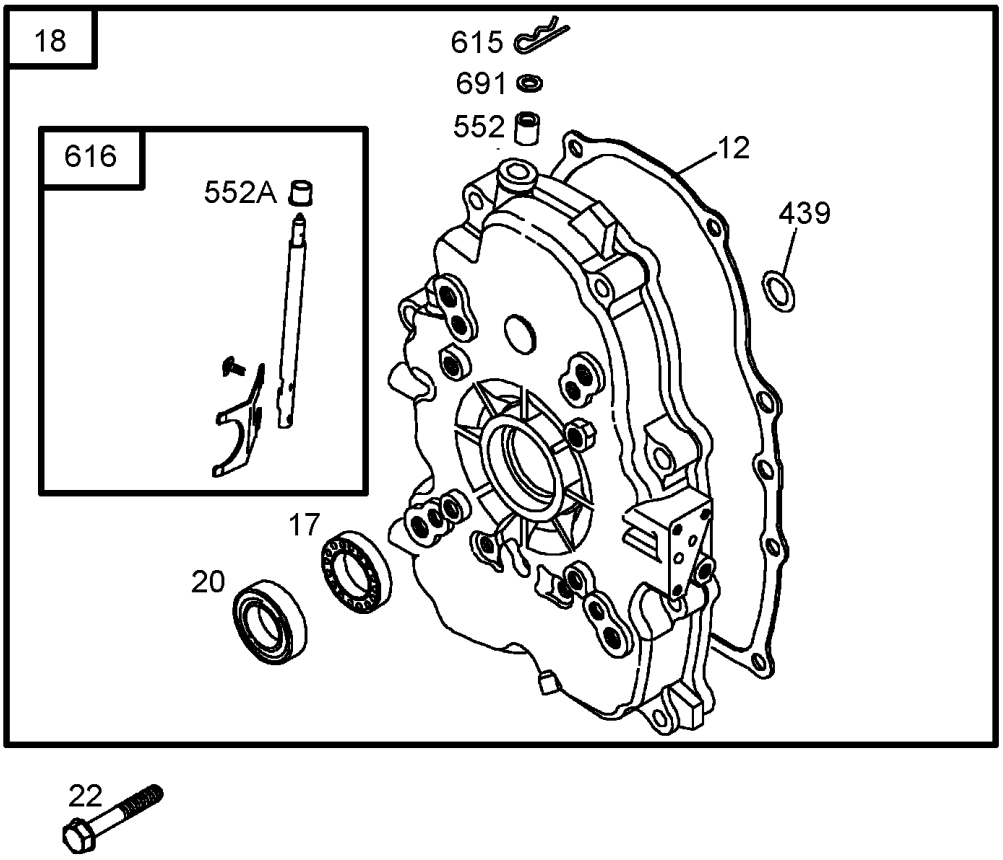



Assemblies include all parts shown in frames.

# Crankcase Assembly

# Briggs and Stratton 303440-1326-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❻12 | 691684 | 1 | Gasket-Crankcase |
| ❻17 | 690752 | 1 | Bearing-Ball |
| ❻18 | 808847 | 1 | Cover-Crankcase |
| ❸❻20 | 805049 | 1 | Seal-Oil |
| ❻22 | 692540 | 1 | Screw |
| ❶❻276A | 690704 | 1 | Washer-Sealing |
| ❸❻439 | 692154 | 1 | Seal-O Ring |
| ❻552 | 690701 | 1 | Bushing-Crank, Governor |
| ❻552A | 806686 | 1 | Bushing-Crank, Governor |
| ❻615 | 691550 | 1 | Retainer-Shaft, Governor |
| ❻616 | 806685 | 1 | Crank-Governor |
| ❻691 | 690680 | 1 | Seal-Shaft, Governor |

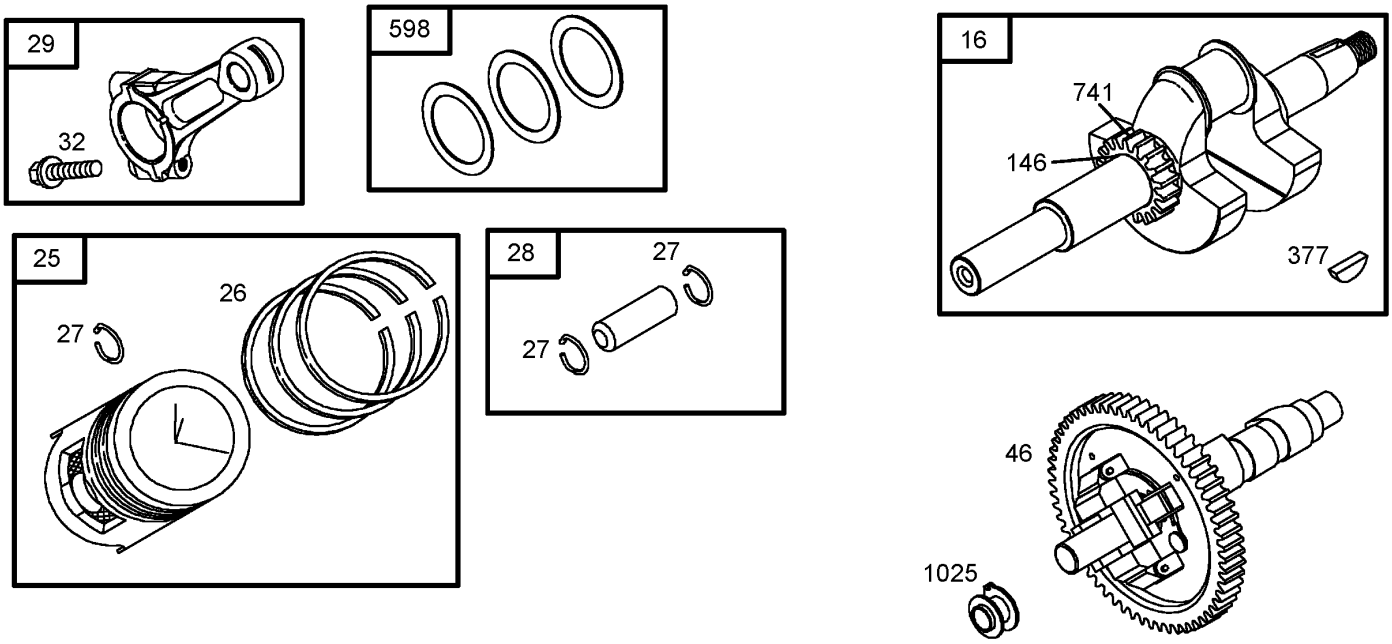


Assemblies include all parts shown in frames.

# Crankshaft Assembly
# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻16 | 692163 | 1 | Crankshaft |
| ❻25 | 807619 | 1 | Piston ASM (Standard) |
| ❻25 | 807807 | 1 | Piston ASM (.010 Oversize) |
| ❻25 | 807809 | 1 | Piston ASM (.020 Oversize) |
| ❻25 | 807811 | 1 | Piston ASM (.030 Oversize) |
| ❻26 | 807620 | 1 | Ring Set (Standard) |
| ❻26 | 807808 | 1 | Ring Set (.010 Oversize) |
| ❻26 | 807810 | 1 | Ring Set (.020 Oversize) |
| ❻26 | 807812 | 1 | Ring Set (.030 Oversize) |
| ❻27 | 690683 | 1 | Lock-Pin, Piston |
| ❻28 | 807621 | 1 | Pin-Piston |
| ❻29 | 807900 | 1 | Rod-Connecting (Standard) |
| ❻29 | 807809 | 1 | Piston ASM (.020 Oversize) |
| ❻32 | 690698 | 1 | Screw |
| ❻46 | 692157 | 1 | Camshaft |
| ❻146 | 691639 | 1 | Key-Timing |
| ❻377 | 808095 | 1 | Key-Woodruff |
| ❻598 | 807625 | 1 | Shim-Play, End |
| ❻741 | 691530 | 1 | Gear-Timing |
| ❻1025 | 690689 | 1 | Spool-Governor |

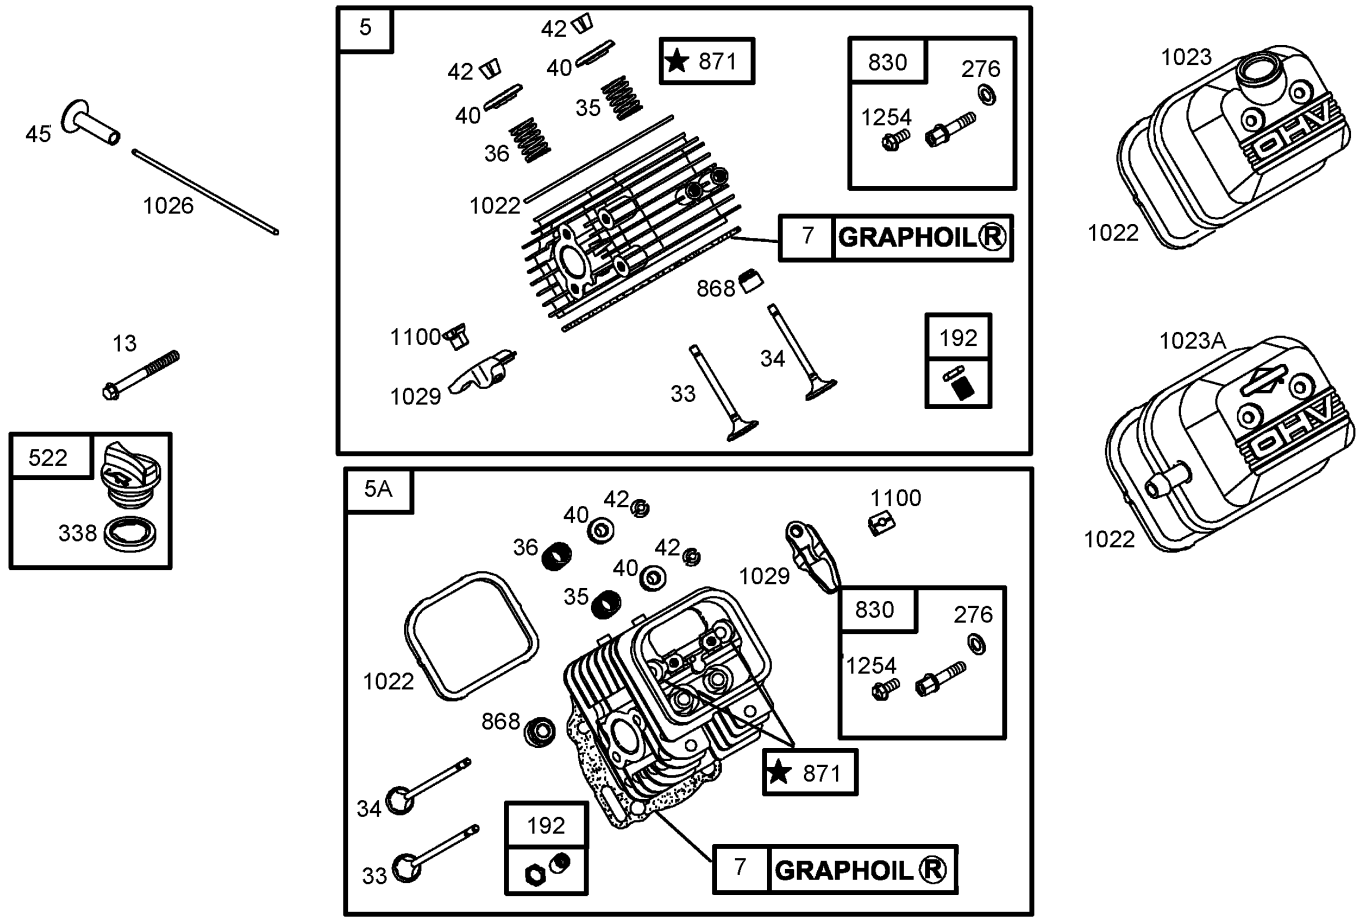



Assemblies include all parts shown in frames.

# Cylinder Head Assembly
# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻5 | 809200 | 1 | Head-Cylinder (Cylinder 1) |
| ❻5A | 809201 | 1 | Head-Cylinder (Cylinder 2) |
| ❸❹❻7 | 806085 | 1 | Gasket-Head, Cylinder |
| ❻13 | 692059 | 1 | Screw |
| ❻33 | 807681 | 1 | Valve-Exhaust |
| ❻34 | 807680 | 1 | Valve-Intake |
| ❻35 | 692084 | 1 | Spring-Valve |
| ❻36 | 692084 | 1 | Spring-Valve |
| ❻40 | 692058 | 1 | Retainer-Valve |
| ❻42 | 807683 | 1 | Keeper-Valve |
| ❻45 | 690977 | 1 | Valve-Tappet |
| ❻192 | 807623 | 1 | Adjuster-Arm, Rocker |
| ❻276 | 807085 | 1 | Washer-Sealing |
| ❸❹❻338 | 691312 | 1 | Gasket-Dipstick |
| ❻522 | 491832 | 1 | Plug-Dipstick / Fill |
| ❻830 | 809157 | 1 | Stud-Arm, Rocker |
| ❸❹❻868 | 691963 | 1 | Seal-Valve |
| ❸❻871 | 692057 | 1 | Bushing-Guide, Valve |
| ❸❹❻1022 | 806039 | 1 | Gasket-Cover, Rocker |
| ❻1023 | 690758 | 1 | Cover-Valve |
| ❻1023A | 691558 | 1 | Cover-Valve |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻1026 | 691836 | 1 | Rod-Push |
| ❻1026 | 691758 | 1 | Rod-Push |
| ❻1029 | 807323 | 1 | Arm-Rocker |
| ❻1100 | 690973 | 1 | Pivot-Arm, Rocker |
| ❻1254 | 807084 | 1 | Screw |

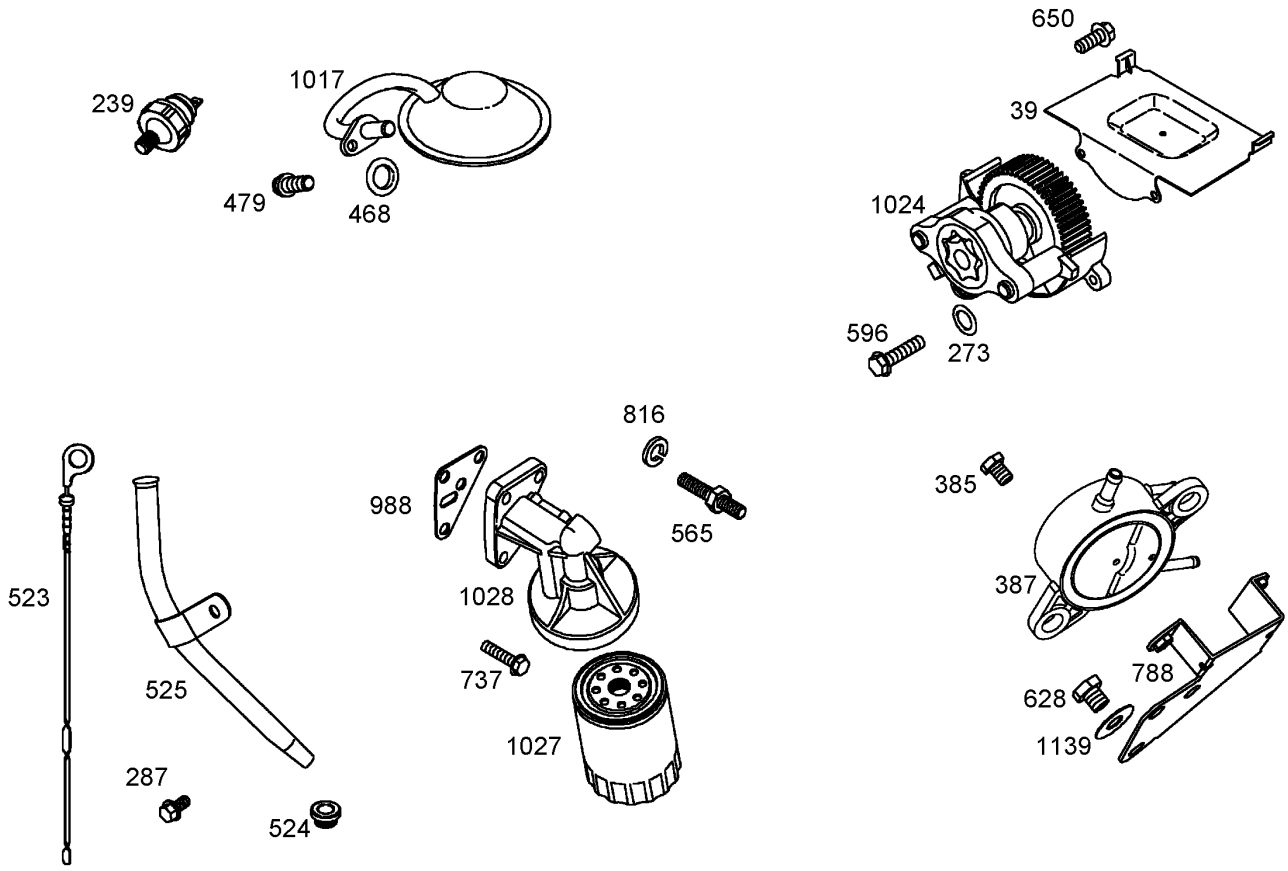


Assemblies include all parts shown in frames.

# Oil Filter, Tube and Pump Assembly
# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻39 | 690745 | 1 | Deflector-Oil |
| ❻239 | 690233 | 1 | Switch-Pressure, Oil |
| ❻273 | 690681 | 1 | Seal-O Ring |
| ❻287 | 692062 | 1 | Screw |
| ❻385 | 807084 | 1 | Screw |
| ❻387 | 808656 | 1 | Pump-Fuel |
| ❸❻468 | 690690 | 1 | Seal-O Ring |
| ❻479 | 692537 | 1 | Screw |
| ❻523 | 693175 | 1 | Dipstick |
| ❸❻524 | 693172 | 1 | Seal-Tube, Dipstick |
| ❻525 | 693173 | 1 | Tube-Dipstick |
| ❻565 | 690682 | 1 | Stud |
| ❻596 | 691492 | 1 | Screw |
| ❻628 | 806660 | 1 | Screw (Fuel Pump Bracket) |
| ❻650 | 692539 | 1 | Screw |
| ❻737 | 690679 | 1 | Screw |
| ❻788 | 691559 | 1 | Bracket-Pump, Fuel |
| ❻816 | 690706 | 1 | Washer |
| ❸❻988 | 692063 | 1 | Gasket-Adapter, Oil Filter |
| ❻1017 | 690900 | 1 | Screen-Pump, Oil |
| ❻1024 | 693185 | 1 | Pump-Oil |
| ❻1027 | 492932 | 1 | Filter-Oil |
| ❻1028 | 808235 | 1 | Adapter-Filter, Oil |
| ❻1139 | 806497 | 1 | Washer |

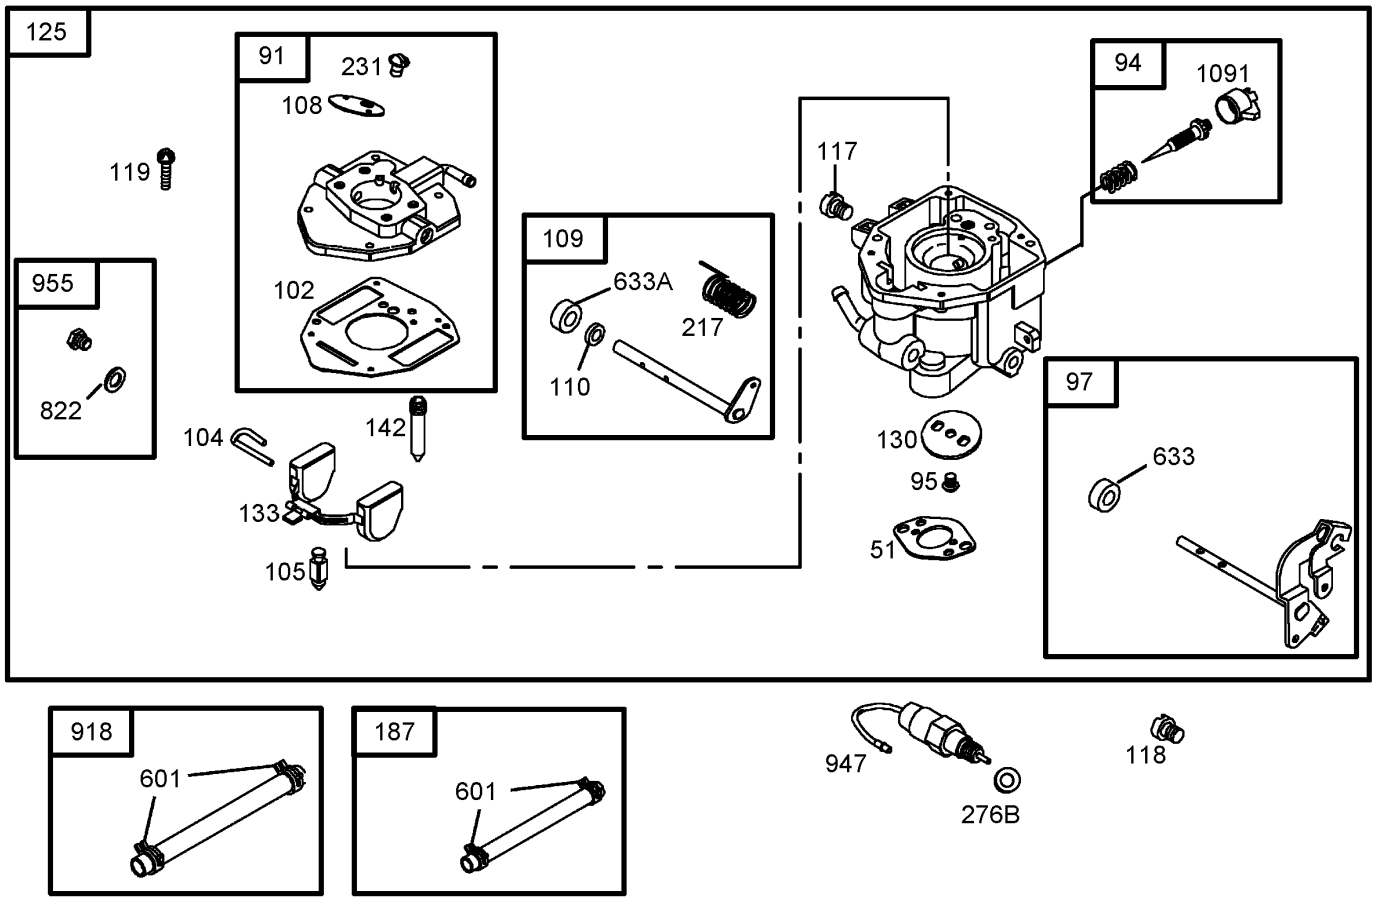



Assemblies include all parts shown in frames.

# Carburetor Assembly
# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❺51 ❻ | 691694 | 1 | Gasket-Intake |
| ❻91 | 808964 | 1 | Body-Carburetor, Upper |
| ❺❻94 | 808257 | 1 | Idle Mixture Kit |
| ❻95 | 690718 | 1 | Screw |
| ❻97 | 841498 | 1 | Shaft-Throttle |
| ❺❻102 | 692077 | 1 | Gasket-Body, Carburetor |
| ❺❻104 | 690723 | 1 | Pin-Hinge, Float |
| ❺❻105 | 692078 | 1 | Valve-Needle, Float |
| ❻108 | 690719 | 1 | Valve-Choke |
| ❻109 | 808962 | 1 | Shaft-Choke |
| ❻110 | 806861 | 1 | Washer (Choke Shaft) |
| ❻117 | 806859 | 1 | Jet-Main |
| ❻118 | 807115 | 1 | Jet-Main (High Altitude) |
| ❻119 | 690720 | 1 | Screw |
| ❻125 | 841494 | 1 | Carburetor |
| ❻130 | 690726 | 1 | Valve-Throttle |
| ❻133 | 806961 | 1 | Float-Carburetor |
| ❻142 | 806860 | 1 | Nozzle-Carburetor |
| ❻187 | 691050 | 1 | Line-Fuel (Cut To Required Length) |
| ❻217 | 806862 | 1 | Spring-Return, Choke |
| ❻231 | 690718 | 1 | Screw |
| ❻276B | 806137 | 1 | Washer-Sealing |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻601 | 691038 | 1 | Clamp-Hose |
| ❺❻633 | 806131 | 1 | Seal-Shaft, Choke / Throttle |
| ❺❻633A | 690722 | 1 | Seal-Shaft, Choke / Throttle |
| ❺❻822 | 690724 | 1 | Seal-O Ring |
| ❻918 | 393815 | 1 | Line-Vacuum |
| ❻947 | 692094 | 1 | Solenoid-Fuel |
| ❻955 | 807723 | 1 | Plug-Carburetor |
| ❺❻1091 | 691516 | 1 | Cap-Limiter |

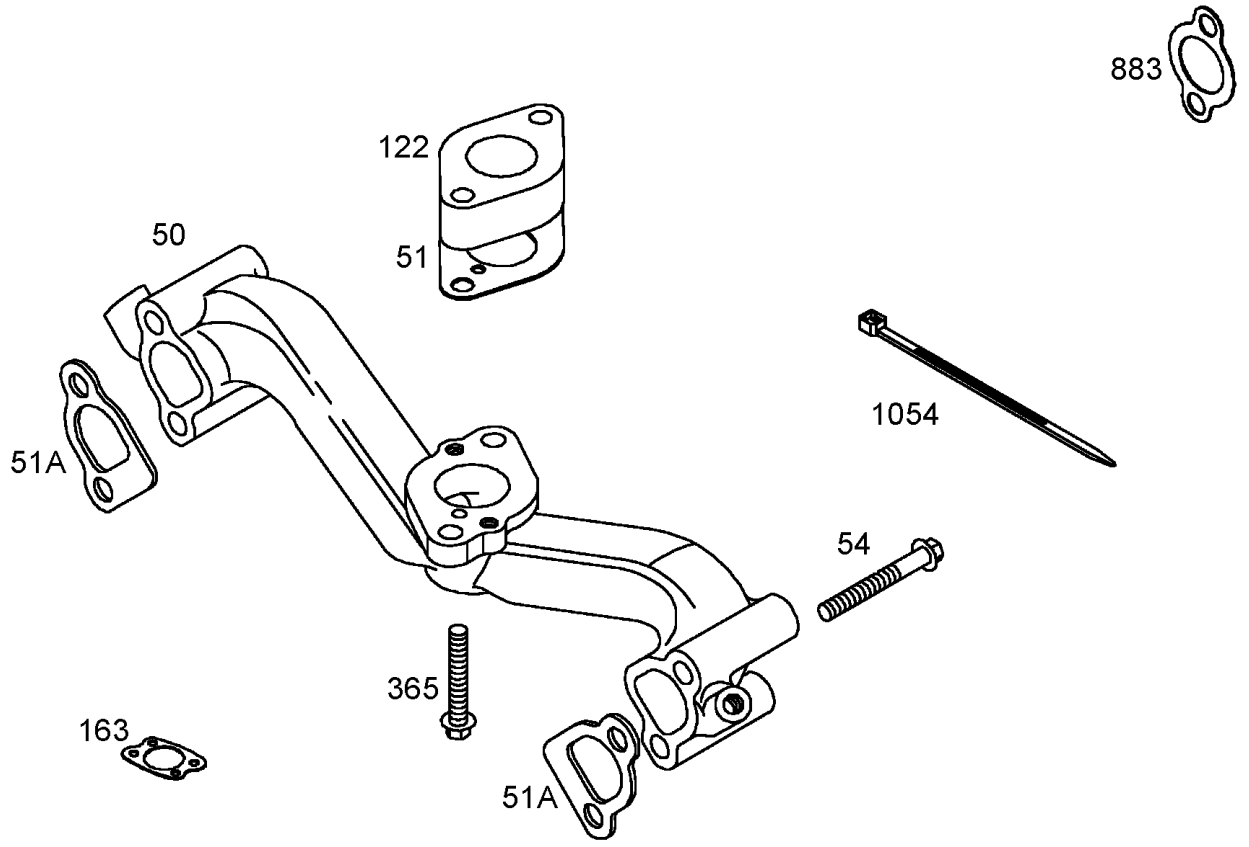



Assemblies include all parts shown in frames.

# Intake Manifold Assembly

# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻50 | 690754 | 1 | Manifold-Intake |
| ❸❺51 ❻ | 691694 | 1 | Gasket-Intake |
| ❸❹51A ❻ | 692035 | 1 | Gasket-Intake |
| ❻54 | 690676 | 1 | Screw |
| ❻122 | 690691 | 1 | Spacer-Carburetor |
| ❸❻163 | 692081 | 1 | Gasket-Cleaner, Air |
| ❻365 | 690711 | 1 | Screw |
| ❸❹883 ❻ | 691613 | 1 | Gasket-Exhaust |
| ❻1054 | 280275 | 1 | Tie-Cable |

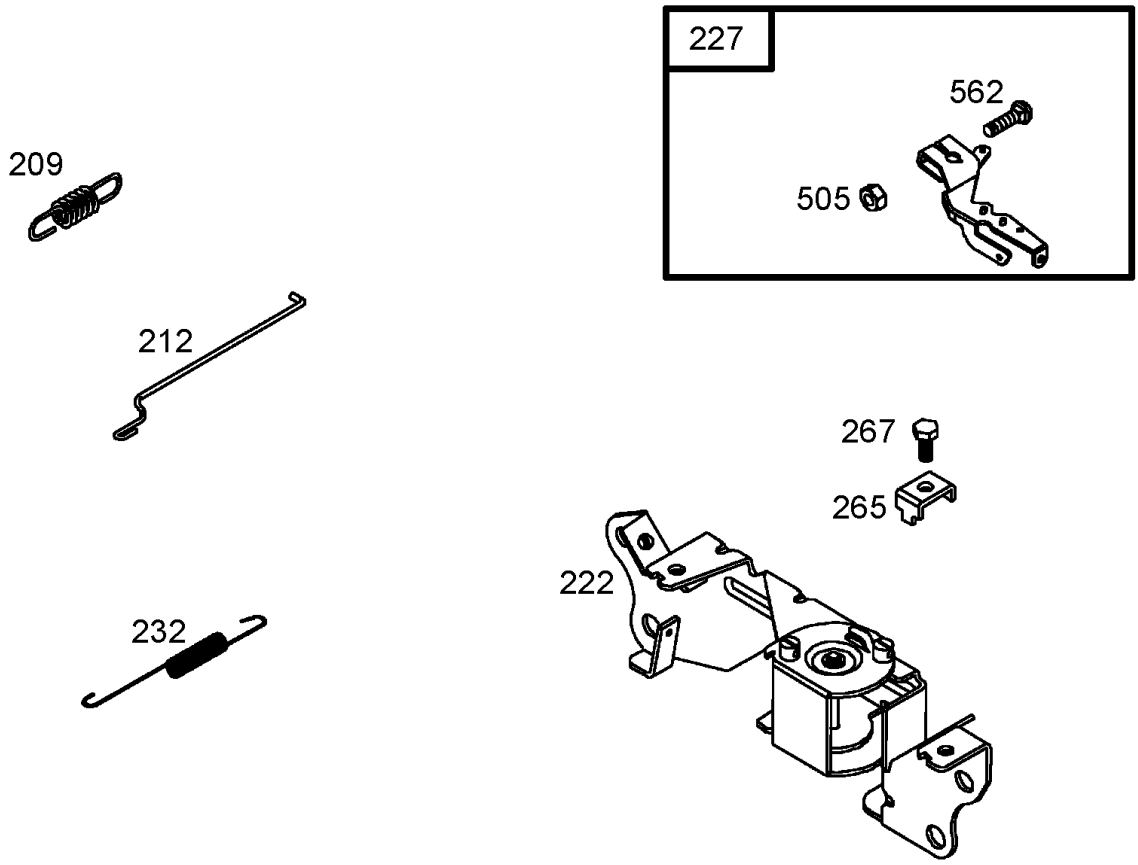



Assemblies include all parts shown in frames.

# Governor Assembly

# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻209 | 691507 | 1 | Spring-Governor |
| ❻212 | 690712 | 1 | Link-Throttle |
| ❻222 | 691570 | 1 | Bracket-Control |
| ❻227 | 690236 | 1 | Lever-Control, Governor |
| ❻232 | 692073 | 1 | Spring-Link, Governor |
| ❻265 | 691024 | 1 | Clamp-Casing |
| ❻267 | 692083 | 1 | Screw |
| ❻505 | 690238 | 1 | Nut |
| ❻562 | 690239 | 1 | Bolt |

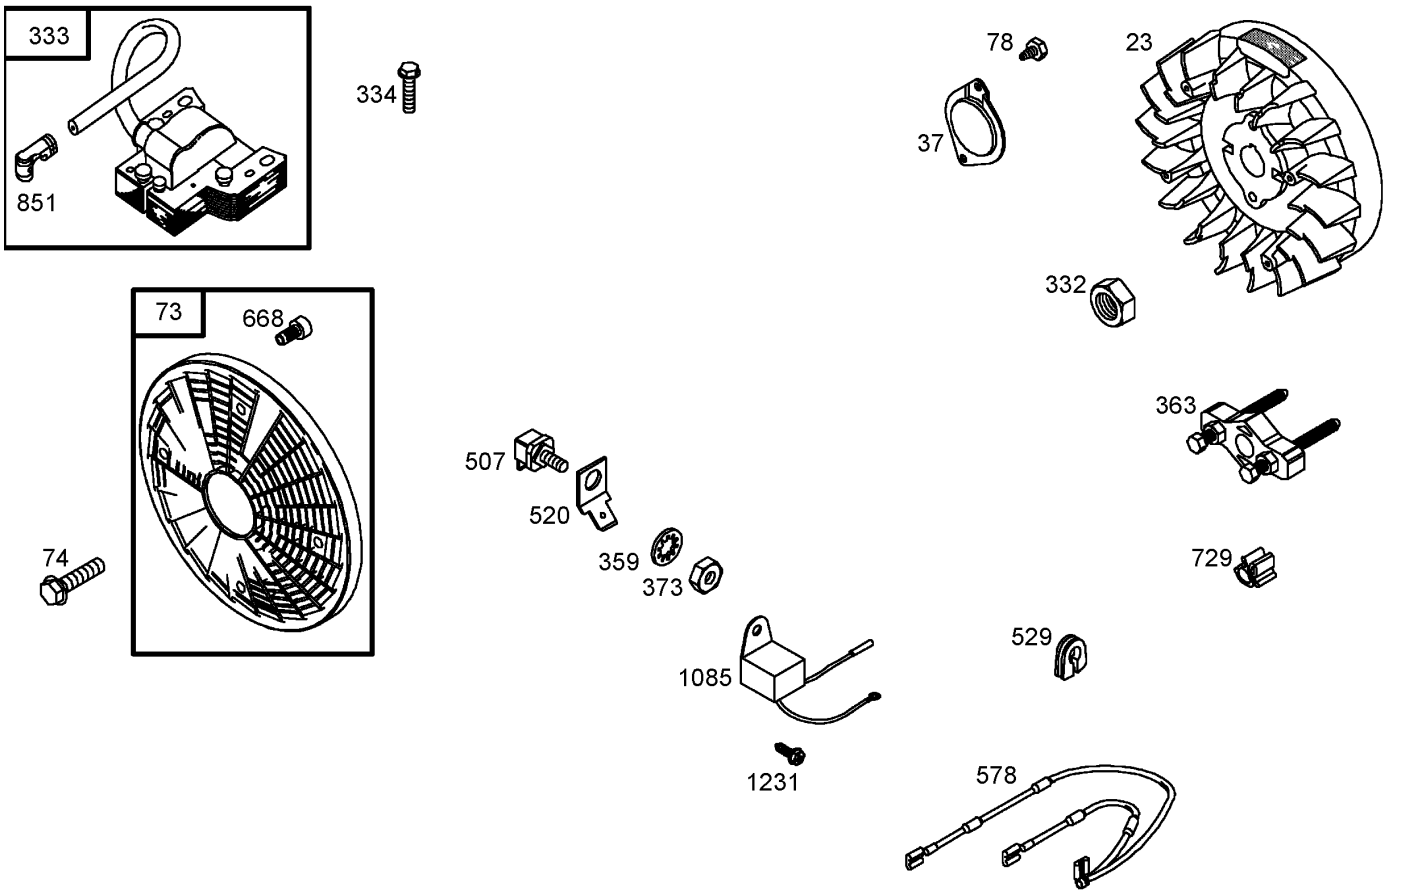



Assemblies include all parts shown in frames.

# Flywheel Assembly

# Briggs and Stratton 303440-1326-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻23 | 690889 | 1 | Flywheel |
| ❻37 | 841309 | 1 | Guard-Flywheel |
| ❻73 | 494439 | 1 | Screen-Rotating |
| ❻74 | 691647 | 1 | Screw |
| ❻78 | 690688 | 1 | Screw |
| ❻332 | 690887 | 1 | Nut |
| ❻333 | 492341 | 1 | Armature-Magneto |
| ❻334 | 692066 | 1 | Screw |
| ❻359 | 691077 | 1 | Washer |
| ❻363 | 19203 | 1 | Puller-Flywheel |
| ❻373 | 691612 | 1 | Nut |
| ❻507 | 691972 | 1 | Insulator |
| ❻520 | 691084 | 1 | Terminal-Ground |
| ❻529 | 690744 | 1 | Grommet |
| ❻578 | 692319 | 1 | Wire ASM |
| ❻668 | 691500 | 1 | Spacer |
| ❻729 | 690586 | 1 | Clip-Wire |
| ❻851 | 493880 | 1 | Terminal-Spark Plug |
| ❻1085 | 809093 | 1 | Module-Ignition |
| ❻1231 | 692067 | 1 | Screw |

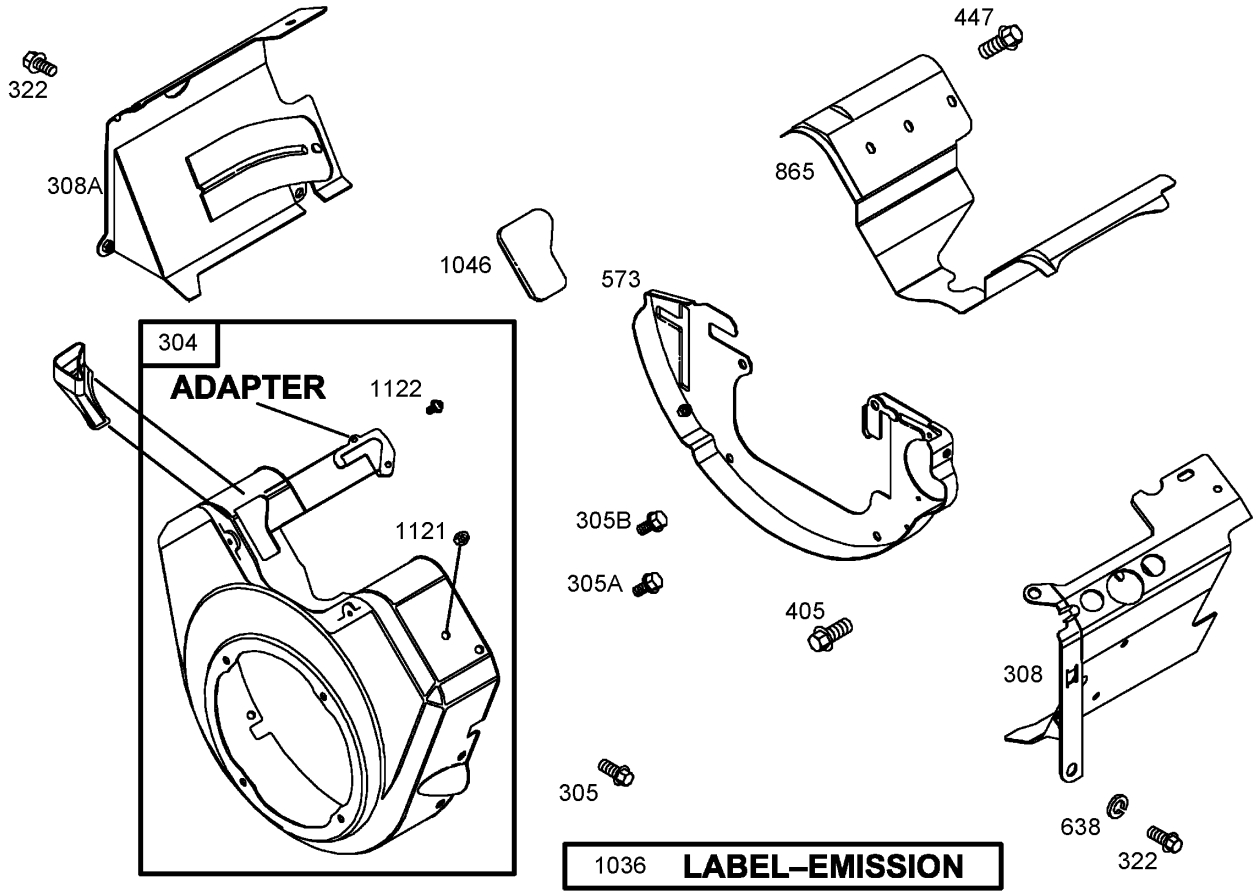


Assemblies include all parts shown in frames.

# Blower Housing Assembly
# Briggs and Stratton 303440-1326-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻304 | 808408 | 1 | Housing-Blower |
| ❻305 | 692539 | 1 | Screw |
| ❻305A | 692056 | 1 | Screw |
| ❻305B | 692062 | 1 | Screw |
| ❻308 | 841232 | 1 | Cover–Head, Cylinder (Cylinder 1) |
| ❻308A | 841182 | 1 | Cover–Head, Cylinder (Cylinder 2) |
| ❻322 | 692539 | 1 | Screw |
| ❻405 | 807163 | 1 | Screw |
| ❻447 | 692539 | 1 | Screw |
| ❻573 | 690902 | 1 | Plate-Back |
| ❻638 | 691551 | 1 | Washer |
| ❻865 | 690750 | 1 | Cover-Guide, Air |
| ❻1036 | 806881 | 1 | Decal-Emission |
| ❻1046 | 692082 | 1 | Plug-Housing, Blower |
| ❻1121 | 810056 | 1 | Nut (Air Cleaner) |
| ❻1122 | 93410 | 1 | Screw (Control Wire Casing) |

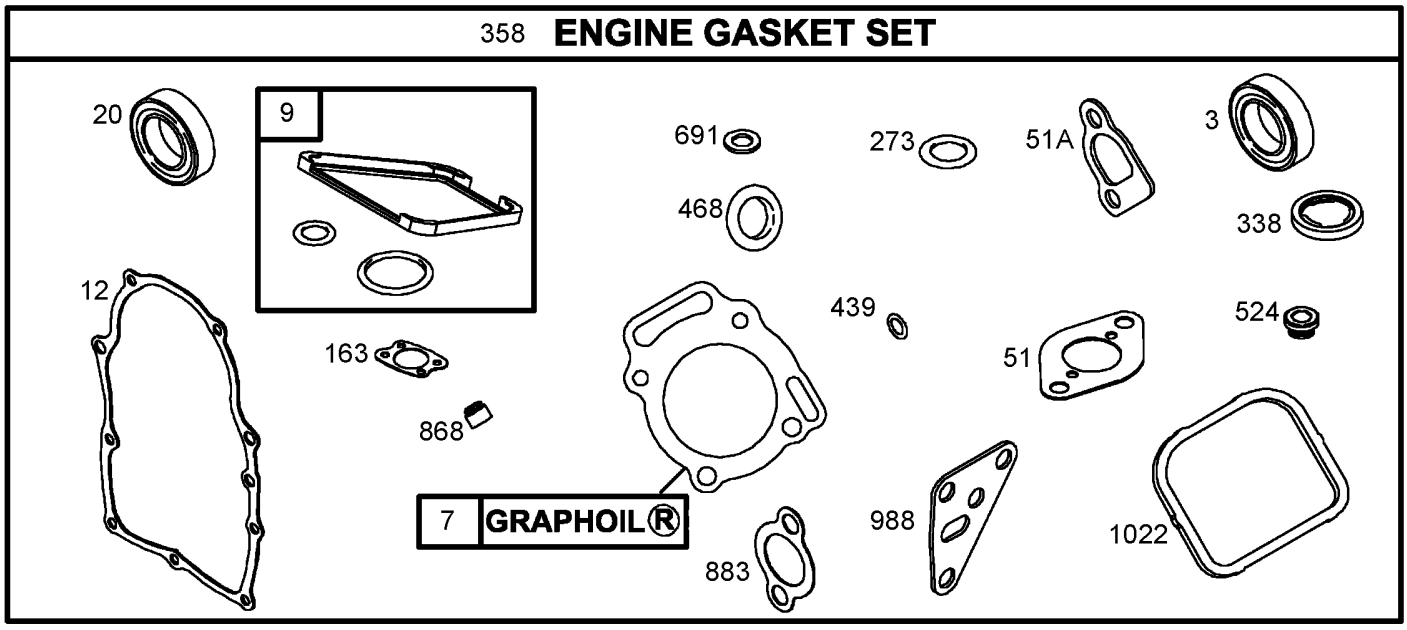



Assemblies include all parts shown in frames.

# Gasket Assembly
# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❻3 | 805101 | 1 | Seal-Oil |
| ❸❹7 ❻ | 806085 | 1 | Gasket-Head, Cylinder |
| ❸❻9 | 809094 | 1 | Gasket-Breather |
| ❸❻12 | 691684 | 1 | Gasket-Crankcase |
| ❸❻20 | 805049 | 1 | Seal-Oil |
| ❸❺51 ❻ | 691694 | 1 | Gasket-Intake |
| ❸❹51A ❻ | 692035 | 1 | Gasket-Intake |
| ❸❻163 | 692081 | 1 | Gasket-Cleaner, Air |
| ❸❻273 | 690681 | 1 | Seal-O Ring |
| ❸❹338 ❻ | 691312 | 1 | Gasket-Dipstick |
| ❻358 | 808390 | 1 | Engine Gasket Set |
| ❸❻439 | 692154 | 1 | Seal-O Ring |
| ❸❻468 | 690690 | 1 | Seal-O Ring |
| ❸❻524 | 693172 | 1 | Seal-Tube, Dipstick |
| ❸❻691 | 690680 | 1 | Seal-Shaft, Governor |
| ❸❹868 ❻ | 691963 | 1 | Seal-Valve |
| ❸❹883 ❻ | 691613 | 1 | Gasket-Exhaust |
| ❸❻988 | 692063 | 1 | Gasket-Adapter, Oil Filter |
| ❸❹1022 ❻ | 806039 | 1 | Gasket-Cover, Rocker |

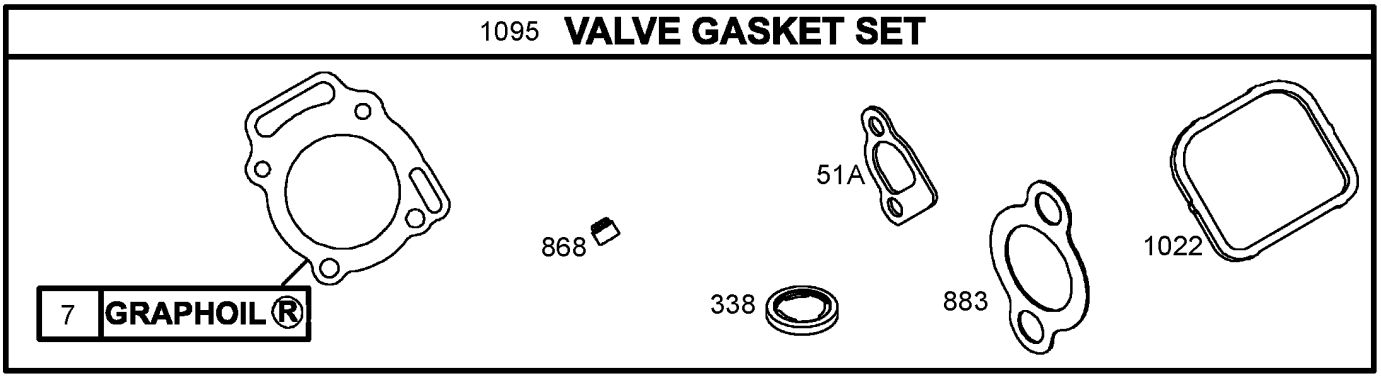

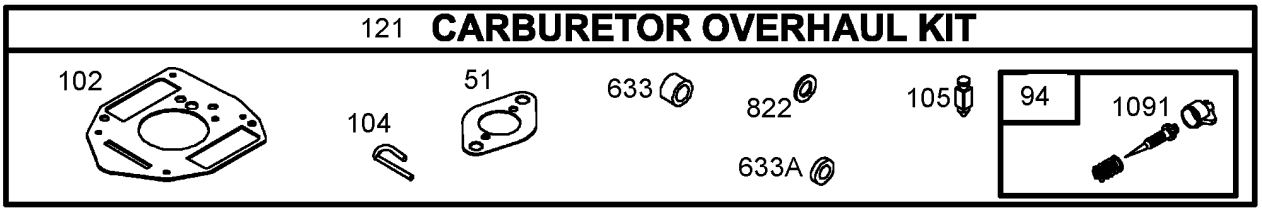
Assemblies include all parts shown in frames.

# Carburetor Overhaul Kit Assembly
# Briggs and Stratton 303440-1326-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❹7 ❻ | 806085 | 1 | Gasket-Head, Cylinder |
| ❸❺51 ❻ | 691694 | 1 | Gasket-Intake |
| ❸❹51A ❻ | 692035 | 1 | Gasket-Intake |
| ❺❻94 | 808257 | 1 | Idle Mixture Kit |
| ❺❻102 | 692077 | 1 | Gasket-Body, Carburetor |
| ❻104 | 690723 | 1 | Pin-Hinge, Float |
| ❺❻105 | 692078 | 1 | Valve-Needle, Float |
| ❻121 | 809023 | 1 | Carburetor Overhaul Kit |
| ❸❹338 ❻ | 691312 | 1 | Gasket-Dipstick |
| ❺❻633 | 806131 | 1 | Seal-Shaft, Choke / Throttle |
| ❺❻633A | 690722 | 1 | Seal-Shaft, Choke / Throttle |
| ❺❻822 | 690724 | 1 | Seal-O Ring |
| ❸❹868 ❻ | 691963 | 1 | Seal-Valve |
| ❸❹883 ❻ | 691613 | 1 | Gasket-Exhaust |
| ❸❹1022 ❻ | 806039 | 1 | Gasket-Cover, Rocker |
| ❺❻1091 | 691516 | 1 | Cap-Limiter |
| ❻1095 | 808392 | 1 | Valve Gasket Set |

# Attachments and Accessories

## For 07277TC - Workman 2110 Utility Vehicle

| Product Name | Model/Part |
|---|---|
| Stand Alone Windshield Kit | 07221 |
| Electric Bed Lift Kit | 07259 |
| Rear Lift Kit | 07274 |
| Roll-Over-Protection-System | 07276 |
| Receiver Hitch Kit | 07278 |
| Heavy-Duty Bumper Kit | 07282 |
| Stake Side Kit | 07290 |
| Cab | 07291 |
| Snow Plow-Mid Duty | 07292 |
| Folding Windshield Kit | 07293 |
| Windshield Kit | 07294 |
| Heavy-Duty Brushguard and Bumper Kit | 07296 |
| Canopy Kit | 07297 |
| Portable Refreshment Center | 07298 |
| Clutch Guard ASM | 104-6408-03 |
| Brake and Taillights (Rear lights, side reflectors) | 104-6697 |
| Signal Lights (Front marker lights / turn signal control) | 104-6953 |
| Key Start Kit | 107-0330 |
| Vinyl Enclosure | 79979 |
| Spark Arrestor (Meets USDA Forest Service Standard 5100-1A) | 98-9099 |
| Electric Harness Kit | 99-7924 |

# NOTES

# NOTES


TORO®