Form Number 3355-527 Rev A

522 Power Throw®
Snowthrower

Model No. 38605 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Auger and Housing Assembly	3
22 Inch Gear Case Assembly No. 37-6962	4
Frame Assembly	5
Drive Assembly	6
Engine Assembly	7
Handle and Control Assembly	8
Control Assembly	9
Engine Assembly No. 1 Tecumseh LH195SA - 67435V	10
Engine Assembly No. 2 Tecumseh LH195SA - 67435V	12
Carburetor Assembly No. 640084B Tecumseh LH195SA - 67435V	14
Rewind Starter No. 590742 Tecumseh LH195SA - 67435V	15
Rewind Starter No. 590707 (Optional) Tecumseh LH195SA - 67435V	16
Electric Starter No. 33290E Tecumseh LH195SA - 67435V	17
Attachments and Accessories List	18


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Tecumseh dealer
❹ Included in Repair Kit 632760B
❺ Included in Gasket Set 36444

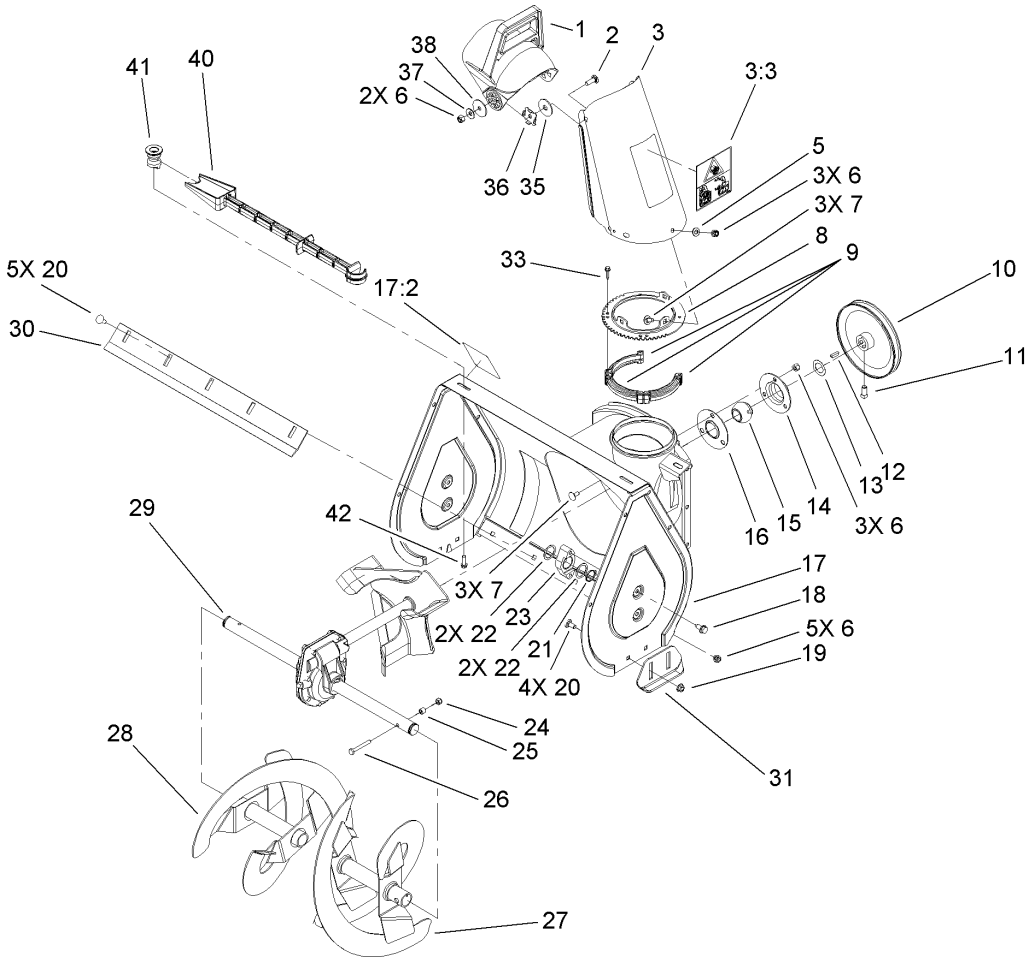

Auger and Housing Assembly


Ref	Part No.	Qty.	Description
1	56-2680	1	Chute-Deflector
2	3230-22	2	Screw-CARR
3	112-6604	1	Chute W/Decal ASM
3:3	112-6634	1	Decal-Discharge Danger
5	3256-23	3	Washer-Flat
6	3296-29	13	Nut-Lock, NI
7	3230-18	6	Screw-CARR
8	37-8941-03	1	Ring-Chute
9	37-6490	3	Ring-Chute, Retainer
10	37-6890	1	Pulley
11	3242-4	2	Screw-Set, SQH
12	3257-23	1	Key-Woodruff
13	3-0737	1	Washer
14	26-6110	1	Flange-Cup, Bearing
15	63-3450	1	Bearing-Ball
16	26-6120	1	Flange-Cup, Bearing
17	112-6640	1	Auger Housing ASM
17:2	53-7670	1	Decal-Warning, Auger
18	32144-70	4	Screw-HWHTF
19	32128-20	4	Nut-HF
20	3230-1	9	Bolt-CARR
21	32151-36	2	Ring-Retaining
22	5-1550	4	Washer
23	37-6550	2	Bearing-Auger

Ref	Part No.	Qty.	Description
24	3296-42	2	Nut-Lock, NI
25	66-8010	2	Spacer-Hub, Impeller
26	321-11	2	Screw-HH
27	98-2271-03	1	Auger, LH
28	98-2270-03	1	Auger, RH
29	37-6962	1	22 Inch Gear Case ASM
30	100-3554-01	1	Blade Scraper
31	40-8160-01	2	Skid
33	27-0220	6	Screw-Special
35	20-4320	2	Washer-Rubber
36	55-8950	2	Plate-Friction
37	3290-456	2	Washer-Belleville
38	3256-68	2	Washer-Flat
40	110-3408	1	Stick-Cleanout
41	110-6275	2	Holder-Stick
42	46-8091	2	Screw-HWH

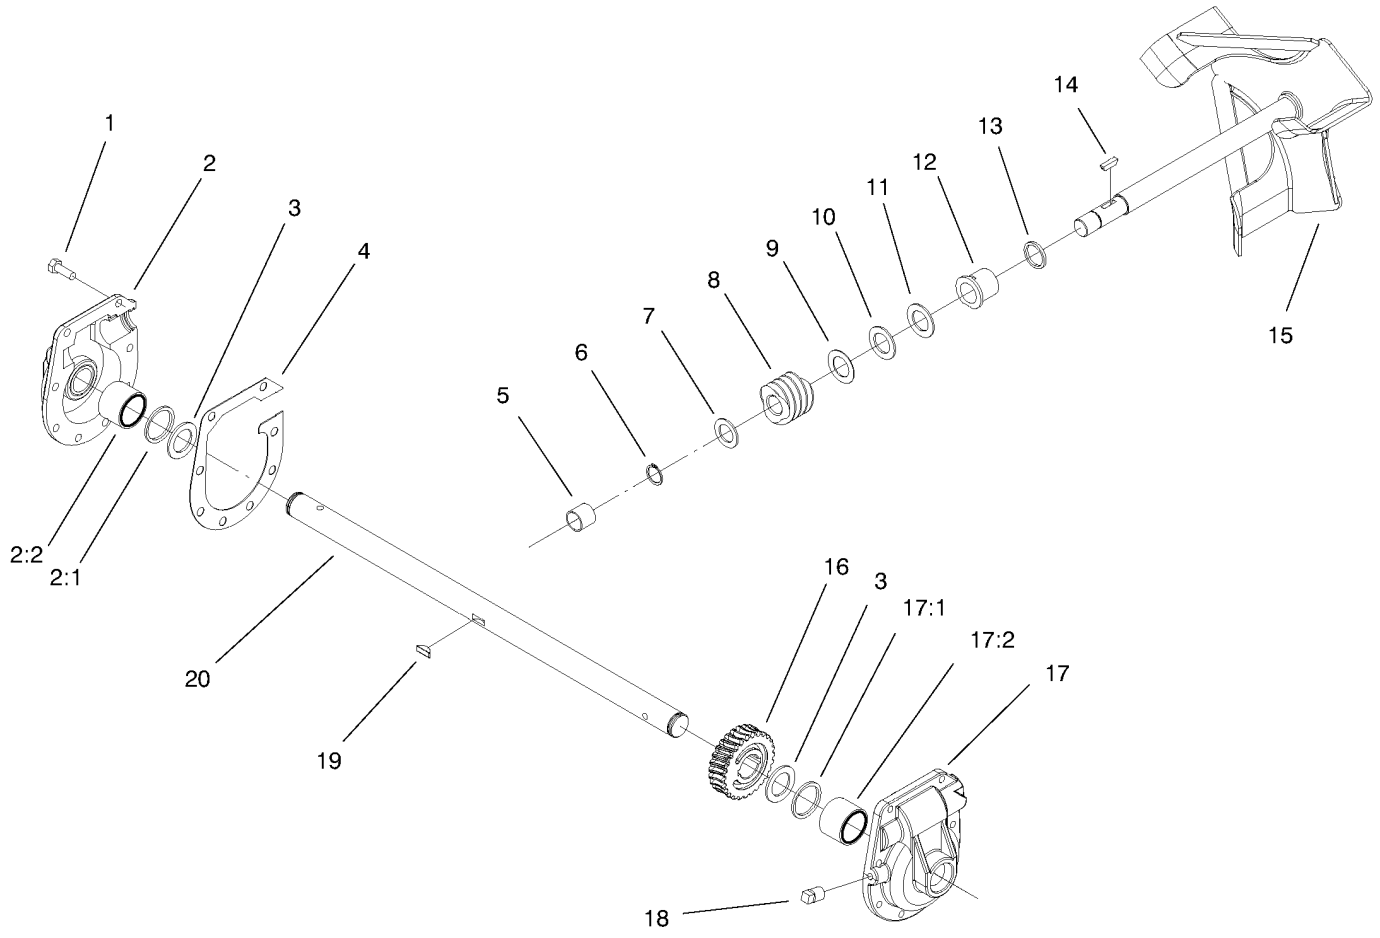

22 Inch Gear Case Assembly No. 37-6962


Ref	Part No.	Qty.	Description
1	32144-41	8	Screw-Taptite
2	14-2449	1	RH Bushing Case ASM
2:1	7-0045	1	Seal-Oil
2:2	256-237	1	Bushing
3	252-71	2	Washer-Thrust
4	51-0460	1	Gasket-Case, Gear
5	256-32	1	Bushing
6	32120-72	1	Ring-Snap
7	3-8664	1	Washer-Thrust
8	5-7170	1	Gear
9	252-80	1	Washer-Thrust
10	252-76	1	Bearing-Thrust
11	257-3	1	Washer-Thrust
12	37-6560	1	Bushing-Input
13	237-87	1	Ring-Quad
14	3257-23	1	Key-Woodruff
15	37-6990-03	1	Impeller Shaft ASM
16	5-7180	1	Gear-Worm, 27T
17	14-2459	1	LH Bushing Case ASM
17:1	7-0045	1	Seal-Oil
17:2	256-237	1	Bushing
18	281-1	1	Plug-Pipe, SQH
19	3257-33	1	Key-Woodruff
20	37-6802	1	Shaft-Auger

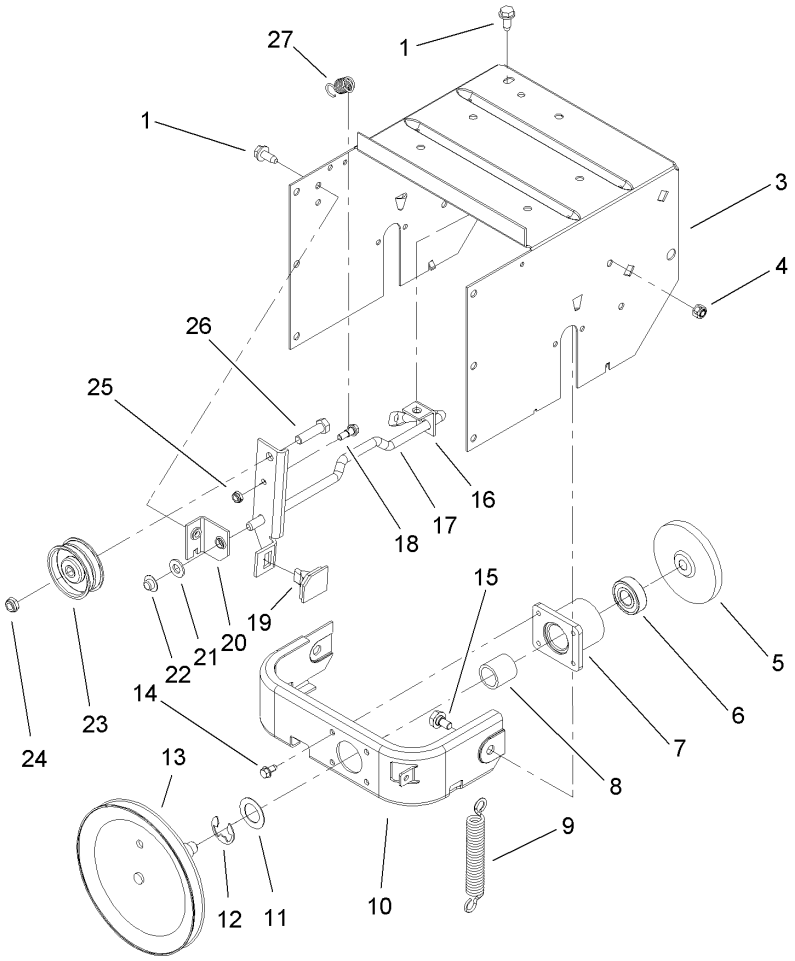

Frame Assembly

Ref	Part No.	Qty.	Description
1	32144-70	2	Screw-HWHTF
3	37-8900-01	1	Frame-Traction
4	3296-29	2	Nut-Lock, NI
5	38-0800	1	Plate-Friction
6	100-1048	1	Bearing-Ball
7	88-0560	1	Hub-Frame, Traction
8	256-322	1	Bushing
9	37-8870	1	Spring-Plate, Friction
10	88-0550-03	1	Frame-Front
11	252-80	1	Washer-Thrust
12	32151-103	1	Ring-Snap
13	88-0850	1	Pulley And Drive ASM
14	32144-4	4	Screw-HWH
15	37-8770	2	Bolt-Shoulder
16	37-9070	1	Bracket-Mount, Rear
17	40-6511-03	1	Auger Clutch Rod ASM
18	42-3560	1	Bolt-Shoulder
19	66-8060	1	Pad-Brake
20	66-6790	1	Bracket-Mount, Front
21	3256-24	1	Washer-Flat
22	3290-320	1	Retainer-Push On
23	3-4244	1	Pulley-Idler
24	3296-59	1	Nut-Lock, NI
25	3296-56	1	Nut-Lock, NI


Ref	Part No.	Qty.	Description
26	323-29	1	Screw-HH
27	53-7570	1	Spring

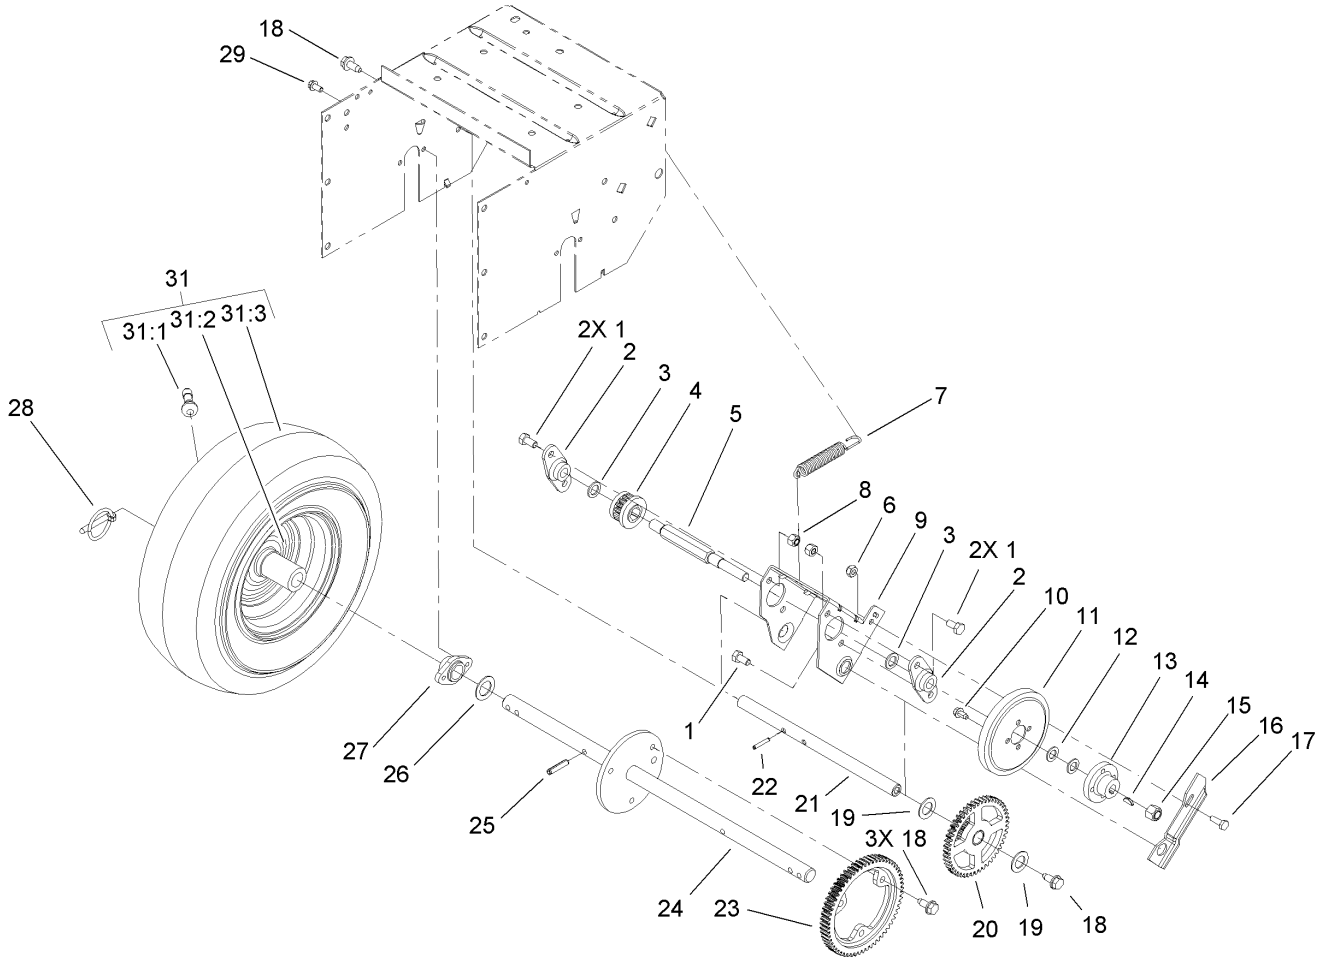

Drive Assembly


Ref	Part No.	Qty.	Description
1	322-2	4	Screw-HH
2	20-1620	2	Bearing-Wheel, Friction
3	5-7570	2	Washer-Flat
4	37-6500	1	Pinion
5	37-6780	1	Shaft-Wheel, Friction
6	3296-16	1	Nut-Lock, NI
7	37-8880	1	Spring-Traction
8	3296-29	4	Nut-Lock, NI
9	39-1230	1	Bracket-Sliding
10	32144-4	4	Screw-HWH
11	37-6570	1	Wheel-Friction
12	36-4790	2	Washer-Thrust
13	39-1520	1	Hub-Wheel, Friction
14	3257-24	1	Key-Woodruff
15	3296-48	1	Nut-Lock, NI
16	39-1250	1	Cam-Receiver
17	321-4	1	Screw-HH
18	32144-70	5	Screw-HWHTF
19	10-9280	2	Washer-Special
20	37-9160	1	Internal Gear And Bushing ASM
21	37-6760	1	Shaft-Pivot
22	32121-45	2	Pin-Spring
23	37-6520	1	Gear-Axle
24	74-1350	1	Shaft-Axle

Ref	Part No.	Qty.	Description
25	32121-9	2	Pin-Roll, Slotted
26	3-8664	2	Washer-Thrust
27	37-6850	2	Bearing-Axle
28	3290-243	2	Pin-Lynch
29	32144-4	4	Screw-HWH
❶❷30		1	LH Wheel And Tire ASM
❶30:1	232-27	1	Stem-Valve
❶30:2	241-131	1	Rim-Wheel
❶30:3	112-6609	1	Tire
❷31		1	RH Wheel And Tire ASM
31:1	232-27	1	Stem-Valve
31:2	241-131	1	Rim-Wheel
31:3	112-6609	1	Tire

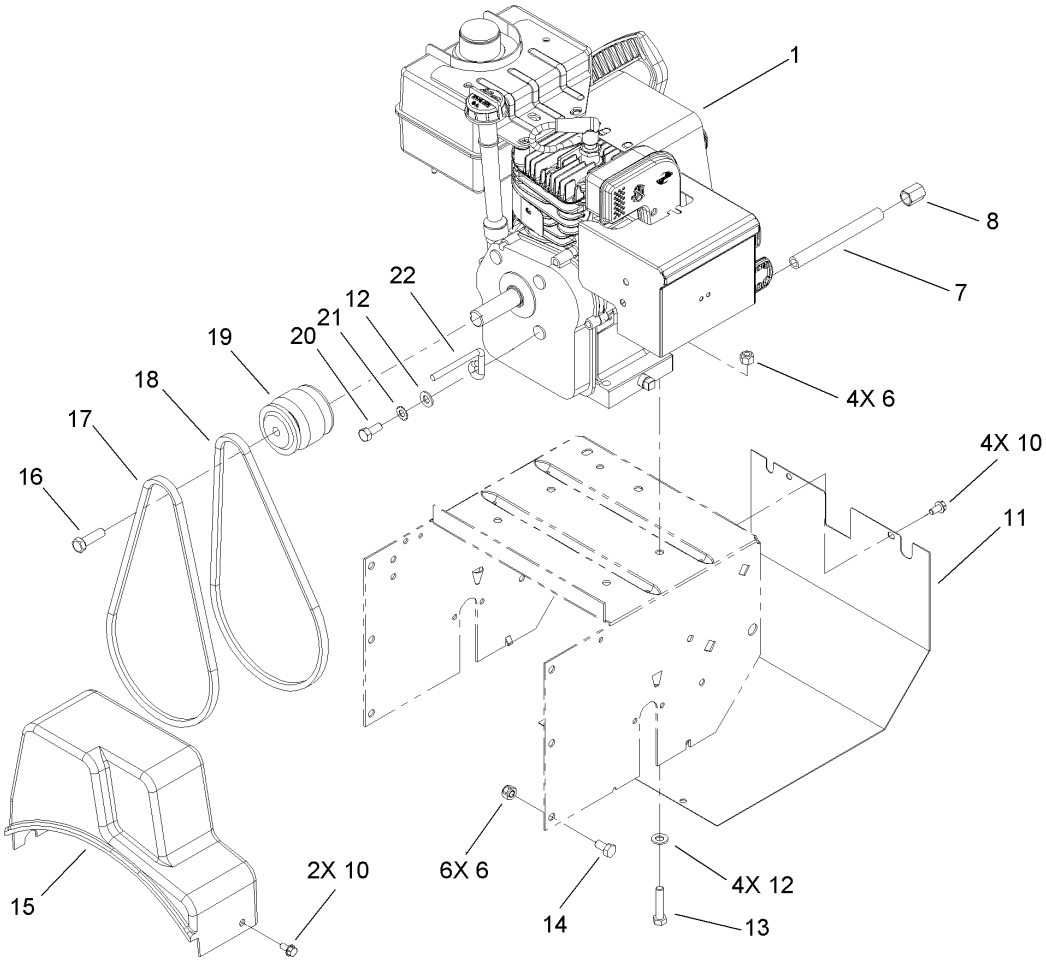

Engine Assembly


Ref	Part No.	Qty.	Description
❷❸1		1	Engine-Tecumseh, LH195Sa-67435V
6	3296-29	10	Nut-Lock, NI
7	289-34	1	Nipple-Pipe
8	288-2	1	Cap-Pipe
10	32144-4	6	Screw-HWH
11	37-6830-01	1	Cover-Traction, Lower
12	3256-23	5	Washer-Flat
13	322-7	4	Screw-HH
14	322-2	6	Screw-HH
15	37-6900	1	Cover-Belt
16	43-7290	1	Screw-Special
17	37-9080	1	V-Belt-29.50 Inch,
18	37-9090	1	V-Belt-3L, Traction
19	43-7370	1	Pulley-Engine
20	3210-3	1	Screw-HH
21	3255-8	1	Washer-Lock
22	37-8990	1	Retainer-Belt

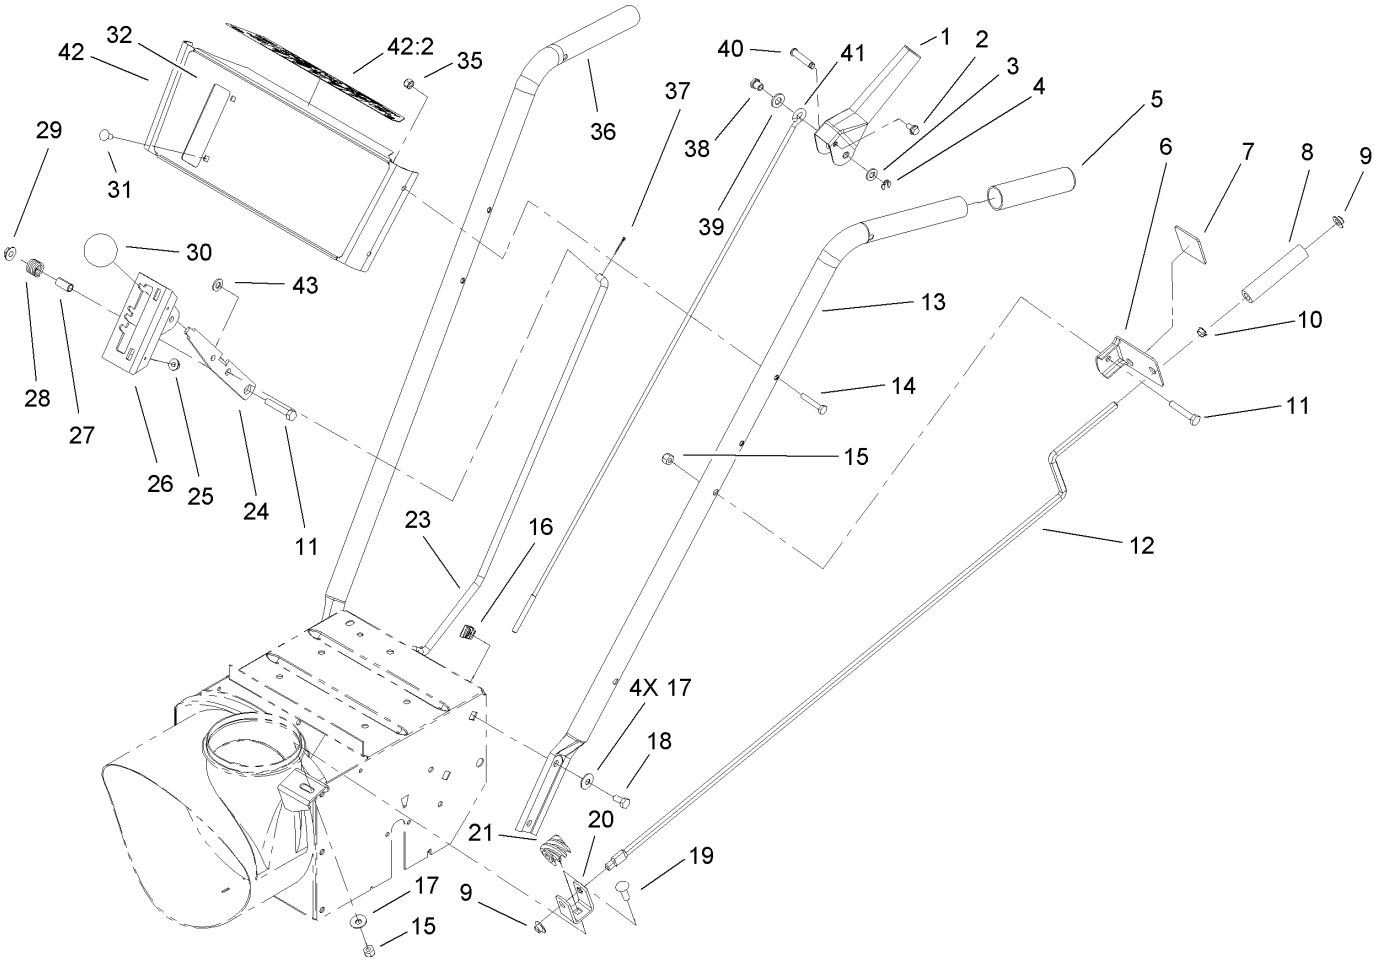

Handle and Control Assembly

Ref	Part No.	Qty.	Description
1	94-8887-03	2	Handle-Control
2	3234-13	2	Screw-HHF
3	3256-23	2	Washer-Flat
4	32151-73	2	Ring-Clip
5	112-6615	2	Grip-Handle
6	25-6090	1	Bracket-Rod, Chute
7	63-3510	1	Decal-Chute Direction
8	40-8230	1	Grip-Control, Chute
9	3290-320	2	Retainer-Push On
10	256-249	1	Bushing
11	322-9	2	Screw-HH
12	40-8270	1	Rod-Control, Chute
13	110-6296-03	1	Handle-Left
14	321-9	4	Screw-HH
15	3296-29	2	Nut-Lock, NI
16	3290-196	4	Nut
17	3290-456	5	Washer-Belleville
18	322-2	4	Screw-HH
19	3230-22	1	Screw-CARR
20	40-8280	1	Bracket-Worm
21	40-8250	1	Gear-Worm, Chute
23	39-7570	1	Rod-Selector, Speed
24	37-8820-03	1	Selector-Speed
25	32128-33	2	Nut-HF


Ref	Part No.	Qty.	Description
26	39-1280-03	1	Mount-Selector, Speed
27	40-8130	1	Spacer
28	37-9150	1	Spring
29	32128-13	1	Nut-HF
30	233-21	1	Knob
31	3229-11	2	Screw-CARR
32	112-6636	1	Decal-Escutcheon
35	3296-42	4	Nut-Lock, NI
36	52-5561-03	1	Handle-Right
37	3272-4	1	Pin-Cotter
38	47-4990	2	Post-Mounting, Linkage
39	3256-24	2	Washer-Flat
40	52-5600	2	Pin-Lever, Control
41	52-5590	2	Link-Upper
42	112-6642	1	Escutcheon Panel ASM
42:2	112-6621	1	Decal-Escutcheon Back
43	3256-23	1	Washer-Flat

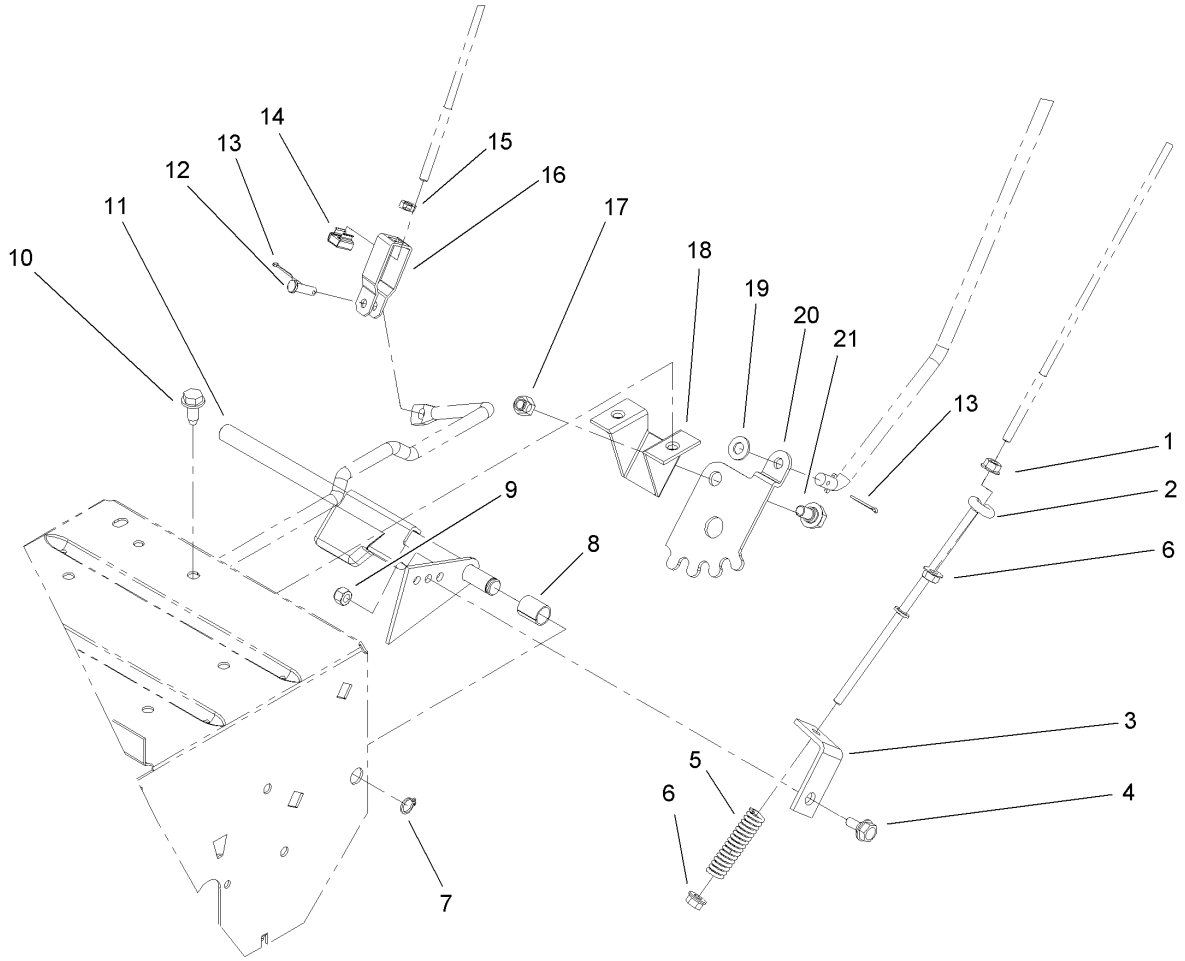

Control Assembly

Ref	Part No.	Qty.	Description
1	32128-33	1	Nut-HF
2	39-3060	1	Rod-Traction, Lower
3	38-4490	1	Bracket-Traction
4	40-8350	1	Screw
5	38-4520	1	Spring
6	32128-32	2	Nut-HHF
7	32151-61	1	Ring-Retaining
8	40-9680	1	Spacer
9	3296-42	1	Nut-Lock, NI
10	32144-70	2	Screw-HWHTF
11	43-7310-03	1	Traction Arm ASM
12	1-808265	1	Pin-Clevis
13	3272-4	2	Pin-Cotter
14	32115-5	1	Nut-Retained
15	3218-1	1	Nut-Jam
16	39-3080	1	Clevis
17	3296-29	1	Nut-Lock, NI
18	37-8790	1	Mount-Lever
19	3256-23	1	Washer-Flat
20	37-8800	1	Gear-Quadrant
21	37-8770	1	Bolt-Shoulder


Engine Assembly No. 1
Tecumseh LH195SA - 67435V

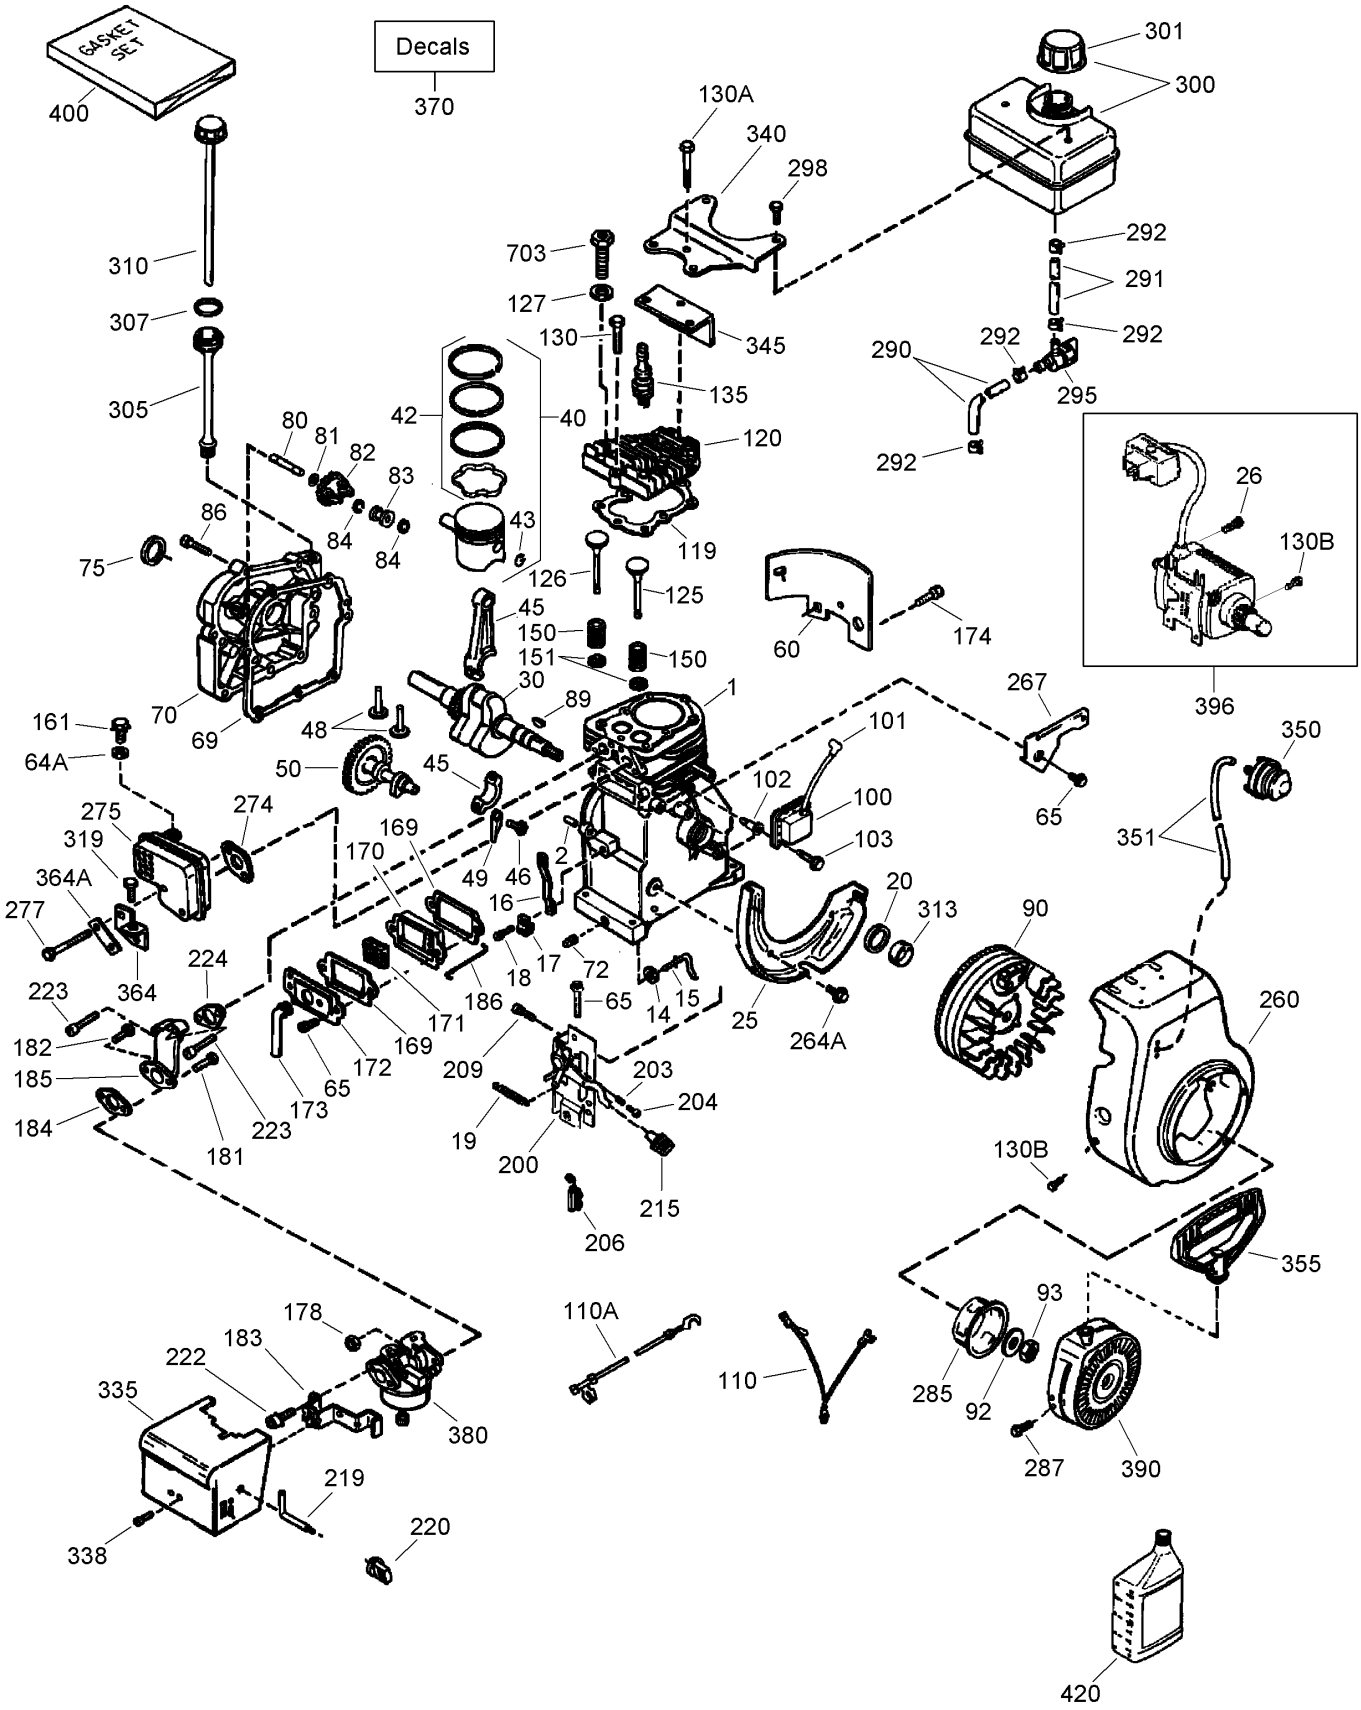

Engine Assembly No. 1
Tecumseh LH195SA - 67435V

Ref	Part No.	Qty.	Description
❸1	36469A	1	Cylinder ASM (Includes 2, 20, 72, 125)
❸2	26727	2	Pin-Dowel
❸14	28277	1	Washer-Flat
❸15	31334	1	Rod-Governor
❸16	37729	1	Chute Idler Arm ASM (W/Bushings)
❸17	31335	1	Clamp-Lever, Governor
❸18	651018	1	Screw (T-15, 8-32 X 19/64)
❸19	31426	1	Spring-Extension
❸20	32600	1	Seal-Oil
❸25	36552	1	Baffle-Blower Housing (Includes 262)
❸26	650561	2	Screw (1/4-20X19/32)
❸30	34740	1	Crankshaft ASM
❸40	40004	1	Piston, Pin And Ring Set (STD) (Includes 41, 42, 43)
❸40	36075	1	Piston, Pin And Ring Set (.020 O S)
❸40	40005	1	Piston, Pin And Ring Set (.010 O S) (Includes 41, 42, 43)
❸42	36077	1	Ring Set (.010 O S)
❸42	36076	1	Ring Set (STD)
❸42	40006	1	Ring Set (STD)
❸42	36078	1	Ring Set (.020 O S)
❸43	20381	2	Ring-Retaining, Piston Pin
❸45	32875A	1	Connecting Rod ASM (Includes 46, 49)
❸46	32610A	2	Bolt-Rod, Connecting
❸48	27241	2	Lifter-Valve
❸49	32654	1	Dipper-Oil
❸50	33158	1	Camshaft
❸60	29745	1	Extension-Blower
❸64A	8345	1	Washer
❸65	30200	1	Screw (10-24 X 9/16)
❸❺69	27677A	1	Gasket-Cylinder Cover
❸70	34674C	1	Cover-Cylinder (Includes 75 - 80)
❸72	27642	3	Plug-Drain, Oil (SQH 1/4-18)
❸75	27897	1	Seal-Oil
❸80	30574A	1	Shaft-Governor
❸81	30590A	1	Washer
❸82	30591	1	Governor Gear ASM (Includes 81)
❸83	30588A	1	Spool-Governor
❸84	29193	1	Ring-Retaining
❸86	650488	7	Screw (1/4-20 X 1-1/4)
❸89	610961	1	Key-Flywheel
❸90	611199	1	Flywheel (W/Ring Gear)
❸92	650815	1	Washer-Belleville
❸93	650816	1	Nut-Flywheel
❸100	34443C	1	Ignition-Solid State
❸101	610118	1	Cover-Spark Plug
❸102	651024	2	Stud-Mounting, Solid State
❸103	651007	2	Screw (T-15, 10-24 X 15/16)
❸110	35182	1	Wire-Ground
❸110A	36874	1	Wire-Ground (Green, 5.5)
❸❺119	36443	1	Gasket-Cylinder Head
❸120	37675	1	Head-Cylinder (Includes 130A)
❸125	36471	1	Valve-Exhaust (STD) (Includes 151)
❸125	36472	1	Valve-Exhaust (1/32 O S) (Includes 151)
❸126	32644A	1	Valve-Intake (STD) (Includes 151)
❸126	32645A	1	Valve-Intake (1/32 O S) (Includes 151)
❸127	650691	1	Washer
❸130	6021A	2	Screw (5/16-18X1-1/2)
❸130A	650694A	5	Screw, 5/16-18 X 2In
❸130B	650737	2	Screw (1/4-20 X 1/2)
❸135	35395	1	Spark Plug-Resistor (R J19 L M)
❸150	31672	2	Spring-Valve
❸151	31673	2	Cap-Valve, Spring
❸161	30063	1	Screw (T-30 1/4-20X1/2)
❸❺169	27234A	2	Gasket-Valve Cover


Engine Assembly No. 2
Tecumseh LH195SA - 67435V

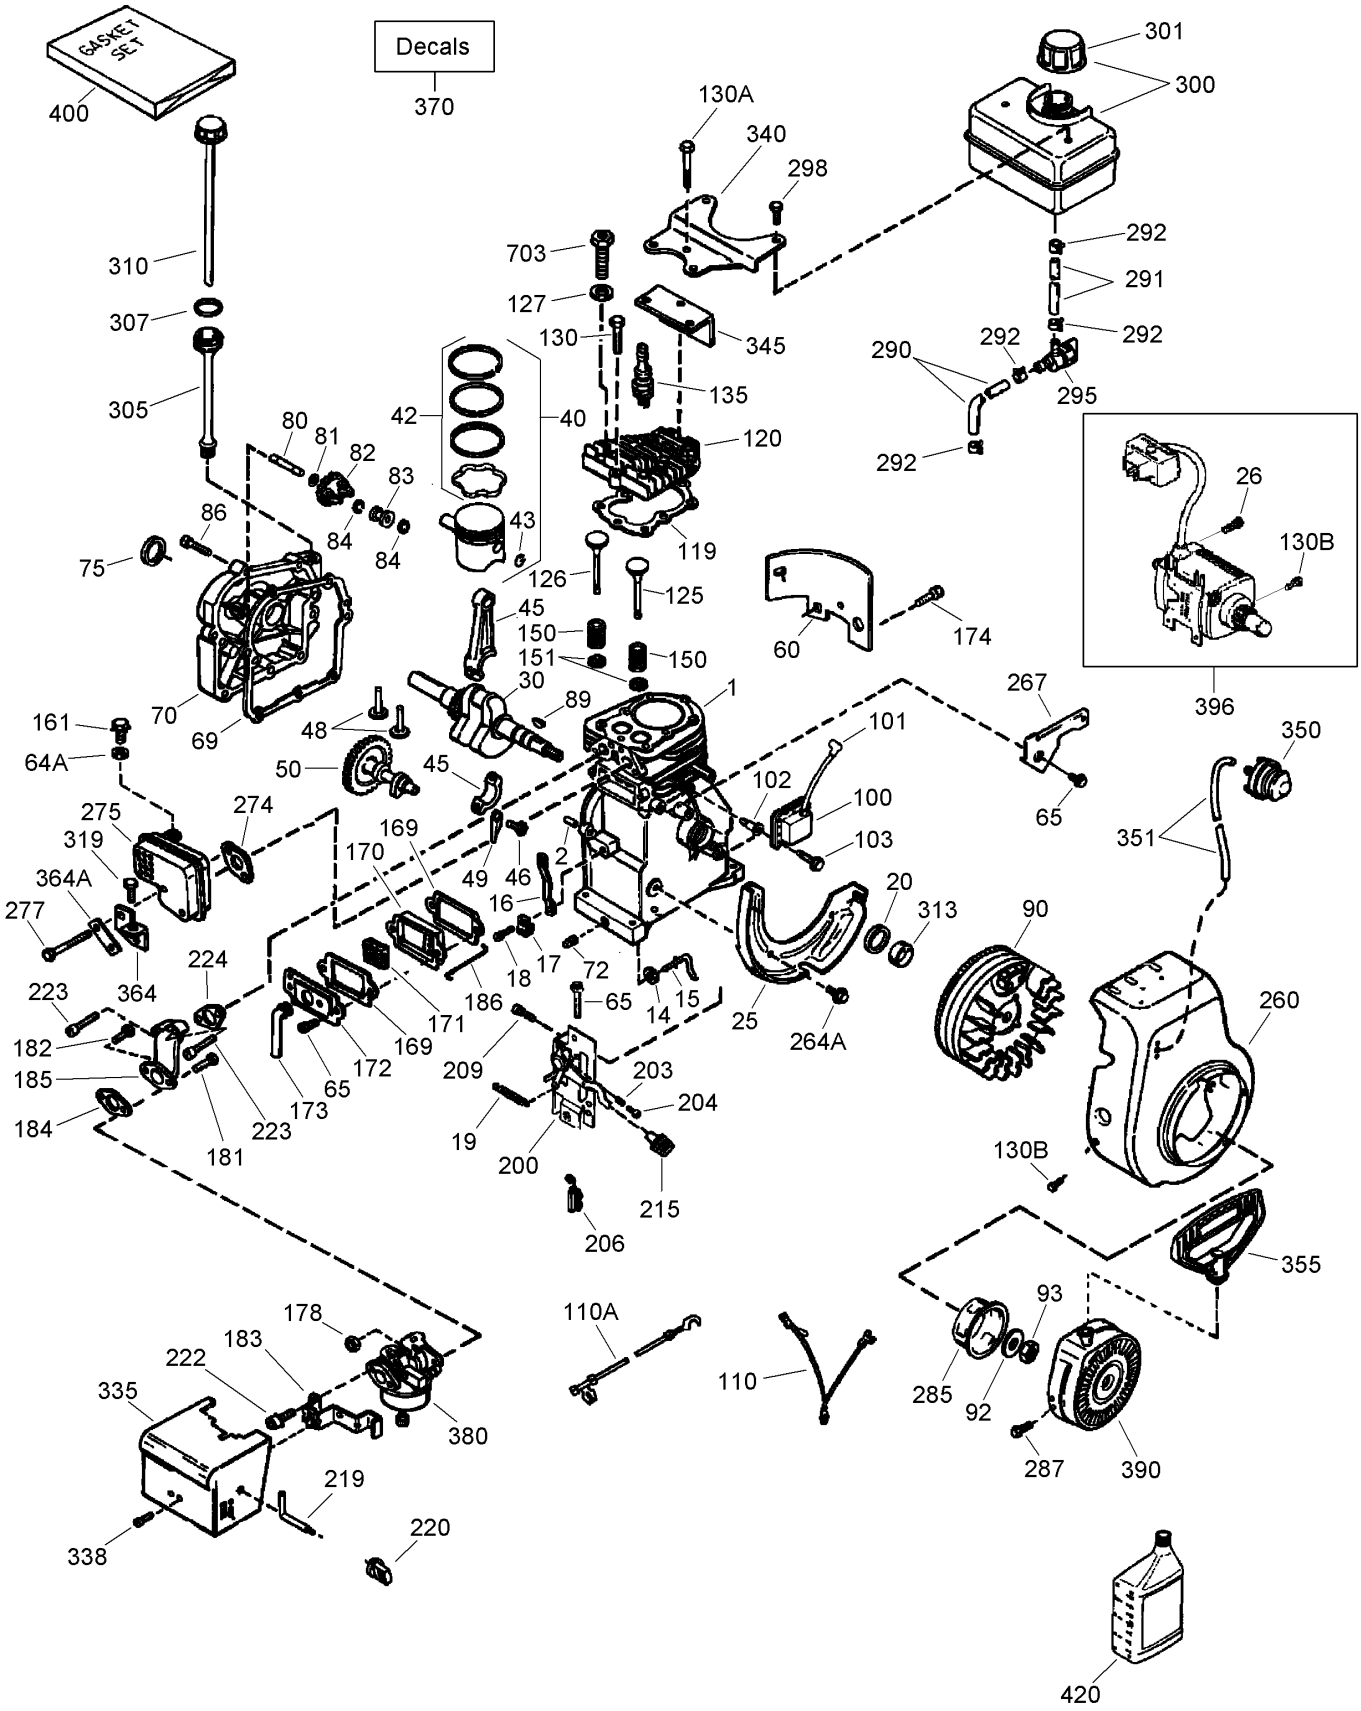

Engine Assembly No. 2
Tecumseh LH195SA - 67435V

Ref	Part No.	Qty.	Description
❸170	27666	1	Body-Valve Cover
❸171	31410	1	Element Breather
❸172	34146	1	Cover-Breather
❸173	35350	1	Tube-Breather
❸174	650128	1	Screw (10-24X1/2)
❸178	29752	2	Nut And Lock Washer (1/4-28)
❸181	650870	1	Screw (1/4-28 X 1-11/16)
❸182	6201	1	Screw (1/4-28 X 7/8)
❸183	34583A	1	Bracket-Choke
❸❺184	26756	1	Gasket-Carburetor To Intake Pipe
❸185	33691	1	Pipe-Intake
❸186	32698	1	Link-Governor To Throttle
❸200	36677	1	Control ASM (Includes 203, 204, 206, 209, 209A)
❸203	31342	1	Spring-Compression
❸204	651029	1	Screw (T-10, 5-40X7/16)
❸206	610973	2	Terminal
❸209		2	Rivet (Purchase Locally)
❸215	35440	1	Knob-Control
❸219	34582	1	Rod-Choke
❸220	35438	1	Knob-Control
❸222	28820	2	Screw (10-32 X 1/2)
❸223	650664	2	Screw (1/4-20 X 1-19/32)
❸❺224	33673A	1	Gasket-Intake
❸260	35656A	1	Housing-Blower
❸264A	650802	2	Screw (1/2-20X5/8)
❸267	34212	1	Bracket-Hold Down
❸❺274	33670A	1	Gasket-Exhaust
❸275	35771A	1	Muffler (Includes 274)
❸277	792005	2	Screw (1/4-20 X 2-1/2)
❸285	36467B	1	Cup-Starter
❸287	650926	2	Screw (8-32 X 21/64)
❸290	37963	1	Line-Fuel, Low Permeation (16.0)
❸291	37962	1	Line-Fuel, Low Permeation (8.62)
❸292	26460	4	Clamp-Line, Fuel
❸295	35857	1	Valve-Shut Off, Fuel (Includes 292)
❸298	650665	2	Screw (1/4-15X7/8)
❸300	35584	1	Tank-Fuel (Includes 292, 301)
❸301	37845	1	Cap-Fuel (Red Plastic) (1-1/2 Id)
❸305	35554	1	Tube-Fill, Oil
❸307	35499	1	O-Ring
❸310	35556	1	Dipstick
❸313	34080	1	Spacer
❸319	650735	1	Screw (10-24 X 3/8)
❸335	35072A	1	Carburetor Cover
❸338	650257	2	Screw
❸340	36247	1	Plate-Fuel Tank
❸345	33344	1	Baffle-Heat
❸350	570682A	1	Primer ASM
❸351	32180C	1	Line-Primer
❸355	590574	1	Handle-Starter, Mitten Grip


Ref	Part No.	Qty.	Description
❸364	33333	1	Bracket-Carburetor Cover
❸364A	37673	1	Locking Plate
❸370	37119	1	Decal-Warning (Bilingual)
❸370	36534	1	Decal-Instruction
❸370	35282	1	Decal-Control
❸370	36695	1	Decal-Tecumseh Logo For Top Of Recoil Starter
❸370	36501	1	Decal-Primer-International Symbol
❸380	640084B	1	Carburetor ASM (Includes 184)
❸390	590742	1	Starter-Rewind
❸396	33290E	1	Starter-Electric (110 Volt)
❸❺400	36444	1	Gasket Set
❸420	730226A	1	Oil-Engine, Sae 5W30
❸703	650818	1	Screw (5/16-18 X 1-1/2)
❶❸704	754273C	1	Short Block Replacement

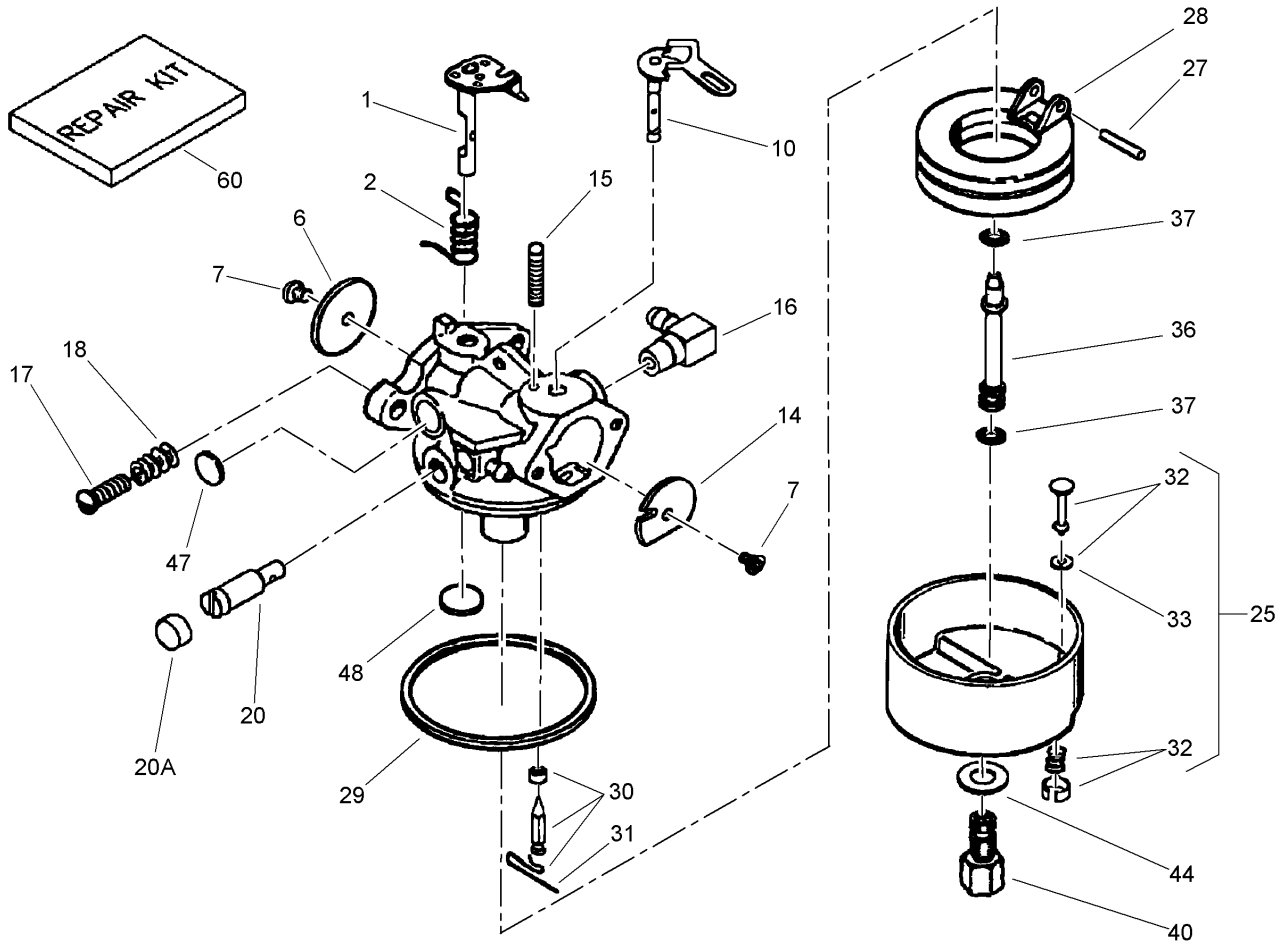


Carburetor Assembly No. 640084B
Tecumseh LH195SA - 67435V


Ref	Part No.	Qty.	Description
❸❹0	640084B	1	Carburetor (Includes 184)
❸1	631615	1	Throttle Shaft And Lever ASM
❸2	631767	1	Spring-Return, Throttle
❸6	640070	1	Shutter-Throttle
❸❹7	650506	2	Screw-Shutter
❸10	632108	1	Shaft And Lever ASM
❸14	631890	1	Shutter-Choke
❸15	630735	1	Spring-Positioning, Choke
❸16	631807	1	Fitting-Fuel
❸17	651025	1	Screw-Throttle Crack/Idle Speed
❸18	630766	1	Spring-Tension
❸20	640027	1	Spring-Restrictor, Idle
❸20A	640053	1	Cap-Screw, Idle Restrictor
❸25	631867	1	Bowl-Float (No Drain)
❸25	631951	1	Float Bowl ASM
❸❹27	631024	1	Shaft-Float
❸28	632802	1	Float (Plastic)
❸❹29	631028	1	O-Ring-Bowl, Float
❸❹30	631021A	1	Inlet Needle, Seat And Clip ASM
❸31	631022	1	Clip-Spring
❸32	27136A	1	Bowl Drain ASM
❸❹33	27554	1	Gasket-Plunger, Drain
❸36	632745	1	Tube-Nozzle, Main
❸❹37	632547	2	O-Ring-Nozzle Tube, Main


Ref	Part No.	Qty.	Description
❸40	640131	1	Nut-Bowl, High Speed
❸❹44	27110A	1	Washer-Nut, Bowl
❸❹47	630748	1	Plug-Welch, Idle Mixture Well
❸❹48	631027	1	Plug-Welch, Atmospheric Vent
❸60	632760B	1	Repair Kit

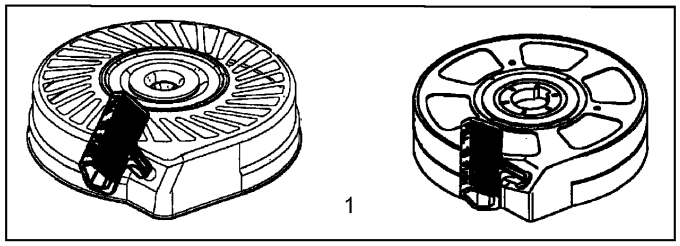


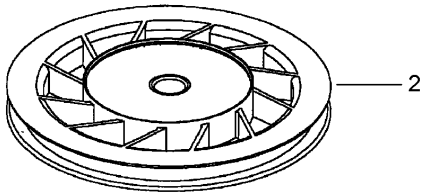

This illustration may not depict actual equipment and is for reference purposes only

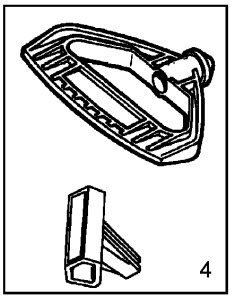


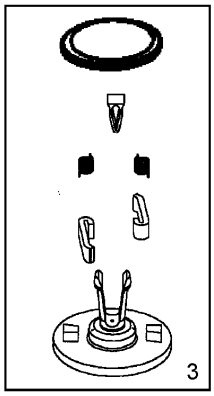





Rewind Starter No. 590742
Tecumseh LH195SA - 67435V


Ref	Part No.	Qty.	Description
❸1	590742	1	Starter-Rewind
❸2	590645A	1	Pulley And Rewind Spring ASM
❸3	590772	1	Repair Kit
❸4	590574	1	Handle-Starter, Mitten Grip
❸5	590535	1	98 Starter Rope (Cut To Length)

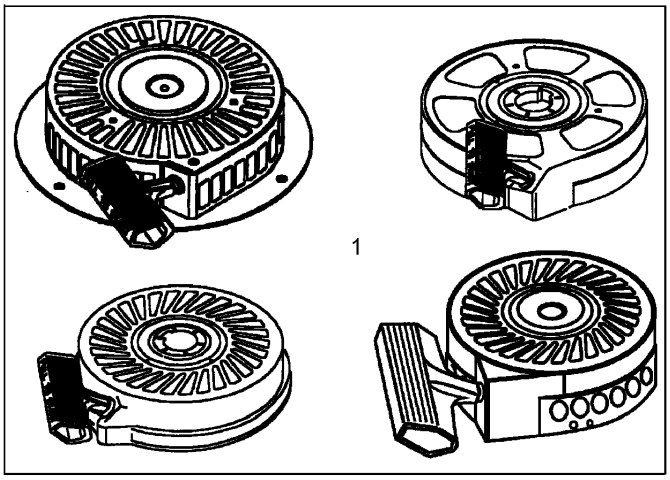


This illustration may not depict actual equipment and is for reference purposes only

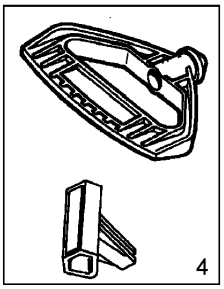

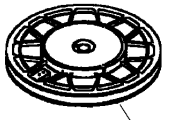


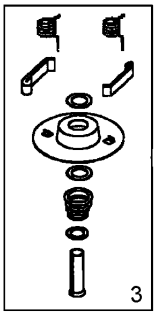



Rewind Starter No. 590707 (Optional)
Tecumseh LH195SA - 67435V

Ref	Part No.	Qty.	Description
❸1	590707	1	Starter-Rewind
❸2	590709	1	Pulley And Rewind Spring ASM
❸3	590774	1	Repair Kit
❸4	590574	1	Handle-Starter, Mitten Grip
❸5	590535	1	98 Starter Rope (Cut To Length)

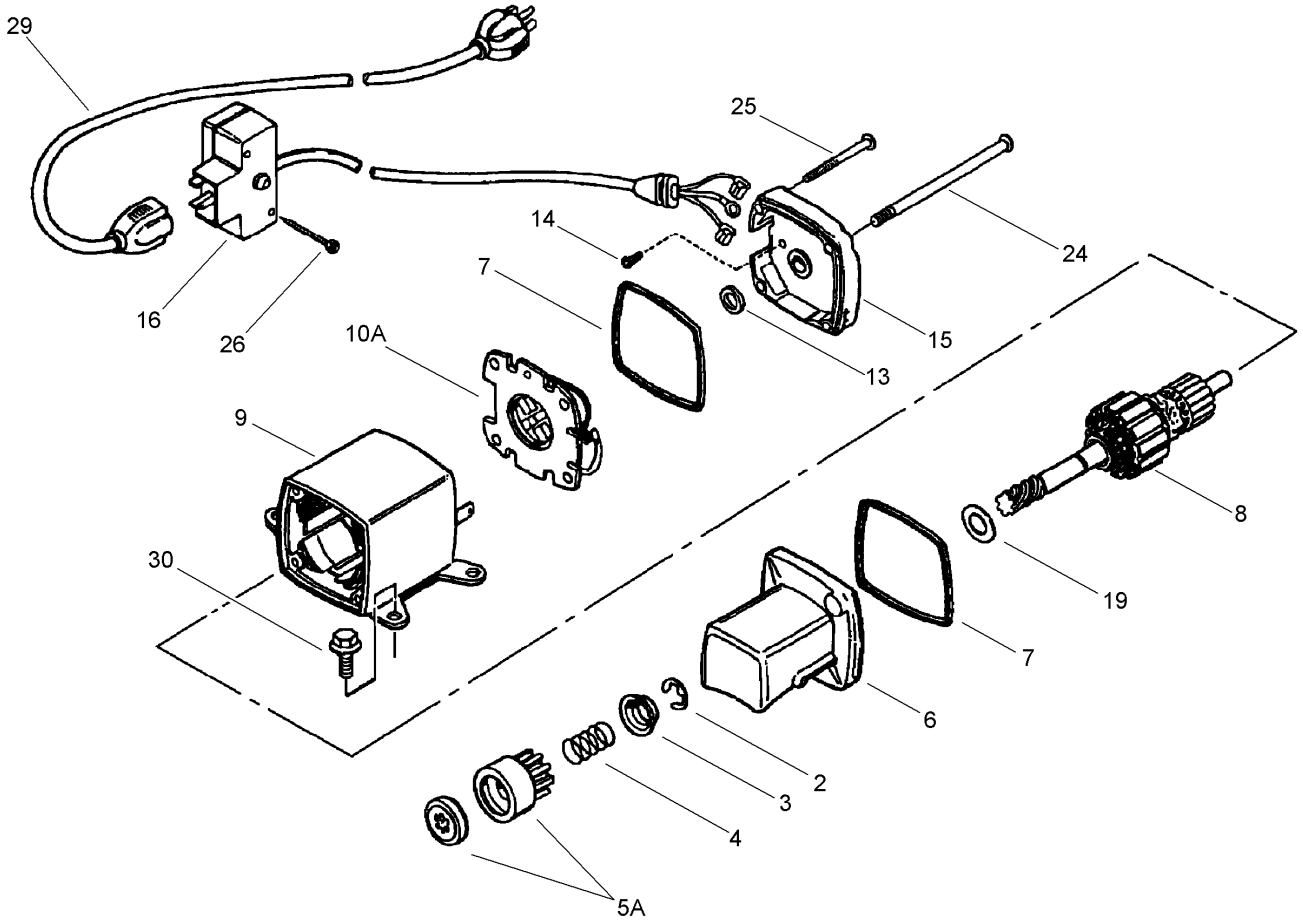

Electric Starter No. 33290E
Tecumseh LH195SA - 67435V

Ref	Part No.	Qty.	Description
❸0	33290E	1	Starter-Electric (110 Volt)
❸2	31749	1	Retainer-Ring
❸3	33522	1	Retainer-Spring
❸4	33769	1	Spring-Anti Drift
❸5A	37332	1	Nut And Gear ASM (Includes 2)
❸6	35461	1	Drive End Cap ASM (Includes 7)
❸7	35450	2	O-Ring
❸8	35912	1	Armature
❸9		1	Housing ASM (Must Purchase Complete Motor)
❸10A	35452A	1	Brush Card ASM
❸13	590500	1	Washer-Thrust
❸14	33441	1	Screw-Ground
❸15	35453	1	Commutator End Cap ASM
❸16	35454	1	Switch Box ASM
❸19	35911	1	Washer-Thrust
❸24	35462	2	Bolt-Case
❸25	35456	1	Screw-Ground
❸26	650819	2	Screw (6-32X2-1/2)
❸26	651032	2	Screw (12-16 X 5/8)
❸29	32450B	1	Cord-Extension (10-6)
❸30	650759	3	Screw (T-30, 1/4-20 X 23/32)

Attachments and Accessories

For 38605 - 522 Power Throw Snowthrower

Product Name	Model/Part
22 Inch Drift Breaker	37-7022
Tire Chain Kit	56-2700
Snow Cab	88-0600

NOTES


TORO®