FORM NO.3314–233Rev. B

TORO®

MODEL NO. 62912–0000001 Thru 2000001 & UP
MODEL NO. 62923–0000001 Thru 2000001 & UP

**PARTS CATALOG**

# 5 H.P. LAWN VACUUM, H.P. & S.P.

ONLY COPY
DO NOT REMOVE
Tech Publications




C–0463

## SNOUT ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 67–7730 | Decal – Toro Vacuum Model No. 62912 | 1 |
| * | 67–7720 | Decal – Toro Vacuum Model No. 62923 | 1 |
| 2 | 19–4050 | Knob – Handle Release | 1 |
| 3 | 40–7000 | Snout Assembly (Incl. Ref. #5–8 | 1 |
| 4 | 3–3391 | Washer | 1 |
| 5 | 3290–417 | Rivet – Pop | 5 |
| 6 | 20–6840 | Clamp – Flap | 1 |
| 7 | 20–6830 | Flap – Rubber | 1 |
| 8 | 3256–51 | Washer | 5 |

*Not Illusrtrated

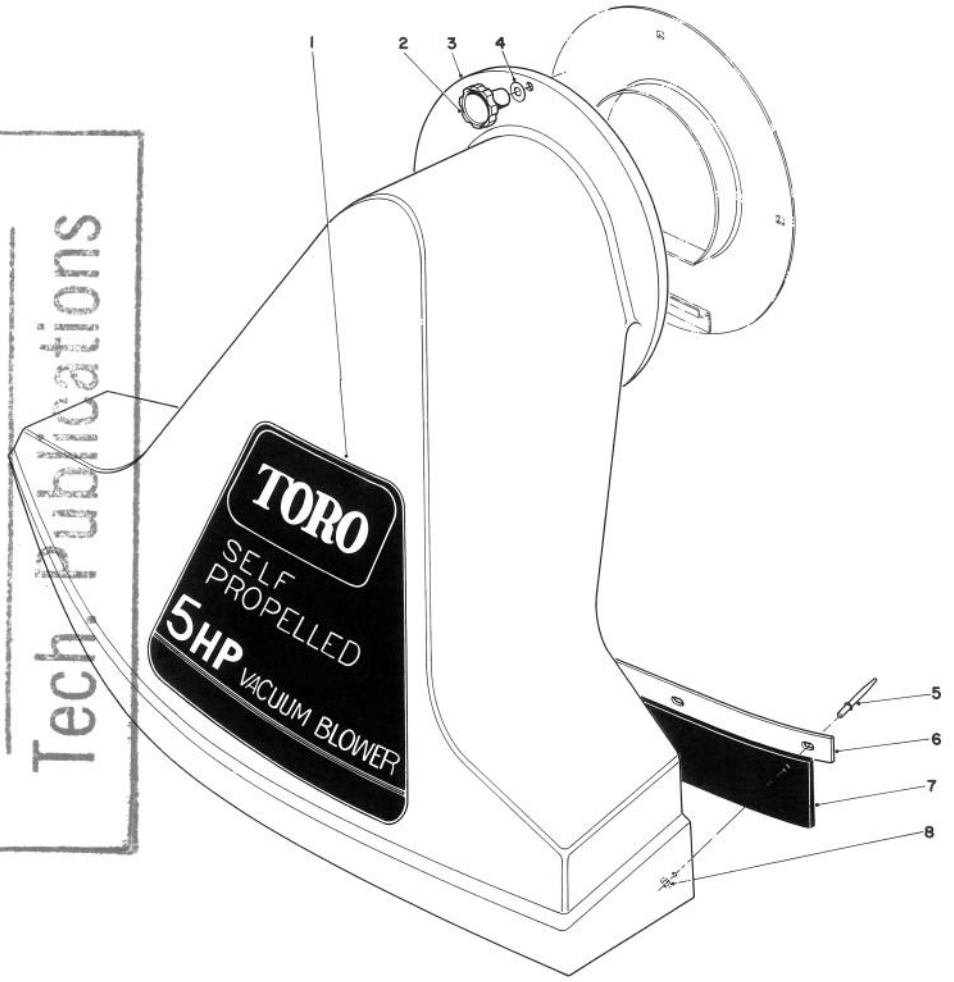TPS

© The TORO Company –1990 / 1991 Rev.




# BLOWER ASSEMBLY (Model 62912 & 62923)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32128-26 | Nut - Flange | 1 |
| 2 | 3256-25 | Washer - Flat | 3 |
| 3 | 20-5450 | Cover - Blower | 1 |
| 4 | 37-9230 | Fan (Model No .62923) | 1 |
| * | 37-9230 | Fan (Model No .62912) | 1 |
| 5 | 57-0036 | Key | 1 |
| 6 | 57-3220 | Bolt - Carriage | 1 |
| 7 | 37-9250 | Decal - Warning | 1 |
| 8 | 20-7000 | Decal - Toro | 1 |
| 9 | 20-8710 | Decal - Caution | 1 |
| 10 | 20-6130 | Chute - Vacuum | 1 |
| 11 | 3296-58 | Nut - Flange Lock | 1 |
| 12 | 39-4660 | Bracket - Housing | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 13 | 3296-29 | Nut - Lock | 7 |
| 14 | 321-4 | Screw | 1 |
| 15 | 20-7010 | Decal - Warning | 1 |
| 16 | 20-5890 | Housing - Blower | 1 |
| 17 | 3230-15 | Bolt - Carriage | 3 |
| 18 | 20-6570 | Blower - Exhaust (Incl Ref.#19) | 1 |
| 19 | 20-7900 | Decal - Exhaust | 1 |
| 20 | 20-5780 | Blower - Intake | 1 |
| 21 | 3290-456 | Washer - Lock | 1 |
| 22 | 40-6990 | Screw - Special | 1 |
| 23 | 3290-436 | Washer - Lock | 1 |

*Not Illustrated

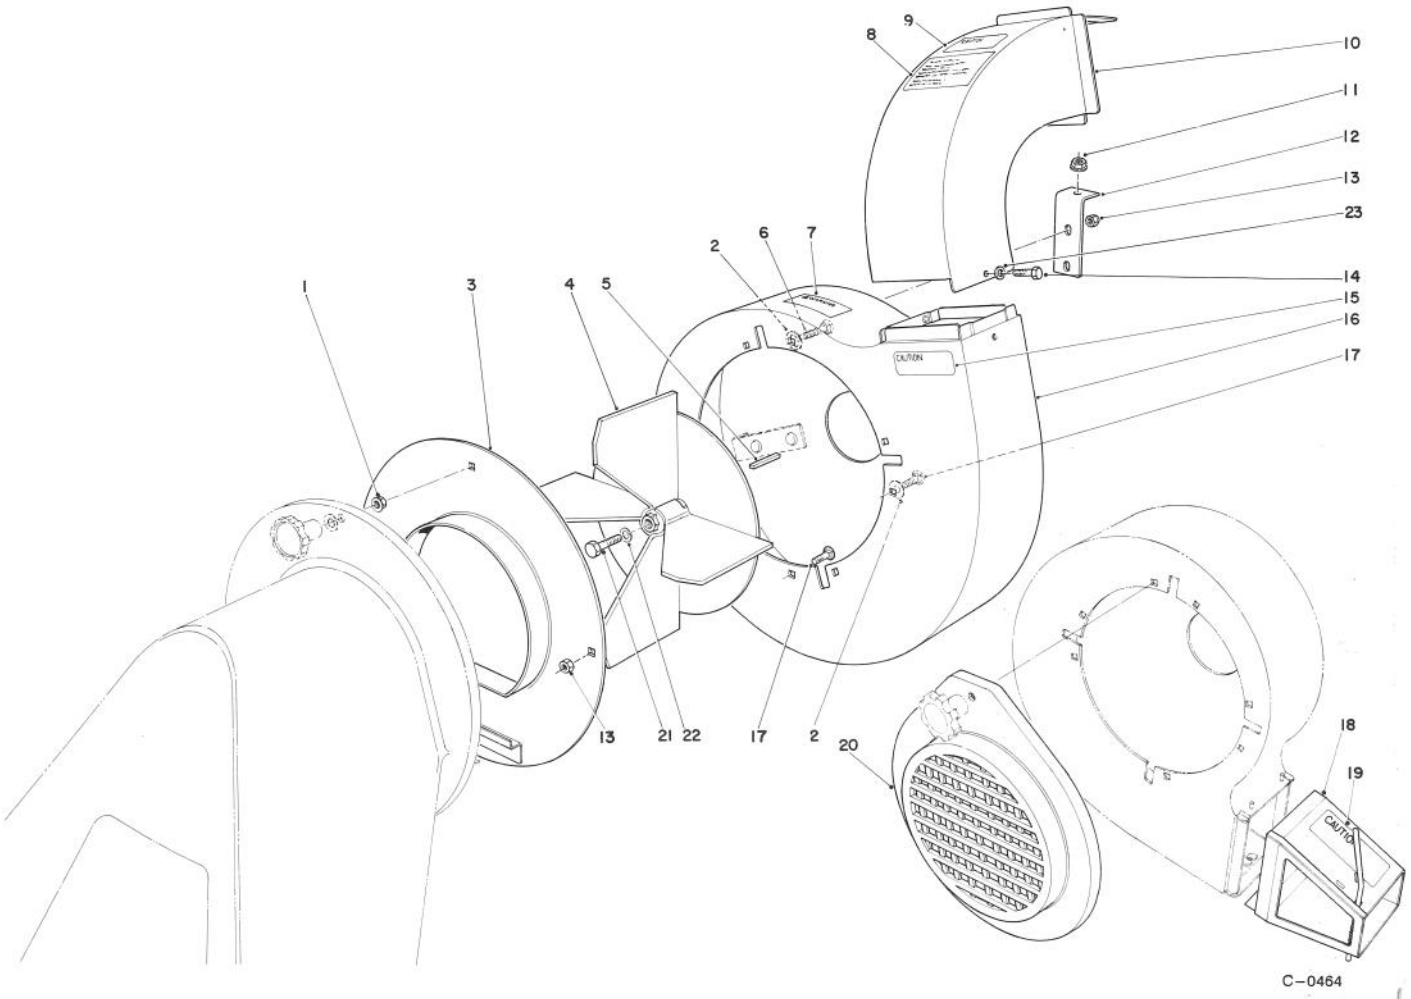


C–0465

# ENGINE & BASE ASSEMBLY (Model 62912)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 39–4680 | Bracket – Mounting | 1 |
| 2 | | Engine | 1 |
| 3 | 39–4690 | Shield – Muffler | 1 |
| 5 | 322–8 | Screw | 4 |
| 6 | 20–5410 | Spacer – Axle | 2 |
| 7 | 7–3590 | Washer – Flat | 4 |
| 8 | 20–6100 | Wheel (Incl. Ref.#9) | 2 |
| 9 | 251–258 | Bearing | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 10 | 3272–17 | Pin – Cotter | 3 |
| 11 | 3256–29 | Washer – Flat | 1 |
| 12 | 20–5560 | Plate – Engine | 1 |
| 13 | 3296–29 | Nut – Lock | 4 |
| 14 | 23–3320 | Caster | 1 |
| 15 | 3254–4 | Washer – Lock | 1 |
| 16 | 3217–9 | Nut | 1 |
| 17 | 3296–23 | Nut –Lock | 1 |
| 18 | 23–3280 | Support – Front Wheel | 1 |

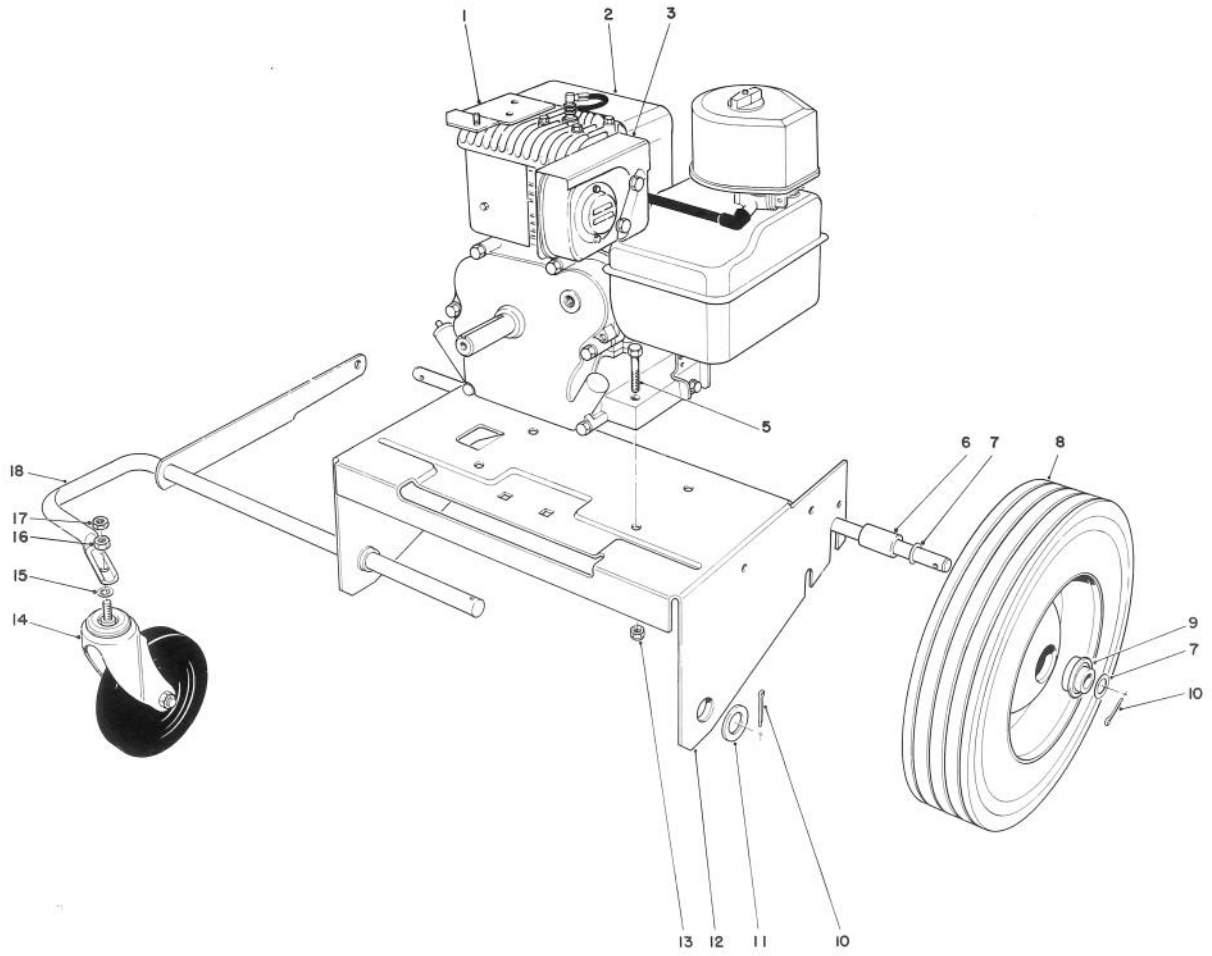


C-0466

# CONTROL & HANDLE ASSEMBLY (Model 62912)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 20-5820 | Bracket Adjustment | 1 |
| 2 | 322-8 | Screw | 3 |
| 3 | 20-5650 | Spacer | 1 |
| 4 | 3256-3 | Washer - Flat | 1 |
| 5 | 23-3610 | Throttle Control | 1 |
| 6 | 3255-17 | Washer - Lock | 2 |
| 7 | 32104-72 | Screw - Self Tapping | 2 |
| 8 | 23-3620 | Spacer | 2 |
| 9 | 3290-378 | Cable Tie | 1 |
| 10 | 71-3540 | Bag - Vacuum | 1 |
| 11 | 3296-29 | Nut - Lock | 10 |
| 12 | 3290-250 | Pin - Cotter | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 13 | 322-5 | Screw | 4 |
| 14 | 33-2410 | Rod - Connecting | 1 |
| 15 | 20-5810 | Handle - Lower | 1 |
| 16 | 23-3410 | Handle - Adjustment | 1 |
| 17 | 20-6110 | Spring | 1 |
| 18 | 32128-13 | Nut - Flange | 1 |
| 19 | 23-3570 | Handle - Upper | 1 |
| 20 | 3263-9 | Rivet | 2 |
| 21 | 3290-418 | Nut - Push On | 1 |
| 22 | 20-6880 | Decal - Adjustment | 1 |
| 23 | 3-7877 | Grip - Handle | 1 |
| 24 | 322-9 | Screw - Hex. Hd. | 4 |

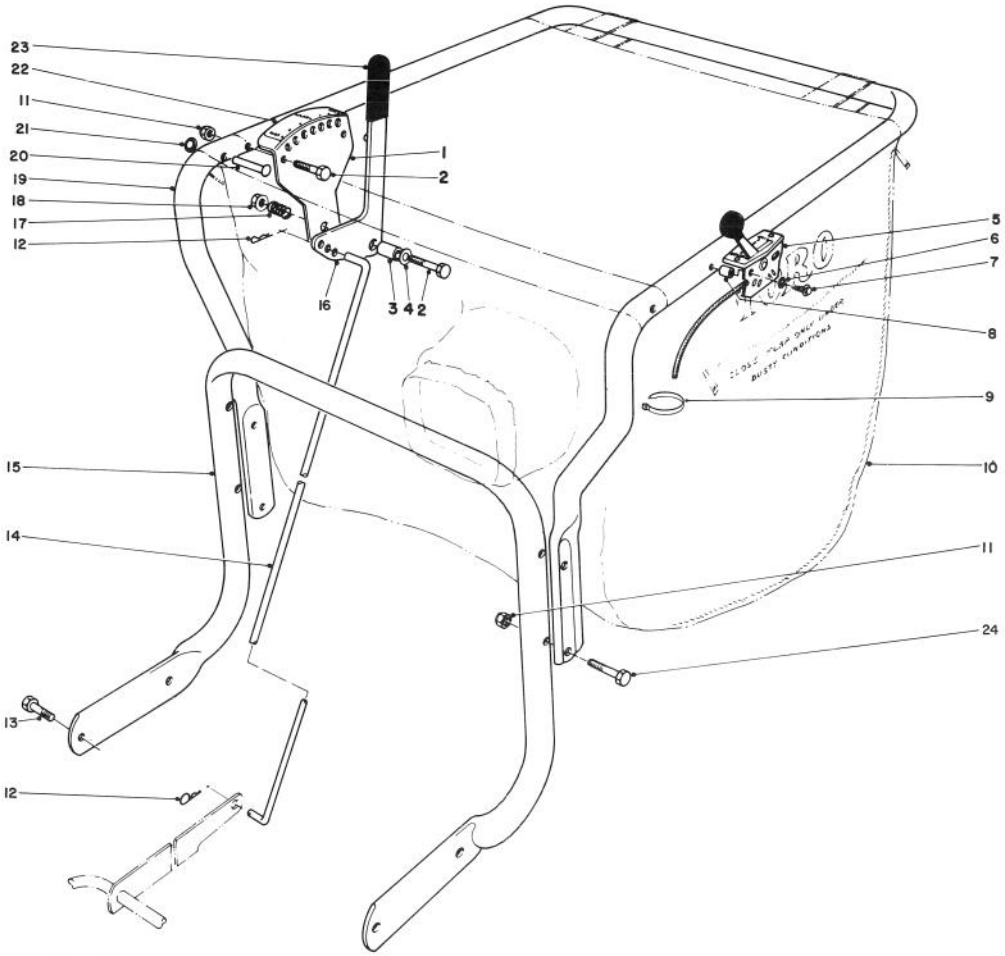


# ENGINE & BASE ASSEMBLY (Model 62923)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 39-4680 | Bracket - Mounting | 1 |
| 2 | | Engine | 1 |
| 3 | 39-4690 | Shield - Muffler | 1 |
| 5 | 32140-32 | Screw - Self Tapping | 1 |
| 6 | 23-3520 | Spring | 1 |
| 7 | 20-6040 | Guard | 1 |
| 8 | 3290-359 | Screw | 1 |
| 9 | 20-7270 | Shaft - Friction | 1 |
| 10 | 20-5870 | Shaft | 1 |
| 11 | 3296-29 | Nut | 4 |
| 12 | 256-236 | Bearing | 2 |
| 13 | 322-2 | Screw - Hex. Hd. Cap | 4 |
| 14 | 7-3590 | Washer | 2 |
| 15 | 20-5460 | Spacer | 2 |
| 16 | 20-5960 | Wheel - Friction | 2 |
| 17 | 32121-4 | Pin - Roll | 2 |
| 18 | 3272-7 | Pin - Cotter | 2 |
| 19 | 3256-26 | Washer | 2 |
| 20 | 43-6830 | Bracket - Mounting | 2 |
| 21 | 3296-29 | Washer - Lock | 10 |
| 22 | 20-5950 | Collar (Incl. Ref. #23) | 2 |
| 23 | 3245-1 | Screw - Set | 2 |
| 24 | 256-105 | Bushing - Flange | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 25 | 20-6000 | Idler Assembly (Incl. Ref. #24 & 26) | 1 |
| 26 | 302-5 | Fitting - Grease | 1 |
| 27 | 3-3434 | Chain - Traction (Incl. Ref. #28) | 1 |
| 28 | 2710-31 | Link - Connecting | 1 |
| 29 | 322-8 | Screw | 4 |
| 30 | 3230-16 | Bolt - Carriage | 2 |
| 31 | 322-5 | Screw | 4 |
| 32 | 20-5410 | Spacer - Axle | 2 |
| 33 | 7-3590 | Washer - Flat | 5 |
| 34 | 20-6100 | Wheel (Incl. Ref. #35) | 2 |
| 35 | 251-258 | Bearing | 4 |
| 36 | 3272-17 | Pin - Cotter | 3 |
| 37 | 3256-29 | Washer - Flat | 1 |
| 38 | 20-5560 | Plate - Engine | 1 |
| 39 | 323-10 | Screw | 1 |
| 40 | 20-8690 | Bracket - Idler Mount L.H. | 1 |
| 41 | 12-5820 | Pulley - Idler | 1 |
| 42 | 323-19 | Screw | 1 |
| 43 | 12-6700 | Pulley - Idler | 1 |
| 44 | 3296-39 | Nut - lock | 2 |
| 45 | 20-8680 | Bracket - Idler Mount R.H. | 1 |

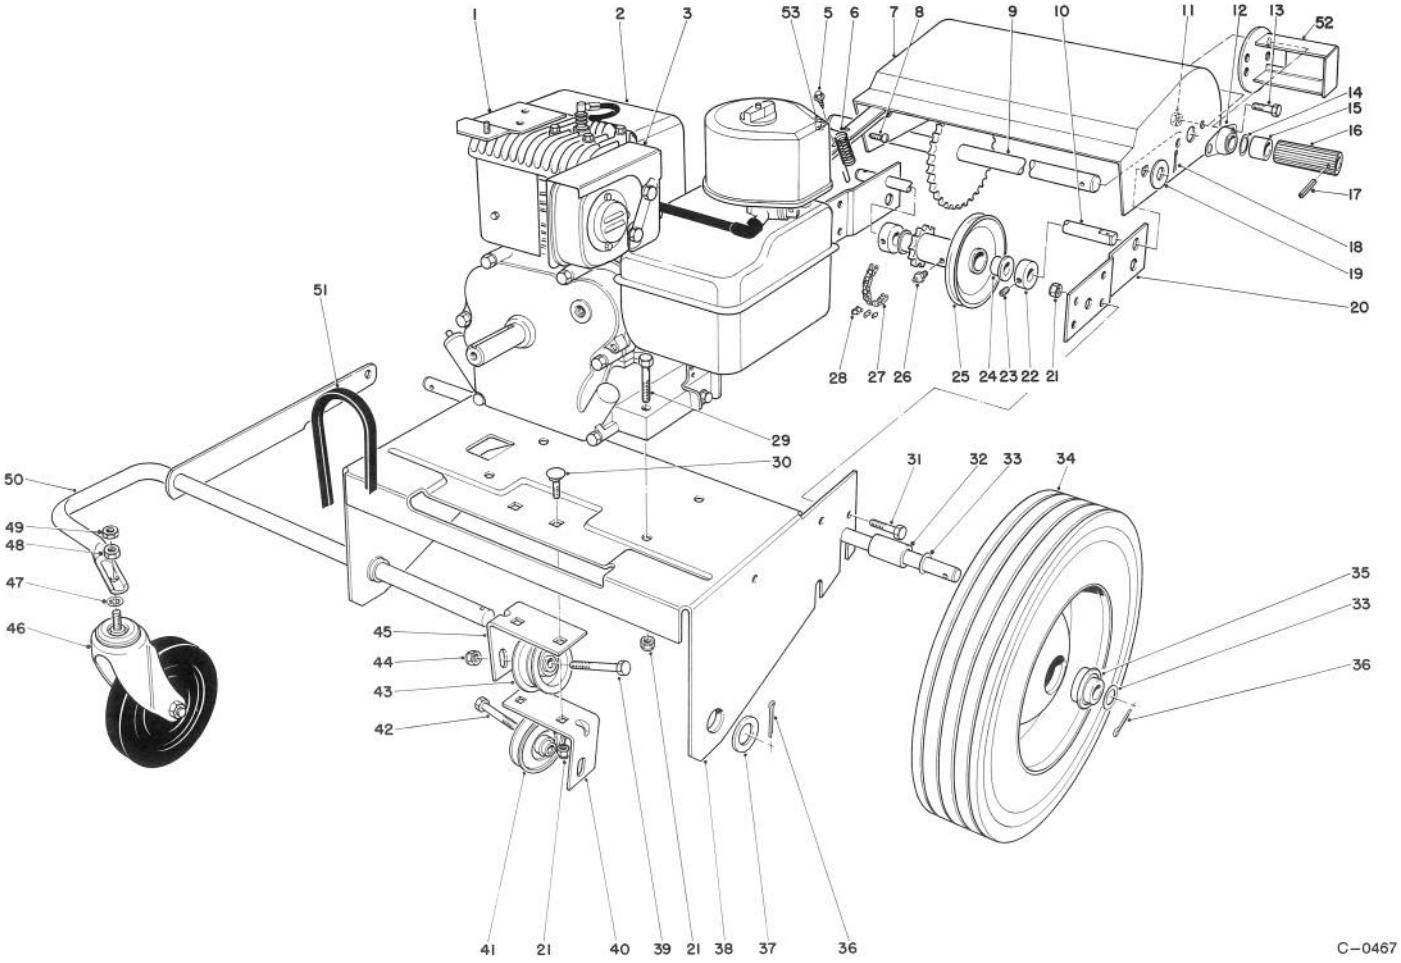


# ENGINE & BASE ASSEMBLY (Model 62923 Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 46 | 23-3320 | Caster | 1 |
| 47 | 3254-4 | Washer - Lock | 1 |
| 48 | 3217-9 | Nut | 1 |
| 49 | 3296-23 | Nut - Lock | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 50 | 23-3280 | Support - Front Wheel | 1 |
| 51 | 20-5990 | "V"Belt | 1 |
| 52 | 37-9210 | Guard | 2 |
| 53 | 3296-2 | Nut | 1 |

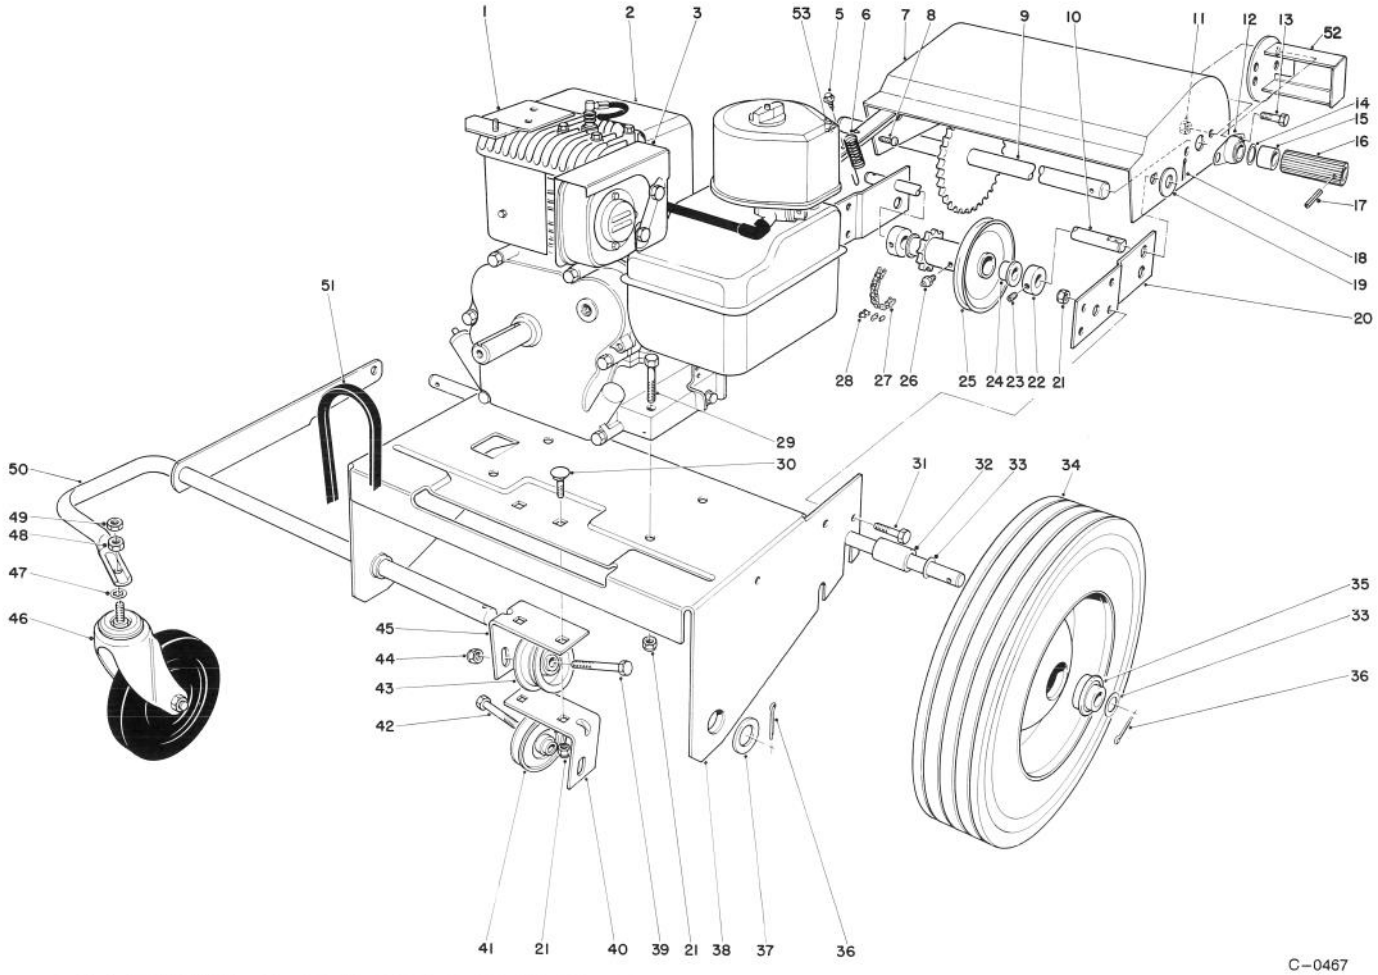


C–0468

# CONTROL & HANDLE ASSEMBLY (Model 62923)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 20–5820 | Bracket – Adjustment | 1 |
| 2 | 322–8 | Screw | 3 |
| 3 | 20–5650 | Spacer | 1 |
| 4 | 3256–3 | Washer – Flat | 1 |
| 5 | 32144–112 | Screw – Special | 1 |
| 6 | 3255–17 | Washer – Lock | 3 |
| 7 | 20–8780 | Ring – Retaining | 1 |
| 8 | 32111–7 | Nut | 1 |
| 9 | 321–10 | Screw | 1 |
| 10 | 25–7880 | Lever | 1 |
| 11 | 20–8700 | Decal – Traction Control | |
| 12 | 23–3610 | Throttle Control | 1 |
| 13 | 32104–72 | Screw – Self Tapping | 2 |
| 14 | 23–3620 | Spacer | 2 |
| 15 | 3290–378 | Cable Tie | 2 |
| 16 | 71–3540 | Bag – Vacuum | 1 |
| 17 | 3296–29 | Nut – Lock | 6 |
| 18 | 322–5 | Screw – Hex. Hd. Cap | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 19 | 66–1640 | Support – Bag | 1 |
| 20 | 3290–250 | Pin – Cotter | 2 |
| 22 | 33–2410 | Rod – Connecting | 1 |
| 23 | 20–5810 | Handle – Lower | 1 |
| 24 | 321–10 | Screw – Hex. Hd. Cap | 2 |
| 25 | 33–2830 | Mount – Bowden | 1 |
| 26 | 32149–5 | Nut | 2 |
| 27 | 23–3410 | Handle – Adjustment | 1 |
| 28 | 25–7860 | Cable – Bodine | 1 |
| 29 | 3296–42 | Nut – Lock | 2 |
| 30 | 20–6110 | Spring | 1 |
| 31 | 32128–13 | Nut – Flange | 1 |
| 32 | 23–3570 | Handle – Upper | 1 |
| 33 | 3263–9 | Rivet | 2 |
| 34 | 3290–418 | Nut – Push On | 2 |
| 35 | 20–6880 | Decal – Adjustment | 1 |
| 36 | 3–7877 | Grip – Handle | 1 |

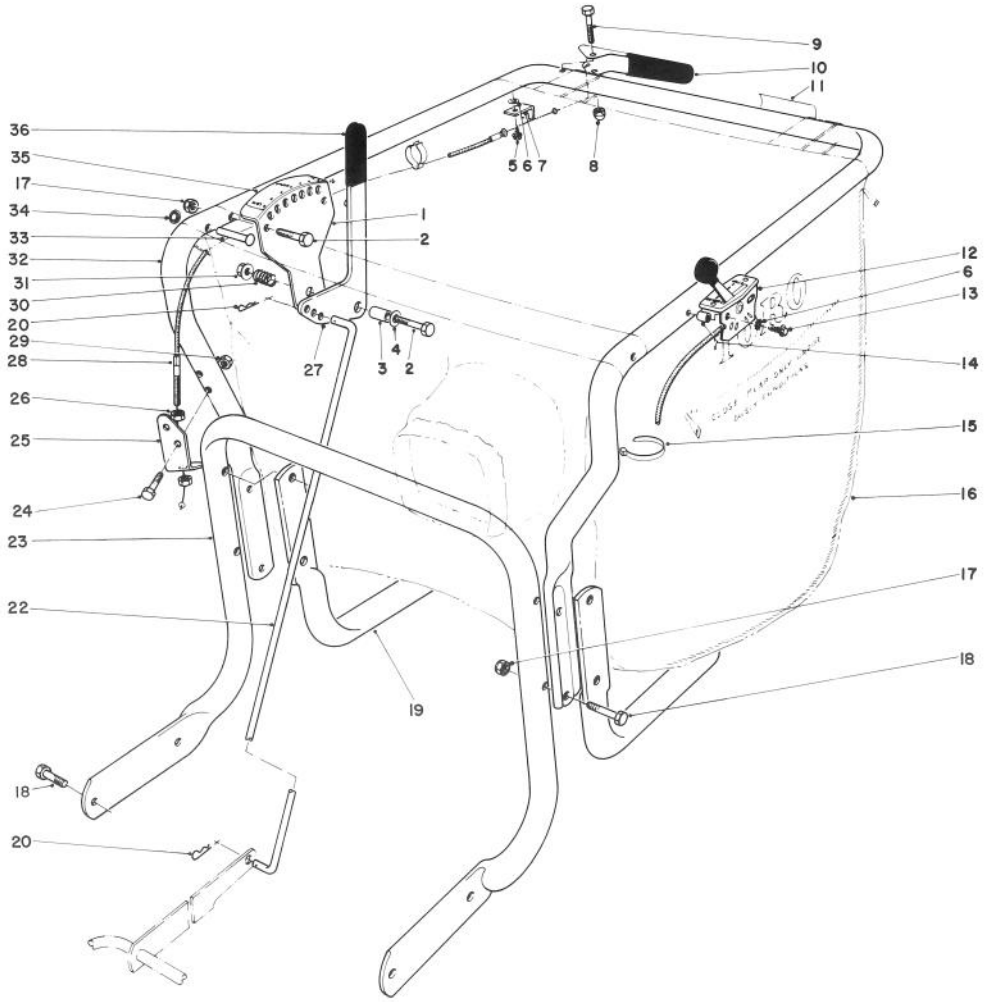


C–0469

# VACUUM HOSE KIT (Model 59085 Optional)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 20–5750 | Nozzle | 1 |
| 2 | 321–3 | Screw | 2 |
| 3 | 20–5690 | Washer – Special | 2 |
| 4 | 32149–2 | Nut – Lock | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 5 | 20–6200 | Handle | 1 |
| 6 | 2412–46 | Clamp – Hose | 2 |
| 7 | 20–6650 | Hose – Vacuum | 1 |
| 8 | 20–5740 | Adaptor | 1 |

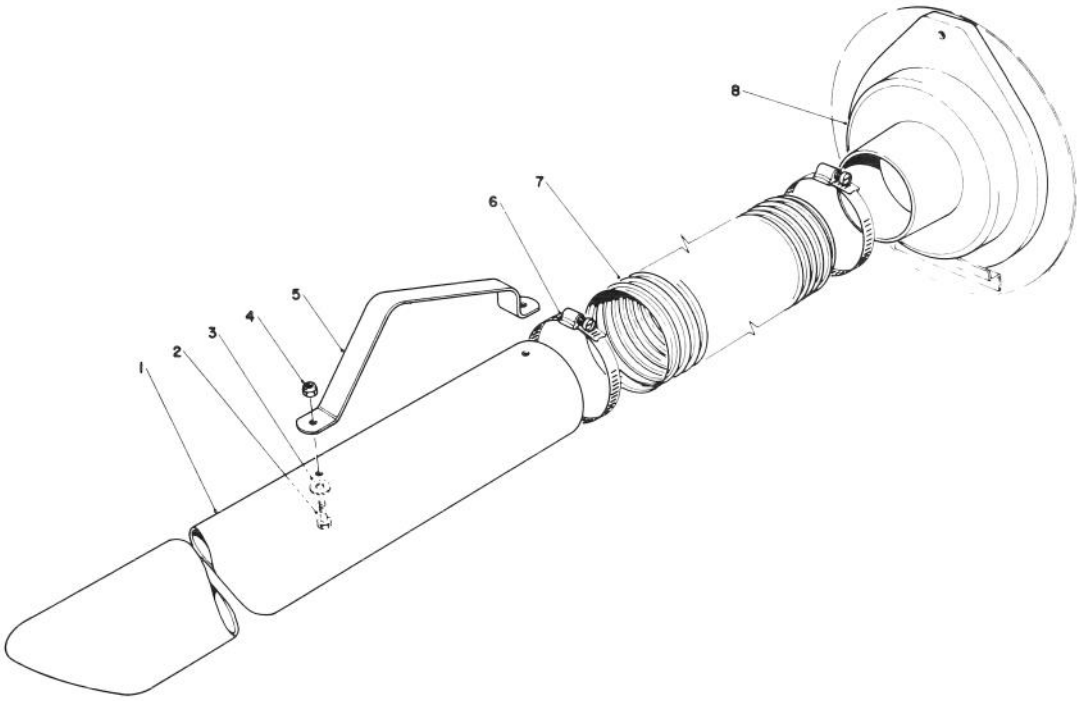


C–0462

# HITCH KIT (Model 59087 Optional)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 32152–4 | Nut – Lock | 2 |
| 2 | 20–8010 | Arm – Hitch | 2 |
| 3 | 32121–18 | Pin – Roll | 2 |
| 4 | 20–8030 | Lock – Hitch | 2 |
| 5 | 20–8850 | Hook – Hitch Arm | 2 |
| 6 | 321–15 | Screw | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 7 | 3256–2 | Washer – Flat | 4 |
| 8 | 23–5190 | Support – Bag | 2 |
| 9 | 3290–250 | Pin – Cotter | 1 |
| 10 | 3290–377 | Nut – Push On | 1 |
| 11 | 23–5360 | Pole – Hitch | 1 |
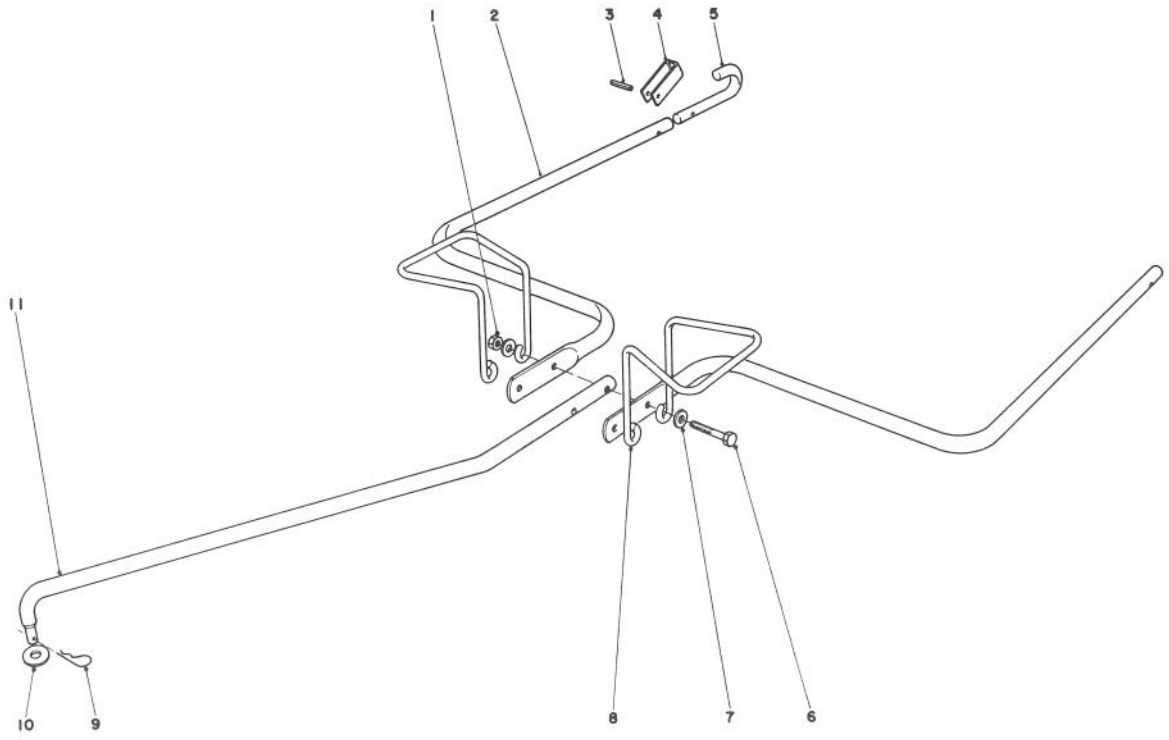
# ENGINE BRIGGS & STRATTON MODEL NO. 130202–1640–01




Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL NO. 130202–1640–01

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 395990 | Cylinder Assembly | 1 |
| 2 | 297565 | Bushing – Cylinder | 1 |
| | | NOTE: Requires special tools for installation | |
| 3 | 299819 | Seal – Oil | 1 |
| 5 | 211542 | Head – Cylinder | 1 |
| 7 | 272157 | Gasket – Head | 1 |
| 8 | 294178 | Breather – Valve Chamber | 1 |
| 9 | *27549 | Gasket – Valve Cover | 1 |
| 10 | 93394 | Screw – Breather | 1 |
| 11 | 66578 | Grommet – Breather Tube | 1 |
| 12 | *270080 | Gasket (.015"Std.) | 1 |
| | *270125 | Gasket (.015") | 1 |
| | *270126 | Gasket (.009") | 1 |
| 13 | 94221 | Screw – Cylinder Head | 1 |
| 14 | 93369 | Screw – Cylinder Head | 1 |
| 15 | 91249 | Plug – Pipe | 1 |
| 16 | 492088 | Crankshaft | 1 |
| | 230978 | Pin – Crankshaft Gear | 1 |
| 18 | 298602 | Cover Assembly | 1 |
| 19 | 297603 | Bushing – Cover | 1 |
| | | NOTE: Requires special tools for installation | |
| 20 | 294606 | Seal – Oil | 1 |
| 21 | 66768 | Plug – Oil Filler | 1 |
| 22 | 93032 | Screw | 1 |
| 25 | 298904 | Piston Assembly (Std.) | 1 |
| | 298905 | Piston Assembly (.010 ' Oversize) | 1 |
| | 298906 | Piston Assembly (.020" Oversize) | 1 |
| | 298907 | Piston Assembly (.030" Oversize) | 1 |
| | | PISTON RING SETS: | |
| 26 | 298982 | Ring Set (Std.) | 1 |
| | 298983 | Ring Set (.010" Oversize) | 1 |
| | 298984 | Ring Set (.020" Oversize) | 1 |
| | 298985 | Ring Set (.030" Oversize) | 1 |
| | 299742 | Ring Set Chrome Standard Size | |
| 27 | 26026 | Lock – Piston Pin | 1 |
| 28 | 298909 | Pin Assembly (Std.) | 1 |
| | 298908 | Pin Assembly (.005" O.S.) | 1 |

*Included in Gasket Set Part No.397145
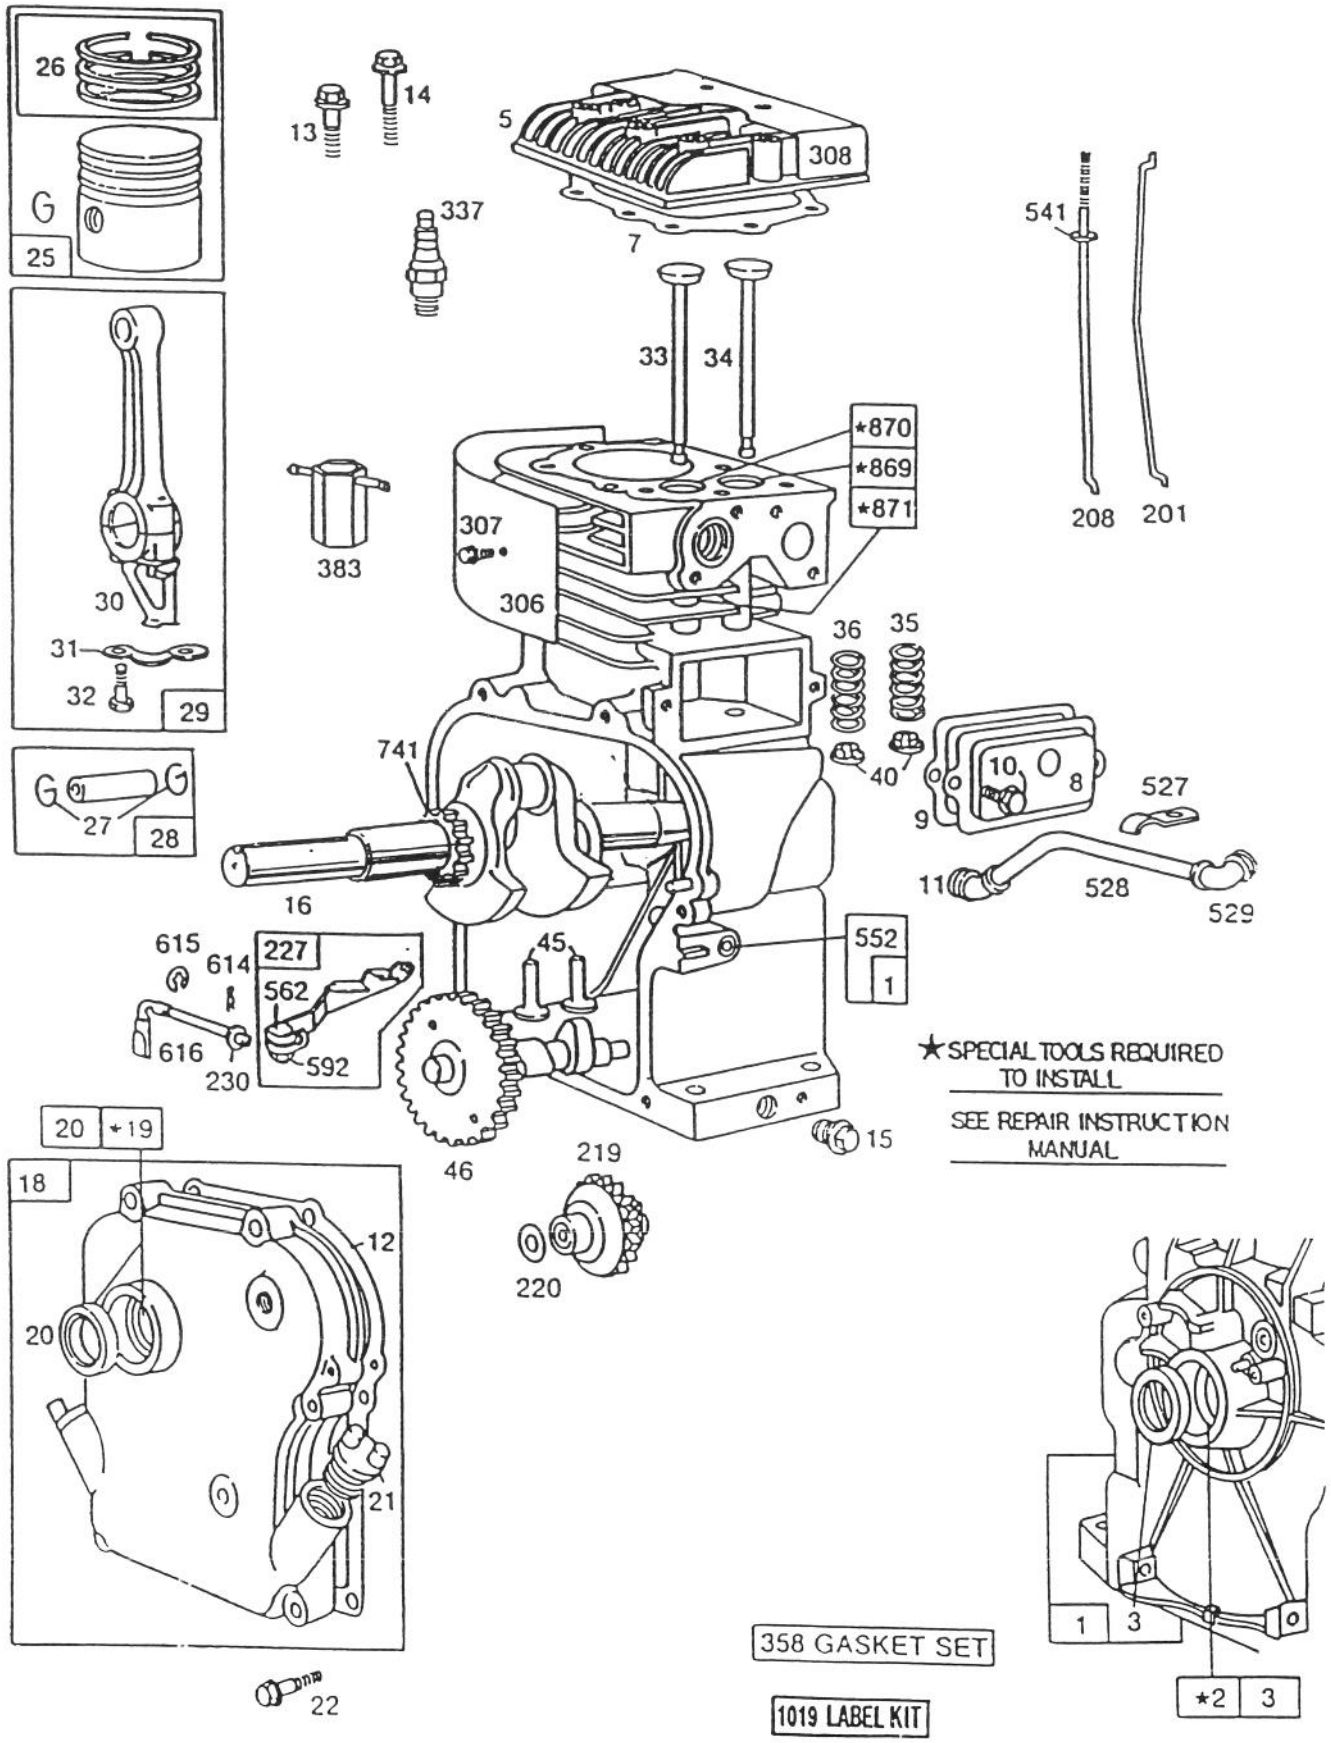
| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 29 | 299430 | Rod Assembly(Std.) | 1 |
| | | NOTE: For .020" Undersize Crankpin Bore Order #390459 | |
| 30 | 221890 | Dipper – Connecting Rod | 1 |
| 31 | 221876 | Lock | 1 |
| 32 | 92296 | Screw – Connecting Rod | 1 |
| 33 | 211119 | Valve – Exhaust | 1 |
| 34 | 261044 | Valve – Intake | 1 |
| 35 | 260552 | Spring – Intake Valve | 1 |
| 36 | 26478 | Spring – Exhaust Valve | 1 |
| 40 | 93312 | Retainer – Valve Spring | 1 |
| 45 | 260642 | Tappet – Valve | 1 |
| 46 | 212733 | Gear – Cam | 1 |
| 201 | 261558 | Link – Governor | 1 |
| 208 | 230946 | Rod – Control | 1 |
| 219 | 391737 | Gear – Governor | 1 |
| 220 | 221551 | Washer – Thrust | 1 |
| 227 | 393920 | Lever Assembly | 1 |
| 230 | 222450 | Washer – Lever | 1 |
| 306 | 221511 | Shield – Cylinder | 1 |
| 307 | 93758 | Screw – Shield | 1 |
| 308 | 221512 | Cover – Cylinder Head | 1 |
| 337 | 802592 | Spark Plug | 1 |
| 358 | 397145 | Set – Gasket | 1 |
| 383 | 89838 | Wrench – Spark Plug | 1 |
| 527 | 221514 | Clamp – Breather Tube | 1 |
| 528 | 231328 | Tube – Breather | 1 |
| 529 | 67838 | Grommet – Breather Tube | 1 |
| 541 | 22398 | Washer | 1 |
| 552 | 231079 | Bushing – Governor Crank | 1 |
| 562 | 92613 | Bolt – Governor Lever | 1 |
| 592 | 231082 | Nut | 1 |
| 614 | 93306 | Pin – Cotter | 1 |
| 615 | 93307 | Ring – Retaining | 1 |
| 616 | 231077 | Crank – Governor | 1 |
| 741 | 261696 | Gear – Timing | 1 |
| 869 | 211787 | Seat – Intake Valve (Std.) | 1 |
| 870 | 211172 | Seat – Exhaust Valve (Std.) | 1 |
| | | NOTE: For options see Repair Manual | |
| 871 | 262001 | Guide – Exhaust Valve | 1 |
| | 63709 | Guide – Intake Valve | 1 |
| | | NOTE: See Repair Instruction Manual | |
| 1019 | 49110 | Kit – Label | 1 |

# ENGINE BRIGGS & STRATTON MODEL NO. 130202–1640–01(Continued)




Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL NO. 130202–1640–01(Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 23 | 297922 | Flywheel – Magneto | 1 |
| 24 | 222698 | Key – Flywheel | 1 |
| 37 | 222443 | Guard – Flywheel | 1 |
| 52 | *27355 | Gasket – Carburetor | 2 |
| 55 | 299431 | Housing – Rewind Starter | 1 |
| 56 | 295871 | Pulley – Rewind Starter | 1 |
| 57 | 490179 | Spring – Rewind Starter | 1 |
| 58 | 66884 | Rope – Rewind Starter | 1 |
| 59 | 490653 | Pin – Starter Grip | 1 |
| 60 | 490652 | Grip – Starter Rope | 1 |
| 65 | 94128 | Screw | 1 |
| 66 | 399671 | Clutch Assembly – Rewind | 1 |
| 67 | 394897 | Housing – Starter Clutch | 1 |
| 68 | 63770 | Ball – Clutch | 1 |
| 70 | 298799 | Ratchet – Rewind Starter | 1 |
| 71 | 394506 | Washer – Clutch Retaining | 1 |
| 73 | 221923 | Screen – Starter Pulley | 1 |
| 74 | 93490 | Screw | 1 |
| 75 | 224061 | Washer – Lock | 1 |
| 90 | 397940 | Carburetor Assembly | 1 |
| 95 | 93499 | Screw – Throttle Valve | 1 |
| 96 | 211203 | Throttle – Carburetor | 1 |
| 97 | 299212 | Shaft & Lever – Throttle | 1 |
| 108 | 397134 | Valve Group – Choke | 1 |
| 114 | 66594 | Gasket – Needle Valve Nut | 1 |
| 116 | 65978 | Packing – Needle Valve | 1 |
| 117 | 230590 | Nut – Needle Valve | 1 |
| 118 | 23433 | Valve – Needle | 1 |
| 124 | 93357 | Screw | |
| 127 | 22831 | Plug – Welsh | 1 |
| 147 | 230591 | Seat – Needle Valve | 1 |
| 148 | 22235 | Washer – Needle valve | 2 |
| 149 | 26336 | Spring – Needle Valve | 1 |
| 152 | 26057 | Spring – Throttle Adjust | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 154 | 935275 | Screw | 1 |
| 200 | 221480 | Guide – Air | 1 |
| 202 | 260678 | Link – Throttle | 1 |
| 203 | 393919 | Crank – Bell | 1 |
| 205 | 93838 | Screw – Shoulder | 1 |
| 216 | 397709 | Link – Choke | 1 |
| 217 | 261951 | Spring – Choke | 1 |
| 256 | 397709 | Crank – Bell | 1 |
| 304 | 398345 | Housing – Blower | 1 |
| 305 | 93158 | Screw – Blower | 1 |
| 307 | 93758 | Screw – Shield | 1 |
| 333 | 397358 | Armature – Magneto | 1 |
| 335 | 93414 | Screw | 1 |
| 356 | 398808 | Wire – Ground | 1 |
| 363 | 19069 | Puller –Flywheel | 1 |
| 373 | 92987 | Nut | 1 |
| 392 | 260455 | Spring – Fuel Pump | 1 |
| 394 | 270026 | Diaphragm | 1 |
| 432 | 221377 | Cap – Spring | 1 |
| 433 | 93265 | Pin – Diaphragm Cover | 1 |
| 434 | 210959 | Cover – Diaphragm | 1 |
| 435 | 93141 | Screw | 1 |
| 542 | 94025 | Screw | 1 |
| 608 | 390463 | Starter – Rewind | 1 |
| 609 | 260694 | Spring – Throttle Link | 1 |
| 611 | 391813 | Fuel Pipe & Clip Assembly | 1 |
| 612 | 296811 | Pipe – Fuel | 1 |
| 634 | 271853 | Washer – Throttle | 1 |
| 634A | 270382 | Washer – Choke | 1 |
| 655 | 222598 | Anchor – Spring | 1 |
| 681 | 299060 | Kit – Needle Valve | 1 |
| 851 | 221798 | Terminal – Ignition Cable | 1 |
| 987 | 398970 | Seal – Throttle Shaft | 1 |
| 1016 | 490817 | Spacer | 1 |

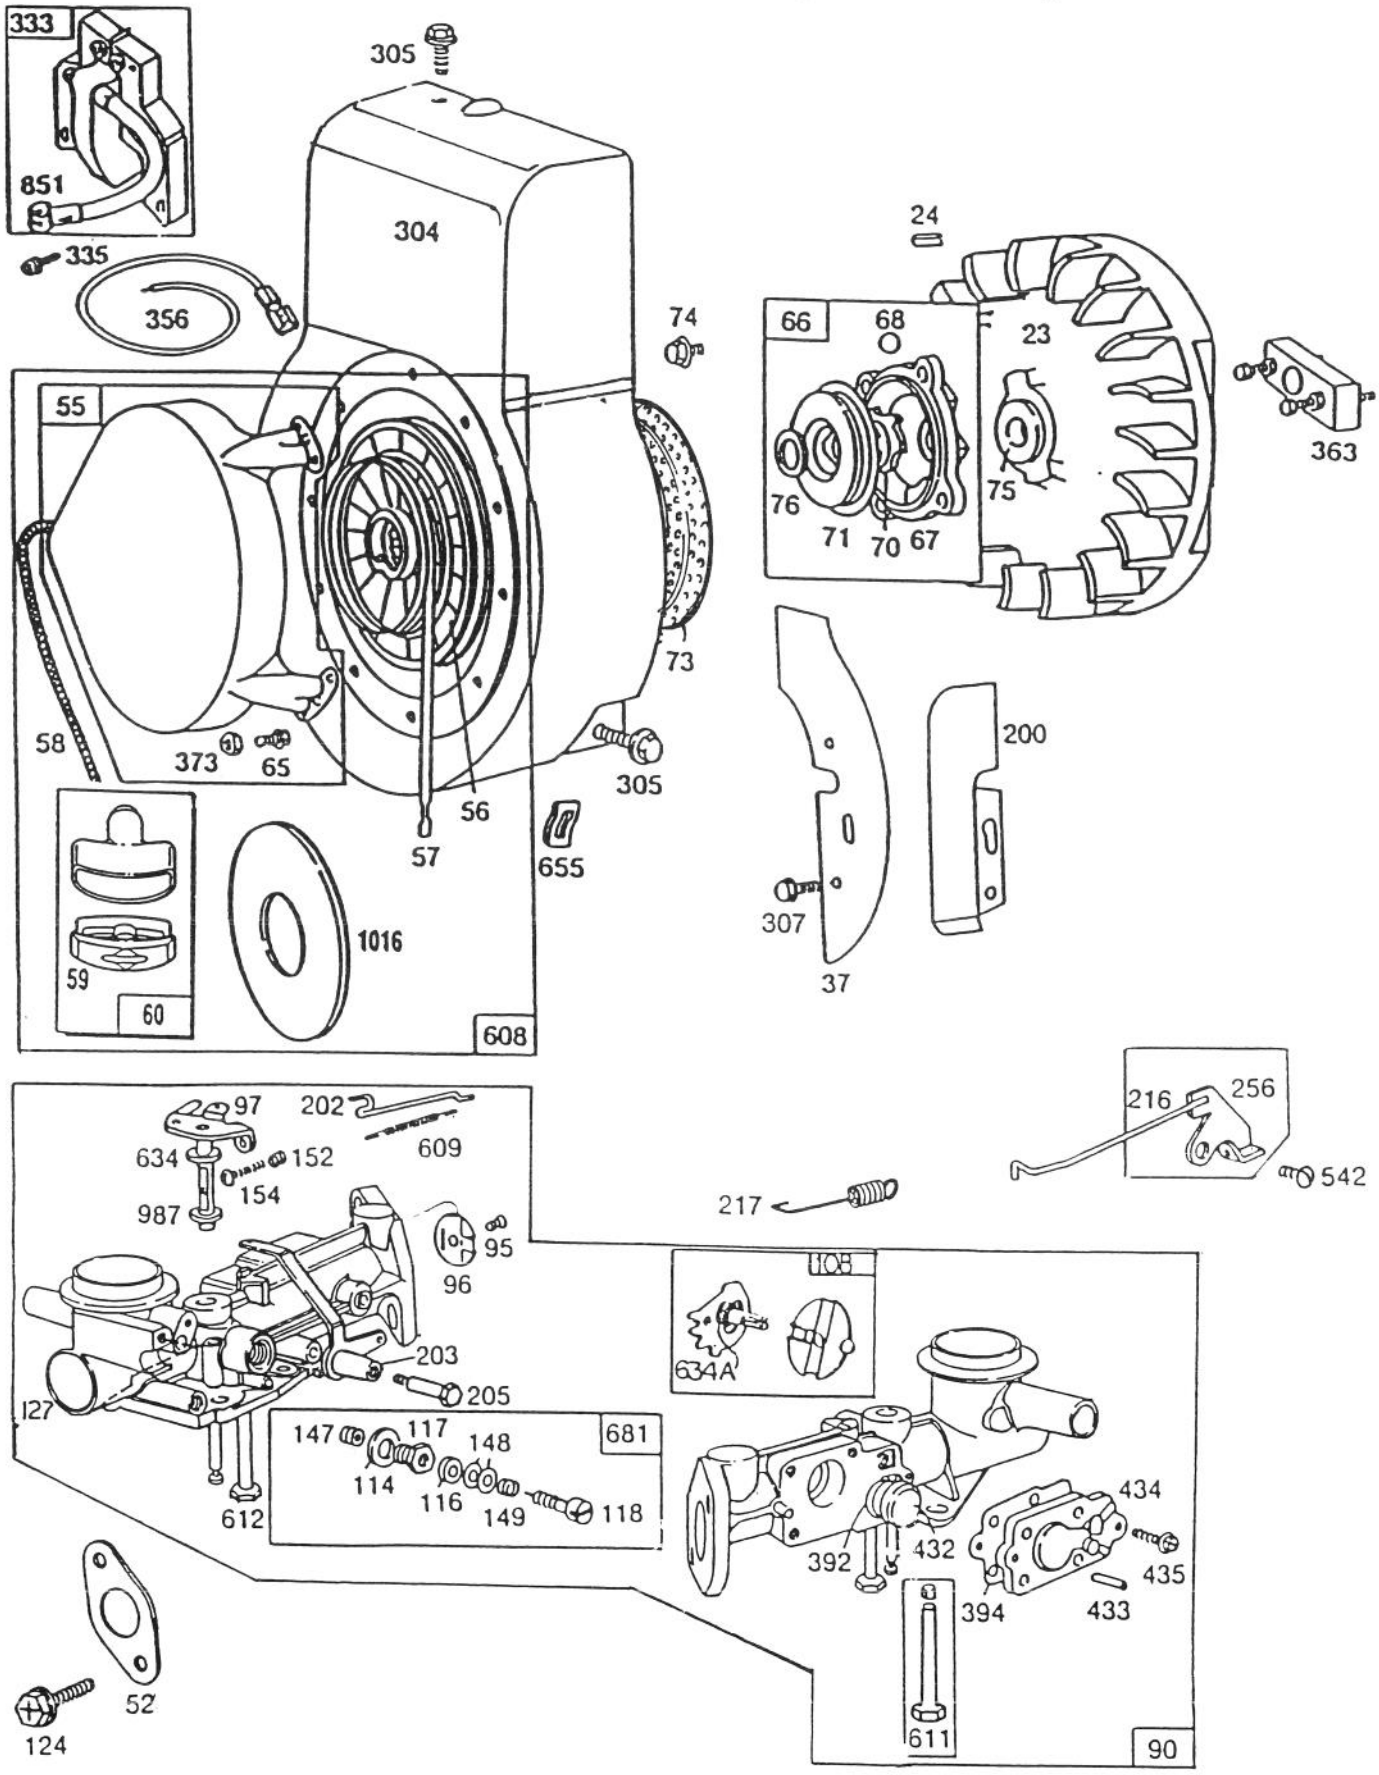*Included in Gasket Set Part No.397145

# ENGINE BRIGGS & STRATTON MODEL NO. 130202–1640–01







Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL NO. 130202–1640–01 (Continued)

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 81 | 222263 | Lock – Screw | 1 |
| 163 | 27139 | Gasket – Air Cleaner | 1 |
| 166 | 231332 | Stud – air Cleaner | 1 |
| 180 | 397137 | Fuel Tank Assembly | 1 |
| 181 | 397567 | Cap – Fuel Tank | 1 |
| 190 | 93440 | Screw – Fuel Tank | 1 |
| 191 | *271592 | Gasket – Fuel Tank | 1 |
| 204 | 222962 | Bushing – Governor Lever | 1 |
| 209 | 260695 | Spring | 1 |
| 223 | 221517 | Lever – Governor | 1 |
| 224 | 93491 | Rivet | 1 |
| 265 | 221535 | Clamp – Casing | 1 |
| 267 | 93496 | Screw | 1 |
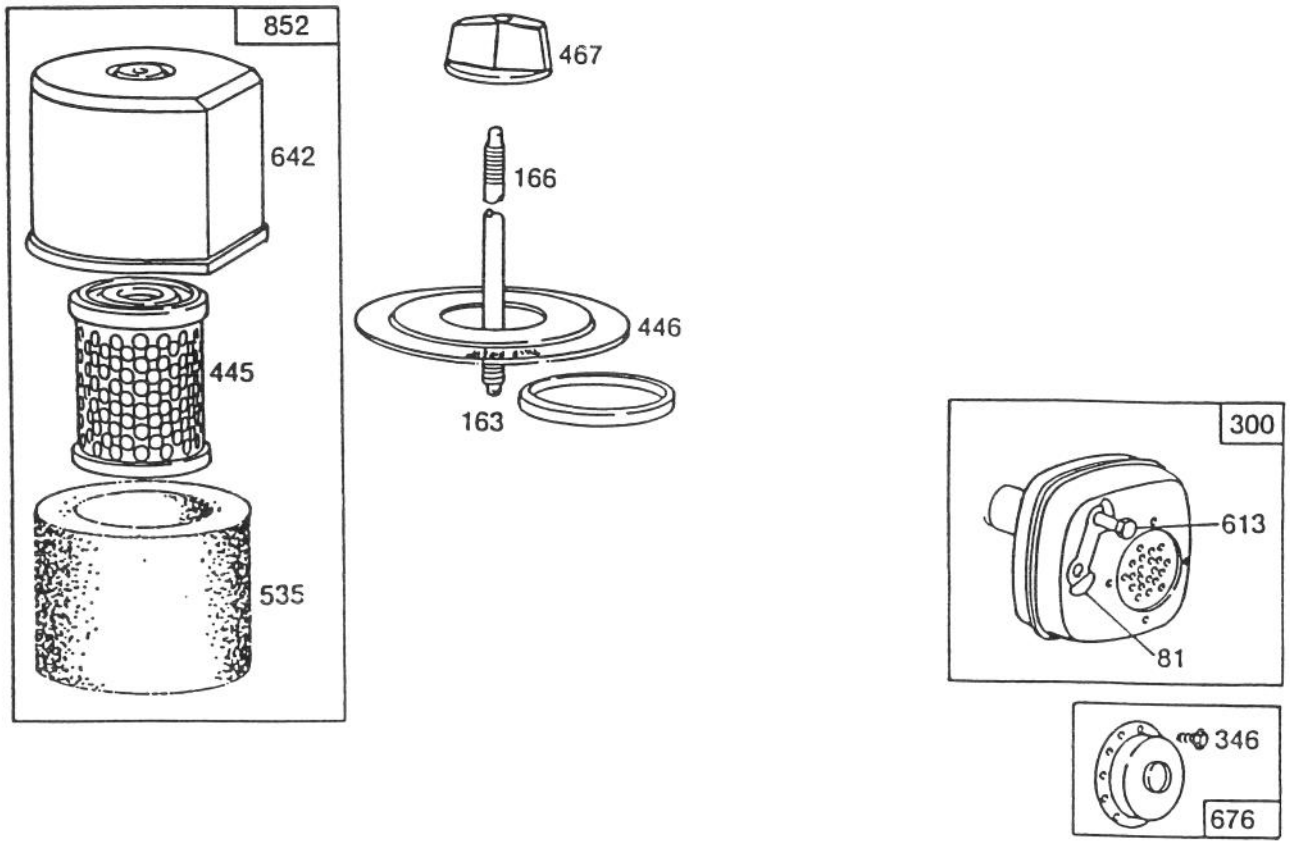
| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 300 | 393615 | Muffler | 1 |
| 346 | 93705 | Screw | 1 |
| 445 | 396424 | Cartridge – Air Cleaner | 1 |
| 446 | 222844 | Base – Air Cleaner | 1 |
| 467 | 212706 | Knob – Air Cleaner | 1 |
| 526 | 93343 | Screw – Tank | 1 |
| 535 | 271466 | Element – Air Cleaner | 1 |
| 613 | 93935 | Screw – Hex. Hd. Shoulder | 1 |
| 621 | 297472 | Switch – Stop | 1 |
| 642 | 223306 | Cover – Air Cleaner | 1 |
| 676 | 395700 | Deflector – Exhaust | 1 |
| 852 | 396397 | Air Cleaner Group | 1 |
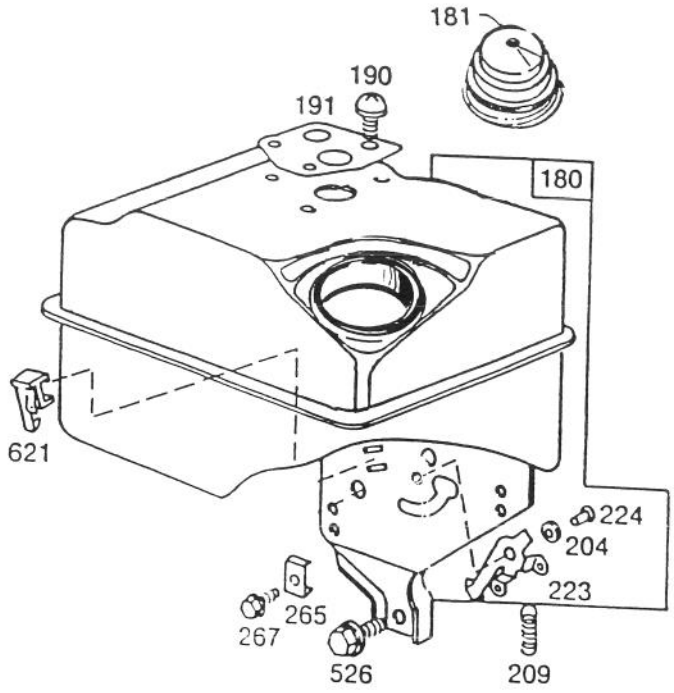
## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

# MAINTENANCE RECORD

| Date | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.



Litho in U.S.A.