Form Number 3356-583 Rev A

Midmount Toolbar System

Sand Pro®/Infield Pro® 3040 and 5040 Traction Unit

Model No. 08731 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Midmount Toolbar Assembly	 3	Rod Assembly	 5
Scarifier Handle Assembly	 4	Toolbar Kickup Assembly	 6
		Attachments and Accessories List	 7


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not serviced separately

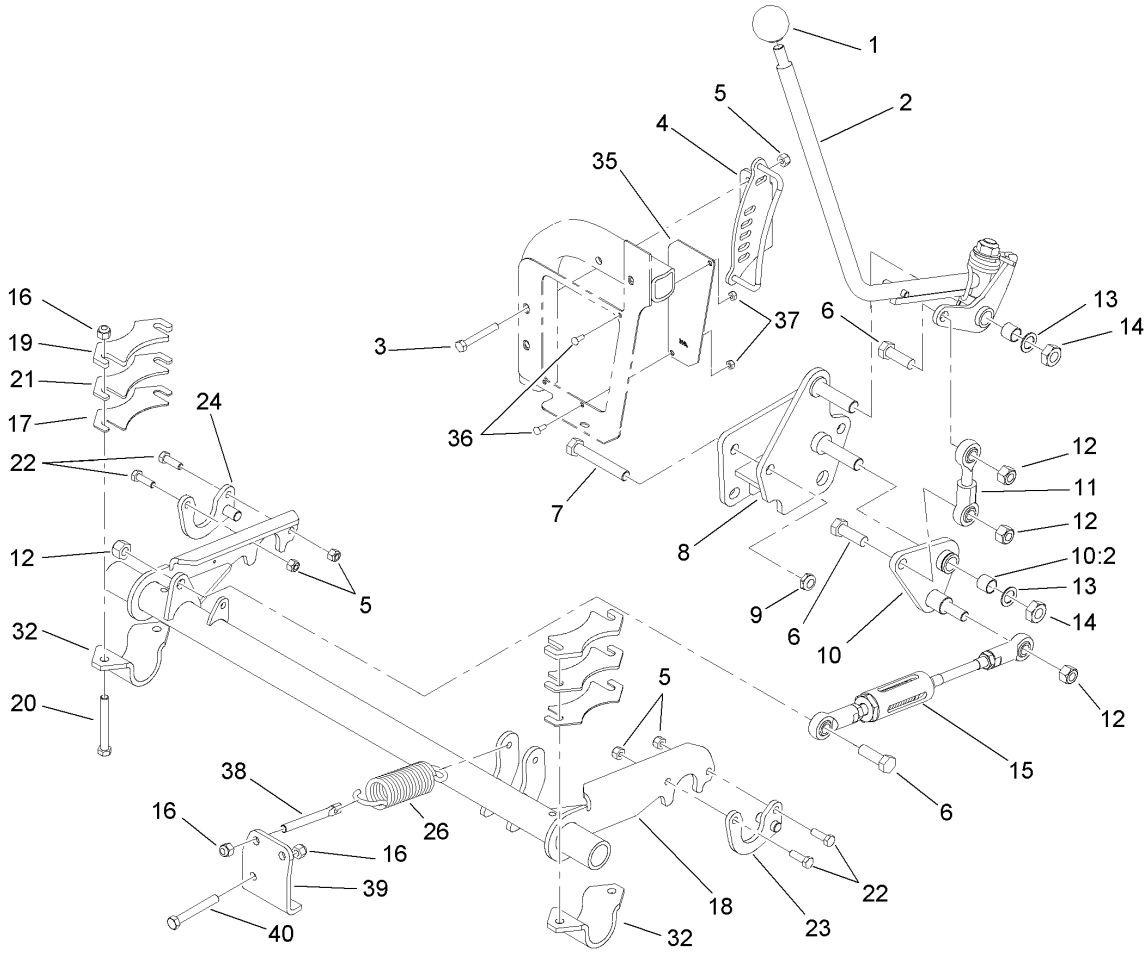

Midmount Toolbar Assembly


Ref	Part No.	Qty.	Description
1	233-48	1	Knob
❶2		1	Scarifier Handle ASM
3	322-11	2	Screw-HH
4	108-8492-01	1	Detent Plate ASM
5	3296-29	6	Nut-Lock, NI
6	325-6	3	Screw-HH
7	325-13	2	Screw-HH
8	108-2835-01	1	Scarifier Mount ASM
9	3296-45	2	Nut-Lock, NI
10	108-4537	1	Bellcrank ASM
10:2	256-311	2	Bushing-Split
11	108-5401	1	Link-Rod End
12	3296-25	4	Nut-Lock, NI
13	3256-69	2	Washer-Flat
14	3296-33	2	Nut-Lock, NI
❶15		1	Rod ASM
16	3296-39	6	Nut-Lock, NI
17	110-7379	1	Shim-Midmount, 14 GA
18	108-4511-01	1	Tube ASM
19	110-7380	1	Shim-Midmount, 1/4 In
20	323-14	4	Screw-HH
21	110-7381	1	Shim-Midmount, 10 GA
22	322-5	4	Screw-HH
23	108-4530	1	LH Saddle ASM

Ref	Part No.	Qty.	Description
24	108-4528	1	RH Saddle ASM
26	108-5412	1	Spring-Extension
32	110-8166	2	Bracket-Tube, Pivot
35	110-3324-01	1	Screen-Panel, Scarifier
36	3250-12	2	Screw-PPH
37	3296-2	2	Nut-Lock
38	108-5413	1	Rod-Spring
39	110-3336-03	1	Bracket-Spring
40	323-13	1	Screw-HH

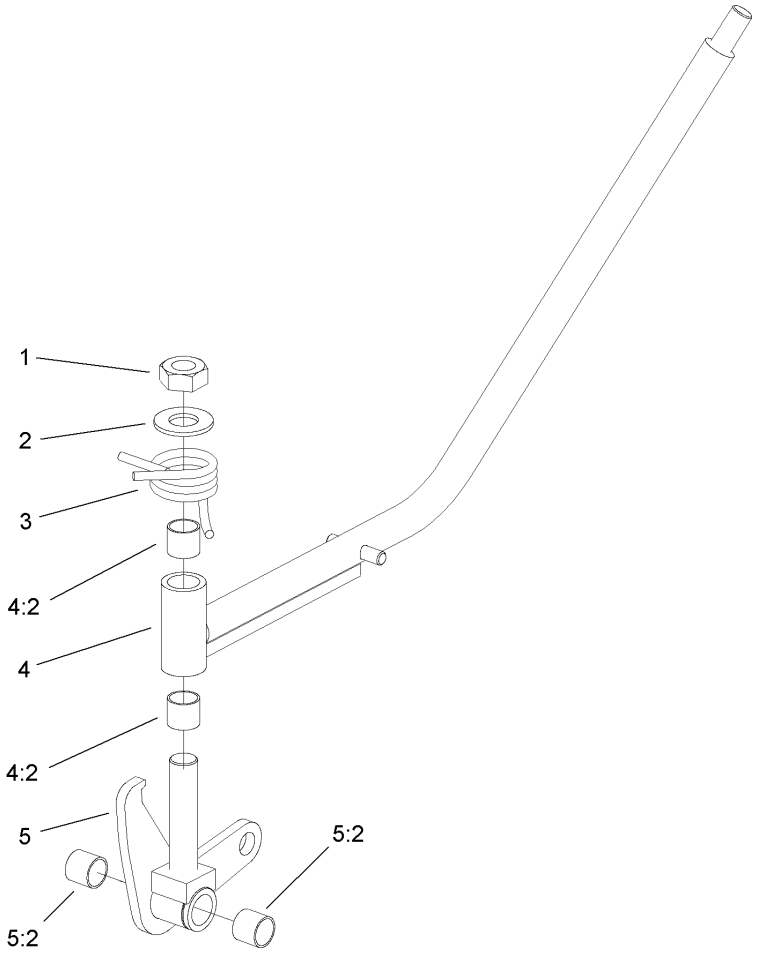


Scarifier Handle Assembly

Ref	Part No.	Qty.	Description
1	3296-33	1	Nut-Lock, NI
2	3256-27	1	Washer-Flat
3	108-4548	1	Spring-Torsion
4	108-4540	1	Handle ASM
4:2	256-311	2	Bushing-Split
5	108-2848	1	Pivot ASM
5:2	256-311	2	Bushing-Split

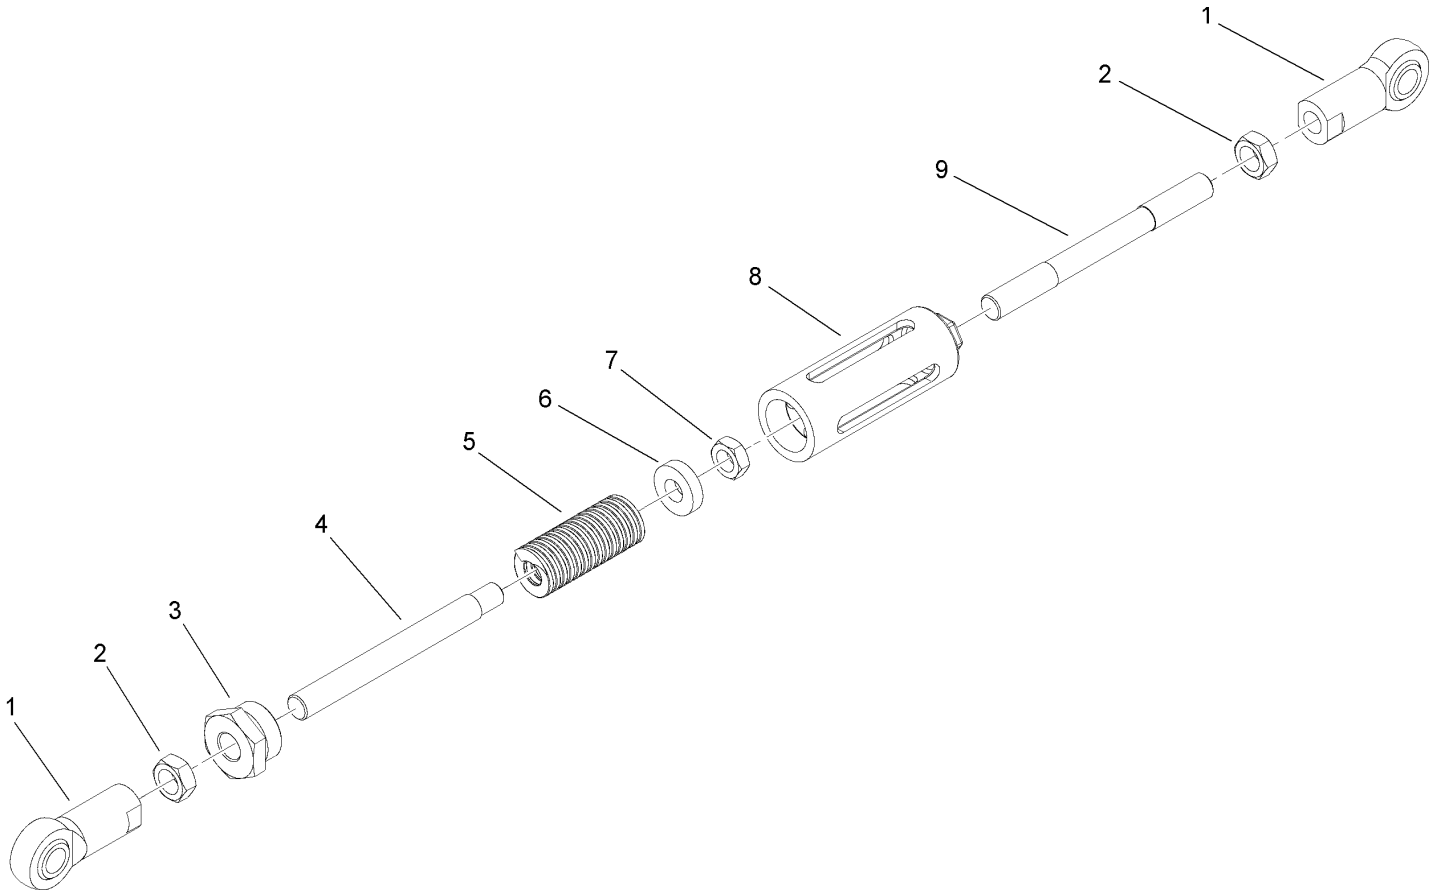

Rod Assembly

Ref	Part No.	Qty.	Description
1	2411-44	2	End-Rod
2	3220-5	2	Nut-Jam
3	108-4543	1	Cap-Hex
4	108-4545	1	Rod-Spring
5	108-4544	1	Spring-Compression
6	108-4546	1	Washer
7	3220-4	1	Nut-Jam
8	108-4542	1	Sleeve-Spring
9	108-4531	1	Shaft-Link

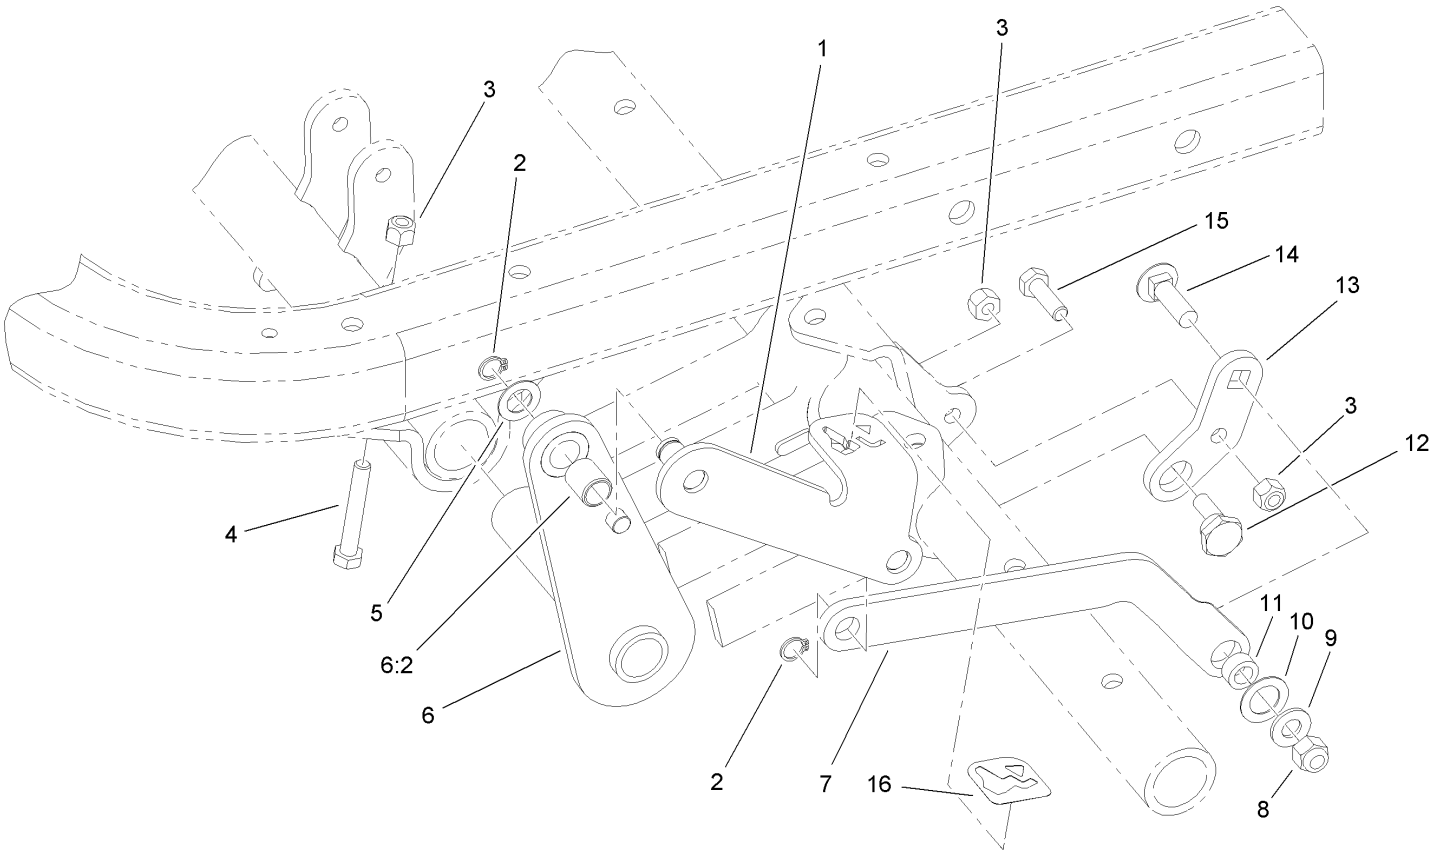

Toolbar Kickup Assembly

Ref	Part No.	Qty.	Description
1	112-6490	1	Lever ASM
2	32151-61	2	Ring-Retaining
3	3296-29	3	Nut-Lock, NI
4	322-10	1	Screw-HH
5	98-1629	1	Washer
6	112-6474	1	Lever ASM
6:2	256-172	1	Bushing
7	112-6487-03	1	Link-Toolbar
8	3296-39	1	Nut-Lock, NI
9	3256-24	1	Washer-Flat
10	108-0015	1	Washer-Flat
11	114127	1	Spacer
12	112-7152	1	Bolt-Eccentric
13	112-7150	1	Tab-Pivot
14	3231-25	1	Screw-CARR
15	322-5	1	Screw-HH
16	112-7145	1	Pad-Pedal, Foot

Attachments and Accessories

For 08731 - Midmount Toolbar System, Sand Pro/Infield Pro 3040 and 5040 Traction Unit

Product Name	Model/Part
Weeder Tine Toolbar	08732
Spring Tine Toolbar	08733
Scarifier Tine Toolbar	08734
Leveling Blade	108-8496


TORO®