Form Number 3357-466 Rev A

Universal Swivel Auger Head
Compact Utility Loaders

Model No. 22806 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2006
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Universal Swivel Auger Head Assembly	3	Hydraulic Motor Assembly No. 107-9361	5
Planetary Drive Assembly No. 107-9352-03	4		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

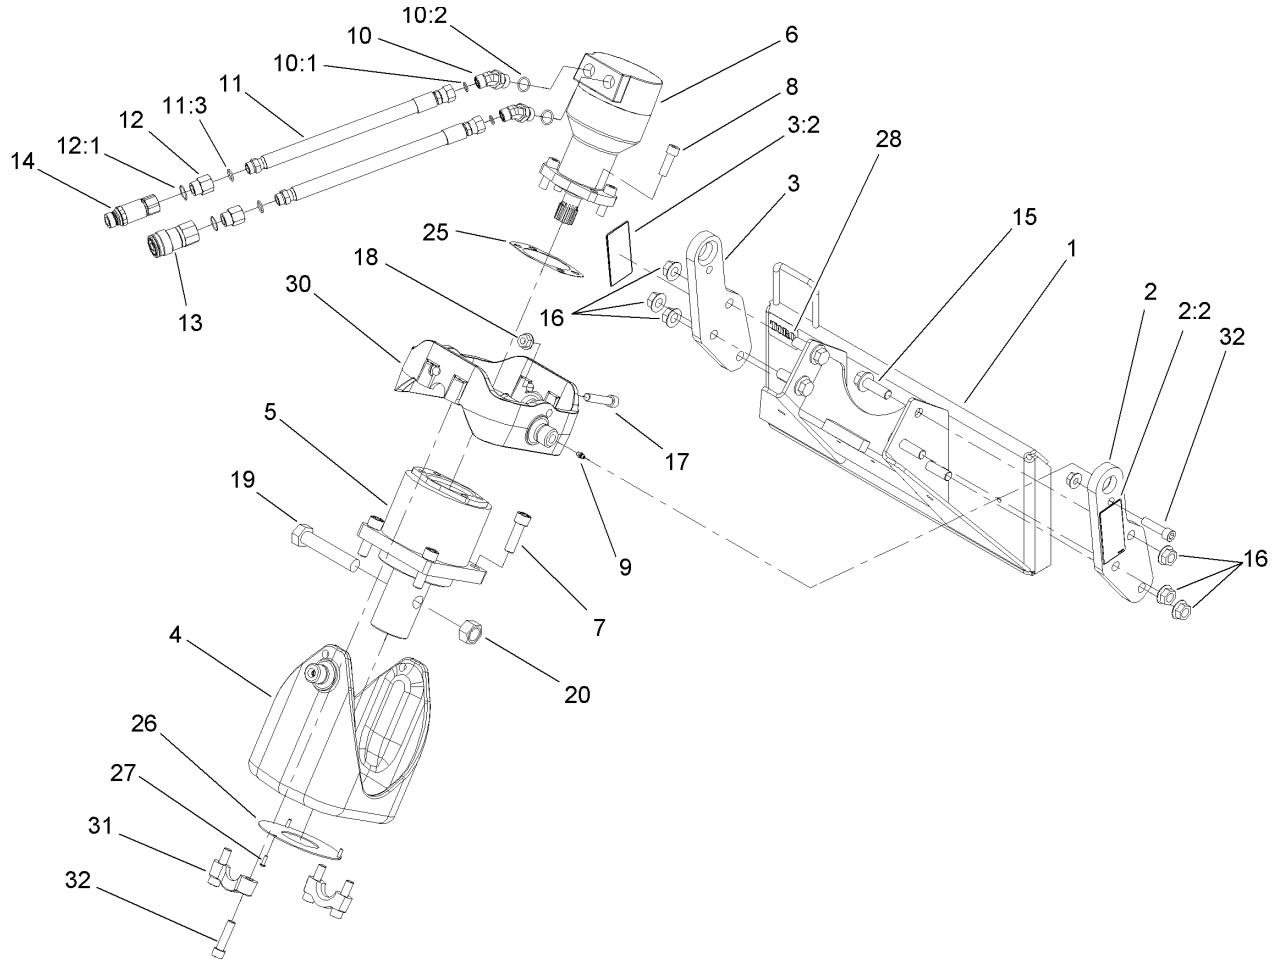

Universal Swivel Auger Head Assembly


Ref	Part No.	Qty.	Description
1	107-9362-03	1	Auger Mount ASM
2	106-7688	1	Plate-Pivot, LH
2:2	105-0326	1	Decal-Danger
3	106-7689	1	Plate-Pivot, RH
3:2	105-0326	1	Decal-Danger
4	107-9354-03	1	Yoke-Augerhead
5	107-9352-03	1	Planetary Drive ASM
6	107-9361	1	HYD Motor ASM
7	107-9365	4	Screw-HSH
8	3274-4	4	Screw-HSH
9	302-5	4	Fitting-Grease
10	340-89	2	Fitting-HYD, 45 DEG
10:1	237-30	1	O-Ring
10:2	237-80	1	O-Ring
11	105-0321	2	HYD Hose ASM
11:3	237-79	1	O-Ring
12	100-4617	2	Adapter-HYD
12:1	237-80	1	O-Ring
13	104-6134	1	Coupler-Face, Flush
❶13:1	105-8396	1	Seal Kit
14	100-4701	1	Nipple-Connect, Pressure
❶14:1	100-6120	1	Seal Kit
15	104-5870	6	Screw
16	32128-50	6	Nut-Flange

Ref	Part No.	Qty.	Description
17	3274-71	1	Screw-HSH
18	32128-49	2	Nut-HHF
19	98-9062	1	Screw
20	3217-15	1	Nut-Hex
25	99-5032	1	Gasket
26	107-9359-03	1	Plate-Guard, Seal
27	3274-39	3	Screw-HSBH
28	92-7981	1	Decal
30	107-9356-03	1	Swivel-Augerhead
31	107-9358-03	2	Lug-Swivel
32	3274-5	5	Screw-HSH

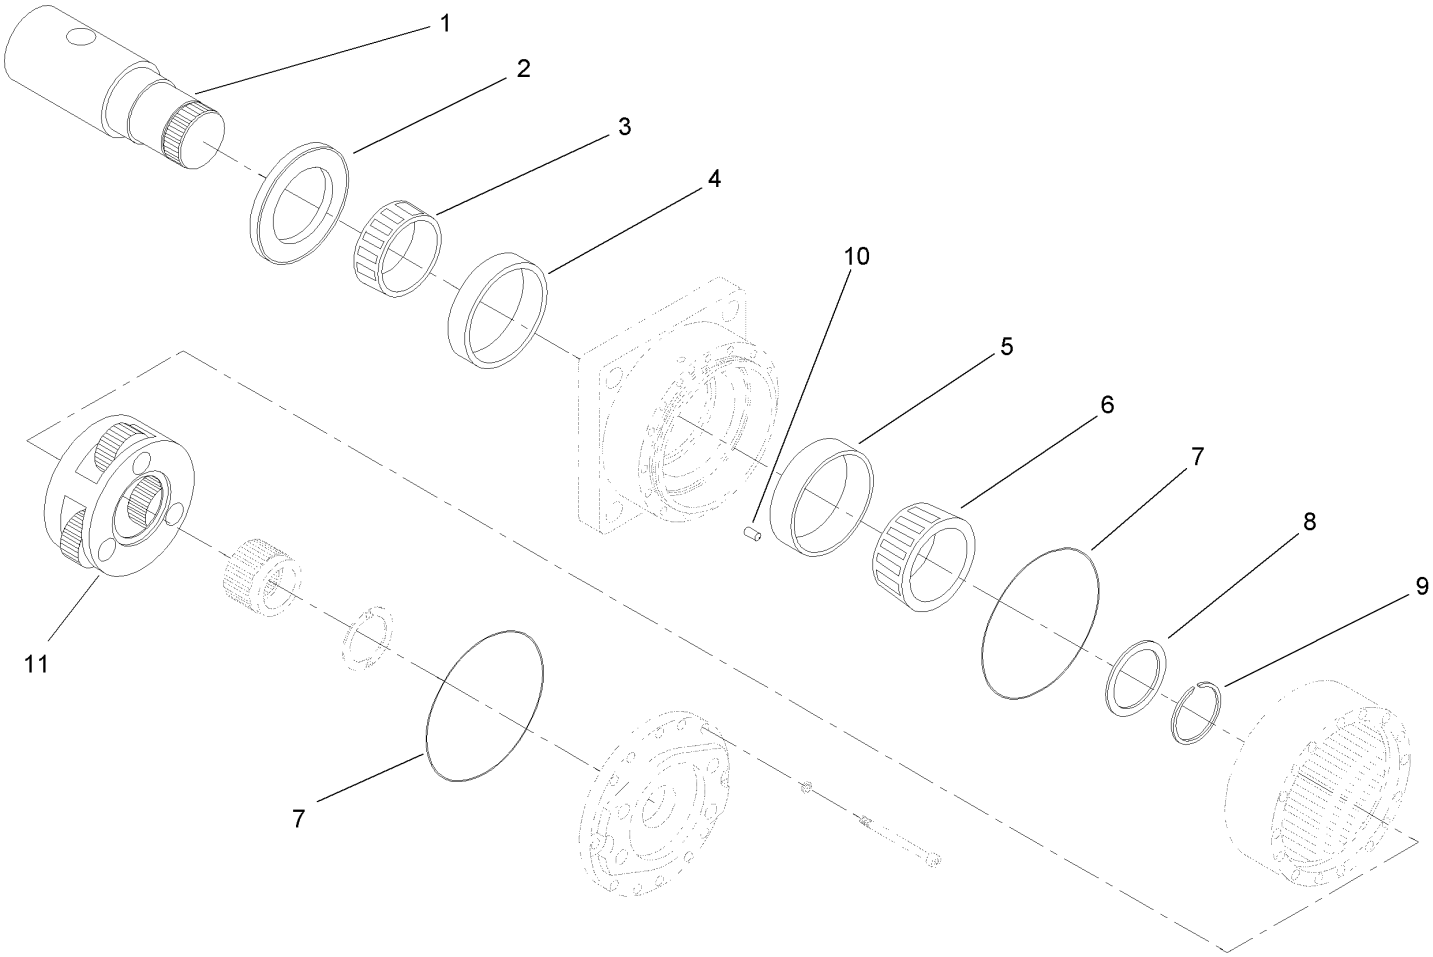

Planetary Drive Assembly No. 107-9352-03

Ref	Part No.	Qty.	Description
1	112-2761	1	Shaft-Planetary
2	112-2762	1	Seal-Oil
3	105-8120	1	Bearing-Cone
4	105-8119	1	Bearing-Cup
5	105-8117	1	Bearing-Cup
6	105-8118	1	Bearing-Cone
7	112-2763	2	O-Ring
8	112-2764	1	Spacer-Bearing
9	112-2765	1	Ring-Snap, Bearing
10	105-8121	2	Pin-Dowel
11	105-8130	1	Secondary Carrier ASM

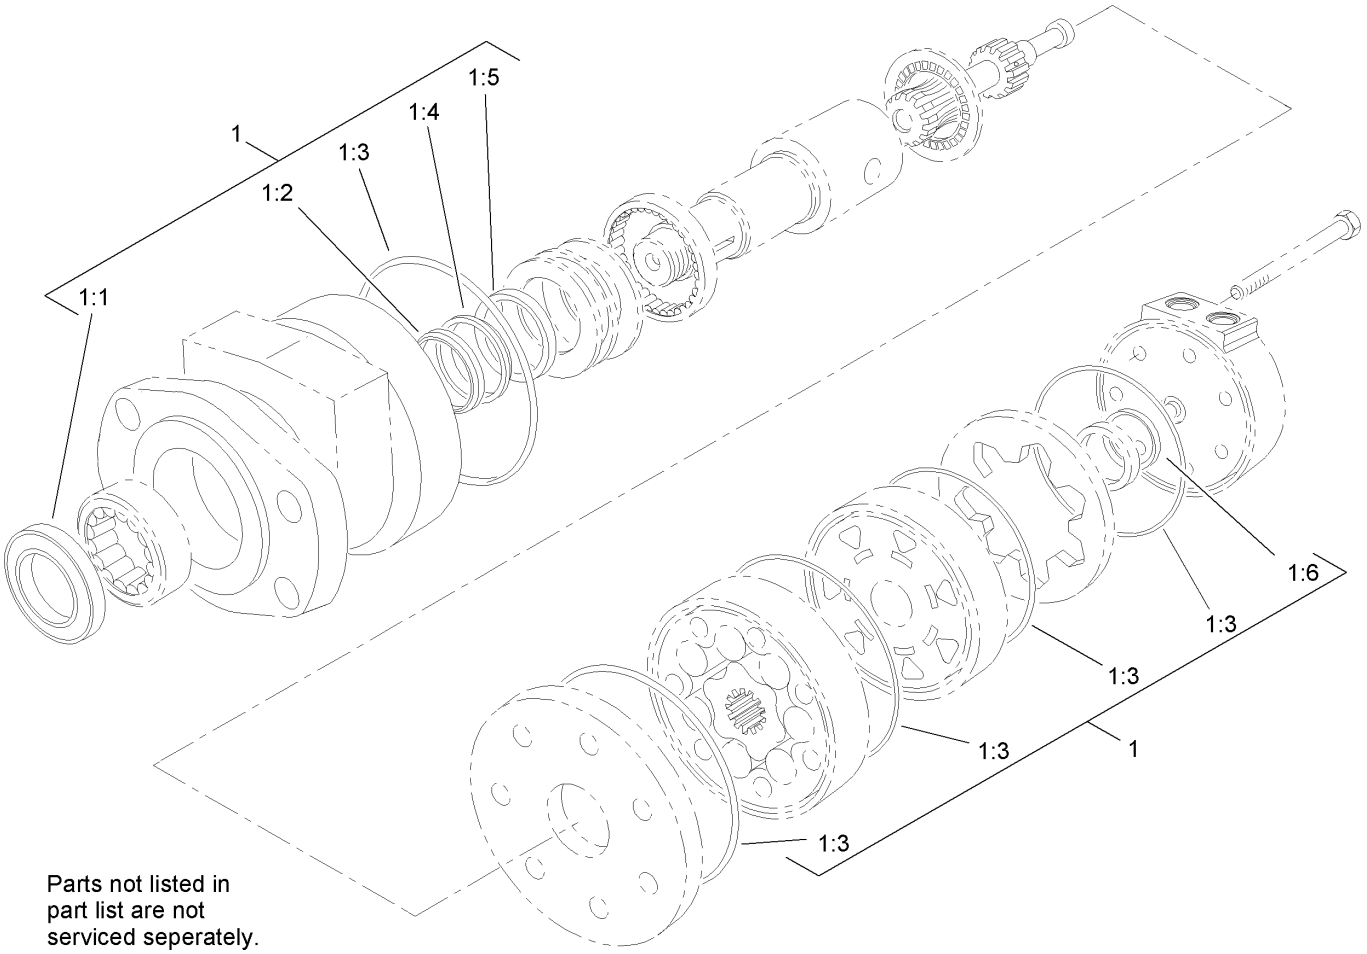

Hydraulic Motor Assembly No. 107-9361

Ref	Part No.	Qty.	Description
1	94-8178	1	Seal Kit
❷1:1		1	Seal-Dirt And Water
❷1:2		1	Washer-Backup
❷1:3		5	Seal-Ring
❷1:4		1	Washer-Backup
❷1:5		1	Seal-Inner
❷1:6		1	Seal-Commutator

NOTES

NOTES


TORO®