Form Number 3323-134 Rev B

# 48cm Recycler®/Rear Bagging Lawnmower

**Model No. 20826 - 200000001 and up.**

## Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page |
|---|---|
| Deck, Kickers And Recycler Plug Assembly | 3 |
| Engine And Blade Assembly | 4 |
| Hoc And Wheel Assembly | 5 |
| Self Propelled Handle And Controls Assembly | 6 |
| Rear Bagger Assembly | 7 |
| Drive Assembly | 8 |
| Gear Case Assembly No. 99-6466 | 9 |
| Cylinder Assembly Briggs and Stratton 123602-0152-E1 | 10 |
| Cylinder Head Assembly Briggs and Stratton 123602-0152-E1 | 11 |
| Crankcase and Crankshaft Assembly Briggs and Stratton 123602-0152-E1 | 12 |
| Carburetor Assembly Briggs and Stratton 123602-0152-E1 | 13 |
| Governor Assembly Briggs and Stratton 123602-0152-E1 | 14 |
| Air Cleaner Assembly Briggs and Stratton 123602-0152-E1 | 15 |
| Flywheel Assembly Briggs and Stratton 123602-0152-E1 | 16 |
| Starter Assembly Briggs and Stratton 123602-0152-E1 | 17 |
| Gasket Set Briggs and Stratton 123602-0152-E1 | 18 |
| Fuel Line and Fuel Pump Assembly 123602-0152-E1 | 19 |



# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head


# Footnotes

❶ Included in Engine Gasket Set-See Ref. 358
❷ Included in Carburetor Gasket Set-See Ref. 977
❸ Included in Carburetor Overhaul Kit-See Ref. 121
❹ Included in Valve Gasket Set-See Ref. 1095

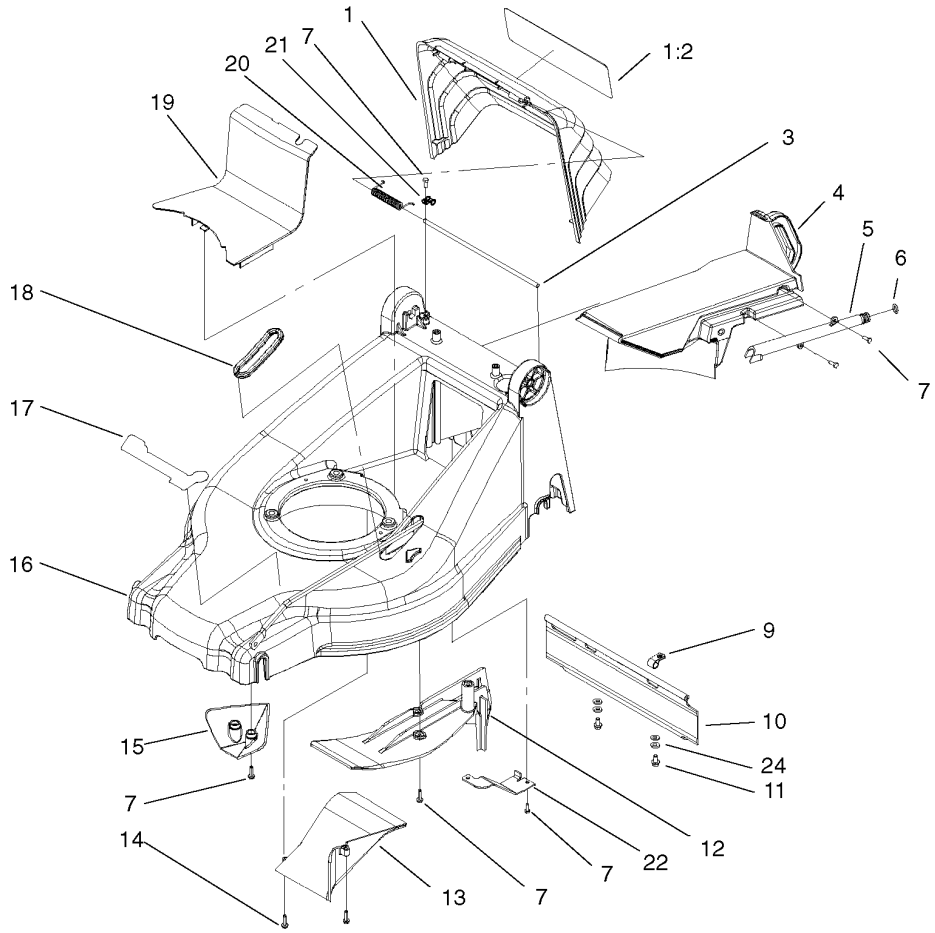



# Deck, Kickers And Recycler Plug Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-9115 | 1 | Door ASM |
| 1:2 | 93-4105 | 1 | Decal-Danger |
| 3 | 100-1509 | 1 | Rod-Pivot |
| 4 | 100-1505 | 1 | Plug-Kicker, Recycler |
| 5 | 100-1522 | 1 | Fitting-Washout |
| 6 | 46-6290 | 1 | O-Ring |
| 7 | 32144-1 | 11 | Screw-Taptite |
| 9 | 2412-87 | 2 | Clamp-Cable |
| 10 | 100-4367 | 1 | Shield-Trailing |
| 11 | 49-2040 | 2 | Screw-HWHTF |
| 12 | 99-6486 | 1 | Cover-Kicker, Rear |
| 13 | 100-1506 | 1 | Ramp-Discharge |
| 14 | 100-4352 | 2 | Screw-HWH |
| 15 | 99-6485 | 1 | Kicker-Front |
| 16 | 99-6457-01 | 1 | Deck |
| 17 | 100-4354 | 1 | Decal-Recycler |
| 18 | 100-3932 | 1 | Boot-HOC |
| 19 | 99-6479 | 1 | Cover-Belt |
| 20 | 99-5293 | 1 | Spring-Torsion |
| 21 | 98-2256 | 2 | Clamp |
| 22 | 100-9123-03 | 1 | Bracket-Deck |
| 24 | 3256-22 | 4 | Washer-Flat |

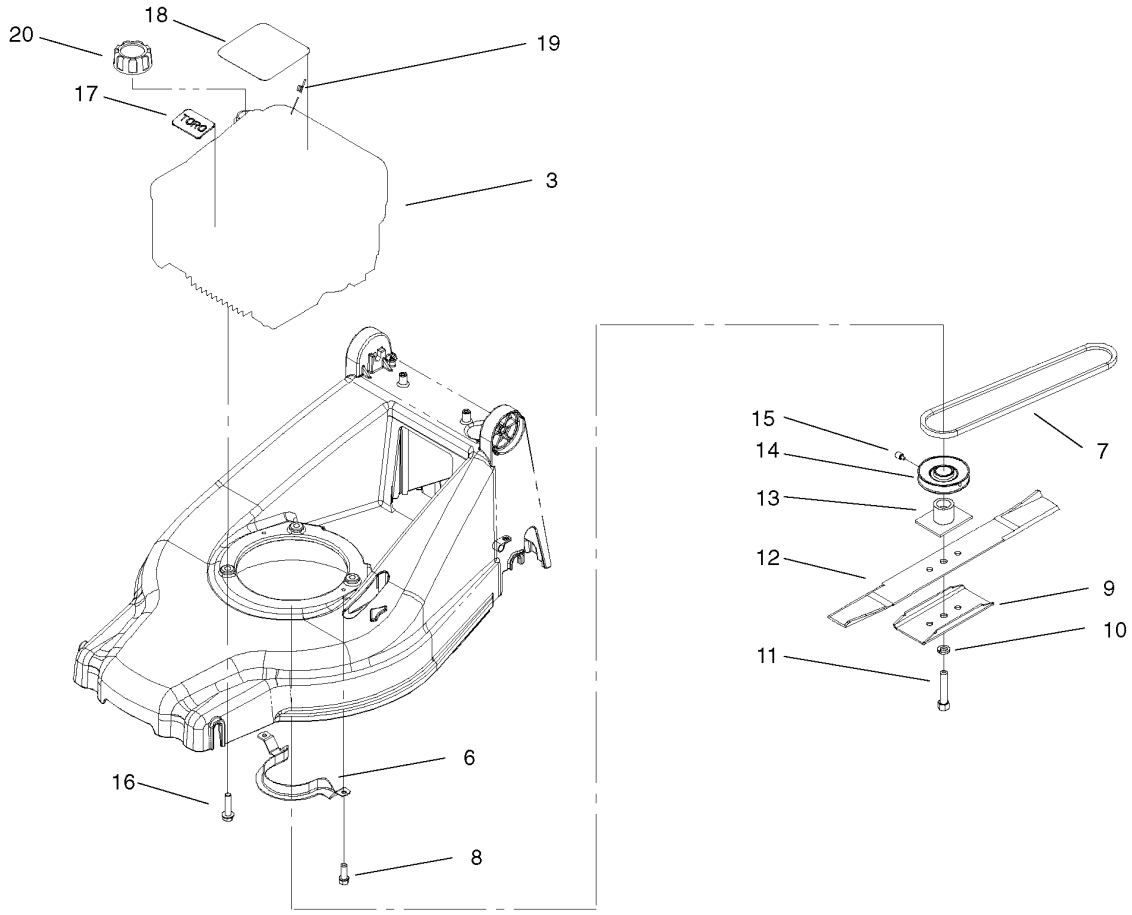


# Engine And Blade Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 3 | | 1 | Engine-B & S (123602-0152-E1) |
| 6 | 100-1523-03 | 1 | Guide-Belt, Engine |
| 7 | 93-0232 | 1 | V-Belt |
| 8 | 32144-4 | 2 | Screw-HWH |
| 9 | 80-0510-03 | 1 | Stiffener-Blade |
| 10 | 3253-22 | 1 | Washer-Lock |
| 11 | 100-4368 | 1 | Bolt-Blade |
| 12 | 71-9260-03 | 1 | Blade |
| 13 | 99-6467 | 1 | Blade Driver ASM |
| 14 | 100-1102 | 1 | Pulley ASM |
| 15 | 613227 | 1 | Screw-Set |
| 16 | 32144-102 | 3 | Screw-HWH |
| 17 | 92-2289 | 1 | Plate-Logo |
| 18 | 100-5951 | 1 | Decal-Engine |
| 19 | 2210-316 | 1 | Stop-Rope |
| 20 | 93-7198 | 1 | Gas Cap ASM |

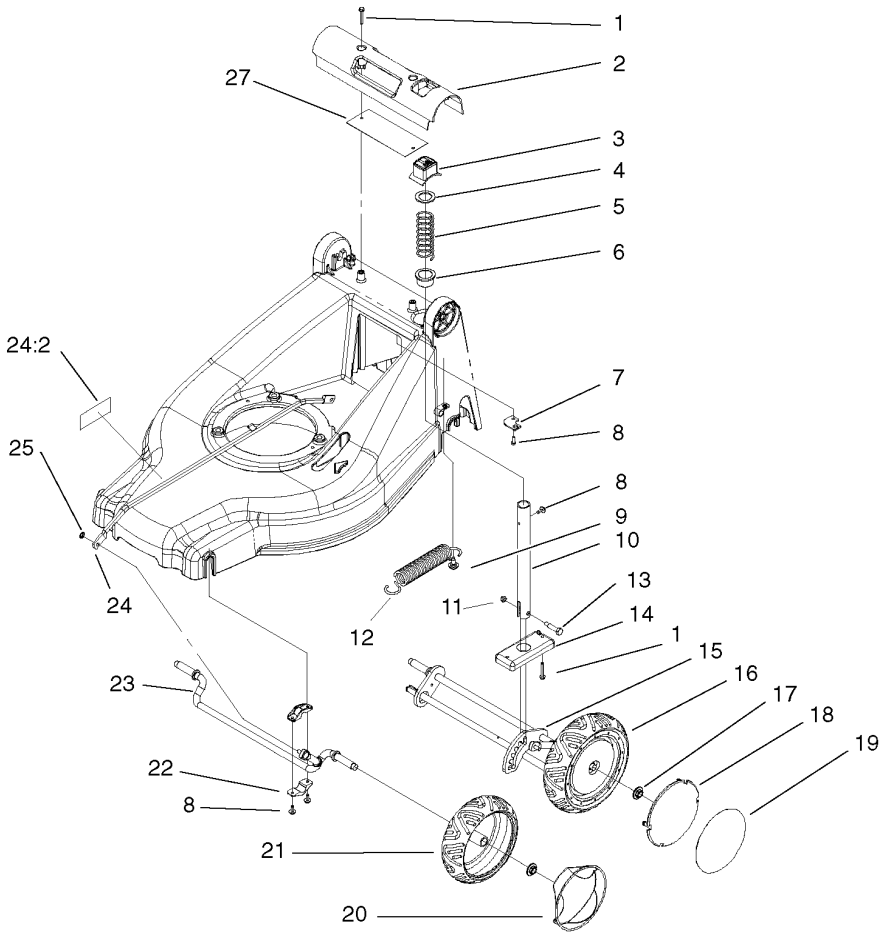


# Hoc And Wheel Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-4352 | 4 | Screw-HWH |
| 2 | 99-6487 | 1 | Handle-Deck |
| 3 | 99-6480 | 1 | Button-HOC |
| 4 | 88-7540 | 1 | Washer-Backup |
| 5 | 99-6481 | 1 | Spring-Compression, HOC |
| 6 | 99-6483 | 1 | Bushing-HOC |
| 7 | 100-1525 | 1 | Bracket-Cable, Traction |
| 8 | 32144-1 | 6 | Screw-Taptite |
| 9 | 92-9698 | 1 | Screw-Shoulder |
| 10 | 99-6458 | 1 | Pipe-HOC |
| 11 | 3296-73 | 1 | Nut-Lock, NI |
| 12 | 100-4384 | 1 | Spring-Extension, HOC |
| 13 | 99-6459 | 1 | Bolt-Shoulder |
| 14 | 99-6460 | 1 | Plate-Support, HOC |
| 15 | 99-6478 | 1 | Rear Axle ASM |
| 16 | 99-6471 | 2 | Wheel And Tire ASM |
| 17 | 100-4370 | 4 | Nut-Lock, Flanged |
| 18 | 100-4366 | 2 | Cover-Smart Wheel |
| 19 | 100-9114 | 2 | Decal-Smart Wheel |
| 20 | 95-6543 | 2 | Cover-Wheel |
| 21 | 99-6470 | 2 | Wheel ASM |
| 22 | 100-1500 | 4 | Mount-Axle, Front |
| 23 | 99-6464 | 1 | Axle-Front ASM |
| 24 | 100-9116 | 1 | Rod ASM |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 24:2 | 100-4355 | 1 | Decal-HOC |
| 25 | 100-3939 | 2 | Palnut |
| 27 | 100-4383-03 | 1 | Cover-Handle |

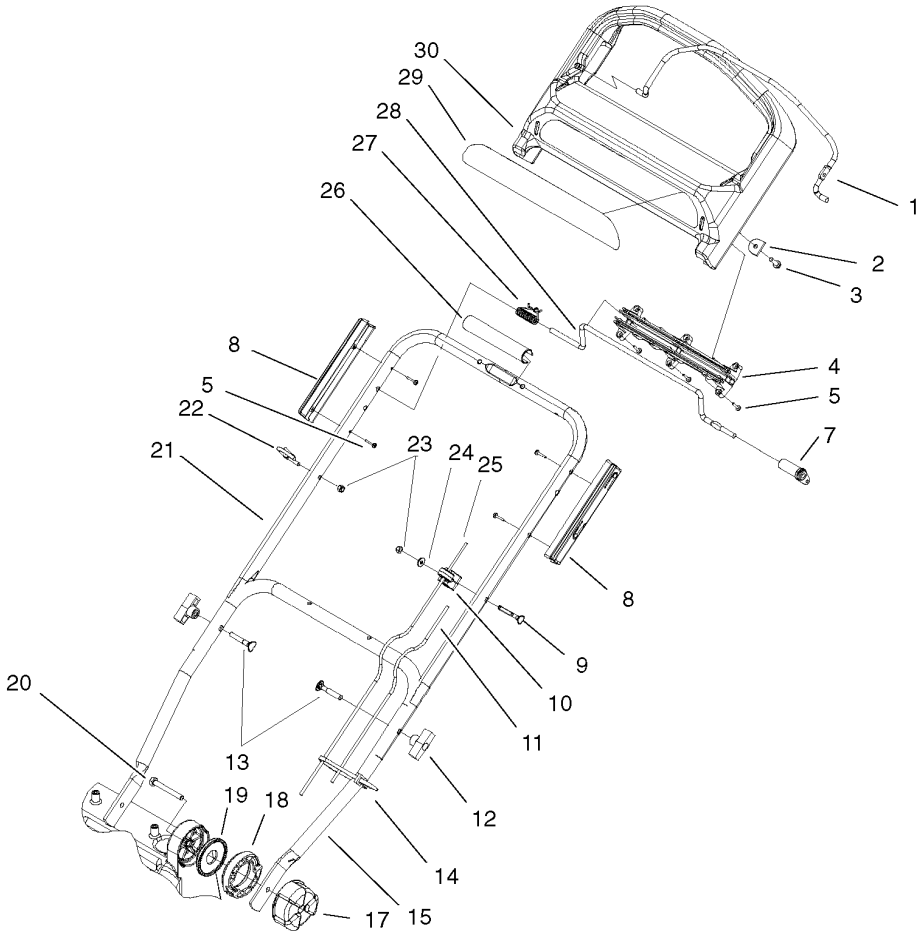


# Self Propelled Handle And Controls Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 99-1593-03 | 1 | Bail-Brake |
| 2 | 99-1595 | 1 | Retainer-Cable, Brake |
| 3 | 46-8091 | 1 | Screw-HWH |
| 4 | 99-6008 | 1 | Retainer-Control Rod, Traction |
| 5 | 94-4496 | 10 | Screw-PPH |
| 7 | 99-1589 | 1 | Lever-Traction |
| 8 | 99-1590 | 2 | Guide-Handle, Control |
| 9 | 95-4453 | 1 | Screw |
| 10 | 99-5239 | 1 | Anchor-Cable |
| 11 | 100-3936 | 1 | Cable-Traction |
| 12 | 98-7134 | 2 | Knob-Handle |
| 13 | 92-2260 | 2 | Screw-Handle |
| 14 | 3290-378 | 2 | Tie-Cable |
| 15 | 100-1502-05 | 1 | Handle-Lower |
| 17 | 100-4396 | 2 | Knob-Adjusting, Handle |
| 18 | 100-1510 | 2 | Disk Adjusting-Handle |
| 19 | 100-1517 | 2 | Disk-Holding, Handle |
| 20 | 60-6690 | 2 | Capscrew |
| 21 | 99-1596-05 | 1 | Handle-Upper |
| 22 | 86-9671 | 1 | Guide-Rope |
| 23 | 3296-73 | 2 | Nut-Lock, NI |
| 24 | 3256-1 | 1 | Washer-Flat |
| 25 | 100-3937 | 1 | Cable-Brake |
| 26 | 100-5970 | 1 | Cover-Handle |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 27 | 99-1592 | 1 | Spring-Torsion, RH |
| 28 | 99-1588 | 1 | Bar-Control, Traction |
| 29 | 100-5950 | 1 | Decal-Automatic |
| 30 | 99-1582 | 1 | Handle-Control |

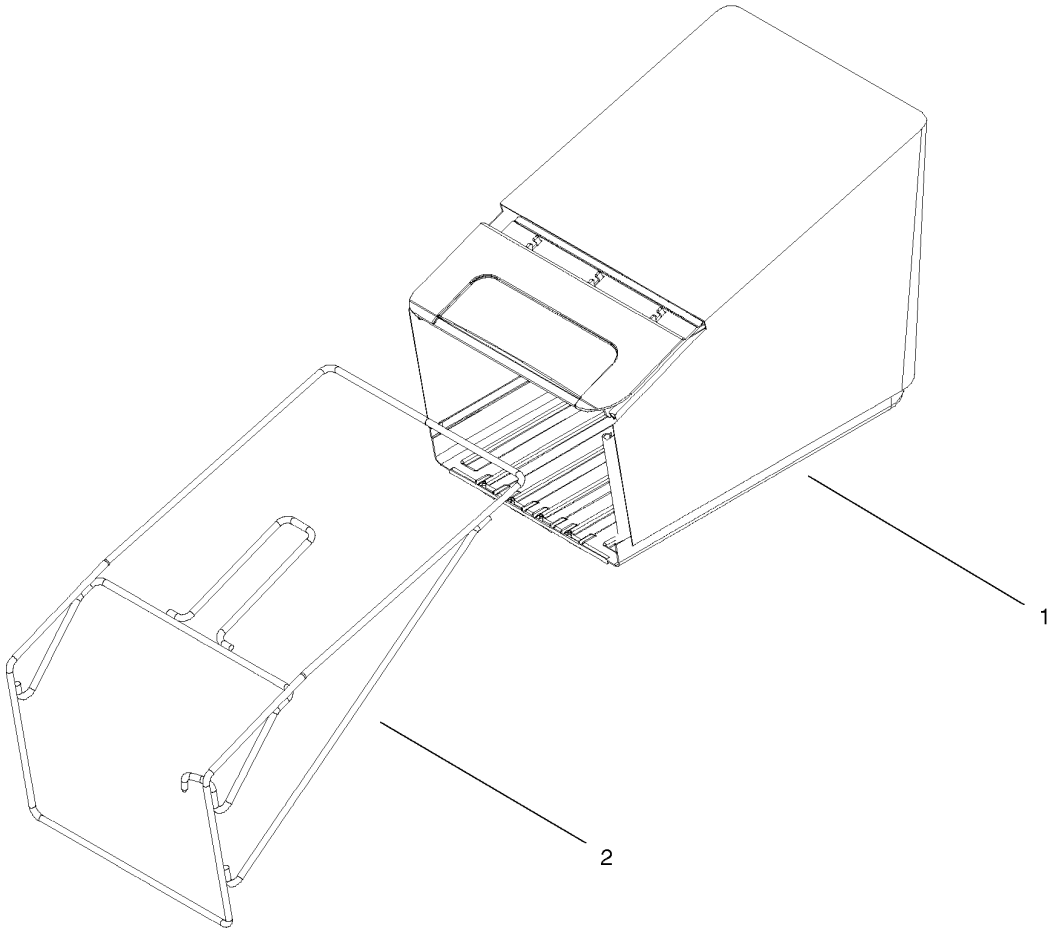



# Rear Bagger Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-1530 | 1 | Grass Bag ASM |
| 2 | 100-1518-03 | 1 | Bag Frame ASM |

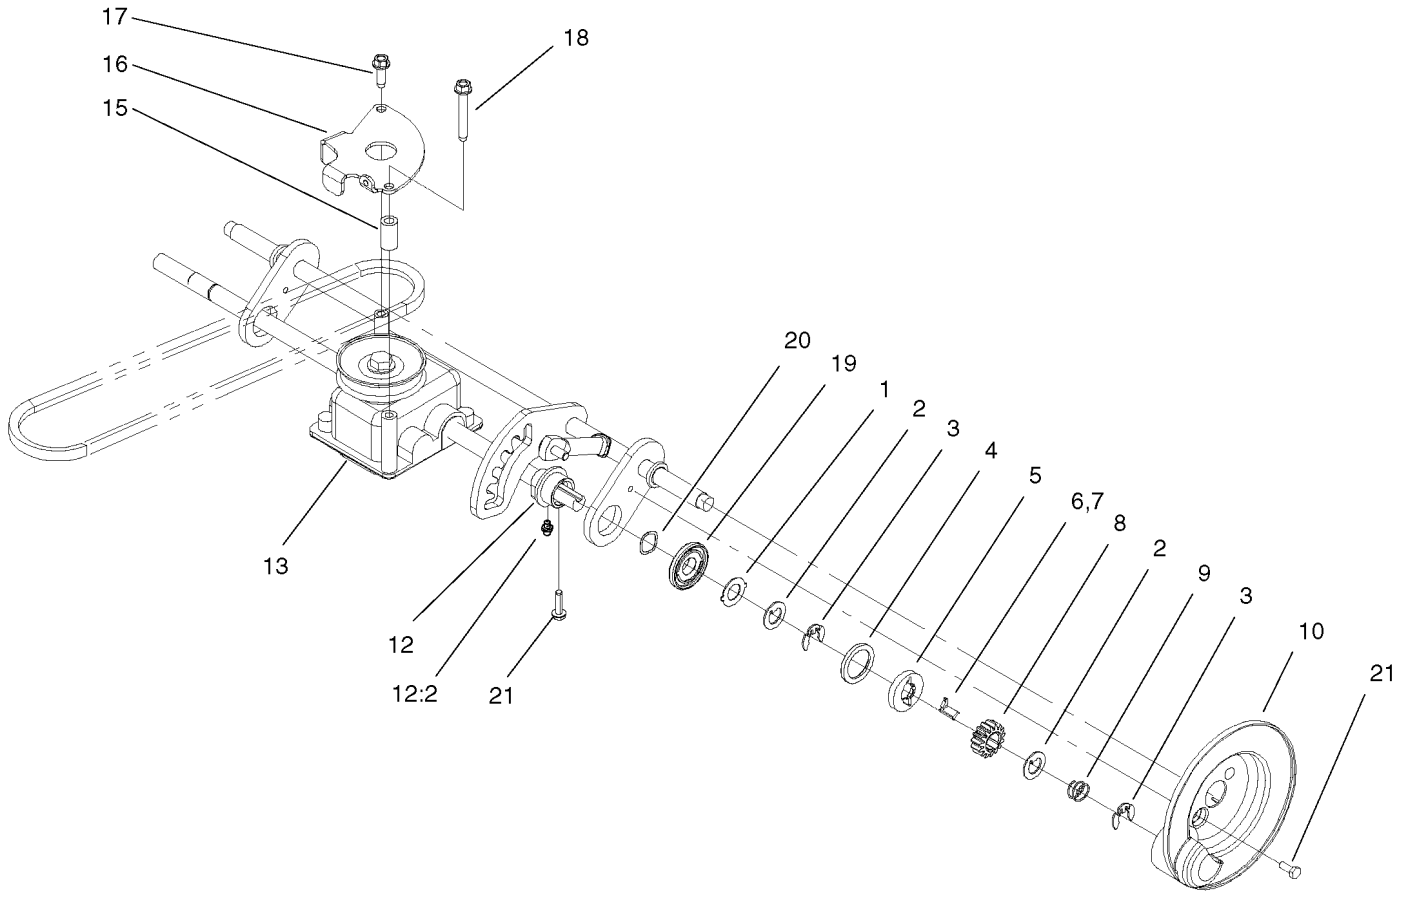



# Drive Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 65-4730 | 2 | Washer-Arm, Pivot |
| 2 | 65-4740 | 4 | Washer-Thrust, Keyed |
| 3 | 65-2720 | 4 | Klipring-Locking |
| 4 | 65-4710 | 2 | Ring-Friction |
| 5 | 65-4760 | 2 | Washer-Clutch |
| 6 | 66-6040 | 1 | Key-Rocking, RH |
| 7 | 66-6050 | 1 | Key-Rocking, LH |
| 8 | 65-4750 | 2 | Gear-Pinion |
| 9 | 65-4720 | 2 | Spring-Compression |
| 10 | 100-1513 | 2 | Cover-Gear |
| 12 | 100-9118 | 2 | Bushing ASM |
| 12:2 | 302-56 | 1 | Fitting-Grease |
| 13 | 99-6466 | 1 | Transmission ASM |
| 15 | 614673 | 1 | Bushing-Plate, Actuator |
| 16 | 100-1524-03 | 1 | Guide-Transmission |
| 17 | 49-2040 | 1 | Screw-HWHTF |
| 18 | 92-1616 | 1 | Screw-HWHTF |
| 19 | 100-1511 | 2 | Retainer-Ring |
| 20 | 100-1515 | 2 | Washer-Wave |
| 21 | 32144-1 | 4 | Screw-Taptite |

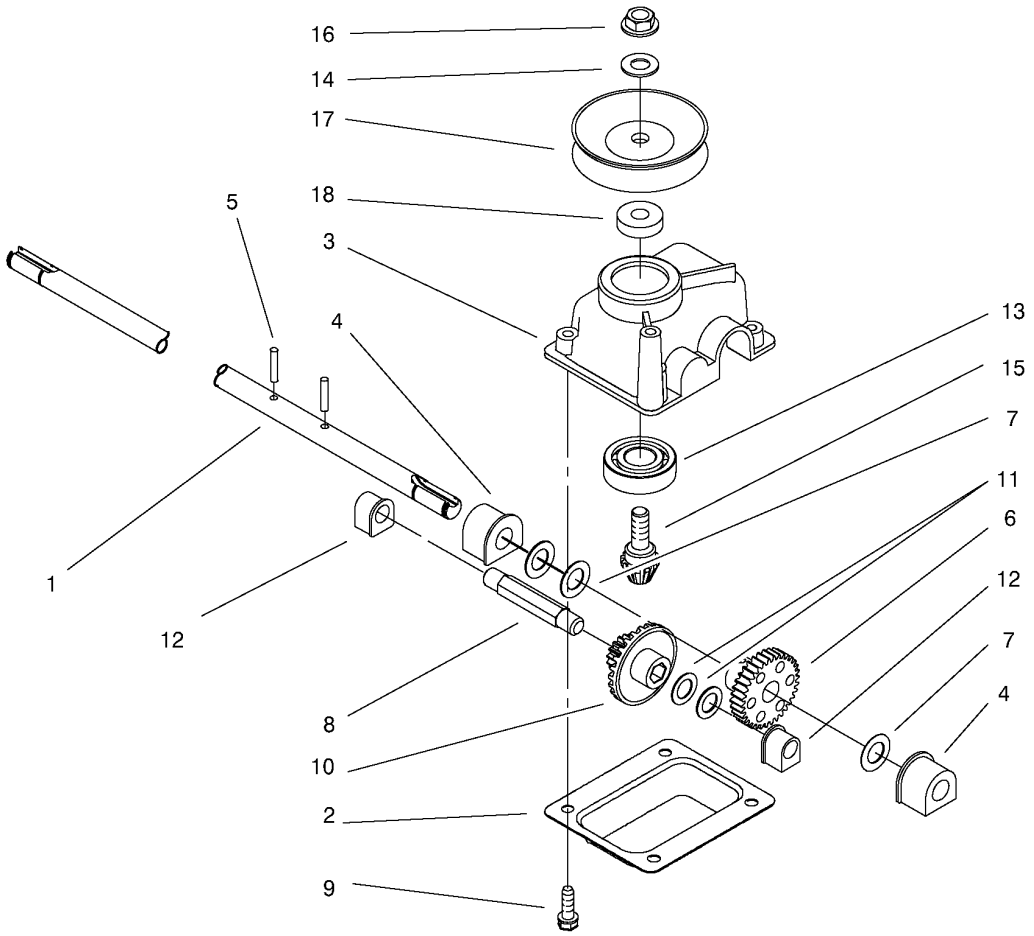


# Gear Case Assembly No. 99-6466


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 100-1514 | 1 | Shaft-Output |
| 2 | 614668-03 | 1 | Cover-Case, Gear |
| 3 | 92-7727 | 1 | Gearcase |
| 4 | 60-8850 | 2 | Bushing |
| 5 | 3285-19 | 2 | Pin-Groove |
| 6 | 614596 | 1 | Gear |
| 7 | 36-4780 | 2 | Washer-Plain |
| 8 | 614696 | 1 | Shaft-Intermediate |
| 9 | 49-2040 | 4 | Screw-HWHTF |
| 10 | 55-3760 | 1 | Gear-Bevel |
| 11 | 36-4791 | 2 | Washer-Thrust |
| 12 | 60-8750 | 2 | Bushing |
| 13 | 38-7820 | 1 | Bearing-Ball |
| 14 | 3256-24 | 1 | Washer-Flat |
| 15 | 60-8890 | 1 | Gear-Pinion |
| 16 | 3296-5 | 1 | Nut-Lock |
| 17 | 100-1176 | 2 | Pulley-Half |
| 18 | 62-6660 | 1 | Spacer |

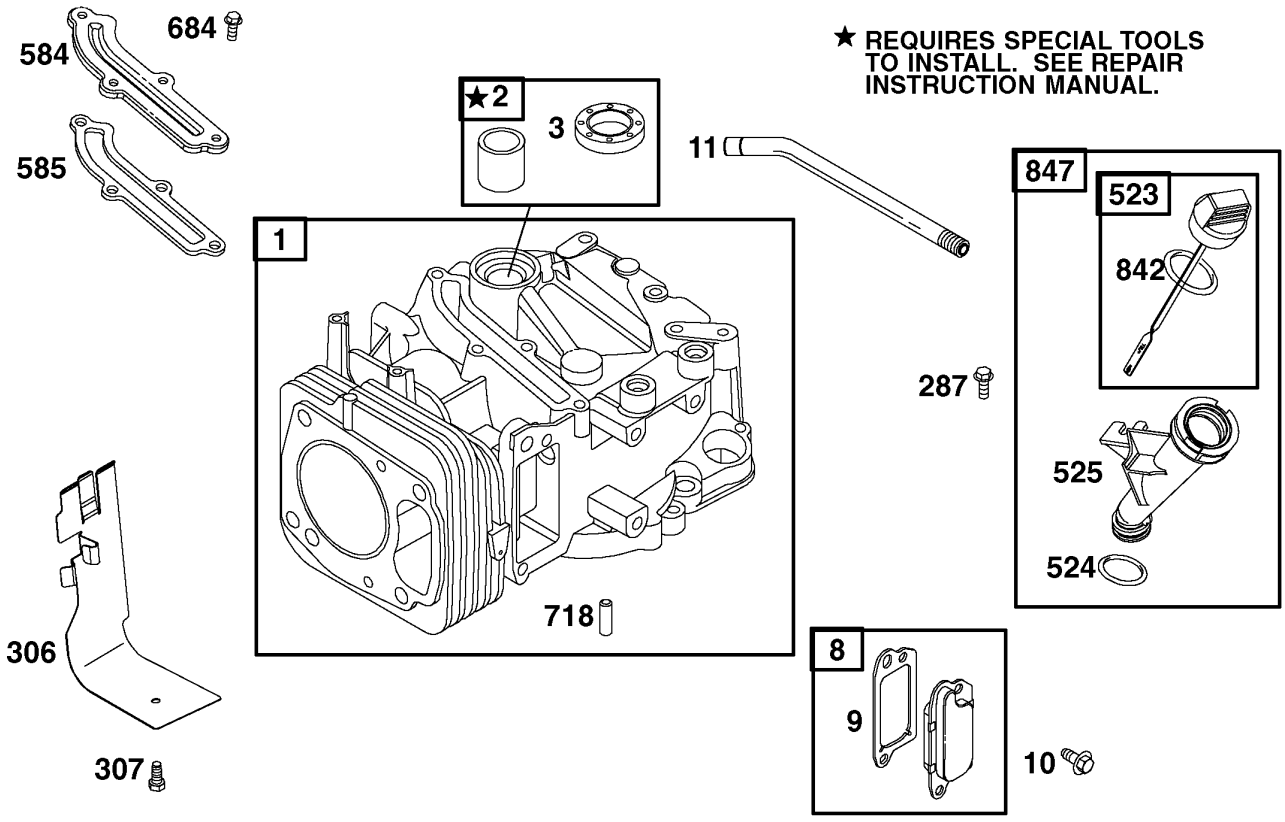


Assemblies include all parts shown in frames.

# Cylinder Assembly
# Briggs and Stratton 123602-0152-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 99-0900 | 1 | Cylinder ASM |
| 2 | 99-0911 | 1 | Bushing |
| ❶3 | 77-9060 | 1 | Seal - Oil |
| 8 | 77-9260 | 1 | Breather ASM |
| ❶9 | 99-0913 | 1 | Gasket-Breather |
| 10 | 99-0914 | 1 | Screw-HH |
| 11 | 99-0915 | 1 | Tube-Breather |
| 523 | 100-9146 | 1 | Dipstick |
| 306 | 99-0917 | 1 | Governor Lever ASM |
| ❶842 | 77-7270 | 1 | O-Ring |
| ❶524 | 77-7300 | 1 | O-Ring |
| 307 | 99-0920 | 1 | Screw-HH |
| ❶585 | 77-7410 | 1 | Gasket-Breather |
| 525 | 99-0906 | 1 | Tube-Filter, Oil |
| 718 | 77-7600 | 1 | Dowel - Sleeve |
| 584 | 99-0922 | 1 | Baffle-Cylinder |
| 847 | 98-9209 | 1 | Dipstick Tube ASM |
| 684 | 99-0920 | 1 | Screw-HH |
| 287 | 99-0927 | 1 | Screw-HH |

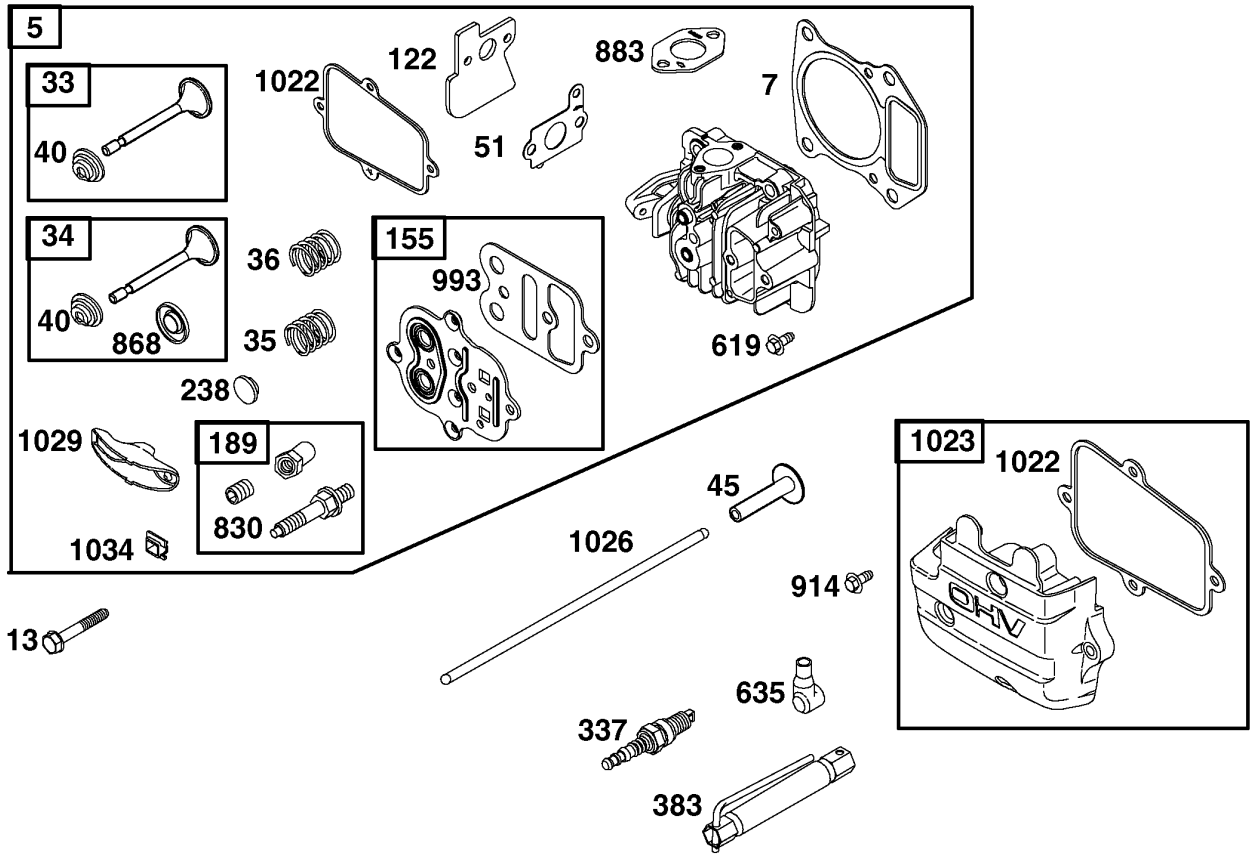



Assemblies include all parts shown in frames.

# Cylinder Head Assembly
# Briggs and Stratton 123602-0152-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 5 | 99-0929 | 1 | Head-Cylinder |
| ❶❹7 | 99-0930 | 1 | Gasket-Head, Cylinder |
| 13 | 99-0931 | 1 | Screw-HH |
| 33 | 99-0932 | 1 | Valve-Exhaust |
| 34 | 99-0933 | 1 | Valve-Intake |
| 35 | 99-0934 | 1 | Spring-Valve |
| 40 | 99-0935 | 1 | Retainer-Spring, Valve |
| 45 | 99-0936 | 1 | Tappet-Valve |
| 155 | 99-0938 | 1 | Plate-Head, Cylinder |
| 189 | 99-0939 | 1 | Ball-Rocker Arm |
| 238 | 99-0940 | 1 | Cap-Valve |
| 914 | 100-9147 | 1 | Screw - Rocker Cover |
| 337 | 77-7330 | 1 | Plug-Spark |
| 383 | 99-0944 | 1 | Spark Plug Wrench |
| 635 | 77-9190 | 1 | Elbow-Plug, Spark |
| 830 | 99-0945 | 1 | Stud-Arm, Rocker |
| 619 | 99-0941 | 1 | Screw-HH |
| ❶❹868 | 99-0946 | 1 | Seal-Valve |
| ❶❹883 | 99-0947 | 1 | Gasket-Exhaust |
| 36 | 99-0934 | 1 | Spring-Valve |
| ❶❹1022 | 99-0907 | 1 | Gasket-Cover, Rocker |
| 1023 | 98-9211 | 1 | Cover-Rocker & Gasket |
| 1026 | 99-0949 | 1 | Rod-Push |
| 1029 | 99-0950 | 1 | Arm-Rocker |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1034 | 99-0951 | 1 | Guide-Rod, Push |
| ❶❹993 | 99-6264 | 1 | Gasket-Plate |
| 51 | 99-0968 | 1 | Gasket-Intake |
| ❶❷122 ❸❹ | 99-0978 | 1 | Spacer-Carburetor |

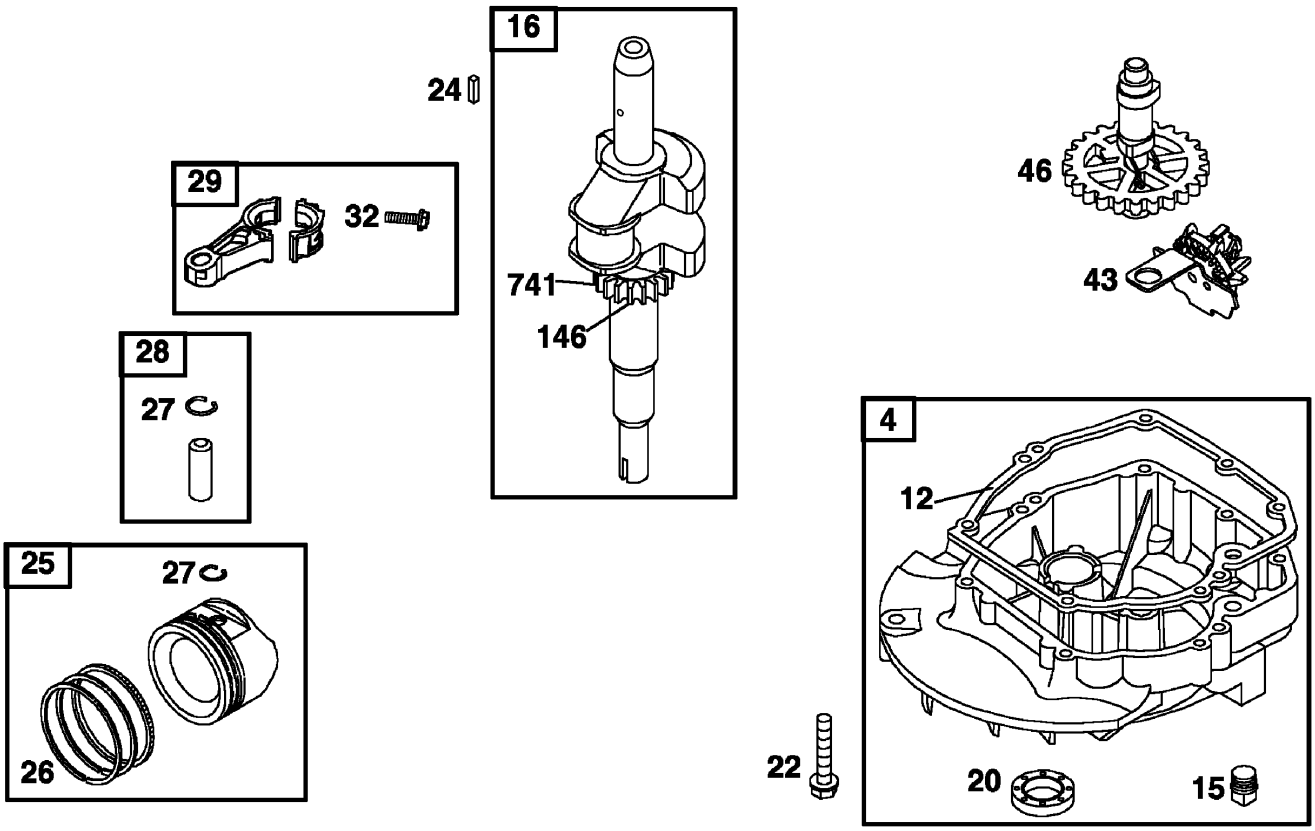


Assemblies include all parts shown in frames.

# Crankcase and Crankshaft Assembly
# Briggs and Stratton 123602-0152-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 4 | 99-0952 | 1 | Sump-Engine |
| ❶12 | 99-0953 | 1 | Gasket-Crankcase |
| 15 | 99-0954 | 1 | Plug-Drain, Oil |
| 16 | 100-8796 | 1 | Crankshaft |
| 24 | 77-8340 | 1 | Key - Flywheel |
| ❶20 | 99-0955 | 1 | Oil Seal |
| 22 | 99-0957 | 1 | Key-Flywheel |
| 25 | 99-0958 | 1 | Piston ASM |
| 26 | 99-0959 | 1 | Set-Ring |
| 27 | 99-0960 | 1 | Lock-Pin, Piston |
| 28 | 99-0961 | 1 | Pin-Piston |
| 29 | 99-0962 | 1 | Rod-Connecting |
| 32 | 99-0963 | 1 | Screw-Rod, Connecting |
| 43 | 99-0964 | 1 | Slinger-Oil, Governor |
| 46 | 99-0965 | 1 | Gear-Cam |
| 146 | 99-0966 | 1 | Key-Timing |
| 741 | 99-0967 | 1 | Gear-Timing |

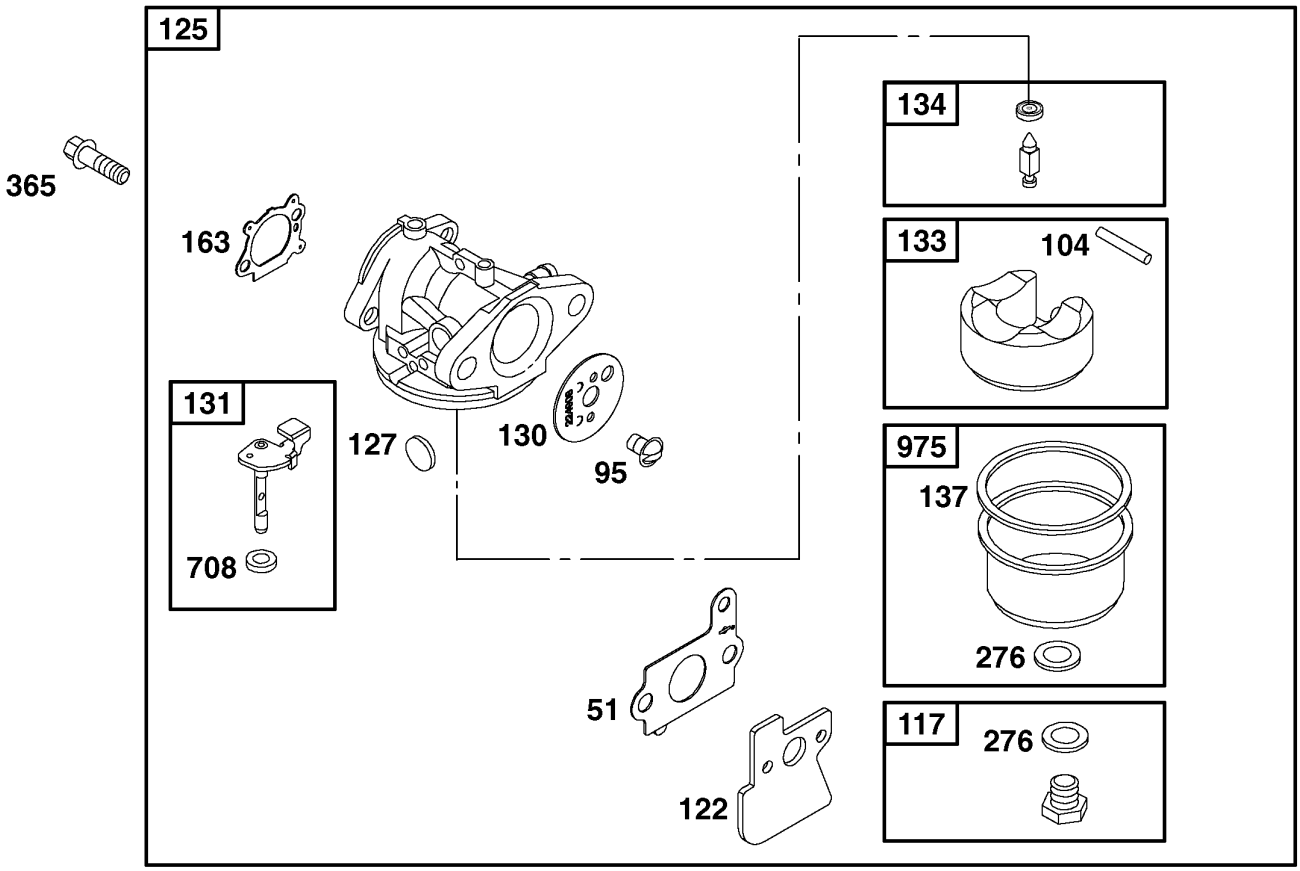


Assemblies include all parts shown in frames.

# Carburetor Assembly
# Briggs and Stratton 123602-0152-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 95 | 99-0969 | 1 | Screw-SPH |
| ❸104 | 99-0970 | 1 | Pin-Hinge, Float |
| 117 | 99-0971 | 1 | Jet-Main |
| ❷❸708 | 100-5037 | 1 | Seal-Dust |
| 125 | 99-0973 | 1 | Carburetor |
| 130 | 99-0974 | 1 | Valve-Throttle |
| 131 | 99-0975 | 1 | Shaft-Throttle |
| ❷❸276 | 100-5038 | 1 | Washer-Sealing |
| ❸134 | 77-8110 | 1 | Valve-Float |
| ❶❷163 ❸ | 99-0976 | 1 | Gasket-Cleaner, Air |
| 975 | 99-0977 | 1 | Bowl-Float |
| 133 | 77-8170 | 1 | Float-Carburetor |
| ❶❷51 ❸❹ | 99-0968 | 1 | Gasket-Intake |
| 365 | 99-0972 | 1 | Screw-Shoulder |
| ❶❷122 ❸❹ | 99-0978 | 1 | Spacer-Carburetor |
| ❸127 | 100-9107 | 1 | Plug-Welch |
| ❷❸137 | 104-7550 | 1 | Gasket-Float Bowl |

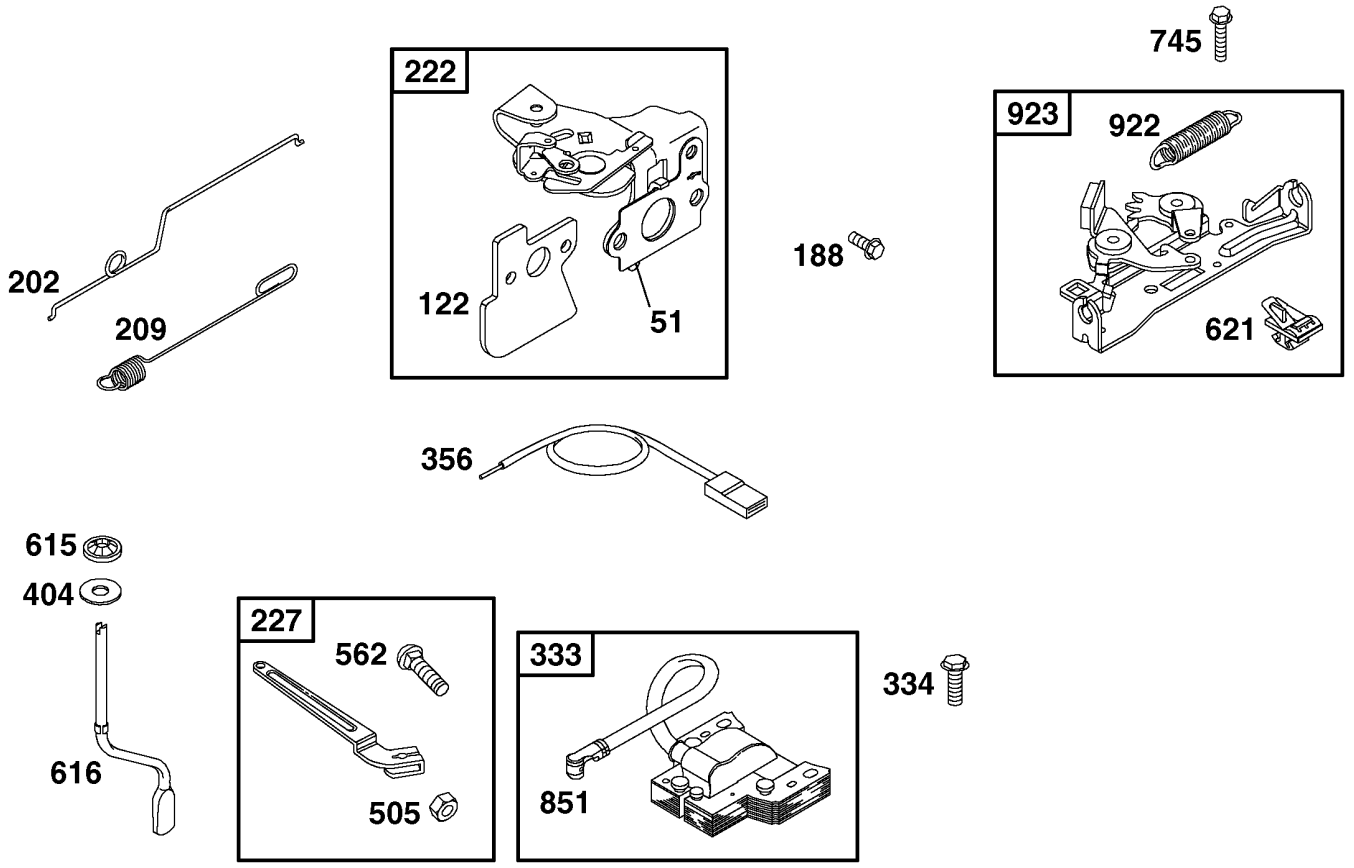



Assemblies include all parts shown in frames.

# Governor Assembly
# Briggs and Stratton 123602-0152-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❶❷51 ❸❹ | 99-0968 | 1 | Gasket-Intake |
| ❶❷122 ❸❹ | 99-0978 | 1 | Spacer-Carburetor |
| 222 | 100-2891 | 1 | Bracket-Control |
| 910 | 99-1014 | 1 | Stud-Mounting, Starter |
| 202 | 99-0981 | 1 | Link-Governor |
| 188 | 100-5031 | 1 | Screw-Control Bracket |
| 745 | 99-0983 | 1 | Screw-HH |
| 474 | 99-1011 | 1 | Alternator |
| 356 | 99-1007 | 1 | Wire-Stop |
| 334 | 99-1006 | 1 | Screw-HH |
| 935 | 100-9109 | 1 | Switch-Interlock |
| 851 | 77-9450 | 1 | Terminal-Plug, Spark |
| 333 | 99-1005 | 1 | Armature-Magneto |
| 922 | 99-0987 | 1 | Spring-Brake |
| 923 | 99-0988 | 1 | Brake Assembly |
| 621 | 99-0986 | 1 | Switch-Stop |
| 1160 | 77-9520 | 1 | Screw-HH |
| 227 | 99-0917 | 1 | Governor Lever ASM |
| 404 | 99-0918 | 1 | Washer-Crank, Governor |
| 562 | 99-0921 | 1 | Screw-HH |
| 505 | 99-0924 | 1 | Nut-Hex |
| 615 | 99-0925 | 1 | Fastener |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 616 | 99-0926 | 1 | Crank-Governor |
| 209 | 99-0982 | 1 | Spring-Governor |
| 1119 | 104-7551 | 1 | Screw-Alternator |

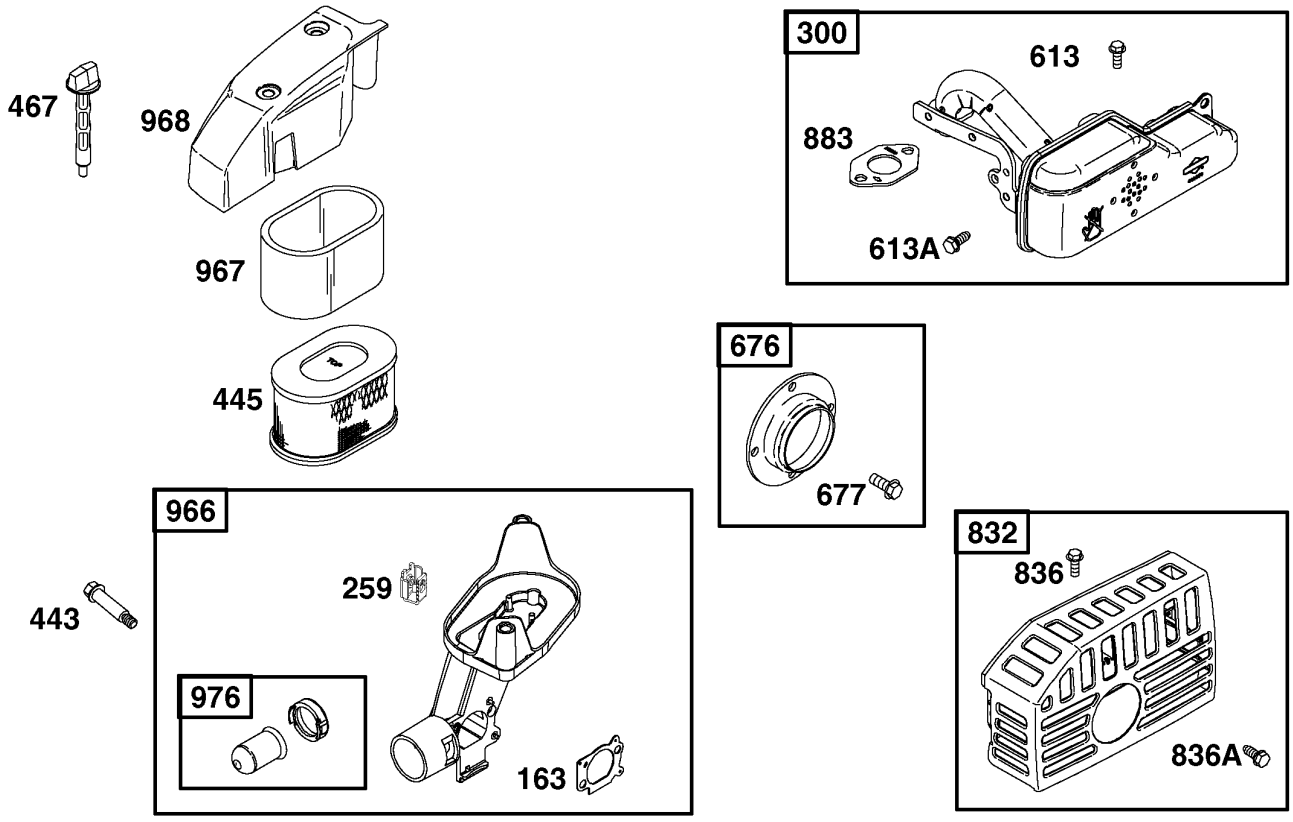


Assemblies include all parts shown in frames.

# Air Cleaner Assembly
# Briggs and Stratton 123602-0152-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 467 | 100-9108 | 1 | Knob-Air Cleaner |
| 677 | 100-9148 | 1 | Screw |
| 836 | 94-1674 | 1 | Screw-HH |
| 968 | 98-9207 | 1 | Cover-Cleaner, Air |
| 445 | 98-9212 | 1 | Element-Filter, Air |
| ❶❹883 | 99-0947 | 1 | Gasket-Exhaust |
| ❶❷163 ❸ | 99-0976 | 1 | Gasket-Cleaner, Air |
| 966 | 99-0979 | 1 | Base-Cleaner, Air |
| 613 | 99-1047 | 1 | Screw-HH |
| 836A | 99-0999 | 1 | Screw-HH |
| 300 | 99-0995 | 1 | Muffler-Exhaust |
| 259 | 99-0984 | 1 | Grommet |
| 967 | 99-0989 | 1 | Wrap-Foam, Pre-Filter |
| 676 | 99-1044 | 1 | Deflector-Muffler |
| 832 | 98-9206 | 1 | Guard-Muffler |
| 613A | 99-0941 | 1 | Screw-HH |
| 443 | 99-0990 | 1 | Screw-Hex |
| 976 | 99-0991 | 1 | Primer |

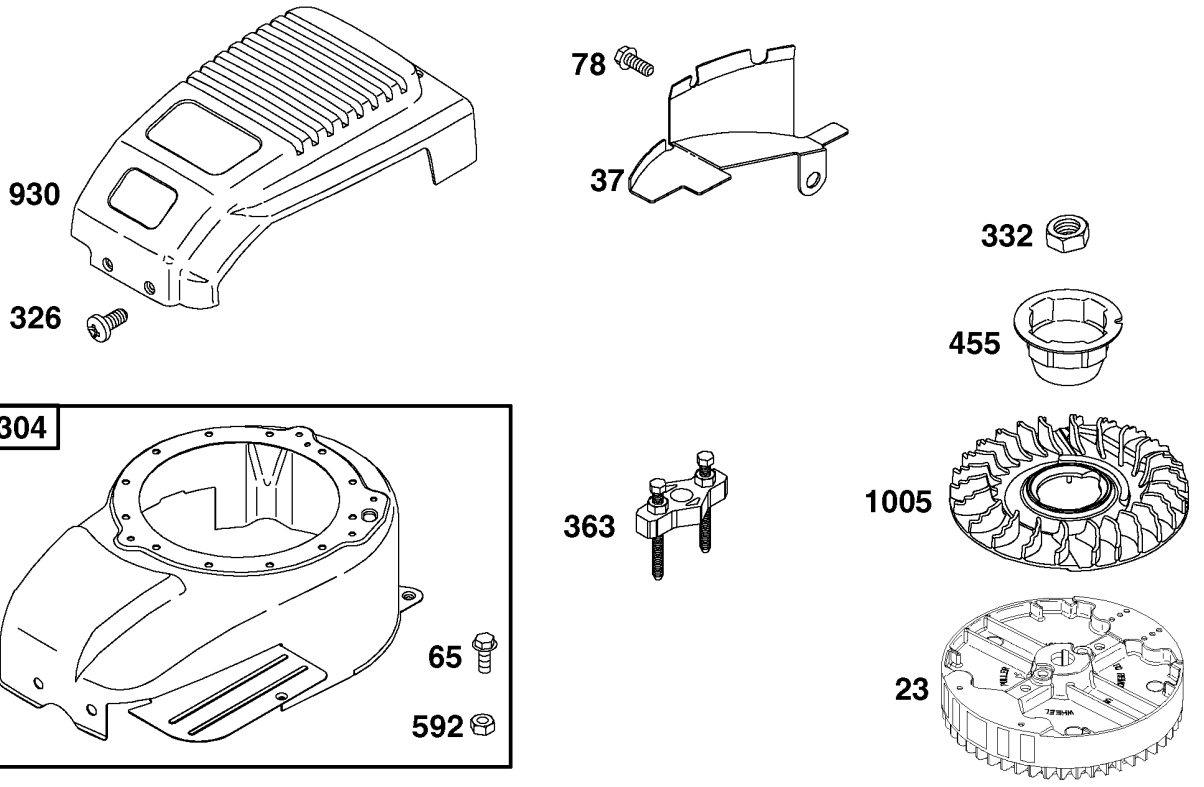


Assemblies include all parts shown in frames.

# Flywheel Assembly
# Briggs and Stratton 123602-0152-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 23 | 99-1001 | 1 | Flywheel |
| 332 | 94-1673 | 1 | Nut-Flywheel |
| 65 | 99-1002 | 1 | Screw-HH |
| 304 | 99-1003 | 1 | Housing-Blower |
| 930 | 98-9203 | 1 | Guard-Rewind |
| 1036 | 99-1016 | 1 | Kit-Label, Emissions |
| 1005 | 99-1015 | 1 | Fan-Flywheel |
| 326 | 98-9204 | 1 | Screw-Shroud |
| 363 | 99-1008 | 1 | Puller-Flywheel |
| 592 | 99-1009 | 1 | Nut-Hex |
| 455 | 99-1010 | 1 | Cup-Flywheel |
| 305 | 99-0941 | 1 | Screw-HH |
| 37 | 99-0905 | 1 | Guard-Flywheel |
| 78 | 99-0941 | 1 | Screw-HH |

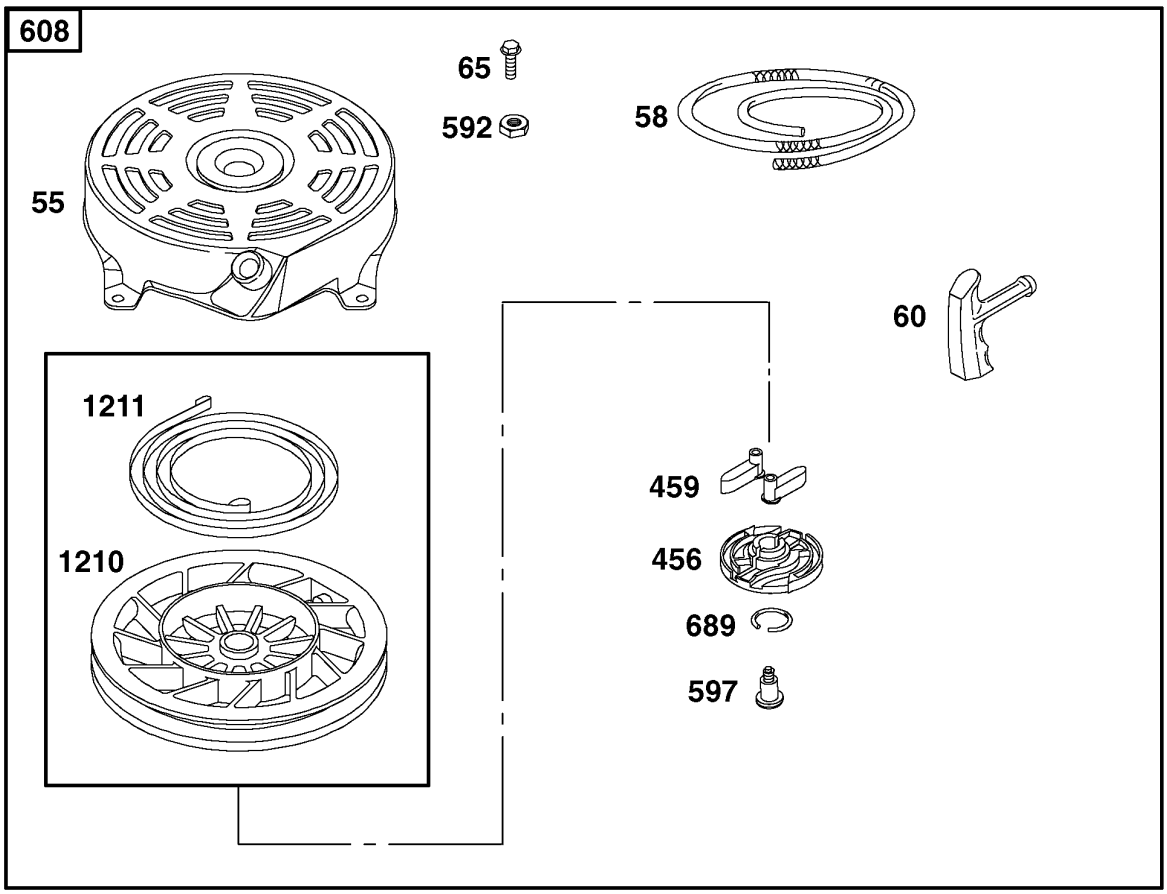




Assemblies include all parts shown in frames.


# Starter Assembly
# Briggs and Stratton 123602-0152-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 55 | 99-1048 | 1 | Housing-Starter |
| 65 | 99-1002 | 1 | Screw-HH |
| 58 | 94-1668 | 1 | Rope-Starter |
| 592 | 100-9149 | 1 | Nut (Rewind Starter) |
| 60 | 77-8510 | 1 | Handle - Rewind Starter |
| 1210 | 94-1657 | 1 | Pulley-Starter, Rewind |
| 1211 | 94-1657 | 1 | Pulley-Starter, Rewind |
| 456 | 94-1659 | 1 | Retainer-Starter, Rewind |
| 459 | 94-1654 | 1 | Pawl-Starter |
| 597 | 94-1660 | 1 | Screw-Shoulder |
| 689 | 94-1655 | 1 | Spring-Torsion |
| 608 | 98-9215 | 1 | Rewind ASM |

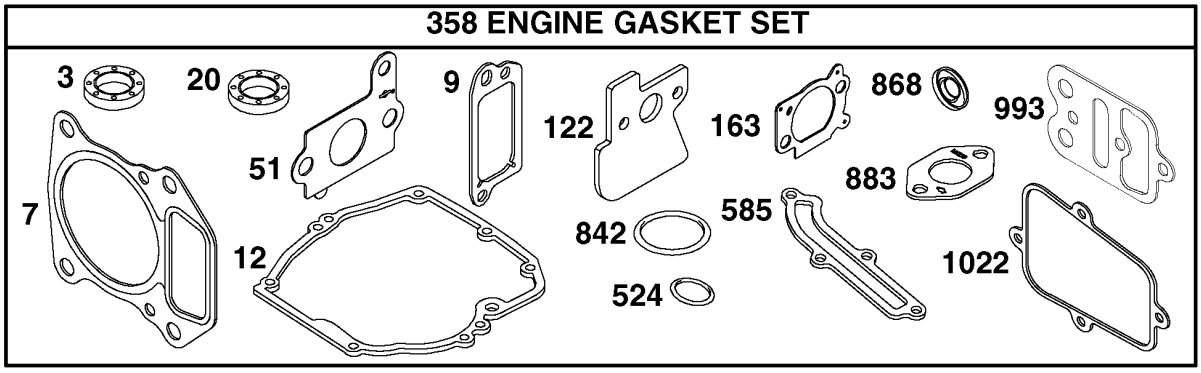

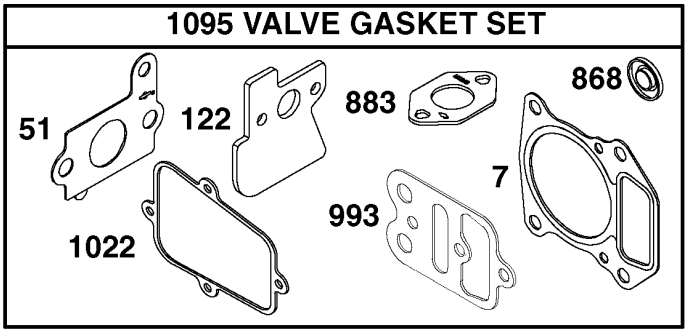


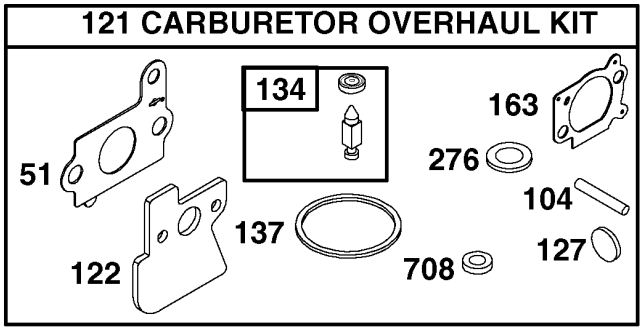
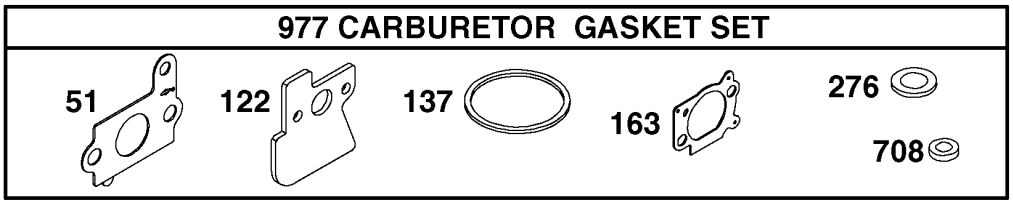
# Gasket Set
# Briggs and Stratton 123602-0152-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❶3 | 99-0912 | 1 | Oil Seal |
| ❶❹7 | 99-0930 | 1 | Gasket-Head, Cylinder |
| ❶9 | 99-0913 | 1 | Gasket-Breather |
| ❶12 | 99-0953 | 1 | Gasket-Crankcase |
| 1095 | 100-5033 | 1 | Valve Overhaul Gasket Set |
| ❸104 | 99-0970 | 1 | Pin-Hinge, Float |
| 977 | 100-5034 | 1 | Gasket Set-Carburetor |
| 358 | 100-5035 | 1 | Engine Overhaul Gasket Set |
| ❸134 | 77-8110 | 1 | Valve-Float |
| 121 | 100-5036 | 1 | Carburetor Kit |
| ❷❸708 | 100-5037 | 1 | Seal-Dust |
| ❷❸276 | 100-5038 | 1 | Washer-Sealing |
| ❶❹868 | 99-0946 | 1 | Seal-Valve |
| ❶❹883 | 99-0947 | 1 | Gasket-Exhaust |
| ❶842 | 77-7270 | 1 | O-Ring |
| ❶524 | 77-7300 | 1 | O-Ring |
| ❶❹1022 | 99-0907 | 1 | Gasket-Cover, Rocker |
| ❶❷122 ❸❹ | 99-0978 | 1 | Spacer-Carburetor |
| ❶585 | 99-0925 | 1 | Fastener |
| ❶❹993 | 99-0948 | 1 | Plate-Gasket |
| ❶20 | 99-0955 | 1 | Oil Seal |
| ❶❷51 ❸❹ | 99-0968 | 1 | Gasket-Intake |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷❸163 ❹ | 99-0976 | 1 | Gasket-Cleaner, Air |
| ❸127 | 100-9107 | 1 | Plug-Welch |
| ❷❸137 | 104-7550 | 1 | Gasket-Float Bowl |

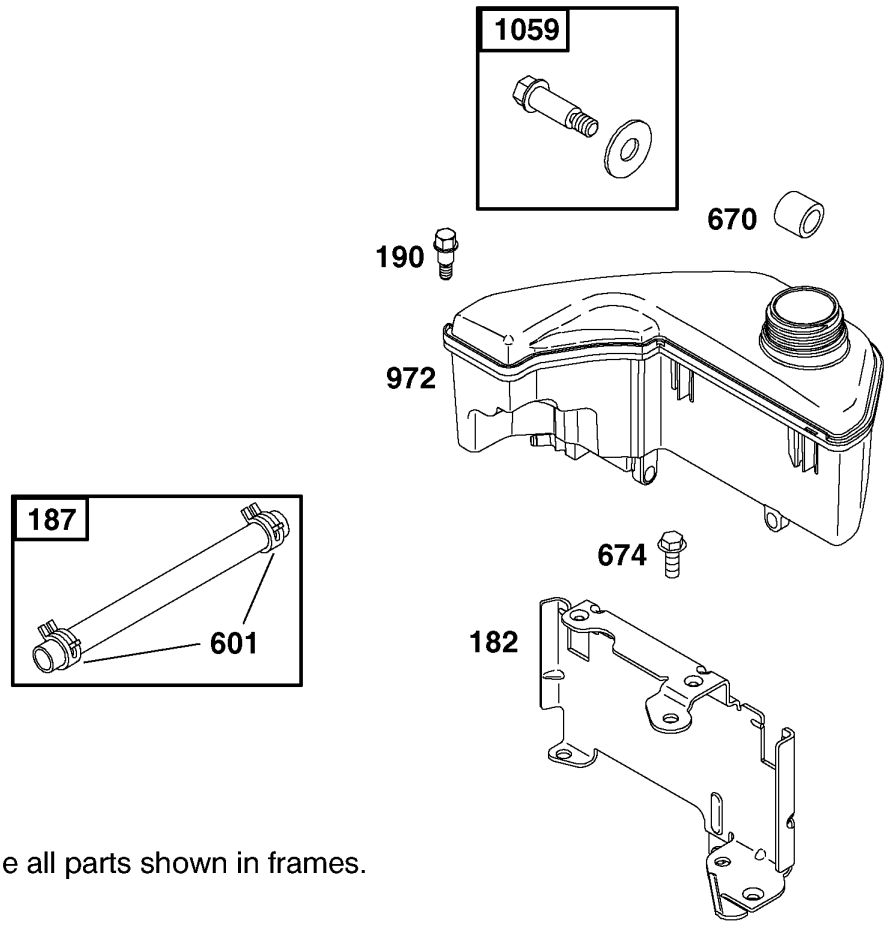


Assemblies include all parts shown in frames.

# Fuel Line and Fuel Pump Assembly
# 123602-0152-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 601 | 78-4690 | 1 | Clamp |
| 674 | 98-9202 | 1 | Screw-Bracket, Tank |
| 182 | 98-9205 | 1 | Bracket-Tank, Fuel |
| 187 | 99-0992 | 1 | Line-Fuel |
| 1059 | 99-0993 | 1 | Screw-Shoulder |
| 190 | 99-0994 | 1 | Screw-HH |
| 670 | 99-0997 | 1 | Spacer-Tank, Fuel |
| 972 | 99-1000 | 1 | Tank-Fuel |


TORO®