Form Number 3358-179 Rev A

48in and 52in Bagger
Titan Zero-Turn-Radius Riding Mower

Model No. 79155 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com


Contents

Description	Page	Description	Page
Bagger Hood and Upper Tube Assembly	3	Lower Tube Assembly No. 109-6769	7
Hood Assembly No. 109-6796	4	Bag Frame Assembly	8
Bagger Mount Assembly No. 109-6771	5	Bag Assembly No. 112-3994	9
Baffle and Boot Mount Assembly	6	Bagger Weight Assembly	10

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

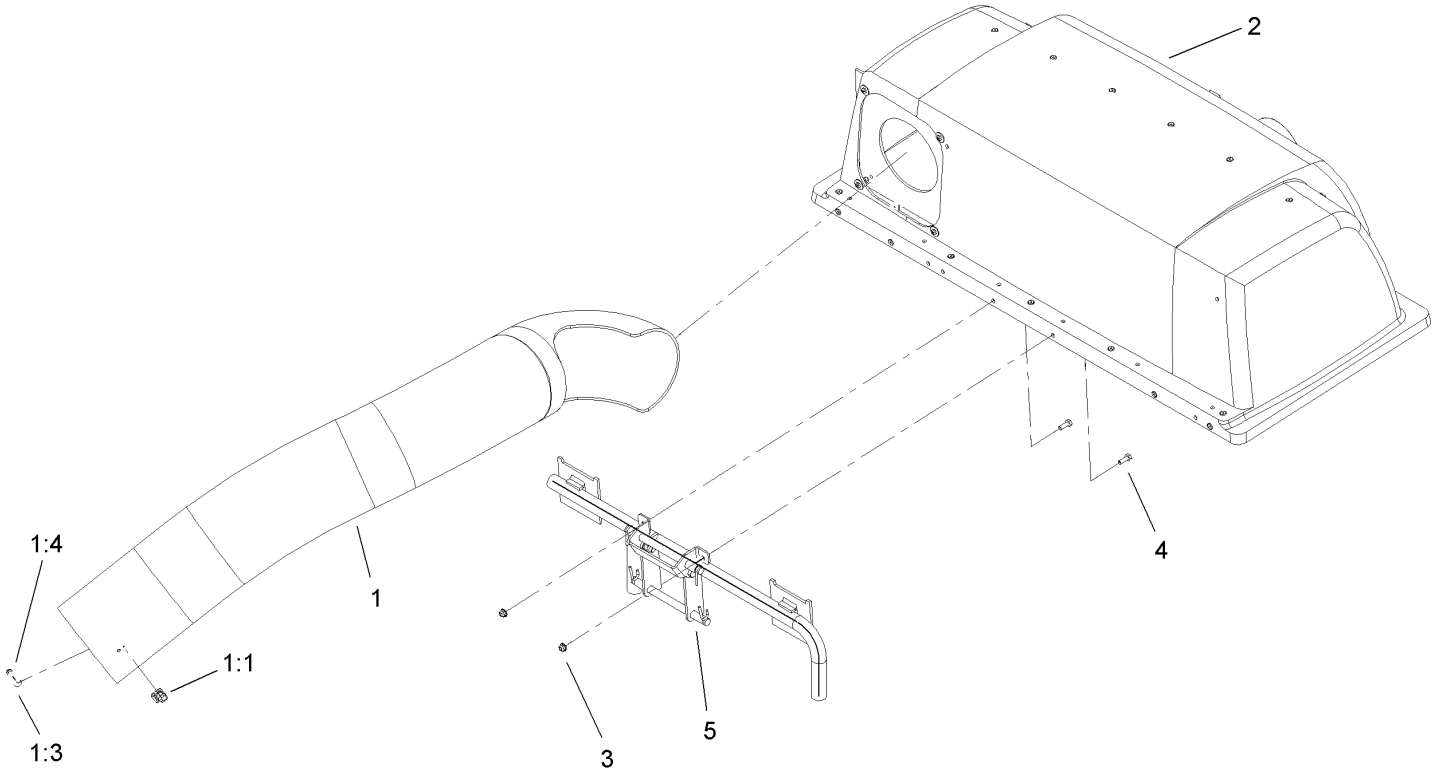


Bagger Hood and Upper Tube Assembly

Ref	Part No.	Qty.	Description
1	109-1939	1	Upper Tube ASM
1:1	103-4081	2	Latch-Keeper
1:3	3290-500	2	Screw-PPH
1:4	3256-14	2	Washer-Flat
2	109-6796	1	Hood ASM
3	104-7201	2	Nut-HF
4	321-4	2	Screw-HH
5	109-6771	1	Bagger Mount ASM

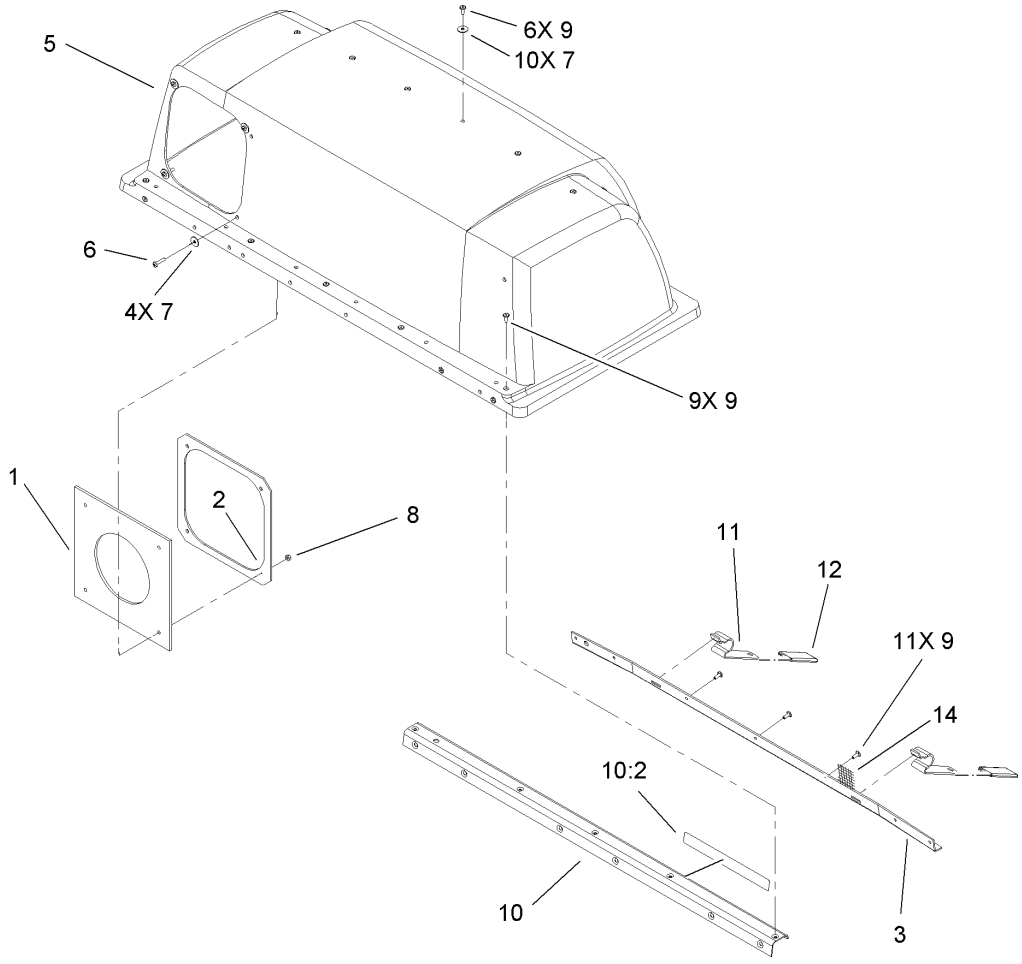


Hood Assembly No. 109-6796

Ref	Part No.	Qty.	Description
1	1-653561	1	Seal-Chute
2	1-653598-03	1	Clamp-Seal
3	92-1736-03	1	Support-Screen
5	105-9100	1	Top-Bagger
6	3250-27	4	Screw-PPH
7	3256-61	14	Washer-Flat
8	3296-2	4	Nut-Lock
9	114439	26	Rivet-Pop
10	109-6861	1	Stiffener And Decal
10:2	109-6809	1	Decal-Caution Bagger
11	115481-03	2	Latch-Bagger, Top
12	115880	2	Grip
14	114967	1	Screen-Bagger

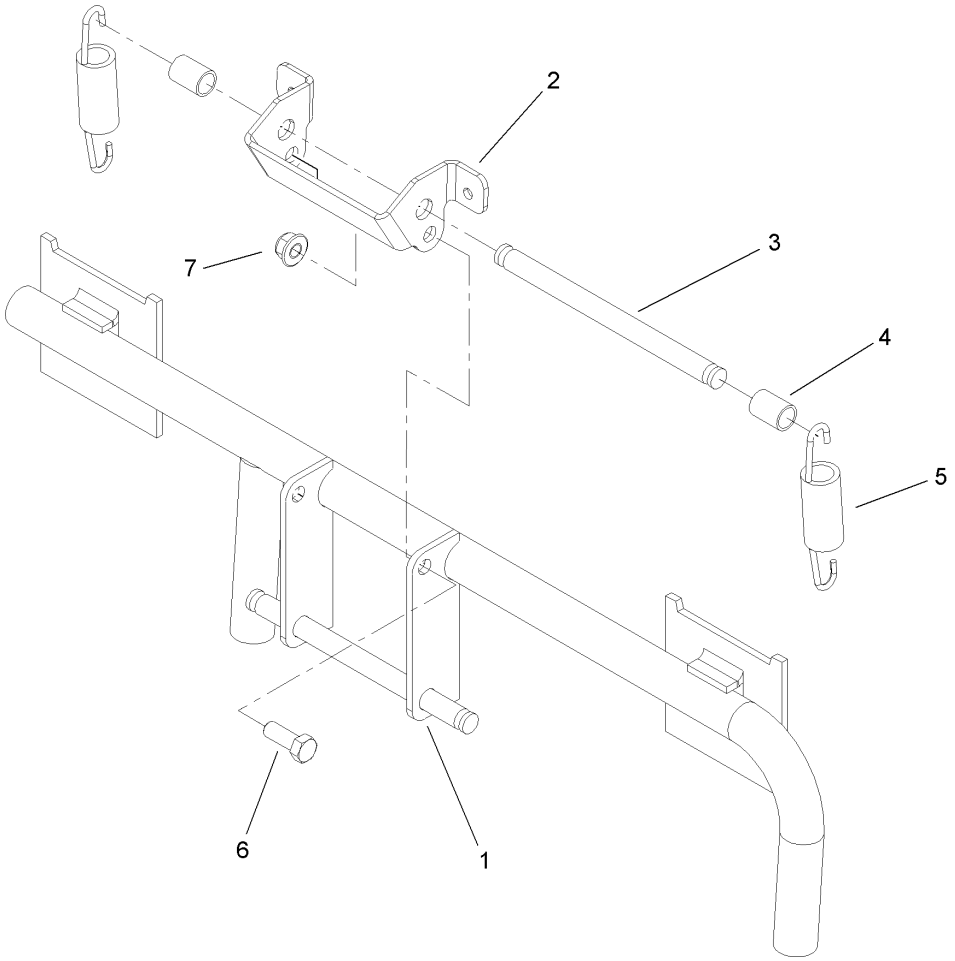


Bagger Mount Assembly No. 109-6771

Ref	Part No.	Qty.	Description
1	114955-03	1	Frame ASM
2	109-1077-03	1	Hinge-Bagger Top
3	114960	1	Pin-Spring
4	9790944	2	Spacer
5	114962	2	Spring-Extension
6	323-6	2	Screw-HH
7	104-8301	2	Nut-Flange, NI

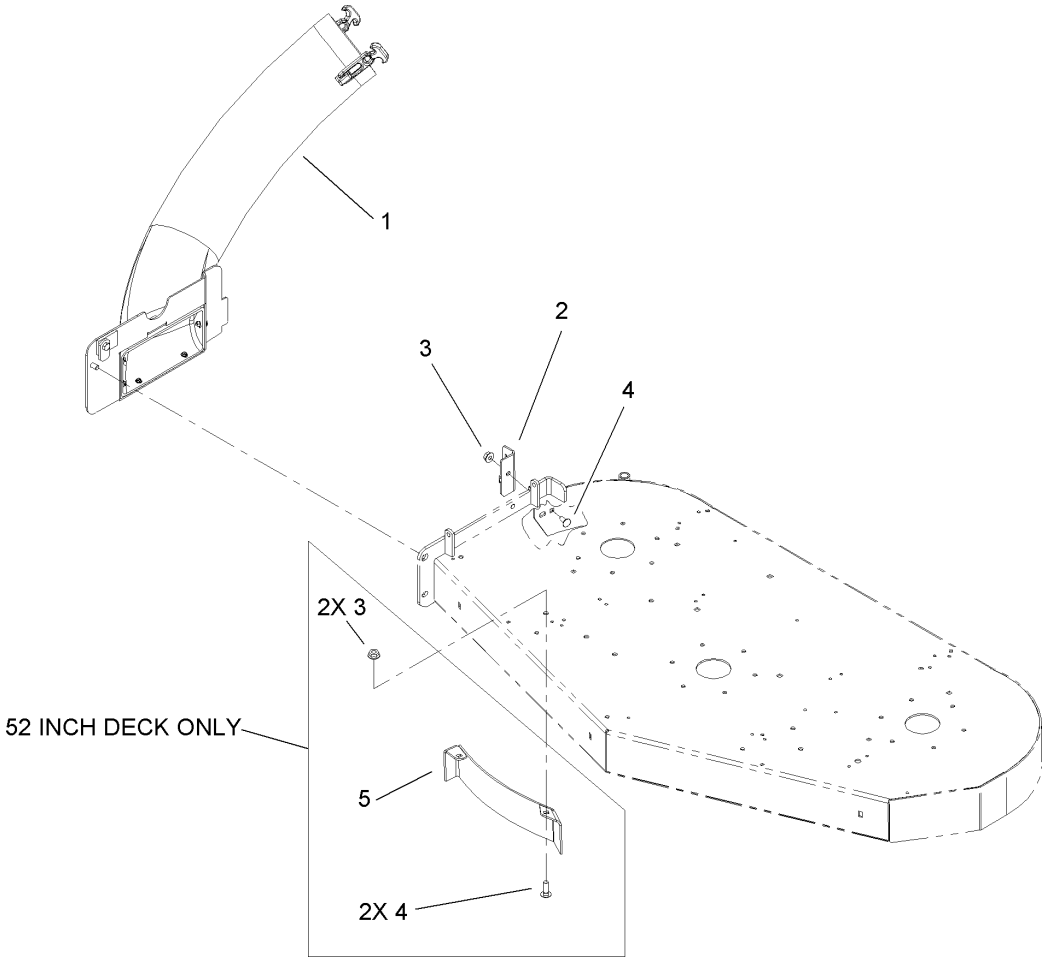


Baffle and Boot Mount Assembly

Ref	Part No.	Qty.	Description
1	109-6769	1	Tube And Strap ASM
2	109-6091-03	1	Bracket-Boot Mount, 48 Inch
2	109-5387-03	1	Bracket-Boot Mount, 52 Inch
3	104-8300	3	Nut-Flange, NI
4	3230-23	3	Screw-CARR
5	109-5383-03	1	Baffle-Discharge, 52 Inch

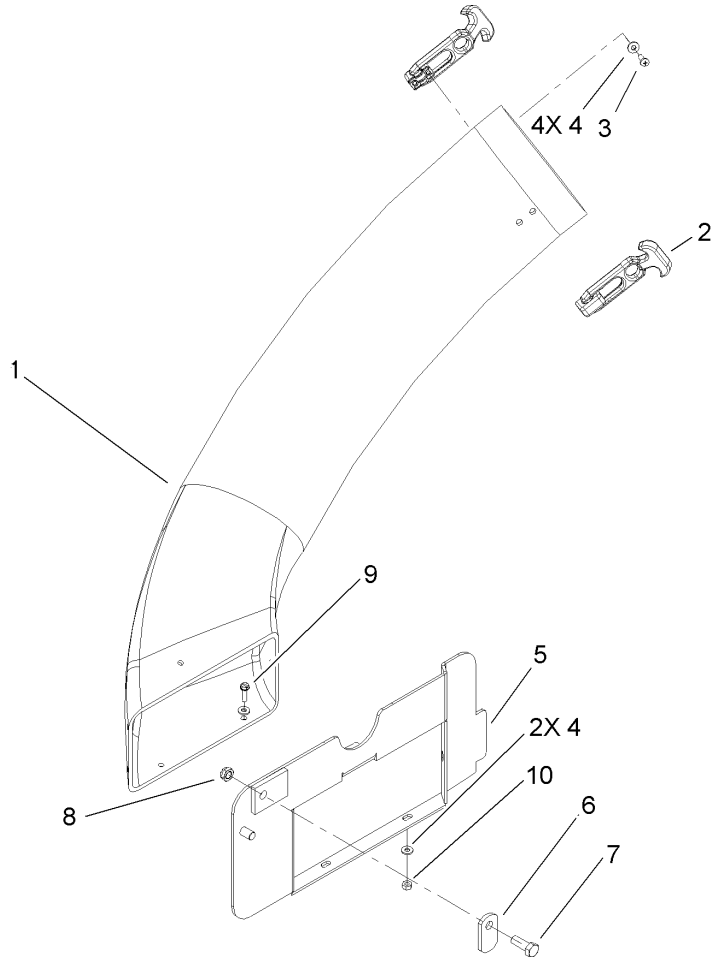


Lower Tube Assembly No. 109-6769

Ref	Part No.	Qty.	Description
1	109-5381	1	Boot-Lower
2	103-4080	2	Latch-Rubber
3	3290-500	4	Screw-PPH
4	3256-14	16	Washer-Flat
5	109-6089-03	1	Boot Frame ASM
6	1-353054	1	Latch-Catcher, Grass
7	323-6	1	Screw-HH
8	3296-59	1	Nut-Lock, NI
9	32105-13	6	Screw-SHH
10	3296-2	6	Nut-Lock

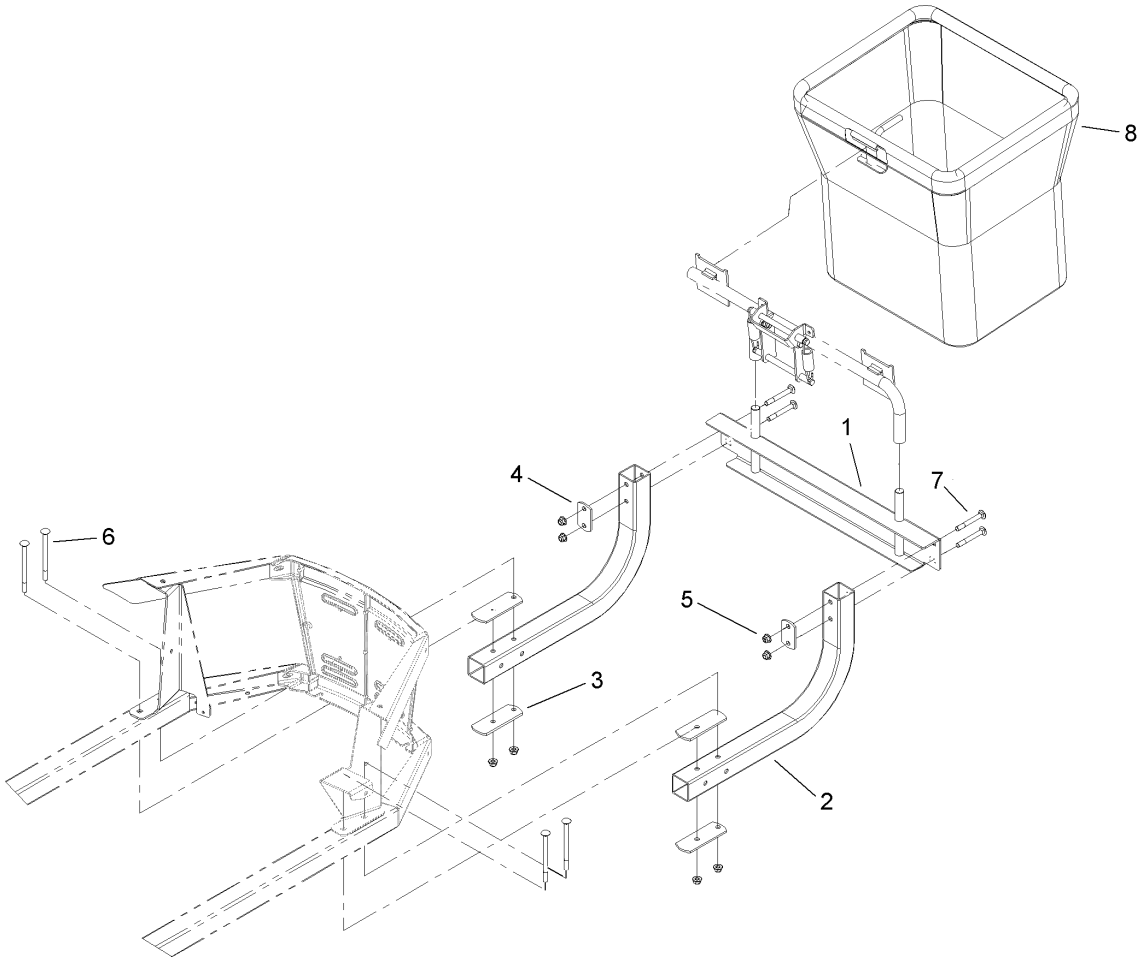


Bag Frame Assembly

Ref	Part No.	Qty.	Description
1	109-6094-03	1	Bagger Hitch ASM
2	109-5379-03	2	Tube-Hitch, Bagger
3	109-6092-03	4	Plate-Stiffener
4	109-6093-03	2	Plate-Stiffener
5	104-8301	8	Nut-Flange, NI
6	109-6795	4	Bolt-Carriage
7	3231-10	4	Screw-CARR
8	112-3994	2	Bag ASM

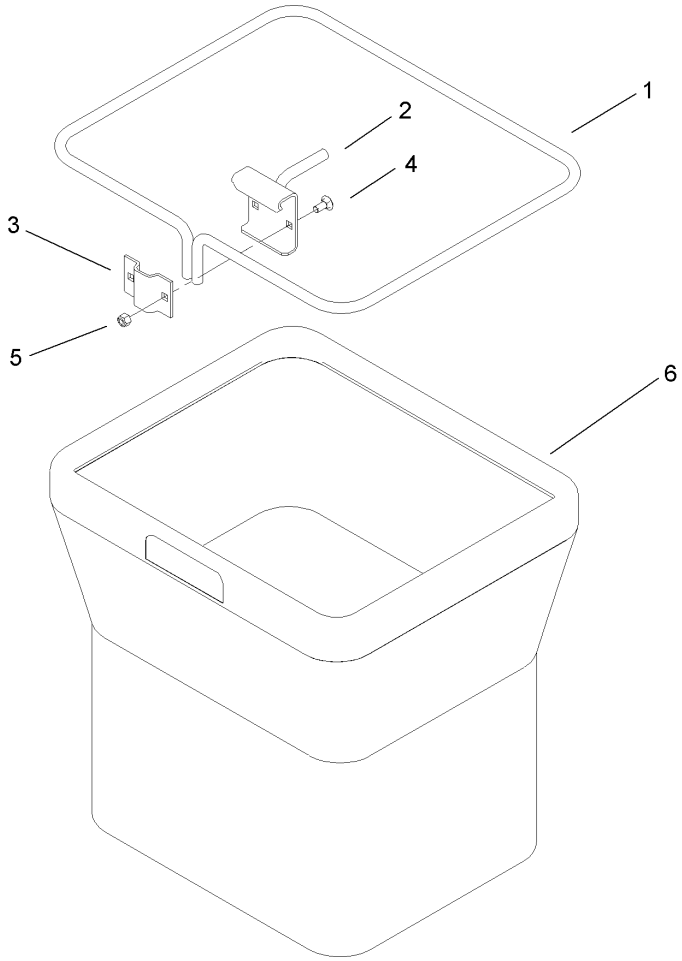

Bag Assembly No. 112-3994

Ref	Part No.	Qty.	Description
1	114972-03	1	Frame-Bag
2	112-4012-03	1	Hanger ASM
3	114974-03	1	Clamp
4	3230-1	2	Bolt-CARR
5	3296-29	2	Nut-Lock, NI
6	110-6674	1	Bag

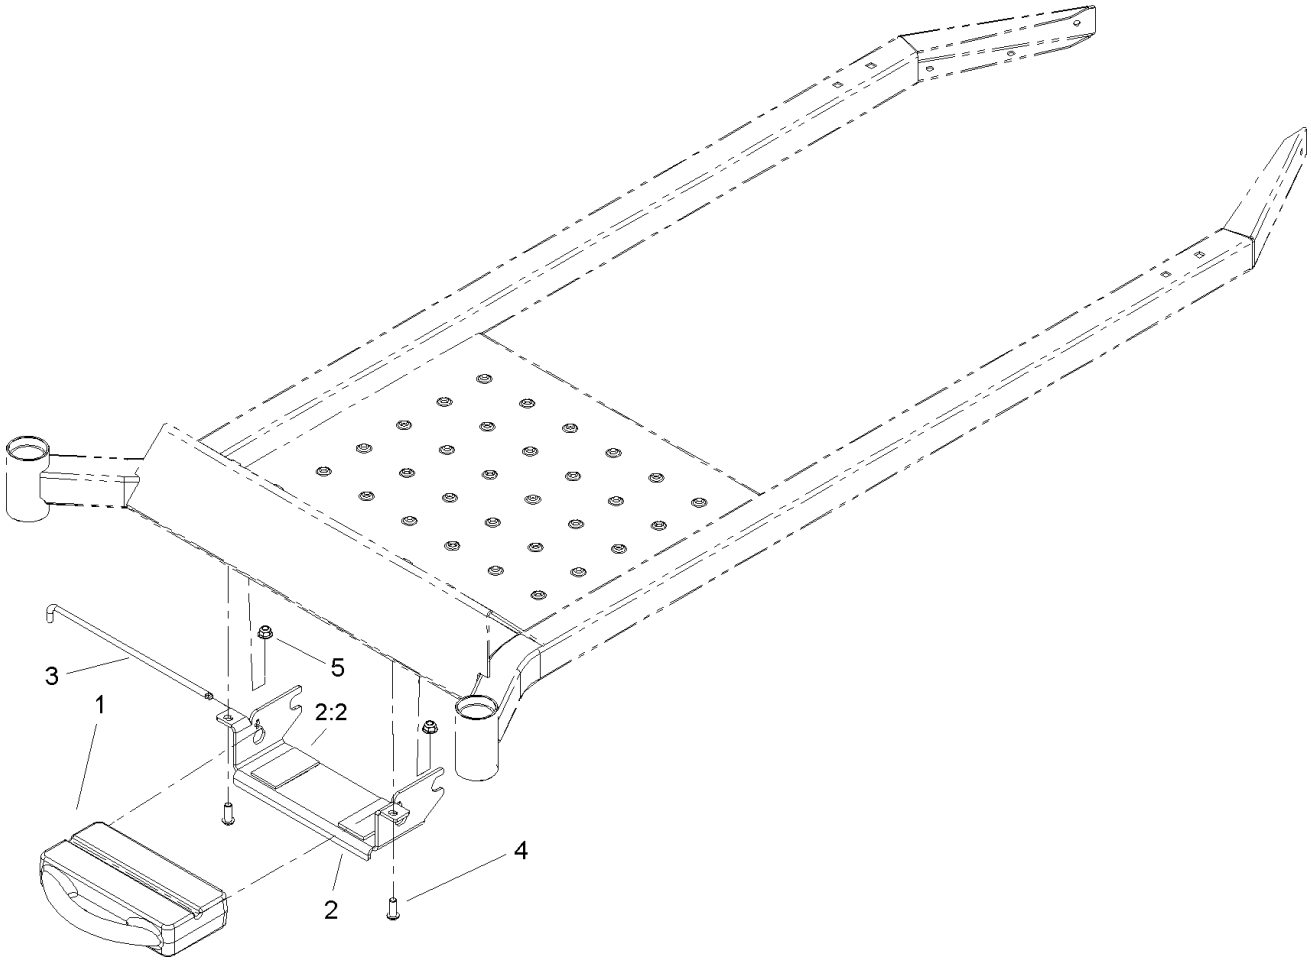

Bagger Weight Assembly

Ref	Part No.	Qty.	Description
1	109-6494-03	1	Weight-Bagger, 25 Lb
2	109-6767	1	Bracket And Bumper ASM
2:2	100-6547	2	Cushion-Rubber
3	109-6107	1	Rod-Weight Lock
4	3274-94	2	Screw-HSBH
5	104-8301	2	Nut-Flange, NI

NOTES


TORO®