FORM NO. 3314–971


TORO®

MODEL NO. 03502–20001 & UP

PARTS CATALOG

REELMASTER® 5100D
TRACTION UNIT WITH ACCESSORIES

ONLY COPY
DO NOT REMOVE
Tech. Publications

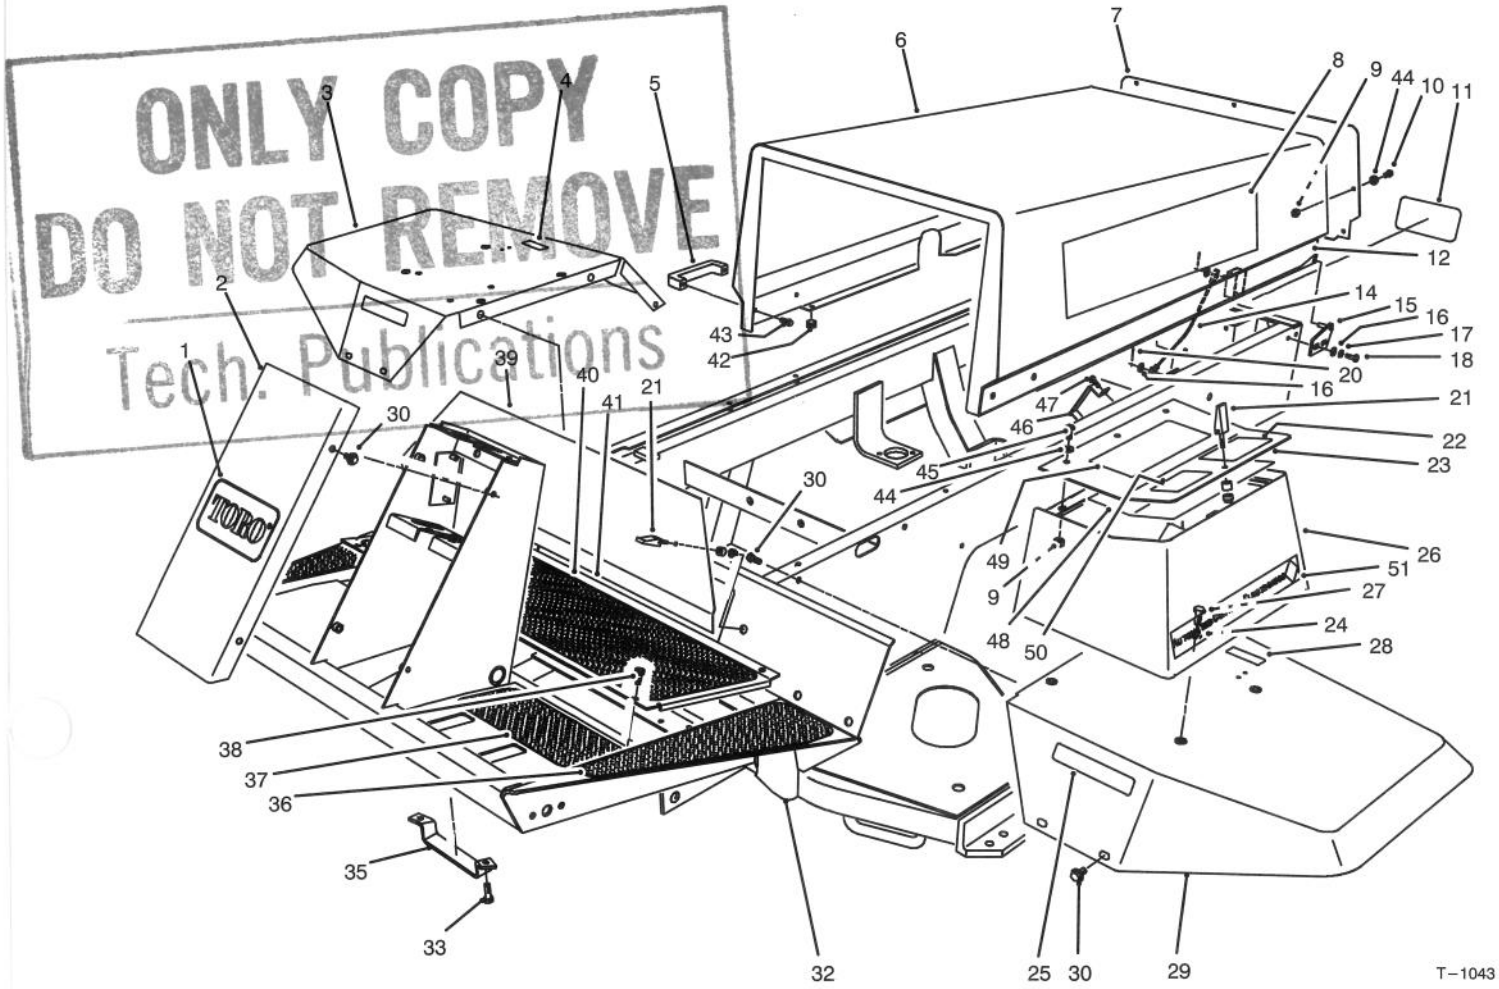


FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	62–5550	Decal – TORO	1
2	75–1420	Cover – Steering Tower	1
3	75–3840	Fender – R.H.	1
‡4	85–4730	Decal – Hydraulic Oil (English)	1
5	65–5100	Handle	2
6	14–0959	Hood	1
7	75–2820	Grill – Hood	1
8	85–4410	Decal – Reelmaster® 5100D	2
9	3296–42	Nut – Lock	10
10	321–39	Screw – Cap Hex. Hd.	7
11	62–7400	Decal – TORO	1
12	75–0670	Decal – Hood Trim L.H.	1
*	75–0680	Decal – Hood Trim R.H.	1
14	75–0570	Cable – Hood	1
15	63–6900	Hinge – Hood L.H.	1
*	63–6890	Hinge – Hood R.H.	1

Ref. No.	Part No.	Description	No. Used
16	3256–23	Washer – Flat	6
17	3253–4	Washer – Lock	4
18	322–5	Screw – Cap Hex. Hd.	4
20	3272–4	Pin – Cotter	2
21	74–5950	Swell Latch Assembly	3
‡22	75–1280	Decal – Warning (English)	1
23	75–6260	Cover – Tool Box	1
24	3256–3	Washer – Flat	4
‡25	75–5190	Decal – No Riders (English)	2
26	75–5810	Box – Tool	1
27	322–3	Screw – Cap Hex. Hd.	4
‡28	52–1320	Decal – Fuel (English)	1
29	75–3860	Fender – L.H.	1
30	3234–14	Screw – Hex. Washer Hd.	14
32	85–4600	Frame Assembly	1
33	322–4	Screw – Cap Hex. Hd.	2
35	75–2860	Bracket – Hose	1

‡For different language versions of this part, see International Decal Cross Reference.
*Not Illustrated

© The TORO Company –1992

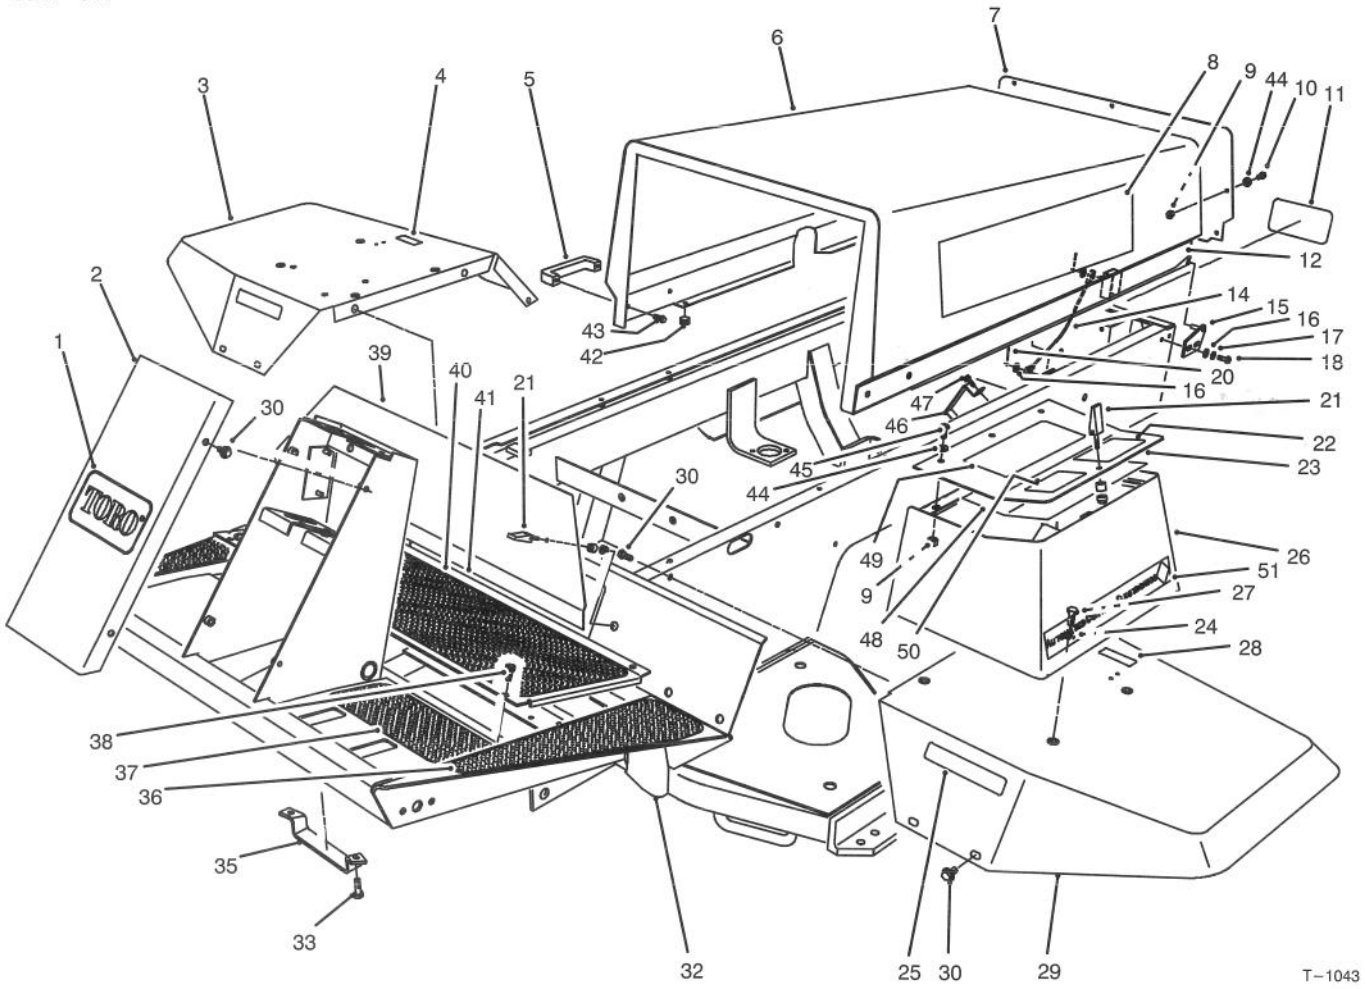


FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
36	75–0650	Tread – Footrest L.H.	1
*	75–0640	Tread – Footrest R.H.	1
37	75–0620	Tread – Foot L.H.	1
*	75–0610	Tread – Foot R.H.	1
38	75–6840	Knob – Knurled	4
39	75–1390	Panel – Access	1
40	75–0630	Tread – Foot Center	1
41	75–1410	Panel – Floor	1
42	237–141	Bumper	2
43	46–8091	Screw – Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
44	3256–1	Washer – Flat	10
45	3258–166	Screw – Phillip Hd.	3
46	75–6280	Bracket – Hose	1
47	49–2040	Screw – Hex. Washer Hd.	2
‡48	85–4740	Decal – Instructions (English)	1
‡49	75–7540	Decal – Warning (English)	1
‡50	88–6700	Decal – ANSI (English) (For Reference Only)	1
51	88–0430	Decal – A.C.E.	2

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

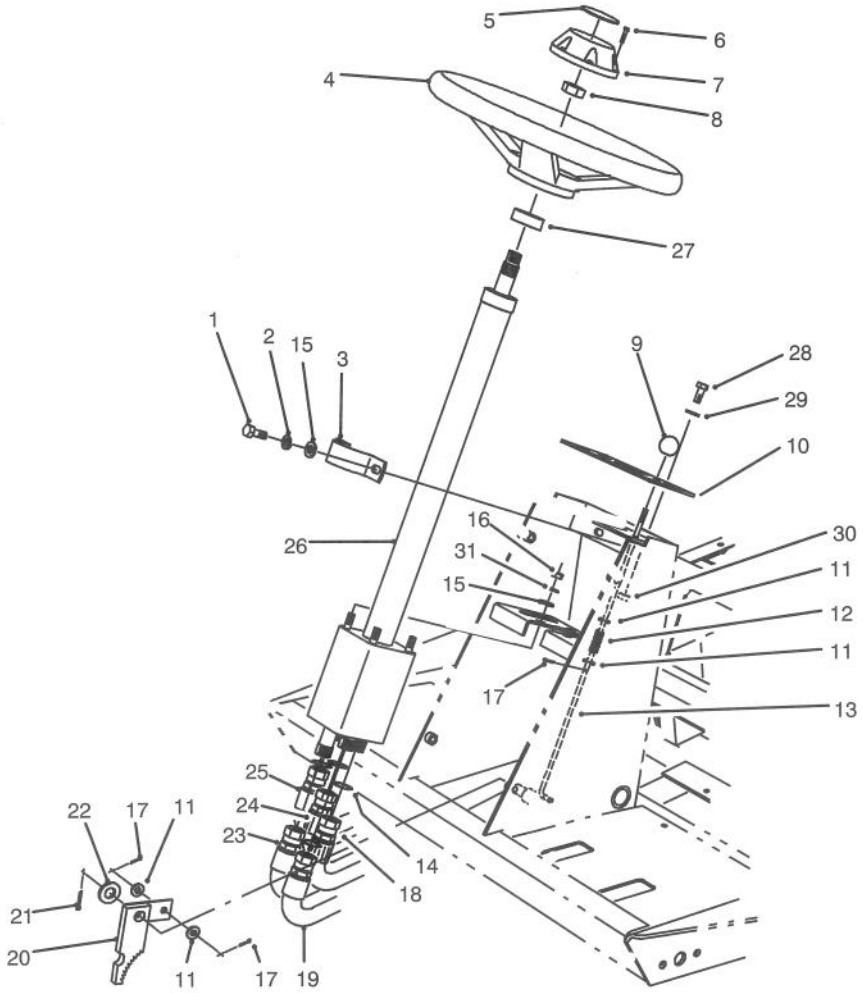


T–1044

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–3	Screw – Cap Hex. Hd.	2
2	3253–4	Washer – Lock	2
3	75–2810	Clamp – Steering Valve	1
4	75–0560	Steering Wheel Assembly (Incl. Ref. #6–8)	1
5	68–5370	Decal – TORO	1
6	32144–21	Screw	1
7	68–5140	Cap – Steering Wheel	1
8	3220–6	Nut – Steering Wheel	1
9	233–17	Knob – Parking Brake	1
10	75–0580	Panel – Tower	1
11	3256–22	Washer – Flat	4
12	3–3251	Spring – Compression	1
13	75–1490	Rod – Parking Brake	1
14	237–22	Seal – O–Ring	5
15	3256–23	Washer – Flat	6
16	3296–20	Nut – Lock	4

Ref. No.	Part No.	Description	No. Used
17	3272–5	Pin – Cotter	3
18	75–6230	Hose – Hydraulic RT	1
19	75–6240	Hose – Hydraulic IN	1
20	63–7900	Rack – Parking Brake	1
21	3272–10	Pin – Cotter	1
22	3256–26	Washer – Flat	1
23	75–5940	Hose – Hydraulic AUX	1
24	75–6220	Hose – Hydraulic LT	1
25	75–6250	Hose – Hydraulic OUT	1
26	75–0600	Steering Valve Assembly (Incl. Ref. #14)	1
27	21–9260	Seal – Shaft	1
28	3258–166	Screw – Phillip Hd.	2
29	3256–1	Washer – Flat	2
30	3296–42	Nut – Lock	2
31	3255–8	Washer – Lock ETLW	1
*	3290–378	Tie – Cable	3

*Not Illustrated

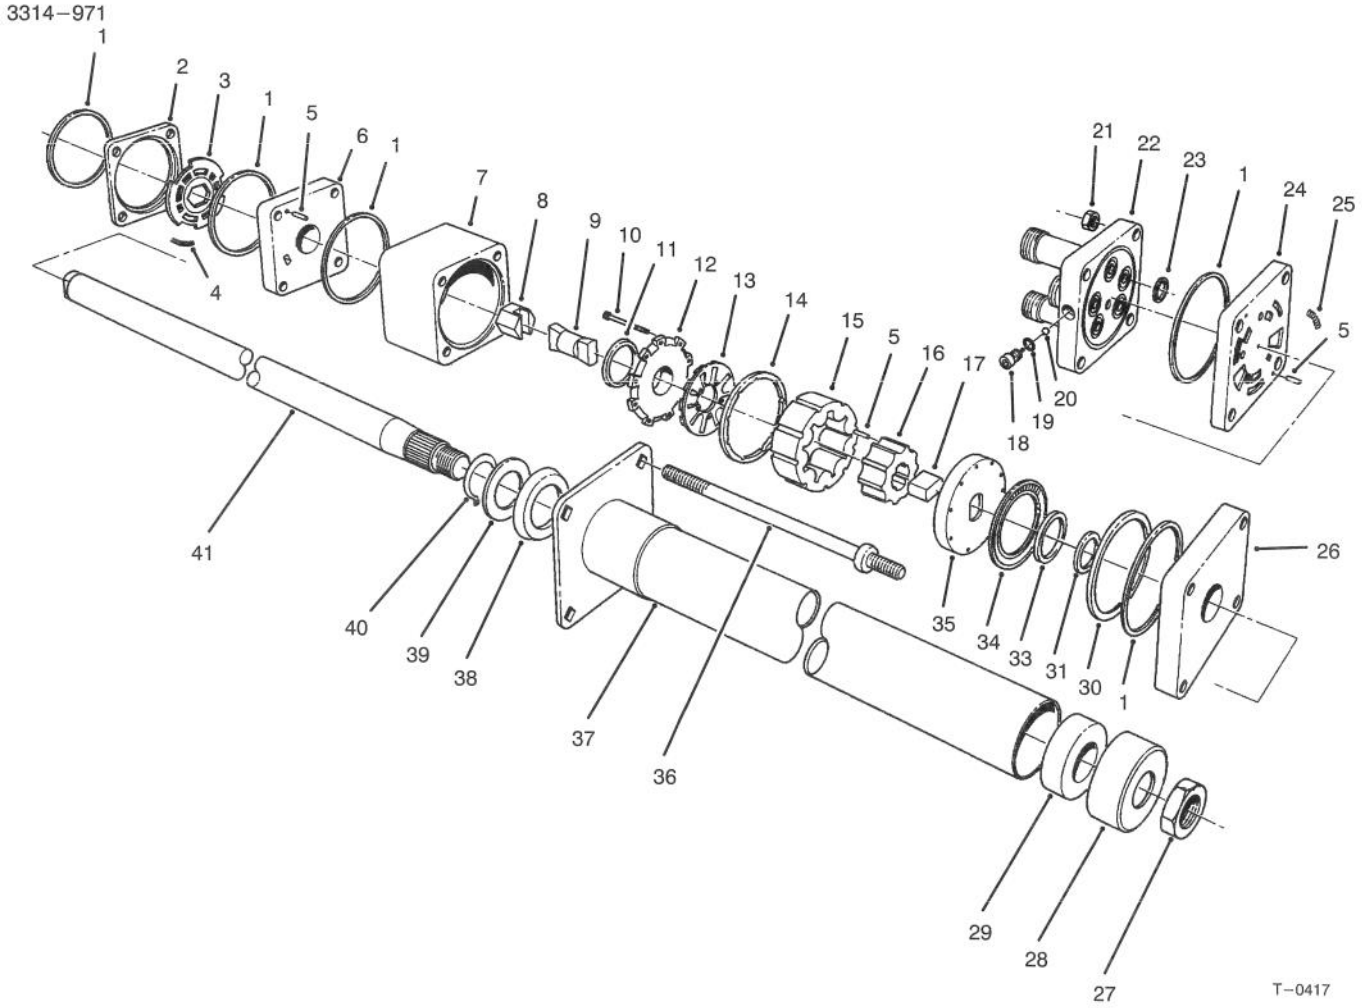


STEERING VALVE ASSEMBLY No. 75–0600

Ref. No.	Part No.	Description	No. Used
1		Ring–Seal	5
2		Ring–Valve	1
3		Plate–Valve	1
4		Spring	3
5		Pin–Alignment	9
6		Manifold–Isolation	1
7		Ring–Metering	1
8		Hex Drive Assy.	1
9		Link–Drive	1
10		Screw–Hex Socket Hd.	11
11		Seal–Commutator	1
12		Cover–Commutator	1
13		Commutator	1
14		Ring–Commutator	1
15		Stator	1
16		Rotor	1
17		Spacer–Drive Link	1
18		Plug	1
19		O–Ring	1
20		Ball	1
21		Nut–Hex	4
22		Cover–Port	1
23		O–Ring	5
24		Manifold–Port	1
25		Spring	3

Ref. No.	Part No.	Description	No. Used
26		Plate–Cover, Upper	1
27	3220–6	Nut	1
28	66–9770	Seal	1
29	66–9780	Bushing	1
30		Spacer–Bearing, Thrust	1
31		Spacer–Seal	1
33		Seal–Face	1
34		Bearing–Thrust	1
35		Plate–Drive	1
36	66–9850	Bolt–Special	4
37	66–9860	Upper Cover & Jacket	1
38	66–9870	Plate–Retaining	1
39	66–9880	Washer–Retaining Plate	1
40	66–9890	Ring–Retaining	1
41	66–9900	Shaft–Input	1
*	66–9970	Spring Kit (Incl. Ref. #4 & 25)	1
*	66–9980	Seal–Kit (Incl. Ref. #1, 11, 19, 23 & 33)	1
*	66–9990	Needle Roller Kit (Incl. Ref. #5)	1
*	75–0600	Valve–Power Steering (Incl. Ref. #1–26 & 30–36)	1

*Not Illustrated

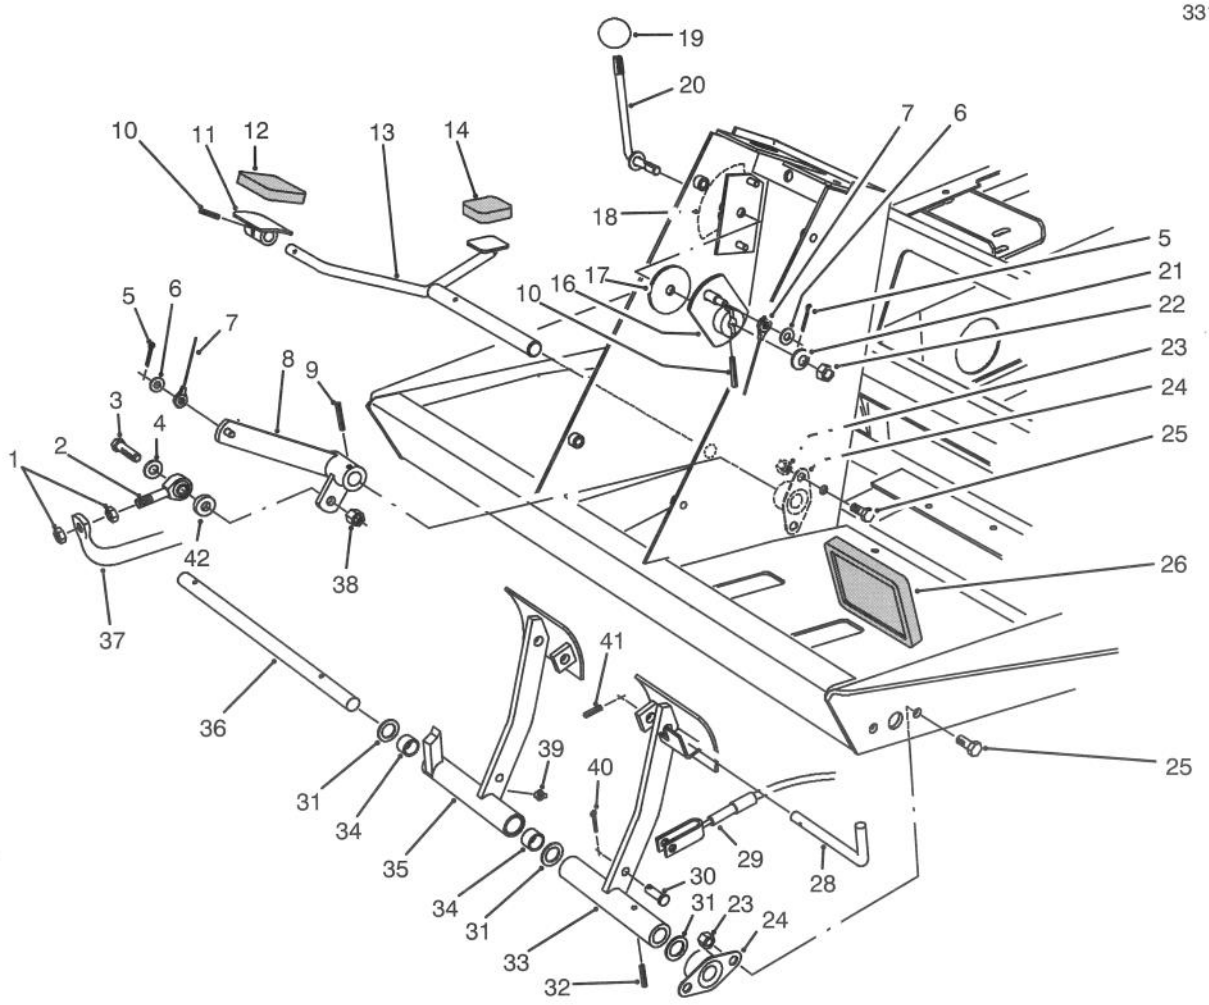


TRACTION & BRAKE PEDALS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3220–3	Nut – Jam	2
2	2411–36	Bearing – Rod End	1
3	323–9	Screw – Cap Hex. Hd.	1
4	3256–24	Washer – Flat	1
5	3272–2	Pin – Cotter	2
6	3256–22	Washer – Flat	2
7	75–6580	Cable – Pedal	1
8	75–3270	Lever – Traction Pivot	1
9	32121–6	Pin – Roll	1
10	32121–45	Pin – Roll	2
11	49–6440	Plate – Traction Pedal	1
12	74–9100	Pad – Forward	1
13	75–2970	Pedal – Traction	1
14	74–9110	Pad – Reverse	1
16	75–6510	Lever – Bracket	1
17	75–6550	Disc – Friction	1
‡18	75–6710	Decal – Fast/Slow (English)	1
19	233–42	Knob	1
20	75–6490	Lever – Pedal Stop	1
21	3290–461	Washer – Belleville	1
22	3296–59	Nut – Lock	1

Ref. No.	Part No.	Description	No. Used
23	3296–29	Nut – Lock	8
24	256–236	Bearing – Flange	4
25	322–3	Screw – Cap Hex. Hd.	8
26	7–3900	Pad – Brake	2
28	63–7880	Pin – Brake Latch	1
29	63–7733	Cable – Brake L.H.	1
*	63–7732	Cable – Brake R.H.	1
30	283–58	Pin – Clevis	4
31	3256–69	Washer – Thrust	3
32	32121–16	Pin – Roll	1
33	75–1440	Pedal – Brake L.H.	1
34	256–42	Bushing – Sleeve	2
35	75–1430	Brake Pedal Assembly R.H. (Incl. Ref. #34 & 39)	1
36	75–1470	Shaft – Brake Pedal	1
37	75–2170	Tube – Pump Control	1
38	3296–39	Nut – Lock	1
39	302–5	Fitting – Grease	1
40	3272–10	Pin – Cotter	4
41	32121–50	Pin – Roll	1
42	5–0652	Spacer	1

*Not Illustrated
‡For different language versions of this part, see International Decal Cross Reference.

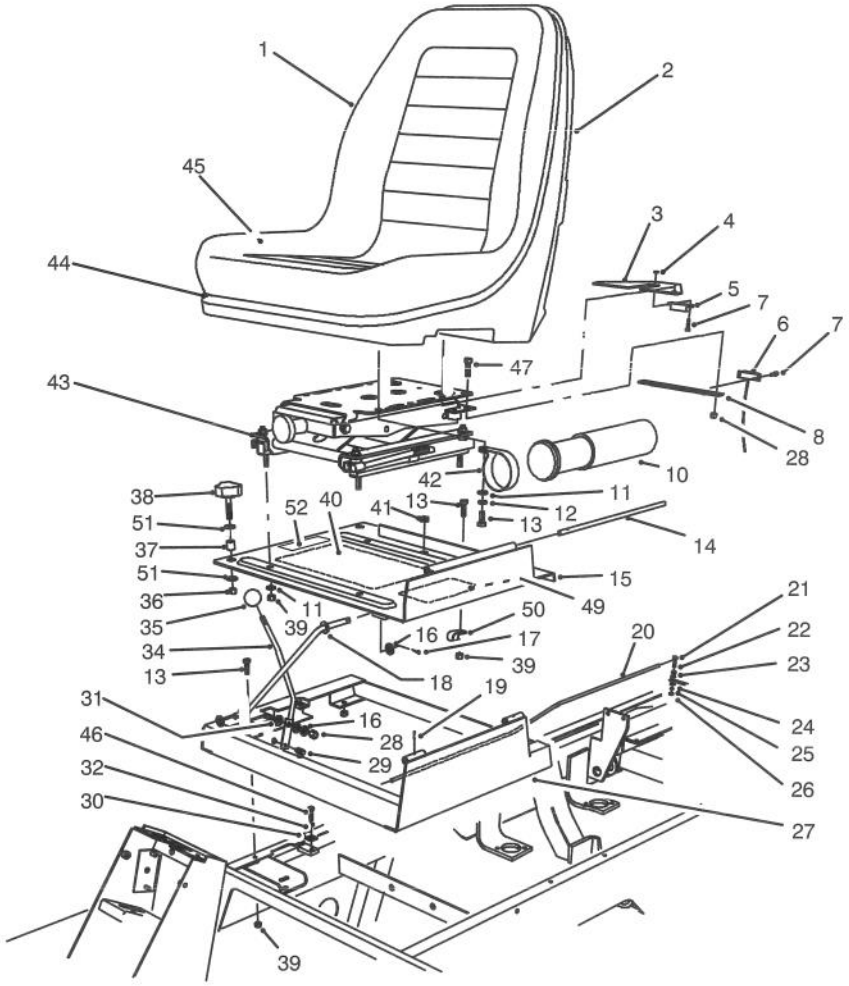


T–1046

SEAT & THROTTLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66–5400	Seat Assembly (Incl. Ref. #2 & 44–45)	1
2	67–9560	Shell – Seat	1
3	75–4370	Bracket – Switch (Seat)	1
4	3296–54	Nut – Lock	4
5	75–6330	Magnet – Switch	1
6	75–6320	Sensor – Switch	1
7	3250–29	Screw – Cap Hex. Hd.	4
8	75–4360	Bracket – Switch	1
10	74–0720	Tube – Manual	1
11	3256–23	Washer – Flat	8
12	3253–4	Washer – Lock	4
13	322–3	Screw – Cap Hex. Hd.	9
14	75–3400	Shaft – Seat Pivot	1
15	75–3880	Plate – Seat	1
16	3256–24	Washer – Flat	3
17	3272–10	Pin – Cotter	2
18	75–3680	Rod – Seat	1
19	32121–38	Pin – Roll	1
20	75–1350	Cable – Throttle	1
21		Screw – Special	2
22		Sleeve – Connector	2
23		Washer – Spring	2

Ref. No.	Part No.	Description	No. Used
24		Washer – Flat	2
25		Washer – I.T.L.W.	2
26		Nut – Hex.	2
27	75–3300	Frame – Seat	1
28	3296–39	Nut – Lock	3
29	63–6760	Throttle Cable Swivel Assy. (Incl. Ref. #21–26)	2
30	3–6657	Clamp – Cable	1
31	66–2920	Washer – Friction	2
32	3253–3	Washer – Lock	1
34	75–3430	Rod – Throttle	1
35	233–42	Knob – Throttle	1
36	3296–59	Nut – Lock	2
37	75–5270	Spacer – Locking Knob	2
38	75–5260	Knob – Locking	2
39	3296–29	Nut – Lock	9
40	84–4610	Decal – Instruction	1
41	237–141	Grommet	1
42	2412–133	Clamp – R	2
43		Seat Suspension Assembly	1
44		Edging – Seat	1
45	67–9550	Kit – Seat Cushion	1
46	321–4	Screw – Cap Hex. Hd.	1

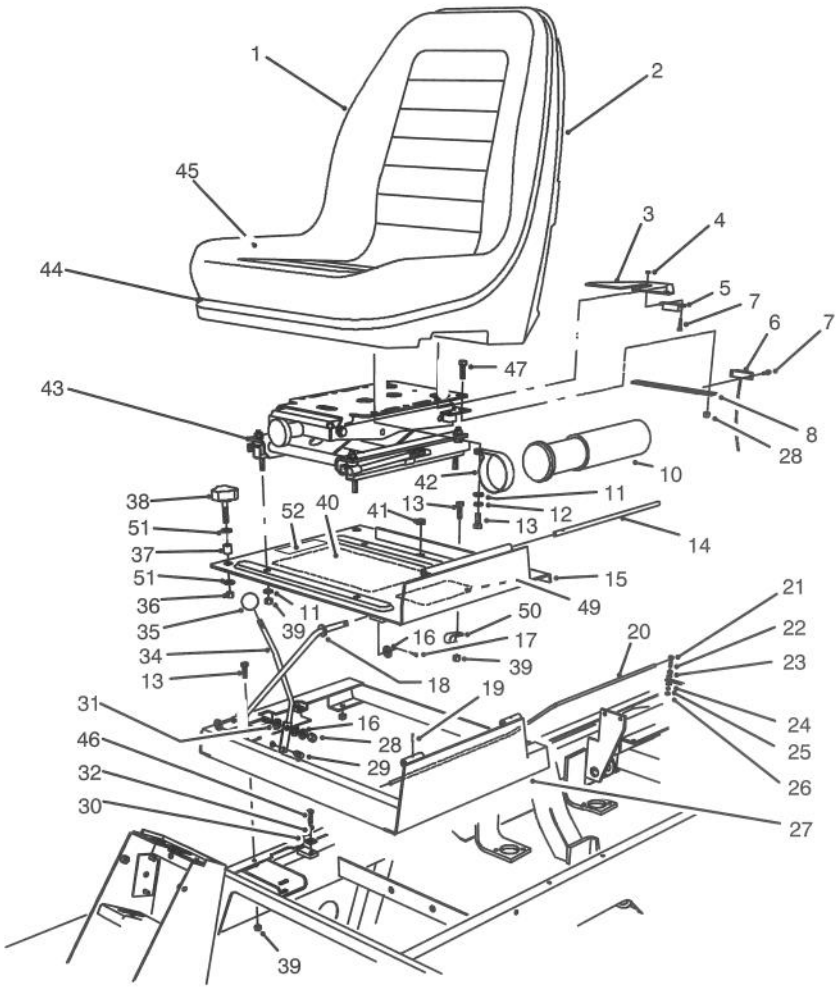


T–1046

SEAT & THROTTLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	323–4	Screw – Cap Hex. Hd.	2
‡49	85–4530	Decal – Danger (English)	1
50	2412–93	Clamp – R	1

Ref. No.	Part No.	Description	No. Used
51	52–2860	Washer – Flat	4
‡52	83–7440	Decal – Knob (English)	1


‡For different language versions of this part, see International Decal Cross Reference.

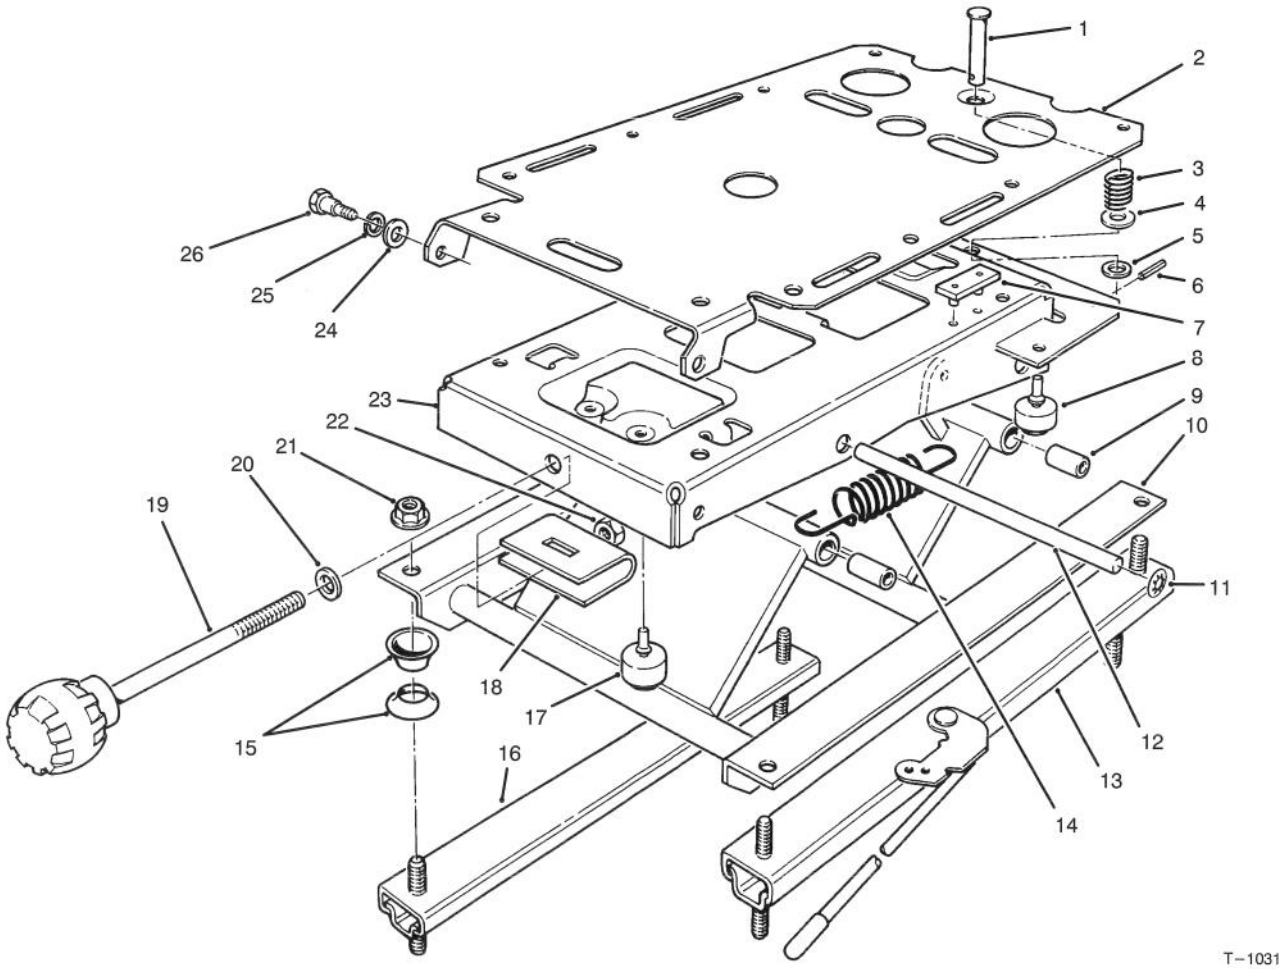

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	80–4860	Pin – Clevis	1
2	75–3580	Plate – Mounting, Seat	1
3	75–3530	Spring – Compression	1
4	3256–5	Washer – Flat	1
5	3256–24	Washer	1
6	75–3540	Pin – Roll	1
7	75–3550	Bumper – Seat	2
8	76–2940	Bumper – Rubber	2
9	76–1920	Bushing – Sleeve	4
10	66–8610	Weldment – Lower	1
11	66–8560	Nut – Push	4
12	76–1910	Shaft – Pivot	2
13	82–9060	Adjuster W/Handle	1

Ref. No.	Part No.	Description	No. Used
14	76–1940	Spring – Extension	2
15	66–9290	Spacer	6
16	66–8530	Adjuster	1
17	66–8520	Bumper – Down–stop	2
18	77–2870	Weldment – Hanger	1
19	76–1930	Knob – Tension Adjustment	1
20	3256–46	Washer – Flat	1
21	32128–26	Nut – Flange	4
22	3296–44	Nut – Lock	1
23	75–3480	Weldment – Upper	1
24	3256–26	Washer – Flat	2
25	3253–6	Washer – Lock	2
26	75–3510	Bolt – Shoulder	2

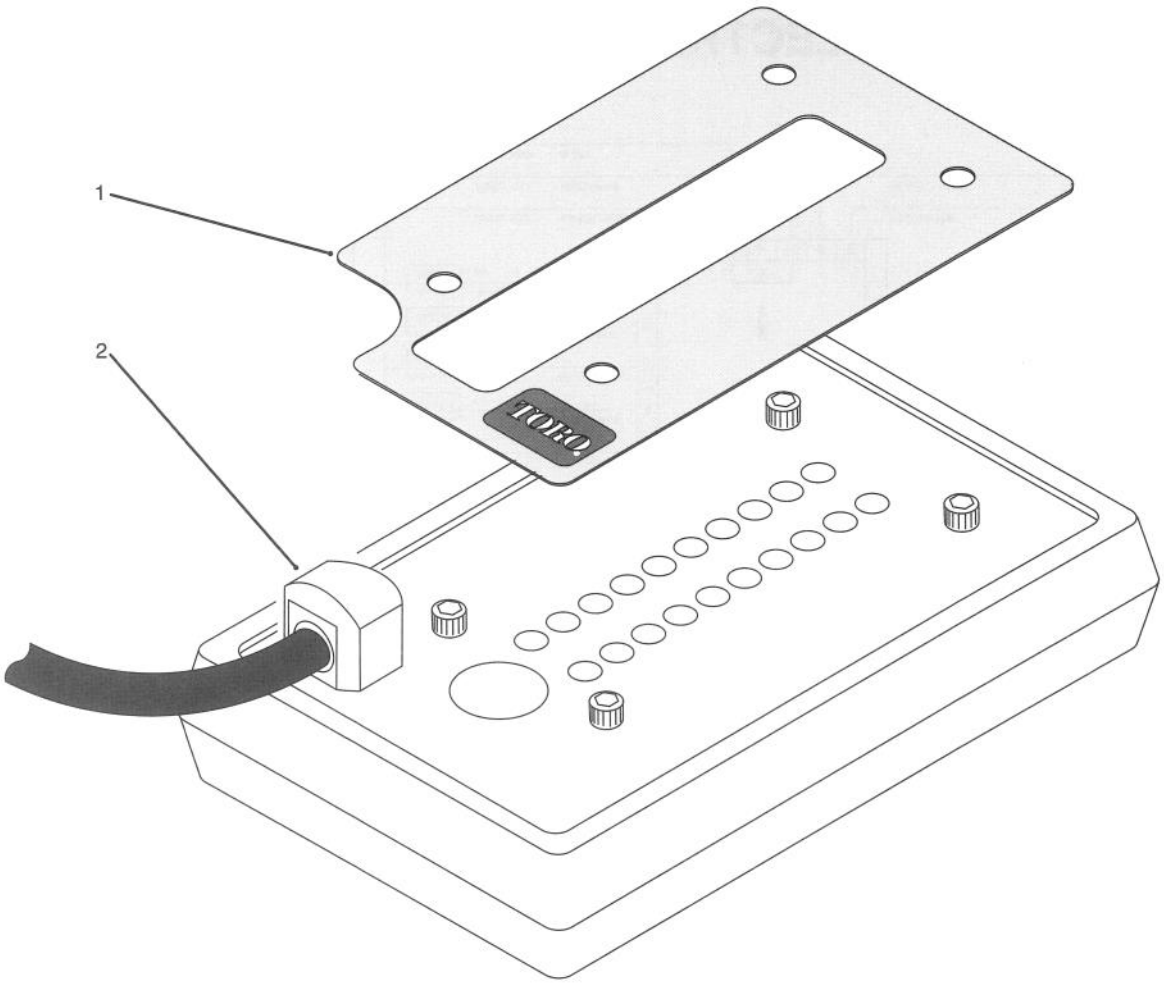


T–1458

DIAGNOSTIC–ACE DISPLAY ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	85–4760	Decal – Diagnostic–ACE RM 5100D V 1.0	1

Ref. No.	Part No.	Description	No. Used
2	85–4750	Display – Diagnostic–ACE	1

ELECTRICAL SCHEMATIC

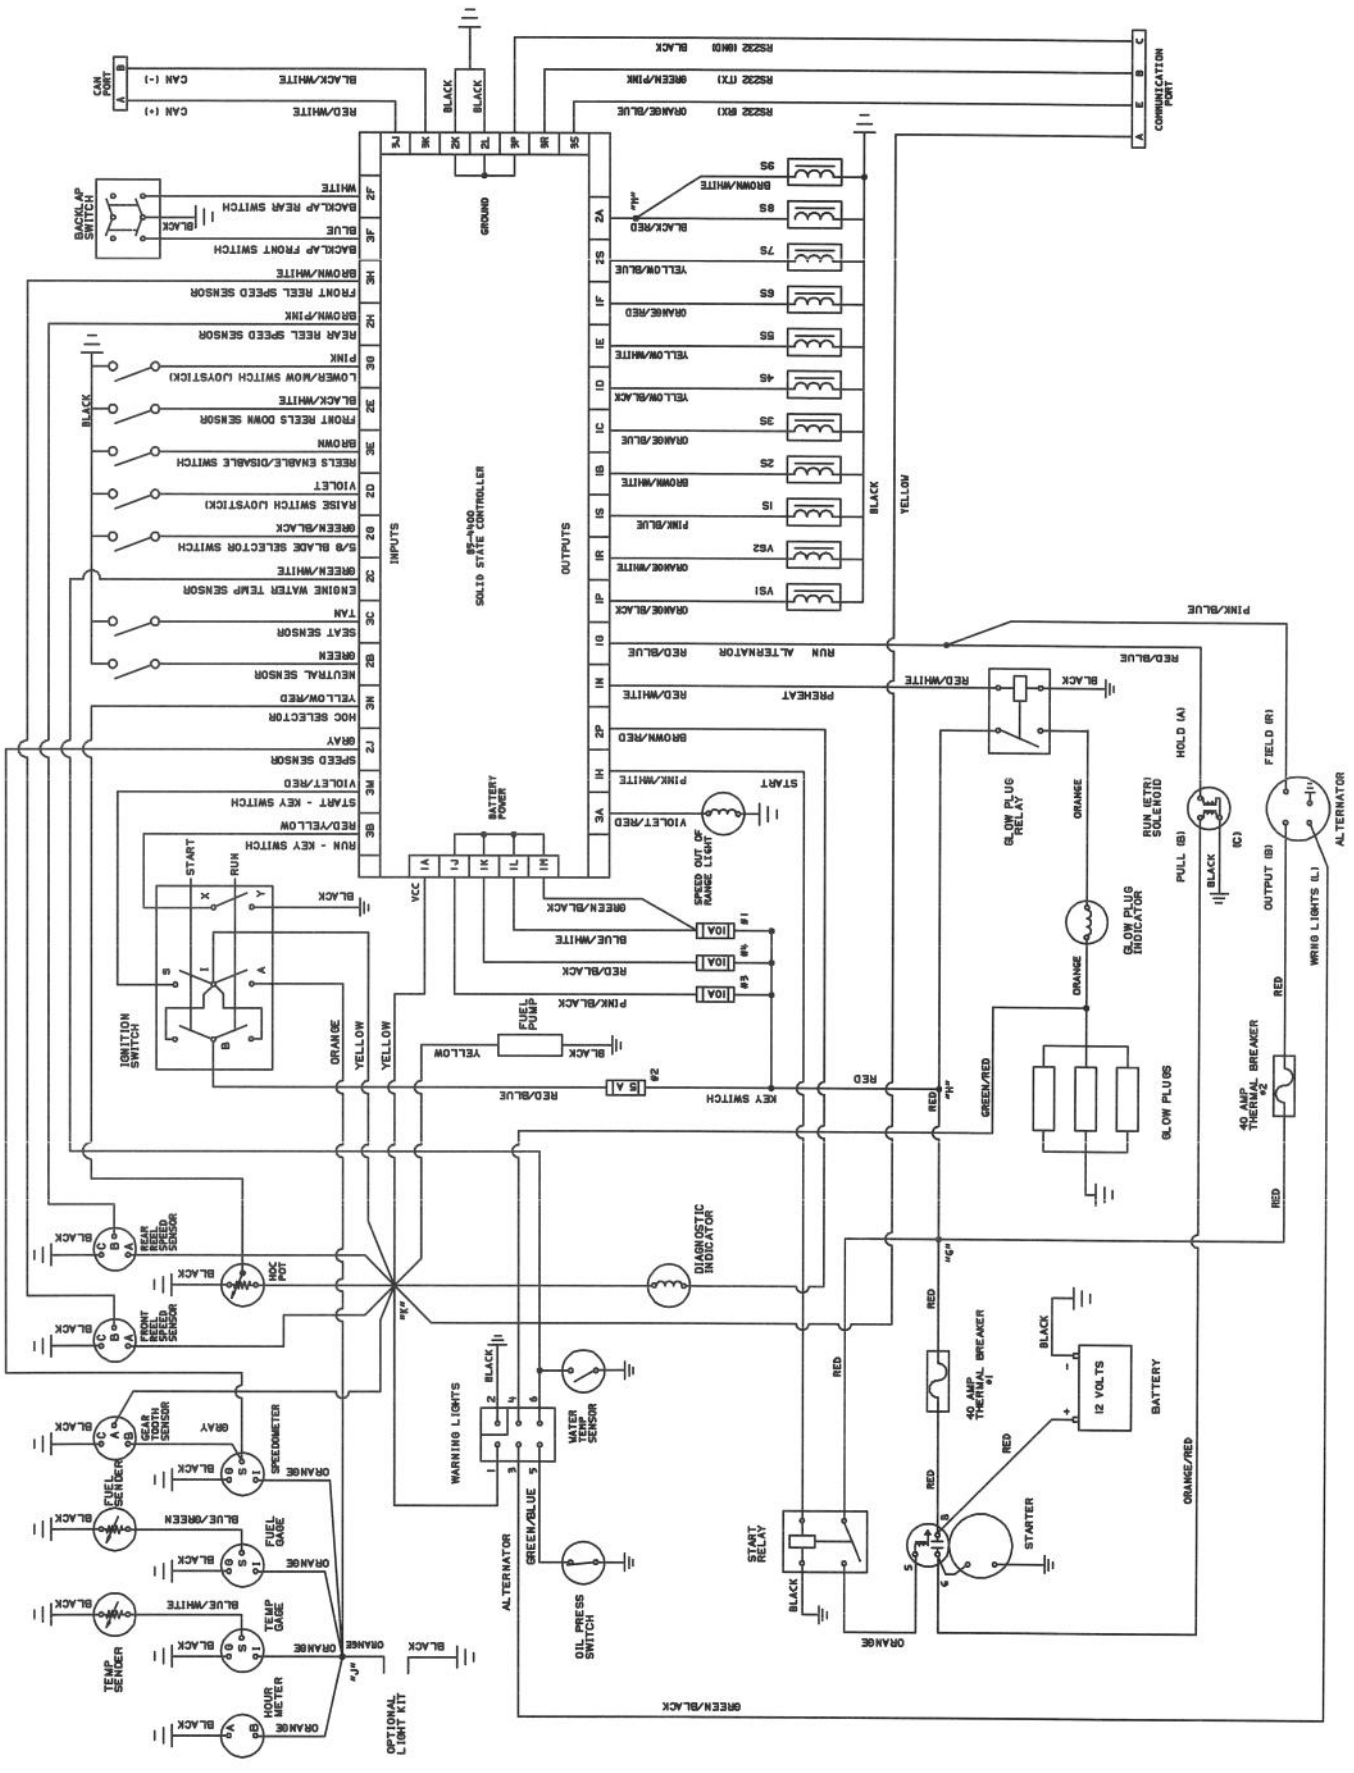

T–1143

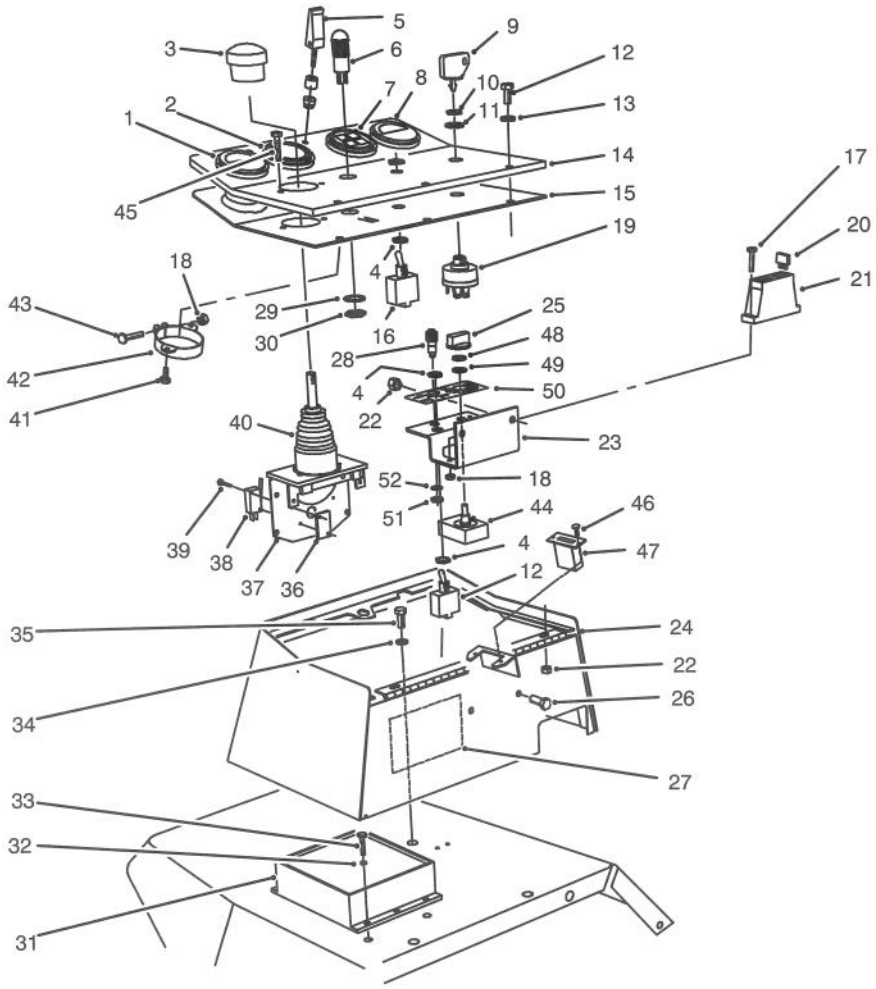


T–1501

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66–2940	Gauge – Fuel	1
2	85–4420	Gauge – Speedometer	1
3	3290–489	Knob – Lift Control	1
4	218–498	Nut – Hex.	4
5	249–48	Swell Latch Assembly	1
6	44–2210	Warning Light Assembly (Incl. Ref. #29 & 30)	1
*	218–533	Lens – Red	1
*	219–19	Bulb – #1815	1
7	66–2960	Cluster – Warning	1
8	63–7430	Gauge – Temperature	1
9	63–8360	Key – Ignition	1
10	218–446	Nut – Locking	1
11	218–447	Washer – E.T.L.W.	1
12	3258–166	Screw – Phillip Hd.	5
13	3256–1	Washer – Flat	5
14	75–0591	Panel – Control	1
15	75–6270	Cover – Control Box	1
16	75–1010	Toggle Switch Assembly (Incl. Ref. #4)	2
17	32105–13	Screw – Cap Hex. Hd.	2
18	3296–2	Nut – Lock	3
19	27–2360	Ignition Switch Assembly (Incl. Ref. #9–11)	1

Ref. No.	Part No.	Description	No. Used
†20	218–573	Fuse – 5A	10
*†	218–578	Fuse – 10A	1
*†	218–594	Fuse – 20A	1
†21	67–7160	Block – Fuse	1
22	3296–42	Nut – Lock	7
23	85–4450	Bracket – Fuse Block	1
24	75–5740	Box – Control	1
25	85–4480	Knob	1
26	321–39	Screw – Cap Hex. Hd.	2
‡27	85–4720	Decal – Instruction (English)	1
28	75–4710	Warning Light Harness (Incl. Ref. #51 & 52)	1
*	219–17	Bulb – Light	5
29	218–536	Washer – Lock	1
30	218–535	Nut – Lock	1
31	85–4400	Controller – Electronic Note: This part must be programmed by distributor before installation.	1
32	3253–3	Washer – Lock	3
33	321–4	Screw – Cap Hex. Hd.	3
34	3256–3	Washer – Flat	4
35	322–3	Screw – Cap Hex. Hd.	4
36	3290–354	Plate – Nut	2

*Not Illustrated †Included in main wire harness assembly.
‡For different language versions of this part, see International Decal Cross Reference.

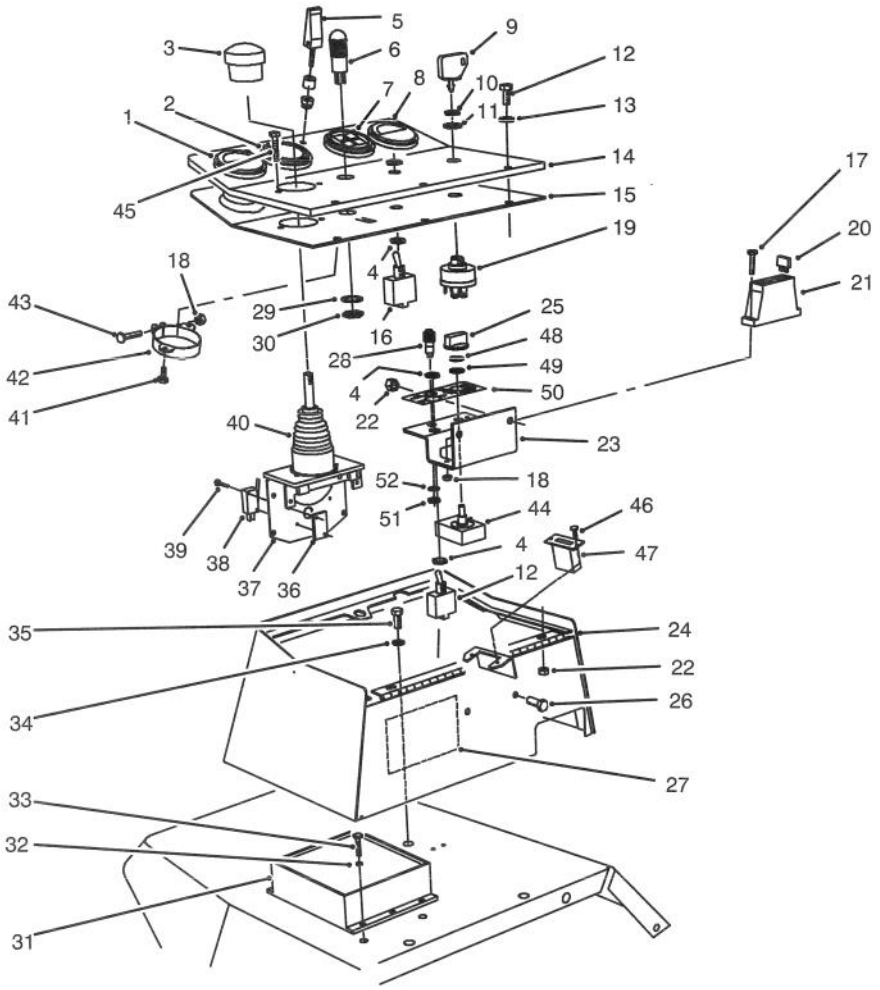

T–1501


CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
37	75–3420	Lift Control Assembly (Incl. Ref. #3, 36 & 38–40)	1
38	218–590	Switch – Micro	2
39	3290–93	Screw – Cap Hex. Hd.	4
40	3290–488	Boot – Lift Control	1
41	32144–1	Screw – Cap Hex. Hd.	2
42	69–4780	Clamp – Light Cluster	1
43	32105–1	Screw – Cap Hex. Hd.	1
44	85–4470	Potentiometer Assembly (Incl. Ref. #48 & 49) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation.	1
45	3273–26	Screw – Hex. Socket Hd.	2


Ref. No.	Part No.	Description	No. Used
46	32144–18	Screw – Cap Hex. Hd.	2
47	75–6820	Meter – Hour	1
48		Nut – Lock	1
49		Washer – Lock	1
50	85–460	Decal – HOC Selector	1
51		Nut – Lock	1
52		Washer – Lock	1
*	85–4360	Main Wire Harness Assy.	1
*†	85–4491	Lamp – Diagnostic	1
*†	70–8570	Breaker – Circuit	2
*†	86–7560	Connector – Cover (3 Way)	3
*†	86–7550	Connector – Cover (2 Way)	2
*†	85–4650	Connector – Loop Back	1
*	85–4690	Software – ECU RM5100D	1

*Not Illustrated
†Included in main wire harness assembly.

HYDRAULIC SCHEMATIC

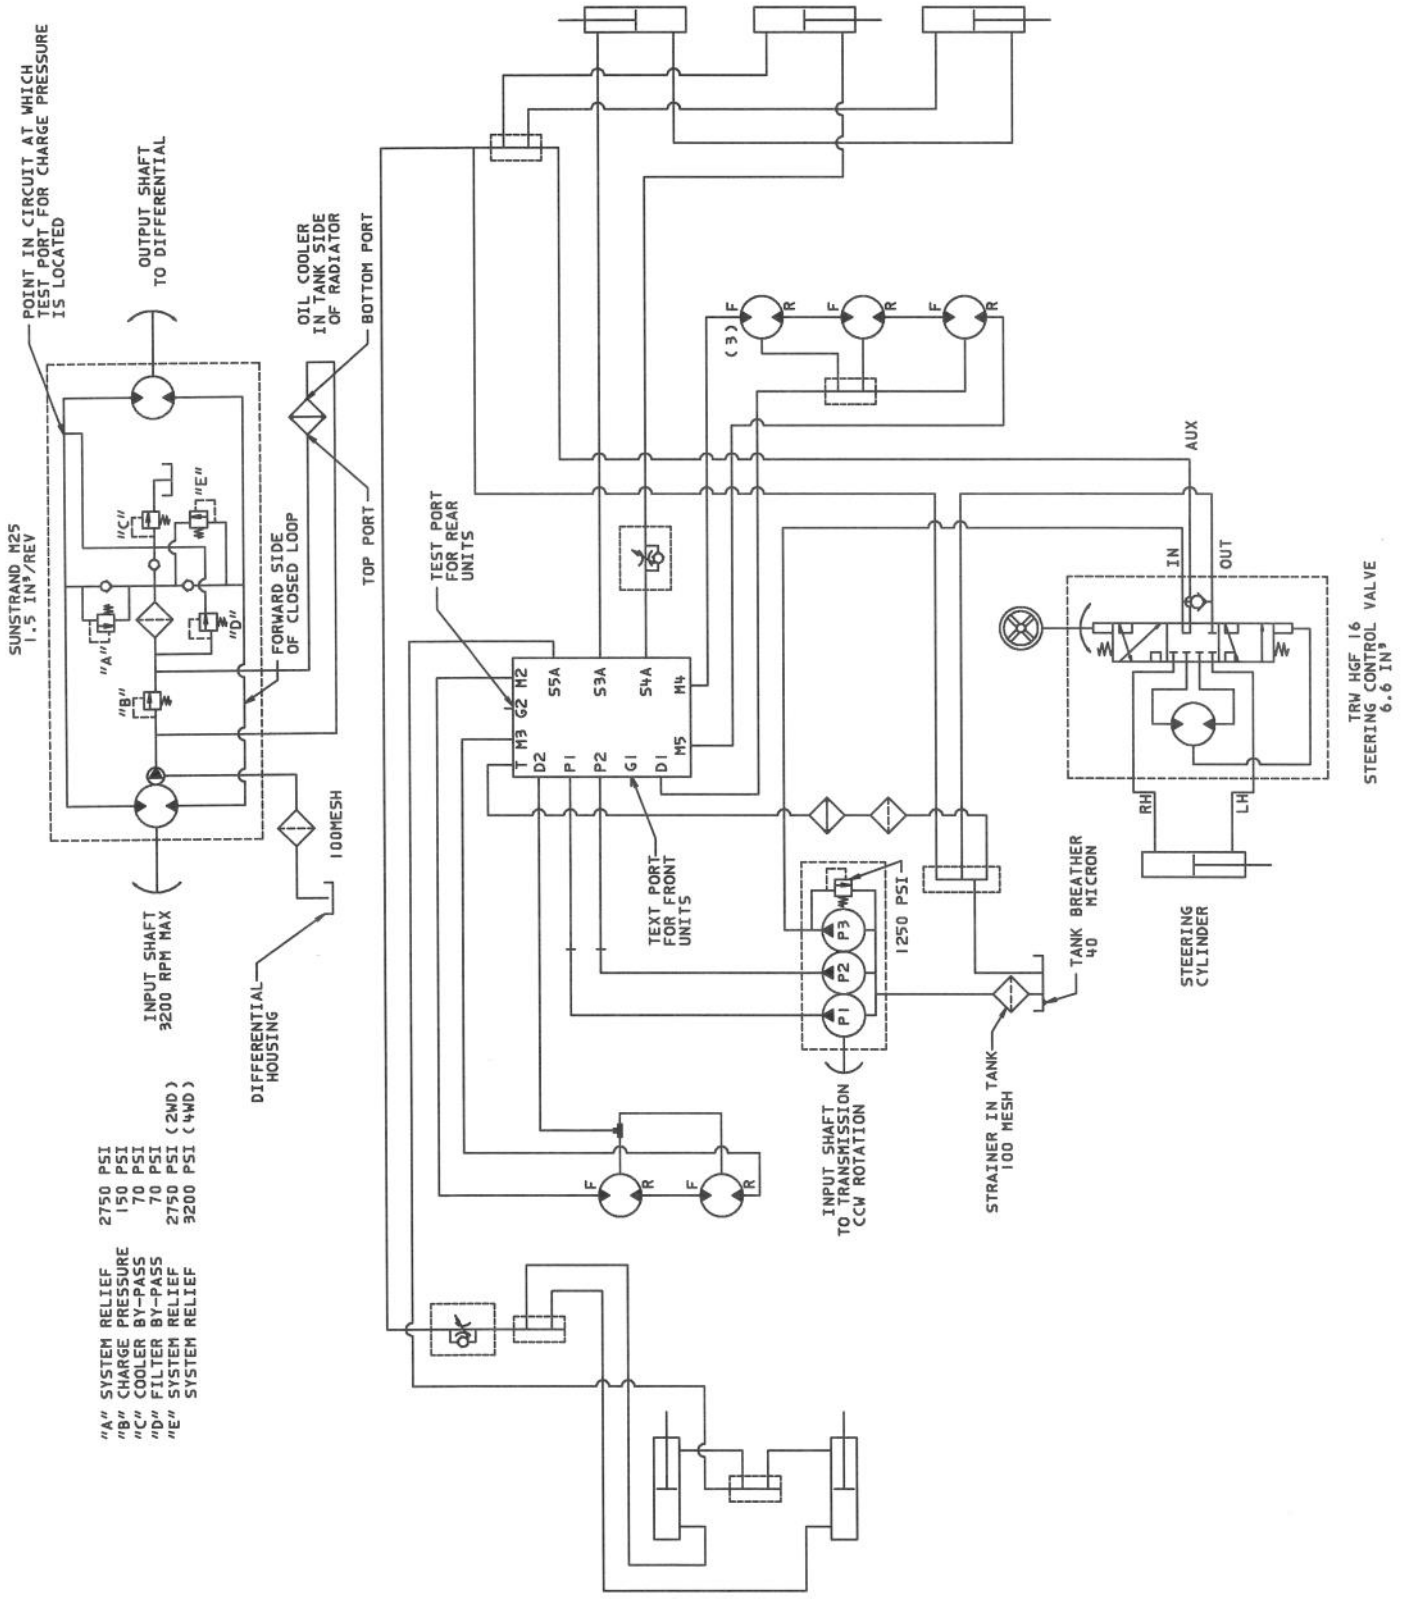

T–1144

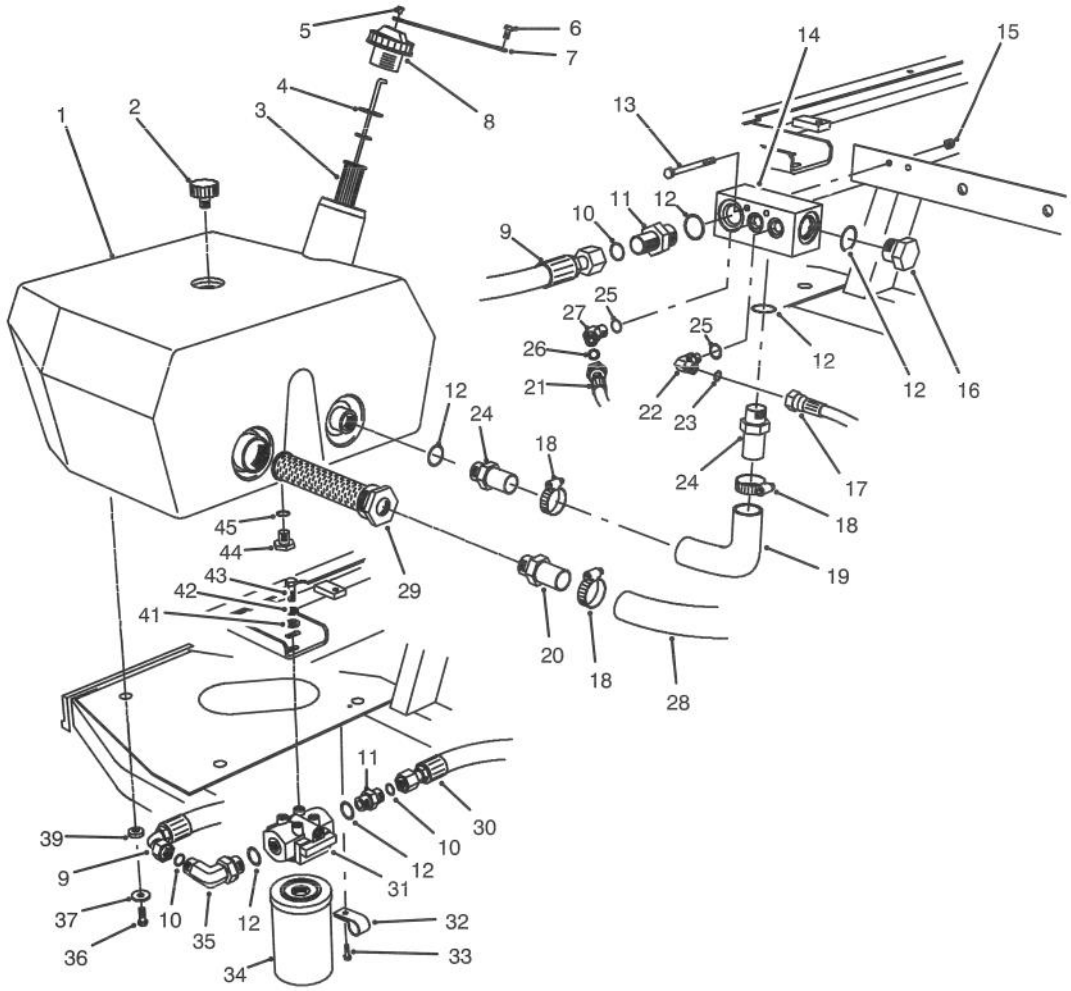


T–1048

HYDRAULIC RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–1170	Reservoir – Hydraulic	1
2	68–6150	Breather – Hydraulic Tank	1
3	61–2790	Screen – Filler	1
4	75–3710	Dipstick	1
5	2410–73	Retainer – Tether	1
6	321–2	Screw – Cap Hex. Hd.	1
7	75–0540	Tether – Cap	1
8	70–8640	Cap – Hydraulic Reservoir	1
9	75–6130	Hose – Hydraulic	1
10	237–65	Seal – O–Ring	5
11	340–8	Fitting – Hydraulic Straight (Incl. Ref. #10 & 12)	2
12	237–81	Seal – O–Ring	4
13	321–23	Screw – Cap Hex. Hd.	2
14	75–5480	Manifold – Tank	1
15	3296–42	Nut – Lock	2
16	354–74	Fitting – Hydraulic Plug (Incl. Ref. #12)	1
17	75–6250	Hose – Hydraulic	1
18	2412–34	Clamp – Hose	3
19	75–5720	Hose – Hydraulic	1
20	353–682	Fitting – Hydraulic Straight	1

Ref. No.	Part No.	Description	No. Used
21	75–6200	Hose – Hydraulic	1
22	340–77	Fitting – Hydraulic 90° (Incl. Ref. #23 & 25)	1
23	237–22	Seal – O–Ring	3
24	354–73	Fitting – Hydraulic Straight (Incl. Ref. #12)	2
25	237–42	Seal – O–Ring	2
26	237–21	Seal – O–Ring	1
27	340–137	Fitting – Hydraulic 45° (Incl. Ref. #25 & 26)	1
28	75–6870	Hose – Hydraulic Suction	1
29	75–0550	Strainer – Suction	1
30	75–6140	Hose – Hydraulic	1
31	75–1300	Hydraulic Filter Head Assy.	1
32	2412–93	Clamp – R	2
33	32144–10	Screw – Hex. Washer Hd.	2
34	75–1310	Element – Hydraulic Filter	1
35	340–139	Fitting – Hydraulic 90° (Incl. Ref. #10 & 12)	1
36	323–5	Screw – Cap Hex. Hd.	3
37	63–8410	Washer – Flat	3
39	240–11	Grommet	3

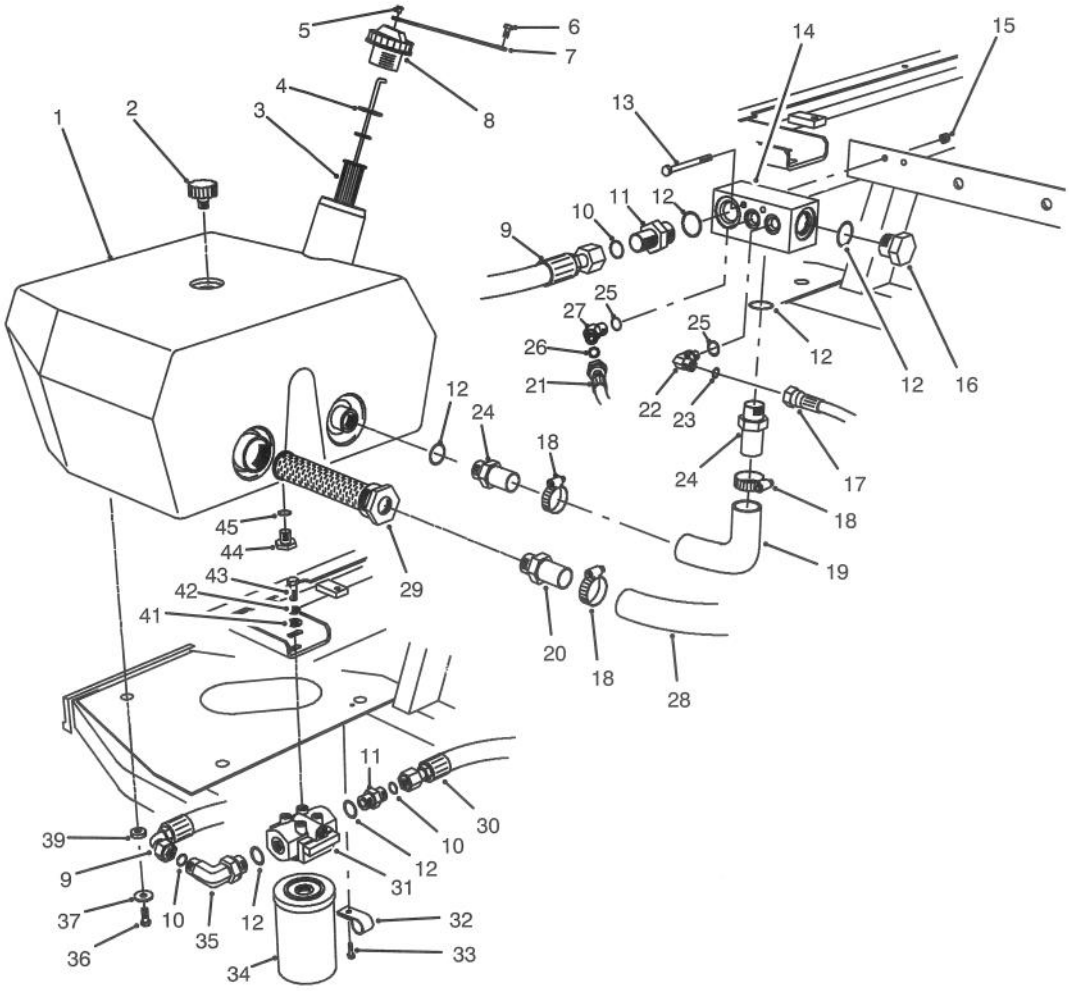


T–1048

HYDRAULIC RESERVOIR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
41	3256–24	Washer – Flat	2
42	3253–21	Washer – Lock	2
43	323–4	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
44	353–550	Fitting – Plug (Incl. Ref. #45)	1
45	237–79	Seal – O–Ring	1

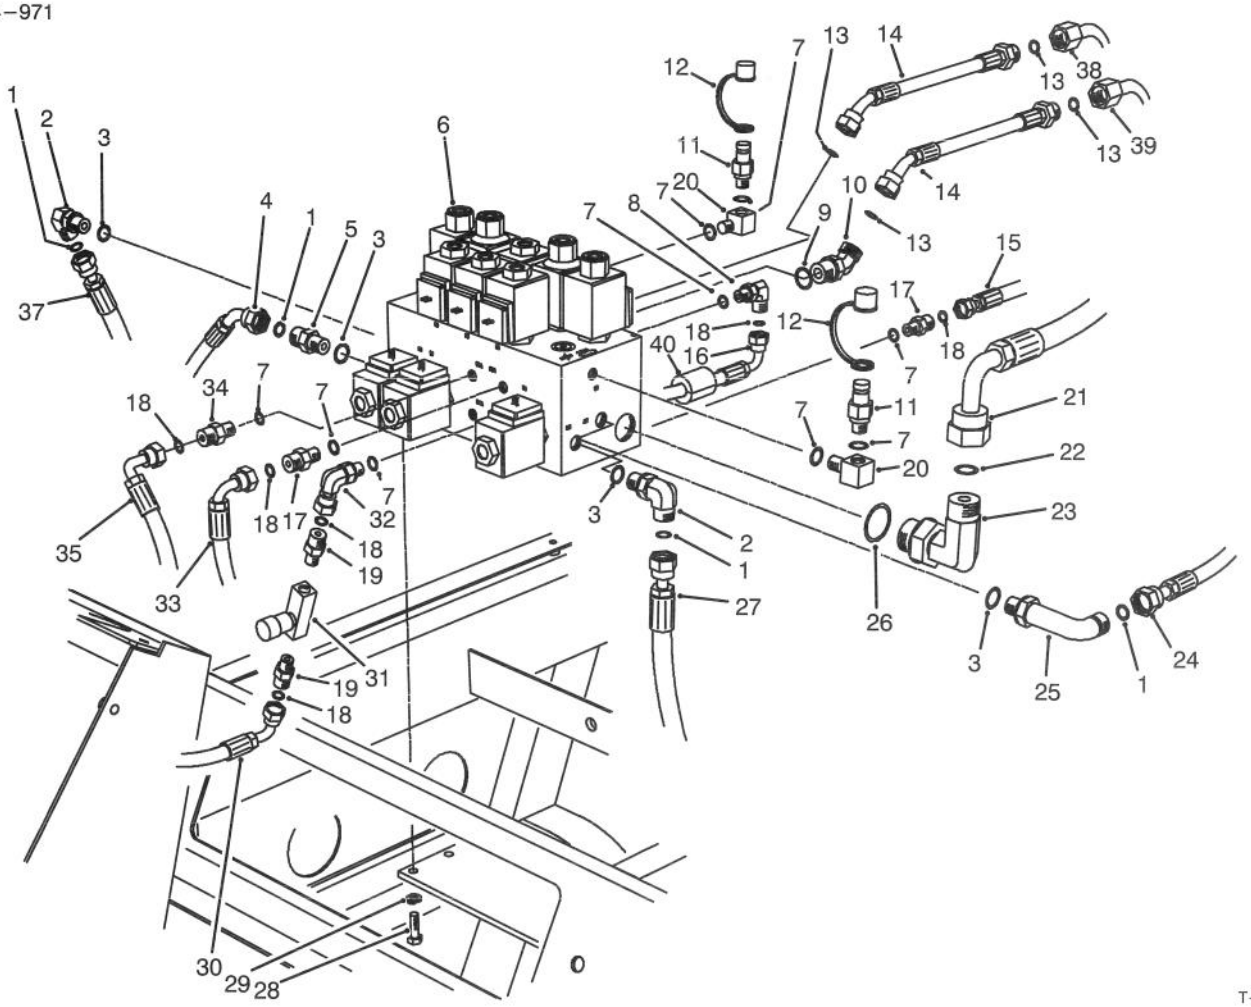


T–1094

HYDRAULIC CONTROL MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237–22	Seal – O–Ring	4
2	340–77	Fitting – Hydraulic 90° (Incl. Ref. #1 & 3)	2
3	237–42	Seal – O–Ring	4
4	75–6000	Hose – Hydraulic	1
5	340–2	Fitting – Hydraulic Straight (Incl. Ref. #1 & 3)	1
6	85–4550	Control Manifold Assembly	1
7	237–78	Seal – O–Ring	8
8	340–132	Fitting – Hydraulic 90° (Incl. Ref. #7 & 18)	1
9	237–79	Seal – O–Ring	2
10	340–101	Fitting – Hydraulic Straight (Incl. Ref. #9 & 13)	2
11	354–77	Fitting – Test Port (Incl. Ref. #7)	2
12	354–79	Cap – Test Port	2
13	237–30	Seal – O–Ring	4
14	86–9190	Hose – Hydraulic	2
15	88–9460	Hose – Hydraulic	1
16	75–5950	Hose – Hydraulic	1
17	340–92	Fitting – Hydraulic Straight (Incl. Ref. #7 & 18)	3
18	237–21	Seal – O–Ring	6

Ref. No.	Part No.	Description	No. Used
19	340–13	Fitting – Hydraulic Straight (Incl. Ref. #18)	2
20	75–6640	Fitting – Hydraulic 90° (Incl. Ref. #7)	2
21	75–6160	Hose – Hydraulic	1
22	237–65	Seal – O–Ring	1
23	340–139	Fitting – Hydraulic 90° (Incl. Ref. #22 & 26)	1
24	88–9470	Hose – Hydraulic	1
25	69–4320	Fitting – Hydraulic 90° (Incl. Ref. #1 & 3)	1
26	237–81	Seal – O–Ring	1
27	75–6040	Hose – Hydraulic	1
28	322–3	Screw – Cap Hex. Hd.	4
29	3253–4	Washer – Lock	4
30	75–5900	Hose – Hydraulic	1
31	82–8270	Valve – Flow Control	1
32	340–143	Fitting – Hydraulic 90° (Incl. Ref. #7)	1
33	75–6060	Hose – Hydraulic	1
35	75–5890	Hose – Hydraulic	1
37	75–5990	Hose – Hydraulic	1
38	75–5250	Tube – Hydraulic	1
39	75–5240	Tube – Hydraulic	1
40	38–3400	Guadr – Rubber	1

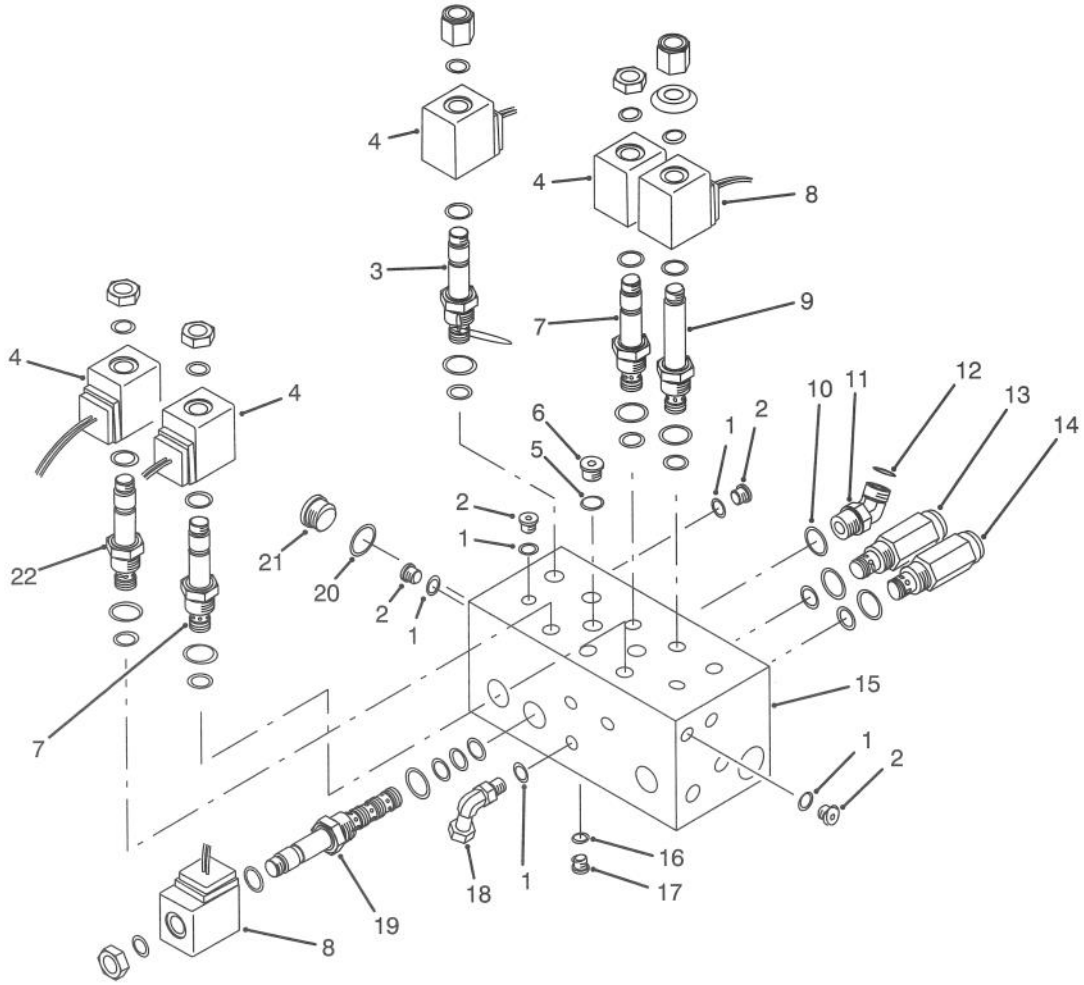


T–1503

CONTROL MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237–78	Seal – O–Ring	10
2	353–990	Plug (Incl. Ref. #1)	9
3	88–7020	Cartridge – N.O. (Use Seal Kit #75–2080)	2
4	88–9190	Solenoid – 20 Watt	6
5	237–42	Seal – O–Ring	2
6	353–989	Plug (Incl. Ref. #5)	2
7	88–6990	Cartridge – N.C. (Use Seal Kit #75–2080)	3
8	88–9200	Solenoid – 28 Watt	5
9	88–6970	Cartridge – N.O. (Use Seal Kit #75–2080)	2
10	237–79	Seal – O–Ring	1
11	340–101	Fitting – Hydraulic 45° (Incl. Ref. #10 & 12)	1
12	237–30	Seal – O–Ring	1
13	75–0920	Cartridge – Relief 3000 psi (Use Seal Kit #75–2080)	1

Ref. No.	Part No.	Description	No. Used
14	75–2010	Cartridge – Relief 2000 psi (Use Seal Kit #75–2080)	1
15		Body – Manifold	1
16	237–156	Seal – O–Ring	2
17	353–991	Plug (Incl. Ref. #16)	2
18	340–143	Fitting – Hydraulic 90° (Incl. Ref. #1)	1
19	88–6960	Cartridge – 4W/2P (Use Seal Kit #75–2090)	3
20	237–80	Seal – O–Ring	1
21	354–70	Plug (Incl. Ref. #20)	1
22	88–6980	Cartridge – N.C. (Use Seal Kit #75–2080)	1
*	75–2080	Kit – Seal	10
*	75–2090	Kit – Seal	3

*Not Illustrated

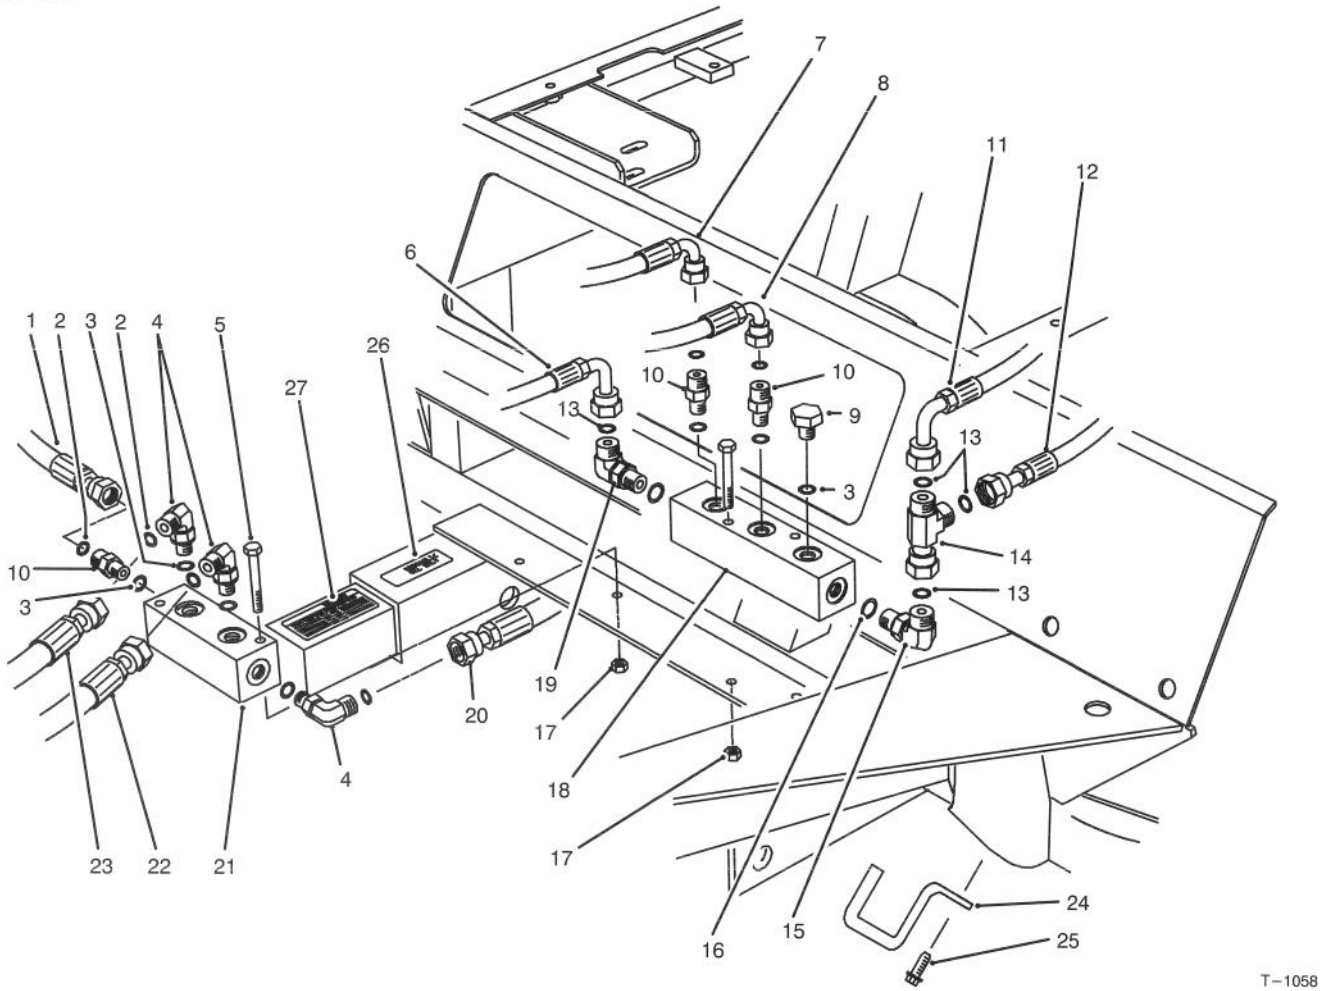


T–1058

FRONT HYDRAULIC MANIFOLDS

Ref. No.	Part No.	Description	No. Used
1	75–5980	Hose – Hydraulic	1
2	237–21	Seal – O–Ring	6
3	237–78	Seal – O–Ring	7
4	340–132	Fitting – Hydraulic 90° (Incl. Ref. #2 & 3)	3
5	321–11	Screw – Cap Hex. Hd.	4
6	75–5940	Hose – Hydraulic	1
7	75–5890	Hose – Hydraulic	1
8	75–5910	Hose – Hydraulic	1
9	353–512	Plug – Hydraulic (Incl. Ref. #3)	1
10	340–92	Fitting – Hydraulic Straight (Incl. Ref. #2 & 3)	3
11	75–6020	Hose – Hydraulic	1
12	75–6200	Hose – Hydraulic	1
13	237–22	Seal – O–Ring	4

Ref. No.	Part No.	Description	No. Used
14	340–151	Fitting – Hydraulic Tee (Incl. Ref. #13)	1
15	340–82	Fitting – Hydraulic 90° (Incl. Ref. #13 & 16)	1
16	237–42	Seal – O–Ring	2
17	3296–42	Nut – Lock	4
18	75–1190	Manifold – Hydraulic	1
19	340–77	Fitting – Hydraulic 90° (Incl. Ref. #13 & 16)	1
20	75–5950	Hose – Hydraulic	1
21	75–1180	Manifold – Hydraulic	1
22	75–5960	Hose – Hydraulic	1
23	88–9520	Hose – Hydraulic	1
24	75–5300	Rod – Hose Support	2
25	49–2040	Screw – Hex. Washer Hd.	4
26	85–4730	Decal – Oil	1
27	88–0440	Decal – Floor Plate	1


*Not Illustrated

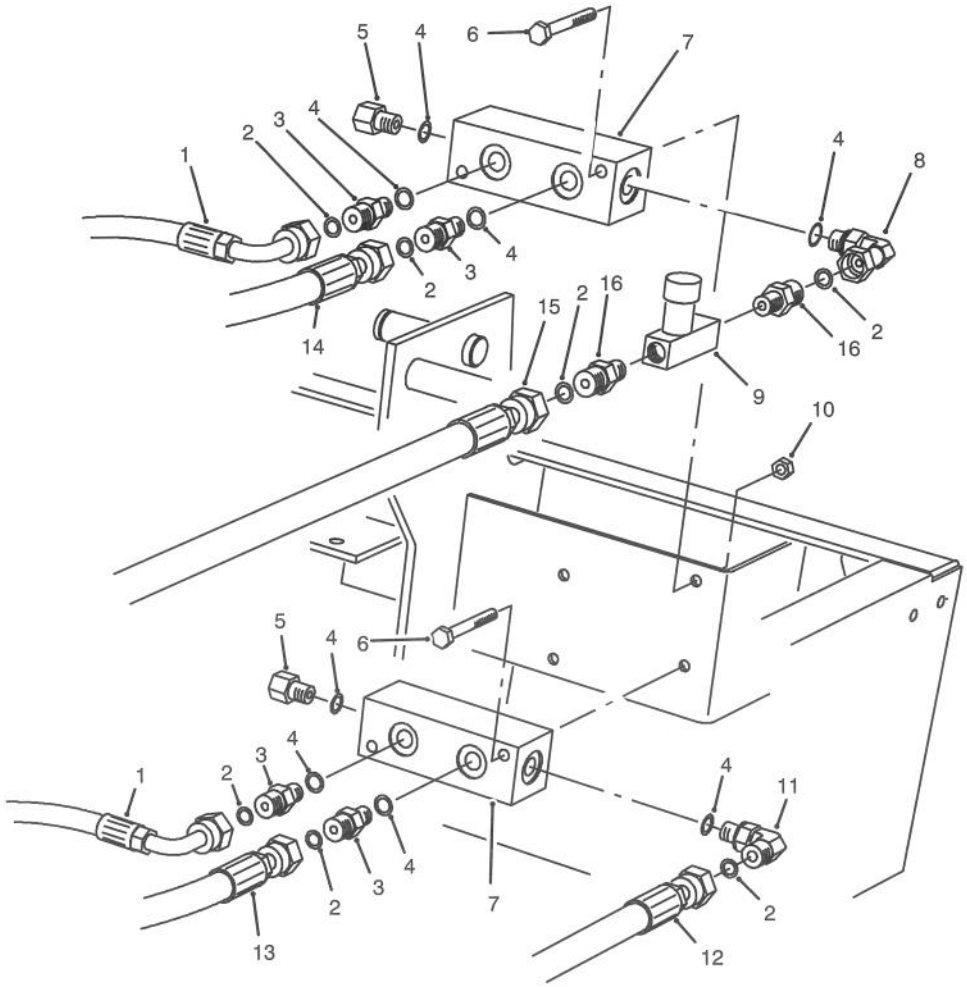

REAR HYDRAULIC MANIFOLDS

Ref. No.	Part No.	Description	No. Used
1	75–6180	Hose – Hydraulic	2
2	237–21	Seal – O–Ring	7
3	340–92	Fitting – Hydraulic Straight (Incl. Ref. #2 & 4)	4
4	237–78	Seal – O–Ring	8
5	353–512	Fitting – Hydraulic Plug (Incl. Ref. #4)	2
6	321–11	Screw – Cap Hex. Hd.	4
7	75–1180	Manifold	2
8	340–143	Fitting – Hydraulic 90° (Incl. Ref. #4)	1

Ref. No.	Part No.	Description	No. Used
9	82–8270	Valve – Flow Control	1
10	3296–42	Nut – Lock	4
11	340–132	Fitting – Hydraulic 90° (Incl. Ref. #2 & 4)	1
12	75–6060	Hose – Hydraulic	1
13	75–6080	Hose – Hydraulic	1
14	75–6070	Hose – Hydraulic	1
15	75–6020	Hose – Hydraulic	1
16	340–13	Fitting – Hydraulic Straight (Incl. Ref. #2)	2

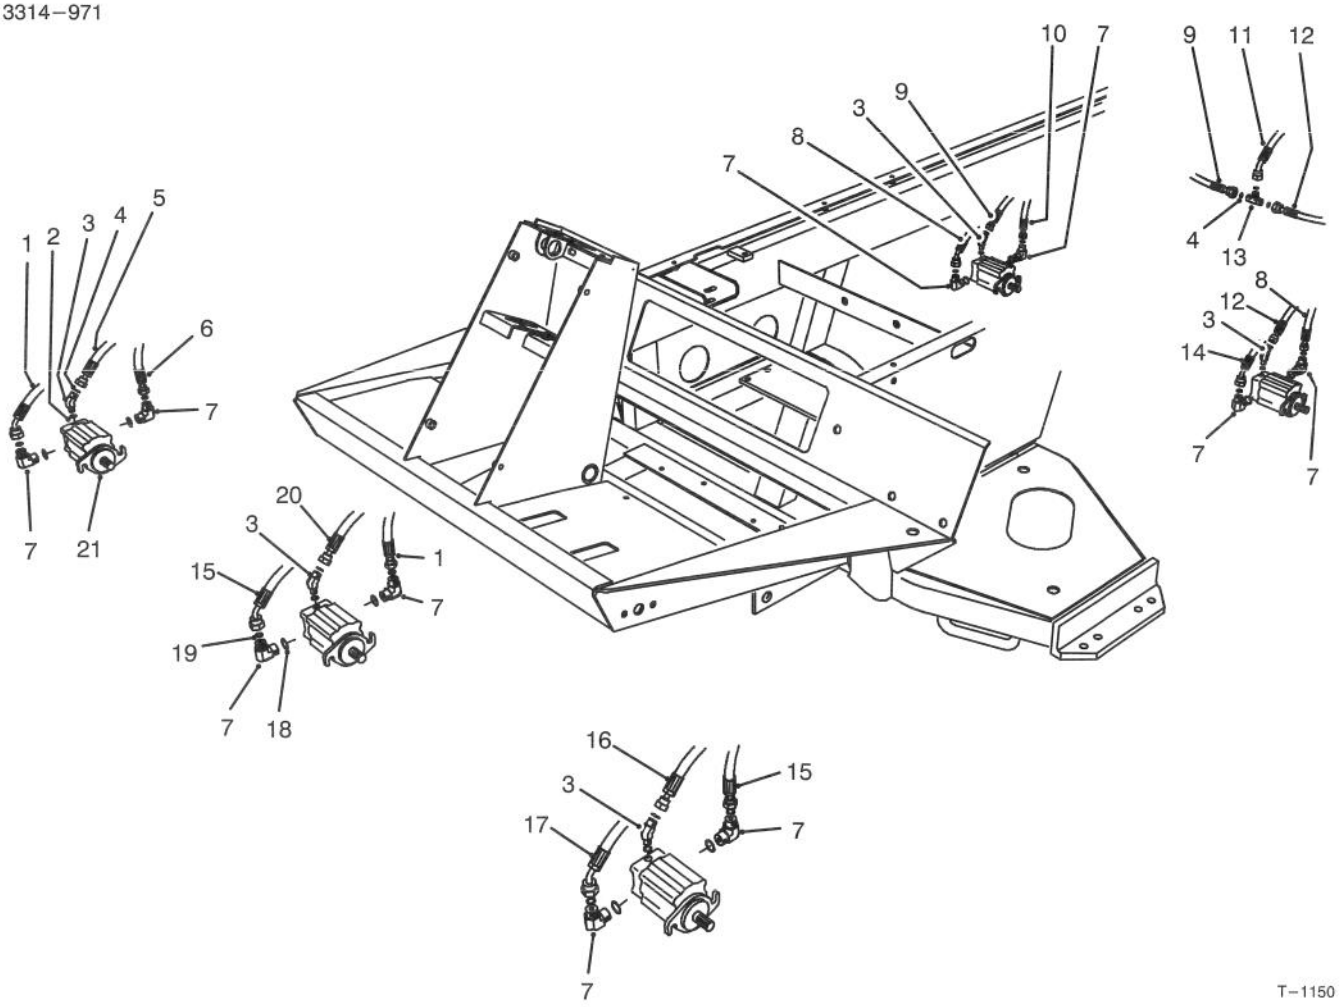


T–1150

CUTTING UNIT HYDRAULIC COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	88–9540	Hose – Hydraulic	1
2	237–78	Seal – O–Ring	5
3	340–103	Fitting – Hydraulic 45° (Incl. Ref. #2 & 4)	5
4	237–21	Seal – O–Ring	8
5	75–5980	Hose – Hydraulic	1
6	75–6000	Hose – Hydraulic	1
7	340–18	Fitting – Hydraulic 90° (Incl. Ref. #18 & 19)	10
8	75–6190	Hose – Hydraulic	1
9	88–9490	Hose – Hydraulic	1
10	75–6040	Hose – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
11	88–9460	Hose – Hydraulic	1
12	88–9480	Hose – Hydraulic	1
13	340–21	Fitting – Hydraulic Tee (Incl. Ref. #4)	1
14	88–9470	Hose – Hydraulic	1
15	88–9530	Hose – Hydraulic	1
16	75–5960	Hose – Hydraulic	1
17	75–5990	Hose – Hydraulic	1
18	237–79	Seal – O–Ring	10
19	237–22	Seal – O–Ring	10
20	88–9520	Hose – Hydraulic	1
21	75–1400	Motor – Hydraulic	5

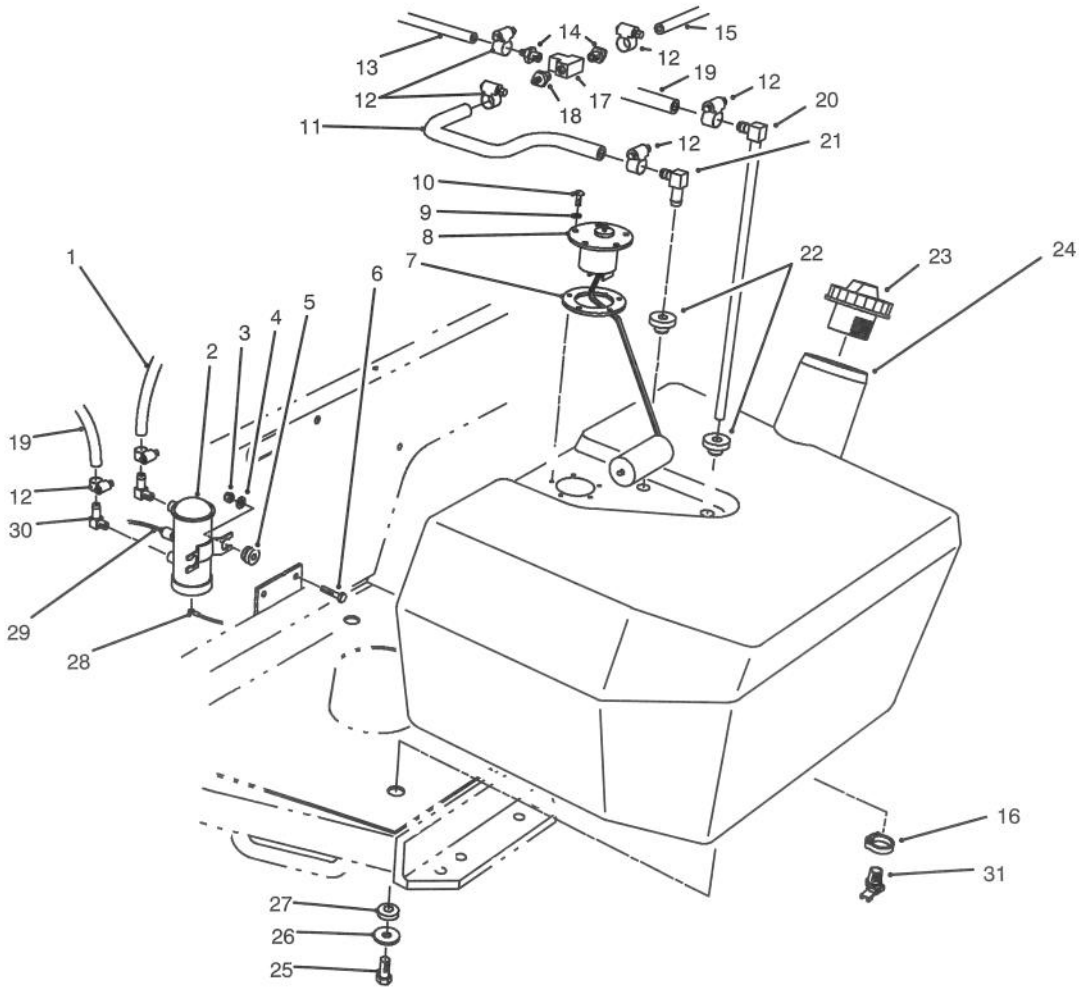


T–1049

FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	63–7610	Hose – Fuel	1
2	53–8150	Fuel Pump Assembly (Incl. Ref. #5 & 28–29)	1
3	3296–42	Nut – Lock	2
4	3256–22	Washer – Flat	2
†5		Mount – Rubber	2
6	321–8	Screw – Cap Hex. Hd.	2
7	62–7650	Gasket – Sending Unit	1
8	63–7640	Unit – Sending	1
9	3253–15	Washer – Lock	5
10	32122–24	Screw – Round Hd.	5
11	27–5340	Hose – Fuel	1
12	2412–108	Clamp – Hose	7
13	75–4700	Hose – Fuel	1
14	354–22	Fitting – Fuel Straight	2
15	75–4701	Hose – Fuel	1
16	2412–36	Clamp – Drain	1

Ref. No.	Part No.	Description	No. Used
17	354–20	Fitting – Fuel Tee	1
18	354–21	Fitting – Fuel Straight	1
19	44–2670	Hose – Fuel	1
20	66–8121	Standpipe – Elbow 90°	1
21	46–6550	Connector – Fuel Elbow 90°	1
22	46–6560	Grommet	2
23	70–8620	Cap – Fuel Tank (Green)	1
*	70–8621	Cap – Fuel Tank (Black)	1
24	75–1080	Fuel Tank Assembly (Incl. Ref. #16 & 31)	1
25	323–5	Screw – Cap Hex. Hd.	3
26	63–8410	Washer – Flat	3
27	240–11	Grommet	3
28	70–8530	Wire – Fuel Pump	1
29	218–579	Wire – Fuel Pump	1
30	67–1690	Fitting – Fuel Elbow 90°	2
31	304–46	Fitting – Drain	1

*Not Illustrated
†Not Serviced Separately

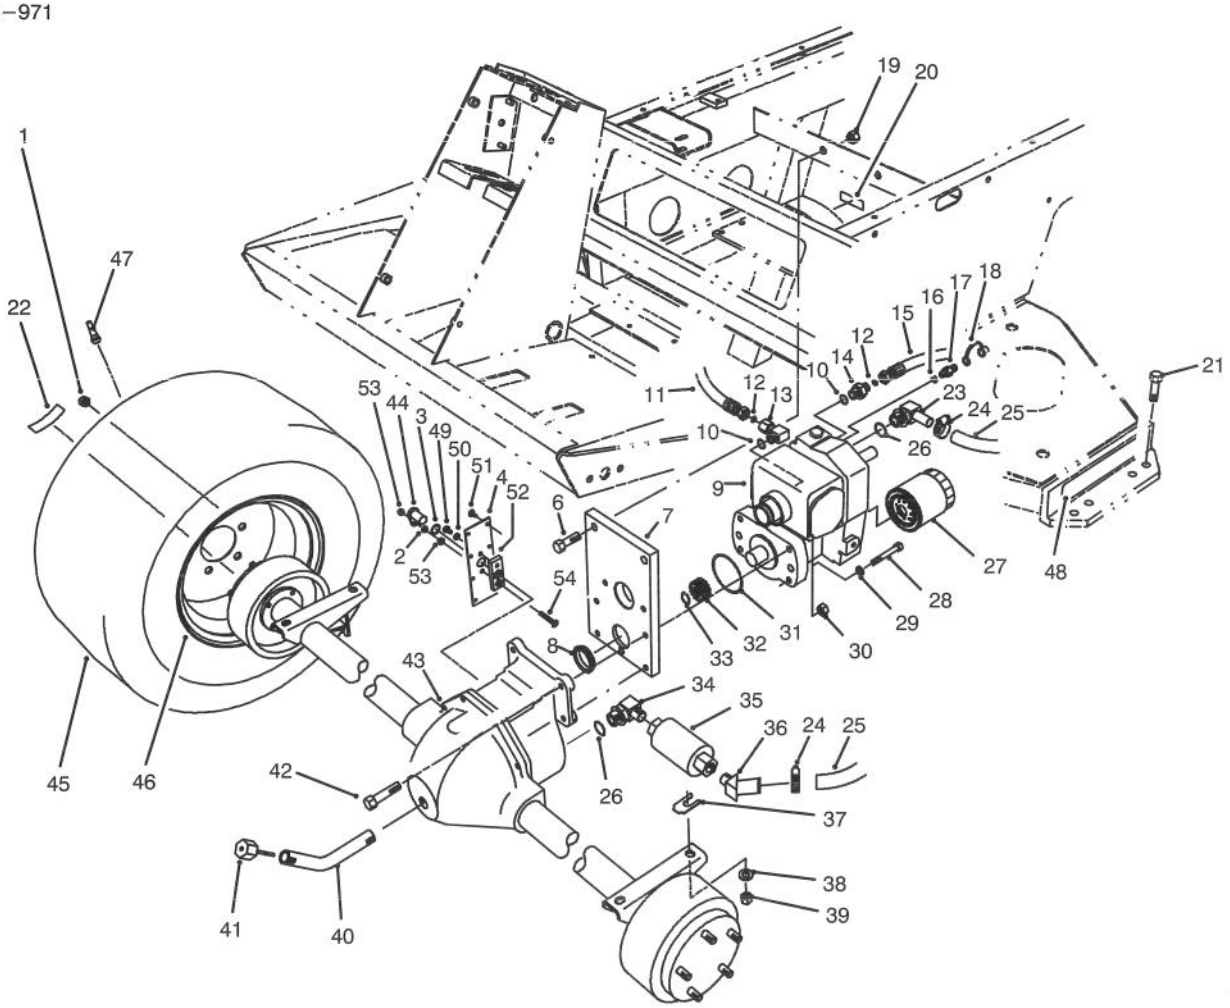


T–1050

FRONT AXLE & TRANSMISSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	23–7270	Nut – Lug	10
2	3218–1	Nut – Jam	1
3	237–181	Seal – O–Ring	1
4	85–4330	Cover – Gear	1
6	325–7	Screw – Cap Hex. Hd.	2
7	75–3100	Transmission Support Assy. (Incl. Ref. #8)	1
8	75–3110	Collar – Transmission	1
9	75–0010	Transmission Assembly	1
10	237–79	Seal – O–Ring	2
11	75–6170	Hose – Hydraulic	1
12	237–22	Seal – O–Ring	2
13	340–18	Fitting – Hydraulic 90° (Incl. Ref. #10 & 12)	1
14	340–3	Fitting – Hydraulic Straight (Incl. Ref. #10 & 12)	1
15	75–6150	Hose – Hydraulic	1
16	237–78	Seal – O–Ring	1
17	354–77	Fitting – Hydraulic Test Port (Incl. Ref. #16)	1
18	354–79	Cap – Test Port	1
19	3296–23	Nut – Lock	2
‡20	77–0490	Decal – Bolt (English)	1
21	324–6	Screw – Cap Hex. Hd.	4
22	76–8730	Decal – Bolt Torque	2

Ref. No.	Part No.	Description	No. Used
23	75–4720	Fitting – Hydraulic 90° (Incl. Ref. #26)	1
24	2412–34	Clamp – Hose	2
25	75–6350	Hose	1
26	237–81	Seal – O–Ring	2
27	75–1330	Filter – Oil	1
28	323–12	Screw – Cap Hex. Hd.	2
29	3253–21	Washer – Lock	2
30	3296–39	Nut – Lock	2
31	237–161	Seal – O–Ring	1
32	86–7220	Gear – Pinion	1
33	32151–62	Ring – Retaining	1
34	354–75	Fitting – Hydraulic 90° (Incl. Ref. #26)	1
35	75–6340	Strainer – In–Line	1
36	354–72	Fitting – Hydraulic 45°	1
37	42–6080	Shim – Axle	A/R
38	3256–25	Washer – Flat	4
39	3296–48	Nut – Lock	4
40	75–6850	Tube – Oil Fill	1
41	27–3710	Dipstick – Axle	1
42	323–20	Screw – Cap Hex. Hd.	2
43	86–7200	Front Axle Assembly	1
44	85–4350	Sensor – Gear Tooth	1
45	231–134	Tire	2

‡For different language versions of this part, see International Decal Cross Reference.

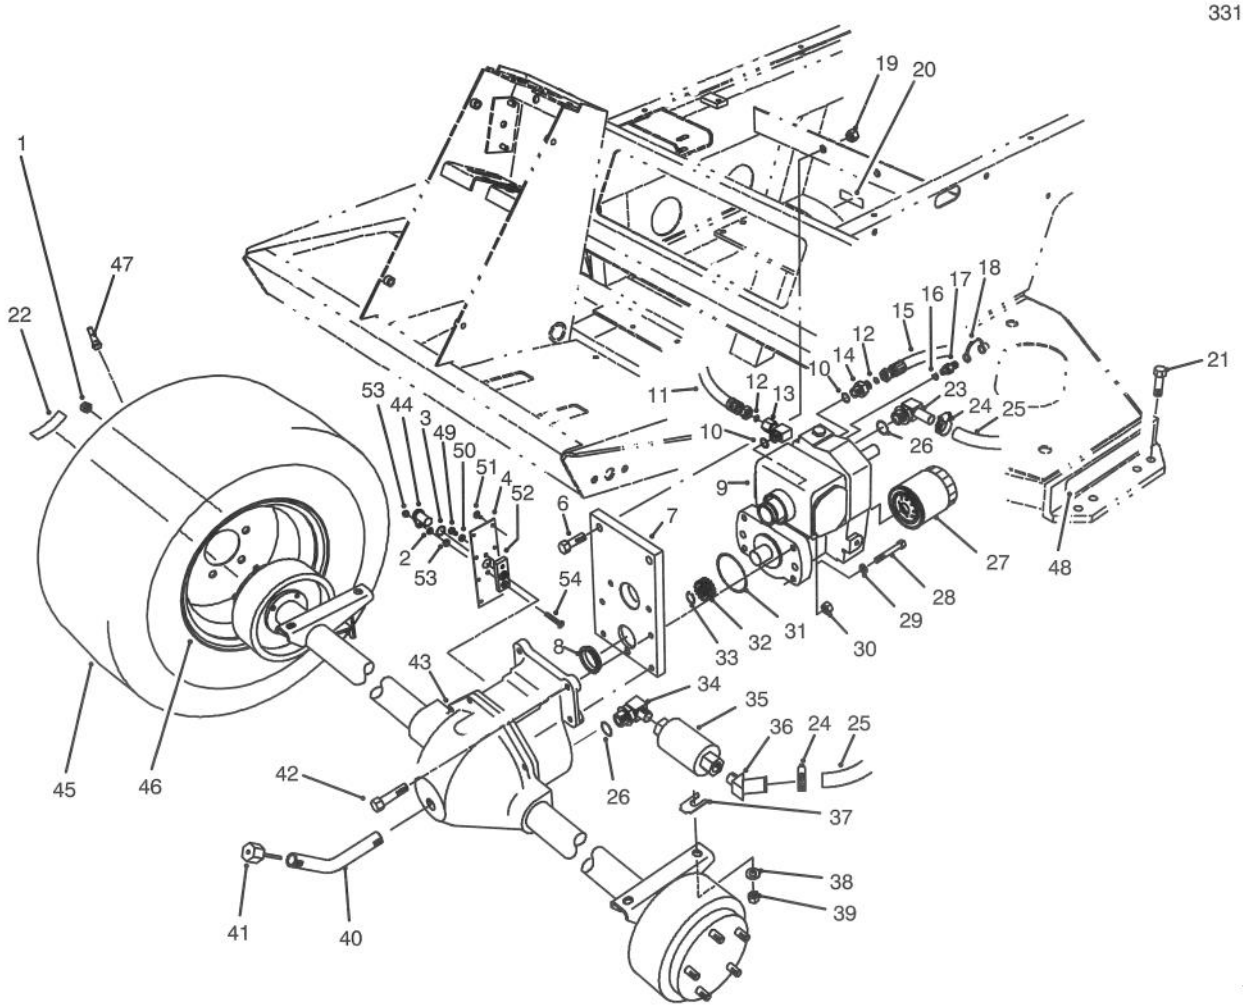


T–1050

FRONT AXLE & TRANSMISSION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	217–120	Rim	2
47	232–27	Stem – Valve	2
‡48	75–0810	Decal – Caution (English)	2
49	321–2	Screw – Cap Hex. Hd.	1
50	3253–3	Washer – Lock	1

Ref. No.	Part No.	Description	No. Used
51	32144–112	Screw – Cap Hex. Hd.	8
52	85–4340	Plate – Sensor Mounting	1
53	3296–56	Nut – Lock	2
54	32108–9	Screw – Machine	1

‡For different language versions of this part, see International Decal Cross Reference.

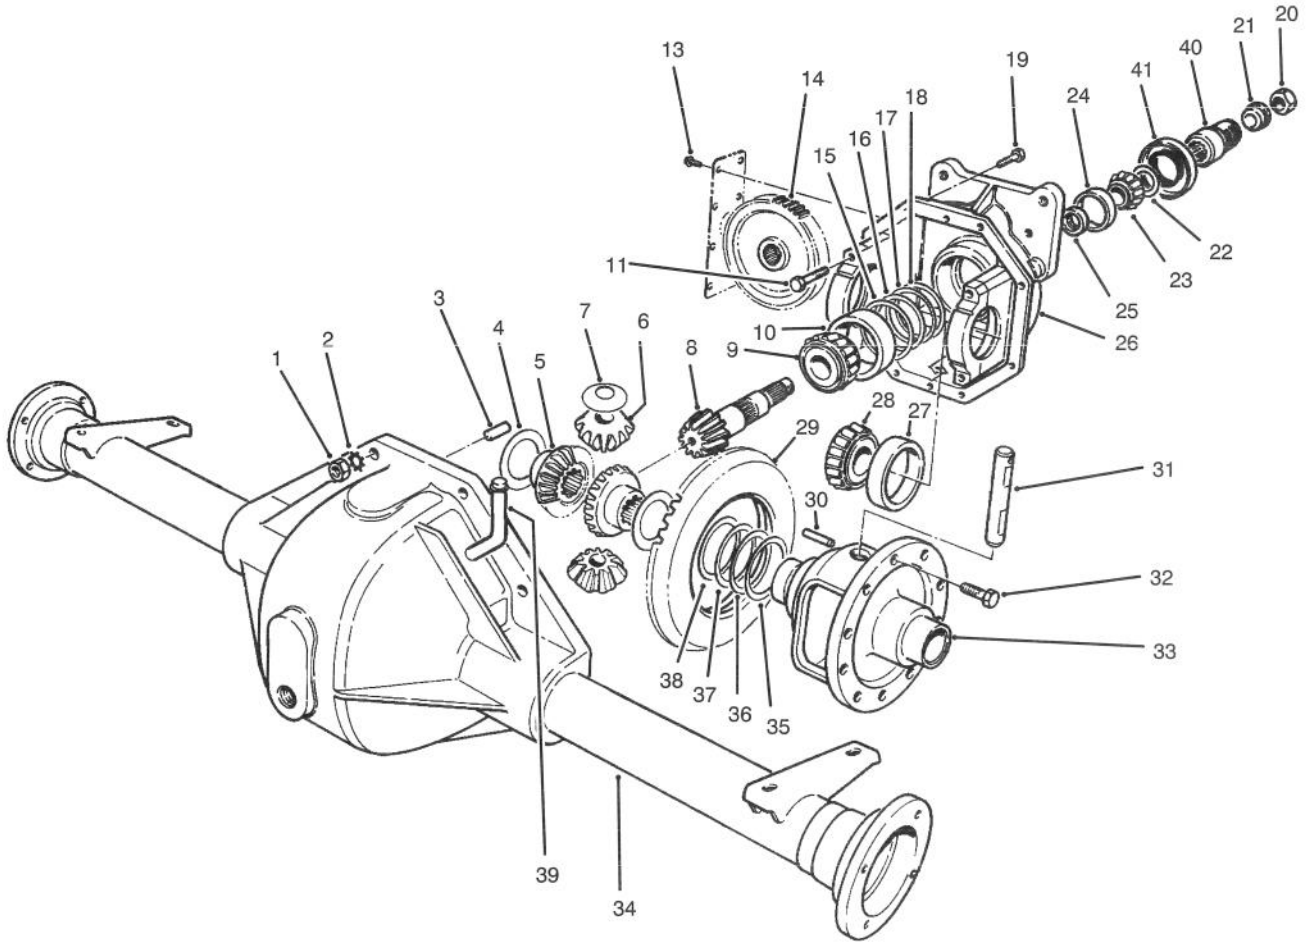


T–1315

FRONT AXLE ASSEMBLY NO. 86–7200

Ref. No.	Part No.	Description	No. Used
1	3219–2	Nut	8
2	3255–8	Washer–Lock	8
3	21–8270	Pin–Dowel	2
4	21–7720	Washer–Thrust	2
5	24–8790	Gear–Bevel, Differential	2
6	21–7690	Gear–Pinion	2
7	21–7730	Washer–Thrust	2
†8		Pinion–Drive	1
9	43–6760	Cone–Bearing, tapered	1
10	43–6750	Cup–Bearing, Tapered	1
11	324–23	Screw–Cap, Hex Hd.	4
13	32144–112	Screw–Thread Forming	8
14	86–7230	Gear–Spur	1
15	43–6710	Diff. Adjust. Shim .003	A/R
16	43–6711	Diff. Adjust. Shim .005	A/R
17	43–6712	Diff. Adjust. Shim .010	A/R
18	43–6713	Diff. Adjust. Shim .030	A/R
19	3210–7	Screw–Cap, Hex Hd.	8
20	71–4350	Nut	1
21	83–5130	Spacer – Pinion	1
22	72–3570	Shim .094 – Diff. Adjust.	A/R
*	72–3571	Shim .096 – Diff. Adjust.	A/R
*	72–3572	Shim .098 – Diff. Adjust.	A/R

Ref. No.	Part No.	Description	No. Used
22	72–3573	Shim .100 – Diff. Adjust.	A/R
*	72–3574	Shim .102 – Diff. Adjust.	A/R
*	72–3575	Shim .104 – Diff. Adjust.	A/R
*	72–3576	Shim .106 – Diff. Adjust.	A/R
*	72–3577	Shim .108 – Diff. Adjust.	A/R
*	72–3578	Shim .110 – Diff. Adjust.	A/R
*	72–3580	Shim .112 – Diff. Adjust.	A/R
*	72–3581	Shim .114 – Diff. Adjust.	A/R
*	72–3582	Shim .116 – Diff. Adjust.	A/R
*	72–3583	Shim .118 – Diff. Adjust.	A/R
*	72–3584	Shim .120 – Diff. Adjust.	A/R
*	72–3585	Shim .125 – Diff. Adjust.	A/R
*	72–3586	Shim .127 – Diff. Adjust.	A/R
*	72–3587	Shim .129 – Diff. Adjust.	A/R
*	72–3588	Shim .131 – Diff. Adjust.	A/R
*	72–3590	Shim .133 – Diff. Adjust.	A/R
*	72–3591	Shim .135 – Diff. Adjust.	A/R
*	72–3592	Shim .137 – Diff. Adjust.	A/R
*	72–3593	Shim .139 – Diff. Adjust.	A/R
*	72–3594	Shim .141 – Diff. Adjust.	A/R
*	72–3595	Shim .143 – Diff. Adjust.	A/R
*	72–3596	Shim .145 – Diff. Adjust.	A/R
*	72–3597	Shim .147 – Diff. Adjust.	A/R

*Not Illustrated
†Not Serviced Separately

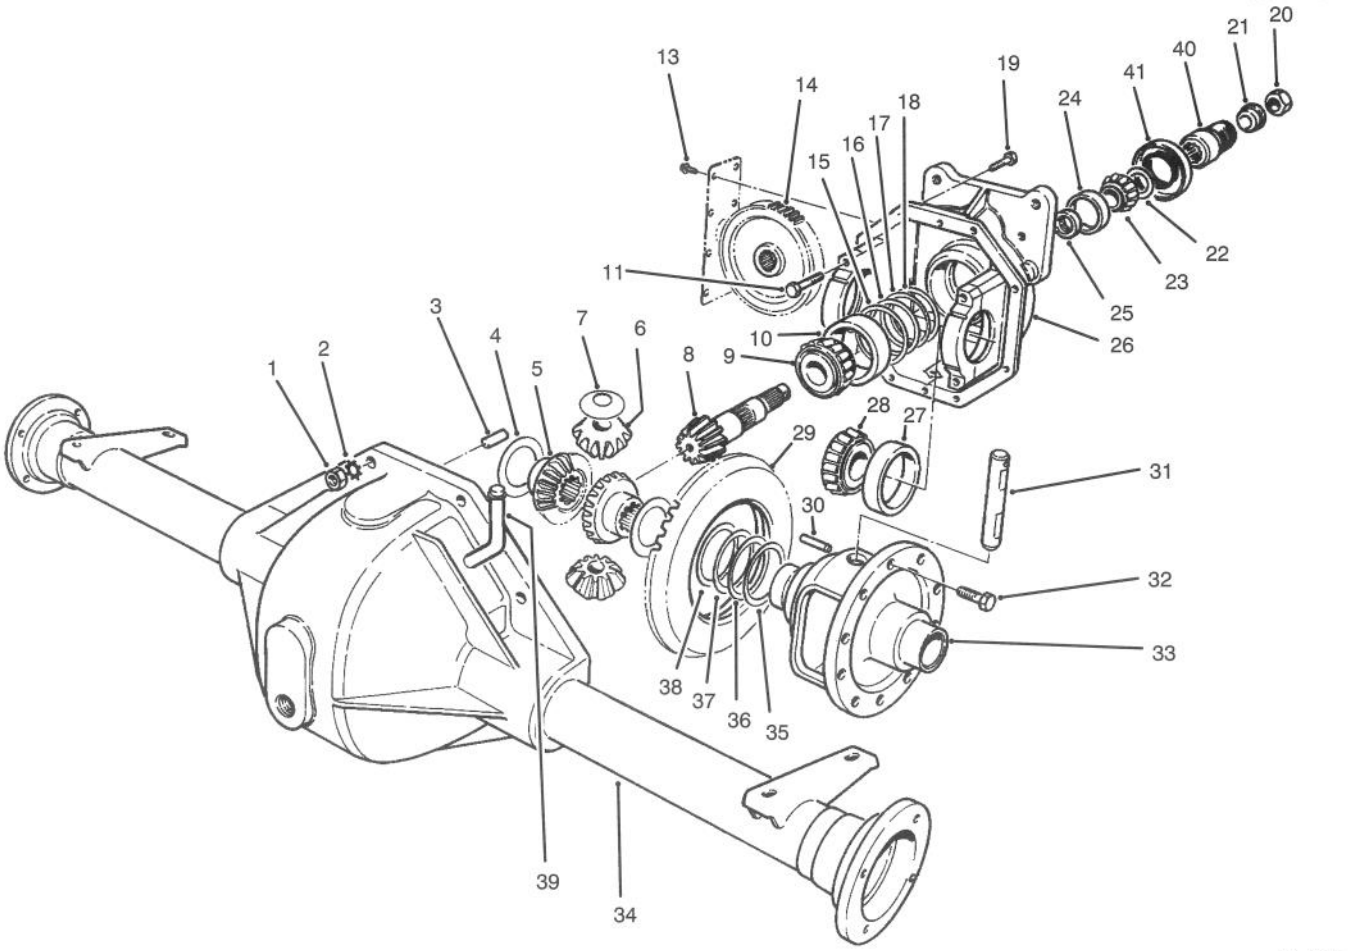


T–1315

FRONT AXLE ASSEMBLY NO. 86–7200 (Continued)

Ref. No.	Part No.	Description	No. Used
22	72–3598	Shim .149 – Diff. Adjust.	A/R
*	72–3600	Shim .151 – Diff. Adjust.	A/R
23	254–91	Cone–Bearing	1
24	21–8390	Cup–Bearing	1
25	21–8020	Spacer–Front Pinion	1
26	86–7190	Upper Housing (Incl. Ref. #11)	1
27	254–66	Cup–Tapered Bearing	2
28	254–65	Cone–Tapered Bearing	2
†29		Gear–Ring	1
30	21–7710	Pin–Roll	1
31	21–7700	Shaft–Pinion Mate	1

Ref. No.	Part No.	Description	No. Used
32	21–7770	Screw–Drive Gear	5
33	21–7670	Case–Differential	1
34	75–0720	Housing–Lower	1
35	21–8120	Diff. Adjust. Shim .030	A/R
36	21–8110	Diff. Adjust. Shim .010	A/R
37	21–8100	Diff. Adjust. Shim .005	A/R
38	21–8090	Diff. Adjust. Shim .003	A/R
39	21–8230	Vent Tube Assembly	1
40	83–4910	Coupler – Pinion	1
41	71–4330	Seal	1
*	72–3620	Gear & Pinion Assembly (Incl. Ref. #8 & 29)	1

*Not Illustrated
†Not Serviced Separately

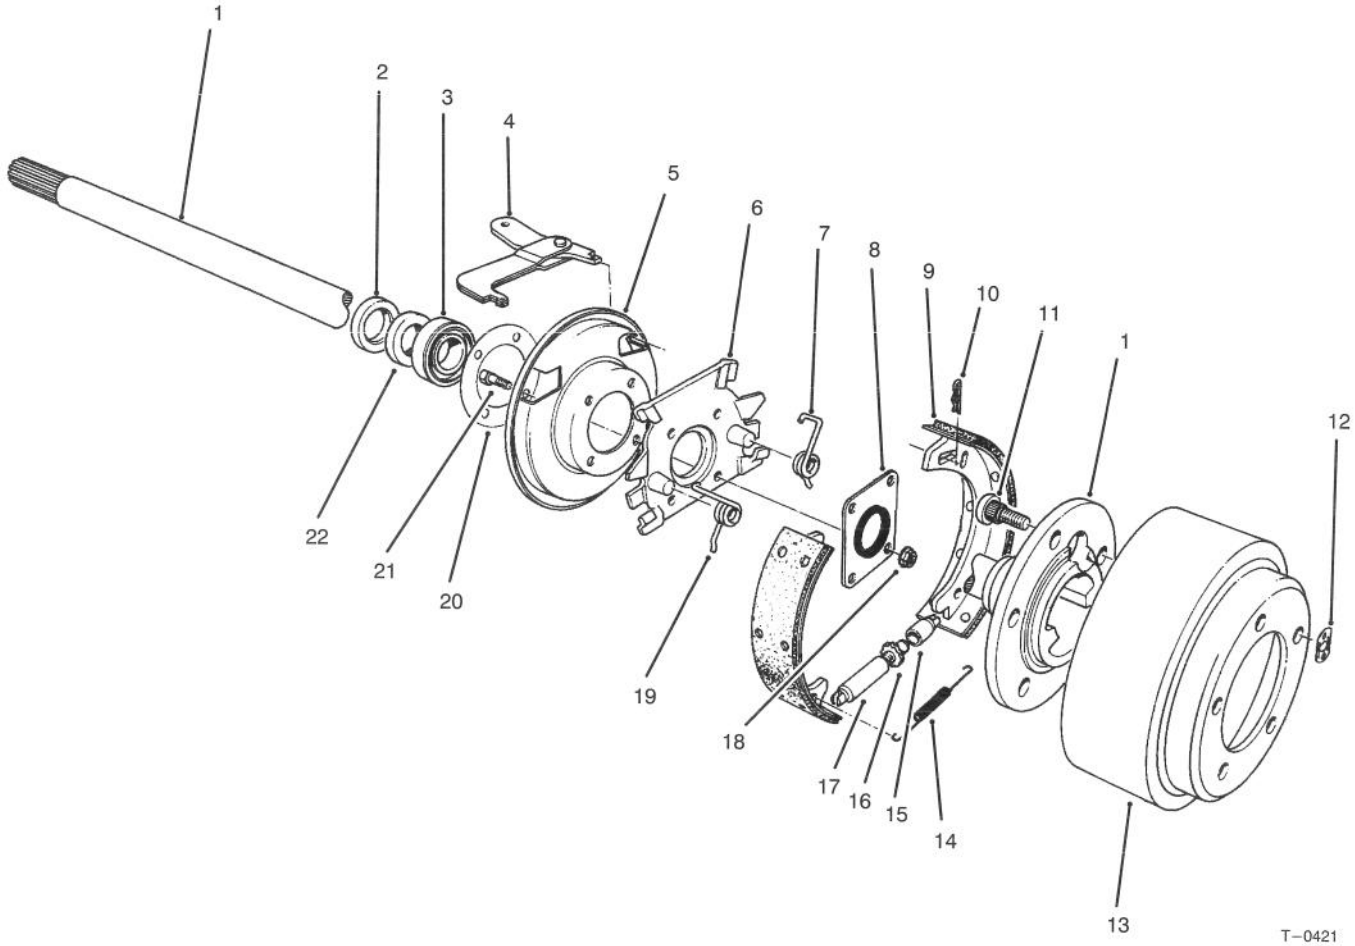


BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	27–6862	Shaft–Axle, Flanged L.H.	1
*	27–6852	Shaft–Axle, Flanged R.H.	1
2	21–8330	Seal–Oil	2
3	21–8180	Bearing	2
4	24–9180	Lever, Brake, Parking	2
5	21–9450	Shield–Dust	2
6	43–6810	Spider–Torque	2
7	21–9430	Spring–Shoe Return, R.H.	2
8	28–0670	Seal–Oil	2
9	43–2690	Shoe & Lining Assembly	4
10	21–9460	Retainer–Brake, Parking	4
11	242–34	Stud–Flange, Axle	10

Ref. No.	Part No.	Description	No. Used
12	21–8360	Clip–Retaining	2
13	28–0680	Drum–Brake	2
14	21–9440	Spring–Adjusting Screw	2
15	21–9390	Socket–Adjusting Screw	2
16	21–9370	Screw–Adjusting	2
17	21–9380	Nut–Pivot	2
18	43–6800	Nut–Lock	8
19	21–9420	Spring–Shoe Return, L.H.	2
20	21–8320	Gasket–Bearing, Wheel	2
21	28–0660	Screw–Cap, Hex Hd.	8
22	24–8840	Ring–Bearing, Wheel	2
*	43–2690	Pair of Lined Brake Shoes	2

*Not Illustrated

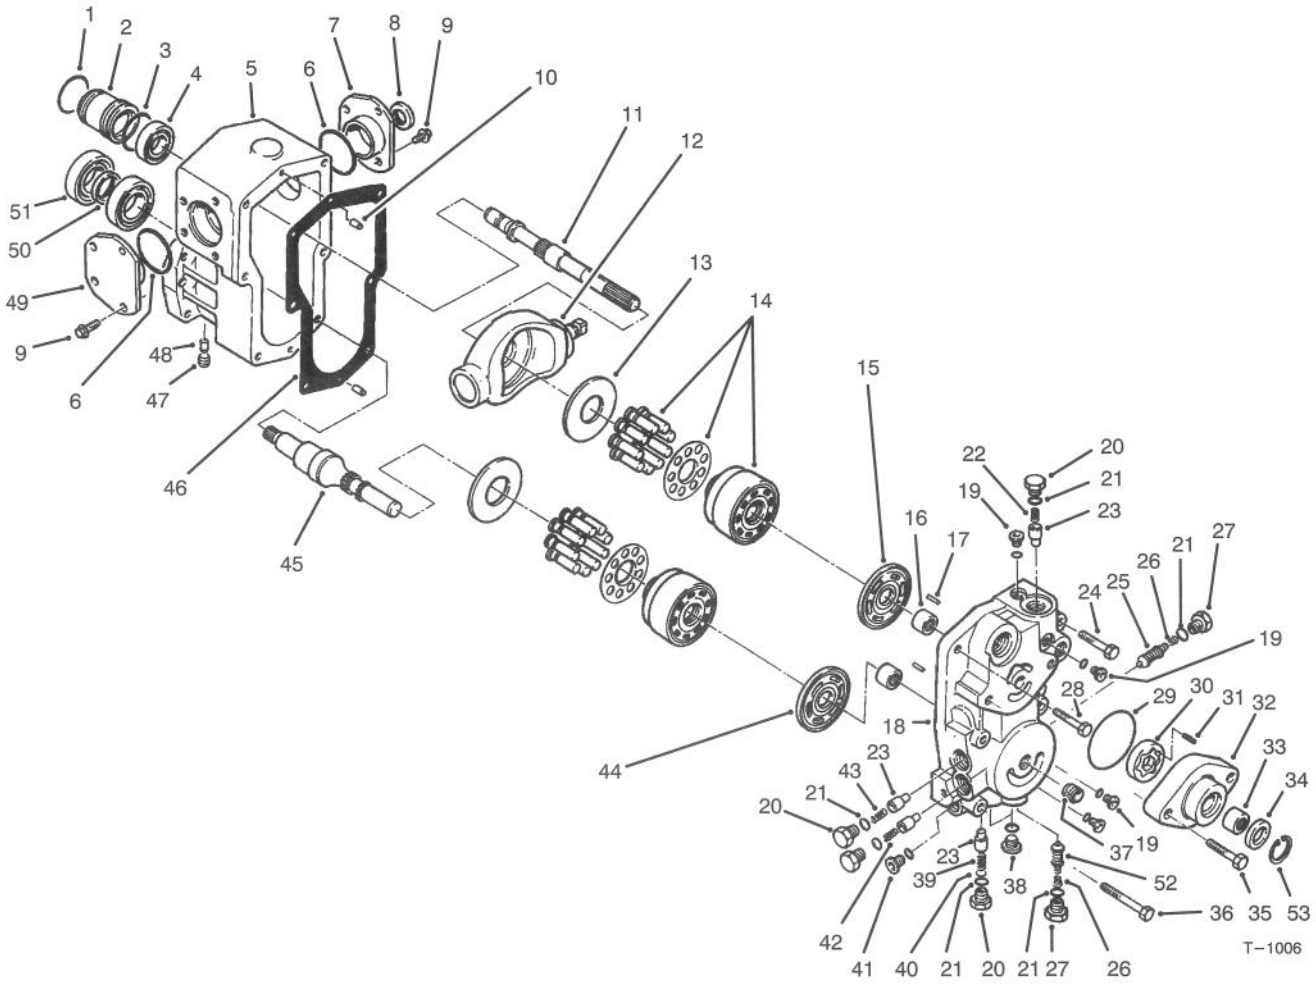


TRANSMISSION ASSEMBLY NO. 75–0010

Ref. No.	Part No.	Description	No. Used
1	75–0430	Ring – Retaining	1
2	75–0150	Guide – Seal	1
3	75–0410	O–Ring	1
4	75–0520	Bearing – Ball	1
5	75–0020	Housing	1
6	75–0210	O–Ring	2
7	86–7520	Trunion Cover Assy. R.H.	1
8	75–0230	Seal – Lip	1
9	75–0090	Screw – Cap Hex Hd.	8
10	75–0480	Pin	2
11	86–7540	Shaft – Pump	1
12	75–0390	Plate – Swash	1
13	75–0400	Plate – Thrust	2
14	75–0470	Cylinder Block Kit	2
15	75–0380	Plate – Valve	1
16	75–0500	Bearing – Needle	2
17	75–0510	Pin	2
18	75–0040	Center Section	1
19	75–0170	Plug – Straight Thread	4
20	75–0060	Plug	4
21	75–0240	O–Ring	6
22	75–0250	Spring	1
23	75–0260	Valve – Relief	4

Ref. No.	Part No.	Description	No. Used
24	75–0130	Screw – Cap Hex Hd.	3
25	75–0300	Valve – SCR	1
26	75–0140	Spring – Conical	1
27	75–0190	Plug – Special	2
28	75–0120	Screw – Cap Hex Hd.	1
29	75–0370	O–Ring	1
30	75–0360	Gerotor	1
31	75–0350	Pin	1
32	83–4780	Housing – Charge Pump	1
33	75–0340	Bearing – Needle	1
34	75–0330	Seal – Lip	1
35	75–0110	Screw – Cap Hex Hd.	2
36	75–0180	Screw – Cap Hex Hd.	2
37	75–0320	Nipple	1
38	75–0200	Plug – Straight Thread	2
39	75–0270	Spring	1
40	75–0310	Shim	1
41	75–0070	Plug	1
42	75–0280	Spring	1
43	75–0290	Spring	1
44	75–0490	Plate – Valve	1
45	75–0440	Shaft – Motor	1
46	75–0030	Gasket – Housing	1

*Not Illustrated

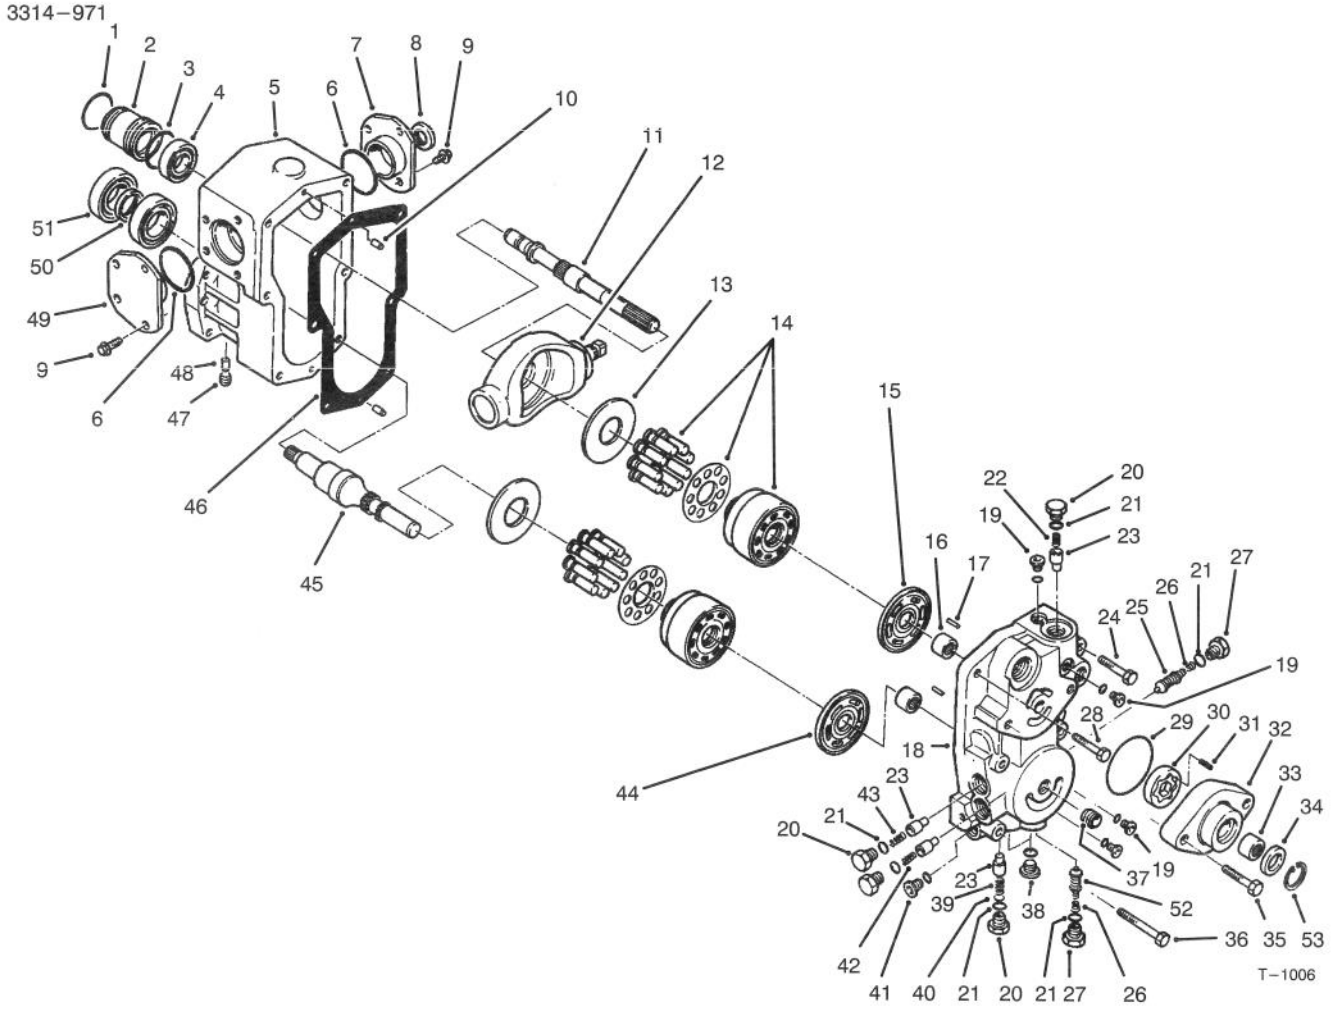


TRANSMISSION ASSEMBLY NO. 75–0010 (Continued)

Ref. No.	Part No.	Description	No. Used
47	75–0160	Plug – Pipe	1
48	75–0220	Pin	2
49	86–7530	Trunion Cover Assy. L.H.	1
50	75–0450	Collar	1

Ref. No.	Part No.	Description	No. Used
51	75–0460	Bearing – Ball	2
52	75–6930	Valve – SCR	1
53	32120–74	Ring – Retaining	1

*Not Illustrated

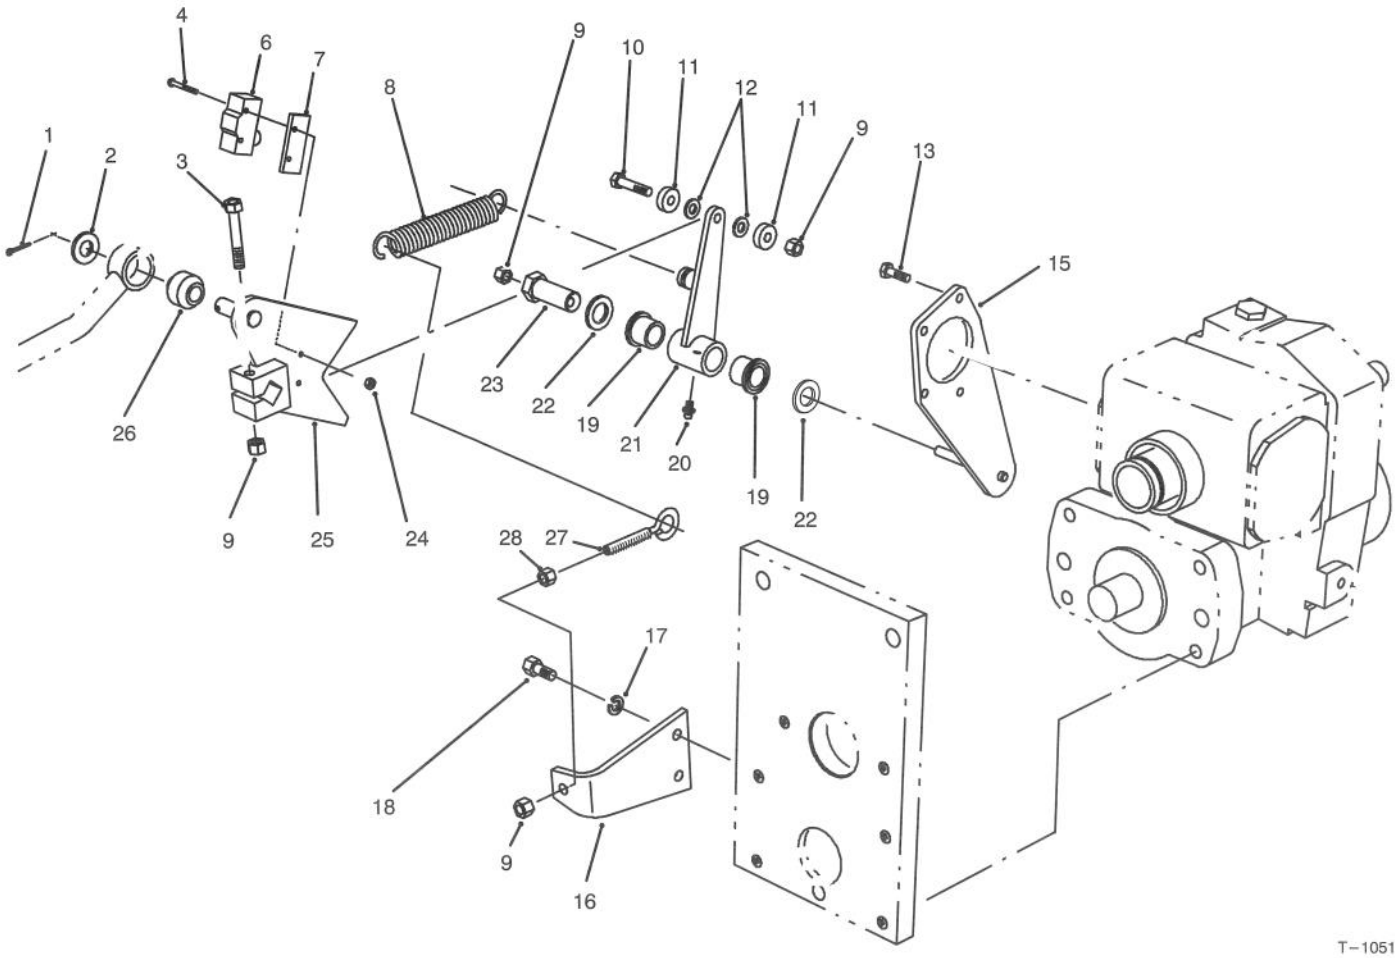


T–1051

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272–10	Pin – Cotter	1
2	3256–26	Washer – Flat	1
3	322–10	Screw – Cap Hex. Hd.	1
4	32105–21	Screw	2
6	29–6162	Switch – Neutral	1
7	75–4130	Plate – Switch	1
8	76–9430	Spring – Extension	1
9	3296–29	Nut – Lock	4
10	322–7	Screw – Cap Hex. Hd.	1
11	251–259	Bearing – Ball	2
12	75–5470	Spacer	2
13	32144–22	Screw – Cap Hex. Hd.	4
15	75–4080	Plate – Traction	1
16	85–9900	Plate – Spring Anchor	1

Ref. No.	Part No.	Description	No. Used
17	3253–4	Washer – Lock	2
18	322–3	Screw – Cap Hex. Hd.	2
19	256–113	Bushing – Flange	2
20	302–5	Fitting – Grease	1
21	75–4090	Switch Arm Assembly (Incl. Ref. #19 & 20)	1
22	3–6498	Washer – Thrust	2
23	76–8640	Stud – Traction	1
24	3296–9	Nut – Hex.	2
25	75–4100	Control – Pump	1
26	23–2270	Bushing – Rubber	1
27	85–9910	Eyebolt	1
28	3217–6	Nut – Hex.	1

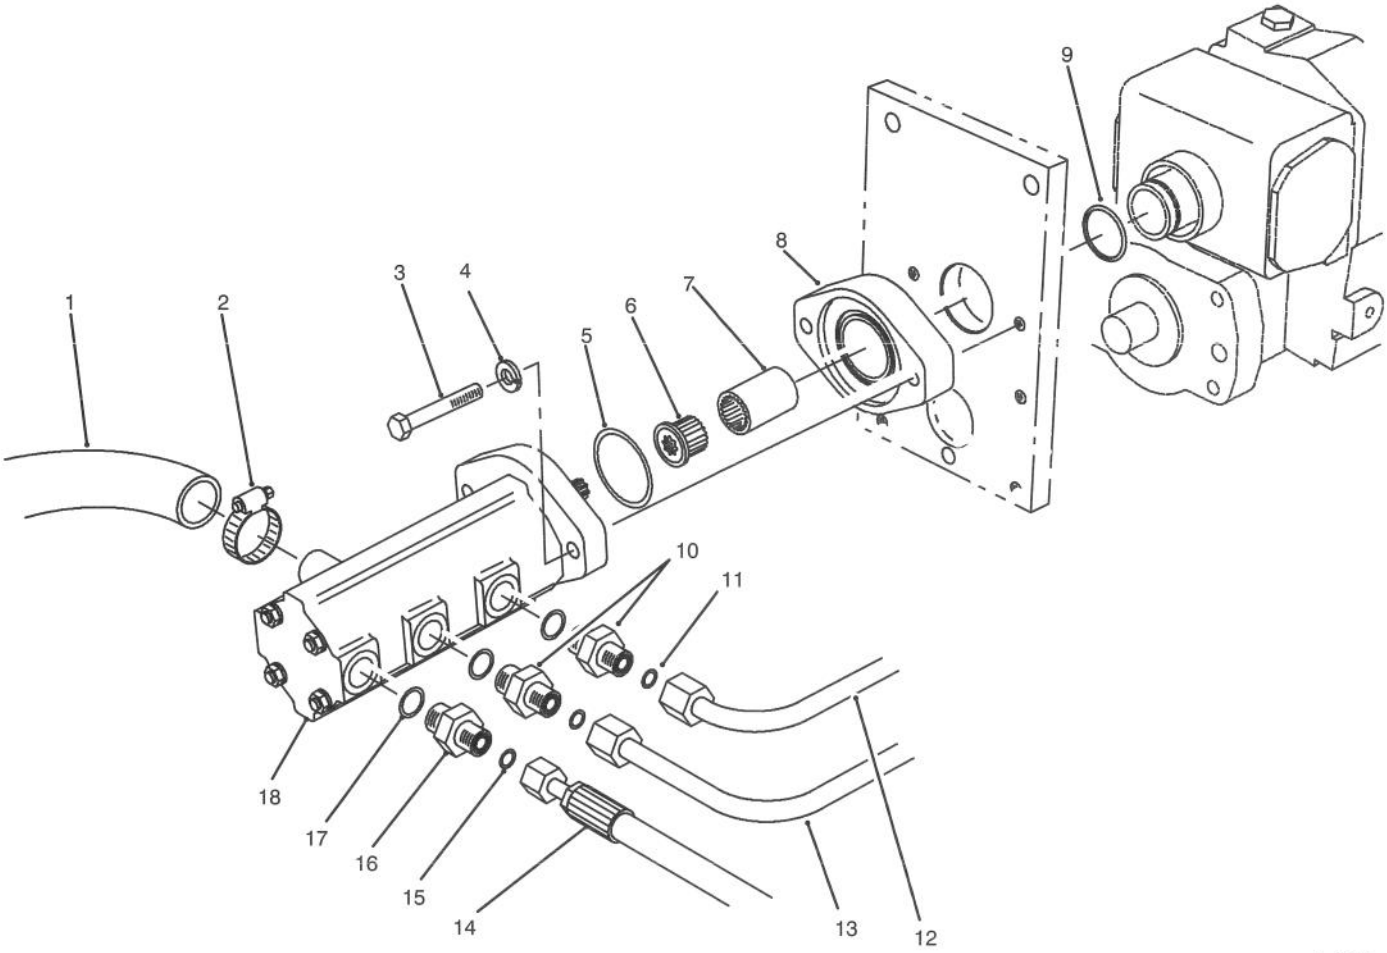


T–1052

GEAR PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–6870	Hose – Suction	1
2	2412–34	Clamp – Hose	1
3	323–12	Screw – Cap Hex. Hd.	2
4	3253–5	Washer – Lock	2
5	237–162	Seal – O–Ring	1
6	86–9200	Sleeve – Pump	1
7	75–2430	Coupling – Transmission	1
8	75–4400	Adaptor – Transmission	1
9	237–163	Seal – O–Ring	1
10	340–4	Fitting – Hydraulic Straight (Incl. Ref. #11 & 17)	2

Ref. No.	Part No.	Description	No. Used
11	237–30	Seal – O–Ring	2
12	75–5240	Tube – Hydraulic	1
13	75–5250	Tube – Hydraulic	1
14	75–6240	Hose – Hydraulic	1
15	237–22	Seal – O–Ring	1
16	340–3	Fitting – Hydraulic Straight (Incl. Ref. #15 & 17)	1
17	237–79	Seal – O–Ring	3
18	75–0800	Gear Pump Assembly	1

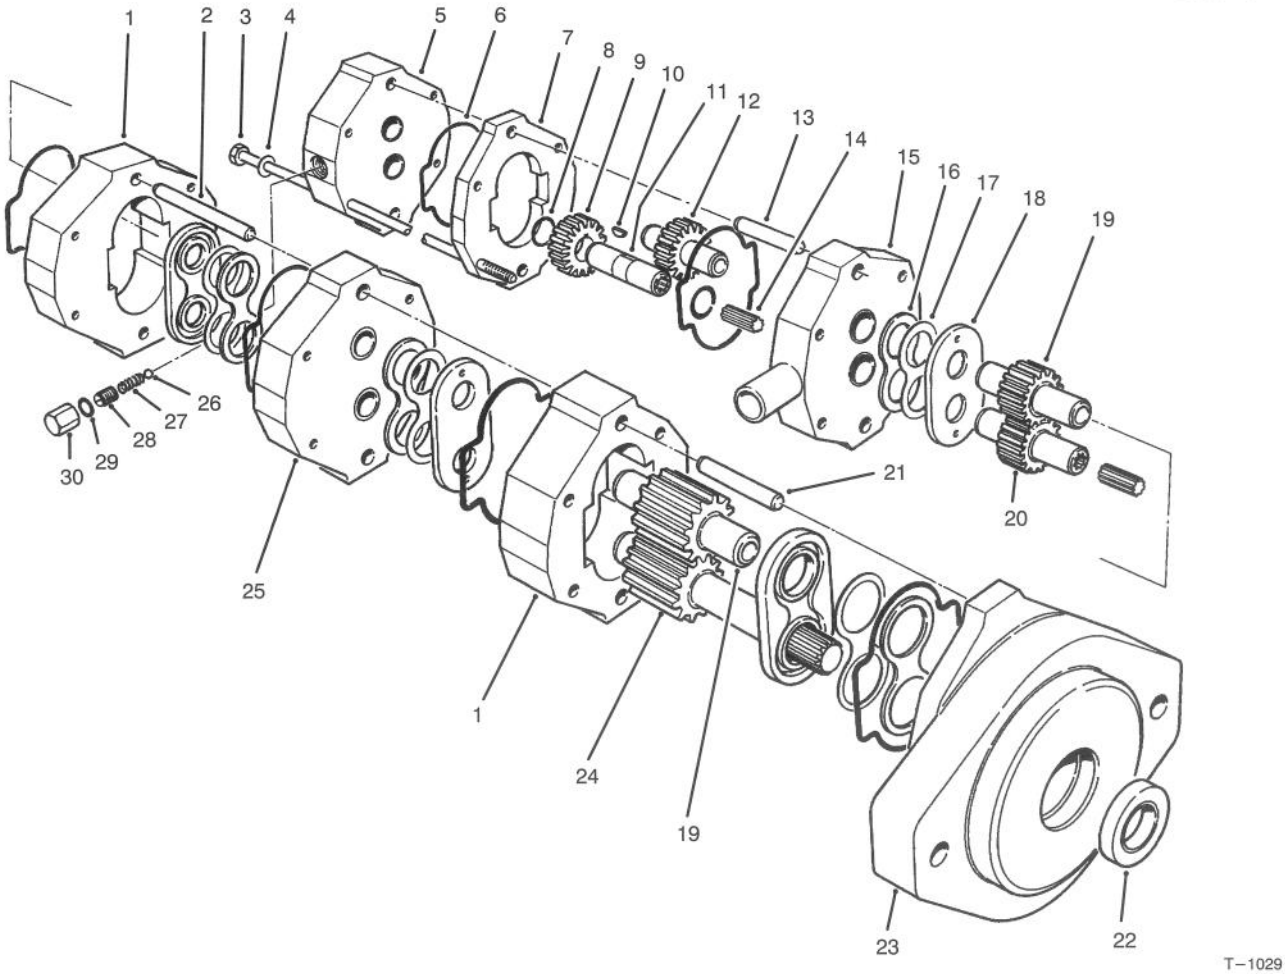


T–1029

HYDRAULIC PUMP NO. 75–0800

Ref. No.	Part No.	Description	No. Used
1	354–54	Plate – Gear	2
2	354–56	Pin – Dowel	2
3	354–64	Screw – Cap Hex. Hd.	4
4	354–16	Washer	4
5	354–63	Cover Assembly	1
6	353–922	Seal – Ring	6
7	354–60	Plate – Gear	1
8	353–886	Ring – Retaining	2
9	354–62	Gear	1
10	354–61	Key – Woodruff	1
11	354–59	Shaft – Drive	1
12	354–65	Idler Shaft Assembly	1
13	354–13	Pin– Dowel	2
14	354–5	Coupling	2
15	354–58	Plate Assembly	1
16	354–69	Seal – Load Hi Pressure	4

Ref. No.	Part No.	Description	No. Used
17	354–67	Seal – Pre–Load Hi Pressure	4
18	354–68	Plate – Load	4
19	354–66	Shaft – Idler	2
20	354–57	Gear – Drive	1
21	354–14	Pin – Dowel	2
22	354–15	Seal – Oil	1
23	354–53	Pump Body Assembly	1
24	354–52	Shaft – Drive	1
25	354–55	Plate Assembly (Incl. Ref. #26–30)	1
26	354–38	Ball – Valve	1
27	354–39	Spring – Compression	1
28	354–37	Adjuster – Valve	1
29	354–35	Gasket	1
30	354–36	Cap – Adjuster Valve	1

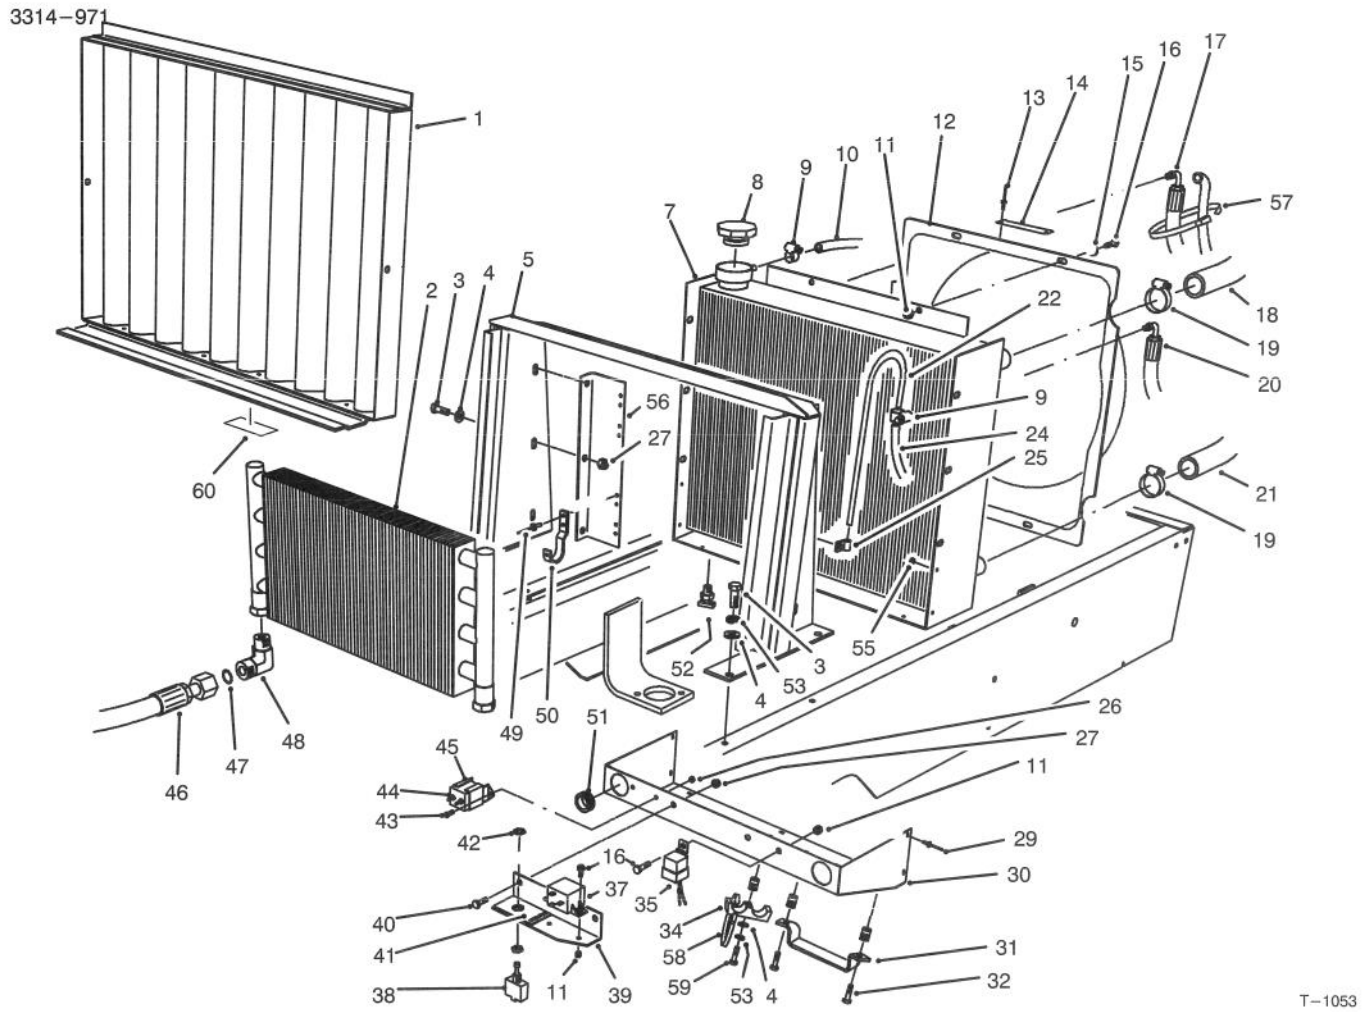


RADIATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–4060	Screen – Radiator	1
2	75–1040	Cooler – Oil	1
3	322–5	Screw – Cap Hex. Hd.	10
4	3256–23	Washer – Flat	11
5	75–4260	Support – Radiator	1
7	75–6290	Radiator	1
8	66–3240	Cap – Radiator	1
9	2412–108	Clamp – Hose	2
10	75–2850	Hose – Expansion Tank	1
11	3296–42	Nut – Lock	7
12	75–4350	Shroud – Fan	1
13	3290–271	Rivet – Pop	2
14	76–8750	Plate – Caution	1
15	3256–22	Washer – Flat	4
16	321–4	Screw – Cap Hex. Hd.	7
17	75–6170	Hose – Hydraulic	1
18	75–2240	Hose – Radiator Upper	1
19	2412–3	Clamp – Hose	4
20	75–6150	Hose – Hydraulic	1
21	75–2260	Hose – Radiator Lower	1
22	66–3180	Tube – Vent	1
24	75–4701	Hose – Fuel Vent	1
25	2412–103	Clamp – R	2

Ref. No.	Part No.	Description	No. Used
26	32149–7	Nut – Lock	2
27	3296–29	Nut – Lock	8
29	3269–13	Rivet – Pop	7
30	75–4310	Shield – Radiator	1
31	75–2860	Bracket – Hose	1
32	322–4	Screw – Cap Hex. Hd.	2
34	56–7974	Clamp – Tube	1
35	63–7590	Relay – Starter	1
37	66–8800	Relay – Glow Plug	1
38	75–1020	Switch – Backlap (Incl. Ref. #42)	1
39	75–3390	Bracket – Backlap	1
40	322–2	Screw – Cap Hex. Hd.	2
‡41	75–0750	Decal – Backlap Switch (English)	1
42	218–498	Nut – Lock	2
43	32105–8	Screw – Cap Hex. Hd.	2
44	67–4700	Resister – Glow	1
45	70–8560	Retainer – Glow Resister	1
46	75–6140	Hose – Hydraulic R.H.	1
*	75–6160	Hose – Hydraulic L.H.	1
47	237–65	Seal – O–Ring	2

*Not Illustrated
‡For different language versions of this part, see International Decal Cross Reference.

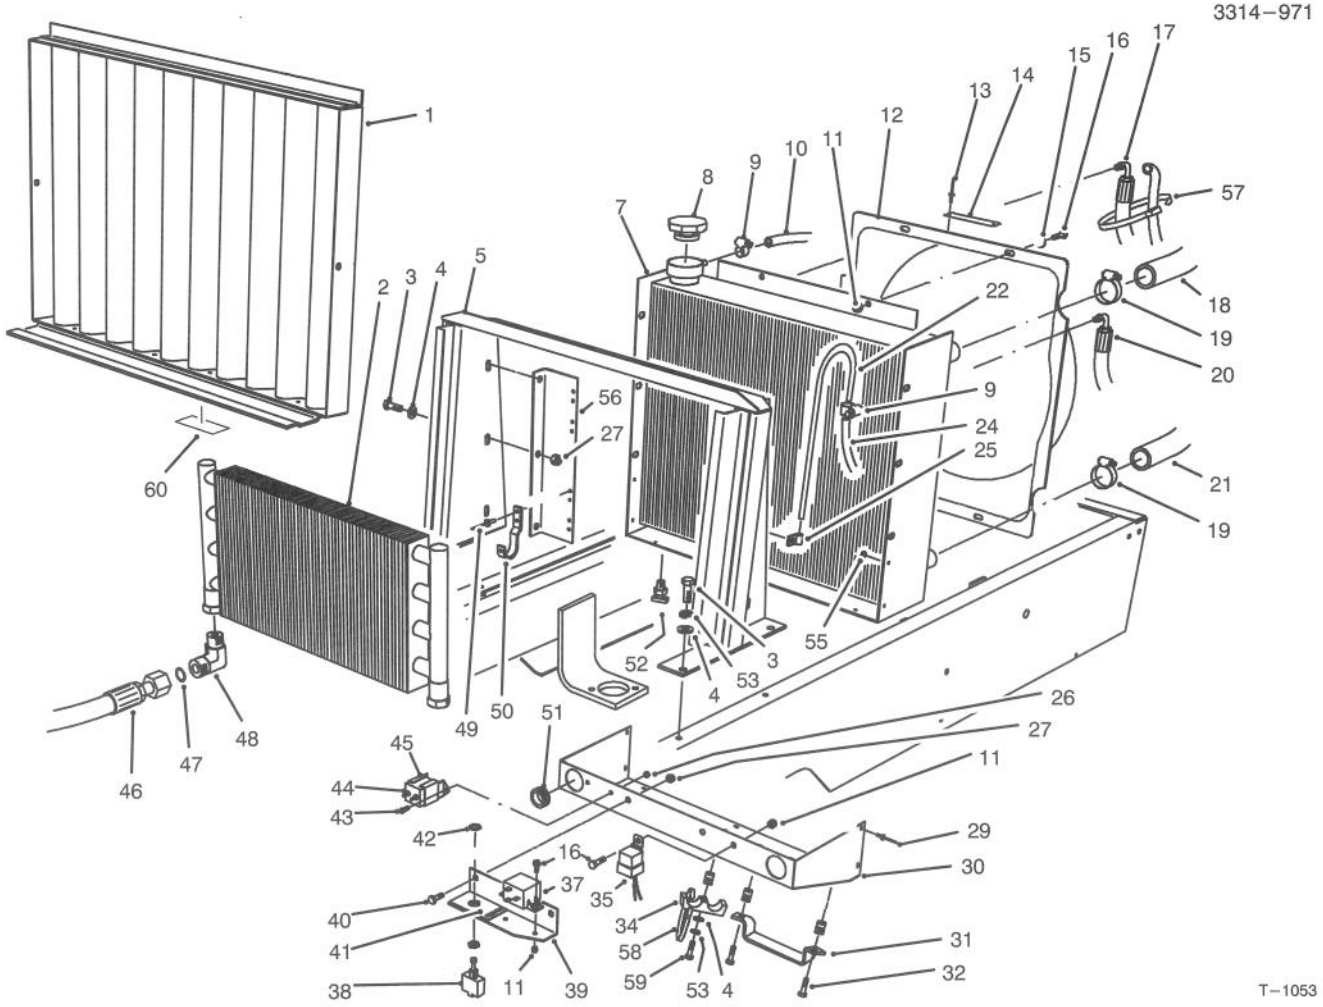

T–1053


RADIATOR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	340–108	Fitting – Hydraulic 90° (Incl. Ref. #47)	2
49	3269–15	Rivet – Pop	8
50	75–0930	Hook – Oil Cooler	4
51	240–3	Grommet	2
52	304–46	Drain – Radiator	1
53	3253–4	Washer – Lock	5
55	3269–10	Washer – Back–up	7

Ref. No.	Part No.	Description	No. Used
56	75–5180	Support Plate Assy. R.H. (Incl. Ref. #49 & 50)	1
*	75–5170	Support Plate Assy. L.H. (Incl. Ref. #49 & 50)	1
57	3290–378	Tie – Cable	1
58	3333–975	Tie – Cable	1
59	322–6	Screw – Cap Hex. Hd.	1
‡60	83–7450	Decal – Down (English)	1

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

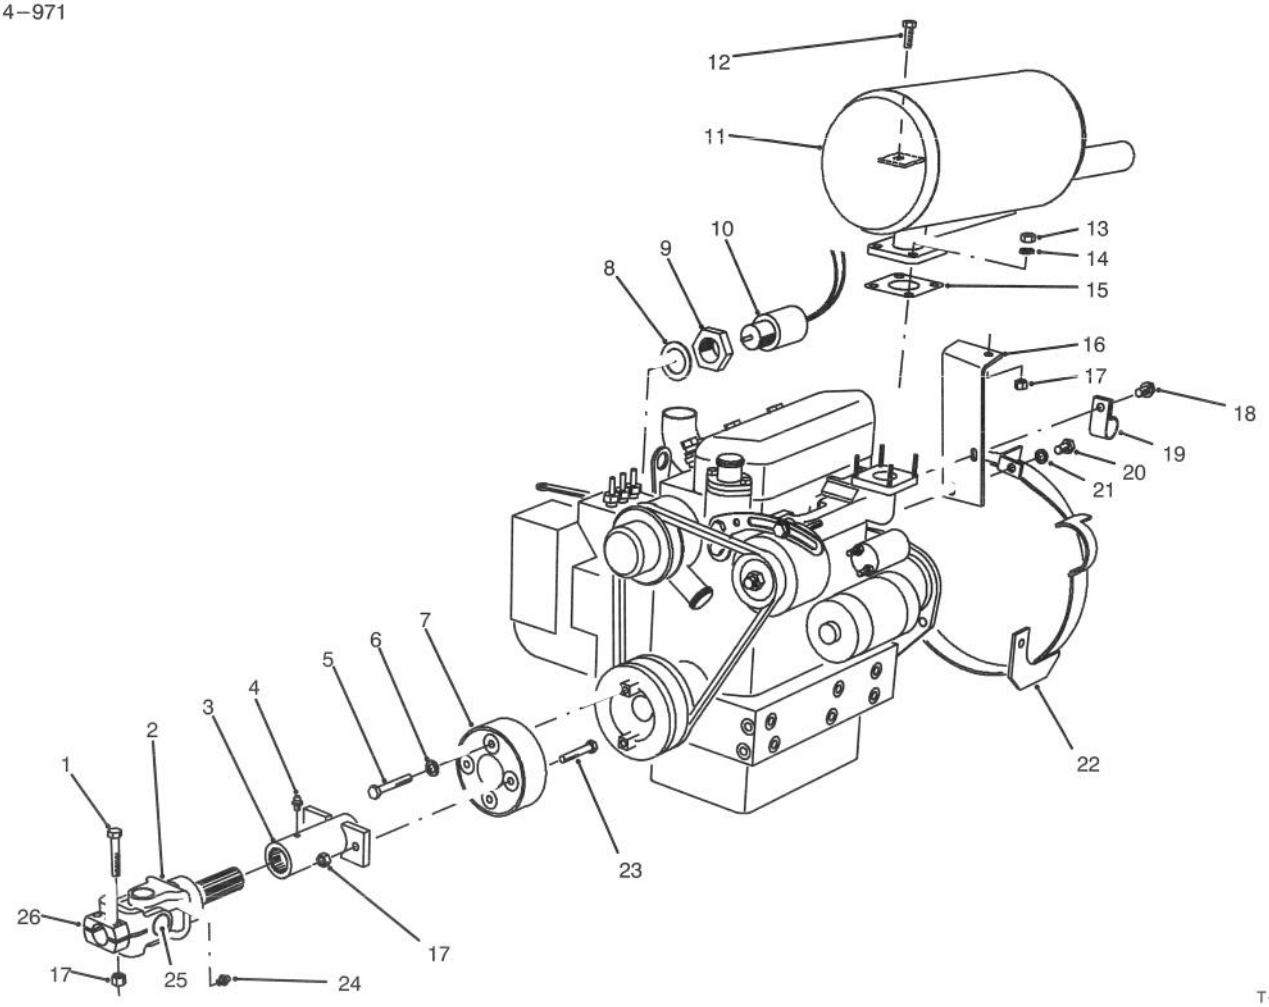


T–1054

MUFFLER & PUMP DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–9	Screw – Cap Hex. Hd.	2
2	75–6410	Yoke – Shaft	1
3	75–6420	Yoke – Slip Tube	1
4	302–58	Fitting – Grease	1
5	43–3220	Screw – Cap Hex. Hd.	2
6	48–9570	Washer – Lock	2
7	75–4630	Coupling – Driveshaft	1
8	43–2740	Gasket	1
9	43–2750	Nut – Lock	1
10	63–7440	Solenoid – Stop	1
11	75–1070	Muffler	1
*	75–6880	Screen – Spark Arrester (Optional)	1
12	322–4	Screw – Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
13	48–7930	Nut – Lock	4
14	42–9850	Washer – Lock	4
15	42–9110	Gasket – Muffler	1
16	75–4490	Bracket – Muffler	1
17	3296–29	Nut – Lock	5
18	67–2340	Screw – Hex. Washer Hd.	1
19	2412–81	Clamp – R	1
20	43–0090	Screw – Cap Hex. Hd.	3
21	48–9590	Washer – Lock	1
22	75–0940	Guard – Flywheel	1
23	322–12	Screw – Cap Hex. Hd.	2
24	62–3820	Fitting – Grease	1
25	54–9180	Kit – U–Joint	1
26	54–9040	Yoke – End	1


*Not Illustrated

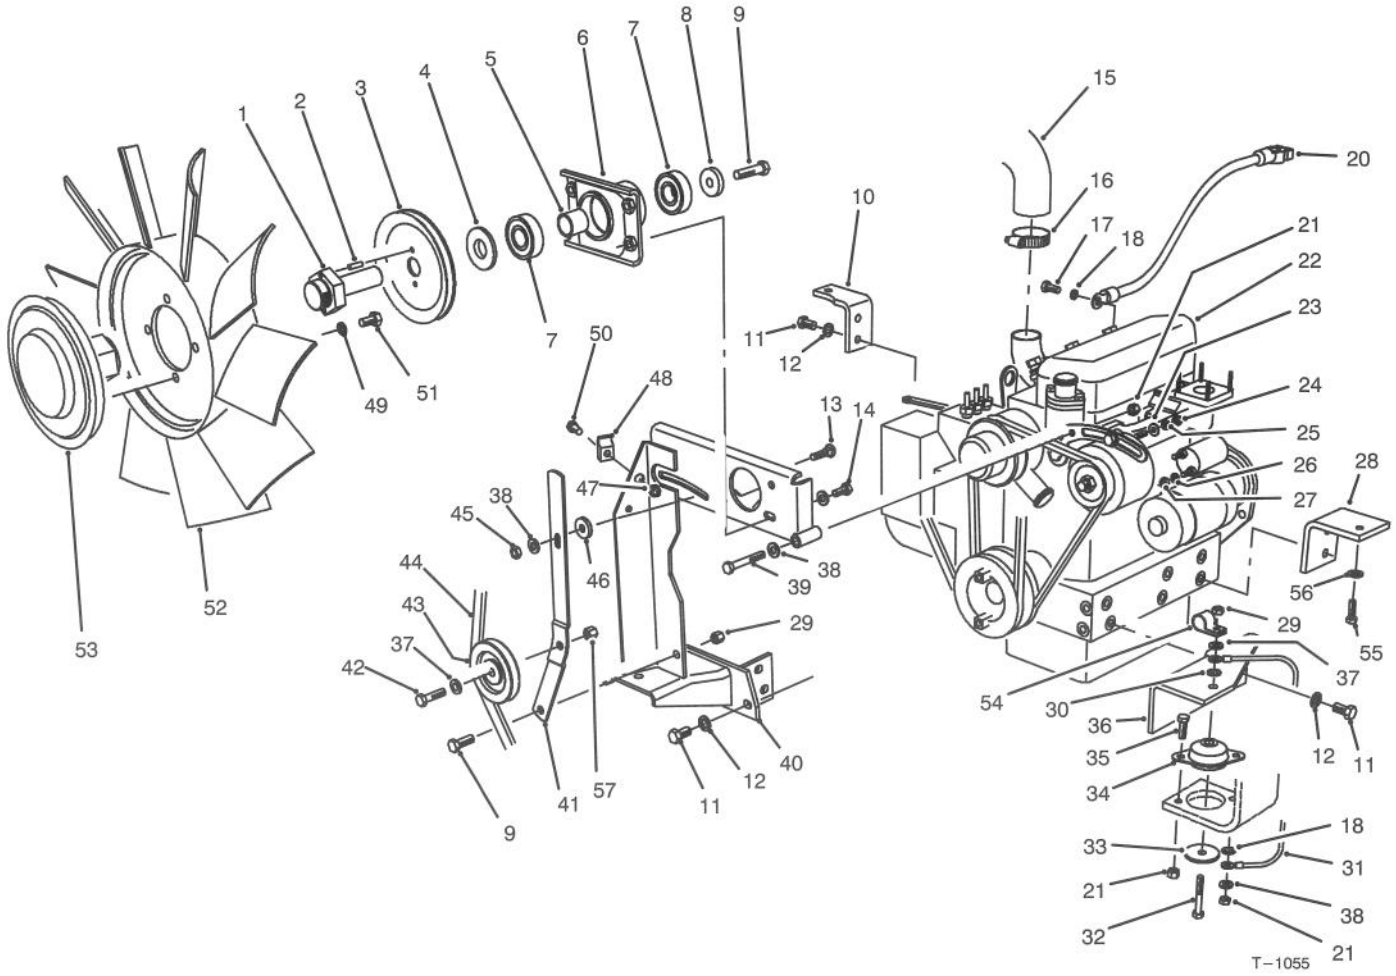

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–6380	Shaft – Fan	1
2	32121–2	Pin – Roll	2
3	75–6390	Pulley – Fan	1
4	47–0110	Spacer – Spindle	1
5	75–5310	Spacer – Bearing	1
6	75–4450	Hub – Fan Drive	1
7	251–318	Bearing – Ball	2
8	67–1630	Spacer – Fan	1
9	323–6	Screw – Cap Hex. Hd.	2
10	71–2910	Bracket – Engine R.H. Rear	1
11	63–7790	Screw – Cap Hex. Hd.	8
12	48–9590	Washer – Lock	10
13	3230–2	Bolt – Carriage	1
14	322–3	Screw – Cap Hex. Hd.	4
15	75–2460	Hose – Air Cleaner	1
16	2412–92	Clamp – Hose	1
17	48–7700	Screw – Cap Hex. Hd.	1
18	3255–8	Washer – Lock	2
20	75–1360	Cable – Battery (Ground)	1
21	3296–29	Nut – Lock	9
22	75–0900	Engine Assembly	1
23	5–3637	Washer – Flat	1
24	43–5970	Nut – Hex.	1


Ref. No.	Part No.	Description	No. Used
25	43–5920	Washer – Lock	1
26	42–9850	Washer – Lock	2
27	57–6390	Nut – Lock	2
28	75–2830	Bracket – Engine L.H. Rear	1
29	3296–39	Nut – Lock	4
30	3255–9	Washer – Lock E.T.L.W.	1
31	70–8220	Cable – Ground	1
32	323–11	Screw – Cap Hex. Hd.	3
33	63–7400	Washer – Flat	4
34	63–7140	Mount – Engine	4
35	322–5	Screw – Cap Hex. Hd.	8
36	66–2320	Bracket – Engine L.H. Front	1
37	3256–24	Washer – Flat	4
38	3256–23	Washer – Flat	5
39	322–11	Screw – Cap Hex. Hd.	1
40	75–4220	Bracket – Fan	1
41	63–6720	Bracket – Fan Idler	1
42	323–7	Screw – Cap Hex. Hd.	1
43	63–8140	Pulley – Idler	1
44	75–1380	Belt – V	1
45	32149–1	Nut – Lock	1
46	27–9560	Spacer	1
47	3296–42	Nut – Lock	1

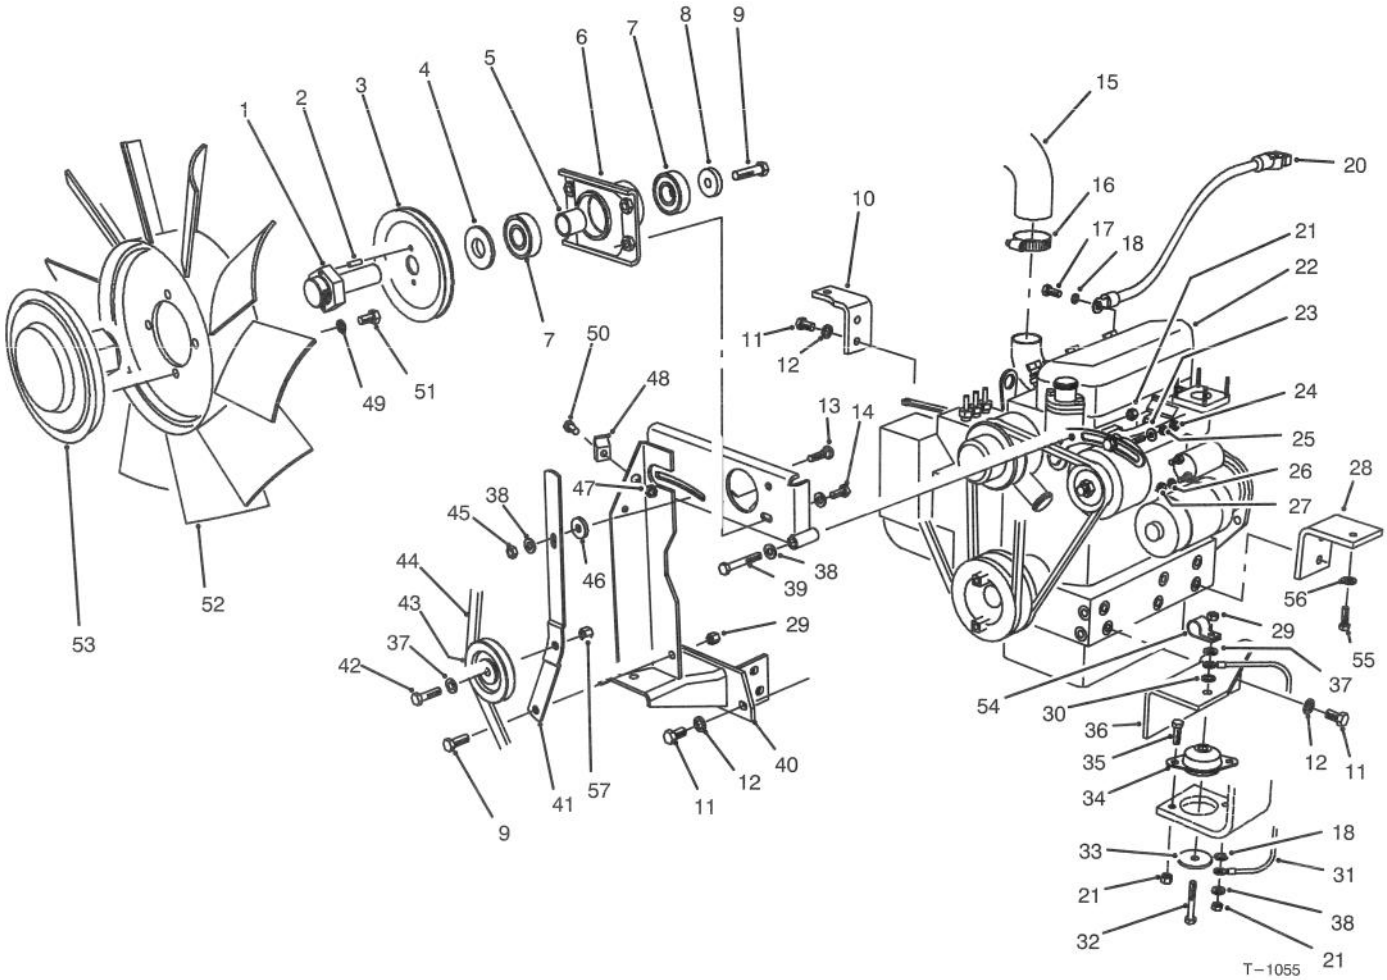

ENGINE INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	3–6657	Clamp – Cable	1
49	3253–4	Washer – Lock	4
50	321–4	Screw – Cap Hex. Hd.	1
51	322–2	Screw – Cap Hex. Hd.	4
52	75–3780	Fan	1

Ref. No.	Part No.	Description	No. Used
53	74–5520	Clutch – Fan	1
54	2412–126	Clamp – R	1
55	323–9	Screw – Cap Hex. Hd.	1
56	3253–21	Washer – Lock	1
57	3296–59	Nut – Lock	1

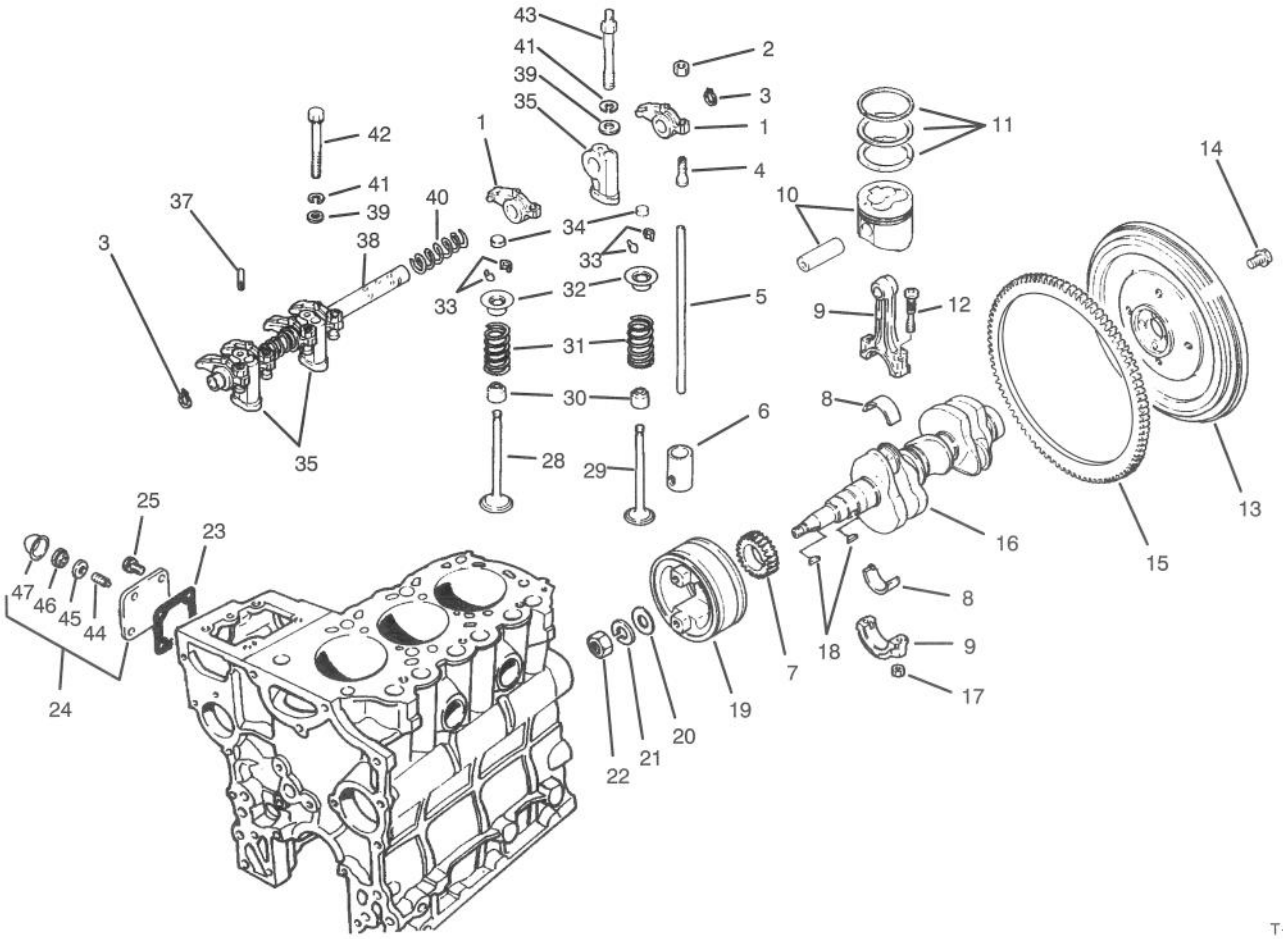


T–0565

VALVES AND CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3160	Arm–Rocker	6
2	67–3230	Nut – Jam	6
3	67–3240	Snap Ring	2
4	67–3210	Screw – Adjusting	6
5	67–3150	Rod–Push	6
6	67–3120	Tappet	6
7	67–2910	Gear	1
8	75–5010	Bearing Set STD	3
*	67–2890	Bearing Set 0.25 mm US	3
*	67–2900	Bearing Set 0.50 mm US	3
9	67–2850	Rod Assembly–Connecting (Incl. Ref. #12 & 17)	3
10	75–5080	Piston & Pin Set STD	3
*	75–5090	Piston & Pin Set 0.25 mm OS	3
*	75–5100	Piston & Pin Set 0.50 mm OS	3
11	75–5050	Ring Set STD	3
*	75–5060	Ring Set 0.25 mm OS	3
*	75–5070	Ring Set 0.50 mm OS	3
12	67–2860	Bolt	6
13	67–2970	Flywheel Assembly (Incl. Ref. #14)	1

Ref. No.	Part No.	Description	No. Used
14	67–2990	Bolt	4
15	67–2980	Gear – Ring	1
16	67–2920	Crankshaft	1
17	42–9590	Nut	6
18	56–0480	Key – Woodruff	2
19	67–2930	Pulley – Crankshaft	1
20	67–2950	Washer	1
21	67–2960	Washer – Lock	1
22	67–2940	Nut – Jam	1
23	67–4310	Gasket	1
24	75–5110	Cover Assy. (Incl. Ref. #44–47)	1
25	42–9440	Bolt W/Washer	4
28	67–3130	Valve – Intake	3
29	67–3140	Valve – Exhaust	3
30	42–7870	Seal	6
31	67–3110	Spring	6
32	67–3100	Retainer	6
33	42–7860	Lock	12
34	67–3180	Cap	6
35	67–3200	Stay – Rocker	3
37	67–3220	Pin	1
38	67–3190	Rocker Shaft Assembly	1

*Not Illustrated

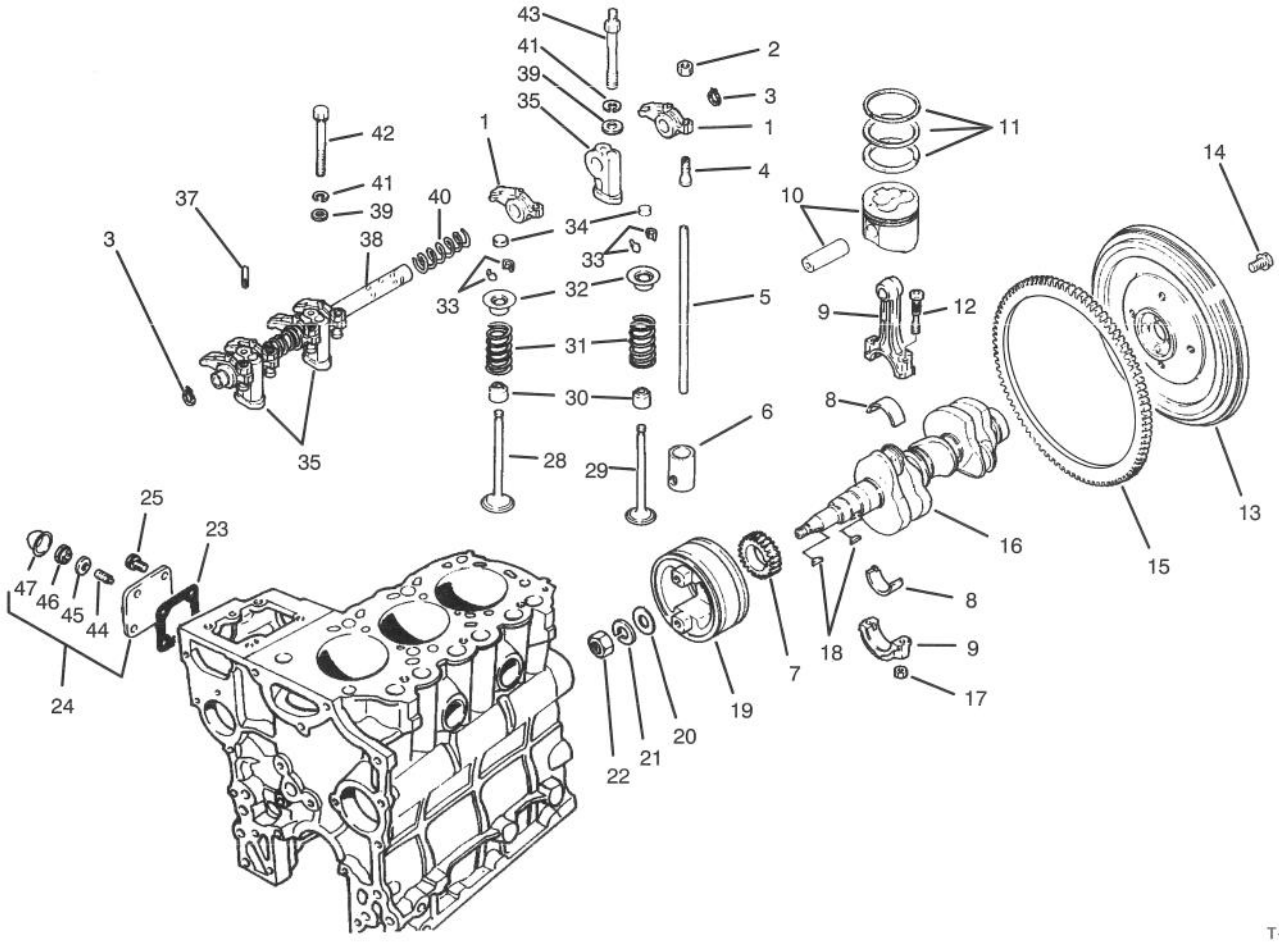


T–0565

VALVES AND CRANKSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
39	42–9660	Washer	3
40	67–3170	Spring	2
41	67–3260	Washer	3
42	42–9510	Bolt	1
43	67–3250	Bolt–Rocker Stay	2

Ref. No.	Part No.	Description	No. Used
44	43–3160	Screw – Adjusting	1
45	75–5120	Gasket	1
46	43–5960	Nut – Special	1
47	43–2820	Cap – Sealing	1

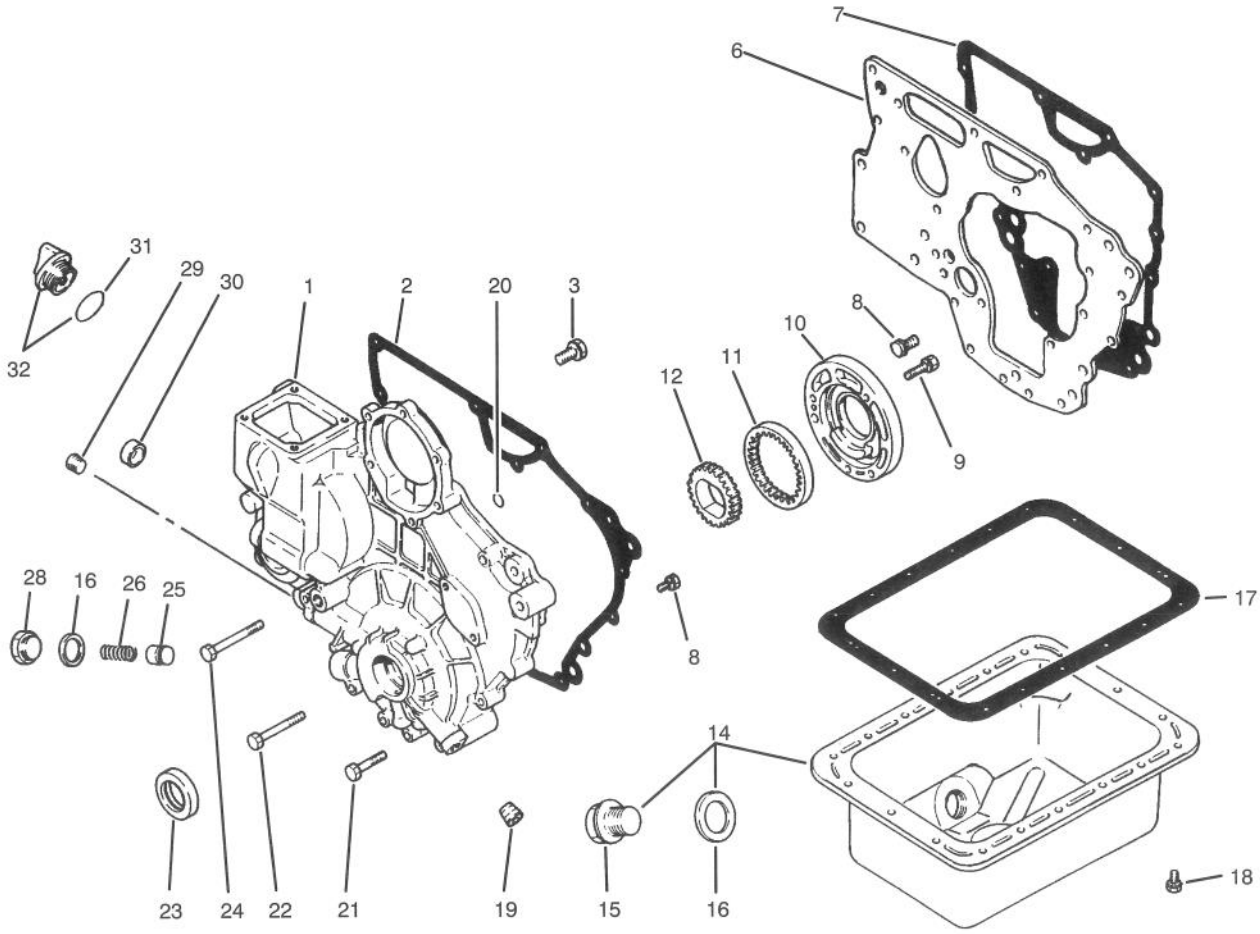


T–0567

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–4920	Case	1
2	67–2580	Gasket – Case	1
3	67–2340	Bolt W/Washer	3
6	67–2310	Plate – Front	1
7	67–2320	Gasket – Plate	1
8	42–9440	Bolt W/Washer	11
9	67–2560	Bolt W/Washer	3
10	67–2550	Housing – Oil Pump	1
11	67–2540	Gear – Outer	1
12	67–2530	Gear – Inner	1
14	75–4910	Oil Pan Assembly (Incl. Ref. #15–16)	1
15	42–9260	Plug – Drain	1
16	42–7290	Gasket – Drain	2
17	67–2480	Gasket – Oil Pan	1
18	42–9490	Bolt W/Washer	18

Ref. No.	Part No.	Description	No. Used
19	42–7210	Plug–Taper	1
20	67–2630	Seal – O–Ring	2
21	67–2600	Bolt	3
22	67–2610	Bolt	4
23	67–2590	Seal – Oil	1
24	67–2620	Bolt	1
25	67–2500	Plunger – Relief	1
26	67–2510	Spring – Relief	1
28	67–2520	Plug	1
29	67–2570	Plug – Taper	1
30	67–2640	Cap	1
31	67–2660	Seal – O–Ring	1
32	67–2650	Oil Fill Cap Assembly (Incl. Ref. #31)	1
*	75–5040	Gasket Kit (Incl. Ref. #2, 7, 16 &17)	1

*Not Illustrated

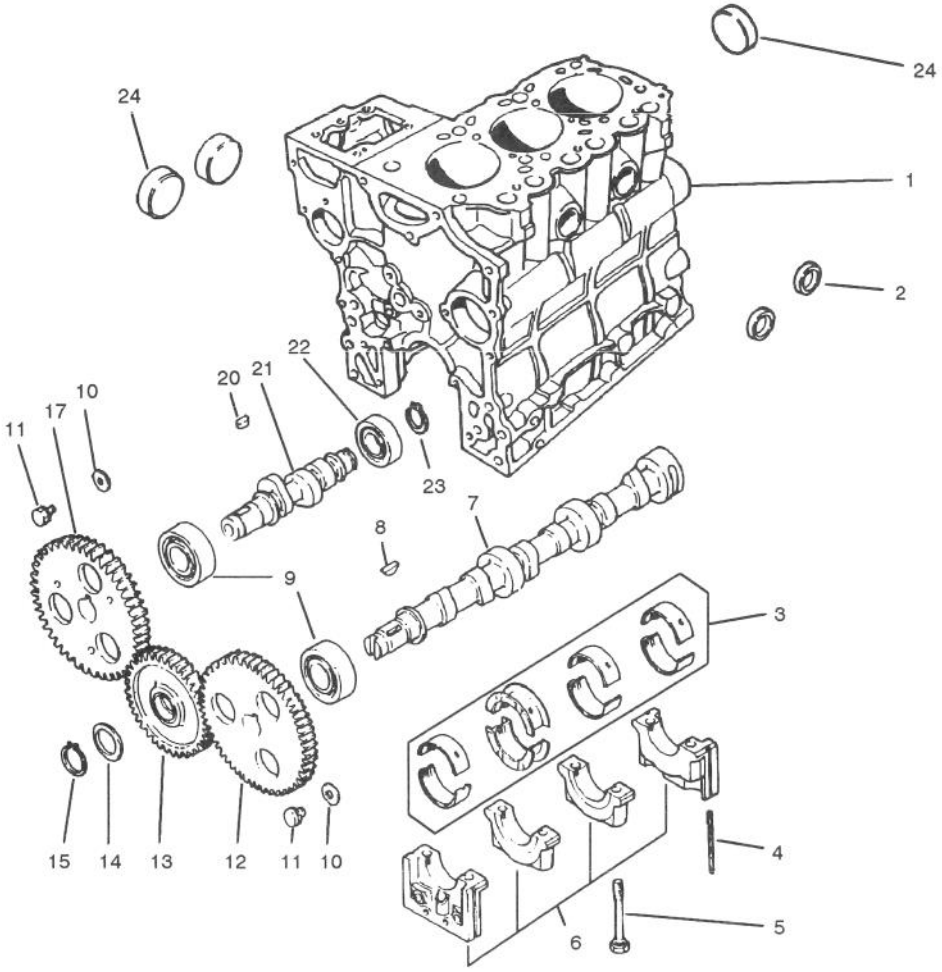


T–0564

CAMSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–4960	Block Assembly (Incl. Ref. #2, 5, 6 & 24)	1
2	42–7080	Cap	2
3	75–4900	Bearing Set STD	1
*	67–2410	Bearing Set 0.25 mm US	1
*	67–2420	Bearing Set 0.50 mm US	1
4	67–2200	Seal	4
5	67–2250	Bolt	8
6		Cap Assembly	1
7	67–3010	Cam Shaft	1
8	56–0480	Key – Woodruff	1
9	67–3030	Bearing	2

Ref. No.	Part No.	Description	No. Used
10	67–3000	Washer	2
11	42–9490	Bolt W/Washer	2
12	67–3020	Gear	1
13	67–3090	Gear Assembly	1
14	67–3040	Plate	1
15	56–1060	Snap Ring	1
17	67–3070	Gear	1
20	42–7840	Key	1
21	67–3060	Shaft	1
22	67–3050	Bearing	1
23	67–3080	Snap Ring	1
24	56–0020	Plug	3


*Not Illustrated

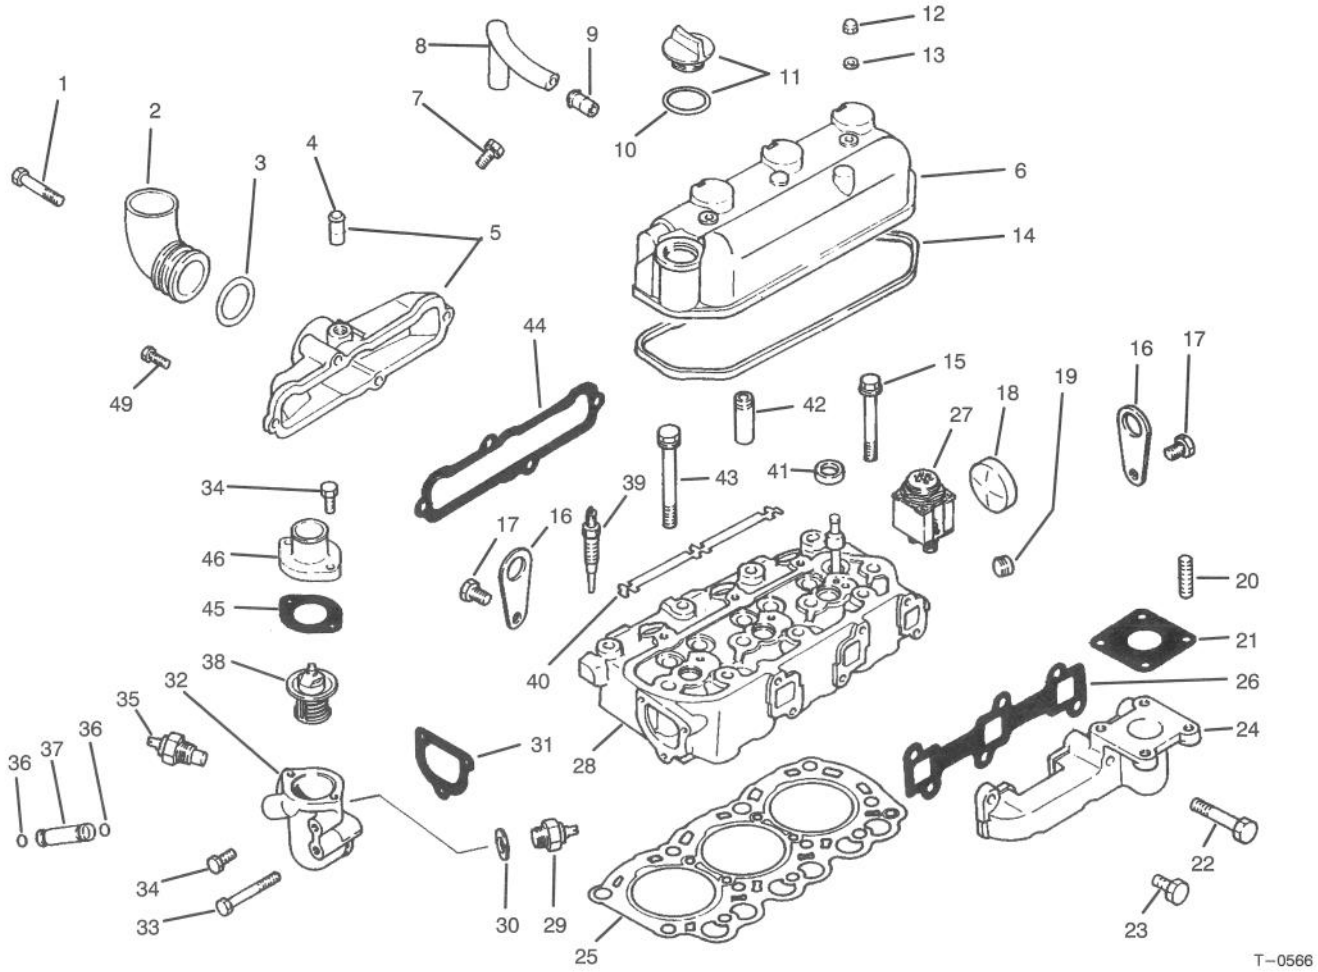

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–4400	Bolt	2
2	67–4520	Pipe	1
3	67–4540	Seal – O–Ring	1
4	42–7510	Pipe	1
5	67–4530	Cover – Intake	1
6	67–2750	Cover Assembly (Incl. Ref. #9)	1
7	42–9430	Bolt W/Washer	1
8	67–2670	Hose – Breather	1
9	42–7510	Pipe	1
10	67–2660	Seal – O–Ring	1
11	67–2650	Cap – Oil Filler	1
12	67–2770	Nut – Cap	2
13	67–2780	Washer	2
14	67–2760	Gasket	1
15	67–2740	Bolt – Flange	3
16	67–2680	Hanger –Engine	2
17	67–2340	Bolt W/Washer	4
18	56–0020	Plug – Expansion	1
19	67–2570	Plug – Taper	1
20	42–9570	Stud	4
21	42–9110	Gasket	1
22	67–4580	Bolt	2


Ref. No.	Part No.	Description	No. Used
23	67–4590	Bolt	4
24	67–4560	Manifold – Exhaust	1
25	75–4950	Gasket – Cylinder Head	1
26	67–4570	Gasket – Exhaust Manifold	1
27	67–4700	Lamp – Glow	1
28	75–4930	Cylinder Head Assembly (Incl. Ref. #18, 41 & 42)	1
29	67–4500	Switch – Thermo	1
30	67–4490	Gasket	1
31	67–4460	Gasket – Switch	1
32	67–4450	Fitting – Thermostat	1
33	67–4470	Bolt	1
34	67–2330	Bolt	4
35	67–4510	Gauge Nut – Temperature	1
36	43–2710	Seal – O–Ring	2
37	67–4480	Pipe – By–Pass	1
38	67–4440	Thermostat	1
39	67–4680	Plug – Glow	3
40	67–4690	Plate – Glow Plug	1
41	67–2710	Cap – Sealing	3
42	67–2700	Guide – Valve	6
43	67–2730	Bolt	8
44	67–4550	Gasket–Intake Manifold	1

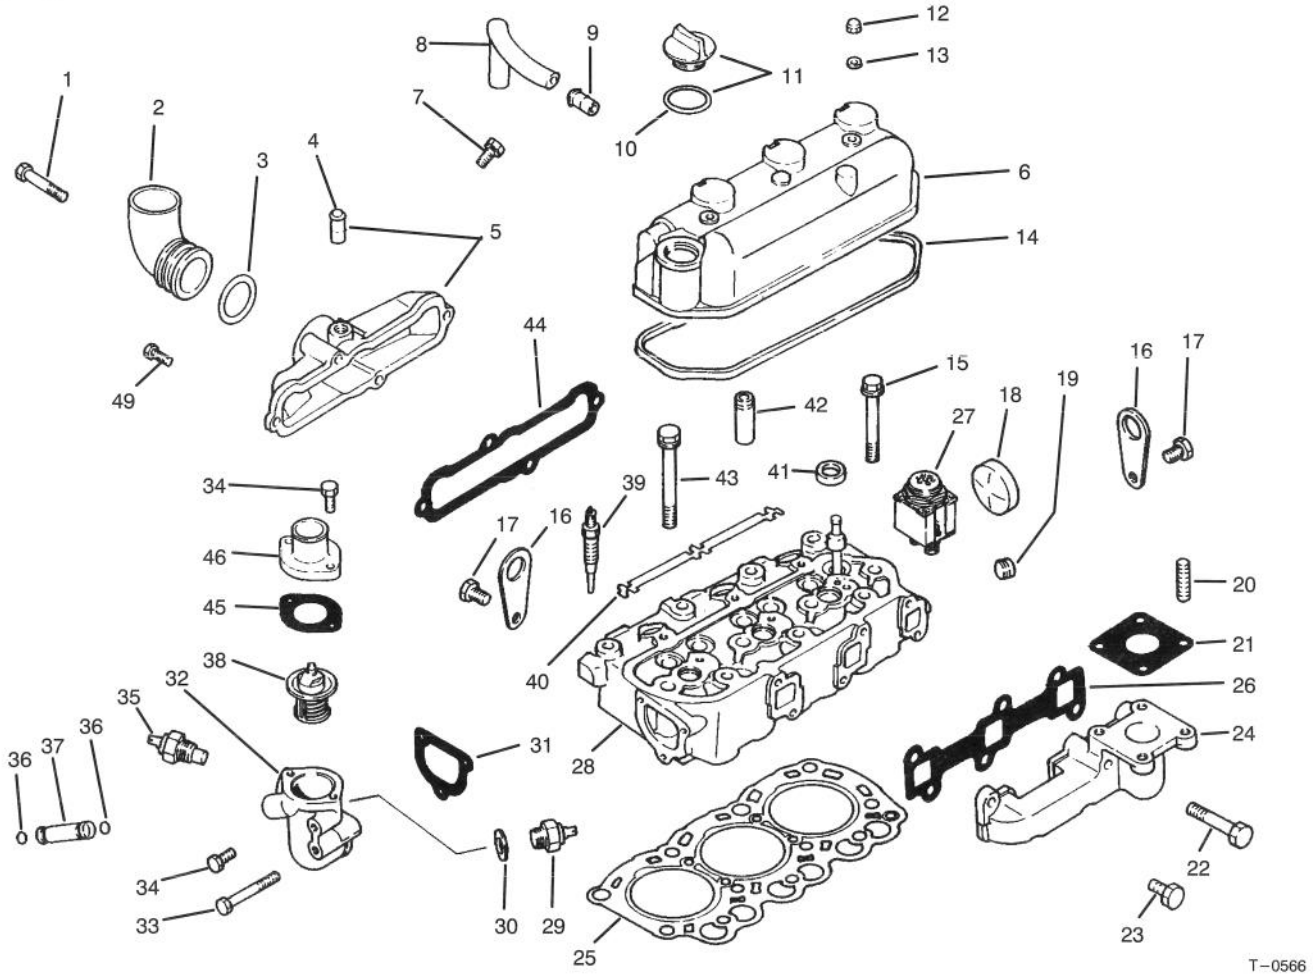

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	67–4430	Gasket – Fitting	1
46	67–4420	Fitting – Water	1

Ref. No.	Part No.	Description	No. Used
49	67–2330	Bolt	2

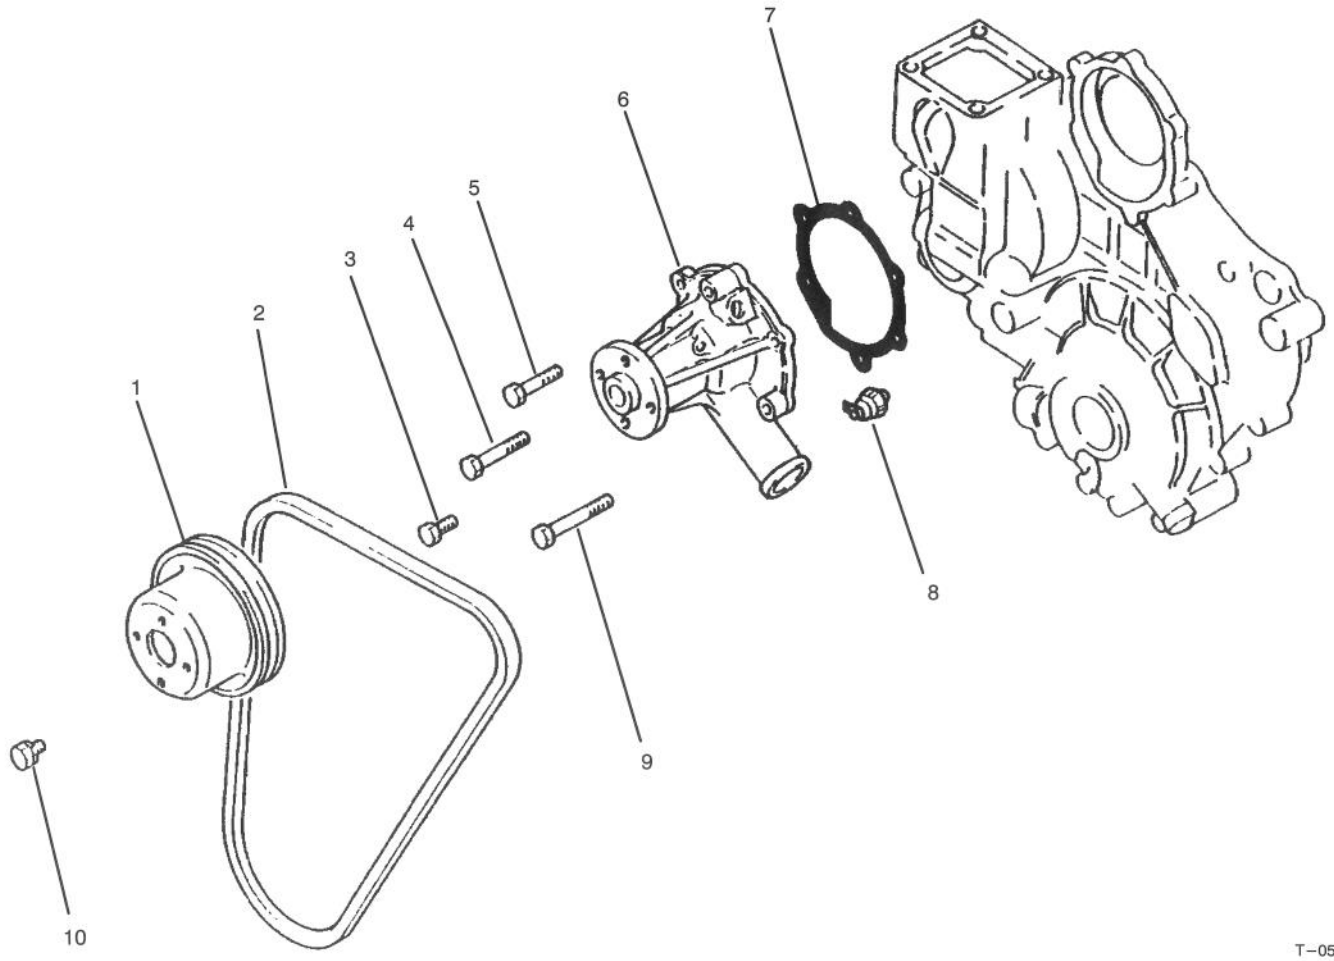


T–0568

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–4360	Pulley – Water Pump	1
2	67–4410	V–Belt	1
3	67–2330	Bolt	2
4	67–4400	Bolt	1
5	67–2600	Bolt	1

Ref. No.	Part No.	Description	No. Used
6	67–4380	Water Pump Assembly	1
7	67–4390	Gasket – Water Pump	1
8	67–4350	Switch – Oil Pressure	1
9	67–2610	Bolt	2
10	42–9490	Bolt W/Washer	4

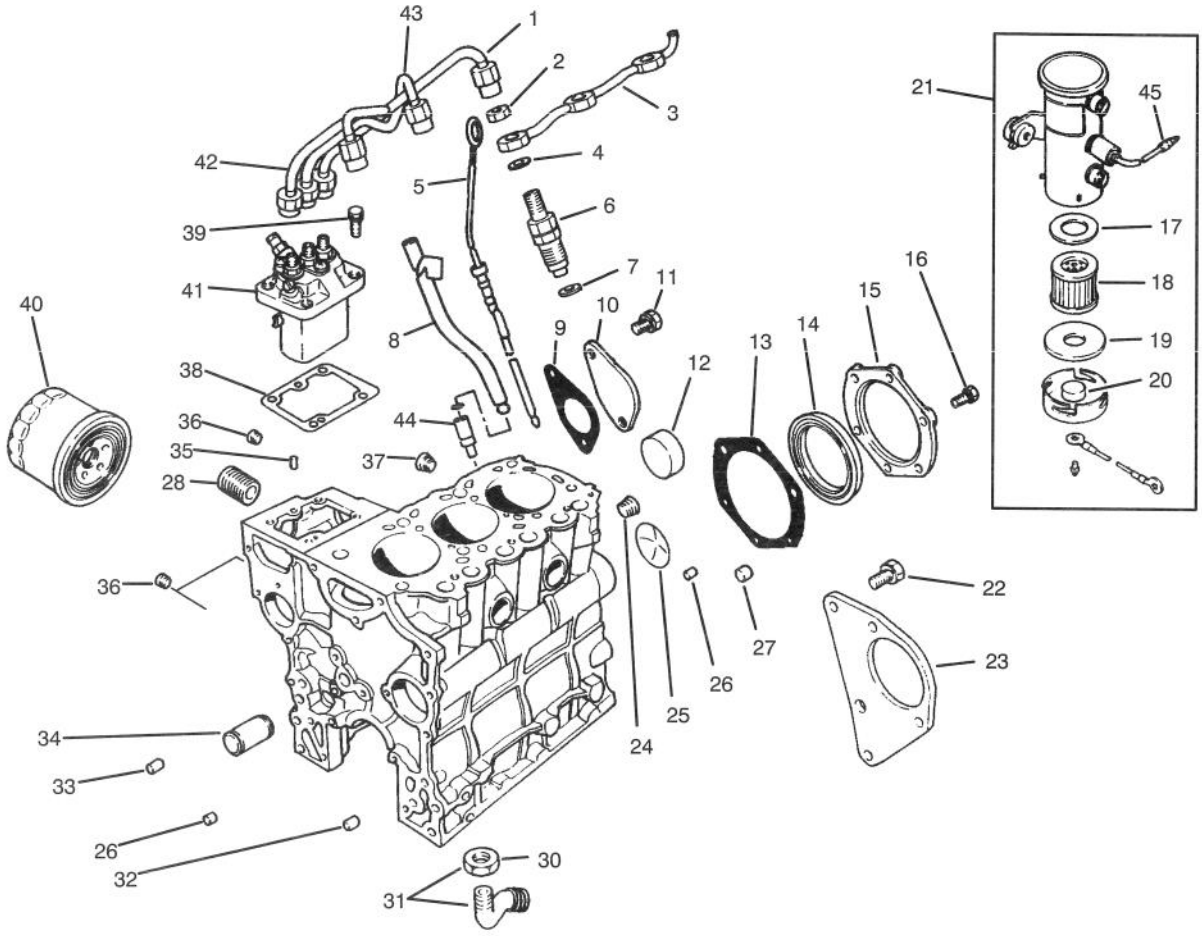


T–0569

FUEL SUPPLY & ENGINE BLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3420	Pipe Assy. No. 3	1
2	67–3430	Nut	3
3	70–8700	Pipe – Fuel Return	1
4	67–3440	Gasket	3
5	70–8880	Dipstick	1
6	67–3380	Nozzle & Holder Assembly	1
7	67–3390	Gasket – Nozzle Holder	3
8	70–8870	Guide – Oil Level	1
9	67–2300	Gasket	1
10	67–2290	Cover	1
11	67–2340	Bolt W/Washer	2
12	56–0020	Plug–Expansion	3
13	67–2280	Gasket–Seal, Oil	1
14	67–2230	Seal–Oil	1
15	67–2270	Case – Oil Seal	1
16	67–2330	Bolt	6
17	43–2570	Gasket–Coil Side	1
18	43–2550	Filter	1
19	43–2560	Gasket – Side Cover	1
20	43–2580	Magnet	1
21	53–8150	Pump Assembly (Incl. Ref. #17–20)	1

Ref. No.	Part No.	Description	No. Used
22	67–2440	Bolt W/Washer	3
23	67–2430	Bracket – Starter	1
24	67–2390	Plug – Taper	1
25	67–2350	Plug – Expansion	1
26	67–2360	Bushing – Knock	2
27	67–2380	Bushing – Knock	3
28	56–1230	Shaft – Oil Filter	1
30	42–9650	Nut – Jam	1
31	67–4340	Screen Assembly (Incl. Ref. #30)	1
32	67–2370	Bushing – Knock	1
33	42–7190	Bushing – Knock	2
34	67–2260	Shaft–Idler	1
35	56–0220	Pin – Dowel	2
36	67–2210	Plug – Taper	3
37	56–0100	Plug – Taper	1
38	67–3280	Shim 0.2 mm	1
*	67–3290	Shim 0.3 mm	1
*	67–3300	Shim 0.5 mm	1
*	67–3310	Shim 0.4 mm	1
*	67–3320	Shim 0.6 mm	1

*Not Illustrated

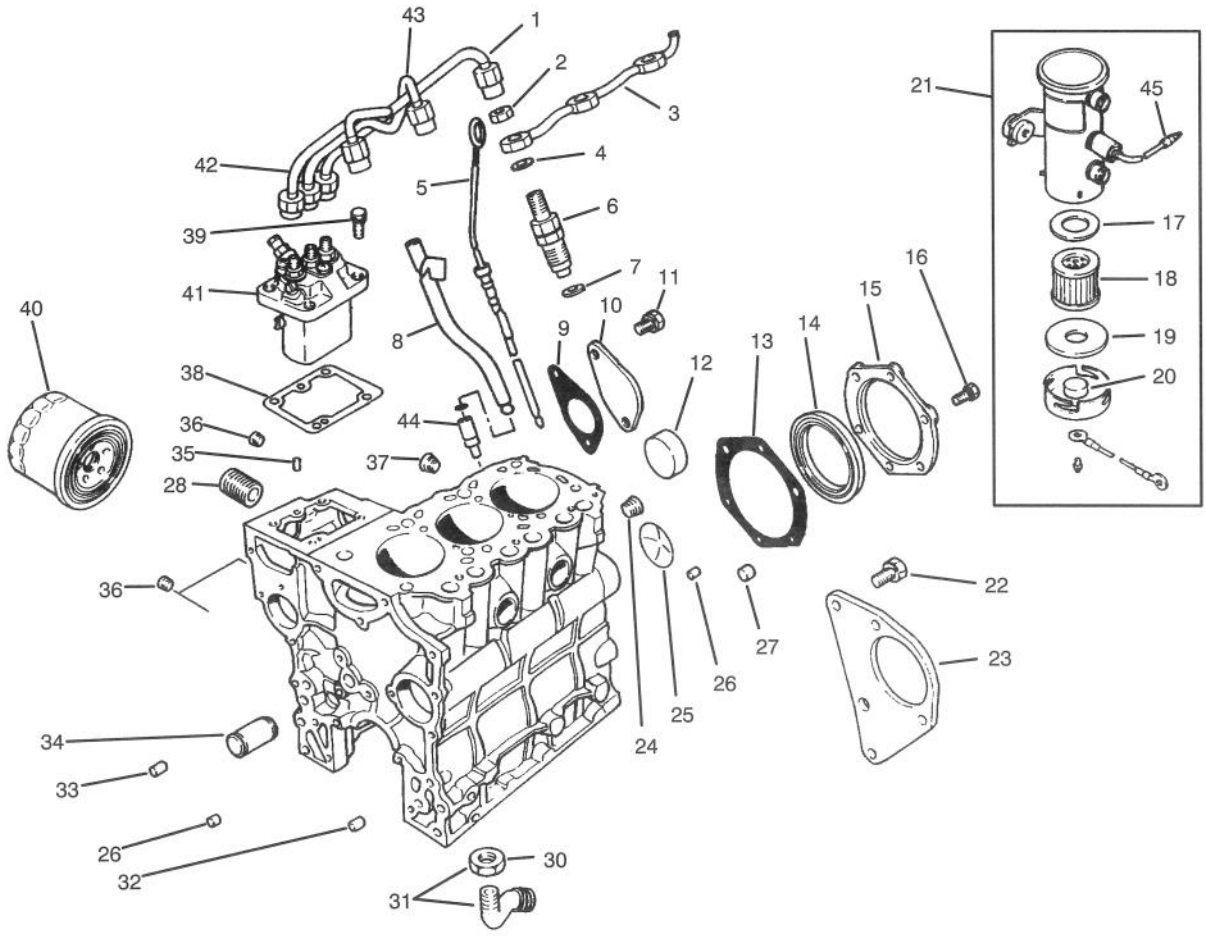


T–0569

FUEL SUPPLY & ENGINE BLOCK ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
38	67–3330	Shim 0.7 mm	1
*	67–3340	Shim 0.8 mm	1
*	67–3350	Shim 0.9 mm	1
*	67–3360	Shim 1.0 mm	1
39	67–3370	Bolt W/Washer	4

Ref. No.	Part No.	Description	No. Used
40	67–4330	Oil Filter Assembly	1
41	75–5020	Injector Pump Assembly	
42	67–3400	Pipe Assy. No. 1	1
43	67–3410	Pipe Assy. No. 2	1
44	82–8110	Retainer – Oil Guide	1

*Not Illustrated

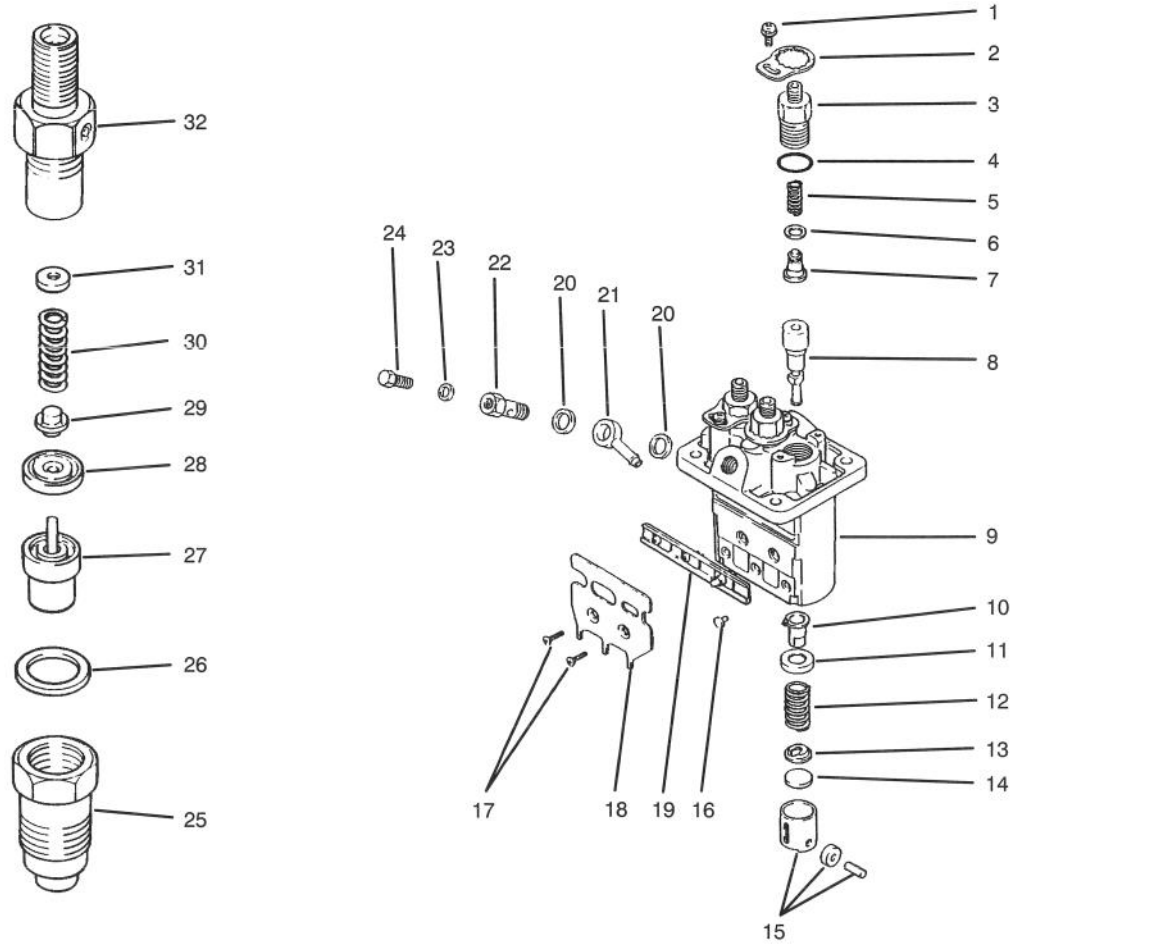


T–0570

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3770	Screw W/Washer	3
2	67–3760	Plate – Lock	3
3	67–3740	Holder–Delivery Valve	3
4	67–3480	Seal – O–Ring	3
5	67–3490	Spring	3
6	42–8240	Gasket	3
7	67–3500	Valve	3
8	75–4970	Element	3
9	67–3460	Housing–Pump	1
10	67–3520	Sleeve	3
11	67–3530	Seat – Spring Upper	3
12	67–3540	Spring	3
13	67–3550	Seat – Spring Lower	3
14	67–3560	Plate – Shim 1.85 mm	1
*	67–3570	Plate – Shim 1.9 mm	1
*	67–3580	Plate – Shim 1.95 mm	1
*	67–3590	Plate – Shim 2.0 mm	1
*	67–3600	Plate – Shim 2.05 mm	1
*	67–3610	Plate – Shim 2.1 mm	1
*	67–3620	Plate – Shim 2.15 mm	1
*	67–3630	Plate –Shim 2.2 mm	1
*	67–3640	Plate – Shim 2.25 mm	1

Ref. No.	Part No.	Description	No. Used
14	67–3650	Plate – Shim 2.3 mm	1
*	67–3660	Plate – Shim 2.35 mm	1
*	67–3670	Plate – Shim 2.4 mm	1
*	67–3680	Plate – Shim 2.45 mm	1
*	67–3690	Plate – Shim 2.5 mm	1
15	67–3700	Tappet	3
16	67–3810	Pin – Tappet Guide	3
17	67–3790	Screw	2
18	67–3800	Bracket – Wire Stop	1
19	67–3780	Rack	1
20	67–3750	Washer	2
21	67–3740	Nipple – Swivel	1
22	67–3730	Screw	1
23	67–3720	Washer	1
24	67–3710	Screw – Air Bleed	1
25	67–3970	Nut – Retaining	3
26	67–3980	Gasket	3
27	67–3960	Nozzle	3
28	67–3950	Piece – Distance	3
29	67–3940	Pin – Pressure	3
30	67–3930	Spring	3
31	67–3830	Washer 1.25 mm	1

*Not Illustrated

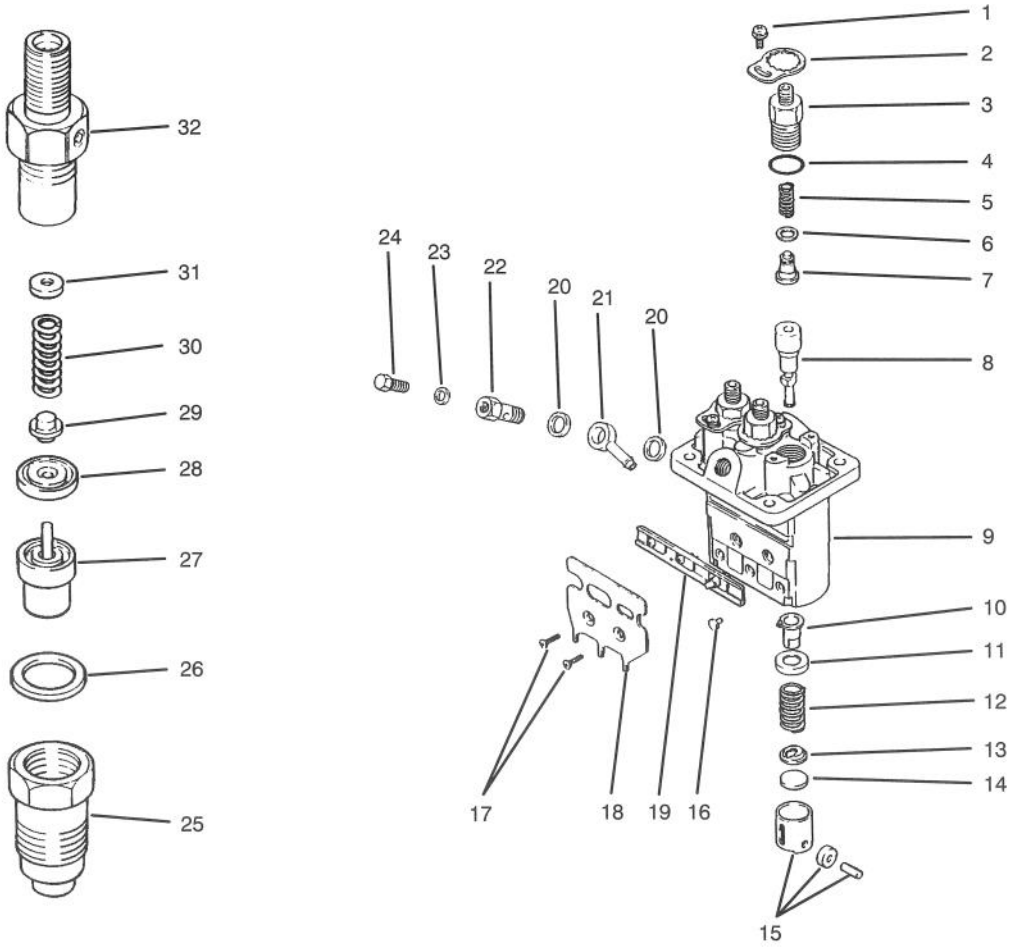


T–0570

FUEL INJECTION PUMP ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	67–3840	Washer 1.3 mm	1
*	67–3850	Washer 1.35 mm	1
*	67–3860	Washer 1.4 mm	1
*	67–3870	Washer 1.45 mm	1
*	67–3880	Washer 1.5 mm	1
*	67–3890	Washer 1.55 mm	1
*	67–3900	Washer 1.6 mm	1

Ref. No.	Part No.	Description	No. Used
31	67–3910	Washer 1.65 mm	1
*	67–3920	Washer 1.7 mm	1
32	75–5000	Body	3
*	53–8150	Pump Assembly (Incl. Ref. 21–24)	1
*	67–3380	Nozzle and Holder Assembly (Incl. Ref. #25–32)	3

*Not Illustrated

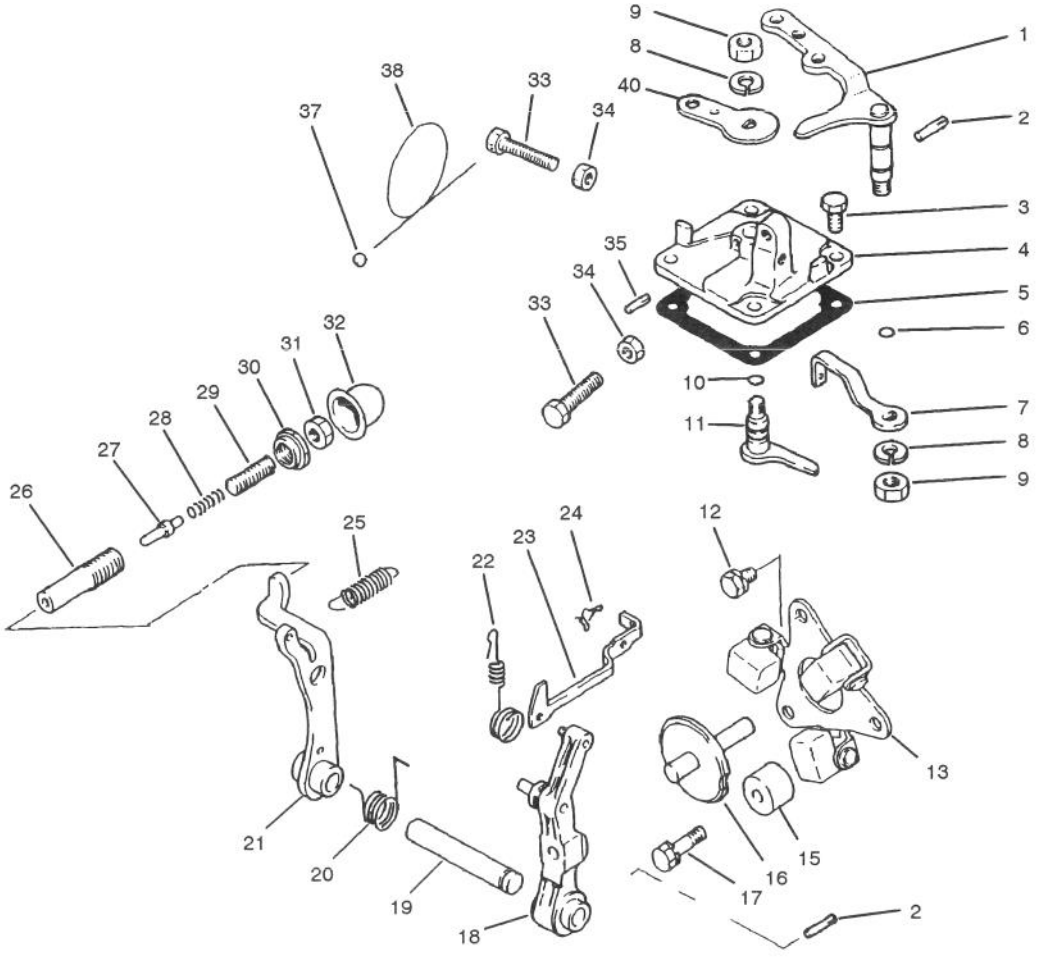


GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–3990	Lever – Speed Control	1
2	67–4000	Pin	2
3	67–4270	Bolt	4
4	67–4130	Cover – Governor	1
5	67–4160	Gasket	1
6	42–8830	Seal – O–Ring	1
7	75–4980	Lever – Governor Spring	1
8	67–3260	Washer	2
9	42–9640	Nut – Jam	2
10	42–8830	Seal – O–Ring	1
11	67–4140	Lever – Stop	1
12	42–9430	Bolt W/Washer	2
13	67–4040	Weight Assembly	1
15	67–4010	Stopper	1
16	67–4070	Shaft – Sliding	1
17	67–4280	Bolt W/Washer	1
18	67–4060	Lever – Governor	1
19	67–4050	Shaft – Governor	1
20	67–5040	Spring	1
21	67–4090	Lever – Tension	1
22	70–8720	Spring – Tie Rod	1

Ref. No.	Part No.	Description	No. Used
23	67–4030	Rod – Tie	1
24	67–4080	Clip	1
25	75–4990	Spring – Governor	1
26	67–4210	Case – Torque Spring	1
27	67–4230	Stopper	1
28	67–4190	Spring – Torque	1
29	67–4220	Screw – Adjusting	1
30	67–4200	Nut – Special	1
31	67–4180	Nut	1
32	43–2820	Cap – Sealing Torque Set	1
33	42–9420	Bolt – Speed Set	4
34	67–4290	Nut	4
35	67–4120	Pin – Grooved	1
37	42–8690	Metal – Sealing	1
38	42–8700	Wire	1
40	67–4150	Lever – Stop	1
*	67–4110	Cover Assembly (Incl. Ref. #4, 8–11, 35 & 40)	1
*	67–4170	Spring Set (Incl. Ref. #26–31)	

*Not Illustrated

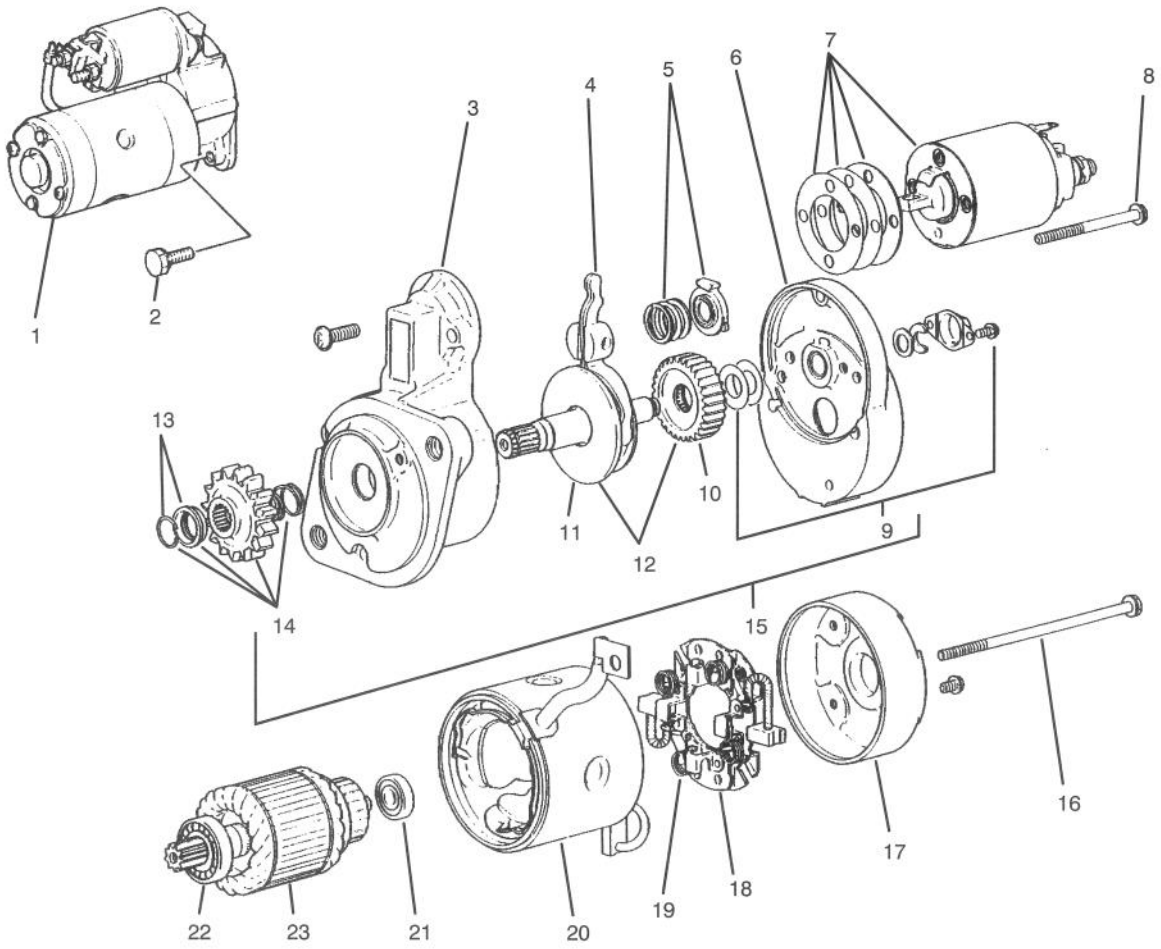


T–0572

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	70–8760	Starter Assembly (Incl. Ref. #3–23)	1
2	67–4610	Bolt W/Washer	2
3	70–8770	Bracket – Front	1
4	67–4720	Lever	1
5	67–4730	Spring Set	1
6	70–8780	Bracket – Center	1
7	67–4750	Switch	1
8	56–1570	Bolt Set	1
9	56–1680	Cover Set	1
10	56–1670	Gear	1
11	67–4790	Shaft	1
12	67–4780	Gear Set (Incl. Ref. #10 & 11)	1
13	56–1640	Stopper Set	1


Ref. No.	Part No.	Description	No. Used
14	67–4770	Pinion Set (Incl. Ref. #13)	1
15	67–4760	Shaft Assembly (Incl. Ref. #9, 12 & 14)	1
16	56–1610	Bolt	1
17	56–1720	Bracket – Rear	1
18	56–1700	Holder – Brush (Incl. Ref. #19)	1
19	56–1710	Spring – Brush	4
20	67–4800	Yoke	1
21	56–1600	Bearing – Rear	1
22	56–1590	Bearing – Front	1
23	56–1580	Armature Set (Incl. Ref. #21 & 22)	1

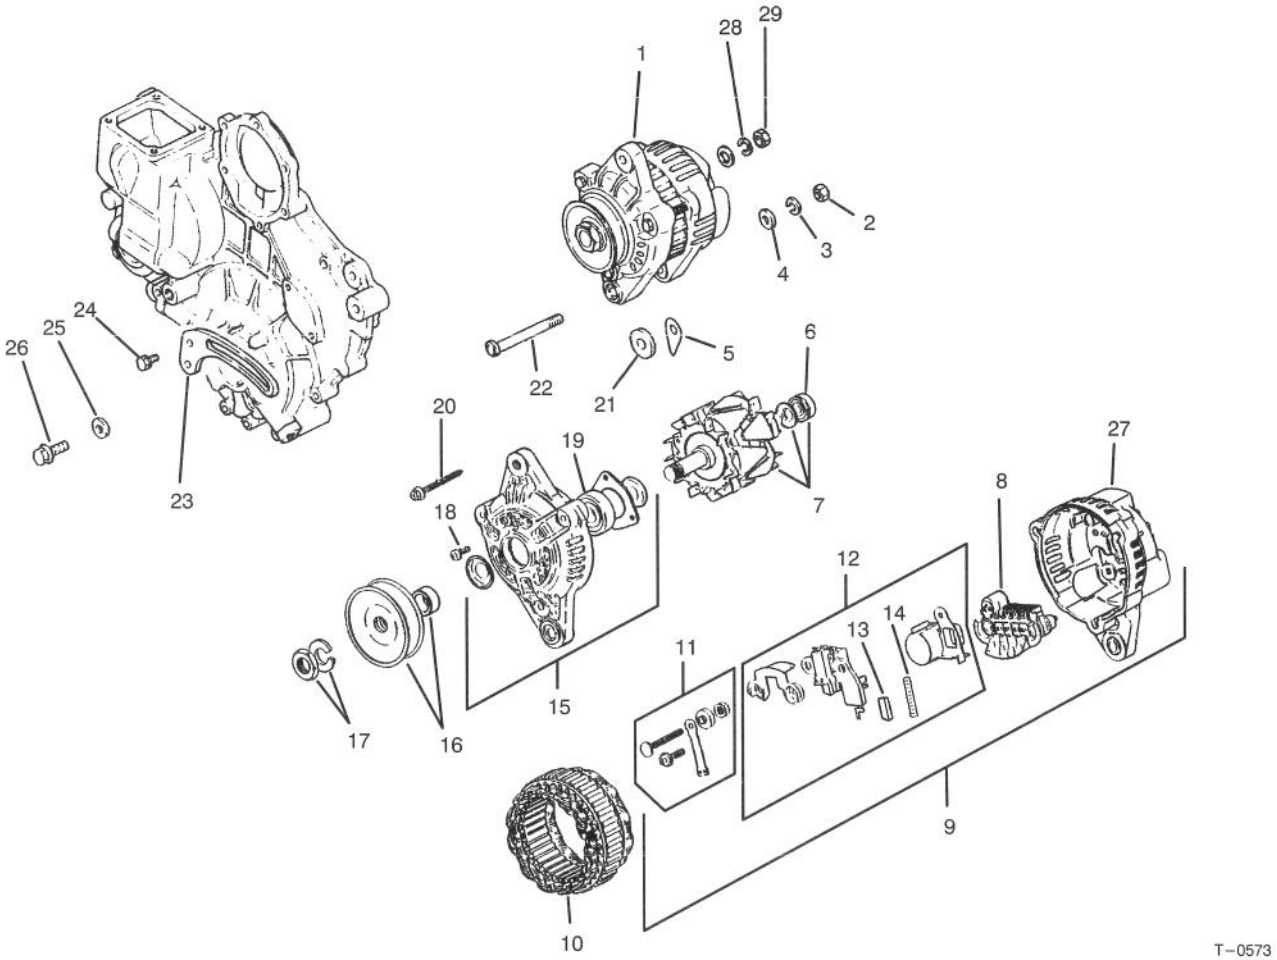

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67–4630	Alternator Assembly (Incl. Ref. #6–17)	1
2	67–4670	Nut	1
3	67–3260	Washer	1
4	42–9660	Washer	1
5	43–0370	Shim	1
6	67–4870	Bearing – Rear	1
7	67–4860	Rotor Assembly (Incl. Ref. #6)	
8	67–4930	Rectifier	1
9	67–4890	Rear Cover Assembly (Incl. Ref. #8, 11, 12 & 27)	1
10	67–4880	Stator	1
11	67–4900	Terminal Set	1
12	67–4910	Regulator Assembly (Incl. Ref. #13 & 14)	1

Ref. No.	Part No.	Description	No. Used
13	67–4920	Brush	2
14	43–0510	Spring – Brush	2
15	67–4830	Front Bracket Assembly (Incl. Ref. #18 & 19)	1
16	67–4810	Pulley Set	1
17	43–1920	Nut Set	1
18	67–4840	Screw Set	1
19	67–4850	Bearing – Front	1
20	67–4820	Bolt Set	1
21	67–4620	Spacer	1
22	67–4640	Bolt	1
23	75–4940	Brace – Alternator	1
24	42–9440	Bolt W/Washer	1
25	54–8660	Washer	1
26	67–4660	Bolt – Flange	1
27	72–6140	Cover – Rear	1

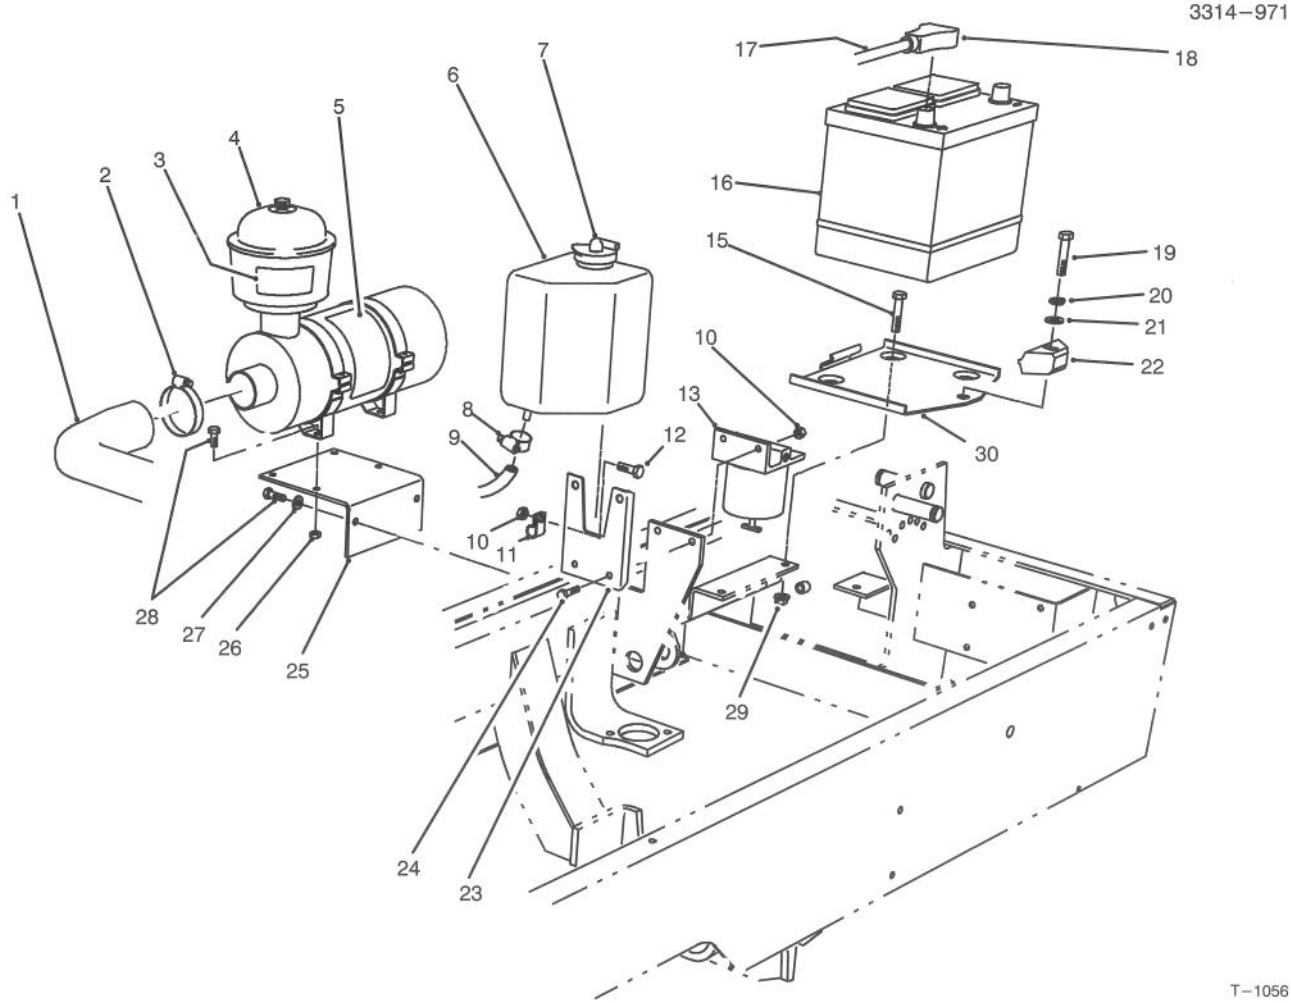


T–1056

ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–2460	Hose – Air Cleaner	1
2	2412–42	Clamp – Hose	1
‡3	67–1700	Decal – Starting Fluid (English)	1
4	48–4220	Air Cleaner Assembly (Incl. Ref. #5)	1
5	27–7160	Decal – Instructions	1
6	63–7380	Expansion Tank Assembly (Incl. Ref. #7)	1
7	71–1520	Cap – Expansion Tank	1
8	2412–108	Clamp – Hose	1
9	75–2850	Hose – Expansion Tank	1
10	3296–42	Nut – Lock	3
11	2412–93	Clamp – R	1
12	321–2	Screw – Cap Hex. Hd.	1
13	63–8300	Fuel Filter Assembly	1
15	322–4	Screw – Cap Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
16		Battery (Type 26, 530 Amp.)	1
17	75–1370	Battery Cable Assy. (+) (Incl. Ref. #18)	1
18	28–1280	Boot – Cable	1
19	323–9	Screw – Cap Hex. Hd.	1
20	3253–21	Washer – Lock	1
21	3256–24	Washer – Flat	1
22	66–2490	Clamp – Battery	1
23	75–4250	Bracket – Expansion Tank	1
24	321–6	Screw – Cap Hex. Hd.	2
25	75–3140	Bracket – Air Cleaner	1
26	3296–29	Nut – Lock	4
27	3256–23	Washer – Flat	2
28	322–3	Screw – Cap Hex. Hd.	6
29	32128–25	Nut – Lock	3
30	66–2330	Base – Battery	1

‡For different language versions of this part, see International Decal Cross Reference.

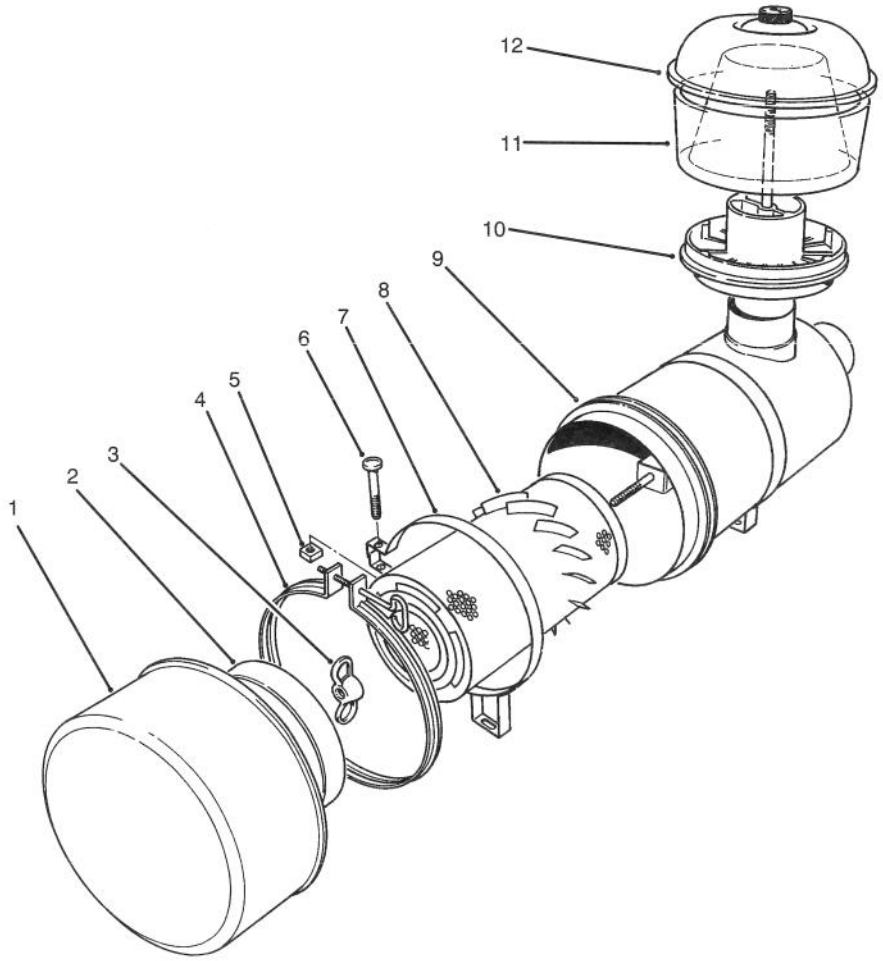


T–0126

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	27–7150	Cup Assembly	1
2	27–7140	Baffle	1
3	27–7120	Nut	1
4	27–7130	Clamp Assembly	1
5	32107–11	Nut–Square	2
6	3258–19	Screw–Machine	2
7	27–7170	Band Assembly (Incl. Ref. #5 & 6)	2
8	27–7110	Element Assembly	1

Ref. No.	Part No.	Description	No. Used
9†		Housing	1
10	62–6300	Sleeve Assembly	1
11	33–1270	Bowl	1
12	33–1260	Cover Assembly	1
*	48–7430	Pre–Cleaner Assembly (Incl. Ref. #10–12)	1
*	48–4220	Air Filter Assembly (Incl. Ref. #1–4, 8–9)	1
*	27–7220	Air Cleaner Soap	1

*Not Illustrated
†Not Serviceable Separately

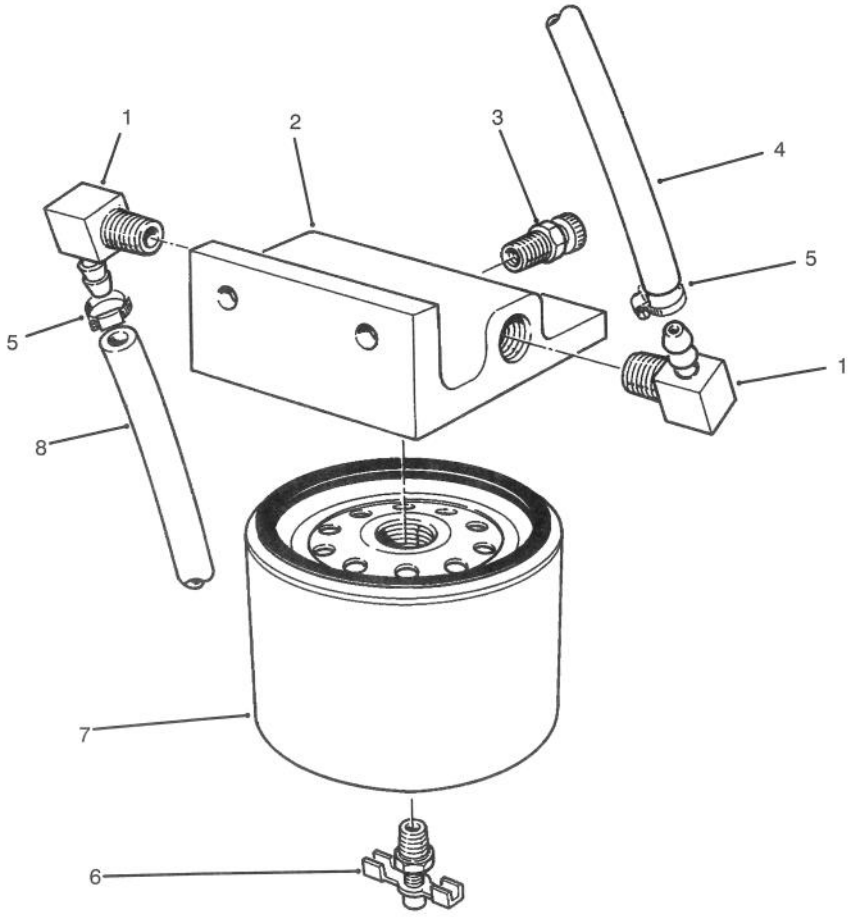

T–1030


FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	353–781	Fitting–Elbow	2
2	63–8280	Head–Filter, Fuel (Incl. Ref. #3)	1
3	63–8290	Vent–Air	1
4	63–7620	Hose–Fuel	1
5	2412–108	Clamp–Hose	2
6	63–8310	Valve–Drain	1

Ref. No.	Part No.	Description	No. Used
7	63–8300	Element–Spin–On (Incl. Ref. #6)	1
8	63–7610	Hose–Fuel	1
*	63–8300	Fuel Filter Assembly (Incl. Ref. #2, 3 & 6–7)	1

*Not Illustrated

3314–971

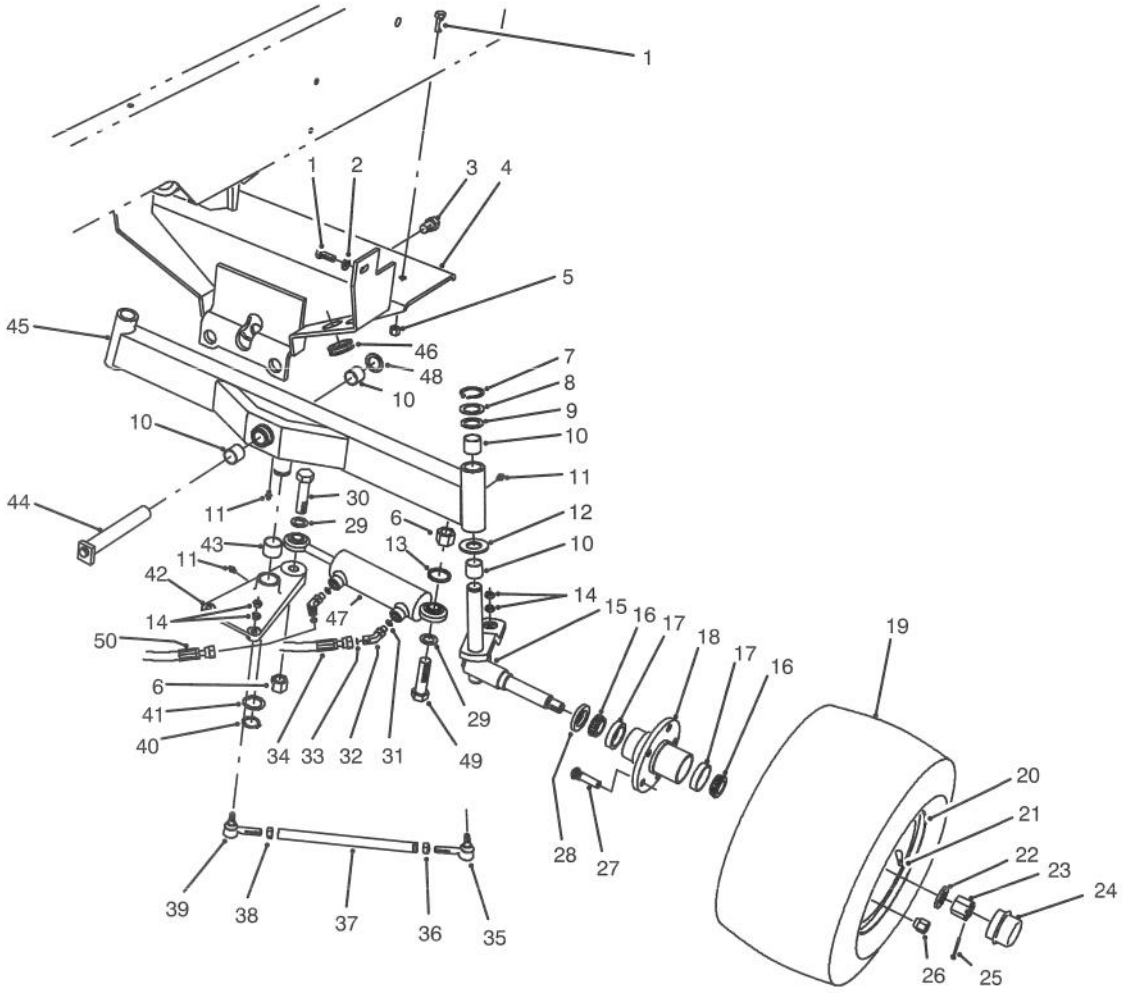


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323–6	Screw – Cap Hex. Hd.	4
2	3256–24	Washer – Flat	2
3	327–2	Screw – Cap Hex. Hd.	1
4	75–1100	Support – Rear Axle	1
5	3296–39	Nut – Lock	2
6	32153–6	Nut – Lock	2
7	32151–36	Ring – Retaining	2
8	5–1226	Washer – Shim	A/R
9	10–8110	Washer – Thrust	2
10	67–1751	Bushing – Sleeve	6
11	302–5	Fitting – Grease	4
12	256–121	Washer – Thrust	2
13	67–7250	Spacer – Cylinder	1
14	3220–3	Nut – Jam	8
15	75–4440	Spindle – Rear L.H.	1
*	75–4420	Spindle – Rear R.H.	1
16	254–94	Cone – Bearing	4
17	254–72	Cup – Bearing	4
18	21–2820	Hub – Rear Wheel	2
19	231–141	Tire	2
20	217–121	Rim	2
21	232–35	Stem – Valve	2
22	3256–28	Washer – Flat	2

Ref. No.	Part No.	Description	No. Used
23	32136–5	Nut – Slotted	2
24	241–119	Cap – Dust	2
25	3272–13	Pin – Cotter	2
26	242–50	Nut – Lug	10
27	10–6830	Stud – Drive	10
28	253–129	Seal – Grease	2
29	67–9410	Washer – Thrust	2
30	328–25	Screw – Cap Hex. Hd.	1
31	237–78	Seal – O–Ring	2
32	340–103	Fitting – Hydraulic 45° (Incl. Ref. #31 & 33)	2
33	237–21	Seal – O–Ring	2
34	75–6220	Hose – Hydraulic	1
35	21–0140	Joint – Ball	2
36	3220–5	Nut – Jam	2
37	75–3130	Rod – Tie	2
38	3220–12	Nut – Jam L.H. Thread	2
39	21–0150	Joint – Ball L.H. Thread	2
40	32151–77	Ring – Retaining	1
41	76–2980	Washer – Thrust	1
42	75–4410	Pivot Plate Assembly (Incl. Ref. #11 & 43)	1
43	76–2970	Bushing – Sleeve	2


*Not Illustrated

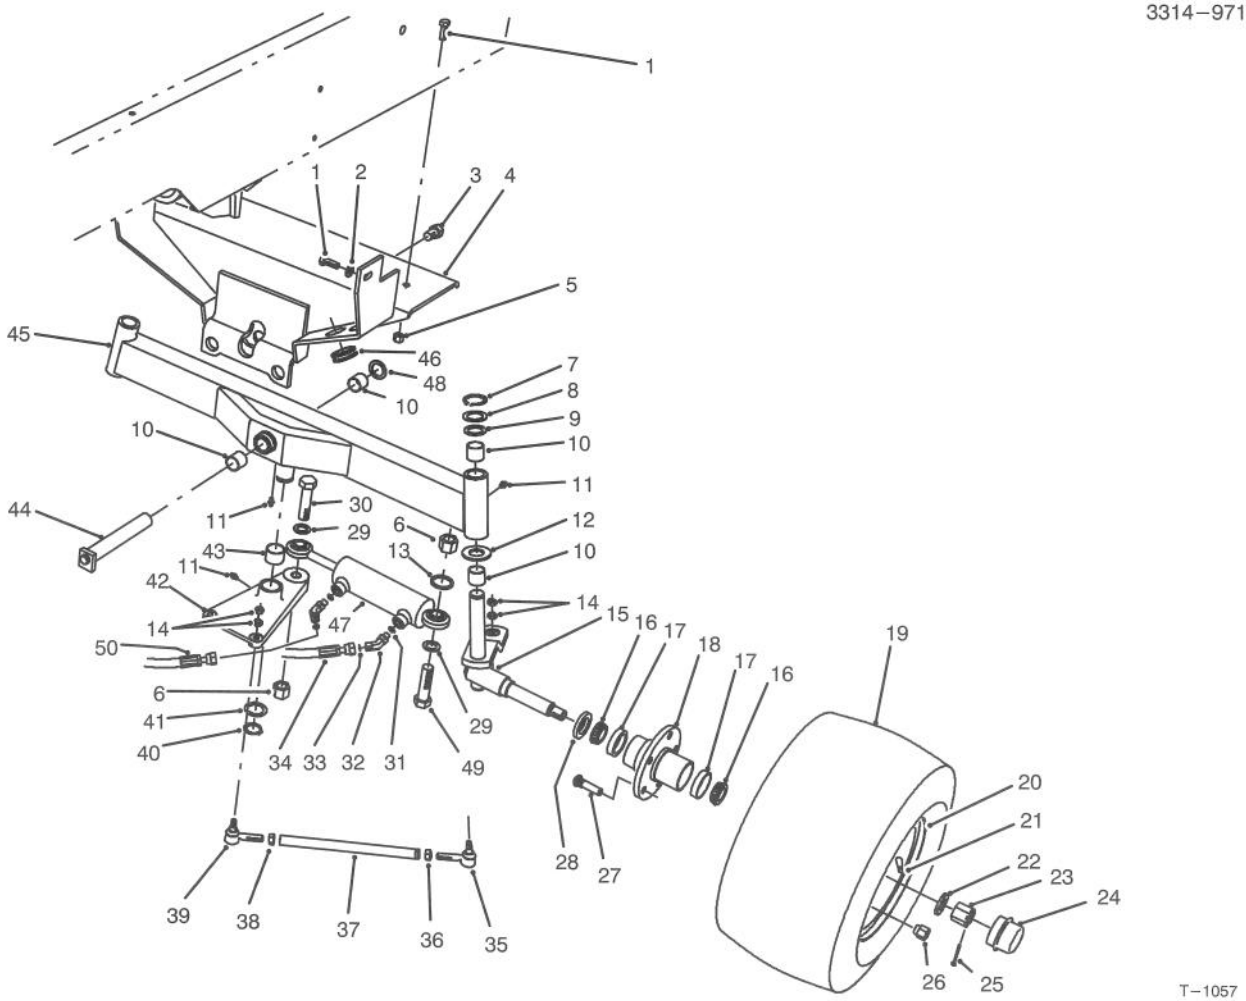

REAR AXLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
44	75–4180	Pin – Rear Axle Pivot	1
45	75–2900	Rear Axle Assembly (Incl. Ref. #10 & 11)	1
46	237–165	Grommet	2

Ref. No.	Part No.	Description	No. Used
47	75–1200	Hydraulic Cylinder Assembly	1
48	5–1226	Washer – Thrust	1
49	328–27	Screw – Cap Hex. Hd.	1
50	75–6230	Hose – Hydraulic	1

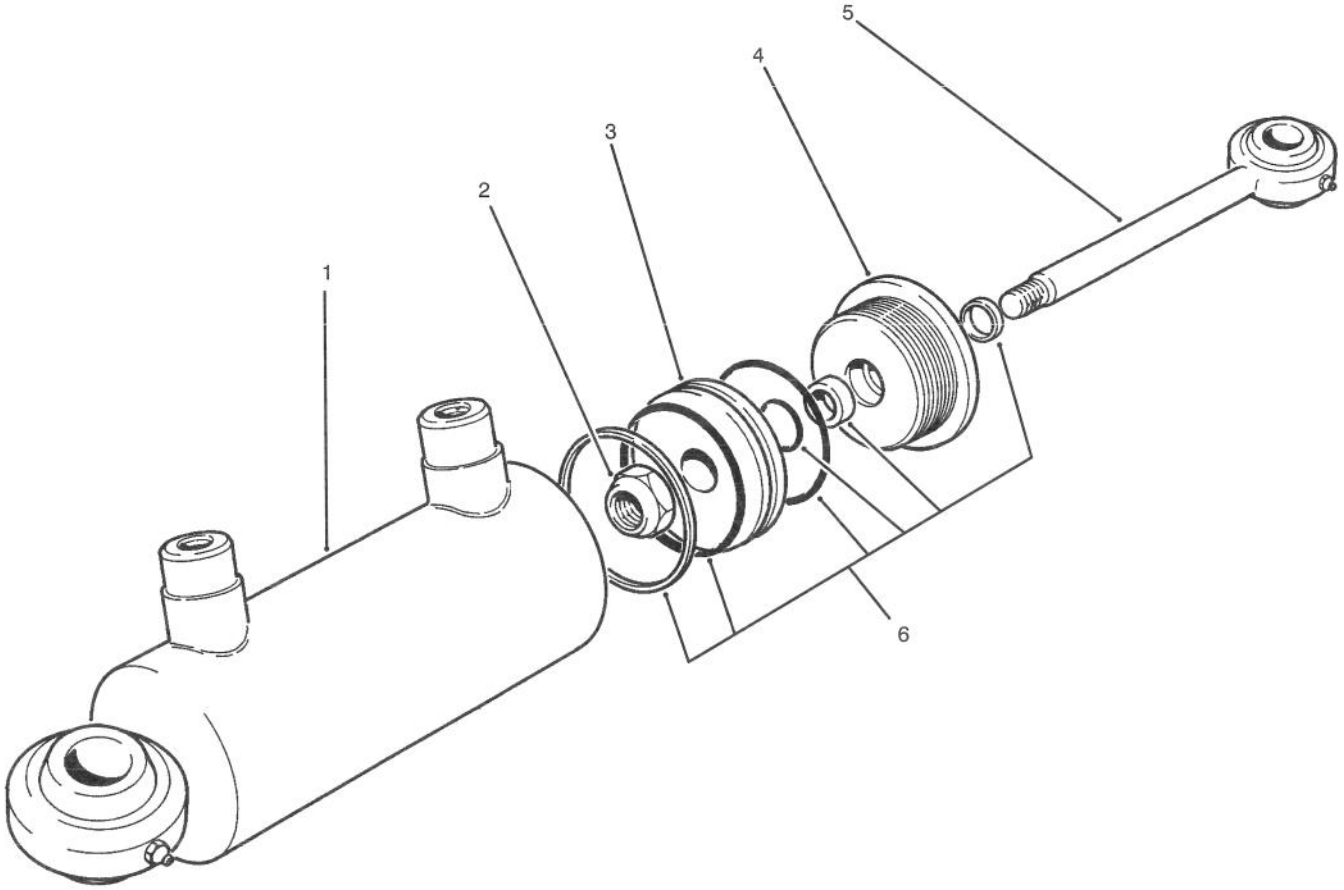


T–0996

HYDRAULIC CYLINDER NO. 75–1200

Ref. No.	Part No.	Description	No. Used
†1		Barrel Assembly	1
2	75–1210	Nut–Lock	1
3	75–1220	Piston	1
4	75–1260	Head–Internal	1
5	75–1230	Piston Rod Assembly	1
6	75–1250	Seal Kit	1

†Not Serviced Separately

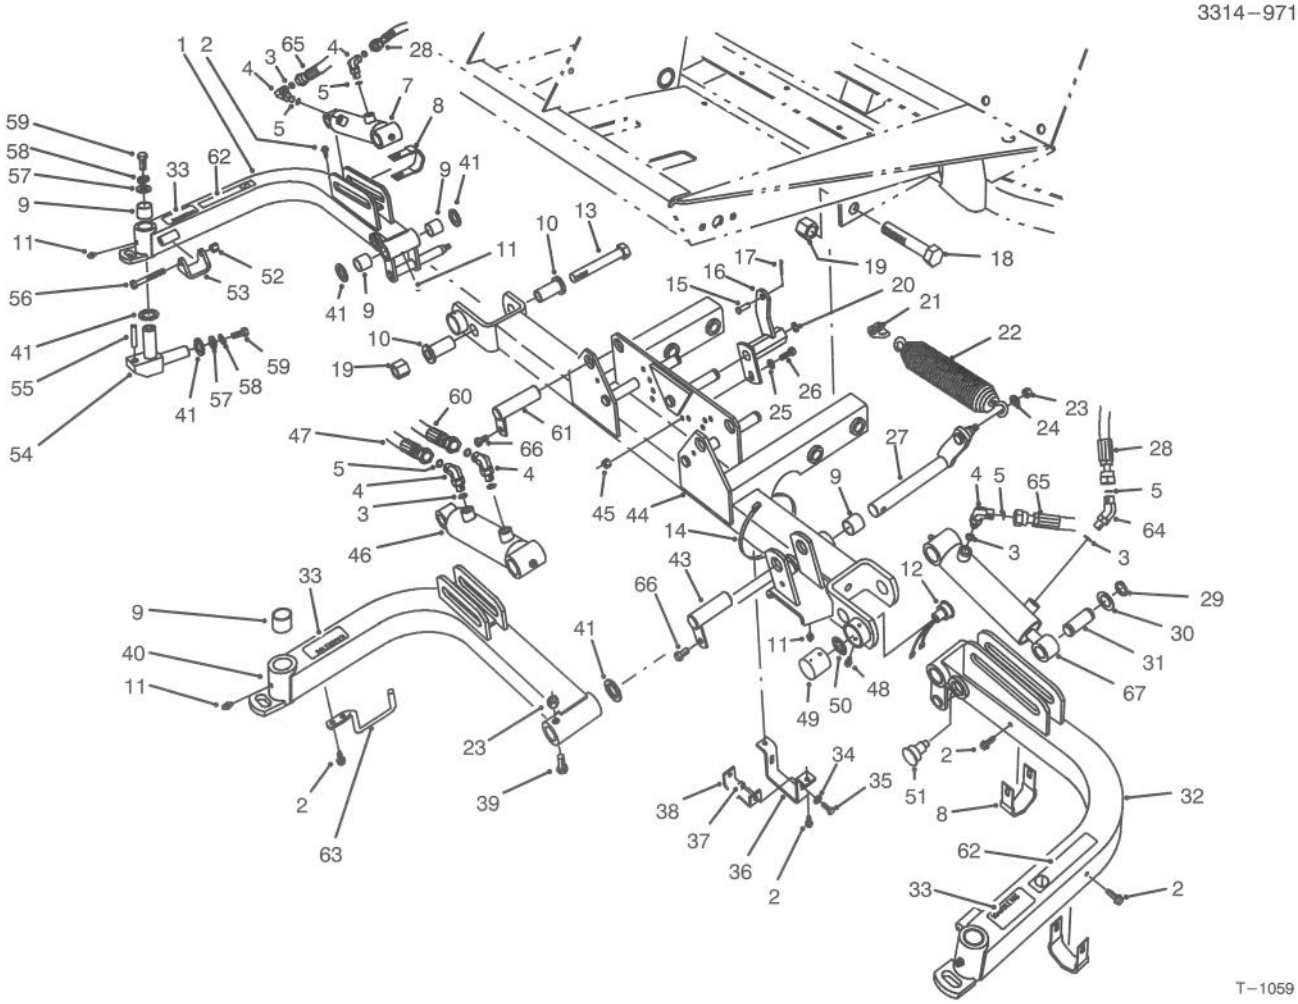


FRONT LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–5450	Lift Arm Assembly R.H. (Incl. Ref. #9 & 11)	1
2	49–2040	Screw – Thread Forming	10
3	237–78	Seal – O–Ring	6
4	340–132	Fitting – Hydraulic 90° (Incl. Ref. #3 & 5)	5
5	237–21	Seal – O–Ring	6
7	83–7480	Hydraulic Cylinder Assembly	1
8	75–5330	Clamp – Hose	3
9	67–1750	Bushing – Sleeve	12
10	84–8320	Insert – Hinge	4
11	302–5	Fitting – Grease	6
12	75–6300	Sensor – Reed Switch	1
13	328–12	Screw – Cap Hex. Hd.	2
14	3290–336	Tie – Cable	3
15	283–6	Pin – Clevis	3
16	75–5210	Bracket – Spring Center	1
*	75–5200	Bracket – Spring R.H.	1
*	75–5220	Bracket – Spring L.H.	1
17	3272–10	Pin – Cotter	3
18	328–7	Screw – Cap Hex. Hd.	4
19	3296–51	Nut – Lock	6
20	32151–48	Ring – Retaining	3

Ref. No.	Part No.	Description	No. Used
21	282–4	Clevis – Spring	3
22	5–0743	Spring – Extension	3
23	3296–44	Nut – Lock	4
24	3256–24	Washer – Flat	3
25	3256–23	Washer – Flat	3
26	322–5	Screw – Cap Hex. Hd.	3
27	75–4550	Shaft – Center Arm Pivot	1
28	75–5890	Hose – Hydraulic	2
29	32120–93	Ring – Retaining	6
30	3–6498	Washer – Thrust	6
31	75–5350	Pin – Cylinder Rod End	3
32	75–5460	Lift Arm Assembly L.H. (Incl. Ref. #9 & 11)	1
}33	55–4300	Decal – Warning (English)	3
34	3256–22	Washer – Flat	2
35	321–4	Screw – Cap Hex. Hd.	2
36	75–5370	Mount – Clamp	1
37	3296–42	Nut – Lock	2
38	75–5380	Bracket – Clamp	1
39	323–11	Screw – Cap Hex. Hd.	1
40	75–5420	Lift Arm Assembly Center (Incl. Ref. #9 & 11)	1
41	256–115	Washer – Thrust	11

*Not Illustrated
‡For different language versions of this part, see International Decal Cross Reference.

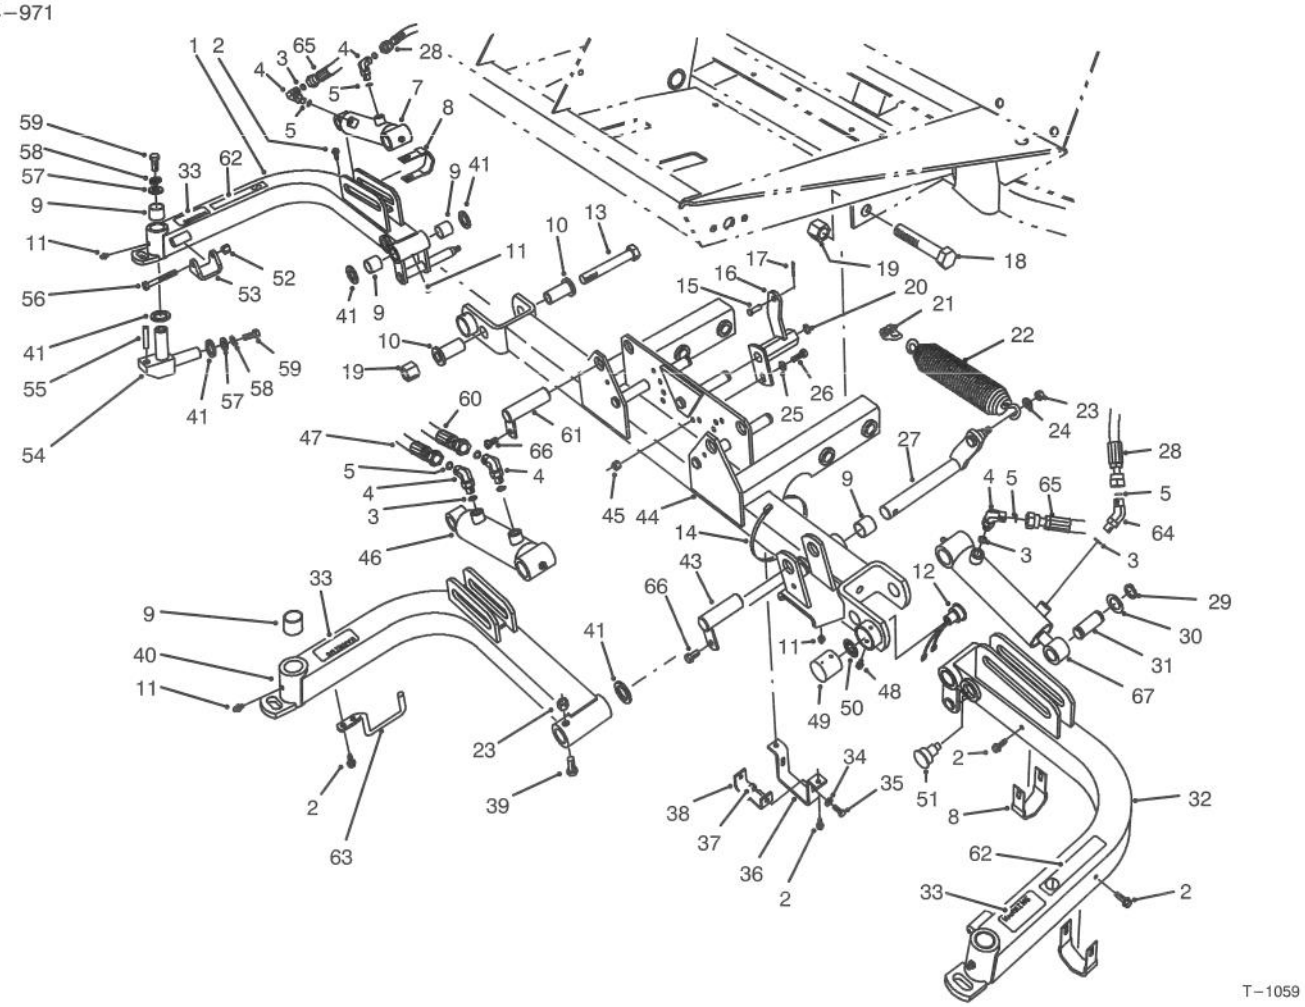


FRONT LIFT ARMS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
43	83–6790	Pin – Cylinder (Short)	1
44	75–3040	Carrier Frame Assembly (Incl. Ref. #9 & 11)	1
45	3296–29	Nut – Lock	3
46	85–9880	Hydraulic Cylinder Assembly	1
47	75–5900	Hose – Hydraulic	1
48	32104–76	Screw – Thread Forming	2
49	75–6370	Cover – Sensor	1
50	32151–94	Ring – Retaining	1
51	75–6310	Magnet – Reed Switch	1
52	3296–39	Nut – Lock	2
53	75–5410	Bracket – Arm	2
54	75–3010	Joint – Arm	3
55	32121–122	Pin – Roll	3

Ref. No.	Part No.	Description	No. Used
56	323–12	Screw – Cap Hex. Hd.	2
57	3256–6	Washer – Flat	6
58	3253–7	Washer – Lock	6
59	325–4	Screw – Cap Hex. Hd.	6
60	75–5910	Hose – Hydraulic	1
61	83–6780	Pin – Cylinder (Long)	2
}62	36–3400	Decal – No Step (English)	2
63	75–5300	Rod – Hose Support	1
64	340–103	Fitting – Hydraulic 45° (Incl. Ref. #3 & 4)	1
65	82–6490	Hose – Hydraulic	1
66	32144–14	Screw – Self Tapping	3
67	83–7490	Hydraulic Cylinder Assy.	1

‡For different language versions of this part, see International Decal Cross Reference.

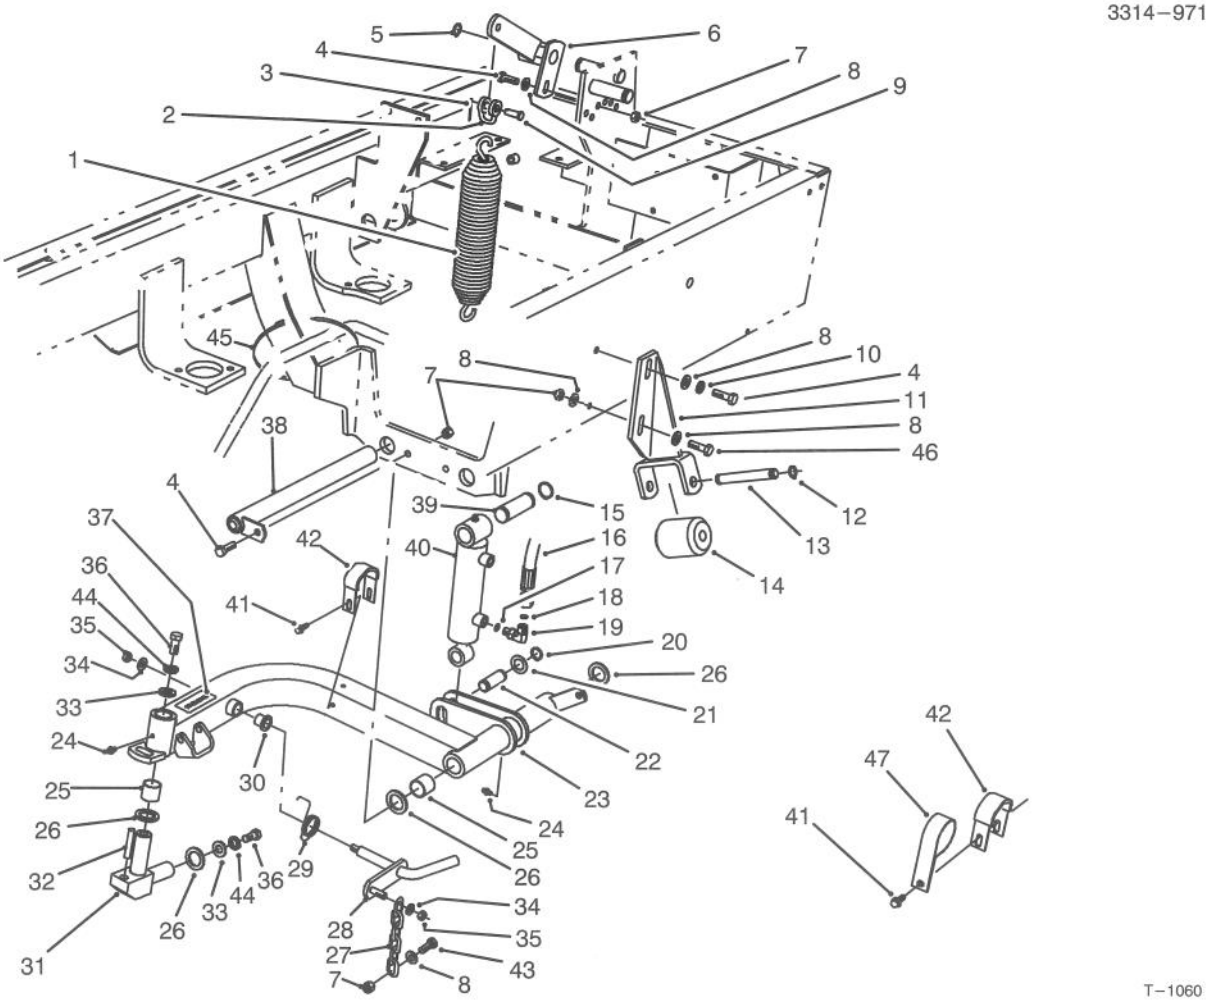


REAR LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5–0743	Spring – Counterbalance	2
2	282–4	Clevis – Spring	2
3	3272–10	Pin – Cotter	2
4	322–5	Screw – Cap Hex. Hd.	6
5	32151–48	Ring – Retaining	2
6	75–4690	Bracket – Spring Rear R.H.	1
*	75–4650	Bracket – Spring Rear L.H.	1
7	3296–29	Nut – Lock	8
8	3256–23	Washer – Flat	10
9	283–6	Pin – Clevis	2
10	3253–4	Washer – Lock	2
11	75–3810	Bracket – Roller	2
12	32151–61	Ring – Retaining	4
13	75–5400	Shaft – Roller	2
14	75–5390	Roller	2
15	32151–36	Ring – Retaining	4
16	75–6180	Hose – Hydraulic R.H.	2
*	75–6070	Hose – Hydraulic L.H. (Cap)	1
*	75–6080	Hose – Hydraulic L.H. (Rod)	1
17	237–78	Seal – O–Ring	4
18	237–21	Seal – O–Ring	4
19	340–132	Fitting – Hydraulic 90° (Incl. Ref. #17 & 18)	4

Ref. No.	Part No.	Description	No. Used
20	32120–93	Ring – Retaining	4
21	3–6498	Washer – Thrust	4
22	75–5350	Pin – Cylinder Rod End	2
23	75–5440	Lift Arm Assy. Rear R.H. (Incl. Ref. #24, 25 & 30)	1
*	75–5430	Lift Arm Assy. Rear L.H. (Incl. Ref. #24, 25 & 30)	1
24	302–5	Fitting – Grease	4
25	67–1750	Bushing – Sleeve	8
26	256–115	Washer – Thrust	8
27	5–1096	Chain – Cutting Unit	2
28	75–4590	Rod – Pivot	2
29	75–4520	Spring – Torsion R.H.	1
*	75–4530	Spring – Torsion L.H.	1
30	256–287	Bushing – Flange	4
31	75–3010	Joint – Arm	2
32	32121–122	Pin – Roll	2
33	3256–6	Washer – Flat	4
34	3256–24	Washer – Flat	4
35	3296–39	Nut – Lock	4
36	325–4	Screw – Cap Hex. Hd.	4
}37	55–4300	Decal – Warning (English)	2
38	75–3750	Pin – Pivot	2


*Not Illustrated
‡For different language versions of this part, see International Decal Cross Reference.

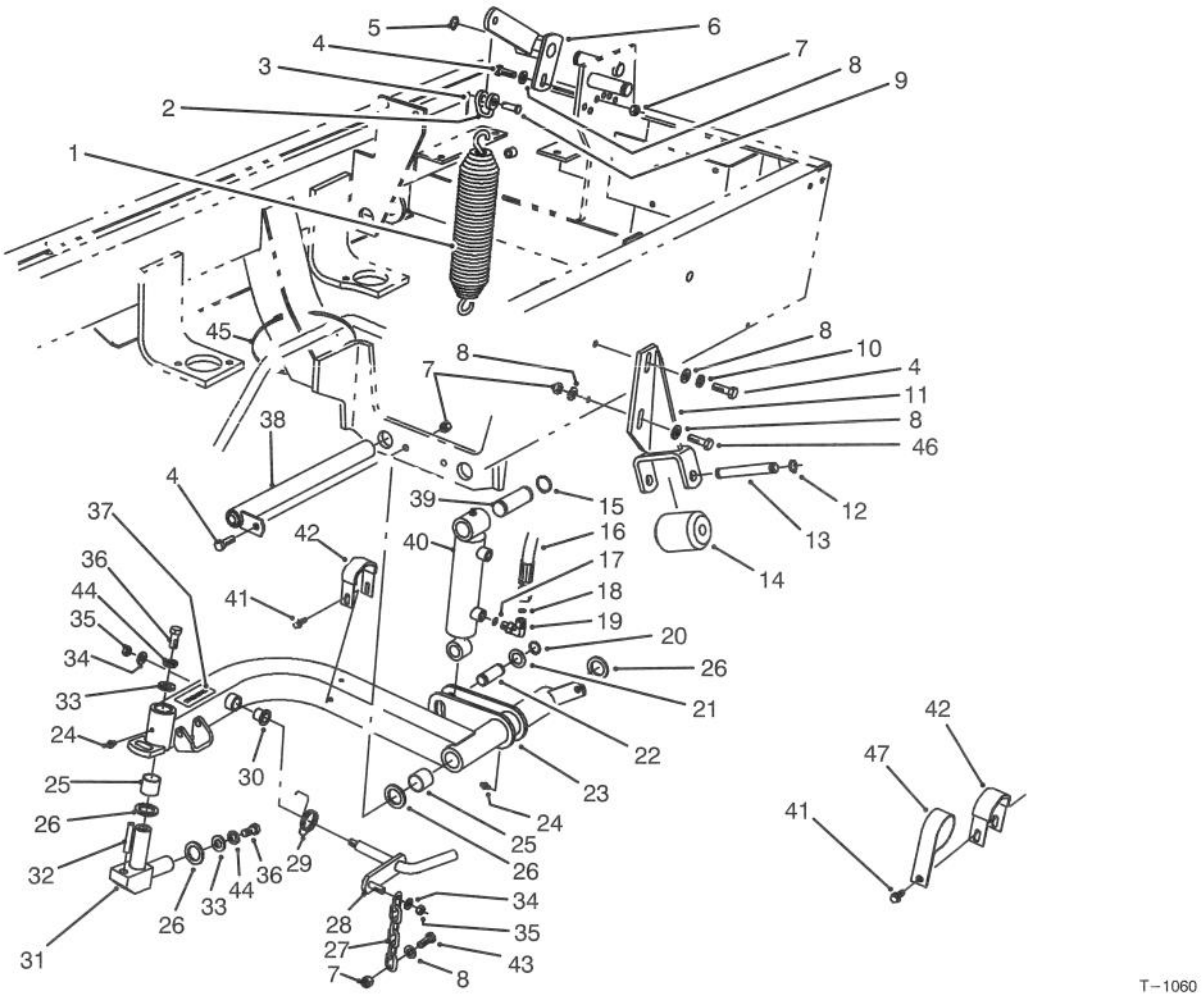

REAR LIFT ARMS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
39	75–5360	Pin – Cylinder Cap End	2
40	85–9880	Hydraulic Cylinder Assy.	2
41	49–2040	Screw – Thread Forming	5
42	75–5330	Clamp – Hydraulic Line	2
43	322–12	Screw – Cap Hex. Hd.	2
44	3253–7	Washer – Lock	4

Ref. No.	Part No.	Description	No. Used
45	3290–336	Tie – Cable	1
46	322–6	Screw – Cap Hex.	2
47	2412–107	Clamp – R (Used on left rear cutting unit lift arm only)	1

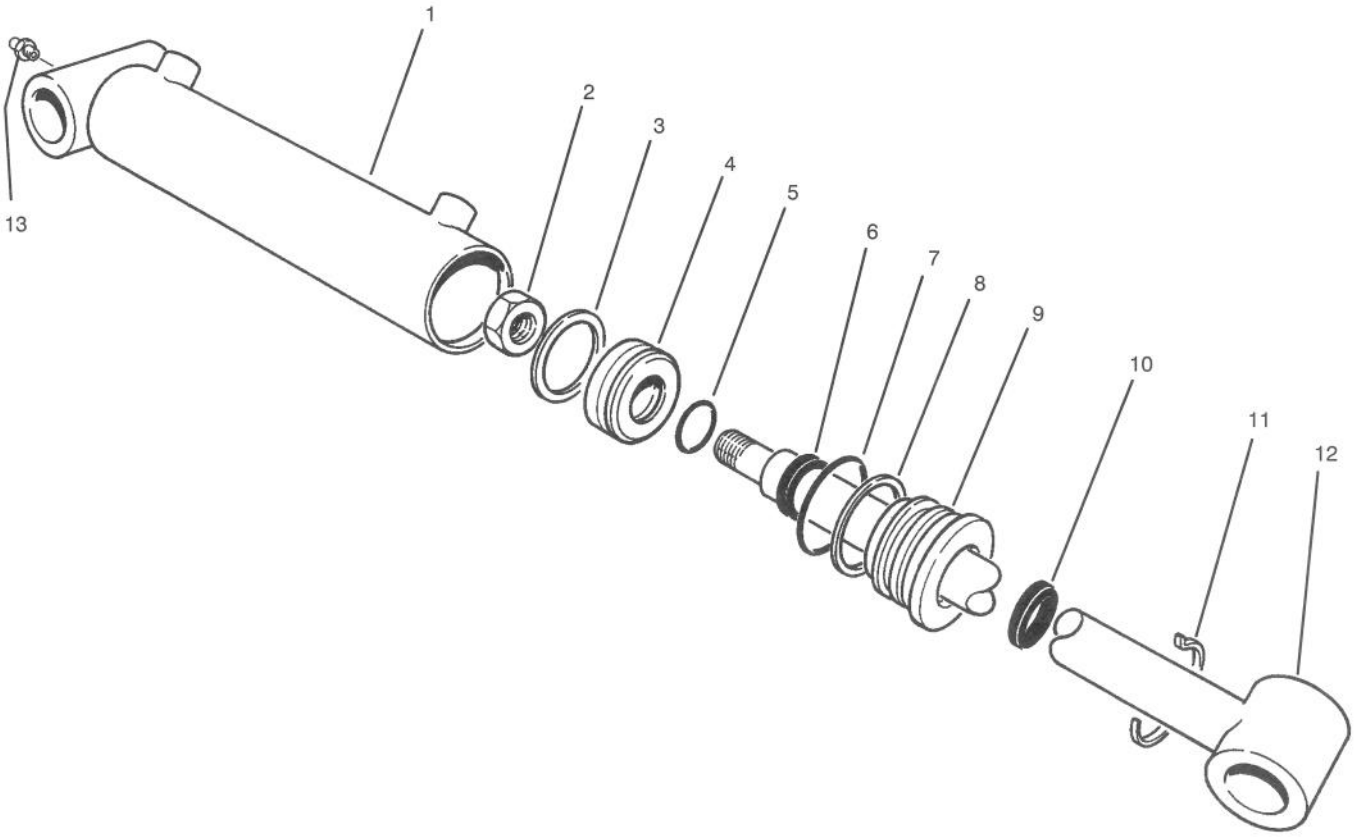


T–1032

HYDRAULIC CYLINDER NO. 85–9880

Ref. No.	Part No.	Description	No. Used
†1		Barrel	1
2	32152–10	Nut	1
†3		Uni–ring	1
4	70–2780	Piston	1
†5		Seal – O–Ring	1
†6		Seal–Rod	1
†7		Seal – O–Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
9	84–1670	Head	1
†10		Seal–Dust	1
11	84–1680	Ring–Retaining	1
12	75–3790	Clevis	1
13	302–5	Fitting – Grease	1
*	86–7330	Seal repair Kit (Incl. Ref. #3, 5–8 & 10)	1

*Not Illustrated
†Not Serviced Separately

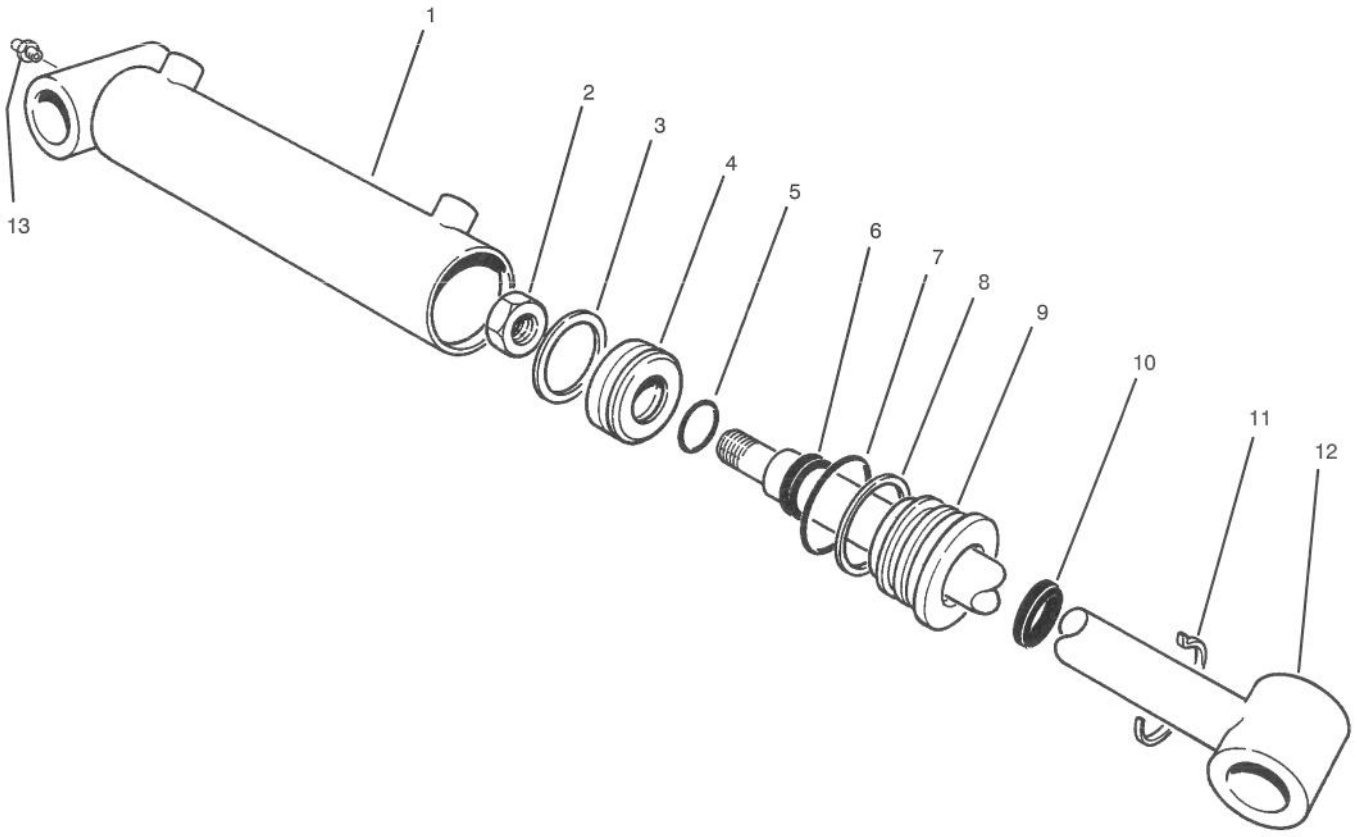


T–1032

HYDRAULIC CYLINDER NO. 83–7480

Ref. No.	Part No.	Description	No. Used
†1		Barrel	1
2	32152–10	Nut	1
†3		Uni–ring	1
4	84–1710	Piston	1
†5		O–Ring	1
†6		Seal–Rod	1
†7		O–Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
9	84–1720	Head	1
†10		Seal–Dust	1
11	84–1730	Ring–Retaining	1
12	84–1740	Clevis	1
13	302–5	Fitting – Grease	1
*	84–1760	Seal repair Kit (Incl. Ref. #3, 5–8 & 10)	1

*Not Illustrated
†Not Serviced Separately

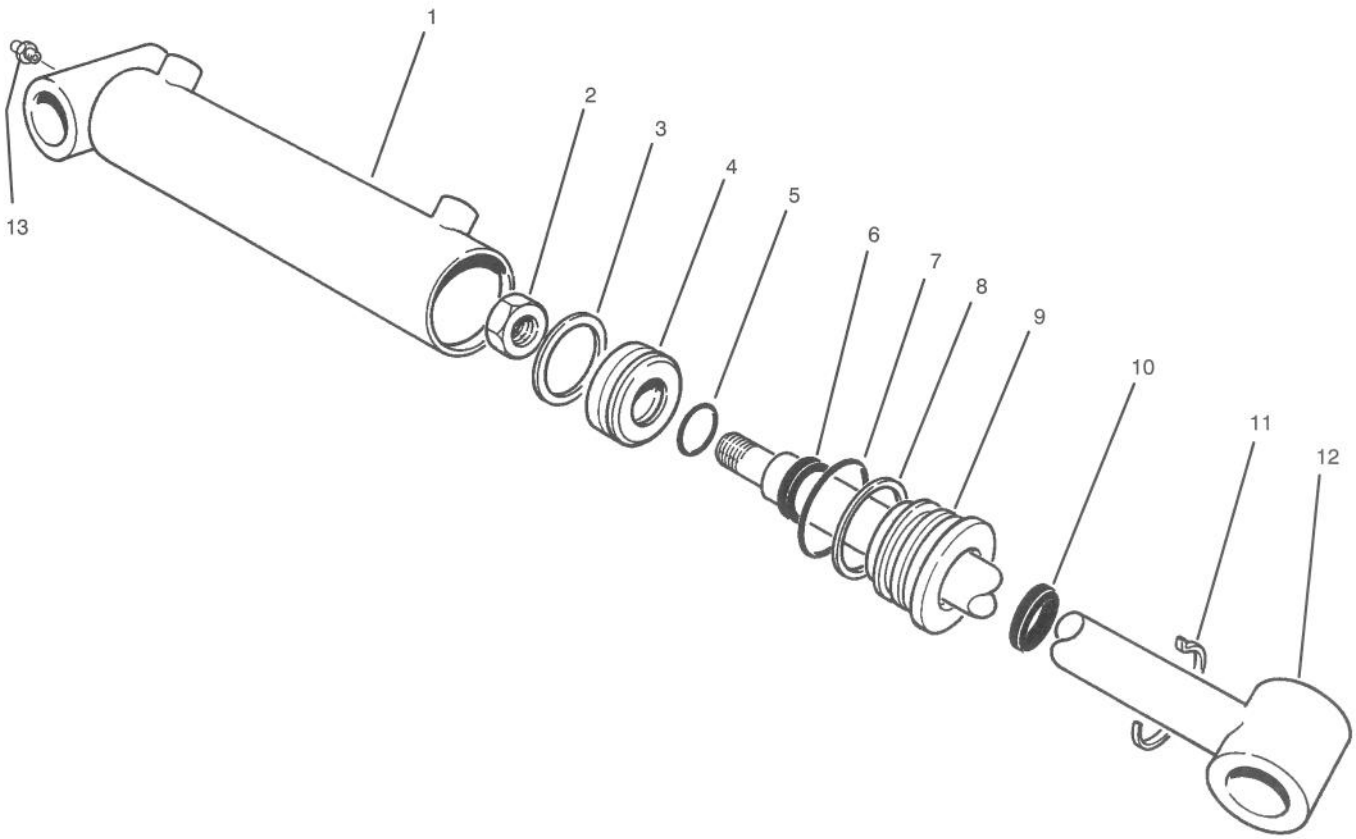


T–1032

HYDRAULIC CYLINDER NO. 83–7490

Ref. No.	Part No.	Description	No. Used
†1		Barrel	1
2	32152–10	Nut	1
†3		Uni–ring	1
4	70–2780	Piston	1
†5		O–Ring	1
†6		Seal–Rod	1
†7		O–Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
9	84–1670	Head	1
†10		Seal–Dust	1
11	84–1680	Ring–Retaining	1
12	75–2120	Clevis	1
13	302–5	Fitting – Grease	1
*	86–7330	Seal Repair Kit (Incl. Ref. #3, 5–8 & 10)	1

*Not Illustrated
†Not Serviced Separately

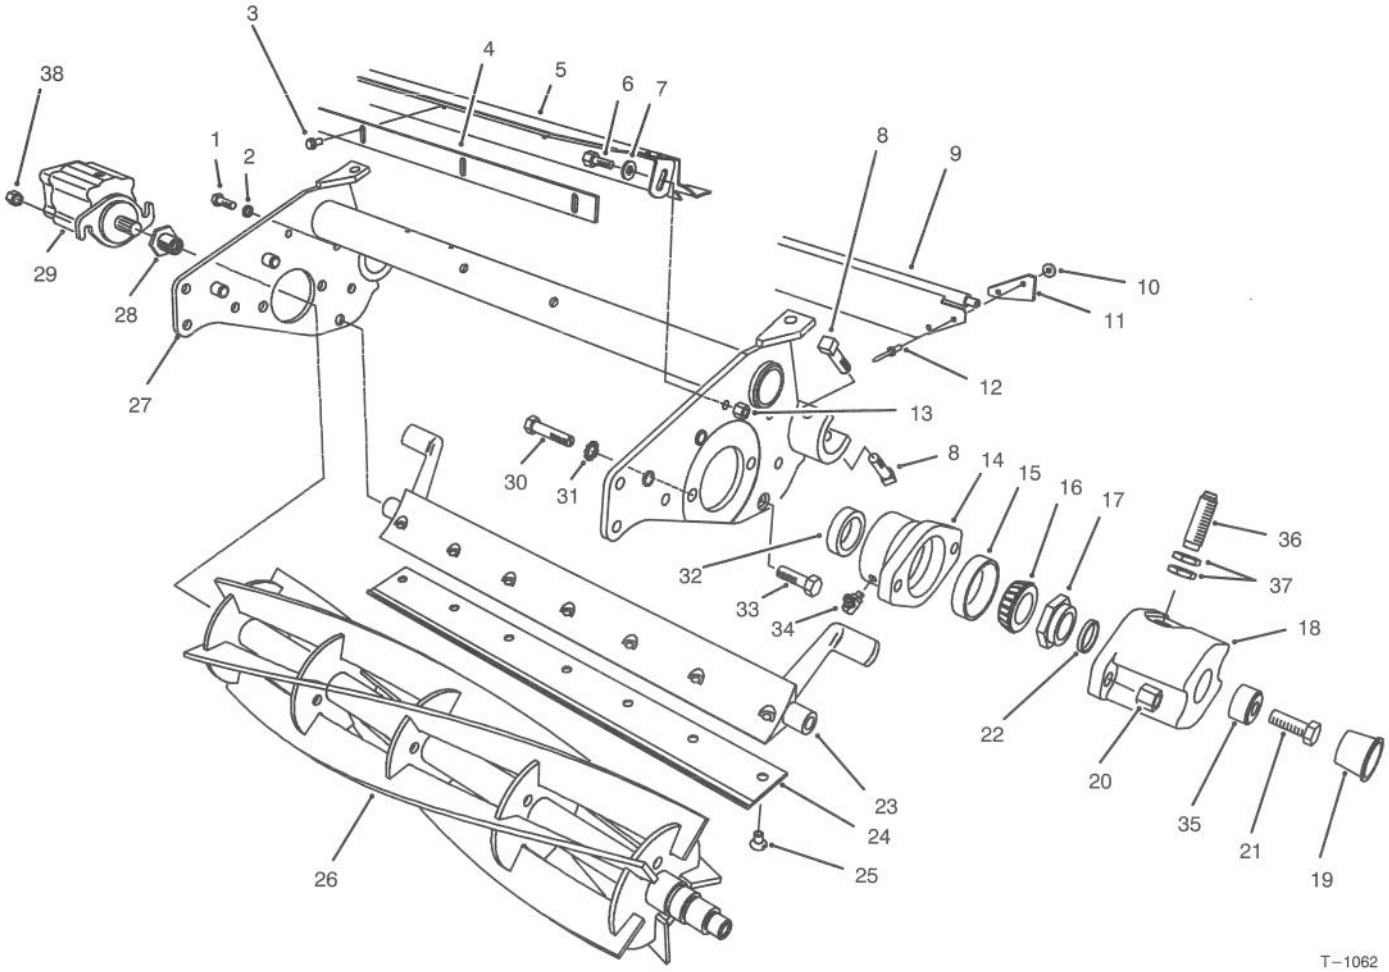


REEL ASSEMBLY
(5 & 8 Blade Cutting Units)

Ref. No.	Part No.	Description	No. Used
1	322–5	Screw – Cap Hex. Hd.	1
2	3253–4	Washer – Lock	1
3	32144–73	Screw – Self Tapping	5
4	36–7260	Bar – Cutoff	1
5	75–1840	Shield – Grass	1
6	321–4	Screw – Cap Hex. Hd.	2
7	3256–1	Washer – Flat	2
8	3243–13	Screw – Sq. Hd. Set	4
9	75–1560	Deflector – Rear	1
10	3256–49	Washer – Flat	4
11	75–1720	Flap – Rear Shield	2
12	3290–409	Rivet – Pop	4
13	3296–42	Nut – Lock	2
14	10–5120	Housing – Bearing	2
15	254–72	Cup – Bearing	2
16	254–94	Cone – Bearing	2
17	3296–60	Nut – Reel	1
18	85–4620	End Cap Assembly (Incl. Ref. #22)	1
19	12–0450	Plug – Hole	1
20	3296–39	Nut – Lock L.H.	2

Ref. No.	Part No.	Description	No. Used
21	30–2120	Screw – Cap Hex. Hd. L.H.	1
22	253–61	Seal – Oil	1
23	10–4930	Bedbar	1
24	63–8610	Bedknife	1
25	57–4910	Screw – Bedknife	7
26	14–0659	Reel – 5 Blade	1
*	14–0649	Reel – 8 Blade	1
27	75–6660	Frame – Cutting Unit	1
28	77–0340	Screw – Spline	1
29	75–1400	Reel Motor Assembly	1
30	57–3210	Screw – Special	4
31	3255–9	Washer – E.T.L.W.	4
32	253–96	Seal – Oil	2
33	217–74	Bolt – Bedbar	2
34	302–60	Fitting – Grease L.H. 90°	1
35	85–4380	Magnet	2
36	85–4390	Sensor Assembly (Incl. Ref. #37)	2
37		Nut – Jam	4
38	32128–36	Nut – Flange Lock R.H.	2
*	302–11	Fitting – Grease R.H. 45°	1

*Not Illustrated

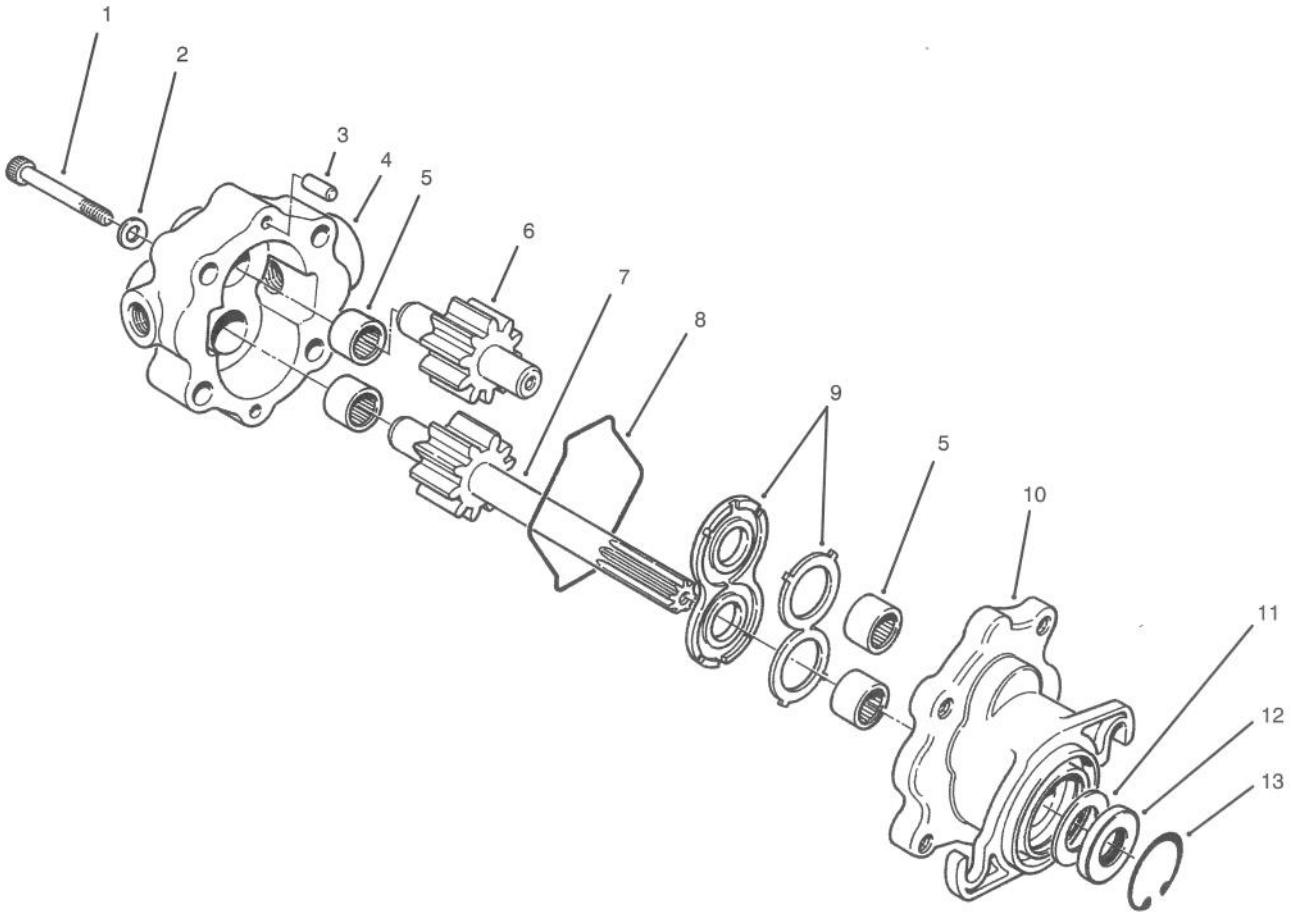


T–1009

REEL MOTOR ASSEMBLY NO. 75–1400

Ref. No.	Part No.	Description	No. Used
1	354–50	Screw–Hex Socket Hd.	4
2	354–51	Washer	4
3	353–599	Pin–Dowel	2
4	354–47	Cover Assy. (Incl. Ref. #5)	1
†5		Bearing–Needle	4
6	354–45	Idler Gear Assembly	1
7	354–49	Drive Shaft Assembly	1
8	354–46	Ring–Seal	1
†9		Plate Assembly–Load	1

Ref. No.	Part No.	Description	No. Used
10	354–44	Body Assy. (Incl. Ref. #5)	1
†11		Spacer	1
†12		Seal–Shaft	1
13	32151–41	Ring–Retaining	1
*	72–4380	Seal Kit (Incl. Ref. #11–13)	1
*	75–1270	Repair Kit (Incl. Ref. #8, & 11–13)	1

*Not Illustrated
†Not Serviced Separately

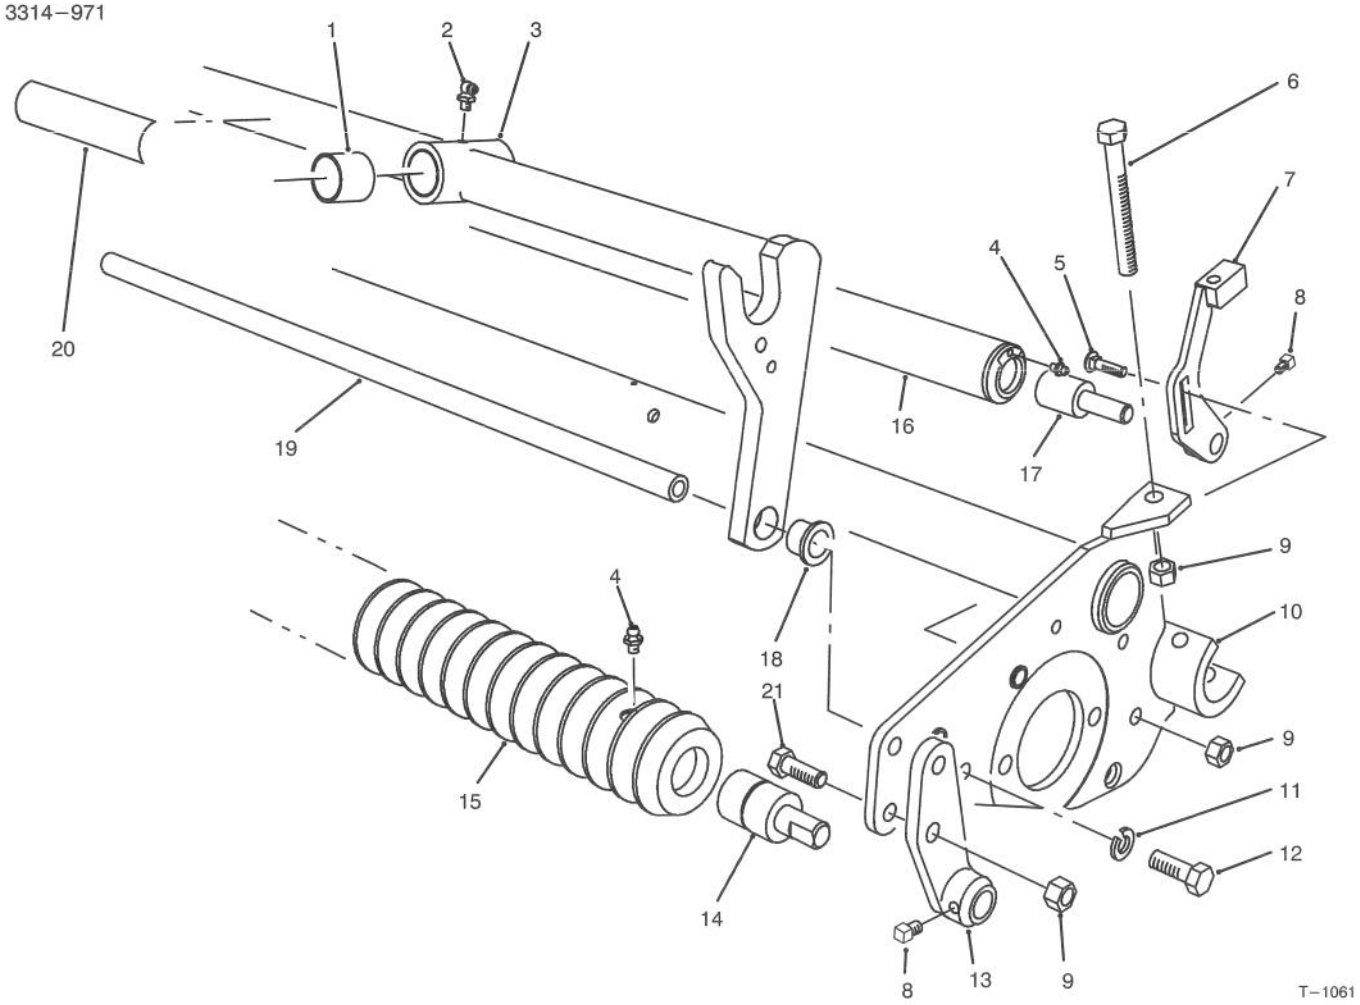


ROLLER ASSEMBLY
(5 Blade Cutting Unit Serial No. 20001 thru 20555)
(8 Blade Cutting Unit Serial No. 20001 thru 21322)

Ref. No.	Part No.	Description	No. Used
1	67–1750	Bushing – Sleeve	2
2	302–60	Fitting – Grease	1
3	75–1600	Carrier Frame Assembly (Incl. Ref. #1, 2 & 18)	1
4	302–5	Fitting – Grease	4
5	3231–2	Bolt – Carriage	2
6	323–49	Screw – Cap Hex. Hd.	2
7	75–1620	Bracket – HOC Rear L.H.	1
*	75–1610	Bracket – HOC Rear R.H.	1
8	3242–1	Screw – Sq. Hd. Set	4
9	3296–39	Nut – Lock	8
10	75–6660	Cutting Unit Frame Assy. (Incl. Ref. #11, 12 & 19)	1
11	3253–21	Washer – Lock	2

Ref. No.	Part No.	Description	No. Used
12	323–6	Screw – Cap Hex. Hd.	2
13	75–1980	Bracket – HOC Front L.H.	1
*	75–1960	Bracket – HOC Front R.H.	1
14	75–1290	Bearing Assembly	2
15	75–1520	Wiehle Roller Assembly (Incl. Ref. #4 & 12)	1
16	85–7220	Rear Roller Assembly (Incl. Ref. #4 & 17)	1
17	21–8430	Bearing Assembly	2
18	75–2160	Bearing – Flange	2
19	75–1710	Support – Cutting Unit	1
‡20	67–7960	Decal – Warning (English)	1
21	323–7	Screw – Cap Hex. Hd.	4

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

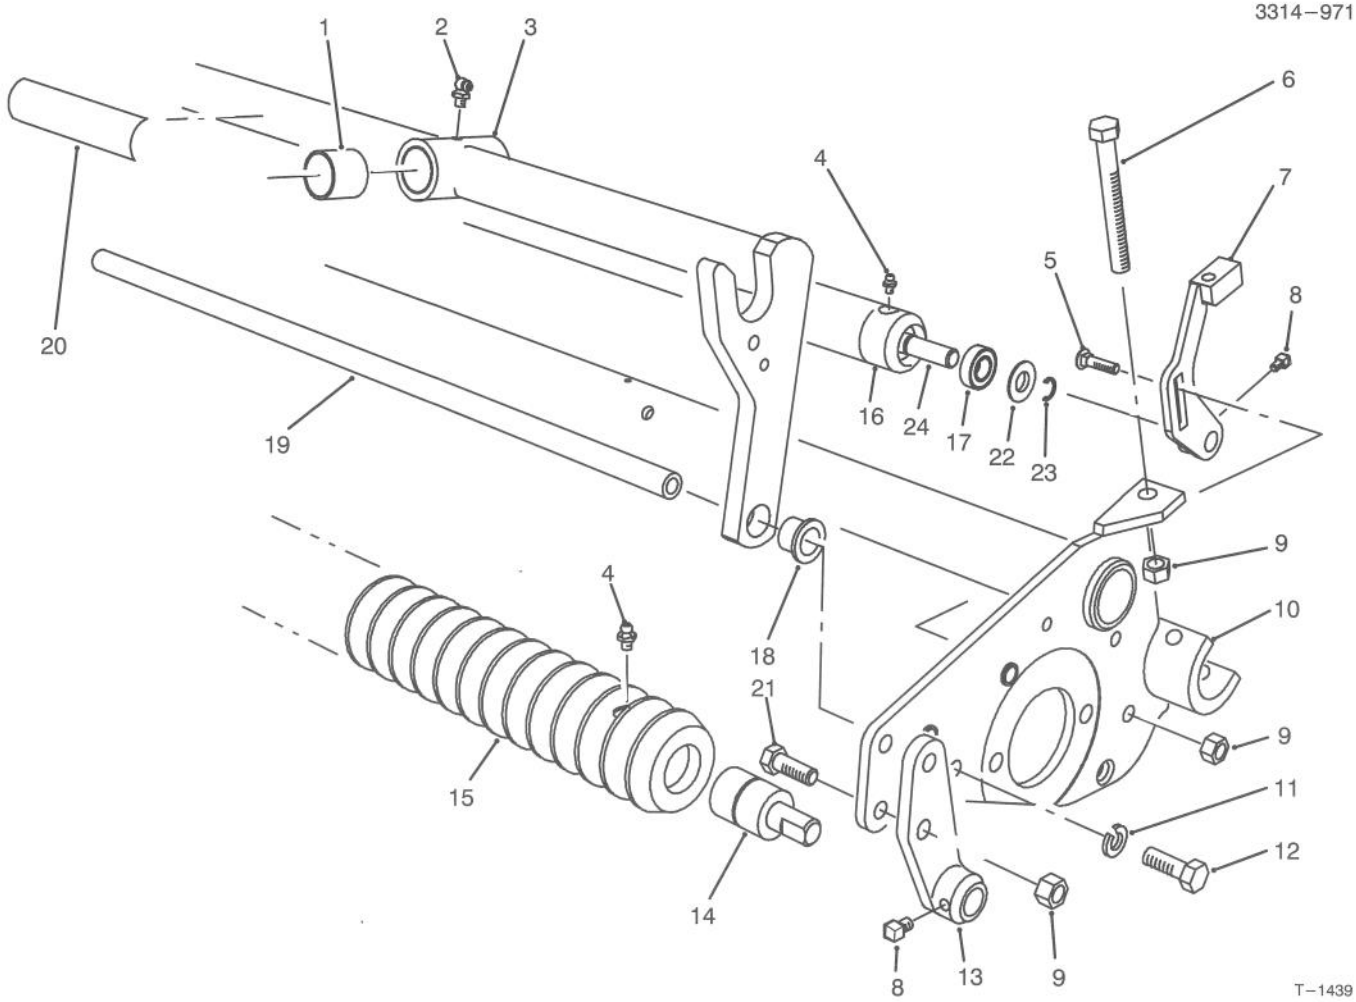


ROLLER ASSEMBLY
(5 Blade Cutting Unit Serial No. 20556 & Up)
(8 Blade Cutting Unit Serial No. 21323 & Up)

Ref. No.	Part No.	Description	No. Used
1	67–1750	Bushing – Sleeve	2
2	302–60	Fitting – Grease	1
3	75–1600	Carrier Frame Assembly (Incl. Ref. #1, 2 & 18)	1
4	302–5	Fitting – Grease	4
5	3231–2	Bolt – Carriage	2
6	323–49	Screw – Cap Hex. Hd.	2
7	75–1620	Bracket – HOC Rear L.H.	1
*	75–1610	Bracket – HOC Rear R.H.	1
8	3242–1	Screw – Sq. Hd. Set	4
9	3296–39	Nut – Lock	8
10	75–6660	Cutting Unit Frame Assy. (Incl. Ref. #11, 12 & 19)	1
11	3253–21	Washer – Lock	2
12	323–6	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
13	75–1980	Bracket – HOC Front L.H.	1
*	75–1960	Bracket – HOC Front R.H.	1
14	75–1290	Bearing Assembly	2
15	75–1520	Wiehle Roller Assembly (Incl. Ref. #4 & 12)	1
16	85–7220	Rear Roller Assembly (Incl. Ref. #4, 17 & 22–24)	1
17	85–9970	Bearing Assembly	2
18	75–2160	Bearing – Flange	2
19	75–1710	Support – Cutting Unit	1
‡20	67–7960	Decal – Warning (English)	1
21	323–7	Screw – Cap Hex. Hd.	4
22	85–7190	Washer – Shield	2
23	32151–12	Ring – Retaining	2
24	85–7180	Shaft – Roller	1

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

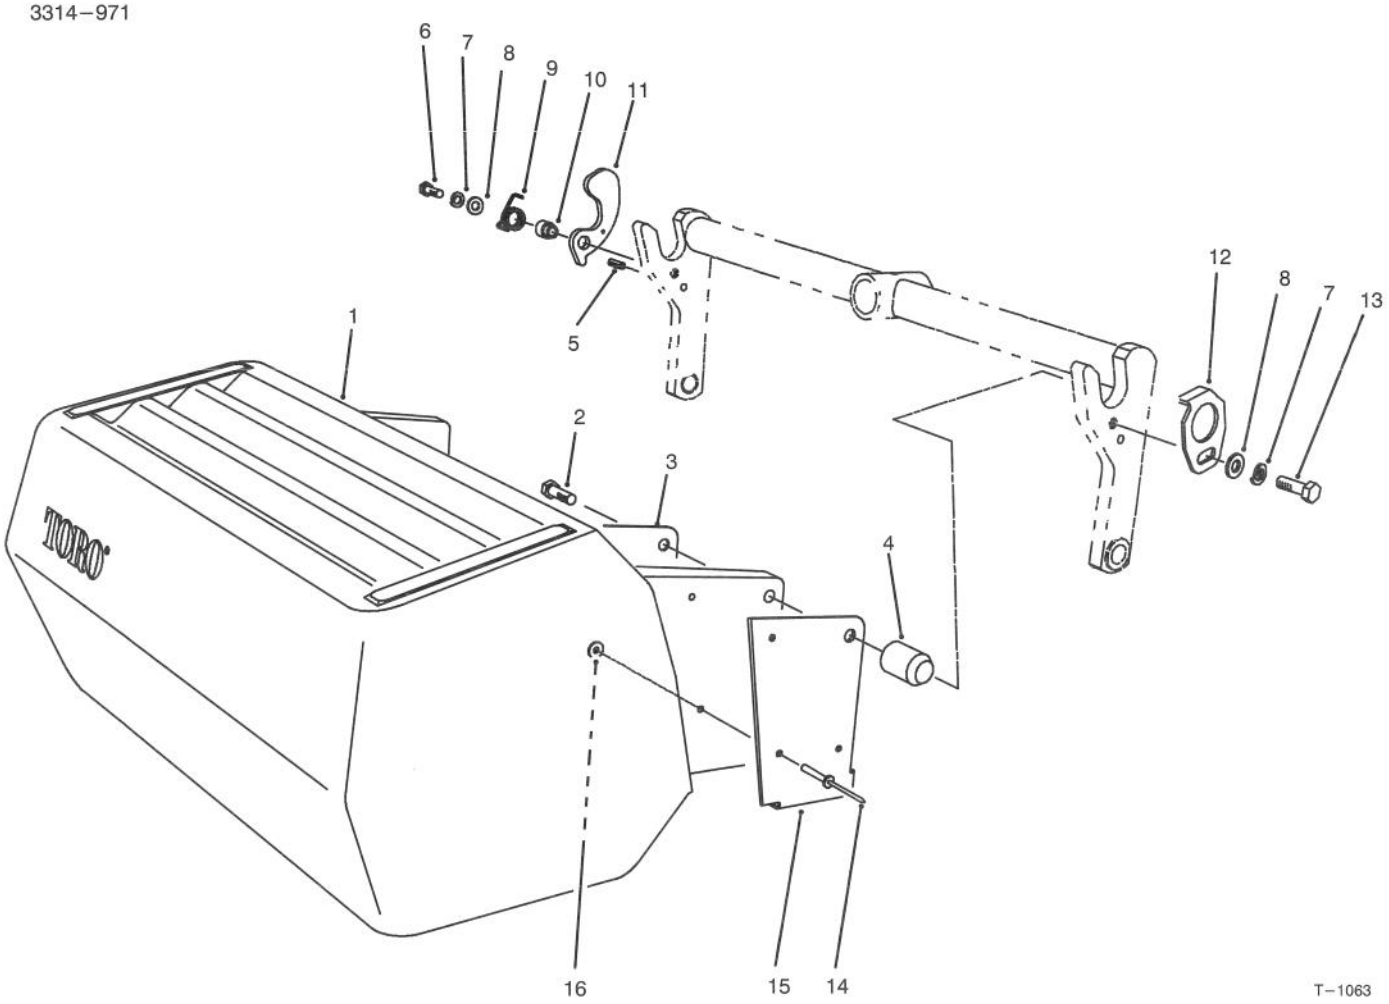


GRASS BASKET ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75–4010	Basket – Grass	1
2	323–6	Screw – Cap Hex. Hd.	2
3	75–4030	Support – Basket Inner L.H.	1
*	75–4020	Support – Basket Inner R.H.	1
4	75–3930	Pin – Basket	2
5	32121–11	Pin – Roll	1
6	322–6	Screw – Cap Hex. Hd.	1
7	3253–4	Washer – Lock	2
8	3256–71	Washer – Flat	2

Ref. No.	Part No.	Description	No. Used
9	75–3970	Spring – Torsion R.H.	1
*	75–3960	Spring – Torsion L.H.	1
10	75–3940	Collar – Basket	1
11	75–3950	Bracket – Basket	1
12	75–3920	Guide – Basket	1
13	322–1	Screw – Cap Hex. Hd.	1
14	3269–28	Rivet – Pop	10
15	75–4040	Support – Basket Outer L.H.	1
*	75–4050	Support – Basket Outer R.H.	1
16	3256–49	Washer – Flat	10

*Not Illustrated

Note: Front left, center, and rear right assemblies shown.

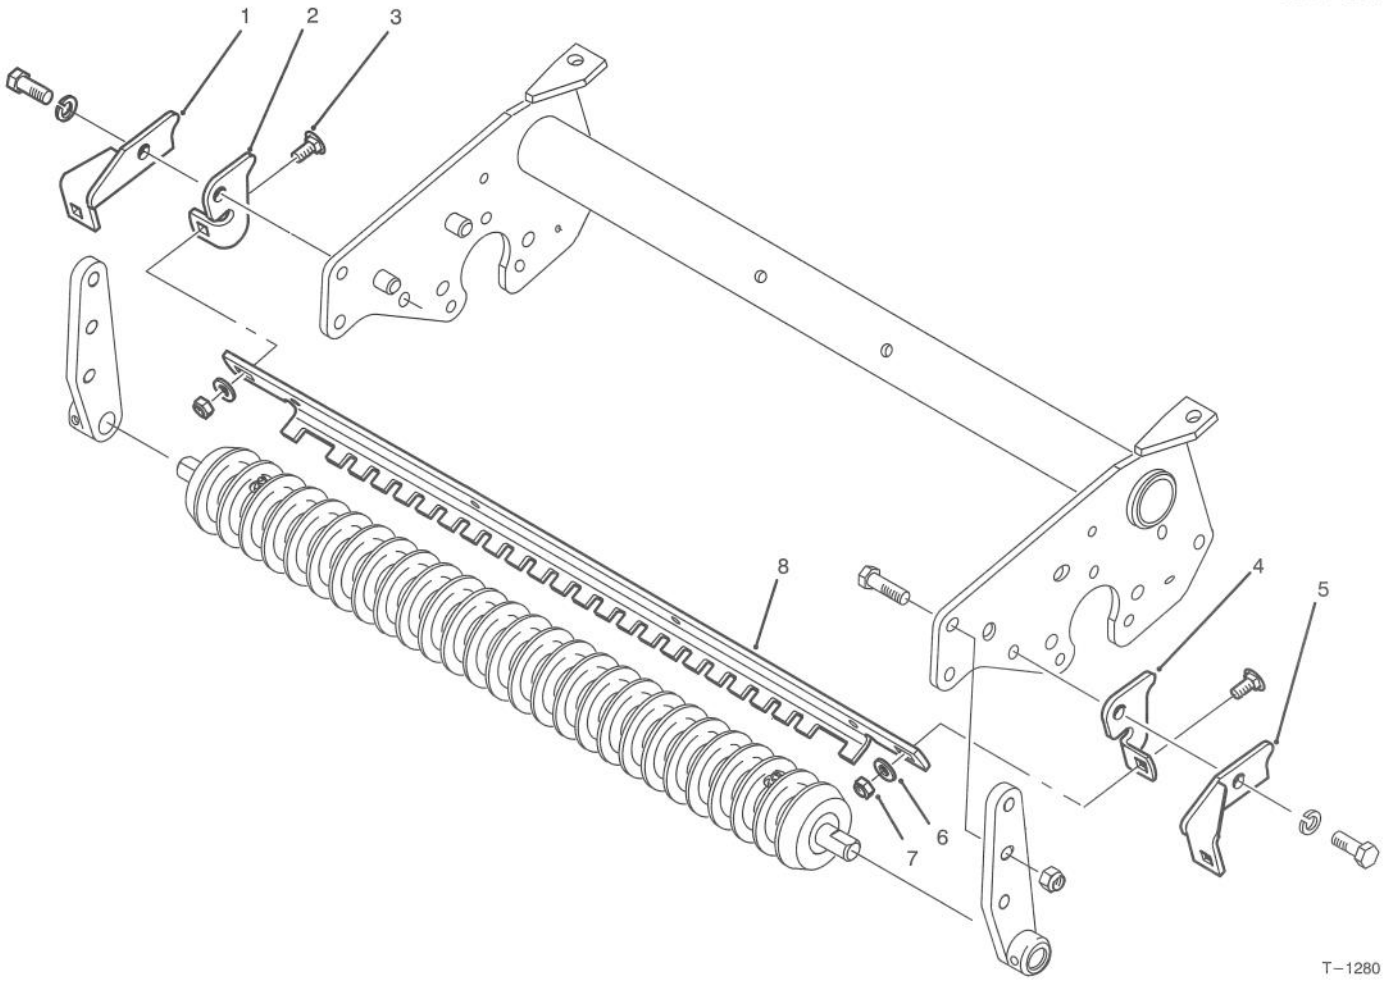


FRONT ROLLER SCRAPER KIT NO. 83–5400 (Optional)

Ref. No.	Part No.	Description	No. Used
1	83–6950	Bracket – Scraper R.H.	1
2	83–6930	Bracket – Scraper R.H.	1
3	3230–1	Bolt – Carriage	2
4	83–6940	Bracket – Scraper L.H.	1

Ref. No.	Part No.	Description	No. Used
5	83–6980	Bracket – Scraper L.H.	1
6	3256–23	Washer – Flat	2
7	3296–29	Nut – Lock	2
8	82–6830	Bracket – Scraper	1

NOTE: Quantities listed per cutting unit.

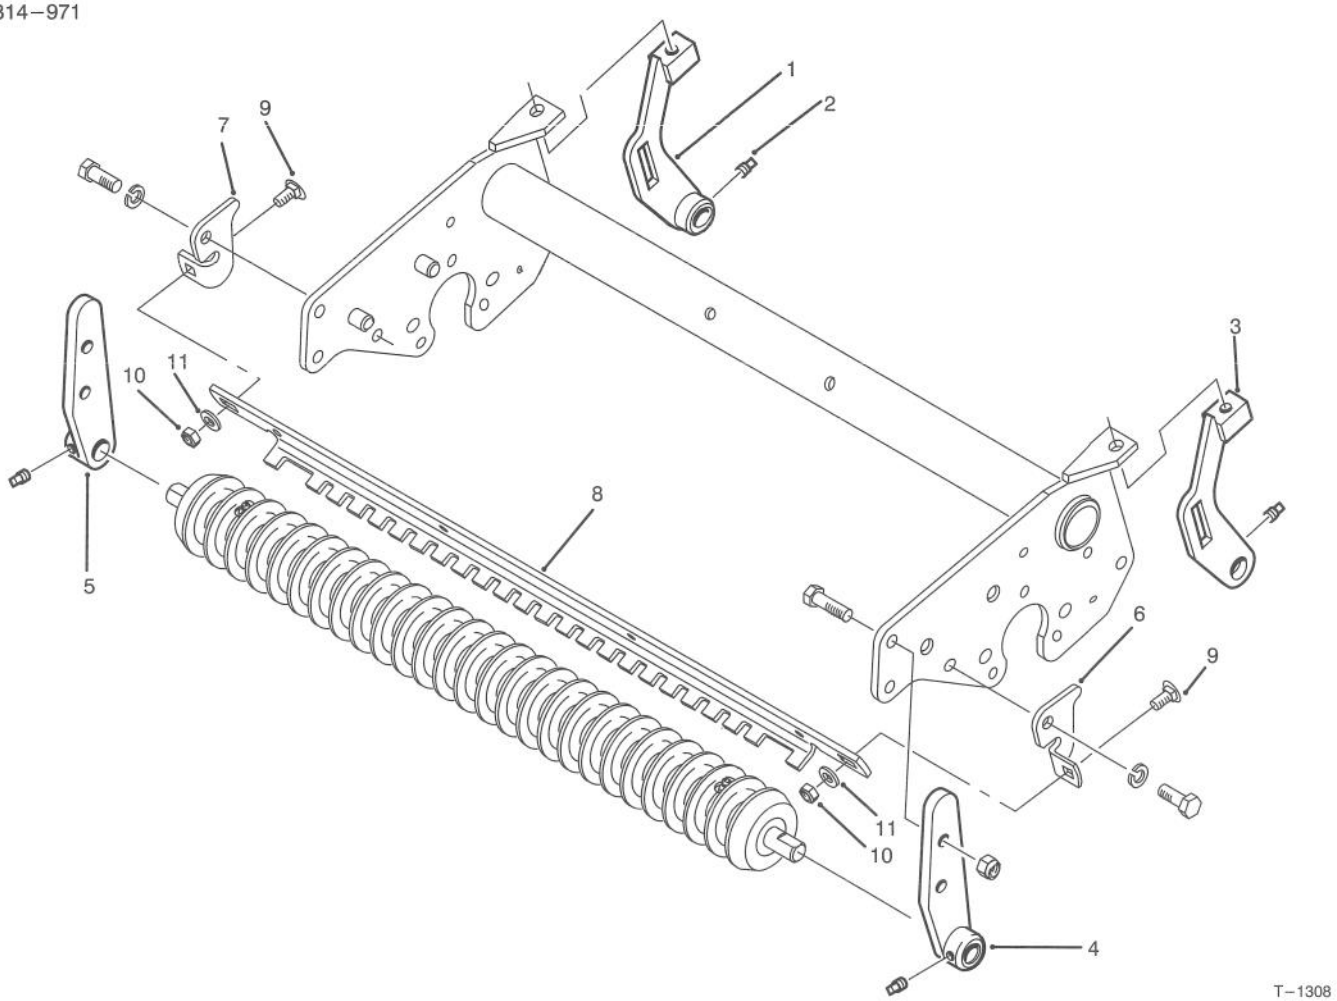


HIGH HEIGHT–OF–CUT KIT NO. 83–5300 (Optional)

Ref. No.	Part No.	Description	No. Used
1	83–5210	H.O.C. – Right Rear	5
2	3242–1	Screw – Set Sq. Hd.	20
3	83–5230	H.O.C. – Left Rear	5
4	83–5250	Support – Front L.H.	5
5	83–5240	Support – Front R.H.	5
*6	83–4880	Bracket – High Scraper L.H.	5

Ref. No.	Part No.	Description	No. Used
*7	83–4870	Bracket – High Scraper R.H.	5
*8	82–6830	Bracket – Scraper	5
*9	3230–1	Bolt – Carriage	10
*10	3296–29	Nut – Lock	10
*11	3256–23	Washer – Flat	10

*Not Included with Kit. These parts are required to install a front roller scraper when using the High Height–of–Cut Kit.

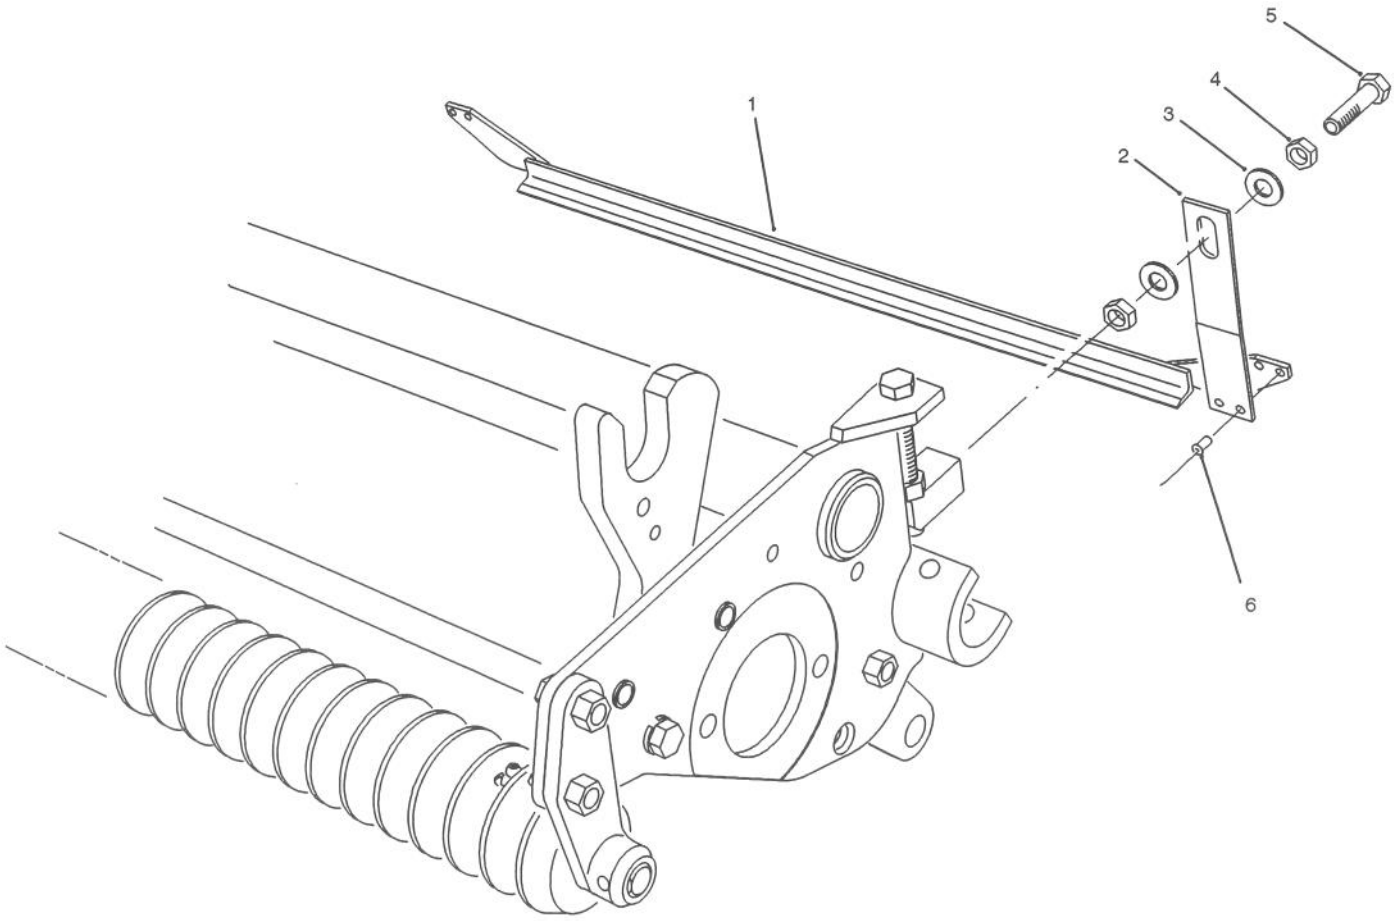


T–1096

ROLLER SCRAPER KIT MODEL NO. 03512 (Optional)

Ref. No.	Part No.	Description	No. Used
1	75–1750	Scraper – Roller	1
2	75–1740	Spring – Scraper	2
3	3256–24	Washer – Flat	4

Ref. No.	Part No.	Description	No. Used
4	3218–3	Nut – Jam	4
5	323–50	Screw – Cap Hex. Hd.	2
6	3269–3	Rivet – Pop	4

NOTE: Quantities listed per cutting unit.
*Not Illustrated

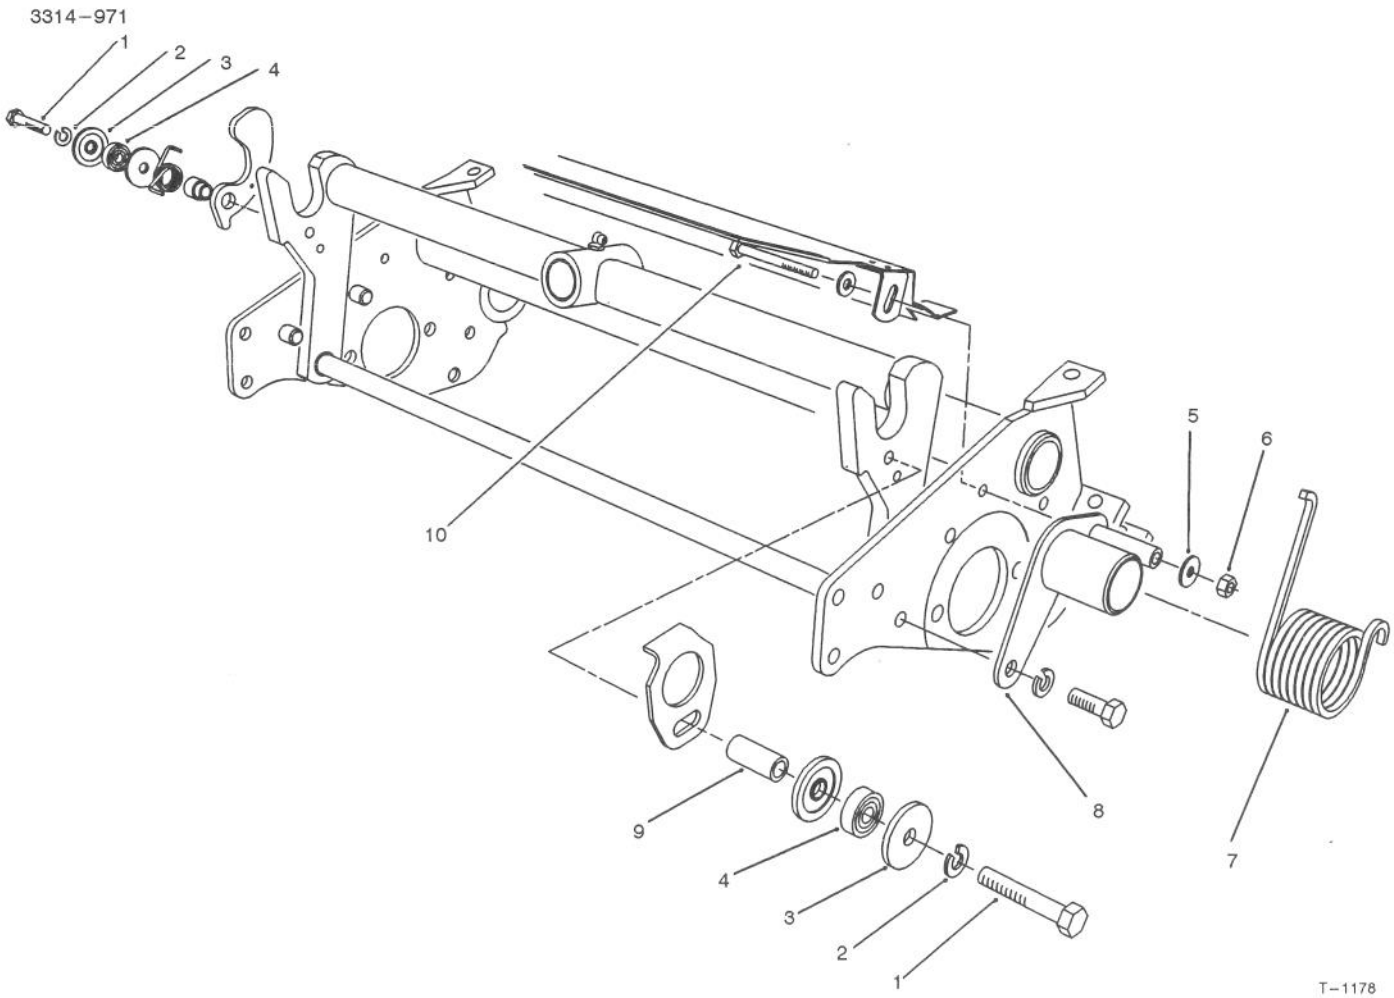


TURF COMPENSATION KIT MODEL NO. 03510 (Optional)

Ref. No.	Part No.	Description	No. Used
1	322–9	Screw – Cap Hex. Hd.	10
2	3253–4	Washer – Lock	10
3	82–6890	Washer – Special	20
4	251–259	Bearing	10
5	3256–78	Washer – Flat	10
6	3296–42	Nut – Lock	10

Ref. No.	Part No.	Description	No. Used
7	83–4730	Spring – Torsion L.H.	5
*	83–4720	Spring – Torsion R.H.	5
8	83–4710	Plate – Spring L.H.	5
*	83–4700	Plate – Spring R.H.	5
9	82–6840	Spacer	10
10	321–23	Screw – Cap Hex. Hd.	10


Note: Front left, center, and rear right assemblies shown.
*Not Illustrated

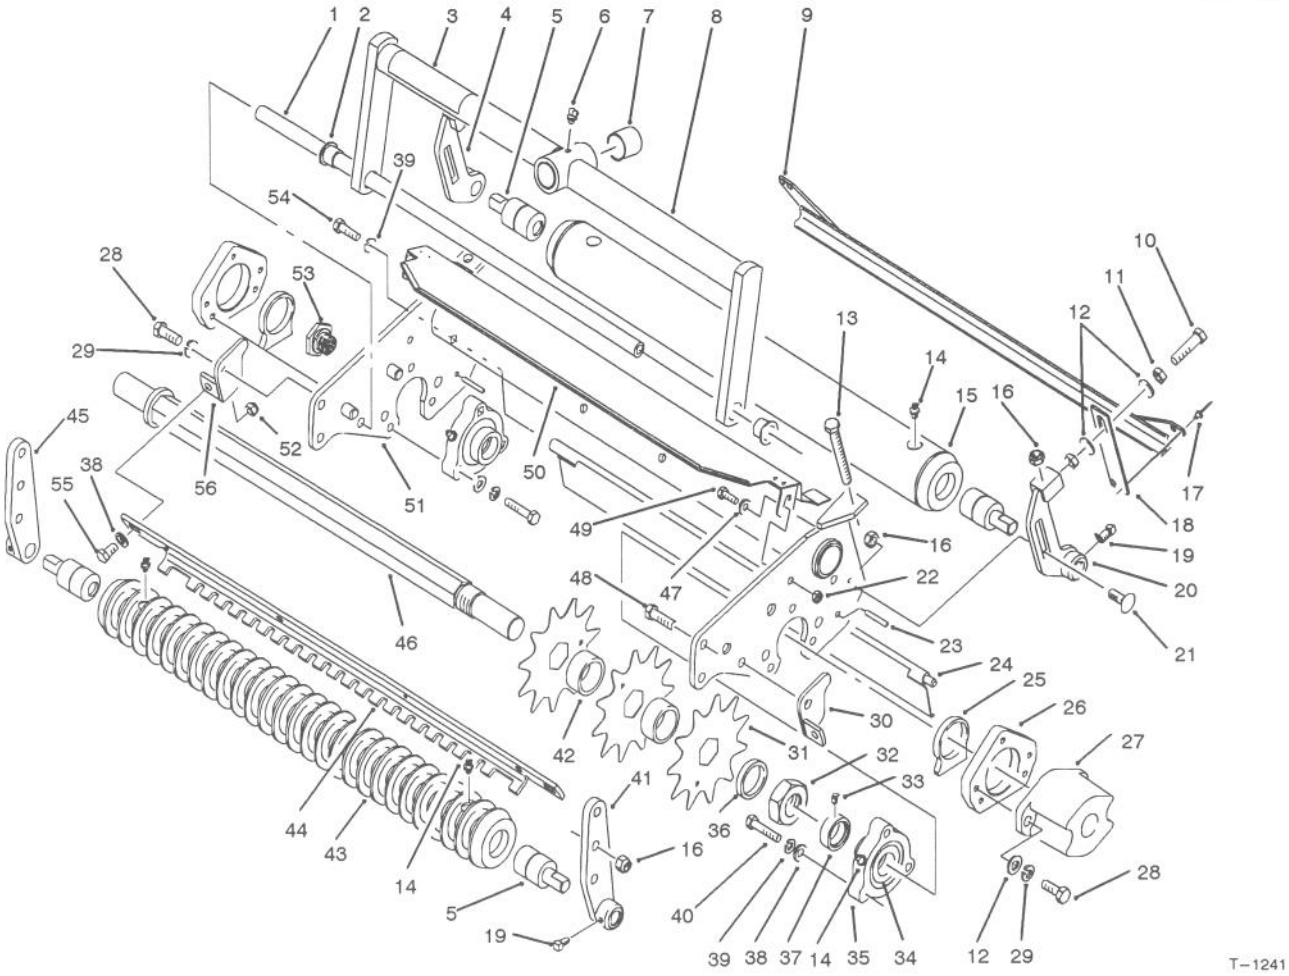

DETHATCHER ASSEMBLY MODEL NO. 03516 (Optional)

Ref. No.	Part No.	Description	No. Used
1	75–1710	Support	1
2	75–2160	Bushing – Flange	2
3	67–7960	Decal – Warning	1
4	82–6630	Bracket – H.O.C. R.H.	1
5	75–1290	Bearing	4
6	302–60	Fitting – Grease	1
7	67–1750	Bushing – Axle	2
8	82–6540	Frame W.A. – Carrier (Incl. Ref. #2, 6 & 7)	1
9	82–6740	Assy. – Scraper, Rear (Incl. Ref. #17 & 18)	1
10	323–53	Screw – Cap Hex. Hd.	2
11	3218–3	Nut – Hex. Jam	4
12	3256–24	Washer – Flat	8
13	323–49	Screw – Special	2
14	302–11	Fitting – Grease 45°	6
15	82–6680	Assembly – Roller, Rear (Incl. Ref. #5 & 14)	1
16	3296–39	Nut – Lock	8
17	3269–3	Rivet – Pop	4
18	82–6770	Spring – Scraper	2
19	3242–1	Screw – Set	4
20	82–6650	Bracket – H.O.C. L.H.	1


Ref. No.	Part No.	Description	No. Used
21	3231–3	Bolt – Carriage	2
22	3296–42	Nut – Lock	2
23	32121–12	Pin – Roll	2
24	82–6780	Deflector – Rear	1
25	82–6820	Spacer – Bearing	2
26	82–6810	Plate – Bearing	2
27	10–5080	Cap – End	1
28	323–6	Screw – Cap Hex. Hd.	6
29	3253–21	Washer – Lock	6
30	82–6880	Scraper – L.H.	1
31	17–1590	Blade – 11 Tooth	24
32	3220–18	Nut – Jam	1
33	3245–35	Screw – Set	2
34	251–337	Bearing – Ball	2
35	76–2460	Assembly – Bearing (Incl. Ref. #14, 33–34 & 37)	2
36	17–1600	Spacer	2
37	251–77	Collar – Lock	2
38	3256–23	Washer – Flat	8
39	3253–4	Washer – Lock	7
40	322–7	Screw – Cap Hex. Hd.	6
41	82–6530	Support H.O.C. – Left	1

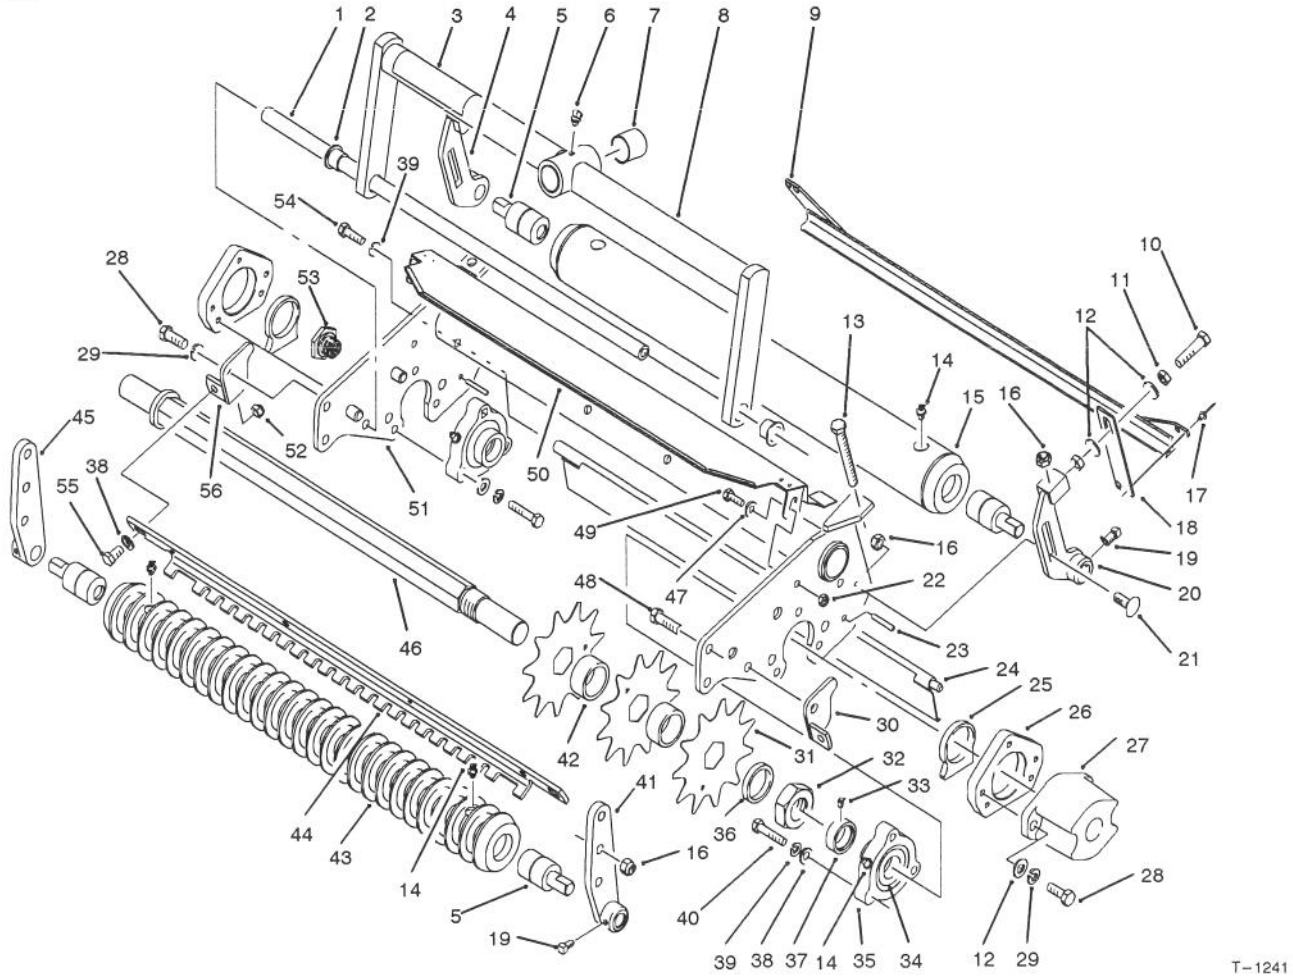

DETHATCHER ASSEMBLY MODEL NO. 03516 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
42	82–6600	Spacer	23
43	75–1520	Assembly – Roller, Wiehle (Incl. Ref. #5 & 14)	1
44	82–6830	Bracket – Scraper	1
45	82–6510	Support H.O.C. – Right	1
46	82–6570	Shaft – Reel	1
47	3256–1	Washer – Flat	2
48	323–7	Screw – Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
49	321–4	Screw – Cap Hex. Hd.	2
50	75–1840	Assembly – Shield, Grass	1
51	82–6710	Assembly – Frame	1
52	3296–29	Nut – Lock	2
53	77–0340	Screw – Spline	1
54	322–5	Screw – Cap Hex. Hd.	1
55	322–3	Screw – Cap Hex. Hd.	2
56	82–6870	Scraper – RH	1

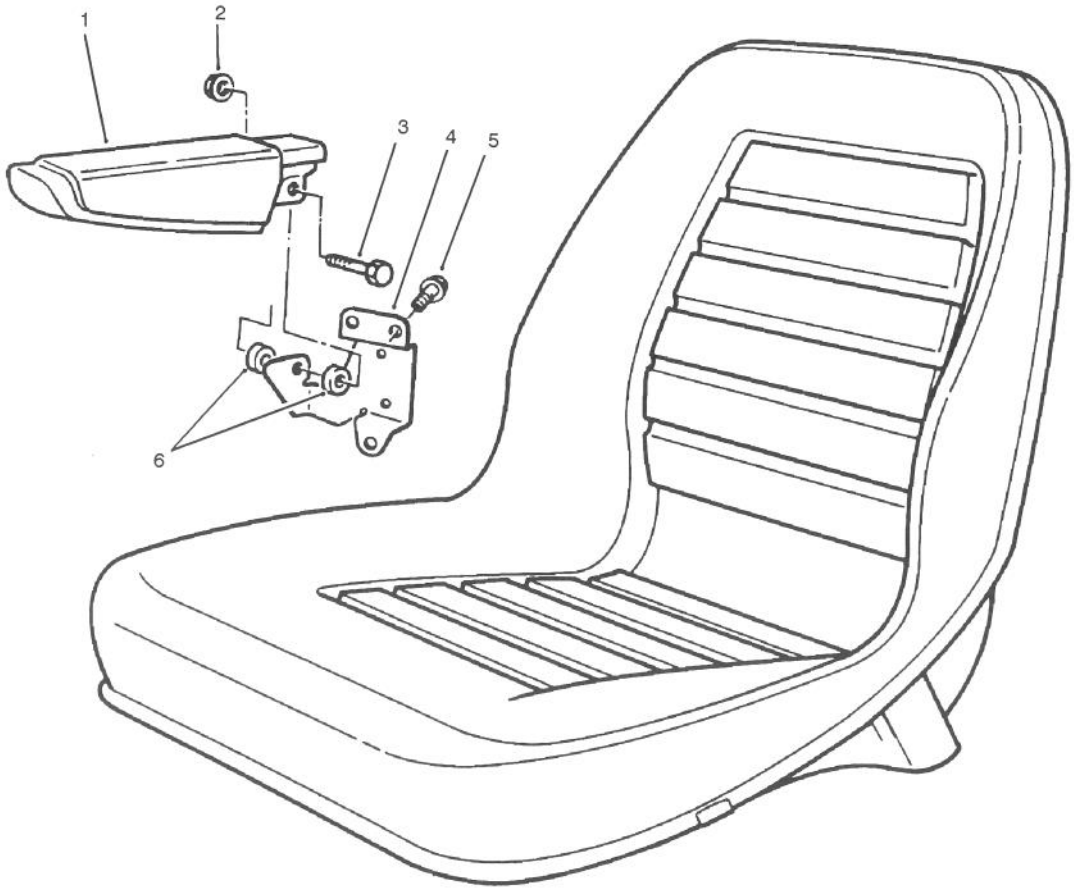


T–0634

ARMREST KIT MODEL NO. 30707 (Optional)

Ref. No.	Part No.	Description	No. Used
1	69–1180	Armrest	2
2	32128–19	Nut – Flange Lock	2
3	323–9	Screw – Cap Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
4	69–0770	Bracket – Armrest R.H.	1
*	69–0760	Bracket – Armrest L.H.	1
5	3234–23	Screw – Hex. Flange Hd.	6
6	69–1260	Spacer	4

*Not Illustrated

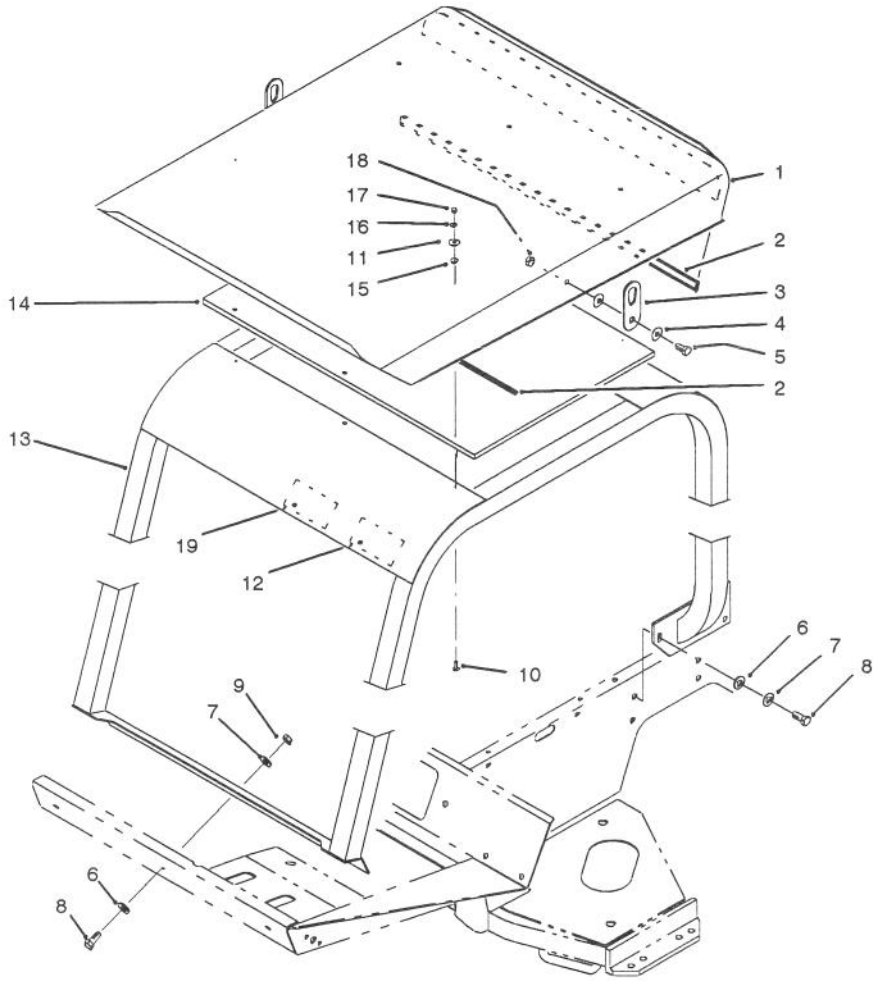

T–1304


R.O.P.S. ASSEMBLY (Optional)

Ref. No.	Part No.	Description	No. Used
1	83–7370	Roof	1
2	83–7390	Seal	2
3	83–7400	Ear – Lift	2
4	3256–24	Washer – Flat	4
5	323–6	Screw – Cap Hex. Hd.	2
6	3256–26	Washer – Flat	9
7	3253–7	Washer – Lock	9
8	325–5	Screw – Cap Hex. Hd.	9
9	3217–9	Nut – Lock	3
10	3250–45	Screw – Pan Hd.	6
11	3256–22	Washer – Flat	6

Ref. No.	Part No.	Description	No. Used
‡12	83–7430	Decal – Danger (English)	1
13	83–7410	Roll – Bar	1
14	83–7380	Insulation – Roof	1
15	83–7420	Washer – Rubber	6
16	3253–3	Washer – Lock	6
17	32111–7	Nut – Acorn	6
18	3296–39	Nut – Lock	2
19	85–9980	Decal – ROPS	1
*	21–4191	Seat Belt Assembly	1
*	3212–4	Screw – Cap Hex. Hd.	2
*	3253–6	Washer – Lock	2

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

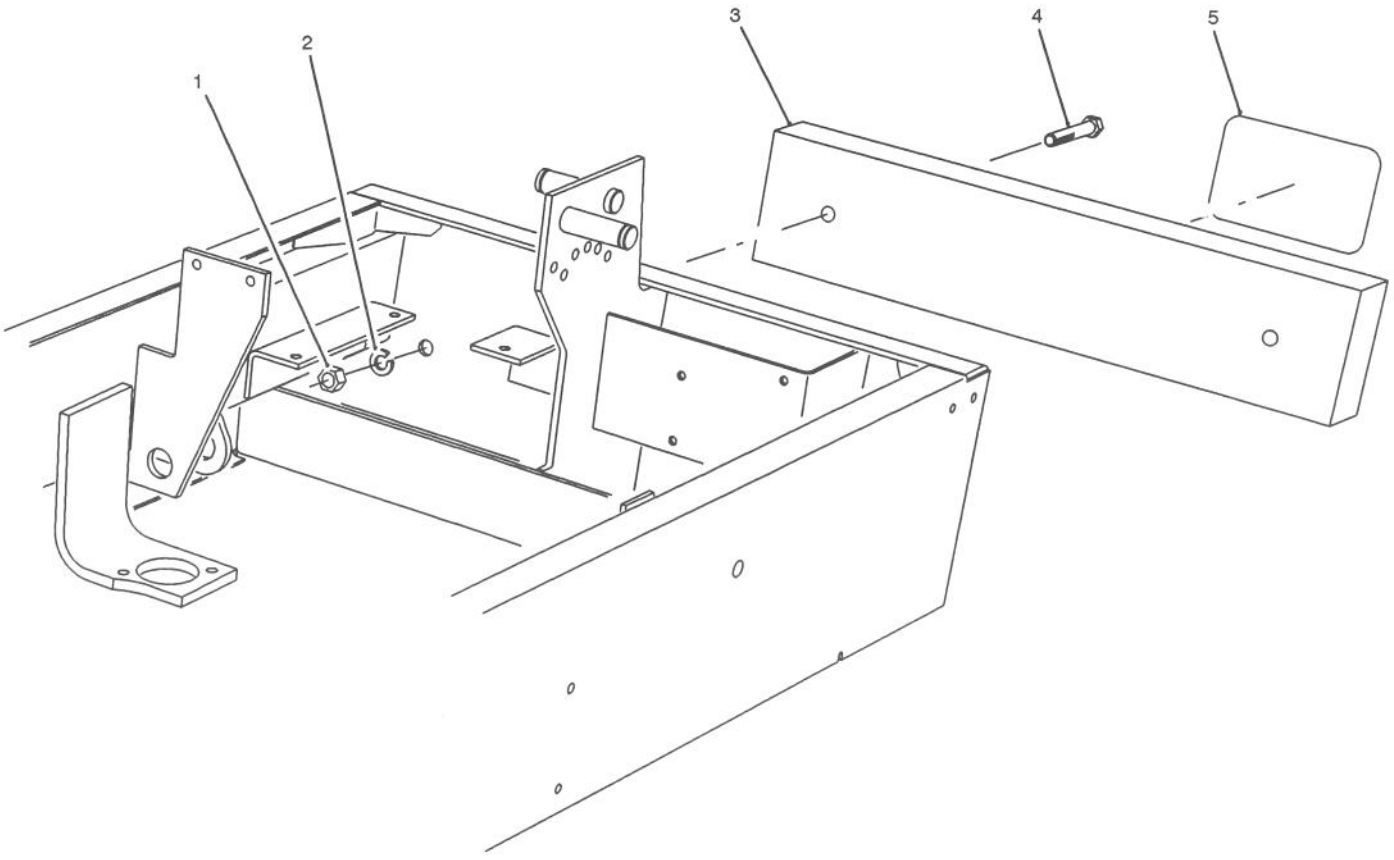


T–1152

WEIGHT KIT NO. 75–6690 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3217–9	Nut – Hex.	2
2	3253–27	Washer – Lock	2
3		Bar – Weight	1
4	325–8	Screw – Cap Hex. Hd.	2
5	62–5550	Decal – TORO	1

SPECIAL TOOLS


GAUGE BAR ASSEMBLY NO. 13–8199

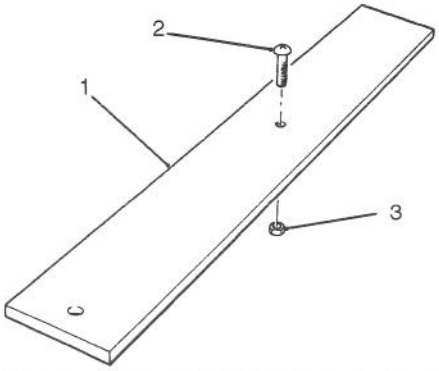

T–1151

Ref. No.	Part No.	Description	No. Used
1	65–8320	Bar – Height–Of–Cut	1
2	32122–22	Screw	1
3	3219–14	Nut – Hex.	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

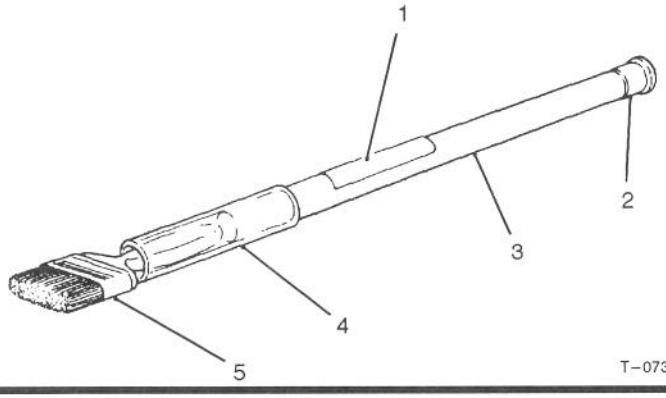

T–0731

Ref. No.	Part No.	Description	No. Used
1	12–9140	Decal	1
2	2410–18	Plug	1
3	29–9080	Handle	1
4	29–9090	Hose – Handle	1
5	36–4310	Brush	1


BEDKNIFE SCREW TOOL NO. *TOR510880

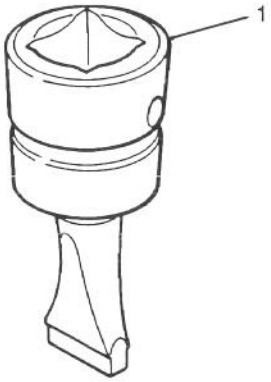

T–0729

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

HYDRAULIC MOTOR TOOLS

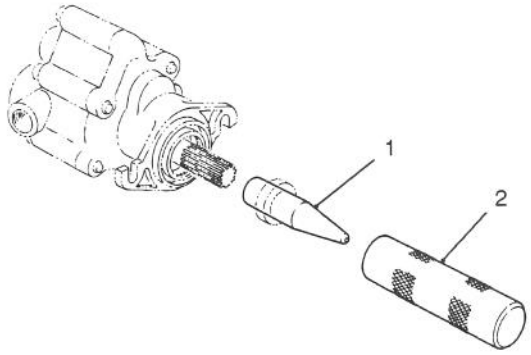


T–0727

Ref. No.	Part No.	Description	No. Used
1	*TOR491430	Protector – Seal	1
2	*TOR491450	Installer – Seal	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1–800–533–0492 (in Minnesota and Canada 1–507–455–7050) Fax. 507–455–7011.

SPECIAL TOOLS

AXLE TOOL NO. *TOR859920

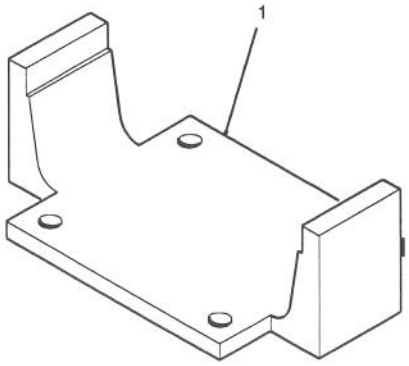

T–1325

Ref. No.	Part No.	Description	No. Used
1		Tool – Axle	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1–800–533–0492 (in Minnesota and Canada 1–507–455–7050) Fax. 507–455–7011.

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 83–6880

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal No Step	Lift Arms	36–3400	84–2780
Decal Diesel Only	Left Fender	52–1320	84–2860
Decal Spring Loaded	Lift Arms	55–4300	84–2940
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1100
Decal No Starting Fluid	Air Cleaner	67–1700	84–3100
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–1980
Decal Backlap	Backlap Bracket	75–0750	84–3260
Decal Towing	Tool Box Cover	75–1280	84–3340
Decal No Riders	Fenders	75–5190	84–3420
Decal Fast/Slow	Steering Tower	75–6710	84–3500
Decal Reels	Under Seat Plate	85–4530	92–1108
Decal Slopes	Tool Box	75–7540	84–3660
Decal Bolt	Frame	77–0490	80–4880
Decal This End Down	Radiator Screen	83–7450	84–3820
Decal Knobs	Seat Plate	83–7440	84–3900
Decal Change Filter	Frame	75–0790	84–3980
Decal Fuses	Inside Control Box	85–4720	84–4060
Decal Reference Chart	Inside Tool Box	85–4740	92–1116
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4220
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4300
Decal Asbestos	Behind Front Wheels	75–0810	84–4310
Decal Floor Plate	Main Frame	88–0440	88–1900
Decal Instruction	Under Seat Plate	84–4610	92–1124

DANISH DECAL KIT NO. 83–6870

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DANISH
Decal No Step	Lift Arms	36–3400	84–2770
Decal Diesel Only	Left Fender	52–1320	84–2850
Decal Spring Loaded	Lift Arms	55–4300	84–2930
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1101
Decal No Starting Fluid	Air Cleaner	67–1700	84–3090
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–2010
Decal Backlap	Backlap Bracket	75–0750	84–3250
Decal Towing	Tool Box Cover	75–1280	84–3330
Decal No Riders	Fenders	75–5190	84–3410
Decal Fast/Slow	Steering Tower	75–6710	84–3490
Decal Reels	Under Seat Plate	85–4530	92–1109
Decal Slopes	Tool Box	75–7540	84–3650
Decal Bolt	Frame	77–0490	84–3730
Decal This End Down	Radiator Screen	83–7450	84–3810
Decal Knobs	Seat Plate	83–7440	84–3890
Decal Change Filter	Frame	75–0790	84–3970
Decal Fuses	Inside Control Box	85–4720	84–4050
Decal Reference Chart	Inside Tool Box	85–4740	92–1117
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4210
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4290
Decal Asbestos	Behind Front Wheels	75–0810	84–4320
Decal Floor Plate	Main Frame	88–0440	88–1930
Decal Instruction	Under Seat Plate	84–4610	92–1125

INTERNATIONAL DECAL CROSS REFERENCE

DUTCH DECAL KIT NO. 83–6830

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	DUTCH
Decal No Step	Lift Arms	36–3400	84–2760
Decal Diesel Only	Left Fender	52–1320	84–2840
Decal Spring Loaded	Lift Arms	55–4300	84–2920
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1102
Decal No Starting Fluid	Air Cleaner	67–1700	84–3080
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–2050
Decal Backlap	Backlap Bracket	75–0750	84–3240
Decal Towing	Tool Box Cover	75–1280	84–3320
Decal No Riders	Fenders	75–5190	84–3400
Decal Fast/Slow	Steering Tower	75–6710	84–3480
Decal Reels	Under Seat Plate	85–4530	92–1110
Decal Slopes	Tool Box	75–7540	84–3640
Decal Bolt	Frame	77–0490	84–3720
Decal This End Down	Radiator Screen	83–7450	84–3800
Decal Knobs	Seat Plate	83–7440	84–3880
Decal Change Filter	Frame	75–0790	84–3960
Decal Fuses	Inside Control Box	85–4720	84–4040
Decal Reference Chart	Inside Tool Box	85–4740	92–1118
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4200
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4280
Decal Asbestos	Behind Front Wheels	75–0810	75–0820
Decal Floor Plate	Main Frame	88–0440	88–1970
Decal Instruction	Under Seat Plate	84–4610	92–1126

ITALIAN DECAL KIT NO. 83–6860

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	ITALIAN
Decal No Step	Lift Arms	36–3400	84–2750
Decal Diesel Only	Left Fender	52–1320	84–2830
Decal Spring Loaded	Lift Arms	55–4300	84–2910
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1103
Decal No Starting Fluid	Air Cleaner	67–1700	84–3070
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–2030
Decal Backlap	Backlap Bracket	75–0750	84–3230
Decal Towing	Tool Box Cover	75–1280	84–3310
Decal No Riders	Fenders	75–5190	84–3390
Decal Fast/Slow	Steering Tower	75–6710	84–3470
Decal Reels	Under Seat Plate	85–4530	92–1111
Decal Slopes	Tool Box	75–7540	84–3630
Decal Bolt	Frame	77–0490	84–3710
Decal This End Down	Radiator Screen	83–7450	84–3790
Decal Knobs	Seat Plate	83–7440	84–3870
Decal Change Filter	Frame	75–0790	84–3950
Decal Fuses	Inside Control Box	85–4720	84–4030
Decal Reference Chart	Inside Tool Box	85–4740	92–1119
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4190
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4270
Decal Asbestos	Behind Front Wheels	75–0810	75–0850
Decal Floor Plate	Main Frame	88–0440	88–1950
Decal Instruction	Under Seat Plate	84–4610	92–1127

INTERNATIONAL DECAL CROSS REFERENCE

SPANISH DECAL KIT NO. 83–6850

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal No Step	Lift Arms	36–3400	84–2740
Decal Diesel Only	Left Fender	52–1320	84–2820
Decal Spring Loaded	Lift Arms	55–4300	84–2900
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1104
Decal No Starting Fluid	Air Cleaner	67–1700	84–3060
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–2000
Decal Backlap	Backlap Bracket	75–0750	84–3220
Decal Towing	Tool Box Cover	75–1280	84–3300
Decal No Riders	Fenders	75–5190	84–3380
Decal Fast/Slow	Steering Tower	75–6710	84–3460
Decal Reels	Under Seat Plate	85–4530	92–1112
Decal Slopes	Tool Box	75–7540	84–3620
Decal Bolt	Frame	77–0490	84–3700
Decal This End Down	Radiator Screen	83–7450	84–3780
Decal Knobs	Seat Plate	83–7440	84–3860
Decal Change Filter	Frame	75–0790	84–3940
Decal Fuses	Inside Control Box	85–4720	84–4020
Decal Reference Chart	Inside Tool Box	85–4740	92–1120
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4180
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4260
Decal Asbestos	Behind Front Wheels	75–0810	75–0860
Decal Floor Plate	Main Frame	88–0440	88–1920
Decal Instruction	Under Seat Plate	84–4610	92–1128

GERMAN DECAL KIT NO. 83–6810

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal No Step	Lift Arms	36–3400	84–2730
Decal Diesel Only	Left Fender	52–1320	84–2810
Decal Spring Loaded	Lift Arms	55–4300	84–2890
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1105
Decal No Starting Fluid	Air Cleaner	67–1700	84–3050
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–2040
Decal Backlap	Backlap Bracket	75–0750	84–3210
Decal Towing	Tool Box Cover	75–1280	84–3290
Decal No Riders	Fenders	75–5190	84–3370
Decal Fast/Slow	Steering Tower	75–6710	84–3450
Decal Reels	Under Seat Plate	85–4530	92–1113
Decal Slopes	Tool Box	75–7540	84–3610
Decal Bolt	Frame	77–0490	84–3690
Decal This End Down	Radiator Screen	83–7450	84–3770
Decal Knobs	Seat Plate	83–7440	84–3850
Decal Change Filter	Frame	75–0790	84–3930
Decal Fuses	Inside Control Box	85–4720	84–4010
Decal Reference Chart	Inside Tool Box	85–4740	92–1121
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4170
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4250
Decal Asbestos	Behind Front Wheels	75–0810	75–0840
Decal Floor Plate	Main Frame	88–0440	88–1960
Decal Instruction	Under Seat Plate	84–4610	92–1129

INTERNATIONAL DECAL CROSS REFERENCE

FRENCH DECAL KIT NO. 83–6920

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal No Step	Lift Arms	36–3400	84–2720
Decal Diesel Only	Left Fender	52–1320	84–2800
Decal Spring Loaded	Lift Arms	55–4300	84–2880
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1106
Decal No Starting Fluid	Air Cleaner	67–1700	84–3040
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–2020
Decal Backlap	Backlap Bracket	75–0750	84–3200
Decal Towing	Tool Box Cover	75–1280	84–3280
Decal No Riders	Fenders	75–5190	84–3360
Decal Fast/Slow	Steering Tower	75–6710	84–3440
Decal Reels	Under Seat Plate	85–4530	92–1114
Decal Slopes	Tool Box	75–7540	84–3600
Decal Bolt	Frame	77–0490	84–3680
Decal This End Down	Radiator Screen	83–7450	84–3760
Decal Knobs	Seat Plate	83–7440	84–3840
Decal Change Filter	Frame	75–0790	84–3920
Decal Fuses	Inside Control Box	85–4720	84–4000
Decal Reference Chart	Inside Tool Box	85–4740	92–1122
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4160
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4240
Decal Asbestos	Behind Front Wheels	75–0810	75–0830
Decal Floor Plate	Main Frame	88–0440	88–1940
Decal Instruction	Under Seat Plate	84–4610	92–1130

SWEDISH DECAL KIT NO. 83–6840

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SWEDISH
Decal No Step	Lift Arms	36–3400	84–2710
Decal Diesel Only	Left Fender	52–1320	84–2790
Decal Spring Loaded	Lift Arms	55–4300	84–2870
Decal ANSI	Tool Box Cover	88–6700 Ref. Only	92–1107
Decal No Starting Fluid	Air Cleaner	67–1700	84–3030
Decal Hydraulic Oil	Right Fender & Frame	85–4730	88–1990
Decal Backlap	Backlap Bracket	75–0750	84–3190
Decal Towing	Tool Box Cover	75–1280	84–3270
Decal No Riders	Fenders	75–5190	84–3350
Decal Fast/Slow	Steering Tower	75–6710	84–3430
Decal Reels	Under Seat Plate	85–4530	92–1115
Decal Slopes	Tool Box	75–7540	84–3590
Decal Bolt	Frame	77–0490	84–3670
Decal This End Down	Radiator Screen	83–7450	84–3750
Decal Knobs	Seat Plate	83–7440	84–3830
Decal Change Filter	Frame	75–0790	84–3910
Decal Fuses	Inside Control Box	85–4720	84–3990
Decal Reference Chart	Inside Tool Box	85–4740	92–1123
Decal Hands/Feet	Cutting Unit Frames	67–7960	84–4150
Decal Seat Belts	R.O.P.S. Roof	83–7430	84–4230
Decal Asbestos	Behind Front Wheels	75–0810	75–0870
Decal Floor Plate	Main Frame	88–0440	88–1910
Decal Instruction	Under Seat Plate	84–4610	92–1131

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–3251	Spring – Compression	3	12	1
3–6498	Washer – Thrust	59	21	4
3–6498	Washer – Thrust	29	22	2
3–6498	Washer – Thrust	57	30	6
3–6657	Clamp – Cable	6	30	1
3–6657	Clamp – Cable	36	48	1
5–0652	Spacer	5	42	1
5–0743	Spring – Counterbalance	59	1	2
5–0743	Spring – Extension	57	22	3
5–1096	Chain – Cutting Unit	59	27	2
5–1226	Washer – Shim	54	8	A/R
5–1226	Washer – Thrust	55	48	1
5–3637	Washer – Flat	35	23	1
7–3900	Pad – Brake	5	26	2
10–4930	Bedbar	64	23	1
10–5080	Cap – End	73	27	1
10–5120	Housing – Bearing	64	14	2
10–6830	Stud – Drive	54	27	10
10–8110	Washer – Thrust	54	9	2
12–0450	Plug – Hole	64	19	1
12–9140	Decal	78	1	1
14–0649	Reel – 8 Blade	64	*	1
14–0659	Reel – 5 Blade	64	26	1
14–0959	Hood	1	6	1
17–1590	Blade – 11 Tooth	73	31	24
17–1600	Spacer	73	36	2
21–0140	Joint – Ball	54	35	2
21–0150	Joint – Ball L.H. Thread	54	39	2
21–2820	Hub – Rear Wheel	54	18	2
21–4191	Seat Belt Assembly	76	*	1
21–7670	Case–Differential	25	33	1
21–7690	Gear–Pinion	24	6	2
21–7700	Shaft–Pinion Mate	25	31	1
21–7710	Pin–Roll	25	30	1
21–7720	Washer–Thrust	24	4	2
21–7730	Washer–Thrust	24	7	2
21–7770	Screw–Drive Gear	25	32	5
21–8020	Spacer–Front Pinion	25	25	1
21–8090	Diff. Adjust. Shim .003	25	38	A/R
21–8100	Diff. Adjust. Shim .005	25	37	A/R
21–8110	Diff. Adjust. Shim .010	25	36	A/R
21–8120	Diff. Adjust. Shim .030	25	35	A/R
21–8180	Bearing	26	3	2
21–8230	Vent Tube Assembly	25	39	1
21–8270	Pin–Dowel	24	3	2
21–8320	Gasket–Bearing, Wheel	26	20	2
21–8330	Seal–Oil	26	2	2
21–8360	Clip–Retaining	26	12	2
21–8390	Cup–Bearing	25	24	1
21–8430	Bearing Assembly	66	17	2
21–9260	Seal – Shaft	3	27	1
21–9370	Screw–Adjusting	26	16	2
21–9380	Nut–Pivot	26	17	2
21–9390	Socket–Adjusting Screw	26	15	2
21–9420	Spring–Shoe Return, L.H.	26	19	2
21–9430	Spring–Shoe Return, R.H.	26	7	2
21–9440	Spring–Adjusting Screw	26	14	2
21–9450	Shield–Dust	26	5	2
21–9460	Retainer–Brake, Parking	26	10	4
23–2270	Bushing – Rubber	29	26	1
23–7270	Nut – Lug	22	1	10
24–8790	Gear–Bevel, Differential	24	5	2
24–8840	Ring–Bearing, Wheel	26	22	2
24–9180	Lever, Brake, Parking	26	4	2
27–2360	Ignition Switch Assembly	11	19	1
27–3710	Dipstick – Axle	22	41	1
27–5340	Hose – Fuel	21	11	1
27–6852	Shaft–Axle, Flanged R.H.	26	*	1
27–6862	Shaft–Axle, Flanged L.H.	26	1	1
27–7110	Element Assembly	52	8	1
27–7120	Nut	52	3	1
27–7130	Clamp Assembly	52	4	1
27–7140	Baffle	52	2	1
27–7150	Cup Assembly	52	1	1
27–7160	Decal – Instructions	51	5	1
27–7170	Band Assembly	52	7	2
27–7220	Air Cleaner Soap	52	*	1
27–9560	Spacer	35	46	1
28–0660	Screw–Cap, Hex Hd.	26	21	8
28–0670	Seal–Oil	26	8	2
28–0680	Drum–Brake	26	13	2
28–1280	Boot – Cable	51	18	1
29–6162	Switch – Neutral	29	6	1
29–9080	Handle	78	3	1
29–9090	Hose – Handle	78	4	1
30–2120	Screw – Cap Hex. Hd. L.H.	64	21	1
33–1260	Cover Assembly	52	12	1
33–1270	Bowl	52	11	1
36–3400	Decal – No Step (English)	58	62	2
36–4310	Brush	78	5	1
36–7260	Bar – Cutoff	64	4	1
38–3400	Guadr – Rubber	16	40	1
42–6080	Shim – Axle	22	37	A/R
42–7080	Cap	40	2	2
42–7190	Bushing – Knock	44	33	2
42–7210	Plug–Taper	39	19	1
42–7290	Gasket – Drain	39	16	2
42–7510	Pipe	41	4	1
42–7510	Pipe	41	9	1
42–7840	Key	40	20	1
42–7860	Lock	37	33	12
42–7870	Seal	37	30	6
42–8240	Gasket	46	6	3
42–8690	Metal – Sealing	48	37	1
42–8700	Wire	48	38	1
42–8830	Seal – O–Ring	48	6	1
42–8830	Seal – O–Ring	48	10	1
42–9110	Gasket	41	21	1
42–9110	Gasket – Muffler	34	15	1
42–9260	Plug – Drain	39	15	1
42–9420	Bolt – Speed Set	48	33	4
42–9430	Bolt W/Washer	41	7	1
42–9430	Bolt W/Washer	48	12	2
42–9440	Bolt W/Washer	39	8	11
42–9440	Bolt W/Washer	50	24	1
42–9440	Bolt W/Washer	37	25	4
42–9490	Bolt W/Washer	43	10	4
42–9490	Bolt W/Washer	40	11	2
42–9490	Bolt W/Washer	39	18	18
42–9510	Bolt	38	42	1
42–9570	Stud	41	20	4
42–9590	Nut	37	17	6
42–9640	Nut – Jam	48	9	2
42–9650	Nut – Jam	44	30	1
42–9660	Washer	50	4	1
42–9660	Washer	38	39	3
42–9850	Washer – Lock	34	14	4
42–9850	Washer – Lock	35	26	2
43–0090	Screw – Cap Hex. Hd.	34	20	3
43–0370	Shim	50	5	1
43–0510	Spring – Brush	50	14	2
43–1920	Nut Set	50	17	1
43–2550	Filter	44	18	1
43–2560	Gasket – Side Cover	44	19	1
43–2570	Gasket–Coil Side	44	17	1
43–2580	Magnet	44	20	1
43–2690	Pair of Lined Brake Shoes	26	*	2
43–2690	Shoe & Lining Assembly	26	9	4
43–2710	Seal – O–Ring	41	36	2
43–2740	Gasket	34	8	1
43–2750	Nut – Lock	34	9	1
43–2820	Cap – Sealing	38	47	1
43–2820	Cap – Sealing Torque Set	48	32	1
43–3160	Screw – Adjusting	38	44	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
43–3220	Screw – Cap Hex. Hd.	34	5	2
43–5920	Washer – Lock	35	25	1
43–5960	Nut – Special	38	46	1
43–5970	Nut – Hex.	35	24	1
43–6710	Diff. Adjust. Shim .003	24	15	A/R
43–6711	Diff. Adjust. Shim .005	24	16	A/R
43–6712	Diff. Adjust. Shim .010	24	17	A/R
43–6713	Diff. Adjust. Shim .030	24	18	A/R
43–6750	Cup–Bearing, Tapered	24	10	1
43–6760	Cone–Bearing, tapered	24	9	1
43–6800	Nut–Lock	26	18	8
43–6810	Spider–Torque	26	6	2
44–2210	Warning Light Assembly	11	6	1
44–2670	Hose – Fuel	21	19	1
46–6550	Connector – Fuel Elbow 90°	21	21	1
46–6560	Grommet	21	22	2
46–8091	Screw – Cap Hex. Hd.	2	43	4
47–0110	Spacer – Spindle	35	4	1
48–4220	Air Cleaner Assembly	51	4	1
48–4220	Air Filter Assembly	52	*	1
48–7430	Pre–Cleaner Assembly	52	*	1
48–7700	Screw – Cap Hex. Hd.	35	17	1
48–7930	Nut – Lock	34	13	4
48–9570	Washer – Lock	34	6	2
48–9590	Washer – Lock	35	12	10
48–9590	Washer – Lock	34	21	1
49–2040	Screw – Hex. Washer Hd.	18	25	4
49–2040	Screw – Hex. Washer Hd.	2	47	2
49–2040	Screw – Thread Forming	57	2	10
49–2040	Screw – Thread Forming	60	41	5
49–6440	Plate – Traction Pedal	5	11	1
52–1320	Decal – Fuel (English)	1	28	1
52–2860	Washer – Flat	7	51	4
53–8150	Fuel Pump Assembly	21	2	1
53–8150	Pump Assembly	47	*	1
53–8150	Pump Assembly	44	21	1
54–8660	Washer	50	25	1
54–9040	Yoke – End	34	26	1
54–9180	Kit – U–Joint	34	25	1
55–4300	Decal – Warning (English)	57	33	3
55–4300	Decal – Warning (English)	59	37	2
56–0020	Plug	40	24	3
56–0020	Plug – Expansion	41	18	1
56–0020	Plug–Expansion	44	12	3
56–0100	Plug – Taper	44	37	1
56–0220	Pin – Dowel	44	35	2
56–0480	Key – Woodruff	40	8	1
56–0480	Key – Woodruff	37	18	2
56–1060	Snap Ring	40	15	1
56–1230	Shaft – Oil Filter	44	28	1
56–1570	Bolt Set	49	8	1
56–1580	Armature Set	49	23	1
56–1590	Bearing – Front	49	22	1
56–1600	Bearing – Rear	49	21	1
56–1610	Bolt	49	16	1
56–1640	Stopper Set	49	13	1
56–1670	Gear	49	10	1
56–1680	Cover Set	49	9	1
56–1700	Holder – Brush	49	18	1
56–1710	Spring – Brush	49	19	4
56–1720	Bracket – Rear	49	17	1
56–7974	Clamp – Tube	32	34	1
57–3210	Screw – Special	64	30	4
57–4910	Screw – Bedknife	64	25	7
57–6390	Nut – Lock	35	27	2
61–2790	Screen – Filler	14	3	1
62–3820	Fitting – Grease	34	24	1
62–5550	Decal – TORO	1	1	1
62–5550	Decal – TORO	77	5	1
62–6300	Sleeve Assembly	52	10	1
62–7400	Decal – TORO	1	11	1
62–7650	Gasket – Sending Unit	21	7	1
63–6720	Bracket – Fan Idler	35	41	1
63–6760	Throttle Cable Swivel Assy.	6	29	2
63–6890	Hinge – Hood R.H.	1	*	1
63–6900	Hinge – Hood L.H.	1	15	1
63–7140	Mount – Engine	35	34	4
63–7380	Expansion Tank Assembly	51	6	1
63–7400	Washer – Flat	35	33	4
63–7430	Gauge – Temperature	11	8	1
63–7440	Solenoid – Stop	34	10	1
63–7590	Relay – Starter	32	35	1
63–7610	Hose – Fuel	21	1	1
63–7610	Hose–Fuel	53	8	1
63–7620	Hose–Fuel	53	4	1
63–7640	Unit – Sending	21	8	1
63–7732	Cable – Brake R.H.	5	*	1
63–7733	Cable – Brake L.H.	5	29	1
63–7790	Screw – Cap Hex. Hd.	35	11	8
63–7880	Pin – Brake Latch	5	28	1
63–7900	Rack – Parking Brake	3	20	1
63–8140	Pulley – Idler	35	43	1
63–8280	Head–Filter, Fuel	53	2	1
63–8290	Vent–Air	53	3	1
63–8300	Element–Spin–On	53	7	1
63–8300	Fuel Filter Assembly	53	*	1
63–8300	Fuel Filter Assembly	51	13	1
63–8310	Valve–Drain	53	6	1
63–8360	Key – Ignition	11	9	1
63–8410	Washer – Flat	21	26	3
63–8410	Washer – Flat	14	37	3
63–8610	Bedknife	64	24	1
65–5100	Handle	1	5	2
65–8320	Bar – Height–Of–Cut	78	1	1
66–2320	Bracket – Engine L.H. Front	35	36	1
66–2330	Base – Battery	51	30	1
66–2490	Clamp – Battery	51	22	1
66–2920	Washer – Friction	6	31	2
66–2940	Gauge – Fuel	11	1	1
66–2960	Cluster – Warning	11	7	1
66–3180	Tube – Vent	32	22	1
66–3240	Cap – Radiator	32	8	1
66–5400	Seat Assembly	6	1	1
66–8121	Standpipe – Elbow 90°	21	20	1
66–8520	Bumper – Down–stop	8	17	2
66–8530	Adjuster	8	16	1
66–8560	Nut – Push	8	11	4
66–8610	Weldment – Lower	8	10	1
66–8800	Relay – Glow Plug	32	37	1
66–9290	Spacer	8	15	6
66–9770	Seal	4	28	1
66–9780	Bushing	4	29	1
66–9850	Bolt–Special	4	36	4
66–9860	Upper Cover & Jacket	4	37	1
66–9870	Plate–Retaining	4	38	1
66–9880	Washer–Retaining Plate	4	39	1
66–9890	Ring–Retaining	4	40	1
66–9900	Shaft–Input	4	41	1
66–9970	Spring Kit	4	*	1
66–9980	Seal–Kit	4	*	1
66–9990	Needle Roller Kit	4	*	1
67–1630	Spacer – Fan	35	8	1
67–1690	Fitting – Fuel Elbow 90°	21	30	2
67–1700	Decal – Starting Fluid	51	3	1
67–1750	Bushing – Axle	73	7	2
67–1750	Bushing – Sleeve	66	1	2
67–1750	Bushing – Sleeve	67	1	2
67–1750	Bushing – Sleeve	57	9	12
67–1750	Bushing – Sleeve	59	25	8
67–1751	Bushing – Sleeve	54	10	6
67–2200	Seal	40	4	4
67–2210	Plug – Taper	44	36	3
67–2230	Seal–Oil	44	14	1
67–2250	Bolt	40	5	8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
67-2260	Shaft-Idler	44	34	1
67-2270	Case - Oil Seal	44	15	1
67-2280	Gasket-Seal, Oil	44	13	1
67-2290	Cover	44	10	1
67-2300	Gasket	44	9	1
67-2310	Plate - Front	39	6	1
67-2320	Gasket - Plate	39	7	1
67-2330	Bolt	43	3	2
67-2330	Bolt	44	16	6
67-2330	Bolt	41	34	4
67-2330	Bolt	42	49	2
67-2340	Bolt W/Washer	39	3	3
67-2340	Bolt W/Washer	44	11	2
67-2340	Bolt W/Washer	41	17	4
67-2340	Screw - Hex. Washer Hd.	34	18	1
67-2350	Plug - Expansion	44	25	1
67-2360	Bushing - Knock	44	26	2
67-2370	Bushing - Knock	44	32	1
67-2380	Bushing - Knock	44	27	3
67-2390	Plug - Taper	44	24	1
67-2410	Bearing Set 0.25 mm US	40	*	1
67-2420	Bearing Set 0.50 mm US	40	*	1
67-2430	Bracket - Starter	44	23	1
67-2440	Bolt W/Washer	44	22	3
67-2480	Gasket - Oil Pan	39	17	1
67-2500	Plunger - Relief	39	25	1
67-2510	Spring - Relief	39	26	1
67-2520	Plug	39	28	1
67-2530	Gear - Inner	39	12	1
67-2540	Gear - Outer	39	11	1
67-2550	Housing - Oil Pump	39	10	1
67-2560	Bolt W/Washer	39	9	3
67-2570	Plug - Taper	41	19	1
67-2570	Plug - Taper	39	29	1
67-2580	Gasket - Case	39	2	1
67-2590	Seal - Oil	39	23	1
67-2600	Bolt	43	5	1
67-2600	Bolt	39	21	3
67-2610	Bolt	43	9	2
67-2610	Bolt	39	22	4
67-2620	Bolt	39	24	1
67-2630	Seal - O-Ring	39	20	2
67-2640	Cap	39	30	1
67-2650	Cap - Oil Filler	41	11	1
67-2650	Oil Fill Cap Assembly	39	32	1
67-2660	Seal - O-Ring	41	10	1
67-2660	Seal - O-Ring	39	31	1
67-2670	Hose - Breather	41	8	1
67-2680	Hanger -Engine	41	16	2
67-2700	Guide - Valve	41	42	6
67-2710	Cap - Sealing	41	41	3
67-2730	Bolt	41	43	8
67-2740	Bolt - Flange	41	15	3
67-2750	Cover Assembly	41	6	1
67-2760	Gasket	41	14	1
67-2770	Nut - Cap	41	12	2
67-2780	Washer	41	13	2
67-2850	Rod Assembly-Connecting	37	9	3
67-2860	Bolt	37	12	6
67-2890	Bearing Set 0.25 mm US	37	*	3
67-2900	Bearing Set 0.50 mm US	37	*	3
67-2910	Gear	37	7	1
67-2920	Crankshaft	37	16	1
67-2930	Pulley - Crankshaft	37	19	1
67-2940	Nut - Jam	37	22	1
67-2950	Washer	37	20	1
67-2960	Washer - Lock	37	21	1
67-2970	Flywheel Assembly	37	13	1
67-2980	Gear - Ring	37	15	1
67-2990	Bolt	37	14	4
67-3000	Washer	40	10	2
67-3010	Cam Shaft	40	7	1
67-3020	Gear	40	12	1
67-3030	Bearing	40	9	2
67-3040	Plate	40	14	1
67-3050	Bearing	40	22	1
67-3060	Shaft	40	21	1
67-3070	Gear	40	17	1
67-3080	Snap Ring	40	23	1
67-3090	Gear Assembly	40	13	1
67-3100	Retainer	37	32	6
67-3110	Spring	37	31	6
67-3120	Tappet	37	6	6
67-3130	Valve - Intake	37	28	3
67-3140	Valve - Exhaust	37	29	3
67-3150	Rod-Push	37	5	6
67-3160	Arm-Rocker	37	1	6
67-3170	Spring	38	40	2
67-3180	Cap	37	34	6
67-3190	Rocker Shaft Assembly	37	38	1
67-3200	Stay - Rocker	37	35	3
67-3210	Screw - Adjusting	37	4	6
67-3220	Pin	37	37	1
67-3230	Nut - Jam	37	2	6
67-3240	Snap Ring	37	3	2
67-3250	Bolt-Rocker Stay	38	43	2
67-3260	Washer	50	3	1
67-3260	Washer	48	8	2
67-3260	Washer	38	41	3
67-3280	Shim 0.2 mm	44	38	1
67-3290	Shim 0.3 mm	44	*	1
67-3300	Shim 0.5 mm	44	*	1
67-3310	Shim 0.4 mm	44	*	1
67-3320	Shim 0.6 mm	44	*	1
67-3330	Shim 0.7 mm	45	38	1
67-3340	Shim 0.8 mm	45	*	1
67-3350	Shim 0.9 mm	45	*	1
67-3360	Shim 1.0 mm	45	*	1
67-3370	Bolt W/Washer	45	39	4
67-3380	Nozzle & Holder Assembly	44	6	1
67-3380	Nozzle and Holder Assembly	47	*	3
67-3390	Gasket - Nozzle Holder	44	7	3
67-3400	Pipe Assy. No. 1	45	42	1
67-3410	Pipe Assy. No. 2	45	43	1
67-3420	Pipe Assy. No. 3	44	1	1
67-3430	Nut	44	2	3
67-3440	Gasket	44	4	3
67-3460	Housing-Pump	46	9	1
67-3480	Seal - O-Ring	46	4	3
67-3490	Spring	46	5	3
67-3500	Valve	46	7	3
67-3520	Sleeve	46	10	3
67-3530	Seat - Spring Upper	46	11	3
67-3540	Spring	46	12	3
67-3550	Seat - Spring Lower	46	13	3
67-3560	Plate - Shim 1.85 mm	46	14	1
67-3570	Plate - Shim 1.9 mm	46	*	1
67-3580	Plate - Shim 1.95 mm	46	*	1
67-3590	Plate - Shim 2.0 mm	46	*	1
67-3600	Plate - Shim 2.05 mm	46	*	1
67-3610	Plate - Shim 2.1 mm	46	*	1
67-3620	Plate - Shim 2.15 mm	46	*	1
67-3630	Plate -Shim 2.2 mm	46	*	1
67-3640	Plate - Shim 2.25 mm	46	*	1
67-3650	Plate - Shim 2.3 mm	46	14	1
67-3660	Plate - Shim 2.35 mm	46	*	1
67-3670	Plate - Shim 2.4 mm	46	*	1
67-3680	Plate - Shim 2.45 mm	46	*	1
67-3690	Plate - Shim 2.5 mm	46	*	1
67-3700	Tappet	46	15	3
67-3710	Screw - Air Bleed	46	24	1
67-3720	Washer	46	23	1
67-3730	Screw	46	22	1
67-3740	Holder-Delivery Valve	46	3	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
67–3740	Nipple – Swivel	46	21	1
67–3750	Washer	46	20	2
67–3760	Plate – Lock	46	2	3
67–3770	Screw W/Washer	46	1	3
67–3780	Rack	46	19	1
67–3790	Screw	46	17	2
67–3800	Bracket – Wire Stop	46	18	1
67–3810	Pin – Tappet Guide	46	16	3
67–3830	Washer 1.25 mm	46	31	1
67–3840	Washer 1.3 mm	47	31	1
67–3850	Washer 1.35 mm	47	*	1
67–3860	Washer 1.4 mm	47	*	1
67–3870	Washer 1.45 mm	47	*	1
67–3880	Washer 1.5 mm	47	*	1
67–3890	Washer 1.55 mm	47	*	1
67–3900	Washer 1.6 mm	47	*	1
67–3910	Washer 1.65 mm	47	31	1
67–3920	Washer 1.7 mm	47	*	1
67–3930	Spring	46	30	3
67–3940	Pin – Pressure	46	29	3
67–3950	Piece – Distance	46	28	3
67–3960	Nozzle	46	27	3
67–3970	Nut – Retaining	46	25	3
67–3980	Gasket	46	26	3
67–3990	Lever – Speed Control	48	1	1
67–4000	Pin	48	2	2
67–4010	Stopper	48	15	1
67–4030	Rod – Tie	48	23	1
67–4040	Weight Assembly	48	13	1
67–4050	Shaft – Governor	48	19	1
67–4060	Lever – Governor	48	18	1
67–4070	Shaft – Sliding	48	16	1
67–4080	Clip	48	24	1
67–4090	Lever – Tension	48	21	1
67–4110	Cover Assembly	48	*	1
67–4120	Pin – Grooved	48	35	1
67–4130	Cover – Governor	48	4	1
67–4140	Lever – Stop	48	11	1
67–4150	Lever – Stop	48	40	1
67–4160	Gasket	48	5	1
67–4170	Spring Set	48	*	
67–4180	Nut	48	31	1
67–4190	Spring – Torque	48	28	1
67–4200	Nut – Special	48	30	1
67–4210	Case – Torque Spring	48	26	1
67–4220	Screw – Adjusting	48	29	1
67–4230	Stopper	48	27	1
67–4270	Bolt	48	3	4
67–4280	Bolt W/Washer	48	17	1
67–4290	Nut	48	34	4
67–4310	Gasket	37	23	1
67–4330	Oil Filter Assembly	45	40	1
67–4340	Screen Assembly	44	31	1
67–4350	Switch – Oil Pressure	43	8	1
67–4360	Pulley – Water Pump	43	1	1
67–4380	Water Pump Assembly	43	6	1
67–4390	Gasket – Water Pump	43	7	1
67–4400	Bolt	41	1	2
67–4400	Bolt	43	4	1
67–4410	V–Belt	43	2	1
67–4420	Fitting – Water	42	46	1
67–4430	Gasket – Fitting	42	45	1
67–4440	Thermostat	41	38	1
67–4450	Fitting – Thermostat	41	32	1
67–4460	Gasket – Switch	41	31	1
67–4470	Bolt	41	33	1
67–4480	Pipe – By–Pass	41	37	1
67–4490	Gasket	41	30	1
67–4500	Switch – Thermo	41	29	1
67–4510	Gauge Nut – Temperature	41	35	1
67–4520	Pipe	41	2	1
67–4530	Cover – Intake	41	5	1
67–4540	Seal – O–Ring	41	3	1
67–4550	Gasket–Intake Manifold	41	44	1
67–4560	Manifold – Exhaust	41	24	1
67–4570	Gasket – Exhaust Manifold	41	26	1
67–4580	Bolt	41	22	2
67–4590	Bolt	41	23	4
67–4610	Bolt W/Washer	49	2	2
67–4620	Spacer	50	21	1
67–4630	Alternator Assembly	50	1	1
67–4640	Bolt	50	22	1
67–4660	Bolt – Flange	50	26	1
67–4670	Nut	50	2	1
67–4680	Plug – Glow	41	39	3
67–4690	Plate – Glow Plug	41	40	1
67–4700	Lamp – Glow	41	27	1
67–4700	Resister – Glow	32	44	1
67–4720	Lever	49	4	1
67–4730	Spring Set	49	5	1
67–4750	Switch	49	7	1
67–4760	Shaft Assembly	49	15	1
67–4770	Pinion Set	49	14	1
67–4780	Gear Set	49	12	1
67–4790	Shaft	49	11	1
67–4800	Yoke	49	20	1
67–4810	Pulley Set	50	16	1
67–4820	Bolt Set	50	20	1
67–4830	Front Bracket Assembly	50	15	1
67–4840	Screw Set	50	18	1
67–4850	Bearing – Front	50	19	1
67–4860	Rotor Assembly	50	7	
67–4870	Bearing – Rear	50	6	1
67–4880	Stator	50	10	1
67–4890	Rear Cover Assembly	50	9	1
67–4900	Terminal Set	50	11	1
67–4910	Regulator Assembly	50	12	1
67–4920	Brush	50	13	2
67–4930	Rectifier	50	8	1
67–5040	Spring	48	20	1
67–7160	Block – Fuse	11	21	1
67–7250	Spacer – Cylinder	54	13	1
67–7960	Decal – Warning	73	3	1
67–7960	Decal – Warning (English)	66	20	1
67–7960	Decal – Warning (English)	67	20	1
67–9410	Washer – Thrust	54	29	2
67–9550	Kit – Seat Cushion	6	45	1
67–9560	Shell – Seat	6	2	1
68–5140	Cap – Steering Wheel	3	7	1
68–5370	Decal – TORO	3	5	1
68–6150	Breather – Hydraulic Tank	14	2	1
69–0760	Bracket – Armrest L.H.	75	*	1
69–0770	Bracket – Armrest R.H.	75	4	1
69–1180	Armrest	75	1	2
69–1260	Spacer	75	6	4
69–4320	Fitting – Hydraulic 90°	16	25	1
69–4780	Clamp – Light Cluster	12	42	1
70–2780	Piston	61	4	1
70–2780	Piston	63	4	1
70–8220	Cable – Ground	35	31	1
70–8530	Wire – Fuel Pump	21	28	1
70–8560	Retainer – Glow Resister	32	45	1
70–8570	Breaker – Circuit	12	*	2
70–8620	Cap – Fuel Tank (Green)	21	23	1
70–8621	Cap – Fuel Tank (Black)	21	*	1
70–8640	Cap – Hydraulic Reservoir	14	8	1
70–8700	Pipe – Fuel Return	44	3	1
70–8720	Spring – Tie Rod	48	22	1
70–8760	Starter Assembly	49	1	1
70–8770	Bracket – Front	49	3	1
70–8780	Bracket – Center	49	6	1
70–8870	Guide – Oil Level	44	8	1
70–8880	Dipstick	44	5	1
71–1520	Cap – Expansion Tank	51	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
71-2910	Bracket - Engine R.H. Rear	35	10	1
71-4330	Seal	25	41	1
71-4350	Nut	24	20	1
72-3570	Shim .094 - Diff. Adjust.	24	22	A/R
72-3571	Shim .096 - Diff. Adjust.	24	*	A/R
72-3572	Shim .098 - Diff. Adjust.	24	*	A/R
72-3573	Shim .100 - Diff. Adjust.	24	22	A/R
72-3574	Shim .102 - Diff. Adjust.	24	*	A/R
72-3575	Shim .104 - Diff. Adjust.	24	*	A/R
72-3576	Shim .106 - Diff. Adjust.	24	*	A/R
72-3577	Shim .108 - Diff. Adjust.	24	*	A/R
72-3578	Shim .110 - Diff. Adjust.	24	*	A/R
72-3580	Shim .112 - Diff. Adjust.	24	*	A/R
72-3581	Shim .114 - Diff. Adjust.	24	*	A/R
72-3582	Shim .116 - Diff. Adjust.	24	*	A/R
72-3583	Shim .118 - Diff. Adjust.	24	*	A/R
72-3584	Shim .120 - Diff. Adjust.	24	*	A/R
72-3585	Shim .125 - Diff. Adjust.	24	*	A/R
72-3586	Shim .127 - Diff. Adjust.	24	*	A/R
72-3587	Shim .129 - Diff. Adjust.	24	*	A/R
72-3588	Shim .131 - Diff. Adjust.	24	*	A/R
72-3590	Shim .133 - Diff. Adjust.	24	*	A/R
72-3591	Shim .135 - Diff. Adjust.	24	*	A/R
72-3592	Shim .137 - Diff. Adjust.	24	*	A/R
72-3593	Shim .139 - Diff. Adjust.	24	*	A/R
72-3594	Shim .141 - Diff. Adjust.	24	*	A/R
72-3595	Shim .143 - Diff. Adjust.	24	*	A/R
72-3596	Shim .145 - Diff. Adjust.	24	*	A/R
72-3597	Shim .147 - Diff. Adjust.	24	*	A/R
72-3598	Shim .149 - Diff. Adjust.	25	22	A/R
72-3600	Shim .151 - Diff. Adjust.	25	*	A/R
72-3620	Gear & Pinion Assembly	25	*	1
72-4380	Seal Kit	65	*	1
72-6140	Cover - Rear	50	27	1
74-0720	Tube - Manual	6	10	1
74-5520	Clutch - Fan	36	53	1
74-5950	Swell Latch Assembly	1	21	3
74-9100	Pad - Forward	5	12	1
74-9110	Pad - Reverse	5	14	1
75-0010	Transmission Assembly	22	9	1
75-0020	Housing	27	5	1
75-0030	Gasket - Housing	27	46	1
75-0040	Center Section	27	18	1
75-0060	Plug	27	20	4
75-0070	Plug	27	41	1
75-0090	Screw - Cap Hex Hd.	27	9	8
75-0110	Screw - Cap Hex Hd.	27	35	2
75-0120	Screw - Cap Hex Hd.	27	28	1
75-0130	Screw - Cap Hex Hd.	27	24	3
75-0140	Spring - Conical	27	26	1
75-0150	Guide - Seal	27	2	1
75-0160	Plug - Pipe	28	47	1
75-0170	Plug - Straight Thread	27	19	4
75-0180	Screw - Cap Hex Hd.	27	36	2
75-0190	Plug - Special	27	27	2
75-0200	Plug - Straight Thread	27	38	2
75-0210	O-Ring	27	6	2
75-0220	Pin	28	48	2
75-0230	Seal - Lip	27	8	1
75-0240	O-Ring	27	21	6
75-0250	Spring	27	22	1
75-0260	Valve - Relief	27	23	4
75-0270	Spring	27	39	1
75-0280	Spring	27	42	1
75-0290	Spring	27	43	1
75-0300	Valve - SCR	27	25	1
75-0310	Shim	27	40	1
75-0320	Nipple	27	37	1
75-0330	Seal - Lip	27	34	1
75-0340	Bearing - Needle	27	33	1
75-0350	Pin	27	31	1
75-0360	Gerotor	27	30	1
75-0370	O-Ring	27	29	1
75-0380	Plate - Valve	27	15	1
75-0390	Plate - Swash	27	12	1
75-0400	Plate - Thrust	27	13	2
75-0410	O-Ring	27	3	1
75-0430	Ring - Retaining	27	1	1
75-0440	Shaft - Motor	27	45	1
75-0450	Collar	28	50	1
75-0460	Bearing - Ball	28	51	2
75-0470	Cylinder Block Kit	27	14	2
75-0480	Pin	27	10	2
75-0490	Plate - Valve	27	44	1
75-0500	Bearing - Needle	27	16	2
75-0510	Pin	27	17	2
75-0520	Bearing - Ball	27	4	1
75-0540	Tether - Cap	14	7	1
75-0550	Strainer - Suction	14	29	1
75-0560	Steering Wheel Assembly	3	4	1
75-0570	Cable - Hood	1	14	1
75-0580	Panel - Tower	3	10	1
75-0591	Panel - Control	11	14	1
75-0600	Steering Valve Assembly	3	26	1
75-0600	Valve-Power Steering	4	*	1
75-0610	Tread - Foot R.H.	2	*	1
75-0620	Tread - Foot L.H.	2	37	1
75-0630	Tread - Foot Center	2	40	1
75-0640	Tread - Footrest R.H.	2	*	1
75-0650	Tread - Footrest L.H.	2	36	1
75-0670	Decal - Hood Trim L.H.	1	12	1
75-0680	Decal - Hood Trim R.H.	1	*	1
75-0720	Housing-Lower	25	34	1
75-0750	Decal - Backlap Switch	32	41	1
75-0800	Gear Pump Assembly	30	18	1
75-0810	Decal - Caution (English)	23	48	2
75-0900	Engine Assembly	35	22	1
75-0920	Cartridge - Relief 3000 psi	17	13	1
75-0930	Hook - Oil Cooler	33	50	4
75-0940	Guard - Flywheel	34	22	1
75-1010	Toggle Switch Assembly	11	16	2
75-1020	Switch - Backlap	32	38	1
75-1040	Cooler - Oil	32	2	1
75-1070	Muffler	34	11	1
75-1080	Fuel Tank Assembly	21	24	1
75-1100	Support - Rear Axle	54	4	1
75-1170	Reservoir - Hydraulic	14	1	1
75-1180	Manifold	19	7	2
75-1180	Manifold - Hydraulic	18	21	1
75-1190	Manifold - Hydraulic	18	18	1
75-1200	Hydraulic Cylinder Assembly	55	47	1
75-1210	Nut-Lock	56	2	1
75-1220	Piston	56	3	1
75-1230	Piston Rod Assembly	56	5	1
75-1250	Seal Kit	56	6	1
75-1260	Head-Internal	56	4	1
75-1270	Repair Kit	65	*	1
75-1280	Decal - Warning (English)	1	22	1
75-1290	Bearing	73	5	4
75-1290	Bearing Assembly	66	14	2
75-1290	Bearing Assembly	67	14	2
75-1300	Hydraulic Filter Head Assy.	14	31	1
75-1310	Element - Hydraulic Filter	14	34	1
75-1330	Filter - Oil	22	27	1
75-1350	Cable - Throttle	6	20	1
75-1360	Cable - Battery (Ground)	35	20	1
75-1370	Battery Cable Assy. (+)	51	17	1
75-1380	Belt - V	35	44	1
75-1390	Panel - Access	2	39	1
75-1400	Motor - Hydraulic	20	21	5
75-1400	Reel Motor Assembly	64	29	1
75-1410	Panel - Floor	2	41	1
75-1420	Cover - Steering Tower	1	2	1
75-1430	Brake Pedal Assembly R.H.	5	35	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
75–1440	Pedal – Brake L.H.	5	33	1
75–1470	Shaft – Brake Pedal	5	36	1
75–1490	Rod – Parking Brake	3	13	1
75–1520	Assembly – Roller, Wiehle	74	43	1
75–1520	Wiehle Roller Assembly	66	15	1
75–1520	Wiehle Roller Assembly	67	15	1
75–1560	Deflector – Rear	64	9	1
75–1600	Carrier Frame Assembly	66	3	1
75–1600	Carrier Frame Assembly	67	3	1
75–1610	Bracket – HOC Rear R.H.	66	*	1
75–1610	Bracket – HOC Rear R.H.	67	*	1
75–1620	Bracket – HOC Rear L.H.	66	7	1
75–1620	Bracket – HOC Rear L.H.	67	7	1
75–1710	Support	73	1	1
75–1710	Support – Cutting Unit	66	19	1
75–1710	Support – Cutting Unit	67	19	1
75–1720	Flap – Rear Shield	64	11	2
75–1740	Spring – Scraper	71	2	2
75–1750	Scraper – Roller	71	1	1
75–1840	Assembly – Shield, Grass	74	50	1
75–1840	Shield – Grass	64	5	1
75–1960	Bracket – HOC Front R.H.	66	*	1
75–1960	Bracket – HOC Front R.H.	67	*	1
75–1980	Bracket – HOC Front L.H.	66	13	1
75–1980	Bracket – HOC Front L.H.	67	13	1
75–2010	Cartridge – Relief 2000 psi	17	14	1
75–2080	Kit – Seal	17	*	10
75–2090	Kit – Seal	17	*	3
75–2120	Clevis	63	12	1
75–2160	Bearing – Flange	66	18	2
75–2160	Bearing – Flange	67	18	2
75–2160	Bushing – Flange	73	2	2
75–2170	Tube – Pump Control	5	37	1
75–2240	Hose – Radiator Upper	32	18	1
75–2260	Hose – Radiator Lower	32	21	1
75–2430	Coupling – Transmission	30	7	1
75–2460	Hose – Air Cleaner	51	1	1
75–2460	Hose – Air Cleaner	35	15	1
75–2810	Clamp – Steering Valve	3	3	1
75–2820	Grill – Hood	1	7	1
75–2830	Bracket – Engine L.H. Rear	35	28	1
75–2850	Hose – Expansion Tank	51	9	1
75–2850	Hose – Expansion Tank	32	10	1
75–2860	Bracket – Hose	32	31	1
75–2860	Bracket – Hose	1	35	1
75–2900	Rear Axle Assembly	55	45	1
75–2970	Pedal – Traction	5	13	1
75–3010	Joint – Arm	59	31	2
75–3010	Joint – Arm	58	54	3
75–3040	Carrier Frame Assembly	58	44	1
75–3100	Transmission Support Assy.	22	7	1
75–3110	Collar – Transmission	22	8	1
75–3130	Rod – Tie	54	37	2
75–3140	Bracket – Air Cleaner	51	25	1
75–3270	Lever – Traction Pivot	5	8	1
75–3300	Frame – Seat	6	27	1
75–3390	Bracket – Backlap	32	39	1
75–3400	Shaft – Seat Pivot	6	14	1
75–3420	Lift Control Assembly	12	37	1
75–3430	Rod – Throttle	6	34	1
75–3480	Weldment – Upper	8	23	1
75–3510	Bolt – Shoulder	8	26	2
75–3530	Spring – Compression	8	3	1
75–3540	Pin – Roll	8	6	1
75–3550	Bumper – Seat	8	7	2
75–3580	Plate – Mounting, Seat	8	2	1
75–3680	Rod – Seat	6	18	1
75–3710	Dipstick	14	4	1
75–3750	Pin – Pivot	59	38	2
75–3780	Fan	36	52	1
75–3790	Clevis	61	12	1
75–3810	Bracket – Roller	59	11	2
75–3840	Fender – R.H.	1	3	1
75–3860	Fender – L.H.	1	29	1
75–3880	Plate – Seat	6	15	1
75–3920	Guide – Basket	68	12	1
75–3930	Pin – Basket	68	4	2
75–3940	Collar – Basket	68	10	1
75–3950	Bracket – Basket	68	11	1
75–3960	Spring – Torsion L.H.	68	*	1
75–3970	Spring – Torsion R.H.	68	9	1
75–4010	Basket – Grass	68	1	1
75–4020	Support – Basket Inner R.H.	68	*	1
75–4030	Support – Basket Inner L.H.	68	3	1
75–4040	Support – Basket Outer L.H.	68	15	1
75–4050	Support – Basket Outer R.H.	68	*	1
75–4060	Screen – Radiator	32	1	1
75–4080	Plate – Traction	29	15	1
75–4090	Switch Arm Assembly	29	21	1
75–4100	Control – Pump	29	25	1
75–4130	Plate – Switch	29	7	1
75–4180	Pin – Rear Axle Pivot	55	44	1
75–4220	Bracket – Fan	35	40	1
75–4250	Bracket – Expansion Tank	51	23	1
75–4260	Support – Radiator	32	5	1
75–4310	Shield – Radiator	32	30	1
75–4350	Shroud – Fan	32	12	1
75–4360	Bracket – Switch	6	8	1
75–4370	Bracket – Switch (Seat)	6	3	1
75–4400	Adaptor – Transmission	30	8	1
75–4410	Pivot Plate Assembly	54	42	1
75–4420	Spindle – Rear R.H.	54	*	1
75–4440	Spindle – Rear L.H.	54	15	1
75–4450	Hub – Fan Drive	35	6	1
75–4490	Bracket – Muffler	34	16	1
75–4520	Spring – Torsion R.H.	59	29	1
75–4530	Spring – Torsion L.H.	59	*	1
75–4550	Shaft – Center Arm Pivot	57	27	1
75–4590	Rod – Pivot	59	28	2
75–4630	Coupling – Driveshaft	34	7	1
75–4650	Bracket – Spring Rear L.H.	59	*	1
75–4690	Bracket – Spring Rear R.H.	59	6	1
75–4700	Hose – Fuel	21	13	1
75–4701	Hose – Fuel	21	15	1
75–4701	Hose – Fuel Vent	32	24	1
75–4710	Warning Light Harness	11	28	1
75–4720	Fitting – Hydraulic 90°	22	23	1
75–4900	Bearing Set STD	40	3	1
75–4910	Oil Pan Assembly	39	14	1
75–4920	Case	39	1	1
75–4930	Cylinder Head Assembly	41	28	1
75–4940	Brace – Alternator	50	23	1
75–4950	Gasket – Cylinder Head	41	25	1
75–4960	Block Assembly	40	1	1
75–4970	Element	46	8	3
75–4980	Lever – Governor Spring	48	7	1
75–4990	Spring – Governor	48	25	1
75–5000	Body	47	32	3
75–5010	Bearing Set STD	37	8	3
75–5020	Injector Pump Assembly	45	41	
75–5040	Gasket Kit	39	*	1
75–5050	Ring Set STD	37	11	3
75–5060	Ring Set 0.25 mm OS	37	*	3
75–5070	Ring Set 0.50 mm OS	37	*	3
75–5080	Piston & Pin Set STD	37	10	3
75–5090	Piston & Pin Set	37	*	3
75–5100	Piston & Pin Set	37	*	3
75–5110	Cover Assy.	37	24	1
75–5120	Gasket	38	45	1
75–5170	Support Plate Assy. L.H.	33	*	1
75–5180	Support Plate Assy. R.H.	33	56	1
75–5190	Decal – No Riders (English)	1	25	2
75–5200	Bracket – Spring R.H.	57	*	1
75–5210	Bracket – Spring Center	57	16	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
75–5220	Bracket – Spring L.H.	57	*	1
75–5240	Tube – Hydraulic	30	12	1
75–5240	Tube – Hydraulic	16	39	1
75–5250	Tube – Hydraulic	30	13	1
75–5250	Tube – Hydraulic	16	38	1
75–5260	Knob – Locking	6	38	2
75–5270	Spacer – Locking Knob	6	37	2
75–5300	Rod – Hose Support	18	24	2
75–5300	Rod – Hose Support	58	63	1
75–5310	Spacer – Bearing	35	5	1
75–5330	Clamp – Hose	57	8	3
75–5330	Clamp – Hydraulic Line	60	42	2
75–5350	Pin – Cylinder Rod End	59	22	2
75–5350	Pin – Cylinder Rod End	57	31	3
75–5360	Pin – Cylinder Cap End	60	39	2
75–5370	Mount – Clamp	57	36	1
75–5380	Bracket – Clamp	57	38	1
75–5390	Roller	59	14	2
75–5400	Shaft – Roller	59	13	2
75–5410	Bracket – Arm	58	53	2
75–5420	Lift Arm Assembly Center	57	40	1
75–5430	Lift Arm Assy. Rear L.H.	59	*	1
75–5440	Lift Arm Assy. Rear R.H.	59	23	1
75–5450	Lift Arm Assembly R.H.	57	1	1
75–5460	Lift Arm Assembly L.H.	57	32	1
75–5470	Spacer	29	12	2
75–5480	Manifold – Tank	14	14	1
75–5720	Hose – Hydraulic	14	19	1
75–5740	Box – Control	11	24	1
75–5810	Box – Tool	1	26	1
75–5890	Hose – Hydraulic	18	7	1
75–5890	Hose – Hydraulic	57	28	2
75–5890	Hose – Hydraulic	16	35	1
75–5900	Hose – Hydraulic	16	30	1
75–5900	Hose – Hydraulic	58	47	1
75–5910	Hose – Hydraulic	18	8	1
75–5910	Hose – Hydraulic	58	60	1
75–5940	Hose – Hydraulic	18	6	1
75–5940	Hose – Hydraulic AUX	3	23	1
75–5950	Hose – Hydraulic	16	16	1
75–5950	Hose – Hydraulic	18	20	1
75–5960	Hose – Hydraulic	20	16	1
75–5960	Hose – Hydraulic	18	22	1
75–5980	Hose – Hydraulic	18	1	1
75–5980	Hose – Hydraulic	20	5	1
75–5990	Hose – Hydraulic	20	17	1
75–5990	Hose – Hydraulic	16	37	1
75–6000	Hose – Hydraulic	16	4	1
75–6000	Hose – Hydraulic	20	6	1
75–6020	Hose – Hydraulic	18	11	1
75–6020	Hose – Hydraulic	19	15	1
75–6040	Hose – Hydraulic	20	10	1
75–6040	Hose – Hydraulic	16	27	1
75–6060	Hose – Hydraulic	19	12	1
75–6060	Hose – Hydraulic	16	33	1
75–6070	Hose – Hydraulic	19	14	1
75–6070	Hose – Hydraulic L.H. (Cap)	59	*	1
75–6080	Hose – Hydraulic	19	13	1
75–6080	Hose – Hydraulic L.H. (Rod)	59	*	1
75–6130	Hose – Hydraulic	14	9	1
75–6140	Hose – Hydraulic	14	30	1
75–6140	Hose – Hydraulic R.H.	32	46	1
75–6150	Hose – Hydraulic	22	15	1
75–6150	Hose – Hydraulic	32	20	1
75–6160	Hose – Hydraulic	16	21	1
75–6160	Hose – Hydraulic L.H.	32	*	1
75–6170	Hose – Hydraulic	22	11	1
75–6170	Hose – Hydraulic	32	17	1
75–6180	Hose – Hydraulic	19	1	2
75–6180	Hose – Hydraulic R.H.	59	16	2
75–6190	Hose – Hydraulic	20	8	1
75–6200	Hose – Hydraulic	18	12	1
75–6200	Hose – Hydraulic	14	21	1
75–6220	Hose – Hydraulic	54	34	1
75–6220	Hose – Hydraulic LT	3	24	1
75–6230	Hose – Hydraulic	55	50	1
75–6230	Hose – Hydraulic RT	3	18	1
75–6240	Hose – Hydraulic	30	14	1
75–6240	Hose – Hydraulic IN	3	19	1
75–6250	Hose – Hydraulic	14	17	1
75–6250	Hose – Hydraulic OUT	3	25	1
75–6260	Cover – Tool Box	1	23	1
75–6270	Cover – Control Box	11	15	1
75–6280	Bracket – Hose	2	46	1
75–6290	Radiator	32	7	1
75–6300	Sensor – Reed Switch	57	12	1
75–6310	Magnet – Reed Switch	58	51	1
75–6320	Sensor – Switch	6	6	1
75–6330	Magnet – Switch	6	5	1
75–6340	Strainer – In–Line	22	35	1
75–6350	Hose	22	25	1
75–6370	Cover – Sensor	58	49	1
75–6380	Shaft – Fan	35	1	1
75–6390	Pulley – Fan	35	3	1
75–6410	Yoke – Shaft	34	2	1
75–6420	Yoke – Slip Tube	34	3	1
75–6490	Lever – Pedal Stop	5	20	1
75–6510	Lever – Bracket	5	16	1
75–6550	Disc – Friction	5	17	1
75–6580	Cable – Pedal	5	7	1
75–6640	Fitting – Hydraulic 90°	16	20	2
75–6660	Cutting Unit Frame Assy.	66	10	1
75–6660	Cutting Unit Frame Assy.	67	10	1
75–6660	Frame – Cutting Unit	64	27	1
75–6710	Decal – Fast/Slow	5	18	1
75–6820	Meter – Hour	12	47	1
75–6840	Knob – Knurled	2	38	4
75–6850	Tube – Oil Fill	22	40	1
75–6870	Hose – Hydraulic Suction	14	28	1
75–6870	Hose – Suction	30	1	1
75–6880	Screen – Spark Arrester	34	*	1
75–6930	Valve – SCR	28	52	1
75–7540	Decal – Warning (English)	2	49	1
76–1910	Shaft – Pivot	8	12	2
76–1920	Bushing – Sleeve	8	9	4
76–1930	Knob – Tension Adjustment	8	19	1
76–1940	Spring – Extension	8	14	2
76–2460	Assembly – Bearing	73	35	2
76–2940	Bumper – Rubber	8	8	2
76–2970	Bushing – Sleeve	54	43	2
76–2980	Washer – Thrust	54	41	1
76–8640	Stud – Traction	29	23	1
76–8730	Decal – Bolt Torque	22	22	2
76–8750	Plate – Caution	32	14	1
76–9430	Spring – Extension	29	8	1
77–0340	Screw – Spline	64	28	1
77–0340	Screw – Spline	74	53	1
77–0490	Decal – Bolt (English)	22	20	1
77–2870	Weldment – Hanger	8	18	1
80–4860	Pin – Clevis	8	1	1
82–6490	Hose – Hydraulic	58	65	1
82–6510	Support H.O.C. – Right	74	45	1
82–6530	Support H.O.C. – Left	73	41	1
82–6540	Frame W.A. – Carrier	73	8	1
82–6570	Shaft – Reel	74	46	1
82–6600	Spacer	74	42	23
82–6630	Bracket – H.O.C. R.H.	73	4	1
82–6650	Bracket – H.O.C. L.H.	73	20	1
82–6680	Assembly – Roller, Rear	73	15	1
82–6710	Assembly – Frame	74	51	1
82–6740	Assy. – Scraper, Rear	73	9	1
82–6770	Spring – Scraper	73	18	2
82–6780	Deflector – Rear	73	24	1
82–6810	Plate – Bearing	73	26	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
82–6820	Spacer – Bearing	73	25	2
82–6830	Bracket – Scraper	70	*8	5
82–6830	Bracket – Scraper	69	8	1
82–6830	Bracket – Scraper	74	44	1
82–6840	Spacer	72	9	10
82–6870	Scraper – RH	74	56	1
82–6880	Scraper – L.H.	73	30	1
82–6890	Washer – Special	72	3	20
82–8110	Retainer – Oil Guide	45	44	1
82–8270	Valve – Flow Control	19	9	1
82–8270	Valve – Flow Control	16	31	1
82–9060	Adjuster W/Handle	8	13	1
83–4700	Plate – Spring R.H.	72	*	5
83–4710	Plate – Spring L.H.	72	8	5
83–4720	Spring – Torsion R.H.	72	*	5
83–4730	Spring – Torsion L.H.	72	7	5
83–4780	Housing – Charge Pump	27	32	1
83–4870	Bracket – High Scraper R.H.	70	*7	5
83–4880	Bracket – High Scraper L.H.	70	*6	5
83–4910	Coupler – Pinion	25	40	1
83–5130	Spacer – Pinion	24	21	1
83–5210	H.O.C. – Right Rear	70	1	5
83–5230	H.O.C. – Left Rear	70	3	5
83–5240	Support – Front R.H.	70	5	5
83–5250	Support – Front L.H.	70	4	5
83–6780	Pin – Cylinder (Long)	58	61	2
83–6790	Pin – Cylinder (Short)	58	43	1
83–6930	Bracket – Scraper R.H.	69	2	1
83–6940	Bracket – Scraper L.H.	69	4	1
83–6950	Bracket – Scraper R.H.	69	1	1
83–6980	Bracket – Scraper L.H.	69	5	1
83–7370	Roof	76	1	1
83–7380	Insulation – Roof	76	14	1
83–7390	Seal	76	2	2
83–7400	Ear – Lift	76	3	2
83–7410	Roll – Bar	76	13	1
83–7420	Washer – Rubber	76	15	6
83–7430	Decal – Danger (English)	76	12	1
83–7440	Decal – Knob (English)	7	52	1
83–7450	Decal – Down (English)	33	60	1
83–7480	Hydraulic Cylinder Assembly	57	7	1
83–7490	Hydraulic Cylinder Assy.	58	67	1
84–1670	Head	61	9	1
84–1670	Head	63	9	1
84–1680	Ring–Retaining	61	11	1
84–1680	Ring–Retaining	63	11	1
84–1710	Piston	62	4	1
84–1720	Head	62	9	1
84–1730	Ring–Retaining	62	11	1
84–1740	Clevis	62	12	1
84–1760	Seal repair Kit	62	*	1
84–4610	Decal – Instruction	6	40	1
84–8320	Insert – Hinge	57	10	4
85–460	Decal – HOC Selector	12	50	1
85–4330	Cover – Gear	22	4	1
85–4340	Plate – Sensor Mounting	23	52	1
85–4350	Sensor – Gear Tooth	22	44	1
85–4360	Main Wire Harness Assy.	12	*	1
85–4380	Magnet	64	35	2
85–4390	Sensor Assembly	64	36	2
85–4400	Controller – Electronic	11	31	1
85–4410	Decal – Reelmasterr 5100D	1	8	2
85–4420	Gauge – Speedometer	11	2	1
85–4450	Bracket – Fuse Block	11	23	1
85–4470	Potentiometer Assembly	12	44	1
85–4480	Knob	11	25	1
85–4491	Lamp – Diagnostic	12	*	1
85–4530	Decal – Danger (English)	7	49	1
85–4550	Control Manifold Assembly	16	6	1
85–4600	Frame Assembly	1	32	1
85–4620	End Cap Assembly	64	18	1
85–4650	Connector – Loop Back	12	*	1
85–4690	Software – ECU RM5100D	12	*	1
85–4720	Decal – Instruction	11	27	1
85–4730	Decal – Hydraulic Oil	1	4	1
85–4730	Decal – Oil	18	26	1
85–4740	Decal – Instructions	2	48	1
85–4750	Display – Diagnostic–ACE	9	2	1
85–4760	Decal – Diagnostic–ACE	9	1	1
85–7180	Shaft – Roller	67	24	1
85–7190	Washer – Shield	67	22	2
85–7220	Rear Roller Assembly	66	16	1
85–7220	Rear Roller Assembly	67	16	1
85–9880	Hydraulic Cylinder Assembly	58	46	1
85–9880	Hydraulic Cylinder Assy.	60	40	2
85–9900	Plate – Spring Anchor	29	16	1
85–9910	Eyebolt	29	27	1
85–9970	Bearing Assembly	67	17	2
85–9980	Decal – ROPS	76	19	1
86–7190	Upper Housing	25	26	1
86–7200	Front Axle Assembly	22	43	1
86–7220	Gear – Pinion	22	32	1
86–7230	Gear–Spur	24	14	1
86–7330	Seal Repair Kit	63	*	1
86–7330	Seal repair Kit	61	*	1
86–7520	Trunion Cover Assy. R.H.	27	7	1
86–7530	Trunion Cover Assy. L.H.	28	49	1
86–7540	Shaft – Pump	27	11	1
86–7550	Connector – Cover (2 Way)	12	*	2
86–7560	Connector – Cover (3 Way)	12	*	3
86–9190	Hose – Hydraulic	16	14	2
86–9200	Sleeve – Pump	30	6	1
88–0430	Decal – A.C.E.	2	51	2
88–0440	Decal – Floor Plate	18	27	1
88–6700	Decal – ANSI (English)	2	50	1
88–6960	Cartridge – 4W/2P	17	19	3
88–6970	Cartridge – N.O.	17	9	2
88–6980	Cartridge – N.C.	17	22	1
88–6990	Cartridge – N.C.	17	7	3
88–7020	Cartridge – N.O.	17	3	2
88–9190	Solenoid – 20 Watt	17	4	6
88–9200	Solenoid – 28 Watt	17	8	5
88–9460	Hose – Hydraulic	20	11	1
88–9460	Hose – Hydraulic	16	15	1
88–9470	Hose – Hydraulic	20	14	1
88–9470	Hose – Hydraulic	16	24	1
88–9480	Hose – Hydraulic	20	12	1
88–9490	Hose – Hydraulic	20	9	1
88–9520	Hose – Hydraulic	20	20	1
88–9520	Hose – Hydraulic	18	23	1
88–9530	Hose – Hydraulic	20	15	1
88–9540	Hose – Hydraulic	20	1	1
217–74	Bolt – Bedbar	64	33	2
217–120	Rim	23	46	2
217–121	Rim	54	20	2
218–446	Nut – Locking	11	10	1
218–447	Washer – E.T.L.W.	11	11	1
218–498	Nut – Hex.	11	4	4
218–498	Nut – Lock	32	42	2
218–533	Lens – Red	11	*	1
218–535	Nut – Lock	11	30	1
218–536	Washer – Lock	11	29	1
218–573	Fuse – 5A	11	20	10
218–578	Fuse – 10A	11	*	1
218–579	Wire – Fuel Pump	21	29	1
218–590	Switch – Micro	12	38	2
218–594	Fuse – 20A	11	*	1
219–17	Bulb – Light	11	*	5
219–19	Bulb – #1815	11	*	1
231–134	Tire	22	45	2
231–141	Tire	54	19	2
232–27	Stem – Valve	23	47	2
232–35	Stem – Valve	54	21	2
233–17	Knob – Parking Brake	3	9	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
233-42	Knob	5	19	1
233-42	Knob – Throttle	6	35	1
237-21	Seal – O-Ring	18	2	6
237-21	Seal – O-Ring	19	2	7
237-21	Seal – O-Ring	20	4	8
237-21	Seal – O-Ring	57	5	6
237-21	Seal – O-Ring	16	18	6
237-21	Seal – O-Ring	59	18	4
237-21	Seal – O-Ring	14	26	1
237-21	Seal – O-Ring	54	33	2
237-22	Seal – O-Ring	16	1	4
237-22	Seal – O-Ring	22	12	2
237-22	Seal – O-Ring	18	13	4
237-22	Seal – O-Ring	3	14	5
237-22	Seal – O-Ring	30	15	1
237-22	Seal – O-Ring	20	19	10
237-22	Seal – O-Ring	14	23	3
237-30	Seal – O-Ring	30	11	2
237-30	Seal – O-Ring	17	12	1
237-30	Seal – O-Ring	16	13	4
237-42	Seal – O-Ring	16	3	4
237-42	Seal – O-Ring	17	5	2
237-42	Seal – O-Ring	18	16	2
237-42	Seal – O-Ring	14	25	2
237-65	Seal – O-Ring	14	10	5
237-65	Seal – O-Ring	16	22	1
237-65	Seal – O-Ring	32	47	2
237-78	Seal – O-Ring	17	1	10
237-78	Seal – O-Ring	20	2	5
237-78	Seal – O-Ring	18	3	7
237-78	Seal – O-Ring	57	3	6
237-78	Seal – O-Ring	19	4	8
237-78	Seal – O-Ring	16	7	8
237-78	Seal – O-Ring	22	16	1
237-78	Seal – O-Ring	59	17	4
237-78	Seal – O-Ring	54	31	2
237-79	Seal – O-Ring	16	9	2
237-79	Seal – O-Ring	17	10	1
237-79	Seal – O-Ring	22	10	2
237-79	Seal – O-Ring	30	17	3
237-79	Seal – O-Ring	20	18	10
237-79	Seal – O-Ring	15	45	1
237-80	Seal – O-Ring	17	20	1
237-81	Seal – O-Ring	14	12	4
237-81	Seal – O-Ring	16	26	1
237-81	Seal – O-Ring	22	26	2
237-141	Bumper	2	42	2
237-141	Grommet	6	41	1
237-156	Seal – O-Ring	17	16	2
237-161	Seal – O-Ring	22	31	1
237-162	Seal – O-Ring	30	5	1
237-163	Seal – O-Ring	30	9	1
237-165	Grommet	55	46	2
237-181	Seal – O-Ring	22	3	1
240-3	Grommet	33	51	2
240-11	Grommet	21	27	3
240-11	Grommet	14	39	3
241-119	Cap – Dust	54	24	2
242-34	Stud-Flange, Axle	26	11	10
242-50	Nut – Lug	54	26	10
249-48	Swell Latch Assembly	11	5	1
2410-18	Plug	78	2	1
2410-73	Retainer – Tether	14	5	1
2411-36	Bearing – Rod End	5	2	1
2412-3	Clamp – Hose	32	19	4
2412-34	Clamp – Hose	30	2	1
2412-34	Clamp – Hose	14	18	3
2412-34	Clamp – Hose	22	24	2
2412-36	Clamp – Drain	21	16	1
2412-42	Clamp – Hose	51	2	1
2412-81	Clamp – R	34	19	1
2412-92	Clamp – Hose	35	16	1
2412-93	Clamp – R	51	11	1
2412-93	Clamp – R	14	32	2
2412-93	Clamp – R	7	50	1
2412-103	Clamp – R	32	25	2
2412-107	Clamp – R	60	47	1
2412-108	Clamp – Hose	51	8	1
2412-108	Clamp – Hose	32	9	2
2412-108	Clamp – Hose	21	12	7
2412-108	Clamp-Hose	53	5	2
2412-126	Clamp – R	36	54	1
2412-133	Clamp – R	6	42	2
251-77	Collar – Lock	73	37	2
251-259	Bearing	72	4	10
251-259	Bearing – Ball	29	11	2
251-318	Bearing – Ball	35	7	2
251-337	Bearing – Ball	73	34	2
253-61	Seal – Oil	64	22	1
253-96	Seal – Oil	64	32	2
253-129	Seal – Grease	54	28	2
254-65	Cone-Tapered Bearing	25	28	2
254-66	Cup-Tapered Bearing	25	27	2
254-72	Cup – Bearing	64	15	2
254-72	Cup – Bearing	54	17	4
254-91	Cone-Bearing	25	23	1
254-94	Cone – Bearing	54	16	4
254-94	Cone – Bearing	64	16	2
256-42	Bushing – Sleeve	5	34	2
256-113	Bushing – Flange	29	19	2
256-115	Washer – Thrust	59	26	8
256-115	Washer – Thrust	57	41	11
256-121	Washer – Thrust	54	12	2
256-236	Bearing – Flange	5	24	4
256-287	Bushing – Flange	59	30	4
282-4	Clevis – Spring	59	2	2
282-4	Clevis – Spring	57	21	3
283-6	Pin – Clevis	59	9	2
283-6	Pin – Clevis	57	15	3
283-58	Pin – Clevis	5	30	4
302-5	Fitting – Grease	66	4	4
302-5	Fitting – Grease	67	4	4
302-5	Fitting – Grease	54	11	4
302-5	Fitting – Grease	57	11	6
302-5	Fitting – Grease	61	13	1
302-5	Fitting – Grease	62	13	1
302-5	Fitting – Grease	63	13	1
302-5	Fitting – Grease	29	20	1
302-5	Fitting – Grease	59	24	4
302-5	Fitting – Grease	5	39	1
302-11	Fitting – Grease 45°	73	14	6
302-11	Fitting – Grease R.H. 45°	64	*	1
302-58	Fitting – Grease	34	4	1
302-60	Fitting – Grease	66	2	1
302-60	Fitting – Grease	67	2	1
302-60	Fitting – Grease	73	6	1
302-60	Fitting – Grease L.H. 90°	64	34	1
304-46	Drain – Radiator	33	52	1
304-46	Fitting – Drain	21	31	1
321-2	Screw – Cap Hex. Hd.	14	6	1
321-2	Screw – Cap Hex. Hd.	51	12	1
321-2	Screw – Cap Hex. Hd.	23	49	1
321-4	Screw – Cap Hex. Hd.	64	6	2
321-4	Screw – Cap Hex. Hd.	32	16	7
321-4	Screw – Cap Hex. Hd.	11	33	3
321-4	Screw – Cap Hex. Hd.	57	35	2
321-4	Screw – Cap Hex. Hd.	6	46	1
321-4	Screw – Cap Hex. Hd.	74	49	2
321-4	Screw – Cap Hex. Hd.	36	50	1
321-6	Screw – Cap Hex. Hd.	51	24	2
321-8	Screw – Cap Hex. Hd.	21	6	2
321-11	Screw – Cap Hex. Hd.	18	5	4
321-11	Screw – Cap Hex. Hd.	19	6	4
321-23	Screw – Cap Hex. Hd.	72	10	10

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
321-23	Screw – Cap Hex. Hd.	14	13	2
321-39	Screw – Cap Hex. Hd.	1	10	7
321-39	Screw – Cap Hex. Hd.	11	26	2
322-1	Screw – Cap Hex. Hd.	68	13	1
322-2	Screw – Cap Hex. Hd.	32	40	2
322-2	Screw – Cap Hex. Hd.	36	51	4
322-3	Screw – Cap Hex. Hd.	3	1	2
322-3	Screw – Cap Hex. Hd.	6	13	9
322-3	Screw – Cap Hex. Hd.	35	14	4
322-3	Screw – Cap Hex. Hd.	29	18	2
322-3	Screw – Cap Hex. Hd.	5	25	8
322-3	Screw – Cap Hex. Hd.	1	27	4
322-3	Screw – Cap Hex. Hd.	16	28	4
322-3	Screw – Cap Hex. Hd.	51	28	6
322-3	Screw – Cap Hex. Hd.	11	35	4
322-3	Screw – Cap Hex. Hd.	74	55	2
322-4	Screw – Cap Hex. Hd.	34	12	1
322-4	Screw – Cap Hex. Hd.	51	15	3
322-4	Screw – Cap Hex. Hd.	32	32	2
322-4	Screw – Cap Hex. Hd.	1	33	2
322-5	Screw – Cap Hex. Hd.	64	1	1
322-5	Screw – Cap Hex. Hd.	32	3	10
322-5	Screw – Cap Hex. Hd.	59	4	6
322-5	Screw – Cap Hex. Hd.	1	18	4
322-5	Screw – Cap Hex. Hd.	57	26	3
322-5	Screw – Cap Hex. Hd.	35	35	8
322-5	Screw – Cap Hex. Hd.	74	54	1
322-6	Screw – Cap Hex.	60	46	2
322-6	Screw – Cap Hex. Hd.	68	6	1
322-6	Screw – Cap Hex. Hd.	33	59	1
322-7	Screw – Cap Hex. Hd.	29	10	1
322-7	Screw – Cap Hex. Hd.	73	40	6
322-9	Screw – Cap Hex. Hd.	34	1	2
322-9	Screw – Cap Hex. Hd.	72	1	10
322-10	Screw – Cap Hex. Hd.	29	3	1
322-11	Screw – Cap Hex. Hd.	35	39	1
322-12	Screw – Cap Hex. Hd.	34	23	2
322-12	Screw – Cap Hex. Hd.	60	43	2
323-4	Screw – Cap Hex. Hd.	15	43	2
323-4	Screw – Cap Hex. Hd.	7	47	2
323-5	Screw – Cap Hex. Hd.	21	25	3
323-5	Screw – Cap Hex. Hd.	14	36	3
323-6	Screw – Cap Hex. Hd.	54	1	4
323-6	Screw – Cap Hex. Hd.	68	2	2
323-6	Screw – Cap Hex. Hd.	76	5	2
323-6	Screw – Cap Hex. Hd.	35	9	2
323-6	Screw – Cap Hex. Hd.	66	12	2
323-6	Screw – Cap Hex. Hd.	67	12	2
323-6	Screw – Cap Hex. Hd.	73	28	6
323-7	Screw – Cap Hex. Hd.	66	21	4
323-7	Screw – Cap Hex. Hd.	67	21	4
323-7	Screw – Cap Hex. Hd.	35	42	1
323-7	Screw – Cap Hex. Hd.	74	48	4
323-9	Screw – Cap Hex. Hd.	5	3	1
323-9	Screw – Cap Hex. Hd.	75	3	2
323-9	Screw – Cap Hex. Hd.	51	19	1
323-9	Screw – Cap Hex. Hd.	36	55	1
323-11	Screw – Cap Hex. Hd.	35	32	3
323-11	Screw – Cap Hex. Hd.	57	39	1
323-12	Screw – Cap Hex. Hd.	30	3	2
323-12	Screw – Cap Hex. Hd.	22	28	2
323-12	Screw – Cap Hex. Hd.	58	56	2
323-20	Screw – Cap Hex. Hd.	22	42	2
323-49	Screw – Cap Hex. Hd.	66	6	2
323-49	Screw – Cap Hex. Hd.	67	6	2
323-49	Screw – Special	73	13	2
323-50	Screw – Cap Hex. Hd.	71	5	2
323-53	Screw – Cap Hex. Hd.	73	10	2
324-6	Screw – Cap Hex. Hd.	22	21	4
324-23	Screw–Cap, Hex Hd.	24	11	4
325-4	Screw – Cap Hex. Hd.	59	36	4
325-4	Screw – Cap Hex. Hd.	58	59	6
325-5	Screw – Cap Hex. Hd.	76	8	9
325-7	Screw – Cap Hex. Hd.	22	6	2
325-8	Screw – Cap Hex. Hd.	77	4	2
327-2	Screw – Cap Hex. Hd.	54	3	1
328-7	Screw – Cap Hex. Hd.	57	18	4
328-12	Screw – Cap Hex. Hd.	57	13	2
328-25	Screw – Cap Hex. Hd.	54	30	1
328-27	Screw – Cap Hex. Hd.	55	49	1
3210-7	Screw–Cap, Hex Hd.	24	19	8
3212-4	Screw – Cap Hex. Hd.	76	*	2
3217-6	Nut – Hex.	29	28	1
3217-9	Nut – Hex.	77	1	2
3217-9	Nut – Lock	76	9	3
3218-1	Nut – Jam	22	2	1
3218-3	Nut – Hex. Jam	73	11	4
3218-3	Nut – Jam	71	4	4
3219-2	Nut	24	1	8
3219-14	Nut – Hex.	78	3	1
3220-3	Nut – Jam	5	1	2
3220-3	Nut – Jam	54	14	8
3220-5	Nut – Jam	54	36	2
3220-6	Nut	4	27	1
3220-6	Nut – Steering Wheel	3	8	1
3220-12	Nut – Jam L.H. Thread	54	38	2
3220-18	Nut – Jam	73	32	1
3230-1	Bolt – Carriage	70	*9	10
3230-1	Bolt – Carriage	69	3	2
3230-2	Bolt – Carriage	35	13	1
3231-2	Bolt – Carriage	66	5	2
3231-2	Bolt – Carriage	67	5	2
3231-3	Bolt – Carriage	73	21	2
3234-14	Screw – Hex. Washer Hd.	1	30	14
3234-23	Screw – Hex. Flange Hd.	75	5	6
3242-1	Screw – Set	73	19	4
3242-1	Screw – Set Sq. Hd.	70	2	20
3242-1	Screw – Sq. Hd. Set	66	8	4
3242-1	Screw – Sq. Hd. Set	67	8	4
3243-13	Screw – Sq. Hd. Set	64	8	4
3245-35	Screw – Set	73	33	2
3250-29	Screw – Cap Hex. Hd.	6	7	4
3250-45	Screw – Pan Hd.	76	10	6
3253-3	Washer – Lock	76	16	6
3253-3	Washer – Lock	11	32	3
3253-3	Washer – Lock	6	32	1
3253-3	Washer – Lock	23	50	1
3253-4	Washer – Lock	3	2	2
3253-4	Washer – Lock	64	2	1
3253-4	Washer – Lock	72	2	10
3253-4	Washer – Lock	68	7	2
3253-4	Washer – Lock	59	10	2
3253-4	Washer – Lock	6	12	4
3253-4	Washer – Lock	1	17	4
3253-4	Washer – Lock	29	17	2
3253-4	Washer – Lock	16	29	4
3253-4	Washer – Lock	73	39	7
3253-4	Washer – Lock	36	49	4
3253-4	Washer – Lock	33	53	5
3253-5	Washer – Lock	30	4	2
3253-6	Washer – Lock	76	*	2
3253-6	Washer – Lock	8	25	2
3253-7	Washer – Lock	76	7	9
3253-7	Washer – Lock	60	44	4
3253-7	Washer – Lock	58	58	6
3253-15	Washer – Lock	21	9	5
3253-21	Washer – Lock	66	11	2
3253-21	Washer – Lock	67	11	2
3253-21	Washer – Lock	51	20	1
3253-21	Washer – Lock	22	29	2
3253-21	Washer – Lock	73	29	6
3253-21	Washer – Lock	15	42	2
3253-21	Washer – Lock	36	56	1
3253-27	Washer – Lock	77	2	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3255-8	Washer – Lock	35	18	2
3255-8	Washer – Lock ETLW	3	31	1
3255-8	Washer–Lock	24	2	8
3255-9	Washer – E.T.L.W.	64	31	4
3255-9	Washer – Lock E.T.L.W.	35	30	1
3256-1	Washer – Flat	64	7	2
3256-1	Washer – Flat	11	13	5
3256-1	Washer – Flat	3	29	2
3256-1	Washer – Flat	2	44	10
3256-1	Washer – Flat	74	47	2
3256-3	Washer – Flat	1	24	4
3256-3	Washer – Flat	11	34	4
3256-5	Washer – Flat	8	4	1
3256-6	Washer – Flat	59	33	4
3256-6	Washer – Flat	58	57	6
3256-22	Washer – Flat	21	4	2
3256-22	Washer – Flat	5	6	2
3256-22	Washer – Flat	3	11	4
3256-22	Washer – Flat	76	11	6
3256-22	Washer – Flat	32	15	4
3256-22	Washer – Flat	57	34	2
3256-23	Washer – Flat	70	*11	10
3256-23	Washer – Flat	32	4	11
3256-23	Washer – Flat	69	6	2
3256-23	Washer – Flat	59	8	10
3256-23	Washer – Flat	6	11	8
3256-23	Washer – Flat	3	15	6
3256-23	Washer – Flat	1	16	6
3256-23	Washer – Flat	57	25	3
3256-23	Washer – Flat	51	27	2
3256-23	Washer – Flat	35	38	5
3256-23	Washer – Flat	73	38	8
3256-24	Washer	8	5	1
3256-24	Washer – Flat	54	2	2
3256-24	Washer – Flat	71	3	4
3256-24	Washer – Flat	5	4	1
3256-24	Washer – Flat	76	4	4
3256-24	Washer – Flat	73	12	8
3256-24	Washer – Flat	6	16	3
3256-24	Washer – Flat	51	21	1
3256-24	Washer – Flat	57	24	3
3256-24	Washer – Flat	59	34	4
3256-24	Washer – Flat	35	37	4
3256-24	Washer – Flat	15	41	2
3256-25	Washer – Flat	22	38	4
3256-26	Washer – Flat	29	2	1
3256-26	Washer – Flat	76	6	9
3256-26	Washer – Flat	3	22	1
3256-26	Washer – Flat	8	24	2
3256-28	Washer – Flat	54	22	2
3256-46	Washer – Flat	8	20	1
3256-49	Washer – Flat	64	10	4
3256-49	Washer – Flat	68	16	10
3256-69	Washer – Thrust	5	31	3
3256-71	Washer – Flat	68	8	2
3256-78	Washer – Flat	72	5	10
3258-19	Screw–Machine	52	6	2
3258-166	Screw – Phillip Hd.	11	12	5
3258-166	Screw – Phillip Hd.	3	28	2
3258-166	Screw – Phillip Hd.	2	45	3
3269-3	Rivet – Pop	71	6	4
3269-3	Rivet – Pop	73	17	4
3269-10	Washer – Back–up	33	55	7
3269-13	Rivet – Pop	32	29	7
3269-15	Rivet – Pop	33	49	8
3269-28	Rivet – Pop	68	14	10
3272-2	Pin – Cotter	5	5	2
3272-4	Pin – Cotter	1	20	2
3272-5	Pin – Cotter	3	17	3
3272-10	Pin – Cotter	29	1	1
3272-10	Pin – Cotter	59	3	2
3272-10	Pin – Cotter	57	17	3
3272-10	Pin – Cotter	6	17	2
3272-10	Pin – Cotter	3	21	1
3272-10	Pin – Cotter	5	40	4
3272-13	Pin – Cotter	54	25	2
3273-26	Screw – Hex. Socket Hd.	12	45	2
3290-93	Screw – Cap Hex. Hd.	12	39	4
3290-271	Rivet – Pop	32	13	2
3290-336	Tie – Cable	57	14	3
3290-336	Tie – Cable	60	45	1
3290-354	Plate – Nut	11	36	2
3290-378	Tie – Cable	3	*	3
3290-378	Tie – Cable	33	57	1
3290-409	Rivet – Pop	64	12	4
3290-461	Washer – Belleville	5	21	1
3290-488	Boot – Lift Control	12	40	1
3290-489	Knob – Lift Control	11	3	1
3296-2	Nut – Lock	11	18	3
3296-9	Nut – Hex.	29	24	2
3296-20	Nut – Lock	3	16	4
3296-23	Nut – Lock	22	19	2
3296-29	Nut – Lock	70	*10	10
3296-29	Nut – Lock	59	7	8
3296-29	Nut – Lock	69	7	2
3296-29	Nut – Lock	29	9	4
3296-29	Nut – Lock	34	17	5
3296-29	Nut – Lock	35	21	9
3296-29	Nut – Lock	5	23	8
3296-29	Nut – Lock	51	26	4
3296-29	Nut – Lock	32	27	8
3296-29	Nut – Lock	6	39	9
3296-29	Nut – Lock	58	45	3
3296-29	Nut – Lock	74	52	2
3296-39	Nut – Lock	54	5	2
3296-39	Nut – Lock	66	9	8
3296-39	Nut – Lock	67	9	8
3296-39	Nut – Lock	73	16	8
3296-39	Nut – Lock	76	18	2
3296-39	Nut – Lock	6	28	3
3296-39	Nut – Lock	35	29	4
3296-39	Nut – Lock	22	30	2
3296-39	Nut – Lock	59	35	4
3296-39	Nut – Lock	5	38	1
3296-39	Nut – Lock	58	52	2
3296-39	Nut – Lock L.H.	64	20	2
3296-42	Nut – Lock	21	3	2
3296-42	Nut – Lock	72	6	10
3296-42	Nut – Lock	1	9	10
3296-42	Nut – Lock	19	10	4
3296-42	Nut – Lock	51	10	3
3296-42	Nut – Lock	32	11	7
3296-42	Nut – Lock	64	13	2
3296-42	Nut – Lock	14	15	2
3296-42	Nut – Lock	18	17	4
3296-42	Nut – Lock	11	22	7
3296-42	Nut – Lock	73	22	2
3296-42	Nut – Lock	3	30	2
3296-42	Nut – Lock	57	37	2
3296-42	Nut – Lock	35	47	1
3296-44	Nut – Lock	8	22	1
3296-44	Nut – Lock	57	23	4
3296-48	Nut – Lock	22	39	4
3296-51	Nut – Lock	57	19	6
3296-54	Nut – Lock	6	4	4
3296-56	Nut – Lock	23	53	2
3296-59	Nut – Lock	5	22	1
3296-59	Nut – Lock	6	36	2
3296-59	Nut – Lock	36	57	1
3296-60	Nut – Reel	64	17	1
32104-76	Screw – Thread Forming	58	48	2
32105-1	Screw – Cap Hex. Hd.	12	43	1
32105-8	Screw – Cap Hex. Hd.	32	43	2
32105-13	Screw – Cap Hex. Hd.	11	17	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
32105–21	Screw	29	4	2
32107–11	Nut–Square	52	5	2
32108–9	Screw – Machine	23	54	1
32111–7	Nut – Acorn	76	17	6
32120–74	Ring – Retaining	28	53	1
32120–93	Ring – Retaining	59	20	4
32120–93	Ring – Retaining	57	29	6
32121–2	Pin – Roll	35	2	2
32121–6	Pin – Roll	5	9	1
32121–11	Pin – Roll	68	5	1
32121–12	Pin – Roll	73	23	2
32121–16	Pin – Roll	5	32	1
32121–38	Pin – Roll	6	19	1
32121–45	Pin – Roll	5	10	2
32121–50	Pin – Roll	5	41	1
32121–122	Pin – Roll	59	32	2
32121–122	Pin – Roll	58	55	3
32122–22	Screw	78	2	1
32122–24	Screw – Round Hd.	21	10	5
32128–19	Nut – Flange Lock	75	2	2
32128–25	Nut – Lock	51	29	3
32128–26	Nut – Flange	8	21	4
32128–36	Nut – Flange Lock R.H.	64	38	2
32136–5	Nut – Slotted	54	23	2
32144–1	Screw – Cap Hex. Hd.	12	41	2
32144–10	Screw – Hex. Washer Hd.	14	33	2
32144–14	Screw – Self Tapping	58	66	3
32144–18	Screw – Cap Hex. Hd.	12	46	2
32144–21	Screw	3	6	1
32144–22	Screw – Cap Hex. Hd.	29	13	4
32144–73	Screw – Self Tapping	64	3	5
32144–112	Screw – Cap Hex. Hd.	23	51	8
32144–112	Screw–Thread Forming	24	13	8
32149–1	Nut – Lock	35	45	1
32149–7	Nut – Lock	32	26	2
32151–12	Ring – Retaining	67	23	2
32151–36	Ring – Retaining	54	7	2
32151–36	Ring – Retaining	59	15	4
32151–41	Ring – Retaining	65	13	1
32151–48	Ring – Retaining	59	5	2
32151–48	Ring – Retaining	57	20	3
32151–61	Ring – Retaining	59	12	4
32151–62	Ring – Retaining	22	33	1
32151–77	Ring – Retaining	54	40	1
32151–94	Ring – Retaining	58	50	1
32152–10	Nut	61	2	1
32152–10	Nut	62	2	1
32152–10	Nut	63	2	1
32153–6	Nut – Lock	54	6	2
3333–975	Tie – Cable	33	58	1
340–2	Fitting – Hydraulic Straight	16	5	1
340–3	Fitting – Hydraulic Straight	22	14	1
340–3	Fitting – Hydraulic Straight	30	16	1
340–4	Fitting – Hydraulic Straight	30	10	2
340–8	Fitting – Hydraulic Straight	14	11	2
340–13	Fitting – Hydraulic Straight	19	16	2
340–13	Fitting – Hydraulic Straight	16	19	2
340–18	Fitting – Hydraulic 90°	22	13	1
340–18	Fitting – Hydraulic 90°	20	7	10
340–21	Fitting – Hydraulic Tee	20	13	1
340–77	Fitting – Hydraulic 90°	16	2	2
340–77	Fitting – Hydraulic 90°	18	19	1
340–77	Fitting – Hydraulic 90°	14	22	1
340–82	Fitting – Hydraulic 90°	18	15	1
340–92	Fitting – Hydraulic Straight	19	3	4
340–92	Fitting – Hydraulic Straight	18	10	3
340–92	Fitting – Hydraulic Straight	16	17	3
340–101	Fitting – Hydraulic 45°	17	11	1
340–101	Fitting – Hydraulic Straight	16	10	2
340–103	Fitting – Hydraulic 45°	20	3	5
340–103	Fitting – Hydraulic 45°	54	32	2
340–103	Fitting – Hydraulic 45°	58	64	1
340–108	Fitting – Hydraulic 90°	33	48	2
340–132	Fitting – Hydraulic 90°	18	4	3
340–132	Fitting – Hydraulic 90°	57	4	5
340–132	Fitting – Hydraulic 90°	16	8	1
340–132	Fitting – Hydraulic 90°	19	11	1
340–132	Fitting – Hydraulic 90°	59	19	4
340–137	Fitting – Hydraulic 45°	14	27	1
340–139	Fitting – Hydraulic 90°	16	23	1
340–139	Fitting – Hydraulic 90°	14	35	1
340–143	Fitting – Hydraulic 90°	19	8	1
340–143	Fitting – Hydraulic 90°	17	18	1
340–143	Fitting – Hydraulic 90°	16	32	1
340–151	Fitting – Hydraulic Tee	18	14	1
353–512	Fitting – Hydraulic Plug	19	5	2
353–512	Plug – Hydraulic	18	9	1
353–550	Fitting – Plug	15	44	1
353–599	Pin–Dowel	65	3	2
353–682	Fitting – Hydraulic Straight	14	20	1
353–781	Fitting–Elbow	53	1	2
353–886	Ring – Retaining	31	8	2
353–922	Seal – Ring	31	6	6
353–989	Plug	17	6	2
353–990	Plug	17	2	9
353–991	Plug	17	17	2
354–5	Coupling	31	14	2
354–13	Pin– Dowel	31	13	2
354–14	Pin – Dowel	31	21	2
354–15	Seal – Oil	31	22	1
354–16	Washer	31	4	4
354–20	Fitting – Fuel Tee	21	17	1
354–21	Fitting – Fuel Straight	21	18	1
354–22	Fitting – Fuel Straight	21	14	2
354–35	Gasket	31	29	1
354–36	Cap – Adjuster Valve	31	30	1
354–37	Adjuster – Valve	31	28	1
354–38	Ball – Valve	31	26	1
354–39	Spring – Compression	31	27	1
354–44	Body Assy.	65	10	1
354–45	Idler Gear Assembly	65	6	1
354–46	Ring–Seal	65	8	1
354–47	Cover Assy.	65	4	1
354–49	Drive Shaft Assembly	65	7	1
354–50	Screw–Hex Socket Hd.	65	1	4
354–51	Washer	65	2	4
354–52	Shaft – Drive	31	24	1
354–53	Pump Body Assembly	31	23	1
354–54	Plate – Gear	31	1	2
354–55	Plate Assembly	31	25	1
354–56	Pin – Dowel	31	2	2
354–57	Gear – Drive	31	20	1
354–58	Plate Assembly	31	15	1
354–59	Shaft – Drive	31	11	1
354–60	Plate – Gear	31	7	1
354–61	Key – Woodruff	31	10	1
354–62	Gear	31	9	1
354–63	Cover Assembly	31	5	1
354–64	Screw – Cap Hex. Hd.	31	3	4
354–65	Idler Shaft Assembly	31	12	1
354–66	Shaft – Idler	31	19	2
354–67	Seal – Pre–Load Hi Pressure	31	17	4
354–68	Plate – Load	31	18	4
354–69	Seal – Load Hi Pressure	31	16	4
354–70	Plug	17	21	1
354–72	Fitting – Hydraulic 45°	22	36	1
354–73	Fitting – Hydraulic Straight	14	24	2
354–74	Fitting – Hydraulic Plug	14	16	1
354–75	Fitting – Hydraulic 90°	22	34	1
354–77	Fitting – Hydraulic Test Port	22	17	1
354–77	Fitting – Test Port	16	11	2
354–79	Cap – Test Port	16	12	2
354–79	Cap – Test Port	22	18	1

*Not Illustrated

TABLE OF CONTENTS

Description	Page
Frame & Body Assembly	1–2
Steering Tower Assembly	3
Steering Valve Assembly No. 75–0600	4
Traction & Brake Pedals Assembly	5
Seat & Throttle Assembly	6–7
Seat Suspension Assembly	8
Diagnostic–ACE Display Assembly	9
Electrical Schematic	10
Control Console Assembly	11–12
Hydraulic Schematic	13
Hydraulic Reservoir Assembly	14–15
Hydraulic Control Manifold Assembly	16
Control Manifold Assembly	17
Front Hydraulic Manifolds	18
Rear Hydraulic Manifolds	19
Cutting Unit Hydraulic Components	20
Fuel Tank Assembly	21
Front Axle & Transmission Assembly	22–23
Front Axle Assembly No. 86–7200	24–25
Brake Assembly	26
Transmission Assembly No. 75–0010	27–28
Traction Control Assembly	29
Gear Pump Installation Assembly	30
Hydraulic Pump Assembly No. 75–0800	31
Radiator Assembly	32–33
Muffler & Pump Drive Assembly	34
Engine Installation Assembly	35–36
Valves & Crankshaft Assembly	37–38
Crankcase Assembly	39
Camshaft Assembly	40
Cylinder Head Assembly	41–42
Water Pump Assembly	43
Fuel Supply & Engine Block Assembly	44–45
Fuel Injection Pump Assembly	46–47
Governor Assembly	48
Starter Assembly	49
Alternator Assembly	50
Engine Components Assembly	51
Air Cleaner Assembly	52
Fuel Filter Assembly	53
Rear Axle Assembly	54–55
Hydraulic Cylinder No. 75–1200	56
Front Lift Arms Assembly	57–58
Rear Lift Arms Assembly	59–60
Hydraulic Cylinder Assembly No. 85–9880	61
Hydraulic Cylinder Assembly No. 83–7480	62
Hydraulic Cylinder Assembly No. 83–7490	63
Reel Assembly (5 & 8 Blade Cutting Units)	64
Reel Motor Assembly No. 75–1400	65
Roller Assembly (5 Blade C.U. Serial No. 20001 thru 20555) (8 Blade C.U. Serial No. 20001 thru 21322)	66
Roller Assembly (5 Blade C.U. Serial No. 20556 & Up) (8 Blade C.U. Serial No. 21323 & Up)	67
Grass Basket Assembly	68
Front Scraper Kit No. 83–5400 (Optional)	69
High Height–Of–Cut Kit No. 83–5300 (Optional)	70
Roller Scraper Kit Model No. 03512 (Optional)	71
Turf Compensation Kit Model No. 03510 (Optional)	72
Dethatcher Assembly Model No. 03516 (Optional)	73–74
Armrest Kit Model No. 30707 (Optional)	75
R.O.P.S. Assembly (Optional)	76
Rear Weight Kit No. 75–6690 (Optional)	77
Special Tools	78–79
International Decal Cross Reference	80–83
Part Number Index	84–95

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster® 5100D has two identification numbers; a model number and a serial number. The two numbers are stamped on a decal which is located on the traction unit frame under the seat. In any correspondence concerning the Reelmaster 5100D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 5100D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state.

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.