Form Number 3358-751 Rev A

1/3 Area Platform Lift
Workman® Heavy-Duty Utility Vehicle

Model No. 07344 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page	Description	Page
Deck, Arm and Hydraulic Cylinder Assembly	3	No Step Decal and Base Assembly	5
Brake Switch Assembly	4	Power Pack Assembly	6


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes


❶ Not serviced separately

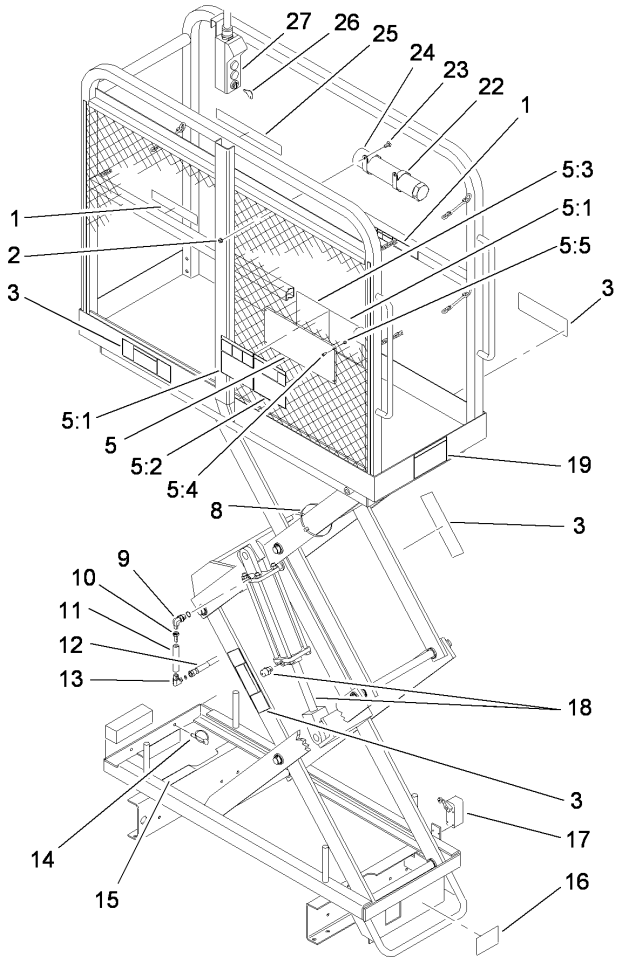

Deck, Arm and Hydraulic Cylinder Assembly


Ref	Part No.	Qty.	Description
1	93-3707	2	Decal-Danger
2	32128-20	2	Nut-HF
3	93-3706	4	Decal-Danger
5	93-3738	1	Plate-Decal
5:1	93-3702	2	Decal-Danger
5:2	93-3703	1	Decal-Danger
5:3	93-3704	1	Decal-Danger
5:4	3250-12	4	Screw-PPH
5:5	3296-2	4	Nut-Lock
8	250-5	12	Tie-Cable, Long
9	93-3749	1	Fitting-Adaptor
10	93-3747	1	Fitting-Reducer
11	93-3733	1	Control-Flow, Fixed
12	93-3735	1	HYD Hose ASM
13	93-3746	2	Fitting-Adaptor
14	93-3736	1	Pin-Release, Quick
15	93-3708	1	Decal-Danger
16	93-3711	1	Decal-Important
17	93-3713	1	Switch-Limit
18	93-3734	1	HYD Cylinder ASM
19	93-3701	1	Decal-Danger
22	2412-133	2	R-Clamp
23	3230-18	2	Screw-CARR
24	74-0720	1	Tube-Manual

Ref	Part No.	Qty.	Description
25	93-3705	1	Decal-Danger
26	92-9145	1	Switch-Key, Operator
27	93-3712	1	Control-Button, Push

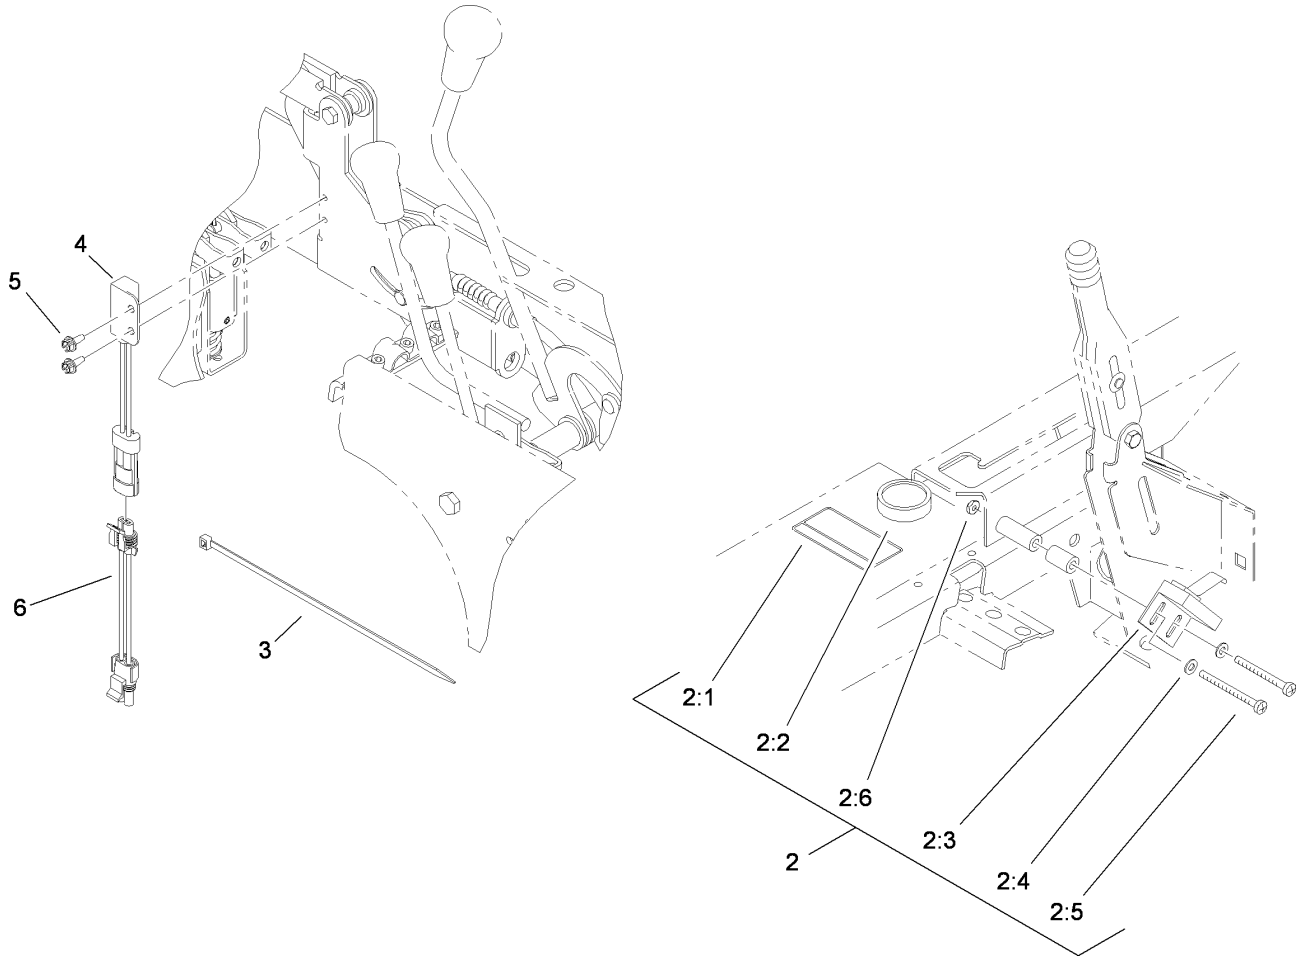


Brake Switch Assembly

Ref	Part No.	Qty.	Description
2	93-3727	1	Park Brake Kit
2:1	93-3710	1	Decal-Warning
2:2	93-3726	1	Level-Circular
2:3	93-3722	1	Switch/Bracket-Brake, Parking
2:4	3256-77	2	Washer-Flat
2:5	32105-14	2	Screw-SHH
2:6	3296-12	2	Nut-Lock
3	250-5	2	Tie-Cable, Long
4	104-1414	1	Sensor-Proximty, Ferrous
5	32104-60	2	Screw-HWH
6	107-8002	1	Harness-Wire

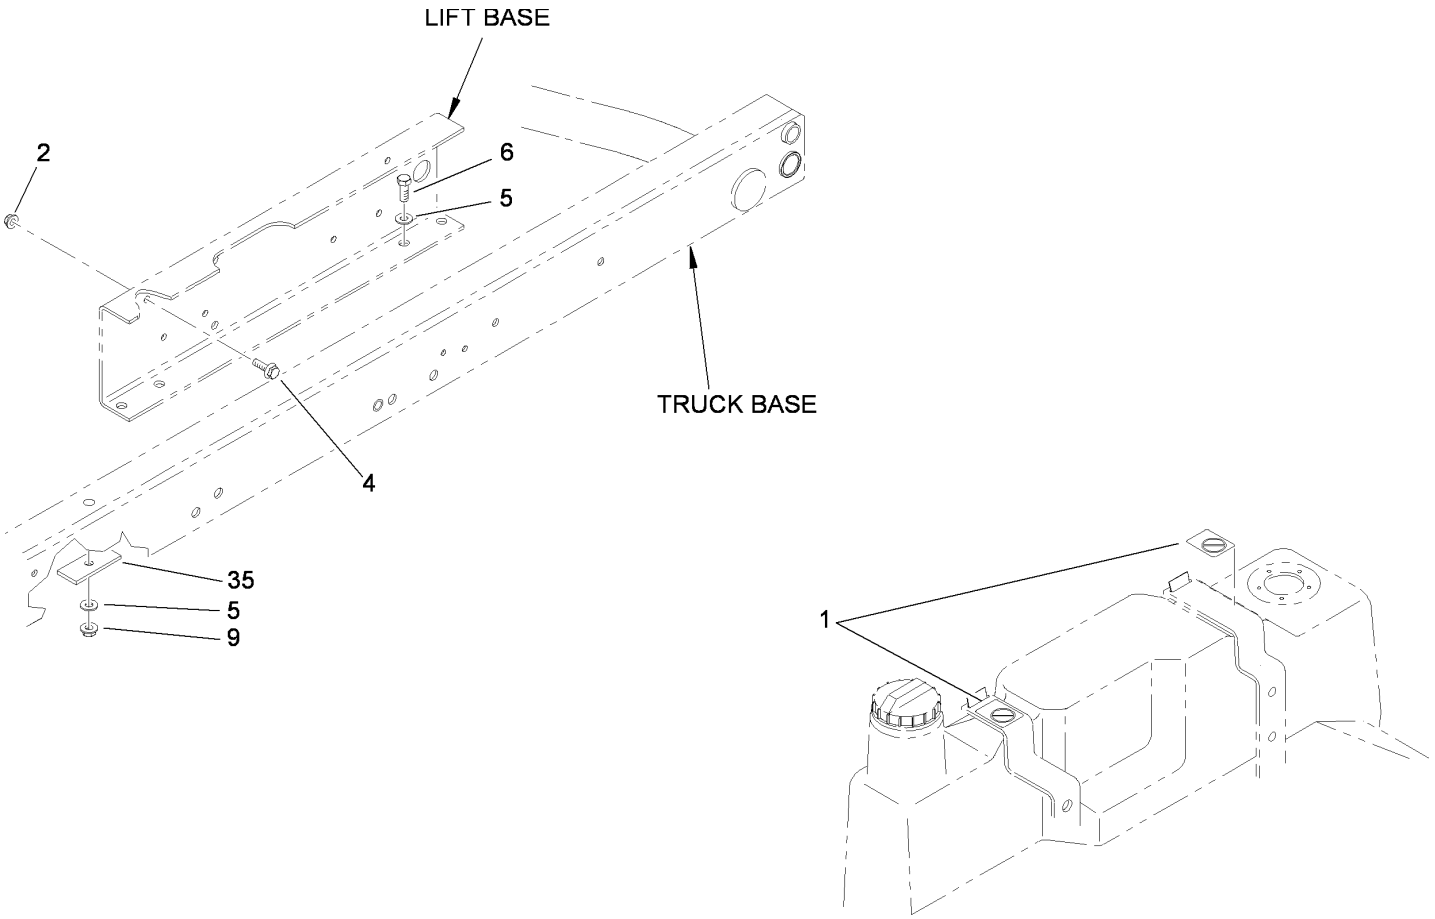

No Step Decal and Base Assembly

Ref	Part No.	Qty.	Description
1	93-3709	2	Decal-No Step
2	32128-35	4	Nut-HF
4	3234-29	4	Screw-HHF
5	3253-5	4	Washer-Lock
6	323-6	4	Screw-HH
9	32128-29	4	Locknut-Flange
35	93-3742	2	Plate-Reinforcement

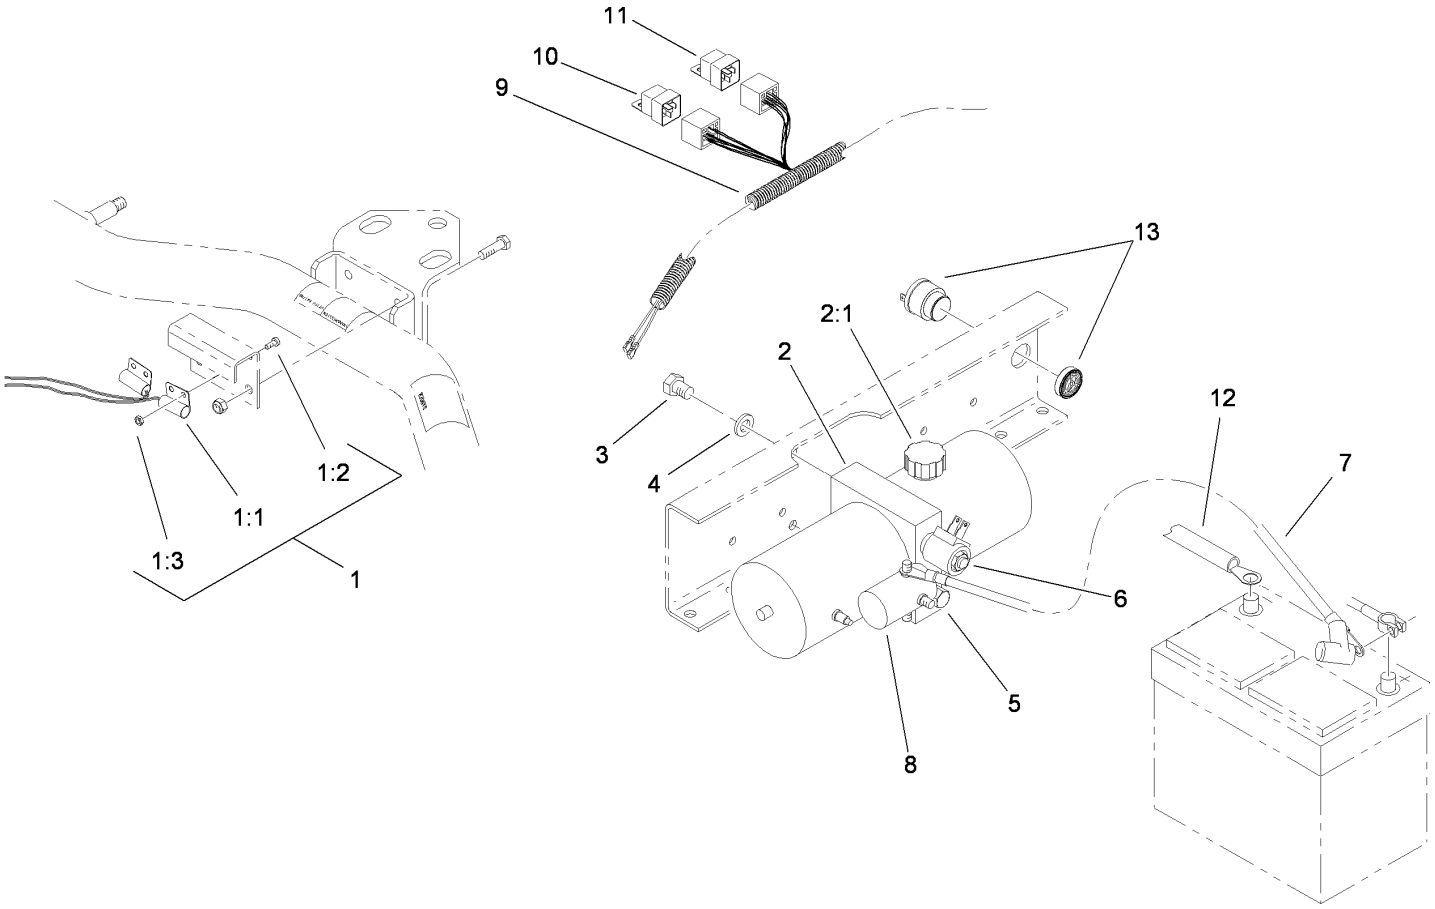

Power Pack Assembly

Ref	Part No.	Qty.	Description
1	112-3359	1	Leveling Switch Kit
❶1:1		2	Switch-Level
1:2	3250-12	4	Screw-PPH
1:3	3296-12	4	Nut-Lock
2	93-3732	1	Unit-Power, Dc (HYD)
2:1	98-2954	1	Cap-Reservoir
3	323-3	2	Screw-HH
4	3253-5	2	Washer-Lock
5	93-3748	1	Fitting-Adaptor
6	92-9144	1	Valve-Solenoid
7	93-3725	1	Cable-Battery
8	94-2864	1	Start Switch Relay Kit
9	93-3718	1	Wire Harness Kit (With Relays)
10	93-3721	1	Relay
11	63-7590	1	Relay
12	93-3745	1	Cable-Battery, Negative
13	93-3715	1	Sonalert-Intermittent

NOTES


TORO®