Form Number 3350-205 Rev B

16-42Z TimeCutter™ Z Riding Mower

Model No. 74403 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame Assembly	3
Control Assembly	5
Hydro and Belt Drive Assembly	6
RH Hydrostat Assembly Part No. 107-2466	7
LH Hydrostat Assembly Part No. 107-2465	9
Engine Assembly	11
Spindle and Belt Drive Assembly	13
42in Deck Assembly	14
Electrical System Assembly	16
Cylinder Assembly Briggs and Stratton 286H77-0165-E1	17
Cylinder Head Assembly Briggs and Stratton 286H77-0165-E1	18
Crankshaft Assembly Briggs and Stratton 286H77-0165-E1	19
Crankcase Assembly Briggs and Stratton 286H77-0165-E1	20
Oil Filter, Tube and Pump Assembly Briggs and Stratton 286H77-0165-E1	21
Carburetor Assembly Briggs and Stratton 286H77-0165-E1	22
Governor Assembly Briggs and Stratton 286H77-0165-E1	23
Blower Housing Assembly Briggs and Stratton 286H77-0165-E1	24
Starter Assembly Briggs and Stratton 286H77-0165-E1	25
Gasket Assembly Briggs and Stratton 286H77-0165-E1	26
Carburetor Overhaul Kit Assembly Briggs and Stratton 286H77-0165-E1	27


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Included in Engine Gasket Set-Ref. 358.
❹ Included in Valve Gasket Set-Ref. 1095.
❺ Included in Carburetor Overhaul Kit-Ref. 121.
❻ Included in Carburetor Gasket Set-Ref. 977.
❼ Included in Valve Overhaul Gasket Set-Ref. 1095.
❽ Obtain from your local Briggs & Stratton dealer

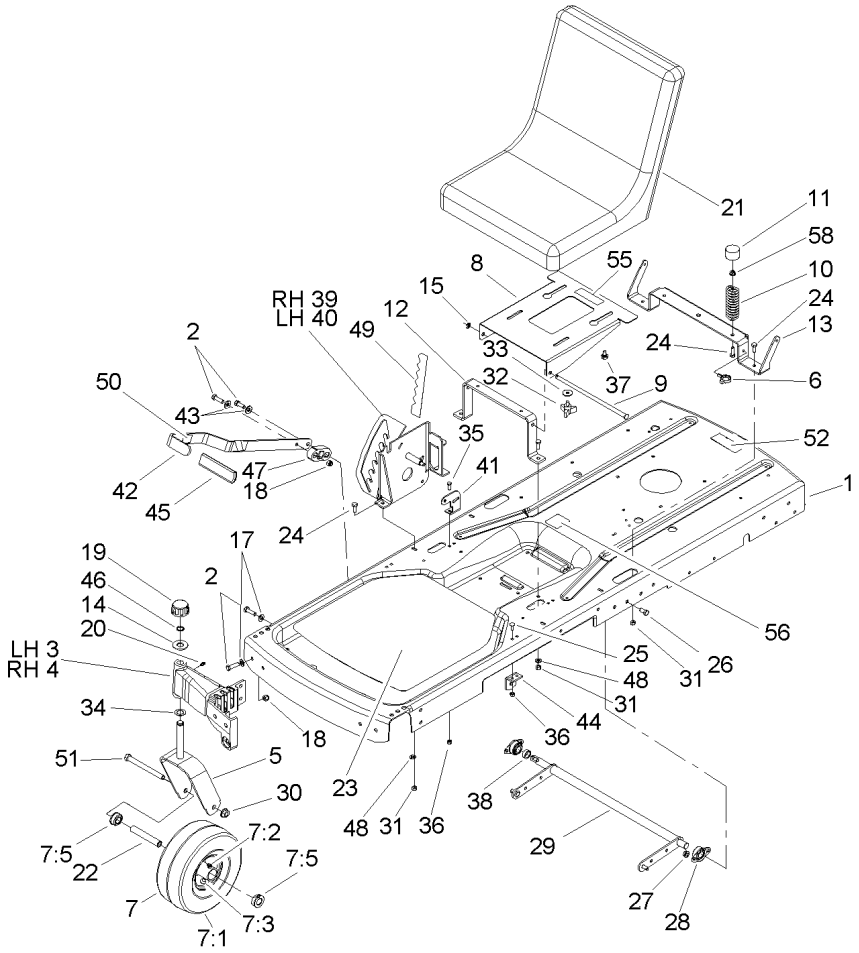

Frame Assembly


Ref	Part No.	Qty.	Description
1	107-1744-01	1	Frame
2	323-18	10	Screw-HH
3	105-6986-01	1	Caster-LH
4	105-6985-01	1	Castor-RH
5	106-2196-01	2	Caster Fork ASM
6	105-1853	1	Clamp-Hose
7	105-3471	2	Front Wheel And Tire ASM
7:1	105-1943	1	Tire
7:2	302-11	1	Fitting-Lube, 45 DEG
7:3	232-27	1	Stem-Valve
7:5	114-1640	2	Bushing-Flange
❶7:99	93-4244	1	Tube-Inner (W/Valve)
8	105-6953-03	1	Bracket-Seat
9	105-6955	1	Pin-Pivot
10	92-7054	2	Spring-Compression
11	701178	2	Cap-Protector
12	105-6954-03	1	Brace-Seat, Front
13	106-2210-03	1	Brace-Seat, Rear
14	28-2480	2	Washer
15	105-7004	1	E-Ring
17	3256-24	8	Washer-Flat
18	3296-39	9	Nut-Lock, NI
19	61-9780	2	Cap-Hub
20	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
21	105-6962	1	Seat
22	104-3667	2	Spanner-Wheel
23	105-3460	1	Pad-Antiskid
24	322-4	14	Screw-HH
25	3229-1	4	Screw-CARR
26	323-4	4	Screw-HH
27	3290-357	4	Nut-HHF, Whiz
28	1-633102	2	Bearing-Flange, Side
29	105-3499-03	1	Lift Arm ASM
30	32128-23	2	Nut-HF
31	3296-29	12	Nut-Lock, NI
32	92-9674	2	Knob
33	5-4460	2	Washer-Pivot
34	3-6498	2	Washer-Thrust
35	321-4	4	Screw-HH
36	3296-42	8	Nut-Lock, NI
37	37-8770	2	Bolt-Shoulder
38	106-2222	1	Spacer
39	106-2158-03	1	RH Plate ASM
40	106-2159-03	1	LH Plate ASM
41	106-2180	2	Bracket-Bellcrank
42	105-3435-03	1	Lever-Lift
43	98-5975	2	Washer-Belleville
44	105-3439	2	Bracket-Lift

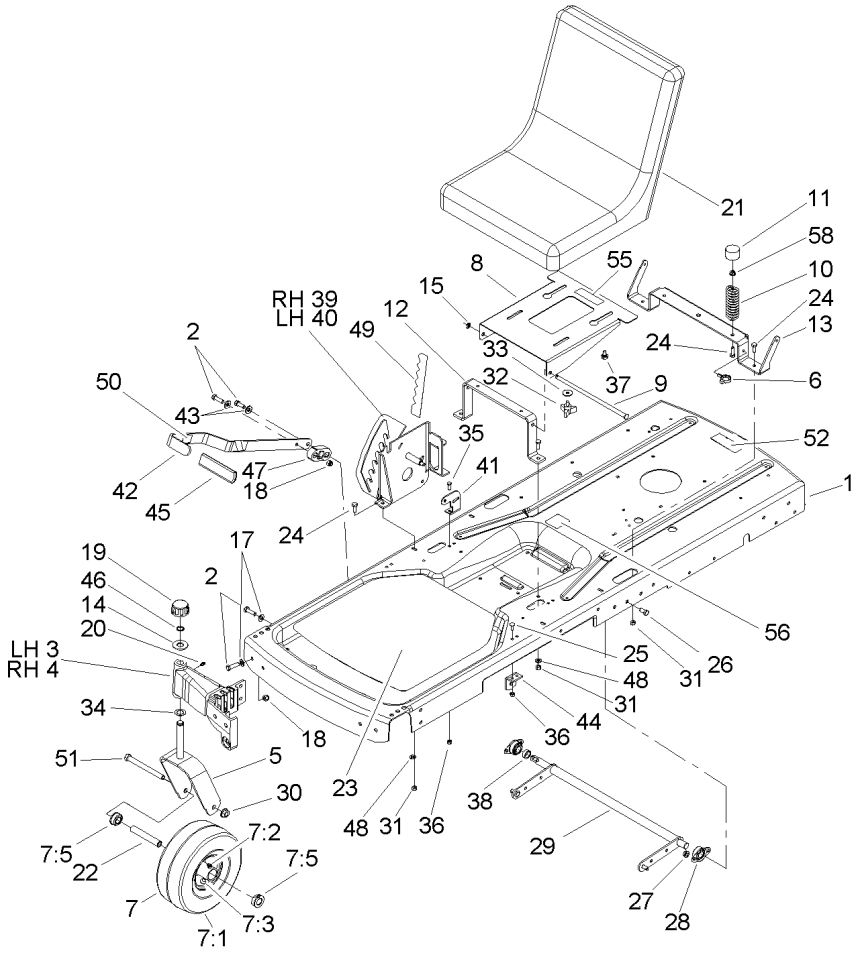

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
45	105-3450	1	Grip-Lever, Lift
46	32151-103	2	Ring-Snap
47	106-2211	1	Block-Lift
48	3256-23	6	Washer-Flat
49	106-2223	1	Decal-HOC
50	106-8743	1	Decal
51	325-22	2	Screw-HH
52	106-7043	1	Decal-Transport
55	106-8717	1	Decal-Service
56	105-2699	1	Decal-Noise
58	32128-25	2	Nut-HF

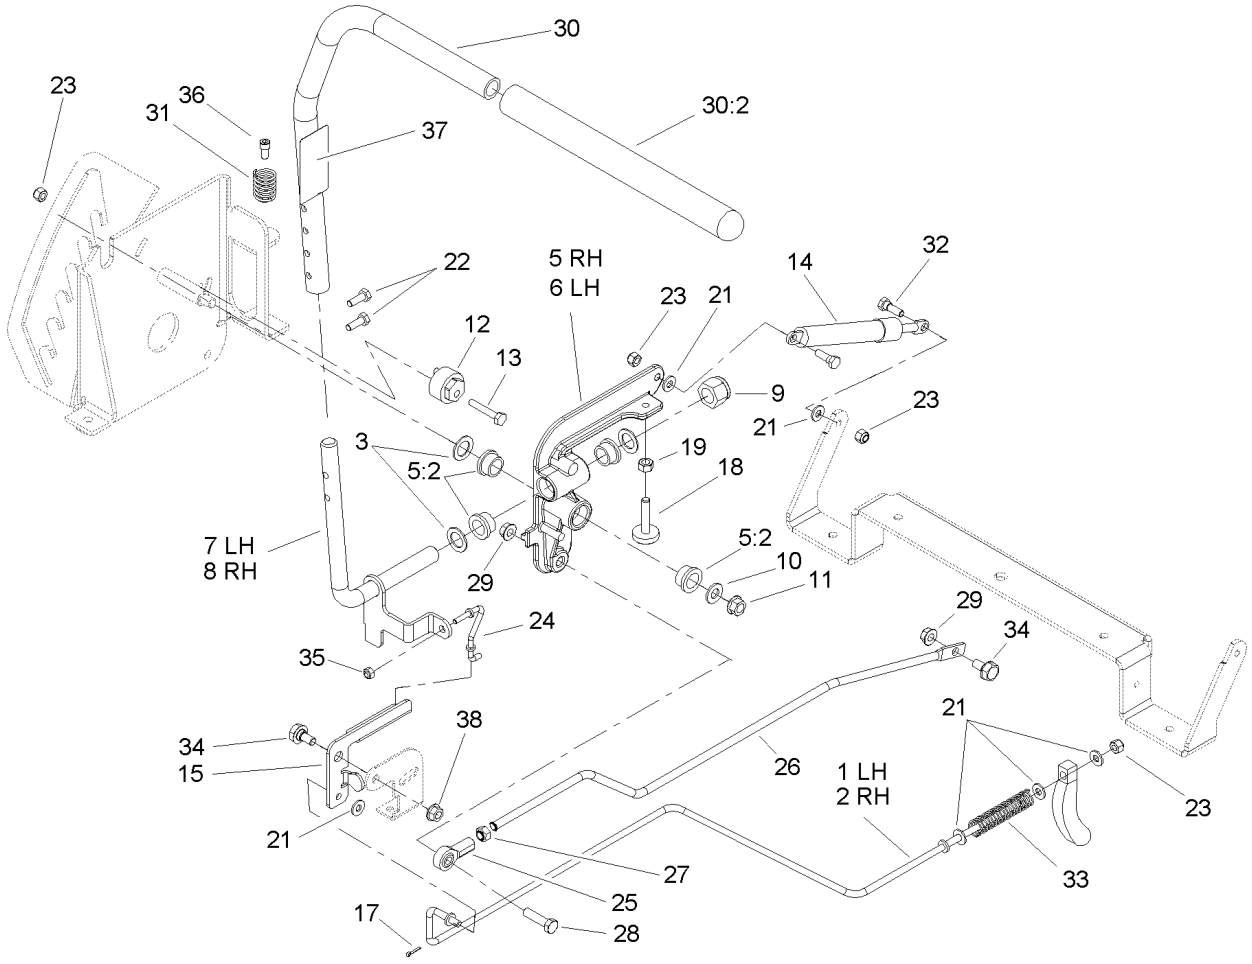

Control Assembly

Ref	Part No.	Qty.	Description
1	105-7045	1	Rod-Brake, LH
❶2	105-7044	1	Rod-Brake, RH
3	105-3481	6	Washer-Thrust
5	106-8671	1	RH Actuator Arm W/Bushing ASM
5:2	105-3455	4	Bushing
❶6	106-8672	1	LH Actuator Arm W/Bushing ASM
❶6:2	105-3455	4	Bushing
7	105-3488	1	LH Pivot Shaft ASM
❶8	105-3487	1	RH Pivot Shaft ASM
9	3296-53	2	Nut-Lock, NI
10	3256-24	2	Washer-Flat
11	3296-59	2	Nut-Lock, NI
12	105-3485	2	Bushing-Eccentric
13	321-9	2	Screw-HH
14	103-2913	2	Damper-Control, Motion
15	106-2181	2	Bellcrank
17	3272-5	2	Pin-Cotter
18	105-3486	2	Stop-Adjustment
19	3217-6	2	Nut-Hex
21	3256-22	12	Washer-Flat
22	321-4	4	Screw-HH
23	3296-42	8	Nut-Lock, NI
24	106-2179	2	Link-Brake
25	1-543017	2	Balljoint-RH


Ref	Part No.	Qty.	Description
26	105-7048	2	Rod-Hydro
27	3219-2	2	Nut-Hex
28	322-6	2	Screw-HH
29	32128-20	4	Nut-HF
30	106-2242	2	Handle ASM
30:2	1-633257	1	Grip-Control, Motion
31	105-3469	2	Spring-Compression
32	106-2214	4	Bolt-Shoulder
33	105-3465	2	Spring-Compression
34	37-8771	4	Bolt-Shoulder
35	3296-2	2	Nut-Lock
36	3274-52	2	Screw-HSH
37	106-8742	2	Decal
38	32128-25	2	Nut-HF

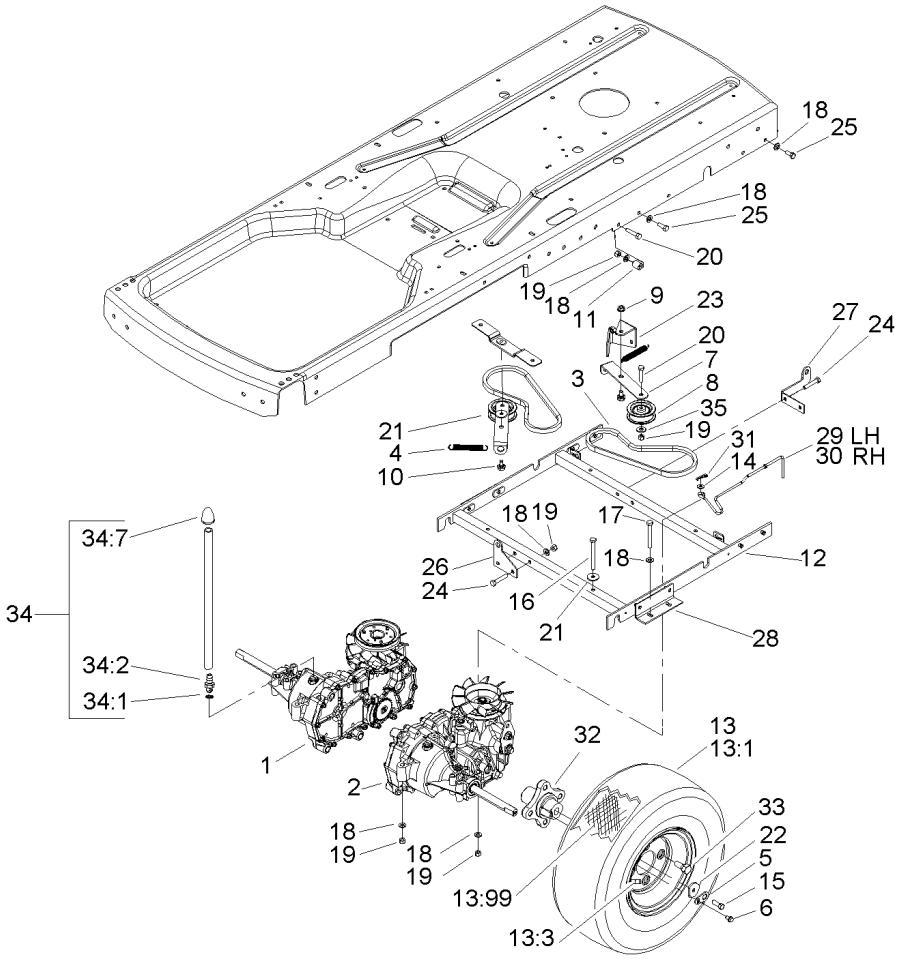

Hydro and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	107-2466	1	RH Hydrostat ASM
2	107-2465	1	LH Hydrostat ASM
3	106-2174	2	V-Belt
4	95-3805	2	Spring
5	105-3438	2	Tab-Locking
6	3234-13	2	Screw-HHF
7	105-7047	2	Arm-Idler
8	106-2176	2	Pulley-Idler
9	32128-25	1	Nut-HF
10	37-8770	2	Bolt-Shoulder
11	105-1941	2	Spacer
12	107-2462-03	1	Hydro Mount ASM
13	106-7004	2	Wheel And Tire ASM
13:1	105-3468	1	Tire
13:3	232-27	1	Stem-Valve
13:99	107-2491	1	Tube-Tire
14	3256-1	2	Washer-Flat
15	3210-5	2	Screw-HH
16	322-20	4	Screw-HH
17	322-13	4	Screw-HH
18	3256-23	24	Washer-Flat
19	3296-29	16	Nut-Lock, NI
20	322-7	4	Screw-HH
21	5-4460	5	Washer-Pivot


Ref	Part No.	Qty.	Description
22	106-7001	2	Washer-Wheel
23	107-1734	1	Stop-Clutch
24	322-9	4	Screw-HH
25	322-4	8	Screw-HH
26	105-7049	1	Bracket-Spring
27	105-7046	1	Bracket-Spring
28	105-7039-03	2	Support-Hydro
29	107-2463	1	Arm-Bypass, LH
30	107-2464	1	Arm-Bypass, RH
31	1-806003	2	Pin-Hair
32	106-6987-03	2	Hub-Machined
33	71-4450	8	Bolt-Lug
34	106-7002	2	Vent Hose ASM
34:1	93-3816	1	O-Ring
34:2	93-3814	1	Fitting-Hose
34:7	107-1701	1	Cap Vent ASM
35	3256-3	2	Washer-Flat

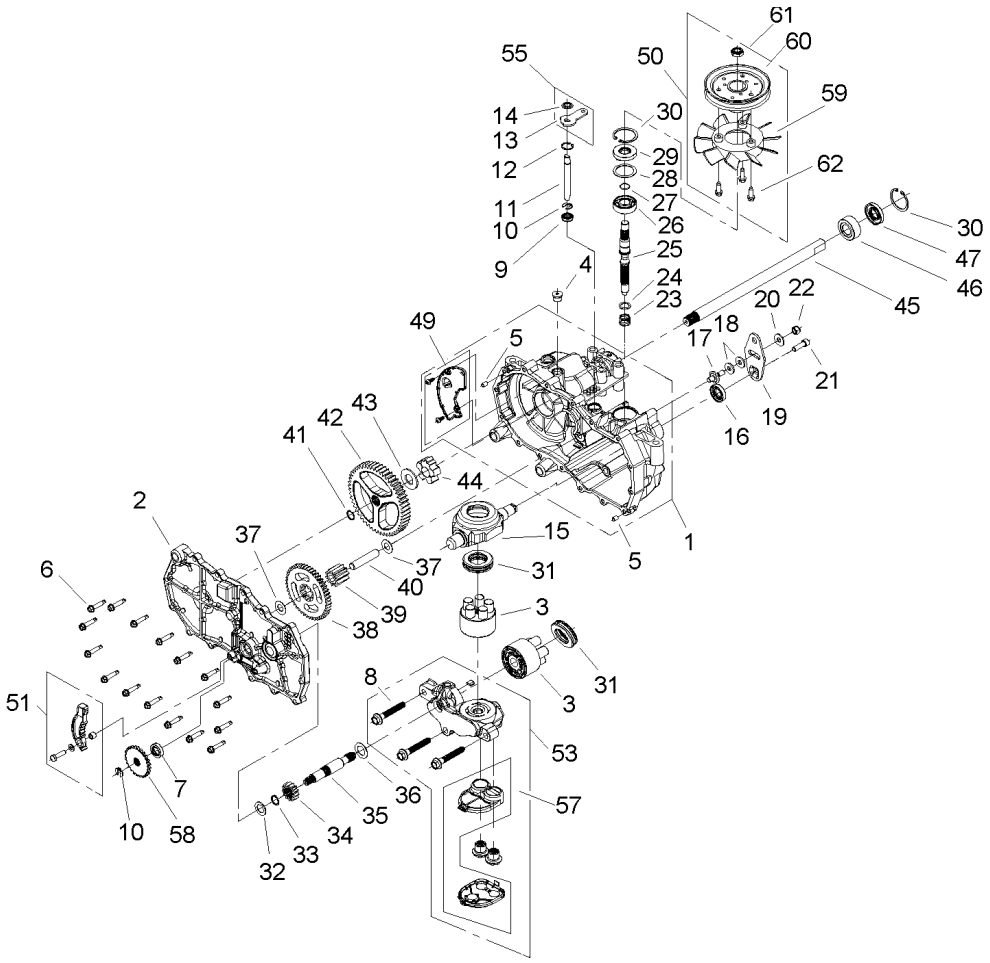

RH Hydrostat Assembly Part No. 107-2466


Ref	Part No.	Qty.	Description
1	106-8674	1	LH Main Housing ASM
2	106-8675	1	LH Side ASM
3	104-2106	2	Cylinder Block ASM
4	104-2189	1	Plug-Thread, Straight
5	9004800-2506	2	Pin-Hydrogear
6	104-5305	16	Screw-HHF
7	104-5347	1	Seal-Oil
8	94-6926	3	Bolt
9	106-8676	1	Seal-Lip
10	106-8677	2	Ring-Retaining, EXT
11	106-8678	1	Rod-Bypass
12	106-8679	1	Ring-Retaining, Int
13	107-2490	1	Arm-Bypass
14	106-8681	1	Ring-Retaining, EXT
15	104-5304	1	Swashplate-Trunnion
16	104-5313	1	Seal-Lip
17	104-2116	1	Stud
18	105-1873	2	Puck-Friction
19	106-8747	1	Arm-Control
20	5-4460	1	Washer-Pivot
21	107-2488	1	Screw
22	105-1872	1	Nut
23	94-1936	1	Spring-Block

Ref	Part No.	Qty.	Description
24	94-1937	1	Washer-Block, Thrust
25	104-5306	1	Shaft-Input
26	104-5311	1	Bearing-Ball
27	104-5307	1	Ring-Retaining
28	104-5308	1	Spacer
29	104-5310	1	Seal-Lip
30	104-5309	2	Ring-Retaining
31	94-6922	2	Bearing-Thrust
32	104-5339	1	Washer-Flat
33	104-5340	1	Ring-Retaining
34	104-5316	1	Gear-Pinnion, 13T
35	106-8683	1	Shaft-Motor
36	104-5360	1	Washer-Shaft, Motor
37	94-1933	2	Washer
38	104-5317	1	Gear
39	104-5318	1	Gear-Jackshaft, 10T
40	104-5329	1	Pin-Jackshaft
41	104-5328	1	Ring-Retaining, Spiral
42	106-8684	1	Gear-Bull, 52T
43	94-1943	1	Washer
44	104-5320	1	Bearing-Sleeve
45	106-8685	1	Axle
46	104-5321	1	Bearing-Sleeve, Outboard
47	104-5322	1	Seal-Lip

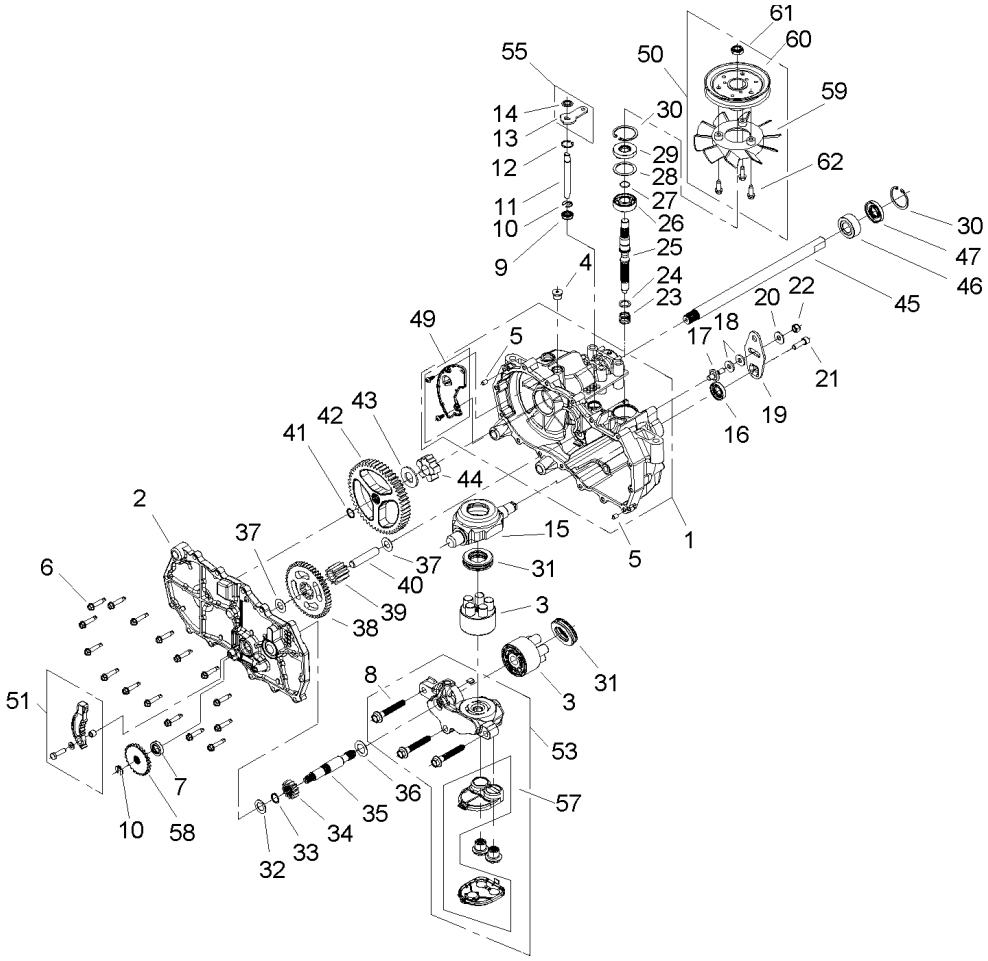

RH Hydrostat Assembly Part No. 107-2466 (continued)


Ref	Part No.	Qty.	Description
❶48	106-8686	1	Seal Kit
49	106-8687	1	LH Expansion Plate Kit
50	105-1928	1	Fan Pulley Kit
51	106-8688	1	Brake Arm Kit
53	106-8690	1	LH Center Section Filter Kit
❶54	104-2147	1	Sealant
55	107-2489	1	Bypass Arm Kit
57	106-8693	1	Filter Kit
58	106-8694	1	Disc-Brake, Cog
59	105-1927	1	Fan
60	105-1896	1	Pulley
61	105-1875	1	Nut-Lock
62	104-2120	3	Screw

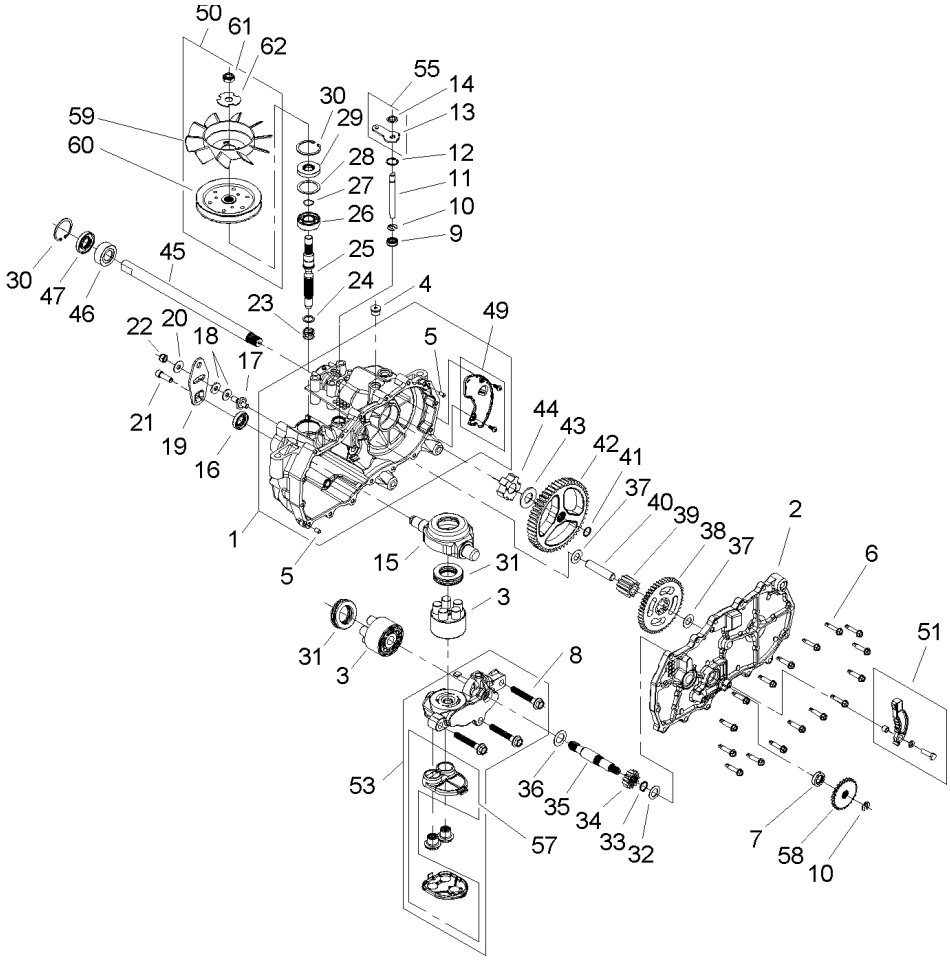

LH Hydrostat Assembly Part No. 107-2465


Ref	Part No.	Qty.	Description
1	106-8695	1	RH Main Housing ASM
2	106-8696	1	RH Side ASM
3	104-2106	2	Cylinder Block ASM
4	104-2189	1	Plug-Thread, Straight
5	9004800-2506	2	Pin-Hydrogear
6	104-5305	16	Screw-HHF
7	104-5347	1	Seal-Oil
8	94-6926	3	Bolt
9	106-8676	1	Seal-Lip
10	106-8677	2	Ring-Retaining, EXT
11	106-8678	1	Rod-Bypass
12	106-8679	1	Ring-Retaining, Int
13	107-2490	1	Arm-Bypass
14	106-8681	1	Ring-Retaining, EXT
15	104-5304	1	Swashplate-Trunnion
16	104-5313	1	Seal-Lip
17	104-2116	1	Stud
18	105-1873	2	Puck-Friction
19	106-8747	1	Arm-Control
20	5-4460	1	Washer-Pivot
21	107-2488	1	Screw
22	105-1872	1	Nut
23	94-1936	1	Spring-Block

Ref	Part No.	Qty.	Description
24	94-1937	1	Washer-Block, Thrust
25	104-5306	1	Shaft-Input
26	104-5311	1	Bearing-Ball
27	104-5307	1	Ring-Retaining
28	104-5308	1	Spacer
29	104-5310	1	Seal-Lip
30	104-5309	2	Ring-Retaining
31	94-6922	2	Bearing-Thrust
32	104-5339	1	Washer-Flat
33	104-5340	1	Ring-Retaining
34	104-5316	1	Gear-Pinnion, 13T
35	106-8683	1	Shaft-Motor
36	104-5360	1	Washer-Shaft, Motor
37	94-1933	2	Washer
38	104-5317	1	Gear
39	104-5318	1	Gear-Jackshaft, 10T
40	104-5329	1	Pin-Jackshaft
41	104-5328	1	Ring-Retaining, Spiral
42	106-8684	1	Gear-Bull, 52T
43	94-1943	1	Washer
44	104-5320	1	Bearing-Sleeve
45	106-8685	1	Axle
46	104-5321	1	Bearing-Sleeve, Outboard
47	104-5322	1	Seal-Lip

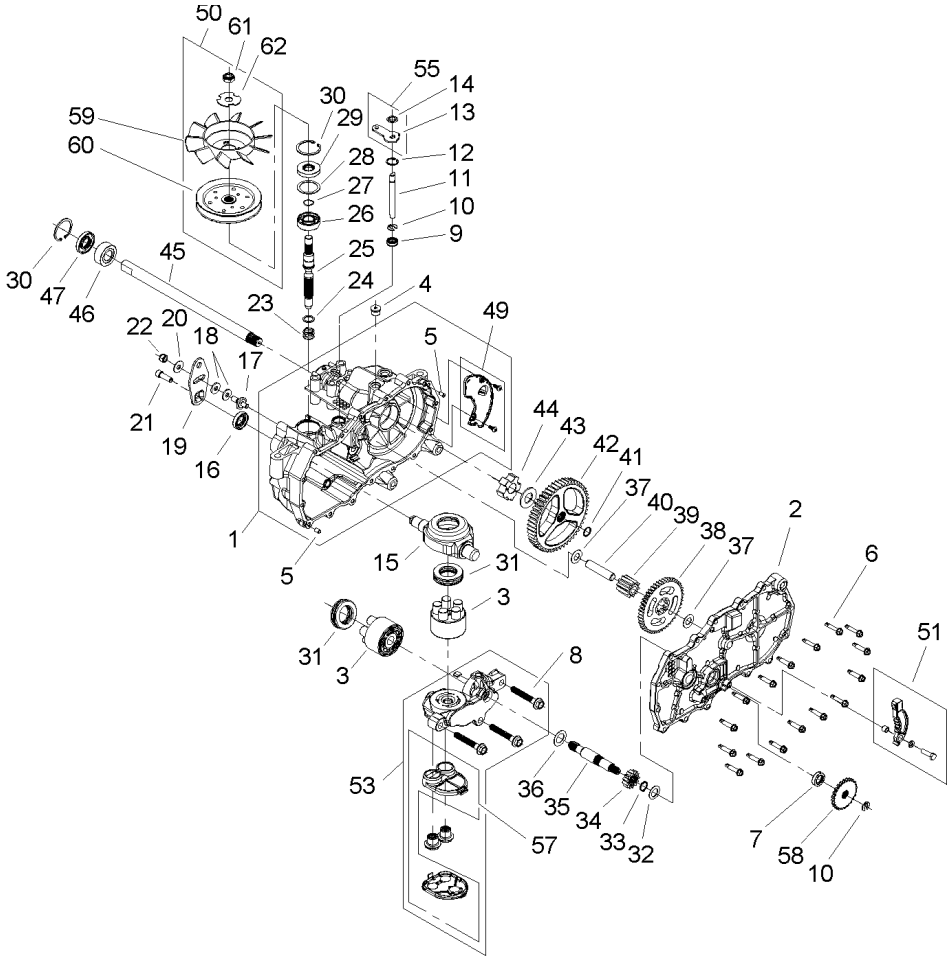

LH Hydrostat Assembly Part No. 107-2465 (continued)


Ref	Part No.	Qty.	Description
❶48	106-8686	1	Seal Kit
49	106-8697	1	RH Expansion Plate Kit
50	106-8698	1	Fan Pulley Kit
51	106-8688	1	Brake Arm Kit
53	106-8699	1	RH Center Section Filter Kit
❶54	104-2147	1	Sealant
55	107-2489	1	Bypass Arm Kit
57	106-8693	1	Filter Kit
58	106-8694	1	Disc-Brake, Cog
59	110-8566	1	Fan-6 Inch, 10 Blade
60	104-1754	1	Pulley
61	105-1875	1	Nut-Lock
62	107-9122	3	Washer-Slotted

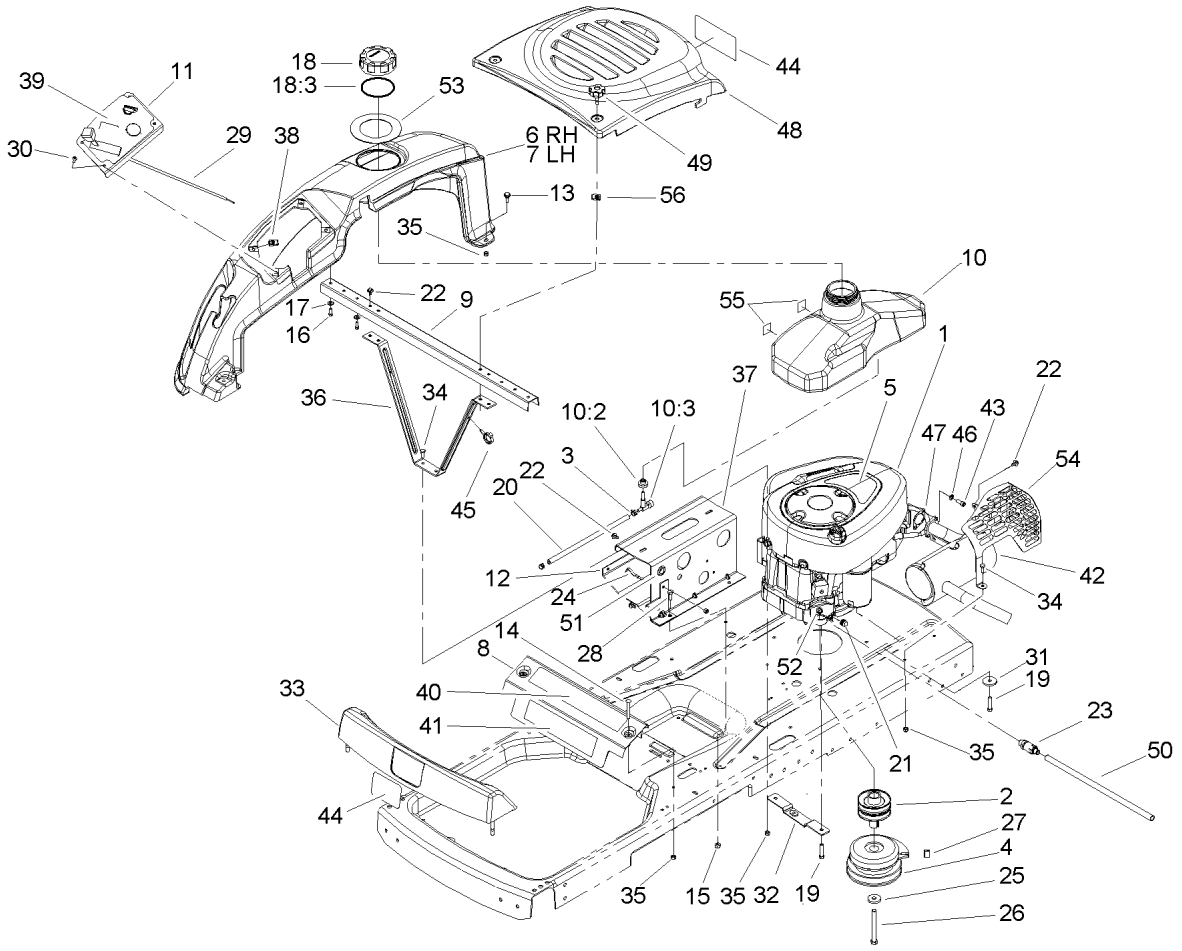

Engine Assembly


Ref	Part No.	Qty.	Description
❷1		1	Engine-Briggs And Stratton, 286H77-0165-E1
2	105-3472	1	Pulley-Engine
3	2412-98	2	Clamp
4	104-3334	1	Clutch-Electric
5	106-6409	1	Decal-Engine
6	106-2161	1	Cover-Side, RH
❶7	106-2162	1	Cover-Side, LH
8	106-2164-03	1	Bracket-Support, Front
9	106-2165-03	1	Bracket-Support, Rear
10	105-3464	1	Gas Tank ASM
10:2	46-6560	1	Bushing
10:3	104048	1	Valve-Fuel
11	106-2167-03	1	Panel-Control
12	105-3453-03	1	Plate-Support
13	11-9030	2	Screw-Shoulder
14	3229-7	2	Screw-CARR
15	3296-29	2	Nut-Lock, NI
16	46-8090	4	Screw-Plastite
17	3256-22	4	Washer-Flat
18	88-3980	1	Gas Cap ASM
18:3	88-4010	1	Gasket-Cap, Gas
19	322-7	4	Screw-HH
20	106-8720	1	Hose-Fuel

Ref	Part No.	Qty.	Description
21	88-4490	1	Reducer-Throttle, Rpm
22	46-8560	8	Screw-HHF
23	92-6877	1	Valve-Drain, Oil
24	609830	2	Spring
25	112843	1	Washer
26	3212-16	1	Screw-HH
27	98-5023	1	Bumper
28	322-4	2	Screw-HH
29	104-3626	1	Cable-Throttle
30	3258-166	4	Screw-PRH
31	62-7190	2	Spacer-Steel
32	106-2156	1	Plate-Mount, Idler
33	105-6965	1	Footrest ASM
34	321-4	3	Screw-HH
35	3296-42	7	Nut-Lock, NI
36	106-6994-03	1	Brace ASM
37	107-2485-03	1	Plate-Tank
38	107069	4	Clip
39	106-2224	1	Decal-Control
40	107-2514	1	Decal-Danger
41	106-6992	1	Decal
42	106-7007	1	Muffler
43	3274-10	2	Screw-HSH
44	105-6971	2	Decal

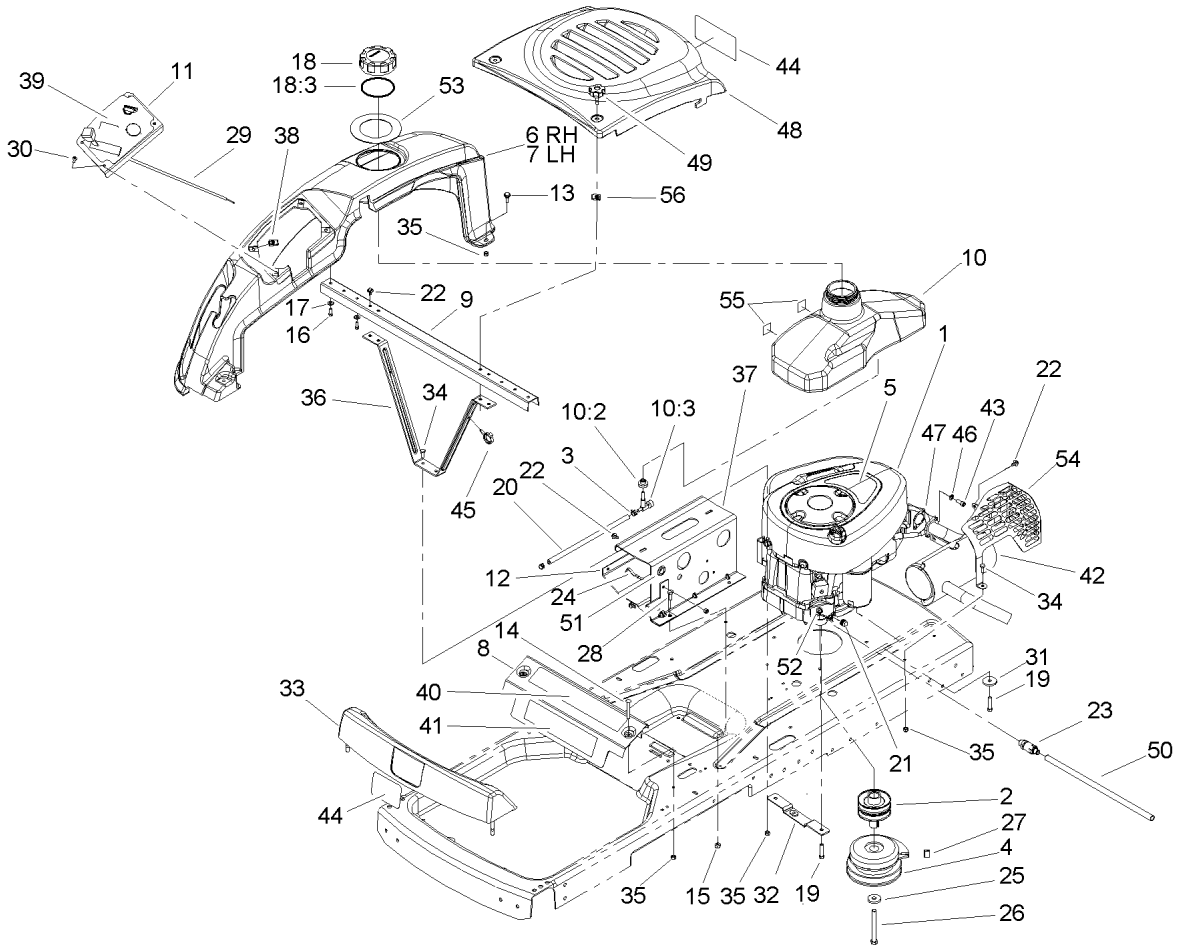

Engine Assembly (continued)


Ref	Part No.	Qty.	Description
45	105-1853	2	Clamp-Hose
46	3253-4	2	Washer-Lock
47	88-4410	1	Gasket-Muffler
48	106-2163	1	Cover-Hood
49	106-7017	2	Knob
50	106-7022	1	Tube-Drain, Oil
51	237-124	1	Grommet
52	32128-25	4	Nut-HF
53	106-7042	1	Seal-Rubber
54	106-7028-03	1	Guard-Muffler
55	104-2488	2	Foam-Switch, Seat
56	106-8737	2	Nut-Retainer

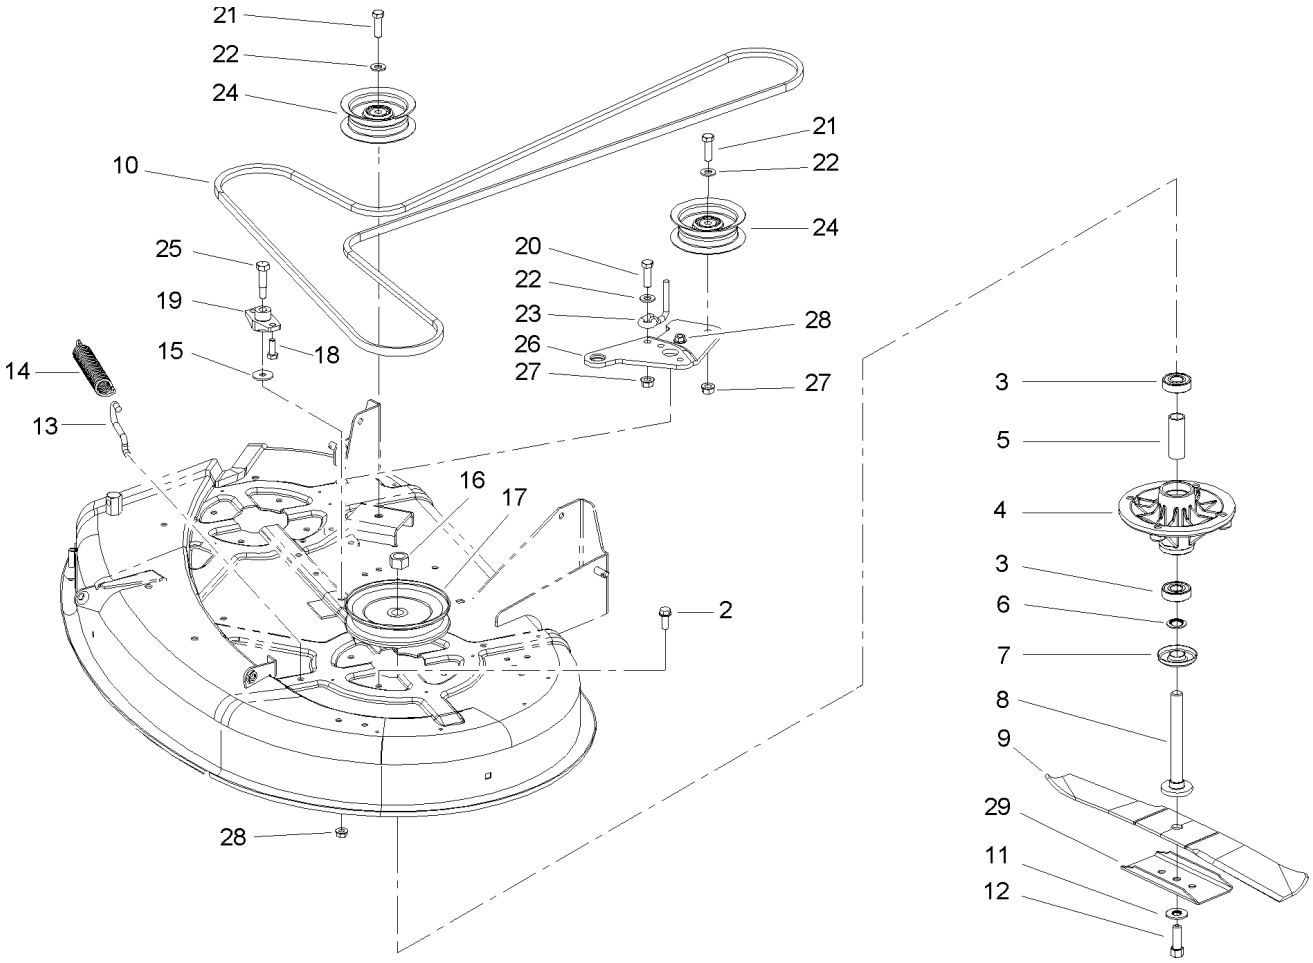

Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description
2	32144-41	8	Screw-Taptite
3	100-1048	4	Bearing-Ball
4	88-4510	2	Housing-Spindle
5	62-3661	2	Spacer-Bearing
6	80-4380	2	Spacer
7	80-4360	2	Shield-Bearing
8	80-4341	2	Shaft
9	106-2247-03	2	Blade
10	106-2173	1	Belt-V
11	3290-465	2	Washer-Belleville
12	26-0671	2	Screw-Blade
13	88-5970	1	Hook-Return, Spring
14	106-2177	1	Spring-Extension
15	5-4460	1	Washer-Pivot
16	3219-6	2	Nut-Hex
17	88-5330	2	Pully-Deck
18	322-4	2	Screw-HH
19	88-4980	1	Bushing-Arm, Idler
20	323-7	1	Screw-HH
21	323-9	2	Screw-HH
22	3256-24	3	Washer-Flat
23	107-7307	1	Guide-Idler, Belt
24	106-2175	2	Pulley-Idler, Flat
25	7-0030	1	Bolt-Shoulder


Ref	Part No.	Qty.	Description
26	107-2467-03	1	Arm-Idler
27	32128-21	2	Nut-HF
28	32128-25	3	Nut-HF
29	106-2248-03	2	Stiffener-Blade

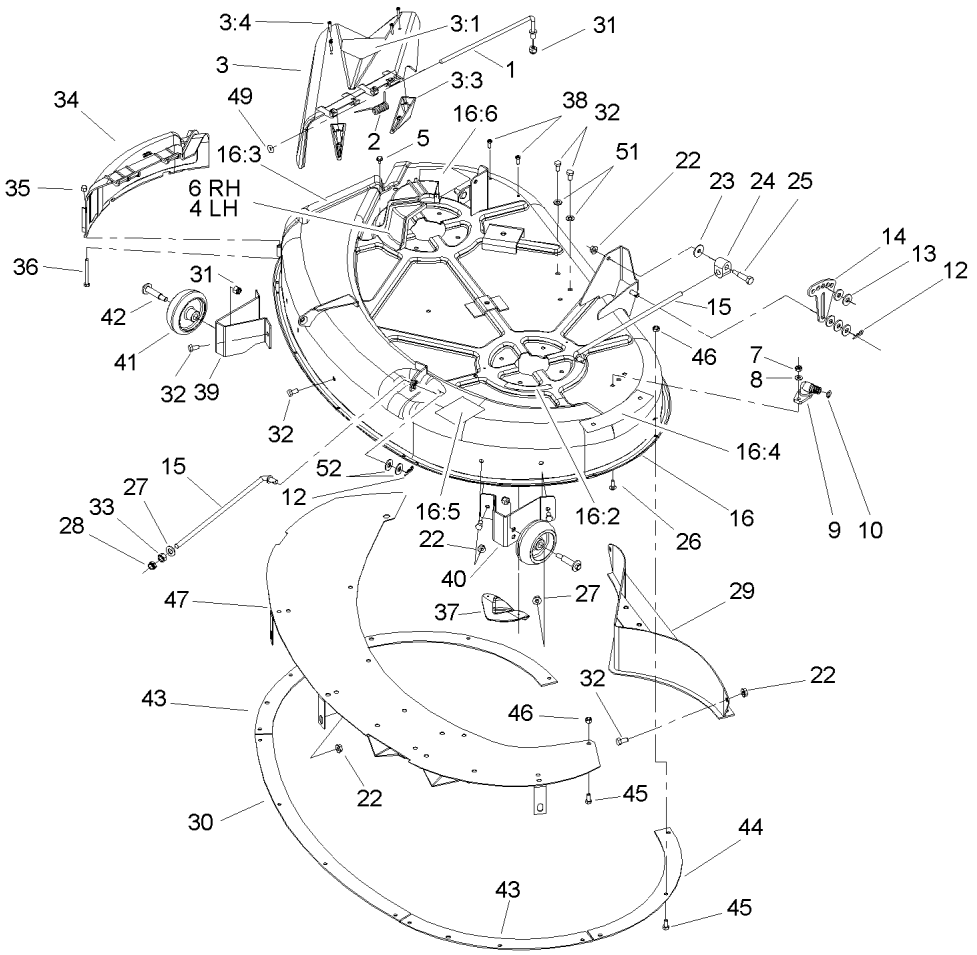

42in Deck Assembly


Ref	Part No.	Qty.	Description
1	95-1661	1	Rod-Pivot
2	57-6950	1	Spring
3	93-7695	1	Deflector ASM
3:1	93-7010	1	Decal-Danger
3:3	93-7696	2	Kicker
3:4	93-0231	4	Screw-PPH
❶4	88-4030	1	Guide-Belt, Deck (LH)
5	32104-76	5	Screw
6	88-4020	1	Guide-Belt, Deck (RH)
7	3296-16	2	Nut-Lock, NI
8	3256-1	2	Washer-Flat
9	95-2747	1	Fitting-Washout
10	46-6290	1	O-Ring
12	9335054	8	Pin-Hair
13	80-6990	10	Washer-Hardened
14	88-5570-03	2	Link-Adjusting, HOC
15	105-3437	4	Rod-Hanger
16	107-7397	1	42In Deck ASM
16:2	68-3660	1	Decal-Danger, Shield
16:3	68-3650	1	Decal-Danger, Deflector
16:4	79-3140	1	Decal-Danger
16:5	105-7015	1	Decal-Routing, Belt
16:6	93-1122	1	Decal-Danger
22	32128-25	9	Nut-HF

Ref	Part No.	Qty.	Description
23	5-4460	2	Washer-Pivot
24	88-4230	2	Trunnion-HOC
25	7-0030	2	Bolt-Shoulder
26	3229-1	2	Screw-CARR
27	3256-25	2	Washer-Flat
28	3296-38	2	Nut-Lock, NI
29	106-6983-03	1	Rear Baffle ASM
30	106-6953-03	1	Ring-Blow Out
31	3296-39	3	Nut-Lock, NI
32	322-2	9	Screw-HH
33	3219-4	2	Nut-Hex
34	107-2527	1	Cover-Discharge, Deck
35	32111-7	2	Nut-Cap
36	321-14	2	Screw-HH
37	76-2160	3	Plate-Kicker
38	32144-111	6	Screw-PPH
39	106-8701-01	1	Bracket - Gage Wheel, Front RH
40	106-8702-01	1	Bracket - Gage Wheel, Front LH
41	701756	2	Wheel-Gage
42	56-6591	2	Bolt-Wheel
43	106-6952-03	2	Ring-Blow Out, Side
44	106-6954-03	2	Ring-Blow Out, Side
45	321-3	22	Screw-HH
46	3296-42	22	Nut-Lock, NI

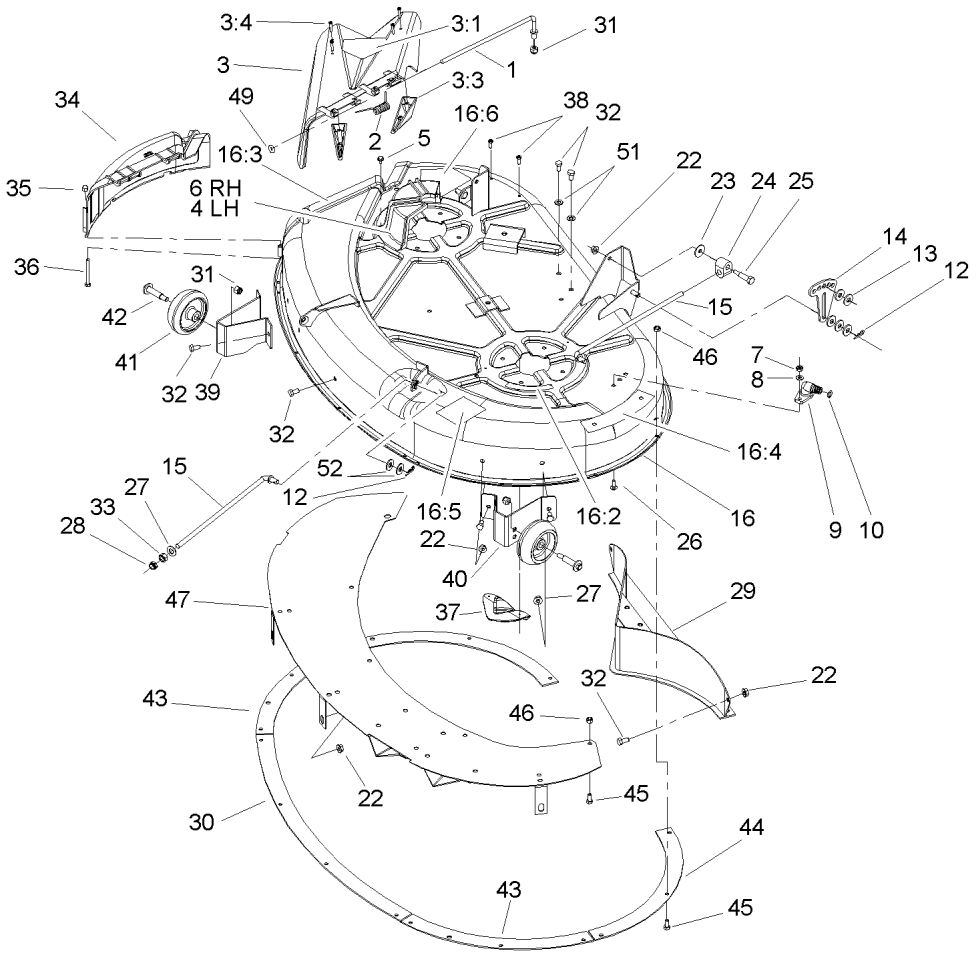


42in Deck Assembly (continued)

Ref	Part No.	Qty.	Description
47	107-7316-03	1	Baffle Upper ASM
49	106-8745	1	O-Ring
51	3256-23	2	Washer-Flat
52	3256-4	8	Washer-Flat

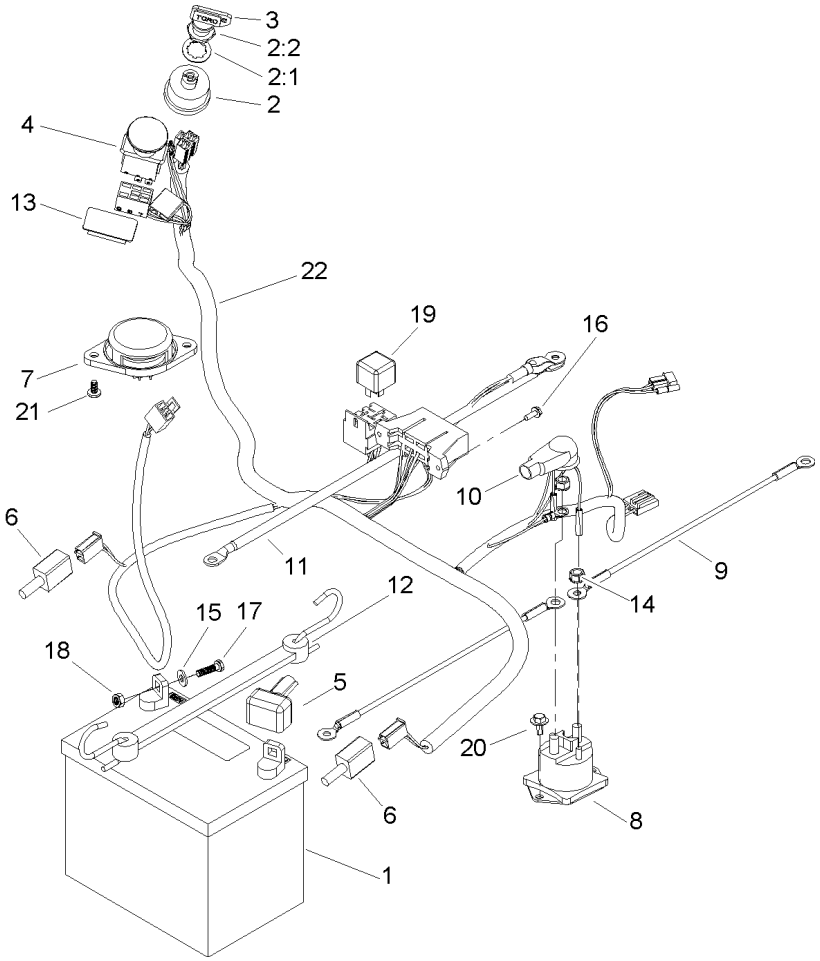

Electrical System Assembly


Ref	Part No.	Qty.	Description
1	104-2491	1	Battery-Dry
2	88-9830	1	Key Switch ASM
2:1	3254-5	1	Washer-Tooth
2:2	218-461	1	Nut-HH
3	63-8360	1	Key-Ignition
4	95-7489	1	Switch-PTO
5	28-8080	1	Boot-Terminal
6	106-2216	2	Switch
7	105-6959	1	Switch-Seat
8	106-8245	1	Solenoid
9	56-7670	2	Wire ASM
10	93-3190	1	Boot-Insulator, Terminal
11	95-7654	1	Cable
12	104-2466	1	Holddown-Battery
13	99-7420	1	Plug-Hole
14	32149-2	2	Nut-Keps
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	321-4	2	Screw-HH
18	32128-33	3	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF
21	105-6968	2	Screw-Seat, Switch
22	107-2500	1	Harness-Wire, 9 Amp

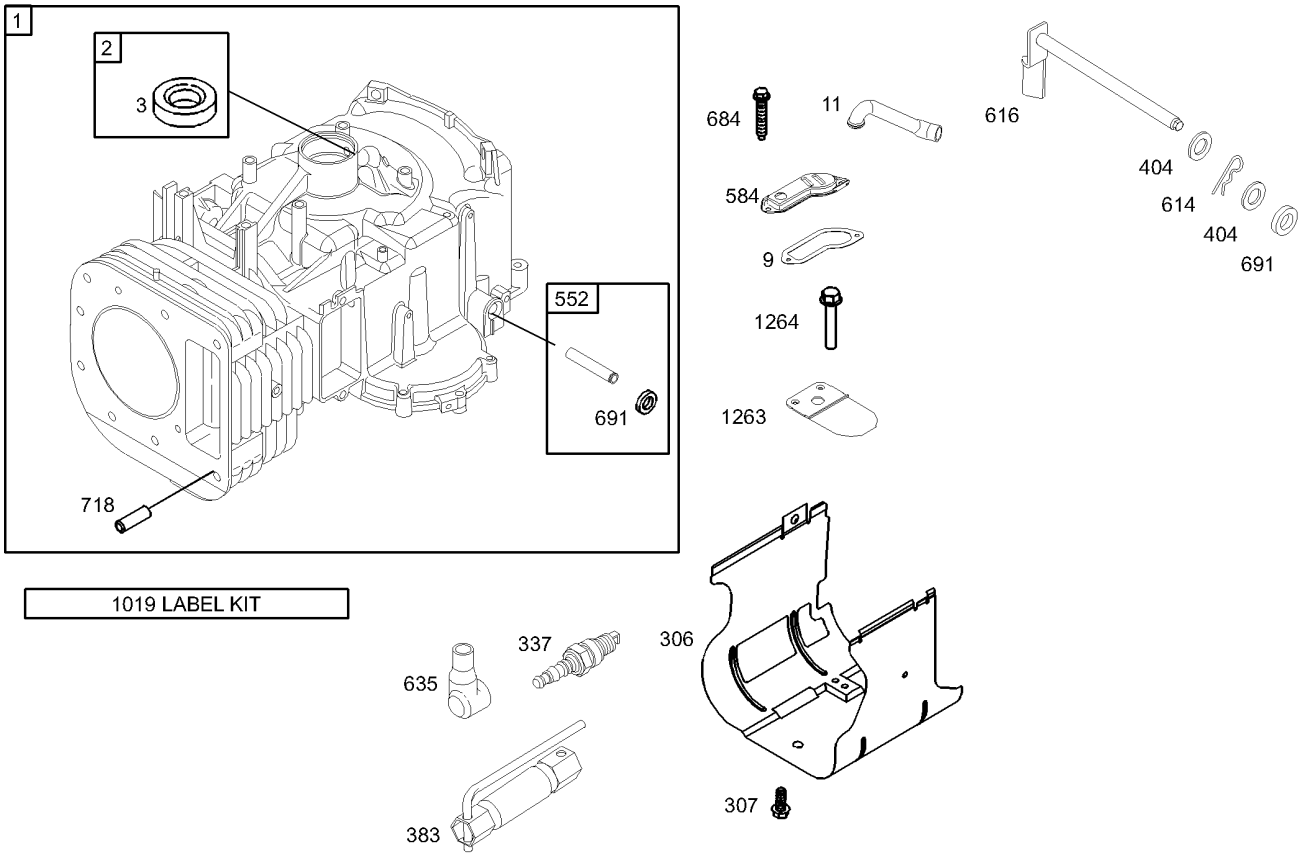

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 286H77-0165-E1


Ref	Part No.	Qty.	Description
❽1	697132	1	Cylinder ASM
❽2	399265	1	Bushing And Seal Kit
❸❽3	391086	1	Seal-Oil
❸❽9	697109	1	Gasket-Breather
❽11	697113	1	Tube-Breather
❶❽48	697762	1	Short Block ASM
❽306	697107	1	Shield-Cylinder
❽307	691003	1	Screw
❽337	691043	1	Spark Plug
❽383	89838	1	Wrench-Plug, Spark
❽404	691691	1	Washer
❽552	697144	1	Bushing-Crank, Governor
❽584	697112	1	Cover-Passage, Breather
❽614	691620	1	Pin-Cotter
❽616	692012	1	Crank-Governor
❽635	691909	1	Boot-Spark Plug
❽684	697157	1	Screw
❸❽691	692407	1	Seal-Shaft, Governor
❽718	690959	1	Pin-Locating
❽1019	697143	1	Label Kit
❽1263	697124	1	Reed-Breather
❽1264	697104	1	Screw

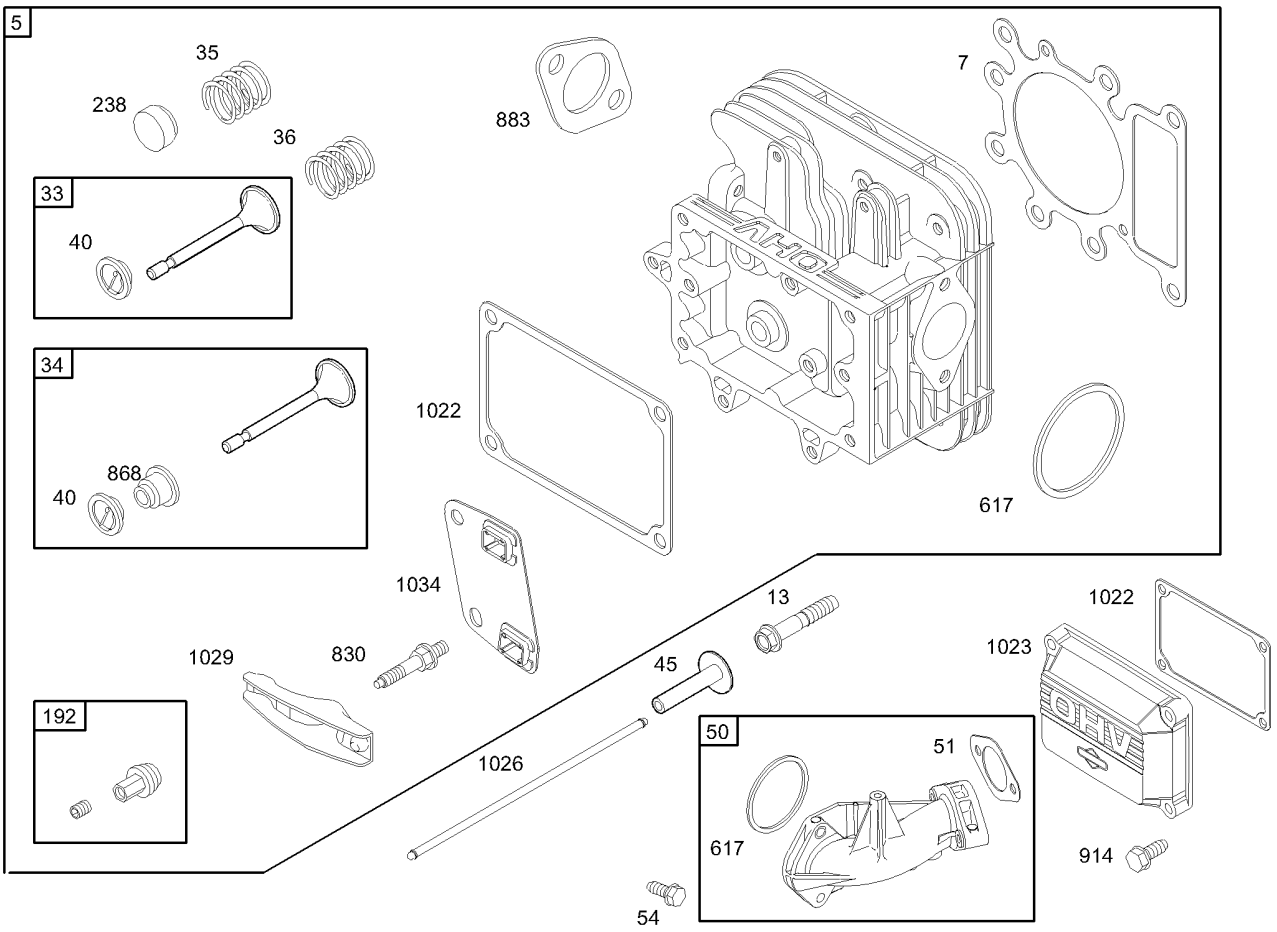

Cylinder Head Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❽5	698148	1	Head–Cylinder
❸❻7	273280	1	Gasket-Head, Cylinder
❽13	690360	1	Screw
❽33	695760	1	Valve-Exhaust
❽34	695761	1	Valve-Intake
❽35	691279	1	Spring-Valve
❽36	691279	1	Spring-Valve
❽40	691752	1	Retainer-Valve
❽45	690564	1	Tappet-Valve
❽50	690193	1	Manifold-Intake
❸❹51 ❺❻	692137	1	Gasket-Intake
❽54	691148	1	Screw
❽192	691986	1	Adjustor-Arm, Rocker
❽238	691843	1	Cap-Valve
❸❺617 ❽	692138	1	Seal-O Ring
❽830	691095	1	Stud-Arm, Rocker
❸❹868 ❽	690968	1	Seal-Valve
❽883	692236	1	Gasket-Exhaust
❽914	690960	1	Screw
❸❻1022	272475	1	Gasket-Cover, Rocker
❽1023	692492	1	Cover-Rocker


Ref	Part No.	Qty.	Description
❽1026	692003	1	Rod–Push
❽	692011	1	Rod–Push
❽1029	691751	1	Arm-Rocker
❽1034	690822	1	Guide-Rod, Push

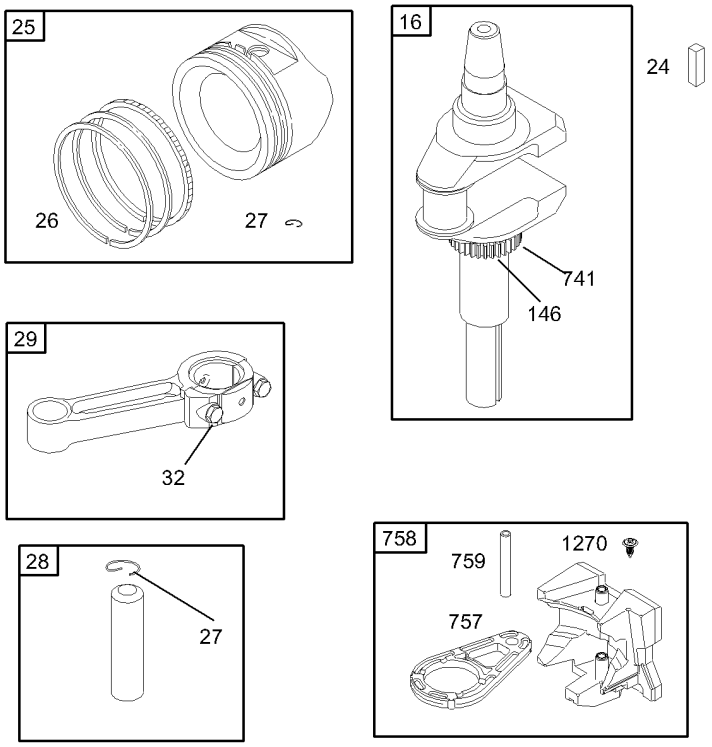


Assemblies include all parts shown in frames.


Crankshaft Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❽16	697127	1	Crankshaft
❽24	222698	1	Key
❽25	697114	1	Piston ASM (Standard)
❽	697116	1	Piston Assembly (.010In Oversize)
❽	697117	1	Piston ASM (.020In Oversize)
❽	697118	1	Piston Assembly (.030In Oversize)
❽26	697115	1	Ring Set (Standard)
❽	697119	1	Ring Set (.010" Oversize)
❽	697120	1	Ring Set (.020In Oversize)
❽	697121	1	Ring Set (.030" Oversize)
❽27	698469	1	Lock-Pin, Piston
❽28	697099	1	Pin-Piston (STD)
❽29	697126	1	Rod–Connecting (Standard)
❽	697263	1	Rod-Connecting (.020In Undersize)
❽32	692852	1	Screw
❽146	691639	1	Key-Timing
❽741	697128	1	Gear-Timing
❽757	697607	1	Link-Counterweight
❽758	697134	1	Counterweight
❽759	697392	1	Pin-Counterweight
❽1270	697156	1	Plug-Counterweight, Avs

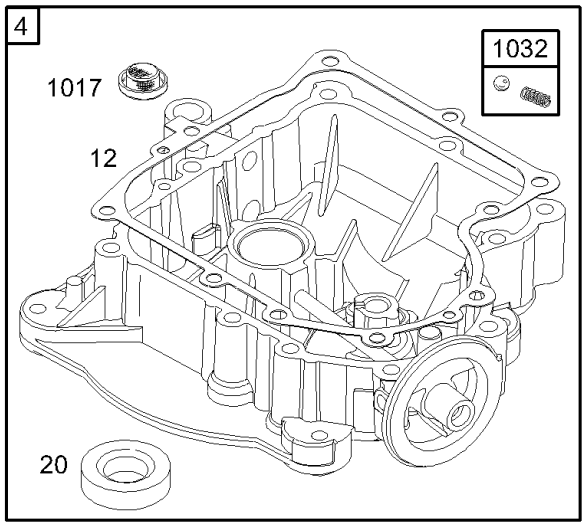

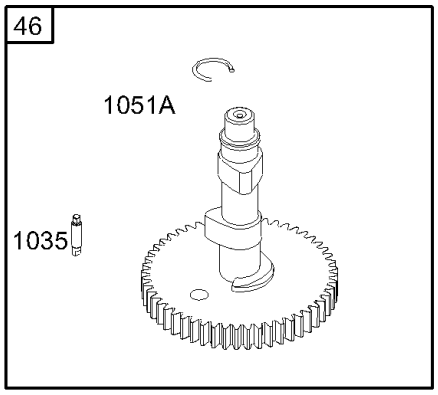



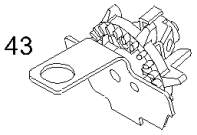




Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 286H77-0165-E1


Ref	Part No.	Qty.	Description
❽4	697188	1	Sump-Engine
❸❽12	697110	1	Gasket-Crankcase
❽15	690283	1	Plug-Oil
❸❽20	690947	1	Seal-Oil
❽22	692125	1	Screw
❽43	691968	1	Slinger-Governor,Oil
❽46	698577	1	Camshaft
❽1017	690770	1	Screen-Pump, Oil
❽1032	491710	1	Ball–Pump, Oil
❽1035	693784	1	Shaft-Pump, Oil
❽1051A	698802	1	Ring-Retaining

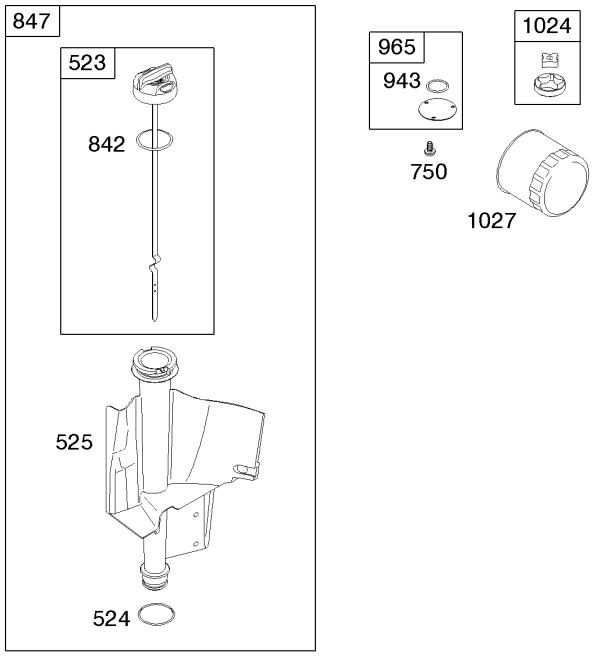

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❽523	697086	1	Dipstick
❸❽524	691032	1	Seal, O-Ring
❽525	697184	1	Tube-Dipstick
❽750	691033	1	Screw
❸❽842	691031	1	Seal-O Ring
❽847	697611	1	Dipstick And Tube ASM
❸❽943	690589	1	Seal, O-Ring
❽965	499613	1	Cover-Pump, Oil
❽1024	499054	1	Pump-Oil
❽1027	492932	1	Filter-Oil

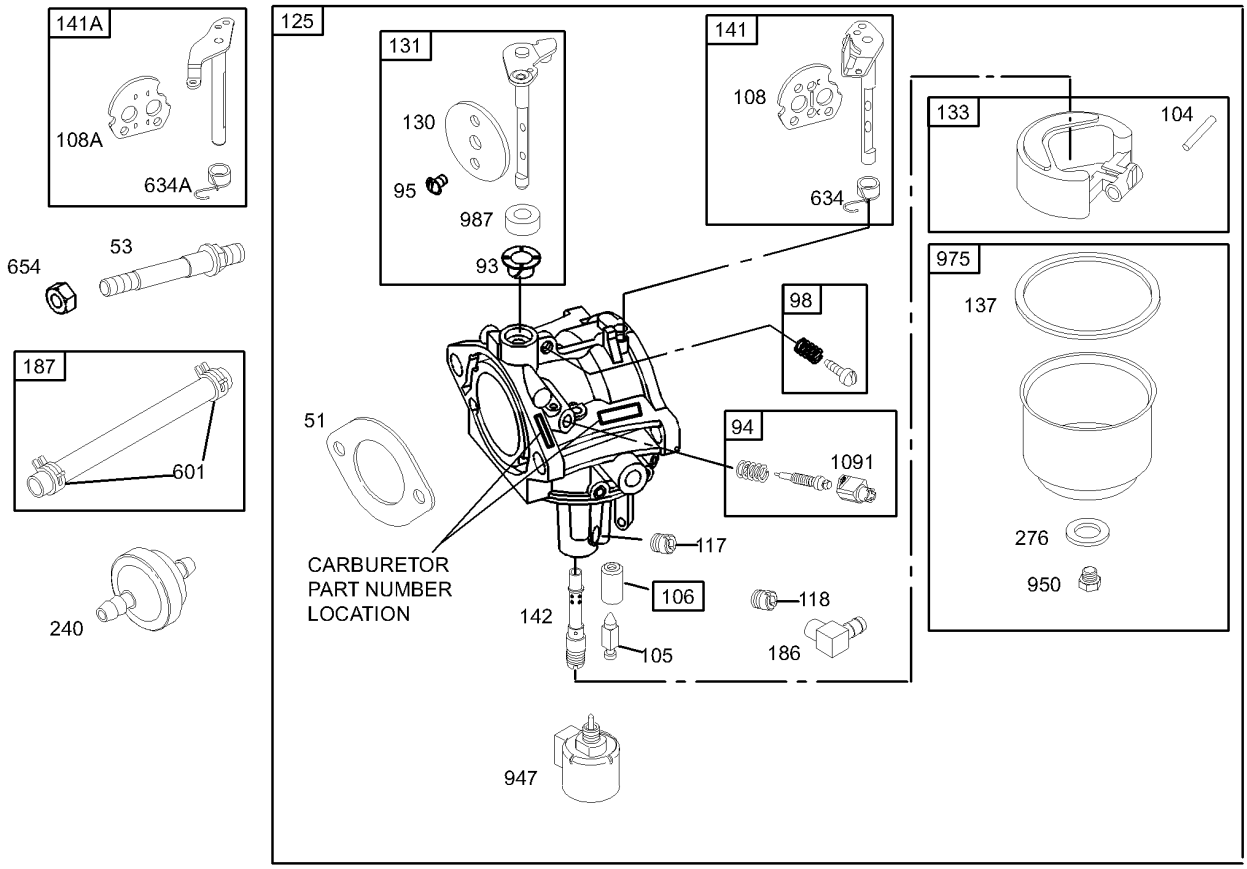


Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❻	692137	1	Gasket-Intake
❽53	690227	1	Stud
❺❽93	690602	1	Bushing-Shaft, Throttle
❽94	498030	1	Idle Mixture Kit
❺❽95	691636	1	Screw
❽98	495800	1	Idle Speed Kit
❺❽104	690525	1	Pin-Hinge, Carburetor Float
❺❽105	231855	1	Valve-Needle, Float
❺❽106	690577	1	Seat-Inlet
❽108	690464	1	Valve–Choke
❽108A	692344	1	Valve-Choke
❺❽117	694352	1	Jet-Main (STD)
❽118	697228	1	Jet-Main (High Altitude)
❽125	697190	1	Carburetor
❽130	691750	1	Valve-Throttle
❽131	494379	1	Throttle Shaft Kit
❽133	494381	1	Float-Carburetor
❺❻137 ❽	281165	1	Gasket-Bowl, Float
❽141	495097	1	Choke Shaft Kit
❽141A	495931	1	Choke Shaft Kit
❺❽142	697140	1	Nozzle-Carburetor
❽186	692317	1	Connector-Hose


Ref	Part No.	Qty.	Description
❽187	697098	1	Line-Fuel
❽240	394358	1	Filter-Fuel
❺❻276 ❽	692255	1	Washer-Sealing
❽601	95162	1	Clamp-Hose
❺❽634	690801	1	Spring / Seal ASM
❺❽634A	690802	1	Spring And Seal ASM
❽654	690958	1	Nut
❽947	694393	1	Solenoid-Fuel
❽950	691657	1	Screw
❽975	495933	1	Bowl-Float
❺❽987	691326	1	Seal-Shaft, Throttle
❽1091	691333	1	Cap-Limiter

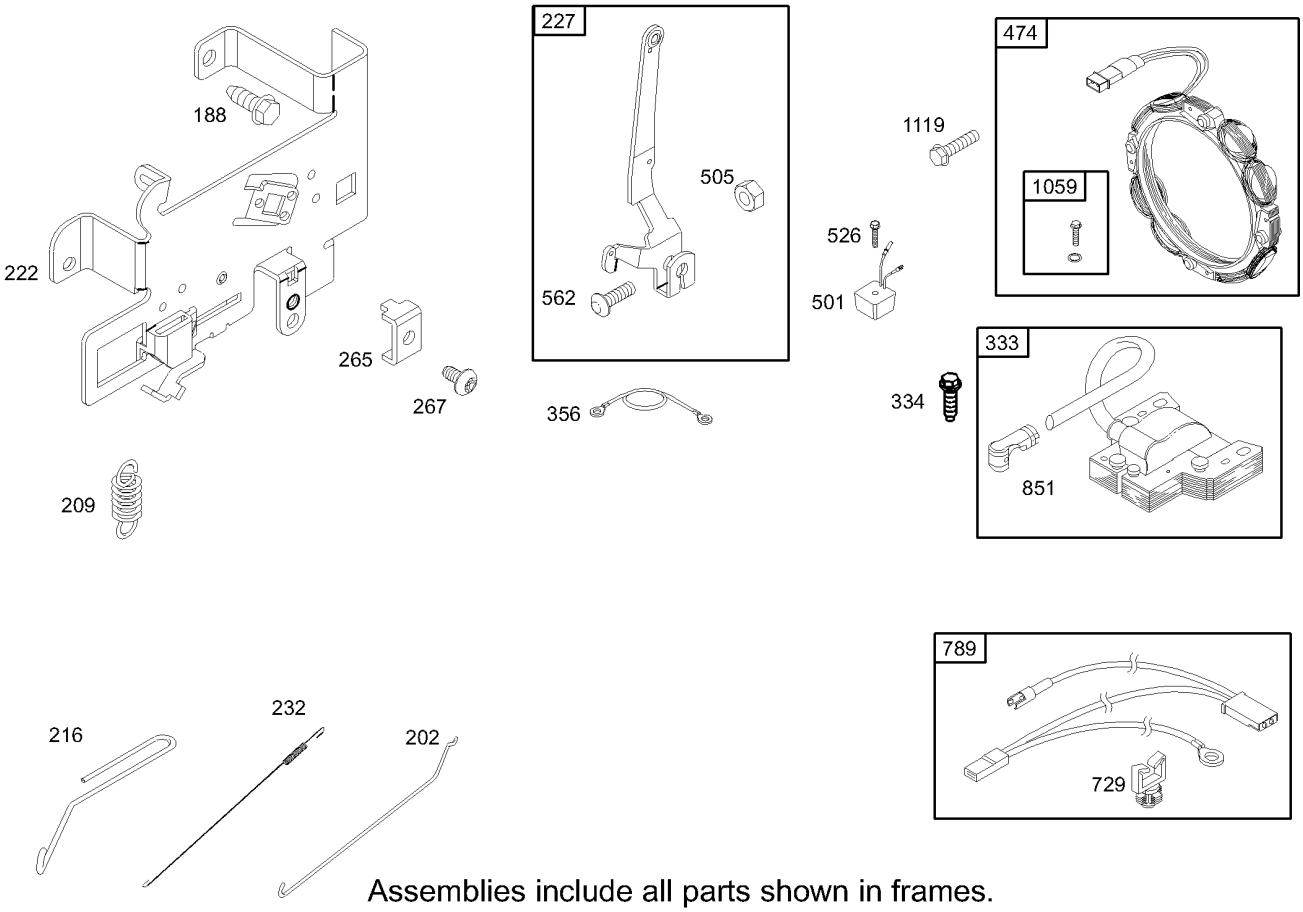

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❽188	691693	1	Screw
❽202	691841	1	Link-Governor, Mechanical
❽209	692208	1	Spring-Governor
❽216	691840	1	Link-Choke
❽222	694042	1	Bracket-Control
❽227	691374	1	Lever-Control, Governor
❽232	691842	1	Spring-Link, Governor
❽265	691024	1	Clamp-Casing
❽267	695134	1	Screw
❽333	492341	1	Armature-Magneto
❽334	691061	1	Screw
❽356	697089	1	Stop-Wire
❽474	393329	1	Alternator-9 Amp
❽474	696458	1	Alternator
❽501	696385	1	Regulator-9 Amp
❽501	691185	1	Regulator
❽505	691251	1	Nut
❽526	697348	1	Screw
❽562	691119	1	Screw
❽729	691335	1	Clip–Wire
❽789	692037	1	Wiring-Harness
❽851	692424	1	Terminal–Spark Plug
❽1059	698516	1	Screw And Washer Kit
❽1119	691183	1	Screw

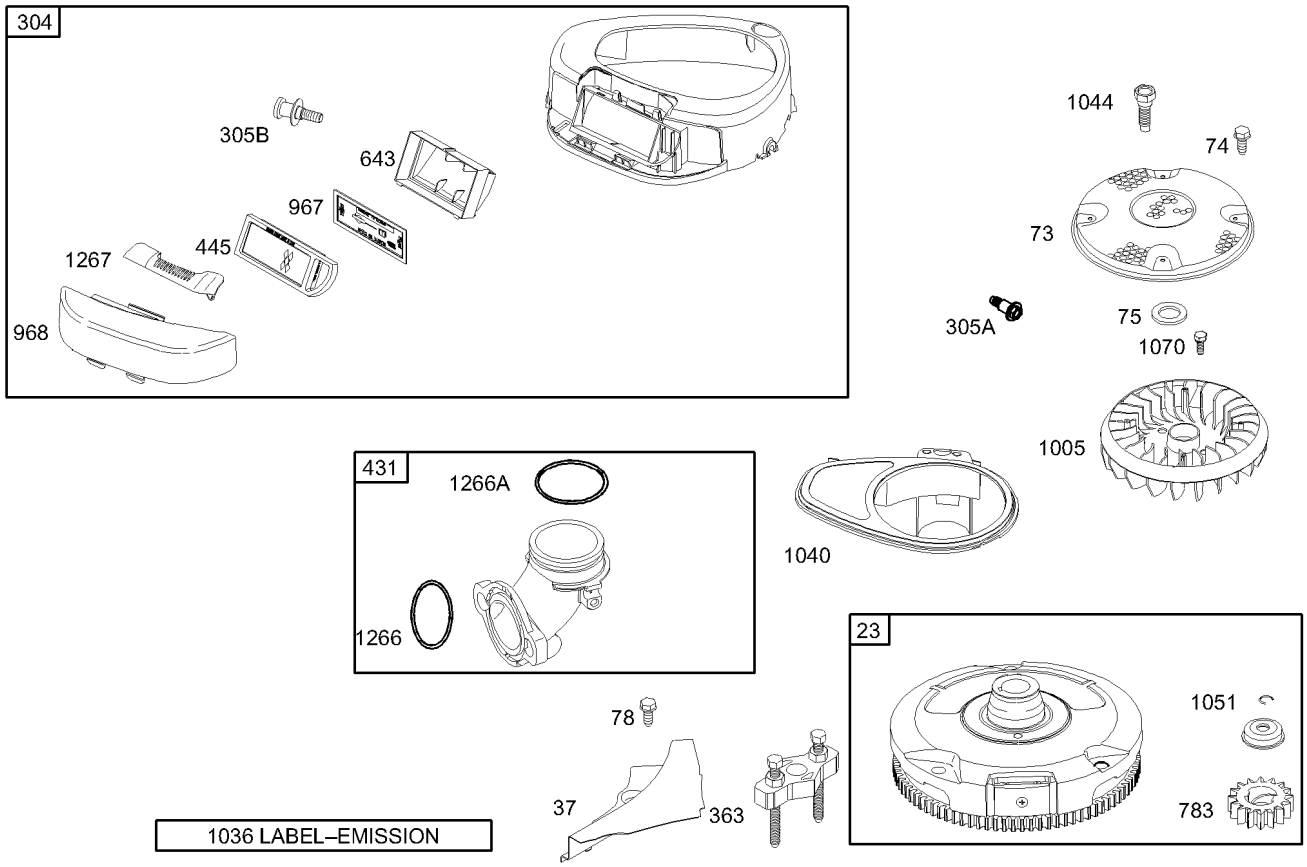


Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 286H77-0165-E1


Ref	Part No.	Qty.	Description
❽23	693556	1	Flywheel
❽37	697352	1	Guard-Flywheel
❽73	697384	1	Screen-Rotating
❽74	697897	1	Screw
❽75	690582	1	Washer-Flywheel
❽78	691003	1	Screw
❽304	698804	1	Housing-Blower
❽305	697102	1	Screw
❽305A	697103	1	Screw
❽363	19203	1	Puller-Flywheel
❽431	697122	1	Elbow-Intake
❽445	698083	1	Filter-Cartridge, Air Cleaner
❽643	698401	1	Retainer-Filter, Air
❽783	693713	1	Gear-Pinion
❽967	697015	1	Filter-Cleaner, Pre
❽968	697084	1	Cover-Cleaner, Air
❽1005	697853	1	Fan-Flywheel
❽1036	695700	1	Label–Emission
❽1040	698368	1	Plate-Trim
❽1044	691658	1	Screw-Crankshaft Extension
❽1051	691265	1	Ring-Retaining
❽1070	690372	1	Screw
❽❽1266	691917	1	Seal-O Ring
❽❽1266A	697123	1	Seal-O Ring


Ref	Part No.	Qty.	Description
❽1267	697135	1	Latch-Blower Housing

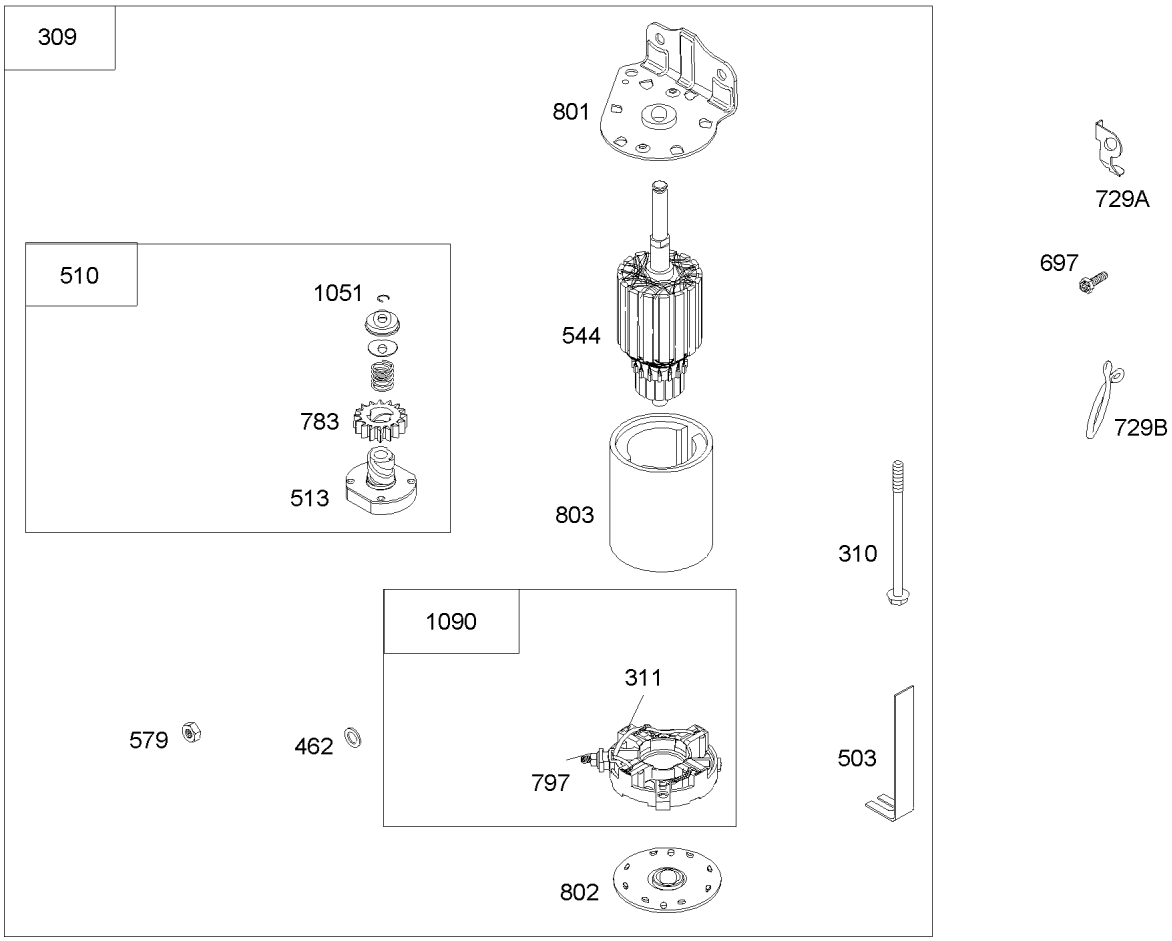

Starter Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❽309	693551	1	Motor-Starter
❽310	690323	1	Bolt
❽311	497608	1	Brush Set
❽462	691261	1	Washer
❽503	691532	1	Strap-Starter
❽510	693699	1	Drive-Starter
❽513	692024	1	Clutch-Drive
❽544	692034	1	Armature-Starter
❽579	691029	1	Nut
❽697	690372	1	Screw
❽729A	691224	1	Clip-Wire
❽729B	694123	1	Clip–Wire
❽783	693713	1	Gear-Pinion
❽797	693167	1	Nut
❽801	691283	1	Cap-Drive
❽802	691286	1	Cap-End
❽803	693757	1	Housing-Starter
❽1051	691265	1	Ring-Retaining
❽1090	691293	1	Retainer-Brush

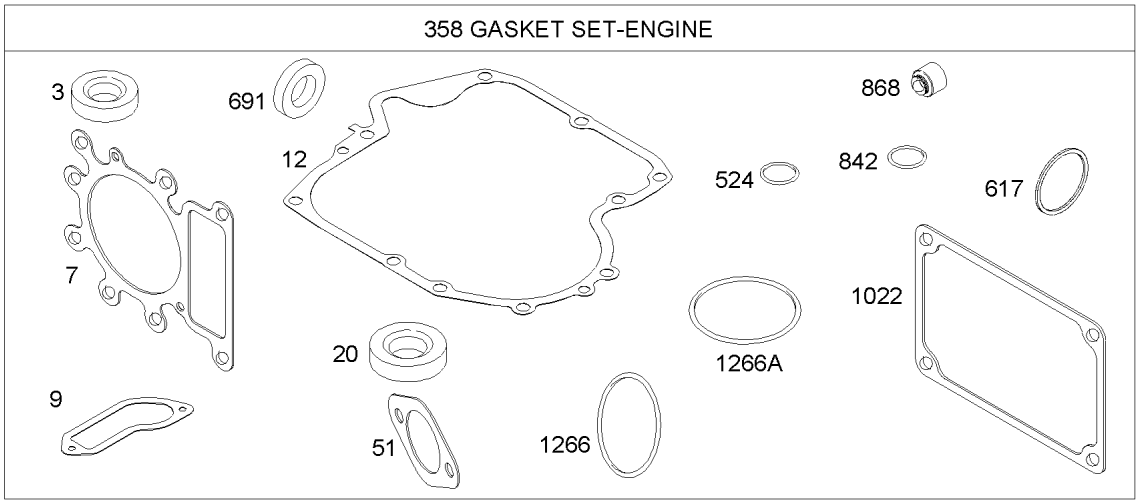


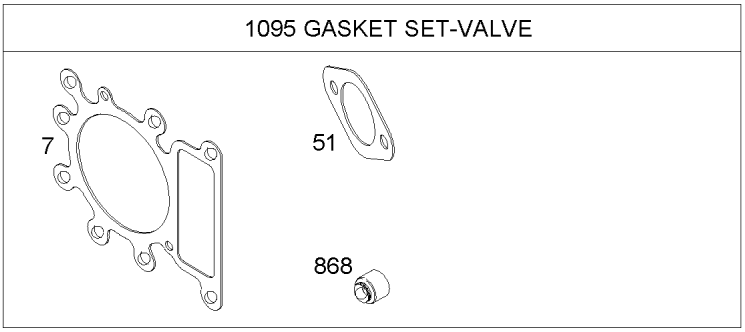


Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❸❼3 ❽	391086	1	Seal-Oil
❸❽7	273280	1	Gasket-Head, Cylinder
❽9	697109	1	Gasket-Breather
❸❽12	697110	0	Gasket-Crankcase
❸❽20	690947	1	Seal-Oil
❸❼51 ❽	692137	1	Gasket-Intake
❽358	697151	1	Engine Gasket Set
❸❽617	692138	1	Seal-O Ring
❸❽524	691032	1	Seal, O-Ring
❸❽691	692407	1	Seal-Shaft, Governor
❽842	691031	1	Seal-O Ring
❸❼868 ❽	690968	1	Seal-Valve
❽1022	272475	1	Gasket-Cover, Rocker
❽1095	691581	1	Valve Gasket Set
❸❽1266	691917	1	Seal-O Ring
❸❽1266A	697123	1	Seal-O Ring

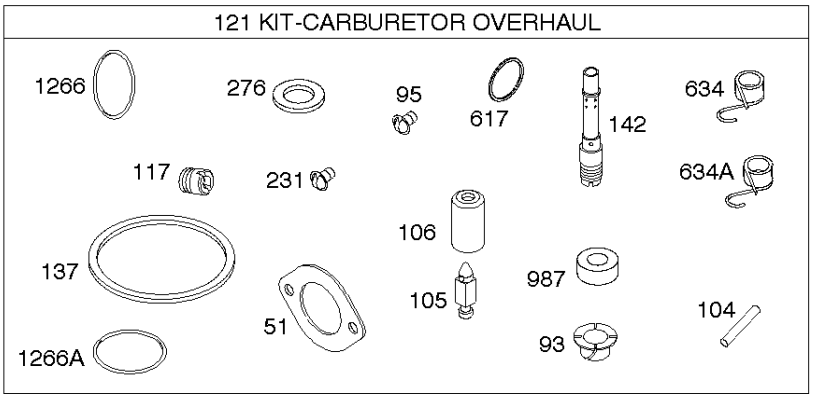

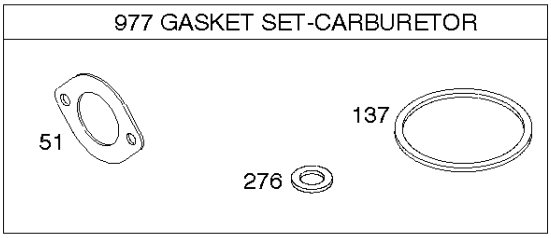

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 286H77-0165-E1

Ref	Part No.	Qty.	Description
❺❻51 ❽	692137	1	Gasket-Intake
❺❽93	690602	1	Bushing-Shaft, Throttle
❺❽95	691636	1	Screw
❺❽104	690525	1	Pin-Hinge, Carburetor Float
❺❽105	231855	1	Valve-Needle, Float
❺❽106	690577	1	Seat-Inlet
❺❽117	694352	1	Jet-Main (STD)
❽121	697154	1	Carburetor Overhaul Kit
❺❻137 ❽	281165	1	Gasket-Bowl, Float
❺❽142	697140	1	Nozzle-Carburetor
❺❽231	691636	1	Screw
❺❻276 ❽	692255	1	Washer-Sealing
❺❽617	692138	1	Seal-O Ring
❺❽634	690801	1	Spring / Seal ASM
❺❽634A	690802	1	Spring And Seal ASM
❽977	690192	1	Carburetor Gasket Set
❺❻987	6916326	1	Seal-Throttle Shaft
❺❽1266	691917	1	Seal-O Ring
❺❽1266A	697123	1	Seal-O Ring


TORO®