Form Number 3358-887 Rev A

Transport Frame and Ramp Kits
Trans Pro 80 Tow-Behind Trailer

Model No. 04238 - 270001501 and up.
Model No. 04244
Model No. 04245

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Register your product at www.Toro.com

© The Toro Company - 2007
All Rights Reserved


Contents

Description	Page	Description	Page
Main Trailer Assembly	 3	Rail Ramp Assembly	 6
Tongue Assembly	 4	Flat Ramp Assembly	 7
Hub and Wheel Assembly	 5	Attachments and Accessories List	 8

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

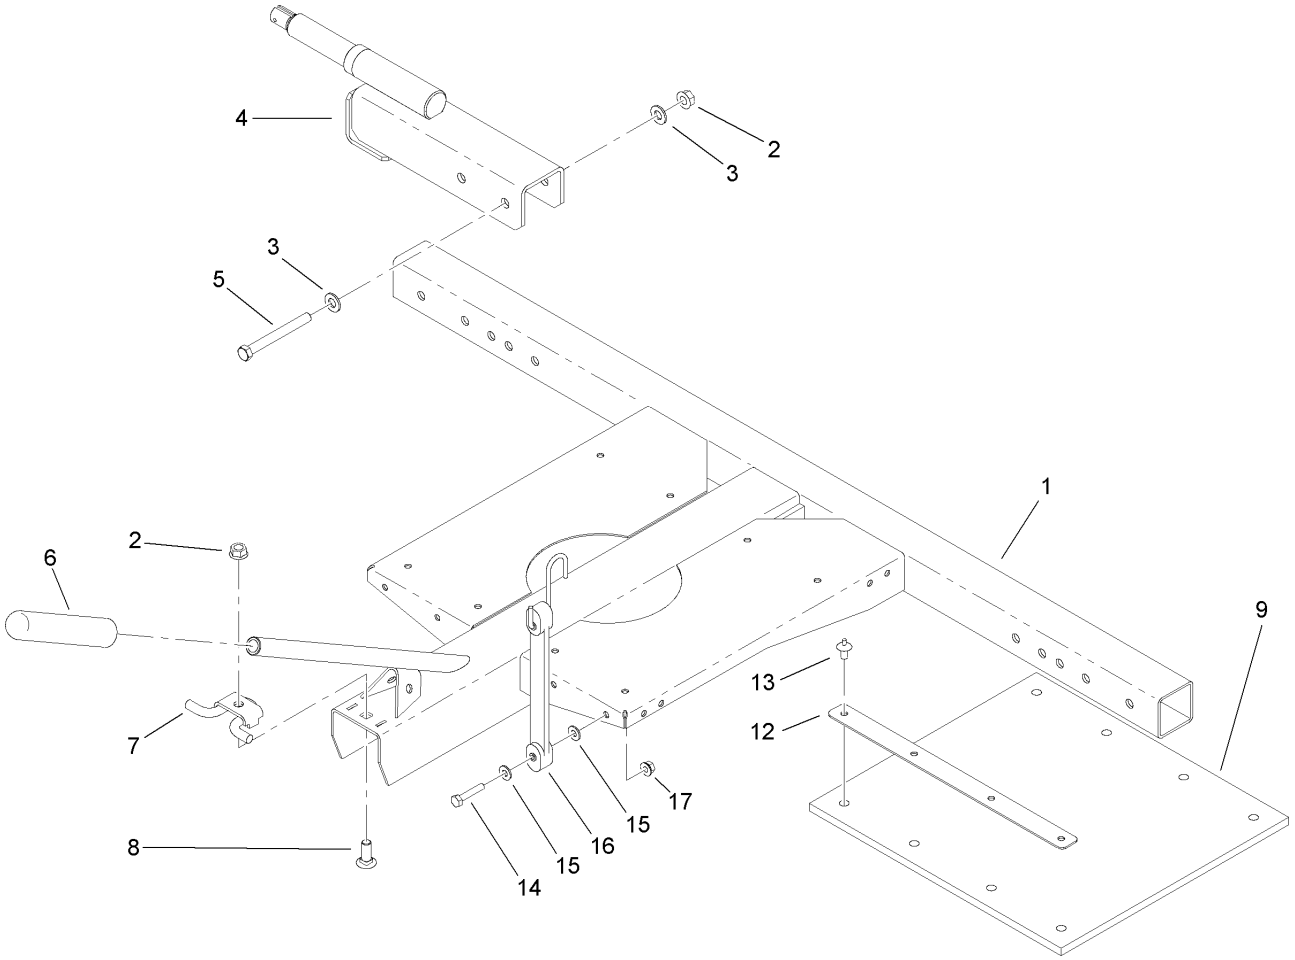


Main Trailer Assembly

Ref	Part No.	Qty.	Description
1	106-5366-01	1	Frame ASM
2	32128-21	5	Nut-HF
3	3256-24	8	Washer-Flat
4	112-9468-01	2	Axle ASM
5	323-15	4	Screw-HH
6	105-1904	1	Grip-Handle
7	108-6094	1	Latch
8	3231-22	1	Screw-CARR
9	106-5360	1	Mat-Roller
12	106-5384	2	Strip-Pad
13	105-9626	8	Rivet-Drive
14	321-13	2	Screw-HH
15	3256-22	4	Washer-Flat
16	106-8459	2	Bungee
17	32128-32	2	Nut-HHF

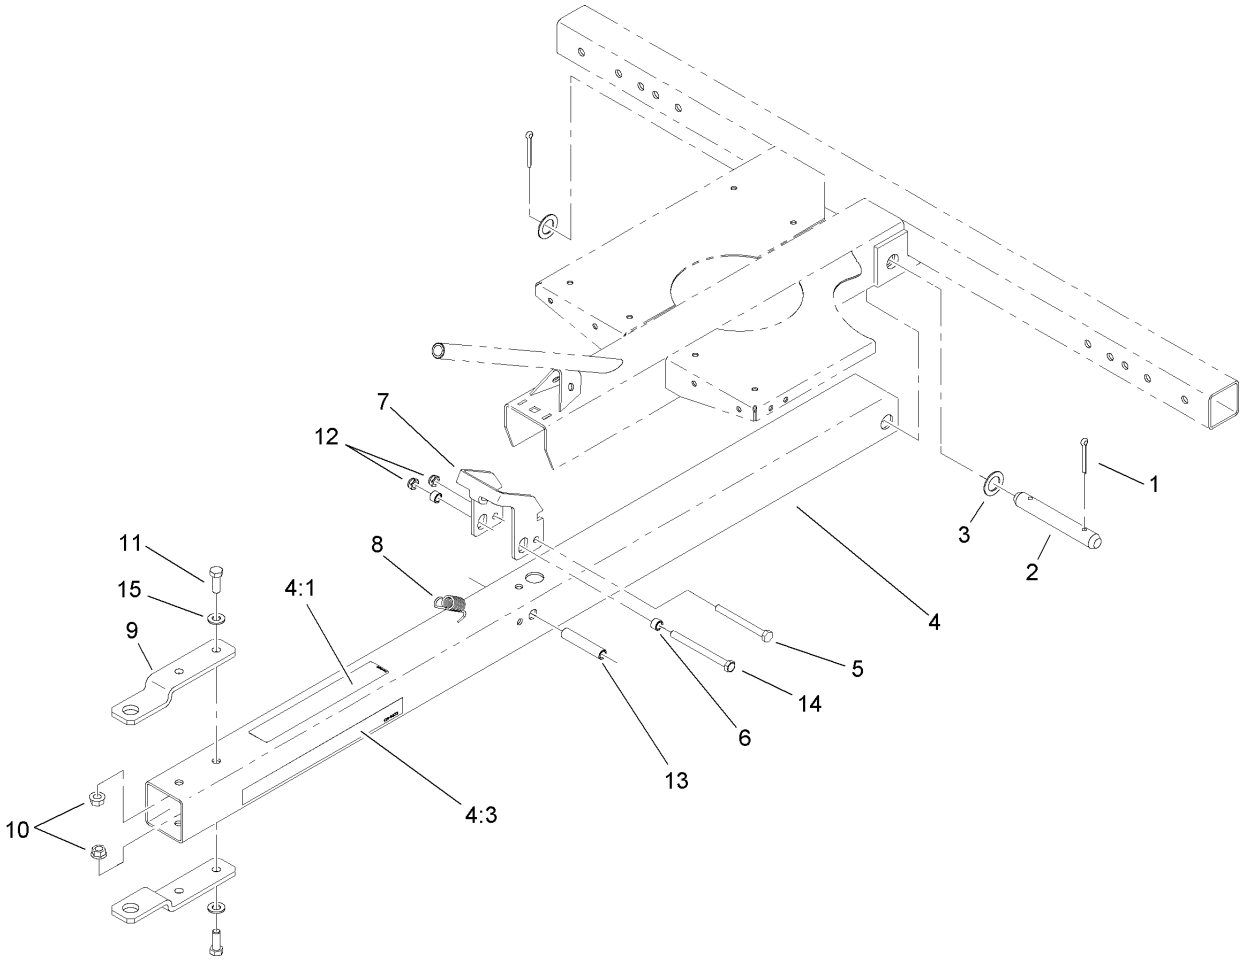


Tongue Assembly

Ref	Part No.	Qty.	Description
1	3272-23	2	Pin-Cotter
2	92-1233	1	Pin-Clevis
3	67-9410	2	Washer
4	106-4675	1	Tongue ASM
4:1	106-4669	1	Decal-Warning, Trailer
4:3	106-4673	2	Decal
5	322-20	1	Screw-HH
6	65-7910	2	Spacer
7	106-8437	1	Strap-Latch
8	105-9926	1	Spring-Extension
9	105-9930-01	2	Hitch
10	32128-21	4	Nut-HF
11	323-6	4	Screw-HH
12	3296-47	2	Nut-Lock, NI
13	105-9912	1	Spacer-Latch
14	322-23	1	Screw-HH
15	3256-24	4	Washer-Flat

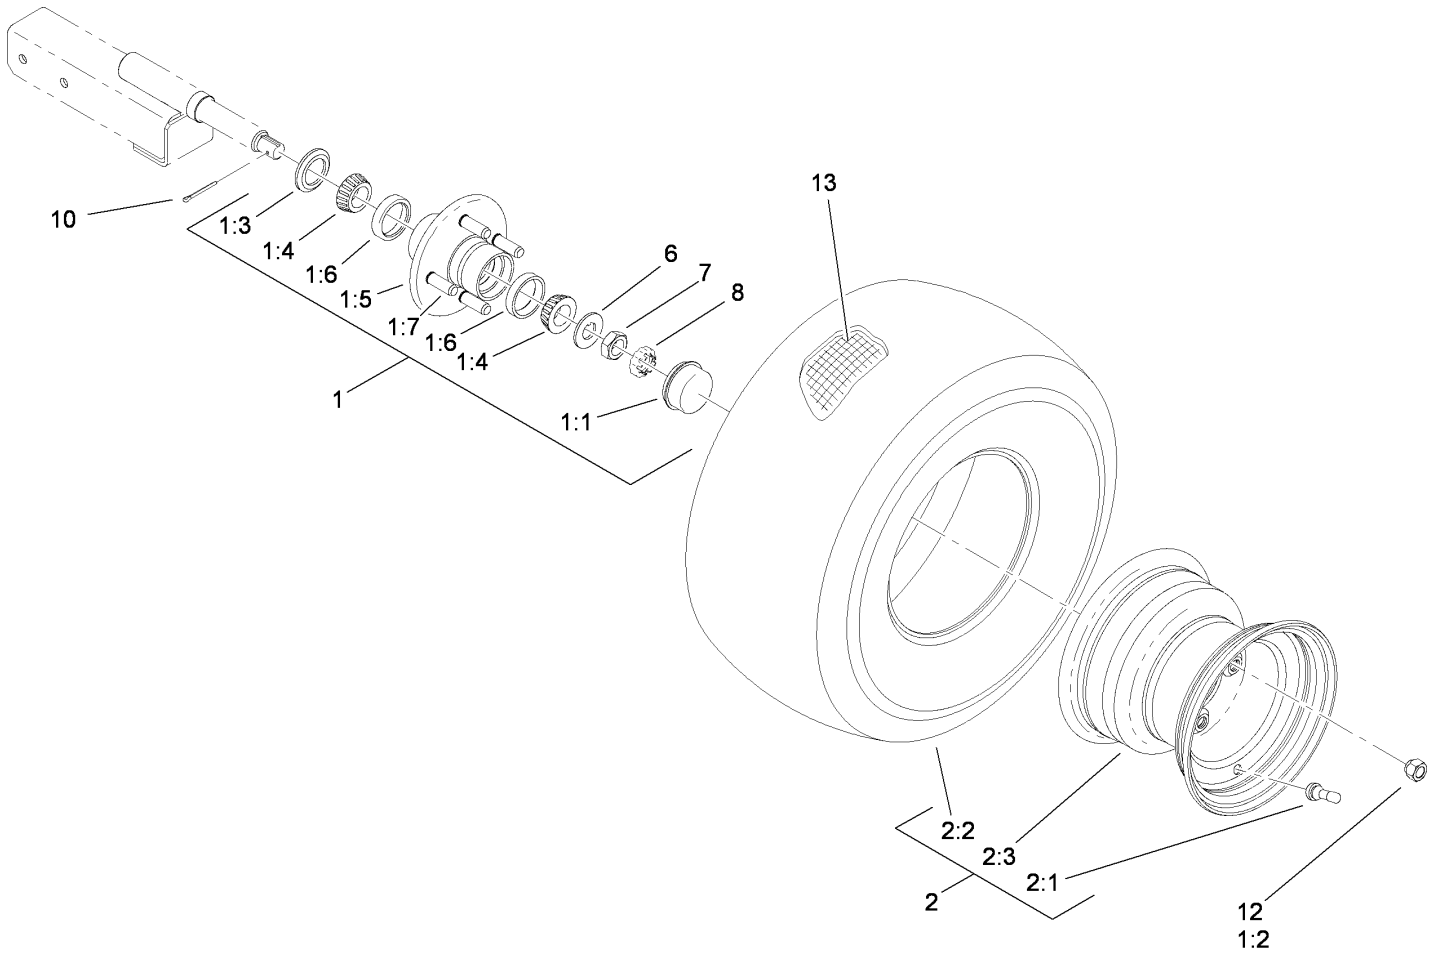


Hub and Wheel Assembly

Ref	Part No.	Qty.	Description
1	80-6570	2	Hub ASM
1:1	241-119	1	Cap-Dust
1:2	242-50	4	Nut-Lug
1:3	253-129	1	Seal
1:4	254-94	2	Bearing-Cone, Tapered
1:5	80-6580	1	Hub
1:6	254-72	2	Bearing-Cup, Tapered
1:7	10-6830	4	Stud-Type, Drive
2	98-8691	2	Wheel ASM
2:1	232-27	1	Stem-Valve
2:2	99-4506	1	Tire
2:3	99-4507	1	Rim
6	93-0309	2	Washer-Tab
7	3220-7	2	Nut-Jam
8	93-0307	2	Nut-Lock, Retainer
10	3272-13	2	Pin-Cotter
12	242-50	8	Nut-Lug
13	232-37	2	Tube

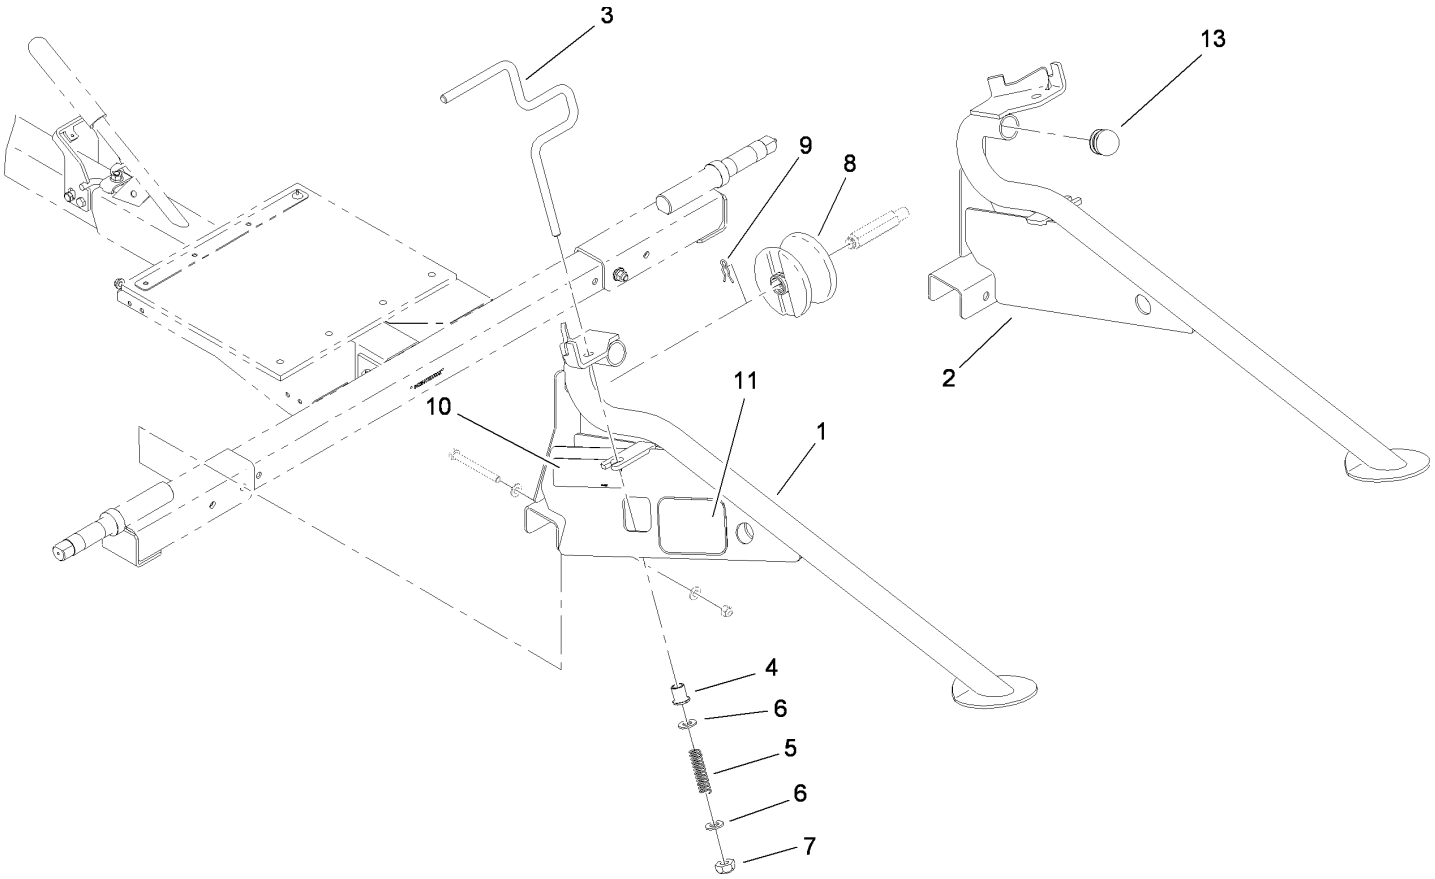

Rail Ramp Assembly

Ref	Part No.	Qty.	Description
1	110-3467-01	1	LH Rail ASM
2	110-3468-01	1	RH Rail ASM
3	106-5388	2	Rod-Lock
4	115-1061	2	Bushing-Flange
5	95-4256	2	Spring-Compression
6	3256-26	4	Washer-Flat
7	32146-13	2	Nut-Lock
8	106-5353	2	Wheel ASM
9	99-6204	2	Clip-Retaining
10	98-8687	2	Decal-Pressure, Air
11	67-1300	2	Decal
13	110-3469	2	Plug-Head, Ball

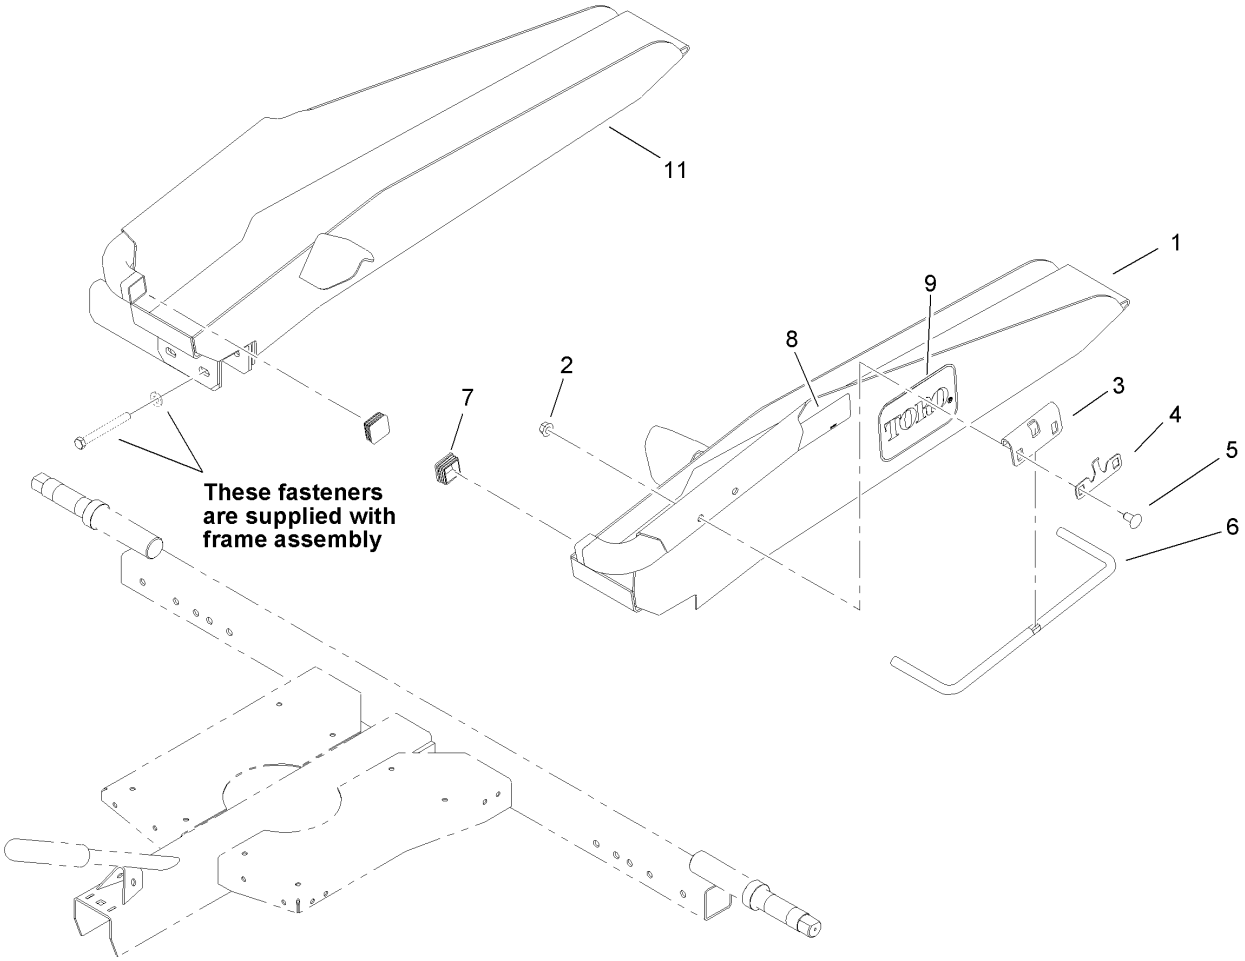

Flat Ramp Assembly

Ref	Part No.	Qty.	Description
1	107-8183-01	1	LH Ramp ASM
2	32128-21	4	Nut-HF
3	108-3156	2	Bracket-Rod
4	106-5354	2	Spring-Latch
5	3231-21	4	Screw-CARR
6	105-5394	2	Rod-Trailer, Large
7	105-9935	2	Plug-Tube, Square
8	98-8687	2	Decal-Pressure, Air
9	68-3640	2	Decal
11	107-8184-01	1	RH Ramp ASM

Attachments and Accessories

For 04238 - Transport Frame, Trans Pro 80 Tow-Behind Trailer

Product Name	Model/Part
Rail Ramp	04244
Flat Ramp	04245
Adjustable Hitch Kit	107-8188

NOTES

NOTES

NOTES


TORO®