
FORM NO. 3315–451 Rev. B

TORO®

MODEL NO. 04051–40001 & UP

PARTS CATALOG

GREENSMASTER® 1000
Traction Unit & Cutting Unit

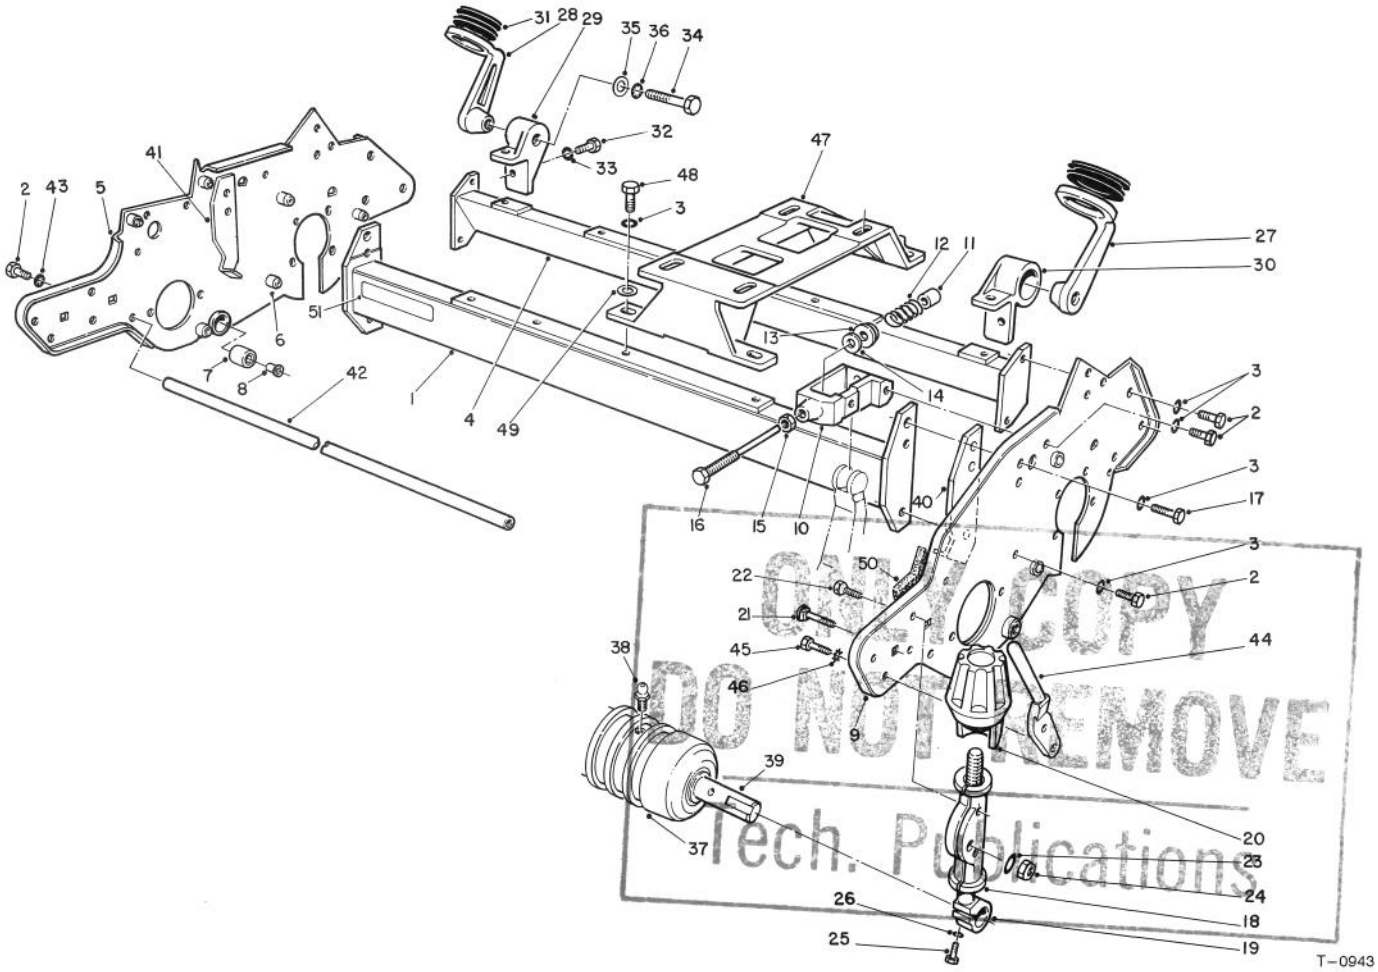

CAD COPY
DO NOT REMOVE
Tech. Publications


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–7030	Tube – Front Frame	1
2	323–4	Screw – Cap Hex. Hd.	12
3	3253–21	Lockwasher	16
4	88–7040	Angle – Rear Frame	1
5	88–7060	Plate – Side RH	1
6	32148–6	Insert – Threaded	9
7	63–9510	Bushing Assembly	2
8	52–2890	Nyliner	2
9	88–7080	Side Plate Assembly LH (Incl. Ref. #6)	1
10	65–8670	Adjuster – Frame	2
11	65–6360	Support – Spring	2
12	65–6400	Spring – Compression	2
13	65–6380	Collar – Thrust	2
14	65–8680	Washer – Thrust	2
15	3220–6	Nut – Jam	2

Ref. No.	Part No.	Description	No. Used
16	65–8690	Screw – Adjusting	2
17	323–18	Screw – Cap Hex. Hd.	2
18	10–5060	Bracket – H.O.C.	2
19	65–9500	Screw – Roller Adjust.	2
20	65–8600	Knob – Height Adjust.	2
21	3230–5	Bolt – Carriage	2
22	92–8914	Bolt – Tapered Face	4
23	3256–23	Washer – Flat	2
24	3296–29	Nut – Lock	2
25	321–4	Screw – Cap Hex. Hd.	2
26	3253–3	Washer – Lock	2
27	65–7470	Arm – Handle LH	1
28	65–7480	Arm – Handle RH	1
29	65–7490	Socket – Handle RH	1
30	65–7500	Socket – Handle LH	1
31	65–7510	Grommet – Handle	2

© The TORO Company –1992, REV. 1993
All Rights Reserved

TPS

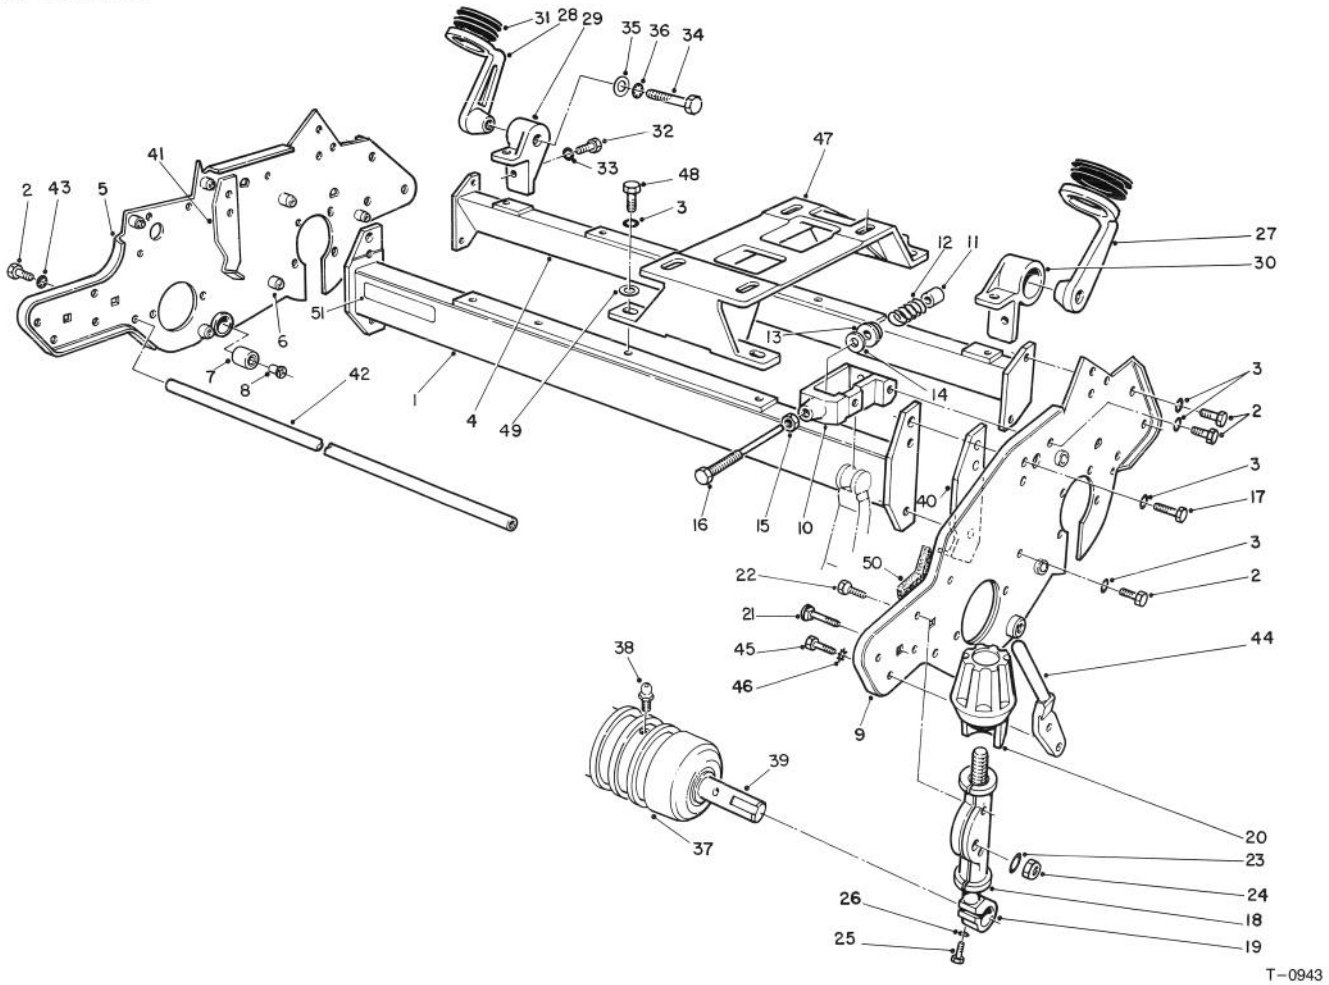


FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	322–4	Screw – Cap Hex. Hd.	4
33	3253–4	Washer – Lock	4
34	325–7	Screw – Cap Hex. Hd.	2
35	3256–26	Washer – Flat	2
36	3254–4	Washer – Lock I.T.L.W.	2
37	88–6790	Wiehle Roller Assembly (Incl. Ref. #38 & 39)	1
38	302–5	Fitting – Grease	2
39	52–3210	Bearing	2
40	88–7090	Spacer LH	1
41	88–7100	Spacer RH	1

Ref. No.	Part No.	Description	No. Used
42	88–7110	Rod – Frame Support	1
43	3254–6	Washer – Lock I.T.L.W.	2
44	65–8570	Rod – Grass Catcher	2
45	322–2	Screw – Cap Hex. Hd.	4
46	3255–8	Washer – Lock I.T.L.W.	4
47	88–7670	Base – Engine	1
48	323–5	Screw – Cap Hex. Hd.	4
49	3256–24	Washer – Flat	4
50	65–8180	Seal – Grass Catcher	1
‡51	55–4300	Decal – Warning (English)	2

‡For different language versions of this part, see International Decal Cross Reference.

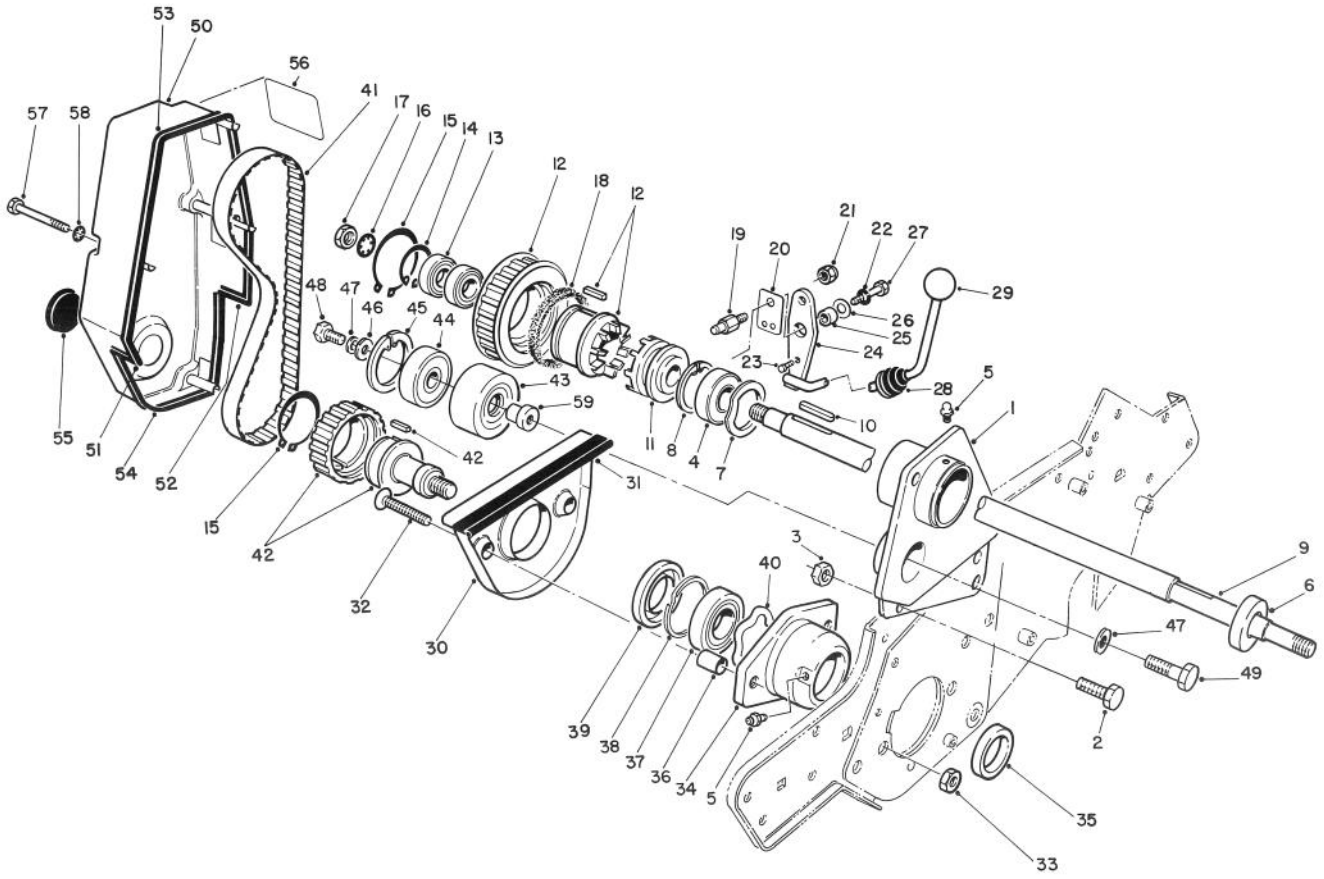


T–0949

REEL DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–8013	Housing – Clutch	1
2	322–5	Screw – Cap Hex. Hd.	2
3	3296–29	Nut – Lock	2
4	251–204	Bearing – Ball	1
5	302–5	Fitting – Grease	2
6	253–118	Seal – Oil	1
7	88–7720	Washer – Wave	1
8	32120–11	Ring – Retaining	1
9	88–7140	Shaft – Power	1
10	88–7150	Key – Square	2
11	65–6940	Clutch – Jaw Driver	1
12	88–7830	Clutch & Pulley Assembly	1
13	251–336	Bearing – Ball	2
14	32151–89	Ring – Retaining	1
15	32151–95	Ring – Retaing	2
16	3254–4	Washer – Lock I.T.L.W.	1
17	3220–5	Nut – Jam	1
18	65–6970	Seal – Felt	1
19	92–7676	Pin – Actuator	1
20	65–6290	Spring – Clutch Detent	1
21	3296–42	Nut – Lock	1
22	3253–3	Washer – Lock	1
23	3259–15	Screw – Drive	1
24	88–7170	Lever – Clutch	1
25	88–7860	Spacer	1
26	3290–414	Washer	1

Ref. No.	Part No.	Description	No. Used
27	321–4	Screw – Cap Hex. Hd.	1
28	65–8960	Boot – Clutch	1
29	233–69	Knob	1
30	65–7190	Cover – Groomer Arm	1
31	65–7131	Trim – Groomer Arm Cover	1
32	3289–23	Screw – Flat Hd.	2
33	3296–39	Nut	2
34	65–8640	Housing – Bearing	1
35	253–96	Seal	1
36	65–8290	Standoff – Cover	2
37	251–342	Bearing – Self–Aligning	1
38	32151–92	Ring – Retaining	1
39	253–163	Seal	1
40	3290–485	Washer – Wave	1
41	65–6200	Belt – Reel Drive	1
42	88–7840	Pulley & Drive Assembly	1
43	88–7850	Idler Pulley Assembly (Incl. Ref. #44–48 & 59)	1
44	38–7820	Bearing – Ball	1
45	32120–42	Ring – Snap	1
46	88–7200	Washer – Flat	1
47	3253–4	Washer – Lock	2
48	322–3	Screw – Cap Hex. Hd.	1
49	322–5	Screw – Cap Hex. Hd.	1
50	88–7700	Cover – Reel Drive	1
51	88–7770	Strip – Seal Front	1

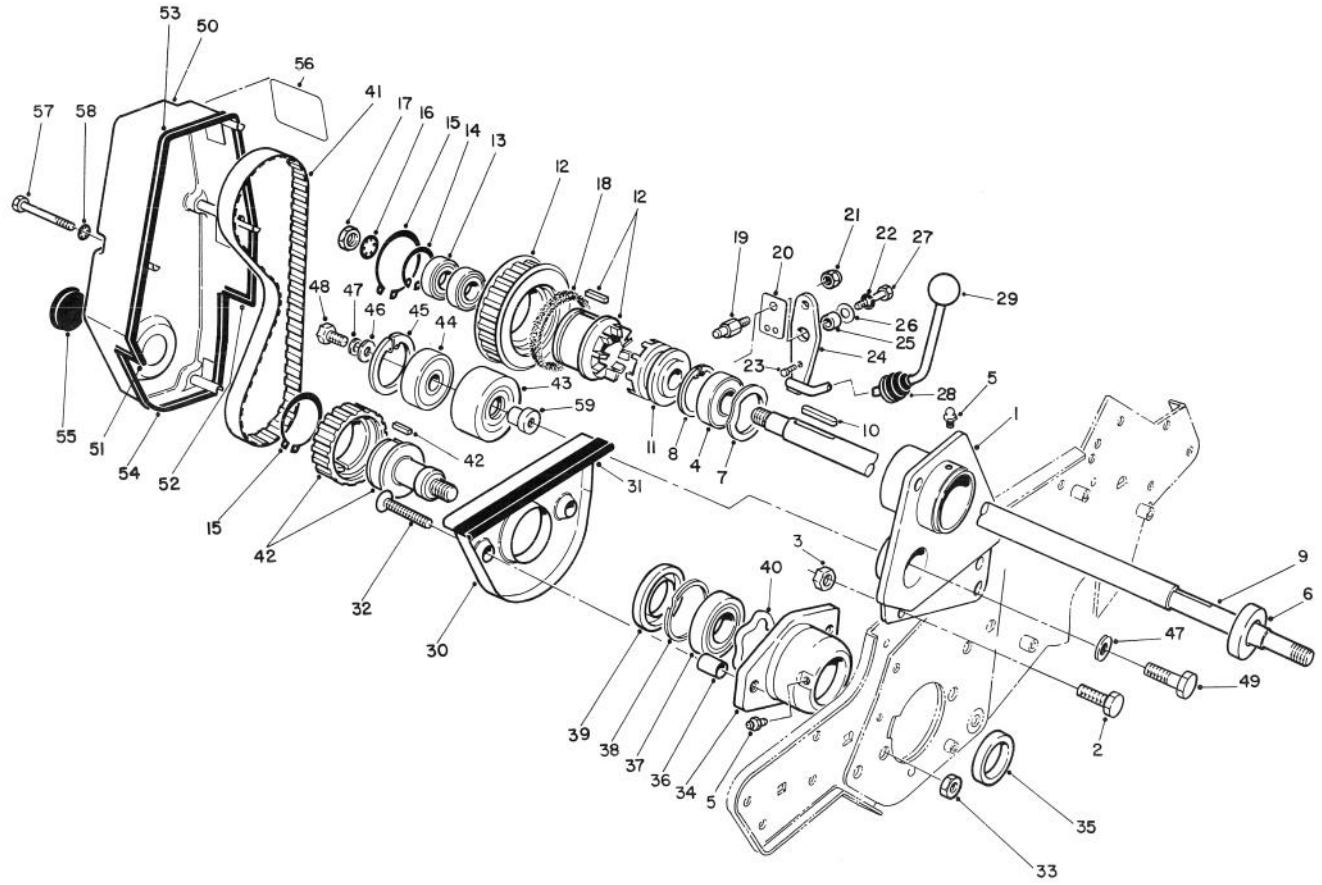


T–0949

REEL DRIVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	88–7780	Strip – Seal Rear	1
53	88–7790	Strip – Seal Upper	1
54	88–7800	Strip – Seal Lower	1
55	237–160	Plug	1

Ref. No.	Part No.	Description	No. Used
‡56	65–7660	Decal – Reel Engagement (English)	1
57	321–20	Screw – Cap Hex. Hd.	4
58	3254–8	Washer – Lock I.T.L.W.	4
59	88–7190	Spacer – Pulley Support	1

‡For different language versions of this part, see International Decal Cross Reference.

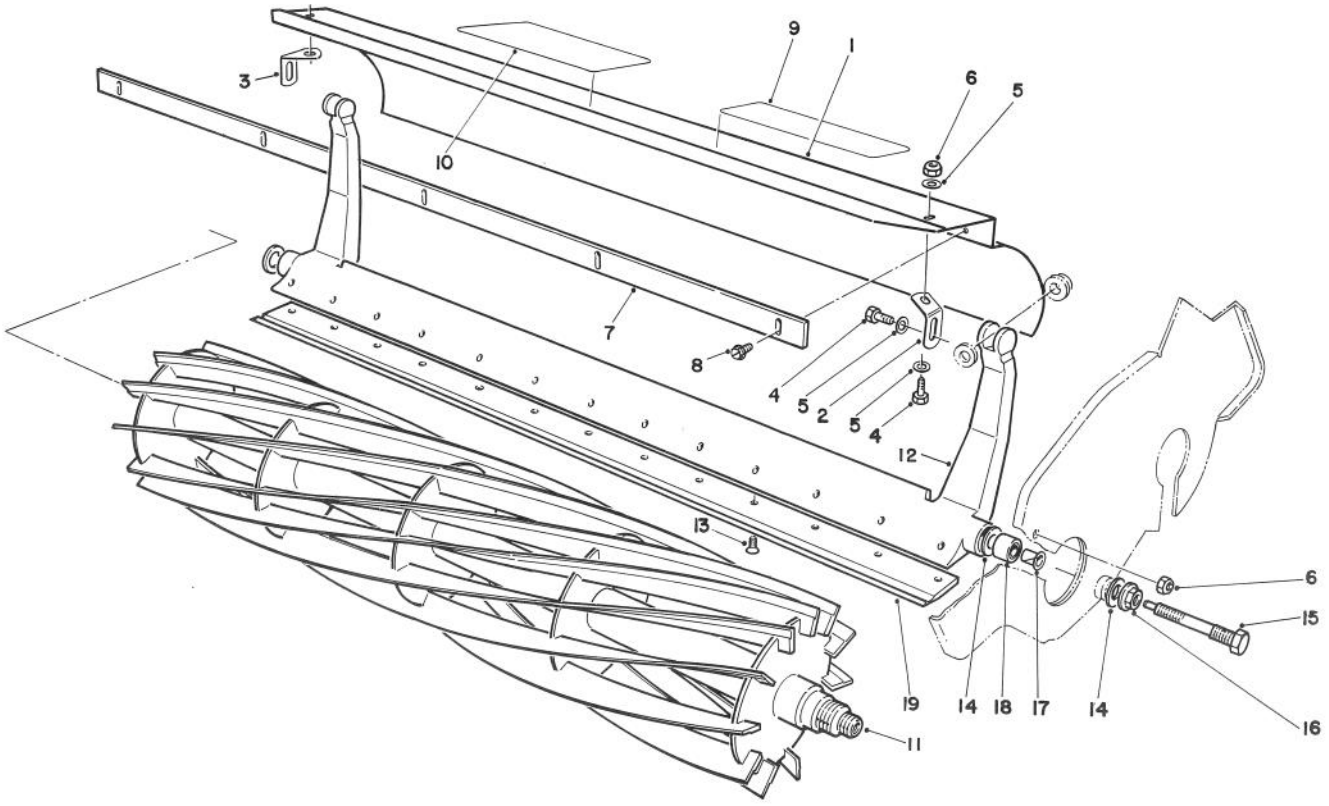

T–0947


REEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	65–9010	Shield – Grass	1
2	65–6450	Bracket – Shield LH	1
3	65–6460	Bracket – Shield RH	1
4	321–3	Screw – Cap Hex. Hd.	4
5	3256–22	Washer – Flat	6
6	3296–42	Nut – Lock	4
7	36–7260	Bar – Cutoff	1
8	32144–73	Screw – Self Tapping	5
‡9	62–5070	Decal – Shield (English)	1
‡10	65–8650	Decal – Service (English)	1

Ref. No.	Part No.	Description	No. Used
11	92–8653	Reel Assembly – 11 Blade	1
*	92–8920	Reel Assembly – 8 Blade	1
12	65–6240	Bedbar	1
13	57–4910	Screw – Special	13
14	65–6260	Washer – Thrust	4
15	65–6270	Bolt – Bedbar	2
16	32128–48	Nut – Flange	2
17	52–2890	Bushing – Flange	2
18	63–9510	Bushing – Rubber	2
19	63–8470	Bedknife – 1/8	1
*	63–8560	Bedknife – Tournament	1
*	65–8250	Bedknife – Micro	1

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

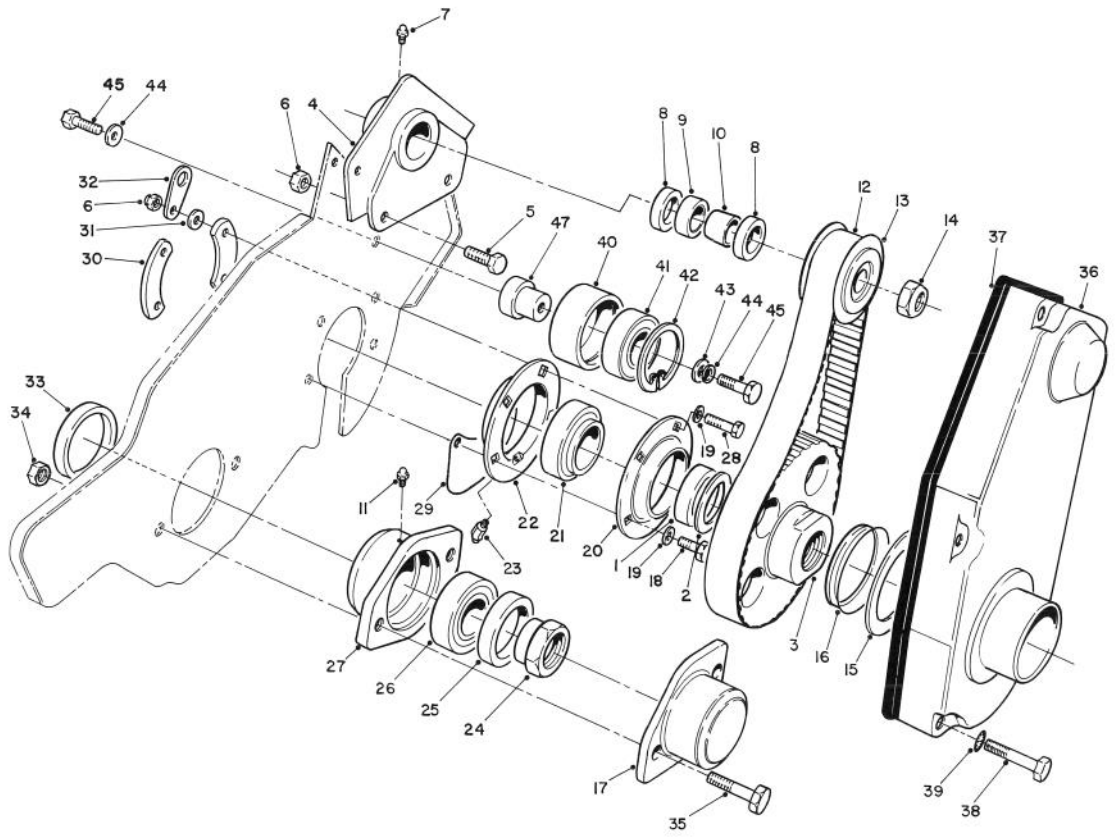


T–0945A

DRUM DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–7530	Spacer	2
2	88–7540	Washer – Backup	2
3	88–7560	Pulley – LH	1
*	88–7550	Pulley – RH	1
4	88–7470	Housing – LH	1
*	88–7490	Housing – RH	1
5	322–5	Screw – Cap Hex. Hd.	4
6	3296–29	Nut – Lock	6
7	302–19	Fitting – Grease	2
8	253–160	Seal	4
9	251–338	Bearing	4
10	86–7130	Spacer	2
11	302–5	Fitting – Grease	1
12	65–6210	Belt	2
13	65–6660	Pulley	2
14	3296–57	Nut	2
15	65–6570	Washer	2
16	253–161	Seal – V–Ring	2
17	65–6220	Cover – Bearing	1
18	322–3	Screw – Cap Hex. Hd.	6
19	3253–4	Washer – Lock	8
20	65–6590	Flangette	2
21	88–7880	Bearing	2
22	65–8710	Flangette (Incl. Ref. #23)	2
23	302–11	Fitting – Grease	2

Ref. No.	Part No.	Description	No. Used
24	92–7302	Nut – Bearing Lock	1
25	253–163	Seal	1
26	251–342	Bearing	1
27	65–8640	Housing – Bearing	1
28	322–42	Screw – Cap Hex. Hd.	2
29	65–8720	Closure	2
30	65–8730	Clamp – Bearing	4
31	3256–23	Washer – Flat	2
32	65–8590	Holddown – Handle	2
33	253–96	Seal	1
34	3296–39	Nut – Lock	2
35	323–7	Screw – Cap Hex. Hd.	2
36	88–7680	Cover – Drum Belt LH	1
*	88–7690	Cover – Drum Belt RH	1
37	88–7810	Seal Strip – Drum Cover	2
38	321–11	Screw – Cap Hex. Hd.	8
39	3254–8	Washer – Lock I.T.L.W.	8
40	88–7850	Idler Pulley Assembly (Incl. Ref. #41–45 & 47)	2
41	38–7820	Bearing – Ball	2
42	32120–42	Ring – Snap	2
43	88–7200	Washer – Flat	2
44	3253–4	Washer – Lock	2
45	322–3	Screw – Cap Hex. Hd.	4
47	88–7190	Spacer – Pulley Support	2


*Not Illustrated

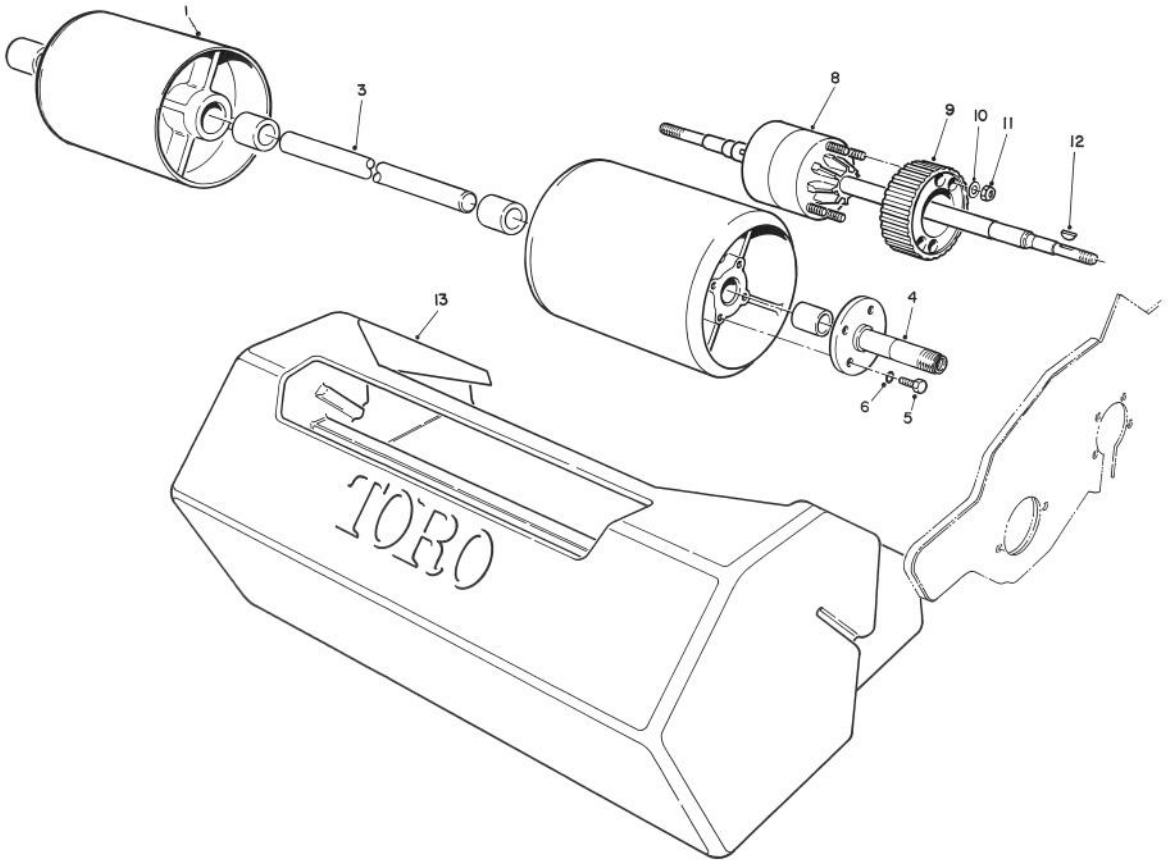

T–0944A

DRUM AND BASKET ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–7280	Drum Assembly	2
3	88–7640	Shaft – Drum	1
4	88–7520	Shaft – Drum LH	1
*	88–7510	Shaft – Drum RH	1
5	322–5	Screw – Cap Hex. Hd.	8
6	3253–4	Washer – Lock	8
8	88–7210	Differential Assembly	
		Peerless Model 100–085	1
9	65–9120	Pulley – Differential	1
10	3256–23	Washer – Flat	4
11	3296–29	Nut – Lock	4
12	3257–32	Key	2
13	65–7230	Basket – Grass	1

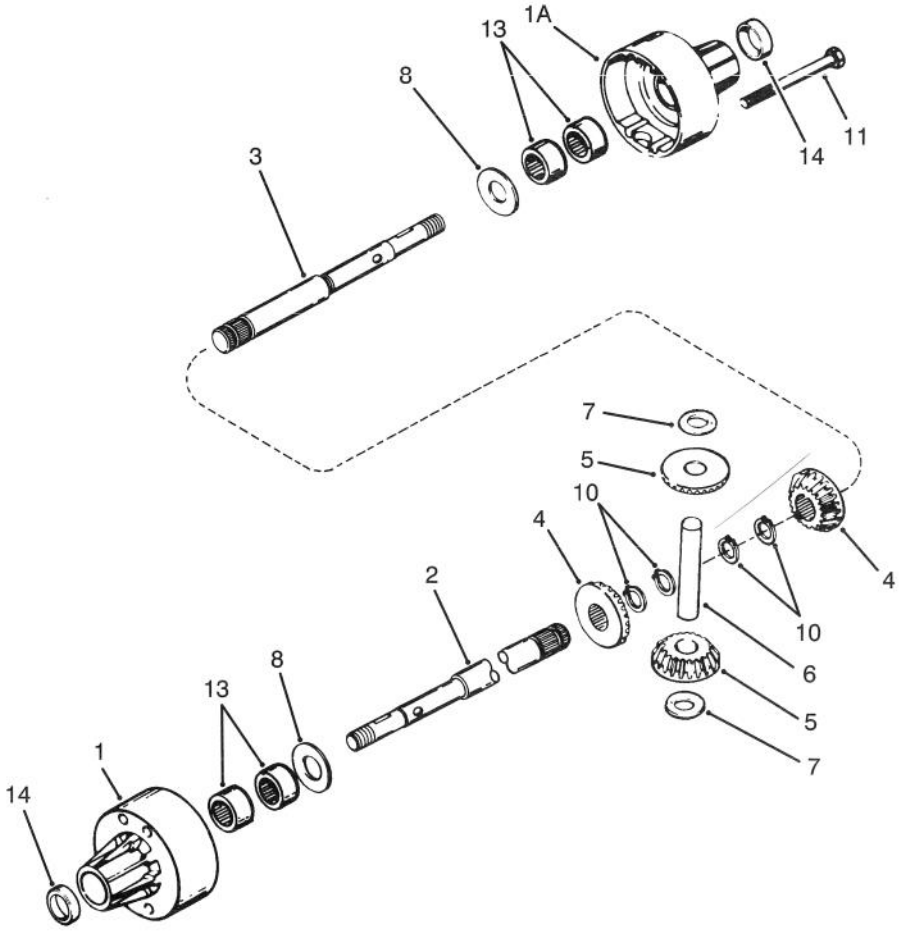


T–1571

DIFFERENTIAL ASSEMBLY
PEERLESS MODEL NO. 100–085

Ref. No.	Part No.	Description	No. Used
1	774881	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
1A	774882	Housing Differential Carrier (Incl. Ref. #13 & 14)	1
2	774864A	Axle (20–29/32" Long)	1
3	774863A	Axle (6–7/32" Long)	1
4	778221	Gear Bevel	2
5	778068	Gear Pinion	2


Ref. No.	Part No.	Description	No. Used
6	786040	Pin Drive	1
7	780096	Washer Thrust	2
8	780001	Washer	2
10	792125	Ring – Retaining (Pkg. of 2)	4
11	792093	Screw Flanged Hex Hd.	4
13	780140	Bearing Needle	4
14	788042	Seal Oil	2

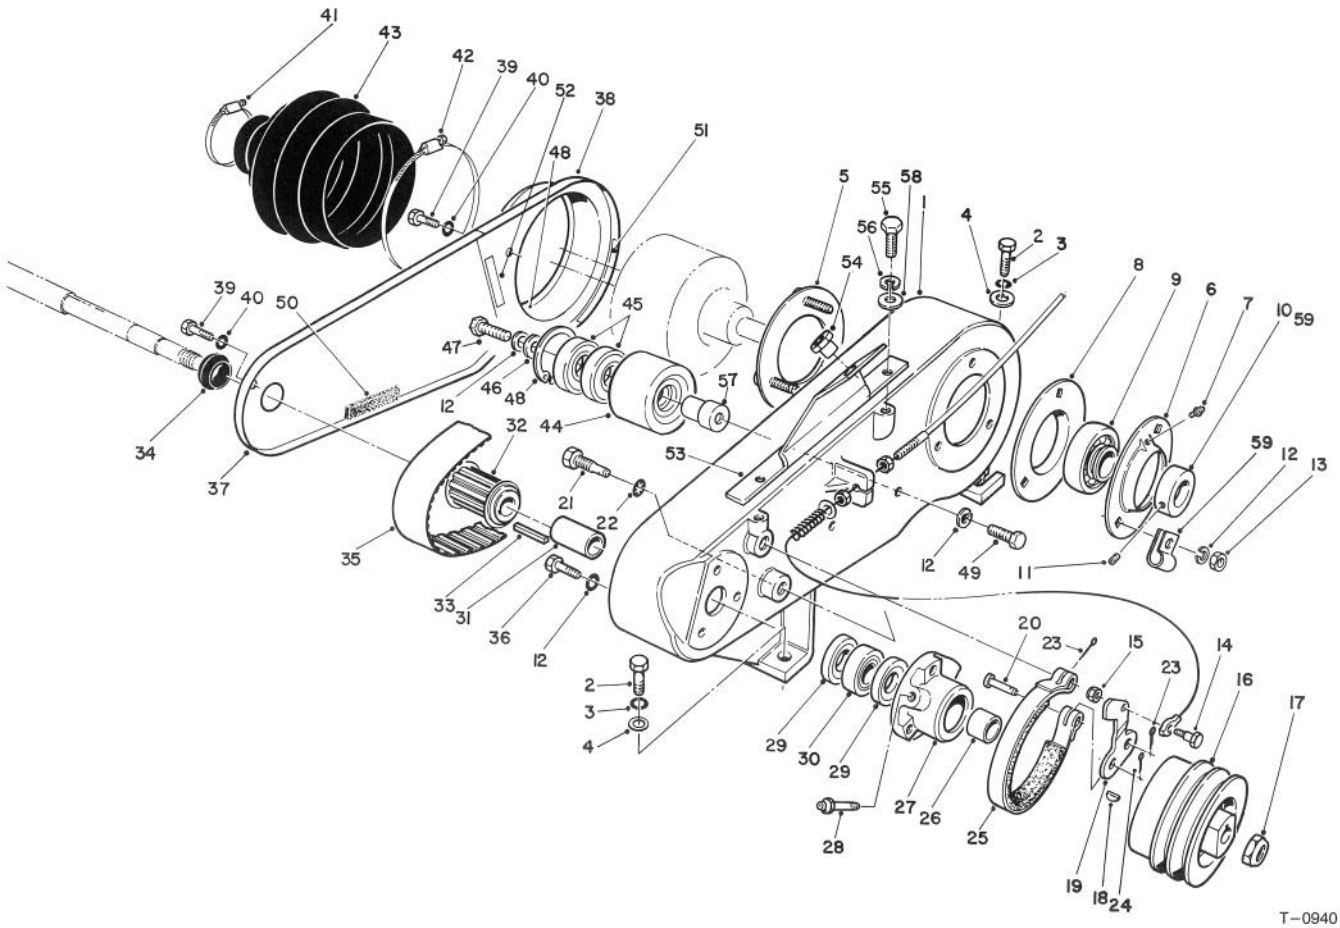

COUNTERSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–7230	Housing – Countershaft	1
2	323–5	Screw – Cap Hex. Hd.	4
3	3253–21	Washer – Lock	4
4	3256–24	Washer – Flat	4
5	65–6720	Plate – Screw	1
6	65–6700	Flangette (Incl. Ref. #7)	1
7	302–65	Fitting – Grease	1
8	65–6710	Flangette	1
9	251–343	Bearing (Incl. Ref. #10 & 11)	1
10		Collar – Locking	1
11		Screw – Set	2
12	3253–4	Washer – Lock	8
13	3218–2	Nut – Jam	3
14	11–9030	Bolt – Shoulder	1
15	3296–42	Nut – Lock	1
16	65–8890	Pulley – Input Shaft	1
17	3296–57	Nut – Lock	1
18	3257–32	Key	1
19	65–8610	Lever – Brake	1
20	283–75	Pin – Clevis	1
21	65–6810	Support – Brake	2
22	3254–6	Washer – Lock I.T.L.W.	2
23	3272–6	Pin – Cotter	2
24	3272–8	Pin – Cotter	1


Ref. No.	Part No.	Description	No. Used
25	65–8700	Band – Brake	1
26	86–7130	Spacer – Short	1
27	65–6760	Housing – Bearing	1
28	302–64	Fitting – Grease	1
29	253–160	Seal	2
30	251–338	Bearing	1
31	86–7140	Spacer – Long	1
32	65–8910	Pulley – Countershaft	1
33	65–6850	Key	1
34	88–7710	Seal – Countershaft	1
35	65–9080	Belt	1
36	322–5	Screw – Cap Hex. Hd.	3
37	88–7240	Cover – Box Front	1
38	88–7250	Cover – Box Rear	1
39	321–2	Screw – Cap Hex. Hd.	3
40	3253–3	Washer – Lock	3
41	2412–139	Clamp – Hose	1
42	2412–140	Clamp – Hose	1
43	65–6800	Boot – Differential	1
44	88–7870	Idler Pulley Assembly (Incl. Ref. #12, 45–48 & 57)	1
45	38–7820	Bearing – Ball	2
46	88–7200	Washer – Flat	1
47	322–3	Screw – Cap Hex. Hd.	1
48	32120–42	Ring – Retaining	1
49	322–5	Screw – Cap Hex. Hd.	1

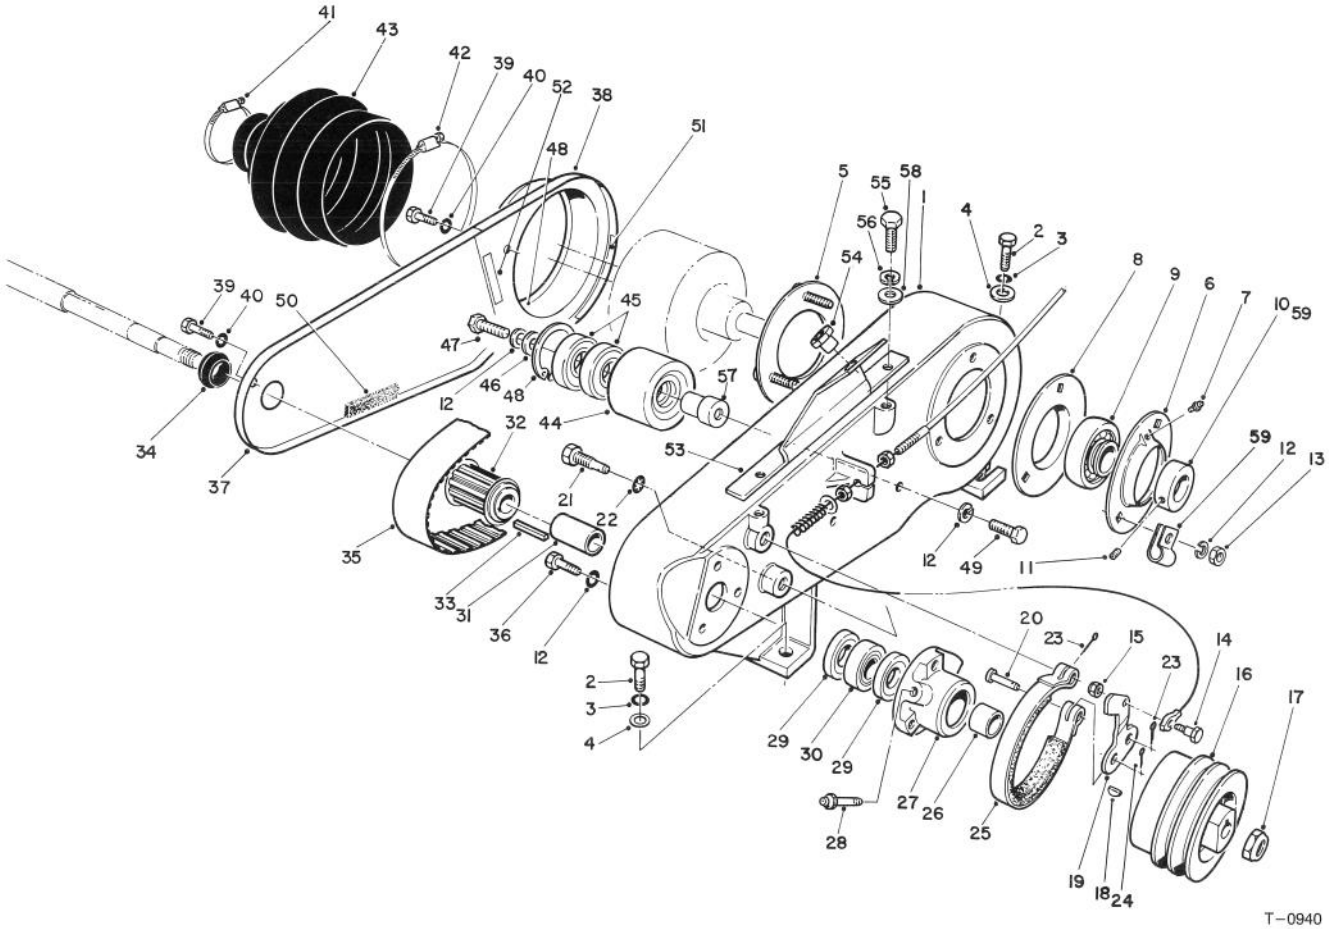

COUNTERSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
50	65–6901	Strip – Cover Seal	1
51	65–6902	Strip – Cover Seal	1
52	65–6903	Strip – Cover Seal	1
53	88–7900	Cover Bracket Assembly (Incl. Ref. #54)	1
54	32148–6	Insert – Threaded	1

Ref. No.	Part No.	Description	No. Used
55	321–3	Screw – Cap Hex. Hd.	2
56	3253–3	Washer – Lock	2
57	88–7380	Spacer – Pulley Support	1
58	3256–22	Washer – Flat	2
59	88–7970	Clip	1

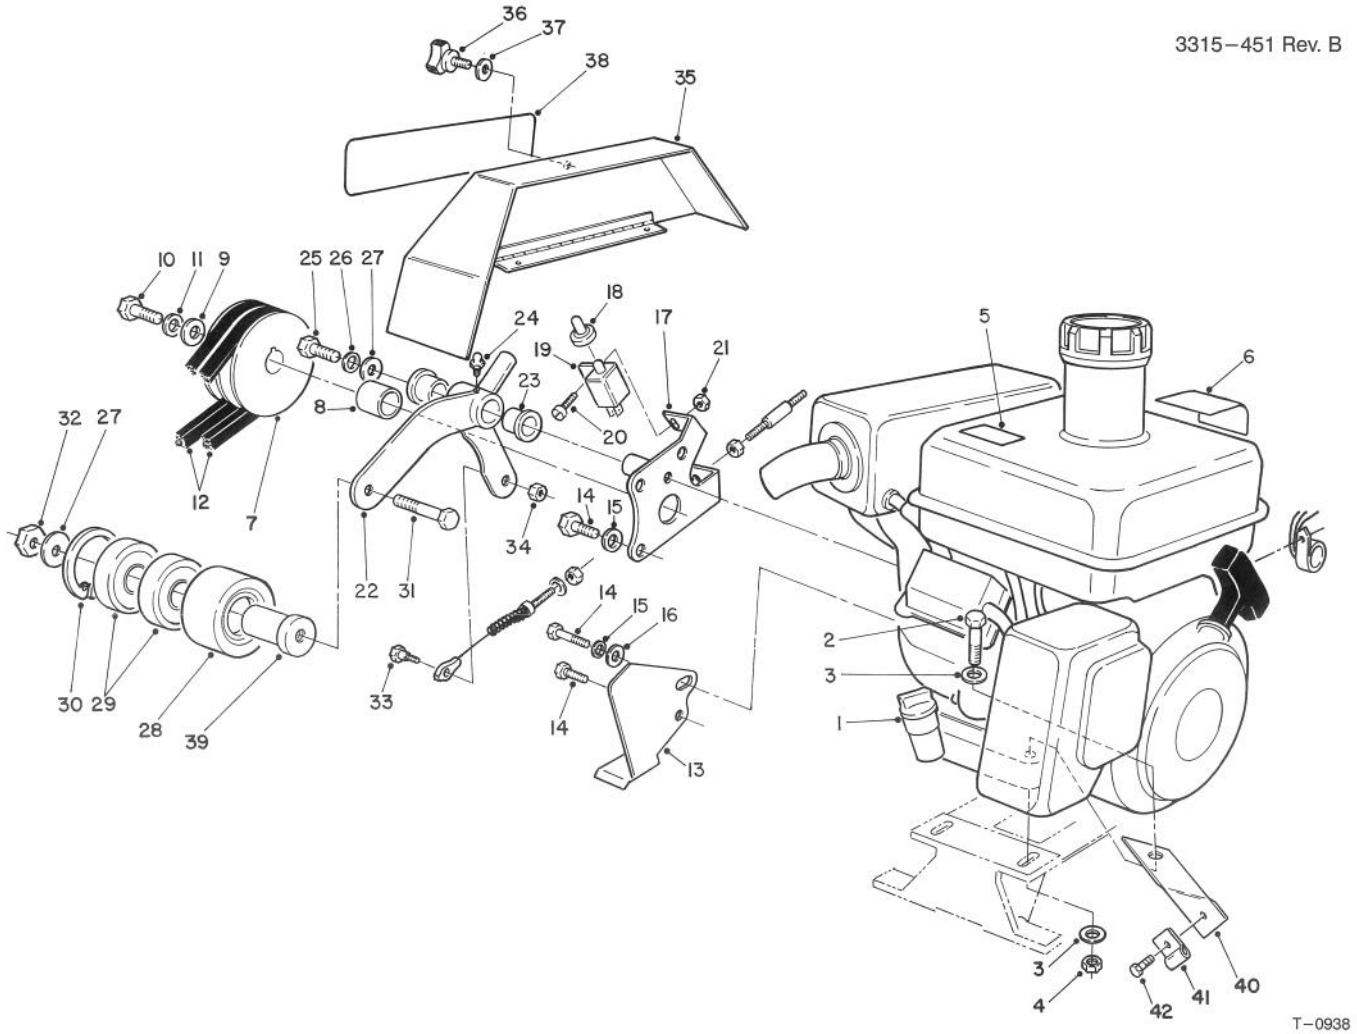


ENGINE AND BELLCRANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–7260	Engine Assembly Kawasaki Model FE120G–AS00	1
2	322–9	Screw – Cap Hex. Hd.	4
3	3256–56	Washer – Flat	8
4	3296–29	Nut – Lock	4
‡5	63–8440	Decal – Hot (English)	1
‡6	88–7620	Decal – Fuel (English)	1
7	65–7260	Pulley – Input Drive	1
8	65–8260	Spacer – Engine Shaft	1
9	65–8270	Washer – Flat	1
10	48–9460	Screw – Cap Hex. Hd.	1
11	3253–4	Washer – Lock	1
12	65–7270	Belt – V (Set of 2)	1
13	88–7290	Support – Belt	1
14	48–7700	Screw – Cap Hex. Hd.	5
15	3253–4	Washer – Lock	4
16	3256–23	Washer	1
17	88–7320	Support – Bellcrank	1
18	65–7400	Boot – Switch	1
19	65–7410	Switch	1
20	3252–4	Screw – Hex. Socket Hd.	2

Ref. No.	Part No.	Description	No. Used
21	32149–7	Nut – Lock	2
22	88–7330	Bellcrank	1
23	65–8770	Bushing	2
24	302–5	Fitting – Grease	1
25	323–4	Screw – Cap Hex. Hd.	1
26	3253–21	Washer – Lock	1
27	3256–24	Washer – Flat	2
28	88–7890	Idler Pulley Assembly (Incl. Ref. #29, 30 & 39)	1
29	38–7820	Bearing – Ball	2
30	32120–42	Ring – Retaining	1
31	323–31	Screw – Cap Hex. Hd.	1
32	3296–39	Nut – Lock	1
33	11–9030	Bolt – Shoulder	1
34	3296–42	Nut – Lock	1
35	88–7750	Cover – Bellcrank	1
36	88–7660	Retainer – Cover	1
37	32151–106	Ring – Puush–On	1
38	88–7630	Decal – Greensmaster 1000	1
39	88–7350	Spacer – Pulley Support	1
40	88–7960	Bracket – Throttle Cable	1
41	2412–21	Clip – Cable	1
42	32144–73	Screw – Hex. Washer Hd.	1

‡For different language versions of this part, see International Decal Cross Reference.

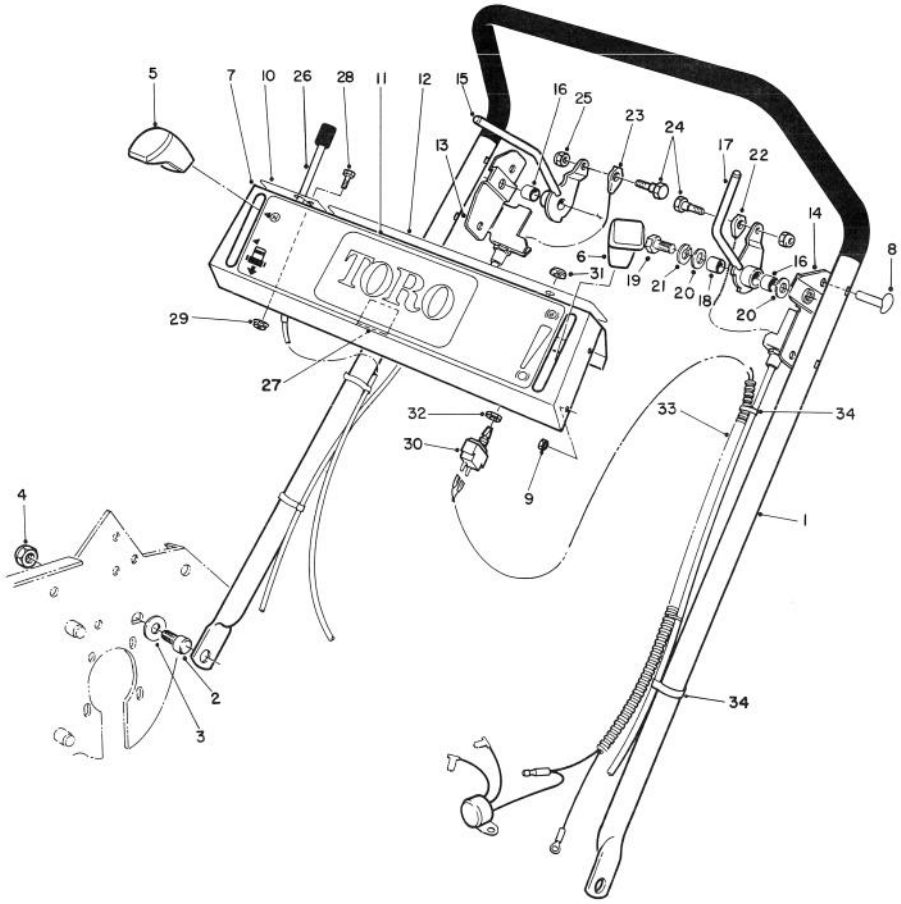


T–0941B

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–7390	Handle	1
2	65–7450	Stud – Pivot	2
3	65–7460	Washer	2
4	3296–28	Nut – Lock	2
5	65–8970	Knob – Black	1
6	65–8971	Knob – Red	1
7	88–7400	Panel – Control	1
8	17–9420	Screw – Handle	4
9	3296–29	Nut – Lock	4
‡10	65–8170	Decal – Throttle (English)	1
‡11	65–7670	Decal – Throttle Panel (English)	1
‡12	65–7680	Decal – Throttle Ingnition (English)	1
13	88–7420	Bracket – Clutch	1
14	88–7440	Bracket – Brake	1
15	65–7610	Clutch Lever Assembly (Incl. Ref. #16)	1
16	256–206	Bushing	2
17	65–7710	Brake Lever Assembly (Incl. Ref. #16)	1
18	88–7450	Spacer	2
19	3210–7	Screw – Cap Hex. Hd.	2
20	3256–23	Washer	4
21	3253–4	Washer – Lock	2
22	65–8830	Cable – Brake	1
23	65–8831	Cable – Clutch	1
24	11–9030	Screw – Shoulder	2
25	3296–42	Nut	2
26	88–7910	Throttle Assembly	1
27	66–2000	Decal – Noise Rating	1
28	3290–134	Screw – Cap Hex. Hd.	3
29	3296–2	Nut – Lock	3
30	28–4110	Switch On/Off	1
31	218–497	Nut – Face	1
32	218–498	Nut – Lock	1
33	65–8780	Harness – Wire	1
34	3290–378	Tie – Wire	6

*Not Illustrated

‡For different language versions of this part, see International Decal Cross Reference.

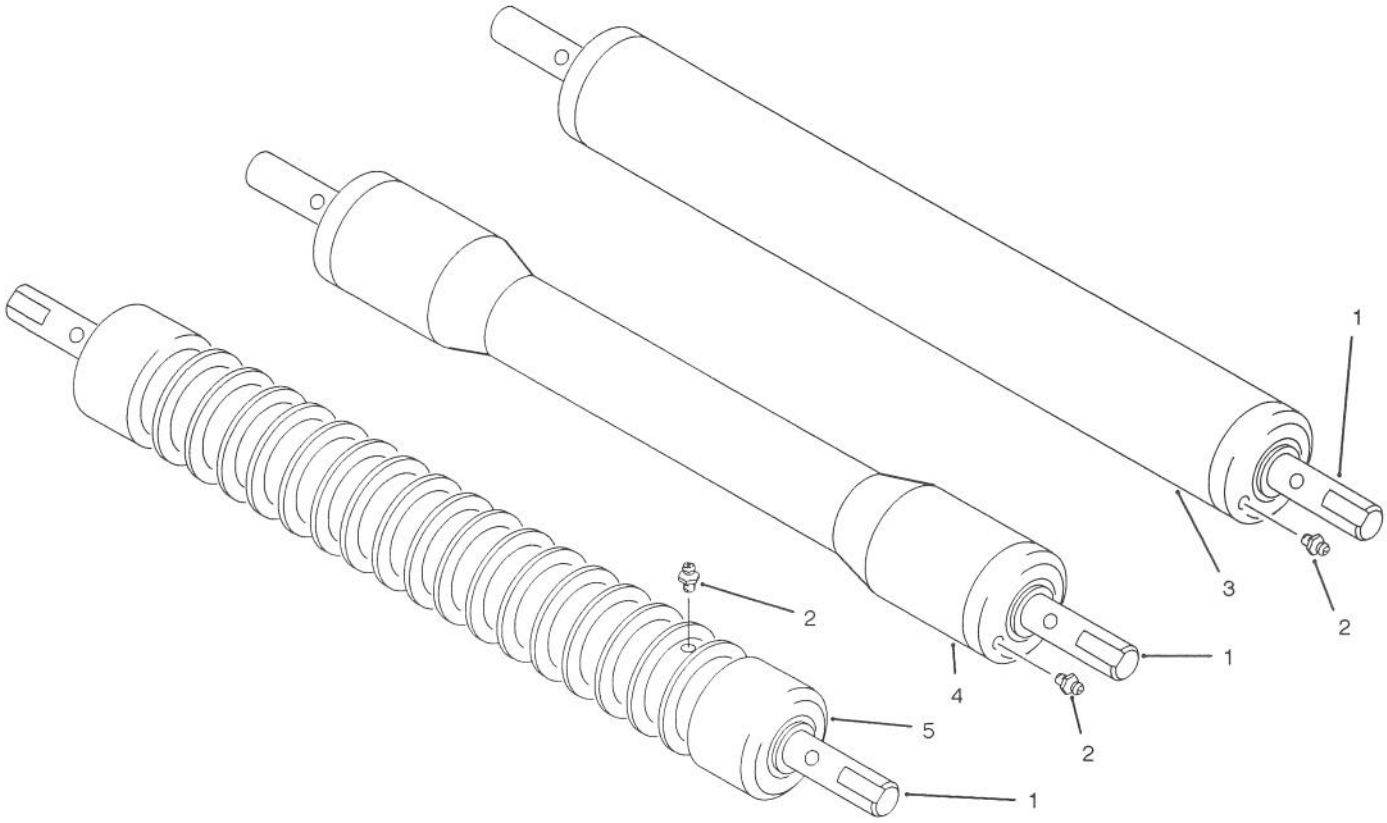


T–0956

CUTTING UNIT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	52–3210	Bearing – Roller	2
2	302–5	Fitting – Grease	2
3	52–3170	Assembly – Roller (Incl. Ref. #1 & 2)	1

Ref. No.	Part No.	Description	No. Used
4	52–3590	Assembly – Swaged Roller (Incl. Ref. #1 & 2)	1
5	71–1550	Assembly – Wiehle Roller (Incl. Ref. #1 & 2)	1
*	04118	Wiehle Roller (Carton of 1)	1

*Not Illustrated

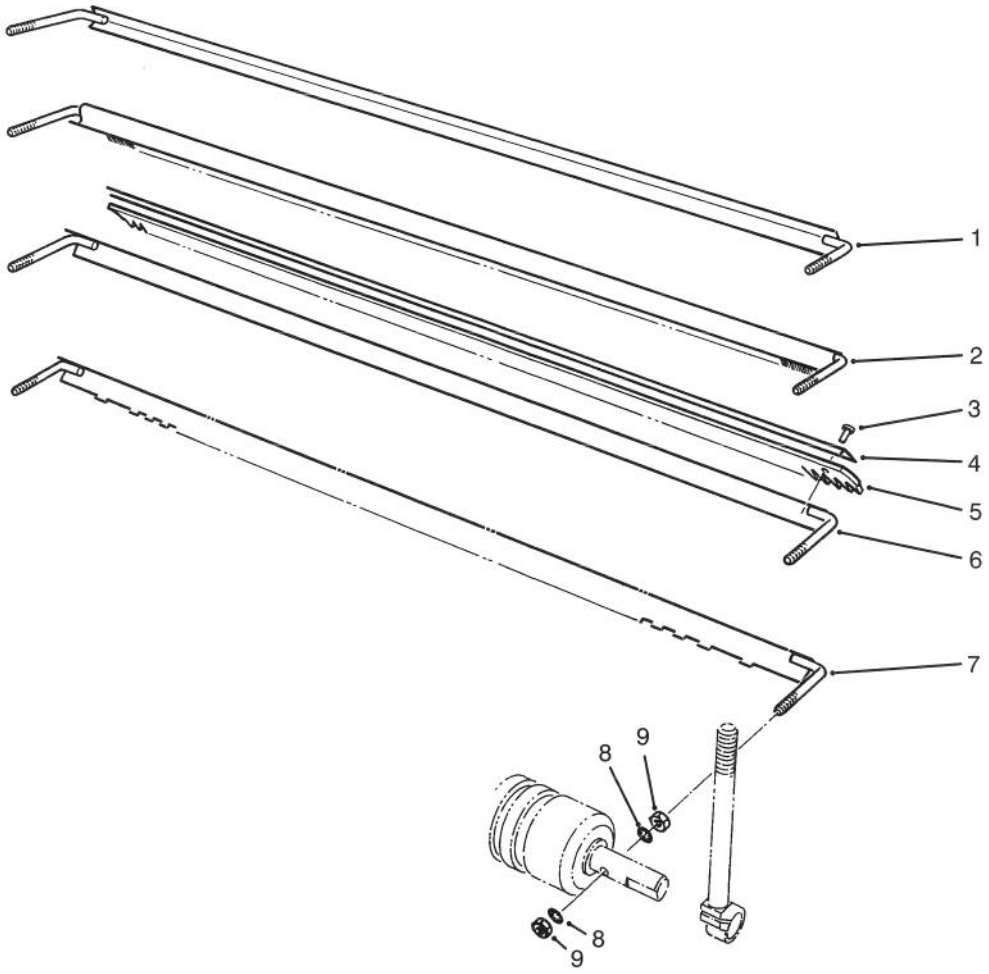

T–0955


SCRAPER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	65–8360	Scraper – Smooth	1
2	33–1000	Scraper – Brush	1
3	3295–15	Rivet	11
4	8–2520	Support – Comb	1
5	8–2530	Comb – Urethane	1

Ref. No.	Part No.	Description	No. Used
6	11–0070	Assembly – Comb, Scraper (Incl. Ref. #3–5)	1
7	65–8340	Scraper – Wiehle Roller	1
8	3254–8	Washer – Lock I.T.L.W.	4
9	3219–1	Nut–Hex	4

SPECIAL TOOLS


BEDKNIFE SCREW TOOL NO. *TOR510880

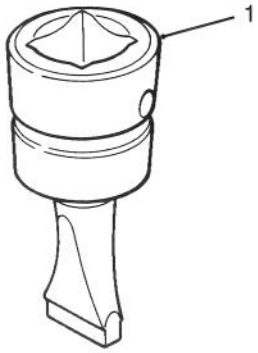

T–0729

Ref. No.	Part No.	Description	No. Used
1	51–0880	Tool – Bedknife Screw	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

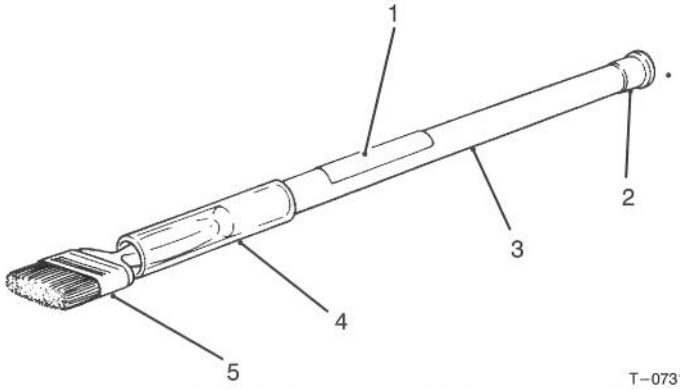

T–0731

Ref. No.	Part No.	Description	No. Used
1	12–9140	Decal	1
2	2410–18	Plug	1
3	29–9080	Handle	1
4	29–9090	Hose – Handle	1
5	36–4310	Brush	1


HEIGHT–OF–CUT BAR ASSEMBLY NO. 13–8199

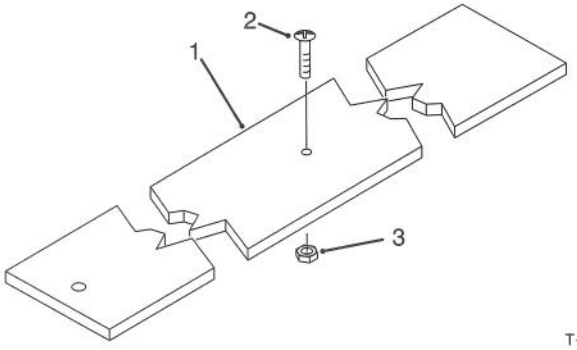

T–1763

Ref. No.	Part No.	Description	No. Used
1	65–8320	Bar	1
2	32122–22	Screw – Phill. Truss Hd.	1
3	3219–14	Nut.	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1–800–533–0492 (in Minnesota and Canada 1–507–455–7050) Fax. 507–455–7011.

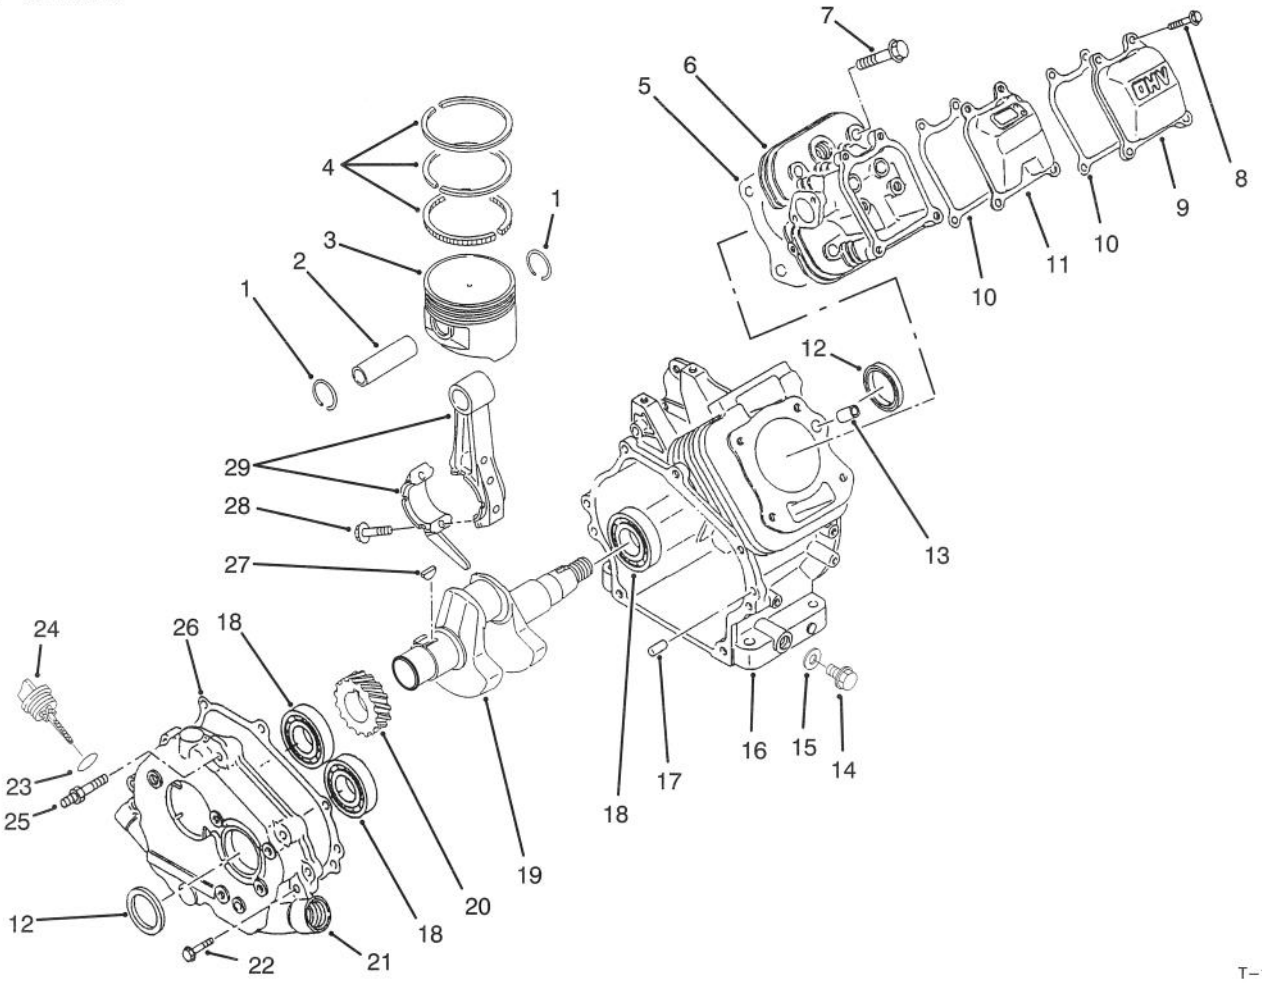


T–1623

ENGINE
CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92036–003	Ring – Retaining	2
2	13002–1005	Pin– Piston	1
3	13001–2132	Piston	1
4	13008–6027	Piston Ring Set	1
5	11004–2113	Gasket – Head	1
6	11008–2092	Head – Cylinder	1
7	130T0845	Bolt – Flanged	4
8	130C0612	Bolt – Flanged	4
9	11022–2065–9H	Case – Rocker	1
10	11060–2048	Gasket – Rocker	2
11	14069–2080	Breather	1
12	313650–4231–00	Seal – Oil	2
13	92043–1037	Pin	2
14	92066–2203	Plug – Drain	2
15	11009–2175	Gasket – Drain Plug	2
16	49120–2241	Crankcase	1

Ref. No.	Part No.	Description	No. Used
17	551A0612	Pin	2
18	601A6204	Bearing – Ball	3
19	49119–6122	Crankshaft Assembly (Incl. Ref. #20 & 27)	1
20	59056–2862	Gear – Helical	1
21	49015–6103	Cover – Crankcase	1
22	130G0630	Bolt – Flanged	7
23	92055–2064	Seal – O–Ring	2
24	16115–2091	Cap – Oil Filler	2
25	92150–2261	Stud	1
26	11060–2044	Gasket – Crankcase	1
27	92038–2093	Key	1
28	92150–2122	Bolt – Rod	2
29	13251–6045	Connecting Rod Assy. (Incl. Ref. #29)	1

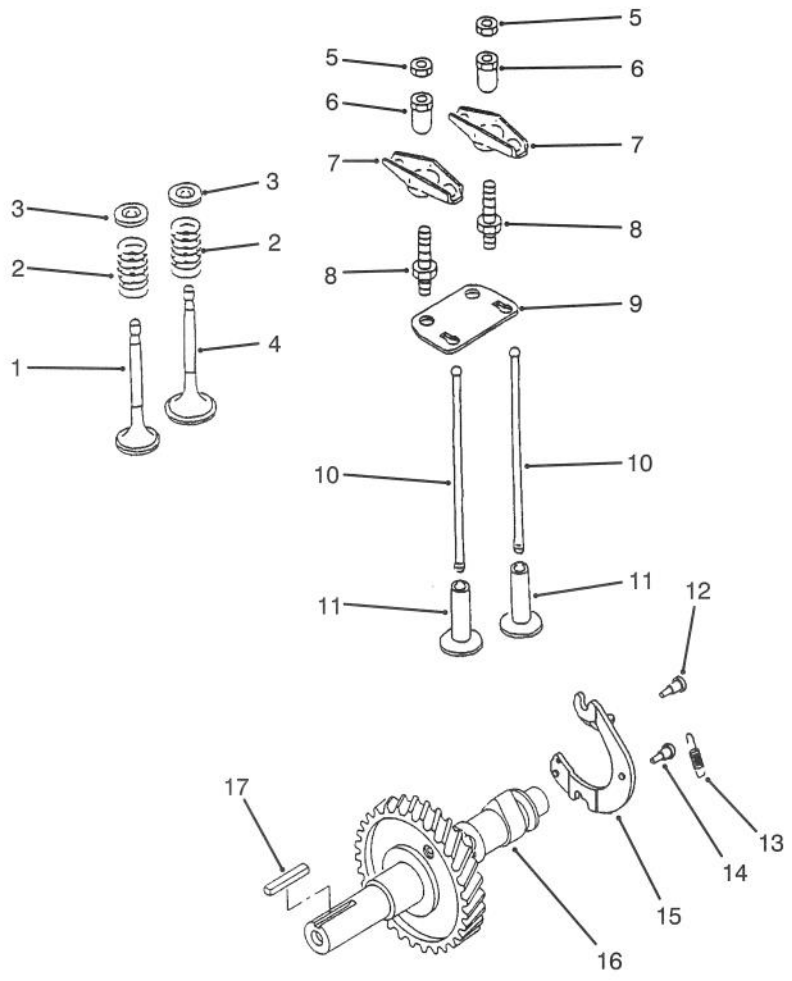


T–1624

ENGINE
CAMSHAFT & VALVES ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	12005–2087	Valve – Exhaust	1
2	49078–2064	Spring – Valve	2
3	12009–2062	Retainer – Spring	2
4	12004–2098	Valve – Intake	1
5	92015–2240	Nut	2
6	92015–2253	Nut	2
7	12016–2059	Arm – Rocker	2
8	92150–2198	Bolt	2
9	13070–2083	Guide	1


Ref. No.	Part No.	Description	No. Used
10	13116–2072	Rod – Push	2
11	12032–2064	Tappet	2
12	92043–2130	Pin	2
13	92144–2049	Spring	1
14	92043–2122	Pin	1
15	21118–2084	Decompressor	1
16	49118–6081	Camshaft Assembly (Incl. Ref. #12–15)	1
17	511A0525	Key	1

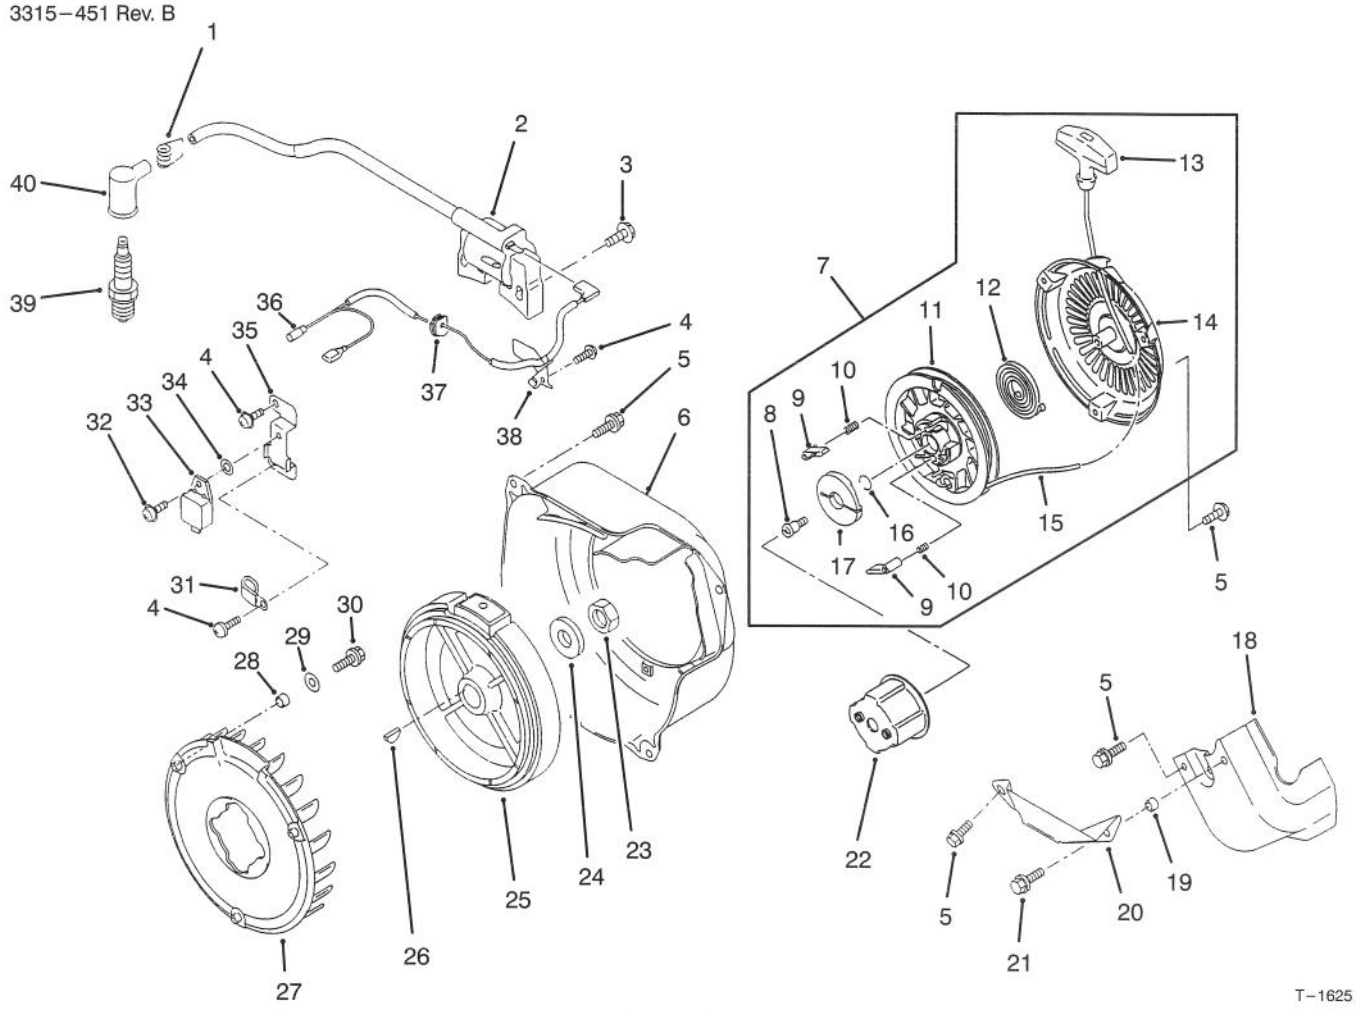

ENGINE
IGNITION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	317270–8419A	Terminal	1
2	21171–2188	Coil – Ignition	1
3	130B0625	Bolt – Flanged	2
4	92009–2166	Screw	3
5	130B0608	Bolt – Flanged	10
6	59066–2605–9H	Housing – Fan	1
7	49088–2409–9H	Recoil Starter Assy. (Incl. Ref. #8–17)	1
8	92009–2311	Screw	1
9	13165–2082	Pawl – Recoil	2
10	92144–2177	Spring – Return	2
11	59101–2086	Reel – Recoil	1
12	92144–2272	Spring	1
13	313601–3454B	Grip	1
14	32099–2233–9H	Case – Recoil	
15	59106–2119	Rope	1
16	92033–2160	Ring – Retaining	1
17	13070–2088	Guide – Pawl	1
18	49089–2351–9H	Shroud – Engine	1
19	92027–103	Collar	1
20	49089–2378–9H	Shroud – Engine	1

Ref. No.	Part No.	Description	No. Used
21	130B0614	Bolt – Flanged	1
22	49080–2163	Pulley – Recoil	1
23	314G1400	Nut	1
24	314401–3482A	Washer	1
25	21194–2245	Flywheel	1
26	92038–2077	Key	1
27	59041–2073	Fan	1
28	92143–2009	Collar	3
29	311509–3595–00	Washer	3
30	130G0616	Bolt – Flanged	3
31	92037–2171	Clamp	1
32	242B0410	Screw – Pan Hd.	1
33	21119–2139	Igniter	1
34	315801–6625A	Washer	1
35	11046–2142	Bracket	1
36	26011–2270	Lead – Wire	1
37	92071–2135	Grommet	1
38	92170–2062	Clamp	1
39	92070–1167	Plug – Spark (NGK BP5ES)	1
40	21130–2066	Cap – Spark Plug	1

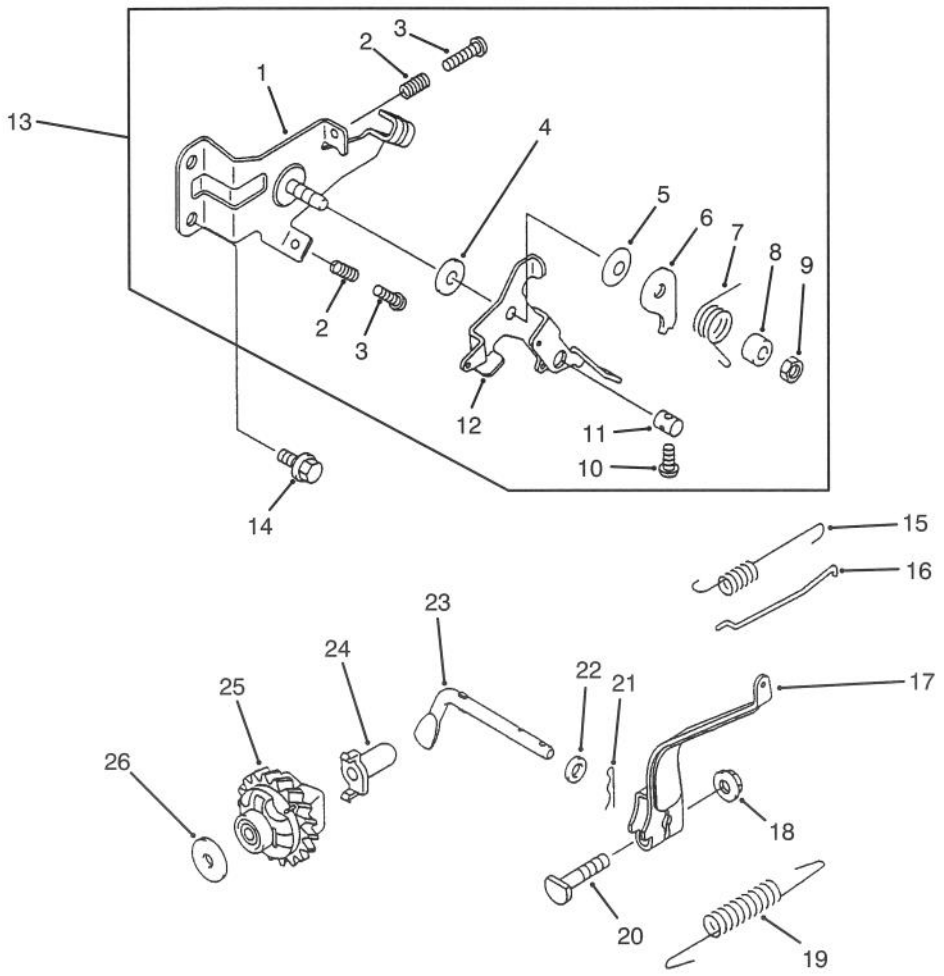


T–1618

ENGINE
GOVERNOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	59226–2252	Panel – Control	1
2	92144–2266	Spring	2
3	92150–2227	Bolt	2
4	314401–5383A	Washer	1
5	314401–5388A	Spring	1
6	13183–2371	Plate	1
7	92144–2270	Spring	1
8	92026–2304	Spacer	1
9	314401–5385A	Nut	1
10	214B0414	Screw – Pan Hd.	1
11	92015–2120	Nut	1
12	31368–2330	Lever	1
13	39180–2779	Control Panel Assy. (Incl. Ref. #1–12)	1

Ref. No.	Part No.	Description	No. Used
14	130B0612	Bolt – Flanged	2
15	314499–5232A	Spring	1
16	49046–2098	Rod – Governor	1
17	49103–2124	Arm – Governor	1
18	92015–1193	Nut	1
19	39129–2052	Spring – Governor	1
20	92002–2269	Bolt	1
21	554A0600	Pin – Snap	1
22	92200–2029	Washer	1
23	39003–2074	Arm – Pivot	1
24	314401–5121B	Sleeve	1
25	49110–2076	Governor Assembly	1
26	314401–5135A	Washer	1

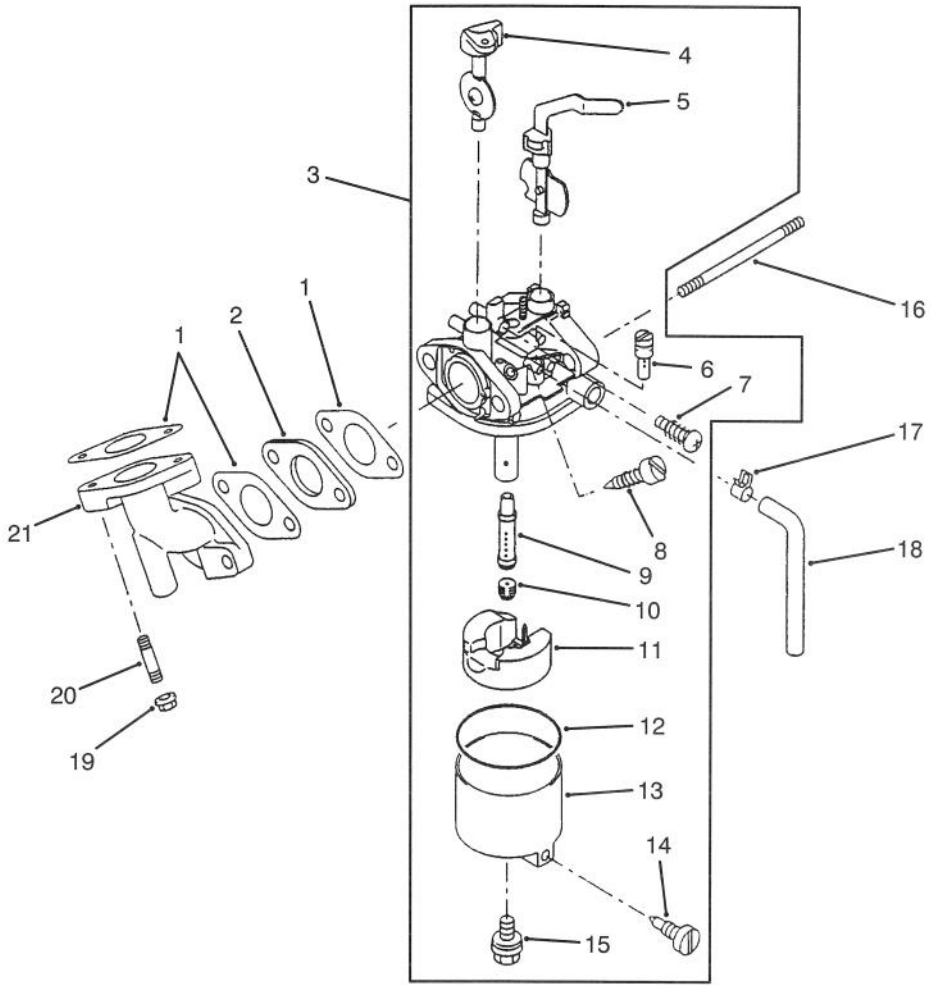


T–1619

ENGINE
CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	11060–2051	Gasket – Carburetor	3
2	16073–2156	Insulator	1
3	15003–2298	Carburetor Assembly (Incl. Ref. #4–15)	1
4	16185–2007	Valve – Throttle	1
5	16186–2011	Valve – Choke	1
6	92064–2082	Jet – Pilot #42	1
7	23013–2054	Screw Assembly	1
8	23013–2055	Screw – Assembly	1
9	49121–2167	Nozzle – Main	1
10	92063–2233	Jet – Main #70	1
11	16183–2001	Float Assembly	1

Ref. No.	Part No.	Description	No. Used
12	11009–2919	Gasket	1
13	16184–2002	Float Chamber Assy. (Incl. Ref. #14)	1
14	23013–2053	Screw Assembly	1
15	92150–2209	Bolt	1
16	172G0673	Bolt – Stud	2
17	395115–6812–00	Clamp	1
18	92190–2105	Tube	1
19	92015–1193	Nut	2
20	172G0618	Bolt – Stud	2
21	16060–2160	Pipe – Intake	1

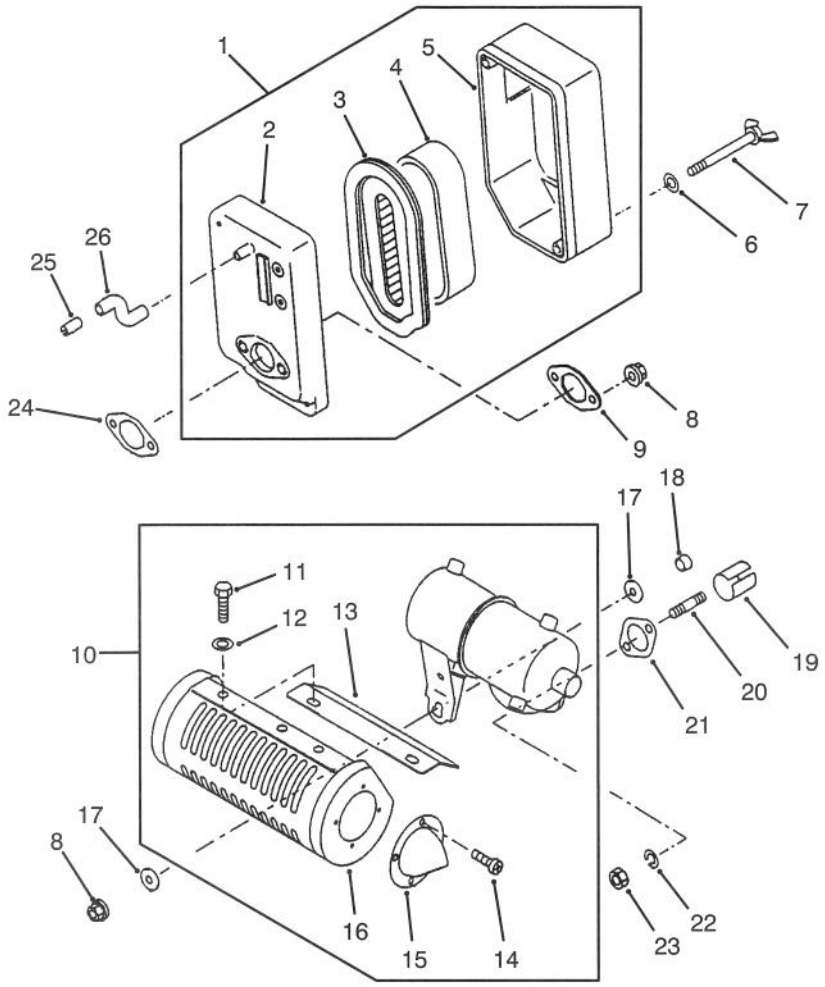


T–1620

ENGINE
AIR FILTER & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	11010–2459	Air Filter Assembly (Incl. Ref. #2–5)	1
2	11011–2241	Case – Air Filter	1
3	11013–2132	Element – Air Filter	1
4	11013–2133	Element – Air Filter	1
5	11012–2325	Cap – Air Filter	1
6	411F0500	Washer	22
7	92150–2226	Bolt	2
8	92015–1193	Nut	3
9	13183–2416	Plate – Air Filter	1
10	49069–2256	Muffler Assembly (Incl. Ref. #11–16)	1
11	110R0610	Bolt	4
12	411B0600	Washer	4


Ref. No.	Part No.	Description	No. Used
13	49106–2527–YM	Cover – Muffler	1
14	92009–2307	Screw	4
15	59156–2057–YM	Pipe – Tail	1
16	49106–2530–YM	Cover – Muffler	1
17	92200–2037	Washer	2
18	92027–2086	Collar	1
19	19049–2220	Pipe – Exhaust	1
20	171G0616	Bolt – Stud	2
21	11060–2037	Gasket – Muffler	1
22	461F0600	Washer – Spring	2
23	311R0600	Nut – Hex.	2
24	11060–2049	Gasket – Air Filter	1
25	314401–1341A	Pipe	1
26	92190–2043	Tube	1

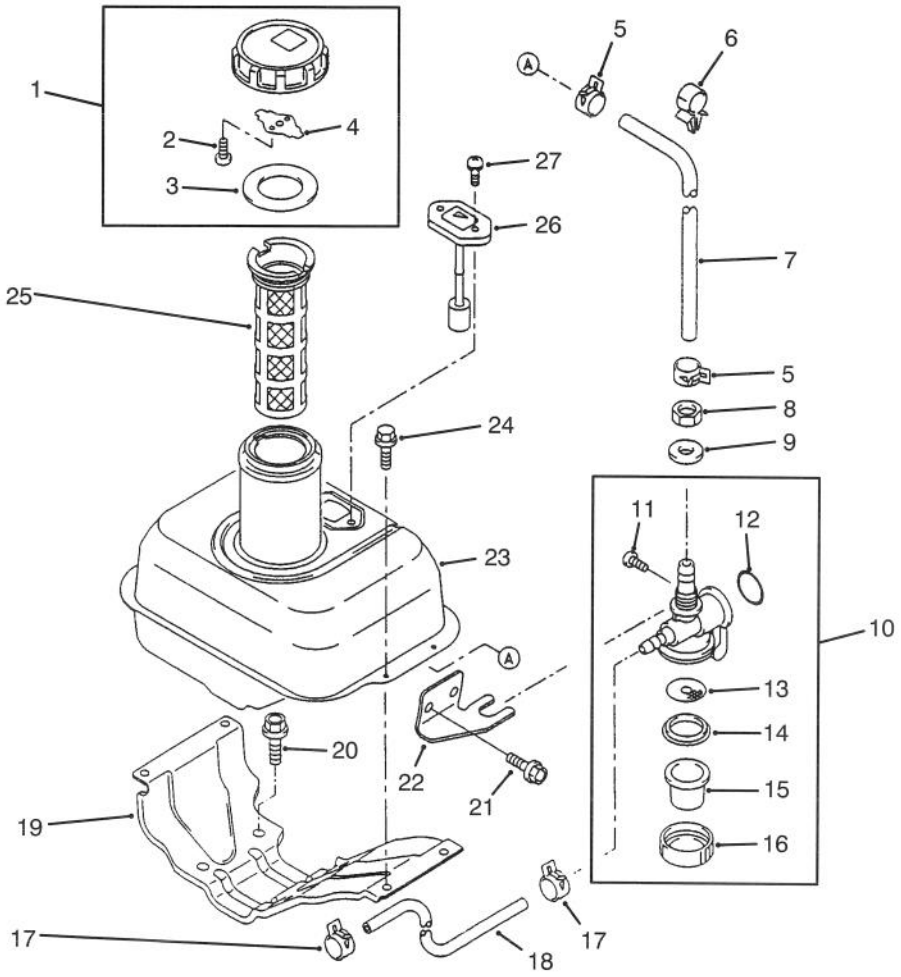

T–1621

ENGINE
FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	51048–2055	Fuel Cap Assembly (Incl. Ref. #2–4)	1
2	314401–6732A	Screw	2
3	315801–6643B	Gasket	1
4	315801–6644A	Spring	1
5	316677–6812A	Clamp	2
6	92170–2067	Clamp	1
7	92190–2095	Tube	1
8	313650–6527–00	Nut	1
9	410B1000	Washer	1
10	51023–2131	Tap Assembly (Incl. Ref. #11–16)	1
11	313650–6517–00	Screw	1
12	313650–6512–00	Seal – O–Ring	1
13	14043–2058	Filter – Tap	1
14	313650–6518–02	Gasket	1
15	51036–2063	Cup – Tap	1
16	313650–6522–00	Nut	1
17	311702–6812A	Clamp	2
18	92190–2096	Tube	1
19	32052–2209–9H	Bracket – Tank	1
20	130B0816	Bolt – Flanged	4
21	130B0508	Bolt – Flanged	2
22	11047–2073	Bracket	1
23	51001–2264–9H	Tank – Fuel	1
24	187J0614	Bolt	4
25	49019–2106	Filter – Fuel	1
26	52005–2072	Gauge – Fuel	1
27	315801–6577A	Screw	2

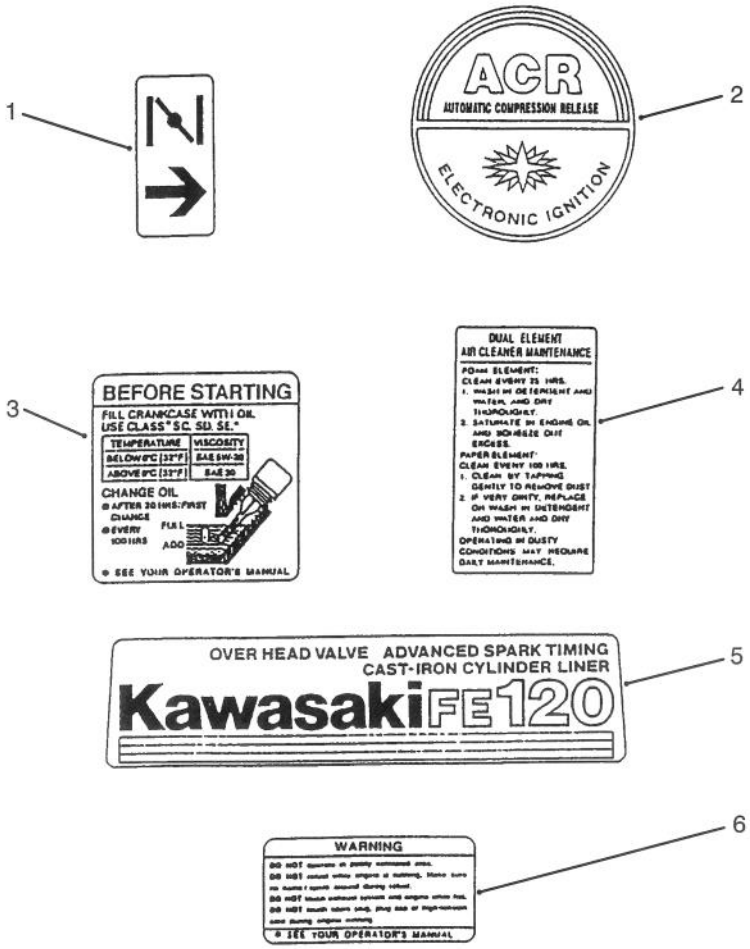

T–1622

ENGINE
DECALS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	56030–2423	Decal – Choke	1
2	56030–2475	Decal – Recoil	1
3	56031–2359	Decal – Instruction	1
4	56031–2387	Decal – Maintenance	1
5	56038–2792	Decal – Model	1
6	56040–2188	Decal – Warning	1

INTERNATIONAL DECAL CROSS REFERENCE

JAPANESE DECAL KIT NO. 88–7980

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	JAPANESE
Decal Danger	Engine	88–7620	92–4813
Decal Reel Engagement	Reel Drive Cover	65–7660	92–4817
Decal Throttle	Control Panel	65–8170	92–4821
Decal Manual	Control Panel	65–7680	92–4825
Decal Noise	Control Panel	66–2000	66–2000
Decal Control Panel	Control Panel	65–7670	92–4829
Decal Warning	Frame	55–4300	84–2940
Decal Warning	Grass Shield	62–5070	84–6560
Decal Hot Surface	Engine	63–8440	83–2560
Decal ANSI	Frame	N/A	92–4833
Reference Chart	Grass Shield	65–8650	92–4837

FRENCH DECAL KIT NO. 88–7990

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	FRENCH
Decal Danger	Engine	88–7620	92–4810
Decal Reel Engagement	Reel Drive Cover	65–7660	92–4814
Decal Throttle	Control Panel	65–8170	92–4818
Decal Manual	Control Panel	65–7680	92–4822
Decal Noise	Control Panel	66–2000	66–2000
Decal Control Panel	Control Panel	65–7670	92–4826
Decal Warning	Frame	55–4300	84–2880
Decal Warning	Grass Shield	62–5070	84–6530
Decal Hot Surface	Engine	63–8440	84–9600
Decal ANSI	Frame	N/A	92–4830
Reference Chart	Grass Shield	65–8650	92–4834

INTERNATIONAL DECAL CROSS REFERENCE (Cont.)

GERMAN DECAL KIT NO. 88–8000

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	GERMAN
Decal Danger	Engine	88–7620	92–4812
Decal Reel Engagement	Reel Drive Cover	65–7660	92–4816
Decal Throttle	Control Panel	65–8170	92–4820
Decal Manual	Control Panel	65–7680	92–4824
Decal Noise	Control Panel	66–2000	66–2000
Decal Control Panel	Control Panel	65–7670	92–4828
Decal Warning	Frame	55–4300	84–2890
Decal Warning	Grass Shield	62–5070	84–6540
Decal Hot Surface	Engine	63–8440	84–9610
Decal ANSI	Frame	N/A	92–4832
Reference Chart	Grass Shield	65–8650	92–4836

SPANISH DECAL KIT NO. 88–8010

DESCRIPTION	LOCATION	PART NUMBER	
		ENGLISH	SPANISH
Decal Danger	Engine	88–7620	92–4811
Decal Reel Engagement	Reel Drive Cover	65–7660	92–4815
Decal Throttle	Control Panel	65–8170	92–4819
Decal Manual	Control Panel	65–7680	92–4823
Decal Noise	Control Panel	66–2000	66–2000
Decal Control Panel	Control Panel	65–7670	92–4827
Decal Warning	Frame	55–4300	84–2900
Decal Warning	Grass Shield	62–5070	84–6580
Decal Hot Surface	Engine	63–8440	84–9590
Decal ANSI	Frame	N/A	92–4831
Reference Chart	Grass Shield	65–8650	92–4835

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
8–2520	Support – Comb	14	4	1
8–2530	Comb – Urethane	14	5	1
10–5060	Bracket – H.O.C.	1	18	2
11–0070	Assembly – Comb, Scraper	14	6	1
11–9030	Bolt – Shoulder	9	14	1
11–9030	Bolt – Shoulder	11	33	1
11–9030	Screw – Shoulder	12	24	2
12–9140	Decal	15	1	1
17–9420	Screw – Handle	12	8	4
28–4110	Switch On/Off	12	30	1
29–9080	Handle	15	3	1
29–9090	Hose – Handle	15	4	1
33–1000	Scraper – Brush	14	2	1
36–4310	Brush	15	5	1
36–7260	Bar – Cutoff	5	7	1
38–7820	Bearing – Ball	11	29	2
38–7820	Bearing – Ball	6	41	2
38–7820	Bearing – Ball	3	44	1
38–7820	Bearing – Ball	9	45	2
48–7700	Screw – Cap Hex. Hd.	11	14	5
48–9460	Screw – Cap Hex. Hd.	11	10	1
51–0880	Tool – Bedknife Screw	15	1	1
52–2890	Bushing – Flange	5	17	2
52–2890	Nyliner	1	8	2
52–3170	Assembly – Roller	13	3	1
52–3210	Bearing	2	39	2
52–3210	Bearing – Roller	13	1	2
52–3590	Assembly – Swaged Roller	13	4	1
55–4300	Decal – Warning	2	51	2
57–4910	Screw – Special	5	13	13
62–5070	Decal – Shield	5	9	1
63–8440	Decal – Hot	11	5	1
63–8470	Bedknife – 1/8"	5	19	1
63–8560	Bedknife – Tournament	5	*	1
63–9510	Bushing – Rubber	5	18	2
63–9510	Bushing Assembly	1	7	2
65–6200	Belt – Reel Drive	3	41	1
65–6210	Belt	6	12	2
65–6220	Cover – Bearing	6	17	1
65–6240	Bedbar	5	12	1
65–6260	Washer – Thrust	5	14	4
65–6270	Bolt – Bedbar	5	15	2
65–6290	Spring – Clutch Detent	3	20	1
65–6360	Support – Spring	1	11	2
65–6380	Collar – Thrust	1	13	2
65–6400	Spring – Compression	1	12	2
65–6450	Bracket – Shield LH	5	2	1
65–6460	Bracket – Shield RH	5	3	1
65–6570	Washer	6	15	2
65–6590	Flangette	6	20	2
65–6660	Pulley	6	13	2
65–6700	Flangette	9	6	1
65–6710	Flangette	9	8	1
65–6720	Plate – Screw	9	5	1
65–6760	Housing – Bearing	9	27	1
65–6800	Boot – Differential	9	43	1
65–6810	Support – Brake	9	21	2
65–6850	Key	9	33	1
65–6901	Strip – Cover Seal	10	50	1
65–6902	Strip – Cover Seal	10	51	1
65–6903	Strip – Cover Seal	10	52	1
65–6940	Clutch – Jaw Driver	3	11	1
65–6970	Seal – Felt	3	18	1
65–7131	Trim – Groomer Arm Cover	3	31	1
65–7190	Cover – Groomer Arm	3	30	1
65–7230	Basket – Grass	7	13	1
65–7260	Pulley – Input Drive	11	7	1
65–7270	Belt – V (Set of 2)	11	12	1
65–7400	Boot – Switch	11	18	1
65–7410	Switch	11	19	1
65–7450	Stud – Pivot	12	2	2
65–7460	Washer	12	3	2
65–7470	Arm – Handle LH	1	27	1
65–7480	Arm – Handle RH	1	28	1
65–7490	Socket – Handle RH	1	29	1
65–7500	Socket – Handle LH	1	30	1
65–7510	Grommet – Handle	1	31	2
65–7610	Clutch Lever Assembly	12	15	1
65–7660	Decal – Reel Engagement	4	56	1
65–7670	Decal – Throttle Panel	12	11	1
65–7680	Decal – Throttle Ingnition	12	12	1
65–7710	Brake Lever Assembly	12	17	1
65–8170	Decal – Throttle	12	10	1
65–8180	Seal – Grass Catcher	2	50	1
65–8250	Bedknife – Micro	5	*	1
65–8260	Spacer – Engine Shaft	11	8	1
65–8270	Washer – Flat	11	9	1
65–8290	Standoff – Cover	3	36	2
65–8320	Bar	15	1	1
65–8340	Scraper – Wiehle Roller	14	7	1
65–8360	Scraper – Smooth	14	1	1
65–8570	Rod – Grass Catcher	2	44	2
65–8590	Holddown – Handle	6	32	2
65–8600	Knob – Height Adjust.	1	20	2
65–8610	Lever – Brake	9	19	1
65–8640	Housing – Bearing	6	27	1
65–8640	Housing – Bearing	3	34	1
65–8650	Decal – Service	5	10	1
65–8670	Adjuster – Frame	1	10	2
65–8680	Washer – Thrust	1	14	2
65–8690	Screw – Adjusting	1	16	2
65–8700	Band – Brake	9	25	1
65–8710	Flangette	6	22	2
65–8720	Closure	6	29	2
65–8730	Clamp – Bearing	6	30	4
65–8770	Bushing	11	23	2
65–8780	Harness – Wire	12	33	1
65–8830	Cable – Brake	12	22	1
65–8831	Cable – Clutch	12	23	1
65–8890	Pulley – Input Shaft	9	16	1
65–8910	Pulley – Countershaft	9	32	1
65–8960	Boot – Clutch	3	28	1
65–8970	Knob – Black	12	5	1
65–8971	Knob – Red	12	6	1
65–9010	Shield – Grass	5	1	1
65–9080	Belt	9	35	1
65–9120	Pulley – Differential	7	9	1
65–9500	Screw – Roller Adjust.	1	19	2
66–2000	Decal – Noise Rating	12	27	1
71–1550	Assembly – Wiehle Roller	13	5	1
86–7130	Spacer	6	10	2
86–7130	Spacer – Short	9	26	1
86–7140	Spacer – Long	9	31	1
88–6790	Wiehle Roller Assembly	2	37	1
88–7030	Tube – Front Frame	1	1	1
88–7040	Angle – Rear Frame	1	4	1
88–7060	Plate – Side RH	1	5	1
88–7080	Side Plate Assembly LH	1	9	1
88–7090	Spacer LH	2	40	1
88–7100	Spacer RH	2	41	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
88–7110	Rod – Frame Support	2	42	1
88–7140	Shaft – Power	3	9	1
88–7150	Key – Square	3	10	2
88–7170	Lever – Clutch	3	24	1
88–7190	Spacer – Pulley Support	6	47	2
88–7190	Spacer – Pulley Support	4	59	1
88–7200	Washer – Flat	6	43	2
88–7200	Washer – Flat	3	46	1
88–7200	Washer – Flat	9	46	1
88–7210	Differential Assembly	7	8	1
88–7230	Housing – Countershaft	9	1	1
88–7240	Cover – Box Front	9	37	1
88–7250	Cover – Box Rear	9	38	1
88–7260	Engine Assembly	11	1	1
88–7280	Drum Assembly	7	1	2
88–7290	Support – Belt	11	13	1
88–7320	Support – Bellcrank	11	17	1
88–7330	Bellcrank	11	22	1
88–7350	Spacer – Pulley Support	11	39	1
88–7380	Spacer – Pulley Support	10	57	1
88–7390	Handle	12	1	1
88–7400	Panel – Control	12	7	1
88–7420	Bracket – Clutch	12	13	1
88–7440	Bracket – Brake	12	14	1
88–7450	Spacer	12	18	2
88–7470	Housing – LH	6	4	1
88–7490	Housing – RH	6	*	1
88–7510	Shaft – Drum RH	7	*	1
88–7520	Shaft – Drum LH	7	4	1
88–7530	Spacer	6	1	2
88–7540	Washer – Backup	6	2	2
88–7550	Pulley – RH	6	*	1
88–7560	Pulley – LH	6	3	1
88–7620	Decal – Fuel	11	6	1
88–7630	Decal – Greensmaster 1000	11	38	1
88–7640	Shaft – Drum	7	3	1
88–7660	Retainer – Cover	11	36	1
88–7670	Base – Engine	2	47	1
88–7680	Cover – Drum Belt LH	6	36	1
88–7690	Cover – Drum Belt RH	6	*	1
88–7700	Cover – Reel Drive	3	50	1
88–7710	Seal – Countershaft	9	34	1
88–7720	Washer – Wave	3	7	1
88–7750	Cover – Bellcrank	11	35	1
88–7770	Strip – Seal Front	3	51	1
88–7780	Strip – Seal Rear	4	52	1
88–7790	Strip – Seal Upper	4	53	1
88–7800	Strip – Seal Lower	4	54	1
88–7810	Seal Strip – Drum Cover	6	37	2
88–7830	Clutch & Pulley Assembly	3	12	1
88–7840	Pulley & Drive Assembly	3	42	1
88–7850	Idler Pulley Assembly	6	40	2
88–7850	Idler Pulley Assembly	3	43	1
88–7860	Spacer	3	25	1
88–7870	Idler Pulley Assembly	9	44	1
88–7880	Bearing	6	21	2
88–7890	Idler Pulley Assembly	11	28	1
88–7900	Cover Bracket Assembly	10	53	1
88–7910	Throttle Assembly	12	26	1
88–7960	Bracket – Throttle Cable	11	40	1
88–7970	Clip	10	59	1
92–7302	Nut – Bearing Lock	6	24	1
92–7676	Pin – Actuator	3	19	1
92–8013	Housing – Clutch	3	1	1
92–8653	Reel Assembly – 11 Blade	5	11	1
92–8914	Bolt – Tapered Face	1	22	4
92–8920	Reel Assembly – 8 Blade	5	*	1
218–497	Nut – Face	12	31	1
218–498	Nut – Lock	12	32	1
233–69	Knob	3	29	1
237–160	Plug	4	55	1
2410–18	Plug	15	2	1
2412–21	Clip – Cable	11	41	1
2412–139	Clamp – Hose	9	41	1
2412–140	Clamp – Hose	9	42	1
251–204	Bearing – Ball	3	4	1
251–336	Bearing – Ball	3	13	2
251–338	Bearing	6	9	4
251–338	Bearing	9	30	1
251–342	Bearing	6	26	1
251–342	Bearing – Self–Aligning	3	37	1
251–343	Bearing	9	9	1
253–96	Seal	6	33	1
253–96	Seal	3	35	1
253–118	Seal – Oil	3	6	1
253–160	Seal	6	8	4
253–160	Seal	9	29	2
253–161	Seal – V–Ring	6	16	2
253–163	Seal	6	25	1
253–163	Seal	3	39	1
256–206	Bushing	12	16	2
283–75	Pin – Clevis	9	20	1
302–5	Fitting – Grease	13	2	2
302–5	Fitting – Grease	3	5	2
302–5	Fitting – Grease	6	11	1
302–5	Fitting – Grease	11	24	1
302–5	Fitting – Grease	2	38	2
302–11	Fitting – Grease	6	23	2
302–19	Fitting – Grease	6	7	2
302–64	Fitting – Grease	9	28	1
302–65	Fitting – Grease	9	7	1
321–2	Screw – Cap Hex. Hd.	9	39	3
321–3	Screw – Cap Hex. Hd.	5	4	4
321–3	Screw – Cap Hex. Hd.	10	55	2
321–4	Screw – Cap Hex. Hd.	1	25	2
321–4	Screw – Cap Hex. Hd.	3	27	1
321–11	Screw – Cap Hex. Hd.	6	38	8
321–20	Screw – Cap Hex. Hd.	4	57	4
322–2	Screw – Cap Hex. Hd.	2	45	4
322–3	Screw – Cap Hex. Hd.	6	18	6
322–3	Screw – Cap Hex. Hd.	6	45	4
322–3	Screw – Cap Hex. Hd.	9	47	1
322–3	Screw – Cap Hex. Hd.	3	48	1
322–4	Screw – Cap Hex. Hd.	2	32	4
322–5	Screw – Cap Hex. Hd.	3	2	2
322–5	Screw – Cap Hex. Hd.	7	5	8
322–5	Screw – Cap Hex. Hd.	9	36	3
322–5	Screw – Cap Hex. Hd.	6	46	2
322–5	Screw – Cap Hex. Hd.	3	49	1
322–5	Screw – Cap Hex. Hd.	9	49	1
322–9	Screw – Cap Hex. Hd.	11	2	4
322–42	Screw – Cap Hex. Hd.	6	28	2
323–4	Screw – Cap Hex. Hd.	1	2	12
323–4	Screw – Cap Hex. Hd.	11	25	1
323–5	Screw – Cap Hex. Hd.	9	2	4
323–5	Screw – Cap Hex. Hd.	2	48	4
323–7	Screw – Cap Hex. Hd.	6	35	2
323–18	Screw – Cap Hex. Hd.	1	17	2
323–31	Screw – Cap Hex. Hd.	11	31	1
325–7	Screw – Cap Hex. Hd.	2	34	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3210–7	Screw – Cap Hex. Hd.	12	19	2
3218–2	Nut – Jam	9	13	3
3219–1	Nut–Hex	14	9	4
3219–14	Nut.	15	3	1
3220–5	Nut – Jam	3	17	1
3220–6	Nut – Jam	1	15	2
3230–5	Bolt – Carriage	1	21	2
3252–4	Screw – Hex. Socket Hd.	11	20	2
3253–3	Washer – Lock	3	22	1
3253–3	Washer – Lock	1	26	2
3253–3	Washer – Lock	9	40	3
3253–3	Washer – Lock	10	56	2
3253–4	Washer – Lock	7	6	8
3253–4	Washer – Lock	11	11	1
3253–4	Washer – Lock	9	12	8
3253–4	Washer – Lock	11	15	4
3253–4	Washer – Lock	6	19	8
3253–4	Washer – Lock	12	21	2
3253–4	Washer – Lock	2	33	4
3253–4	Washer – Lock	6	44	2
3253–4	Washer – Lock	3	47	2
3253–21	Lockwasher	1	3	16
3253–21	Washer – Lock	9	3	4
3253–21	Washer – Lock	11	26	1
3254–4	Washer – Lock I.T.L.W.	3	16	1
3254–4	Washer – Lock I.T.L.W.	2	36	2
3254–6	Washer – Lock I.T.L.W.	9	22	2
3254–6	Washer – Lock I.T.L.W.	2	43	2
3254–8	Washer – Lock I.T.L.W.	14	8	4
3254–8	Washer – Lock I.T.L.W.	6	39	8
3254–8	Washer – Lock I.T.L.W.	4	58	4
3255–8	Washer – Lock I.T.L.W.	2	46	4
3256–22	Washer – Flat	5	5	6
3256–22	Washer – Flat	10	58	2
3256–23	Washer	11	16	1
3256–23	Washer	12	20	4
3256–23	Washer – Flat	7	10	4
3256–23	Washer – Flat	1	23	2
3256–23	Washer – Flat	6	31	2
3256–24	Washer – Flat	9	4	4
3256–24	Washer – Flat	11	27	2
3256–24	Washer – Flat	2	49	4
3256–26	Washer – Flat	2	35	2
3256–56	Washer – Flat	11	3	8
3257–32	Key	7	12	2
3257–32	Key	9	18	1
3259–15	Screw – Drive	3	23	1
3272–6	Pin – Cotter	9	23	2
3272–8	Pin – Cotter	9	24	1
3289–23	Screw – Flat Hd.	3	32	2
3290–134	Screw – Cap Hex. Hd.	12	28	3
3290–378	Tie – Wire	12	34	6
3290–414	Washer	3	26	1
3290–485	Washer – Wave	3	40	1
3295–15	Rivet	14	3	11
3296–2	Nut – Lock	12	29	3
3296–28	Nut – Lock	12	4	2
3296–29	Nut – Lock	3	3	2
3296–29	Nut – Lock	11	4	4
3296–29	Nut – Lock	6	6	6
3296–29	Nut – Lock	12	9	4
3296–29	Nut – Lock	7	11	4
3296–29	Nut – Lock	1	24	2
3296–39	Nut	3	33	2
3296–39	Nut – Lock	11	32	1
3296–39	Nut – Lock	6	34	2
3296–42	Nut	12	25	2
3296–42	Nut – Lock	5	6	4
3296–42	Nut – Lock	9	15	1
3296–42	Nut – Lock	3	21	1
3296–42	Nut – Lock	11	34	1
3296–57	Nut	6	14	2
3296–57	Nut – Lock	9	17	1
32120–11	Ring – Retaining	3	8	1
32120–42	Ring – Retaining	11	30	1
32120–42	Ring – Retaining	9	48	1
32120–42	Ring – Snap	6	42	2
32120–42	Ring – Snap	3	45	1
32122–22	Screw – Phill. Truss Hd.	15	2	1
32128–48	Nut – Flange	5	16	2
32144–73	Screw – Hex. Washer Hd.	11	42	1
32144–73	Screw – Self Tapping	5	8	5
32148–6	Insert – Threaded	1	6	9
32148–6	Insert – Threaded	10	54	1
32149–7	Nut – Lock	11	21	2
32151–89	Ring – Retaining	3	14	1
32151–92	Ring – Retaining	3	38	1
32151–95	Ring – Retaing	3	15	2
32151–106	Ring – Puush–On	11	37	1

*Not Illustrated

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Greensmaster 1000 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame side plate. In any correspondence concerning the Greensmaster 1000, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Greensmaster 1000.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Frame Assembly	1–2
Reel Drive Assembly	3–4
Reel Assembly	5
Drum Drive Assembly	6
Drum & Basket Assembly	7
Differential Assembly	
Peerless Model No. 100–085	8
Countershaft Assembly	9–10
Engine & Bellcrank Assembly	11
Handle Assembly	12
Cutting Unit Roller Options	13
Scraper Options	14
Special Tools	15
Engine Crankcase Assembly	16
Engine Camshaft & Valves Assembly	17
Engine Ignition Assembly	18
Engine Governor Assembly	19
Engine Carburetor Assembly	20
Engine Air Filter & Muffler Assembly	21
Engine Fuel Tank Assembly	22
Engine Decals Assembly	23
International Decal Cross Reference	24–25
TORO Part Number Index	26–28

Litho in U.S.A.

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.