Form Number 3359-489 Rev A

Commercial Walk-Behind Mower

15HP T-Bar Hydro Drive with 91cm TURBO FORCE® Cutting Unit

Model No. 30032 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Clutch Assembly	3
Fuel System, Hydraulic Pump and Filter Assembly	4
Hydraulic Pump Assembly No. 114-3400 and 114-3401	5
Pump Drive and Wheel Assembly	6
Hydraulic Wheel Motor Assembly No. 104-1171	7
Lower Control Assembly	8
Hydraulic Hose Assembly	9
Upper Control Assembly	10
Control Panel Assembly	11
Parking Brake Assembly	12
Power-Take-Off Idler and Weight Assembly	13
Carrier Frame Assembly	14
Deck Drive and Baffle Assembly	15
Deck Assembly No. 112-7085	16
Lever Assembly No. 107-1664	17
Spindle Assembly No. 110-6950	18
Spindle Assembly No. 110-0728	19
Deck Deflector, Roller and Cover Assembly	20
Deflector Assembly No. 110-0790	21
Cylinder and Crankcase Assembly Kawasaki FH430V-AS53	22
Piston and Crankshaft Assembly Kawasaki FH430V-AS53	23
Valve and Camshaft Assembly Kawasaki FH430V-AS53	24
Lubrication Equipment Assembly Kawasaki FH430V-AS53	25
Cooling Equipment Assembly Kawasaki FH430V-AS53	26
Electric Equipment Assembly Kawasaki FH430V-AS53	27
Control Equipment Assembly Kawasaki FH430V-AS53	28
Carburetor Assembly Kawasaki FH430V-AS53	29
Air Filter and Muffler Assembly Kawasaki FH430V-AS53	30
Fuel Tank and Valve Assembly Kawasaki FH430V-AS53	31
Starter Assembly Kawasaki FH430V-AS53	32
Label Assembly Kawasaki FH430V-AS53	33
Attachments and Accessories List	34

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated

❷ Not serviced separately


❸ Obtain from your local Kawasaki dealer

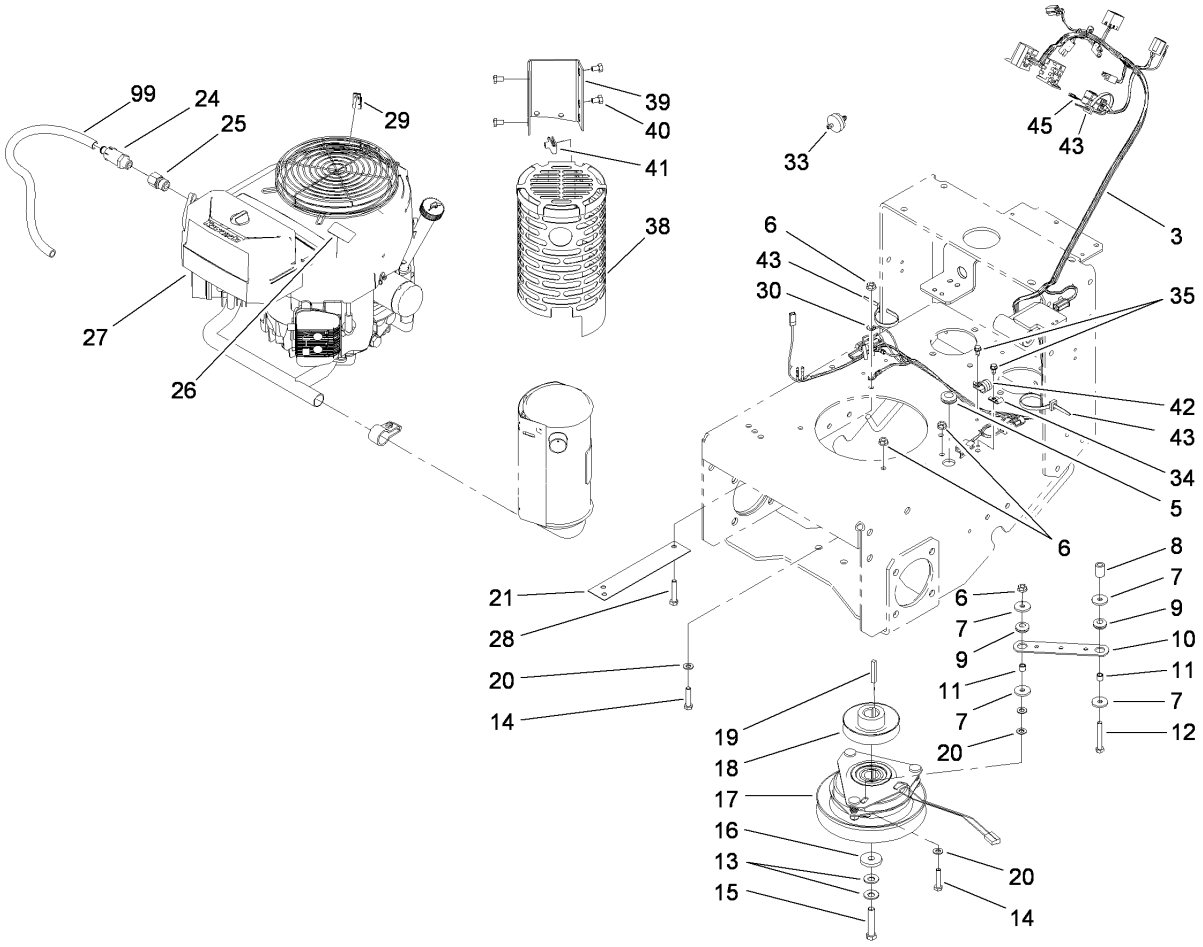

Engine and Clutch Assembly

Ref	Part No.	Qty.	Description
3	114-3420	1	Harness-Wire
5	112-7069	1	Grommet
6	32128-20	6	Nut-HF
7	1-613235	4	Washer
8	104-6373	1	Tube-Retainer
9	1-633630	2	Grommet-Brake
10	1-633543-03	1	Strap-Clutch, Brake
11	1-633545	2	Spacer
12	322-11	1	Screw-HH
13	1-603610	2	Washer-Spring
14	322-7	4	Screw-HH
15	3212-9	1	Screw-HH
16	107-4136	1	Washer
17	105-2635	1	Clutch / Brake
18	44-5940	1	Pulley
19	608006	1	Key-Square
20	3256-23	5	Washer-Flat
21	94-5847-01	1	Cover-Pulley
24	92-6877	1	Valve-Drain, Oil
25	103-1966	1	Adapter
26	106-5517	1	Decal-Surface, Hot
❷❸27		1	Engine-Kawasaki, FH430V-As53
28	322-9	1	Screw-HH
29	2412-87	1	Clamp-Cable


Ref	Part No.	Qty.	Description
30	3255-8	1	Washer-Lock
33	56-6360	1	Filter-Fuel
34	2412-72	1	Clip-Closed, Insulated
35	12-3270	2	Screw
38	106-8785-03	1	Muffler Guard ASM
39	114-3451-03	1	Bracket-Guard, Muffler
40	322-3	5	Screw-HH
41	94-2413	5	U-Nut
42	2412-134	1	R-Clamp
43	3290-378	5	Tie-Cable
45	218-578	1	Fuse-10 Amp
99	103-1964	1	Hose-Drain, Oil

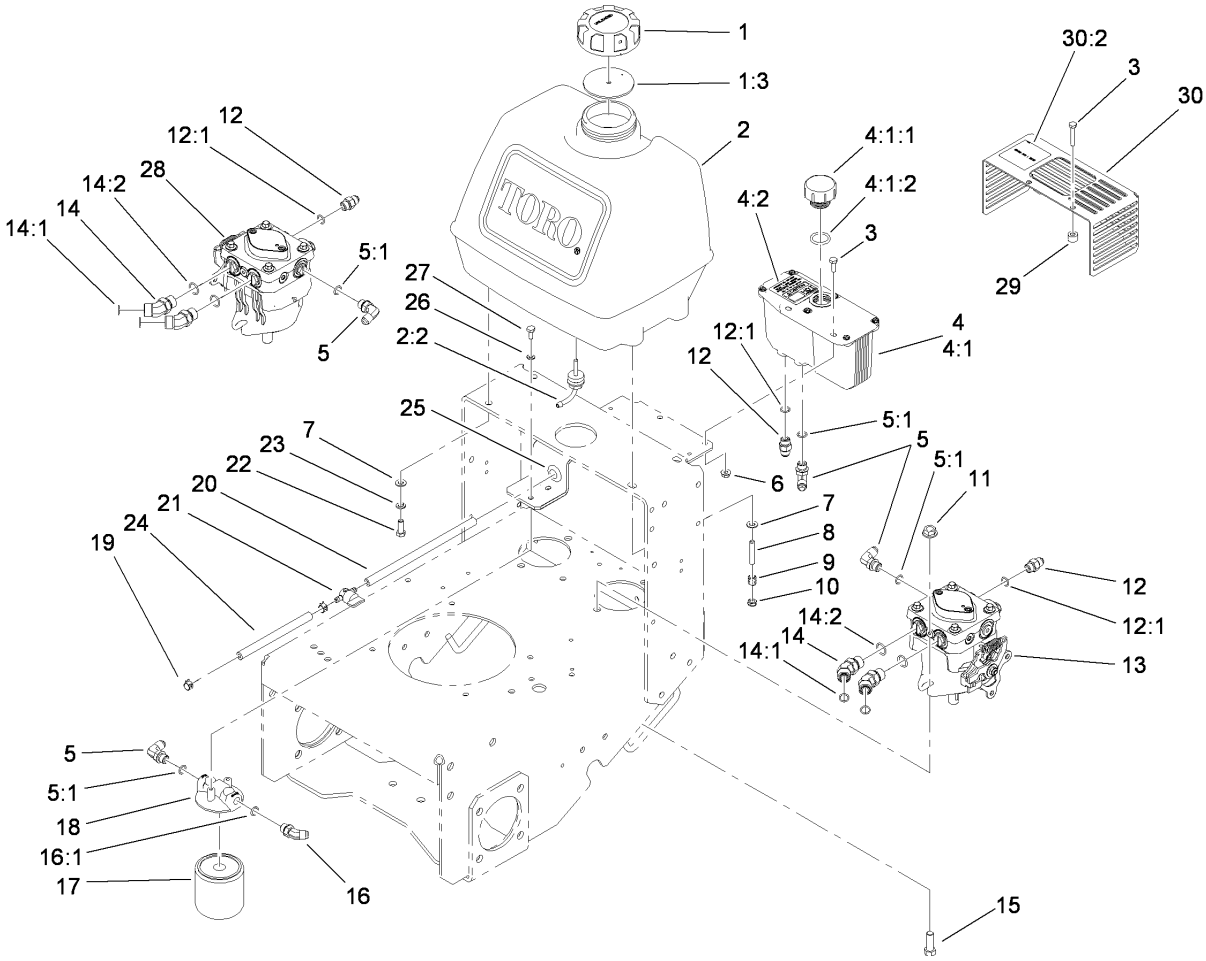

Fuel System, Hydraulic Pump and Filter Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-9	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
❷4:1		1	Reservoir-HYD
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	4	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	3	Fitting-Straight
12:1	237-42	1	O-Ring
13	114-3400	1	Pump-HYD, Left
14	340-101	4	Fitting-HYD, 45 DEG
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring


Ref	Part No.	Qty.	Description
15	324-5	4	Screw-HH
16	353-212	1	Fitting-HYD, 45 DEG
16:1	237-42	1	O-Ring
17	1-633752	1	Filter-HYD, Winter
17	1-633750	1	Filter-Oil, HYD
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp
20	110-4894	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	107-0588	1	Hose-Fuel
25	112-7069	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	114-3401	1	Pump-HYD, Right
29	105-3619	2	Spacer
30	112-7060	1	Shield ASM
30:2	107-2131	1	Decal-Surface, Hot

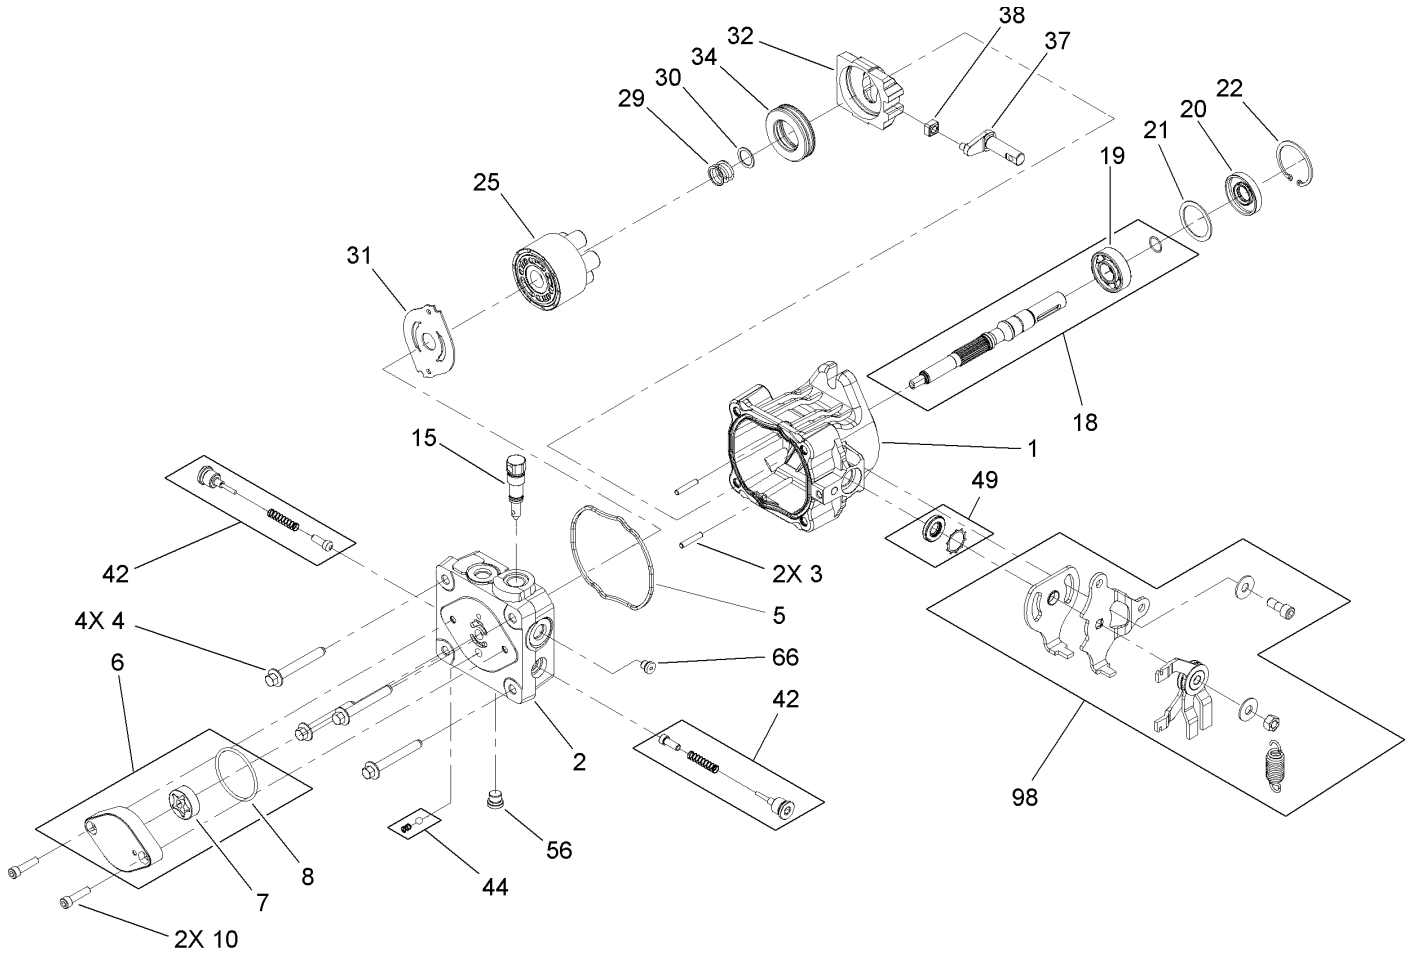

Hydraulic Pump Assembly No. 114-3400 and 114-3401

Ref	Part No.	Qty.	Description
1	114-0278	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	104-2111	2	Capscrew
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	103-2666	1	Cylinder Block Kit
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	104-2112	1	Trunnion ASM
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/Poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal / Retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
98	114-0277	1	Return Kit
❶99	105-6184	1	Seal Kit

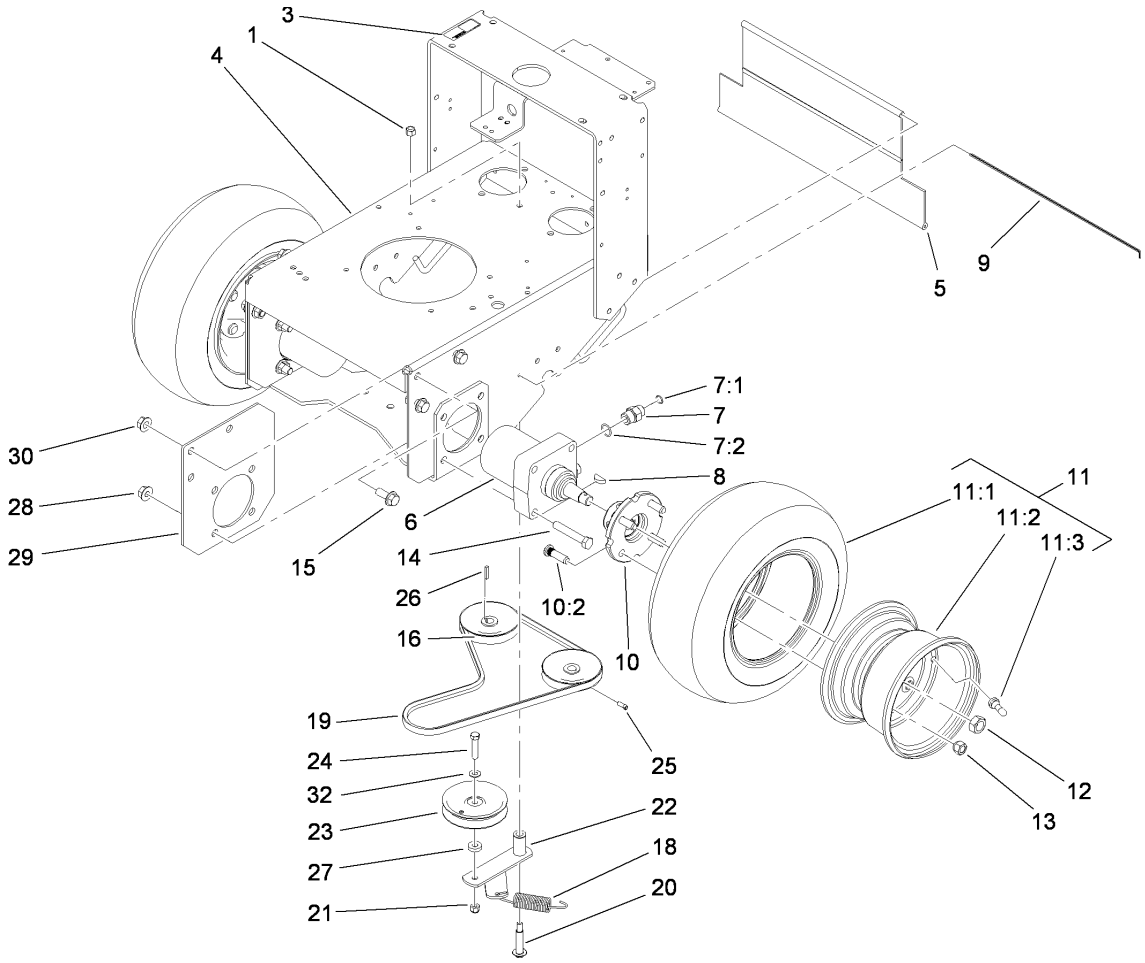

Pump Drive and Wheel Assembly


Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock
3	93-9353	1	Decal-Shut Off, Fuel
4	114-0243-01	1	Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	Motor-Wheel
7	340-6	4	Fitting-HYD, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub / Stud ASM
10:2	10-6830	4	Stud-Type, Drive
11	106-0892	2	Wheel And Tire ASM
11:1	104-6322	1	Tire
11:2	106-0893	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel
13	242-50	8	Nut-Lug
14	325-12	8	Screw-HH
15	3234-32	6	Screw-HHF
16	105-5648	2	Pulley-Pump
18	68-9950	1	Spring-Traction
19	110-5049	1	Belt-V
20	27-6230	1	Bolt-Wheel

Ref	Part No.	Qty.	Description
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	93-1622	1	Pulley-Idler
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	1-807272	2	Key
27	9202204	1	Washer
28	32128-49	8	Nut-HHF
29	108-6657-01	2	Plate-Frame
30	32128-23	6	Nut-HF
32	3256-24	1	Washer-Flat

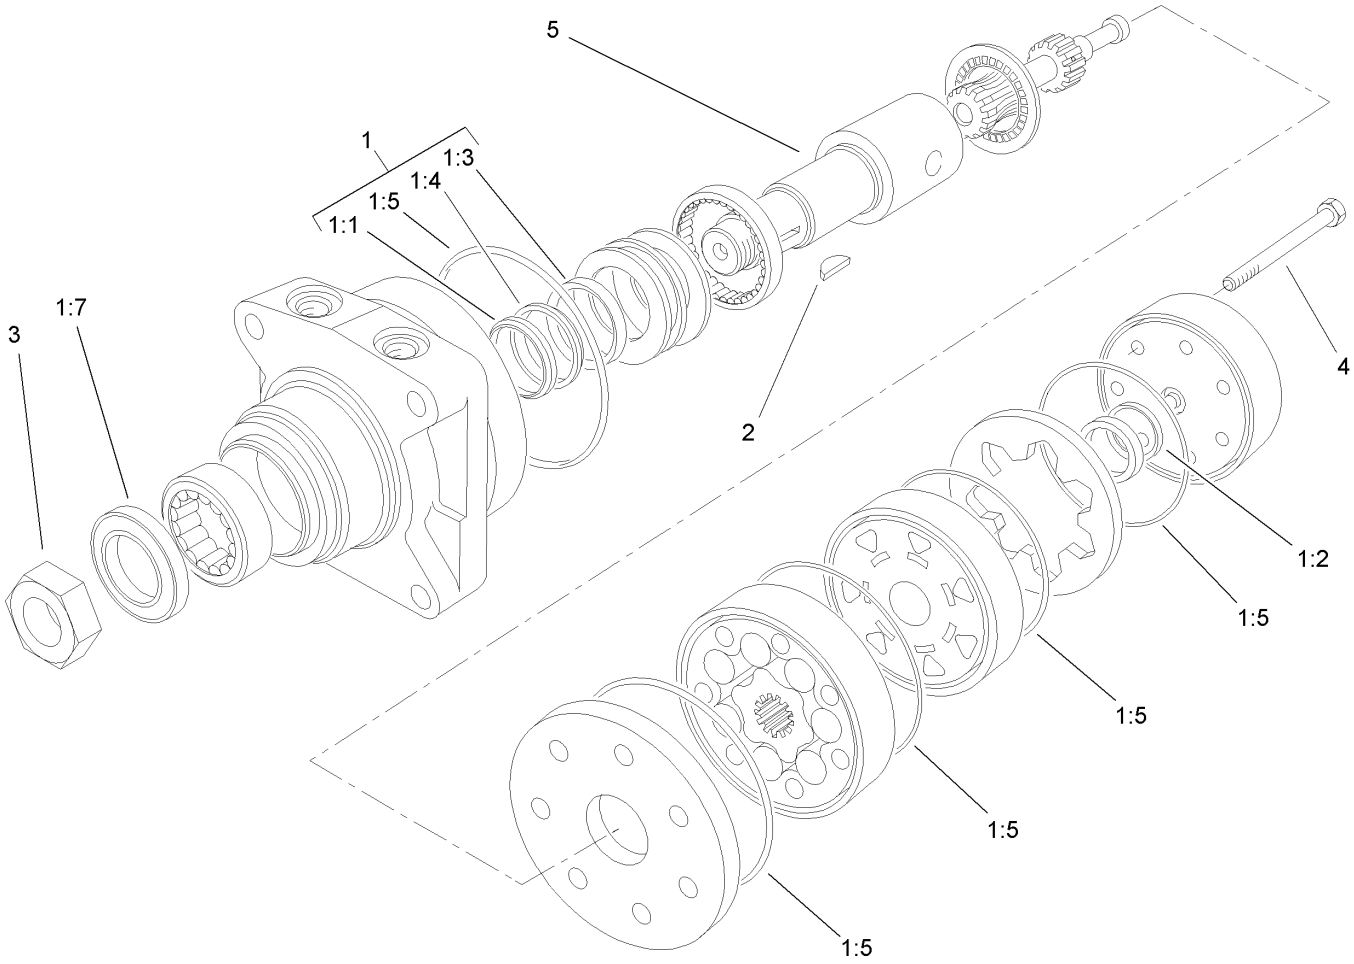

Hydraulic Wheel Motor Assembly No. 104-1171


Ref	Part No.	Qty.	Description
1	1-000119	1	Seal Kit
❷1:1		1	Ring-Back Up
❷1:2		1	Seal-Commutator
❷1:3		1	Seal-Shaft (Viton)
❷1:4		1	Washer-Back Up, Steel
❷1:5		5	Ring-Seal (Viton)
❷1:7		1	Seal-Dirt And Water
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling

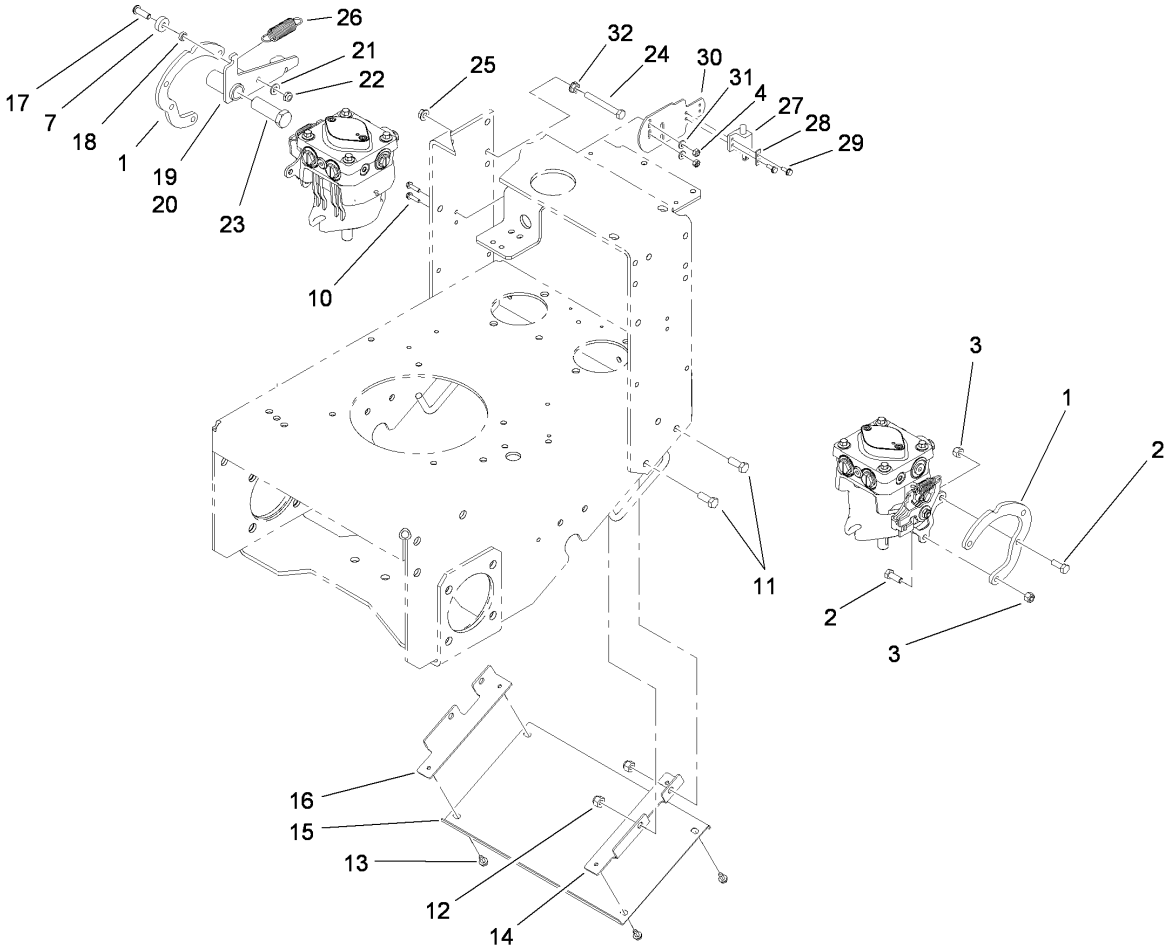

Lower Control Assembly


Ref	Part No.	Qty.	Description
1	112-9722	2	Bracket-Adapter, Pump
2	322-4	4	Screw-HH
3	3296-29	4	Nut-Lock, NI
4	3296-2	4	Nut-Lock
7	251-259	2	Bearing-Ball
10	32105-13	4	Screw-HWH
11	323-6	4	Screw-HH
12	3296-39	4	Nut-Lock, NI
13	12-3270	4	Screw
14	110-5012-01	1	Angle-Mounting, Left
15	110-5014-01	1	Panel-Bottom
16	110-5013-01	1	Angle-Mounting, Right
17	3274-104	2	Screw-HSBH
18	82-4240	2	Spacer-Bearing
19	112-9726	1	RH Detent Arm ASM
20	112-9725	1	LH Detent Arm ASM
21	3256-23	2	Washer-Flat
22	3296-47	2	Nut-Lock, NI
23	112-9724	2	Pin-Adjustment, Neutral
24	322-13	2	Screw-HH
25	32128-25	2	Nut-HF
26	105-1210	2	Spring-Extension
27	1-513152	2	Switch-Closed, Normally
28	82-4570	2	Plate-Switch

Ref	Part No.	Qty.	Description
29	32144-1	4	Screw-Taptite
30	112-9723-01	2	Bracket-Neutral
31	3256-14	4	Washer-Flat
32	109-5715	2	Nut-HHF, Smooth

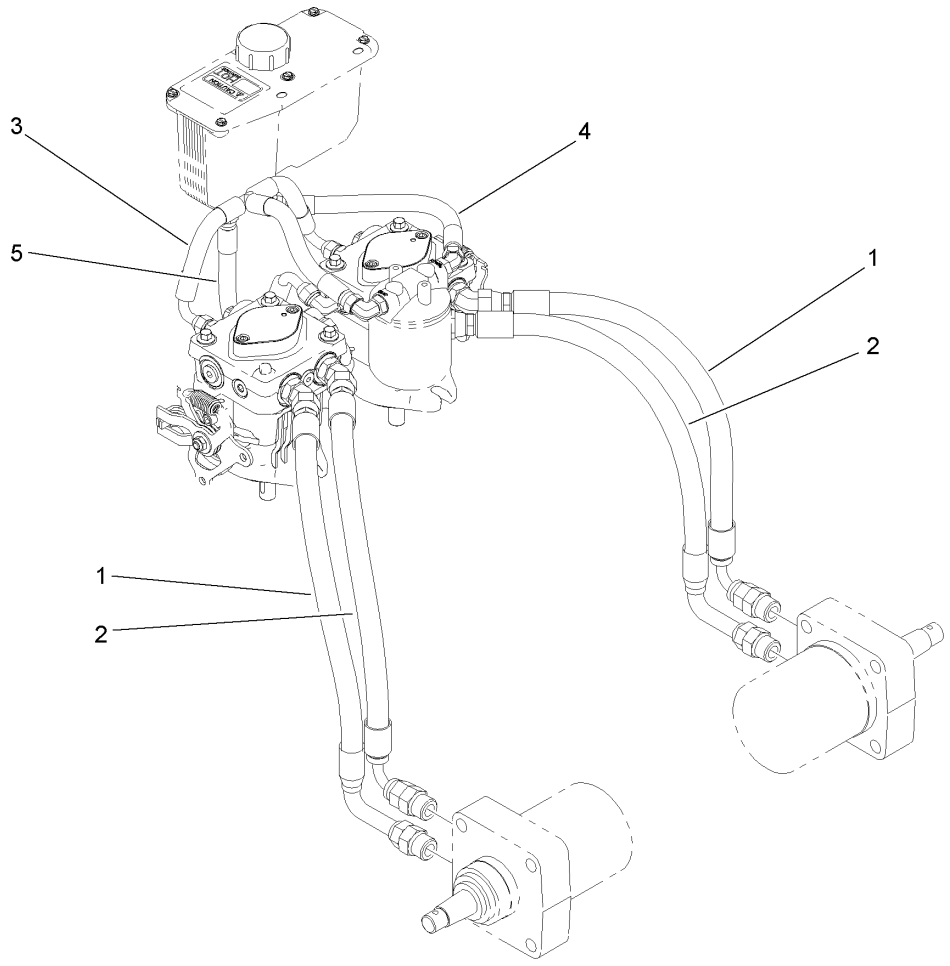

Hydraulic Hose Assembly


Ref	Part No.	Qty.	Description
1	112-9704	2	HYD Hose ASM
2	114-3430	2	HYD Hose ASM
3	105-5697	1	HYD Hose ASM
4	105-5699	1	HYD Hose ASM
5	114-3434	1	HYD Hose ASM

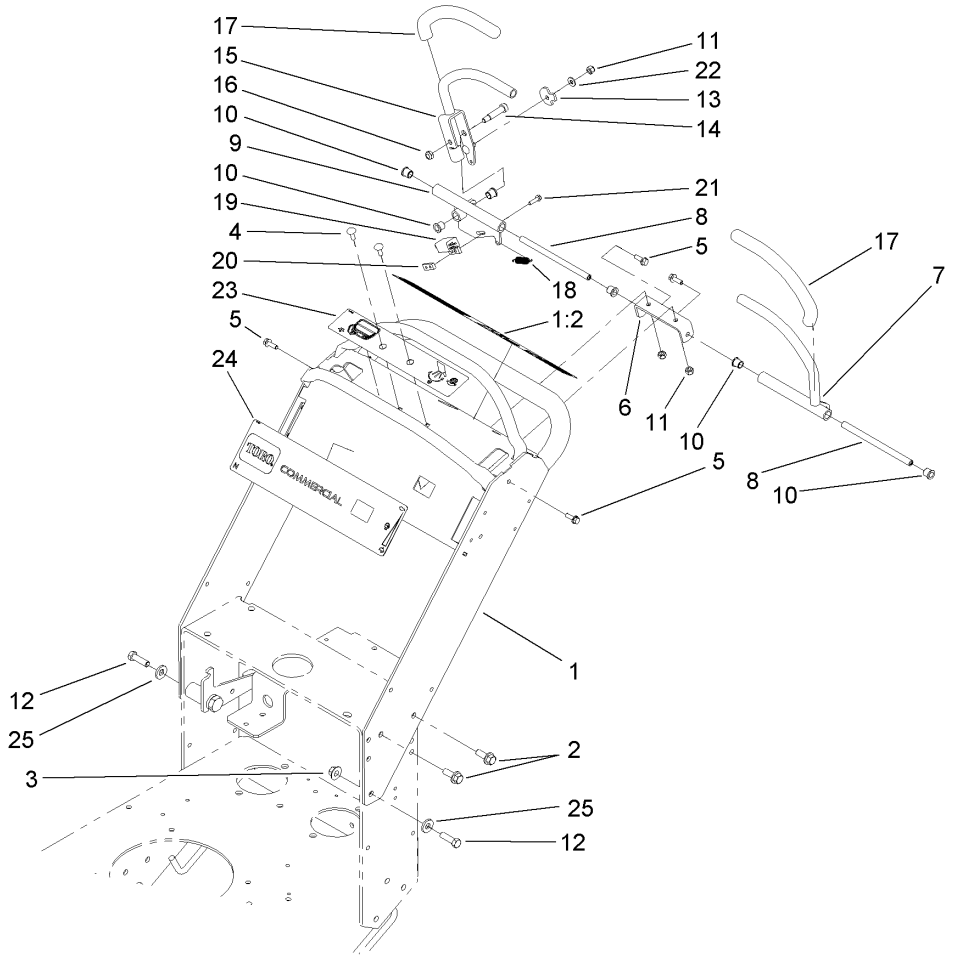

Upper Control Assembly


Ref	Part No.	Qty.	Description
1	114-3437	1	Handle ASM
1:2	114-3422	1	Decal-Warning, Control
2	3234-42	4	Screw-HHF
3	32128-43	4	Nut-Flange
4	3229-1	2	Screw-CARR
5	3234-4	4	Screw-HHF
6	114-0235	1	Bracket-Support
7	114-0272	1	Control Lever ASM
8	114-0260	2	Shaft-Pivot
9	114-0234	1	Motion Control ASM
10	103-9928	6	Bearing
11	3296-42	3	Nut-Lock, NI
12	323-7	2	Screw-HH
13	114-0268	1	Cam-Lever, Handle Stop
14	114-0239	1	Screw-HSH
15	114-0238	1	Lever ASM
16	3296-47	1	Nut-Lock, NI
17	114-0241	2	Grip-Lever
18	114-0249	1	Spring-Extension
19	1-513152	1	Switch-Closed, Normally
20	1-633181	1	Plate-Tapped
21	32105-13	2	Screw-HWH
22	3256-22	1	Washer-Flat
23	114-3424	1	Decal-Control

Ref	Part No.	Qty.	Description
24	114-3442	1	Decal-Panel, Control
25	98-5975	2	Washer-Belleville

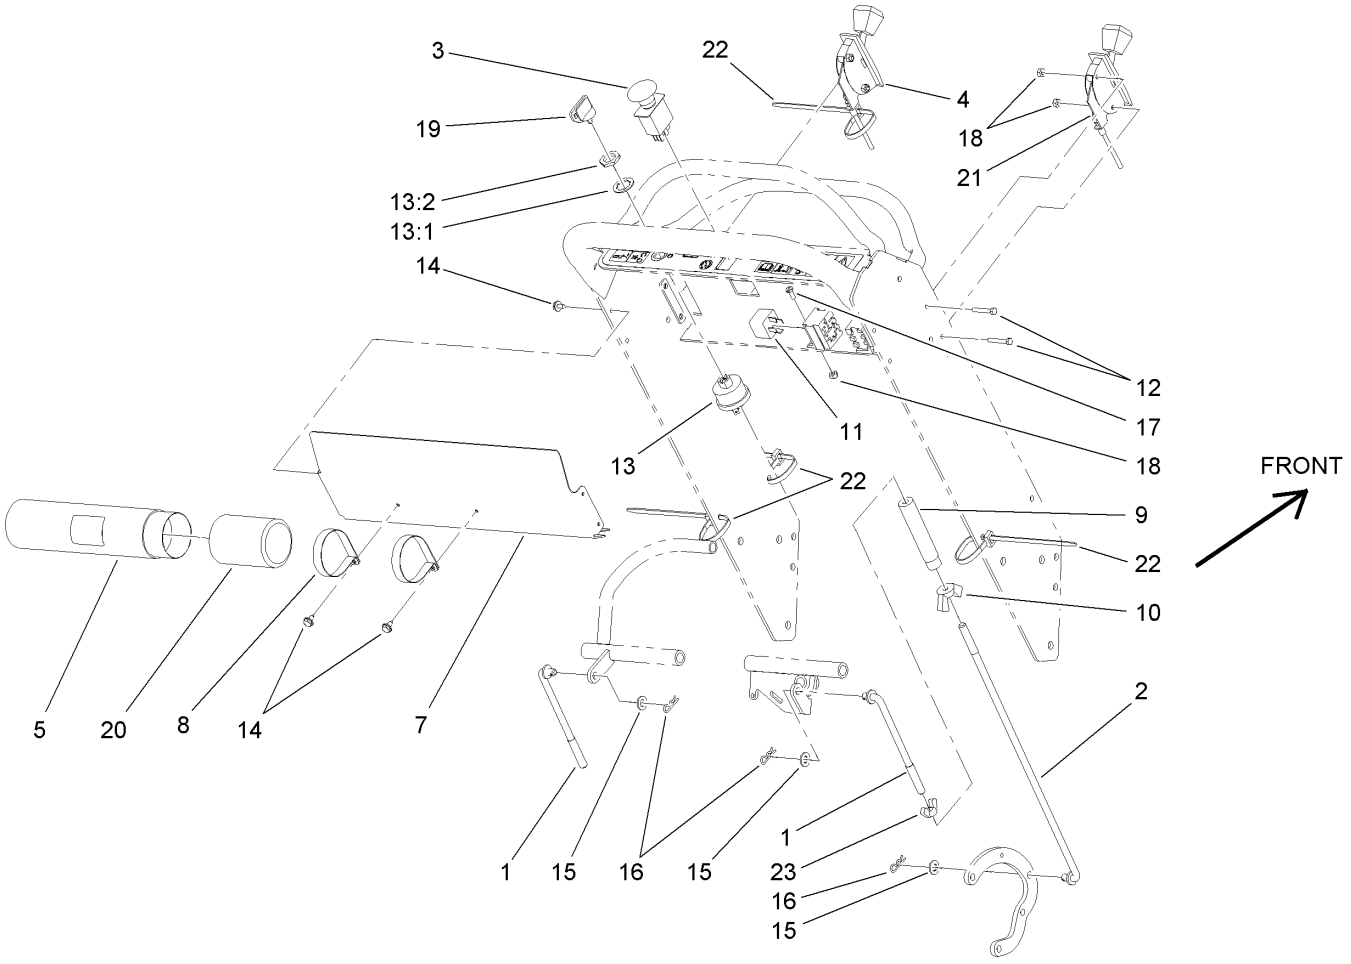

Control Panel Assembly


Ref	Part No.	Qty.	Description
1	114-0275	2	Rod-Control, Upper
2	114-0276	2	Rod-Control, Lower
3	114-0279	1	Switch-PTO
4	110-4994	1	Cable-Throttle
5	104-7050	1	Housing-Manual
7	114-0270-03	1	Cover-Panel, Control
8	2412-120	2	R-Clamp
9	95-1504	2	Turnbuckle
10	32103-3	2	Nut-Wing
11	105-4145	2	Relay
12	3290-360	4	Screw-HH
13	29-5560	1	Switch-On / Off
13:1	218-461	1	Nut-HH
13:2	3254-5	1	Washer-Tooth
14	32104-76	6	Screw
15	3256-23	4	Washer-Flat
16	3290-307	4	Pin-Hair
17	32105-8	1	Screw-SHH
18	3296-2	5	Nut-Lock
19	63-8360	1	Key-Ignition
20	104-7048	1	Cap-Housing
21	110-4995	1	Cable-Choke
22	3290-378	4	Tie-Cable
23	114-0281	2	Nut-Wing, LH

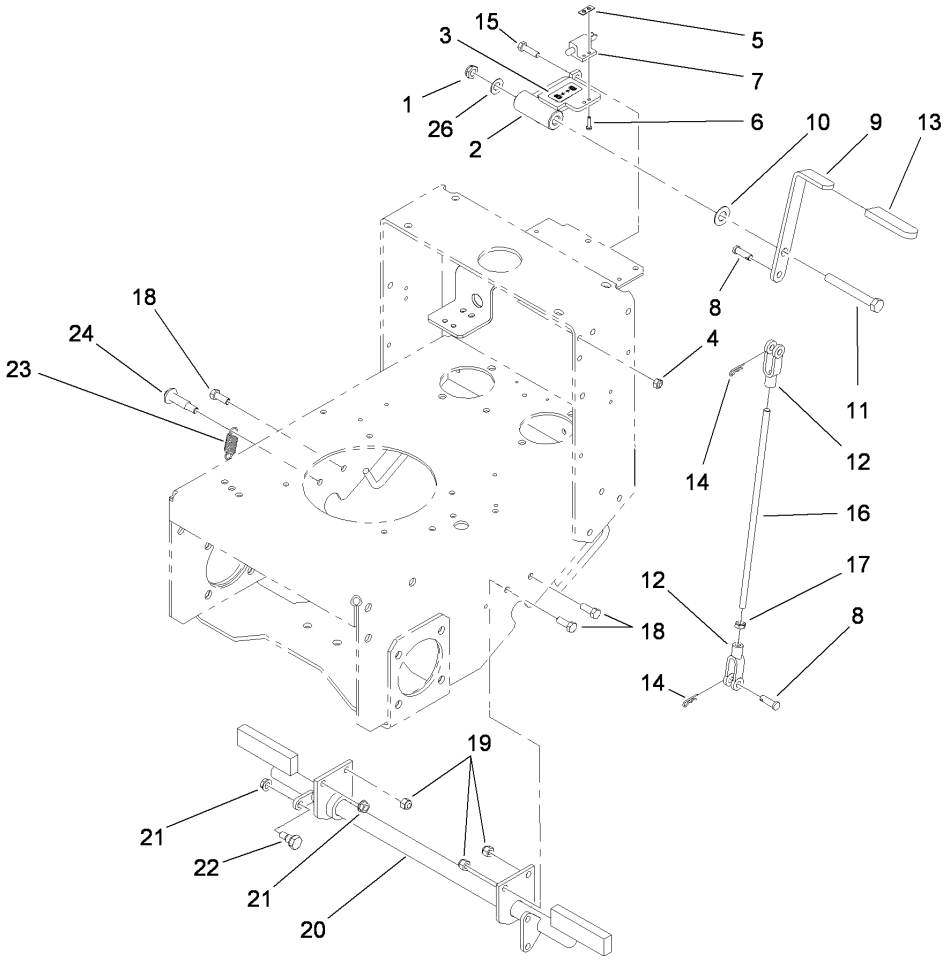

Parking Brake Assembly


Ref	Part No.	Qty.	Description
1	3296-45	1	Nut-Lock, NI
2	112-8716-01	1	Support-Handle
3	112-8721	1	Decal-Brake
4	3296-29	2	Nut-Lock, NI
5	1-633181	1	Plate-Tapped
6	32105-13	2	Screw-HWH
7	1-513152	1	Switch-Closed, Normally
8	1-808285	2	Pin-Clevis
9	106-0671-01	1	Handle-Brake
10	257-7	1	Bearing-Thrust
11	325-17	1	Screw-HH
12	1-633131	2	Yoke-Linkage, Brake
13	1-303020	1	Grip-Lever
14	3290-307	2	Pin-Hair
15	322-6	2	Screw-HH
16	108-2747	1	Rod-Brake
17	3220-3	1	Nut-HJ
18	323-6	3	Screw-HH
19	3296-39	3	Nut-Lock, NI
20	110-4976-01	1	Parking Brake ASM
21	3290-357	2	Nut-HHF, Whiz
22	27-5240	1	Bolt-Shoulder
23	613386	1	Spring-Brake
24	56-6590	1	Bolt-Wheel

Ref	Part No.	Qty.	Description
26	112-9972	1	Washer-Conical, Spring

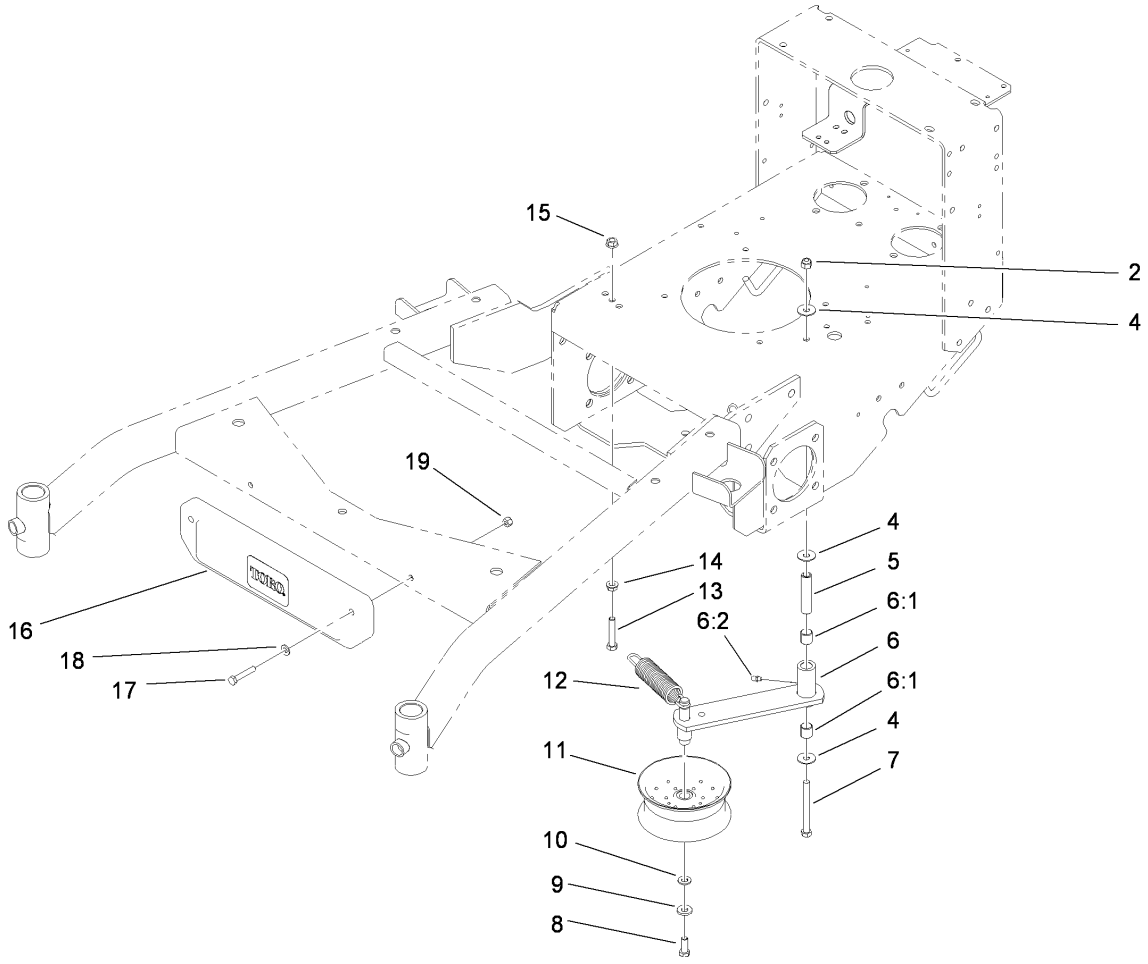

Power-Take-Off Idler and Weight Assembly


Ref	Part No.	Qty.	Description
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	112-7055	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension
13	323-10	1	Screw-HH
14	3290-357	1	Nut-HHF, Whiz
15	32128-21	1	Nut-HF
16	112-7059-01	1	Weight-Cast
17	322-9	2	Screw-HH
18	3256-23	2	Washer-Flat
19	3296-29	2	Nut-Lock, NI

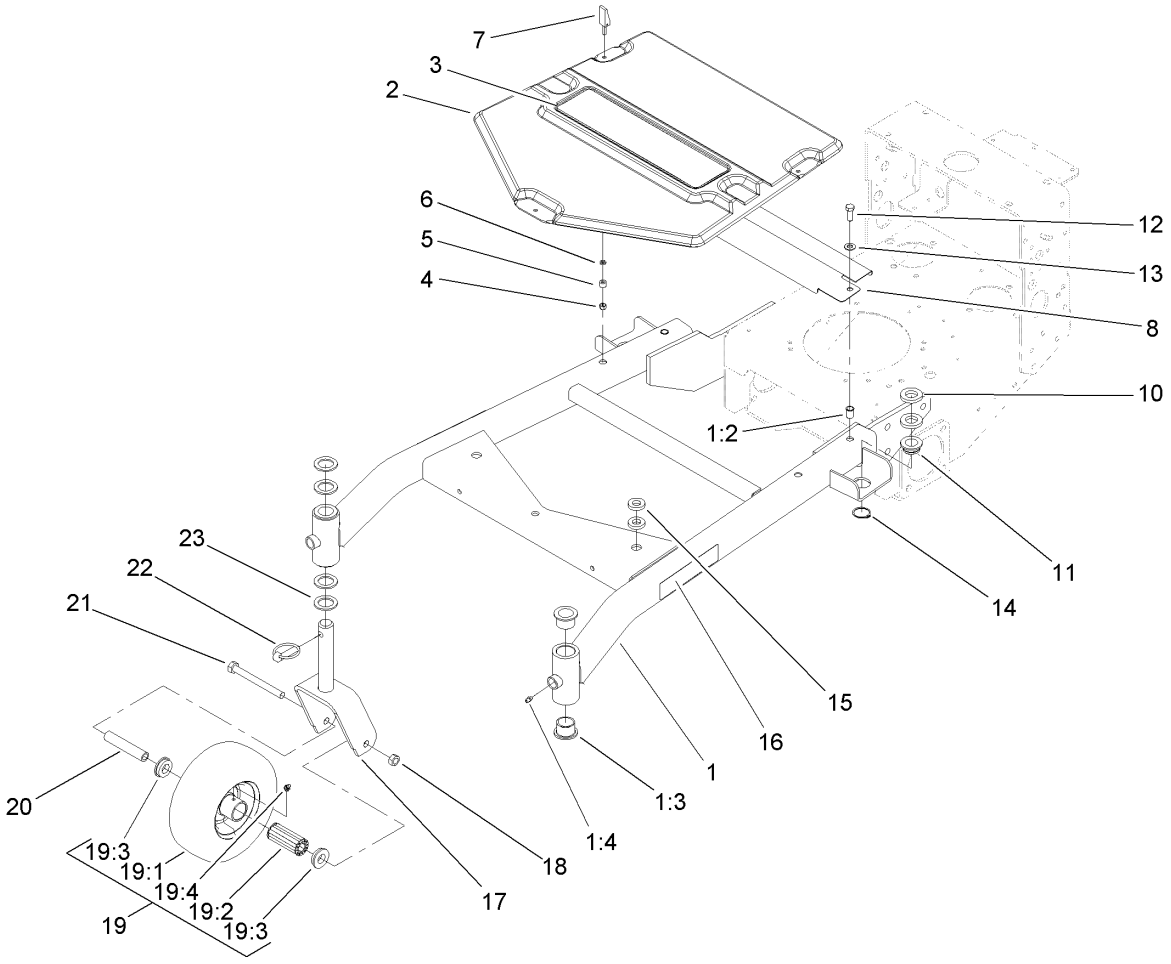

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	110-6960	1	Carrier Frame ASM
1:2	32148-9	2	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	110-6970	1	Cover-Frame, Carrier
3	112-9710	1	Decal
4	1-804254	3	Nut
5	106-6778	3	Bushing-Latch, Swell
6	99-3058	3	Washer
7	106-6777	3	Handle-Latch, Swell
8	110-6971-01	1	Shield-Belt
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	323-6	2	Screw-HH
13	3256-24	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	1-323539	4	Spacer
16	106-0636	2	Decal
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	110-5024	2	Wheel And Tire ASM
19:1	112-7065	1	Tire
19:2	112-7066	1	Bearing-Roller
19:3	1-513810	2	Bushing


Ref	Part No.	Qty.	Description
19:4	302-61	1	Zerk
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust

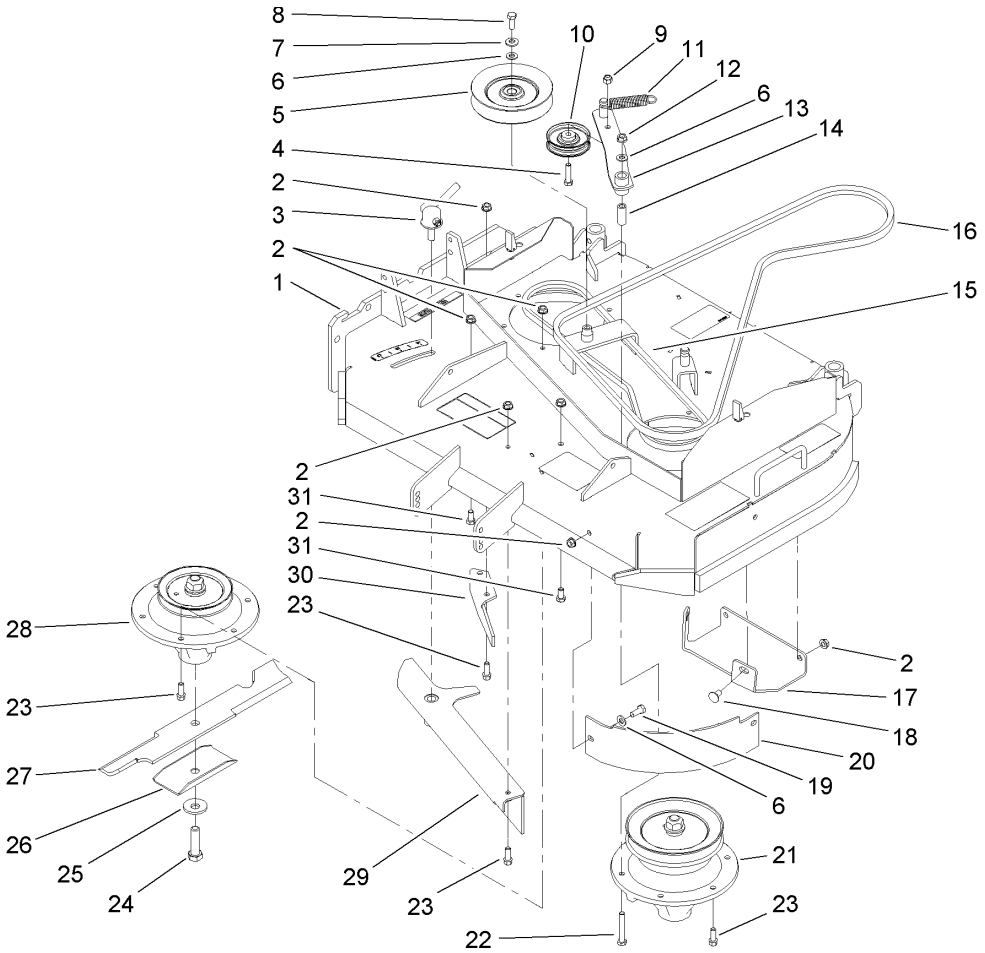

Deck Drive and Baffle Assembly


Ref	Part No.	Qty.	Description
1	112-7085	1	Deck ASM
2	3290-357	22	Nut-HHF, Whiz
3	107-1664	1	Lever ASM
4	323-8	1	Screw-HH
5	1-633166	1	Pulley-Idler
6	3256-24	4	Washer-Flat
7	98-5975	1	Washer-Belleville
8	323-6	1	Screw-HH
9	3296-39	1	Nut-Lock, NI
10	51-3660	1	Pulley-Idler
11	105-2673	1	Spring-Extension
12	32128-21	1	Nut-HF
13	105-0889	1	Idler Arm ASM
14	51-3641	1	Sleeve-Pivot, Idler
15	110-6953	1	Belt-V
16	105-0886	1	Belt-Drive, PTO
17	110-2037-01	1	Plate-Skid
18	3231-1	4	Screw-CARR
19	323-5	2	Screw-HH
20	110-6903-03	1	Baffle-Front, LH
21	110-6950	1	Spindle ASM
22	323-12	1	Screw-HH
23	92-1624	14	Screw
24	51-4060	2	Screw-Blade

Ref	Part No.	Qty.	Description
25	103-0865	2	Washer-Blade Bolt, Heavy
26	108-2727	2	Stiffener-Blade
27	105-7781-03	2	Blade-18 Inch (Hi Flow)
28	110-0728	1	Spindle ASM
29	110-6955-03	1	Adjust Baffle ASM
30	110-0754-01	1	Baffle-Discharge
31	323-4	2	Screw-HH

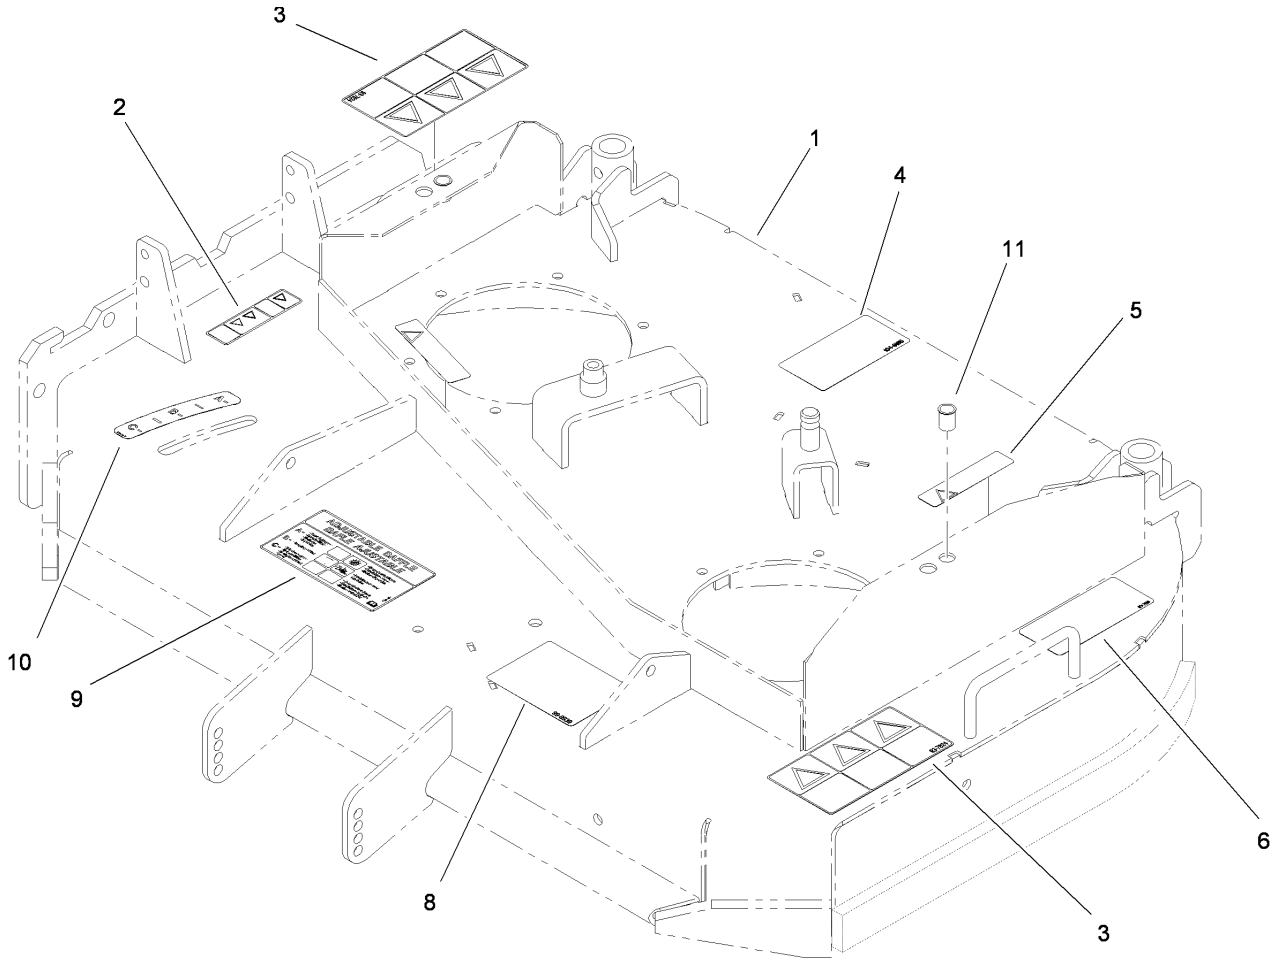


Deck Assembly No. 112-7085

Ref	Part No.	Qty.	Description
❷1		1	Deck ASM
2	93-7828	1	Decal-Warning, Deflector
3	114-3449	2	Decal-Danger
4	104-8185	1	Decal
5	98-1977	2	Decal-Warning
6	93-7818	1	Decal-Torque, Blade Bolt
8	99-8939	1	Decal-Anti Scalp
9	110-2068	1	Decal-Adjustment, Baffle
10	110-2067	1	Decal-Setting, Baffle
11	32148-9	2	Insert-Nut

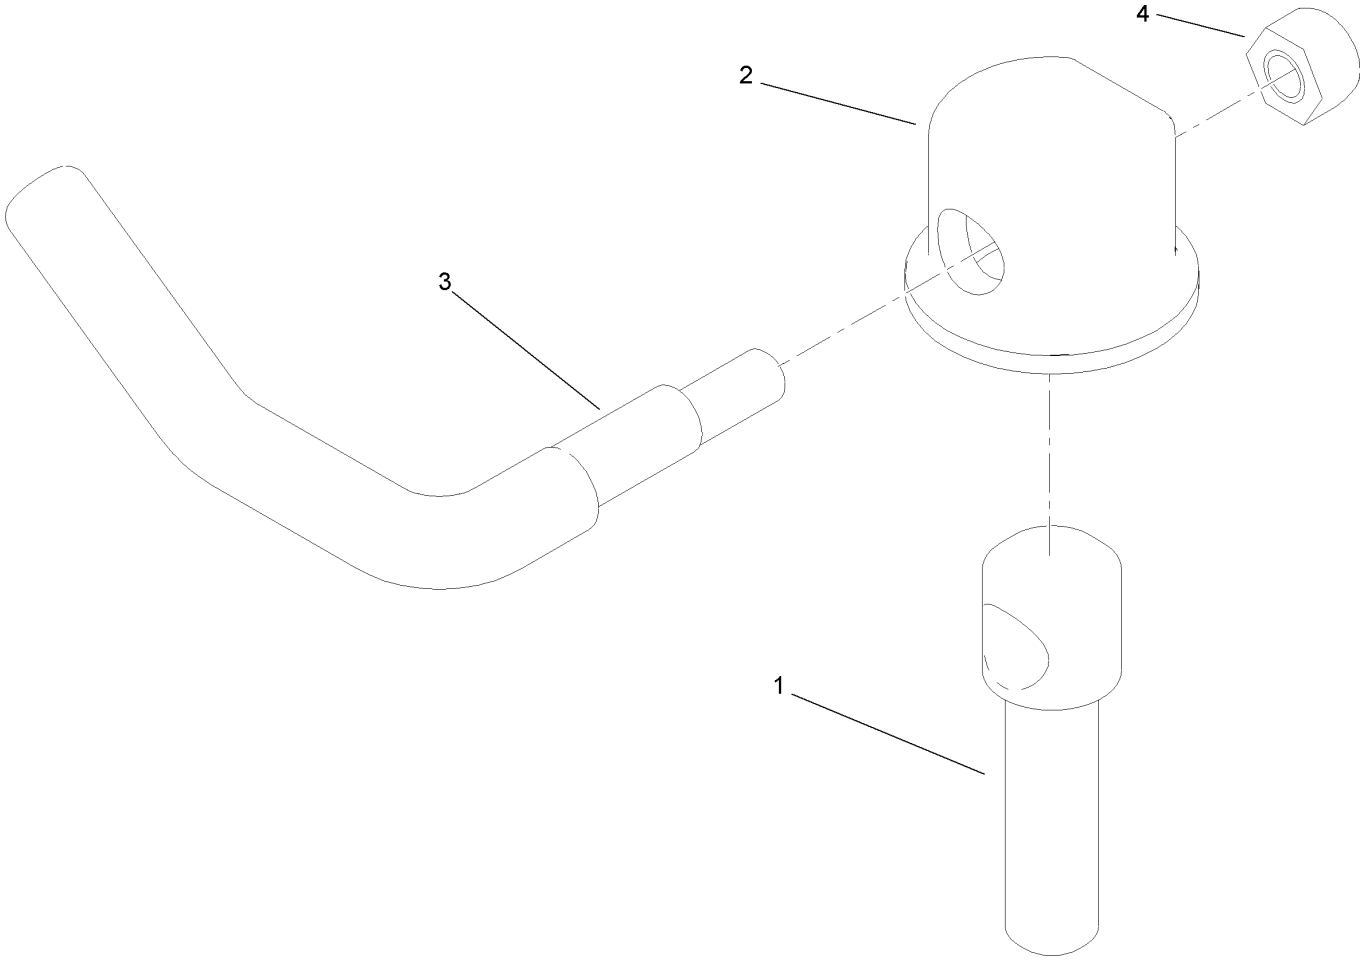


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

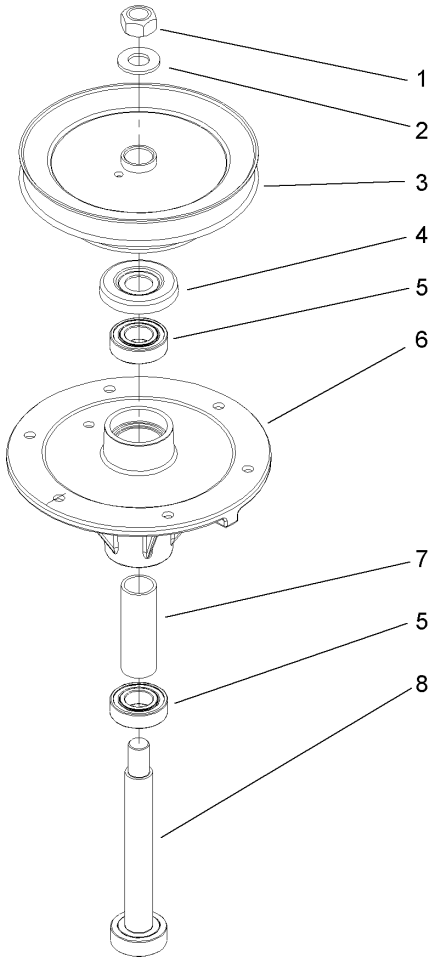


Spindle Assembly No. 110-6950

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	110-6951	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0725	1	Shaft-Spindle

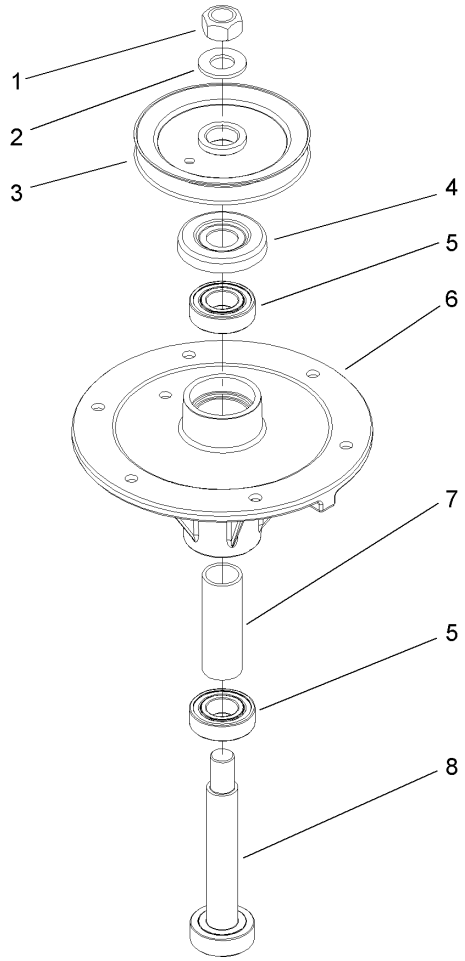


Spindle Assembly No. 110-0728

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0726	1	Shaft-Spindle

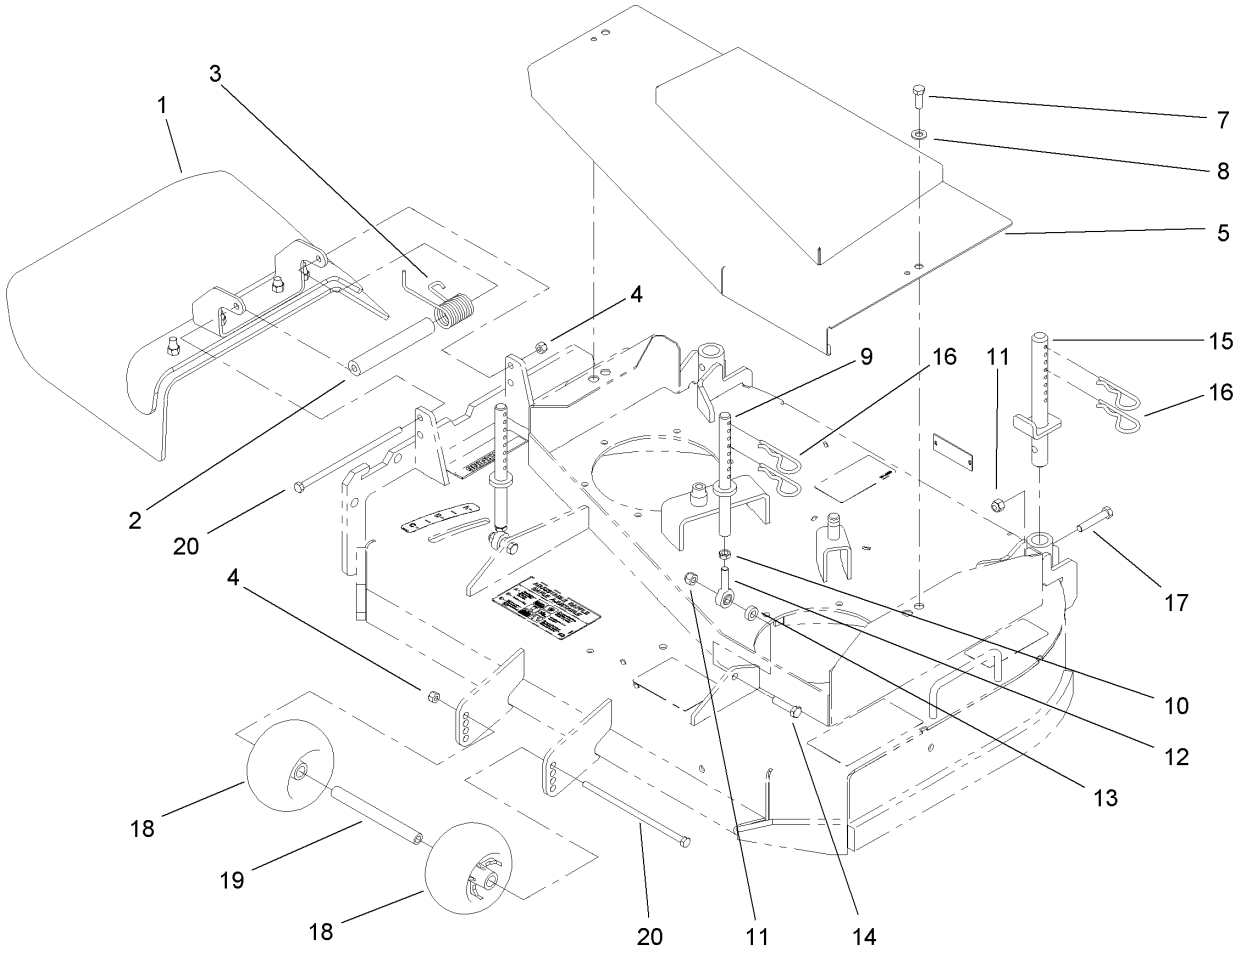


Deck Deflector, Roller and Cover Assembly

Ref	Part No.	Qty.	Description
1	110-0790	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	2	Nut-Lock, NI
5	110-6964-01	1	Cover ASM
7	323-6	2	Screw-HH
8	3256-24	2	Washer-Flat
9	108-2674	2	Front Pin ASM
10	3220-3	2	Nut-HJ
11	3296-39	4	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer
14	323-8	2	Screw-HH
15	110-2086	2	Rear Pin ASM
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	1-603299	2	Roller-Scalp, Anti
19	98-5967	1	Spacer-Wheel
20	322-50	2	Screw-HH

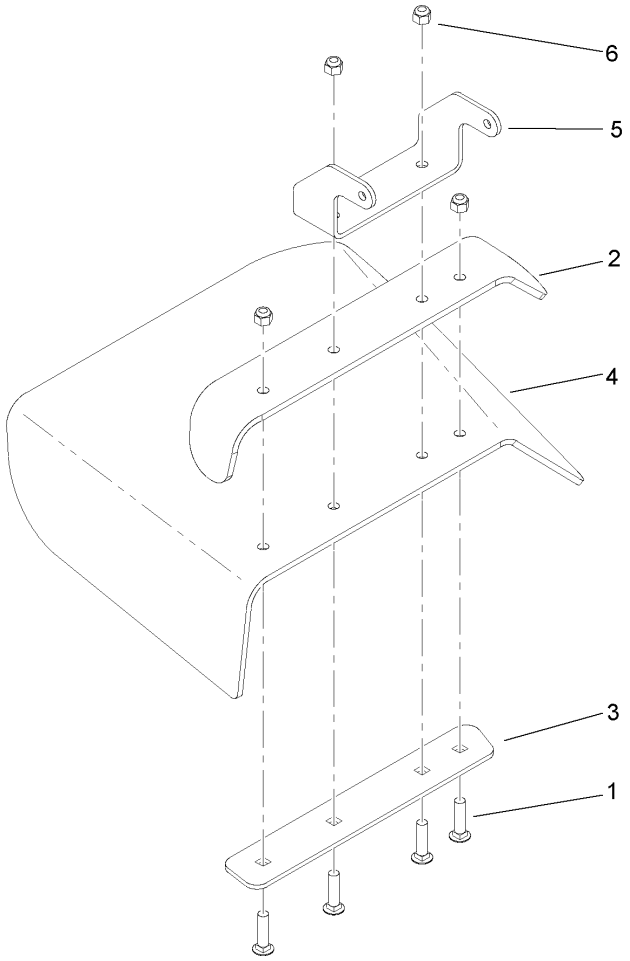


Deflector Assembly No. 110-0790

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI

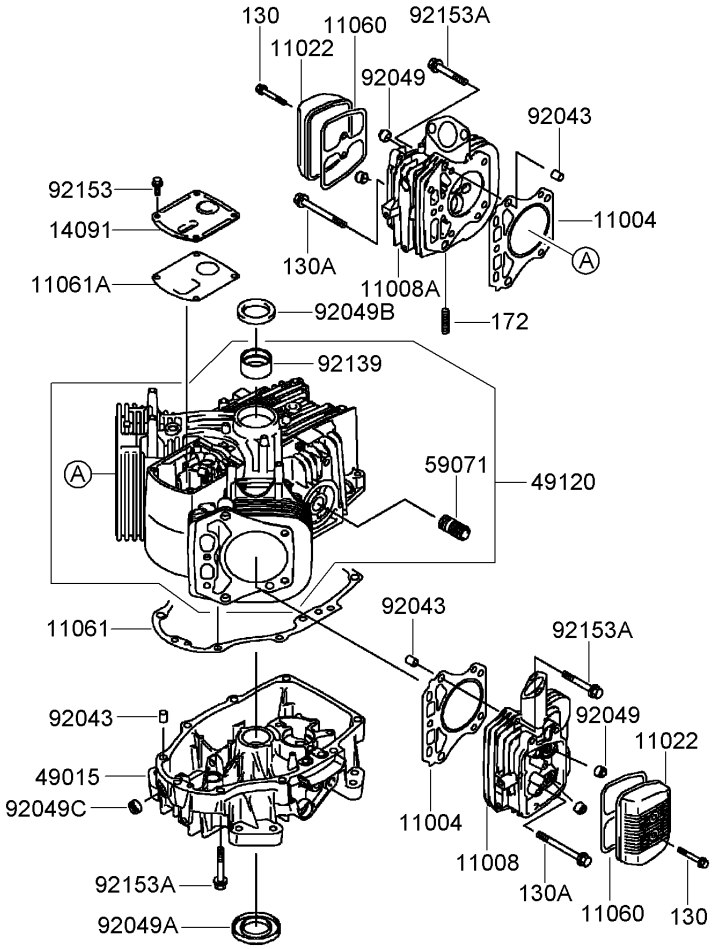


Cylinder and Crankcase Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸11004	11004-7018	2	Gasket-Head
❸11008	11008-7021	1	Head-Cylinder, No. 2
❸11008A	11008-7022	1	Head-Cylinder, No. 1
❸11022	11022-7003	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Case, Rocker
❸11061	11061-7007	1	Gasket-Cover, Crankcase
❸11061A	11061-7008	1	Gasket-Breather
❸14091	14091-7007	1	Cover
❸49015	49015-7032	1	Cover-Crankcase
❸49120	49120-7015	1	Crankcase
❸59071	59071-2079	1	Joint
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❸92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❸92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❸92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❸92139	92139-7008	1	Bushing
❸92153	92153-7043	4	Bolt (6X12)
❸92153A	92153-7054	17	Bolt (8X50)
❸130	130B0640	4	Bolt-Flanged (6X40)
❸130A	130CA0875	2	Bolt-Flanged (8X75)
❸172	172G0818	4	Bolt-Stud (8X18)

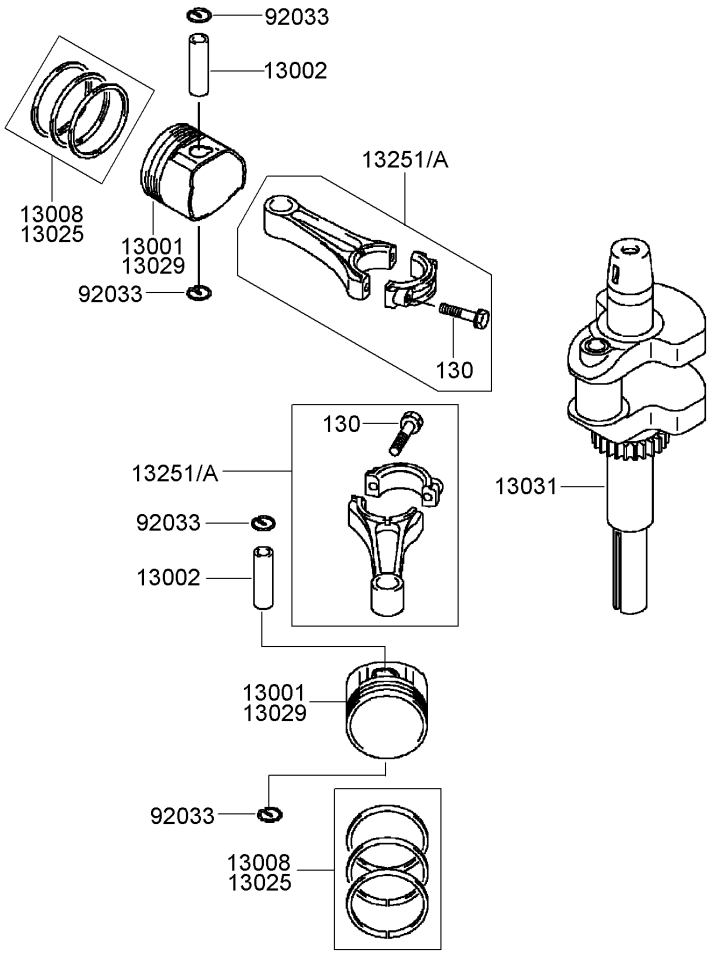


Piston and Crankshaft Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸13001	13001-7022	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-7001	2	Ring Set-Piston
❸13025	13025-7003	1	Ring Set-Piston (L 0.50)
❸13029	13029-7005	1	Piston-Engine (L 0.50)
❸13031	13031-7033	1	Crankshaft
❸13251	13251-7007	2	Connecting Rod ASM
❸13251A	13251-7008	2	Connecting Rod ASM (0.50)
❸92033	92033-7002	4	Ring-Snap
❸130	130G0630	4	Bolt-Flanged (6X30)

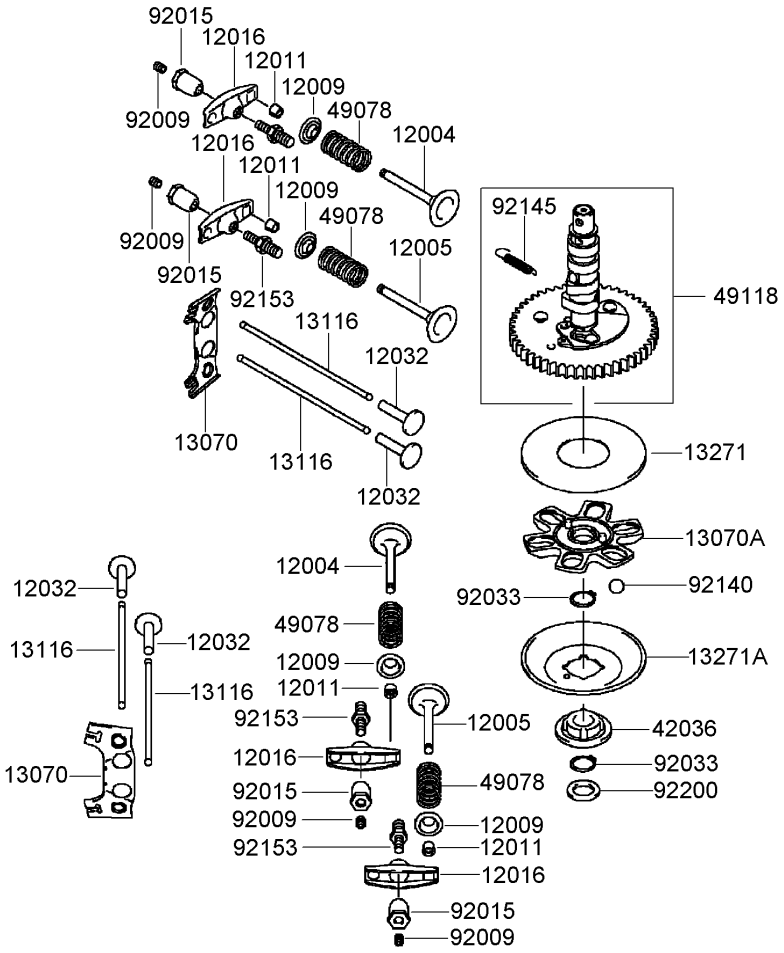


Valve and Camshaft Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸12004	12004-7005	2	Valve-Intake
❸12005	12005-7006	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12011	12011-2056	8	Collet
❸12016	12016-7008	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036	42036-7010	1	Sleeve
❸49078	49078-7001	4	Spring-Valve, Engine
❸49118	49118-7009	1	Camshaft
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7002	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer

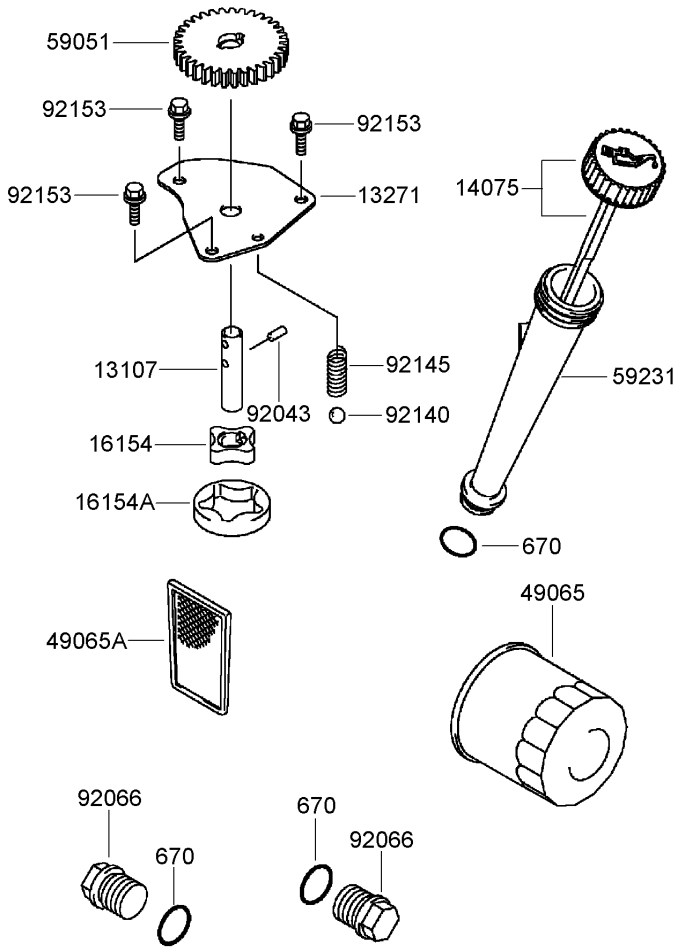


Lubrication Equipment Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump (In)
❸16154A	16154-2054	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7003	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring
❸92153	92153-7043	3	Bolt (6X12)
❸670	670D2016	3	O-Ring (16Mm)

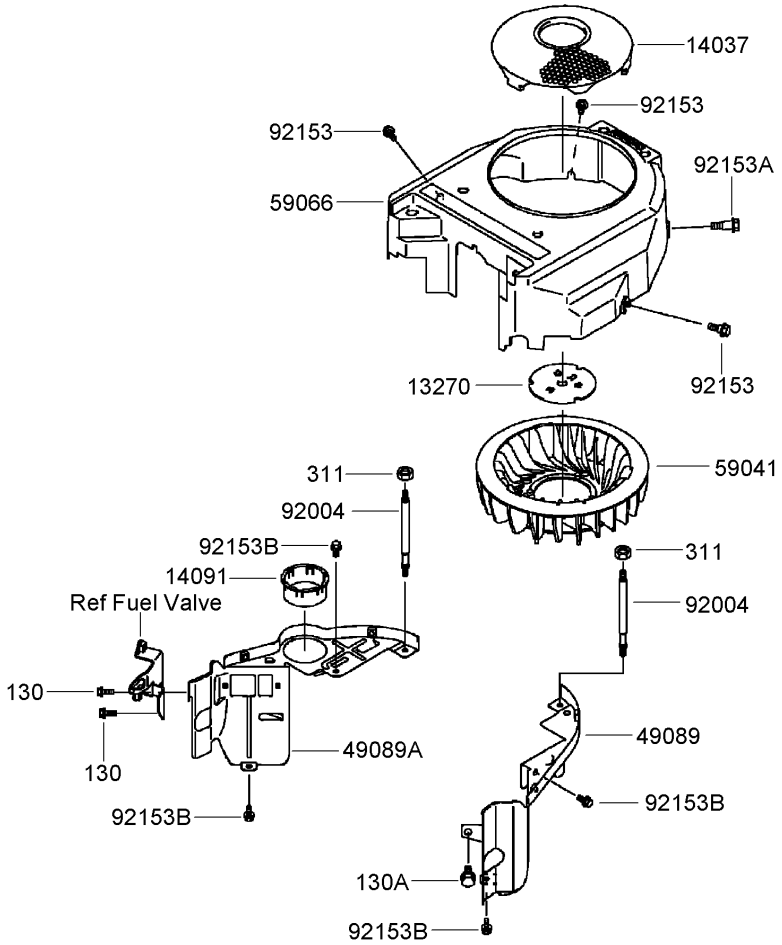


Cooling Equipment Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸13270	13270-7007	1	Plate
❸14037	14037-7025-9H	1	Screen
❸14091	14091-7009	1	Cover
❸49089	49089-7044	1	Shroud-Engine
❸49089A	49089-7061	1	Shroud-Engine
❸59041	59041-7012	1	Fan
❸59066	59066-7036	1	Housing-Fan
❸92004	92004-7007	2	Stud
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt
❸92153B	92153-7043	4	Bolt (6X12)
❸130	130B0616	2	Bolt-Flanged (6X16)
❸130A	130B0816	1	Bolt-Flanged (8X16)
❸311	311F0600	2	Nut-Hex (6Mm)

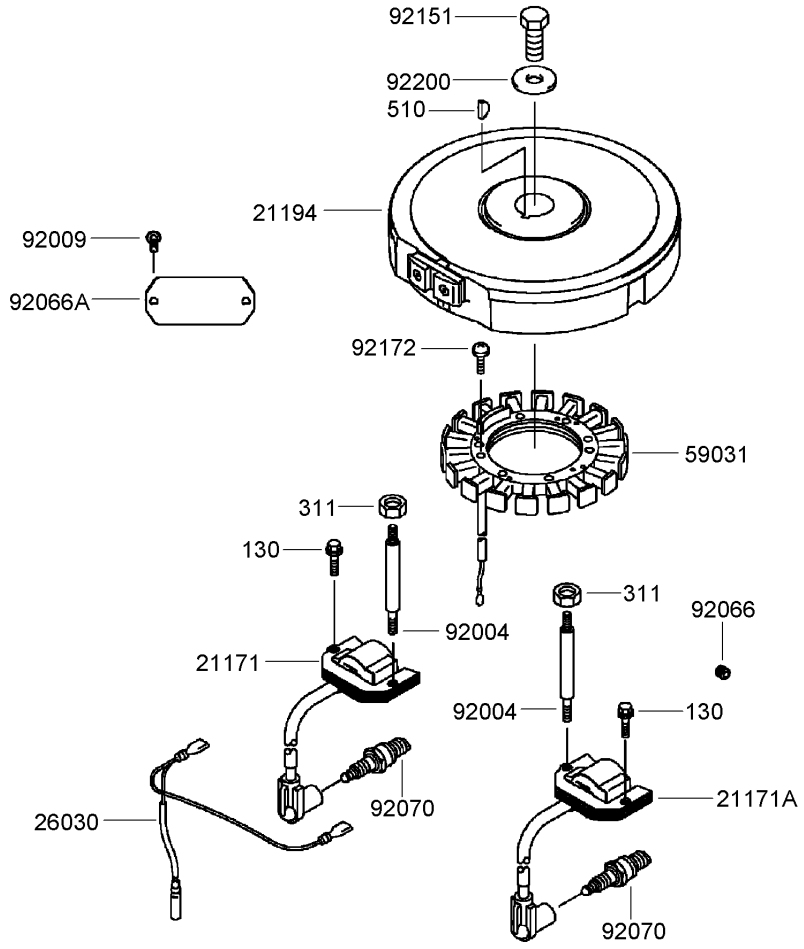


Electric Equipment Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸21171	21171-7026	1	Ignition Coil ASM
❸21171A	21171-7027	1	Ignition Coil ASM
❸21194	21194-7012	1	Flywheel
❸26030	26030-7001	1	Harness
❸59031	59031-7002	1	Coil-Charging
❸92004	92004-7008	2	Stud
❸92009	92009-2308	2	Screw
❸92066	92066-7002	1	Plug
❸92066A	92066-7005	1	Plug
❸92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
❸92151	92151-2097	1	Bolt (12X30)
❸92172	92172-7018	4	Screw (5X20)
❸92200	92200-7002	1	Washer
❸130	130B0620	2	Bolt-Flanged (6X20)
❸311	311F0600	2	Nut-Hex (6Mm)
❸510	510A5100	1	Key-Woodruff

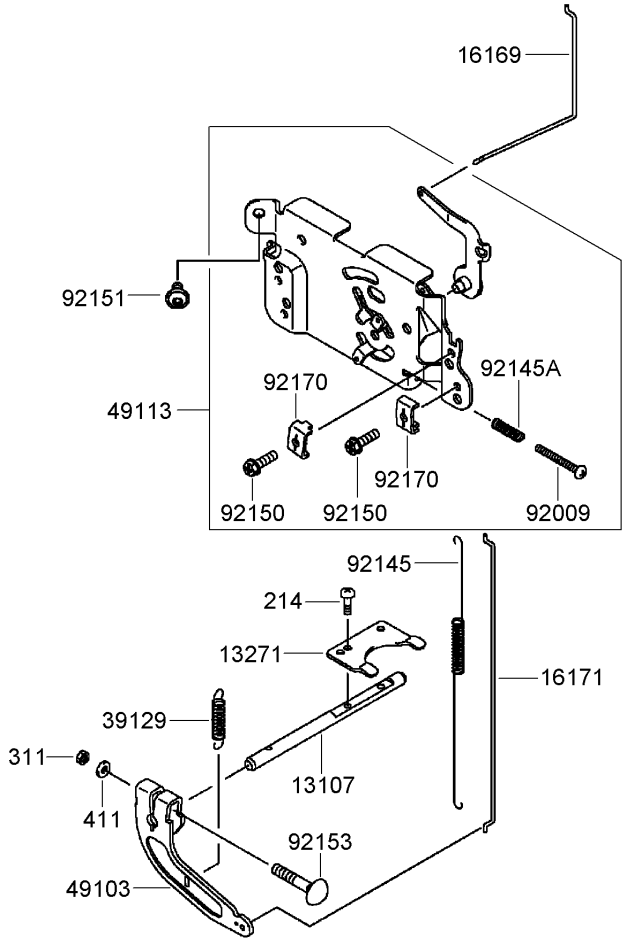

Control Equipment Assembly
Kawasaki FH430V-AS53


Ref	Part No.	Qty.	Description
❸13107	13107-7010	1	Shaft
❸13271	13271-7032	1	Plate
❸16169	16169-7012	1	Link-Choke
❸16171	16171-7007	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113	49113-7024	1	Panel-Control
❸92009	92009-7007	1	Screw (4X35)
❸92145	92145-7003	1	Spring
❸92145A	92145-7005	1	Spring
❸92150	92150-2182	2	Bolt (5X18)
❸92151	92151-7012	2	Bolt (6X12)
❸92153	92153-7033	1	Bolt (6X35)
❸92170	92170-7001	2	Clamp
❸214	214B0408	2	Screw-Pan (4X8)
❸311	311B0600	1	Nut-Hex (6Mm)
❸411	411B0600	1	Washer-Plain (6Mm)

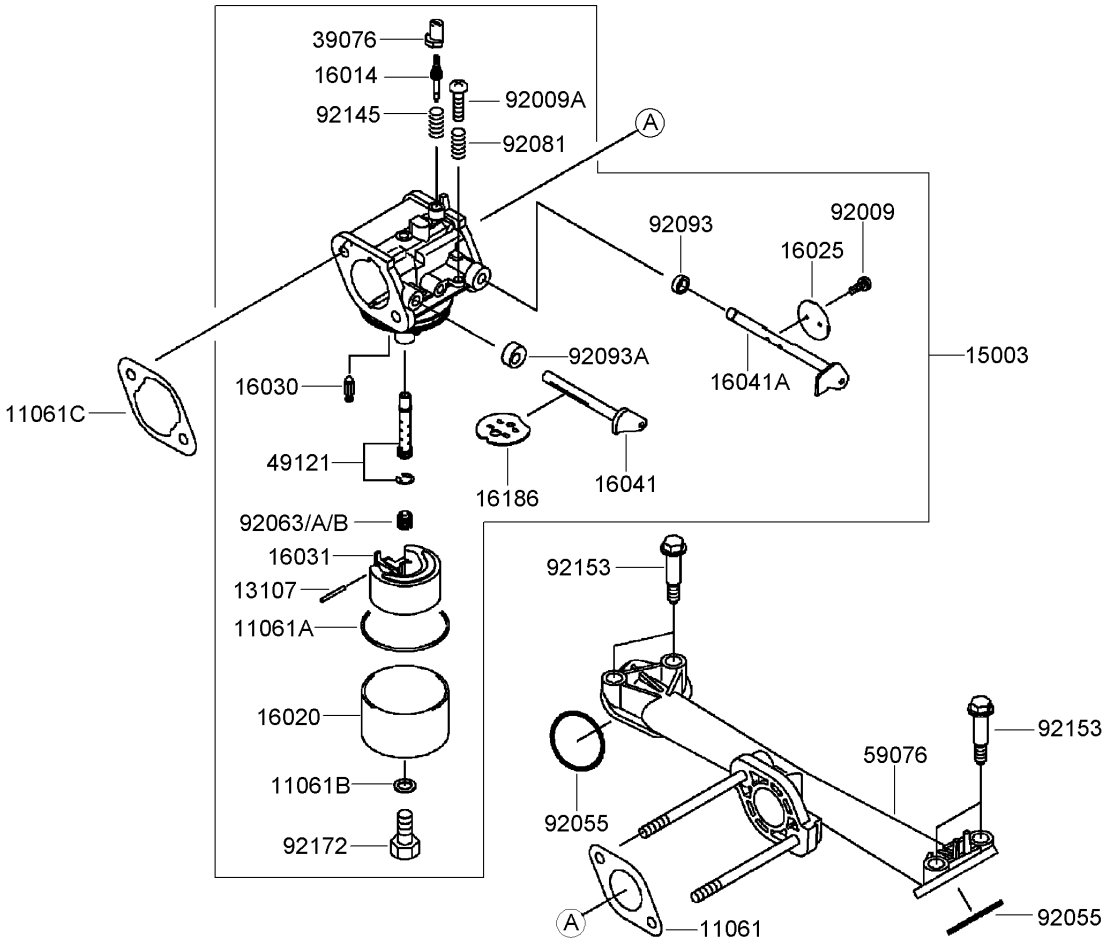

Carburetor Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸11061	11061-7004	1	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Cleaner, Air
❸13107	13107-7018	1	Shaft
❸15003	15003-7061	1	Carburetor ASM
❸16014	16014-7002	1	Screw-Pilot, Air
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Choke, Carburetor
❸16041A	16041-7018	1	Shaft-Throttle, Carburetor
❸16186	16186-7002	1	Choke Valve ASM
❸39076	39076-7001	1	Limiter
❸49121	49121-7001	1	Nozzle-Main
❸59076	59076-7005	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92055	92055-7007	2	O-Ring (I D 31)
❸92063	92063-7026	1	Jet-Main, No. 88
❸92063A	92063-7028	1	Jet-Main, No. 85
❸92063B	92063-7029	1	Jet-Main, No. 82
❸92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸92153	92153-7009	4	Bolt
❸92172	92172-7002	1	Screw

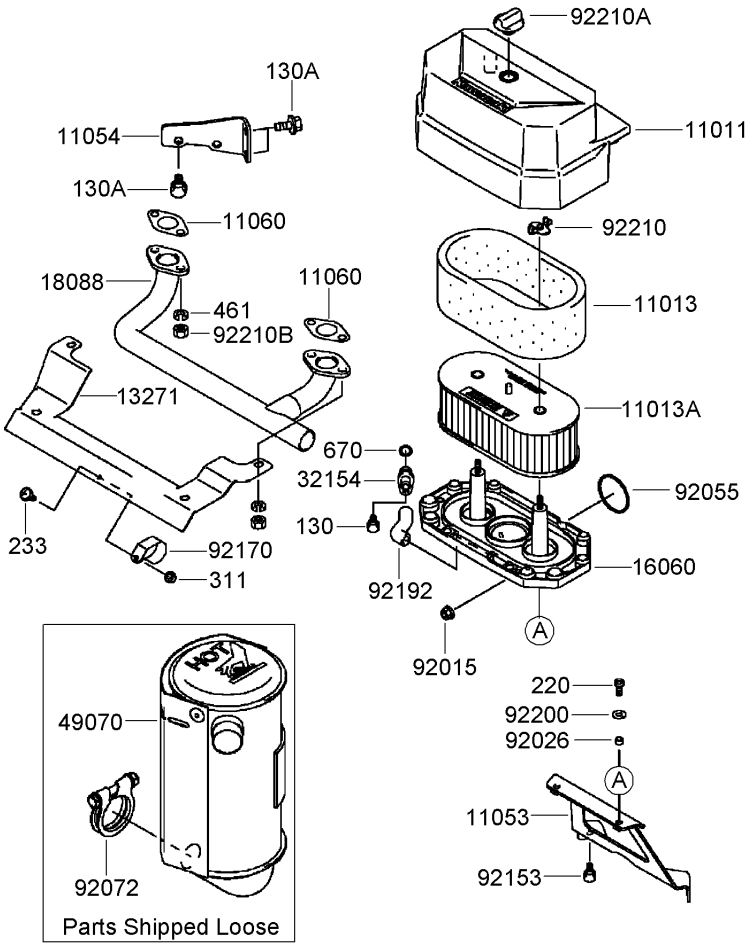

Air Filter and Muffler Assembly
Kawasaki FH430V-AS53


Ref	Part No.	Qty.	Description
❸11011	11011-7045	1	Case-Filter, Air
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11053	11053-7022	1	Bracket
❸11054	11054-7002-9H	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13271	13271-7022	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18088	18088-7001	1	Pipe-Exhaust
❸32154	32154-7006	1	Pipe
❸49070	49070-7021	1	Muffler
❸92015	92015-1193	2	Nut
❸92026	92026-7001	2	Spacer (6.2X7.9X5)
❸92055	92055-7015	1	O-Ring
❸92072	92072-7012	1	Band
❸92153	92153-7043	2	Bolt (6X12)
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92200	92200-2070	2	Washer
❸92210	92210-7004	2	Nut
❸92210A	92210-7019	1	Nut
❸92210B	92210-7027	4	Nut (M8)
❸130	130B0610	1	Bolt-Flanged (6X10)

Ref	Part No.	Qty.	Description
❸130A	130B0816	3	Bolt-Flanged (8X16)
❸220	220B0614	2	Screw-Pan, Cross (6X14)
❸233	233B0416	1	Screw (4X16)
❸311	311B0400	1	Nut-Hex (4Mm)
❸461	461F0800	4	Washer-Spring (8Mm)
❸670	670B2010	1	O-Ring (10Mm)

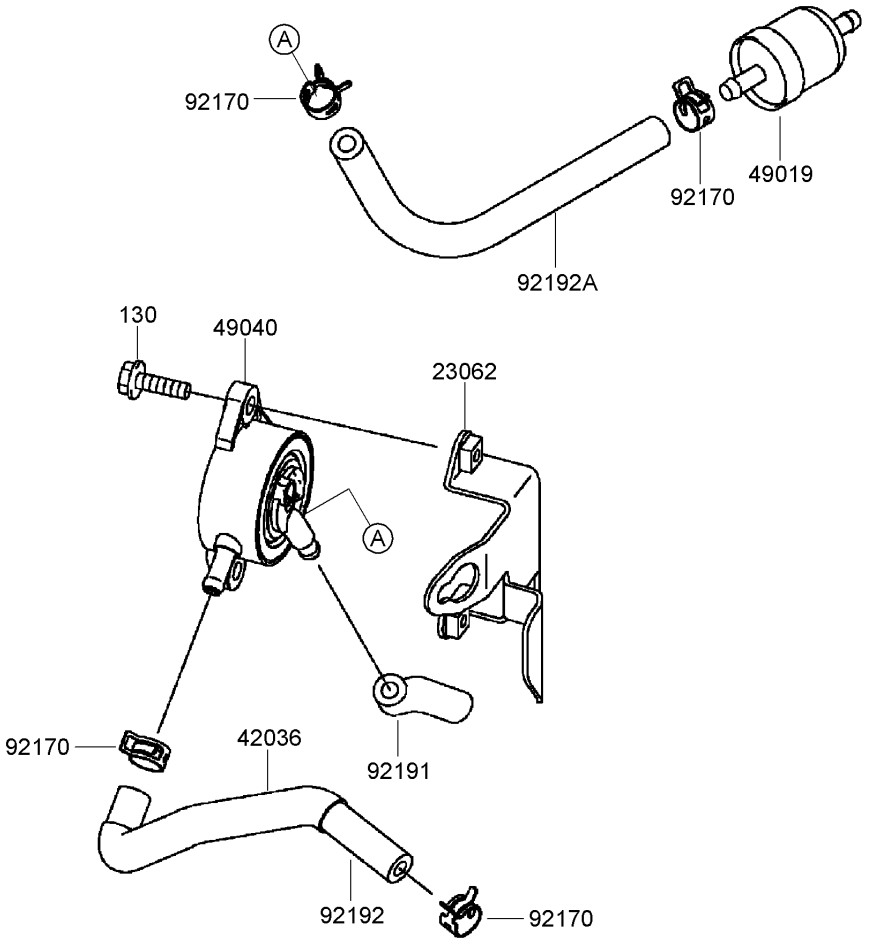


Fuel Tank and Valve Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸23062	23062-7004-9H	1	Bracket
❸42036	42036-7012	1	Sleeve
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92192	92192-7035	1	Tube (6.35X12.7X170)
❸92192A	92192-7037	1	Tube (6.35X12.7X160)
❸130	130B0620	2	Bolt-Flanged (6X20)

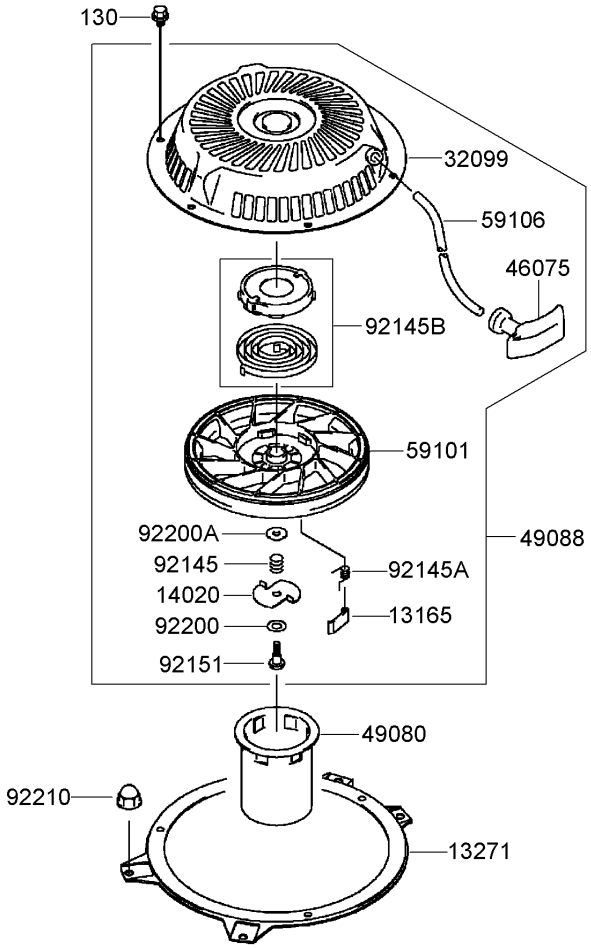

Starter Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸13165	13165-7001	2	Pawl-Starter, Recoil
❸13271	13271-7003-9H	1	Plate
❸14020	14020-7001	1	Retainer
❸32099	32099-7002	1	Case-Starter, Recoil
❸46075	46075-7001	1	Grip-Starter, Recoil
❸49080	49080-7001	1	Pulley-Starting
❸49088	49088-7013	1	Starter-Recoil
❸59101	59101-7001	1	Reel-Starter, Recoil
❸59106	59106-7005	1	Rope
❸92145	92145-7006	1	Spring
❸92145A	92145-7007	2	Spring
❸92145B	92145-7008	1	Spring
❸92151	92151-7008	1	Bolt
❸92200	92200-7004	1	Washer
❸92200A	92200-7005	1	Washer
❸92210	92210-0003	4	Nut
❸130	130B0608	3	Bolt-Flanged (6X8)

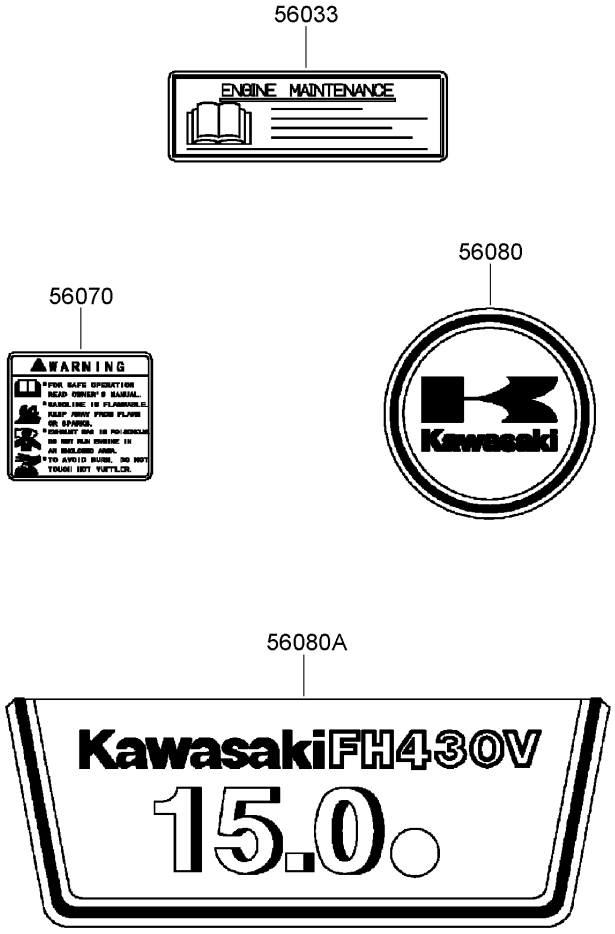

Label Assembly
Kawasaki FH430V-AS53

Ref	Part No.	Qty.	Description
❸56033	56033-7001	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56080	56080-2077	1	Label-Brand
❸56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 30032 - Commercial Walk-Behind Mower, 15HP T-Bar Hydro Drive with 91cm TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Recycler, 18 Inch	105-7779-03
Blade-Med Flow, 18 Inch	105-7794-03
Blade-Low Flow, 18 Inch	105-7795-03
Blade-Atomic, 18 Inch	105-7796-03
Blade-Hi-Flow, 18 Inch (6 Pack)	108-1117
Blade-Atomic, 18 Inch (6 Pack)	108-1118
Blade-Lo-Flow, 18 Inch (6 Pack)	110-0406
Blade-Recycler, 18 Inch (6 Pack)	110-0408
Blade-Med-Flow, 18 Inch (6 Pack)	110-0409
36 Inch Bagger Enhancement Kit	110-2026
36 Inch Recycler Kit	110-2080
Weight-Cast	112-7059-01
Soft Bag (3 Bushel)	30104
Tru Trak Sulky	30110

NOTES


TORO®