Form Number 3359-504 Rev A

Commercial Walk-Behind Mower

Floating Deck T-Bar Hydro with 36in TURBO FORCE® Cutting Unit

Model No. 30494 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Clutch Assembly	3
Fuel System, Hydraulic Pump and Filter Assembly	4
Hydraulic Pump Assembly No. 114-3400 and 114-3401	5
Pump Drive and Wheel Assembly	6
Hydraulic Wheel Motor Assembly No. 104-1171	7
Lower Control Assembly	8
Hydraulic Hose Assembly	9
Upper Control Assembly	10
Control Panel Assembly	11
Battery Assembly	12
Parking Brake Assembly	13
Power-Take-Off Idler Assembly	14
Carrier Frame Assembly	15
Deck Drive and Baffle Assembly	16
Deck Assembly No. 112-7080	17
Lever Assembly No. 107-1664	18
Spindle Assembly No. 110-0730	19
Spindle Assembly No. 110-0728	20
Outer Deck Assembly	21
Deflector Assembly No. 110-0790	22
Cylinder and Crankcase Assembly Kawasaki FH541V-BS24	23
Piston and Crankshaft Assembly Kawasaki FH541V-BS24	24
Valve and Camshaft Assembly Kawasaki FH541V-BS24	25
Lubrication Equipment Assembly Kawasaki FH541V-BS24	26
Cooling Equipment Assembly Kawasaki FH541V-BS24	27
Electric Equipment Assembly Kawasaki FH541V-BS24	28
Control Equipment Assembly Kawasaki FH541V-BS24	29
Carburetor Assembly Kawasaki FH541V-BS24	30
Air Filter and Muffler Assembly Kawasaki FH541V-BS24	31
Fuel Tank and Valve Assembly Kawasaki FH541V-BS24	32
Starter Assembly Kawasaki FH541V-BS24	33
Label Assembly Kawasaki FH541V-BS24	34
Attachments and Accessories List	35


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Kawasaki dealer

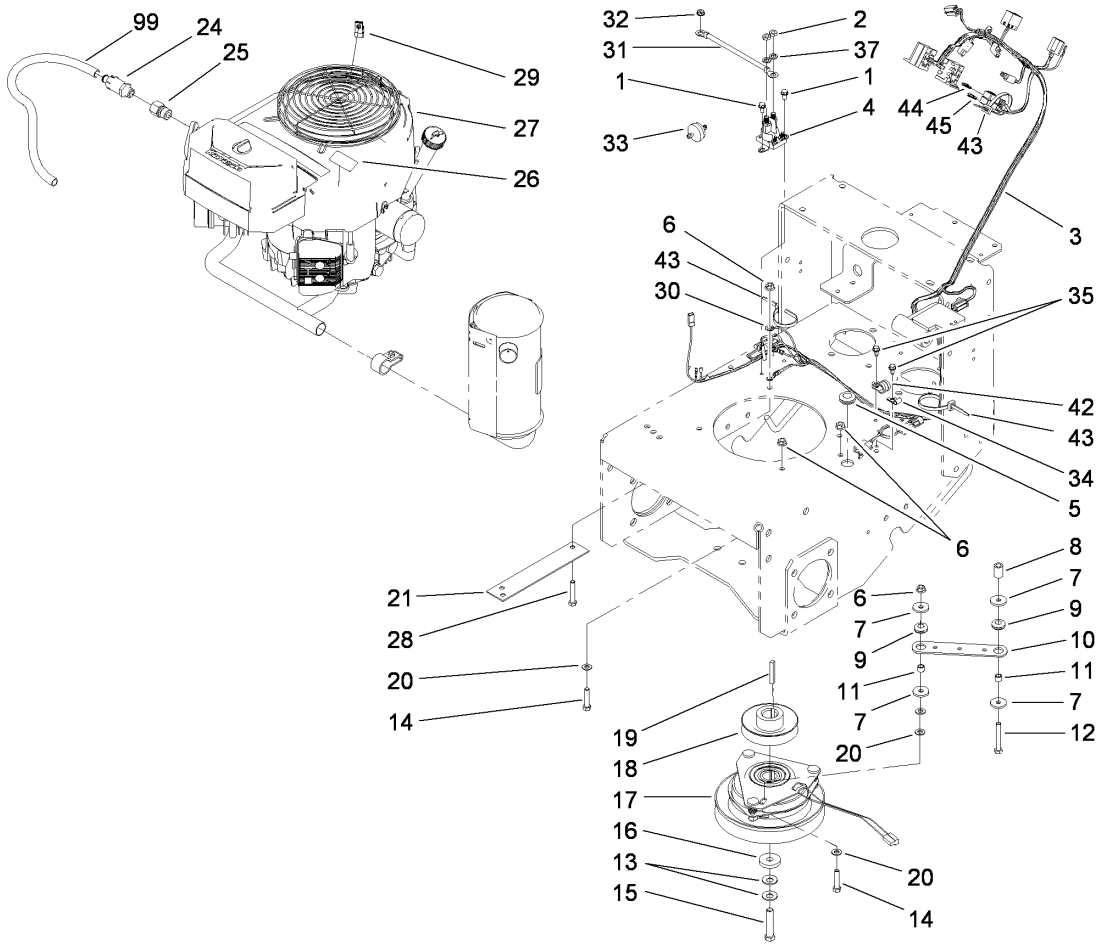

Engine and Clutch Assembly

Ref	Part No.	Qty.	Description
1	32144-4	2	Screw-HWH
2	3220-2	2	Nut-Jam
3	114-3418	1	Harness-Wire
4	1-513075	1	Switch-Solenoid
5	112-7069	1	Grommet
6	32128-20	6	Nut-HF
7	1-613235	4	Washer
8	104-6373	1	Tube-Retainer
9	1-633630	2	Grommet-Brake
10	1-633543-03	1	Strap-Clutch, Brake
11	1-633545	2	Spacer
12	322-11	1	Screw-HH
13	1-603610	2	Washer-Spring
14	322-7	4	Screw-HH
15	3212-9	1	Screw-HH
16	107-4136	1	Washer
17	105-2635	1	Clutch / Brake
18	44-5940	1	Pulley
19	608006	1	Key-Square
20	3256-23	5	Washer-Flat
21	94-5847-01	1	Cover-Pulley
24	92-6877	1	Valve-Drain, Oil
25	103-1966	1	Adapter
26	106-0699	1	Decal-Warning


Ref	Part No.	Qty.	Description
❸27		1	Engine-Kawasaki, FH541V-Bs24
28	322-9	1	Screw-HH
29	2412-87	1	Clamp-Cable
30	3255-8	1	Washer-Lock
31	112-9707	1	Cable-Battery, Pos
32	32149-2	1	Nut-Keps
33	56-6360	1	Filter-Fuel
34	2412-72	1	Clip-Closed, Insulated
35	12-3270	2	Screw
37	3253-4	2	Washer-Lock
42	2412-134	1	R-Clamp
43	3290-378	3	Tie-Cable
44	109102	1	Fuse-25 Amp
45	109103	1	Fuse-30 Amp
99	103-1964	1	Hose-Drain, Oil

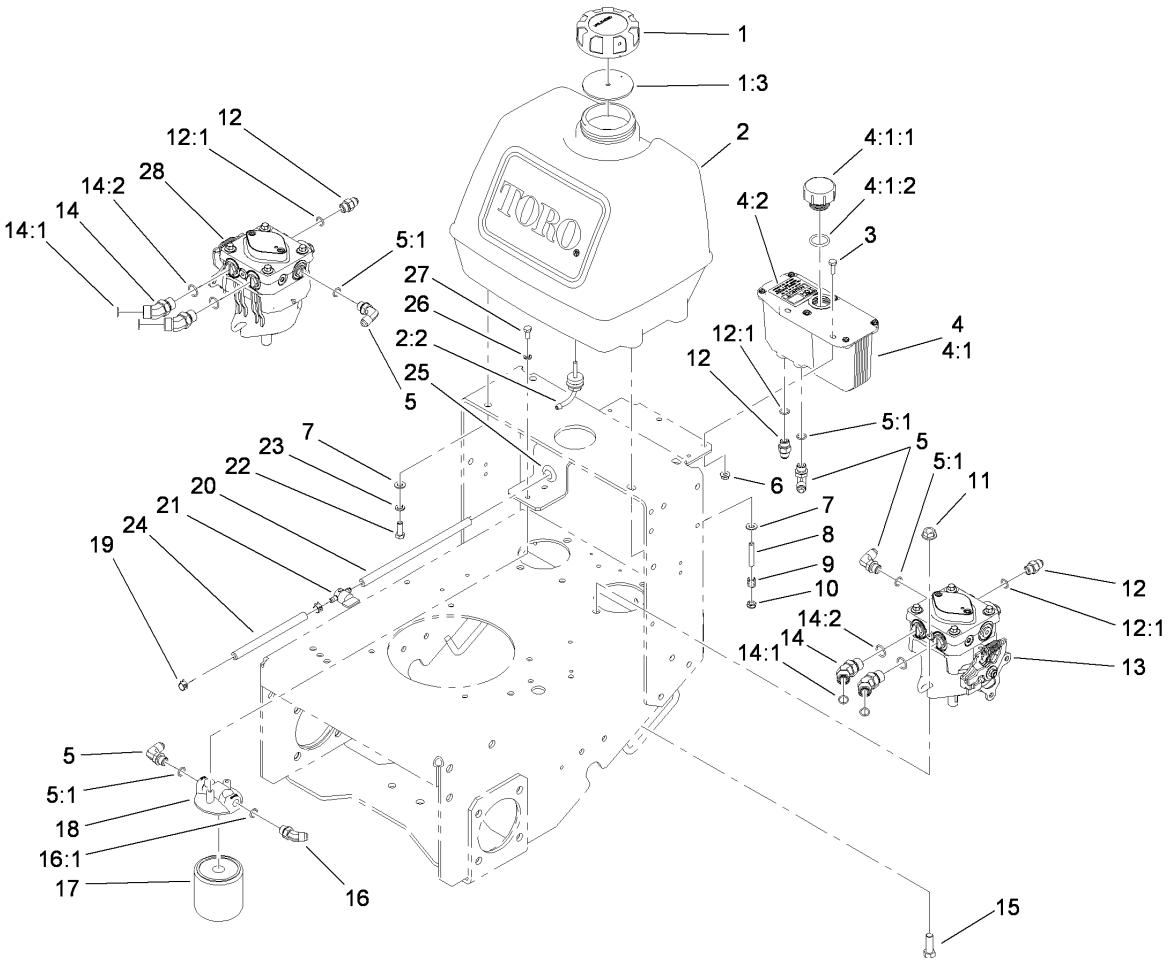

Fuel System, Hydraulic Pump and Filter Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-4	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
❷4:1		1	Reservoir-HYD
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	4	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	3	Fitting-Straight
12:1	237-42	1	O-Ring
13	114-3400	1	Pump-HYD, Left
14	340-101	4	Fitting-HYD, 45 DEG
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring


Ref	Part No.	Qty.	Description
15	324-5	4	Screw-HH
16	353-212	1	Fitting-HYD, 45 DEG
16:1	237-42	1	O-Ring
17	1-633752	1	Filter-HYD, Winter
17	1-633750	1	Filter-Oil, HYD
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp
20	110-4894	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	107-0588	1	Hose-Fuel
25	112-7069	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	114-3401	1	Pump-HYD, Right

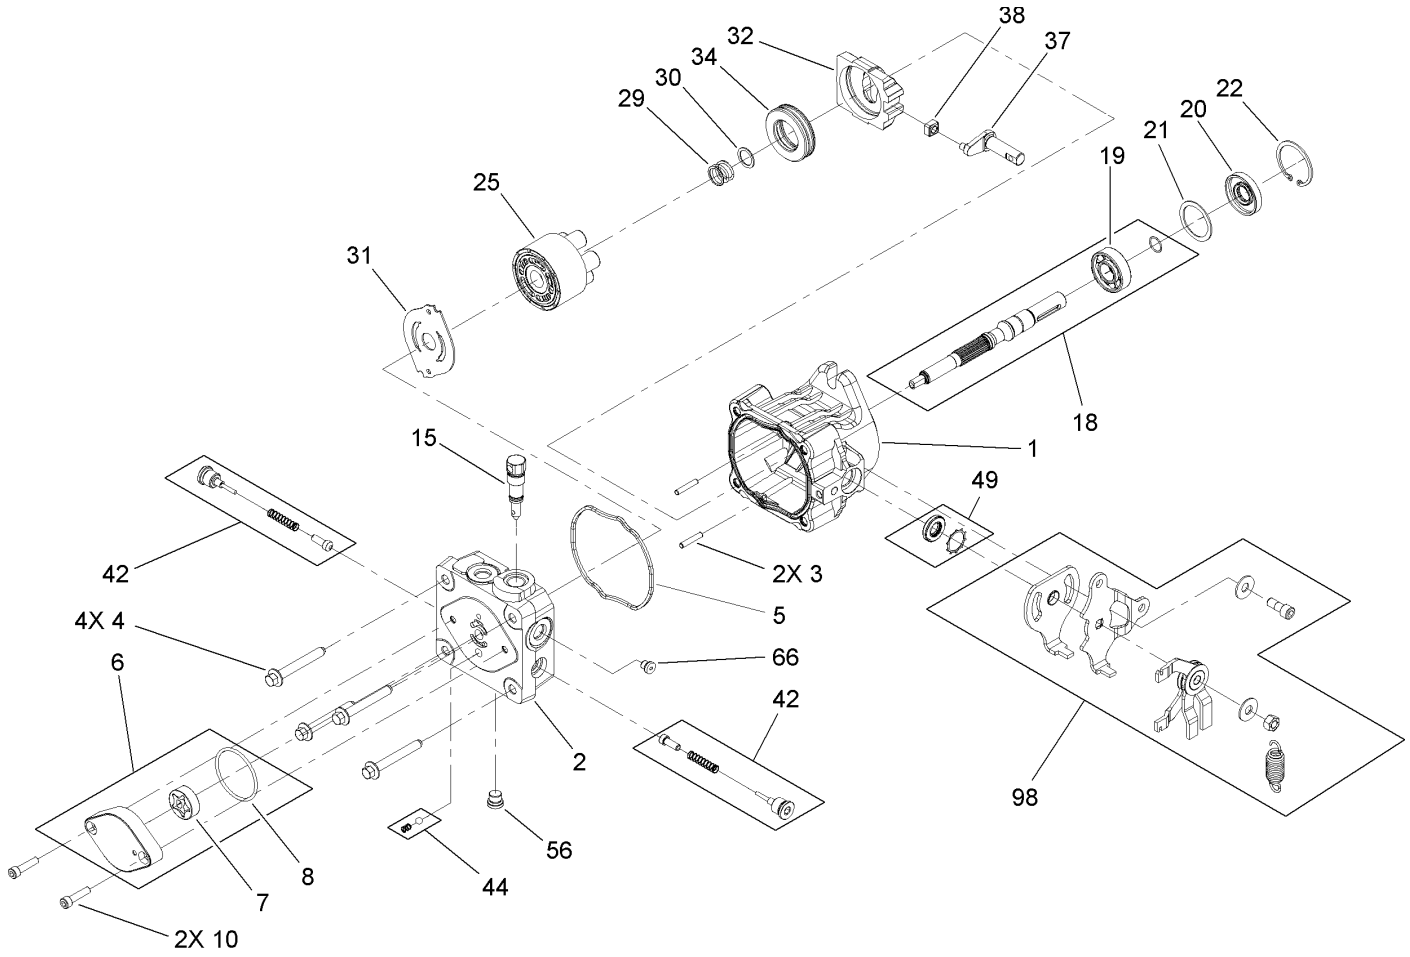

Hydraulic Pump Assembly No. 114-3400 and 114-3401

Ref	Part No.	Qty.	Description
1	114-0278	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	104-2111	2	Capscrew
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	103-2666	1	Cylinder Block Kit
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	104-2112	1	Trunnion ASM
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/Poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal / Retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
98	114-0277	1	Return Kit
❶99	105-6184	1	Seal Kit

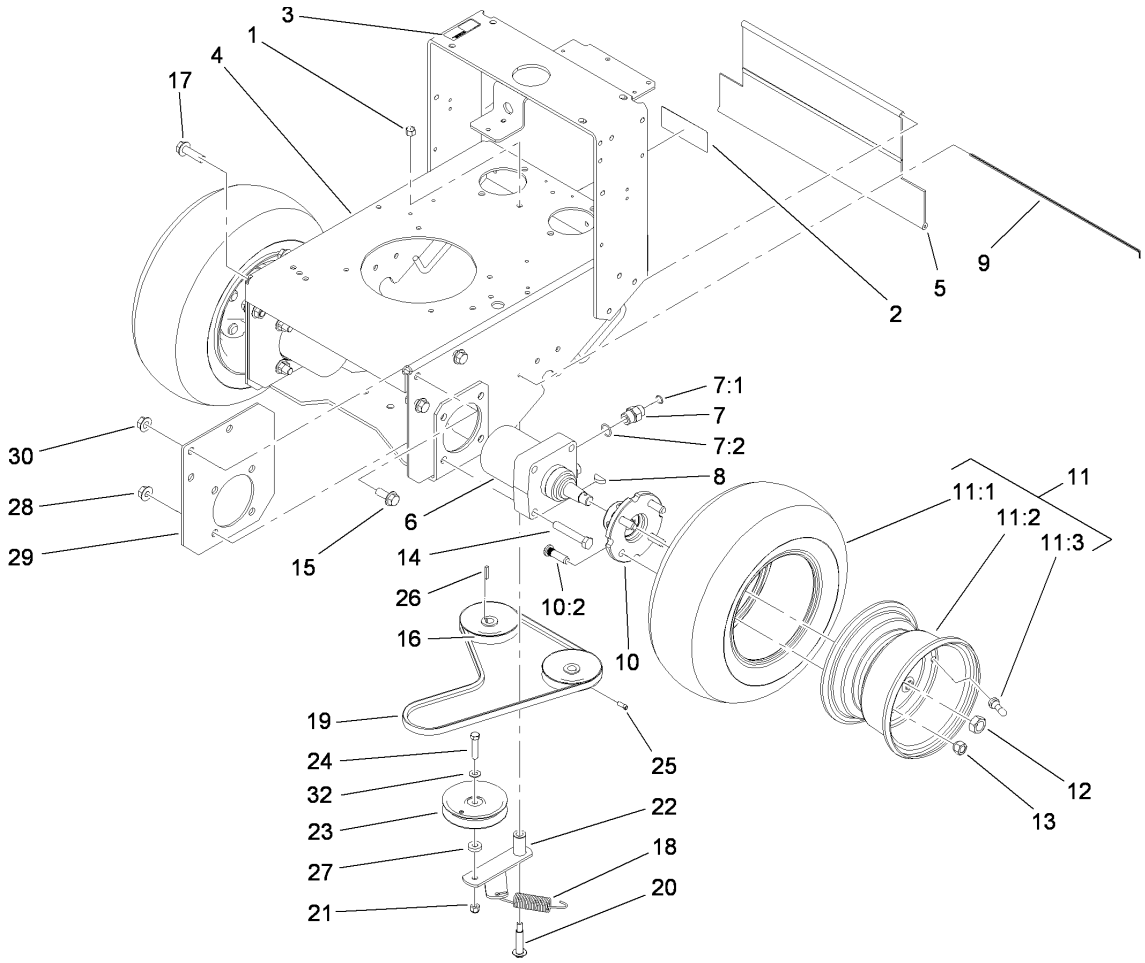

Pump Drive and Wheel Assembly


Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock
2	98-0776	1	Decal-Caution
3	95-2814	1	Decal-Shut Off, Fuel
4	114-0243-01	1	Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	Motor-Wheel
7	340-6	4	Fitting-HYD, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub / Stud ASM
10:2	10-6830	4	Stud-Type, Drive
11	106-0892	2	Wheel And Tire ASM
11:1	104-6322	1	Tire
11:2	106-0893	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel
13	242-50	8	Nut-Lug
14	325-12	8	Screw-HH
15	3234-32	4	Screw-HHF
16	105-5648	2	Pulley-Pump
17	3234-22	2	Screw-HHF
18	68-9950	1	Spring-Traction

Ref	Part No.	Qty.	Description
19	110-5049	1	Belt-V
20	27-6230	1	Bolt-Wheel
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	93-1622	1	Pulley-Idler
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	1-807272	2	Key
27	9202204	1	Washer
28	32128-49	8	Nut-HHF
29	108-6657-01	2	Plate-Frame
30	32128-23	6	Nut-HF
32	3256-24	1	Washer-Flat

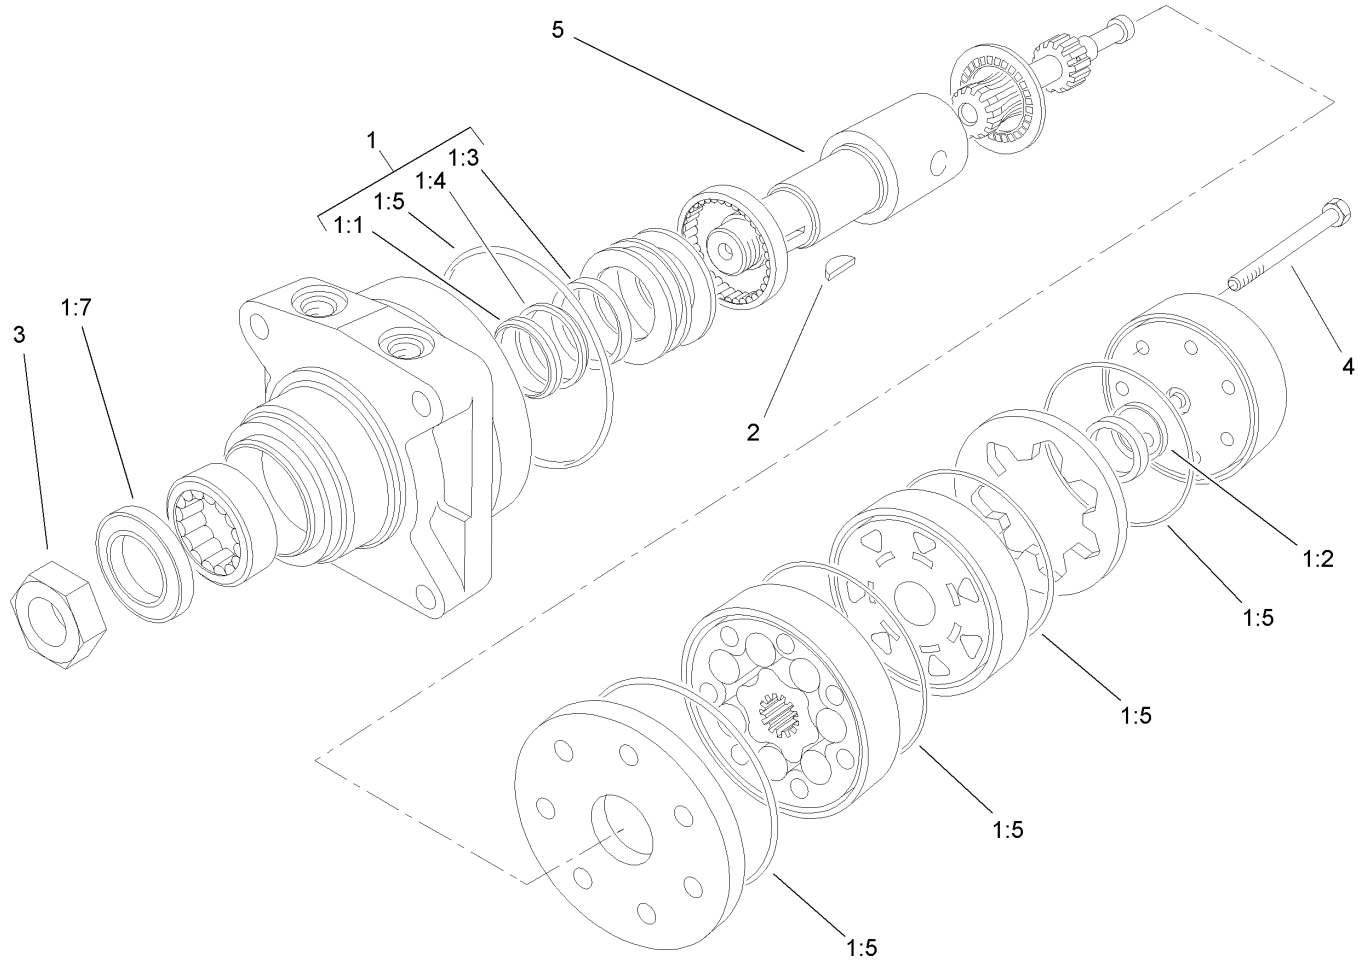


Hydraulic Wheel Motor Assembly No. 104-1171

Ref	Part No.	Qty.	Description
1	1-000119	1	Seal Kit
❷1:1		1	Ring-Back Up
❷1:2		1	Seal-Commutator
❷1:3		1	Seal-Shaft (Viton)
❷1:4		1	Washer-Back Up, Steel
❷1:5		5	Ring-Seal (Viton)
❷1:7		1	Seal-Dirt And Water
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling

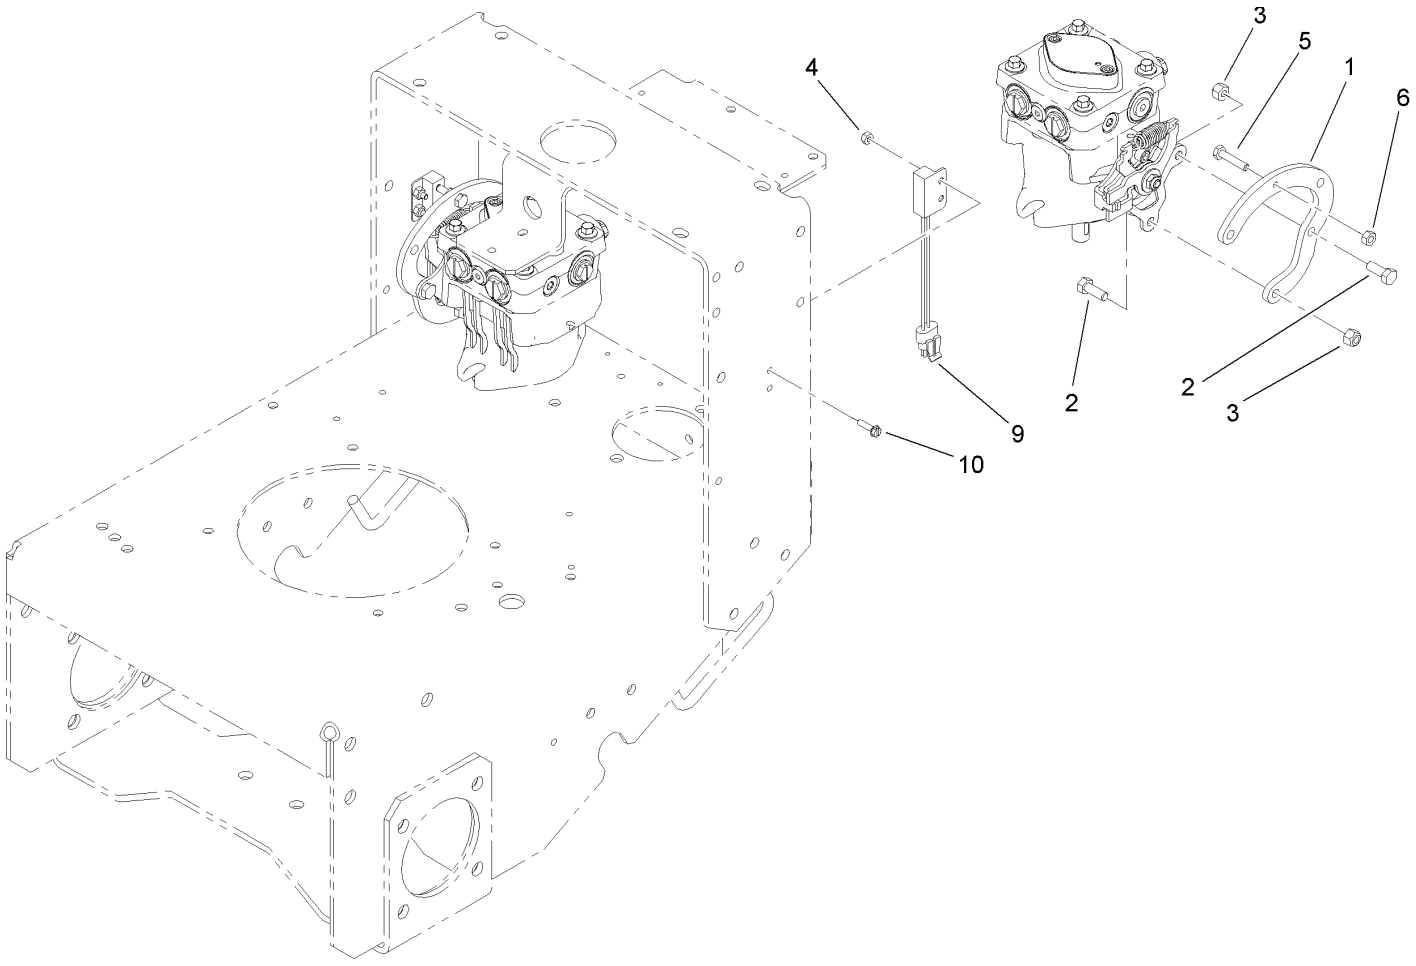


Lower Control Assembly

Ref	Part No.	Qty.	Description
1	114-0227	2	Bracket-Adapter, Pump
2	322-4	4	Screw-HH
3	3296-29	4	Nut-Lock, NI
4	3296-2	4	Nut-Lock
5	114-0282	2	Screw-HH
6	3217-5	2	Nut-Hex
9	105-0023	2	Switch-Proximity
10	32105-13	4	Screw-HWH

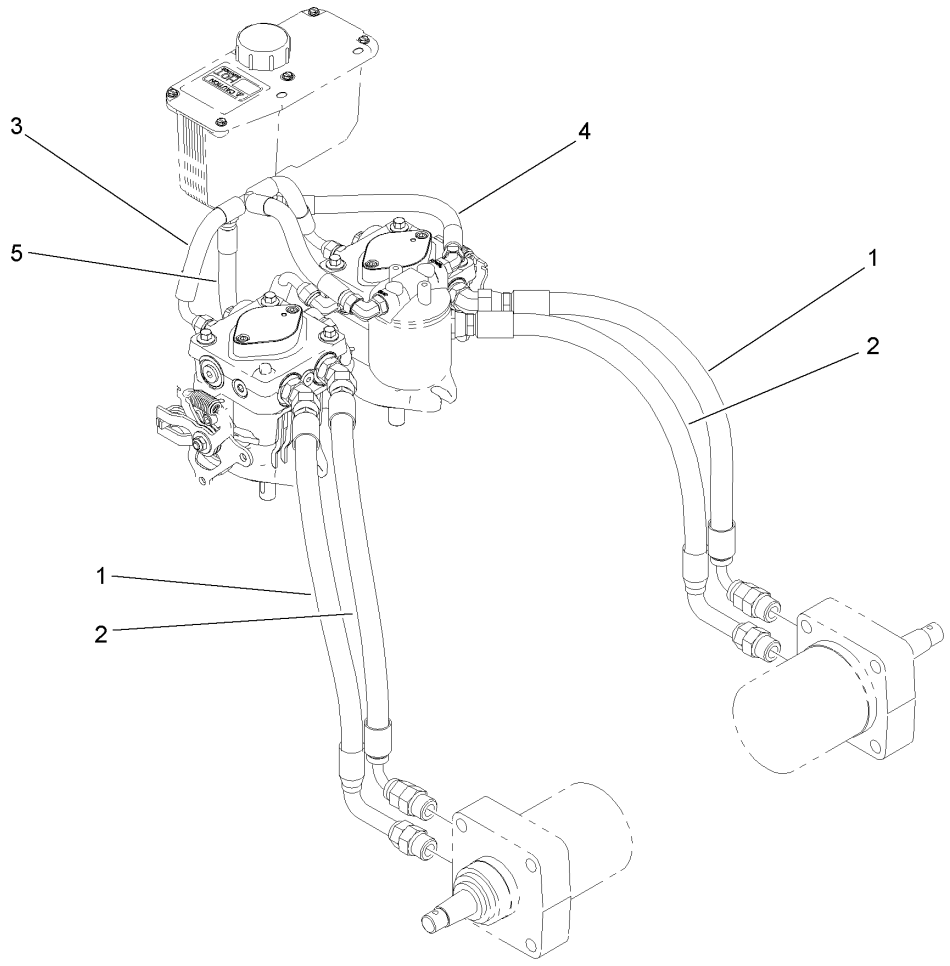


Hydraulic Hose Assembly

Ref	Part No.	Qty.	Description
1	112-9704	2	HYD Hose ASM
2	114-3430	2	HYD Hose ASM
3	105-5697	1	HYD Hose ASM
4	105-5699	1	HYD Hose ASM
5	114-3434	1	HYD Hose ASM

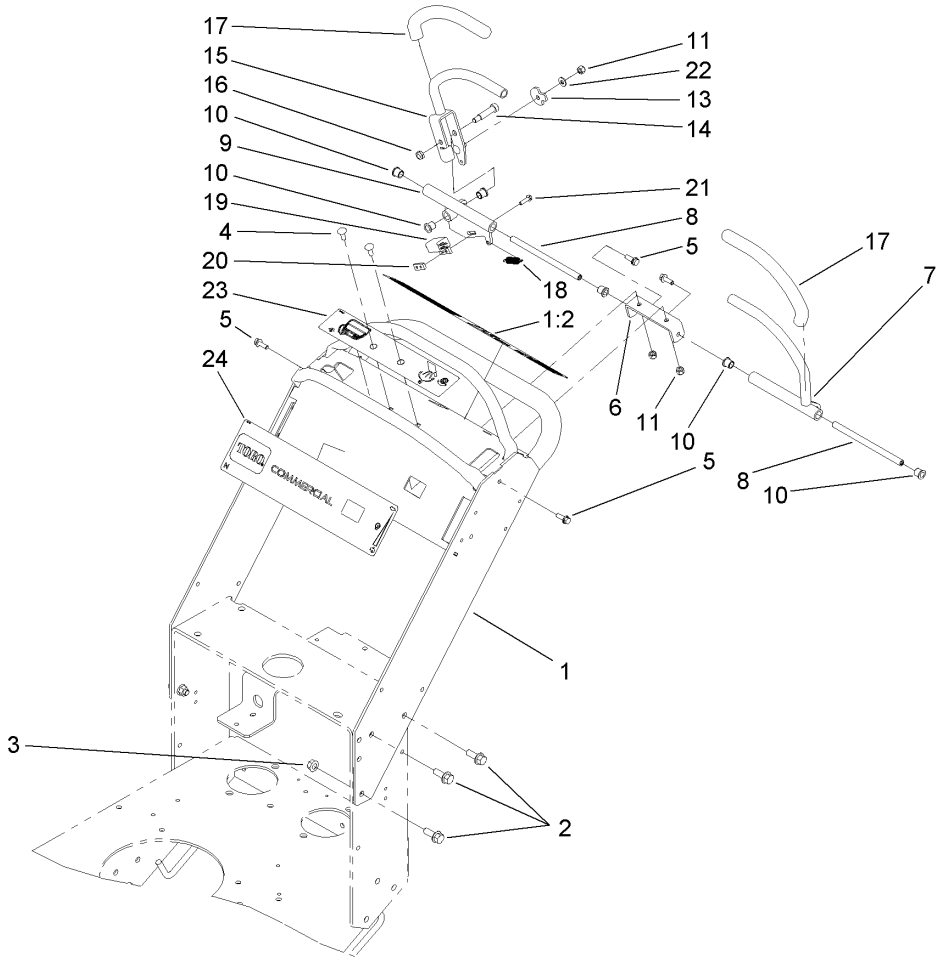


Upper Control Assembly

Ref	Part No.	Qty.	Description
1	114-3435	1	Handle ASM
1:2	114-3425	1	Decal-Warning, Control, Es
2	3234-42	6	Screw-HHF
3	32128-43	6	Nut-Flange
4	3229-1	2	Screw-CARR
5	3234-4	4	Screw-HHF
6	114-0235	1	Bracket-Support
7	114-0272	1	Control Lever ASM
8	114-0260	2	Shaft-Pivot
9	114-0234	1	Motion Control ASM
10	103-9928	6	Bearing
11	3296-42	3	Nut-Lock, NI
13	114-0268	1	Cam-Lever, Handle Stop
14	114-0239	1	Screw-HSH
15	114-0238	1	Lever ASM
16	3296-47	1	Nut-Lock, NI
17	114-0241	2	Grip-Lever
18	114-0249	1	Spring-Extension
19	1-513152	1	Switch-Closed, Normally
20	1-633181	1	Plate-Tapped
21	32105-13	2	Screw-HWH
22	3256-22	1	Washer-Flat
23	114-3424	1	Decal-Control
24	114-3423	1	Decal-Panel, Control

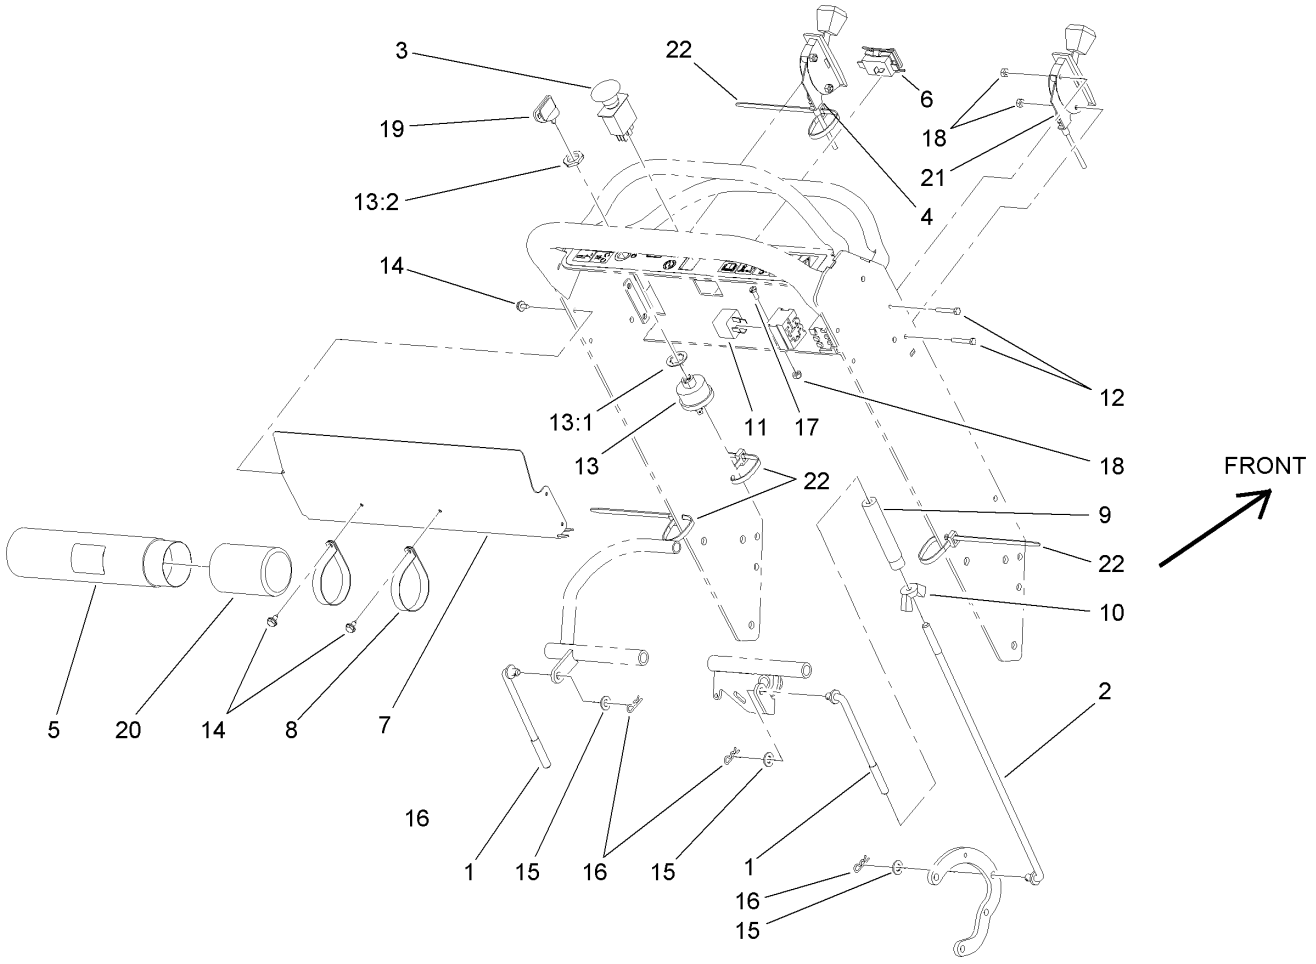


Control Panel Assembly

Ref	Part No.	Qty.	Description
1	114-0275	2	Rod-Control, Upper
2	114-0276	2	Rod-Control, Lower
3	114-0279	1	Switch-PTO
4	110-4994	1	Cable-Throttle
5	104-7050	1	Housing-Manual
6	104-8143	1	Hourmeter
7	114-0270-03	1	Cover-Panel, Control
8	2412-120	2	R-Clamp
9	95-1504	2	Turnbuckle
10	32103-3	2	Nut-Wing
11	98-7249	2	Relay
12	3290-360	4	Screw-HH
13	88-9830	1	Key Switch ASM
13:1	3254-5	1	Washer-Tooth
13:2	218-461	1	Nut-HH
14	32104-76	6	Screw
15	3256-23	4	Washer-Flat
16	3290-307	4	Pin-Hair
17	32105-8	2	Screw-SHH
18	3296-2	6	Nut-Lock
19	63-8360	1	Key-Ignition
20	104-7048	1	Cap-Housing
21	110-4995	1	Cable-Choke
22	3290-378	4	Tie-Cable

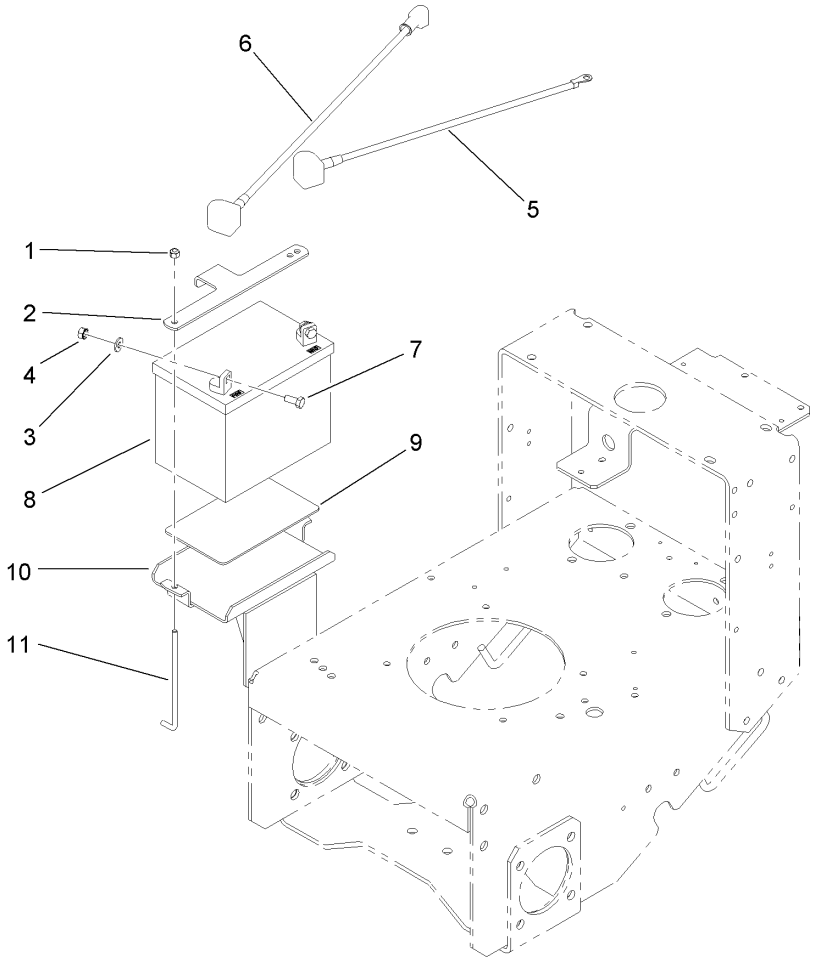

Battery Assembly


Ref	Part No.	Qty.	Description
1	3296-42	2	Nut-Lock, NI
2	104-8568-03	1	Plate-Hold Down, Battery
3	3256-2	2	Washer-Flat
4	32149-1	2	Nut-Keps
5	112-9709	1	Cable-Battery, Black
6	112-9708	1	Cable-Battery, Red
7	322-3	2	Screw-HH
8	104-8162	1	Battery
9	62-4300	1	Pad-Skid, Anti
10	105-3150-01	1	Battery Tray ASM
11	104-8567	2	Holdown-Battery

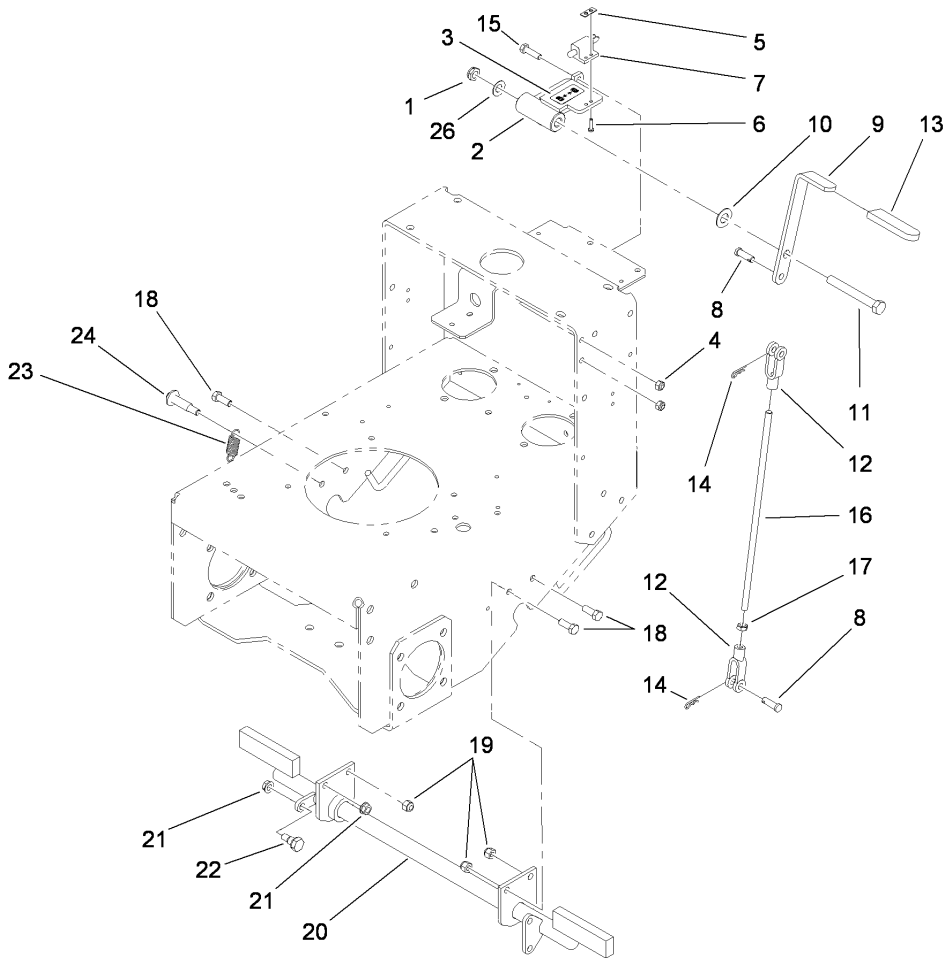

Parking Brake Assembly


Ref	Part No.	Qty.	Description
1	3296-45	1	Nut-Lock, NI
2	112-8716-01	1	Support-Handle
3	112-8720	1	Decal-Brake
4	3296-29	2	Nut-Lock, NI
5	1-633181	1	Plate-Tapped
6	32105-13	2	Screw-HWH
7	1-513152	1	Switch-Closed, Normally
8	1-808285	2	Pin-Clevis
9	106-0671-01	1	Handle-Brake
10	257-7	1	Bearing-Thrust
11	325-17	1	Screw-HH
12	1-633131	2	Yoke-Linkage, Brake
13	1-303020	1	Grip-Lever
14	3290-307	2	Pin-Hair
15	322-6	2	Screw-HH
16	108-2747	1	Rod-Brake
17	3220-3	1	Nut-HJ
18	323-6	3	Screw-HH
19	3296-39	3	Nut-Lock, NI
20	110-4976-01	1	Parking Brake ASM
21	3290-357	2	Nut-HHF, Whiz
22	27-5240	1	Bolt-Shoulder
23	613386	1	Spring-Brake
24	56-6590	1	Bolt-Wheel

Ref	Part No.	Qty.	Description
26	112-9972	1	Washer-Conical, Spring

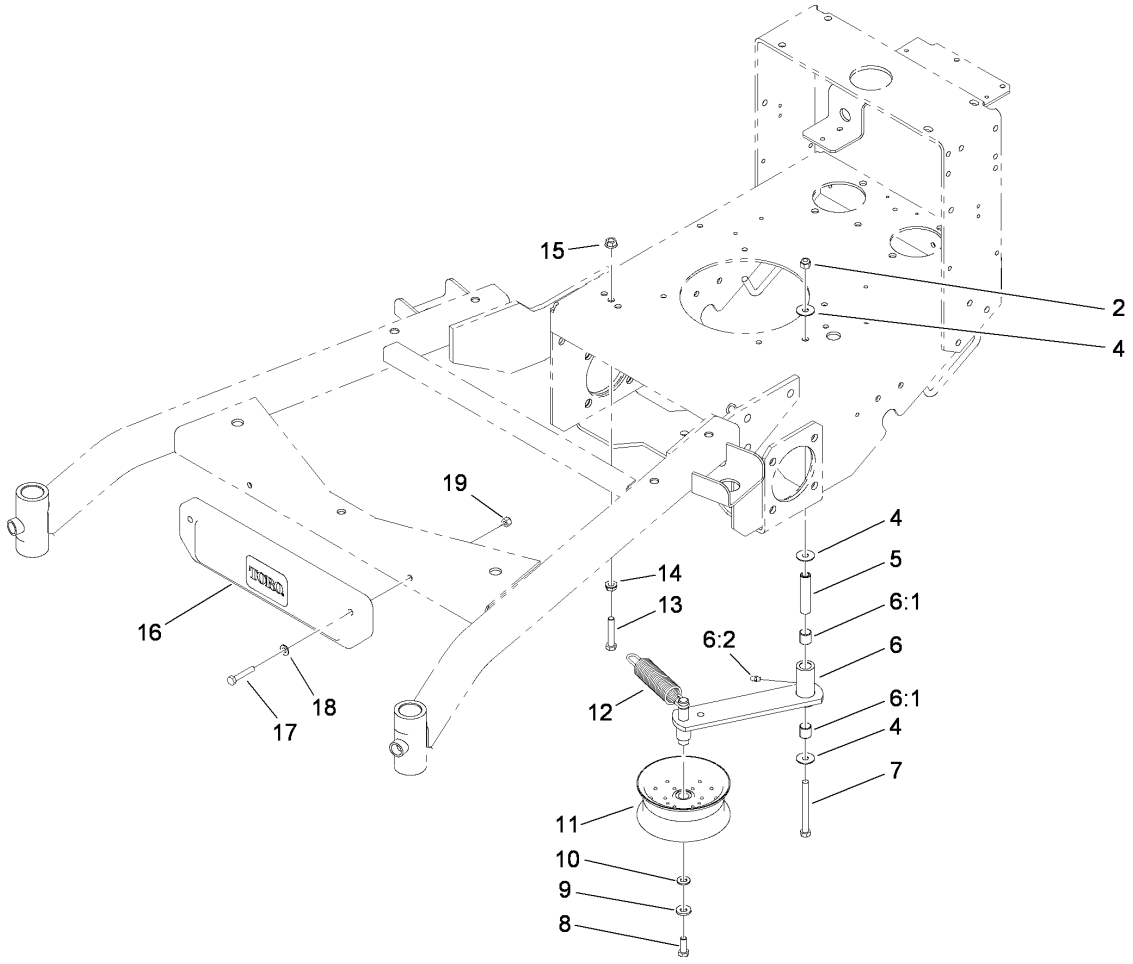

Power-Take-Off Idler Assembly


Ref	Part No.	Qty.	Description
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	112-7055	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension
13	323-10	1	Screw-HH
14	3290-357	1	Nut-HHF, Whiz
15	32128-21	1	Nut-HF
16	112-7059-01	1	Weight-Cast
17	322-9	2	Screw-HH
18	3256-23	2	Washer-Flat
19	3296-26	2	Nut-Lock, NI

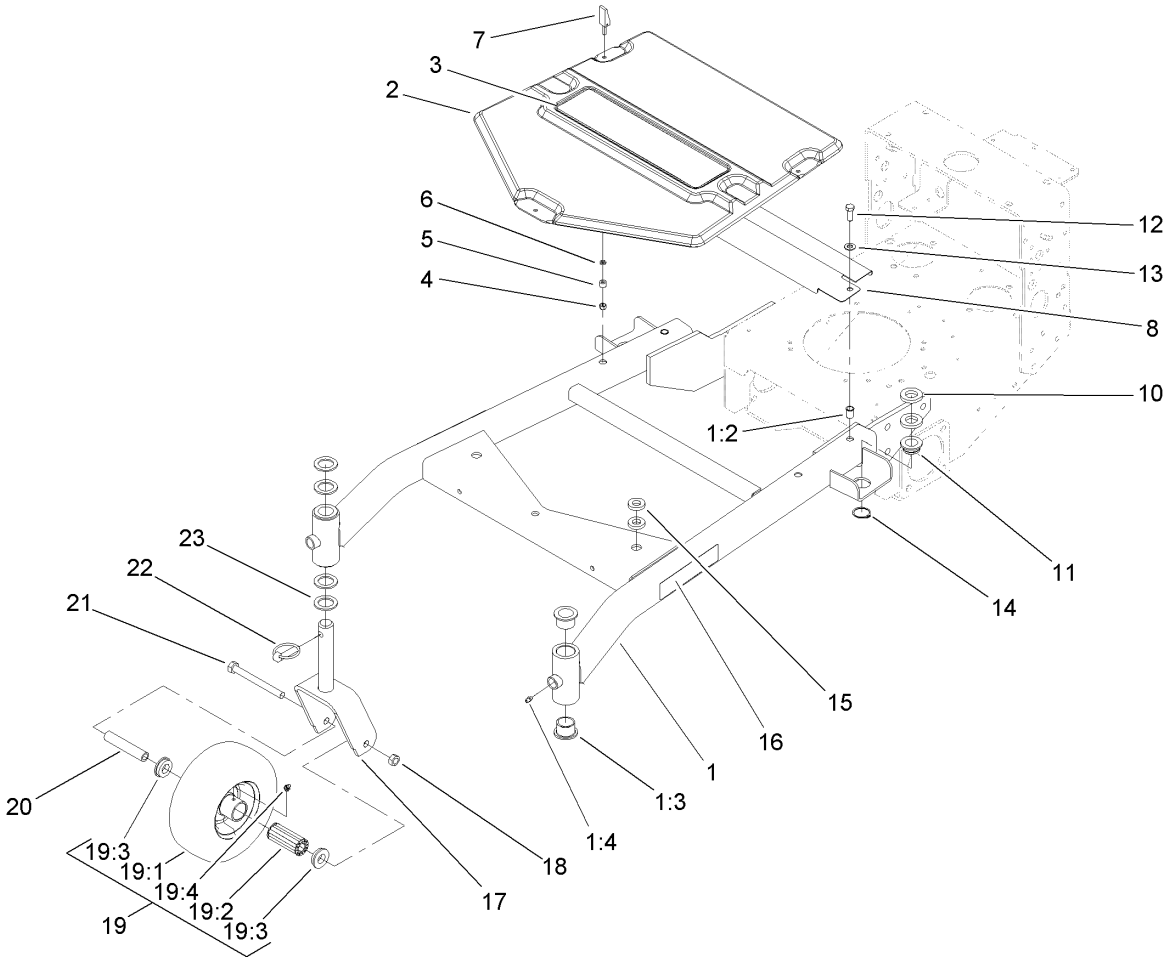

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	110-6960	1	Carrier Frame ASM
1:2	32148-9	2	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	110-6970	1	Cover-Frame, Carrier
3	112-9710	1	Decal
4	1-804254	3	Nut
5	106-6778	3	Bushing-Latch, Swell
6	99-3058	3	Washer
7	106-6777	3	Handle-Latch, Swell
8	110-6971-01	1	Shield-Belt
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	323-6	2	Screw-HH
13	3256-24	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	1-323539	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	110-5024	2	Wheel And Tire ASM
19:1	112-7065	1	Tire
19:2	112-7066	1	Bearing-Roller
19:3	1-513810	2	Bushing


Ref	Part No.	Qty.	Description
19:4	302-61	1	Zerk
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust

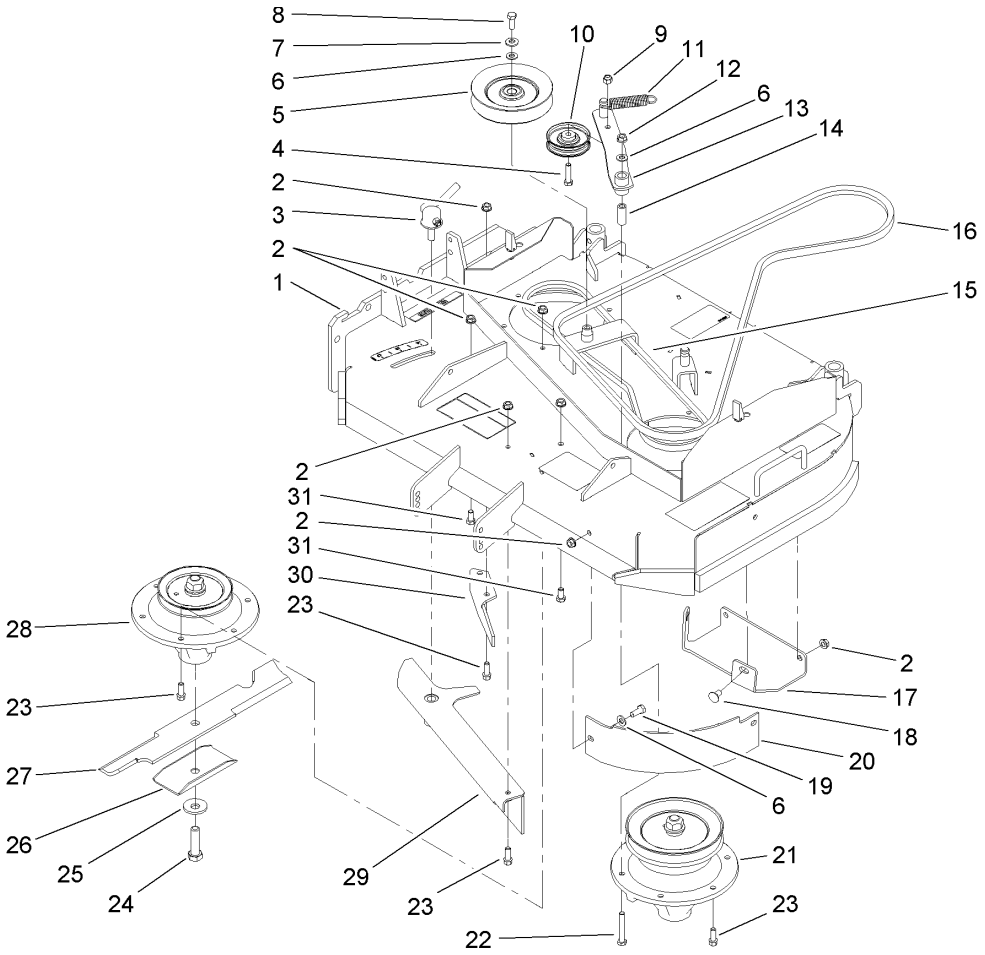

Deck Drive and Baffle Assembly


Ref	Part No.	Qty.	Description
1	112-7080	1	Deck ASM
2	3290-357	22	Nut-HHF, Whiz
3	107-1664	1	Lever ASM
4	323-8	1	Screw-HH
5	1-633166	1	Pulley-Idler
6	3256-24	4	Washer-Flat
7	98-5975	1	Washer-Belleville
8	323-6	1	Screw-HH
9	3296-39	1	Nut-Lock, NI
10	51-3660	1	Pulley-Idler
11	105-2673	1	Spring-Extension
12	32128-21	1	Nut-HF
13	105-0889	1	Idler Arm ASM
14	51-3641	1	Sleeve-Pivot, Idler
15	110-6953	1	Belt-V
16	110-6954	1	Belt-V
17	110-2037-01	1	Plate-Skid
18	3231-1	4	Screw-CARR
19	323-5	2	Screw-HH
20	110-6903-03	1	Baffle-Front, LH
21	110-0730	1	Spindle ASM
22	323-12	1	Screw-HH
23	92-1624	14	Screw
24	51-4060	2	Screw-Blade

Ref	Part No.	Qty.	Description
25	103-0865	2	Washer-Blade Bolt, Heavy
26	108-2727	2	Stiffener-Blade
27	105-7781-03	2	Blade-18 Inch (Hi Flow)
28	110-0728	1	Spindle ASM
29	110-6955-03	1	Adjust Baffle ASM
30	110-0754-01	1	Baffle-Discharge
31	323-4	2	Screw-HH

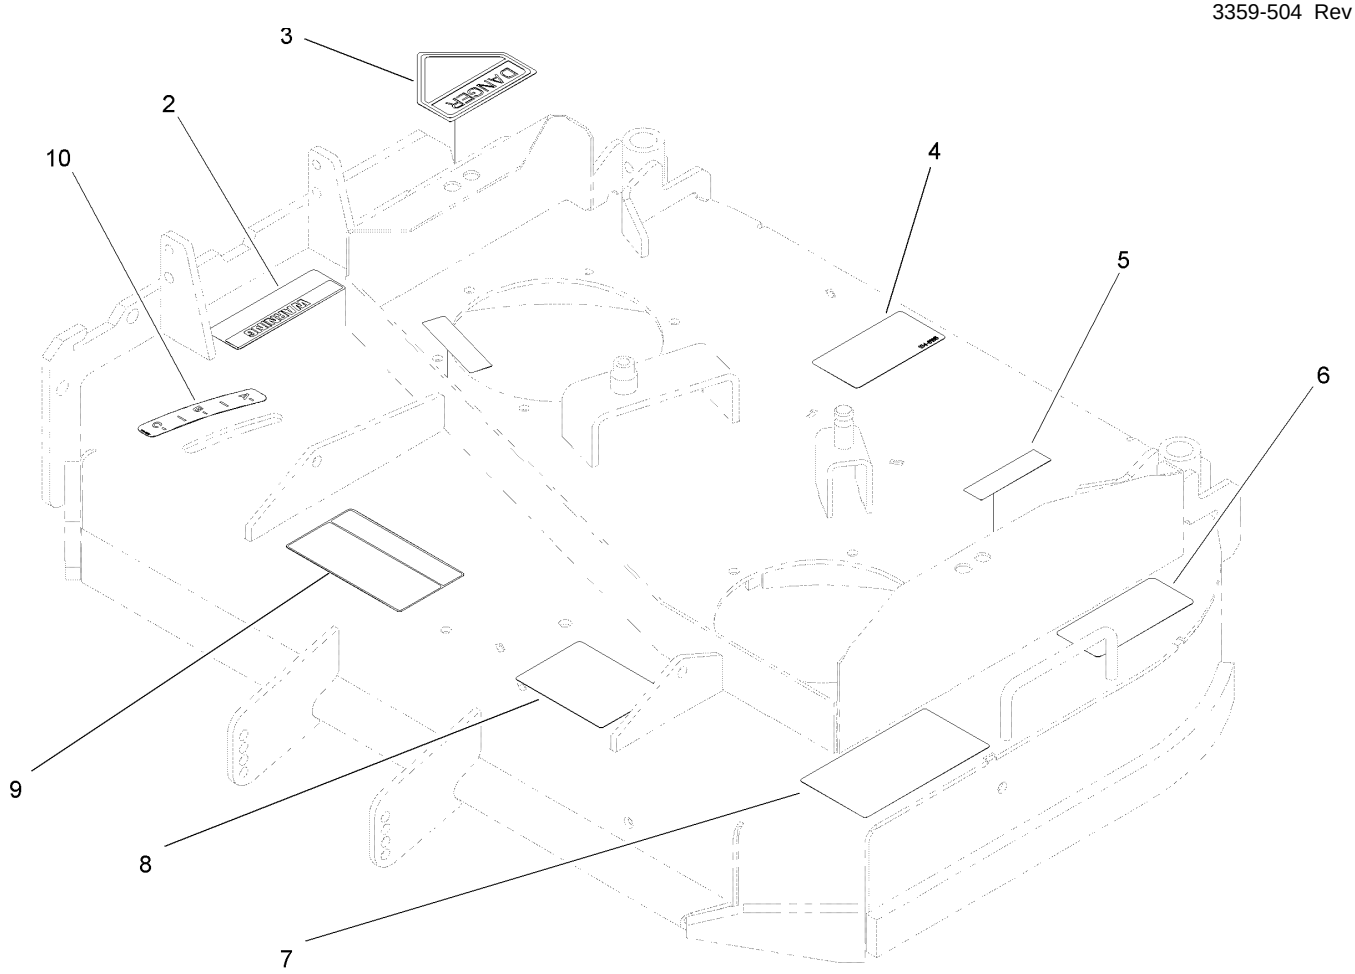


Deck Assembly No. 112-7080

Ref	Part No.	Qty.	Description
2	104-8569	1	Decal-Warning
3	43-8480	1	Decal-Danger
4	104-8185	1	Decal
5	98-5954	2	Decal-Cover, Missing
6	68-8340	1	Decal-Torque
7	66-1340	1	Decal-Danger
8	105-7798	1	Decal-Scalp, Anti
9	110-2068	1	Decal-Adjustment, Baffle
10	110-2067	1	Decal-Setting, Baffle

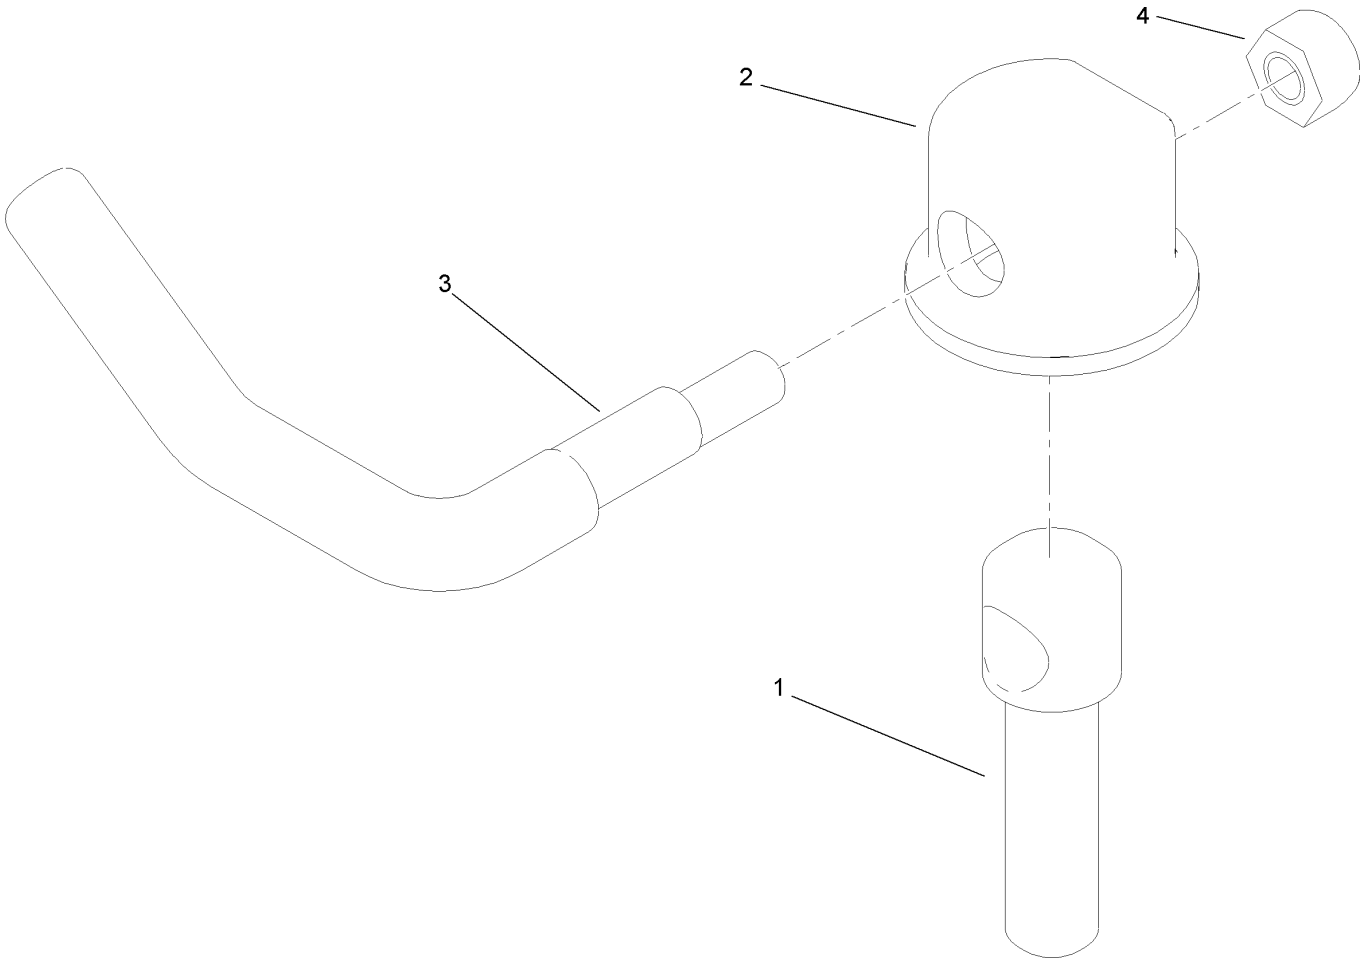


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

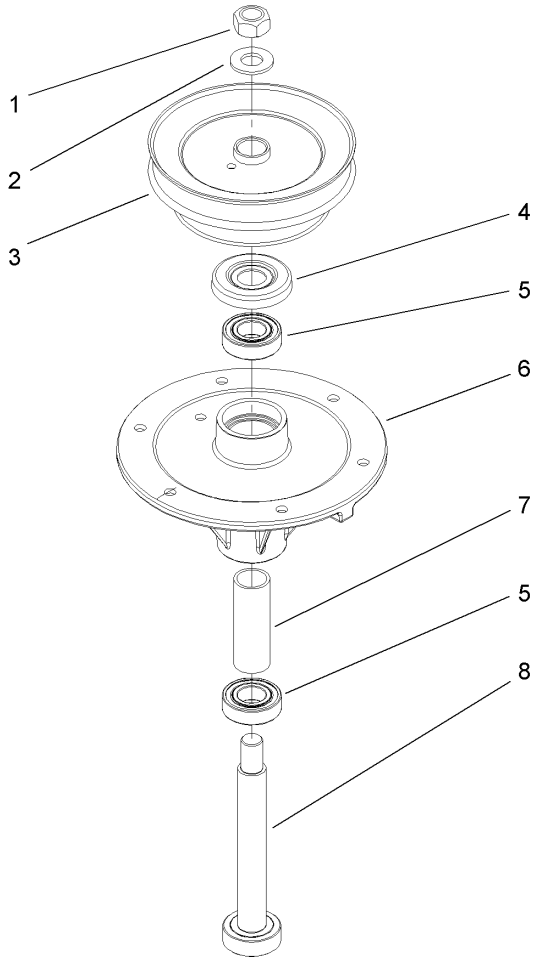


Spindle Assembly No. 110-0730

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	108-6627	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0725	1	Shaft-Spindle

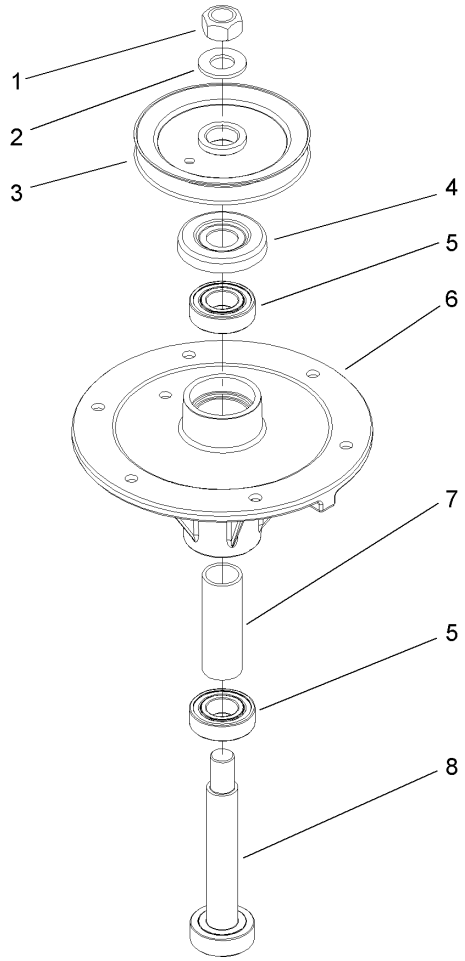


Spindle Assembly No. 110-0728

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0726	1	Shaft-Spindle

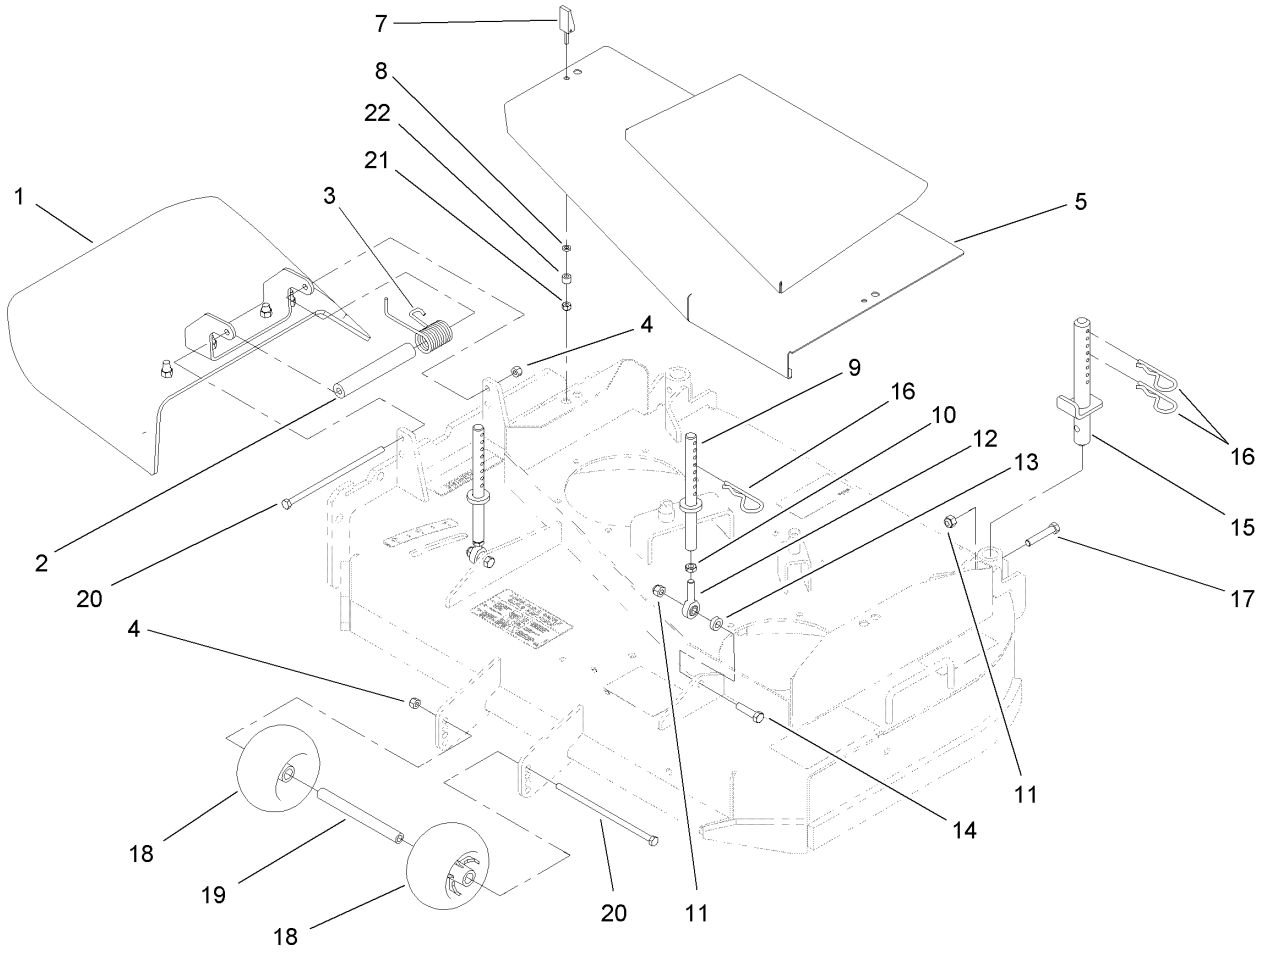


Outer Deck Assembly

Ref	Part No.	Qty.	Description
1	110-0790	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	2	Nut-Lock, NI
5	110-6964-01	1	Cover ASM
7	106-6777	2	Handle-Latch, Swell
8	99-3058	2	Washer
9	108-2674	2	Front Pin ASM
10	3220-3	2	Nut-HJ
11	3296-39	4	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer
14	323-8	2	Screw-HH
15	110-2086	2	Rear Pin ASM
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	1-603299	2	Roller-Scalp, Anti
19	98-5967	1	Spacer-Wheel
20	322-50	2	Screw-HH
21	1-804254	2	Nut
22	106-6778	2	Bushing-Latch, Swell

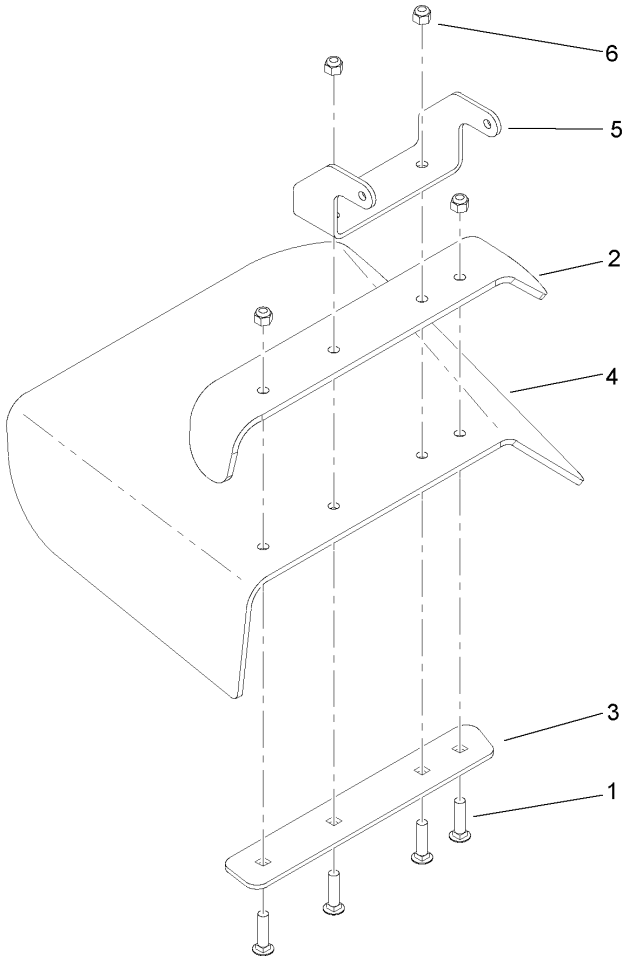


Deflector Assembly No. 110-0790

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI

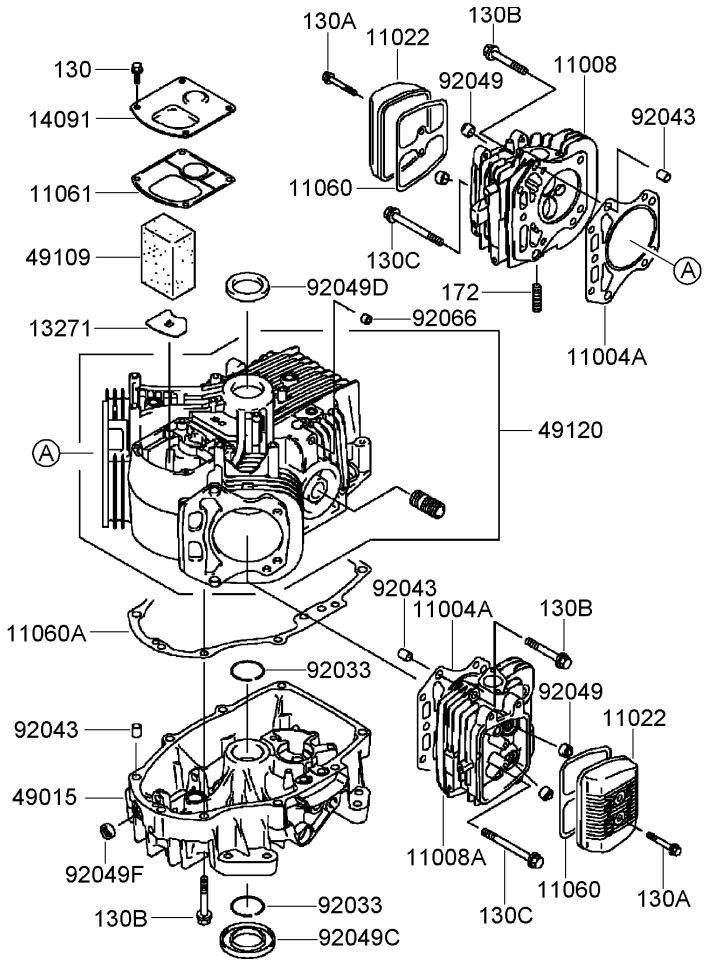


Cylinder and Crankcase Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸11004A	11004-7016	2	Gasket-Head
❸11008	11008-6043	1	Head-Cylinder, No. 1
❸11008A	11008-7020	1	Head-Cylinder, No. 2
❸11022	11022-7003	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Case, Rocker
❸11060A	11060-7008	1	Gasket-Cover, Crankcase
❸11061	11061-7001	1	Gasket-Breather
❸13271	13271-7016	1	Plate
❸14091	14091-7006	1	Cover
❸49015	49015-6253	1	Cover-Crankcase
❸49109	49109-7002	1	Element-Breather
❸49120	49120-7023	1	Crankcase
❸92033	92033-7003	2	Ring-Snap
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❸92049C	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❸92049D	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❸92049F	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❸92066	92066-7002	1	Plug
❸130	130B0612	4	Bolt-Flanged (6X12)
❸130A	130B0640	4	Bolt-Flanged (6X40)
❸130B	130T0850	17	Bolt-Flanged (8X50)
❸130C	130T0875	2	Bolt-Flanged (8X75)
❸172	172G0818	4	Bolt-Stud (8X18)

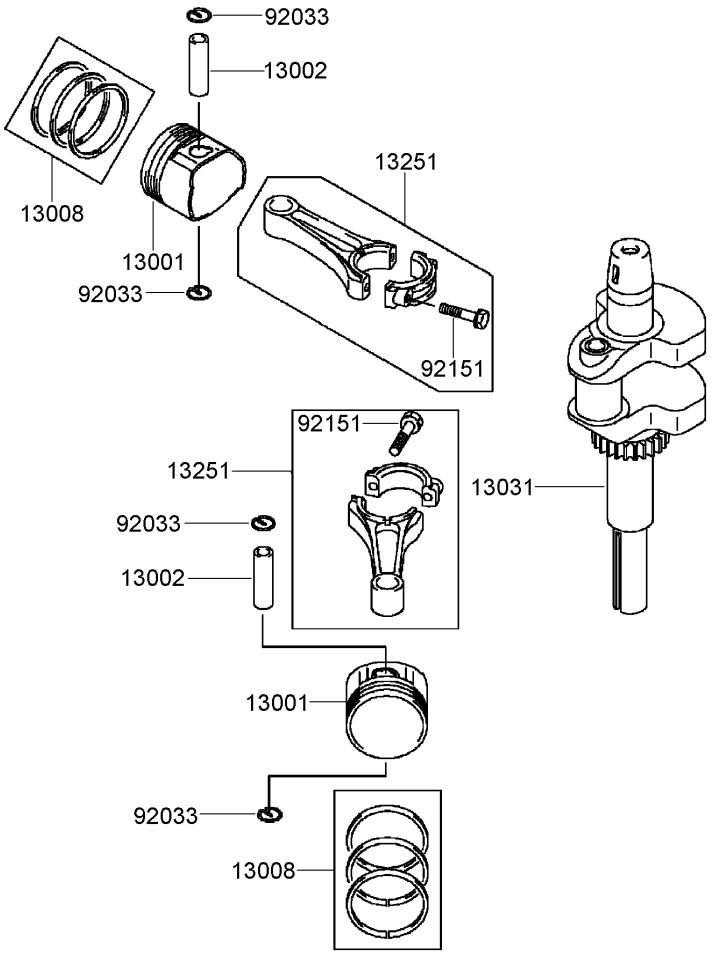


Piston and Crankshaft Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸13001	13001-7010	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-6060	2	Ring Set-Piston
❸13031	13031-7036	1	Crankshaft
❸13251	13251-7010	2	Connecting Rod ASM
❸92033	92033-7005	4	Ring-Snap
❸92151	92151-7017	4	Bolt (6X35)

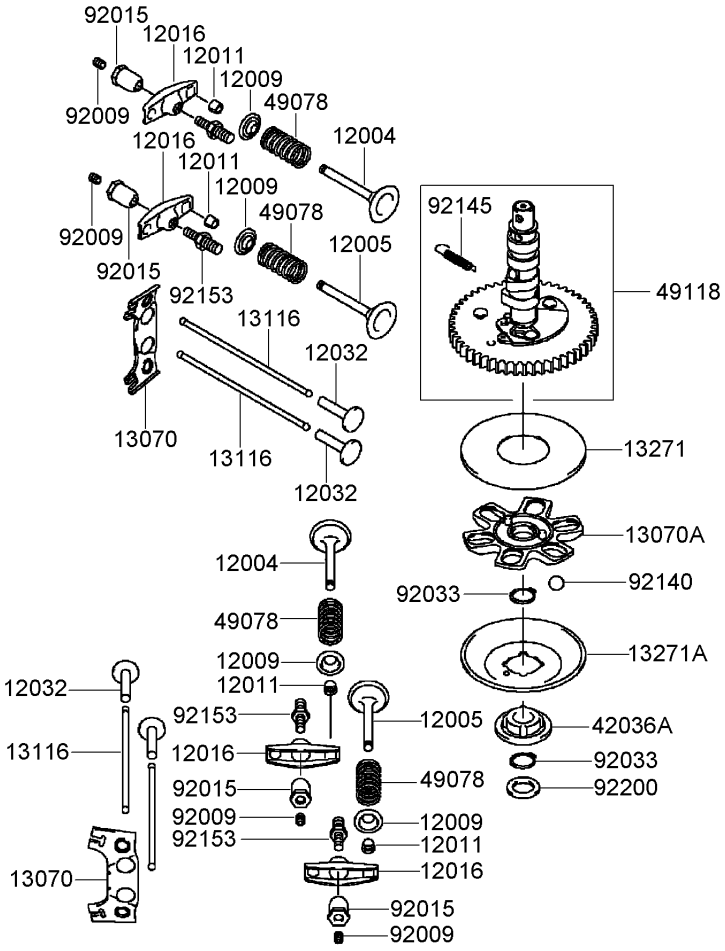


Valve and Camshaft Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸12004	12004-7003	2	Valve-Intake
❸12005	12005-7003	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12011	12011-2056	8	Collet
❸12016	12016-7001	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036A	42036-7010	1	Sleeve
❸49078	49078-7001	4	Spring-Valve, Engine
❸49118	49118-7004	1	Camshaft
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7002	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer

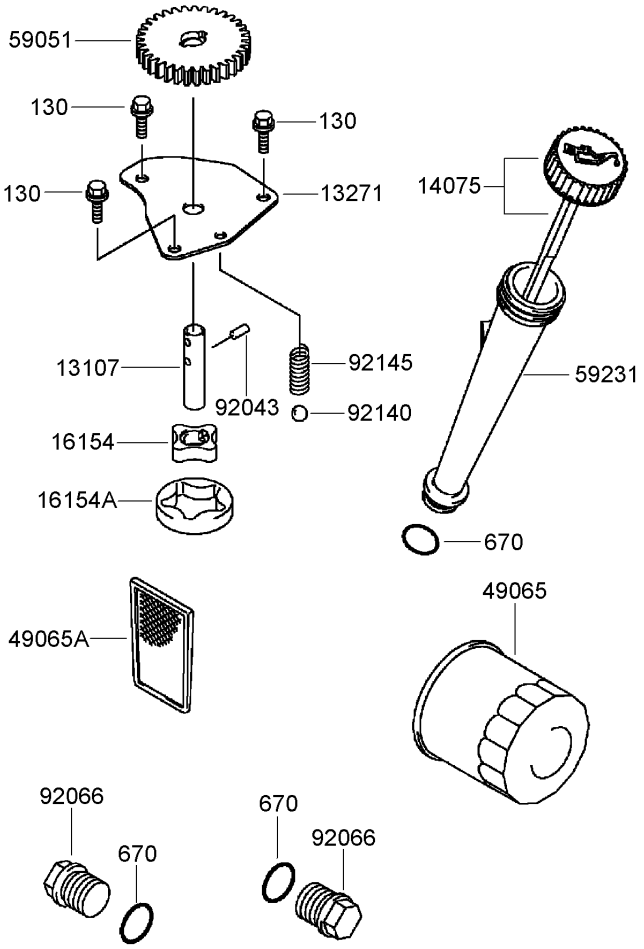


Lubrication Equipment Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump (In)
❸16154A	16154-2054	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7005	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring
❸130	130B0612	3	Bolt-Flanged (6X12)
❸670	670D2016	3	O-Ring (16Mm)

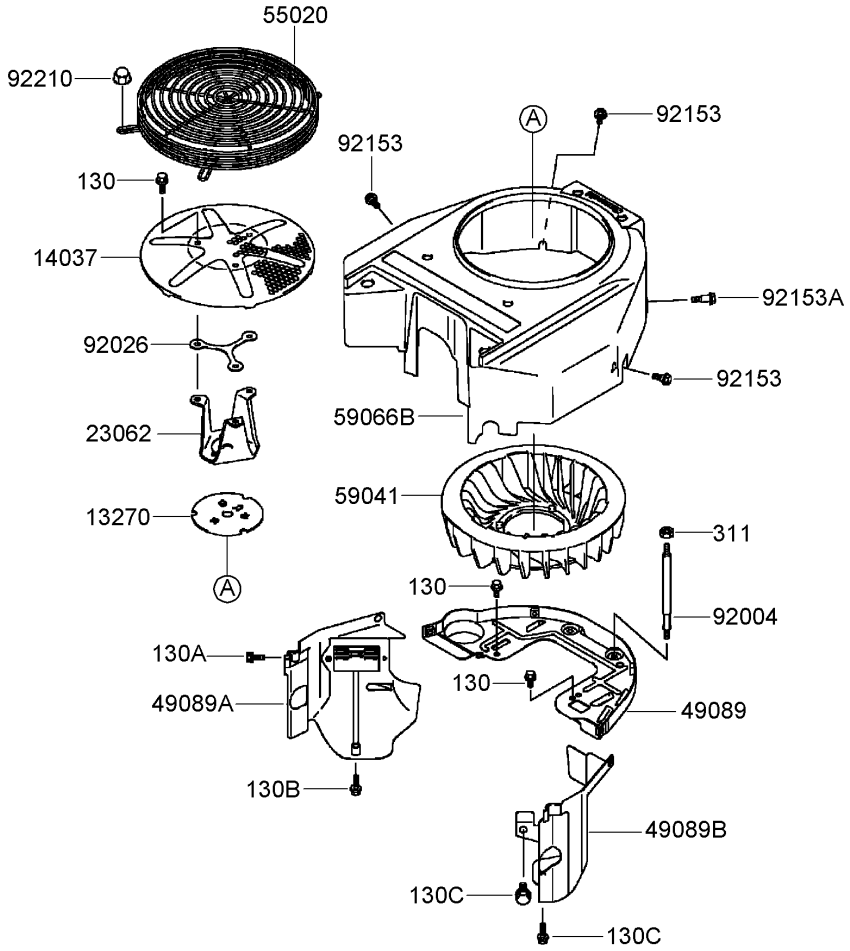


Cooling Equipment Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸13270	13270-7007	1	Plate
❸14037	14037-7020-9H	1	Screen
❸23062	23062-7010	1	Bracket
❸49089	49089-7032	1	Shroud-Engine
❸49089A	49089-7042	1	Shroud-Engine
❸49089B	49089-7043	1	Shroud-Engine
❸55020	55020-7004	1	Guard
❸59041	59041-7010	1	Fan
❸59066B	59066-7037	1	Housing-Fan
❸92004	92004-7006	2	Stud
❸92026	92026-7007	1	Spacer
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt
❸92210	92210-0003	4	Nut
❸130	130B0612	5	Bolt-Flanged (6X12)
❸130A	130B0616	2	Bolt-Flanged (6X16)
❸130B	130B0625	2	Bolt-Flanged (6X25)
❸130C	130B0816	1	Bolt-Flanged (8X16)
❸311	311B0600	2	Nut-Hex (6Mm)

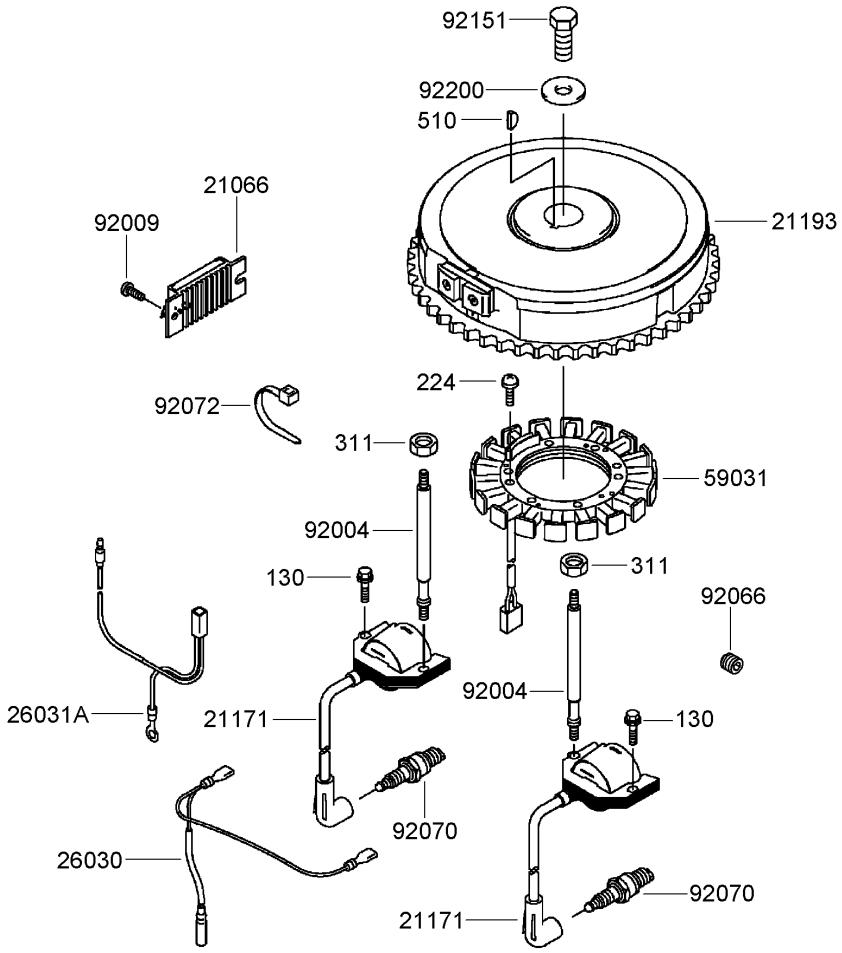


Electric Equipment Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸21066	21066-7011	1	Regulator-Voltage
❸21171	21171-7013	2	Ignition Coil ASM
❸21193	21193-7007	1	Flywheel ASM
❸26030	26030-7001	1	Harness
❸26031A	26031-7012	1	Harness
❸59031	59031-7009	1	Coil-Charging
❸92004	92004-7009	2	Stud
❸92009	92009-2308	1	Screw
❸92066	92066-7002	1	Plug
❸92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
❸92072	92072-7003	2	Band
❸92151	92151-2097	1	Bolt (12X30)
❸92200	92200-7002	1	Washer
❸130	130B0620	2	Bolt-Flanged (6X20)
❸224	224B0520	4	Screw-Pan (5X20)
❸311	311B0600	2	Nut-Hex (6Mm)
❸510	510A5100	1	Key-Woodruff

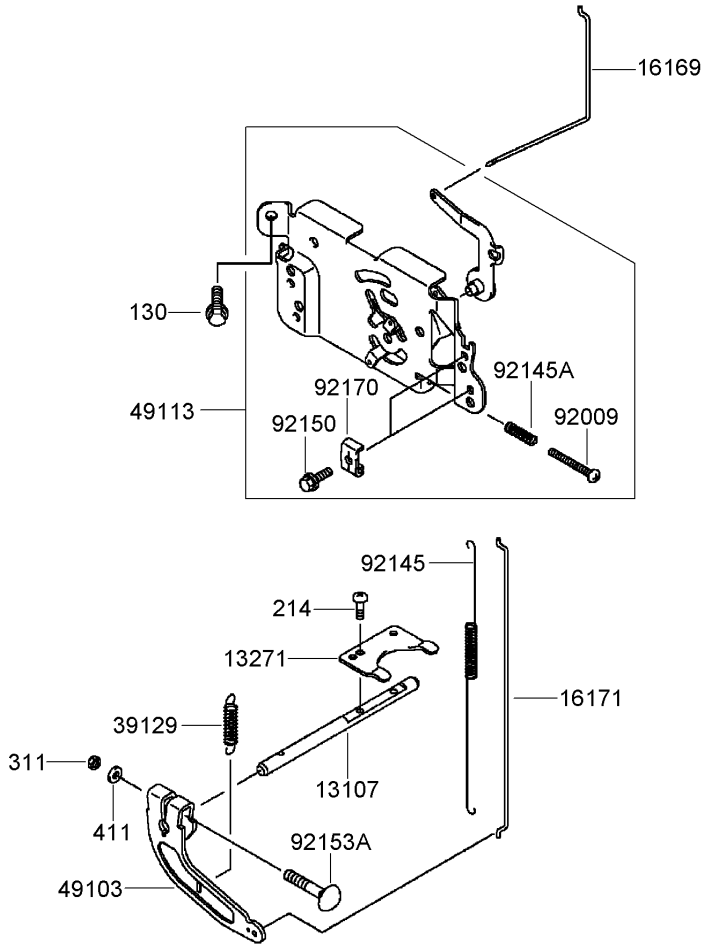

Control Equipment Assembly
Kawasaki FH541V-BS24


Ref	Part No.	Qty.	Description
❸13107	13107-7010	1	Shaft
❸13271	13271-7018	1	Plate
❸16169	16169-7010	1	Link-Choke
❸16171	16171-7001	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113	49113-7024	1	Panel-Control
❸92009	92009-7007	1	Screw (4X35)
❸92145	92145-7003	1	Spring
❸92145A	92145-7005	1	Spring
❸92150	92150-2182	2	Bolt (5X18)
❸92153A	92153-7033	1	Bolt (6X35)
❸92170	92170-7001	2	Clamp
❸130	130B0612	2	Bolt-Flanged (6X12)
❸214	214B0408	2	Screw-Pan (4X8)
❸311	311B0600	1	Nut-Hex (6Mm)
❸411	411B0600	1	Washer-Plain (6Mm)

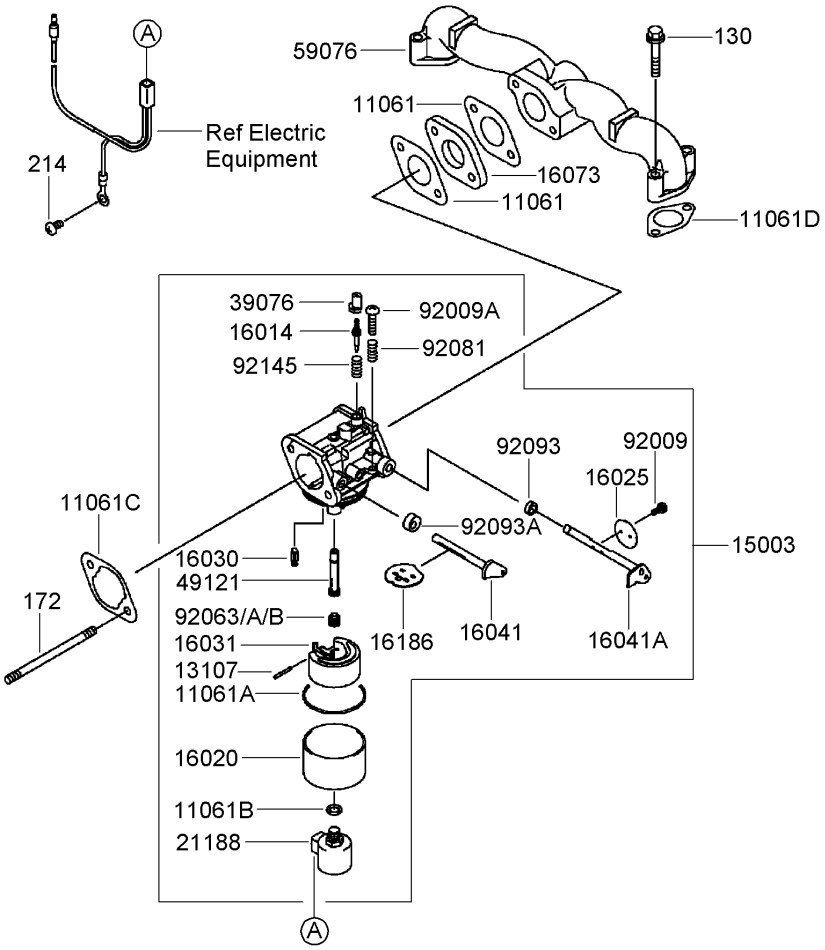

Carburetor Assembly
Kawasaki FH541V-BS24


Ref	Part No.	Qty.	Description
❸11061	11061-7004	2	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Cleaner, Air
❸11061D	11061-7019	2	Gasket
❸13107	13107-7018	1	Shaft
❸15003	15003-7106	1	Carburetor ASM
❸16014	16014-7007	1	Screw-Air, Pilot
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Choke, Carburetor
❸16041A	16041-7018	1	Shaft-Throttle, Carburetor
❸16073	16073-7007	1	Insulator
❸16186	16186-7004	1	Choke Valve ASM
❸21188	21188-7002	1	Solenoid
❸39076	39076-7001	1	Limiter
❸49121	49121-7010	1	Nozzle-Main
❸59076	59076-7001	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92063	92063-7062	1	Jet-Main No. 110
❸92063A	92063-7065	1	Jet-Main, No. 112

Ref	Part No.	Qty.	Description
❸92063B	92063-7066	1	Jet-Main, No. 108
❸92081	92081-2234	1	Spring
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸130	130B0635	4	Bolt-Flanged (6X35)
❸172	172G0690	2	Bolt-Stud (6X90)
❸214	214B0510	1	Screw-Pan (5X10)

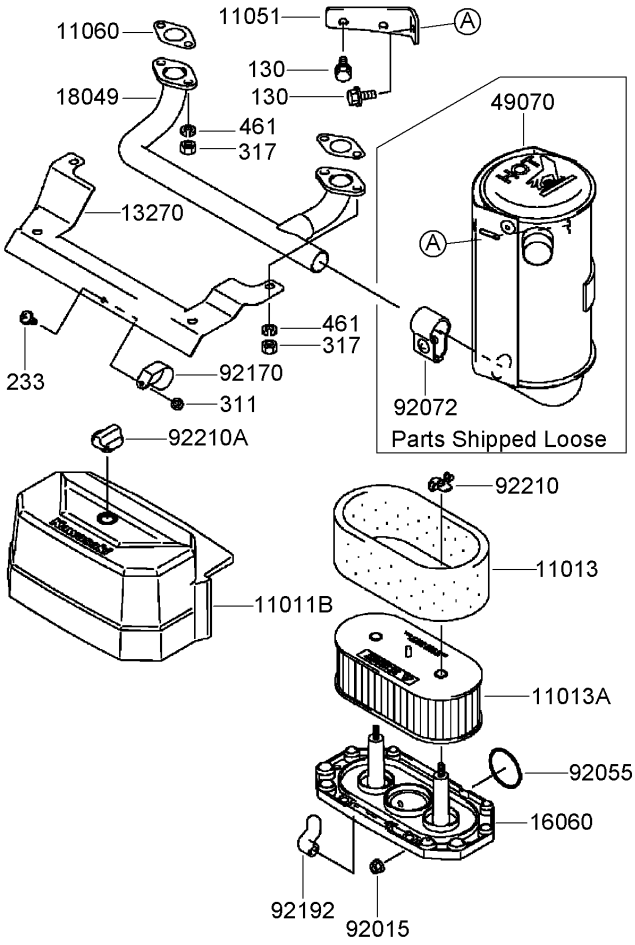


Air Filter and Muffler Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸11011B	11011-7046	1	Case-Air Filter
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11051	11051-7005-9H	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13270	13270-7008	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18049	18049-7001	1	Pipe-Exhaust
❸49070	49070-7015	1	Muffler
❸92015	92015-1193	2	Nut
❸92055	92055-7015	1	O-Ring
❸92072	92072-7008	1	Band
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92210	92210-7004	2	Nut
❸92210A	92210-7019	1	Nut
❸130	130B0816	2	Bolt-Flanged (8X16)
❸233	233B0416	1	Screw (4X16)
❸311	311B0400	1	Nut-Hex (4Mm)
❸317	317R0800	4	Nut-Hex, Small (8Mm)
❸461	461F0800	4	Washer-Spring (8Mm)

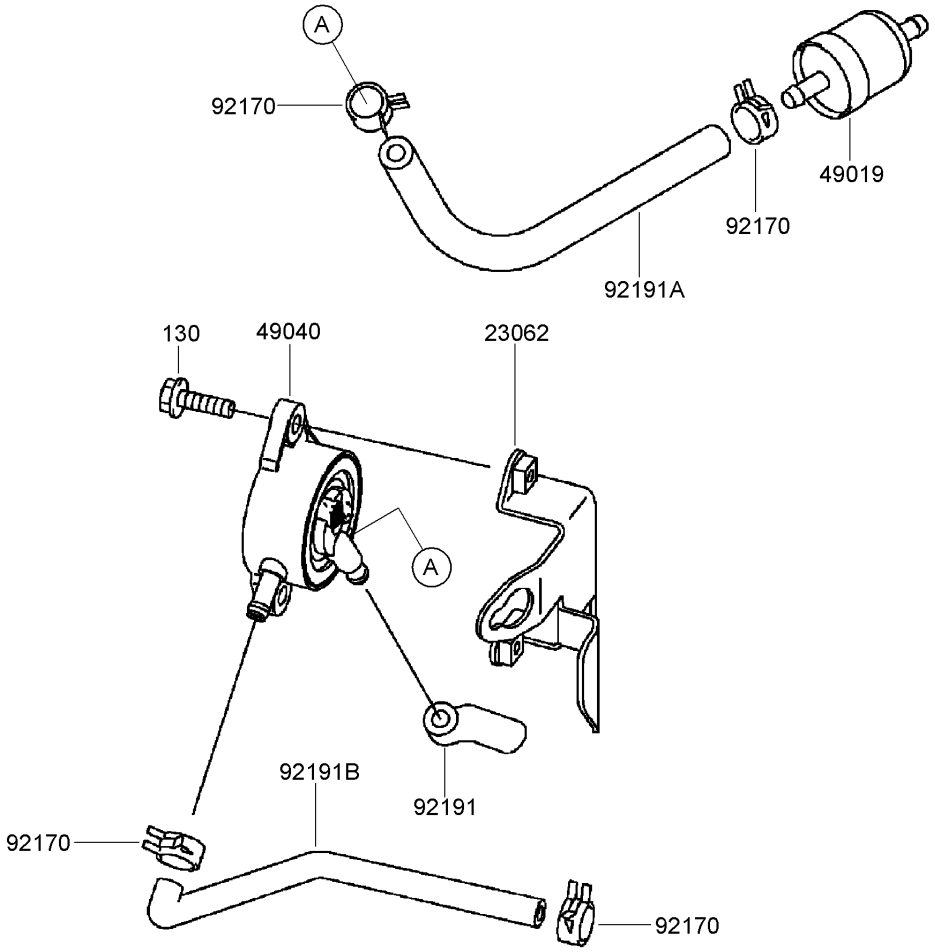

Fuel Tank and Valve Assembly
Kawasaki FH541V-BS24


Ref	Part No.	Qty.	Description
❸23062	23062-7004-9H	1	Bracket
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92191A	92191-7003	1	Tube (6.35X12.7X160)
❸92191B	92191-7004	1	Tube
❸130	130B0620	2	Bolt-Flanged (6X20)

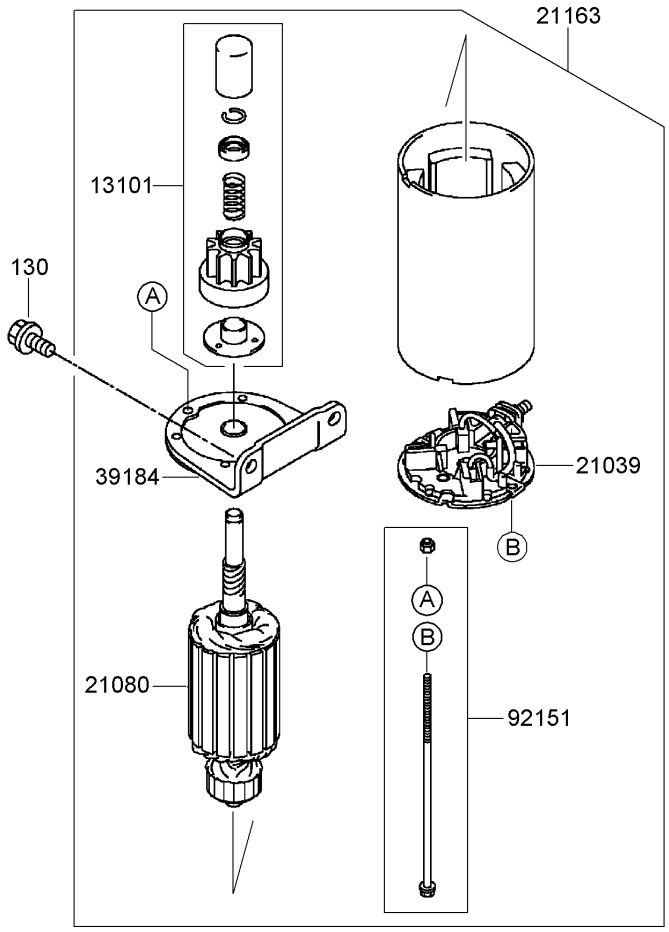

Starter Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸13101	13101-7003	1	Gear ASM
❸21039	21039-7004	1	Brush
❸21080	21080-7001	1	Armature
❸21163	21163-7010	1	Starter-Electric
❸39184	39184-7004	1	Bracket ASM
❸92151	92151-7013	1	Bolt
❸130	130B0816	2	Bolt-Flanged (8X16)

56033A

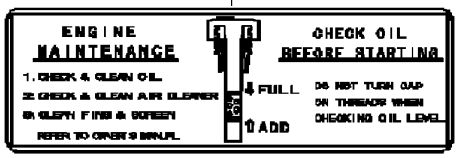

56070



56080



Label Assembly
Kawasaki FH541V-BS24

Ref	Part No.	Qty.	Description
❸56033A	56033-7003	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56080	56080-7023	1	Label-Brand

Attachments and Accessories

For 30494 - Commercial Walk-Behind Mower, Floating Deck T-Bar Hydro with 36in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Recycler, 18 Inch	105-7779-03
Blade-Med Flow, 18 Inch	105-7794-03
Blade-Low Flow, 18 Inch	105-7795-03
Blade-Atomic, 18 Inch	105-7796-03
Blade-Hi-Flow, 18 Inch (6 Pack)	108-1117
Blade-Atomic, 18 Inch (6 Pack)	108-1118
Blade-Lo-Flow, 18 Inch (6 Pack)	110-0406
Blade-Recycler, 18 Inch (6 Pack)	110-0408
Blade-Med-Flow, 18 Inch (6 Pack)	110-0409
36 Inch Bagger Enhancement Kit	110-2026
36 Inch Recycler Kit	110-2080
Weight-Cast	112-7059-01
Weight Kit	112-9971
Soft Bag (3 Bushel)	30104
Tru Trak Sulky	30110


TORO®