Form Number 3359-688 Rev A

H132 Rear-Engine Riding Mower

Model No. 70186 - 270805636 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Body and Decal Assembly	3
Seat and Rear Bag Assembly	4
Front Axle and Steering Assembly	5
Deck and Spindle Assembly	6
Deck Suspension Assembly	8
Hydro Transaxle Assembly	9
Engine and Fuel Tank Assembly	10
Electrical Assembly	11
Cylinder Assembly Briggs and Stratton 31G777-0121-E1	12
Cylinder Head Assembly Briggs and Stratton 31G777-0121-E1	13
Crankshaft Assembly Briggs and Stratton 31G777-0121-E1	14
Oil Filter, Tube and Pump Assembly Briggs and Stratton 31G777-0121-E1	15
Crankcase Assembly Briggs and Stratton 31G777-0121-E1	16
Carburetor Assembly Briggs and Stratton 31G777-0121-E1	17
Governor Assembly Briggs and Stratton 31G777-0121-E1	18
Blower Housing Assembly Briggs and Stratton 31G777-0121-E1	19
Starter Assembly Briggs and Stratton 31G777-0121-E1	20
Gasket Assembly Briggs and Stratton 31G777-0121-E1	21
Carburetor Overhaul Kit Assembly Briggs and Stratton 31G777-0121-E1	22


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Included in Engine Gasket Set-Ref. 358.
❹ Included in Valve Gasket Set-Ref. 1095.
❺ Included in Carburetor Overhaul Kit-Ref. 121.
❻ Included in Carburetor Gasket Set-Ref. 977.
❼ Obtain from your local Briggs & Stratton dealer

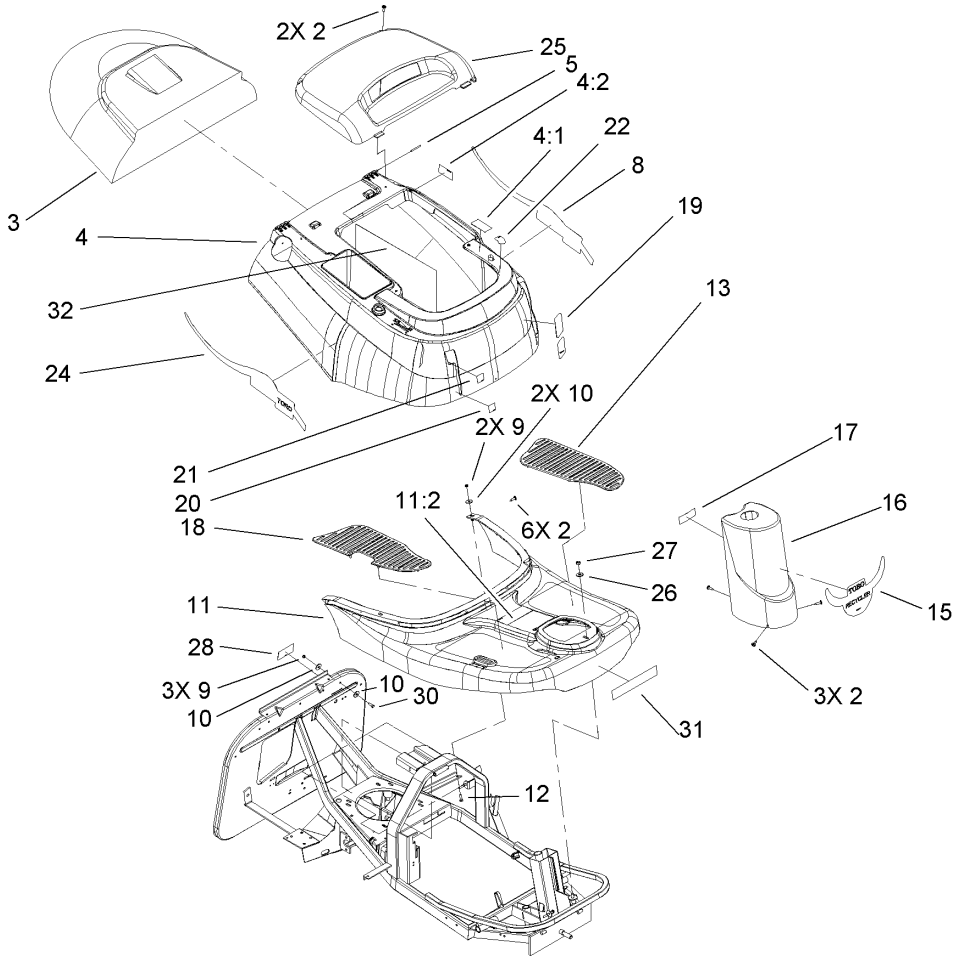

Body and Decal Assembly


Ref	Part No.	Qty.	Description
2	106-2851	13	Screw-HH, TAP
3	106-1810	1	Cover-Grass Bag
4	106-2885	1	Shroud And Decal ASM
❷4:1		1	Decal-Danger
❷4:2		1	Decal-Warning, Hot
5	106-2870	2	Pin-Dowel
8	107-8980	1	Decal-Intl Rer
9	49-7810	5	Nut-Lock
10	106-2853	4	Washer-Flat
11	106-2901	2	Foot Rest And Decal ASM
❷11:2		1	Decal-Caution
12	33113-020	2	Screw-HH
13	106-2973	1	Floormat-LH
15	106-6517	1	Decal-Front
16	106-2906	1	Steering-Turret
❷17		1	Decal-Run Lights
18	106-2972	1	Floormat-RH
❷19		1	Decal-HOC
❷20		1	Decal-PTO, Disengage
❷21		1	Decal-PTO, Engage
❷22		1	Decal-Switch
24	107-8981	1	Decal-Intl Rer
25	106-2860	1	Cover-Engine
26	106-2854	1	Washer-Flat

Ref	Part No.	Qty.	Description
27	46-0330	1	Nut-Lock
❷28		1	Decal-Disengagement
30	33113-016	2	Screw-HH
31	106-6525	1	Decal
32	107-2228	1	Insulation
❶99	106-2887	1	Decal Kit

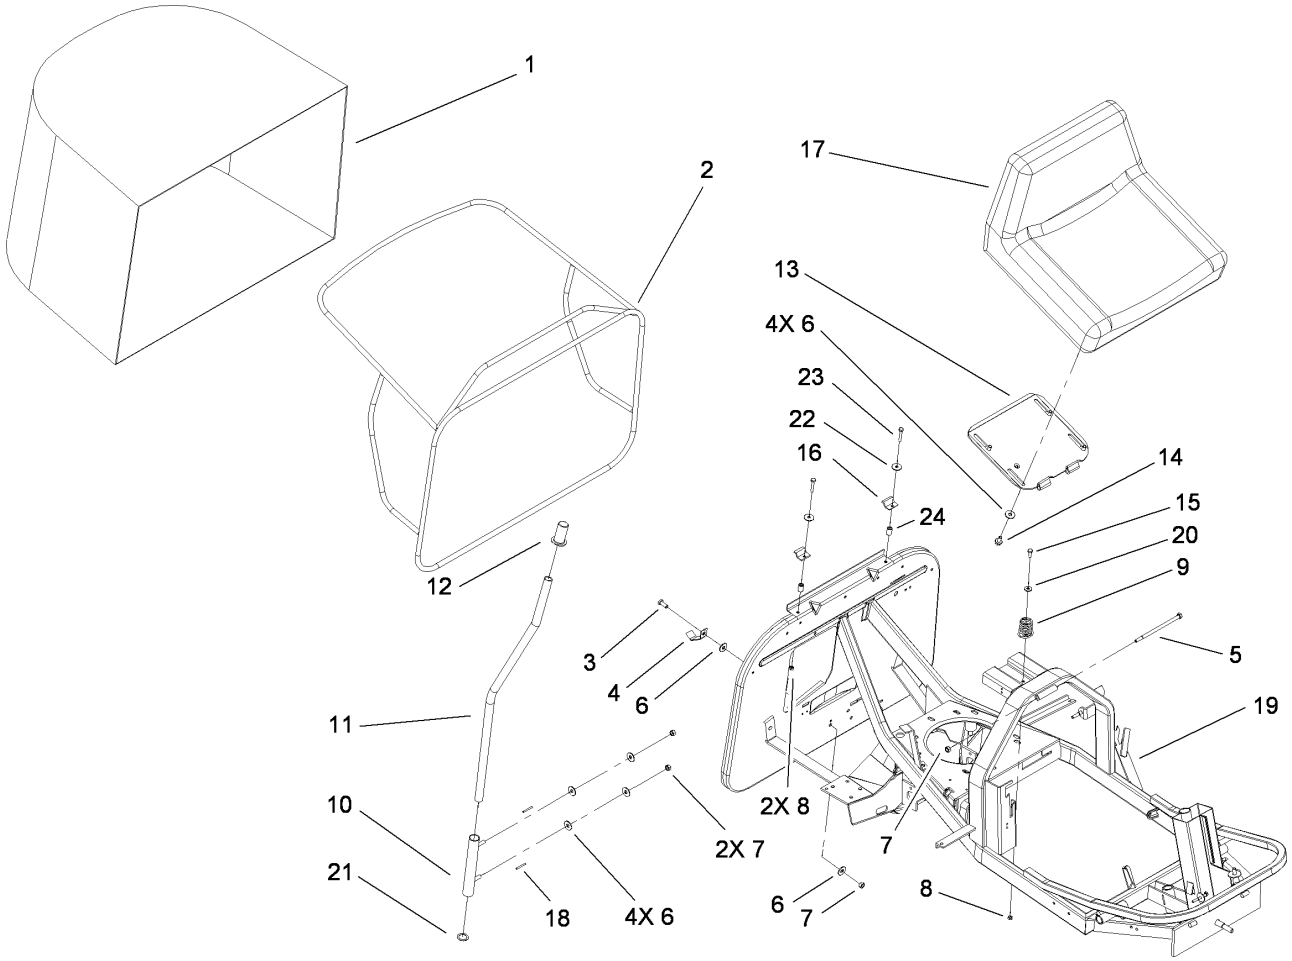

Seat and Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	106-2867	1	Bag-Grass
2	114-3210	1	Frame-Collector
3	33114-020	1	Screw-HH
4	106-2969	1	Hook-Bag
5	106-1844	1	Screw-HH
6	106-2854	10	Washer-Flat
7	46-0330	4	Nut-Lock
8	49-7810	3	Nut-Lock
9	106-2945	1	Spring-Compression
10	106-2927	1	Support
11	106-2928	1	Lever
12	106-2903	1	Knob
13	106-2944	1	Plate-Seat
14	33104-016	4	Screw-HHF
15	33113-016	1	Screw-HH
16	106-2929	2	Clip
17	106-2857	1	Seat
18	106-2871	2	Pin-Spring
19	114-3187	1	Frame-Complete
20	106-2865	1	Washer-Flat
21	106-1807	1	Spacer
22	106-2853	2	Washer-Flat
23	33113-035	2	Screw-HH
24	114-3212	2	Spacer-Collector

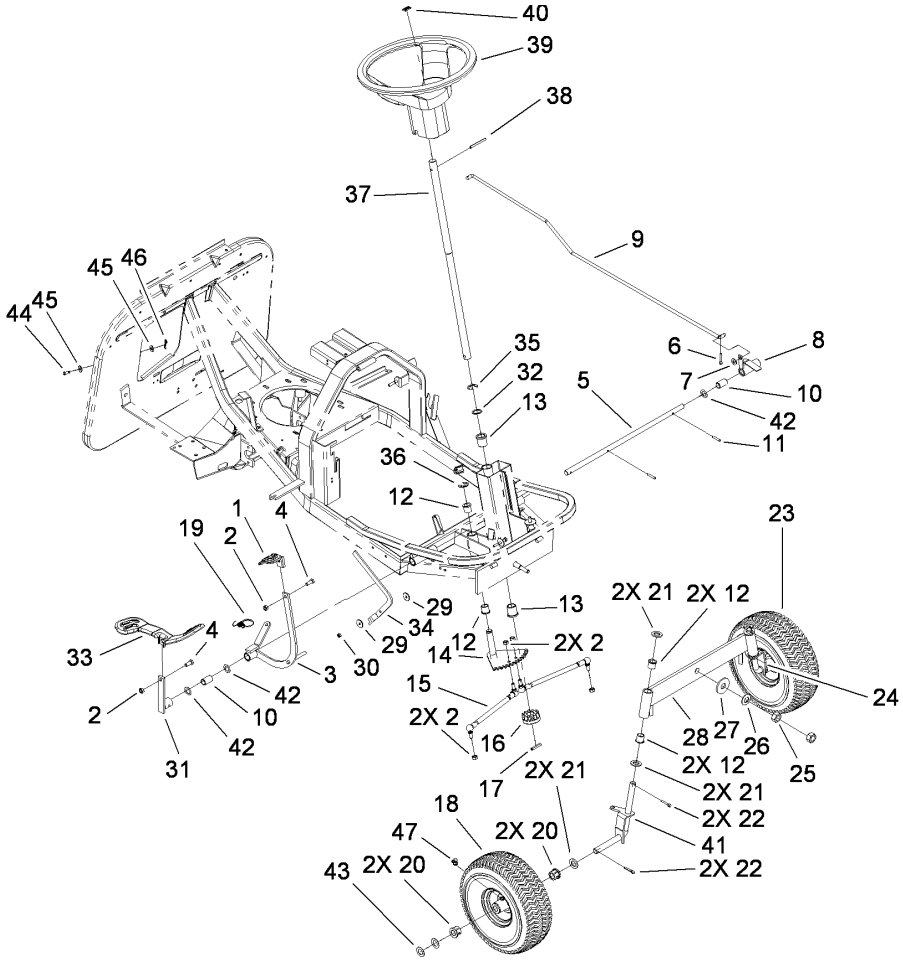

Front Axle and Steering Assembly

Ref	Part No.	Qty.	Description
1	106-2957	1	Pedal-Brake
2	46-0330	6	Nut-Lock
3	114-3208	1	Lever-Brake
4	33114-020	2	Screw-HH
5	106-2959	1	Shaft
6	3272-21	2	Pin-Cotter
7	33094-00	2	Washer-Plain
8	114-3193	1	Bushing-Linkage
9	114-3194	1	Rod-Linkage
10	106-2962	2	Bushing
11	106-2874	3	Pin-Dowel
12	106-1811	6	Bushing
13	106-2873	2	Bushing
14	106-2868	1	Rack-Steering
15	106-2933	2	Rod-Tie
16	106-2878	1	Gear-Steering
17	106-1845	1	Pin-Spiral
18	106-2951	2	Wheel
19	107-2236	1	Spring-Return, Brake
20	106-6508	4	Bushing
21	33098-00	6	Washer-Flat
22	3272-21	4	Pin-Cotter
23	106-2907	2	Tire
24	106-2953	1	Axle-Wheel, LH


Ref	Part No.	Qty.	Description
25	33018-00	2	Nut-Hex
26	106-2926	1	Washer-Bell
27	106-2925	1	Washer-Flat
28	106-2864	1	Axle-Front
29	106-2853	2	Washer-Flat
30	49-7810	1	Nut-Lock
31	106-2923	1	Lever-Foot Pedal
32	106-1807	1	Spacer
33	106-2964	1	Pedal
34	106-2961	1	Lever
35	106-2909	1	Ring-Retaining, EXT
36	106-2908	1	Ring-Retaining, EXT
37	106-2872	1	Shaft-Steering
38	106-1846	1	Pin-Roll
39	106-2883	1	Wheel-Steering
40	98-1459	1	Decal
41	106-2952	1	Axle-Wheel, RH
42	106-1835	3	Spacer
43	106-6544	4	Washer
44	106-6543	1	Pin-Grooved
45	106-2865	2	Washer-Flat
46	106-2879	1	Pin-Hair
47	106-6546	2	Zerk-Grease, 90 DEG

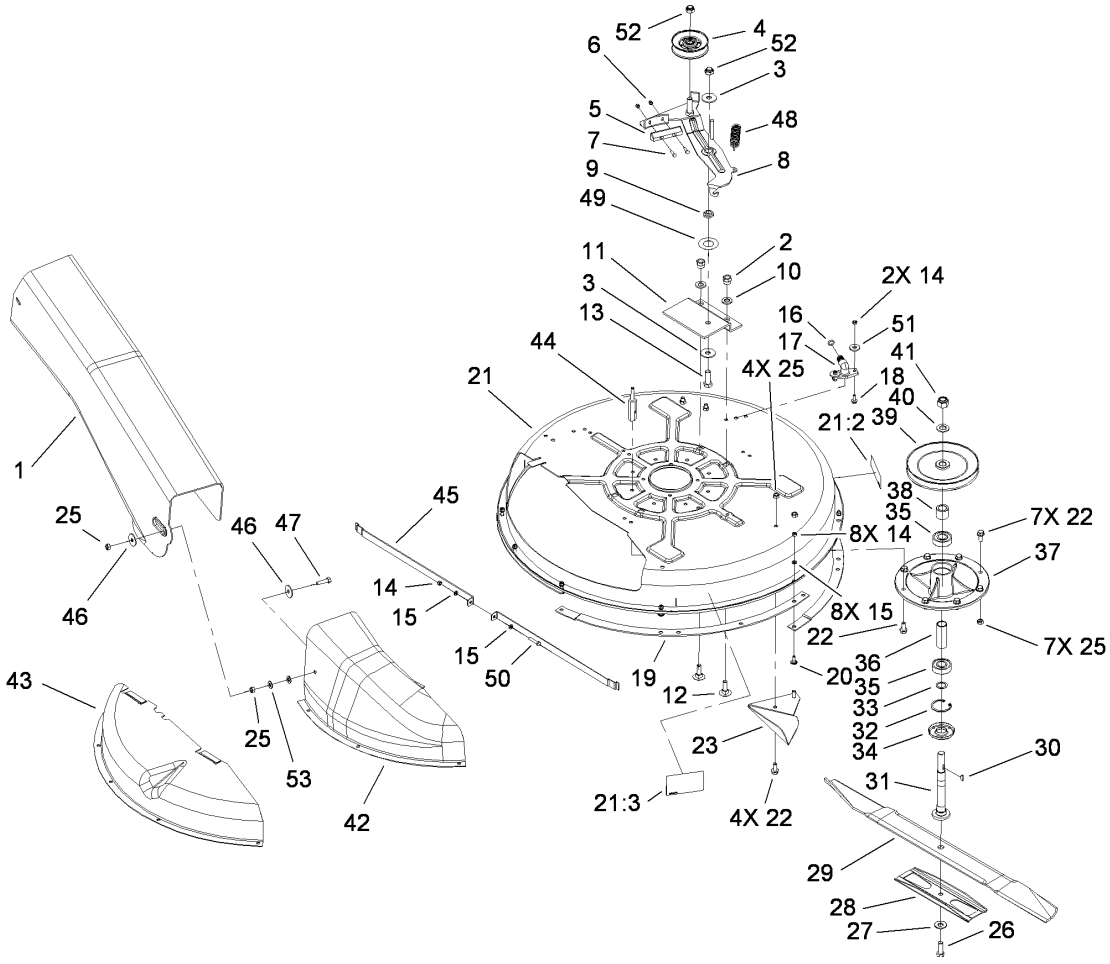

Deck and Spindle Assembly


Ref	Part No.	Qty.	Description
1	106-2970	1	Tube-Discharge
2	46-0090	2	Nut-Lock
3	106-2922	2	Washer-Flat
4	106-1813	1	Pulley-Idler
5	106-1814	1	Brake-Rubber
6	46-0410	2	Nut-Lock
7	60-6910	2	Screw
8	114-3209	1	Brake-Assembly
9	106-2892	1	Bushing
10	33096-00	2	Washer-Flat
11	106-2884	1	Bracket-Deck
12	33126-035	2	Screw-CARR
13	33116-035	1	Screw-HH
14	49-7810	11	Nut-Lock
15	33093-00	10	Washer-Flat
16	106-1847	1	O-Ring
17	95-2747	1	Fitting-Washout
18	33103-016	2	Screw-HHF
19	80-4490	4	Ring-Deck
20	106-6510	8	Screw-Sh
21	106-6545	1	Deck ASM
❷21:2		1	Decal-Caution
❷21:3		1	Decal-Discharge Cover
22	33104-020	12	Screw-HHF

Ref	Part No.	Qty.	Description
23	80-2630	2	Kicker
25	46-0330	13	Nut-Lock
26	3212-5	1	Screw-HH
27	106-2858	1	Washer-Bell
28	80-4570	1	Stiffener
29	106-6547	1	Blade-Recycler
30	106-1805	1	Key
31	106-2902	1	Shaft-Spindle
32	106-2910	1	Ring-Snap
33	106-1807	1	Spacer
34	80-4370	1	Shield-Bearing
35	251-297	2	Bearing-Ball
36	106-2888	1	Spacer
37	56-7030	1	Spindle
38	106-1842	1	Spacer
39	106-1812	1	Pulley
40	33098-00	1	Washer-Flat
41	106-2914	1	Nut-Hex
42	106-2898	1	Tunnel-Discharge
43	106-2899	1	Cover-Recycler
44	106-2897	1	Guide-Belt
45	106-6542	2	Strap-Deck
46	106-2855	2	Washer-Flat
47	33114-030	1	Screw-HH

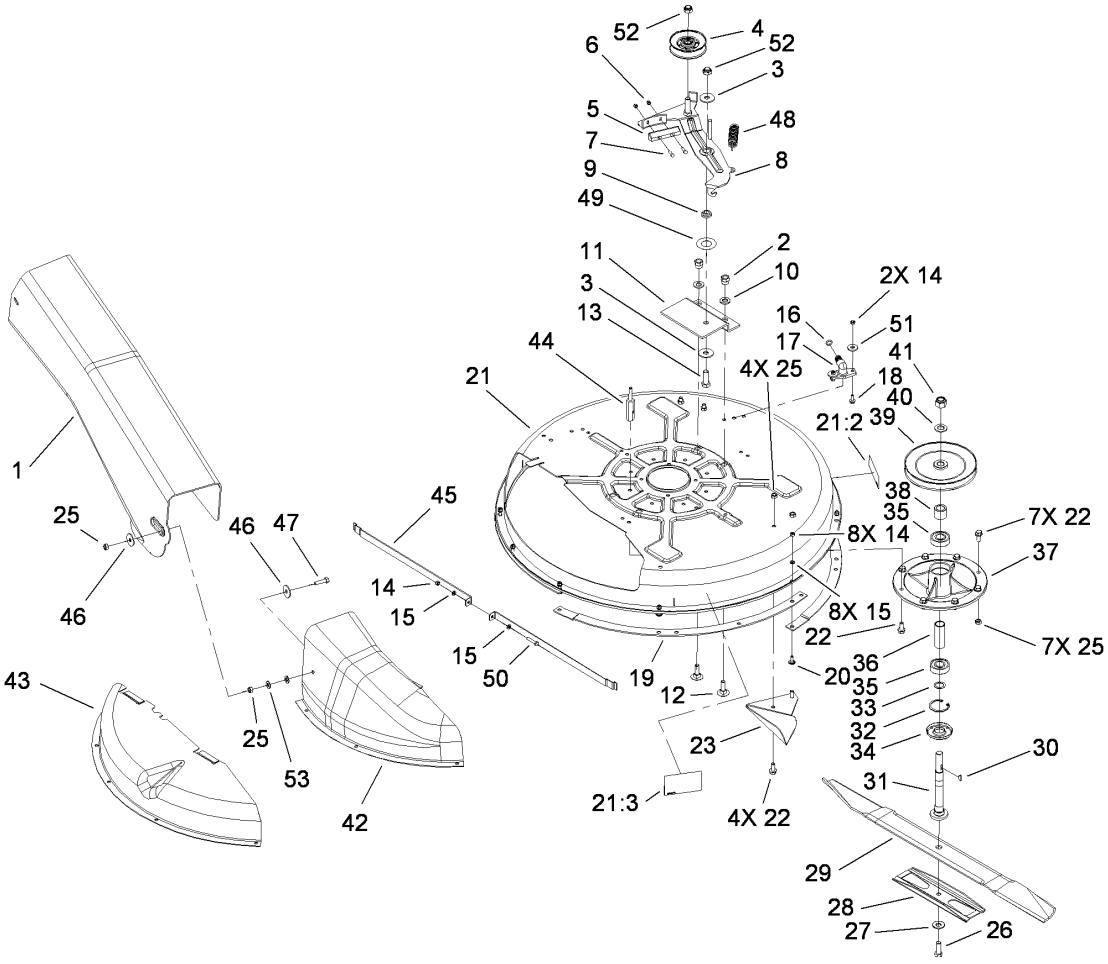

Deck and Spindle Assembly (continued)


Ref	Part No.	Qty.	Description
48	106-1838	1	Spring-Extension
49	106-2893	1	Spacer
50	33113-030	1	Screw-HH
51	106-2865	2	Washer-Flat
52	106-6513	2	Nut-Lock
53	33094-00	2	Washer-Plain

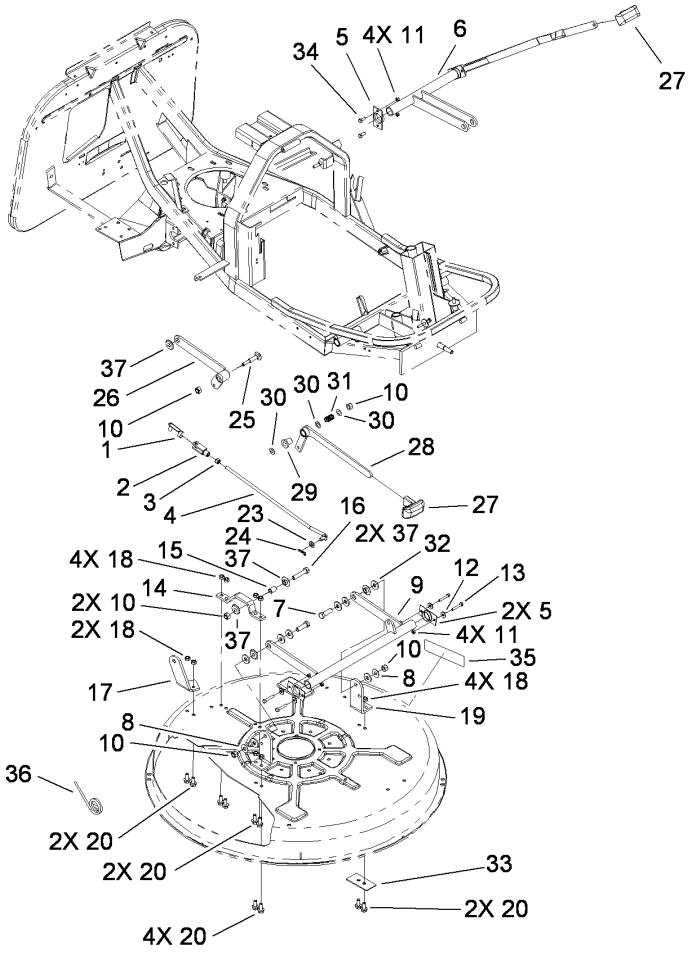

Deck Suspension Assembly


Ref	Part No.	Qty.	Description
1	106-1809	1	Retainer-Yoke
2	106-1803	1	Yoke
3	33014-00	1	Nut-Hex
4	106-2937	1	Rod-Tie
5	106-2880	3	Bracket-Support
6	114-3199	1	Lift Lever ASM
7	33115-035	2	Screw-HH
8	106-6511	2	Washer-Flat
9	114-3197	1	Deck Hanger ASM
10	33025-00	6	Nut-Lock
11	49-7810	8	Nut-Lock
12	106-2865	4	Washer-Flat
13	33113-035	4	Screw-HH
14	106-2895	1	Bracket-Deck
15	106-2912	1	Bushing
16	33115-050	1	Screw-HH
17	106-2894	1	Bracket-Deck
18	46-0330	10	Nut-Lock
19	106-2896	2	Bracket-Deck
20	33104-020	10	Screw-HHF
23	33094-00	1	Washer-Plain
24	106-2879	1	Pin-Hair
25	106-2882	1	Screw-CARR
26	114-3198	1	Deck-Hanger, Support

Ref	Part No.	Qty.	Description
27	106-2967	2	Handle
28	106-2954	1	Lever-Blade, Clutch
29	106-2955	1	Bushing
30	106-2869	3	Shim
31	106-2950	1	Spring-Compression
32	106-1806	6	Washer
33	106-6512	1	Plate
34	33113-016	4	Screw-HH
35	106-6406	1	Decal-Recycler
36	107-2229	1	Spring-Lift, Deck
37	114-3203	5	Bushing-Deck Linkage

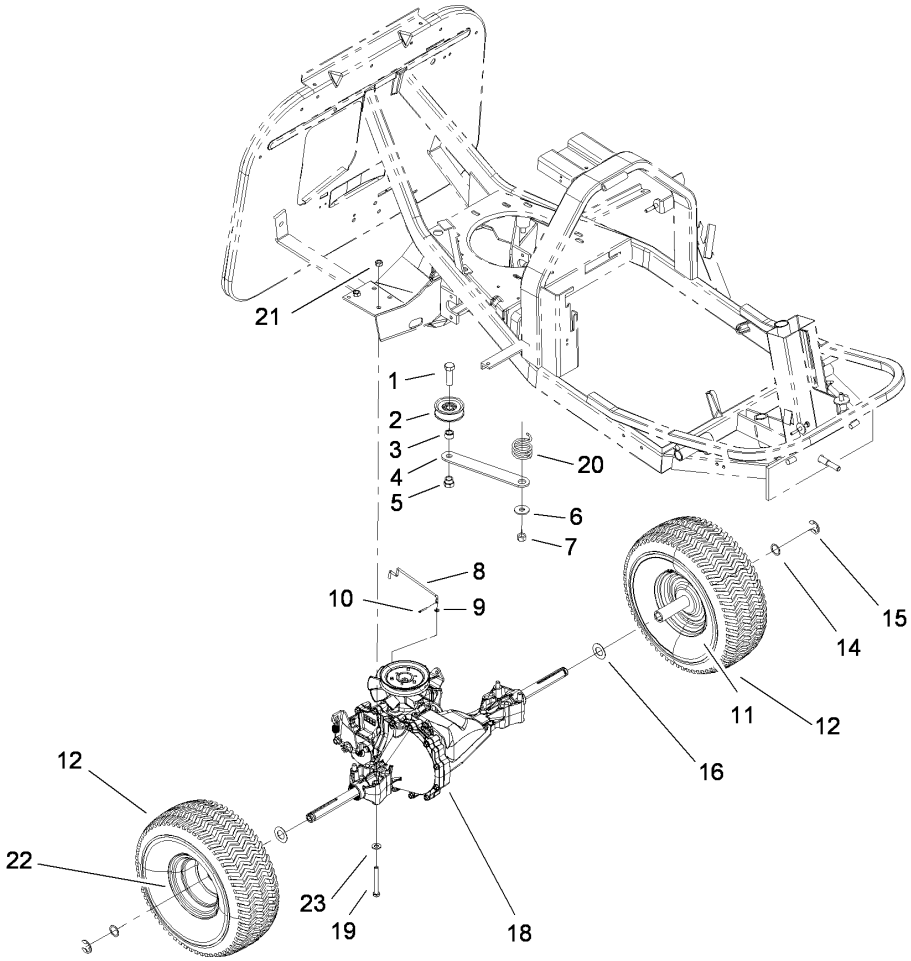

Hydro Transaxle Assembly


Ref	Part No.	Qty.	Description
1	33116-040	1	Screw-HH
2	114-3206	1	Pulley
3	106-2984	1	Spacer-Idler
4	106-2934	1	Bracket
5	46-0090	1	Nut-Lock
6	106-2921	1	Washer-Flat
7	33025-00	1	Nut-Lock
8	114-3195	1	Lever-Release
9	106-2904	1	Washer-Flat
10	106-2996	1	Pin-Hair
11	114-3188	1	Wheel-Rear Left
12	106-2913	2	Tire
14	114-3202	2	Spacer-Outer
15	106-2909	2	Ring-Retaining, EXT
16	114-3190	2	Spacer-Inner
18	114-3192	1	Transaxle
19	106-2891	4	Screw-HH
20	106-2995	1	Spring-Extension
21	46-0330	4	Nut-Lock
22	114-3189	1	Wheel-Rear Right
23	33094-00	4	Washer-Plain

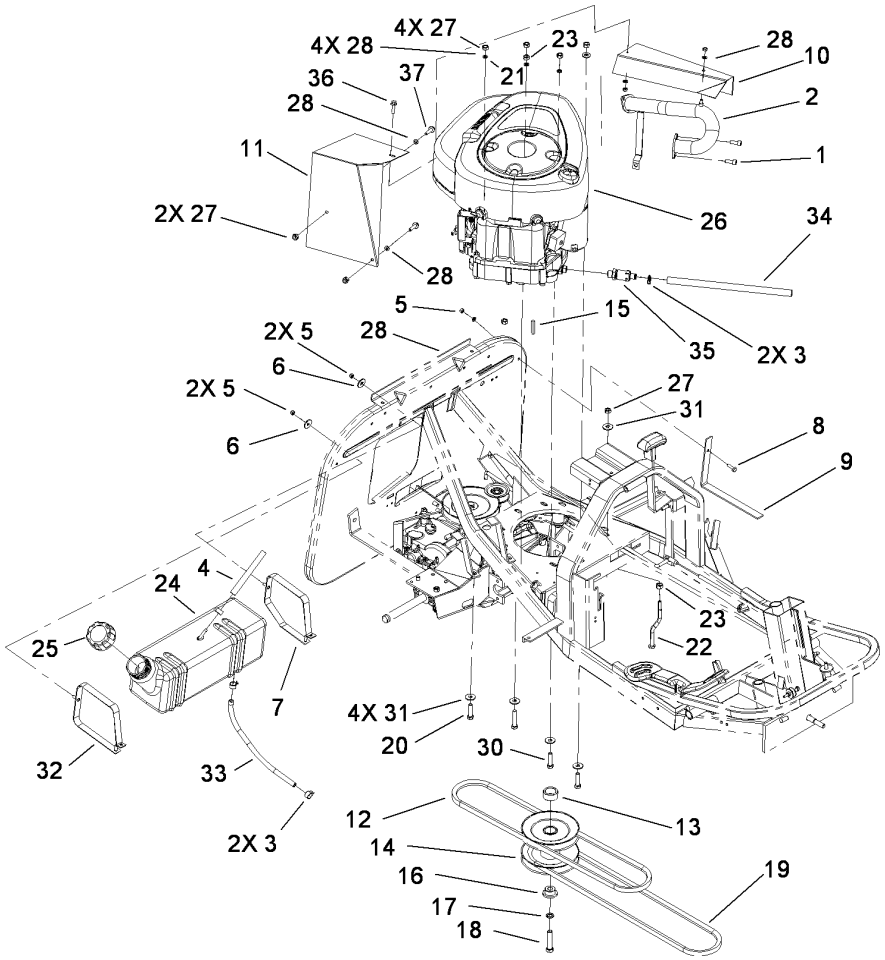

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	3274-10	2	Screw-HSH
2	107-2233	1	Pipe-Exhaust
3	107-2210	4	Clamp-Tube
4	106-2990	1	Hose-Fuel
5	49-7810	5	Nut-Lock
6	106-2853	2	Washer-Flat
7	106-6541	1	Strap-Fuel Tank, Left
8	33113-020	1	Screw-HH
9	106-1828	1	Guard-Muffler
10	107-2235	1	Shield-Pipe, Exhaust
11	107-2234	1	Shield-Muffler, Rear
12	114-3191	1	Belt
13	106-1836	1	Spacer
14	114-3297	1	Pulley-Engine, Hydro
15	67-7490	1	Key-Square
16	106-1837	1	Spacer
17	106-2856	1	Washer-Lock
18	3212-8	1	Screw-HH
19	114-3299	1	Belt-Deck, Hydro
20	33114-035	3	Screw-HH
21	33094-00	1	Washer-Plain
22	106-2974	2	Guide-Belt
23	33014-00	2	Nut-Hex
24	106-6537	1	Tank-Fuel


Ref	Part No.	Qty.	Description
25	55-3576	1	Gas Cap ASM
❷❼26		1	Engine-Briggs And Stratton, 31G777-0121-E1
27	46-0330	7	Nut-Lock
28	33093-00	8	Washer-Flat
30	33114-045	1	Screw-HH
31	106-2854	5	Washer-Flat
32	106-6540	1	Strap-Fuel Tank, Rt
33	107-1555	1	Hose-Fuel
34	107-2241	1	Tube-Drain, Oil
35	92-6877	1	Valve-Drain, Oil
36	33103-025	1	Screw-HHF
37	33103-030	2	Screw-HHF
❶99	107-8937	1	Plug-Wrench

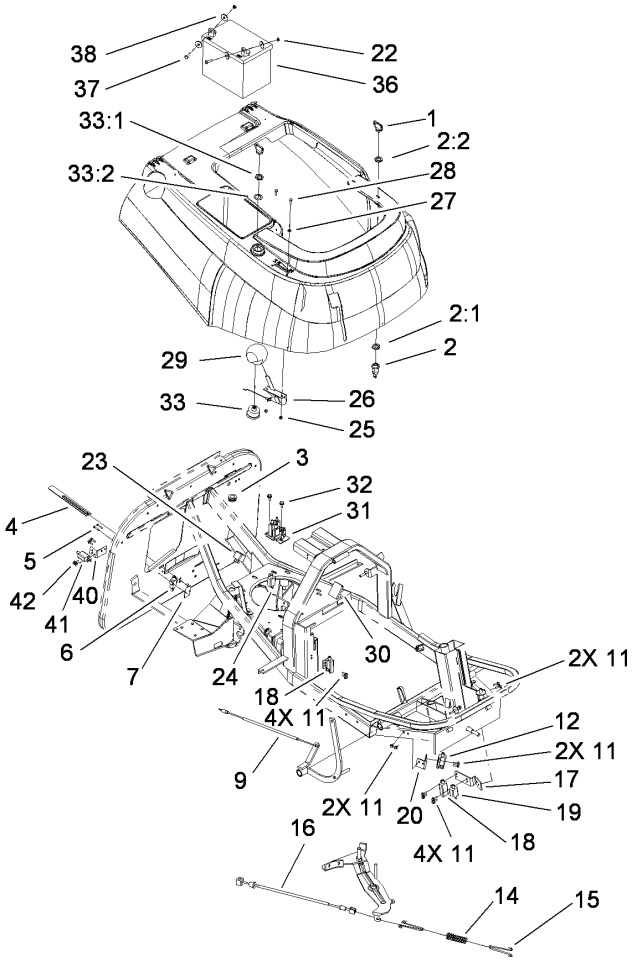

Electrical Assembly

Ref	Part No.	Qty.	Description
1	63-8360	2	Key-Ignition
2	46-5780	1	Switch-Starter
2:1	3254-5	1	Washer-Tooth
2:2	218-461	1	Nut-HH
3	106-2863	1	Grommet
4	106-1831	1	Lever-Bag Fill
5	106-2850	2	Screw
6	106-1843	1	Switch
7	106-1827	1	Clamp-Bag Fill
9	114-3196	1	Cable-Brake
11	106-1849	14	Screw-HH TAP
12	100-8725	1	Switch-Double, Pole
14	106-2917	1	Spring-Compression
15	106-2918	2	Hook-Spring
16	106-2956	1	Cable
17	106-1808	1	Bracket-Switch
18	86-4690	2	Switch-Interlock
19	65-7410	1	Switch-Pole, Single
20	106-1816	1	Bracket-Switch
22	33013-00	2	Nut-Hex
23	98-7249	1	Relay
24	65-7410	1	Switch-Pole, Single
25	46-0410	2	Nut-Lock
26	106-2916	1	Throttle Cable ASM


Ref	Part No.	Qty.	Description
27	52-6430	2	Washer
28	60-6910	2	Screw
29	106-2989	1	Knob
30	99-3700	1	Module
31	47-1910	1	Solenoid
32	106-2852	2	Screw-HHF TAP
33	88-9830	1	Key Switch ASM
33:1	3254-5	1	Washer-Tooth
33:2	218-461	1	Nut-HH
36	104-1755	1	Battery
37	33113-020	2	Screw-HH
38	106-2853	4	Washer-Flat
❶39	114-3215	1	Harness-Wiring, Hydro
40	114-3211	1	Bracket-Collector, Switch
41	65-7410	1	Switch-Pole, Single
42	106-1849	4	Screw-HH TAP

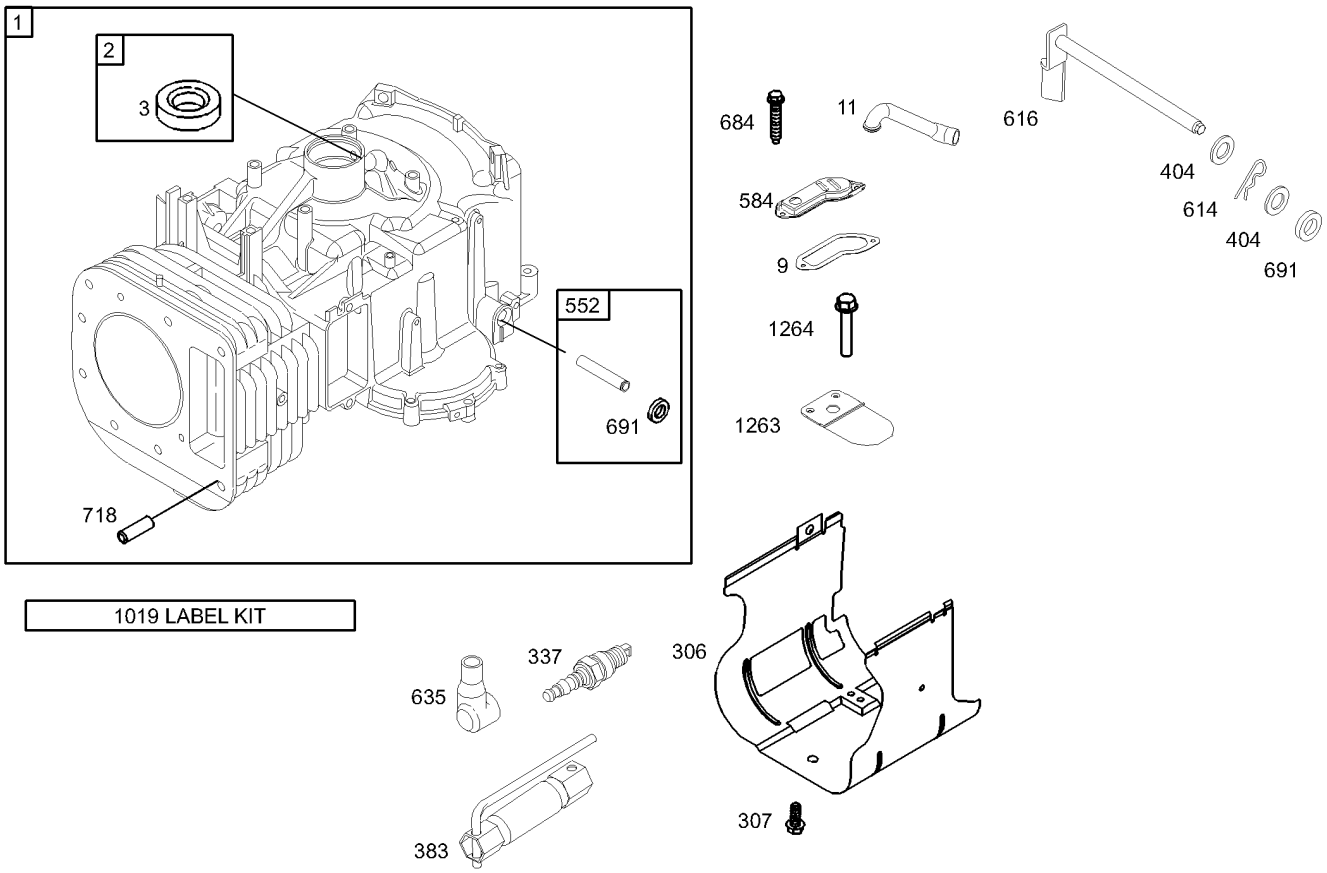

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 31G777-0121-E1


Ref	Part No.	Qty.	Description
❼1	697174	1	Cylinder ASM
❼2	399265	1	Bushing And Seal Kit
❸❼3	391086	1	Seal-Oil
❸❼9	697109	1	Gasket-Breather
❼11	697113	1	Tube-Breather
❶❼48	697762	1	Short Block ASM
❼306	697107	1	Shield-Cylinder
❼307	691003	1	Screw
❼337	691043	1	Spark Plug
❼383	89838	1	Wrench-Plug, Spark
❼404	691691	1	Washer
❼552	697144	1	Bushing-Crank, Governor
❼584	697112	1	Cover-Passage, Breather
❼614	691620	1	Pin-Cotter
❼616	692012	1	Crank-Governor
❼635	691909	1	Boot-Spark Plug
❼684	697157	1	Screw
❸❼691	692407	1	Seal-Shaft, Governor
❼718	690959	1	Pin-Locating
❼1019	697143	1	Label Kit
❼1263	697124	1	Reed-Breather
❼1264	697104	1	Screw

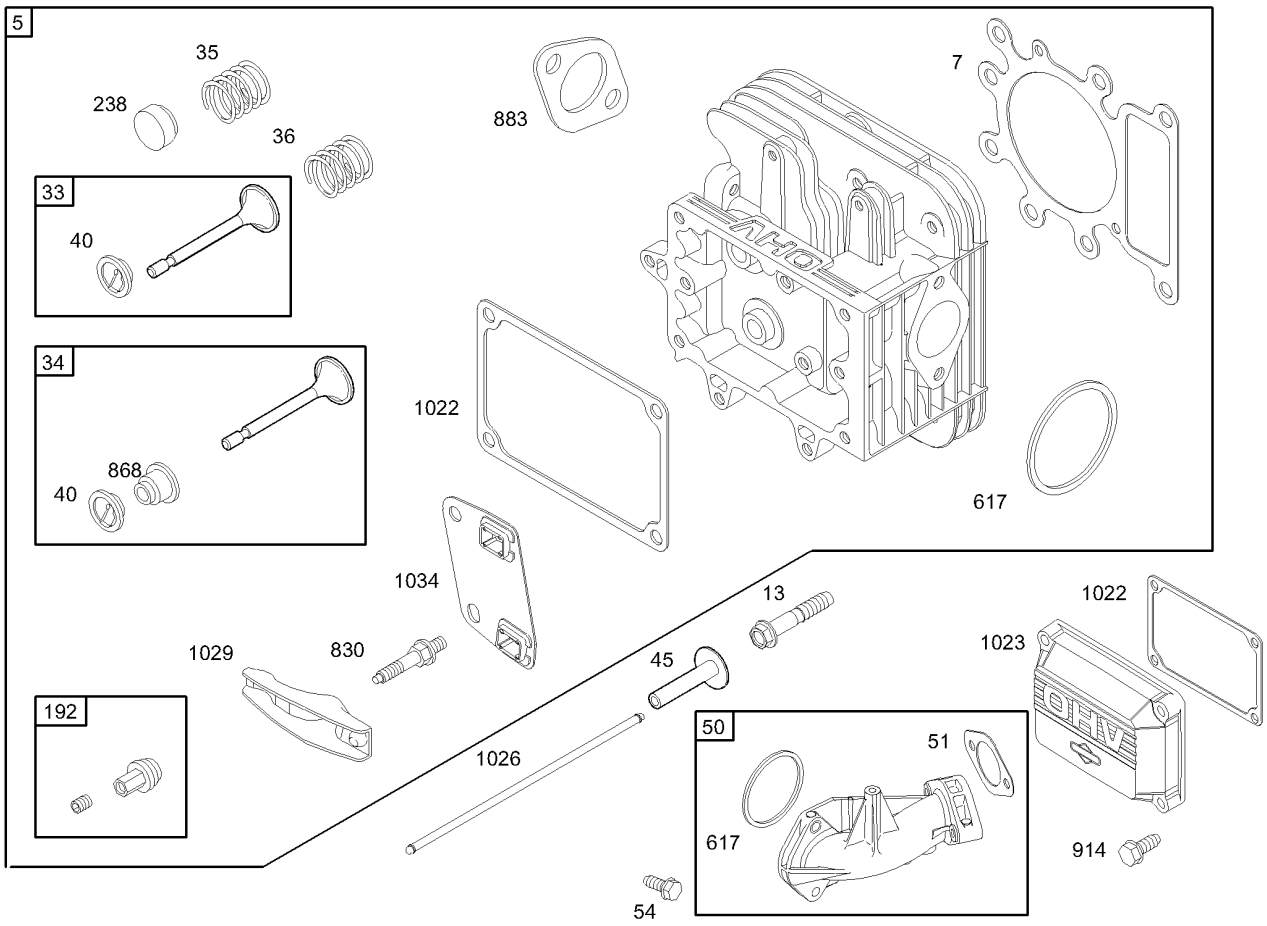



Cylinder Head Assembly
Briggs and Stratton 31G777-0121-E1


Ref	Part No.	Qty.	Description
❼5	698147	1	Head-Cylinder
❸❹7 ❼	692410	1	Gasket–Cylinder Head
❼13	690360	1	Screw
❼33	695760	1	Valve-Exhaust
❼34	695761	1	Valve-Intake
❼35	691279	1	Spring-Valve
❼36	691279	1	Spring-Valve
❼40	691752	1	Retainer-Valve
❼45	690564	1	Tappet-Valve
❼50	690193	1	Manifold-Intake
❸❹51 ❺❻	692137	1	Gasket-Intake
❼54	691148	1	Screw
❼192	691986	1	Adjustor-Arm, Rocker
❼238	691843	1	Cap-Valve
❸❺617 ❼	692138	1	Seal-O Ring
❼830	691095	1	Stud-Arm, Rocker
❸❹868 ❼	690968	1	Seal-Valve
❼883	692236	1	Gasket-Exhaust
❼914	690960	1	Screw
❸❼1022	272475	1	Gasket-Cover, Rocker
❼1023	692492	1	Cover-Rocker


Ref	Part No.	Qty.	Description
❼1026	692003	1	Rod–Push
❼	692011	1	Rod–Push
❼1029	691751	1	Arm-Rocker
❼1034	690822	1	Guide-Rod, Push

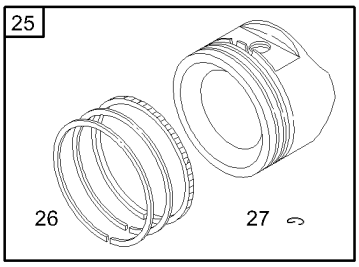

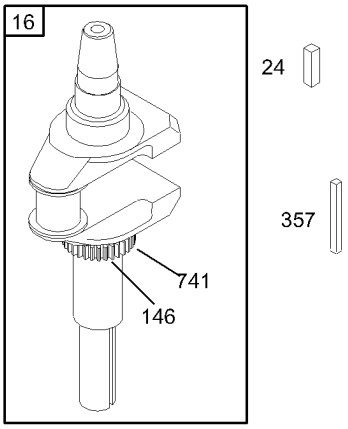

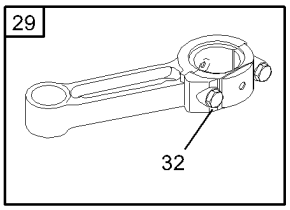

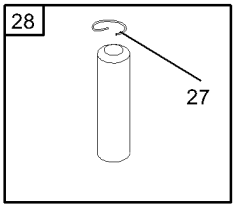


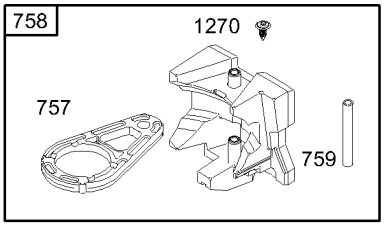

Assemblies include all parts shown in frames.

Crankshaft Assembly
Briggs and Stratton 31G777-0121-E1


Ref	Part No.	Qty.	Description
❼16	697127	1	Crankshaft
❼24	222698	1	Key
❼25	697159	1	Piston ASM (Standard)
❼	697160	1	Piston ASM (.010" Oversize)
❼	697162	1	Piston ASM (.020" Oversize)
❼	697163	1	Piston ASM (.030" Oversize)
❼26	697164	1	Ring Set (Standard)
❼	697165	1	Ring Set (.010" Oversize)
❼	697171	1	Ring Set (.020" Oversize)
❼	697172	1	Ring Set (.030" Oversize)
❼27	698469	1	Lock-Pin, Piston
❼28	697099	1	Pin-Piston (STD)
❼29	697126	1	Rod–Connecting (Standard)
❼	697263	1	Rod-Connecting (.020In Undersize)
❼32	692852	1	Screw
❼146	691639	1	Key-Timing
❼357	691483	1	Key–Pulley, Drive
❼741	697128	1	Gear-Timing
❼757	697607	1	Link-Counterweight
❼758	697134	1	Counterweight
❼759	697392	1	Pin-Counterweight
❼1270	697156	1	Plug-Counterweight, Avs

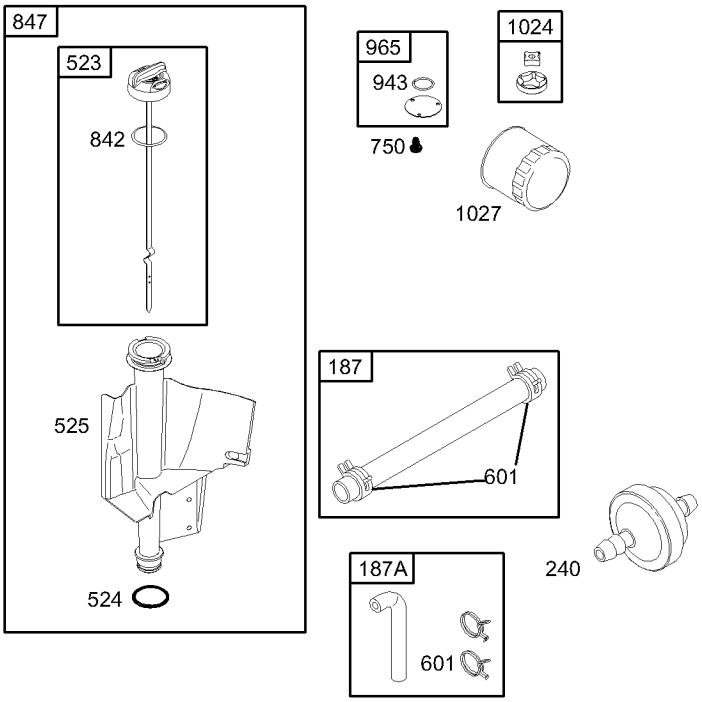

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 31G777-0121-E1


Ref	Part No.	Qty.	Description
❼187	296004	1	Fuel-Hose
❼187A	698820	1	Line-Fuel
❼240	298090	1	Filter
❼523	697086	1	Dipstick
❸❼524	691032	1	Seal-O Ring
❼525	697085	1	Tube–Dipstick
❼601	691038	1	Clamp-Hose
❼750	691033	1	Screw
❸❼842	691031	1	Seal-O Ring
❼847	697087	1	Dipstick/Tube ASM
❸❼943	690589	1	Seal-O Ring
❼965	499613	1	Cover-Pump, Oil
❼1024	499054	1	Pump-Oil
❼1027	492932	1	Filter-Oil

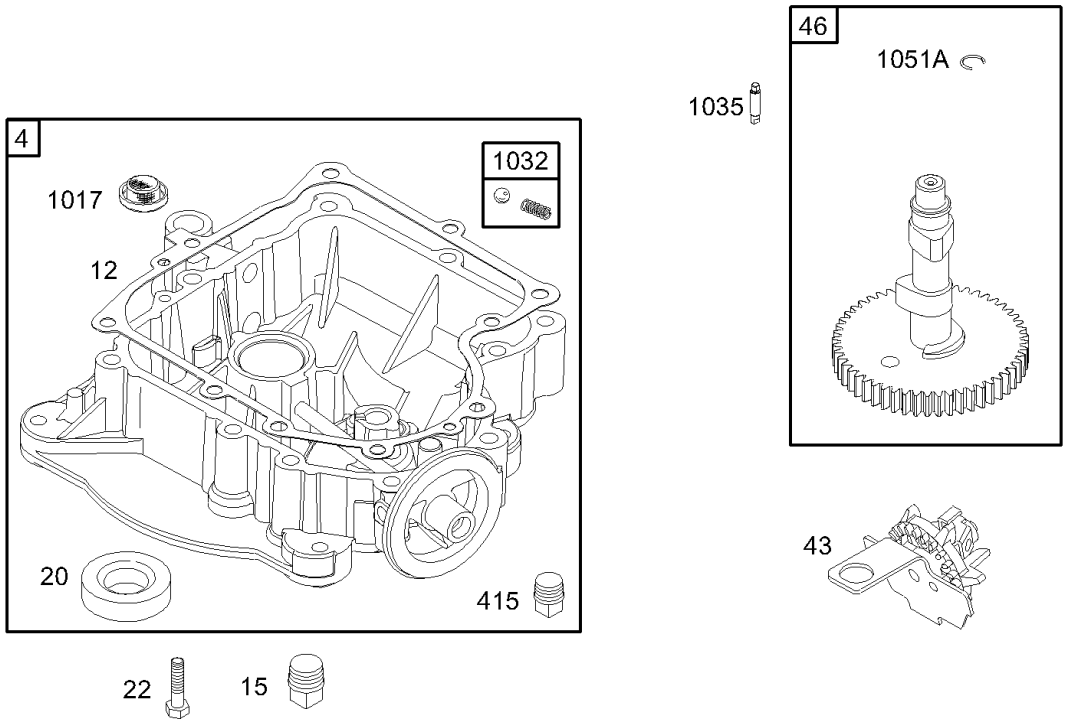

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
❼4	697188	1	Sump-Engine
❸❼12	697110	1	Gasket-Crankcase
❼15	690946	1	Plug-Drain, Oil
❸❼20	690947	1	Seal-Oil
❼22	692125	1	Screw
❼43	691968	1	Slinger-Governor,Oil
❼46	698492	1	Camshaft
❼415	690283	1	Plug-Oil
❼1017	690770	1	Screen-Pump, Oil
❼1032	491710	1	Ball–Pump, Oil
❼1035	693784	1	Shaft-Pump, Oil
❼1051A	698802	1	Ring-Retaining

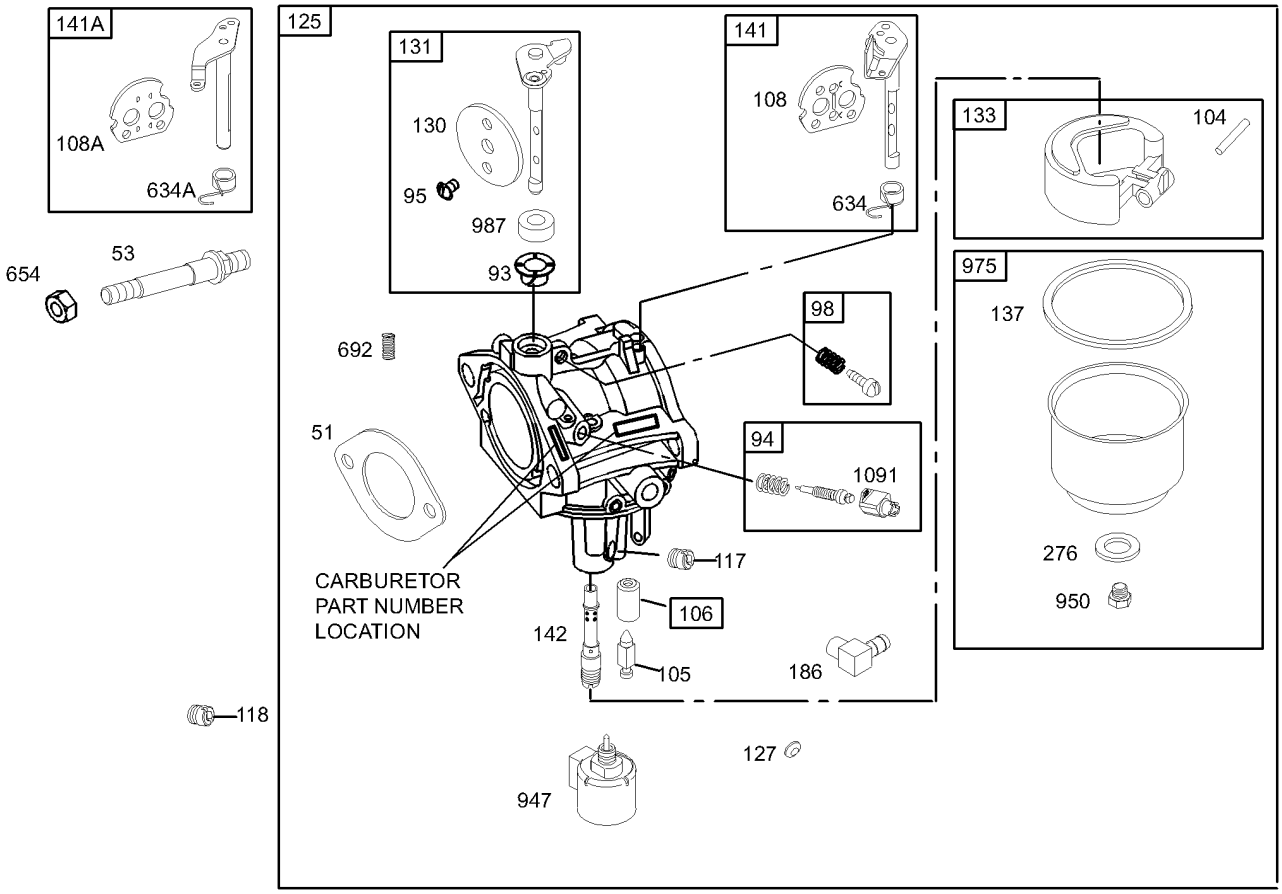


Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
❸❹51 ❻❼	692137	1	Gasket-Intake
❼53	690227	1	Stud
❺❼93	690602	1	Bushing-Shaft, Throttle
❼94	498030	1	Idle Mixture Kit
❺❼95	691636	1	Screw
❼98	495800	1	Idle Speed Kit
❺❼104	690525	1	Pin-Hinge, Carburetor Float
❺❼105	231855	1	Valve-Needle, Float
❺❼106	690577	1	Seat-Inlet
❼108	690464	1	Valve–Choke
❼108A	692344	1	Valve-Choke
❼117	694352	1	Jet-Main (STD)
❼118	697228	1	Jet-Main (High Altitude)
❼125	697190	1	Carburetor
❼127	695005	1	Plug-Welch
❼130	691750	1	Valve-Throttle
❼131	494379	1	Throttle Shaft Kit
❼133	494381	1	Float-Carburetor
❺❻137 ❼	281165	1	Gasket-Bowl, Float
❼141	495097	1	Choke Shaft Kit
❼141A	495931	1	Choke Shaft Kit
❺❼142	697140	1	Nozzle-Carburetor

Ref	Part No.	Qty.	Description
❼186	698174	1	Connector-Hose
❺❻276 ❼	692255	1	Washer-Sealing
❺❼634	690801	1	Spring / Seal ASM
❺❼634A	690802	1	Spring And Seal ASM
❼654	690958	1	Nut
❼692	690572	1	Spring-Detent
❼947	694393	1	Solenoid-Fuel
❼950	691657	1	Screw
❼958	494768	1	Valve-Fuel Shut Off
❼975	495933	1	Bowl-Float
❺❼987	691326	1	Seal-Shaft, Throttle
❼1091	691333	1	Cap-Limiter

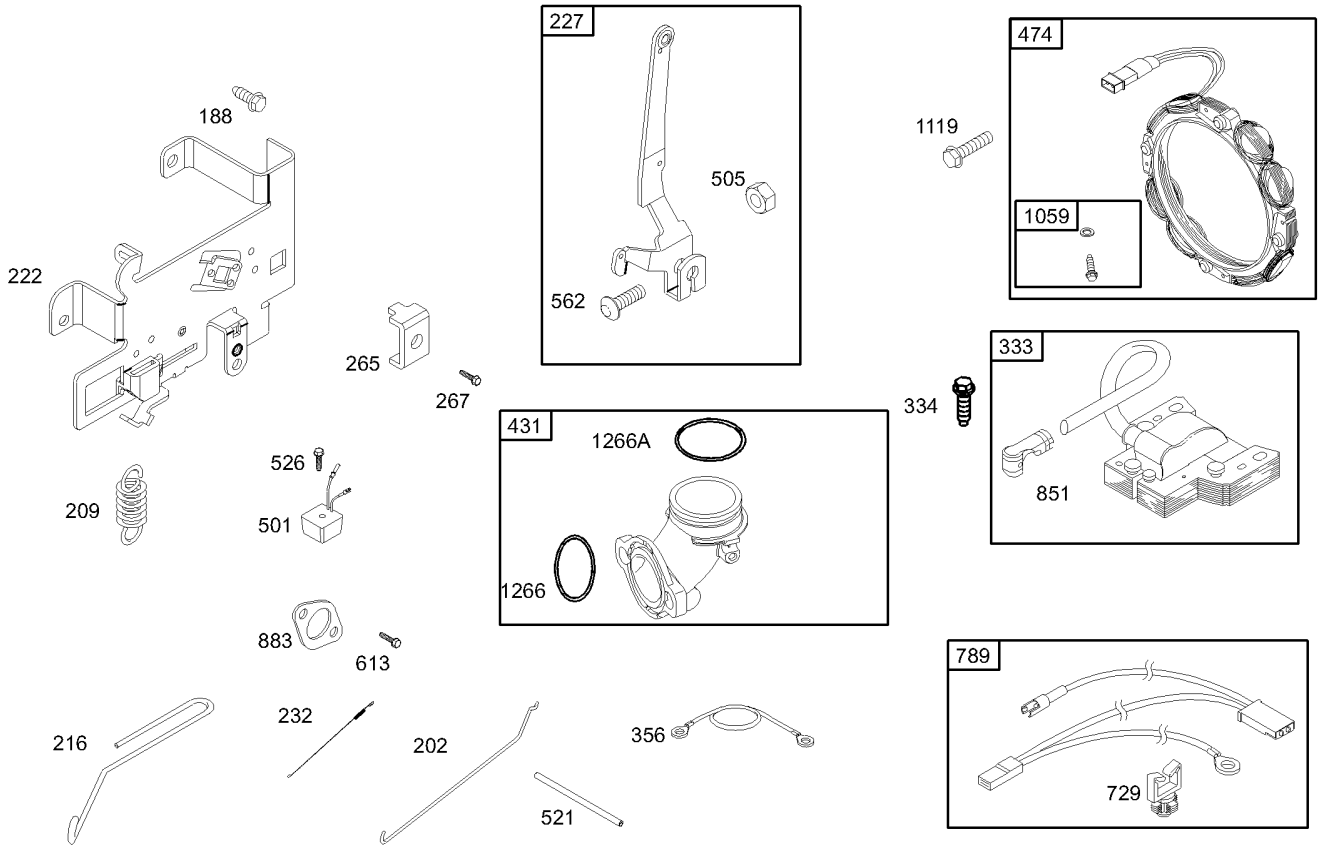


Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
❼188	691693	1	Screw
❼202	691841	1	Link-Governor, Mechanical
❼209	691795	1	Spring–Governor
❼216	691840	1	Link-Choke
❼222	694042	1	Bracket-Control
❼227	691374	1	Lever-Control, Governor
❼232	691842	1	Spring-Link, Governor
❼265	691024	1	Clamp-Casing
❼267	690804	1	Screw
❼333	492341	1	Armature-Magneto
❼334	691061	1	Screw
❼356	697089	1	Stop-Wire
❼431	697122	1	Elbow-Intake
❼474	696457	1	Alternator
❼501	691188	1	Regulator
❼505	691251	1	Nut
❼521	690581	1	Shield-Cable
❼526	697088	1	Screw
❼562	691119	1	Screw
❼613	698941	1	Screw
❼729	691335	1	Clip–Wire
❼789	692037	1	Wiring-Harness
❼851	692424	1	Terminal–Spark Plug
❼883	692236	1	Gasket-Exhaust


Ref	Part No.	Qty.	Description
❼1059	698516	1	Screw And Washer Kit
❼1119	691183	1	Screw
❸❼1266	691917	1	Seal-O Ring
❸❼1266A	697123	1	Seal-O Ring

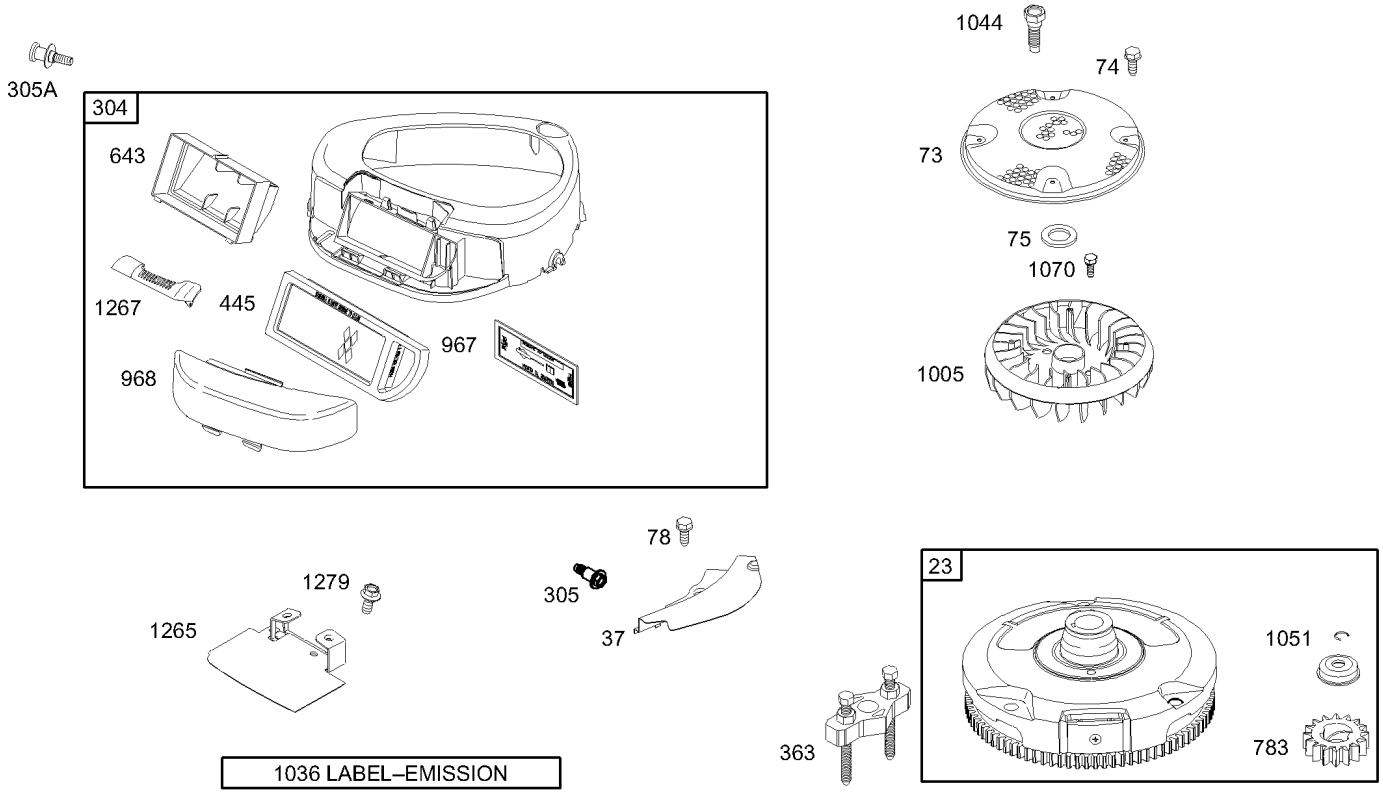

Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 31G777-0121-E1


Ref	Part No.	Qty.	Description
❼23	693556	1	Flywheel
❼37	697108	1	Guard–Flywheel
❼73	697133	1	Screen-Rotating
❼74	697897	1	Screw
❼75	690582	1	Washer-Flywheel
❼78	691003	1	Screw
❼304	698804	1	Housing-Blower
❼305	697102	1	Screw
❼305A	697103	1	Screw
❼363	19203	1	Puller-Flywheel
❼445	698083	1	Filter-Cartridge, Air Cleaner
❼643	698401	1	Retainer-Filter, Air
❼783	693713	1	Gear-Pinion
❼967	697015	1	Filter-Cleaner, Pre
❼968	697084	1	Cover-Cleaner, Air
❼1005	697111	1	Fan–Flywheel
❼1036	695700	1	Label–Emission
❼1044	691658	1	Screw-Crankshaft Extension
❼1051	691265	1	Ring-Retaining
❼1070	690372	1	Screw
❼1265	697125	1	Support–Housing, Blower
❼1267	697135	1	Latch-Blower Housing
❼1279	690960	1	Screw

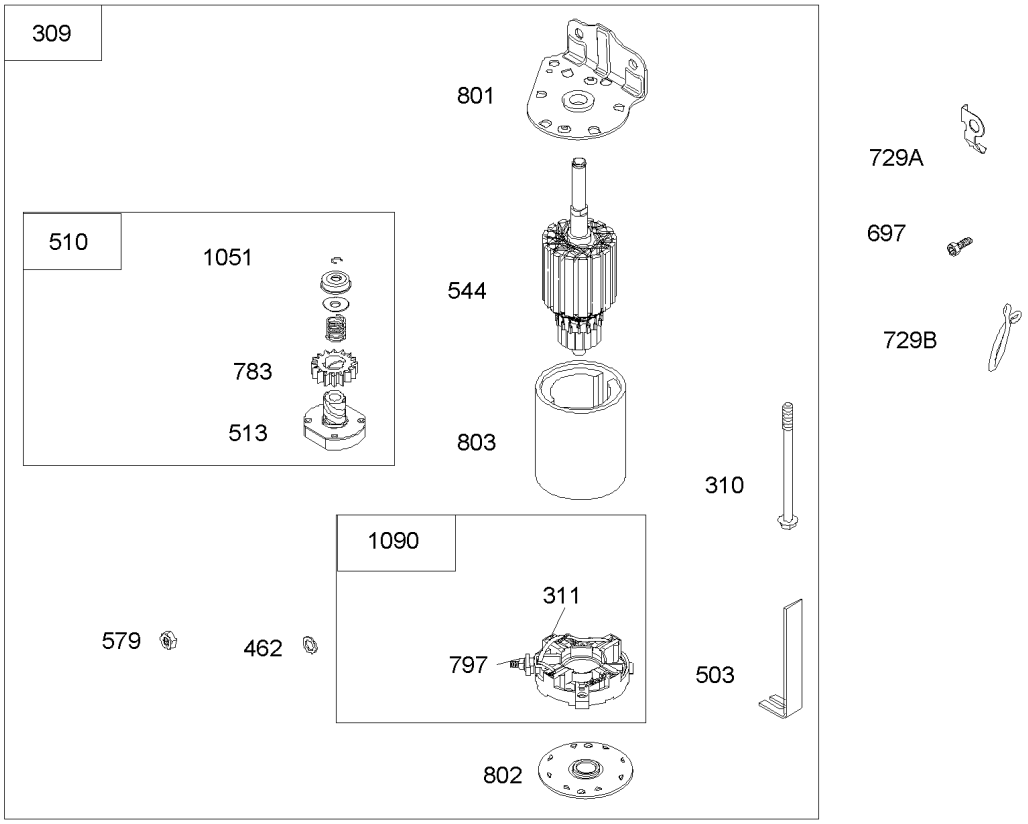


Assemblies include all parts shown in frames.

Starter Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
❼309	693551	1	Motor-Starter
❼310	690323	1	Bolt
❼311	497608	1	Brush Set
❼462	691261	1	Washer
❼503	691532	1	Strap-Starter
❼510	693699	1	Drive-Starter
❼513	692024	1	Clutch-Drive
❼544	692034	1	Armature-Starter
❼579	691029	1	Nut
❼697	690372	1	Screw
❼729A	691224	1	Clip-Wire
❼729B	694123	1	Clip–Wire
❼783	693713	1	Gear-Pinion
❼797	693167	1	Nut
❼801	691283	1	Cap-Drive
❼802	691286	1	Cap-End
❼803	693757	1	Housing-Starter
❼1051	691265	1	Ring-Retaining
❼1090	691293	1	Retainer-Brush

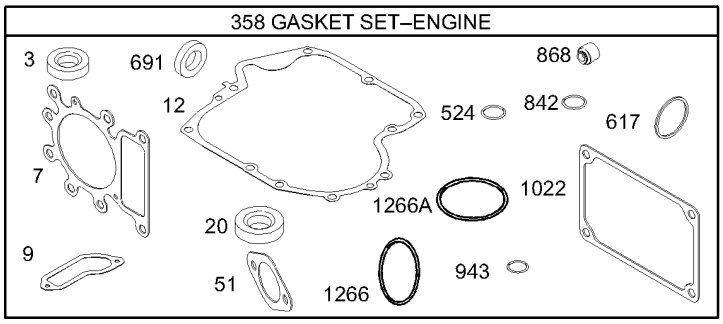


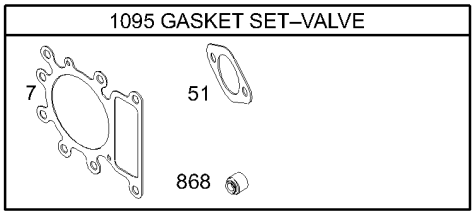


Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
❸❼3	391086	1	Seal-Oil
❸❹7 ❼	692410	1	Gasket–Cylinder Head
❸❼9	697109	1	Gasket-Breather
❸❼12	697110	0	Gasket-Crankcase
❸❼20	690947	1	Seal-Oil
❸❹51 ❺❻	692137	1	Gasket-Intake
❼358	697191	1	Gasket Set–Engine
❸❺617 ❼	692138	1	Seal-O Ring
❸❼524	691032	1	Seal-O Ring
❸❼691	692407	1	Seal-Shaft, Governor
❸❼842	691031	1	Seal-O Ring
❸❹868 ❼	690968	1	Seal-Valve
❸❼943	690589	1	Seal-O Ring
❸❼1022	272475	1	Gasket-Cover, Rocker
❼1095	691581	1	Valve Gasket Set
❸❺1266 ❼	691917	1	Seal-O Ring
❸❺1266A ❼	697123	1	Seal-O Ring

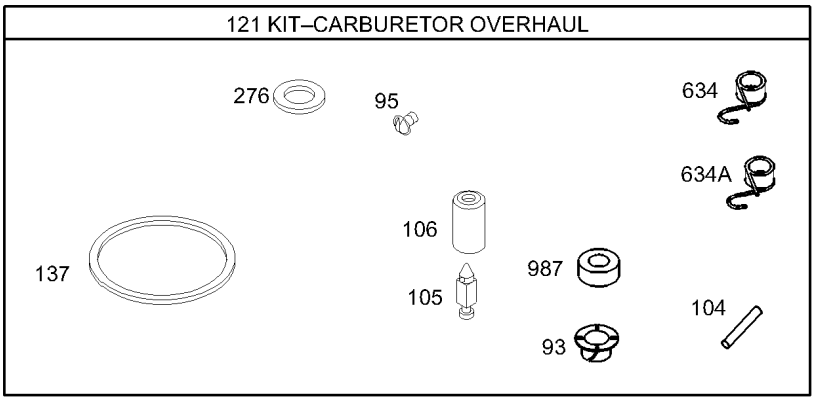

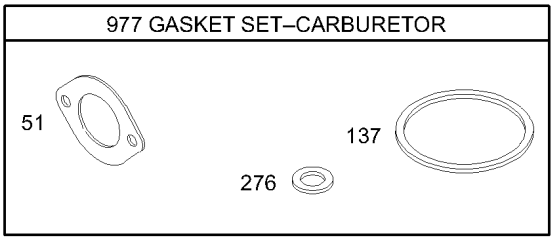

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 31G777-0121-E1

Ref	Part No.	Qty.	Description
❸❹51 ❻❼	692137	1	Gasket-Intake
❺❼93	690602	1	Bushing-Shaft, Throttle
❺❼95	691636	1	Screw
❺❼104	690525	1	Pin-Hinge, Carburetor Float
❺❼105	231855	1	Valve-Needle, Float
❺❼106	691780	1	Seat–Inlet
❼121	697884	1	Kit-Carburetor Overhaul
❺❻137 ❼	281165	1	Gasket-Bowl, Float
❺❻276 ❼	692255	1	Washer-Sealing
❺❼634	690801	1	Spring / Seal ASM
❺❼634A	690802	1	Spring And Seal ASM
❼977	690192	1	Carburetor Gasket Set
❺❼987	691326	1	Seal-Shaft, Throttle

NOTES


TORO®