Form Number 3360-260 Rev A

Commercial Walk-Behind Mower

Floating Deck, T-Bar, Gear Drive with 40in TURBO FORCE® Cutting Unit

Model No. 39096 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Clutch Assembly	3
Power-Take-Off Idler and Weight Assembly	4
Fuel System Assembly	5
Lower Control Assembly	6
Transmission Drive Assembly	7
Wheel Drive and Brake Assembly	8
Upper Handle Assembly	9
Control Panel Assembly	10
Carrier Frame Assembly	11
Deck Drive and Baffle Assembly	12
Deck Assembly No. 112-7081	13
Spindle Assembly No. 110-0728	14
Spindle Assembly No. 110-6927	15
Lever Assembly No. 107-1664	16
Deck Assembly	17
Deflector Assembly No. 110-0790	18
Cylinder and Crankcase Assembly Kawasaki FH430V-DS28	19
Piston and Crankshaft Assembly Kawasaki FH430V-DS28	20
Valve and Camshaft Assembly Kawasaki FH430V-DS28	21
Lubrication Equipment Assembly Kawasaki FH430V-DS28	22
Cooling Equipment Assembly Kawasaki FH430V-DS28	23
Electric Equipment Assembly Kawasaki FH430V-DS28	24
Control Equipment Assembly Kawasaki FH430V-DS28	25
Carburetor Assembly Kawasaki FH430V-DS28	26
Air Filter and Muffler Assembly Kawasaki FH430V-DS28	27
Fuel Tank and Valve Assembly Kawasaki FH430V-DS28	28
Starter Assembly Kawasaki FH430V-DS28	29
Label Assembly Kawasaki FH430V-DS28	30
Attachments and Accessories List	31


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Kawasaki dealer

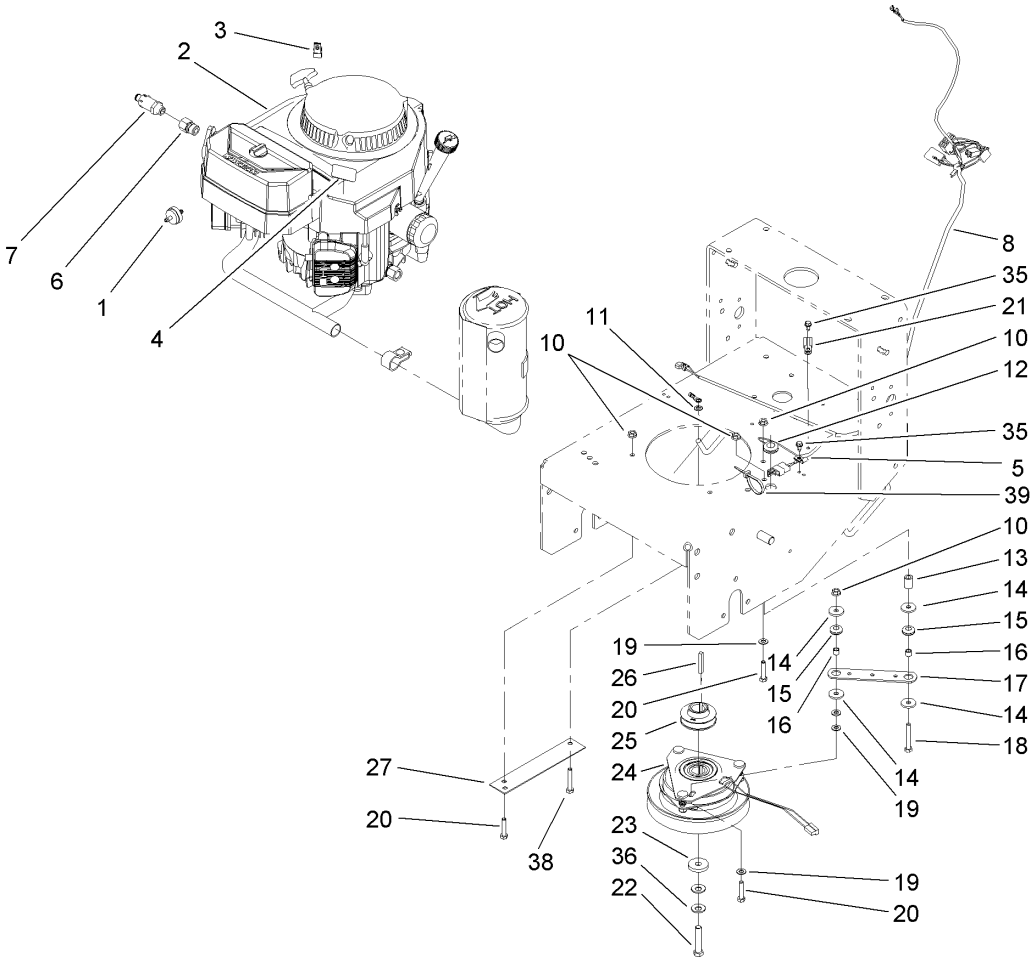

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
❷❸2		1	Engine-Kawasaki, FH430V Ds28
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	92-6877	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
10	32128-20	6	Nut-HF
11	3255-8	1	Washer-Lock
12	112-7069	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	4	Screw-HH
21	2412-134	1	R-Clamp
22	3212-9	1	Screw-HH
23	107-4136	1	Washer
24	105-2635	1	Clutch / Brake
25	107-4112	1	Pulley-Drive

Ref	Part No.	Qty.	Description
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
35	12-3270	2	Screw
36	1-603610	2	Washer-Spring
38	322-9	1	Screw-HH
39	3290-378	1	Tie-Cable
❶99	103-1964	1	Hose-Drain, Oil

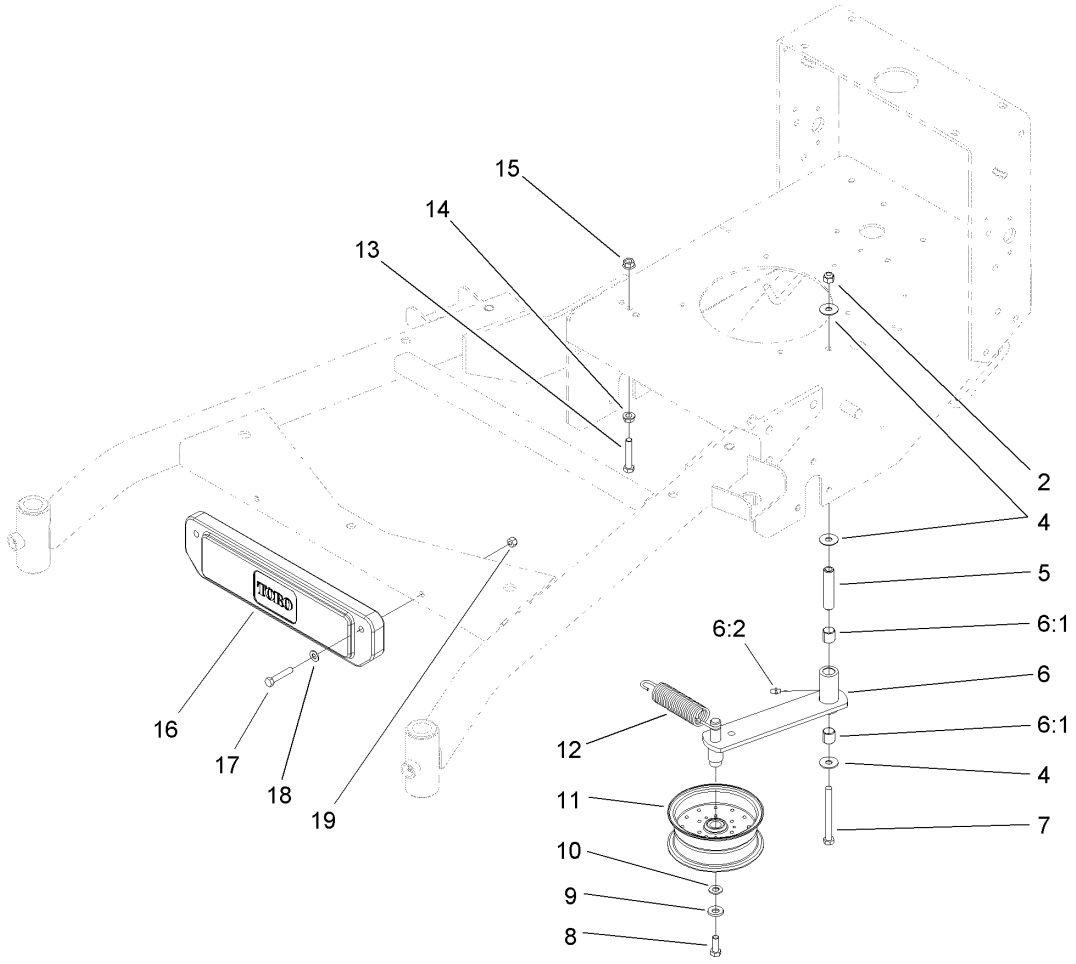


Power-Take-Off Idler and Weight Assembly

Ref	Part No.	Qty.	Description
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	112-7055	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension
13	323-10	1	Screw-HH
14	3290-357	1	Nut-HHF, Whiz
15	32128-21	1	Nut-HF
16	112-7059-01	1	Weight-Cast
17	322-9	2	Screw-HH
18	3256-23	2	Washer-Flat
19	3296-29	2	Nut-Lock, NI

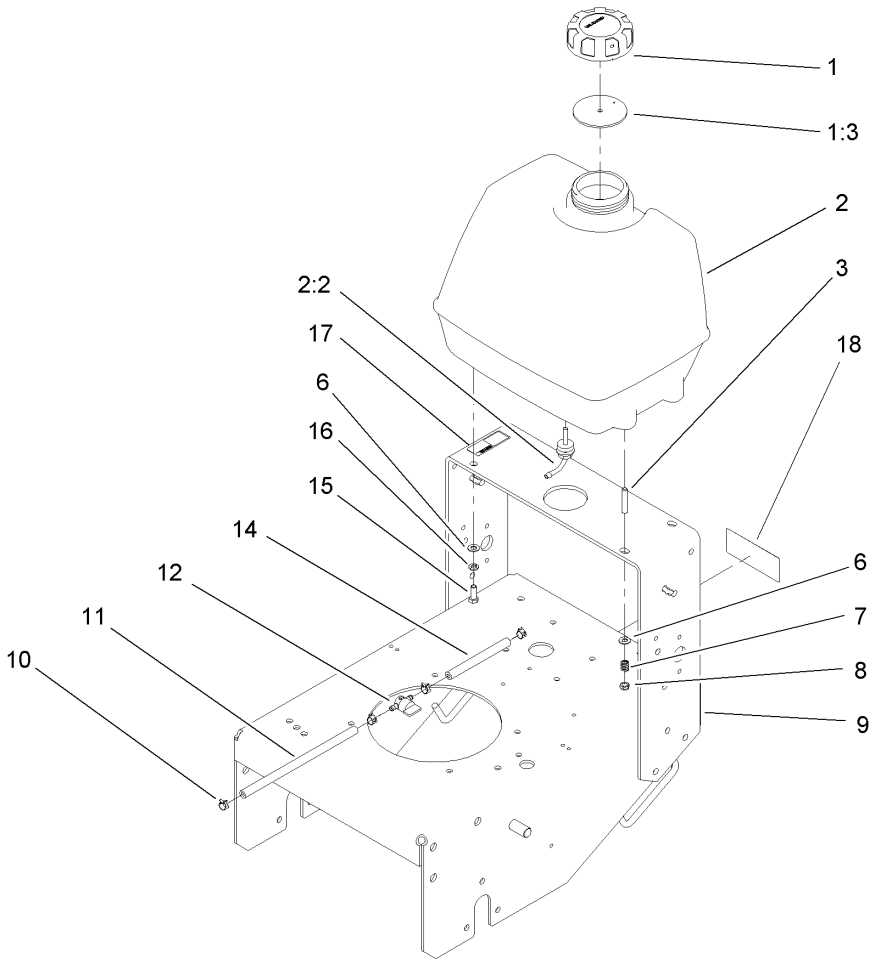


Fuel System Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	110-4985-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	110-4894	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	107-0588	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution

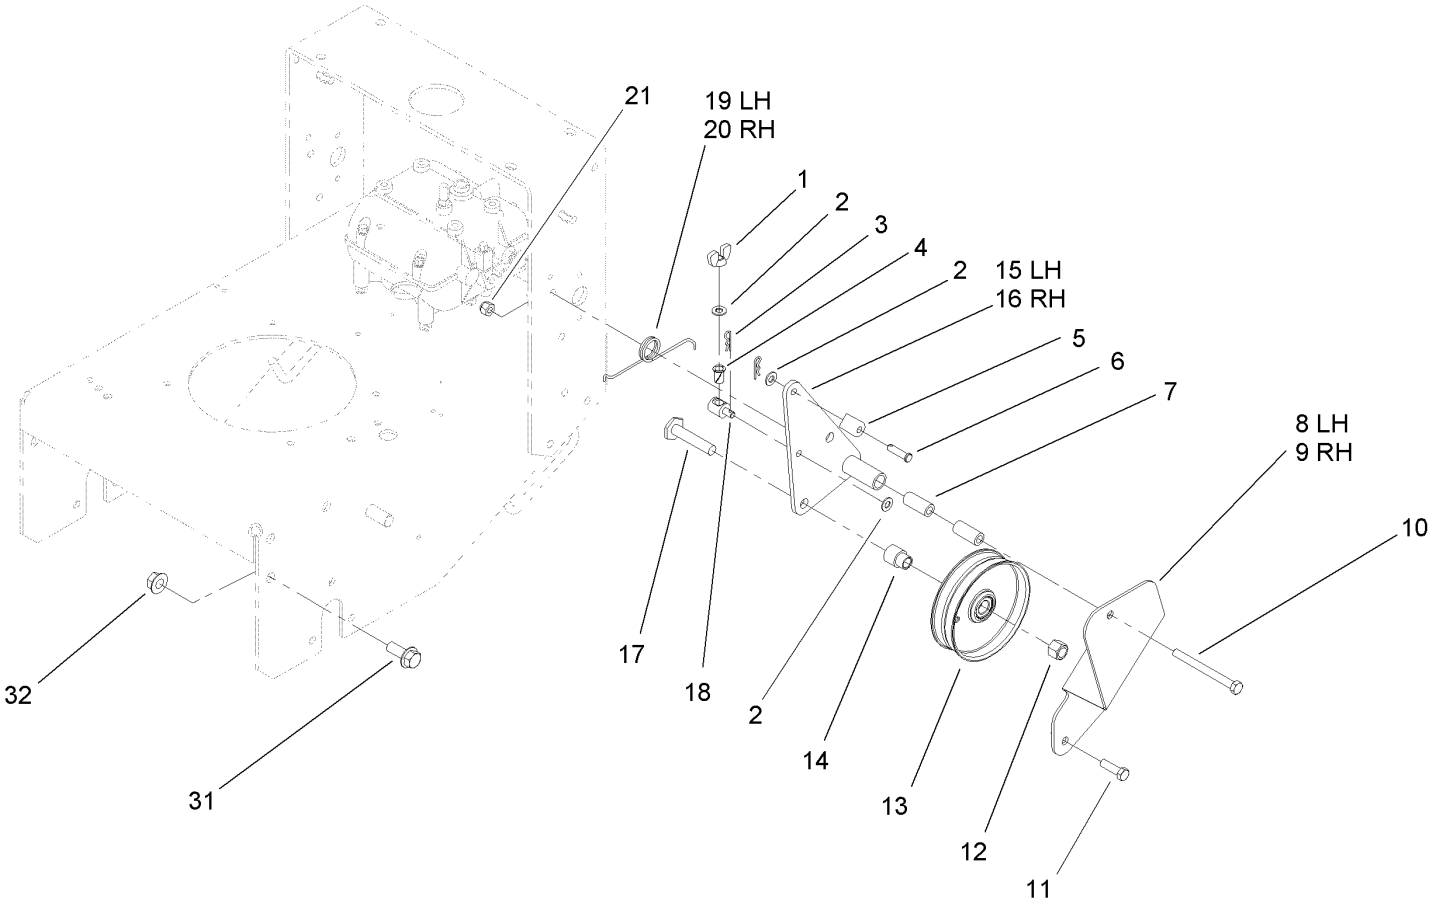

Lower Control Assembly


Ref	Part No.	Qty.	Description
1	32103-25	2	Nut-Wing
2	3256-23	6	Washer-Flat
3	3290-307	4	Pin-Hair
4	52-2890	2	Bushing-Nylon
5	74-0521	2	Fitting-Rod
6	283-6	2	Pin-Clevis
7	74-0040	4	Spacer-Pivot, Idler
8	108-2725-01	1	Support-Idler, LH
9	108-2724-01	1	Support-Idler, RH
10	323-16	2	Screw-HH
11	323-7	4	Screw-HH
12	3296-23	2	Nut-Lock, NI
13	95-2800	2	Pulley-Idler
14	95-2801	2	Spacer-Pulley
15	108-2740-01	1	LH Idler Arm ASM
16	108-2741-01	1	RH Idler Arm ASM
17	51-4450	2	Screw-Leveler
18	68-9690	2	Fitting-Rod
19	51-4380	1	Spring-Torsion, LH
20	51-4370	1	Spring-Torsion, RH
21	3296-39	6	Nut-Lock, NI
31	3234-32	6	Screw-HHF
32	32128-23	6	Nut-HF

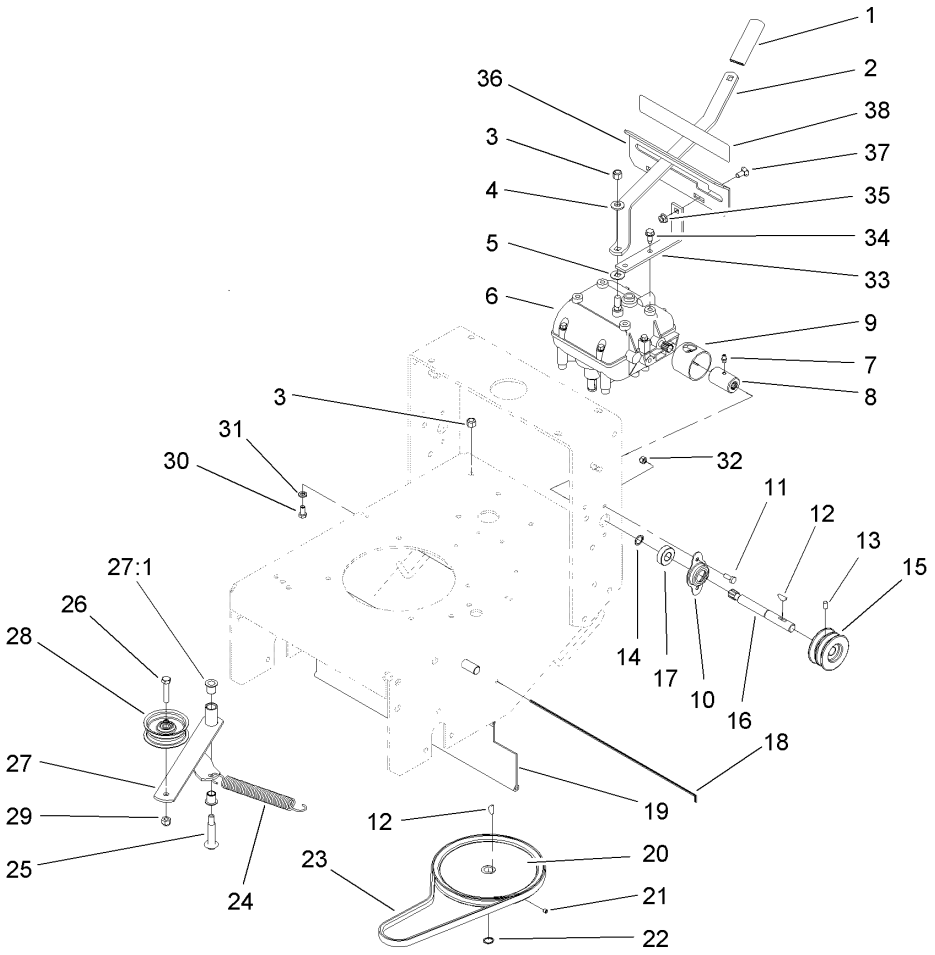

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	80-6610	1	Spring-Extension


Ref	Part No.	Qty.	Description
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI
33	1-323389-03	2	Bracket-Plate, Shift
34	9264964	4	Screw-HWH, Thread Cut
35	32128-20	2	Nut-HF
36	1-323387-03	1	Plate-Shift
37	3230-1	2	Bolt-CARR
38	98-3256	1	Decal-Speed, Ground

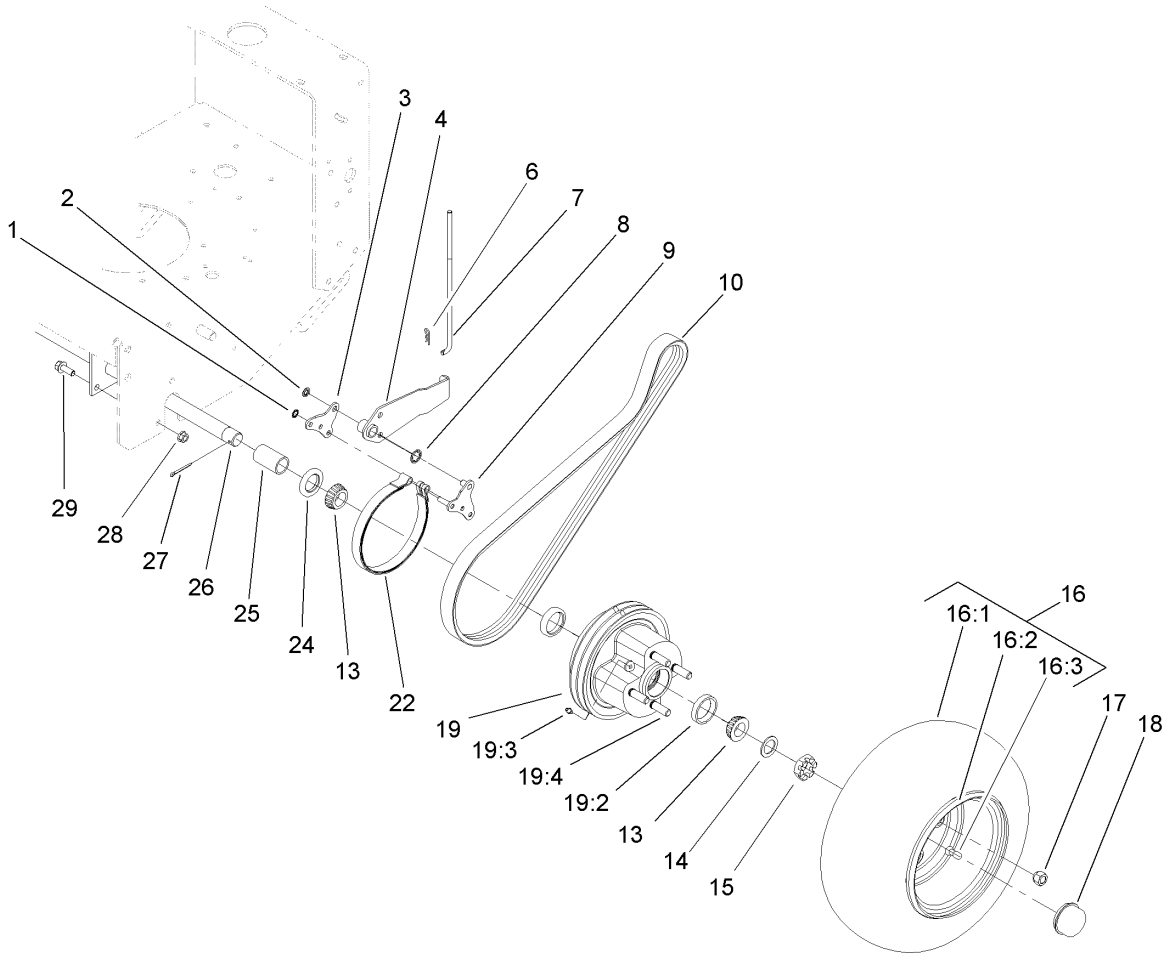

Wheel Drive and Brake Assembly


Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	106-8792	2	Plate-Link, Brake
4	110-5010-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	108-2730	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	110-5004	2	Belt-V, Banded
13	254-94	4	Bearing-Cone, Tapered
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	106-0892	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	106-0893	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	107-4090	2	Wheel Hub ASM
19:2	254-72	2	Bearing-Cup, Tapered
19:3	302-5	1	Fitting-Grease
19:4	10-6830	4	Stud-Type, Drive
22	1-323262	2	Band-Brake
24	1-543511	2	Seal-Grease

Ref	Part No.	Qty.	Description
25	110-5006	2	Spacer-Wheel
26	110-4983-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

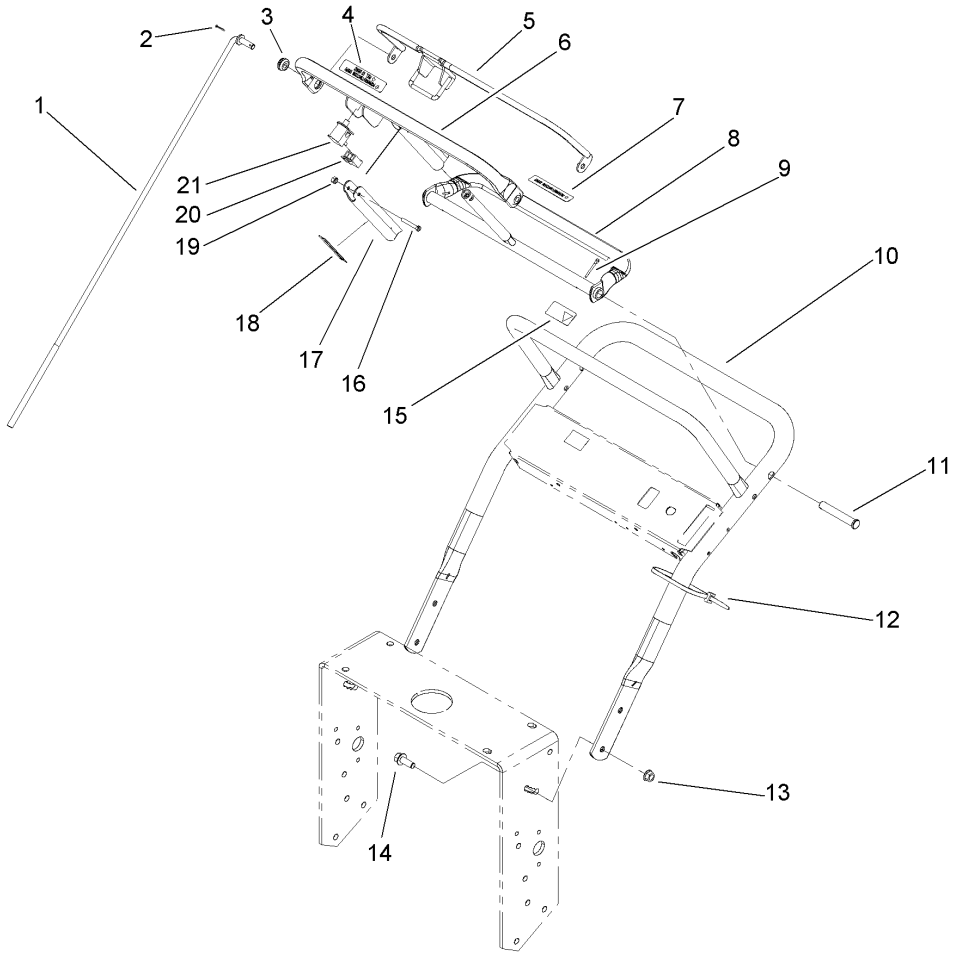


Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	105-4677	2	Rod-Control
2	3272-4	2	Pin-Cotter
3	237-141	2	Grommet-Rubber
4	82-2290	1	Decal
5	82-7680-03	1	Bail ASM
6	82-7690-03	1	Bar-Control
7	82-2280	1	Decal
8	106-5477-03	1	Control Pivot ASM
9	3272-11	2	Pin-Cotter
10	105-3158-03	1	Upper Handle ASM
11	283-55	2	Pin-Clevis
12	3290-378	2	Tie-Cable
13	32128-21	4	Nut-HF
14	3234-11	4	Screw-HHF
15	98-4387	1	Decal-Protection, Ear
16	32105-1	1	Screw-SHH
17	51-4850-03	1	Lever-Brake, Parking
18	52-2010	1	Decal-Lever, Parking
19	3296-2	1	Nut-Lock
20	218-595	1	Connector-Body
21	82-2190	1	Switch-Bail

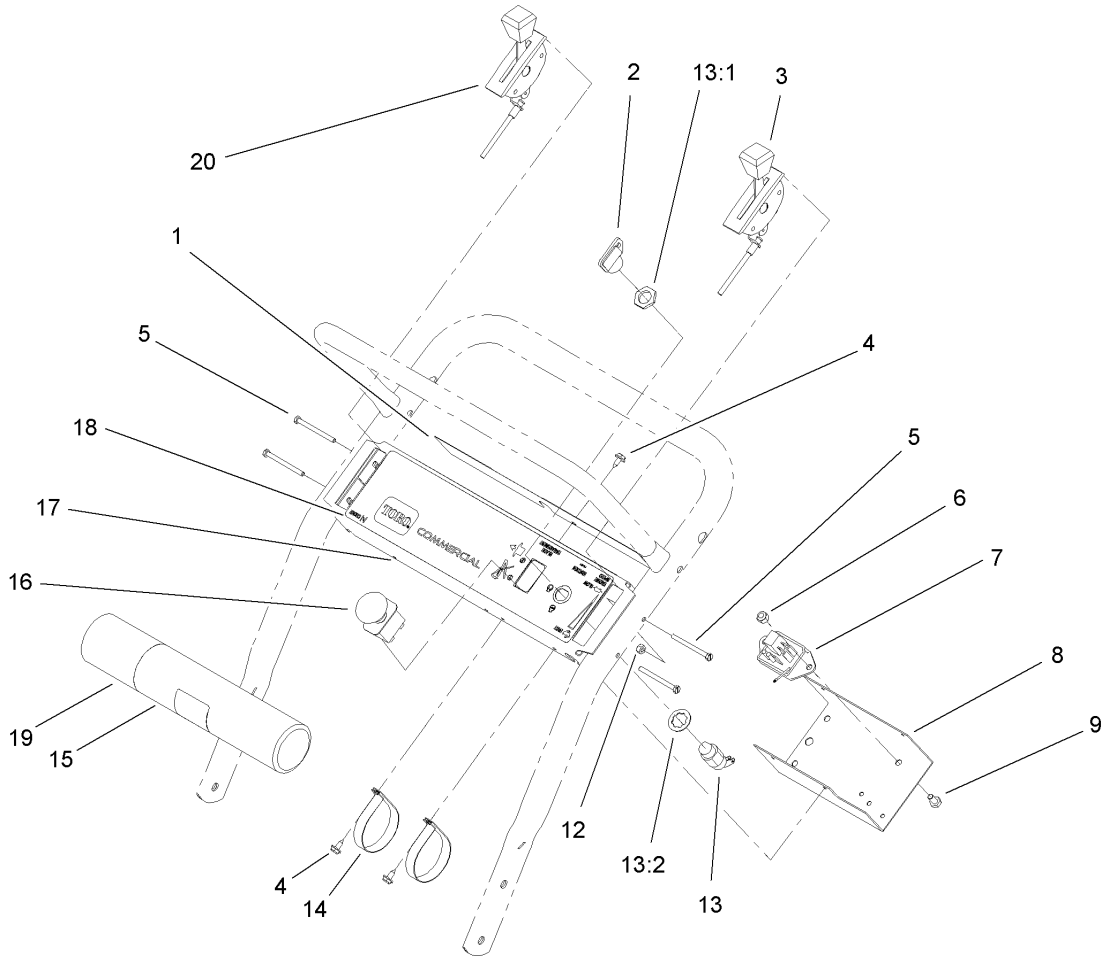

Control Panel Assembly


Ref	Part No.	Qty.	Description
1	105-0884	1	Decal-Danger
2	63-8360	1	Key-Ignition
3	110-4994	1	Cable-Throttle
4	32104-76	4	Screw
5	32105-14	4	Screw-SHH
6	3296-42	1	Nut-Lock, NI
7	104-8141	1	Module-Delay
8	93-1187-03	1	Panel-Bottom
9	321-2	1	Screw-HH
12	3296-2	4	Nut-Lock
13	29-5560	1	Switch-On / Off
13:1	218-461	1	Nut-HH
13:2	3254-5	1	Washer-Tooth
14	2412-120	2	R-Clamp
15	104-7050	1	Housing-Manual
16	104-8140	1	Switch-PTO
17	110-4982-03	1	Panel-Control
18	110-4971	1	Decal-Control Panel
19	104-7048	1	Cap-Housing
20	110-4995	1	Cable-Choke

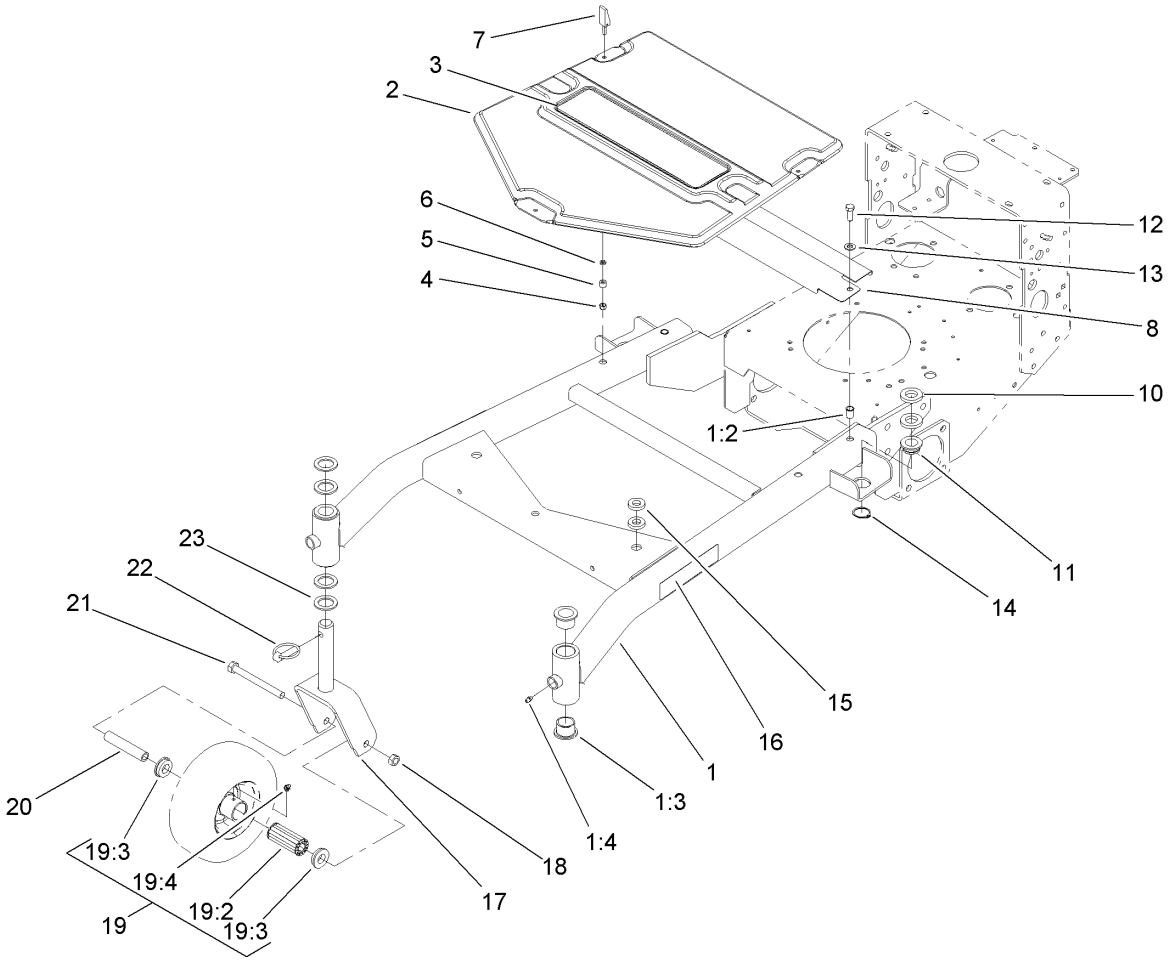

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	110-6965	1	Carrier Frame ASM
1:2	32148-9	2	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	110-6985	1	Cover-Frame, Carrier
3	110-6919	1	Decal
4	1-804254	3	Nut
5	106-6778	3	Bushing-Latch, Swell
6	99-3058	3	Washer
7	106-6777	3	Handle-Latch, Swell
8	110-6971-01	1	Shield-Belt
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	323-6	2	Screw-HH
13	3256-24	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	1-323539	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	110-5024	2	Wheel And Tire ASM
19:2	112-7066	1	Bearing-Roller
19:3	1-513810	2	Bushing
19:4	302-61	1	Zerk


Ref	Part No.	Qty.	Description
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust

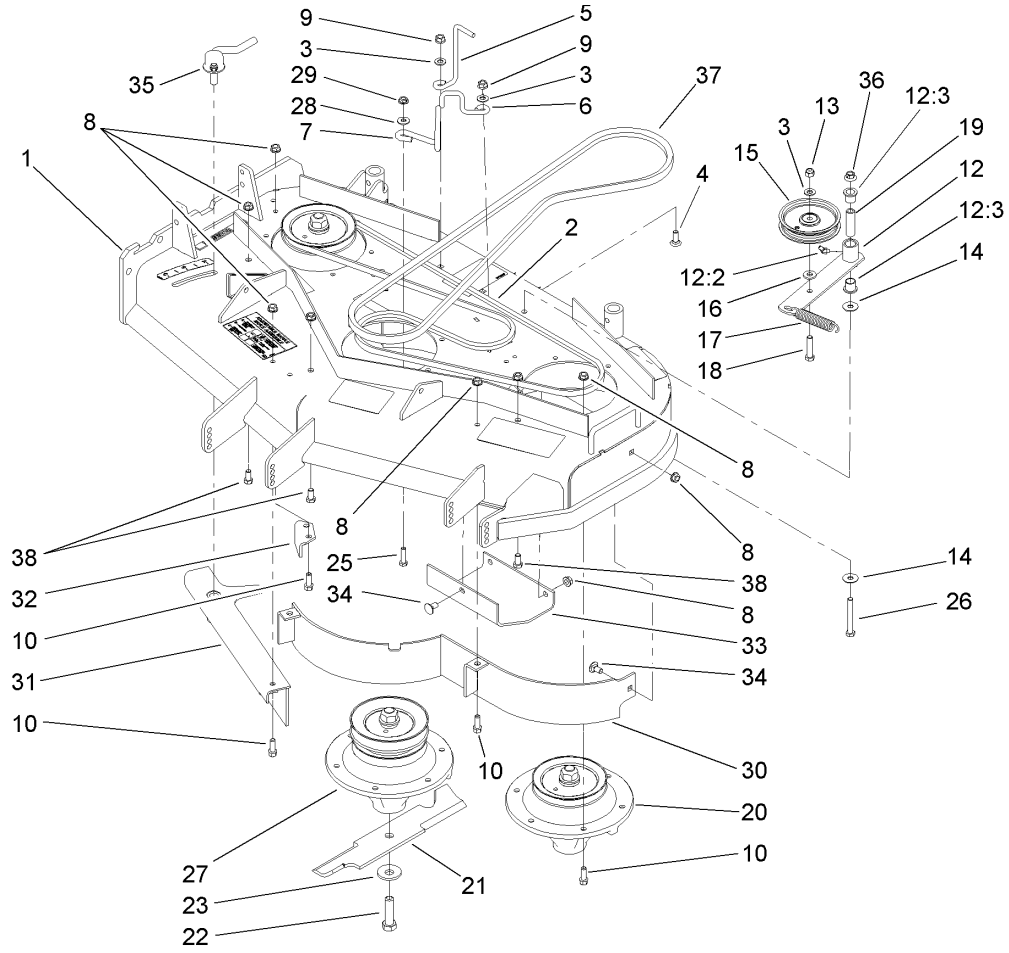

Deck Drive and Baffle Assembly


Ref	Part No.	Qty.	Description
1	112-7081	1	Deck ASM
2	110-6972	1	Belt-V
3	3256-24	3	Washer-Flat
4	3231-22	2	Screw-CARR
5	98-5980	1	Guide-Belt
6	110-6975	1	Guide-Belt
7	105-0850	1	Guide-Belt
8	3290-357	29	Nut-HHF, Whiz
9	32128-21	2	Nut-HF
10	92-1624	22	Screw
12	108-2728	1	Idler Arm ASM
12:2	302-11	1	Fitting-Lube, 45 DEG
12:3	256-90	2	Bushing-Flange
13	3296-39	1	Nut-Lock, NI
14	52-2860	2	Washer
15	93-1622	1	Pulley-Idler
16	9202414	1	Washer-Spacer
17	51-3650	1	Spring-Extension
18	323-9	1	Screw-HH
19	112-7091	1	Spacer
20	110-0728	2	Spindle ASM
21	108-4081-03	3	Blade-14 Inch (High Sail)
22	51-4060	3	Screw-Blade
23	103-0865	3	Washer-Blade Bolt, Heavy

Ref	Part No.	Qty.	Description
25	322-6	1	Screw-HH
26	323-14	1	Screw-HH
27	110-6927	1	Spindle ASM
28	3256-3	1	Washer-Flat
29	32128-13	1	Nut-HF
30	110-6910-03	1	Baffle ASM
31	110-6940-03	1	Adjust Baffle ASM
32	108-7273-01	1	Baffle-Discharge
33	108-7282-01	1	Plate-Skid
34	3231-1	4	Screw-CARR
35	107-1664	1	Lever ASM
36	32128-19	1	Nut-HF
37	110-6973	1	Belt-V
38	323-4	3	Screw-HH

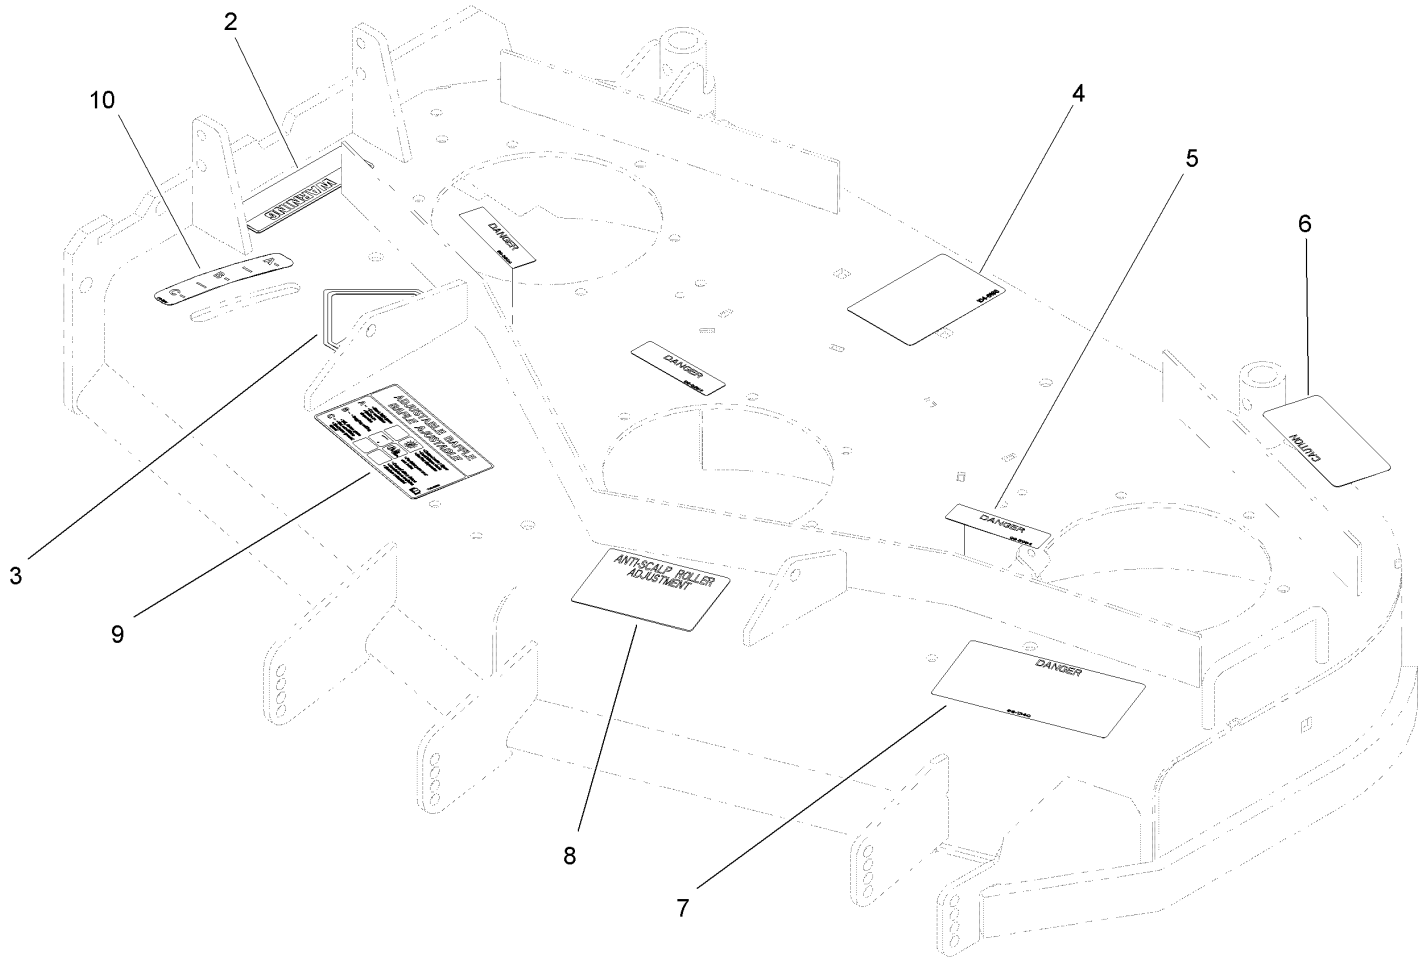


Deck Assembly No. 112-7081

Ref	Part No.	Qty.	Description
2	104-8569	1	Decal-Warning
3	43-8480	1	Decal-Danger
4	104-8186	1	Decal-Routing, Belt
5	98-5954	3	Decal-Cover, Missing
6	68-8340	1	Decal-Torque
7	66-1340	1	Decal-Danger
8	105-7798	1	Decal-Scalp, Anti
9	110-2068	1	Decal-Adjustment, Baffle
10	110-2067	1	Decal-Setting, Baffle

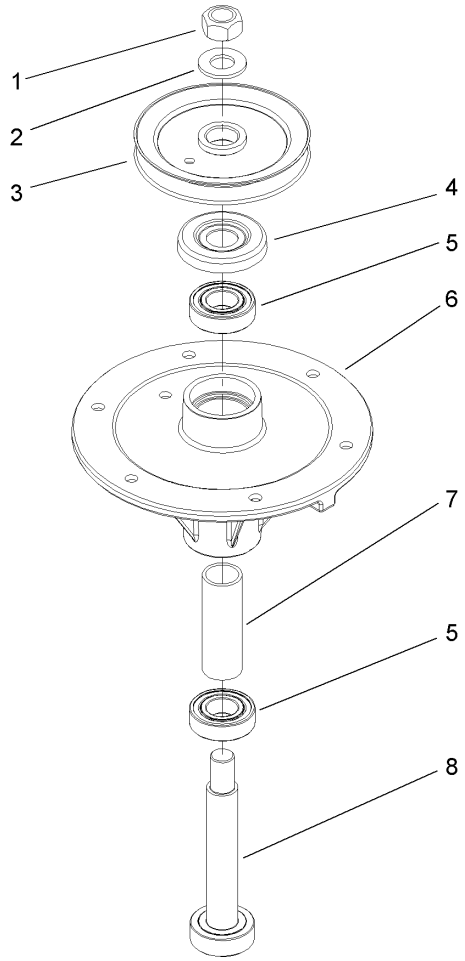


Spindle Assembly No. 110-0728

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0726	1	Shaft-Spindle

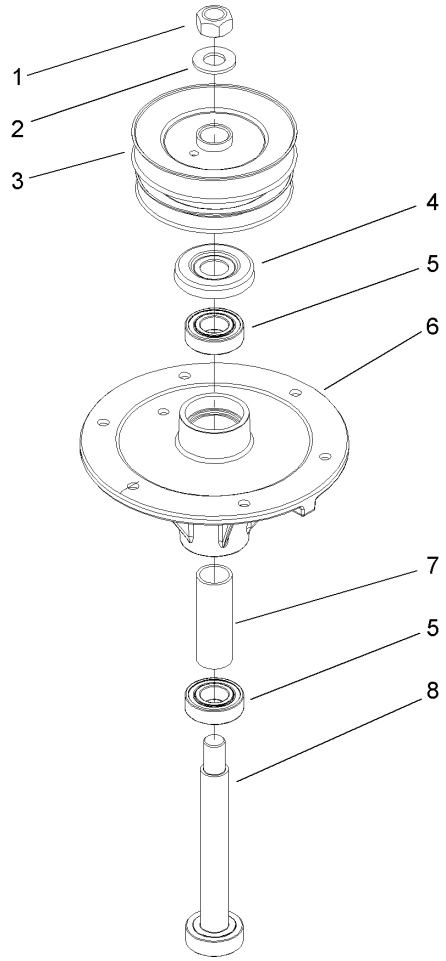


Spindle Assembly No. 110-6927

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	110-6928	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	108-6696	1	Housing-Spindle
7	110-0727	1	Spacer-Bearing
8	110-0725	1	Shaft-Spindle

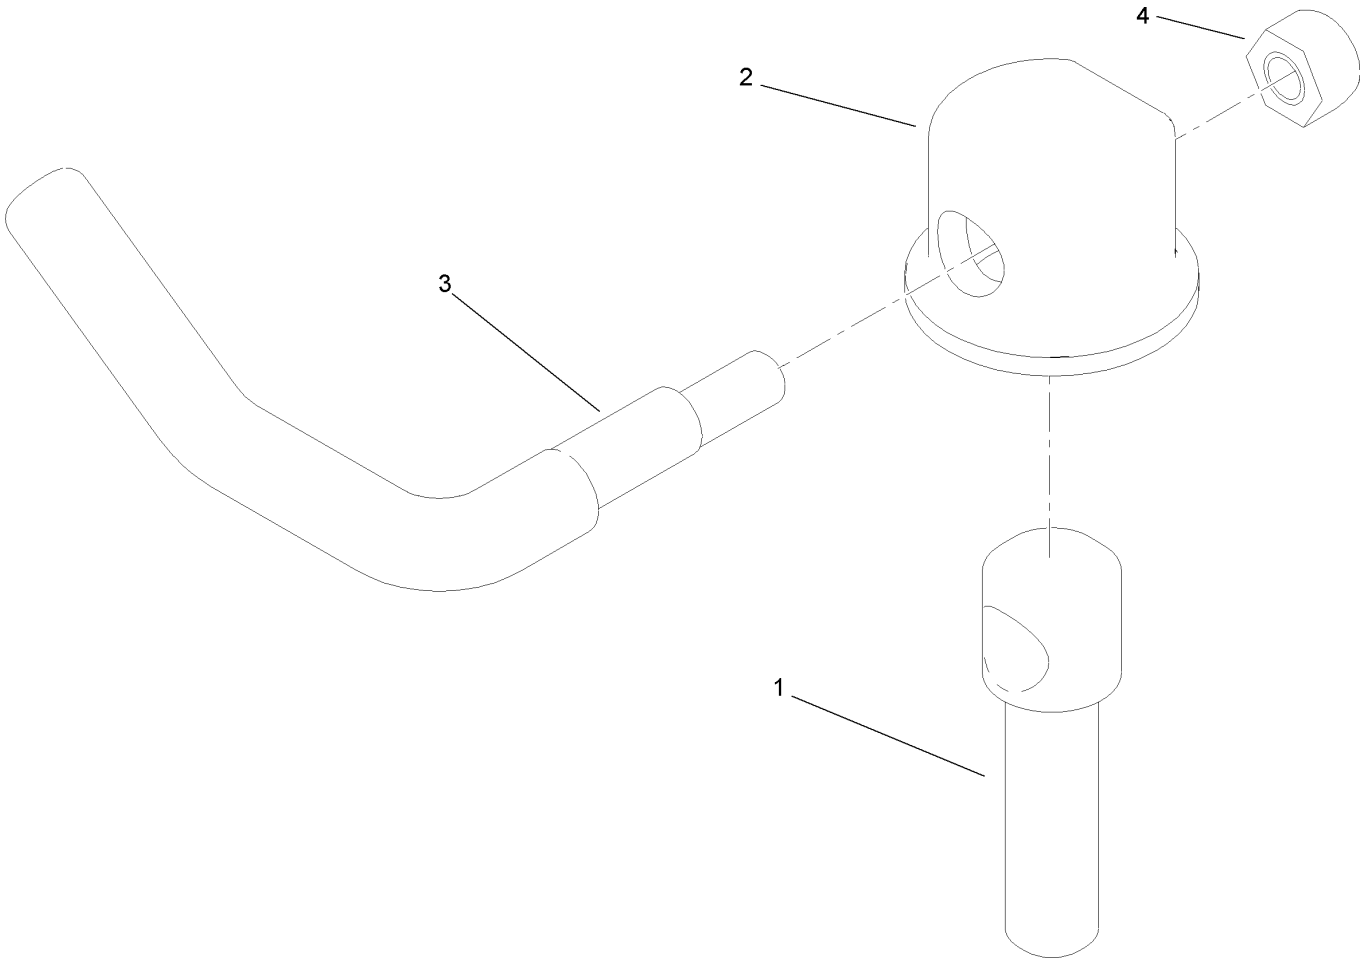

Lever Assembly No. 107-1664


Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

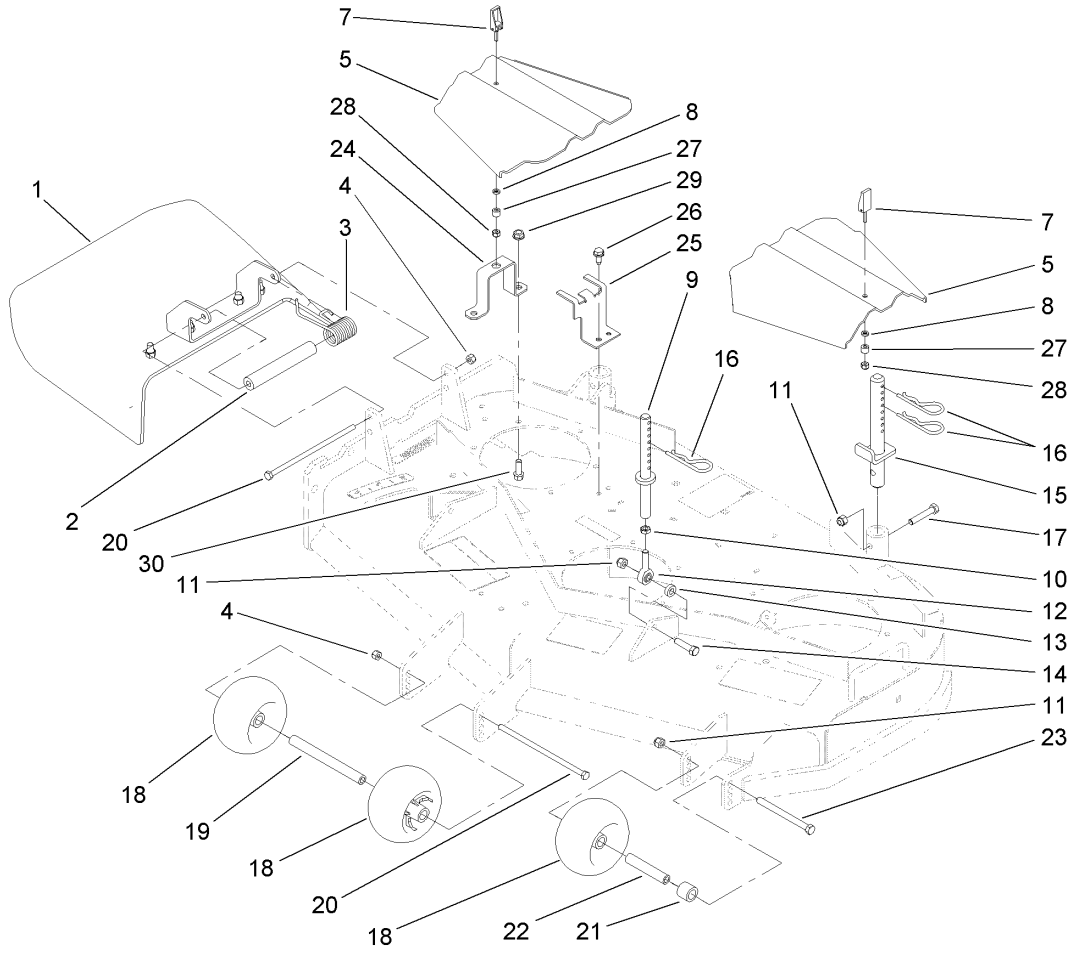

Deck Assembly


Ref	Part No.	Qty.	Description
1	110-0790	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	2	Nut-Lock, NI
5	110-6984	2	Cover-Belt
7	106-6777	2	Handle-Latch, Swell
8	99-3058	2	Washer
9	108-2674	2	Front Pin ASM
10	3220-3	2	Nut-HJ
11	3296-39	5	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer
14	323-8	2	Screw-HH
15	110-2086	2	Rear Pin ASM
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	1-603299	3	Roller-Scalp, Anti
19	98-5967	1	Spacer-Wheel
20	322-50	2	Screw-HH
21	98-7913	1	Tube-Spacer
22	98-7912	1	Tube-Spanner
23	323-23	1	Screw-HH
24	112-7053-01	2	Bracket-Cover
25	112-7054-01	2	Bracket-Cover

Ref	Part No.	Qty.	Description
26	32144-70	2	Screw-HWHTF
27	106-6778	2	Bushing-Latch, Swell
28	1-804254	2	Nut
29	3290-357	4	Nut-HHF, Whiz
30	92-1624	4	Screw

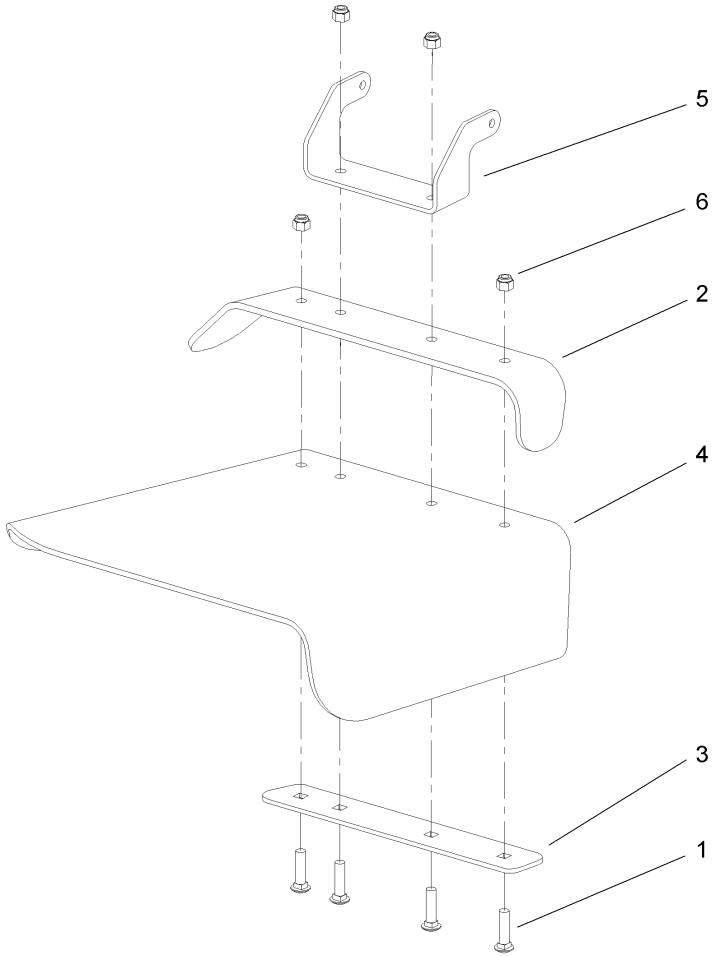


Deflector Assembly No. 110-0790

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI

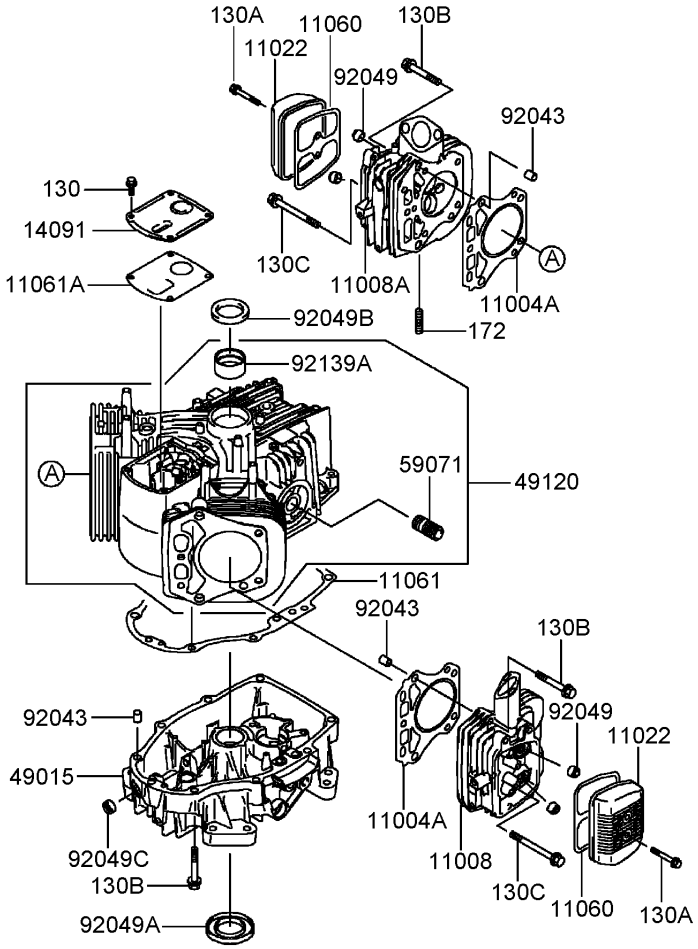


Cylinder and Crankcase Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸11004A	11004-7018	2	Gasket-Head
❸11008	11008-7021	1	Head-Cylinder, No. 2
❸11008A	11008-7022	1	Head-Cylinder, No. 1
❸11022	11022-7003	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Case, Rocker
❸11061	11061-7007	1	Gasket-Cover, Crankcase
❸11061A	11061-7008	1	Gasket-Breather
❸14091	14091-7007	1	Cover
❸49015	49015-7032	1	Cover-Crankcase
❸49120	49120-7015	1	Crankcase
❸59071	59071-2079	1	Joint
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❸92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❸92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❸92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❸92139A	92139-7008	1	Bushing
❸130	130B0612	4	Bolt-Flanged (6X12)
❸130A	130B0640	4	Bolt-Flanged (6X40)
❸130B	130T0850	17	Bolt-Flanged (8X50)
❸130C	130T0875	2	Bolt-Flanged (8X75)
❸172	172G0818	4	Bolt-Stud (8X18)

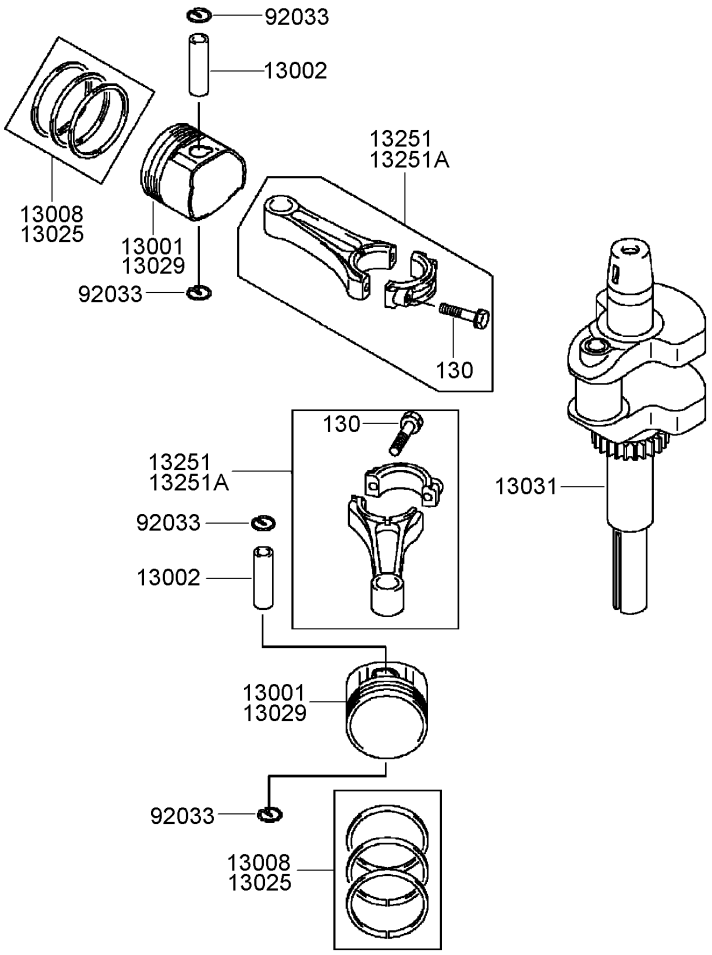


Piston and Crankshaft Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸13001	13001-7009	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-7001	2	Ring Set-Piston
❸13025	13025-7003	1	Ring Set-Piston (L 0.50)
❸13029	13029-7005	1	Piston-Engine (L 0.50)
❸13031	13031-7033	1	Crankshaft
❸13251	13251-7007	2	Connecting Rod ASM
❸13251A	13251-7008	2	Connecting Rod ASM (0.50)
❸92033	92033-7005	4	Ring-Snap
❸130	130G0630	4	Bolt-Flanged (6X30)

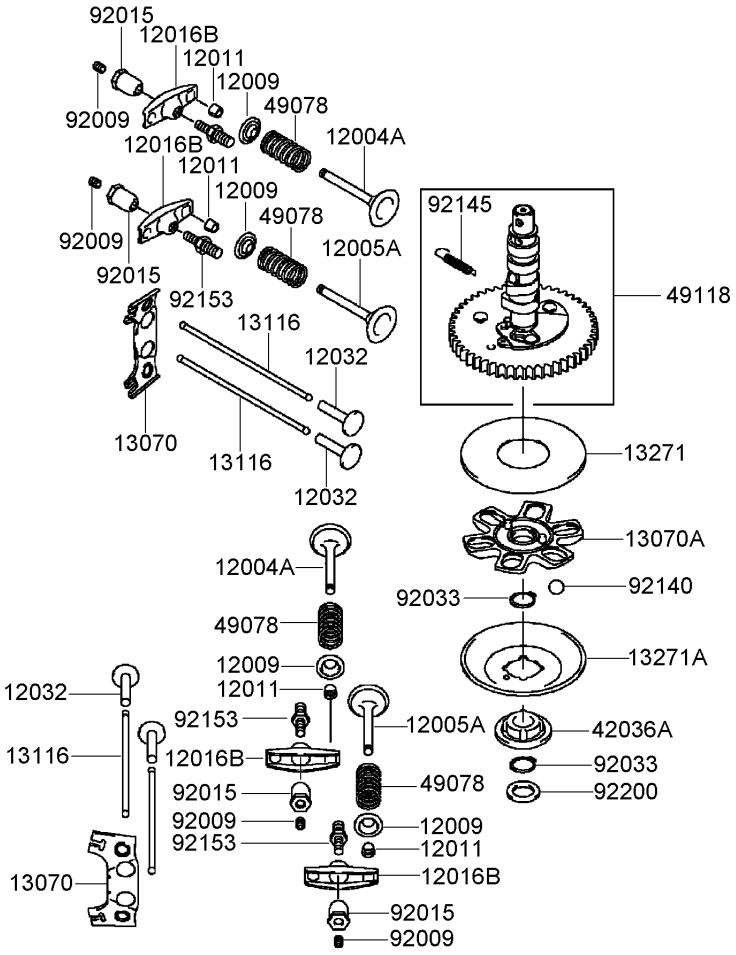


Valve and Camshaft Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸12004A	12004-7005	2	Valve-Intake
❸12005A	12005-7006	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12011	12011-2056	8	Collet
❸12016B	12016-7008	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036A	42036-7010	1	Sleeve
❸49078	49078-7001	4	Spring-Valve, Engine
❸49118	49118-7009	1	Camshaft
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7002	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer

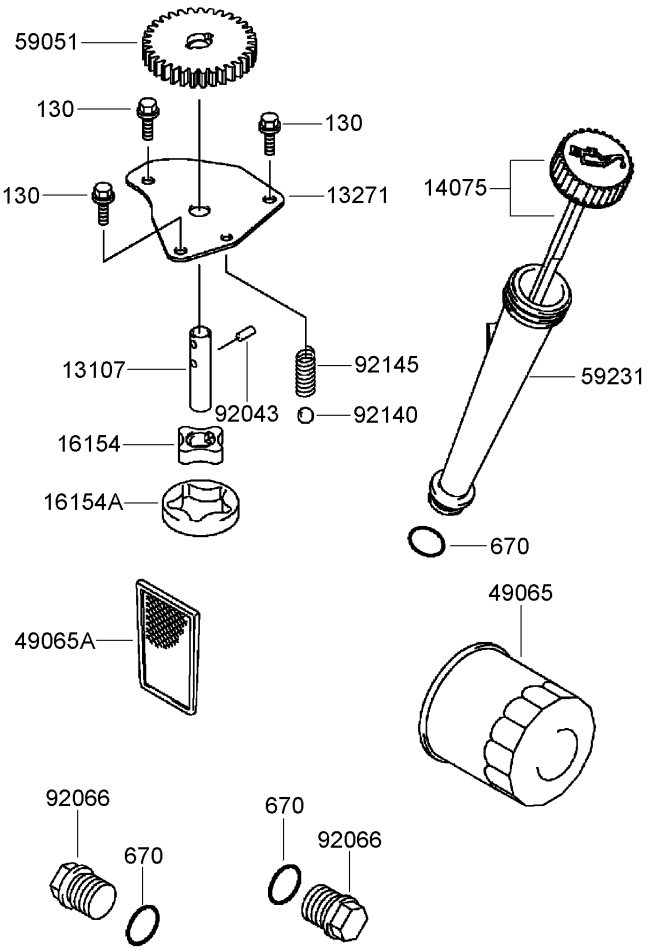


Lubrication Equipment Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump (In)
❸16154A	16154-2054	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7003	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring
❸130	130B0612	3	Bolt-Flanged (6X12)
❸670	670D2016	3	O-Ring (16Mm)

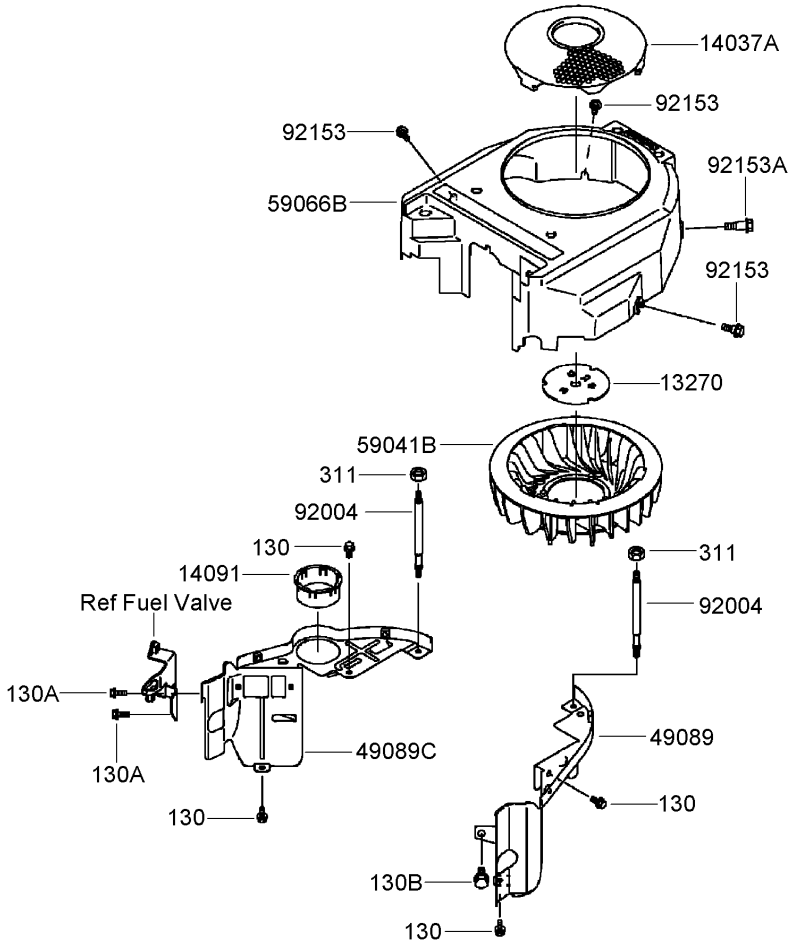


Cooling Equipment Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸13270	13270-7007	1	Plate
❸14037A	14037-7025-9H	1	Screen
❸14091	14091-7009	1	Cover
❸49089	49089-7044	1	Shroud-Engine
❸49089C	49089-7061	1	Shroud-Engine
❸59041B	59041-7012	1	Fan
❸59066B	59066-7036	1	Housing-Fan
❸92004	92004-7007	2	Stud
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt
❸130	130B0612	4	Bolt-Flanged (6X12)
❸130A	130B0616	2	Bolt-Flanged (6X16)
❸130B	130B0816	1	Bolt-Flanged (8X16)
❸311	311F0600	2	Nut-Hex (6Mm)

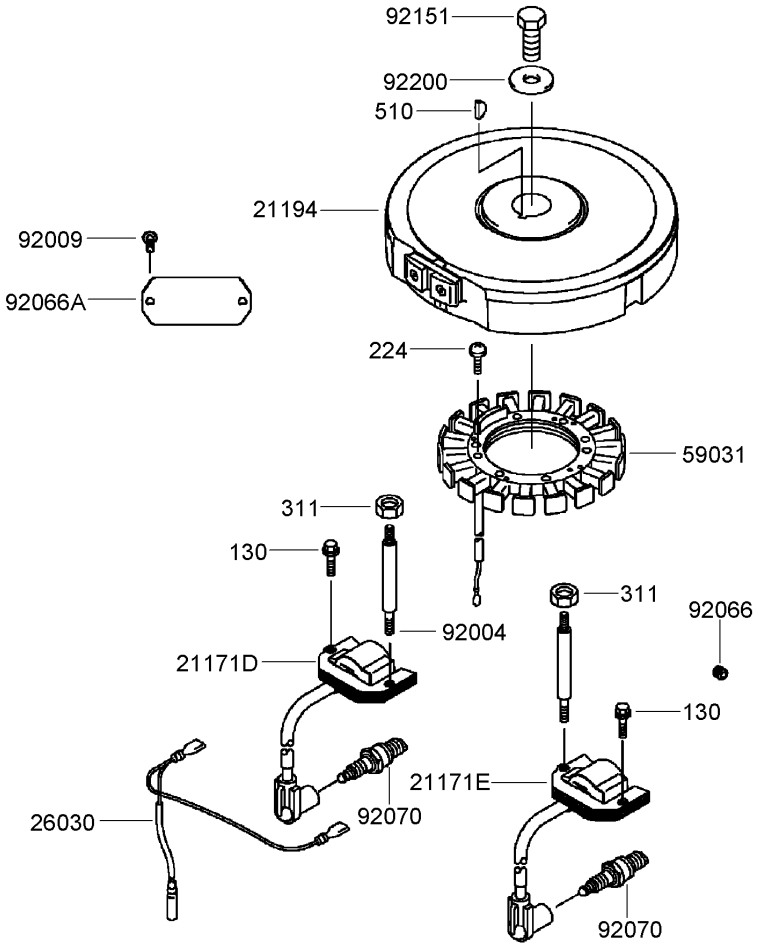


Electric Equipment Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸21171D	21171-7026	1	Ignition Coil ASM
❸21171E	21171-7027	1	Ignition Coil ASM
❸21194	21194-7012	1	Flywheel
❸26030	26030-7001	1	Harness
❸59031	59031-7002	1	Coil-Charging
❸92004	92004-7008	2	Stud
❸92009	92009-2308	2	Screw
❸92066	92066-7002	1	Plug
❸92066A	92066-7005	1	Plug
❸92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
❸92151	92151-2097	1	Bolt (12X30)
❸92200	92200-7002	1	Washer
❸130	130B0620	2	Bolt-Flanged (6X20)
❸224	224B0520	4	Screw-Pan (5X20)
❸311	311F0600	2	Nut-Hex (6Mm)
❸510	510A5100	1	Key-Woodruff

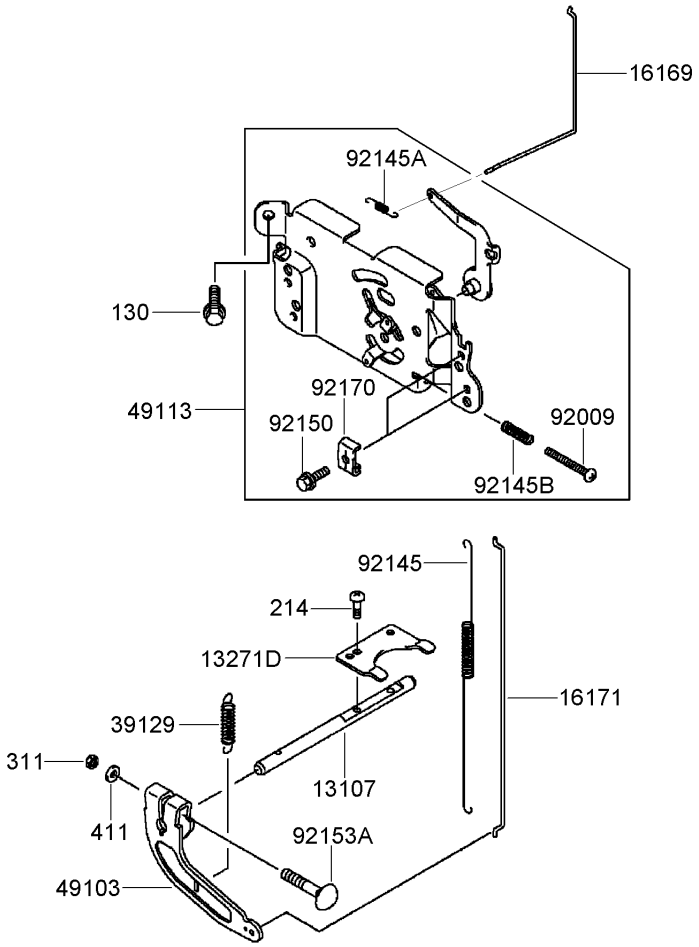

Control Equipment Assembly
Kawasaki FH430V-DS28


Ref	Part No.	Qty.	Description
❸13107	13107-7010	1	Shaft
❸13271D	13271-7032	1	Plate
❸16169	16169-7012	1	Link-Choke
❸16171	16171-7007	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113	49113-7024	1	Panel-Control
❸92009	92009-7007	1	Screw (4X35)
❸92145	92145-7003	1	Spring
❸92145A	92145-7004	1	Spring
❸92145B	92145-7005	1	Spring
❸92150	92150-2182	1	Bolt (5X18)
❸92153A	92153-7033	1	Bolt (6X35)
❸92170	92170-7001	1	Clamp
❸130	130B0612	2	Bolt-Flanged (6X12)
❸214	214B0408	2	Screw-Pan (4X8)
❸311	311B0600	1	Nut-Hex (6Mm)
❸411	411B0600	1	Washer-Plain (6Mm)

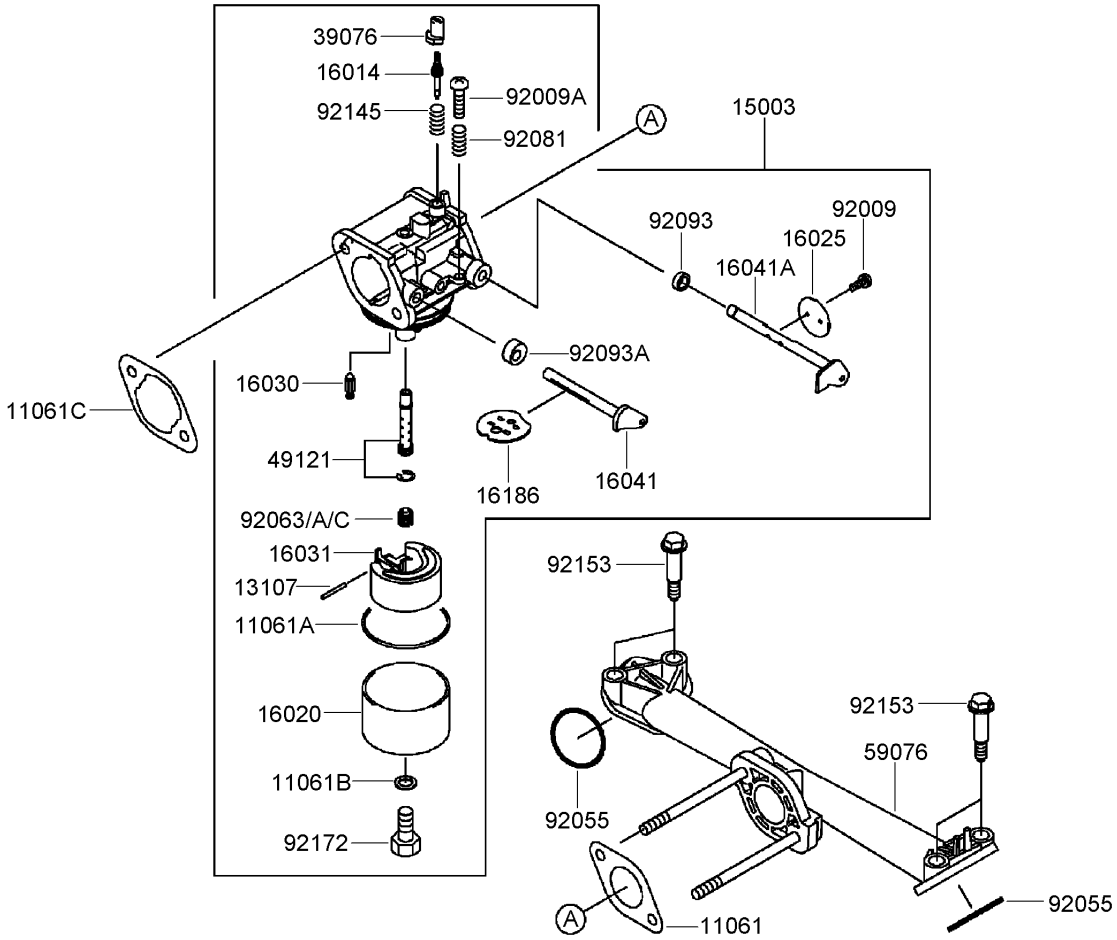

Carburetor Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸11061	11061-7004	1	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Cleaner, Air
❸13107	13107-7018	1	Shaft
❸15003	15003-7061	1	Carburetor ASM
❸16014	16014-7002	1	Screw-Pilot, Air
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Choke, Carburetor
❸16041A	16041-7018	1	Shaft-Throttle, Carburetor
❸16186	16186-7002	1	Choke Valve ASM
❸39076	39076-7001	1	Limiter
❸49121	49121-7001	1	Nozzle-Main
❸59076	59076-7005	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92055	92055-7007	2	O-Ring (I D 31)
❸92063	92063-7026	1	Jet-Main, No. 88
❸92063A	92063-7028	1	Jet-Main, No. 85
❸92063C	92063-7029	1	Jet-Main, No. 82
❸92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸92153	92153-7009	4	Bolt
❸92172	92172-7002	1	Screw

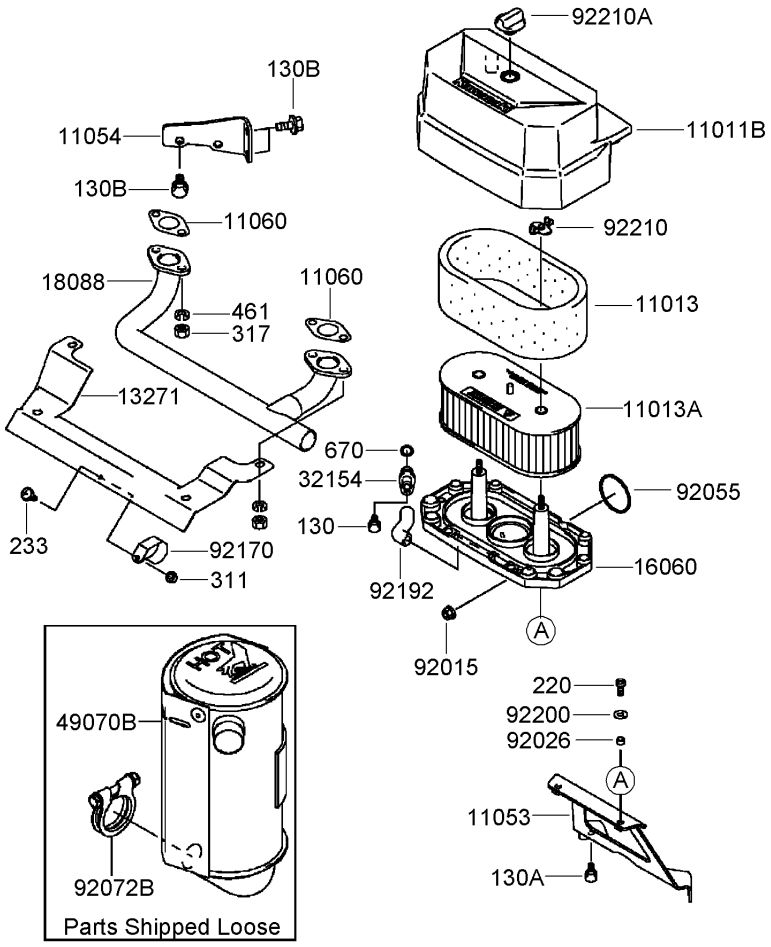

Air Filter and Muffler Assembly
Kawasaki FH430V-DS28


Ref	Part No.	Qty.	Description
❸11011B	11011-7045	1	Case-Filter, Air
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11053	11053-7022	1	Bracket
❸11054	11054-7002-9H	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13271	13271-7022	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18088	18088-7001	1	Pipe-Exhaust
❸32154	32154-7006	1	Pipe
❸49070B	49070-7021	1	Muffler
❸92015	92015-1193	2	Nut
❸92026	92026-7001	2	Spacer (6.2X7.9X5)
❸92055	92055-7015	1	O-Ring
❸92072B	92072-7012	1	Band
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92200	92200-2070	2	Washer
❸92210	92210-7004	2	Nut
❸92210A	92210-7019	1	Nut
❸130	130B0610	1	Bolt-Flanged (6X10)
❸130A	130B0612	2	Bolt-Flanged (6X12)
❸130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
❸220	220B0614	2	Screw-Pan, Cross (6X14)
❸233	233B0416	1	Screw (4X16)
❸311	311B0400	1	Nut-Hex (4Mm)
❸317	317R0800	4	Nut-Hex, Small (8Mm)
❸461	461F0800	4	Washer-Spring (8Mm)
❸670	670B2010	1	O-Ring (10Mm)

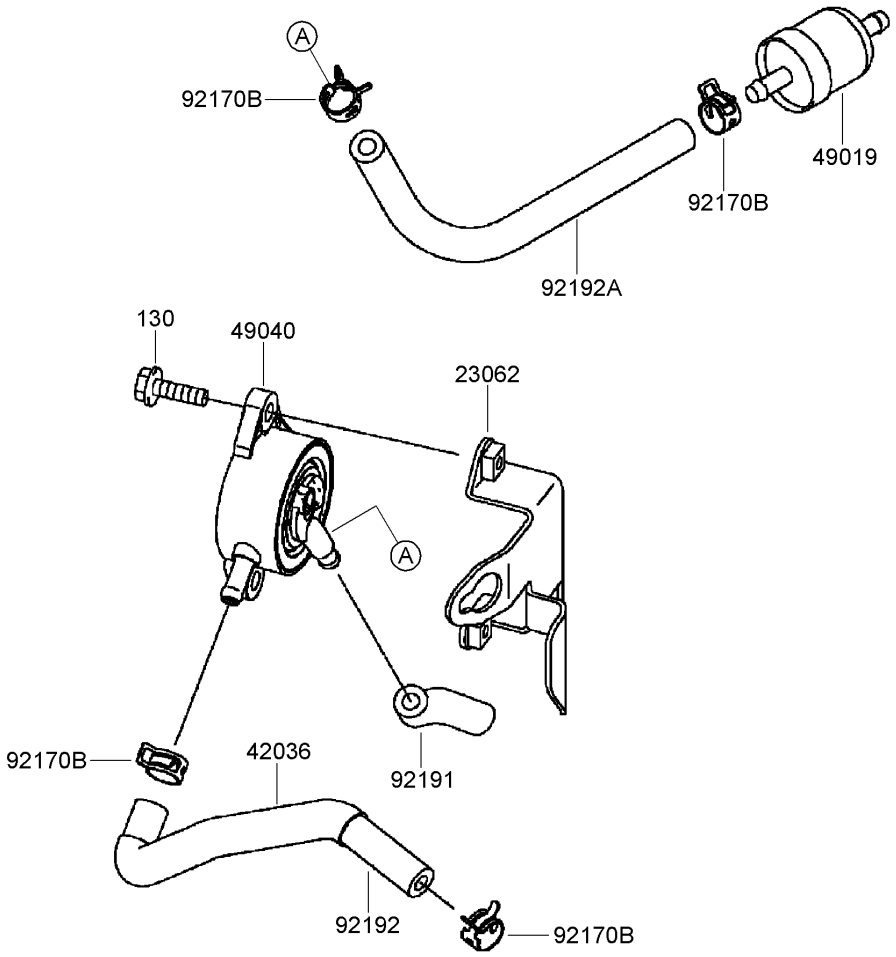

Fuel Tank and Valve Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸23062	23062-7004-9H	1	Bracket
❸42036	42036-7012	1	Sleeve
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170B	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92192	92192-7035	1	Tube (6.35X12.7X170)
❸92192A	92192-7037	1	Tube (6.35X12.7X160)
❸130	130B0620	2	Bolt-Flanged (6X20)

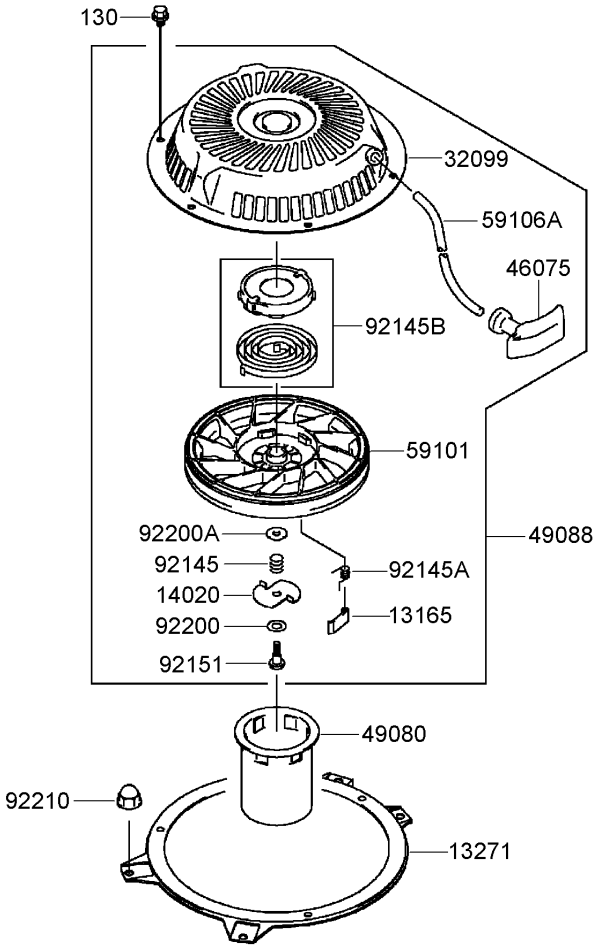

Starter Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸13165	13165-7001	2	Pawl-Starter, Recoil
❸13271	13271-7003-9H	1	Plate
❸14020	14020-7001	1	Retainer
❸32099	32099-7002	1	Case-Starter, Recoil
❸46075	46075-7001	1	Grip-Starter, Recoil
❸49080	49080-7001	1	Pulley-Starting
❸49088	49088-7013	1	Starter-Recoil
❸59101	59101-7001	1	Reel-Starter, Recoil
❸59106A	59106-7005	1	Rope
❸92145	92145-7006	1	Spring
❸92145A	92145-7007	2	Spring
❸92145B	92145-7008	1	Spring
❸92151	92151-7008	1	Bolt
❸92200	92200-7004	1	Washer
❸92200A	92200-7005	1	Washer
❸92210	92210-0003	4	Nut
❸130	130B0608	3	Bolt-Flanged (6X8)

56033



56070



56080



56080A



Label Assembly
Kawasaki FH430V-DS28

Ref	Part No.	Qty.	Description
❸56033	56033-7001	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56080	56080-2077	1	Label-Brand
❸56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 39096 - Commercial Walk-Behind Mower, Floating Deck, T-Bar, Gear Drive with 40in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Rotary, 14 Inch (Recycling)	108-4089-03
Blade-Rotary, 14 Inch (Mid Flow)	108-4110-03
Blade-Rotary, 14 Inch (Low Flow)	108-4111-03
Blade-Rotary, 14 Inch (Atomic)	108-4112-03
40 Inch Bagger Enhancement Kit	110-2025
40 Inch Recycler Kit	110-2070
Plate Kit	110-6902
Weight-Cast	112-7059-01
Weight Kit	112-9971
Blade-Recycler, 14 Inch (6-pack)	114-4961
Blade-Low Flow, 14inch (6-pack)	114-4962
Blade-Mid Flow, 14 Inch (6-pack)	114-4963
Blade-High Flow, 14 Inch (6-pack)	114-4964
Blade-Atomic, 14 Inch (6-pack)	114-4965
Soft Bag (3 Bushel)	30104
Tru Trak Sulky	30110


TORO®