Form Number 3360-266 Rev A

Commercial Walk-Behind Mower

Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Model No. 39682 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel Tank Assembly	3
Transmission Drive Assembly	4
Drive Wheel and Brake Assembly	6
Handle and Control Assembly	8
Handle Assembly No. 110-6906	10
Deck and Shield Assembly	11
Deck Assembly No. 110-6901	12
Deflector Assembly No. 107-4140	13
Idler Arm and Caster Wheel Assembly	14
Spindle and Blade Assembly	16
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	17
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	18
Valve and Camshaft Assembly Kawasaki FH430V-CS25	19
Lubrication Equipment Assembly Kawasaki FH430V-CS25	20
Cooling Equipment Assembly Kawasaki FH430V-CS25	21
Electric Equipment Assembly Kawasaki FH430V-CS25	22
Control Equipment Assembly Kawasaki FH430V-CS25	23
Carburetor Assembly Kawasaki FH430V-CS25	24
Air Filter and Muffler Assembly Kawasaki FH430V-CS25	25
Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	26
Starter Assembly Kawasaki FH430V-CS25	27
Label Assembly Kawasaki FH430V-CS25	28
Attachments and Accessories List	29


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Optional Equipment
❹ Obtain parts from Peerless Transmissions (model 700-070A)
❺ Obtain from your local Kawasaki dealer

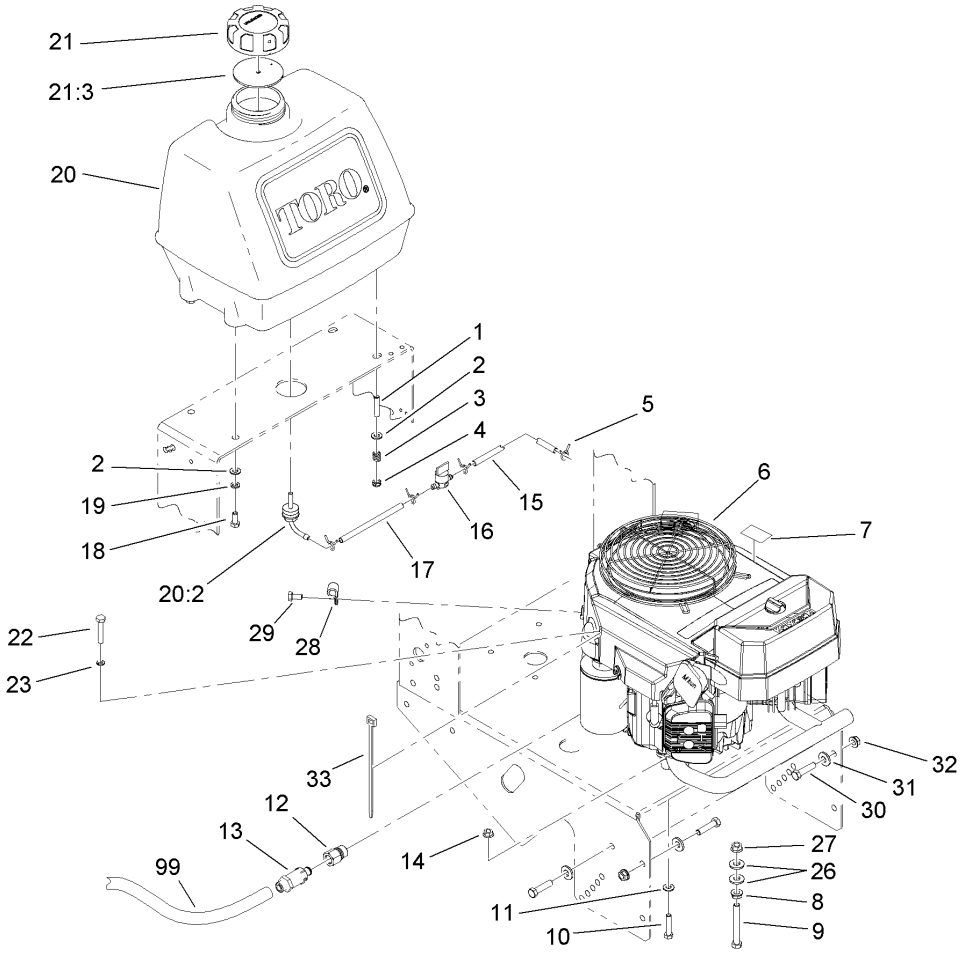

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❷❺6		1	Engine-Kawasaki, FH430V-Cs25
7	106-0699	1	Decal-Warning
8	3290-357	1	Nut-HHF, Whiz
9	323-14	1	Screw-HH
10	322-7	4	Screw-HH
11	1-303334	4	Washer-Spring
12	103-1966	1	Adapter
13	92-6877	1	Valve-Drain, Oil
14	32128-20	4	Nut-HF
15	109-0293	1	Hose-Fuel
16	1-603770	1	Valve-Fuel
17	109-0306	1	Hose-Fuel
18	322-3	2	Screw-HH
19	1-805005	2	Washer-Lock
20	106-0730	1	Fuel Tank ASM
20:2	103-2605	1	Fitting-Fuel, Bulkhead
21	88-3980	1	Gas Cap ASM
21:3	88-4010	1	Gasket-Cap, Gas
22	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
23	1-805004	1	Washer-Lock
26	98-5975	2	Washer-Belleville
27	32128-21	1	Nut-HF
28	1-413510	1	Clip-Loom
29	33114-016	1	Screw-HH
30	323-8	8	Screw-HH
31	98-5975	8	Washer-Belleville
32	3290-357	8	Nut-HHF, Whiz
33	1-303335	1	Tie-Plastic
99	103-1964	1	Hose-Drain, Oil

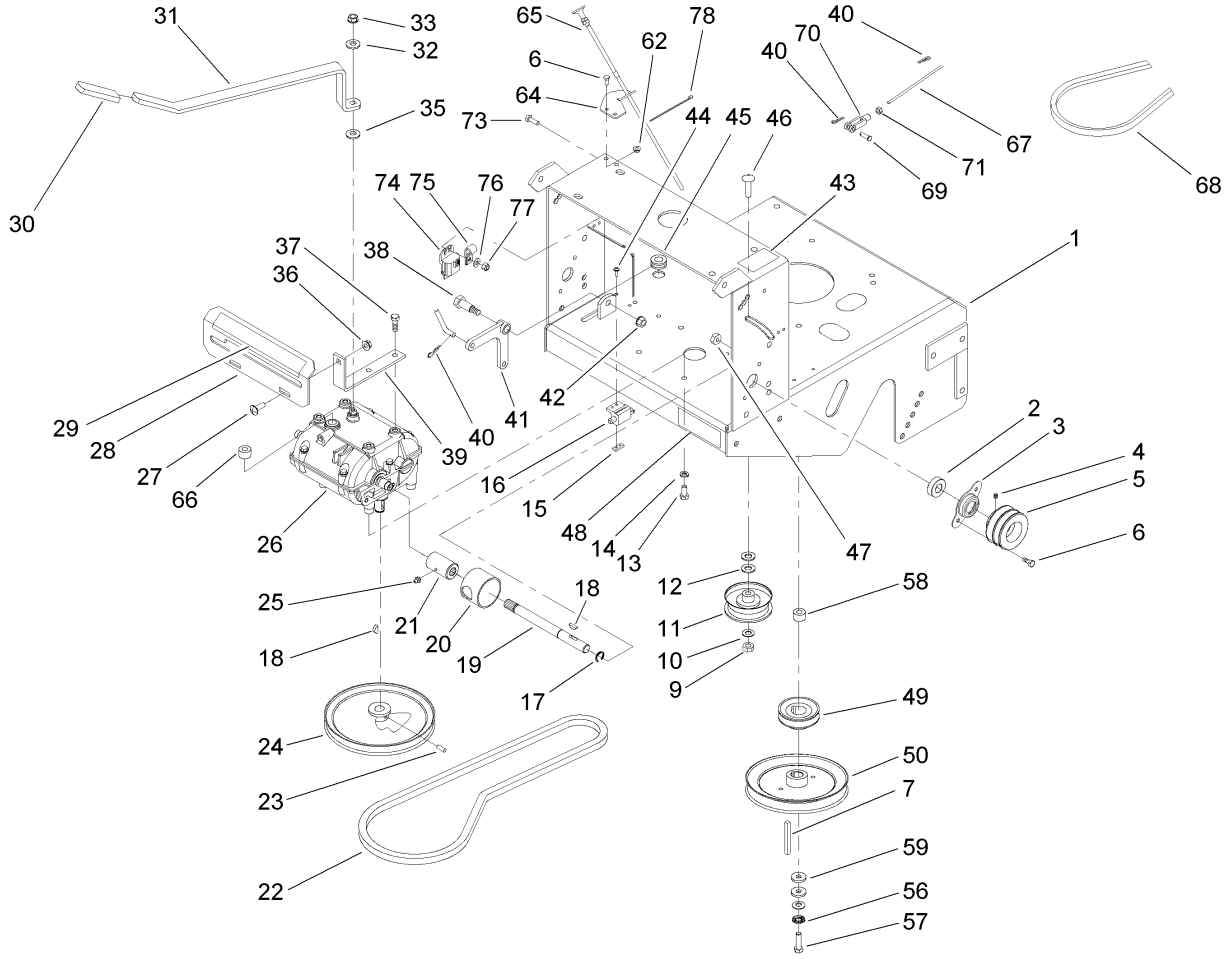

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
❹26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave

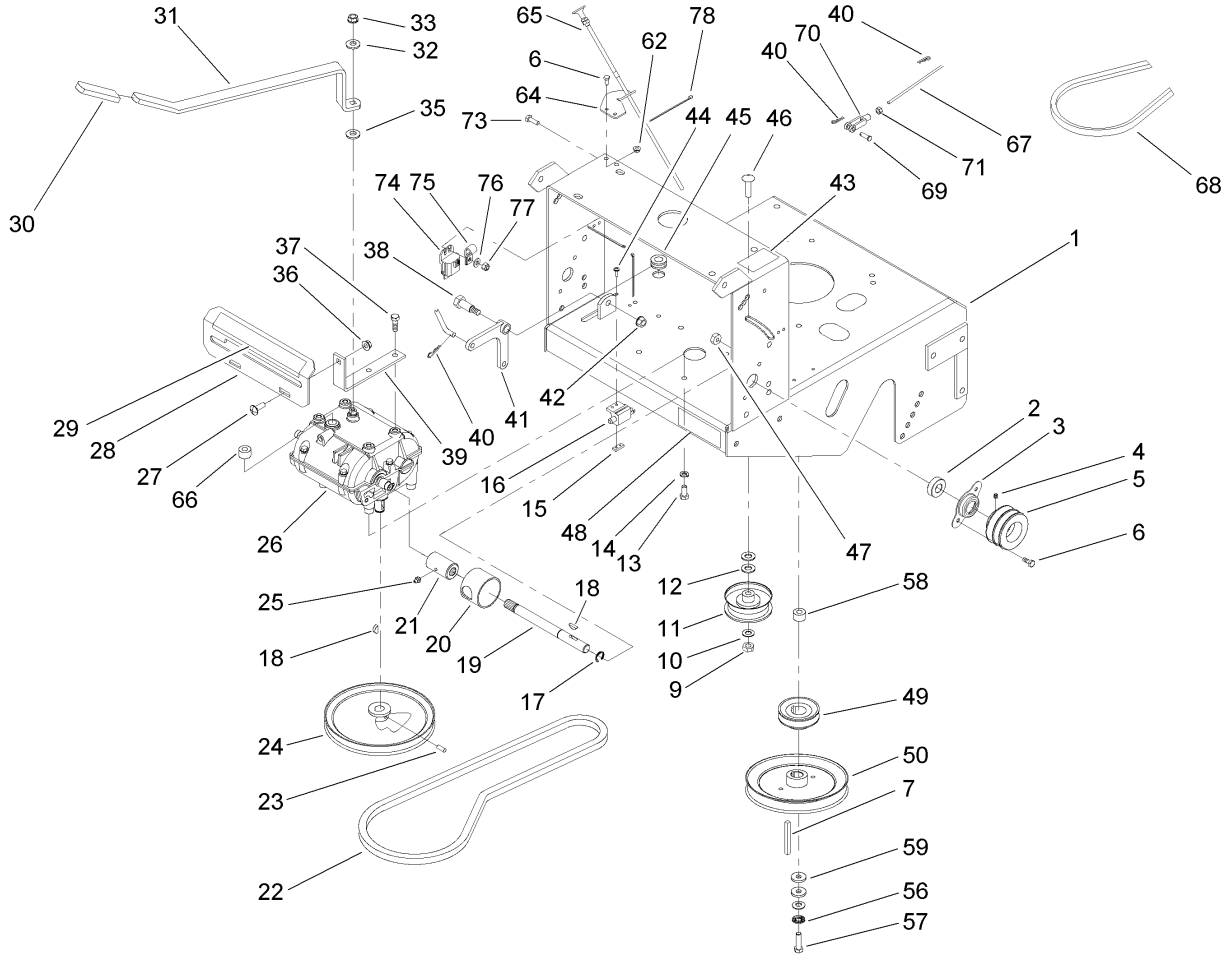

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral
67	1-323303	1	Linkage-Arm
68	1-323745	1	Belt-Blade, Drive
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
73	321-4	1	Screw-HH
74	1-323430	1	Module-Interlock
75	1-323229	1	Clip-Loom
76	3256-22	1	Washer-Flat
77	3296-42	1	Nut-Lock, NI
78	1-303335	3	Tie-Plastic

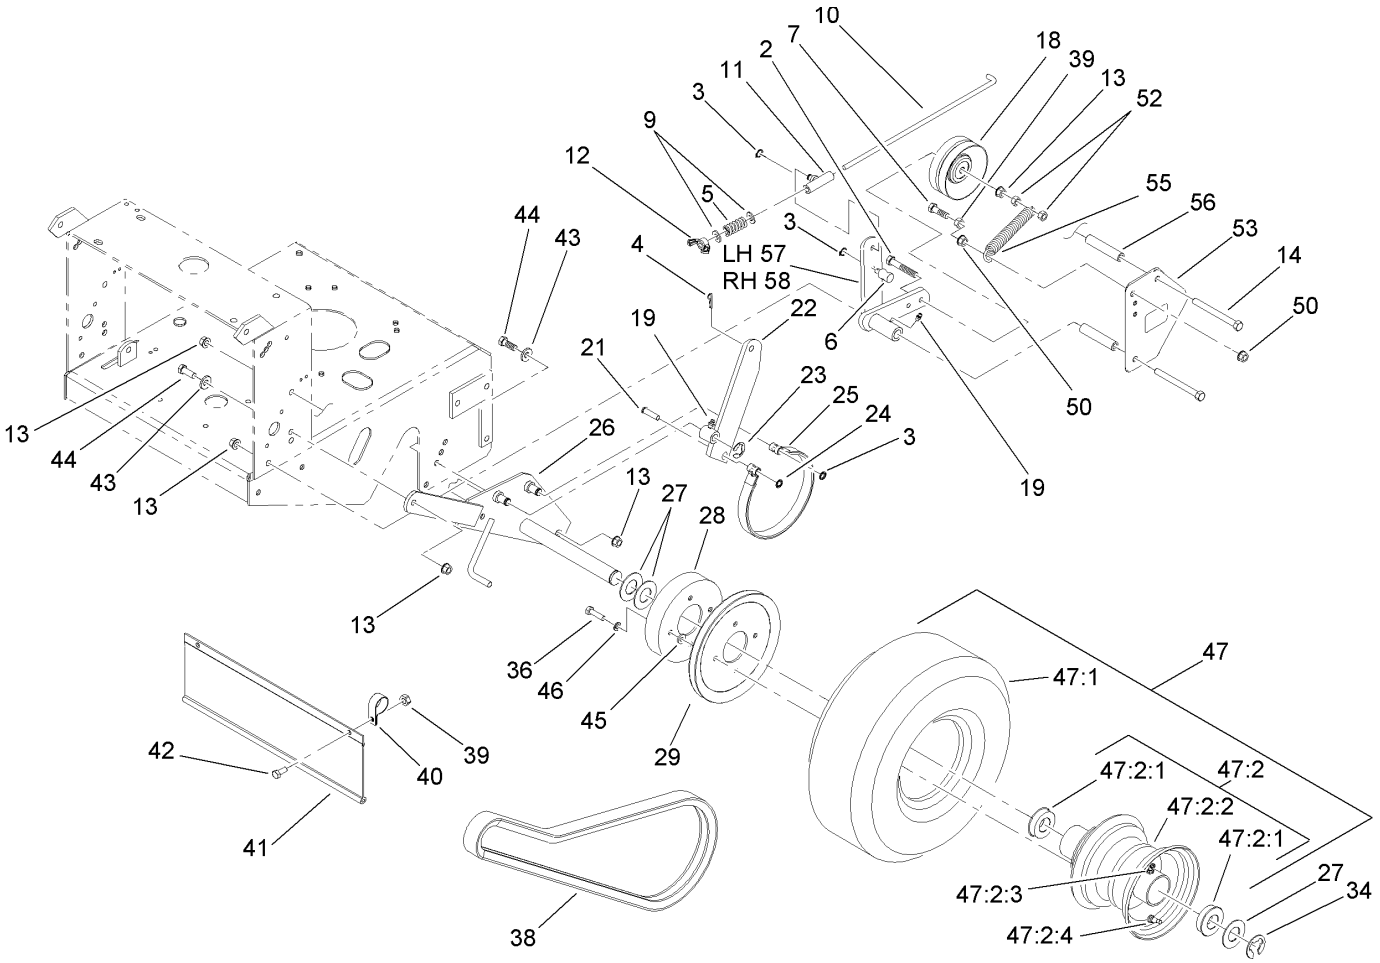

Drive Wheel and Brake Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	2	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-39	4	Screw-HH
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322141-03	1	Axle
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer, 18 GA
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock
47	1-323346	2	Wheel And Tire ASM
47:1	1-323361	1	Tire
47:2	1-323360	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
❷47:2:2		1	Rim ASM
❷47:2:3		1	Fitting-Grease
❷47:2:4		1	Valve Stem And Cap
50	32128-20	4	Nut-HF
52	3296-39	4	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH

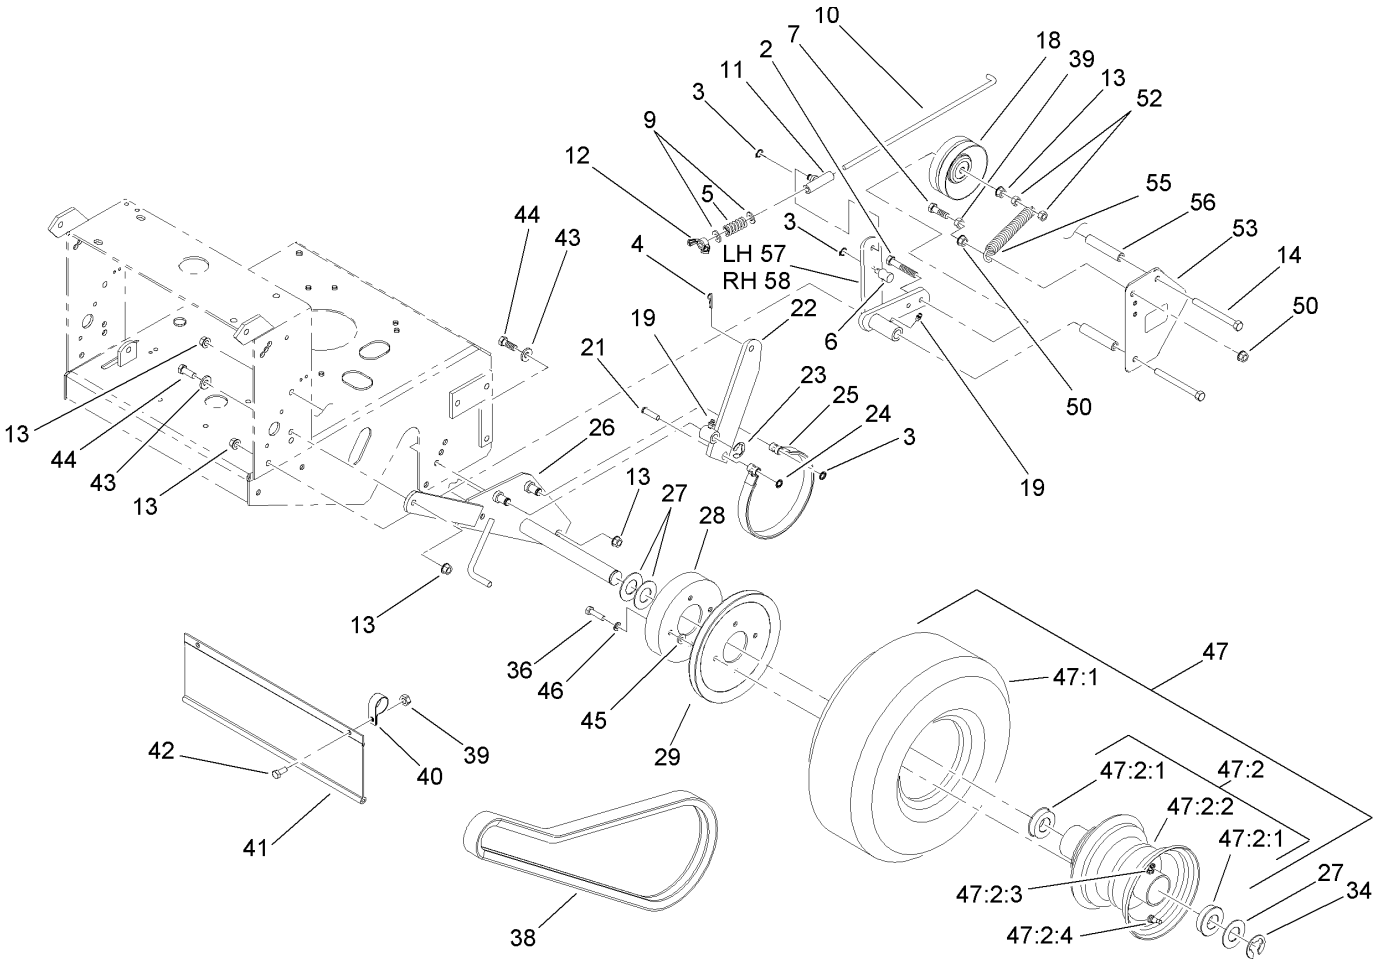

Drive Wheel and Brake Assembly (continued)


Ref	Part No.	Qty.	Description
58	103-1616-03	1	Arm-Idler, RH

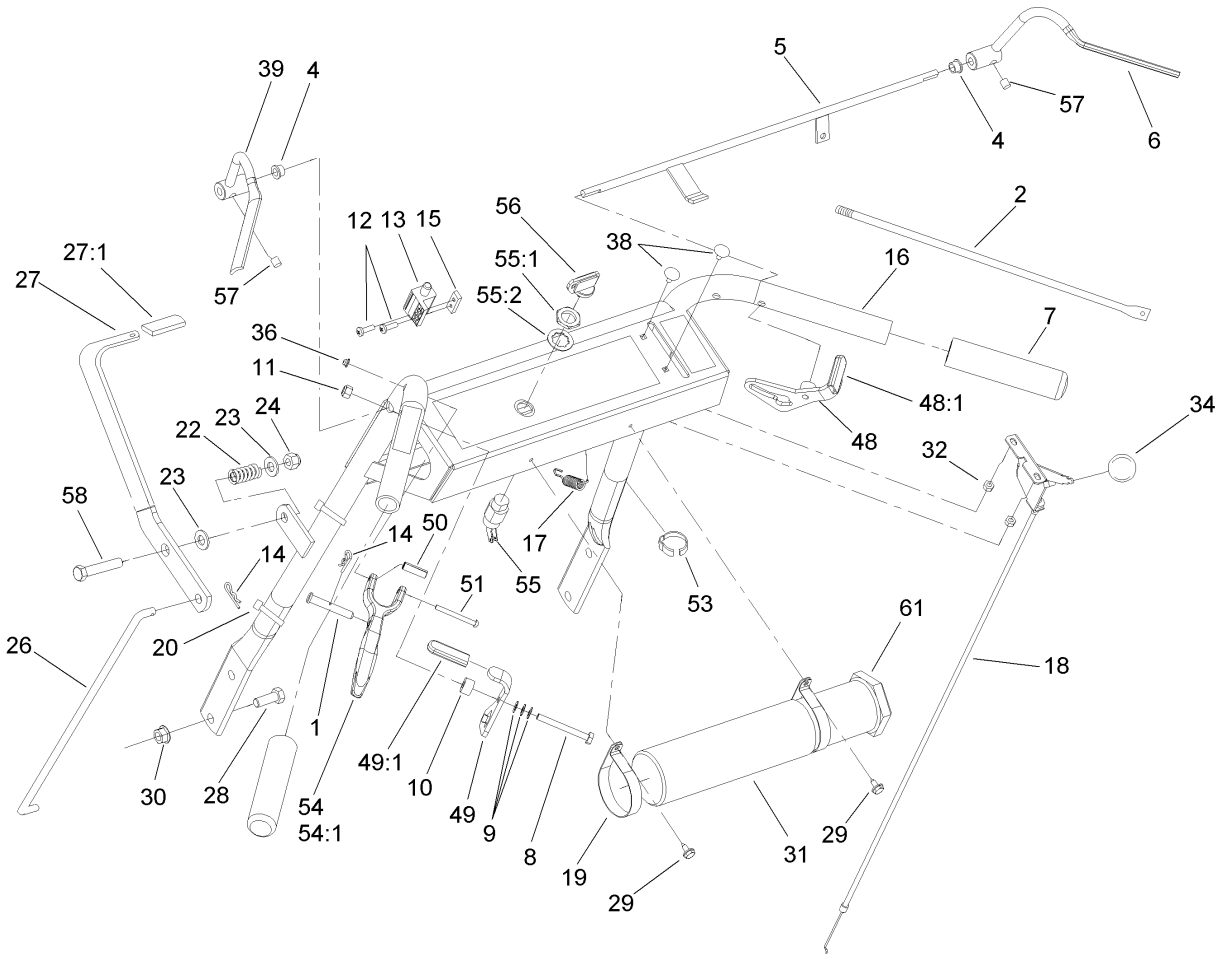

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Rod-Control, Operator Presence
6	106-5486	1	RH Operator Presence Control Lever ASM
7	104-9838	2	Grip-Foam
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	2	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	3	Pin-Hair
15	1-633181	1	Plate-Tapped
16	110-6906	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
20	1-303287	2	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper

Ref	Part No.	Qty.	Description
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	32128-21	4	Nut-HF
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	106-5485	1	LH Operator Presence Control Lever ASM
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Lever, Drive
❶52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	29-5560	1	Switch-On / Off
55:1	218-461	1	Nut-HH

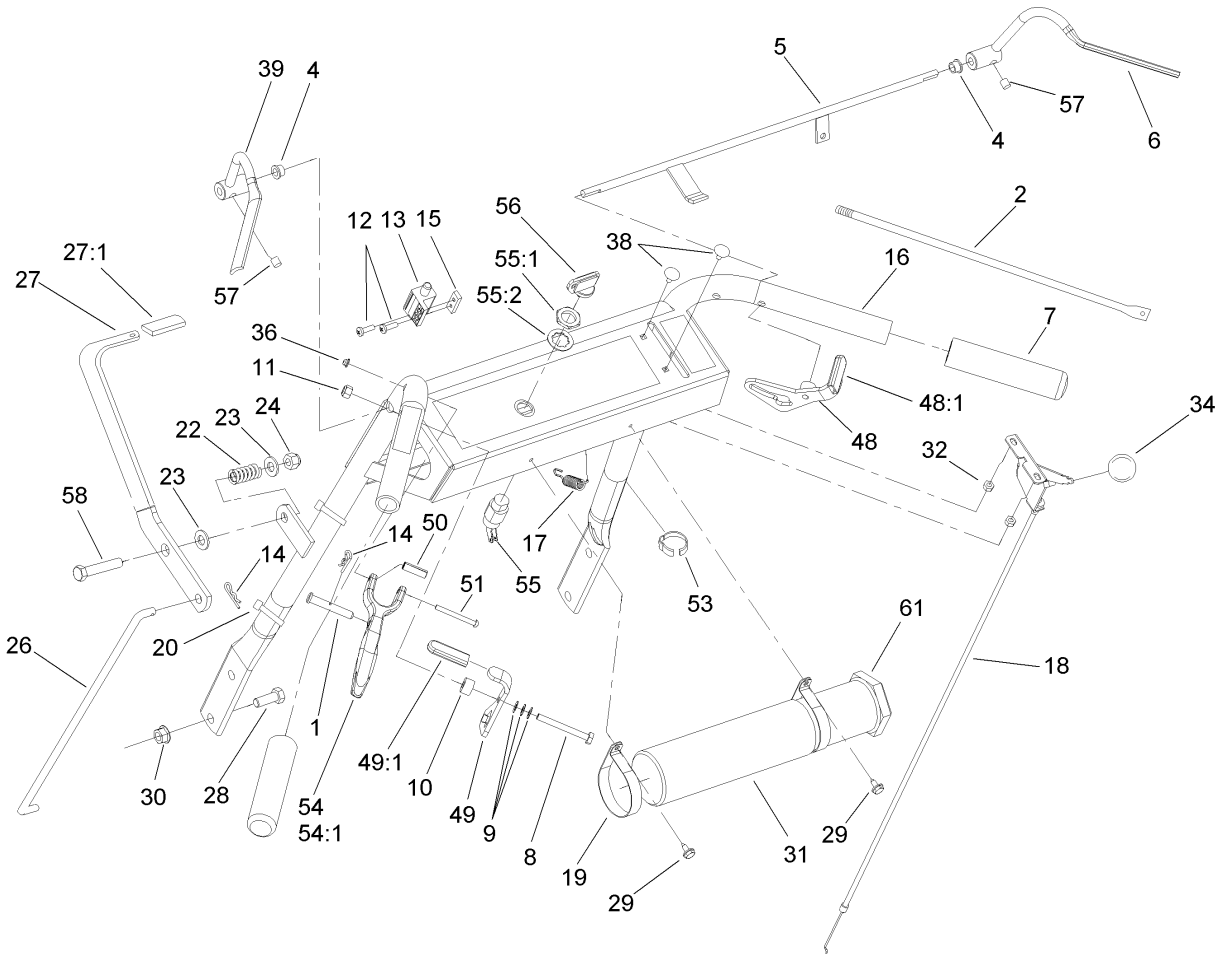


Handle and Control Assembly (continued)

Ref	Part No.	Qty.	Description
55:2	3254-5	1	Washer-Tooth
56	63-8360	1	Key-Ignition
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
61	104-7048	1	Cap-Housing

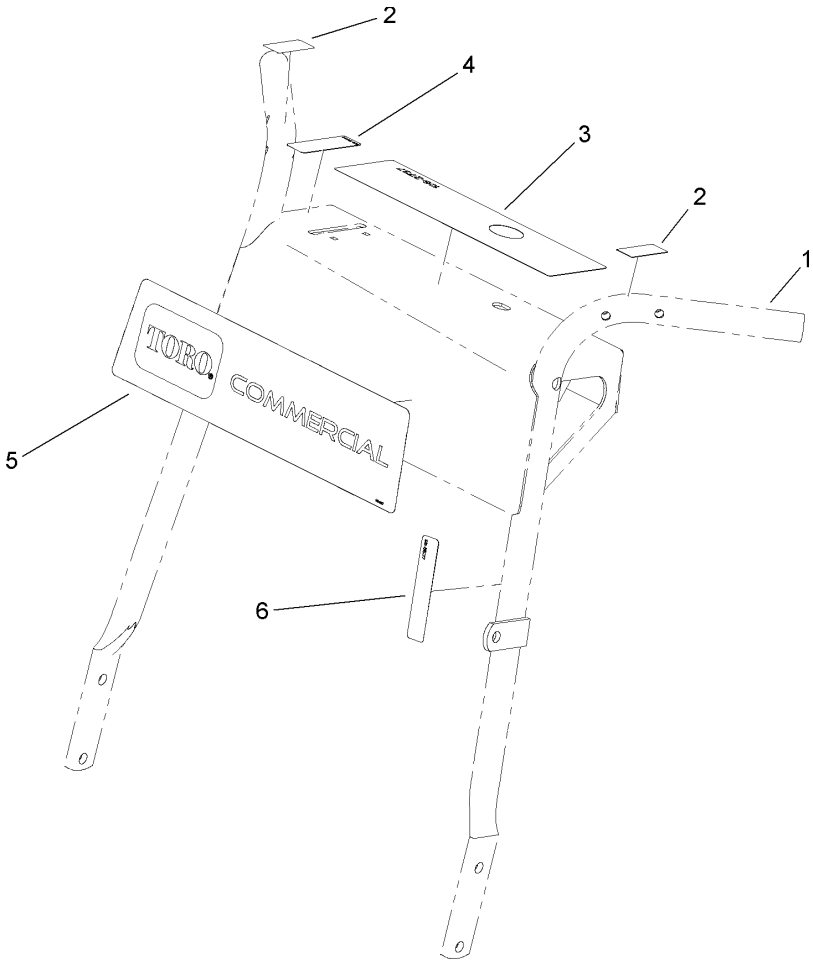


Handle Assembly No. 110-6906

Ref	Part No.	Qty.	Description
❷1		1	Handle ASM
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	110-6917	1	Decal
6	95-5537	1	Decal-Engage, Deck

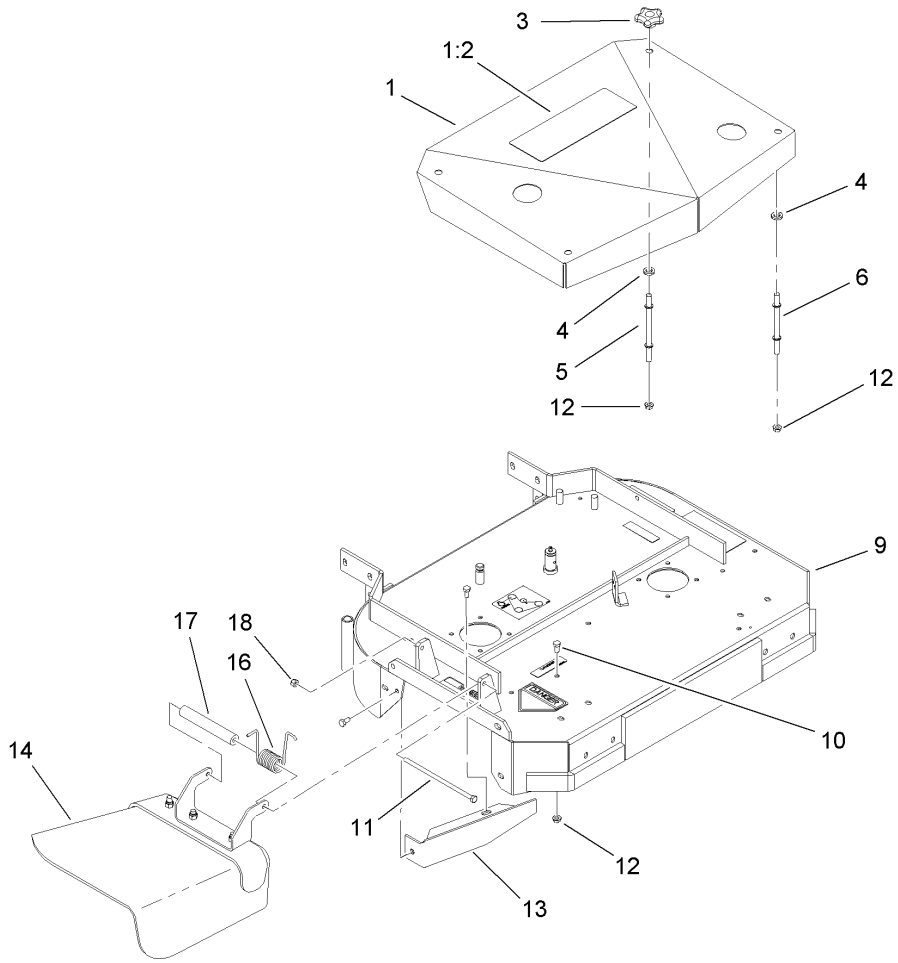


Deck and Shield Assembly

Ref	Part No.	Qty.	Description
1	1-324407	1	Shield-Belt
1:2	106-0710	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	110-6901	1	32 Inch Deck ASM
10	322-2	7	Screw-HH
11	322-50	1	Screw-HH
12	32128-20	11	Nut-HF
13	1-302189-01	1	Baffle-Dogleg
14	107-4140	1	Deflector ASM
16	104-8554	1	Spring-Torsion
17	105-4622	1	Spacer
18	3296-29	1	Nut-Lock, NI

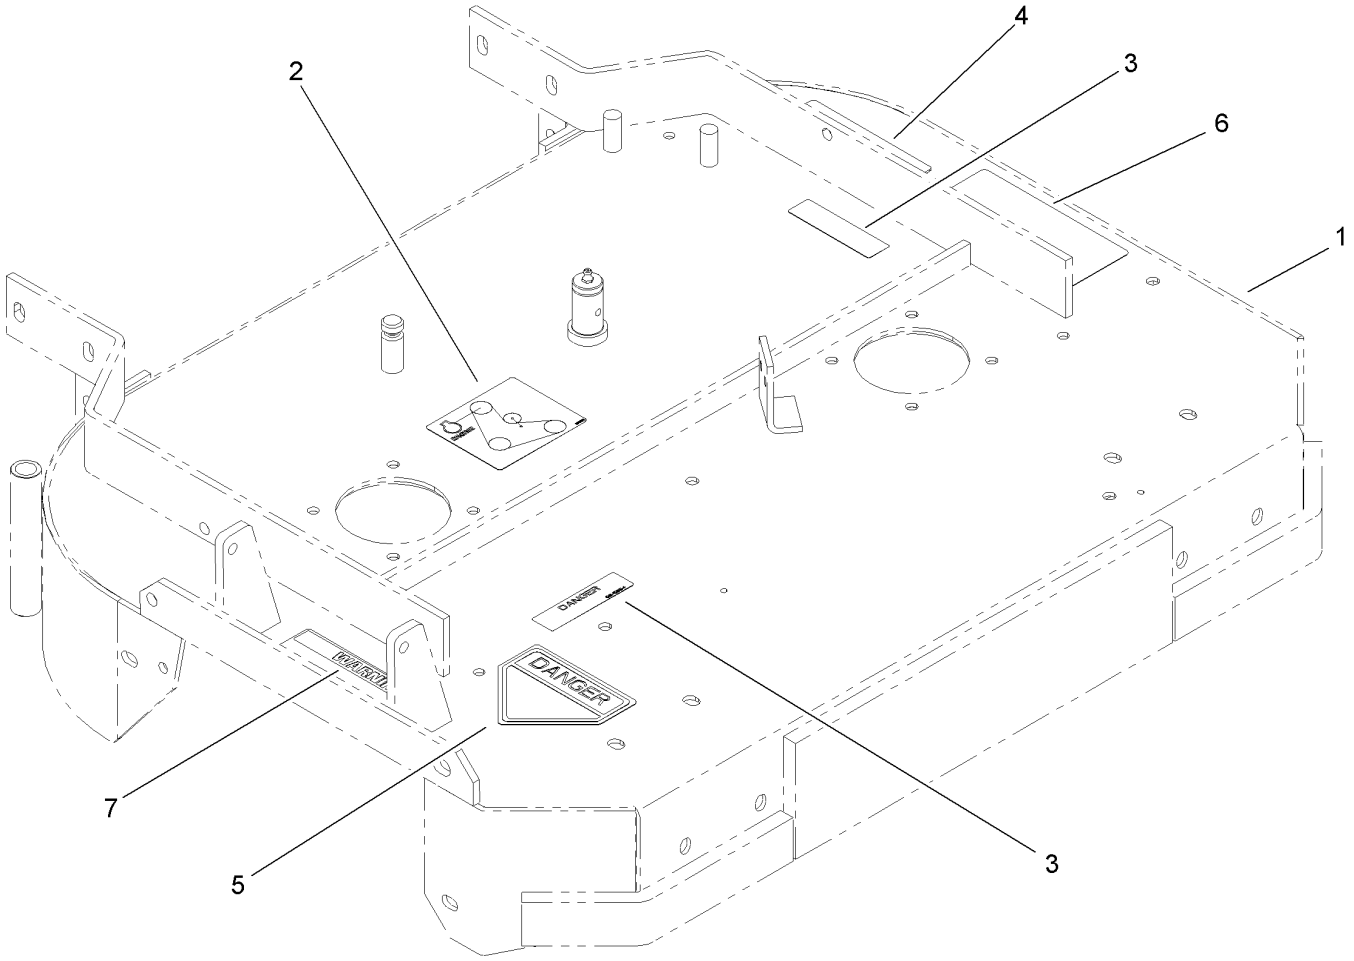


Deck Assembly No. 110-6901

Ref	Part No.	Qty.	Description
❷1		1	Deck
2	98-3296	1	Decal-Routing, Belt
3	98-5954	2	Decal-Cover, Missing
4	98-5130	1	Decal-Torque, Bolt
5	43-8480	1	Decal-Danger
6	66-1340	1	Decal-Danger
7	104-8569	1	Decal-Warning

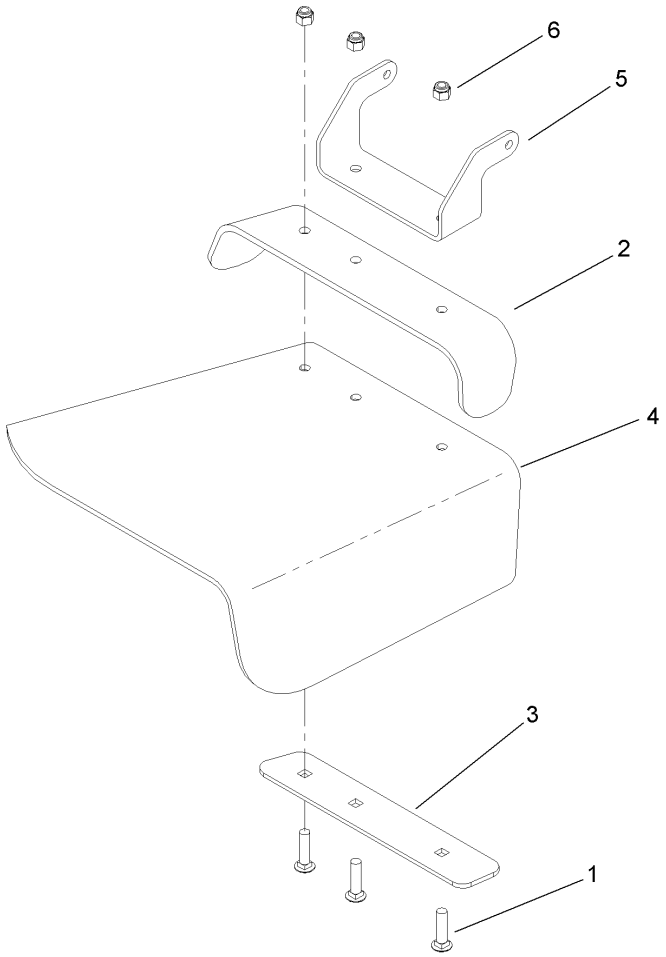

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

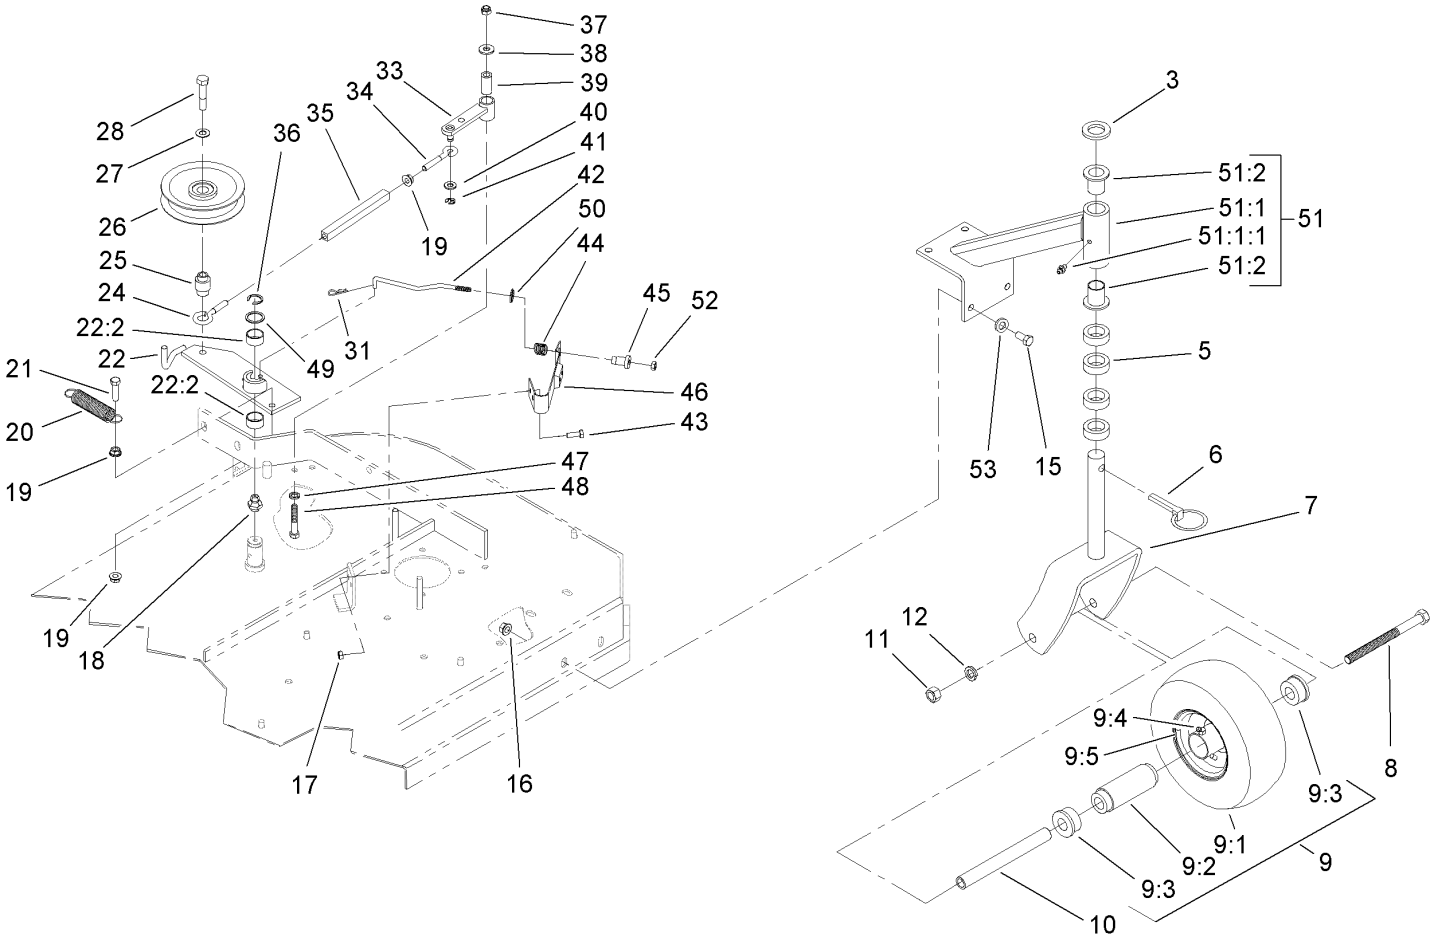

Idler Arm and Caster Wheel Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	110-5023	2	Wheel And Tire ASM
❷9:1		1	Tire
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Zerk
❷9:5		1	Wheel
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH

Ref	Part No.	Qty.	Description
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Retaining, EXT
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM

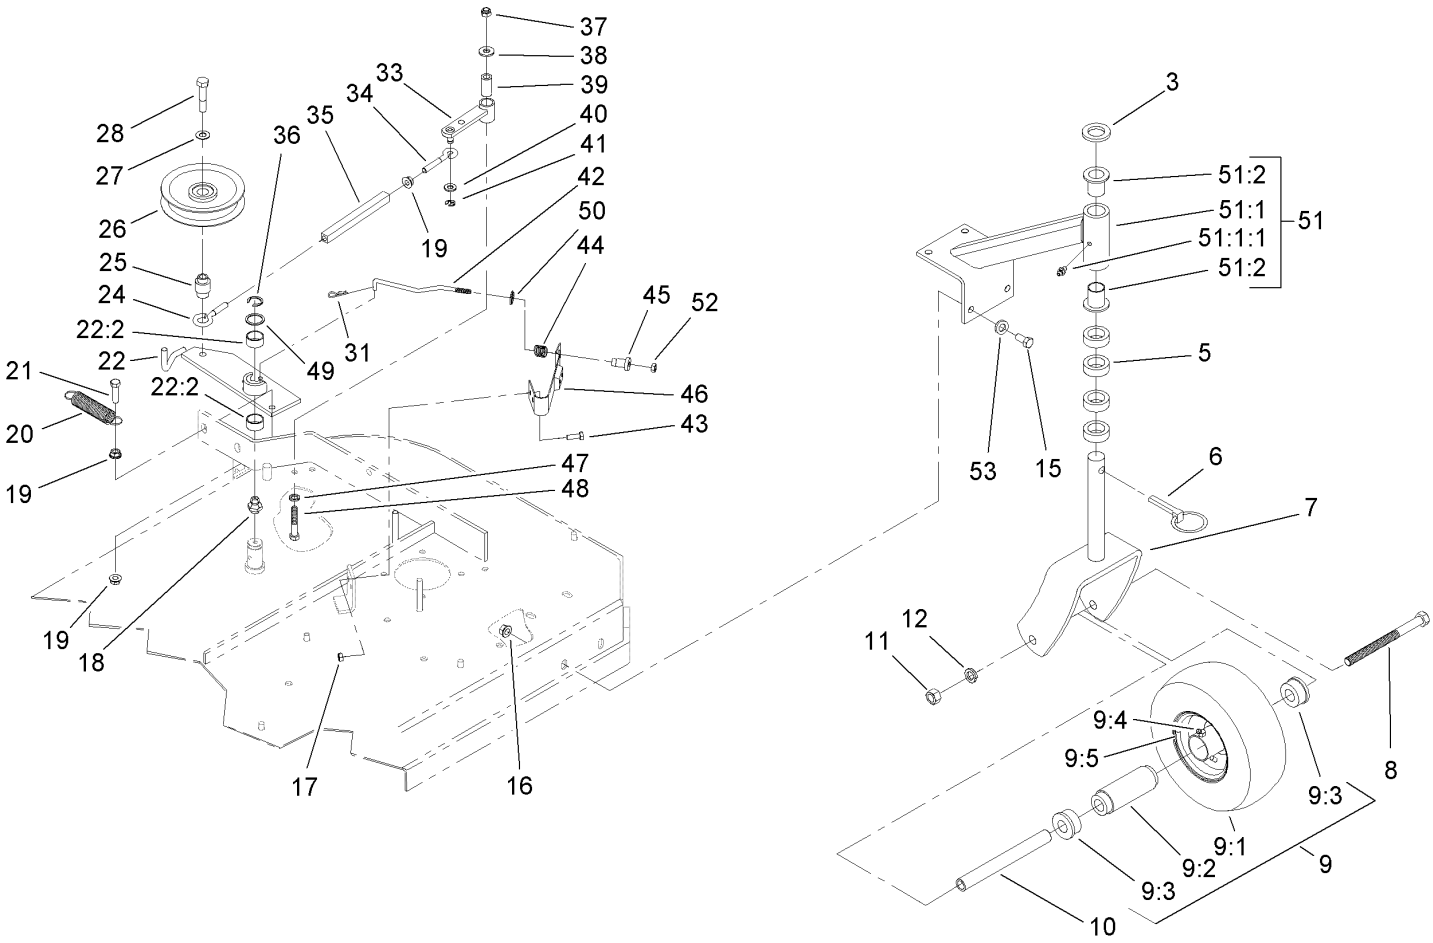


Idler Arm and Caster Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
❷51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

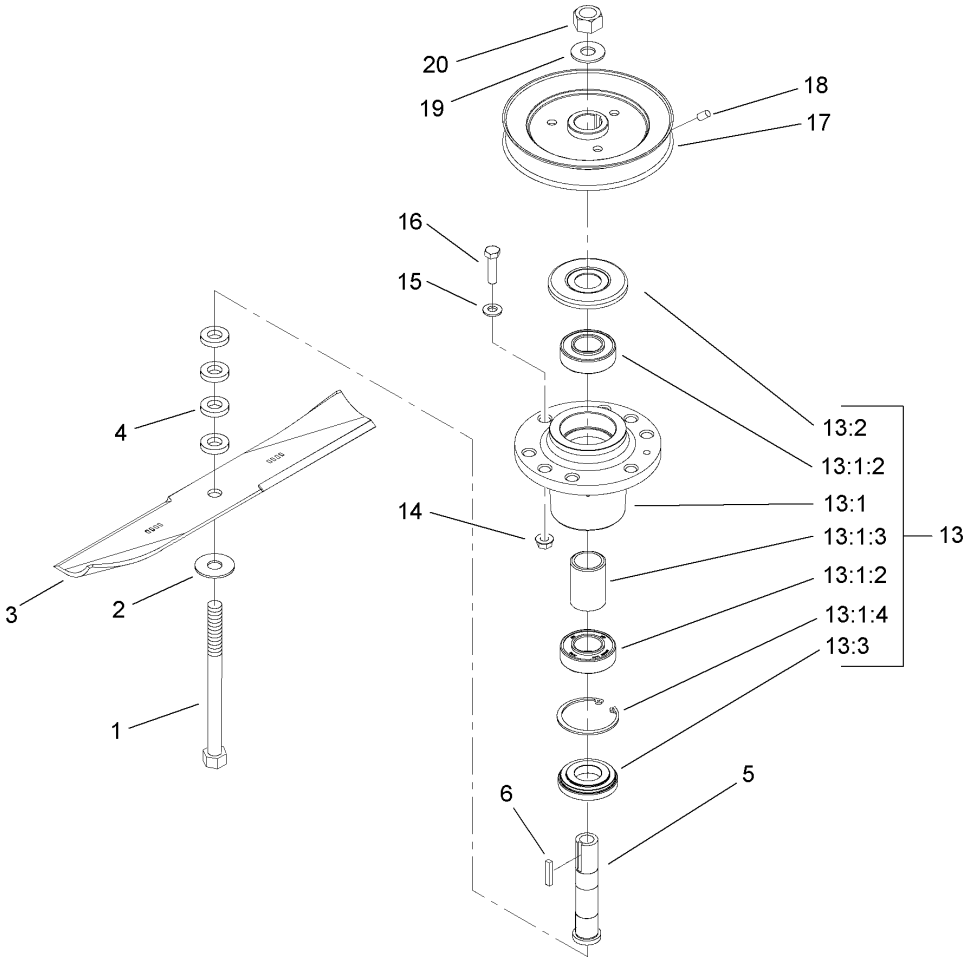


Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
❸3	103-2527	2	Blade-Notched
3	103-2507	2	Blade-Lift, Low
4	1-323539	8	Spacer
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
13	107-4065	2	Cutter Housing ASM
❷13:1		1	Housing-Cutter
13:1:2	103-2477	2	Bearing-Ball
13:1:3	103-2534	1	Spacer-Bearing
13:1:4	32120-8	1	Ring-Snap
13:2	103-1330	1	Guard-Bearing, Top
13:3	103-2535	1	Spacer-Guard, Bottom
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex

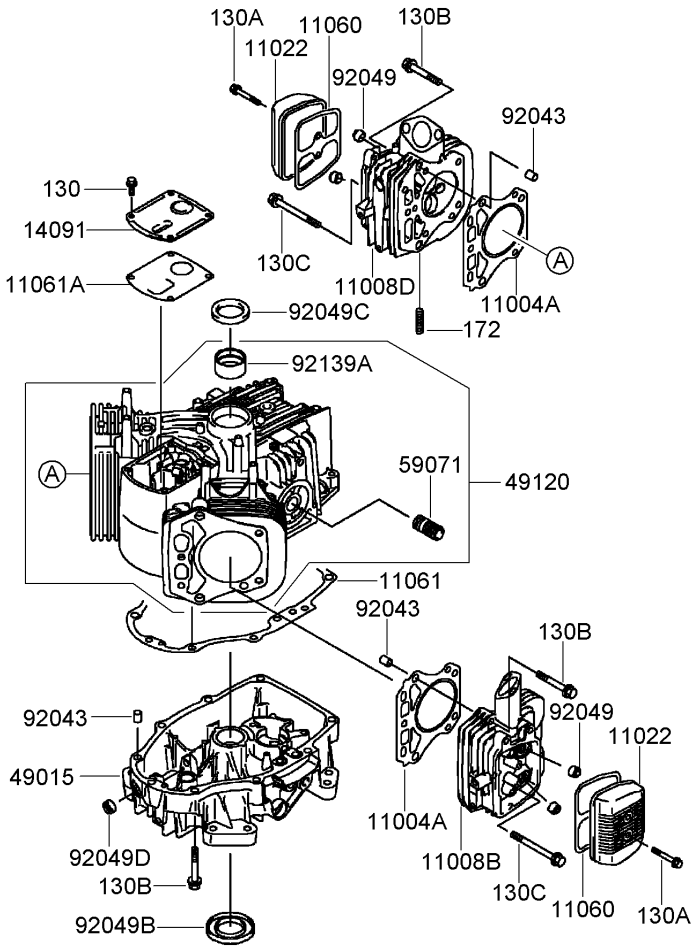


Cylinder and Crankcase Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺11004A	11004-7018	2	Gasket-Head
❺11008B	11008-7021	1	Head-Cylinder, No. 2
❺11008D	11008-7022	1	Head-Cylinder, No. 1
❺11022	11022-7003	2	Case-Rocker
❺11060	11060-7001	2	Gasket-Case, Rocker
❺11061	11061-7007	1	Gasket-Cover, Crankcase
❺11061A	11061-7008	1	Gasket-Breather
❺14091	14091-7007	1	Cover
❺49015	49015-7032	1	Cover-Crankcase
❺49120	49120-7015	1	Crankcase
❺59071	59071-2079	1	Joint
❺92043	92043-7001	6	Pin
❺92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❺92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❺92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❺92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❺92139A	92139-7008	1	Bushing
❺130	130B0612	4	Bolt-Flanged (6X12)
❺130A	130B0640	4	Bolt-Flanged (6X40)
❺130B	130T0850	17	Bolt-Flanged (8X50)
❺130C	130T0875	2	Bolt-Flanged (8X75)
❺172	172G0818	4	Bolt-Stud (8X18)

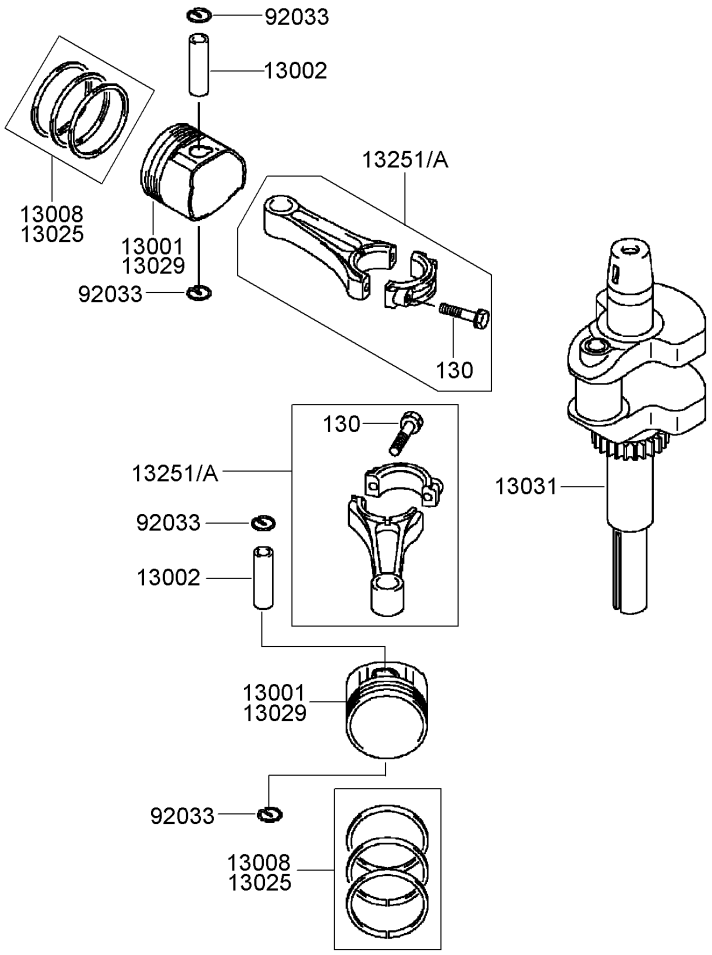


Piston and Crankshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
S13001	13001-7009	2	Piston-Engine
S13002	13002-7001	2	Pin-Piston
S13008	13008-7001	2	Ring Set-Piston
S13025	13025-7003	1	Ring Set-Piston (L 0.50)
S13029	13029-7005	1	Piston-Engine (L 0.50)
S13031	13031-7033	1	Crankshaft
S13251	13251-7007	2	Connecting Rod ASM
S13251A	13251-7008	2	Connecting Rod ASM (0.50)
S92033	92033-7005	4	Ring-Snap
S130	130G0630	4	Bolt-Flanged (6X30)

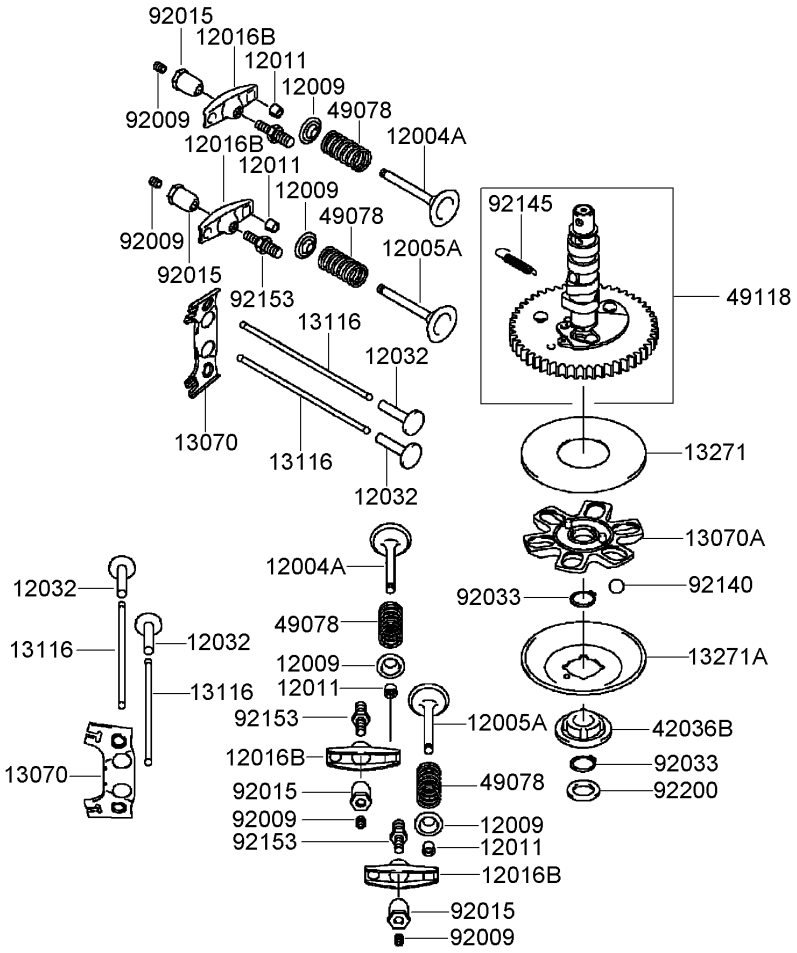


Valve and Camshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺12004A	12004-7005	2	Valve-Intake
❺12005A	12005-7006	2	Valve-Exhaust
❺12009	12009-7001	4	Retainer-Spring, Valve
❺12011	12011-2056	8	Collet
❺12016B	12016-7008	4	Arm-Rocker
❺12032	12032-7001	4	Tappet
❺13070	13070-7001	2	Guide
❺13070A	13070-7004	1	Guide
❺13116	13116-2057	4	Rod-Push
❺13271	13271-7007	1	Plate
❺13271A	13271-7021	1	Plate-Governor
❺42036B	42036-7010	1	Sleeve
❺49078	49078-7001	4	Spring-Valve, Engine
❺49118	49118-7009	1	Camshaft
❺92009	92009-2341	4	Screw
❺92015	92015-2253	4	Nut
❺92033	92033-7001	2	Ring-Snap
❺92140	92140-7002	6	Ball
❺92145	92145-7001	1	Spring
❺92153	92153-7019	4	Bolt
❺92200	92200-7001	1	Washer

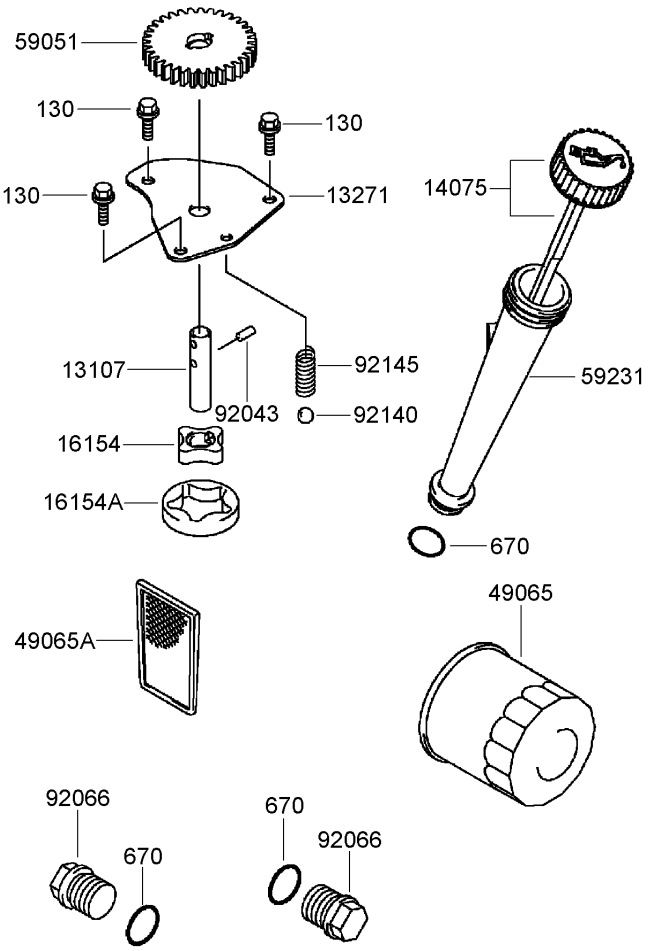


Lubrication Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺13107	13107-7009	1	Shaft
❺13271	13271-7017	1	Plate
❺14075	14075-7009	1	Cap ASM
❺16154	16154-2053	1	Rotor-Pump (In)
❺16154A	16154-2054	1	Rotor-Pump (Out)
❺49065	49065-2078	1	Filter-Oil
❺49065A	49065-7004	1	Filter-Oil
❺59051	59051-7011	1	Gear-Spur
❺59231	59231-7003	1	Filler
❺92043	92043-7003	2	Pin
❺92066	92066-7003	2	Plug
❺92140	92140-7003	1	Ball
❺92145	92145-7002	1	Spring
❺130	130B0612	3	Bolt-Flanged (6X12)
❺670	670D2016	3	O-Ring (16Mm)

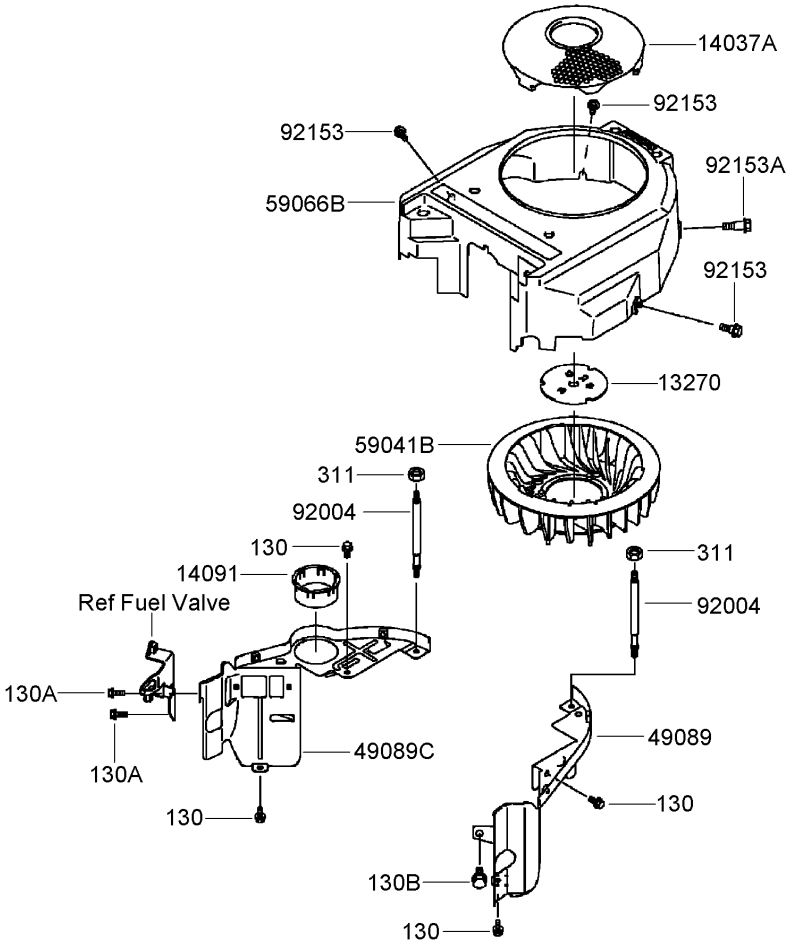


Cooling Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺13270	13270-7007	1	Plate
❺14037A	14037-7025-9H	1	Screen
❺14091	14091-7009	1	Cover
❺49089	49089-7044	1	Shroud-Engine
❺49089C	49089-7061	1	Shroud-Engine
❺59041B	59041-7012	1	Fan
❺59066B	59066-7036	1	Housing-Fan
❺92004	92004-7007	2	Stud
❺92153	92153-7007	3	Bolt
❺92153A	92153-7008	1	Bolt
❺130	130B0612	4	Bolt-Flanged (6X12)
❺130A	130B0616	2	Bolt-Flanged (6X16)
❺130B	130B0816	1	Bolt-Flanged (8X16)
❺311	311F0600	2	Nut-Hex (6Mm)

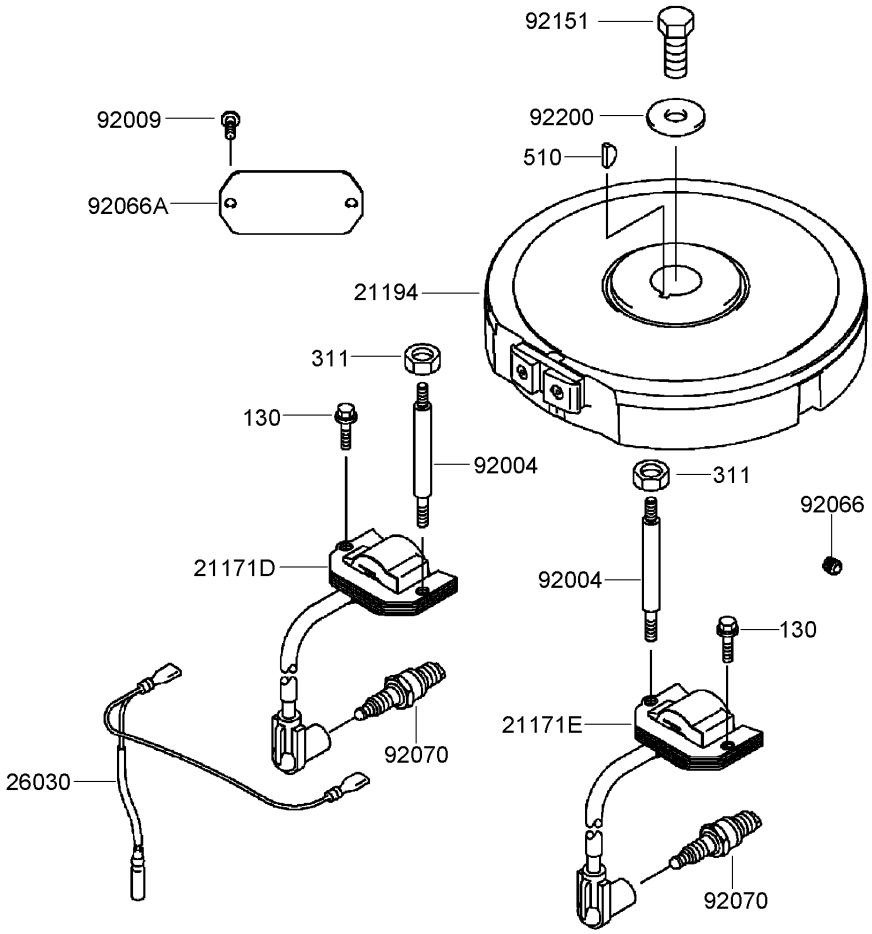


Electric Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺21171D	21171-7026	1	Ignition Coil ASM
❺21171E	21171-7027	1	Ignition Coil ASM
❺21194	21194-7013	1	Flywheel
❺26030	26030-7001	1	Harness
❺92004	92004-7008	2	Stud
❺92009	92009-2308	2	Screw
❺92066	92066-7002	1	Plug
❺92066A	92066-7005	1	Plug
❺92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
❺92151	92151-2097	1	Bolt (12X30)
❺92200	92200-7002	1	Washer
❺130	130B0620	2	Bolt-Flanged (6X20)
❺311	311F0600	2	Nut-Hex (6Mm)
❺510	510A5100	1	Key-Woodruff

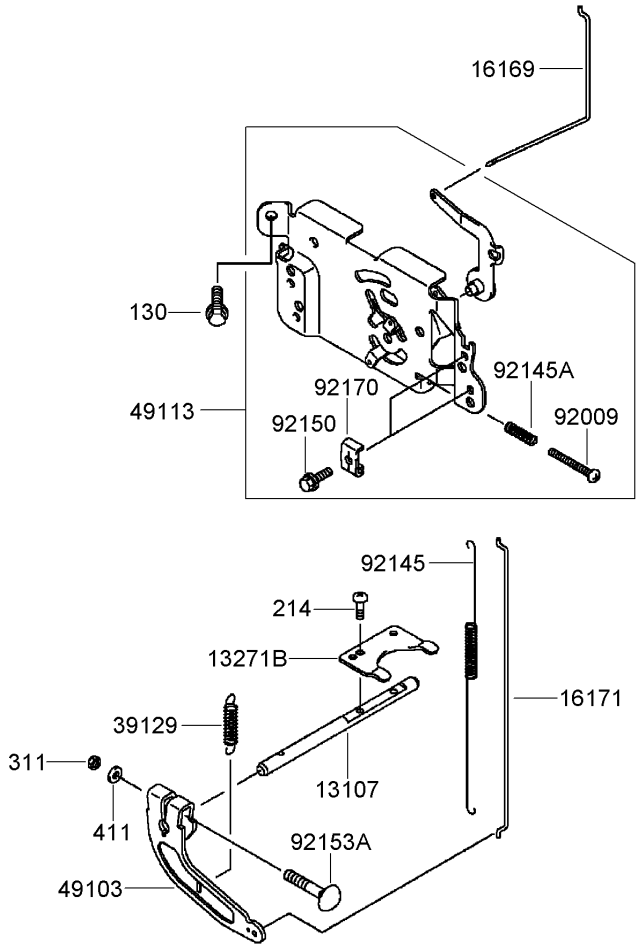

Control Equipment Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❺13107	13107-7010	1	Shaft
❺13271B	13271-7032	1	Plate
❺16169	16169-7012	1	Link-Choke
❺16171	16171-7007	1	Link
❺39129	39129-7003	1	Spring-Governor
❺49103	49103-7004	1	Arm-Governor
❺49113	49113-7024	1	Panel-Control
❺92009	92009-7007	1	Screw (4X35)
❺92145	92145-7003	1	Spring
❺92145A	92145-7005	1	Spring
❺92150	92150-2182	2	Bolt (5X18)
❺92153A	92153-7033	1	Bolt (6X35)
❺92170	92170-7001	2	Clamp
❺130	130B0612	2	Bolt-Flanged (6X12)
❺214	214B0408	2	Screw-Pan (4X8)
❺311	311B0600	1	Nut-Hex (6Mm)
❺411	411B0600	1	Washer-Plain (6Mm)

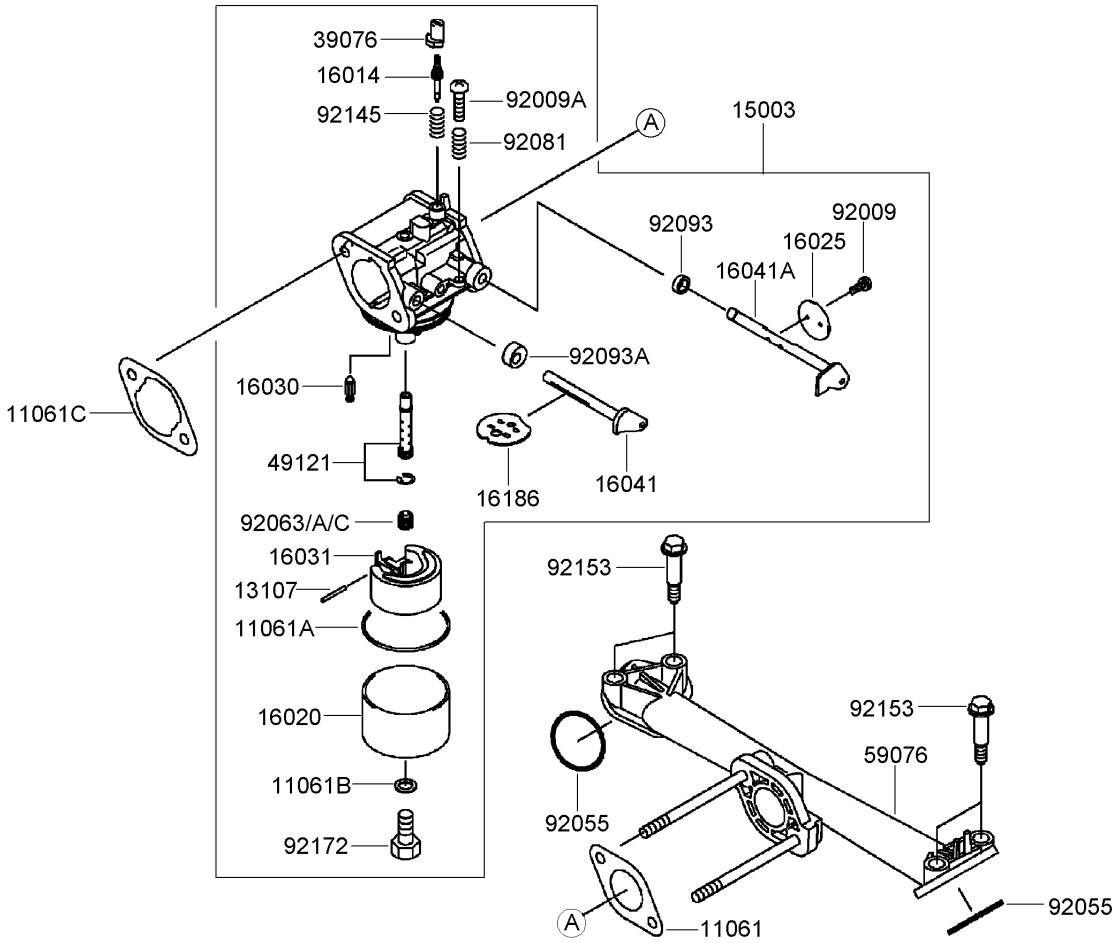

Carburetor Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺11061	11061-7004	1	Gasket-Insulator
❺11061A	11061-7009	1	Gasket-Chamber
❺11061B	11061-7010	1	Gasket-Screw
❺11061C	11061-7018	1	Gasket-Cleaner, Air
❺13107	13107-7018	1	Shaft
❺15003	15003-7061	1	Carburetor ASM
❺16014	16014-7002	1	Screw-Pilot, Air
❺16020	16020-7003	1	Chamber-Float
❺16025	16025-7006	1	Valve-Throttle
❺16030	16030-7003	1	Valve-Float
❺16031	16031-7002	1	Float
❺16041	16041-7016	1	Shaft-Choke, Carburetor
❺16041A	16041-7018	1	Shaft-Throttle, Carburetor
❺16186	16186-7002	1	Choke Valve ASM
❺39076	39076-7001	1	Limiter
❺49121	49121-7001	1	Nozzle-Main
❺59076	59076-7005	1	Manifold-Intake
❺92009	92009-2083	2	Screw
❺92009A	92009-2349	1	Screw
❺92055	92055-7007	2	O-Ring (I D 31)
❺92063	92063-7026	1	Jet-Main, No. 88
❺92063A	92063-7028	1	Jet-Main, No. 85
❺92063C	92063-7029	1	Jet-Main, No. 82
❺92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
❺92093	92093-2100	1	Seal
❺92093A	92093-7003	1	Seal
❺92145	92145-7015	1	Spring
❺92153	92153-7009	4	Bolt
❺92172	92172-7002	1	Screw

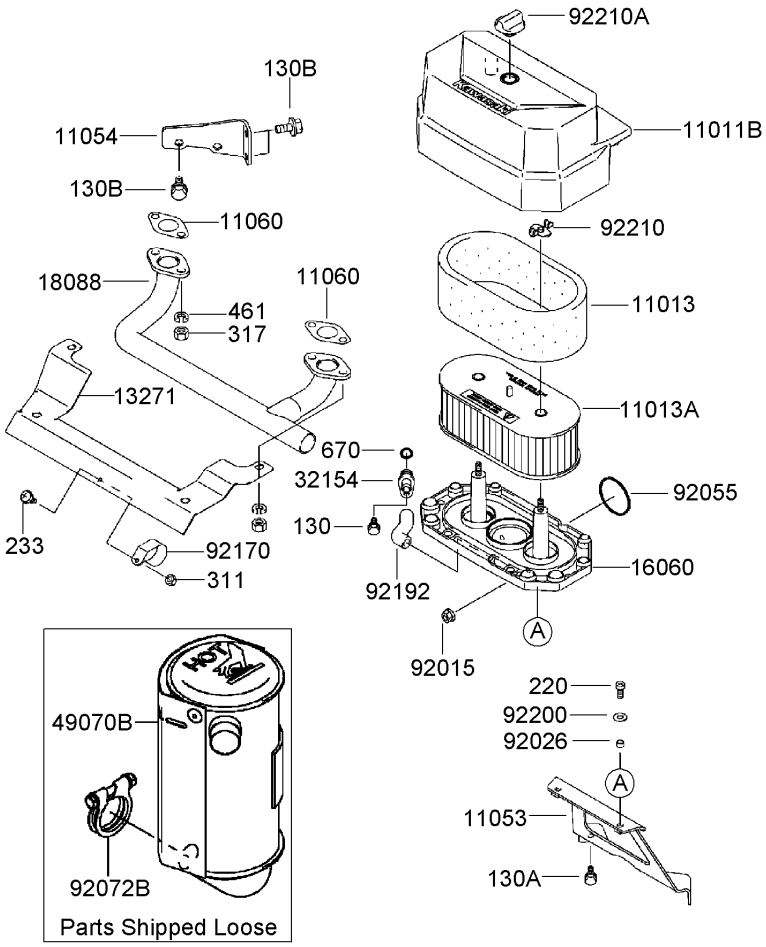

Air Filter and Muffler Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❺11011B	11011-7045	1	Case-Filter, Air
❺11013	11013-7025	1	Element-Filter, Air
❺11013A	11013-7031	1	Element-Filter, Air
❺11053	11053-7022	1	Bracket
❺11054	11054-7002-9H	1	Bracket
❺11060	11060-7021	2	Gasket-Muffler
❺13271	13271-7022	1	Plate
❺16060	16060-7016	1	Pipe-Intake
❺18088	18088-7001	1	Pipe-Exhaust
❺32154	32154-7006	1	Pipe
❺49070B	49070-7021	1	Muffler
❺92015	92015-1193	2	Nut
❺92026	92026-7001	2	Spacer (6.2X7.9X5)
❺92055	92055-7015	1	O-Ring
❺92072B	92072-7012	1	Band
❺92170	92170-7002	1	Clamp
❺92192	92192-7010	1	Tube
❺92200	92200-2070	2	Washer
❺92210	92210-7004	2	Nut
❺92210A	92210-7019	1	Nut
❺130	130B0610	1	Bolt-Flanged (6X10)
❺130A	130B0612	2	Bolt-Flanged (6X12)
❺130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
❺220	220B0614	2	Screw-Pan, Cross (6X14)
❺233	233B0416	1	Screw (4X16)
❺311	311B0400	1	Nut-Hex (4Mm)
❺317	317R0800	4	Nut-Hex, Small (8Mm)
❺461	461F0800	4	Washer-Spring (8Mm)
❺670	670B2010	1	O-Ring (10Mm)

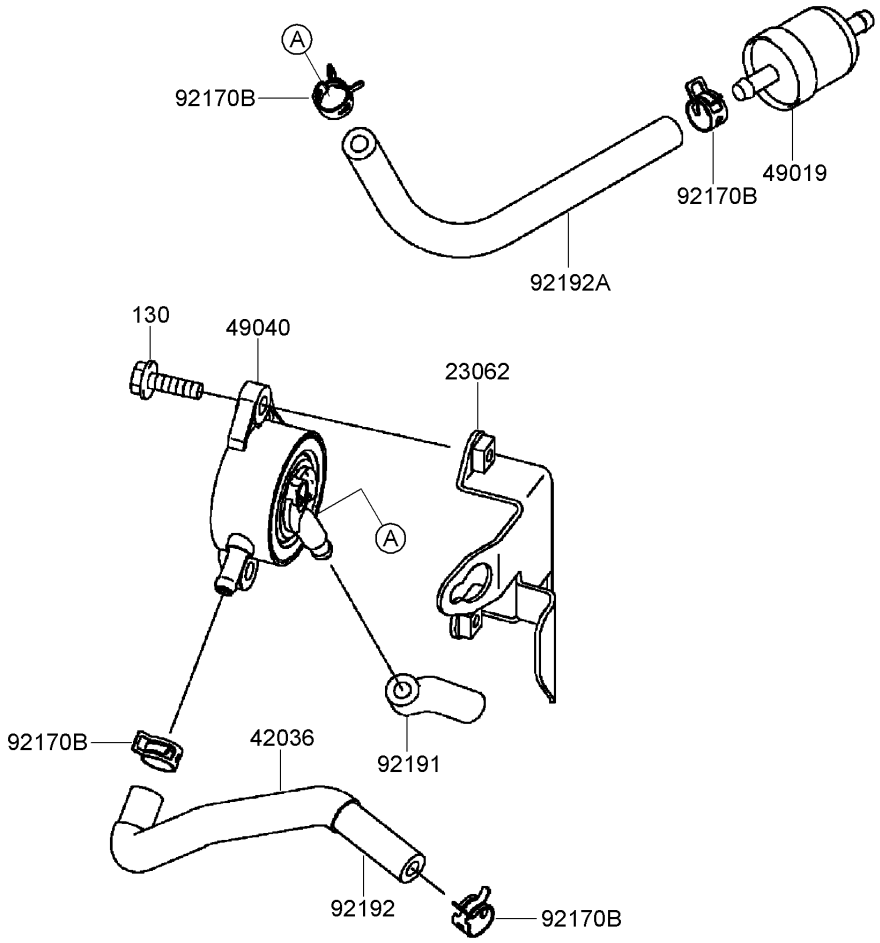

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺23062	23062-7004-9H	1	Bracket
❺42036	42036-7012	1	Sleeve
❺49019	49019-7001	1	Filter-Fuel
❺49040	49040-7001	1	Pump-Fuel
❺92170B	92170-2088	4	Clamp
❺92191	92191-7002	1	Tube
❺92192	92192-7035	1	Tube (6.35X12.7X170)
❺92192A	92192-7037	1	Tube (6.35X12.7X160)
❺130	130B0620	2	Bolt-Flanged (6X20)

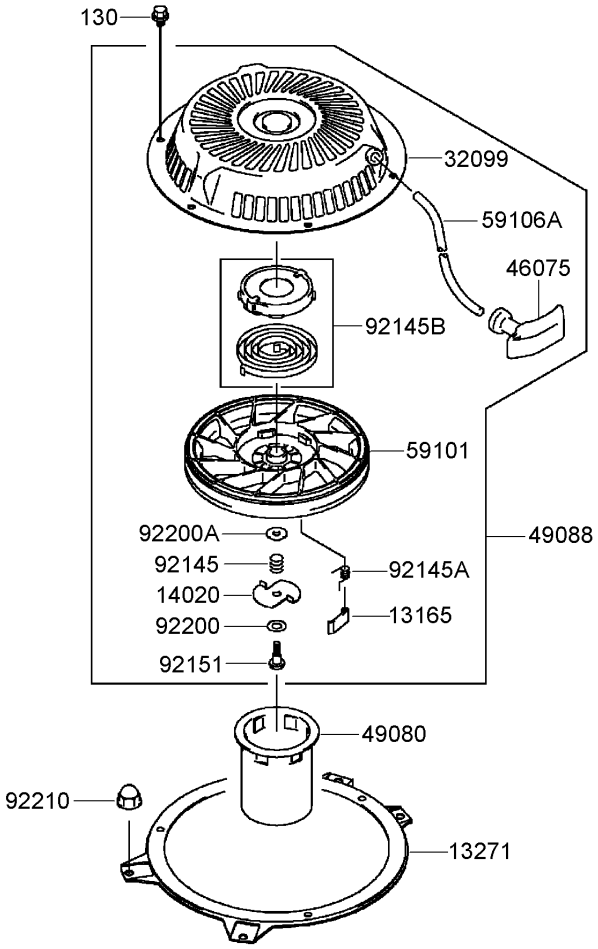

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺13165	13165-7001	2	Pawl-Starter, Recoil
❺13271	13271-7003-9H	1	Plate
❺14020	14020-7001	1	Retainer
❺32099	32099-7002	1	Case-Starter, Recoil
❺46075	46075-7001	1	Grip-Starter, Recoil
❺49080	49080-7001	1	Pulley-Starting
❺49088	49088-7013	1	Starter-Recoil
❺59101	59101-7001	1	Reel-Starter, Recoil
❺59106A	59106-7005	1	Rope
❺92145	92145-7006	1	Spring
❺92145A	92145-7007	2	Spring
❺92145B	92145-7008	1	Spring
❺92151	92151-7008	1	Bolt
❺92200	92200-7004	1	Washer
❺92200A	92200-7005	1	Washer
❺92210	92210-0003	4	Nut
❺130	130B0608	3	Bolt-Flanged (6X8)

56033



56070



56080



56080A



Label Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❺56033	56033-7001	1	Label-Manual
❺56070	56070-7001	1	Label-Warning
❺56080	56080-2077	1	Label-Brand
❺56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 39682 - Commercial Walk-Behind Mower, Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Product Name	Model/Part
32 Inch and 48 Inch Fixed Deck Low Lift Blades	103-2507
Blade-Notched	103-2527
Atomic Blade and Decal Assembly	104-8595
Weight Kit	107-4100
Blade-16.25 Inch (6 Pack)	108-1119
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES

NOTES


TORO®