Form Number 3360-270 Rev A

Commercial Walk-Behind Mower

Fixed Deck, Pistol Grip, Gear Drive with 48in TURBO FORCE® Cutting Unit

Model No. 39688 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel Tank Assembly	3
Transmission Drive Assembly	4
Drive Wheel and Brake Assembly	6
Handle and Control Assembly	8
Handle Assembly No. 110-6906	10
Deck Assembly	11
Deck Assembly No. 110-4909	12
Deflector Assembly No. 110-0758	13
Sheave, Spindle and Blade Assembly	14
Idler Assembley	15
Caster Assembly	16
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	17
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	18
Valve and Camshaft Assembly Kawasaki FH430V-CS25	19
Lubrication Equipment Assembly Kawasaki FH430V-CS25	20
Cooling Equipment Assembly Kawasaki FH430V-CS25	21
Electric Equipment Assembly Kawasaki FH430V-CS25	22
Control Equipment Assembly Kawasaki FH430V-CS25	23
Carburetor Assembly Kawasaki FH430V-CS25	24
Air Filter and Muffler Assembly Kawasaki FH430V-CS25	25
Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	26
Starter Assembly Kawasaki FH430V-CS25	27
Label Assembly Kawasaki FH430V-CS25	28
Attachments and Accessories List	29


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Obtain parts from Peerless Transmissions (model 700-070A)
❹ Obtain from your local Kawasaki dealer

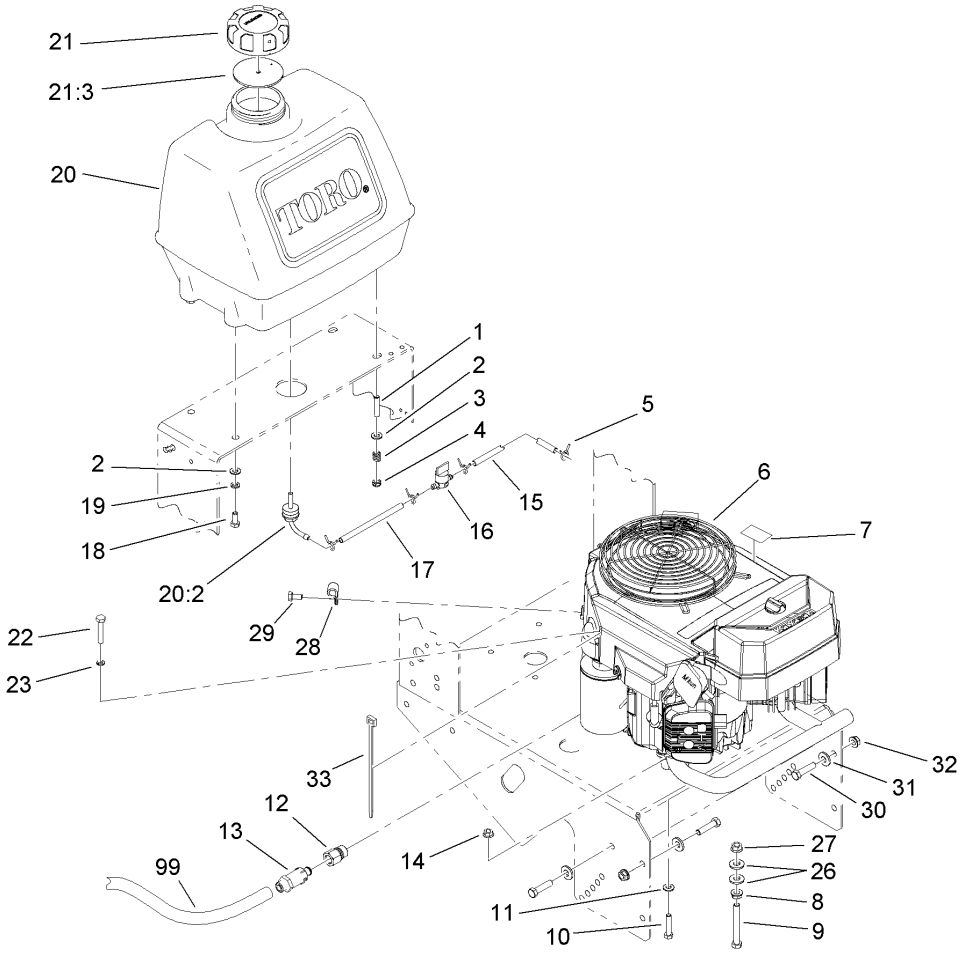

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❷❹6		1	Engine-Kawasaki, FH430V-Cs25
7	106-0699	1	Decal-Warning
8	3290-357	1	Nut-HHF, Whiz
9	323-14	1	Screw-HH
10	322-7	4	Screw-HH
11	1-303334	4	Washer-Spring
12	103-1966	1	Adapter
13	92-6877	1	Valve-Drain, Oil
14	32128-20	4	Nut-HF
15	109-0293	1	Hose-Fuel
16	1-603770	1	Valve-Fuel
17	109-0306	1	Hose-Fuel
18	322-3	2	Screw-HH
19	1-805005	2	Washer-Lock
20	106-0730	1	Fuel Tank ASM
20:2	103-2605	1	Fitting-Fuel, Bulkhead
21	88-3980	1	Gas Cap ASM
21:3	88-4010	1	Gasket-Cap, Gas
22	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
23	1-805004	1	Washer-Lock
26	98-5975	2	Washer-Belleville
27	32128-21	1	Nut-HF
28	1-413510	1	Clip-Loom
29	33114-016	1	Screw-HH
30	323-8	8	Screw-HH
31	98-5975	8	Washer-Belleville
32	3290-357	8	Nut-HHF, Whiz
33	1-303335	1	Tie-Plastic
99	103-1964	1	Hose-Drain, Oil

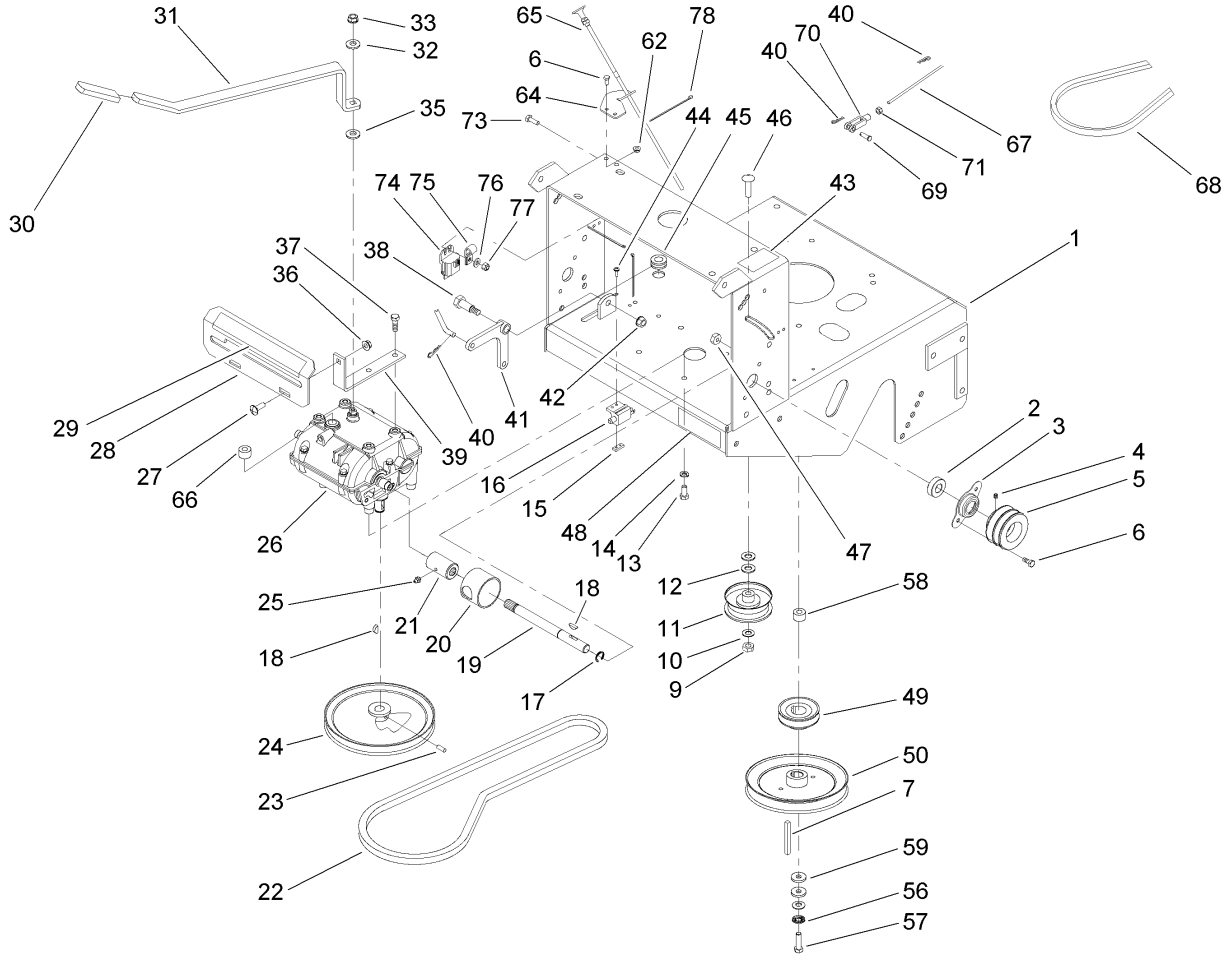

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
❸26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	110-4890	1	Pulley ASM

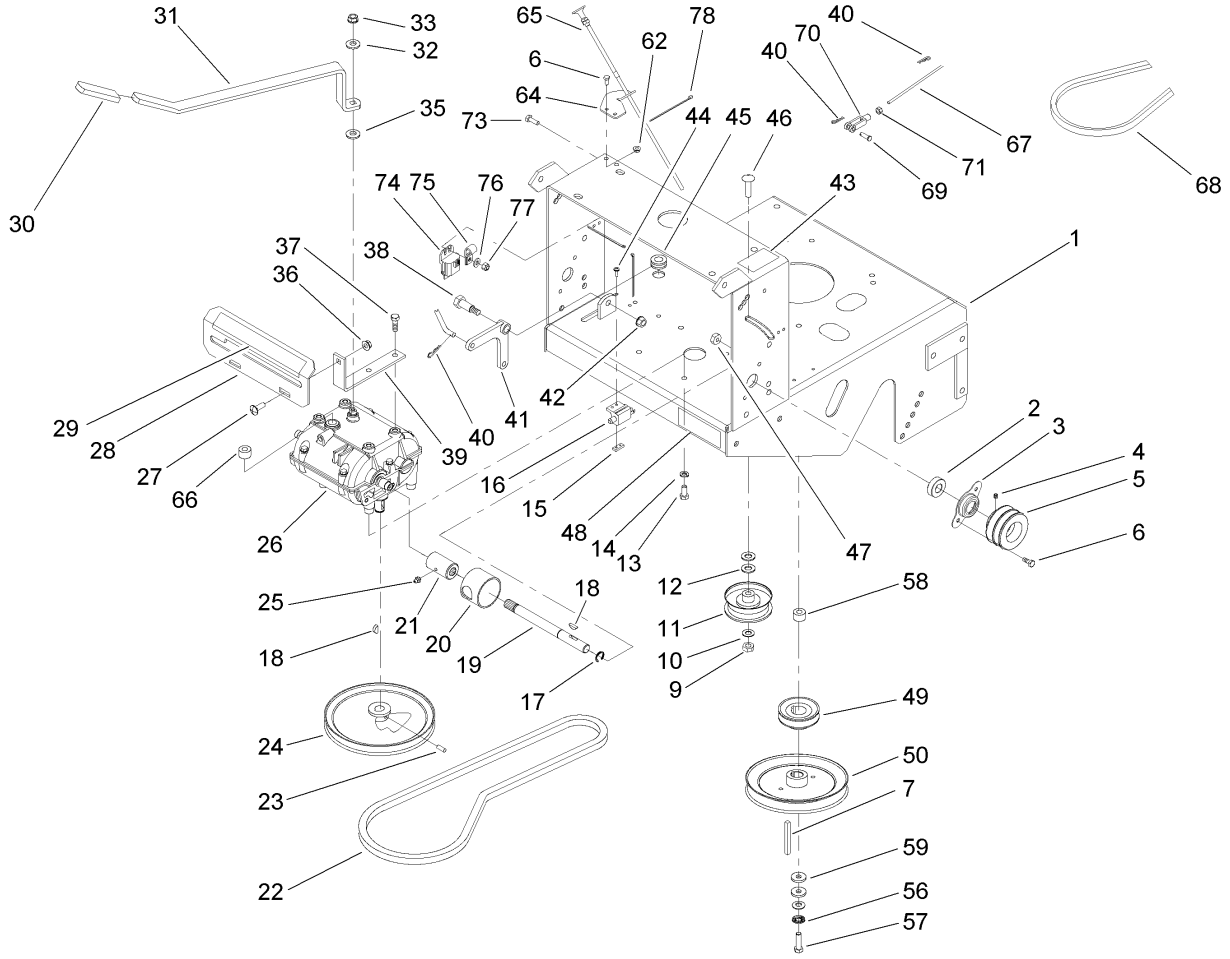

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral
67	1-323303	1	Linkage-Arm
68	110-0543	1	Belt-V
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
73	321-4	1	Screw-HH
74	1-323430	1	Module-Interlock
75	1-323229	1	Clip-Loom
76	3256-22	1	Washer-Flat
77	3296-42	1	Nut-Lock, NI
78	1-303335	3	Tie-Plastic

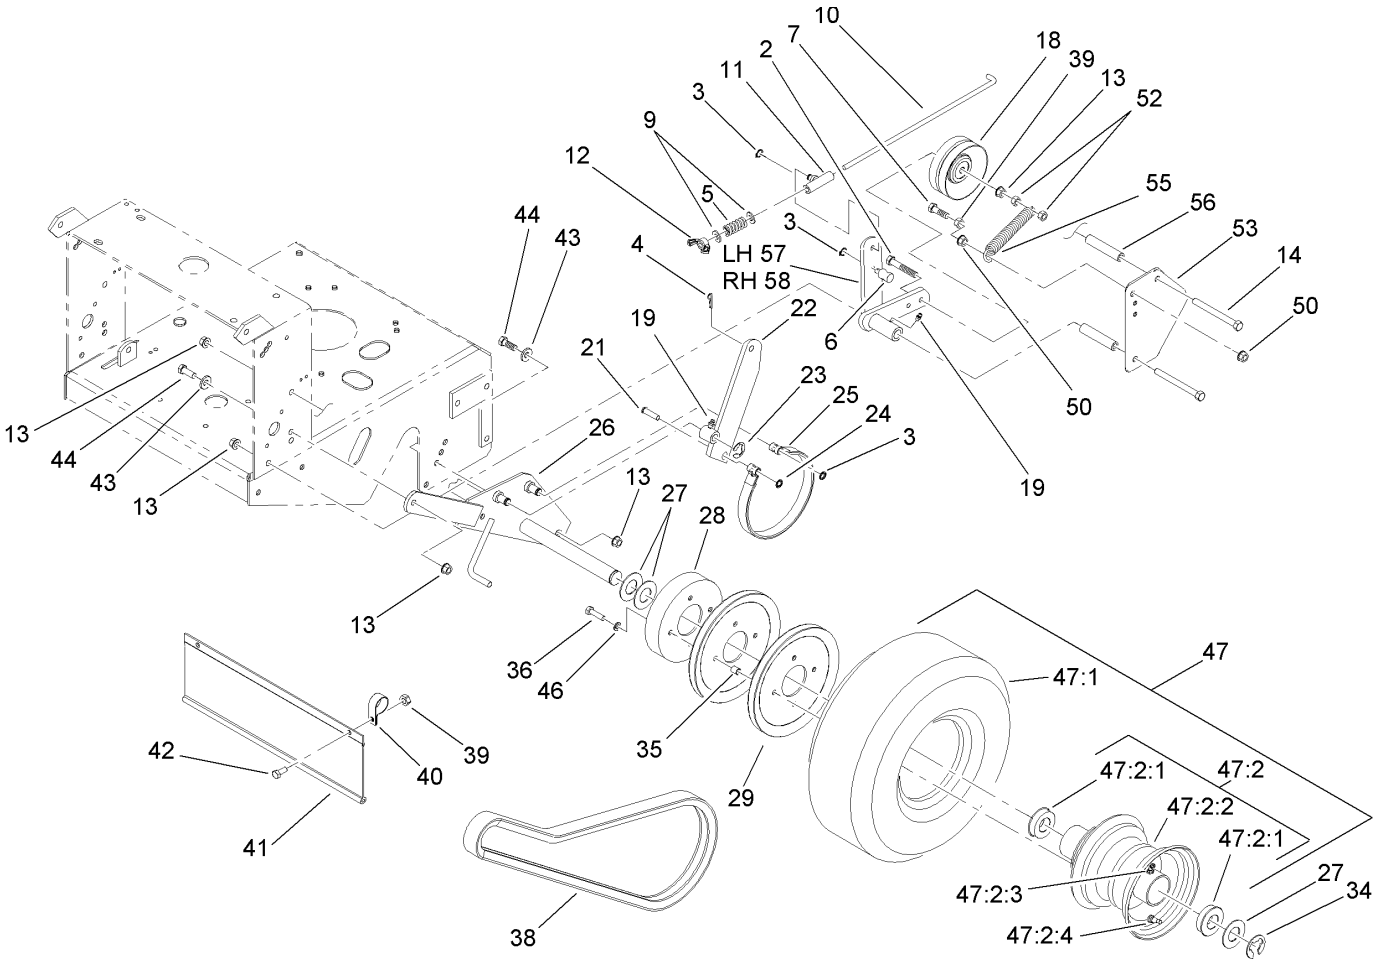

Drive Wheel and Brake Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	2	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer, 18 GA
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
46	1-805005	8	Washer-Lock
47	1-323719	2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
❷47:2:2		1	Rim ASM
❷47:2:3		1	Fitting-Grease
❷47:2:4		1	Stem-Valve
50	32128-20	4	Nut-HF
52	3296-39	4	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH

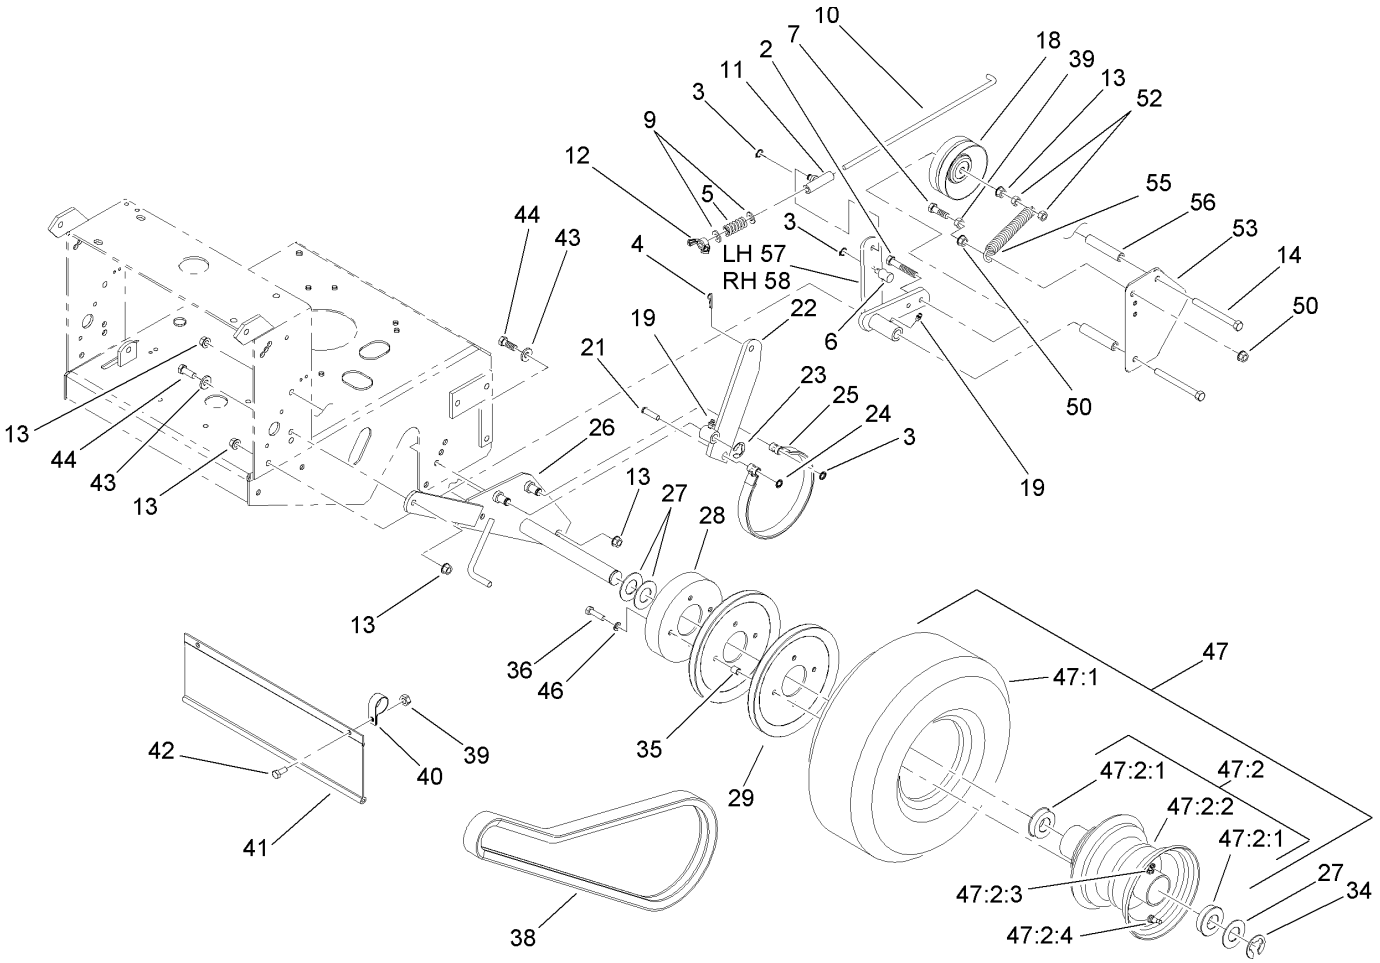

Drive Wheel and Brake Assembly (continued)


Ref	Part No.	Qty.	Description
58	103-1616-03	1	Arm-Idler, RH

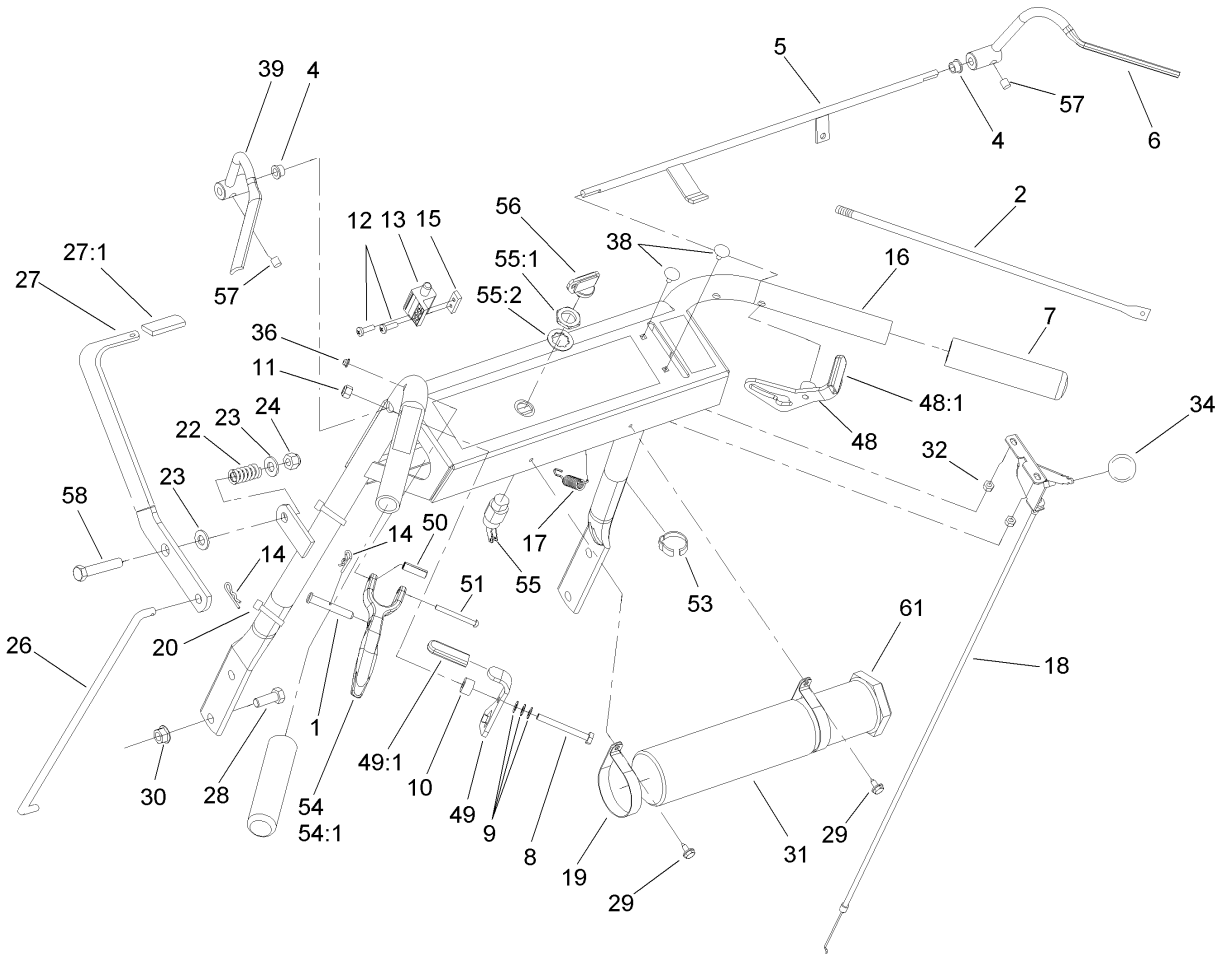

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Rod-Control, Operator Presence
6	106-5486	1	RH Operator Presence Control Lever ASM
7	104-9838	2	Grip-Foam
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	2	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	3	Pin-Hair
15	1-633181	1	Plate-Tapped
16	110-6906	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
20	1-303287	2	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper

Ref	Part No.	Qty.	Description
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	32128-21	4	Nut-HF
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	106-5485	1	LH Operator Presence Control Lever ASM
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Lever, Drive
❶52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	29-5560	1	Switch-On / Off
55:1	218-461	1	Nut-HH

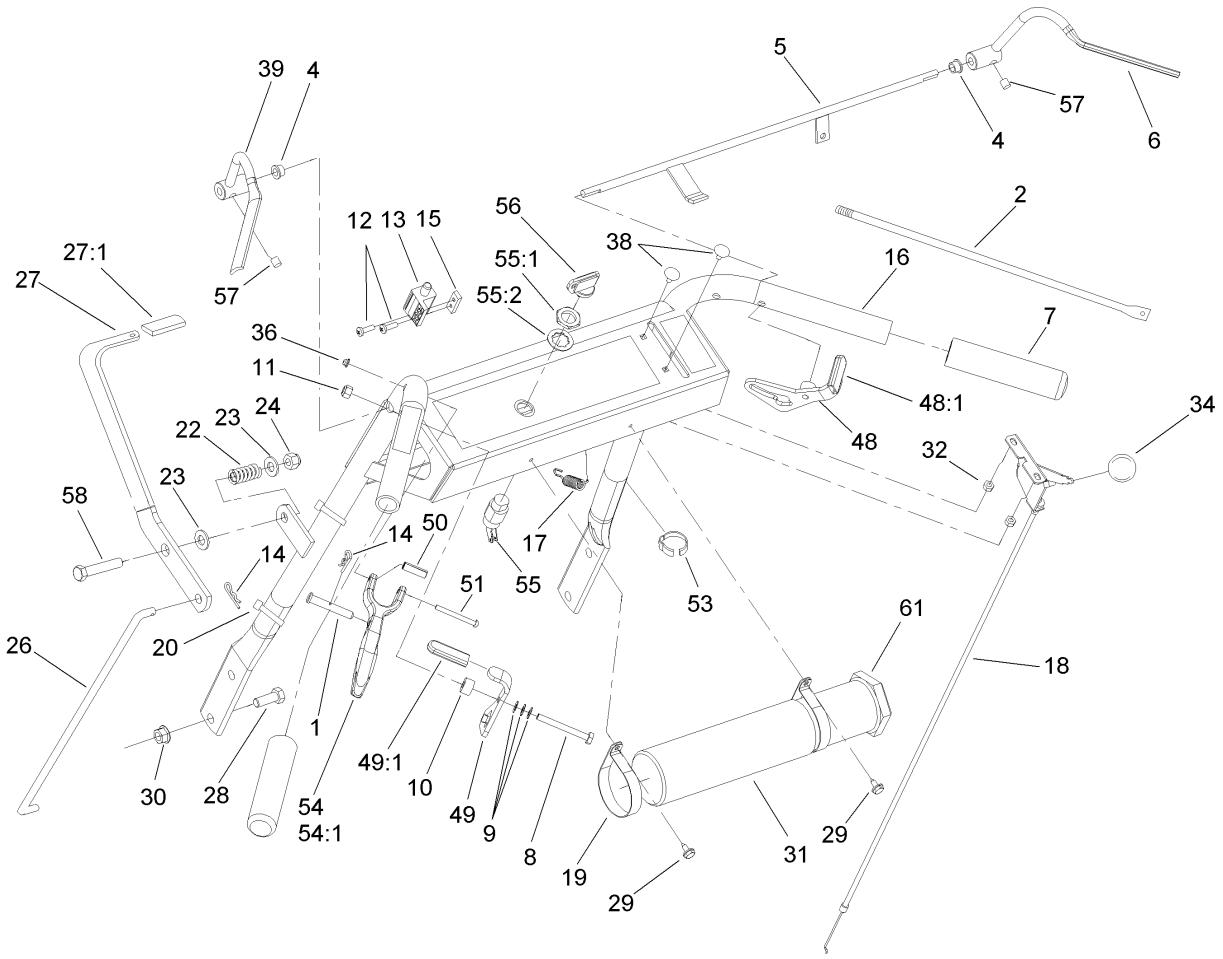


Handle and Control Assembly (continued)

Ref	Part No.	Qty.	Description
55:2	3254-5	1	Washer-Tooth
56	63-8360	1	Key-Ignition
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
61	104-7048	1	Cap-Housing

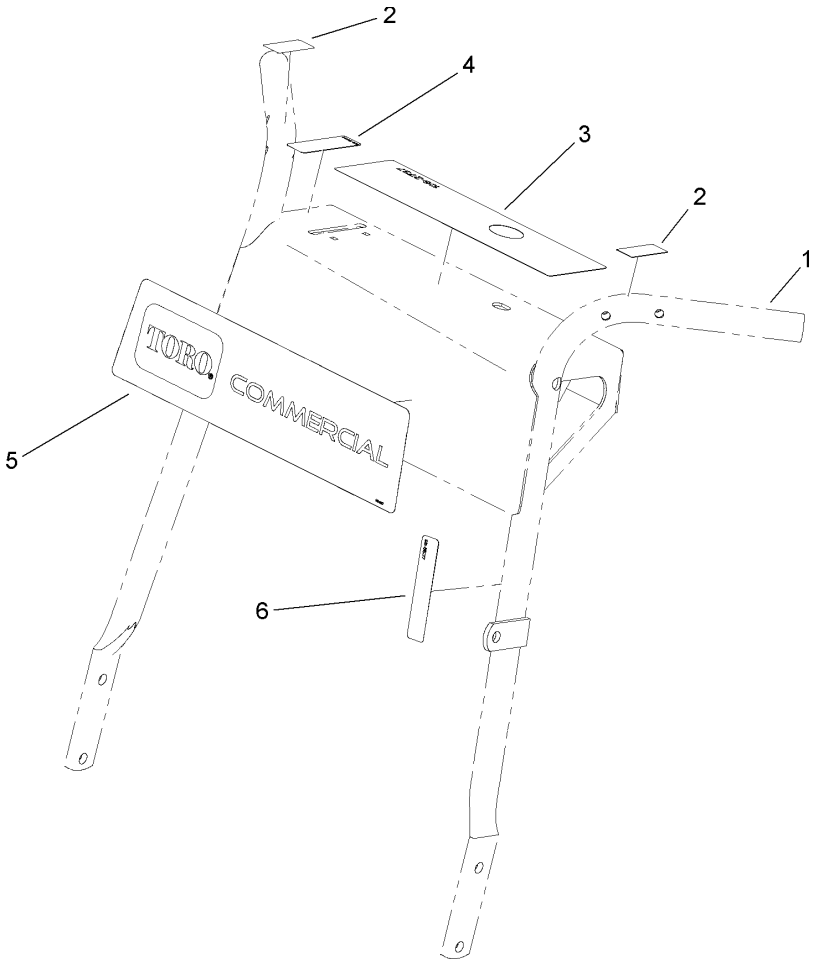

Handle Assembly No. 110-6906


Ref	Part No.	Qty.	Description
❷1		1	Handle ASM
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	110-6917	1	Decal
6	95-5537	1	Decal-Engage, Deck

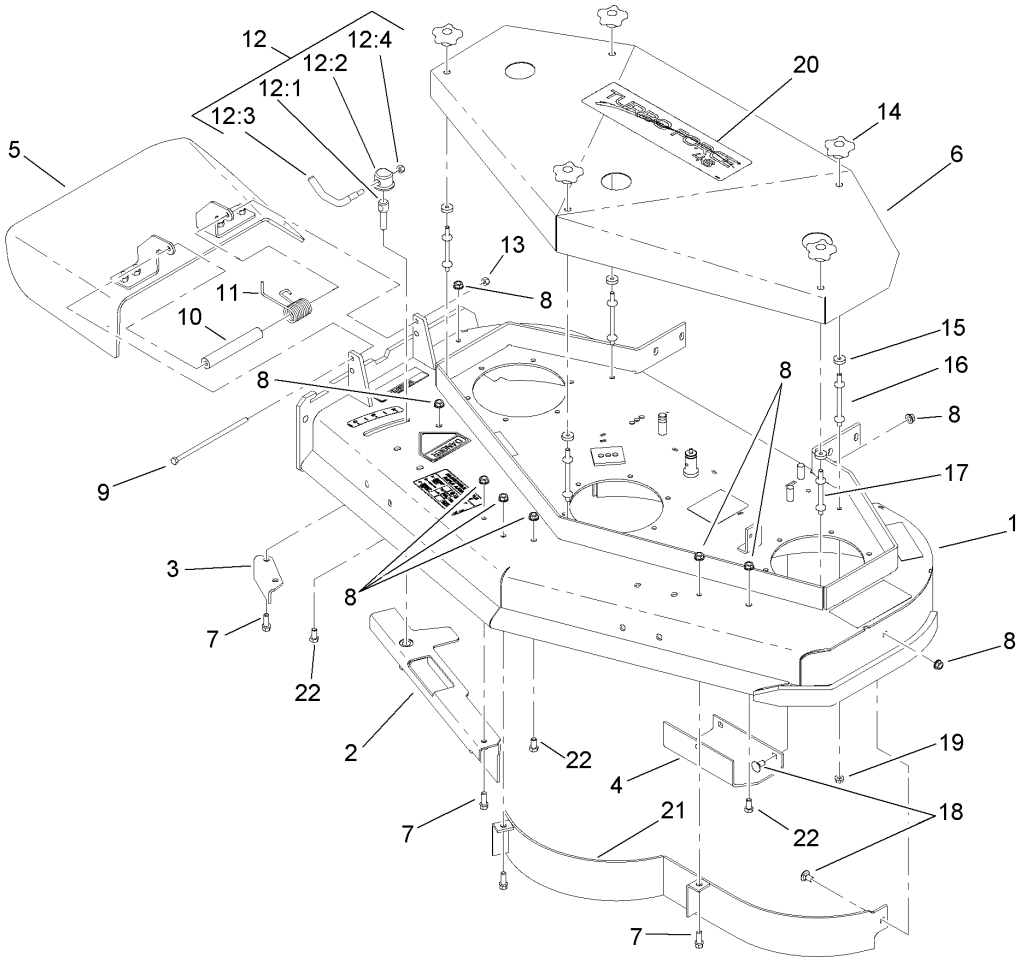

Deck Assembly


Ref	Part No.	Qty.	Description
1	110-4909	1	Deck ASM
2	110-0533-03	1	Baffle-Adjustable
3	110-0744-01	1	Baffle-Discharge
4	107-3166-01	1	Skid
5	110-0758	1	Deflector ASM
6	110-2119-01	1	Cover
7	92-1624	5	Screw
8	3290-357	12	Nut-HHF, Whiz
9	322-50	1	Screw-HH
10	105-4622	1	Spacer
11	104-8554	1	Spring-Torsion
12	107-1664	1	Lever ASM
12:1	106-3239	1	Screw-Lock
12:2	107-1644	1	Cap-Lock
12:3	106-3241	1	Lever-Lock
12:4	3296-29	1	Nut-Lock, NI
13	3296-29	1	Nut-Lock, NI
14	106-4161	5	Knob-Handle
15	1-323417	5	Washer
16	1-303536	3	Stud-Shield, Belt (Long)
17	1-303537	2	Stud-Shield, Belt (Short)
18	3231-1	7	Screw-CARR
19	32128-20	5	Nut-HF
20	110-6920	1	Decal

Ref	Part No.	Qty.	Description
21	110-0735-03	1	Baffle ASM
22	323-4	3	Screw-HH

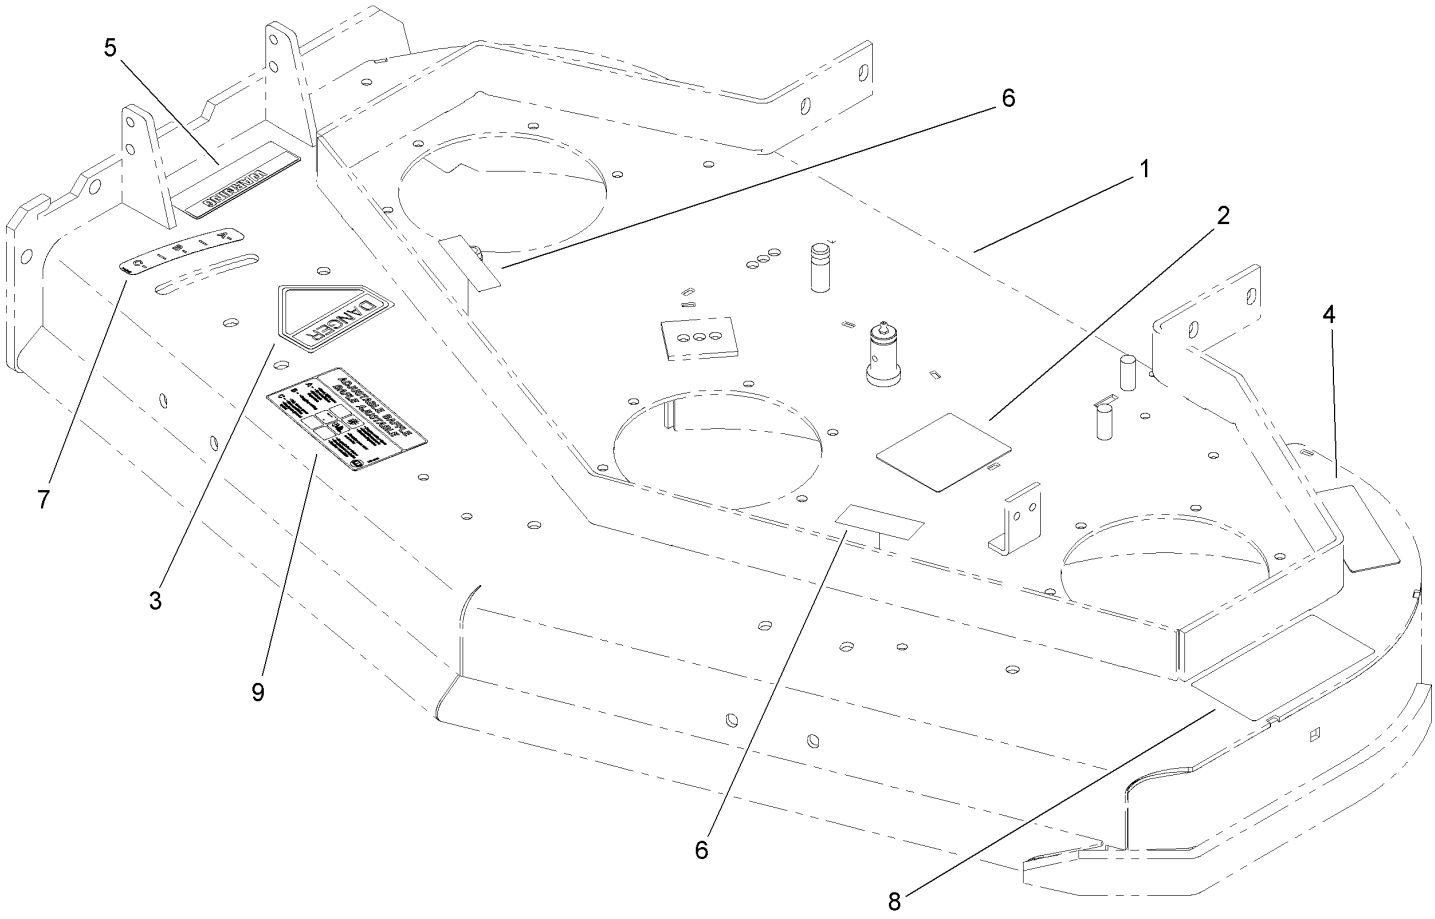


Deck Assembly No. 110-4909

Ref	Part No.	Qty.	Description
❷1		1	48 Inch Deck ASM
2	99-3943	1	Decal-Routing, Belt
3	43-8480	1	Decal-Danger
4	98-5130	1	Decal-Torque, Bolt
5	104-8569	1	Decal-Warning
6	98-5954	2	Decal-Cover, Missing
7	110-2067	1	Decal-Setting, Baffle
8	66-1340	1	Decal-Danger
9	110-2068	1	Decal-Adjustment, Baffle

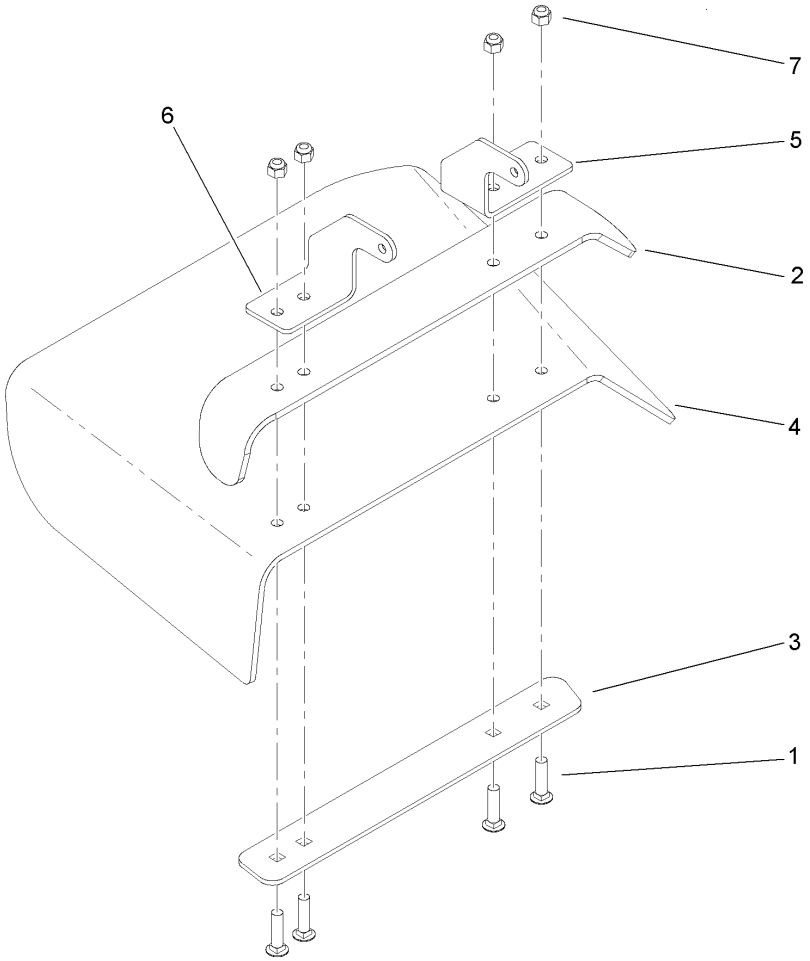

Deflector Assembly No. 110-0758


Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

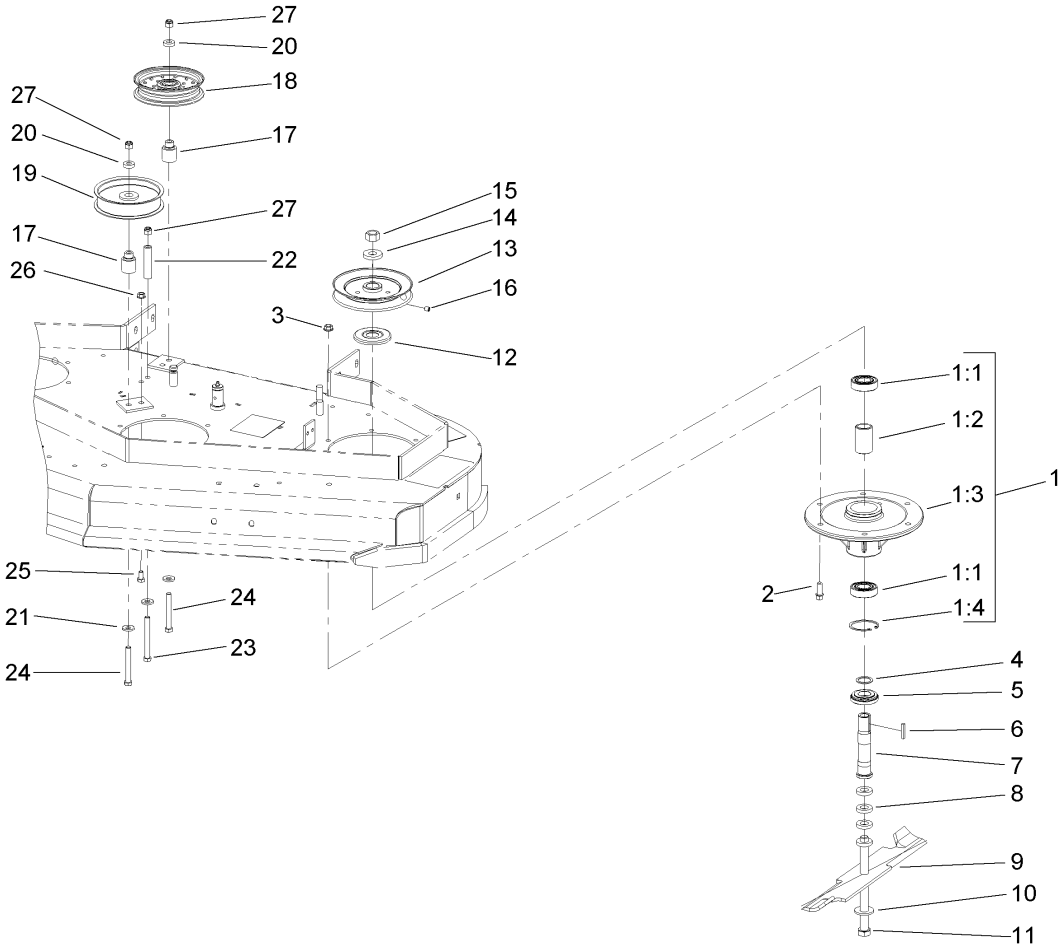

Sheave, Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	108-6697	3	Spindle Housing ASM
1:1	110-2118	2	Bearing
1:2	110-2116	1	Spacer-Bearing
1:3	108-6694	1	Housing-Spindle
1:4	32120-8	1	Ring-Snap
2	92-1624	18	Screw
3	3290-357	18	Nut-HHF, Whiz
4	110-4888	3	Washer-Spacer
5	103-2535	3	Spacer-Guard, Bottom
6	1-807267	3	Key
7	1-323529	3	Tube-Spindle, Short
8	1-323539	12	Spacer
9	107-3192-03	3	Blade-16.5 Inch (High Flow)
10	1-513208	3	Washer-Spring
11	1-800861	3	Screw-Cap, HH
12	103-1330	3	Guard-Bearing, Top
13	1-403183	3	Sheave
14	1-323339	3	Washer-Retainer, Sheave
15	3219-6	3	Nut-Hex
16	1-803310	3	Screw-Set
17	1-403184	2	Bushing-Idler
18	1-403186	1	Idler-Pulley, Flat
19	1-613098	1	Pulley-Idler
20	5-0652	2	Spacer


Ref	Part No.	Qty.	Description
21	98-5975	3	Washer-Belleville
22	1-403188	1	Spacer
23	323-15	1	Screw-HH
24	323-14	2	Screw-HH
25	322-2	1	Screw-HH
26	32128-20	1	Nut-HF
27	3296-39	3	Nut-Lock, NI

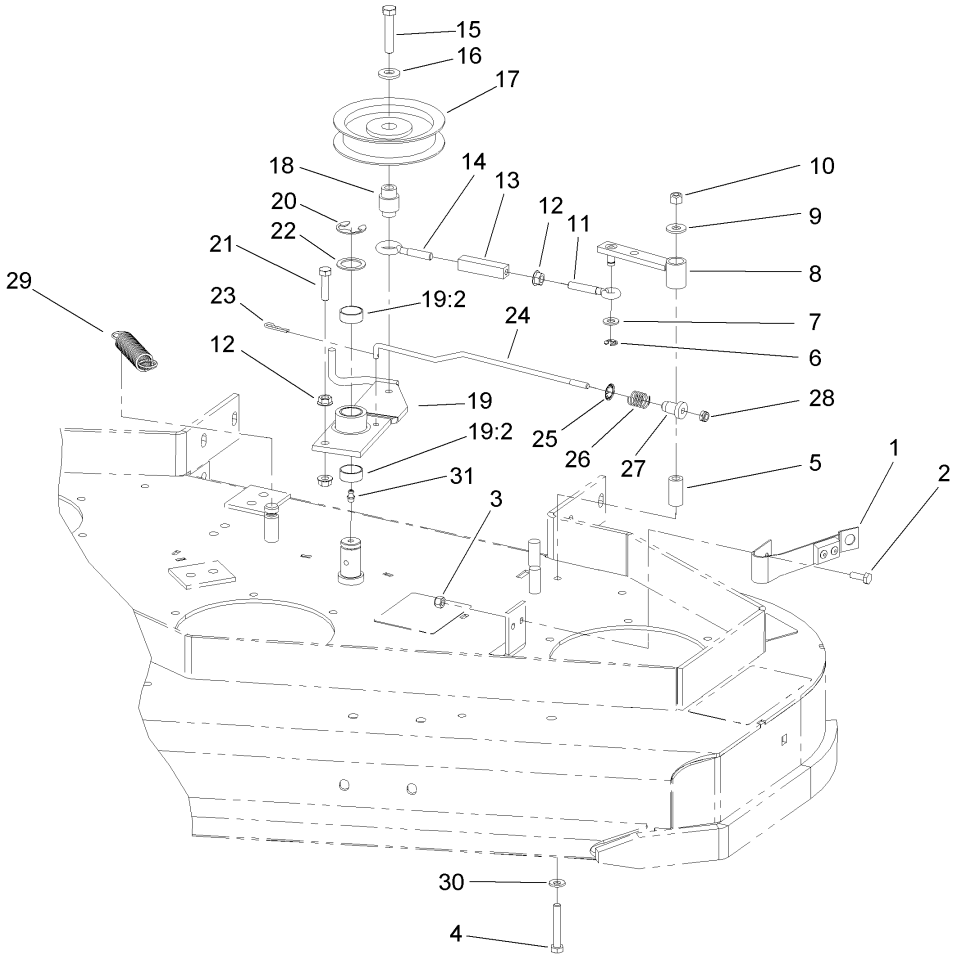

Idler Assembley


Ref	Part No.	Qty.	Description
1	1-324372	1	Pad And Spring ASM
2	321-4	2	Screw-HH
3	3296-42	2	Nut-Lock, NI
4	322-10	1	Screw-HH
5	1-403179	1	Tube-Pivot
6	32120-35	1	Ring-Retaining, EXT
7	3256-23	1	Washer-Flat
8	1-322235	1	Arm-Assist
9	3256-3	1	Washer-Flat
10	3296-29	1	Nut-Lock, NI
11	1-303238	1	Eyebolt-Thread, RH
12	32128-20	3	Nut-HF
13	1-303236	1	Body-Turnbuckle
14	1-303348	1	Eyebolt-Thread, LH
15	702809	1	Screw-Cap
16	98-5975	1	Washer-Belleville
17	1-603843	1	Pulley-Idler
18	1-303434	1	Bushing-Engagement
19	103-3600	1	Idler Arm ASM
19:2	1-323729	2	Sleeve-Bearing
20	32151-103	1	Ring-Retaining, EXT
21	322-6	1	Screw-HH
22	1-303352	1	Washer-Spindle
23	1-806003	1	Pin-Hair

Ref	Part No.	Qty.	Description
24	110-4932	1	Rod-Brake
25	1-323748	1	Ring-Push On
26	1-323747	1	Spring-Compression
27	1-323746	1	Spacer-Flanged
28	3296-56	1	Nut-Lock, NI
29	1-323071	1	Spring-Extension
30	1-303334	1	Washer-Spring
31	302-19	1	Fitting-Grease

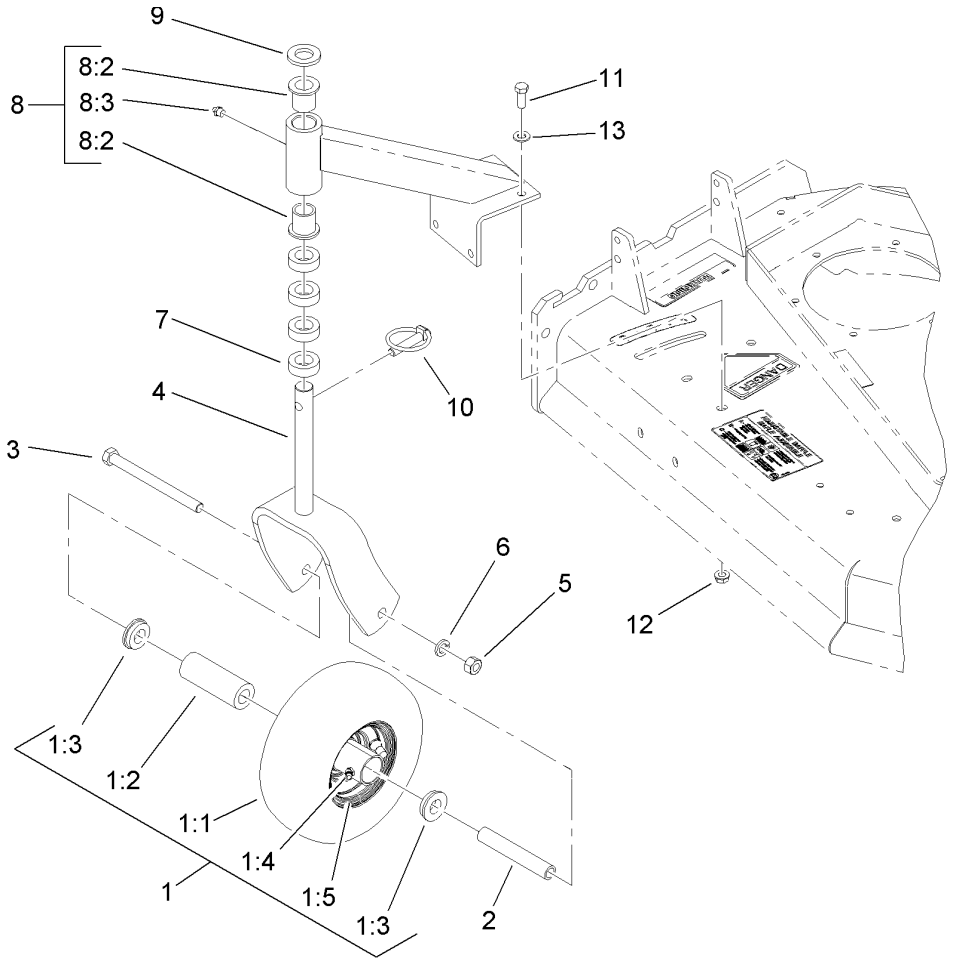


Caster Assembly

Ref	Part No.	Qty.	Description
1	110-5023	2	Wheel And Tire ASM
❷1:1		1	Tire
1:2	1-513809	1	Bearing
1:3	1-513810	2	Bushing
1:4	302-61	1	Zerk
❷1:5		1	Wheel
2	1-513547	2	Spacer
3	325-20	2	Screw-HH
4	1-322145-01	2	Fork
5	3217-9	2	Nut-HH
6	3253-7	2	Washer-Lock
7	1-303314	8	Spacer-Caster
8	110-2130	2	Support ASM
8:2	1-303514	2	Bearing-Flanged
8:3	302-52	1	Fitting-Grease
9	1-513338	2	Washer-Flat
10	1-809020	2	Pin
11	323-6	8	Screw-HH
12	3290-357	8	Nut-HHF, Whiz
13	3256-24	8	Washer-Flat

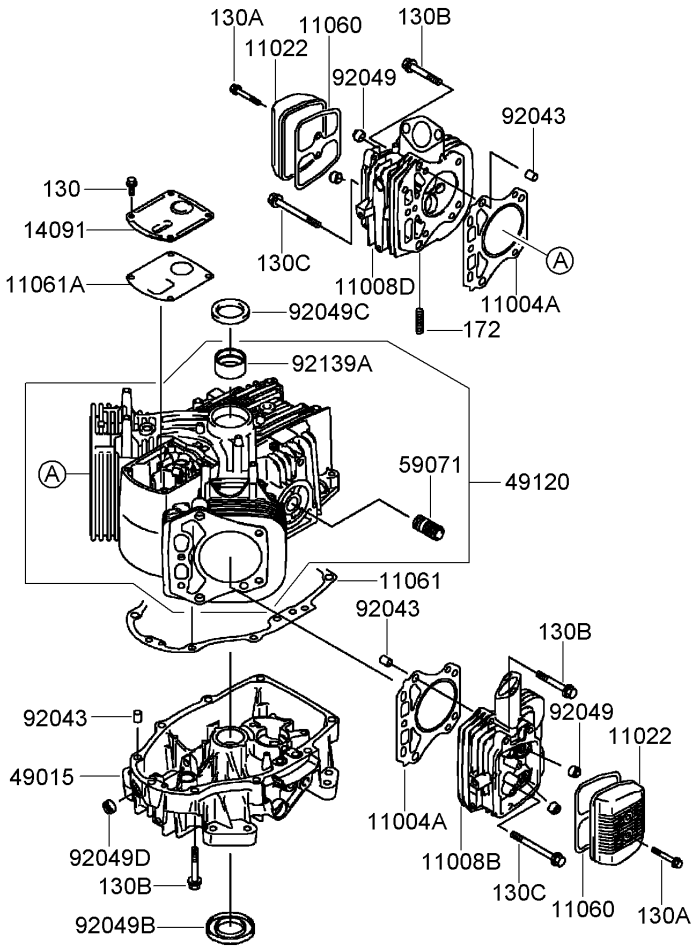


Cylinder and Crankcase Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹11004A	11004-7018	2	Gasket-Head
❹11008B	11008-7021	1	Head-Cylinder, No. 2
❹11008D	11008-7022	1	Head-Cylinder, No. 1
❹11022	11022-7003	2	Case-Rocker
❹11060	11060-7001	2	Gasket-Case, Rocker
❹11061	11061-7007	1	Gasket-Cover, Crankcase
❹11061A	11061-7008	1	Gasket-Breather
❹14091	14091-7007	1	Cover
❹49015	49015-7032	1	Cover-Crankcase
❹49120	49120-7015	1	Crankcase
❹59071	59071-2079	1	Joint
❹92043	92043-7001	6	Pin
❹92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❹92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❹92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❹92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❹92139A	92139-7008	1	Bushing
❹130	130B0612	4	Bolt-Flanged (6X12)
❹130A	130B0640	4	Bolt-Flanged (6X40)
❹130B	130T0850	17	Bolt-Flanged (8X50)
❹130C	130T0875	2	Bolt-Flanged (8X75)
❹172	172G0818	4	Bolt-Stud (8X18)

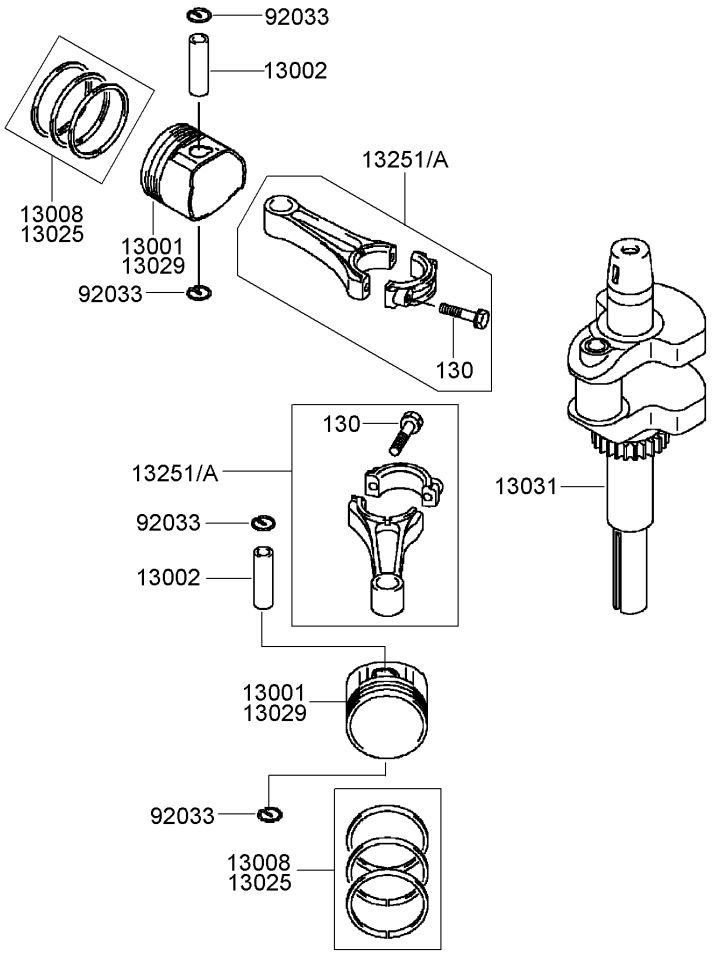


Piston and Crankshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13001	13001-7009	2	Piston-Engine
❹13002	13002-7001	2	Pin-Piston
❹13008	13008-7001	2	Ring Set-Piston
❹13025	13025-7003	1	Ring Set-Piston (L 0.50)
❹13029	13029-7005	1	Piston-Engine (L 0.50)
❹13031	13031-7033	1	Crankshaft
❹13251	13251-7007	2	Connecting Rod ASM
❹13251A	13251-7008	2	Connecting Rod ASM (0.50)
❹92033	92033-7005	4	Ring-Snap
❹130	130G0630	4	Bolt-Flanged (6X30)

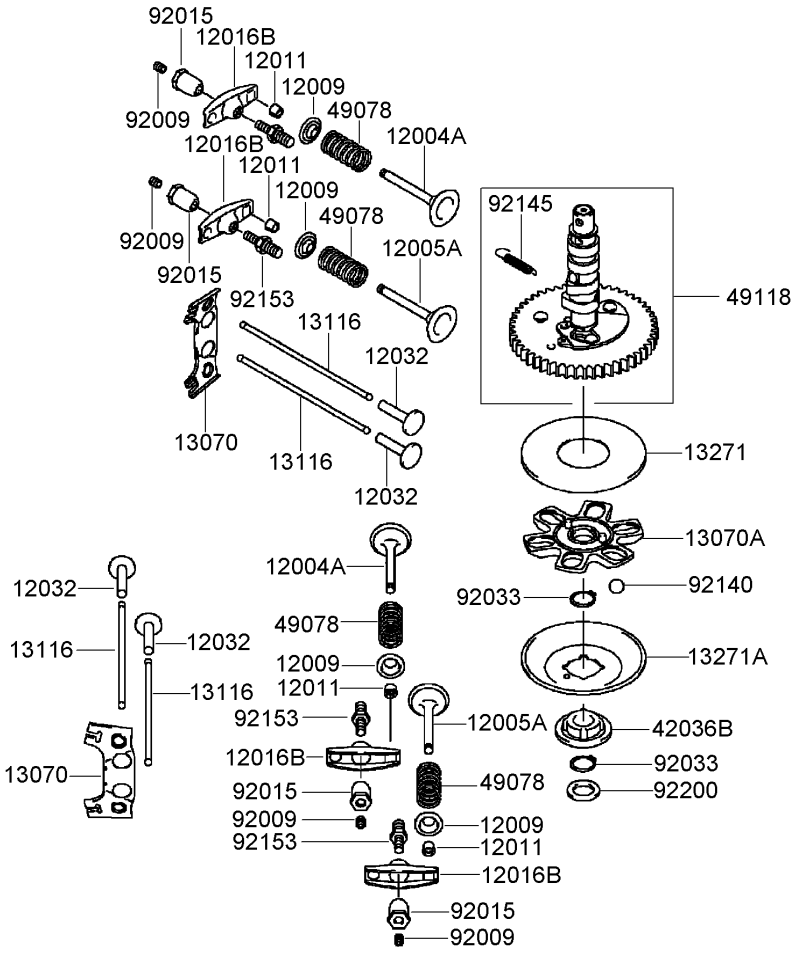


Valve and Camshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹12004A	12004-7005	2	Valve-Intake
❹12005A	12005-7006	2	Valve-Exhaust
❹12009	12009-7001	4	Retainer-Spring, Valve
❹12011	12011-2056	8	Collet
❹12016B	12016-7008	4	Arm-Rocker
❹12032	12032-7001	4	Tappet
❹13070	13070-7001	2	Guide
❹13070A	13070-7004	1	Guide
❹13116	13116-2057	4	Rod-Push
❹13271	13271-7007	1	Plate
❹13271A	13271-7021	1	Plate-Governor
❹42036B	42036-7010	1	Sleeve
❹49078	49078-7001	4	Spring-Valve, Engine
❹49118	49118-7009	1	Camshaft
❹92009	92009-2341	4	Screw
❹92015	92015-2253	4	Nut
❹92033	92033-7001	2	Ring-Snap
❹92140	92140-7002	6	Ball
❹92145	92145-7001	1	Spring
❹92153	92153-7019	4	Bolt
❹92200	92200-7001	1	Washer

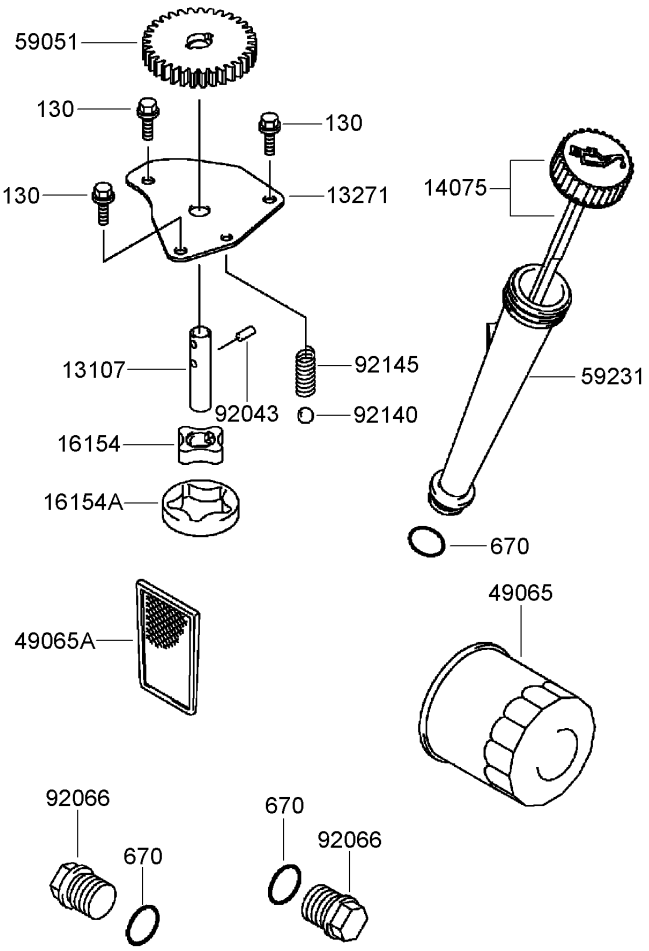


Lubrication Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13107	13107-7009	1	Shaft
❹13271	13271-7017	1	Plate
❹14075	14075-7009	1	Cap ASM
❹16154	16154-2053	1	Rotor-Pump (In)
❹16154A	16154-2054	1	Rotor-Pump (Out)
❹49065	49065-2078	1	Filter-Oil
❹49065A	49065-7004	1	Filter-Oil
❹59051	59051-7011	1	Gear-Spur
❹59231	59231-7003	1	Filler
❹92043	92043-7003	2	Pin
❹92066	92066-7003	2	Plug
❹92140	92140-7003	1	Ball
❹92145	92145-7002	1	Spring
❹130	130B0612	3	Bolt-Flanged (6X12)
❹670	670D2016	3	O-Ring (16Mm)

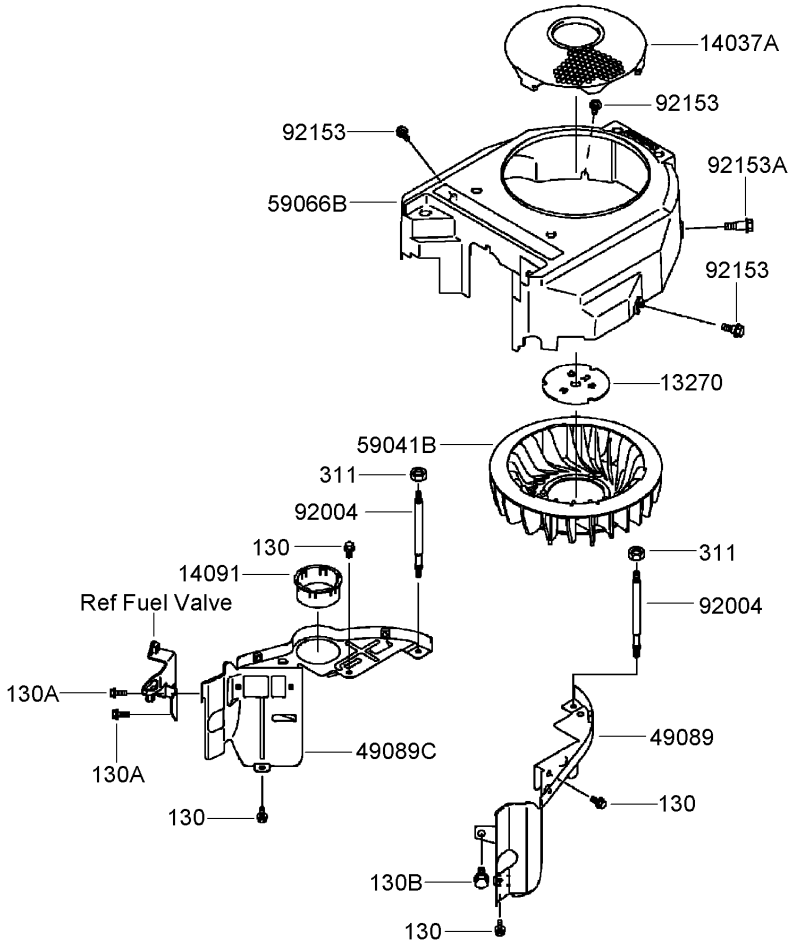


Cooling Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13270	13270-7007	1	Plate
❹14037A	14037-7025-9H	1	Screen
❹14091	14091-7009	1	Cover
❹49089	49089-7044	1	Shroud-Engine
❹49089C	49089-7061	1	Shroud-Engine
❹59041B	59041-7012	1	Fan
❹59066B	59066-7036	1	Housing-Fan
❹92004	92004-7007	2	Stud
❹92153	92153-7007	3	Bolt
❹92153A	92153-7008	1	Bolt
❹130	130B0612	4	Bolt-Flanged (6X12)
❹130A	130B0616	2	Bolt-Flanged (6X16)
❹130B	130B0816	1	Bolt-Flanged (8X16)
❹311	311F0600	2	Nut-Hex (6Mm)

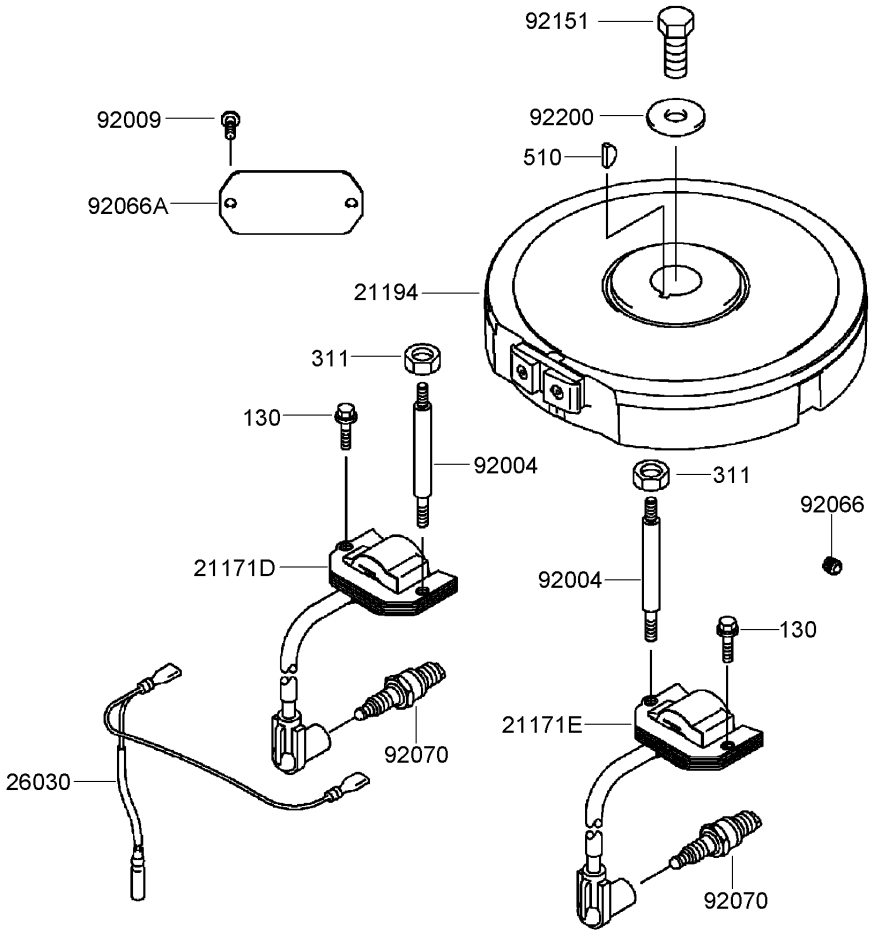


Electric Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹21171D	21171-7026	1	Ignition Coil ASM
❹21171E	21171-7027	1	Ignition Coil ASM
❹21194	21194-7013	1	Flywheel
❹26030	26030-7001	1	Harness
❹92004	92004-7008	2	Stud
❹92009	92009-2308	2	Screw
❹92066	92066-7002	1	Plug
❹92066A	92066-7005	1	Plug
❹92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
❹92151	92151-2097	1	Bolt (12X30)
❹92200	92200-7002	1	Washer
❹130	130B0620	2	Bolt-Flanged (6X20)
❹311	311F0600	2	Nut-Hex (6Mm)
❹510	510A5100	1	Key-Woodruff

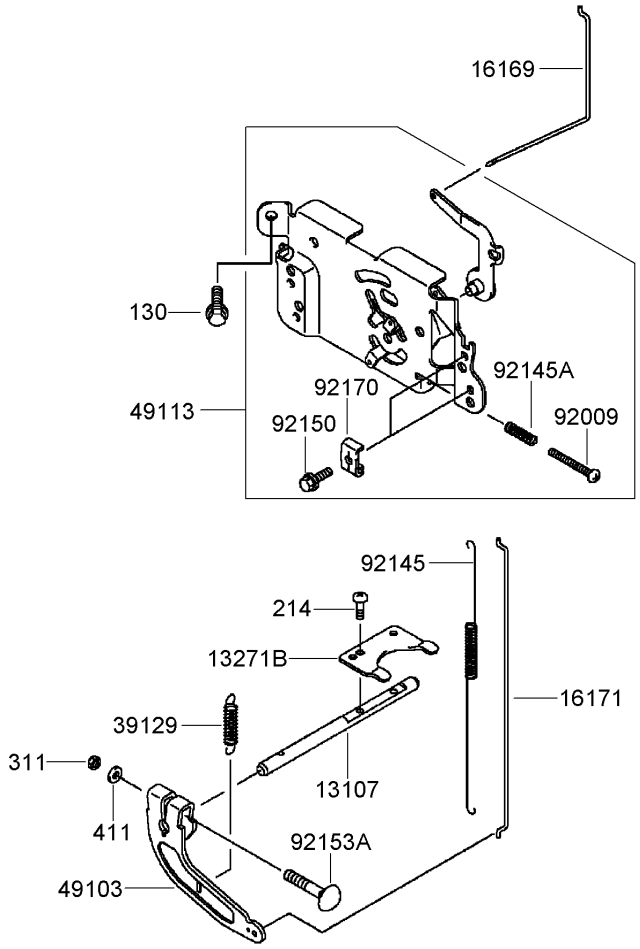

Control Equipment Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❹13107	13107-7010	1	Shaft
❹13271B	13271-7032	1	Plate
❹16169	16169-7012	1	Link-Choke
❹16171	16171-7007	1	Link
❹39129	39129-7003	1	Spring-Governor
❹49103	49103-7004	1	Arm-Governor
❹49113	49113-7024	1	Panel-Control
❹92009	92009-7007	1	Screw (4X35)
❹92145	92145-7003	1	Spring
❹92145A	92145-7005	1	Spring
❹92150	92150-2182	2	Bolt (5X18)
❹92153A	92153-7033	1	Bolt (6X35)
❹92170	92170-7001	2	Clamp
❹130	130B0612	2	Bolt-Flanged (6X12)
❹214	214B0408	2	Screw-Pan (4X8)
❹311	311B0600	1	Nut-Hex (6Mm)
❹411	411B0600	1	Washer-Plain (6Mm)

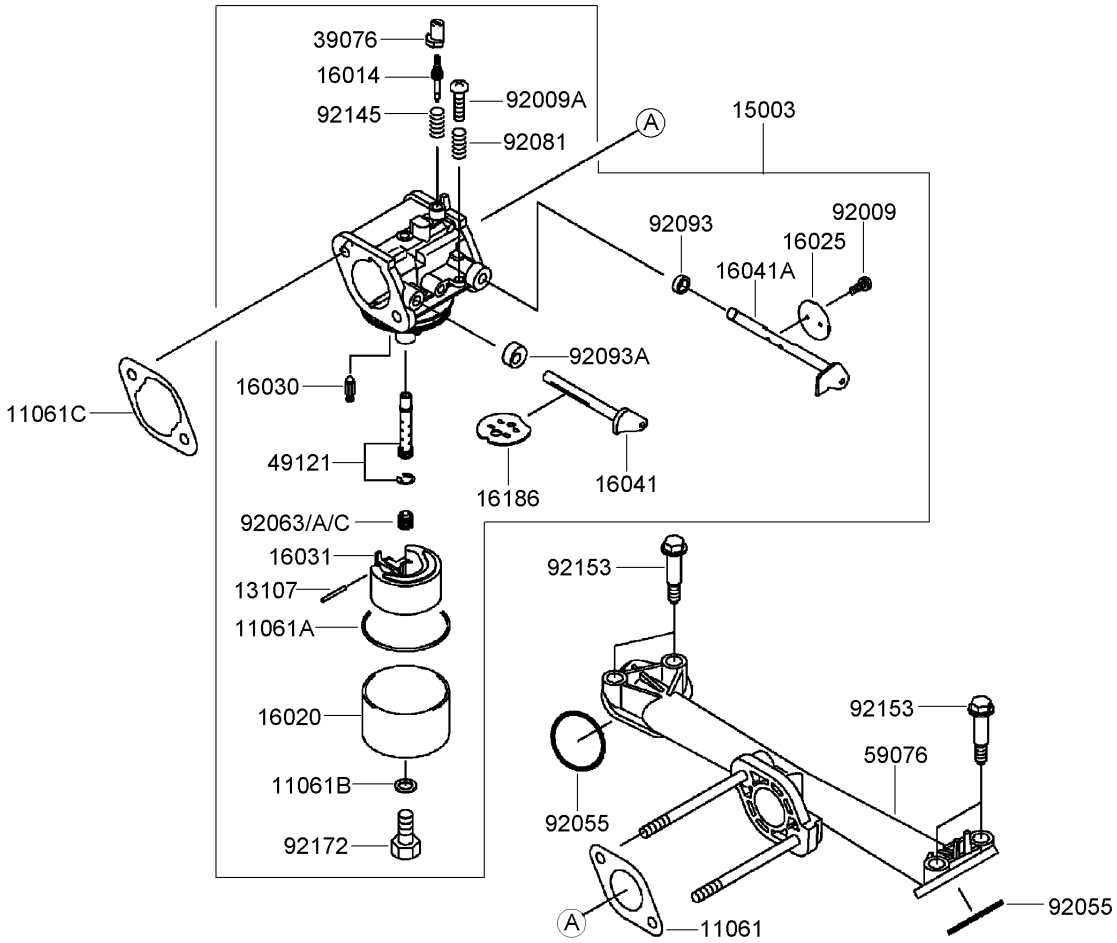

Carburetor Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹11061	11061-7004	1	Gasket-Insulator
❹11061A	11061-7009	1	Gasket-Chamber
❹11061B	11061-7010	1	Gasket-Screw
❹11061C	11061-7018	1	Gasket-Cleaner, Air
❹13107	13107-7018	1	Shaft
❹15003	15003-7061	1	Carburetor ASM
❹16014	16014-7002	1	Screw-Pilot, Air
❹16020	16020-7003	1	Chamber-Float
❹16025	16025-7006	1	Valve-Throttle
❹16030	16030-7003	1	Valve-Float
❹16031	16031-7002	1	Float
❹16041	16041-7016	1	Shaft-Choke, Carburetor
❹16041A	16041-7018	1	Shaft-Throttle, Carburetor
❹16186	16186-7002	1	Choke Valve ASM
❹39076	39076-7001	1	Limiter
❹49121	49121-7001	1	Nozzle-Main
❹59076	59076-7005	1	Manifold-Intake
❹92009	92009-2083	2	Screw
❹92009A	92009-2349	1	Screw
❹92055	92055-7007	2	O-Ring (I D 31)
❹92063	92063-7026	1	Jet-Main, No. 88
❹92063A	92063-7028	1	Jet-Main, No. 85
❹92063C	92063-7029	1	Jet-Main, No. 82
❹92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
❹92093	92093-2100	1	Seal
❹92093A	92093-7003	1	Seal
❹92145	92145-7015	1	Spring
❹92153	92153-7009	4	Bolt
❹92172	92172-7002	1	Screw

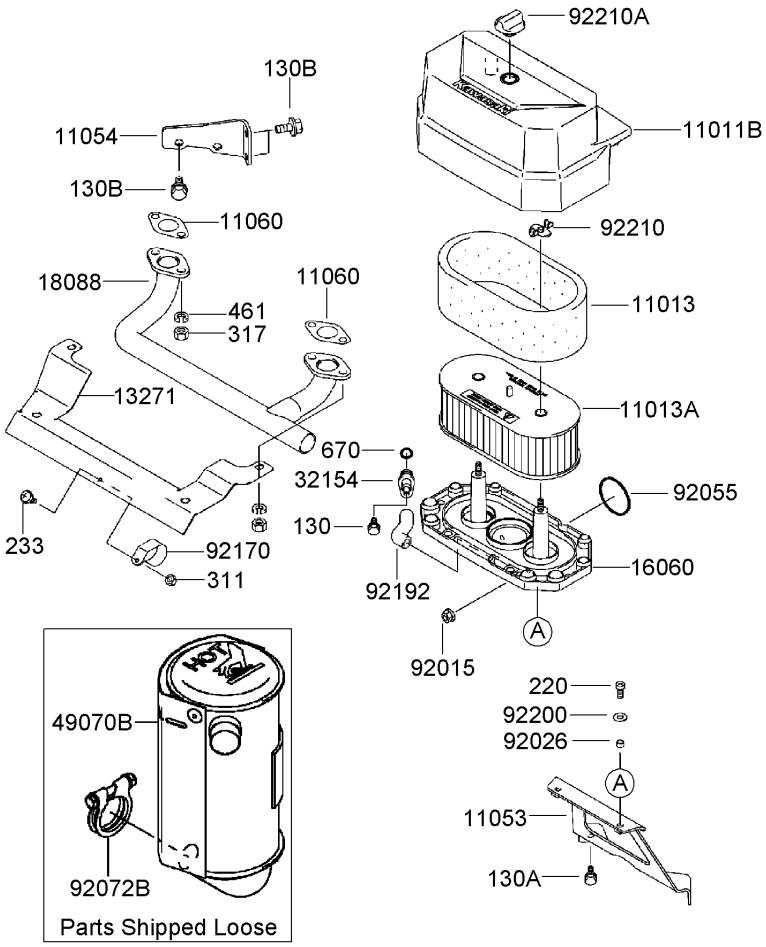

Air Filter and Muffler Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❹11011B	11011-7045	1	Case-Filter, Air
❹11013	11013-7025	1	Element-Filter, Air
❹11013A	11013-7031	1	Element-Filter, Air
❹11053	11053-7022	1	Bracket
❹11054	11054-7002-9H	1	Bracket
❹11060	11060-7021	2	Gasket-Muffler
❹13271	13271-7022	1	Plate
❹16060	16060-7016	1	Pipe-Intake
❹18088	18088-7001	1	Pipe-Exhaust
❹32154	32154-7006	1	Pipe
❹49070B	49070-7021	1	Muffler
❹92015	92015-1193	2	Nut
❹92026	92026-7001	2	Spacer (6.2X7.9X5)
❹92055	92055-7015	1	O-Ring
❹92072B	92072-7012	1	Band
❹92170	92170-7002	1	Clamp
❹92192	92192-7010	1	Tube
❹92200	92200-2070	2	Washer
❹92210	92210-7004	2	Nut
❹92210A	92210-7019	1	Nut
❹130	130B0610	1	Bolt-Flanged (6X10)
❹130A	130B0612	2	Bolt-Flanged (6X12)
❹130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
❹220	220B0614	2	Screw-Pan, Cross (6X14)
❹233	233B0416	1	Screw (4X16)
❹311	311B0400	1	Nut-Hex (4Mm)
❹317	317R0800	4	Nut-Hex, Small (8Mm)
❹461	461F0800	4	Washer-Spring (8Mm)
❹670	670B2010	1	O-Ring (10Mm)

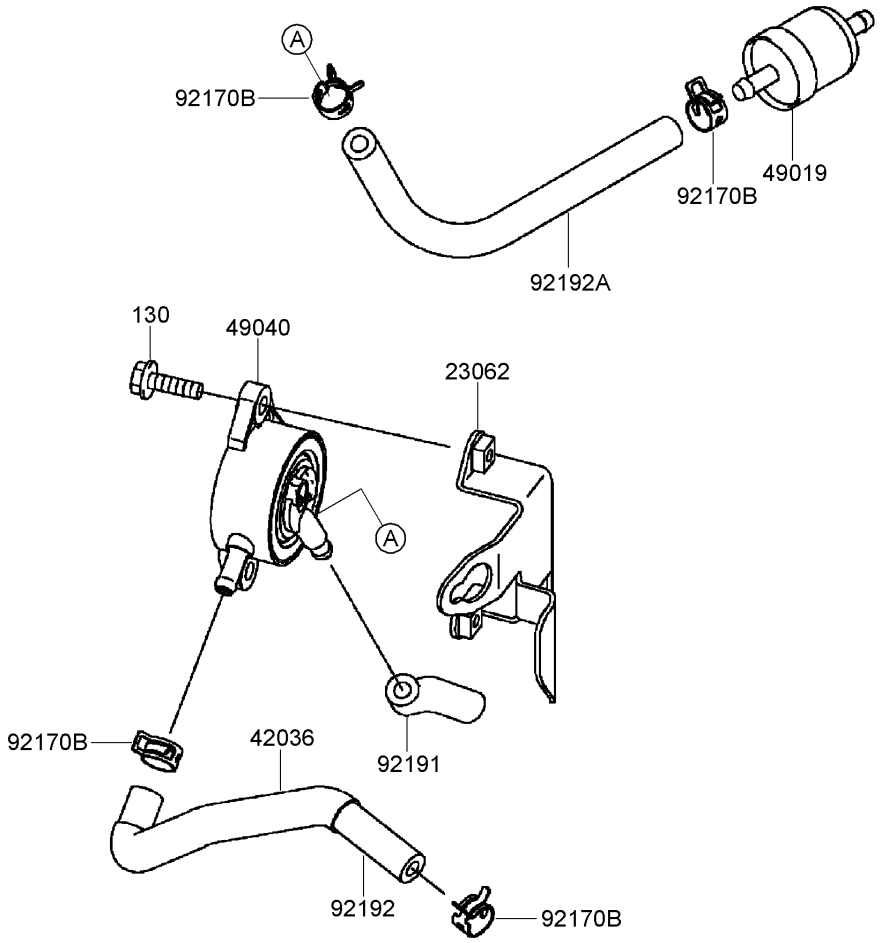

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹23062	23062-7004-9H	1	Bracket
❹42036	42036-7012	1	Sleeve
❹49019	49019-7001	1	Filter-Fuel
❹49040	49040-7001	1	Pump-Fuel
❹92170B	92170-2088	4	Clamp
❹92191	92191-7002	1	Tube
❹92192	92192-7035	1	Tube (6.35X12.7X170)
❹92192A	92192-7037	1	Tube (6.35X12.7X160)
❹130	130B0620	2	Bolt-Flanged (6X20)

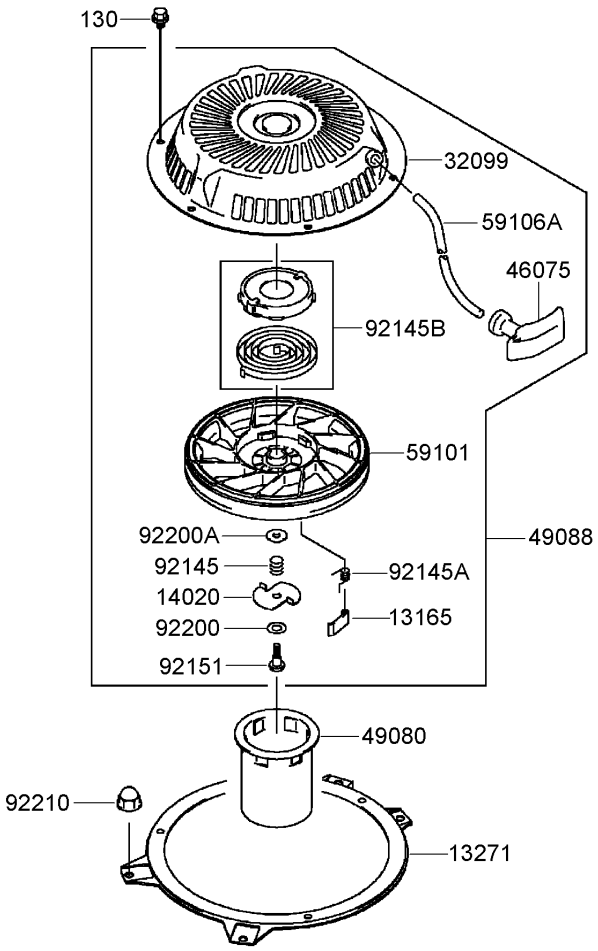

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13165	13165-7001	2	Pawl-Starter, Recoil
❹13271	13271-7003-9H	1	Plate
❹14020	14020-7001	1	Retainer
❹32099	32099-7002	1	Case-Starter, Recoil
❹46075	46075-7001	1	Grip-Starter, Recoil
❹49080	49080-7001	1	Pulley-Starting
❹49088	49088-7013	1	Starter-Recoil
❹59101	59101-7001	1	Reel-Starter, Recoil
❹59106A	59106-7005	1	Rope
❹92145	92145-7006	1	Spring
❹92145A	92145-7007	2	Spring
❹92145B	92145-7008	1	Spring
❹92151	92151-7008	1	Bolt
❹92200	92200-7004	1	Washer
❹92200A	92200-7005	1	Washer
❹92210	92210-0003	4	Nut
❹130	130B0608	3	Bolt-Flanged (6X8)

56033



56070



56080



56080A



Label Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹56033	56033-7001	1	Label-Manual
❹56070	56070-7001	1	Label-Warning
❹56080	56080-2077	1	Label-Brand
❹56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 39688 - Commercial Walk-Behind Mower, Fixed Deck, Pistol Grip, Gear Drive with 48in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Low Flow, 16.5 Inch	107-3193-03
Blade-Mid Flow, 16.5 Inch	107-3194-03
Blade-Atomic, 16.5 Inch	107-3195-03
Blade-Recycling, 16.5 Inch	107-3196-03
Bagging Enhancement Kit	108-4091
Blade-Hi Flow, 16.5 Inch (6 Pack)	110-0414
Blade-Lo Flow, 16.5 Inch (6 Pack)	110-0415
Blade-Recycler, 16.5 Inch (6 Pack)	110-0416
Blade-Atomic, 16.5 Inch (6 Pack)	110-0417
Blade-Mid Flow, 16.5 Inch (6 Pack)	110-0418
48 Inch Recycler Kit	110-2060
Weight Kit	110-2085
Soft Bag (3 Bushel)	30104
Sulky	30109

NOTES

NOTES


TORO®