
FORM NO. 3315–870

TORO®

MODEL NO. 03704–30001 & UP
MODEL NO. 03705–30001 & UP

PARTS CATALOG

REELMASTER® 4500D 4wd
Traction Unit

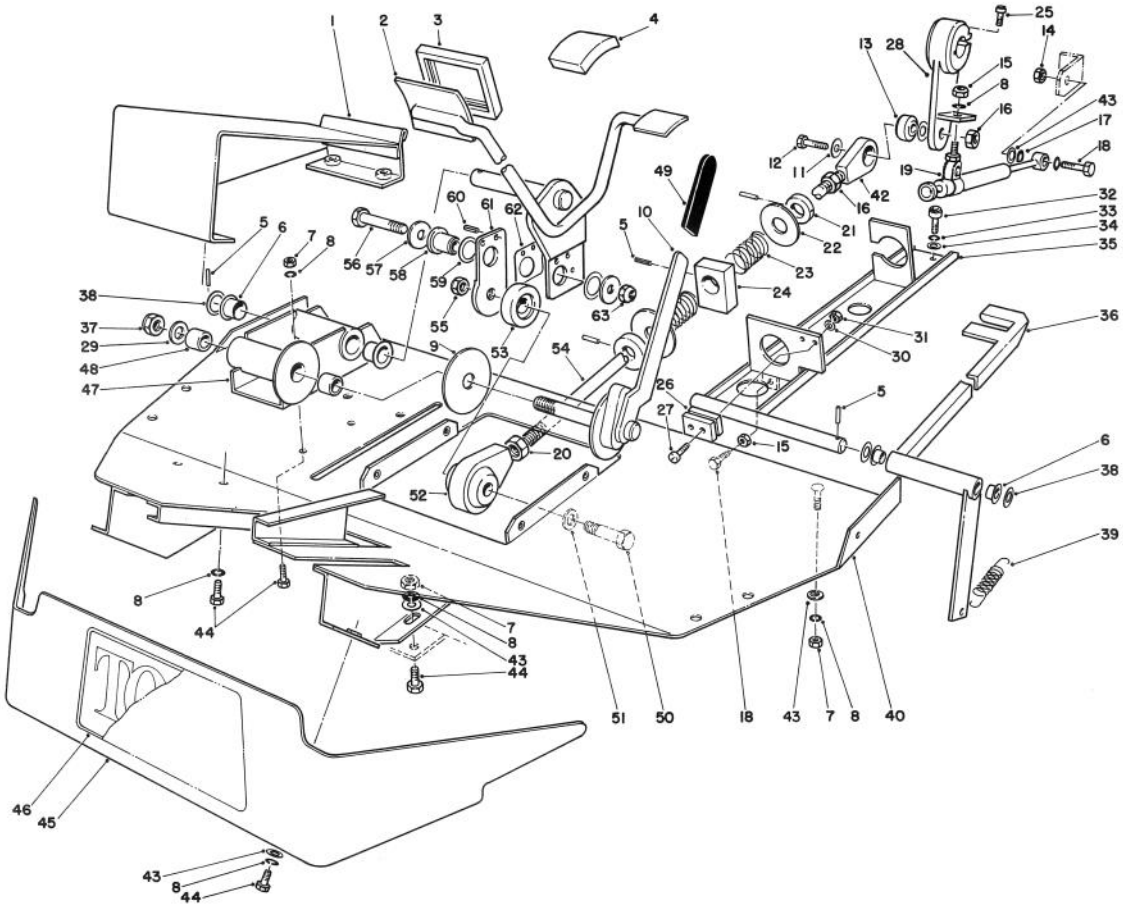

T–0113


FOOT REST & PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	58–9580	Foot Rest	1
2	76–3280	Pedal – Traction	1
3	74–9100	Pad – Forward	1
4	74–9110	Pad – Reverse	1
5	60–2110	Pin – Roll	5
6	48–6790	Bushing – Flanged	4
7	48–7930	Nut – Hex.	7
8	48–9570	Washer – Lock	15
9	3–2858	Disc – Friction	1
10	60–1130	Lever	1
11	3290–483	Washer	3
12	325–9	Bolt	1
13	47–7030	Bushing – Rubber	1
14	48–9510	Nut – Hex.	1
15	48–7930	Nut – Hex.	3
16	3217–9	Nut – Hex.	2

Ref. No.	Part No.	Description	No. Used
17	3290–482	Washer	2
18	48–7740	Bolt	3
19	48–7100	Dampener	1
20	3219–5	Nut – Hex.	1
21	58–4310	Ring	2
22	58–5100	Washer	2
23	60–5700	Spring	2
24	58–9010	Block	1
25	60–6540	Bolt	1
26	29–6163	Switch	2
27	3250–40	Screw	2
28	58–7800	Lever Pump	1
29	60–6990	Washer	1
30	3255–24	Washer – Lock	2
31	3217–29	Nut – Hex.	2
32	3274–7	Bolt	2

TPS

© The TORO Company – 1993

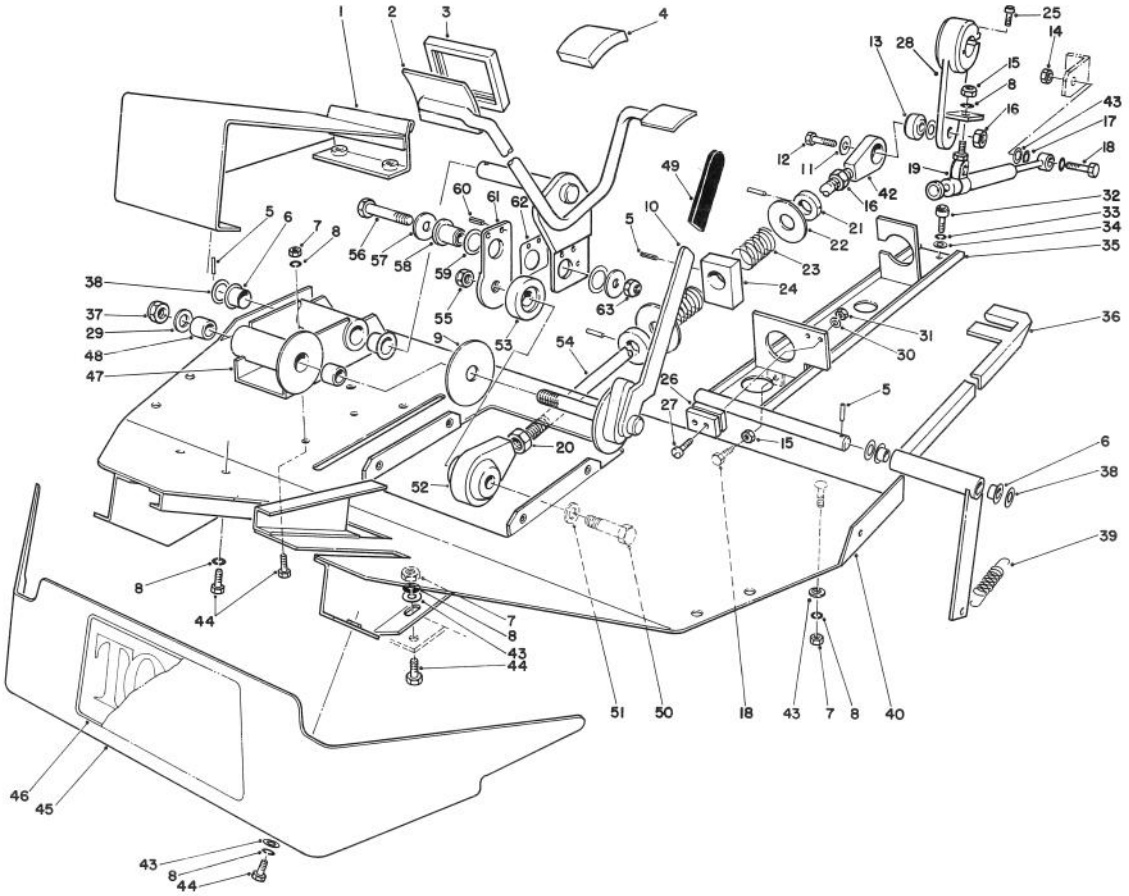


T–0113

FOOT REST & PEDALS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
33	3253–5	Washer – Lock	2
34	3256–24	Washer	2
35	60–0730	Bracket – Lock, Neutral	1
36	58–0800	Lever – Neutral Lock	1
37	3296–19	Nut – Lock	1
38	60–6740	Washer	3
39	48–6940	Spring	1
40	92–4730	Plate – Floor	1
42	60–0760	Clevis	1
43	48–8030	Washer	6
44	66–3160	Bolt	11
45	58–0400	Shroud – Front	1
46	62–7400	Decal – Toro	1
47	60–0600	Bracket	1
48	60–1110	Bushing	2

Ref. No.	Part No.	Description	No. Used
49	3–7877	Grip	1
50	325–8	Screw – Cap Hex. Hd.	1
51	3256–26	Washer – Flat	1
52	2411–44	Rod End – Ball Joint	1
53	76–3350	Spacer	1
54	76–3430	Rod	1
55	3296–25	Nut – Lock	1
56	3211–6	Screw – Cap Hex. Hd.	1
57	3256–45	Washer – Flat	2
58	76–3370	Bushing	1
59	3256–76	Washer – Flat	2
60	32121–11	Pin – Roll	2
61	76–3340	Link	1
62	76–3330	Spacer	1
63	3296–6	Nut – Lock	1

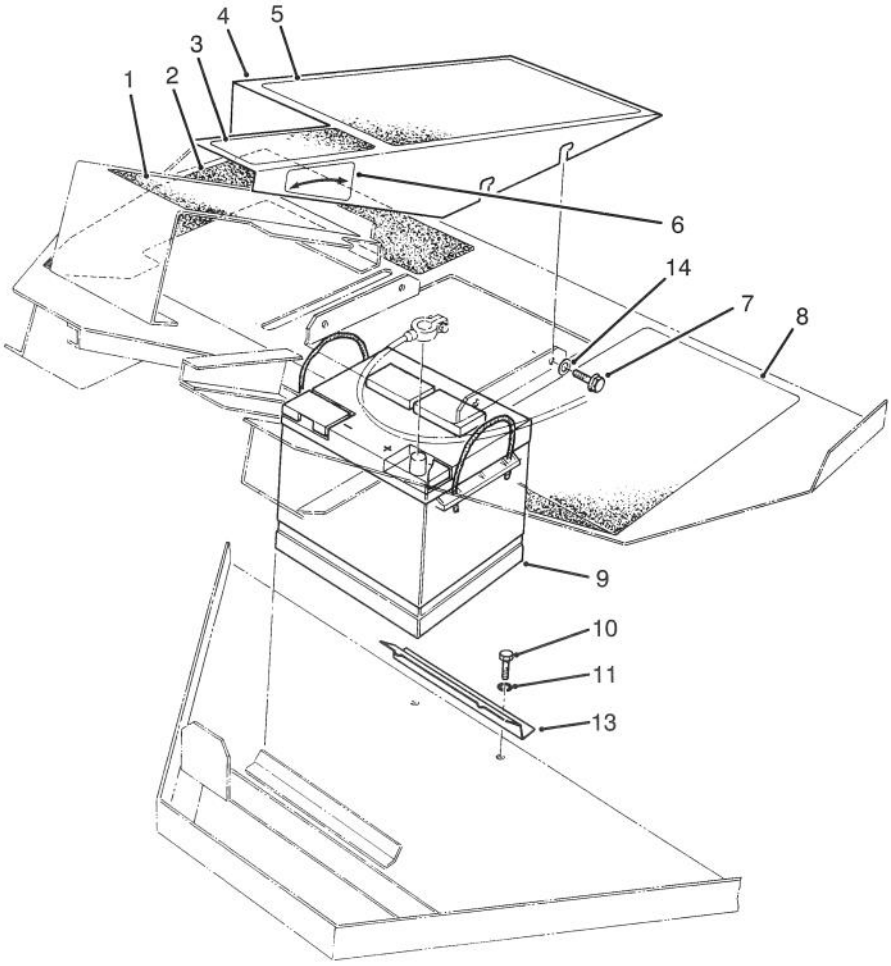


T–0114

FOOT PADS & BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	59–7280	Foot Pad – Traction	1
2	58–6510	Foot Pad – R.H.	1
3	62–6440	Foot Pad	1
4	58–7390	Foot Rest Assembly	1
5	58–6630	Foot Pad – Center	1
6	59–7960	Decal – Latch	1
7	48–7620	Bolt – Hex. Flange Hd.	3

Ref. No.	Part No.	Description	No. Used
8	58–6620	Foot Pad – L.H.	1
†9		Battery	1
10	322–4	Screw – Cap Hex. Hd.	2
11	3253–4	Washer – Lock	2
13	58–7270	Bar – Clamp	1
14	3256–16	Washer – Flat	3

†Obtain Locally

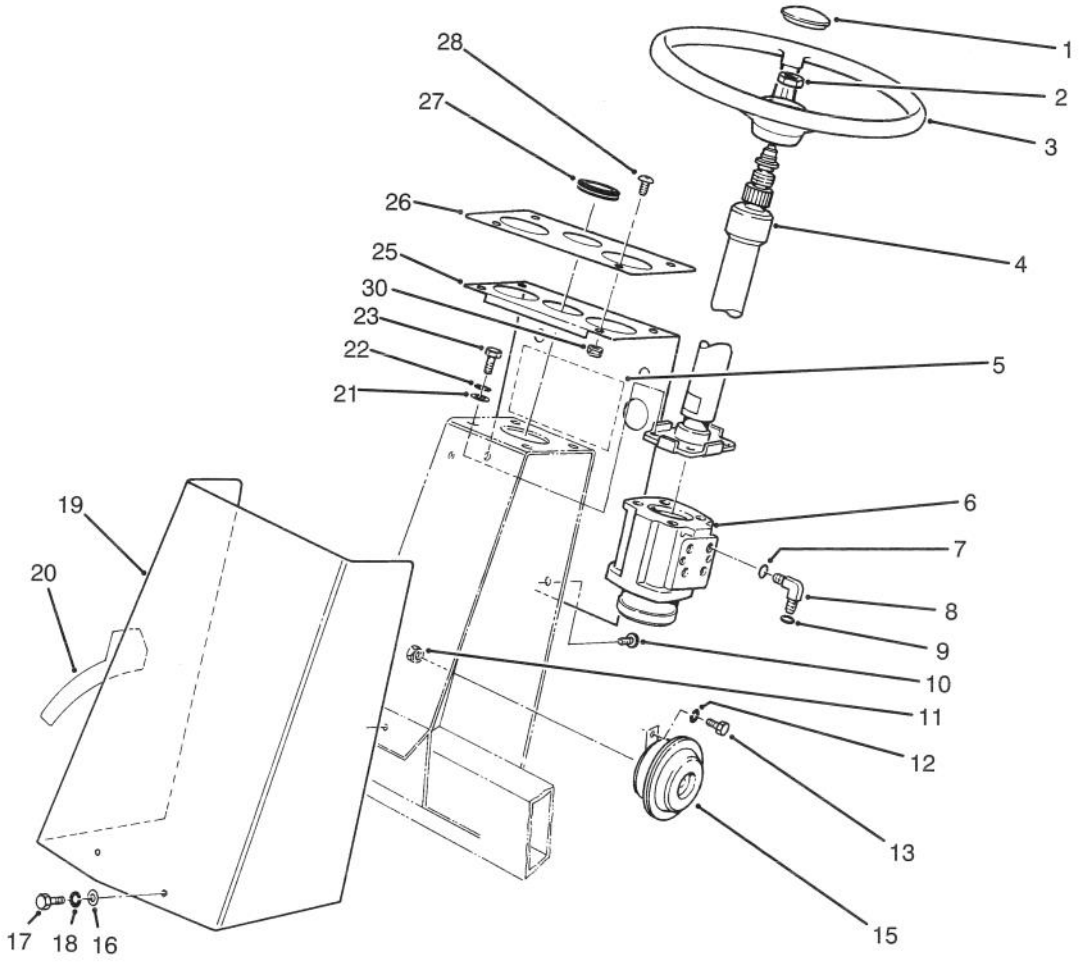


T–0115

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	72–0130	Button – Horn	1
2	47–6990	Nut – Hex.	1
3	68–8080	Wheel – Steering	1
4	58–5960	Column – Steering	1
5	77–4830	Decal	1
6	74–2720	Valve – Steering	1
7	237–79	O–Ring	4
8	340–18	Fitting (Incl. Ref. #7 & 9)	4
9	237–22	O–Ring	4
10	60–3260	Screw	1
11	3217–6	Nut	1
12	3253–4	Washer – Lock	1
13	322–3	Screw – Cap Hex. Hd.	1
15	48–4590	Horn	1
16	48–8010	Washer	2

Ref. No.	Part No.	Description	No. Used
17	48–7610	Screw – Cap Hex. Hd.	2
18	43–5930	Washer – Lock	2
19	58–0500	Cover	1
20	63–4540	Decal – Ground Speed (Model No. 03704)	1
*	63–4530	Decal – Ground Speed (Model No. 03705)	1
21	3256–24	Washer – Flat	4
22	3253–5	Washer – Lock	4
23	323–8	Screw – Cap Hex. Hd.	4
25	82–9310	Panel – Display	1
26	82–5890	Panel – Display	1
27	60–0790	Grommet	1
28	3274–68	Screw – Hex. Button Hd.	4
30	3296–42	Nut – Lock	4

*Not Illustrated

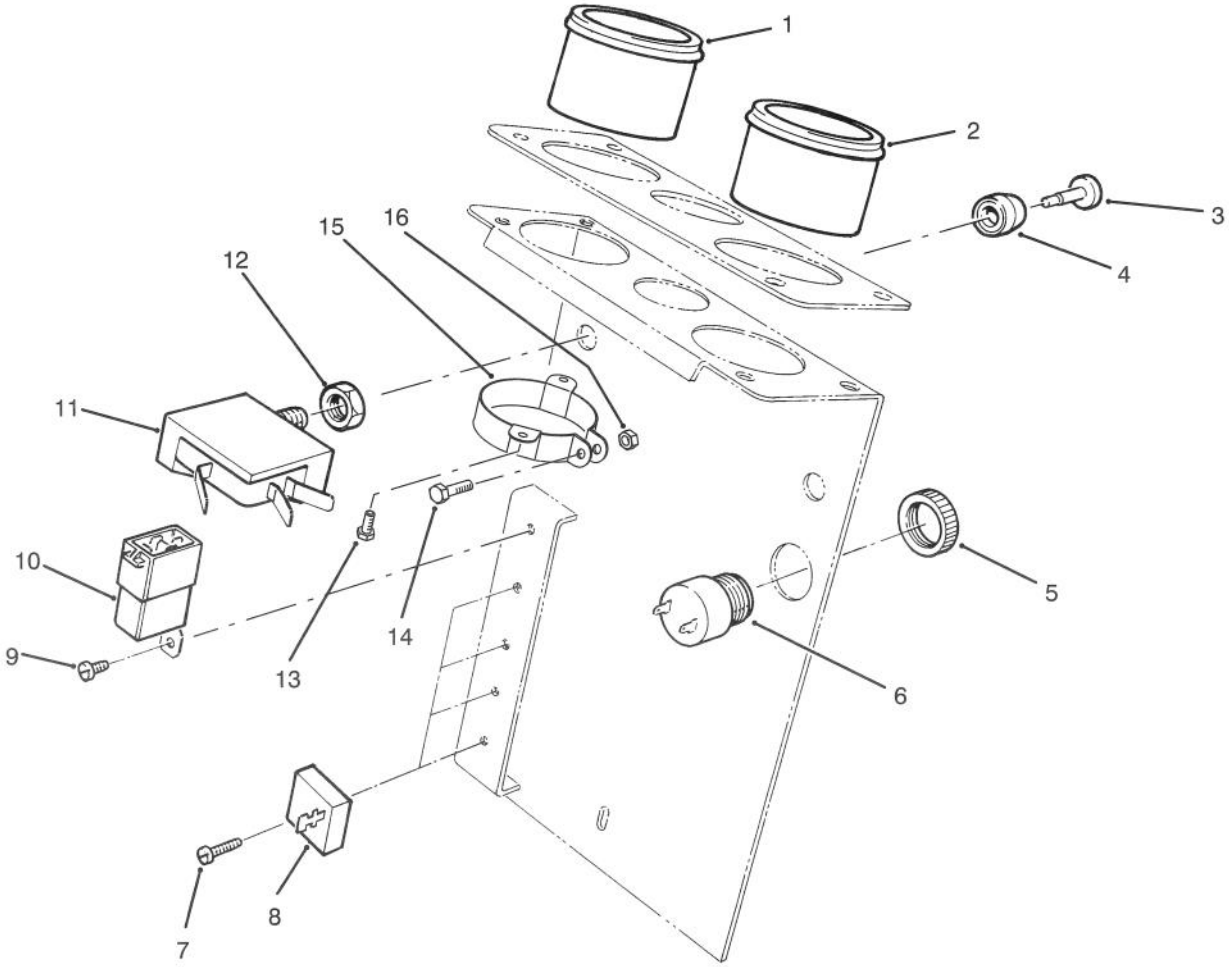


T–0122

STEERING TOWER ELECTRICAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–4210	Cluster – Warning Lights	1
2	71–4200	Cluster – Warning Lights	1
3	43–6280	Button – Push	2
4	43–6420	Bezel – Locking	2
†5		Nut	1
6	80–9330	Alarm – Audio (Incl. Ref. #5)	1
7	3251–4	Screw – Pan Hd.	4
8	37–7600	Rectifier	4
9	3251–1	Screw – Pan Hd.	1

Ref. No.	Part No.	Description	No. Used
10	63–7590	Relay	1
11	43–6290	Switch (Incl. Ref. #3, 4 & 12)	2
12	218–498	Nut – Hex.	2
13	32144–39	Screw – Cap Hex. Hd.	4
14	32105–1	Screw – Cap Hex. Hd.	2
15	69–4780	Clamp – Gauge	2
16	3296–2	Nut – Hex.	2
*	219–17	Bulb – Warning Light	8

†Not Serviceable Separately
*Not Illustrated

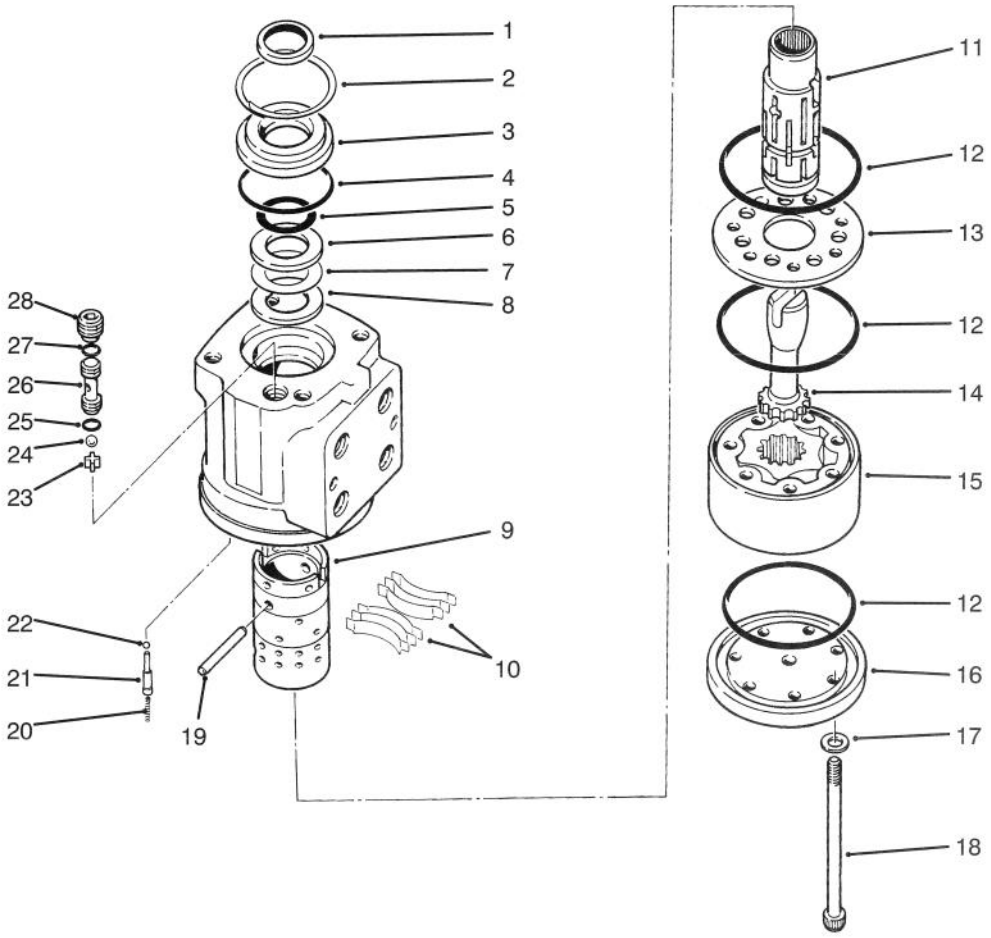


T–1065

POWER STEERING VALVE ASSEMBLY NO. 74–2720

Ref. No.	Part No.	Description	No. Used
†1		Seal 1" I.D.	1
2	52–9230	Ring – Retaining	1
3	52–9240	Bushing – Seal Gland	1
†4		Seal 1.875 I.D.	1
†5		Seal – Quad Ring 1.062 I.D.	1
6	59–6730	Race – Bearing	2
7	59–6740	Bearing – Needle, Thrust	1
†8		Housing	1
†9		Sleeve – Control	1
10	59–6820	Kit – Centering Spring	1
†11		Spool – Control	1
†12		Seal	3
13	74–3100	Plate – Spacer	1
14	59–6860	Drive	1
15	59–6870	Gerotor	1
16	59–6890	Cap – End	1
17	70–8290	Washer – Sealing	7

Ref. No.	Part No.	Description	No. Used
18	59–6900	Screw – Cap	7
19	59–6830	Kit – Pin, Centering	1
20	74–3090	Spring	2
21	74–3130	Plug – Retainer	2
22	74–3140	Ball – Check	2
23	52–9290	Retainer – Ball, Check	1
24	52–9280	Ball – Check	1
†25		Seal	1
26	52–9270	Seat – Check Ball	1
†27		Seal	1
28	52–9260	Screw – Set	1
*	52–9250	Kit – Bearing, Needle (Incl. Ref. #7 & 8)	1
*	49–0170	Kit – Seal (Incl. Ref. #1, 4, 5, 12, 25 & 27)	1

*Not Illustrated
†Not Serviceable Separately

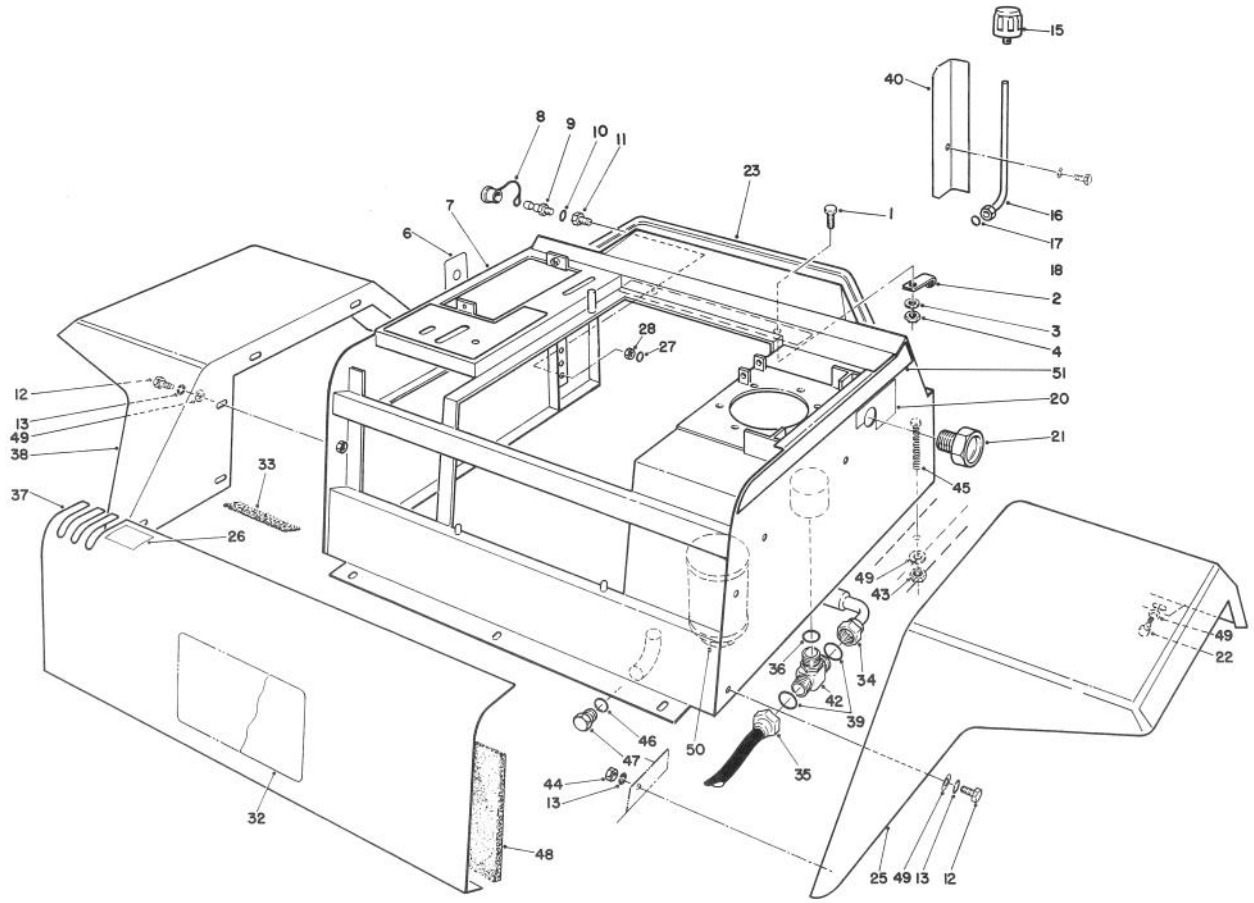


T–1700

FENDERS & CENTER CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321–3	Screw – Cap Hex. Hd.	2
2	2412–106	Clamp – R	2
3	3256–22	Washer – Flat	2
4	3296–42	Nut – Lock	2
6	58–6680	Panel – Test Ports	1
7	92–4740	Console – Center	1
8	353–947	Cap – Dust	5
9	59–7410	Fitting – Diagnostic (Incl. Ref. #10)	5
10	237–42	O–Ring	5
11	58–6580	Fitting (Incl. Ref. #27 & 28)	5
12	48–7620	Bolt	10
13	43–5930	Washer – Lock	12
15	68–6150	Breather	1
16	92–4751	Tube – Breather	1
17	237–65	O–Ring	1
20	59–7290	Decal – Hyd. Fill	1
21	58–5940	Sight Glass	1
22	48–6900	Screw – Self–Tap	4
23	92–5682	Seal	1
25	58–0980	Fender – LH	1
26	62–6290	Decal – Lift Lever	1
27	237–21	O–Ring	5

Ref. No.	Part No.	Description	No. Used
28	3220–11	Nut – Hex.	5
32	58–6540	Decal – Operator Warning	1
33	68–7840	Strip – Foam	1
34	92–4725	Hose – Hydraulic	1
35	92–5694	Hose – Hydraulic	1
36	237–79	Seal – O–Ring	1
37	58–1750	Panel – Access	1
38	92–4746	Fender – RH	1
39	237–22	Seal – O–Ring	2
40	60–2020	Shield – Heat	1
42	92–4799	Fitting – Hydraulic Tee (Incl. Ref. #36 & 39)	1
43	3296–42	Nut – Lock	2
44	48–7890	Nut	10
45	321–24	Screw – Cap Hex. Hd.	2
46	237–80	O–Ring	1
47	58–9160	Drain Plug Assembly (Incl. Ref. #46)	1
48	68–7810	Panel – Lining	1
49	3256–22	Washer – Flat	16
50	48–7120	Element – Suction	1
51	92–5699	Decal – 4wd LH	1
*	86–6490	Decal – 4wd RH	1

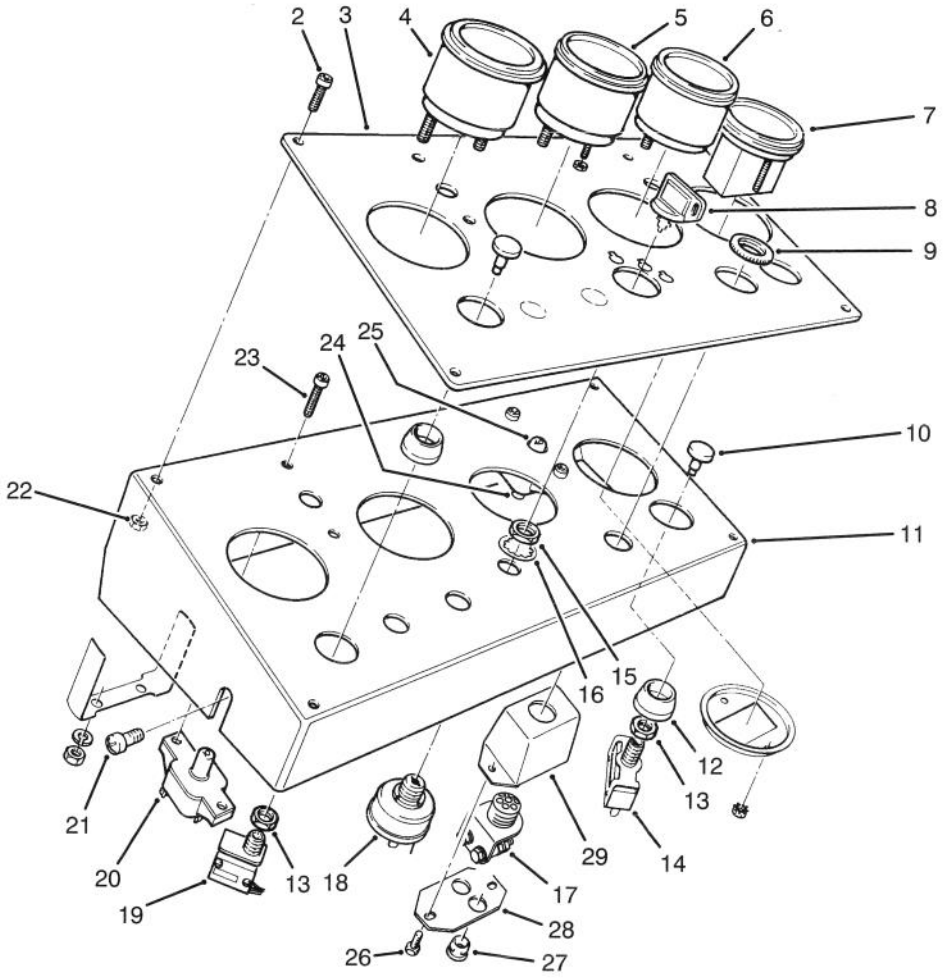


T–1210

INSTRUMENT PANEL

Ref. No.	Part No.	Description	No. Used
2	3274–68	Screw – Mach.	4
3	92–5656	Plate – Face, Instrument	1
4	77–4840	Speedometer	1
5	63–7430	Gauge – Temperature	1
6	66–2940	Gauge – Fuel	1
7	66–2950	Hourmeter	1
8	63–8360	Key – Ignition	2
†9		Nut	1
10	43–6280	Button – Push	2
11	92–5657	Panel – Instrument	1
12	43–6420	Bezel	2
13	218–498	Nut – Hex.	2
14	59–7220	Switch – Glow Plug (Incl. Ref. #10, 12 & 13)	1
15	218–446	Nut – Switch	1
16	218–447	Washer – Lock, Switch	1

Ref. No.	Part No.	Description	No. Used
17	58–2040	Indicator – Glow Plug (Incl. Ref. #9)	1
18	27–2360	Key Switch Assembly (Incl. Ref. #15 & 16)	1
19	72–9760	Switch – Override (Incl. Ref. #10, 12 & 13)	1
20	43–4001	Breaker – Circuit, 10 Amp.	1
21	60–2170	Screw – Pan Hd.	2
22	3296–42	Nut – Lock	4
23	3274–90	Screw	4
24	3250–18	Screw – Mach. Pan Hd.	2
25	43–4000	Breaker – Circuit, 40 Amp.	1
26	32144–73	Screw – Cap Hex. Hd.	2
27	92–5256	Bushing – Universal	2
28	92–5257	Plate	1
29	92–5258	Shield – Glow Plug Indicator	1

†Not Serviceable Separately

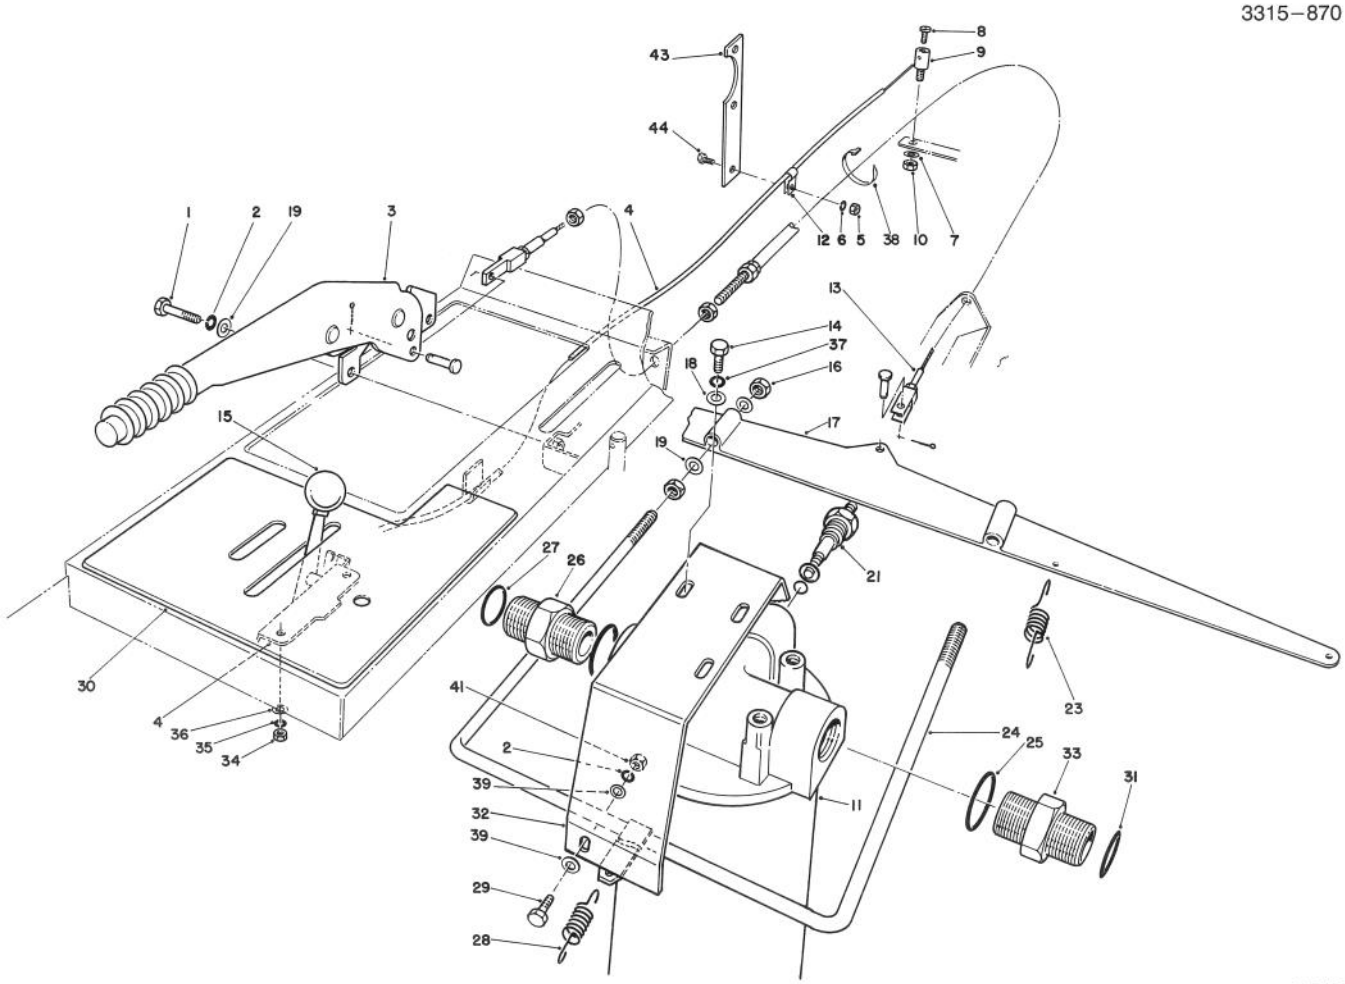


T–0120

PARKING BRAKE, THROTTLE & OIL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	48–7700	Bolt	2
2	48–9570	Washer – Lock	2
3	53–6070	Brake – Parking	1
4	59–7240	Throttle Assembly (Incl. Ref. #15)	1
5	3217–5	Nut – Hex.	1
6	3253–3	Washer – Lock	1
7	3256–22	Washer – Flat	1
8	25–8640	Screw	1
9	25–9090	Swivel	1
10	3296–13	Nut – Hex.	1
†11	86–6110	Element Assembly	1
12	2412–31	Clip	1
13	58–7030	Cable – Brake	1
14	323–4	Bolt	3
15	233–25	Knob	1
16	48–7930	Nut – Hex.	4
17	58–2170	Bar	1
18	3256–3	Washer – Flat	3
19	48–8030	Washer	6
21	86–6100	Switch – Filter Warning	1
22	86–6090	Hydraulic Oil Filter Assembly (Incl. Ref. #11 & 21)	1

Ref. No.	Part No.	Description	No. Used
23	60–2140	Spring	2
24	58–2270	Rod Assembly	1
25	237–123	O–Ring	2
26	340–80	Adapter (Incl. Ref. #25 & 27)	1
27	340–65	O–Ring	1
28	48–6940	Spring	1
29	322–6	Bolt	2
30	58–6560	Panel – Side, Control	1
31	340–64	O–Ring	1
32	84–6470	Bracket – Filter	1
33	340–10	Adapter (Incl. Ref. #25 & 31)	1
34	48–7880	Nut – Hex.	2
35	48–8000	Washer – Lock	2
36	52–6430	Washer	2
37	3253–5	Washer – Lock	3
38	3334–945	Cable – Tie	1
39	3256–23	Washer – Flat	4
41	3217–6	Nut – Hex.	2
43	92–4754	Bracket – Cable	1
44	321–4	Screw – Cap Hex. Hd.	1

†Do Not Substitute

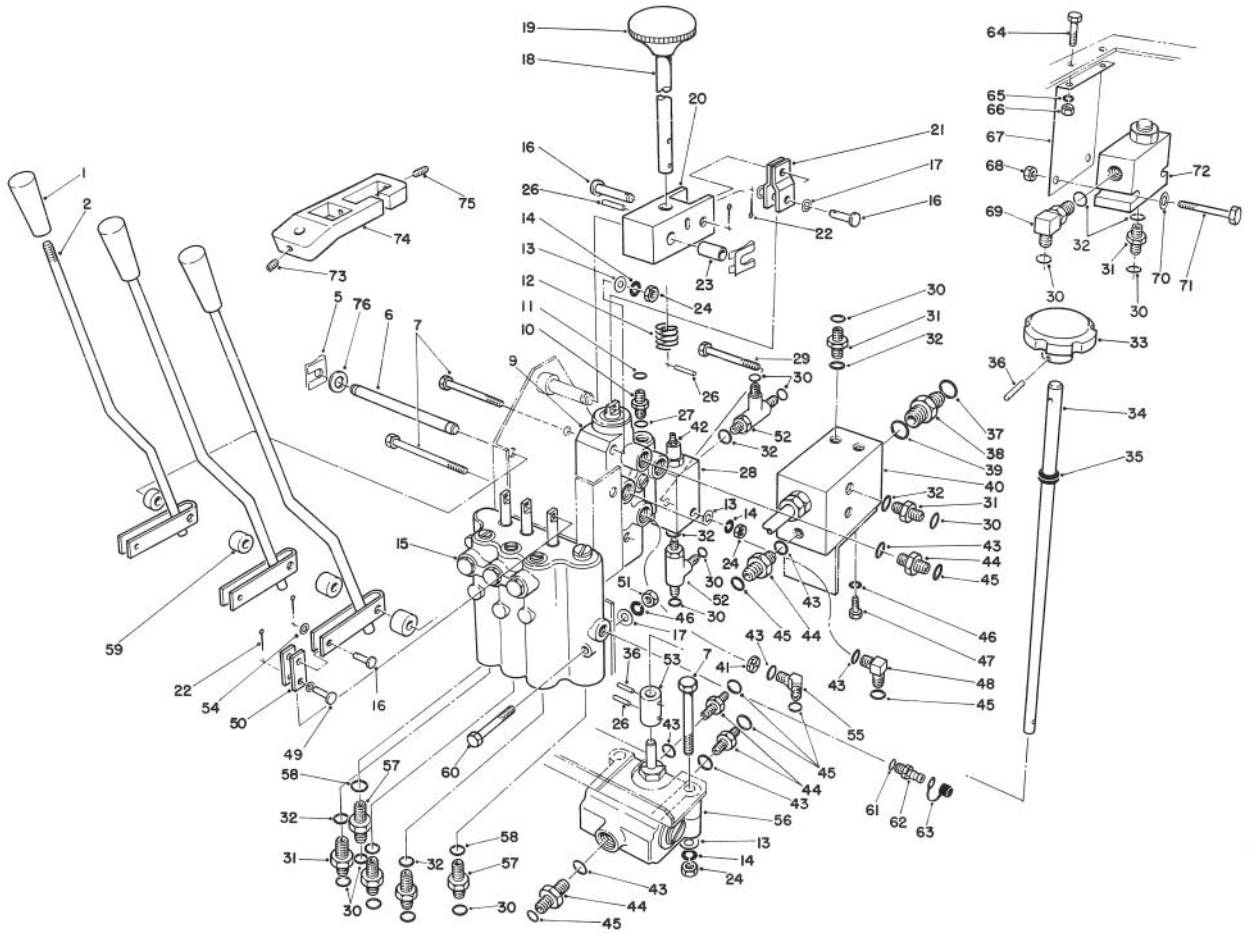


T–0121

VALVE CONTROLS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233–39	Knob	3
2	74–3190	Lever – Lift	3
5	60–5690	Clip – Safety	3
6	58–1520	Pin – Pivot	1
7	322–12	Bolt	4
9	63–4800	Valve – Control	1
10	340–92	Fitting (Incl. Ref. #11 & 27)	1
11	237–21	O–Ring	1
12	58–7190	Spring	1
13	3256–23	Washer – Flat	5
14	3253–4	Washer – Lock	5
15	84–6200	Valve – Lift Control	1
16	58–3830	Pin – Clevis	5
17	48–8010	Washer	4
18	58–4450	Lever	1
19	233–10	Knob	1
20	58–4460	Clevis	1
21	58–1570	Link	2
22	58–1480	Pin – Cotter	8
23	60–0550	Bushing	1
24	3217–6	Nut – Hex.	5
26	32121–118	Pin – Roll	2
27	237–78	O–Ring	1
28	58–5520	Valve (Incl. Ref. #42)	1

Ref. No.	Part No.	Description	No. Used
29	322–9	Bolt	1
30	237–22	O–Ring	15
31	340–2	Fitting (Incl. Ref. #30 & 32)	8
32	237–42	O–Ring	11
33	59–7130	Knob	1
34	58–1510	Shaft	1
35	59–7910	Grommet	1
36	60–2110	Pin – Spirol	2
37	340–64	O–Ring	1
38	340–80	Fitting (Incl. Ref. #37 & 39)	1
39	237–123	O–Ring	1
40	58–2150	Manifold	1
41	66–5410	Orifice	1
†42		Cartridge – Pressure Relief	1
43	237–80	O–Ring	9
44	340–7	Fitting (Incl. Ref. #43 & 45)	6
45	237–65	O–Ring	9
46	43–5930	Washer – Lock	4
47	48–7620	Bolt	2
48	340–17	Fitting (Incl. Ref. #43 & 45)	2
49	58–3810	Pin – Clevis	3
50	58–1560	Link	6

†Not Serviceable Separately.

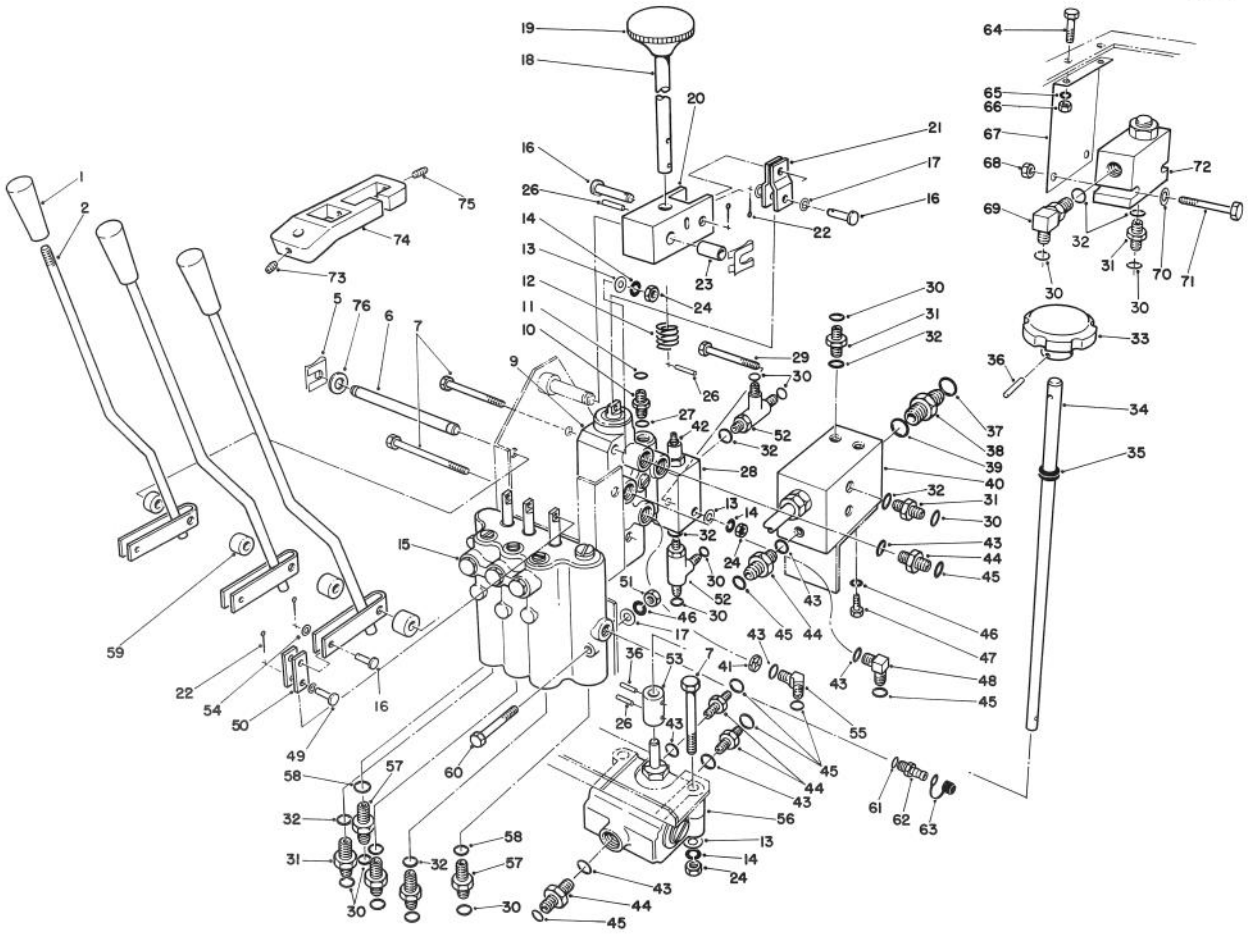


T–0121

VALVE CONTROLS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
51	48–7890	Nut – Hex.	1
52	340–86	Fitting – Hydraulic Tee (Incl. Ref. #30 & 32)	2
53	58–1530	Coupling	1
54	52–6430	Washer	6
55	66–5860	Adapter – 45° (Incl. Ref. #43 & 45)	1
56	58–5490	Valve – Flow Control (Model No. 03704)	1
*	58–5491	Valve – Flow Control (Model No. 03705)	1
57	340–3	Fitting (Incl. Ref. #30 & 58)	2
58	237–79	O–Ring	2
59	58–1540	Spacer	4
60	60–6650	Bolt	2
61	237–42	O–Ring	1
62	59–7410	Fitting – Diagnostic (Incl. Ref. #61)	1
63	353–947	Cap – Dust	1
64	321–3	Screw – Cap Hex Hd.	2

Ref. No.	Part No.	Description	No. Used
65	3253–3	Washer – Lock	2
66	3217–5	Nut – Hex.	2
67	63–4690	Bracket – Valve	1
68	3296–8	Nut – Lock	2
69	340–77	Elbow – 90° (Incl. Ref. #30 & 32)	1
70	3256–22	Washer – Flat	2
71	321–11	Screw– Cap Hex. Hd.	2
72	63–4700	Valve – Flow Regulator (Model No. 03704)	1
*	63–4701	Valve – Flow Regulator (Model No. 03705)	1
73	3245–44	Screw – Set	1
74	74–3170	Linkage – Cross Cut Control	1
75	3245–45	Screw – Set	2
76	3256–24	Washer – Flat	2
*	66–5590	Kit – Seal (For Item #72)	1
*	66–5580	Kit – Seal Repair (For Item #28)	1

*Not Illustrated

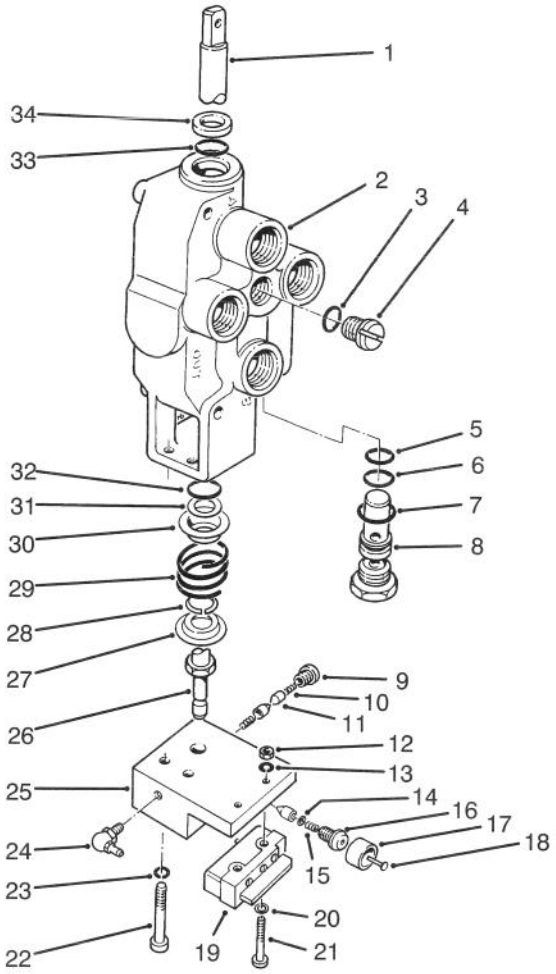


T–0123

REEL CONTROL VALVE ASSEMBLY NO. 63–4800

Ref. No.	Part No.	Description	No. Used
†1		Spool	1
†2		Body	1
3	59–8140	O–Ring	1
4	59–8160	Plug (Incl. Ref. #3)	1
5	63–4440	O–Ring	1
6	59–7860	Washer – Backup	1
7	42–1220	O–Ring	1
8	63–4780	Valve – Relief (Incl. Ref. #5–7)	1
9	59–8060	Plug – Detent	1
10	59–8050	Spring – Detent	2
11	59–8150	Pawl – Detent	3
12	66–5440	Nut – Lock	2
13	3253–19	Washer – Lock	2
14	63–4860	Circlip	1
15	63–4510	Spring	1
16	59–8230	Plug	1
17	66–5420	Sleeve	1
18	63–4850	Plunger	1

Ref. No.	Part No.	Description	No. Used
19	60–4550	Switch – Micro	1
20	3256–13	Washer – Flat	2
21	66–5430	Screw – Machine	2
22	63–4830	Screw – Cap Hd.	2
23	59–8070	Washer – Lock	2
24	302–66	Fitting – Grease	1
25	63–4820	Detent – Block	1
26	63–4840	Spool – Screw	1
27	59–8100	Washer – Shallow	1
28	59–8170	Washer – Wire	1
29	59–8040	Spring	1
30	59–8080	Washer – Deep	1
31	59–8180	Washer	1
32	59–7780	O–Ring	1
33	59–81 20	O–Ring	1
34	59–8190	Wiper	1
*	59–8250	Kit – Seal (Incl. Ref. #3, 4–7, 32 & 34)	1

*Not Illustrated
†Not Serviceable Separately

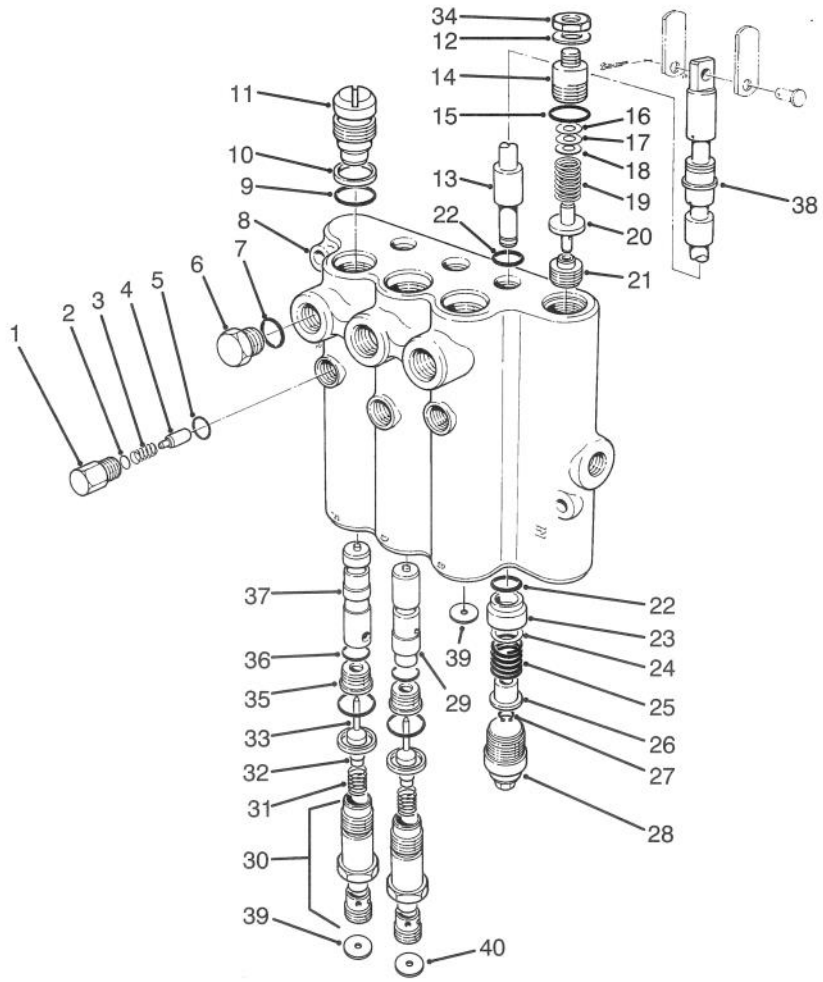


T–0124

CONTROL VALVE ASSEMBLY NO. 84–6200

Ref. No.	Part No.	Description	No. Used
1	58–6780	Plug Assembly (Incl. Ref. #5)	3
2	60–6450	Disc	A/R
3	58–6760	Spring	3
4	58–6770	Detent Plunger	3
5	58–6790	O–Ring	3
6	58–6710	Plug Assembly (Incl. Ref. #7)	3
7	58–6720	O–Ring	3
†8		Body	1
9	60–5720	O–Ring	6
10	58–6370	Washer – Backup	6
11	58–6350	Plug Assembly (Incl. Ref. #9 & 10)	3
†12		Washer	1
†13		Spool	3
14	69–1830	Plug Assembly (Incl. Ref. #12, 15 & 34)	1
15	58–6750	O–Ring	1
16	58–6470	Washer	A/R
17	58–6480	Washer	A/R
18	58–6490	Washer	A/R
19	84–6450	Spring	1
20	58–6440	Poppet	1

Ref. No.	Part No.	Description	No. Used
†21		Seat	1
22	58–6450	O–Ring	6
23	58–6400	Bushing	3
24	58–6700	Washer	3
25	58–6730	Spring	3
26	58–6310	Spacer	3
27	58–6460	Ring – Retaining	3
28	58–6420	Assembly – Cap	3
29	84–6430	Plunger	1
30	58–6380	Assembly – Plug	3
31	58–6410	Spring	3
32	60–6440	Eyelet	3
33	58–6290	Poppet Assembly	3
†34		Nut – Lock	1
35	58–6330	Seat Assembly (Incl. Ref. #36)	3
36	58–6340	O–Ring	3
37	84–6420	Plunger	2
38	58–6320	Wiper – Seal	3
39	84–6400	Orifice – .047 Dia.	2
40	84–6401	Orifice – .052 Dia.	1
*	60–3780	Kit – Seal (Incl. Ref. #5, 7, 9, 10, 15, 22, 27, 33, 36 & 38)	1

*Not Illustrated
†Not Serviceable Separately

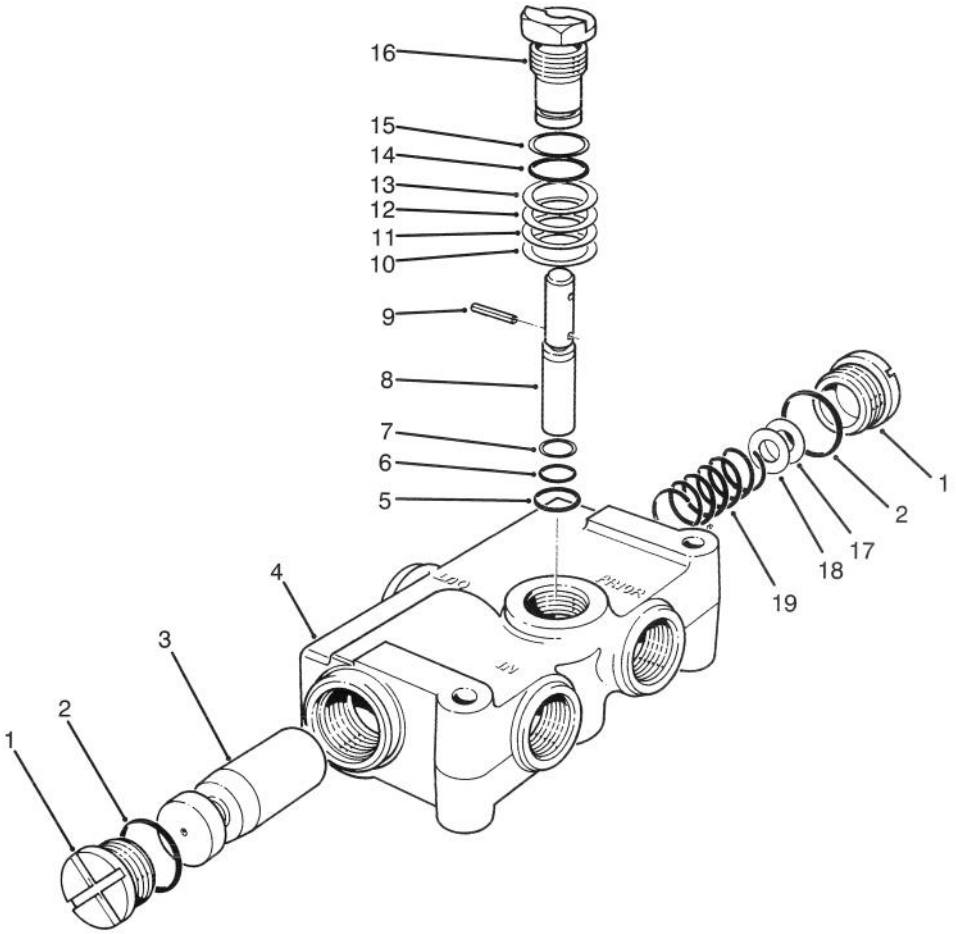


T–0125

PRIORITY FLOW CONTROL VALVE 58–5490 (MODEL NO. 03704) & 58–5491 (MODEL NO. 03705)

Ref. No.	Part No.	Description	No. Used
1	59–7600	Plug Assembly (Incl. Ref. #2)	2
2	59–7610	O–Ring	2
†3		Spool	1
†4		Body	1
5	59–7640	O–Ring	1
6	59–7650	O–Ring	1
7	60–5950	Washer – Backup	1
8	59–7670	Metering Stem	1
9	59–7680	Pin – Groove	1
10	59–7690	Shim	A/R
11	59–7700	Shim	A/R
12	59–7710	Shim	A/R

Ref. No.	Part No.	Description	No. Used
13	59–7720	Shim	A/R
14	59–7780	O–Ring	1
15	58–6370	Washer – Backup	1
16	59–7740	Plug – Metering (Model No. 03704)	1
16	74–3150	Plug – Metering (Model No. 03705)	1
17	59–7750	Shim	A/R
18	59–7760	Shim	A/R
19	59–7770	Spring	1
*	63–4520	Kit – Seal (Incl. Ref. #2, 5–7,14 & 15)	1

*Not Illustrated
†Not Serviceable Separately.

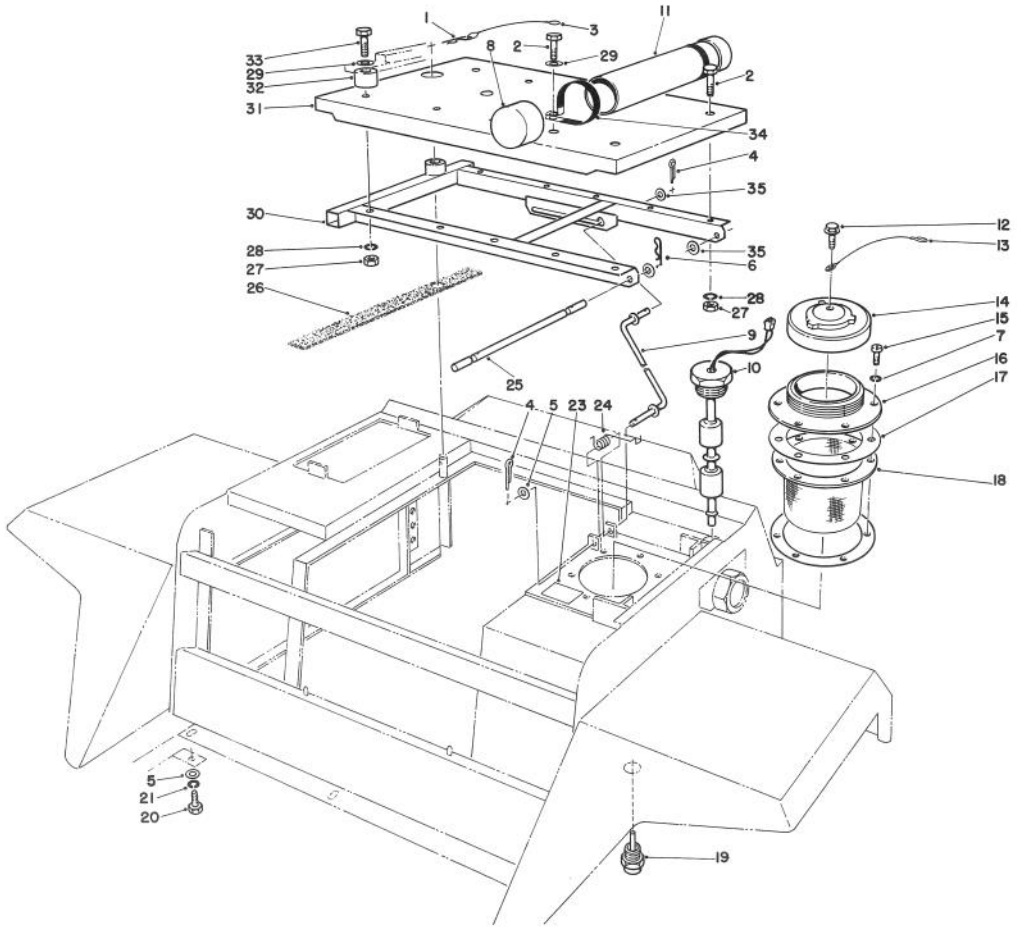

T–0127


SEAT PLATFORM & FILLER CAP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290–355	Clip – Retaining	1
2	66–3160	Screw – Cap Hex. Hd.	6
3	60–2160	Wire – Retaining (Incl. Ref. #1)	1
4	3272–11	Pin – Cotter	2
5	48–9580	Washer	2
6	3290–250	Pin – Hair, Cotter	2
7	3253–15	Washer – Lock	6
8	65–5890	Cap – Tube	2
9	58–1650	Rod – Seat	1
10	82–9340	Switch – Oil Level	1
11	65–5870	Tube – Manual	1
†12		Screw – Washer Face	1
†13		Wire – Tie	1
†14		Cap	1
15	46–0670	Screw	6
†16		Ring	1
17	58–6820	Gasket	2
†18		Screen	1

Ref. No.	Part No.	Description	No. Used
19	60–5580	Switch – Temperature	1
20	48–9470	Screw – Cap Hex. Hd.	2
21	48–9590	Washer – Lock	2
23	58–6530	Decal – Hydraulic Oil	1
24	60–0050	Spring	1
25	58–1640	Pin – Seat Pivot	1
26	68–7850	Strip – Foam	1
27	48–7930	Nut – Hex.	10
28	48–9570	Washer – Lock	10
29	48–8030	Washer	6
30	58–1580	Seat Frame Assembly	1
31	58–9830	Plate – Seat	1
32	26–4840	Spacer	4
33	48–7730	Screw – Cap Hex. Hd.	4
34	2412–102	R–Clamp	2
35	3256–24	Washer – Flat	4
*	58–6800	Filler Cap Assembly (Incl. Ref. #12–14 & 16–18)	1

*Not Illustrated
†Not Serviceable Separately

3315–870

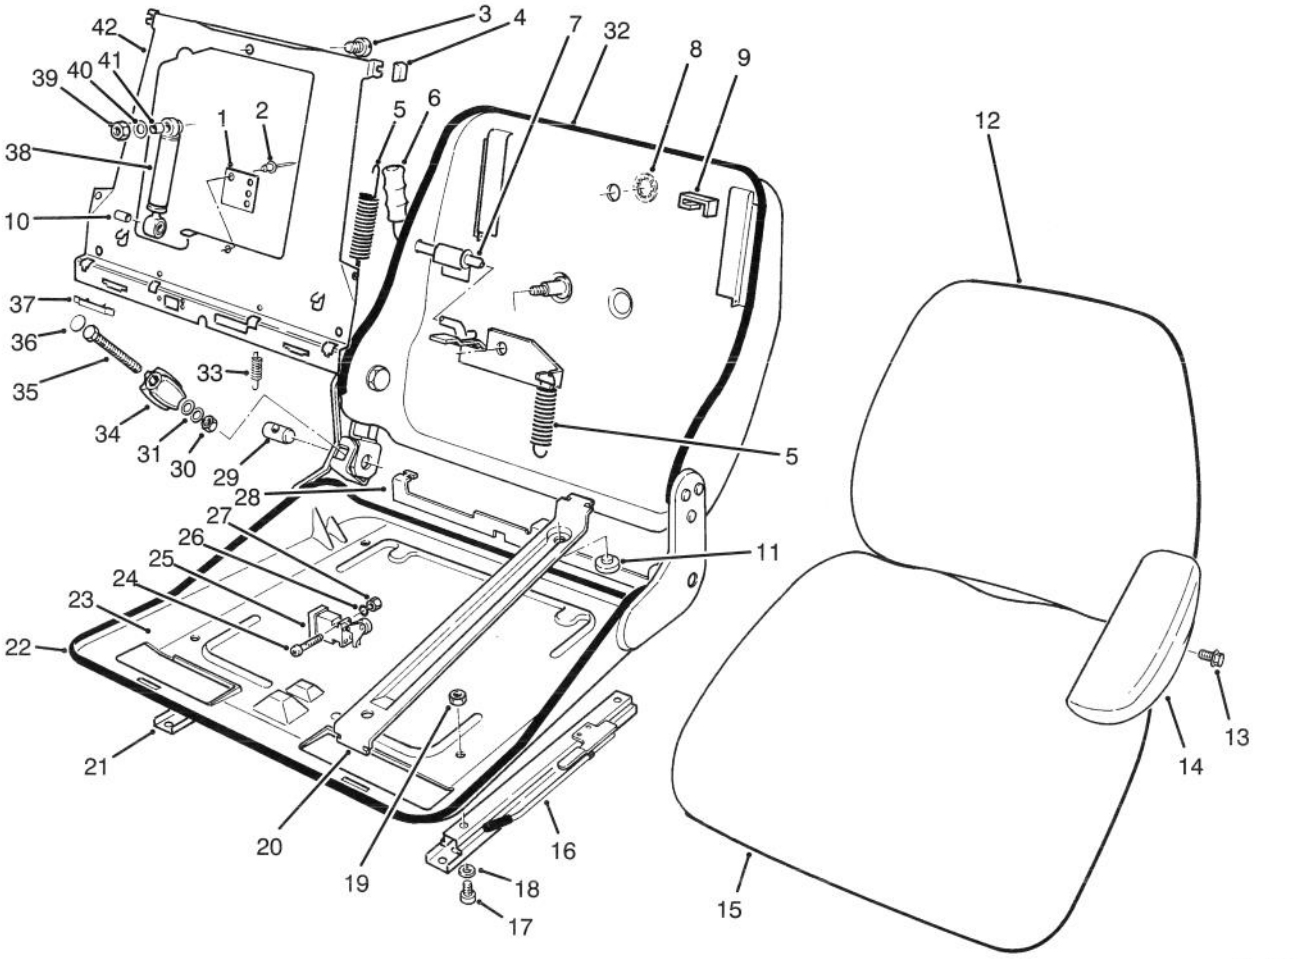


T–1208

SUSPENSION SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82–2850	Plate	1
2	82–9680	Rivet	2
3	82–9700	Screw	1
4	82–2730	Kit – Wear Parts (Incl. Ref. #8–11)	1
5	82–2740	Spring Set – Tension	1
6	56–4150	Grip – Handle	1
7	82–2870	Lever – Adjust	1
†8		Cover	1
†9		Bumper	2
†10		Bushing	1
†11		Pad	2
12	82–2800	Cushion – Backrest	1
13	56–3850	Screw – Mach. Hex. Hd.	4
14	55–4330	Arm Rest – L.H.	1
*	55–4331	Arm Rest – R.H.	1
15	82–2840	Cushion – Bottom	1
16	92–2951	Rail – Adjust. L.H.	1
17	82–9690	Screw	4
18	82–9660	Washer	4
19	82–9650	Nut	4
20	82–2820	Swing Arm Assembly (Incl. Ref. #28 & 41)	1
21	82–2790	Rail – Adjust. R.H.	1
22	82–9710	Trim – Bottom	1
23	82–2720	Frame – Seat	1

Ref. No.	Part No.	Description	No. Used
24	82–9640	Screw	2
25	82–2810	Switch Assembly (Incl. Ref. #24, & 26–27)	1
26	82–9620	Washer – Spring	2
27	82–9630	Nut	2
†28		Pivot – Back Plate	1
29	56–4170	Clevis – Threaded	1
30	56–3890	Nut	1
31	56–3880	Washer	2
32	82–9720	Trim – Backrest	1
33	82–2860	Spring Set – Tension	1
34	82–2750	Spindle Adj. Assembly (Incl. Ref. #29–31 & 34–36)	1
35	82–2710	Screw	1
†36		Cover	1
37	82–2830	Clamp	2
38	82–2770	Shock Absorber Assembly	1
39	82–9670	Nut	1
40	56–3940	Washer	1
41	82–2760	Kit – Bushing (Incl. Ref. #39 & 40)	1
†42		Plate – Backrest	1
*	82–2880	Weight Adj. Assembly (Incl. Ref. #5–7 & 41)	1

*Not Illustrated
†Not Serviceable Separately

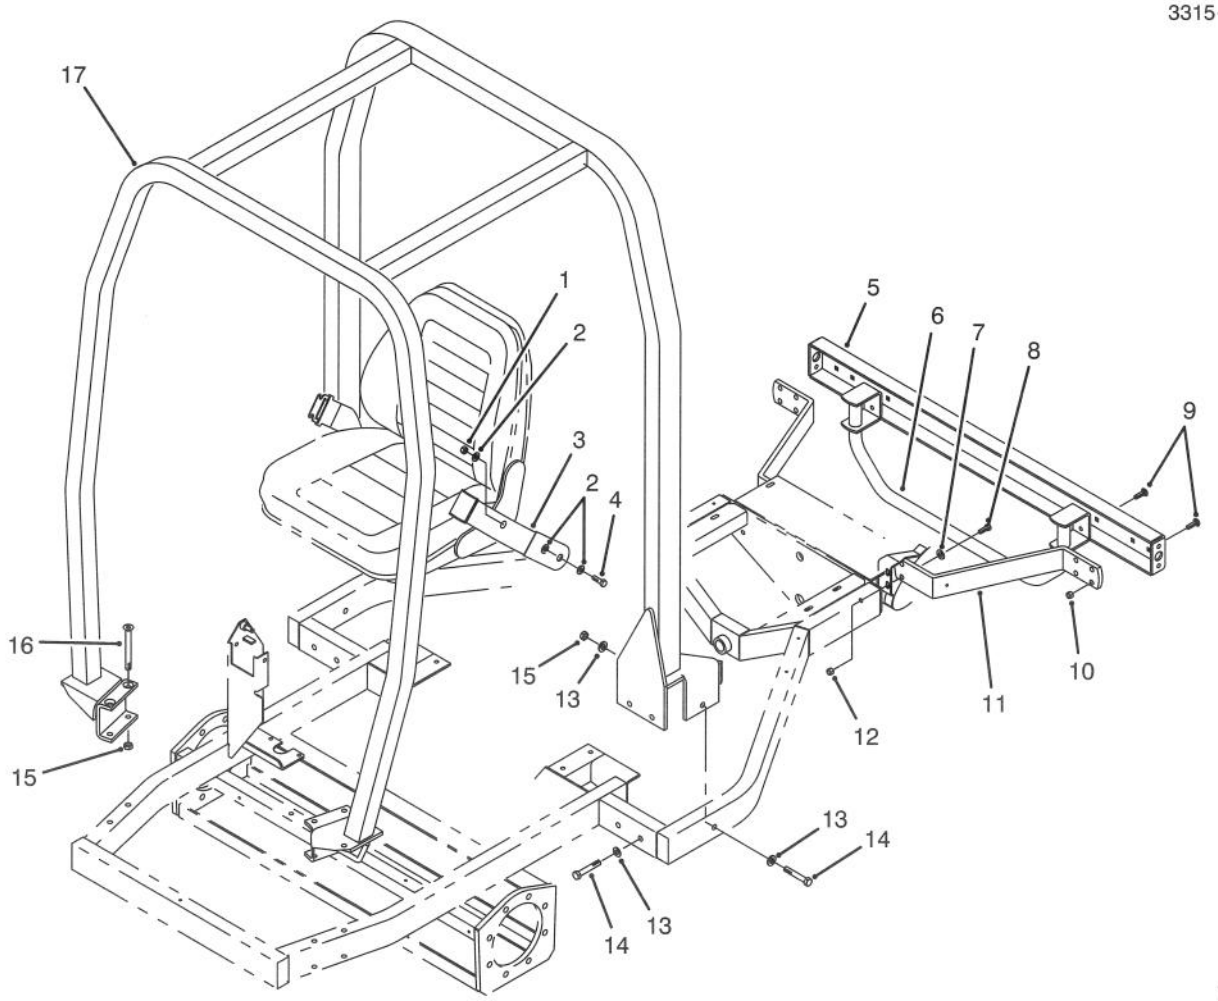


T–1696

R.O.P.S. ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–48	Nut – Lock	2
2	3256–25	Washer – Flat	6
3	21–4191	Seat Belt Assembly	1
4	324–5	Screw – Cap Hex. Hd.	2
5	92–6052	Bumper – Rear	1
6	92–6050	Guard – Hose	1
7	3256–24	Washer – Flat	4
8	323–19	Screw – Cap Hex. Hd.	4
9	3231–25	Bolt – Carriage	12

Ref. No.	Part No.	Description	No. Used
10	3296–39	Nut – Lock	12
11	92–6051	Bracket – Bumper	2
12	3296–39	Nut – Lock	4
13	3256–26	Washer – Flat	12
14	325–12	Screw – Cap Hex. Hd.	6
15	3296–23	Nut – Lock	10
16	3289–25	Screw – Socket Flat Hd.	4
17	92–2987	R.O.P.S. Frame Assembly (Incl. Ref. #17 & 18)	1

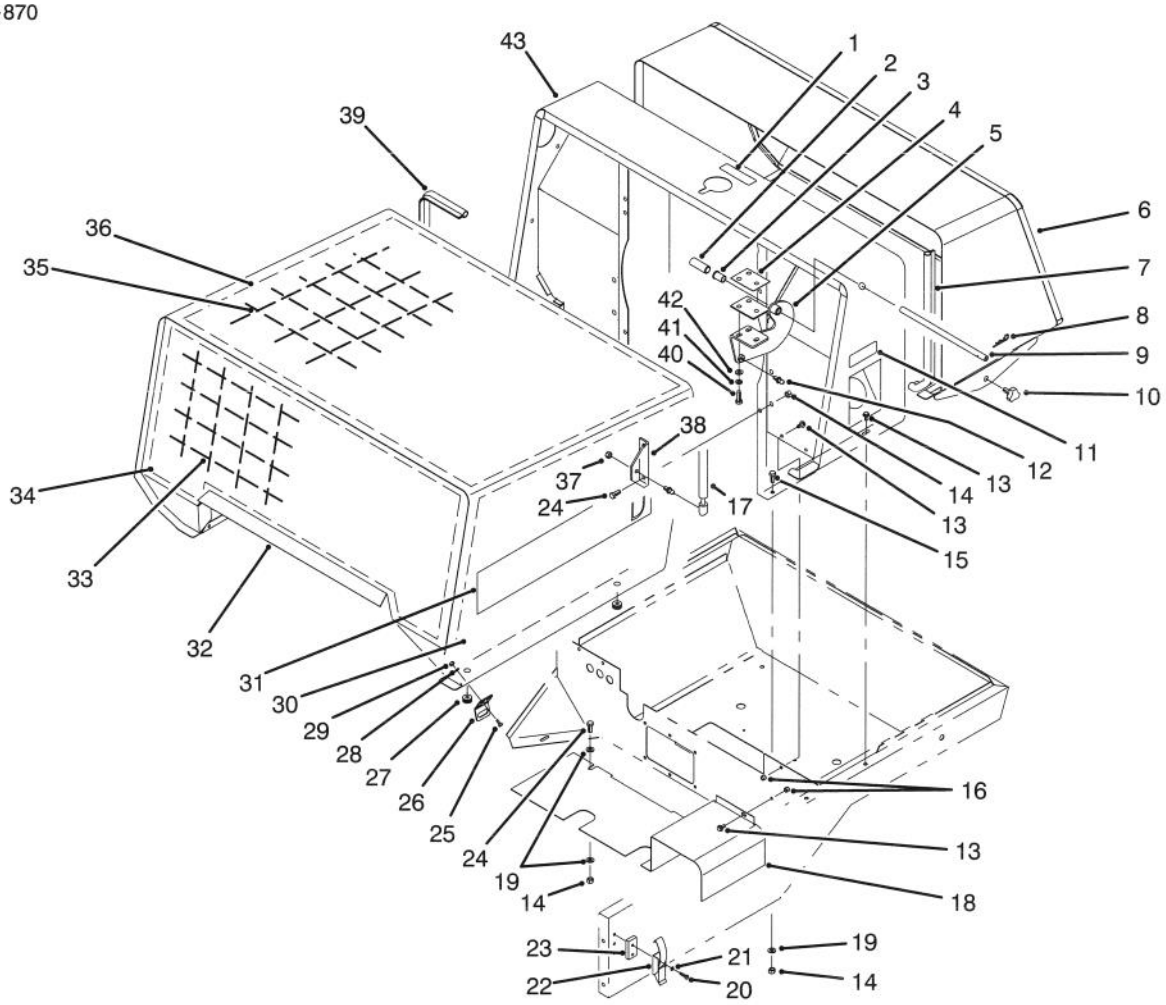


T–1683

FRONT & REAR CANOPY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	58–6940	Decal – Coolant Only	1
2	92–5655	Spacer	2
3	58–3930	Bushing – Flange	2
4	58–5330	Spacer – Hinge	A/R
*	58–5350	Spacer – Hinge	A/R
5	58–1970	Hinge – LH	1
*	58–1980	Hinge – RH	1
6	92–4793	Screen – Rear	1
7	92–5253	Strip – Sealing	1
8	3290–355	Pin – Hair Cotter	2
9	58–3910	Pin – Hinge	2
10	77–3620	Knob – Retainer	2
11	49–2280	Decal – Diesel Fuel	1
12	86–6130	Stud – Ball	4
13	3234–13	Screw – Hex. Flange Hd.	9
14	3296–29	Nut – Lock	9
15	322–5	Screw – Cap Hex. Hd.	4
16	3296–56	Nut – Lock	5
17	88–6760	Spring – Gas	2
18	92–5270	Baffle – Lower Body	1
19	3256–23	Washer – Flat	6
20	3250–25	Screw – Pan Hd.	4
21	3253–2	Washer – Lock	4

Ref. No.	Part No.	Description	No. Used
22	58–5380	Latch – Draw	2
23	58–7070	Spacer	2
24	322–3	Screw – Cap Hex. Hd.	5
25	3250–31	Screw – Pan Hd.	8
26	68–6040	Bracket – Latch	2
27	237–141	Grommet	4
28	3256–21	Washer – Flat	8
29	3296–27	Nut – Hex.	8
30	92–5681	Foam – Side LH	1
*	92–5680	Foam – Side RH	1
31	86–6470	Decal – RM4500D	2
32	92–4712	Canopy – Front	1
33	92–5673	Support – Foam Front	1
34	92–5679	Foam – Front	1
35	92–5672	Support – Foam Top/Side	1
36	92–5678	Foam – Top	1
37	48–9510	Nut – Lock	2
38	92–5652	Bracket – Gas Spring	2
39	92–6060	Strip – Sealing	1
40	48–9460	Screw – Cap Hex. Hd.	6
41	48–9570	Washer – Lock	6
42	48–8030	Washer – Flat	6
43	92–4792	Canopy – Center	1

*Not Illustrated

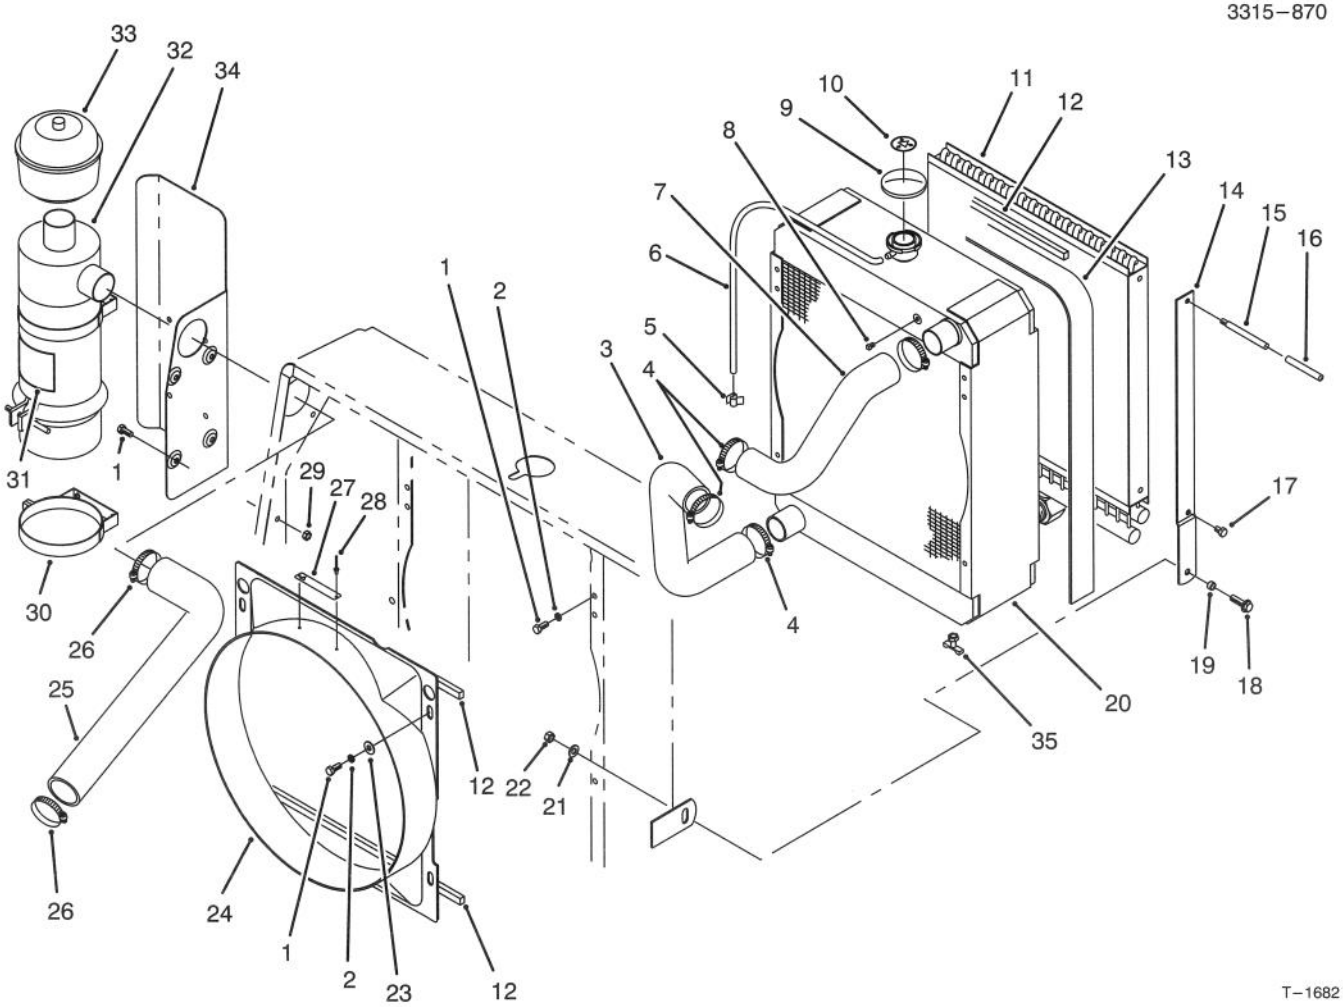


T–1682

RADIATOR, OIL COOLER & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–3	Screw – Cap Hex. Hd.	14
2	3253–4	Washer – Lock	6
3	92–4795	Hose – Radiator Lower	1
4	2412–92	Clamp – Hose	4
5	60–0930	Clip	2
6	60–3680	Hose – Overflow	1
7	92–4796	Hose – Radiator Upper	1
8	281–2	Plug Pipe	1
9	58–5420	Cap – Radiator	1
10	59–8440	Decal – Warning	1
11	58–5540	Cooler – Hydraulic Oil	1
12	68–7575	Strip – Sealing	3
13	92–6062	Foam – Radiator Seal	1
14	92–4753	Strap – Oil Cooler	2
15	75–7790	Handle	2
16	47–2550	Grip – Handle	2
17	48–7680	Screw – Cap Hex. Hd.	2
18	3234–11	Screw – Hex. Flange Hd.	2

Ref. No.	Part No.	Description	No. Used
19	76–2290	Spacer	2
20	92–4729	Radiator Assembly (Incl. Ref. #35)	1
21	3256–24	Washer – Flat	2
22	3296–39	Nut – Lock	2
23	3256–71	Washer – Flat	4
24	92–4798	Shroud – Fan	1
25	92–4752	Hose – Intake	1
26	2412–42	Clamp – Hose	2
27	76–8750	Plate – Caution	1
28	3290–271	Rivet – Pop	2
29	3296–29	Nut – Lock	8
30	27–7170	Band – Mounting	2
31	27–7160	Decal – Instruction	1
32	27–7100	Air Cleaner Assembly	1
33	48–7430	Pre–Cleaner Assembly	1
34	92–6065	Shield	1
35	304–46	Valve – Drain	1

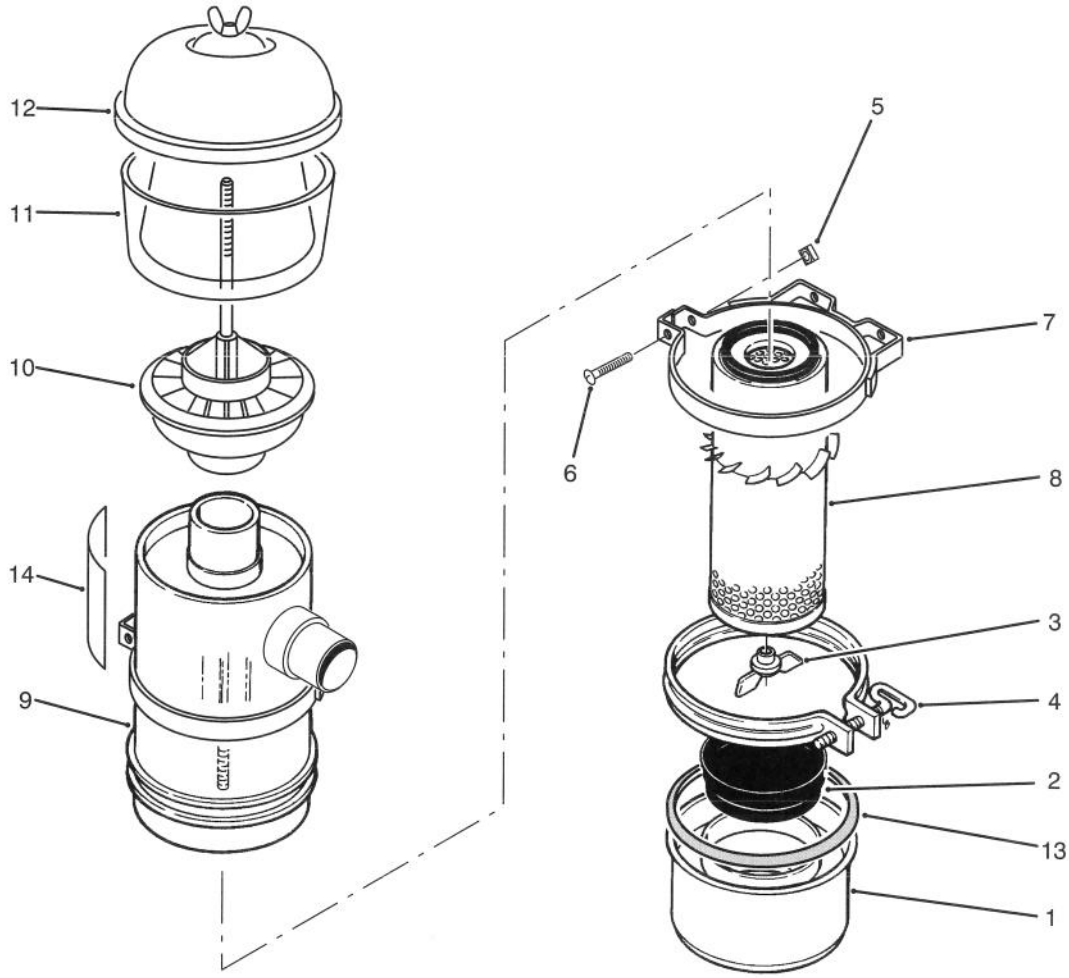


T–1684

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	27–7150	Cup Assembly	1
2	27–7140	Baffle	1
3	27–7120	Nut	1
4	27–7130	Clamp Assembly	1
5	32107–11	Nut – Square	2
6	3258–19	Screw – Machine	2
7	27–7170	Band Assembly (Incl. Ref. #5 & 6)	2
8	27–7110	Element Assembly	1
†9		Housing	1
10	62–6300	Sleeve Assembly	1

Ref. No.	Part No.	Description	No. Used
11	33–1270	Bowl	1
12	33–1260	Cover Assembly	1
13	80–3330	Gasket	1
14	27–7160	Decal – Instructions	1
*	48–7430	Pre–Cleaner Assembly (Incl. Ref. #10–12)	1
*	27–7100	Air Filter Assembly (Incl. Ref. #1–4, 8–9 & 13–14)	1
*	27–7220	Soap – Air Cleaner	1

*Not Illustrated
†Not Serviceable Separately

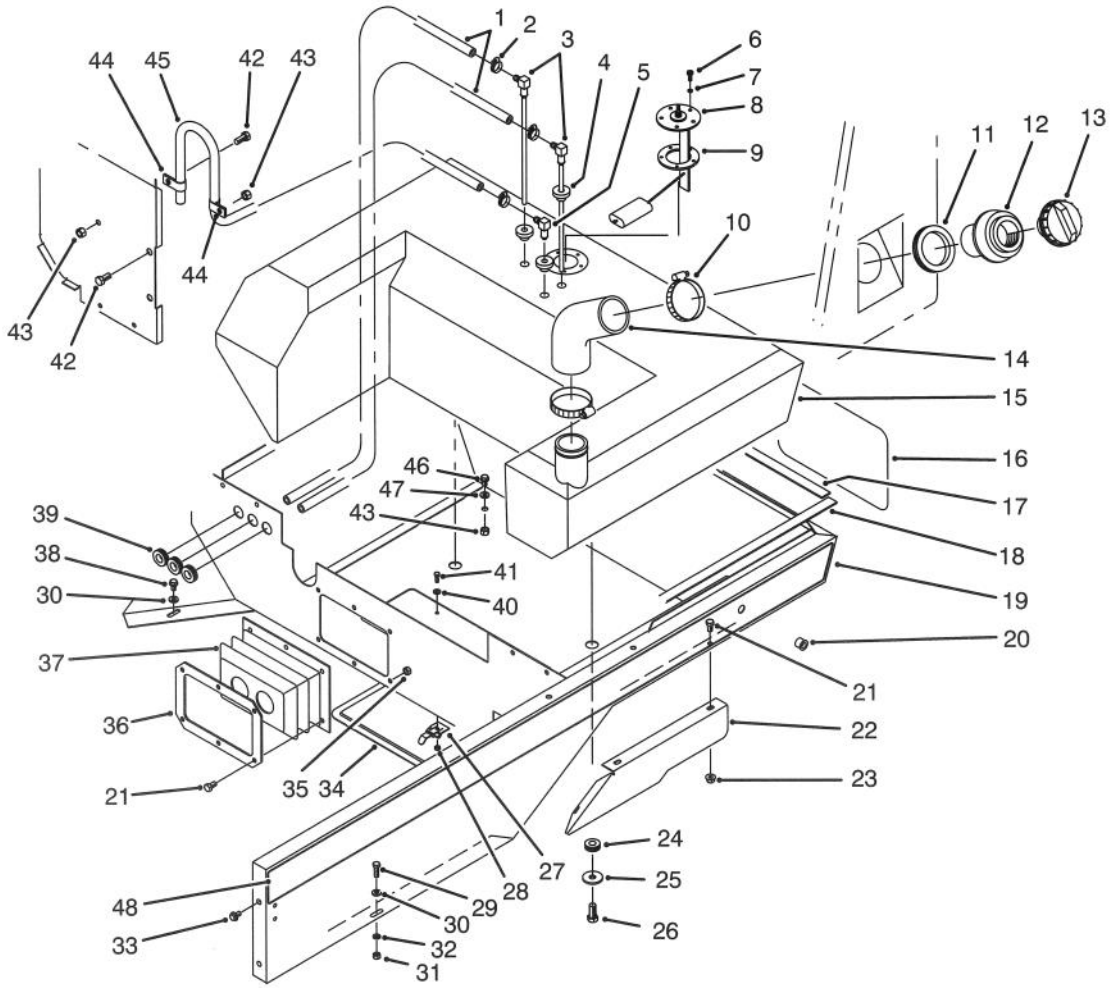


T–1681

FUEL TANK & LOWER BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–4766	Hose – Fuel	2
2	2412–108	Clamp – Hose	5
3	92–6061	Standpipe	2
4	46–6560	Grommet	3
5	46–6550	Elbow	1
6	3250–31	Screw – Pan Hd.	5
7	3253–2	Washer – Lock	5
8	63–7640	Sender – Fuel	1
9	62–7650	Gasket – Fuel Sender	1
10	2412–42	Clamp – Hose	2
11	92–5675	Grommet	1
12	92–5674	Neck – Fuel Fill	1
13	72–0090	Cap – Fuel	1
14	92–4797	Hose – Fuel Fill	1
15	92–4790	Tank – Fuel	1
16	66–6140	Decal – TORO	1
17	92–5671	Strip – Sealing	1
18	92–5670	Strip – Sealing	2
19	92–4703	Lower Body Assembly (Incl. Ref. #20)	1
20	32148–9	Nut – Insert	2
21	321–2	Screw – Cap Hex. Hd.	9
22	92–6069	Shield – Exhaust	1
23	32128–33	Nut – Flange Lock	3
24	240–11	Grommet	2
25	63–8410	Washer – Flat	2

Ref. No.	Part No.	Description	No. Used
26	323–5	Screw – Cap Hex. Hd.	2
27	52–9590	Latch	4
28	3296–12	Nut – Lock	4
29	48–7630	Screw	1
30	3256–16	Washer – Flat	5
31	48–7890	Nut – Hex.	1
32	43–5930	Washer – Lock	1
33	3234–4	Screw – Hex. Flange Hd.	4
34	92–5654	Panel – Clean–Out	1
35	3296–56	Nut – Lock	6
36	92–5653	Ring – Clamp	1
37	92–5269	Bellows	1
38	48–6900	Screw	4
39	240–9	Grommet	3
40	3256–51	Washer – Flat	4
41	32144–1	Screw – Cap Hex. Hd.	4
42	322–3	Screw – Cap Hex. Hd.	2
43	3296–29	Nut – Lock	4
44	92–6064	Clamp – R	2
45	92–6068	Hose – Vent	1
46	3234–5	Screw – Cap Hex. Hd.	2
47	3256–23	Washer – Flat	2
48	82–9610	Decal – Side Panel LH (Model No. 03705 Only)	1
*	82–9600	Decal – Side Panel RH (Model No. 03705 Only)	1

*Not Illustrated

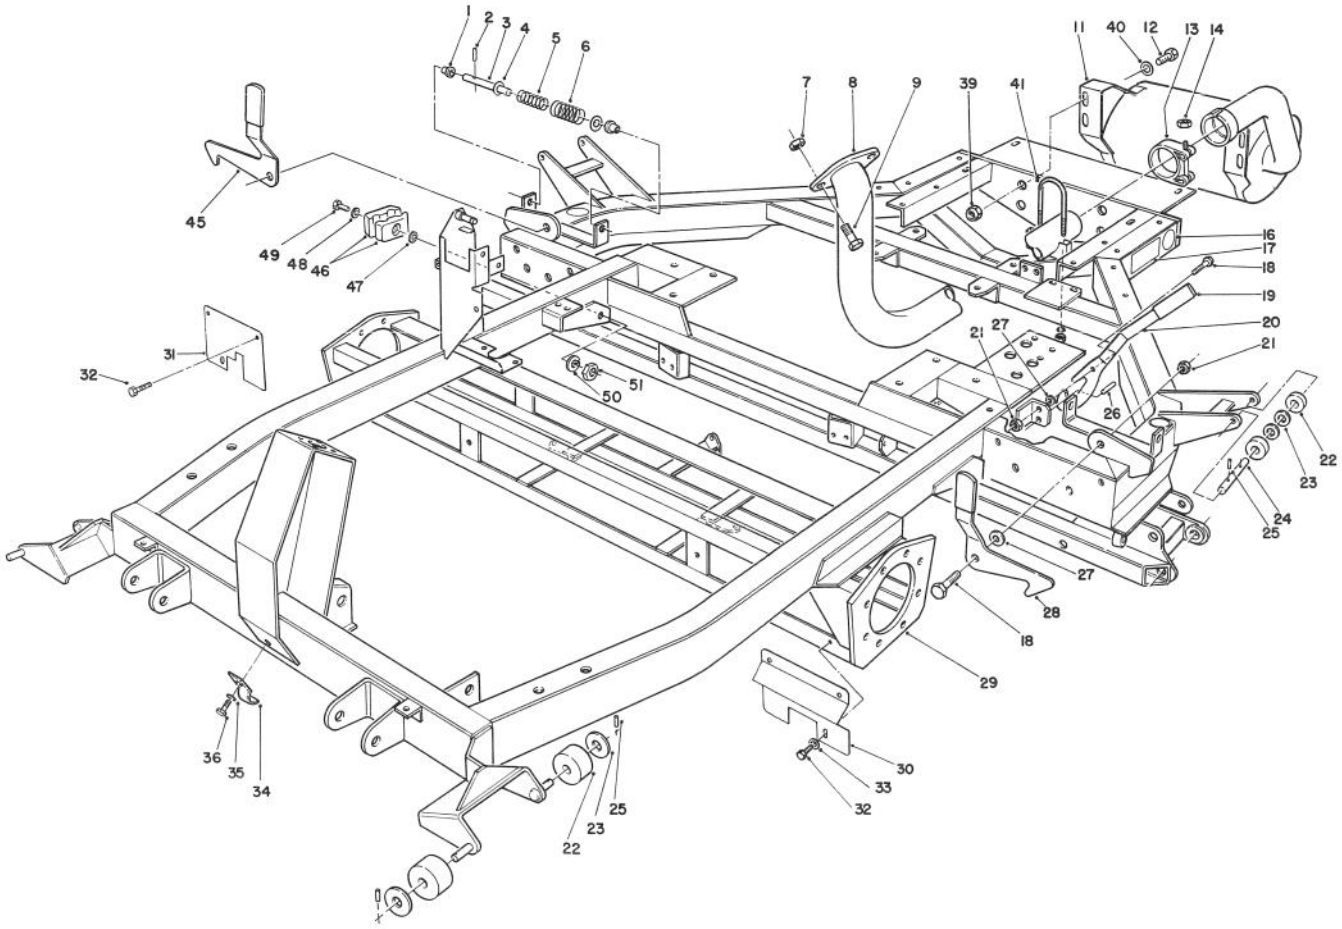


T–1701

CHASSIS & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	58–2800	Bushing	4
2	60–3720	Pin – Roll	2
3	58–2810	Rod	2
4	3256–7	Washer – Flat	4
5	48–6780	Spring	2
6	60–1240	Spring	2
7	60–6660	Nut – Hex	2
8	76–3470	Tube – Exhaust	1
9	48–9470	Bolt	2
11	92–5273	Muffler	1
12	323–19	Screw – Cap Hex. Hd.	4
13	2412–132	Clamp (Incl. Ref. #14)	1
‡14		Nut	1
16	58–6520	Decal – Grease	3
17	58–5910	Decal – Tire Pressure	2
18	60–6870	Bolt	3
19	48–7080	Cap	3
20	86–6570	Lever	1
21	51–2070	Nut	3
22	82–4910	Roller	8
23	51–2060	Washer	8
24	60–0160	Pin – Roller Rear	2

Ref. No.	Part No.	Description	No. Used
25	60–2110	Pin – Roll	8
26	48–8830	Pin – Roll	1
27	48–8850	Washer – Bevel	3
28	86–6590	Lever – LH	1
29	92–4761	Chassis	1
30	60–4190	Grass Shield – L.H.	1
31	60–4200	Grass Shield – R.H.	1
32	48–6900	Screw – Hex Hd.	6
33	48–8010	Washer	2
34	60–2080	Clamp – Hose	1
35	48–9570	Washer – Lock	1
36	48–7680	Screw – Cap Hex Hd.	1
39	3296–39	Nut – Lock	2
40	3256–24	Washer – Flat	4
41	76–3560	Clamp – Exhaust	1
45	86–6580	Lever – RH	1
46	92–3044	Clamp – Tube	2
47	92–2950	Spacer	1
48	3256–22	Washer – Flat	1
49	321–9	Screw – Cap Hex. Hd.	1
50	3253–3	Washer – Lock	1
51	3217–5	Nut – Hex.	1

‡Not Serviceable Separately

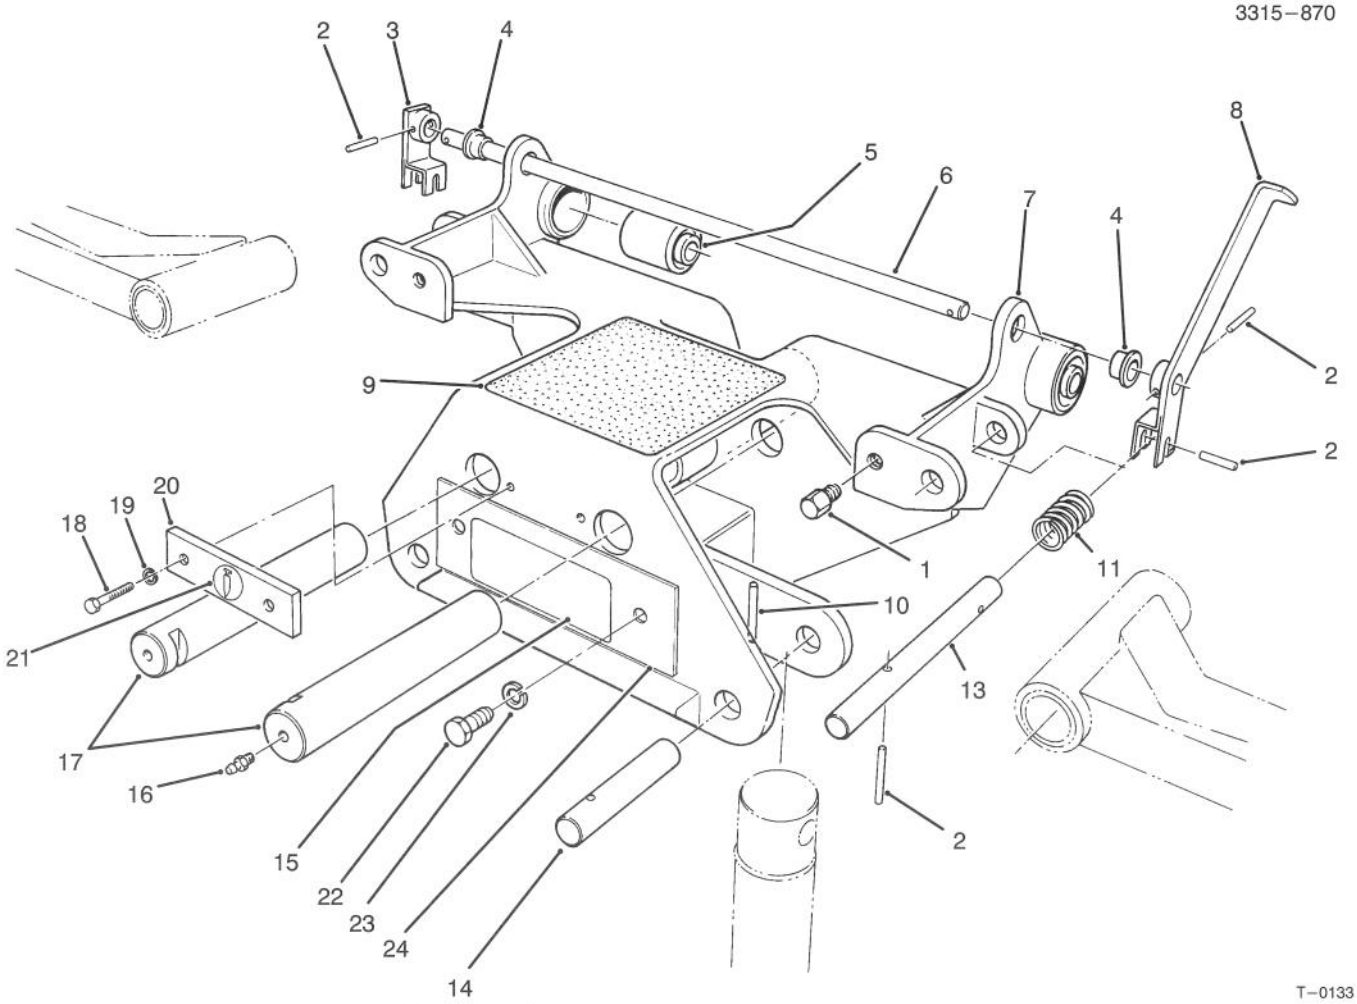


T–0133

FRONT CARRIER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82–9250	Stud – Threaded	2
2	60–2000	Pin – Dowel	6
3	60–1750	Lever – R.H.	1
4	60–1990	Bushing – Flange	2
5	47–7010	Bushing	2
6	60–1820	Shaft – Pivot	1
7	74–2920	Carrier – Front	1
8	60–1780	Lever – L.H.	1
9	82–9370	Pad – Step	1
10	3285–11	Pin – Spirol	2
11	60–0670	Spring – Compression	2
13	82–9360	Rod – Latch	2

Ref. No.	Part No.	Description	No. Used
14	58–2720	Pin – Cylinder Mount	2
15	86–6120	Decal – Towing	1
16	302–5	Fitting – Grease	2
17	60–0090	Pin – Lift Arm, Pivot	2
18	322–2	Screw – Cap Hex. Hd.	2
19	3253–4	Washer – Lock	2
20	60–0190	Retainer	1
21	58–6520	Decal – Grease	1
22	325–2	Screw – Cap Hex. Hd.	2
23	3253–7	Washer – Lock	2
24	84–6480	Plate – Decal	1

*Not Illustrated

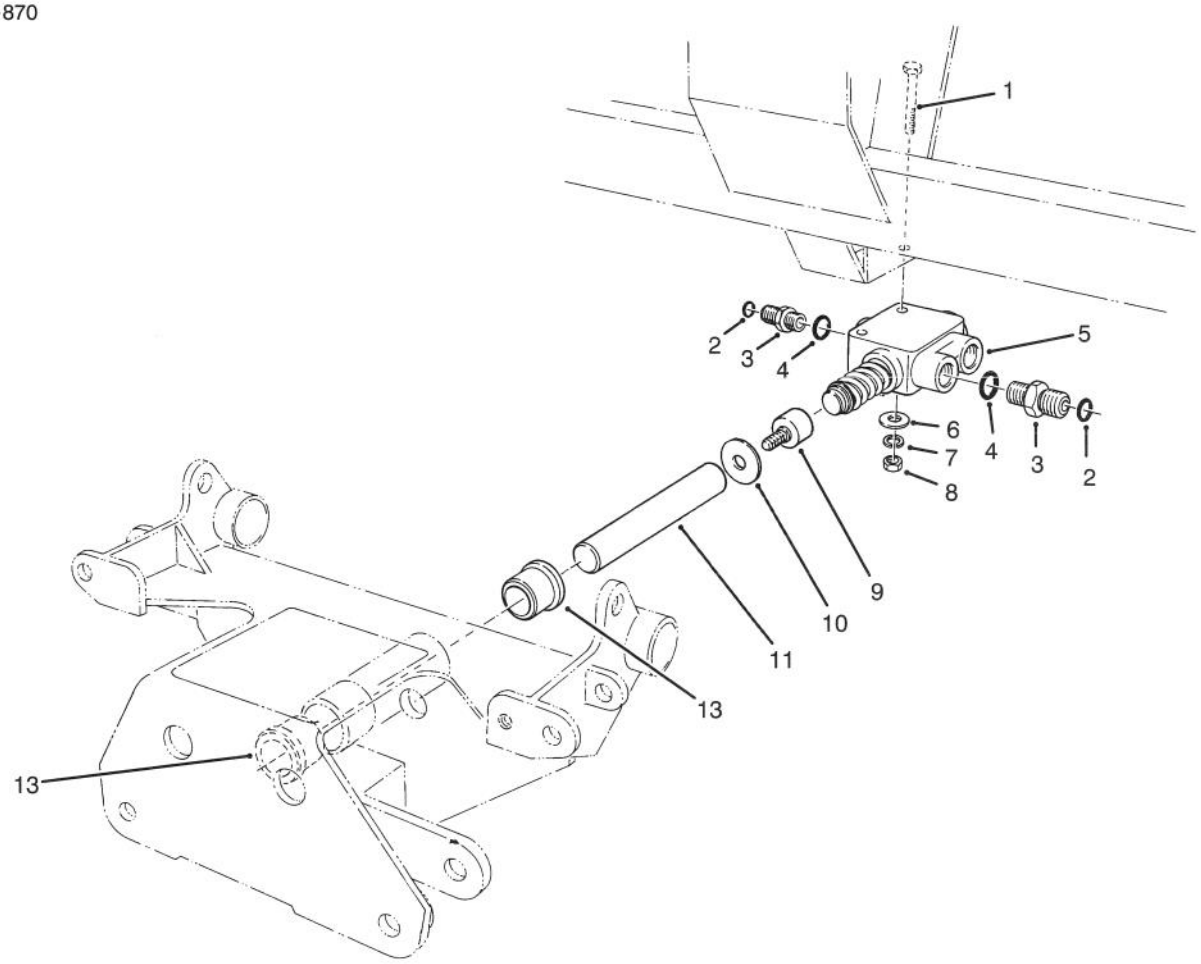


T–0134

PUSH ROD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–12	Screw – Cap Hex Hd.	2
2	237–65	O–Ring	3
3	340–7	Fitting – Straight (Incl. Ref. #2 & 4)	3
4	237–80	O–Ring	3
5	58–5460	Valve – Shutoff	1
6	3256–23	Washer – Flat	2

Ref. No.	Part No.	Description	No. Used
7	3253–4	Washer – Lock	2
8	3217–6	Nut – Hex	2
9	59–7140	Bumper	1
10	3256–68	Washer	A/R
11	60–0300	Rod	1
13	48–6640	Bushing – Flange	2

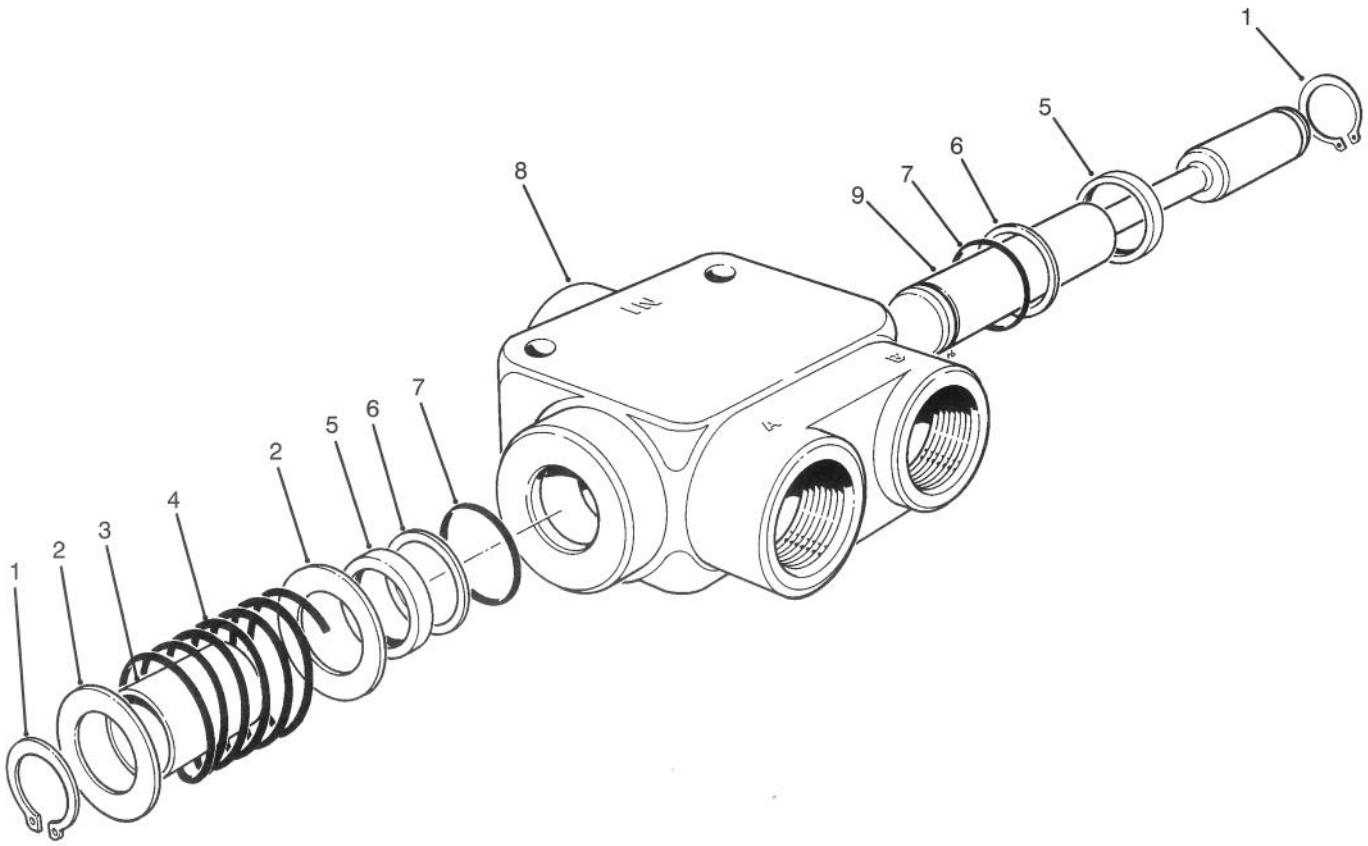


T–0135

REEL SHUT–OFF VALVE NO. 58–5460

Ref. No.	Part No.	Description	No. Used
1	59–7810	Circlip	2
2	59–7820	Washer	2
†3		Spacer	1
4	59–7840	Spring	1
5	59–7850	Wiper	2
6	59–7860	Backup Washer	2

Ref. No.	Part No.	Description	No. Used
7	59–7780	O–Ring	2
†8		Body	1
†9		Spool	1
*	59–7890	Seal Kit (Incl. Ref. #1, 5, 6 & 7)	1

*Not Illustrated
†Not Serviceable Separately

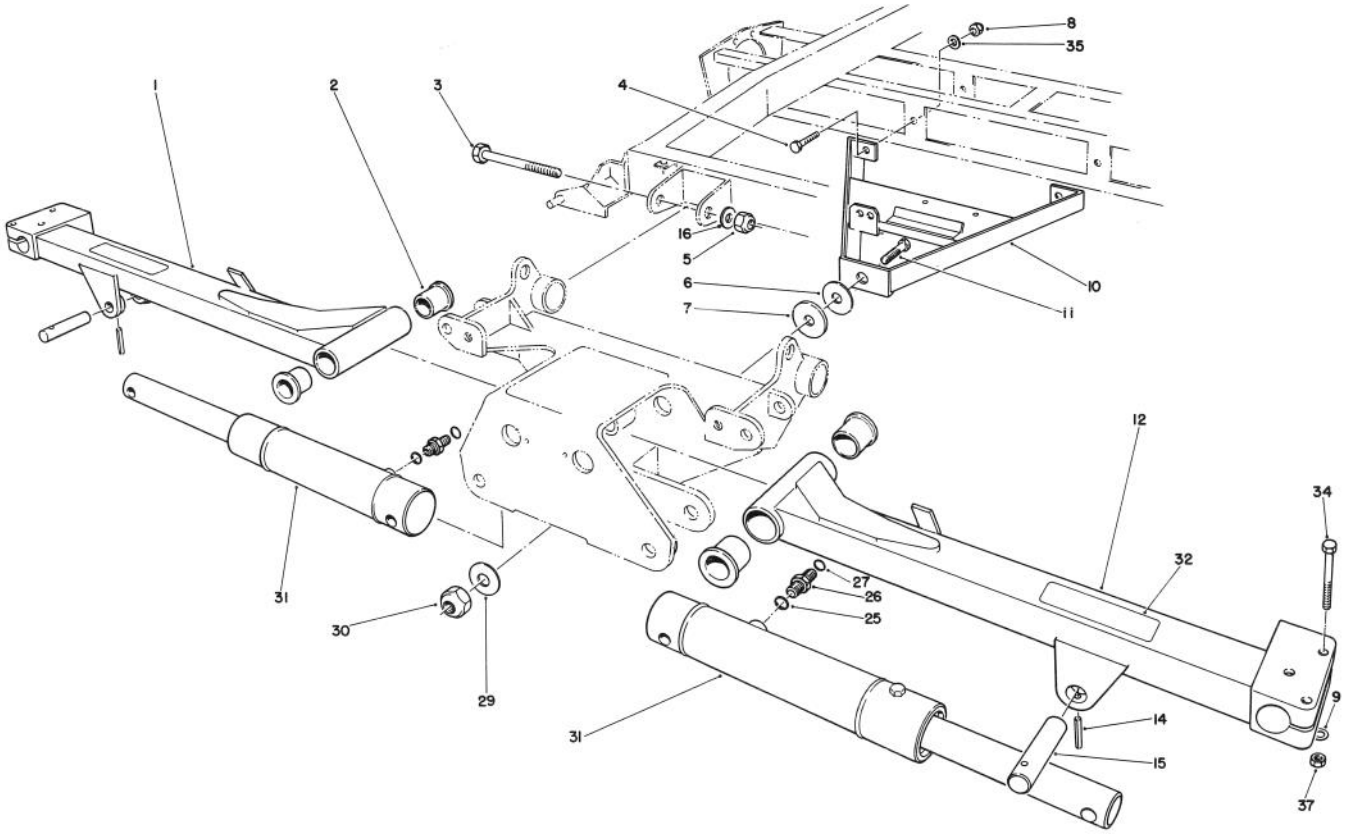


T–0136

NO. 2 & 3 LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82–9560	No. 3 Lift Arm	1
2	68–6480	Bushing	4
3	325–17	Bolt	2
4	48–9470	Bolt	2
5	3296–23	Nut – Lock	2
6	52–6180	Washer	A/R
7	60–3250	Washer – Rubber	1
8	48–9520	Nut – Lock	2
9	3256–56	Washer – Flat	6
10	60–0440	A–Frame	1
11	48–9490	Bolt	1
12	82–9550	No. 2 Lift Arm	1
14	60–1280	Pin – Roll	2

Ref. No.	Part No.	Description	No. Used
15	58–4380	Pin – Pivot	2
16	3256–26	Washer – Flat	2
25	237–42	O–Ring	2
26	340–2	Adapter (Incl. Ref. #25 & 27)	2
27	237–22	O–Ring	2
29	48–9600	Washer	1
30	48–9540	Nut	1
31	84–6210	Hydraulic Cylinder Assembly	2
32	61–3610	Decal	2
34	323–13	Bolt	6
35	48–9580	Washer	2
37	3296–39	Nut – Lock	6

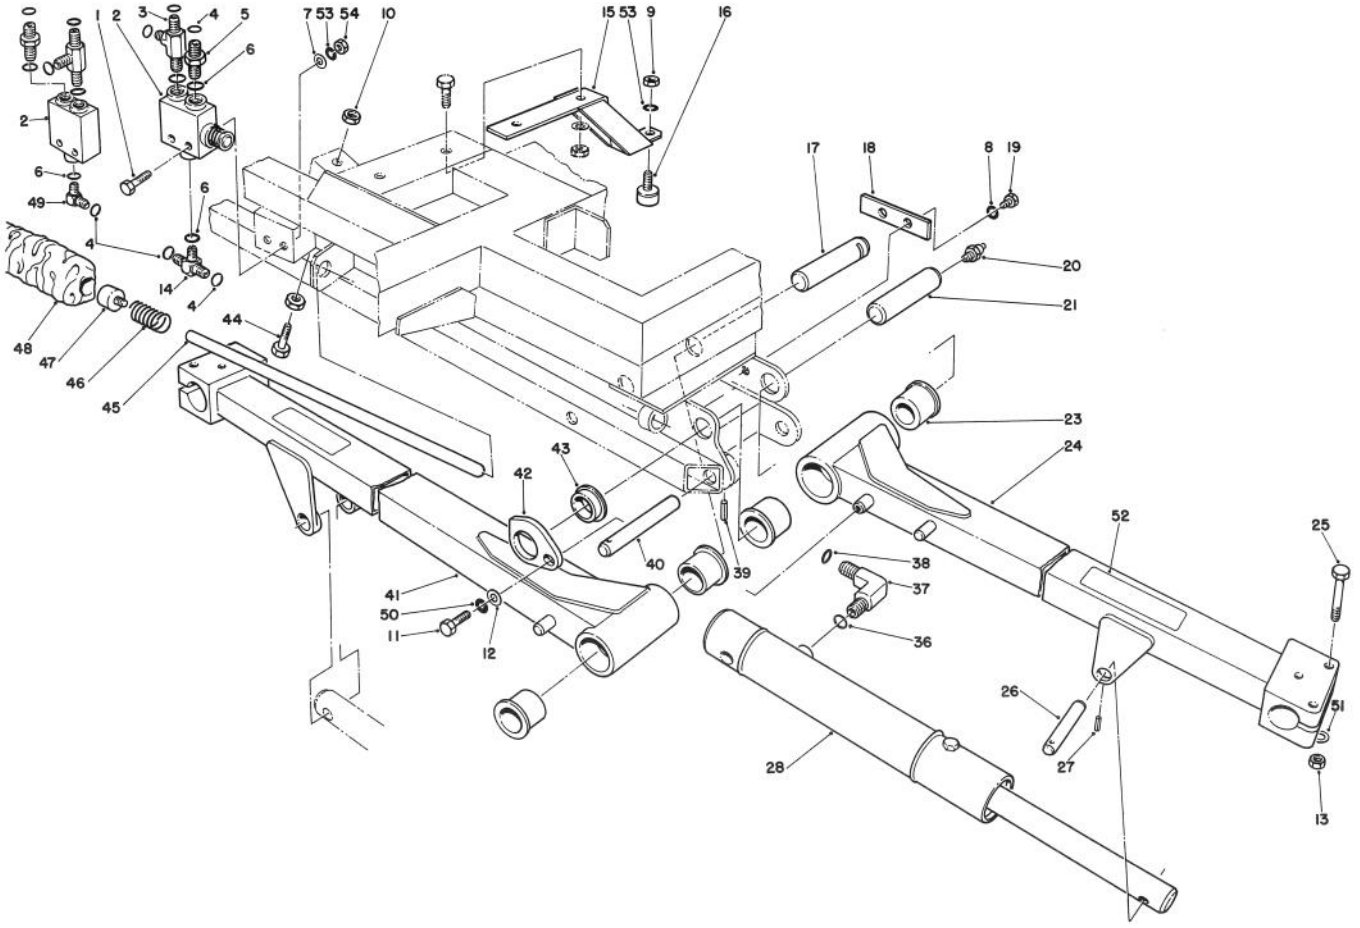


T–0137

NO. 1, 4 & 5 LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–12	Bolt	4
2	58–5460	Valve – Shut–Off	2
3	340–22	Fitting – Tee (Incl. Ref. #4 & 6)	2
4	237–65	O–Ring	9
5	340–7	Fitting (Incl. Ref. #4 & 6)	2
6	237–80	O–Ring SAE	6
7	3256–23	Washer	4
8	48–9570	Washer – Lock	4
9	48–7930	Nut – Hex.	2
10	48–9530	Nut – Hex.	2
11	323–6	Bolt	2
12	3256–3	Washer	2
13	3296–39	Nut – Lock	9
14	340–93	Fitting – Tee (Incl. Ref. #4 & 6)	1
15	60–1050	Bracket	2
16	48–3280	Bumper	2
17	60–0090	Pin – #1 Lift Arm Pivot	1
18	60–0190	Retainer – #1 & 4 Pivot Pin	1
*	60–1640	Retainer – #5 Pivot Pin	1
19	48–7700	Bolt	4
20	302–5	Fitting – Grease	3
21	60–0100	Pin – #4 & 5 Lift Arm Pivot	2
23	68–6480	Bushing	6
24	82–9570	Lift Arm No. 4	1

Ref. No.	Part No.	Description	No. Used
25	323–13	Bolt	9
26	58–4380	Pin – Pivot	3
27	60–1280	Pin – Roll	3
28	84–6210	Hydraulic Cylinder Assembly	3
36	237–42	O–Ring SAE	3
37	340–77	Fitting (Incl. Ref. #36 & 38)	3
38	237–22	O–Ring	3
39	3285–11	Pin – Roll	3
40	58–2720	Pin – Pivot	3
41	82–9540	Lift Arm No. 1	1
42	58–9210	Cam	2
43	60–0080	Bushing – Flanged	2
44	53–5940	Bolt	1
45	60–1340	Rod – Push RH	1
*	60–1350	Rod – Push LH	1
46	58–3570	Spring – Compression	2
47	59–7140	Bumper	2
48	58–9630	Sleeve – Protector	2
49	340–17	Fitting (Incl. Ref. #4 & 6)	1
50	3253–5	Washer – Lock	2
51	3256–56	Washer – Flat	9
52	61–3610	Decal	3
53	3253–4	Washer – Lock	6
54	3217–6	Nut – Hex.	4
*	82–9580	Lift Arm No. 5	1

*Not Illustrated

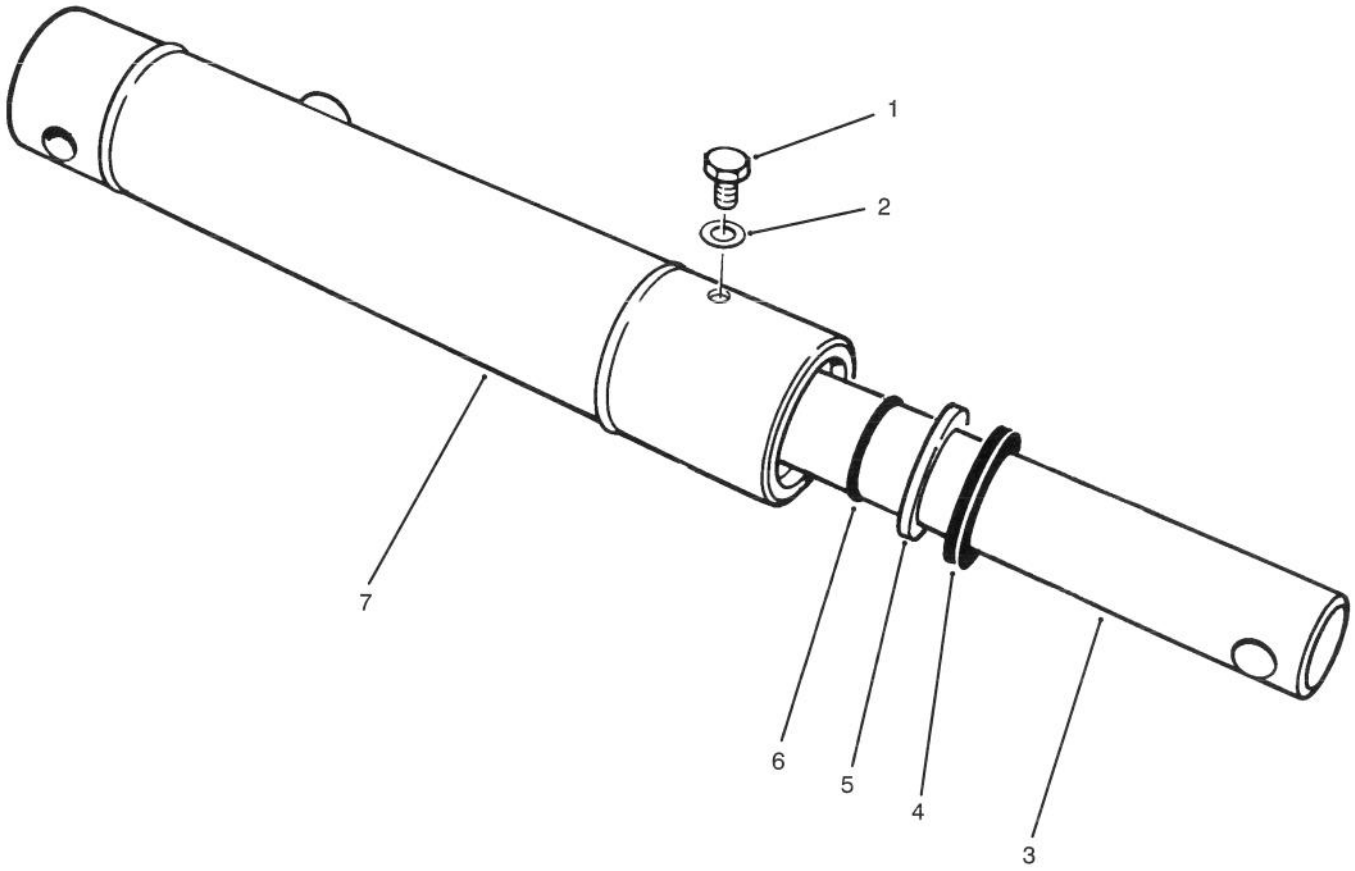


T–1685

HYDRAULIC CYLINDER ASSEMBLY NO. 84–6210

Ref. No.	Part No.	Description	No. Used
1	60–3660	Screw – Bleed	1
2	60–3650	Washer	1
†3		Rod	1
4	60–3630	Wiper	1
5	60–3620	Seal	1
6	60–3610	Ring – Snap	1
†7		Barrel	1
*	62–6370	Kit – Seal (Incl. Ref. #2 & 4–6)	1

†Not Sold Separately

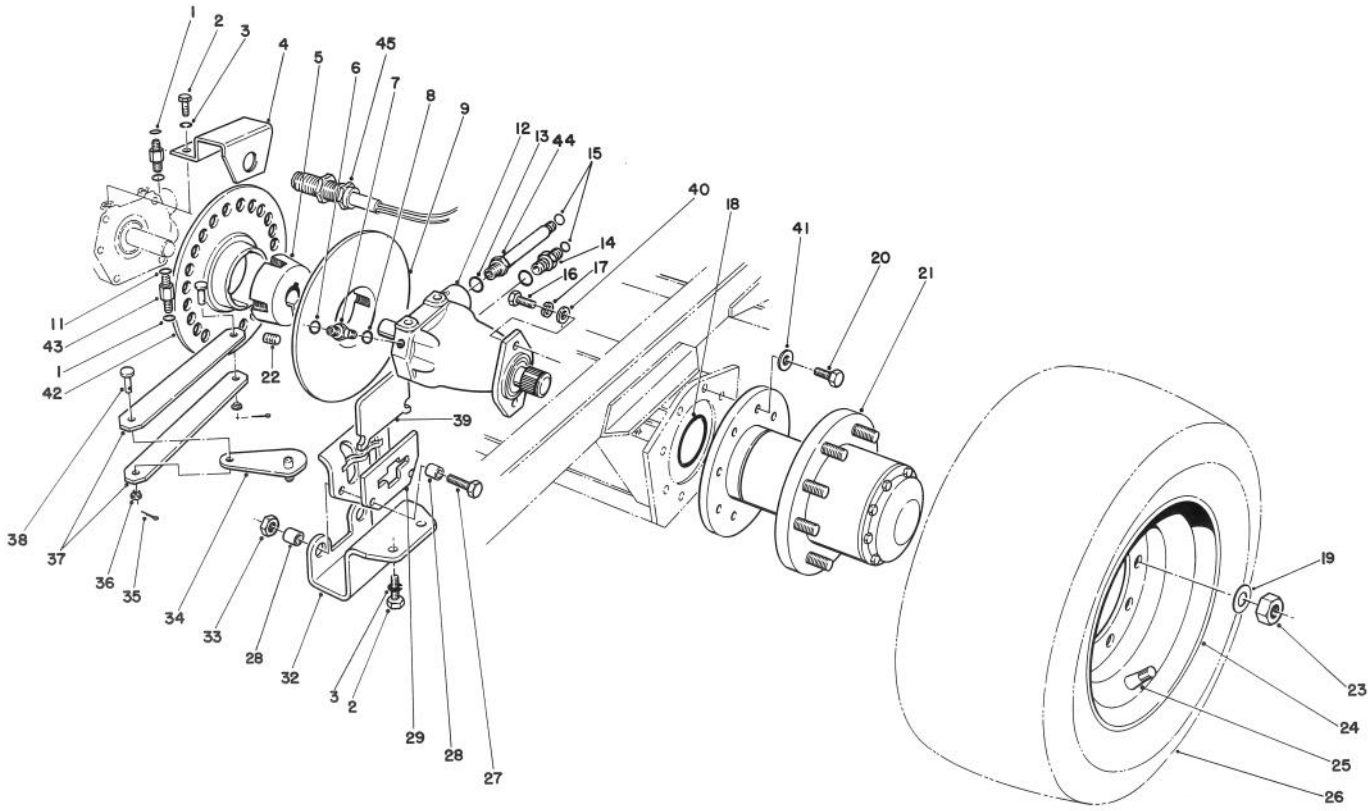

T–0138


TRACTION DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	237–21	O–Ring	2
2	322–3	Screw – Cap Hex. Hd.	6
3	3253–4	Washer – Lock	6
4	82–9330	Bracket – Sensor	1
5	23–1840	Bushing (Incl. Ref. #22)	2
6	237–22	O–Ring	2
7	340–2	Fitting (Incl. Ref. #6 & 8)	2
8	237–42	O–Ring	2
9	58–0070	Disc – Brake	1
11	237–118	O–Ring	2
12	58–5430	Motor – Wheel	2
13	237–81	O–Ring	4
14	340–9	Fitting (Incl. Ref. #13 & 15)	2
15	237–58	O–Ring	4
16	323–18	Bolt	4
17	3253–5	Washer – Lock	4
18	353–949	O–Ring	2
19	60–6990	Washer	18
20	327–3	Bolt	16
21		Drive Hub Assembly (Standard Speed Ratio) (Model 03704)	2
*		Drive Hub Assembly (High Speed Ratio) (Model 03705)	2

Ref. No.	Part No.	Description	No. Used
22	3247–10	Screw – Set	4
23	3219–5	Nut – Hex.	18
24	58–5610	Rim	2
25	58–5620	Tube – Inner	2
26	63–4480	Tire (Model 03704)	2
*	58–5600	Tire (Model 03705)	2
27	323–20	Bolt	4
28	58–3780	Spacer	8
29	29–1060	Bracket	2
32	58–0110	Bracket	2
33	3296–39	Nut – Lock	4
34	29–1070	Lever Assembly	2
35	3272–6	Pin – Cotter	4
36	60–1740	Nut – Spring	4
37	58–2300	Link – Brake	4
38	283–67	Pin – Clevis	4
39	29–1080	Pad	4
40	3256–3	Washer – Flat	4
41	3256–27	Washer – Flat	16
42	82–9280	Disc – 22 Hole (Used on Model 03704)	1
*	82–9270	Disc – 27 Hole (Used on Model 03705)	1
43	340–90	Fitting (Incl. Ref. #1 & 11)	2
44	92–6058	Fitting (Incl. Ref. #13 & 15)	2
45	75–6700	Sensor – Magnetic	1

*Not Illustrated

3315–870

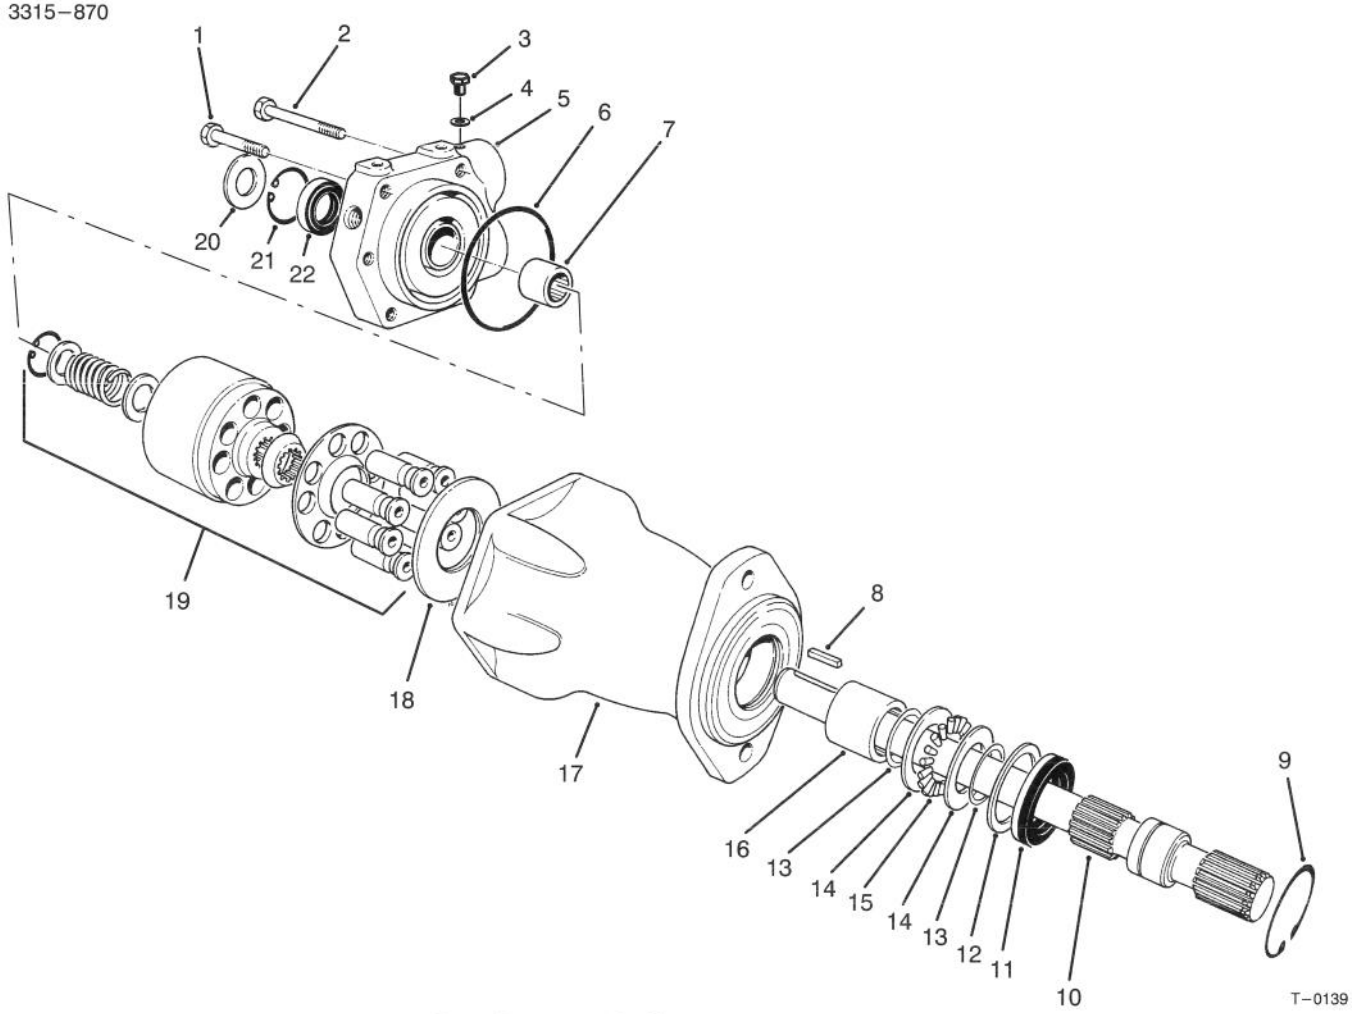


WHEEL MOTOR ASSEMBLY NO. 58–5430

Ref. No.	Part No.	Description	No. Used
1	59–8290	Screw – Cap Hex. Hd.	3
2	59–8280	Screw – Cap Hex. Hd.	3
3	353–948	Plug (Incl. Ref. #4)	2
4	237–118	Seal – O–Ring	2
5	59–8270	Back Plate Assembly (Incl. Ref. #7)	1
6	59–8260	O–Ring	1
7	60–3590	Bearing	1
8	59–8380	Key	1
9	32151–13	Ring – Retaining	1
10	59–8360	Shaft – Drive	1
11	59–8370	Seal – Shaft	1
12	33–3720	Washer	1
13	32151–29	Ring – Retaining	2

Ref. No.	Part No.	Description	No. Used
14	252–71	Race – Thrust	1
15	252–66	Bearing – Thrust	1
16	60–3380	Bearing	1
17	59–8300	Housing Assembly (Incl. Ref. #16)	1
18	59–8350	Camplate Assembly	1
19	59–8340	Rotating Assembly	1
20	84–6440	Shield – Grass	1
†21		Ring – Retaining	1
†22		Seal – Shaft	1
*	59–8390	Kit – Seal Repair (Incl. Ref. #6, 9, 11, 13, & 20–22)	1
*	66–5840	Kit – Seal Repair (Incl. Ref. #20–22)	1

*Not Illustrated
†Not Serviceable Separately

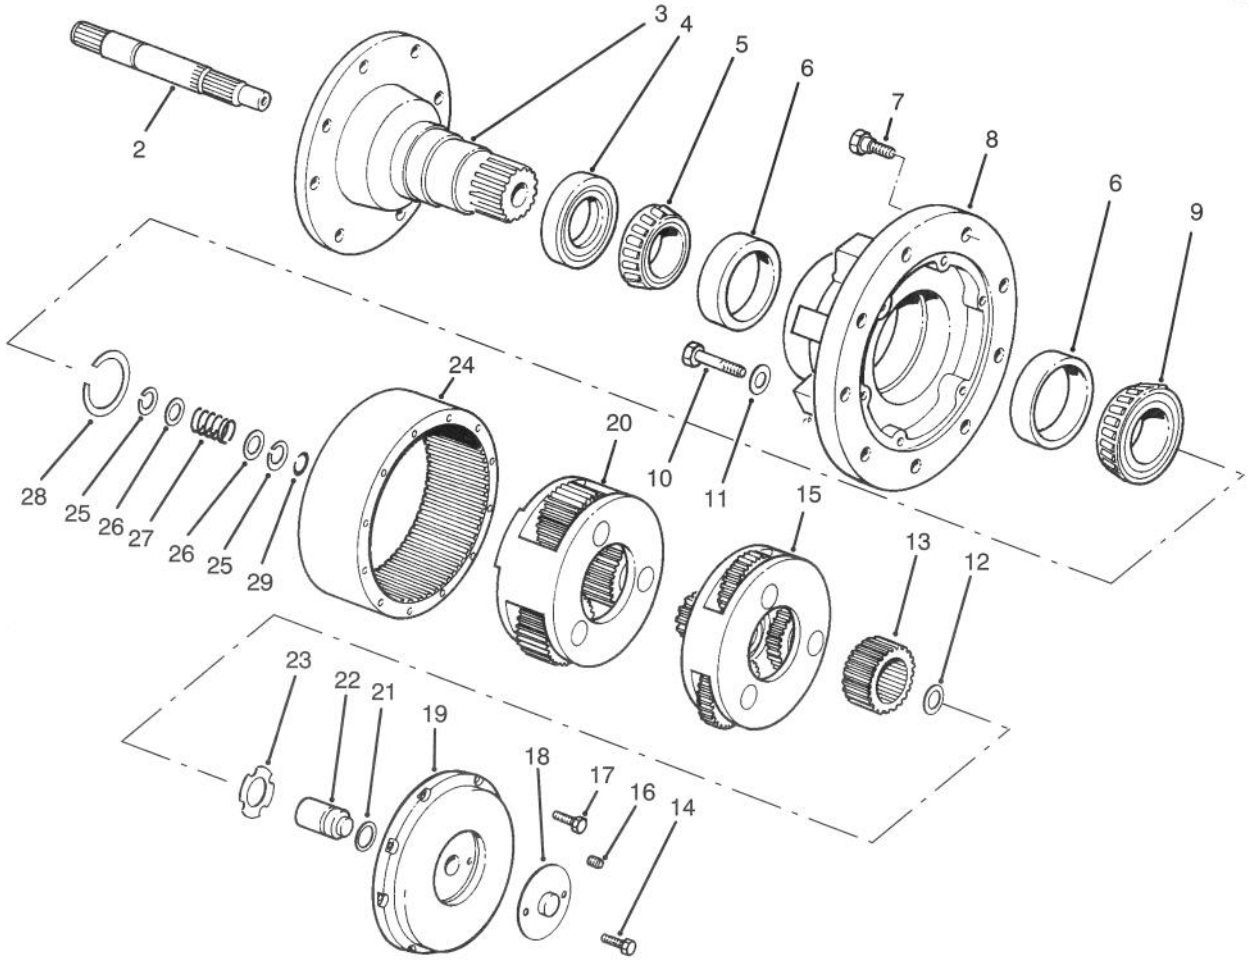

T–0140

PLANETARY GEAR DRIVE ASSEMBLY
Standard Speed Ratio (19.62:1) Model No. 03704
High Speed Ratio (15.88:1) Model No. 03705


Ref. No.	Part No.	Description	No. Used
1	60–3800	Coupling	1
2	60–3810	Shaft – Input	1
3	60–3820	Spindle	1
4	60–3830	Seal – Oil	1
5	60–3840	Cone – Bearing	1
6	60–3850	Cup – Bearing	2
7	60–3860	Bolt – Wheel	9
8	60–3870	Hub	1
9	60–3880	Cone – Bearing	1
10	60–3890	Bolt – Hex. Hd.	6
11	60–3910	Washer – Flat	6
12	60–3980	Washer – Thrust	1
13	60–3970	Gear – Primary Sun (High Speed Ratio)	1
*	62–6430	Gear – Primary Sun (Standard Speed Ratio)	1
14	60–4070	Bolt – Hex. Hd.	2
15	60–3960	Primary Carrier Assembly (High Speed Ratio)	1
*	62–6410	Primary Carrier Assembly (Standard Speed Ratio)	1

Ref. No.	Part No.	Description	No. Used
16	60–4040	Plug – Pipe	1
17	60–4030	Bolt – Hex Hd.	8
18	60–4060	Cover – Disengage	1
19	60–4050	Cover – Large	1
20	60–4000	Secondary Carrier Assembly (High Speed Ratio)	1
*	62–6420	Secondary Carrier Assembly (Standard Speed Ratio)	1
21	60–4020	O–Ring	1
22	60–4010	Plunger – Disengage	1
23	60–3990	Washer – Thrust	1
24	60–3900	Gear – Ring	1
25	82–8700	Ring – Retaining	2
26	60–3940	Washer	2
27	60–3950	Spring – Disengage	1
†28	62–6450	Kit – Retaining Ring	1
29	60–3930	Ring – Retaining	1
*	62–6460	Tube – RW Sealant	1

*Not Illustrated

†Includes 7 different thickness for service adjustment of bearings.

3315−870

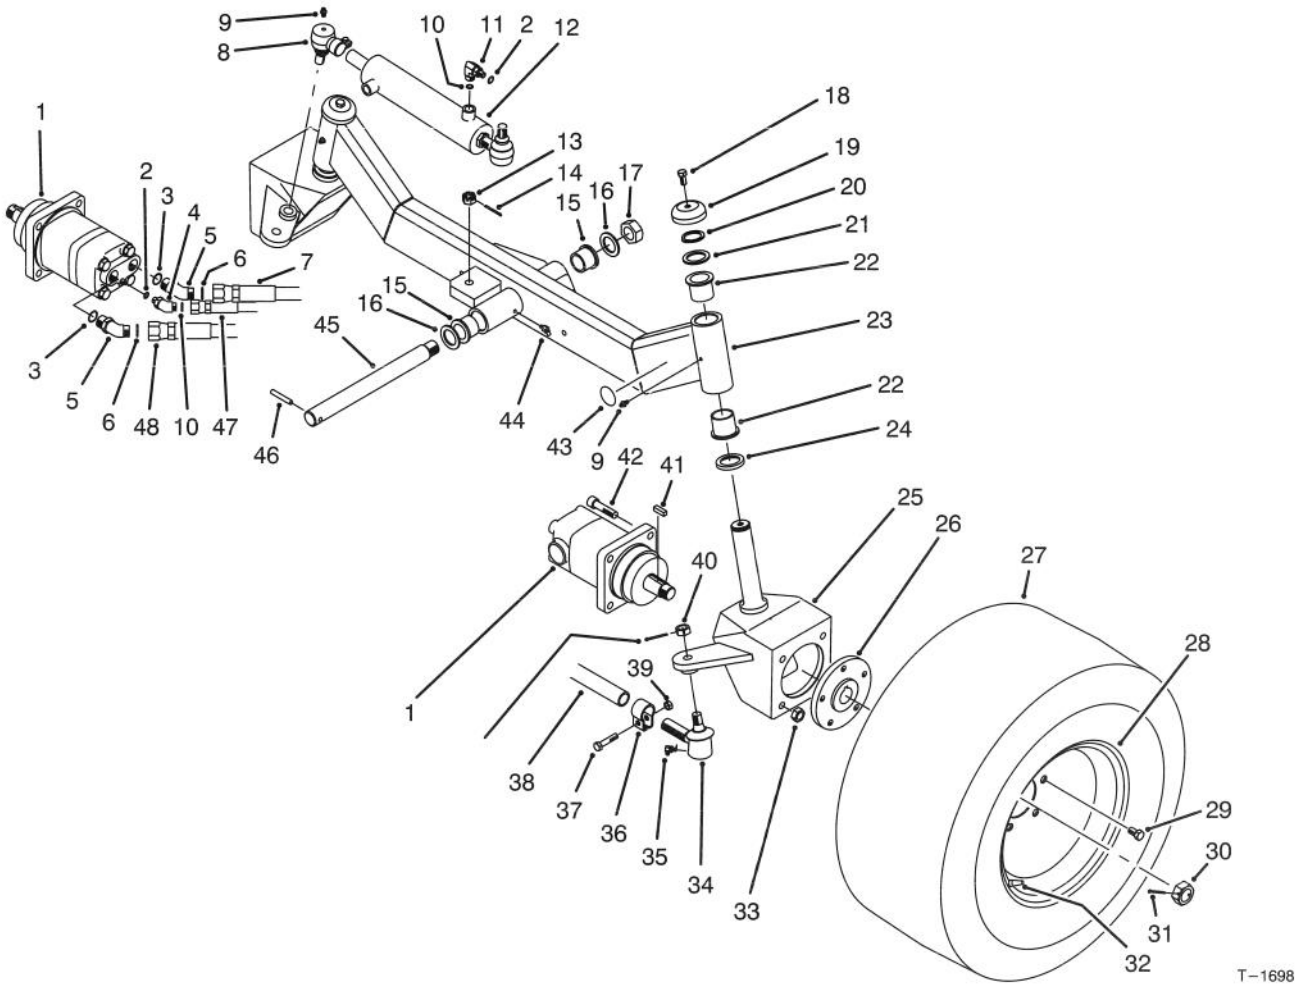


STEERING AXLE

Ref. No.	Part No.	Description	No. Used
1	92−4724	Hydraulic Motor Assembly (Incl. Ref. #30 & 41)	2
2	237−78	Seal − O−Ring	4
3	237−80	Seal − O−Ring	4
4	340−54	Fitting − Hydraulic 45° (Incl. Ref. #2 & 10)	2
5	340−89	Fitting − Hydraulic 45° (Incl. Ref. #3 & 6)	4
6	237−30	Seal − O−Ring	4
7	92−5663	Hose − Hydraulic	2
8	69−9810	Ball Joint Assembly (Incl. Ref. #9 & 13)	1
9	302−5	Fitting − Grease	3
10	237−22	Seal − O−Ring	4
11	340−97	Fitting − Hydraulic 90° (Incl. Ref. #2 & 10)	2
12	92−6057	Hydraulic Cylinder Assembly	1
13	32136−13	Nut − Castle	2
14	3272−13	Pin − Cotter	4
15	48−6640	Bushing − Flange	2
16	48−6660	Washer − Thrust	2
17	3296−49	Nut − Lock	1
18	3234−12	Screw − Hex. Flange Hd.	2
19	69−8890	Cap − Spindle	2
20	32151−10	Ring − Retaining	2
21	256−304	Washer − Thrust	2

Ref. No.	Part No.	Description	No. Used
22	69−6470	Bushing − Flange	4
23	92−4755	Axle − Rear	1
24	86−6560	Washer − Thrust	2
25	92−4779	Housing − Motor LH	1
*	92−4787	Housing − Motor RH	1
26	92−4749	Hub − Wheel	2
27	69−9880	Tire (Used on Model 03704)	2
*	58−5570	Tire (Used on Model 03705)	2
28	217−116	Rim (Used on Model 03704)	2
*	58−5590	Rim (Used on Model 03705)	2
29	92−4750	Bolt − Wheel	10
30		Nut − Lock	2
31	3272−13	Pin − Cotter	2
32	232−27	Valve − Stem	2
33	3296−23	Nut − Lock	8
34	2116−4	Joint − Ball RH	1
*	2116−3	Joint − Ball LH	1
35	302−33	Fitting − Grease	2
36	2412−7	Clamp Assembly (Incl. Ref. #37 & 39)	2
37		Screw − Cap Hex. Hd.	2


*Not Illustrated

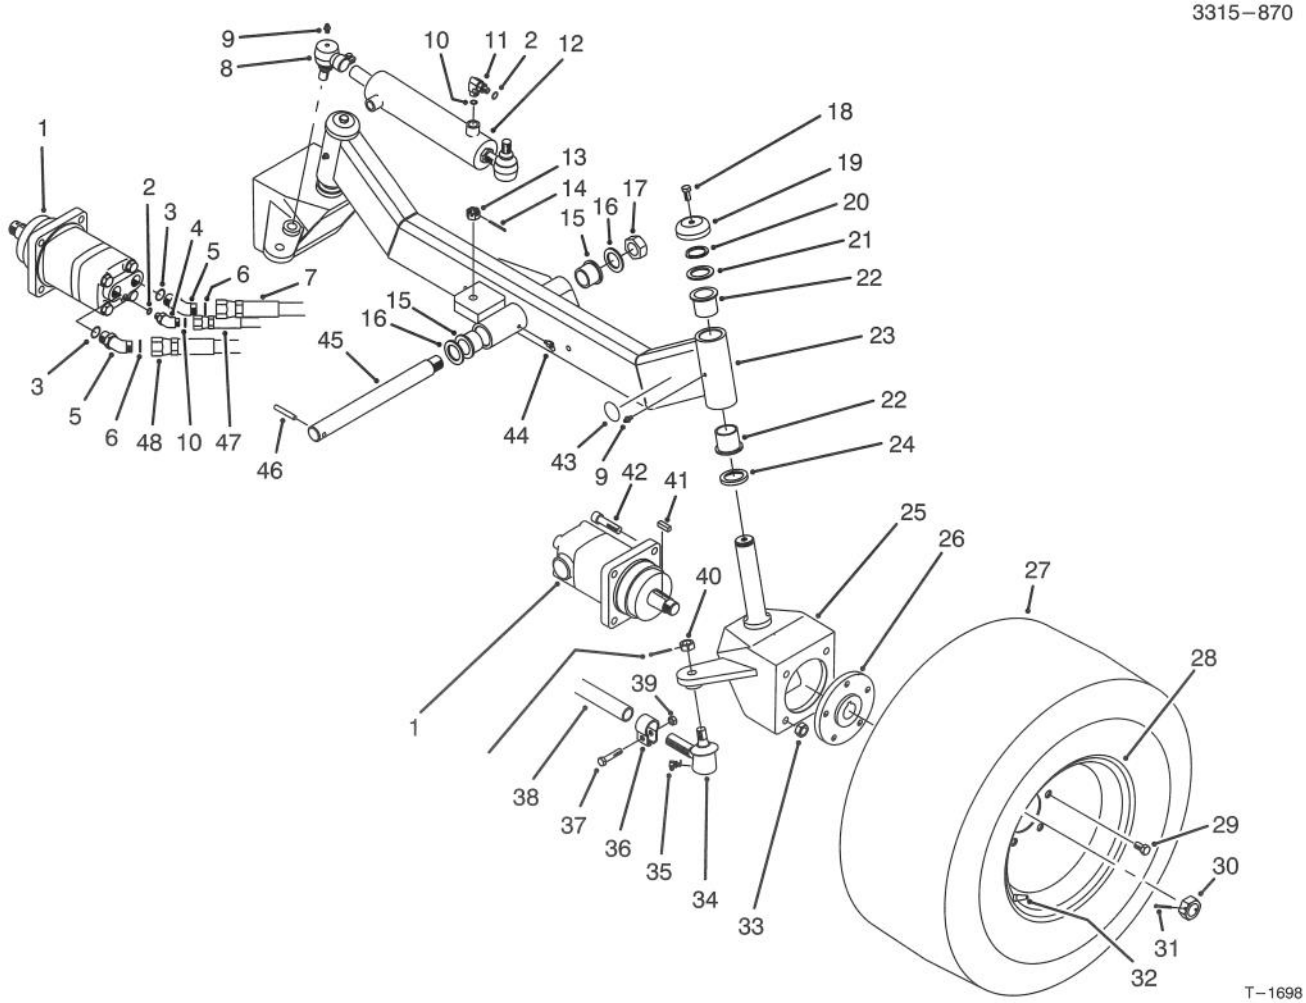

STEERING AXLE (Continued)

Ref. No.	Part No.	Description	No. Used
38	82–9260	Tie Rod Assembly (Incl. Ref. #34–40)	1
39	11–5800	Nut – Slotted	2
40	32136–2	Nut – Castle	2
41	11–5790	Key	2
42	3274–5	Screw – Socket Hd.	8

Ref. No.	Part No.	Description	No. Used
43	58–6520	Decal – Grease	2
44	302–11	Fitting – Grease	1
45	82–9210	Shaft – Pivot	1
46	60–3670	Pin – Roll	1
47	92–5664	Hose – Hydraulic	2
48	92–5662	Hose – Hydraulic	2

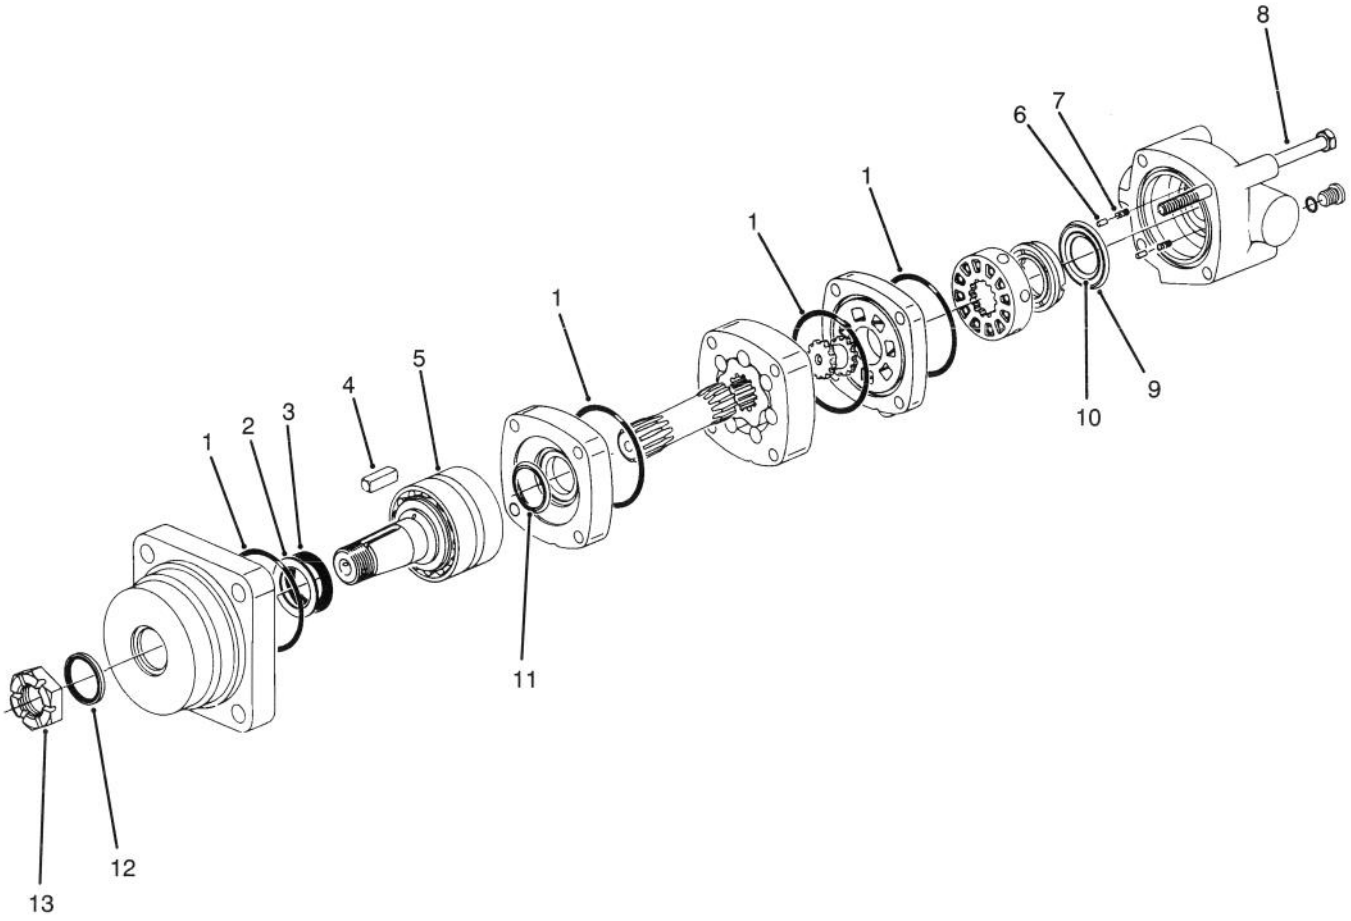


T–1705

HYDRAULIC MOTOR ASSEMBLY NO. 92–4724

Ref. No.	Part No.	Description	No. Used
1		Seal – O–Ring	4
2		Washer – Backup	1
3		Seal – Shaft	1
4	11–5790	Key	1
5	56–6860	Shaft Sub–Assembly	1
6	33–3570	Pin	2
7	33–3410	Spring	2
8	92–6075	Bolt	4

Ref. No.	Part No.	Description	No. Used
9		Seal – Outer	1
10		Seal – Inner	1
11		Seal – Shaft	1
12		Seal – Dust	1
13	11–5800	Nut – Slotted	1
*	56–6890	Kit – Seal (Incl. Ref. #1–3 & 9–12)	1

*Not Illustrated

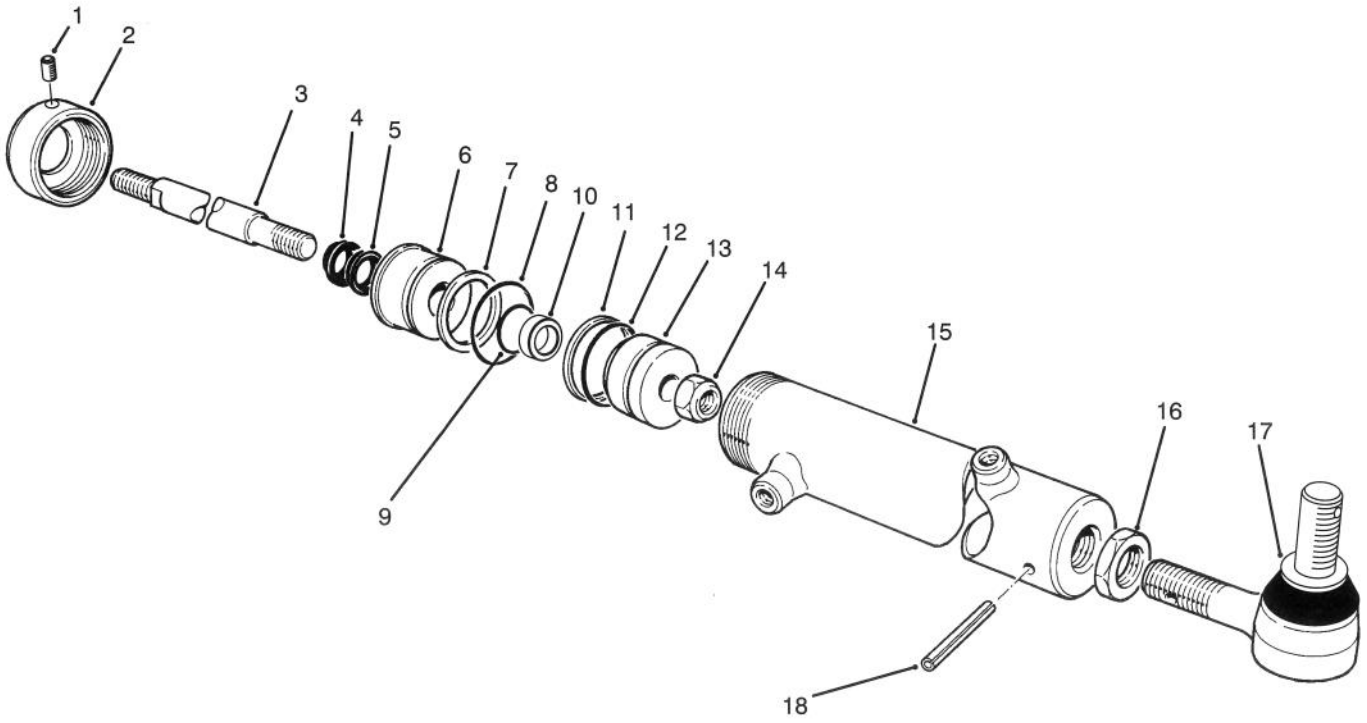


T–1715

HYDRAULIC CYLINDER 92–6057

Ref. No.	Part No.	Description	No. Used
1		Screw – Set	1
2	82–5780	Cap – Threaded	1
3	82–5770	Rod	1
†4		Wiper – Rod	1
†5		U–Cup	1
6	82–5790	Head – Cap	1
†7		Backup Washer	1
†8		O–Ring	1
†9		O–Ring	1
†10		Spacer	1
†11		Servon	1

Ref. No.	Part No.	Description	No. Used
†12		O–Ring	1
13	82–5760	Piston	1
14	82–5750	Nut – Lock	1
†15		Barrel Assembly	1
16	82–5740	Nut – Jam	1
17	82–5730	Rod Tie, End	1
18	32121–44	Pin – Roll	1
19		Spacer	1
*	82–5800	Kit – Repair, Seal (Incl. Ref. #4, 5, & 7–12)	1

*Not Illustrated
†Not Serviceable Separately

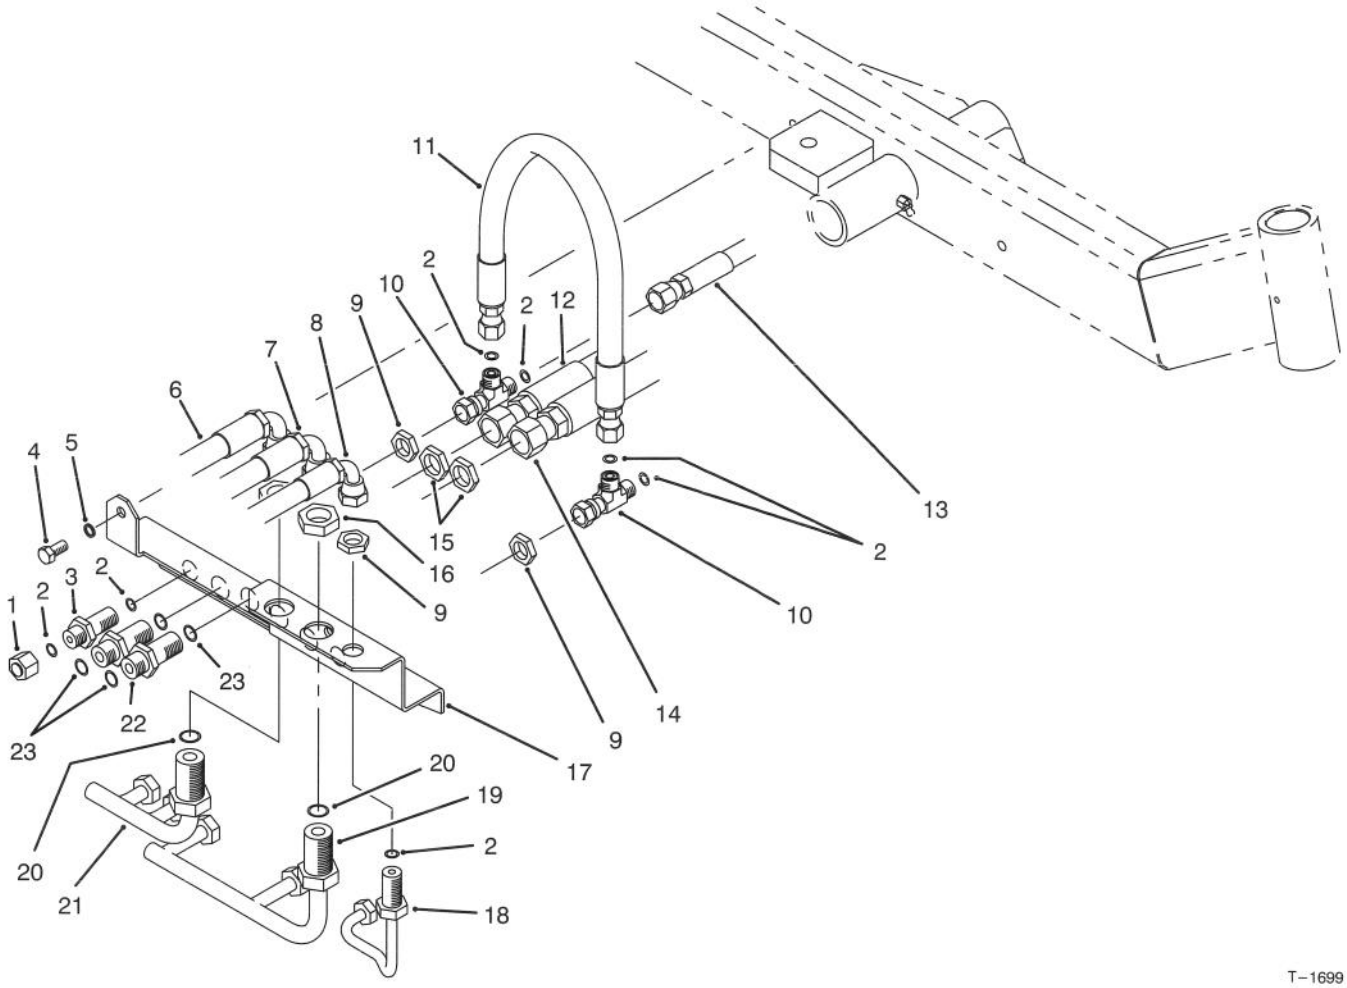


T–1699

REAR AXLE PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	340–117	Fitting – Hydraulic Cap	1
2	237–22	Seal – O–Ring	9
3	340–71	Fitting – Hydraulic Bulkhead (Incl. Ref. #2)	2
4	323–4	Screw – Cap Hex. Hd.	2
5	3253–21	Washer – Lock	2
6	92–5686	Hose – Hydraulic	1
7	92–5698	Hose – Hydraulic	1
8	92–5688	Hose – Hydraulic	1
9	340–70	Nut – Bulkhead	3
10	340–115	Fitting – Hydraulic Tee (Incl. Ref. #2)	2
11	92–5665	Hose – Hydraulic	1
12	92–5662	Hose – Hydraulic	2
13	92–5664	Hose – Hydraulic	2

Ref. No.	Part No.	Description	No. Used
14	92–5663	Hose – Hydraulic	2
15	340–127	Nut – Bulkhead	4
16	340–74	Nut – Bulkhead	2
17	92–5666	Bracket – Bulkhead	1
18	92–5659	Hydraulic Tube Assembly (Incl. Ref. #2)	1
19	92–5660	Hydraulic Tube Assembly (Incl. Ref. #20)	1
20	237–65	Seal – O–Ring	2
21	92–5661	Hydraulic Tube Assembly (Incl. Ref. #20)	1
22	340–161	Fitting – Hydraulic Bulkhead (Incl. Ref. #23)	4
23	237–30	Seal – O–Ring	8

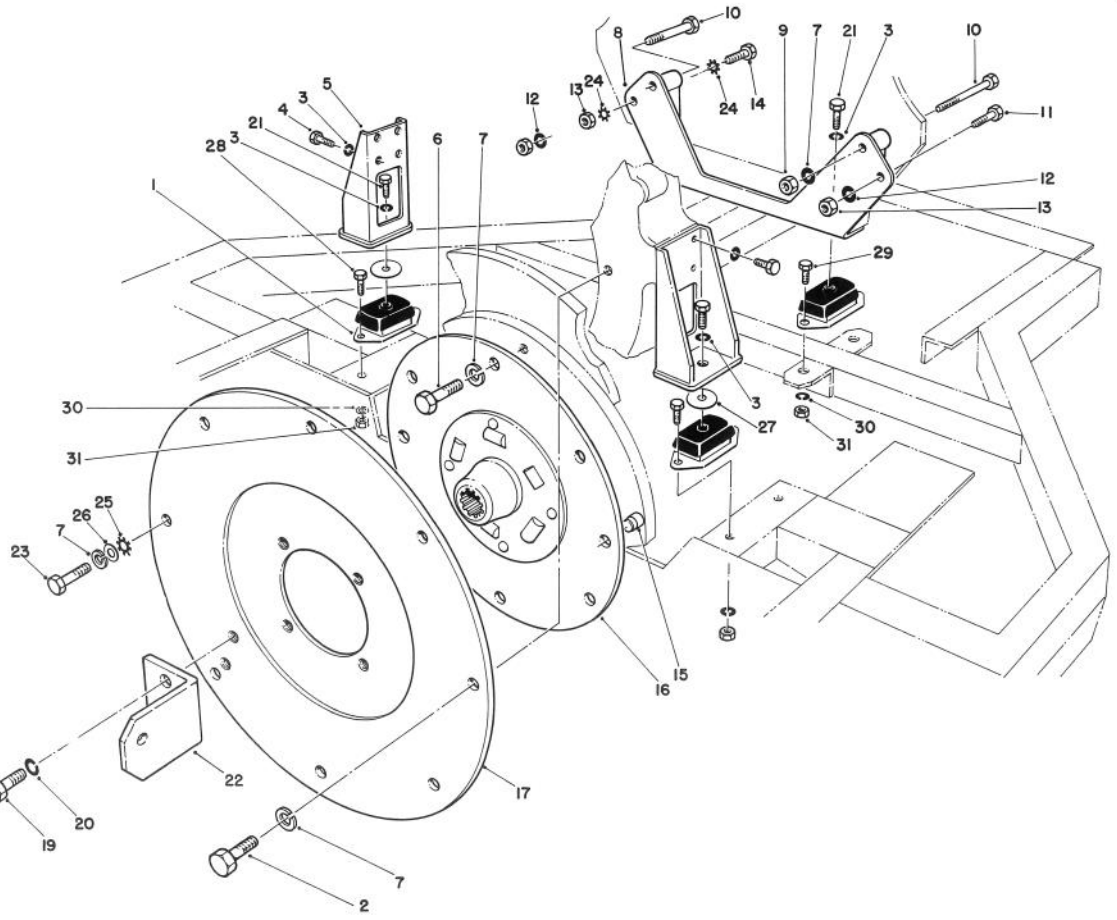


T–0142

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	48–3250	Mount – Rubber	4
2	48–9470	Bolt	7
3	48–8070	Washer – Lock	12
4	48–7830	Bolt	8
5	48–3380	Leg – Support	2
6	48–7780	Bolt	6
7	48–9590	Washer – Lock	16
8	58–0660	Foot – Front	1
9	48–7960	Nut – Hex.	2
10	48–7570	Bolt	2
11	48–9460	Bolt	1
12	48–9570	Washer – Lock	2
13	48–7930	Nut – Hex.	3
14	60–4540	Bolt	1
15	58–3590	Dowel	2

Ref. No.	Part No.	Description	No. Used
16	48–6260	Coupling – Spring Center	1
17	69–9550	Plate – Pump Adapter	1
19	3213–20	Bolt	2
20	3253–7	Washer – Lock	2
21	60–6870	Bolt	4
22	60–1010	Lug – Angle	1
23	48–9480	Bolt	1
24	3255–8	Washer – Lock	2
25	3255–9	Washer – Lock	1
26	48–9580	Washer	1
27	58–5100	Washer	2
28	323–7	Screw – Cap Hex. Hd.	4
29	323–6	Screw – Cap Hex. Hd.	4
30	3253–5	Washer – Lock	8
31	3217–7	Nut – Hex.	8

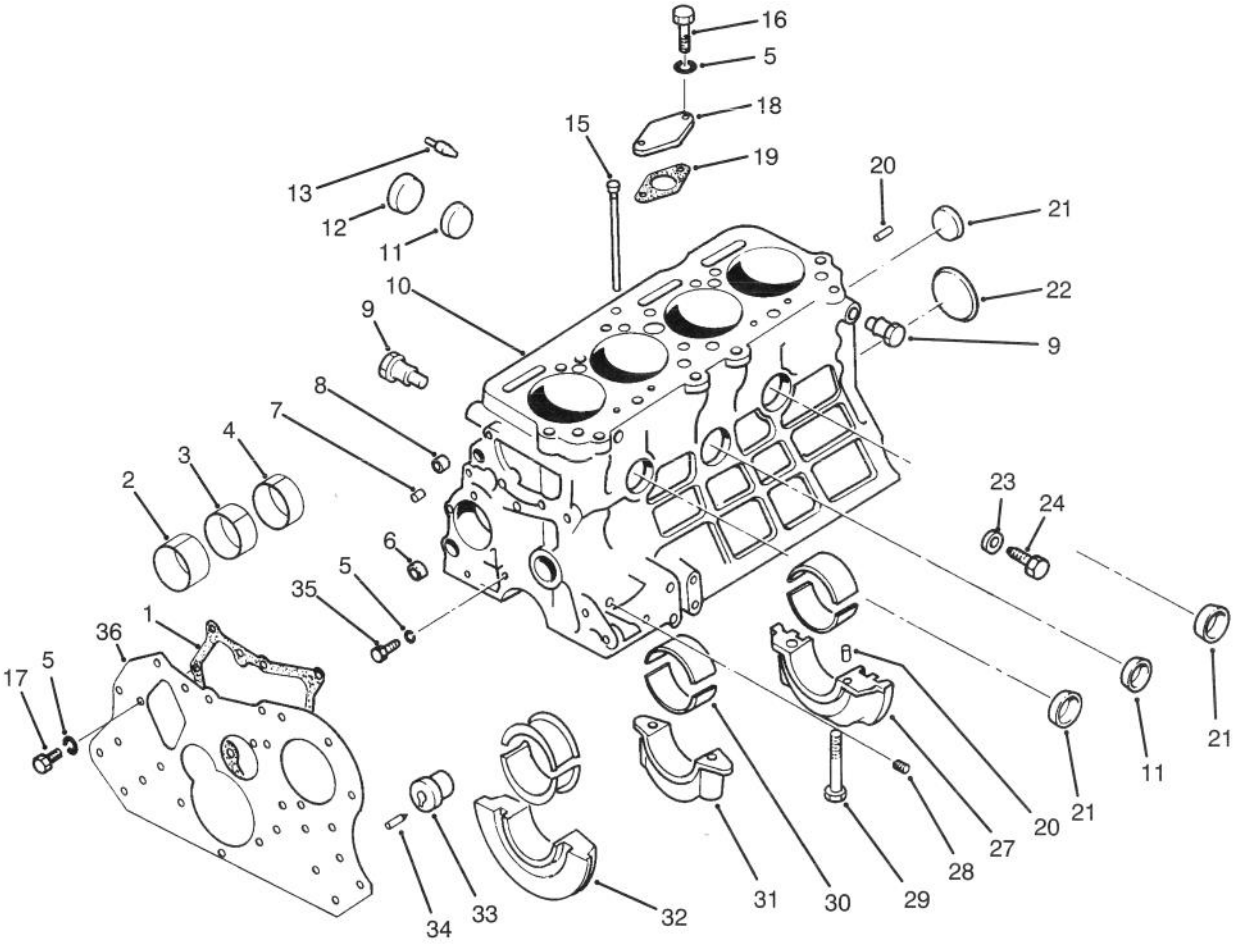


T–0143

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
‡1	51–5730	Gasket	1
2	51–5500	Bushing – Camshaft No. 1	1
3	51–5510	Bushing – Camshaft No. 2	1
4	51–5520	Bushing – Camshaft No. 3	1
5	51–7250	Washer	5
6	51–5530	Cap – Sealing	2
7	51–5540	Pin – Dowel, Gear Case	2
8	51–5690	Cap	1
9	51–5580	Hanger	2
†10		Crankcase	1
11	51–5600	Cap – Sealing	3
12	51–5670	Cap – Sealing	2
13	51–8260	Switch – Indicator, Oil Pressure	1
15	51–5560	Pipe – Oil	1
16	60–7280	Bolt	2
17	60–7110	Bolt	2
18	51–6480	Cover	1
‡19	51–6490	Gasket	1
20	51–5610	Pin – Dowel	8

Ref. No.	Part No.	Description	No. Used
21	51–5590	Cap – Sealing	3
22	51–5660	Plug – Expansion	1
23	51–8270	Washer – Sealing	1
24	51–8280	Bolt	1
†27		Cap – Bearing No. 3	1
28	86–6240	Plug – Taper	3
29	86–6230	Bolt	6
30	51–5770	Bearing Set Std.	1
*	51–8100	Bearing Set 0.25mm U.S.	1
*	51–8110	Bearing Set 0.50mm U.S.	1
*	51–8120	Bearing Set 0.75mm U.S.	1
†31		Cap – Bearing No. 2	1
†32		Cap – Bearing No. 1	1
33	51–5640	Idler Gear Shaft Assembly (Incl. Ref. #34)	1
34	51–5650	Pin – Spring	1
35	60–7310	Bolt	1
36	86–6250	Plate – Front	1
*	92–5268	Engine Gasket Kit	1
*	92–2986	Engine – Complete	1

*Not Illustrated
†Not Serviceable Separately ‡Included in Engine Gasket Kit

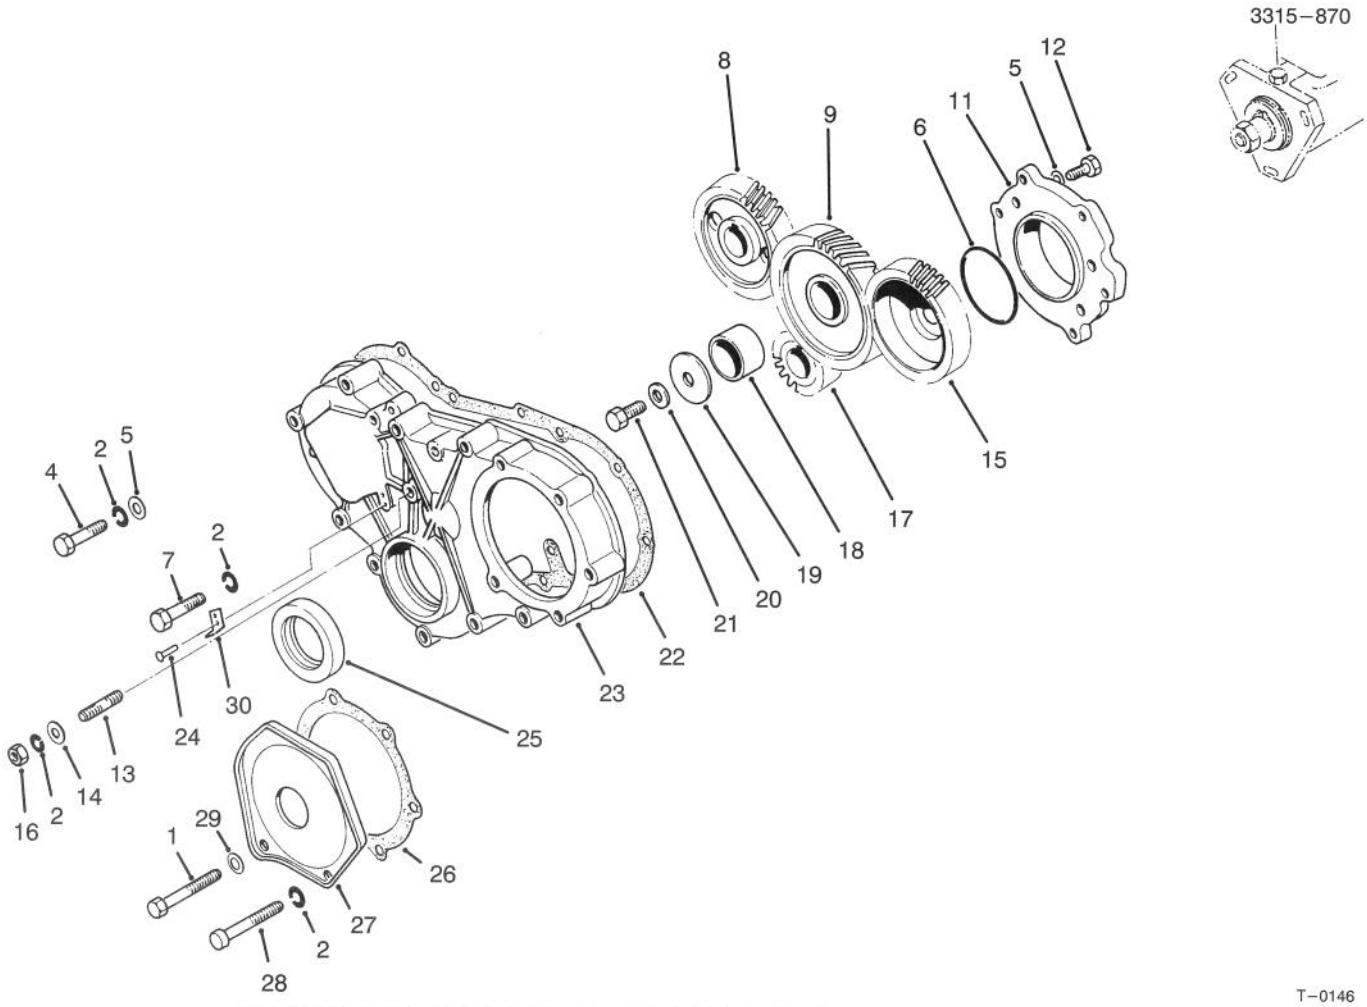


TIMING GEAR & CASE COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	70–2860	Bolt	4
2	51–7250	Washer – Spring	17
4	60–7040	Bolt	1
5	51–5160	Washer	2
‡6	60–7060	O–Ring	1
7	60–7050	Bolt	8
8	51–6410	Gear – Camshaft	1
9	86–6290	Idler Gear Assembly (Incl. Ref. #18)	1
11	60–7200	Plate – Flange	1
12	51–8310	Bolt	1
13	60–7150	Stud	3
14	70–2990	Washer	3
15	86–6310	Gear – Injector Pump	1
16	60–7120	Nut	3

Ref. No.	Part No.	Description	No. Used
17	51–6450	Gear – Crankshaft	1
18	86–6300	Bushing	1
19	51–6400	Plate – Thrust	1
20	51–6390	Washer	1
21	60–7210	Bolt	1
‡22	51–5820	Gasket	1
23	86–6260	Case – Timing Gear	1
24	60–7160	Rivet	2
25	51–5870	Seal	1
‡26	51–5860	Gasket	1
27	51–5850	Cover	1
28	60–7180	Bolt	1
‡29	51–5840	Washer – Sealing	1
30	60–7170	Pointer	1

‡Included in Engine Gasket Kit

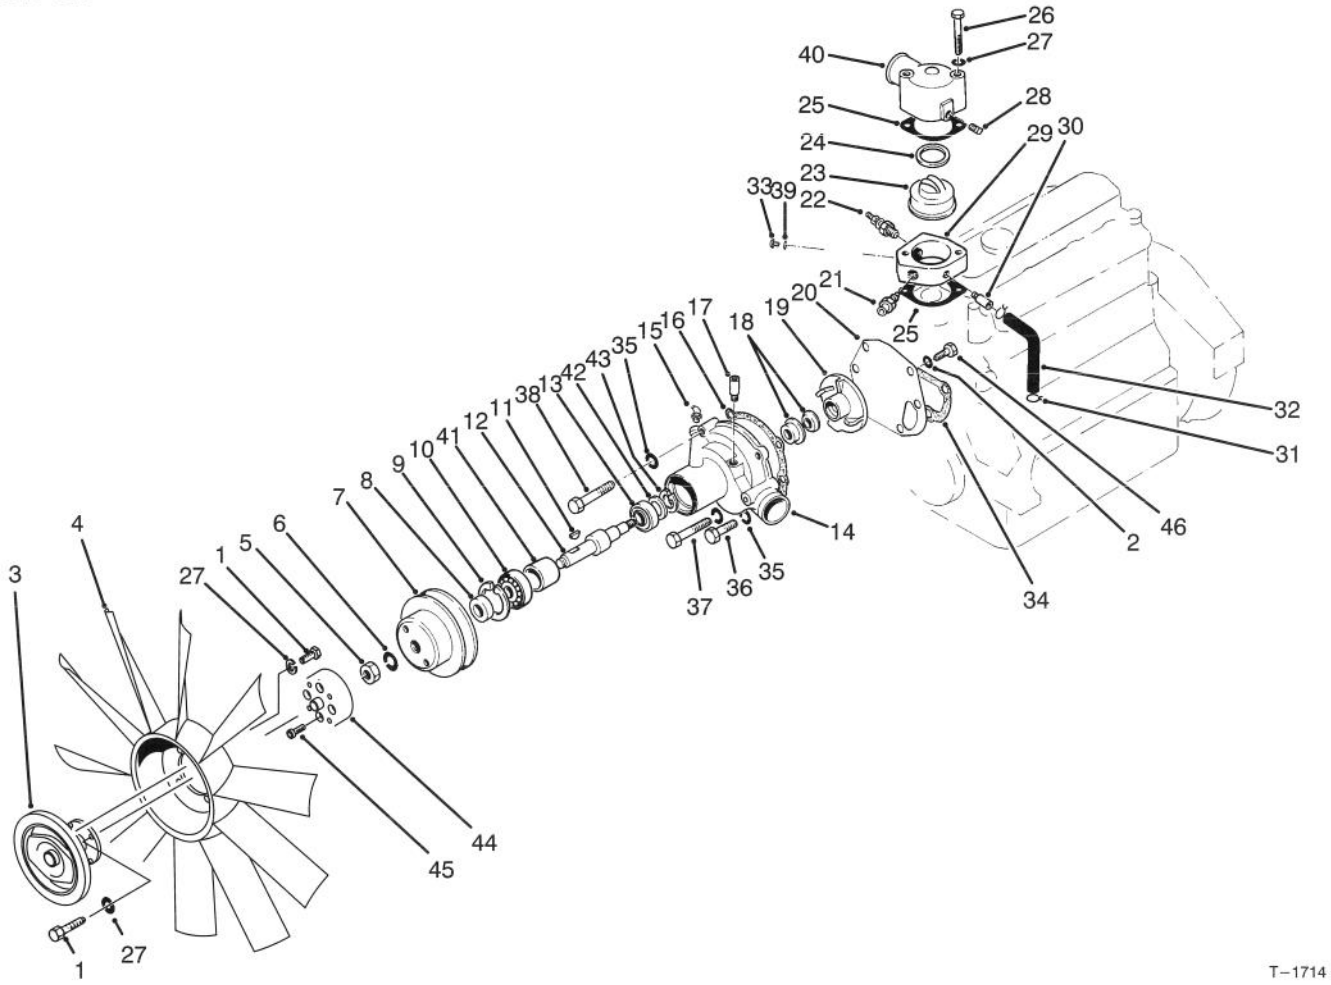


T–1714

WATER PUMP & THERMOSTAT HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322–2	Screw – Cap Hex. Hd.	8
2	51–7250	Washer – Lock	6
3	92–5254	Clutch – Fan	1
4	92–2961	Fan	1
5	51–6910	Nut – Jam	1
6	51–6920	Washer – Spring	1
7	51–7130	Pulley –Water Pump	1
8	51–6930	Spacer – Water Pump	2
9	51–6940	Ring – Retaining	1
10	51–6950	Bearing – Ball	1
11	51–6960	Key – Woodruff	1
12	86–6320	Shaft	1
13	51–6980	Bearing – Ball	1
14	51–8240	Water Pump Assembly (Incl. Ref. #1, 2, 5–13, 15–20 & 34–38)	1
15	51–7020	Fitting – Grease	1
‡16	51–7010	Gasket	1
17	86–6330	Pipe	1
18	51–7030	Seal Unit	1
19	86–6340	Impeller	1
20	51–7050	Cover	1
21	60–5590	Switch – Temp.	1
22	82–3110	Sender – Temp.	1
23	51–7230	Thermostat	1

Ref. No.	Part No.	Description	No. Used
‡24	51–7220	Gasket	1
‡25	51–7210	Gasket	2
26	68–6030	Bolt	2
27	3253–4	Washer – Lock	10
28	281–7	Plug	1
29	58–2110	Housing – Thermostat	1
30	51–7170	Pipe	1
31	51–7200	Clamp – Hose	2
32	51–7190	Hose – By–Pass	1
33	62–6320	Screw – Brass	1
‡34	51–7080	Gasket	1
35	51–6390	Washer – Spring	4
36	51–4910	Bolt	2
37	51–4920	Bolt	1
38	51–4930	Bolt	1
39	3255–5	Washer – Lock	1
40	51–7160	Elbow Assembly (Incl. Ref. #28)	1
41	86–6370	Spacer	1
42	86–6360	Washer	1
43	86–6350	Ring – Retaining	1
44	92–4760	Spacer – Fan	1
45	92–5697	Screw – Hex. Socket Hd.	4
46	60–7110	Screw – Cap Hex. Hd.	2

‡Included in Engine Gasket Kit

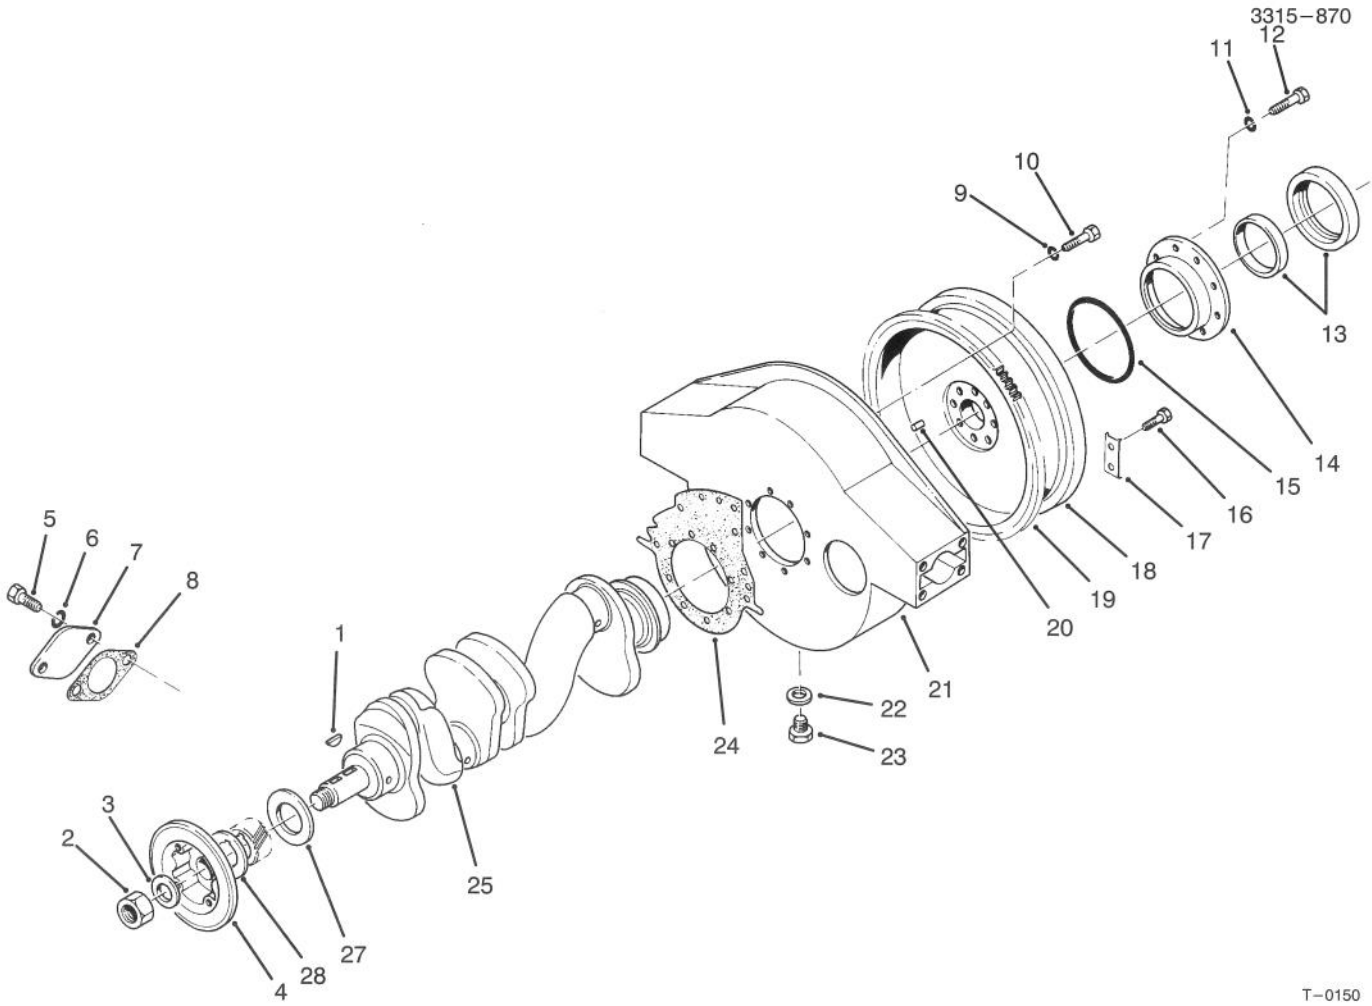


CRANKSHAFT & FLYWHEEL HOUSING COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	51–5460	Key – Woodruff	2
2	60–5220	Nut	1
3	51–6270	Washer	1
4	51–6310	Pulley – Crankshaft	1
5	60–7110	Bolt	2
6	51–7250	Washer – Spring	2
7	51–6010	Cover	1
‡8	51–6020	Gasket	1
9	51–6390	Washer – Spring	7
10	60–7480	Bolt	7
11	51–7400	Washer – Spring	8
12	60–7490	Bolt	8
13	60–7430	Oil Seal Assembly	1
14	51–5900	Case – Seal, Oil	1
‡15	51–5910	O–Ring	1

Ref. No.	Part No.	Description	No. Used
16	51–6370	Bolt – Seal	4
17	51–6360	Washer – Lock	2
18	51–6340	Flywheel Assembly (Incl. Ref. #19)	1
19	51–6350	Gear – Ring	1
20	51–6300	Pin – Dowel	2
21	51–5940	Housing – Flywheel	1
‡22	51–6100	Gasket – Housing, Flywheel	1
23	51–6030	Plug	1
‡24	86–6270	Gasket	1
25	86–6280	Crankshaft Assembly (Incl. Ref. #1–3, & 20)	1
27	51–6330	Plate – Thrust	1
28	51–6320	Plate – Baffle	1

‡Included in Engine Gasket Kit

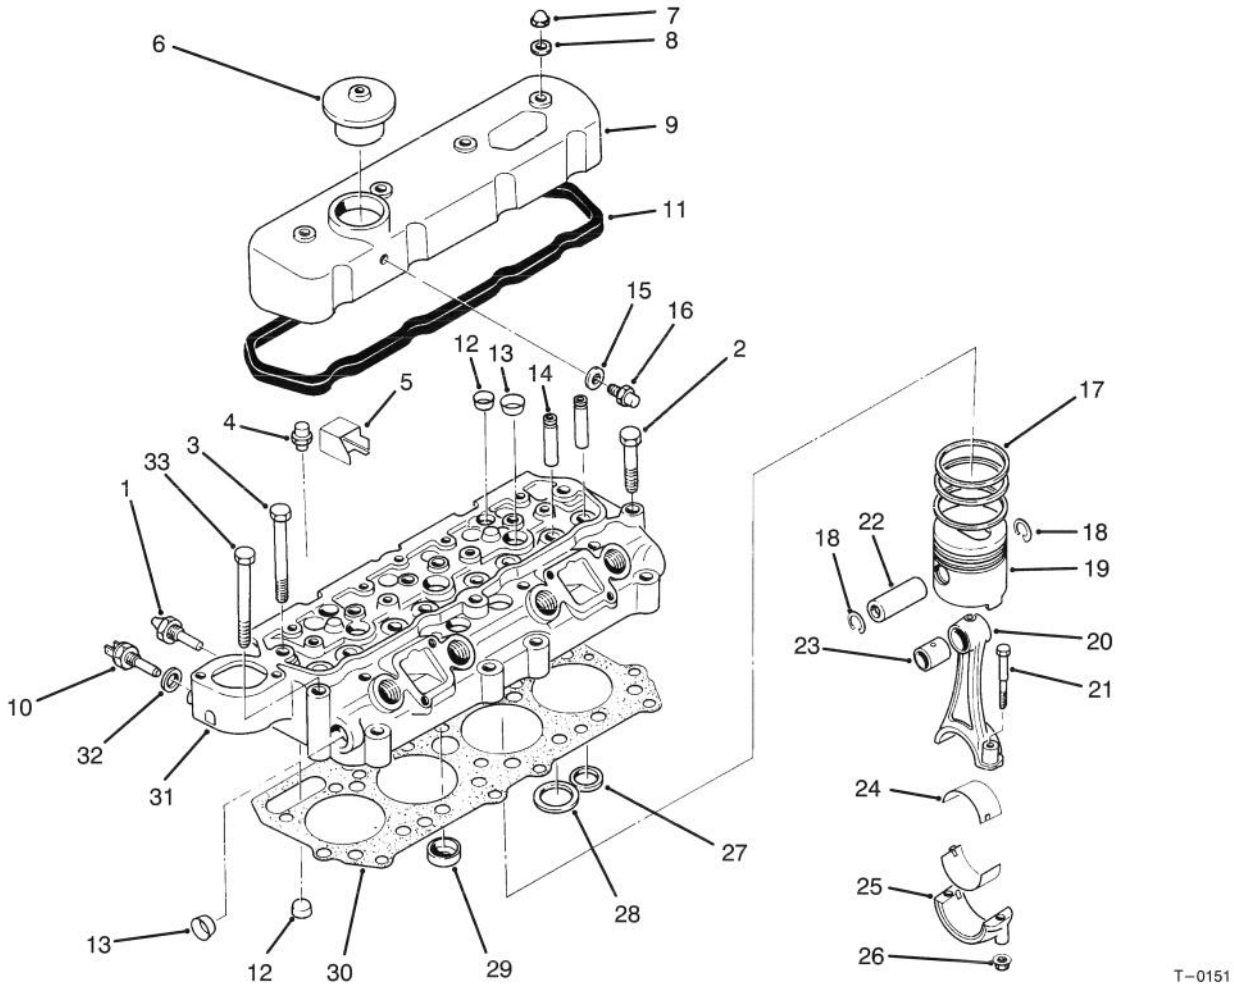


CYLINDER HEAD & PISTON COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	86–6520	Switch – Temp. Warning	1
2	51–5030	Bolt – Cylinder Head	5
3	51–5040	Bolt – Cylinder Head	10
4	51–5050	Connector – Fitting	1
5	51–5410	Cover	1
6	51–5350	Cap – Oil Fill	1
7	51–5360	Nut – Cap	4
‡8	51–5370	Gasket	4
9	51–5380	Rocker Cover Assembly (Incl. Ref. #5,15–16)	1
10	59–7950	Switch – Cold Start	1
‡11	51–5420	Gasket – Rocker Cover	1
12	51–5530	Cap – Sealing	6
13	51–4940	Cap – Sealing	10
14	86–6200	Guide – Valve	8
‡15	51–5390	Washer – Sealing	1
16	51–5400	Connector	1
17	92–5262	Piston Ring Set Std.	1
*	92–5263	Piston Ring Set 0.5. 0.25mm	1
*	92–5264	Piston Ring Set 0.5. 0.50mm	1
18	51–6190	Ring – Snap	8
19	92–5259	Piston Std.	4
*	92–5260	Piston .05 0.25mm	4
*	92–5261	Piston .05 0.5mm	4

Ref. No.	Part No.	Description	No. Used
20	51–6200	Connecting Rod Assembly (Incl. Ref. #21, 23, 25 & 26)	4
21	51–6220	Bolt	8
22	51–6180	Pin – Piston	4
23	51–6210	Bushing	4
24	51–6240	Bearing – Connecting Rod (Std.)	8
*	51–8190	Bearing – Connecting Rod U.S. 0.25mm	8
*	51–8200	Bearing – Connecting Rod U.S. 0.50mm	8
*	51–8210	Bearing – Connecting Rod U.S. 0.75mm	8
†25		Cap – Connecting Rod	4
26	51–6230	Nut	8
27	51–4970	Insert – Valve Seat, Exhaust	4
28	51–4980	Insert – Valve Seat, Inlet	4
29	92–5265	Jet – Combustion Std.	4
‡30	92–5266	Gasket – Cylinder Head	1
31	92–5267	Cylinder Head Assembly (Incl. Ref. #12–14 & 27–29)	1
32	51–6890	Gasket	1
33	63–4740	Bolt –Cylinder Head	2

*Not Illustrated †Not Serviceable Separately ‡Included in Engine Gasket Kit

Note: Dimensions listed in millimeters to convert to inches; divide mm by 25.4.

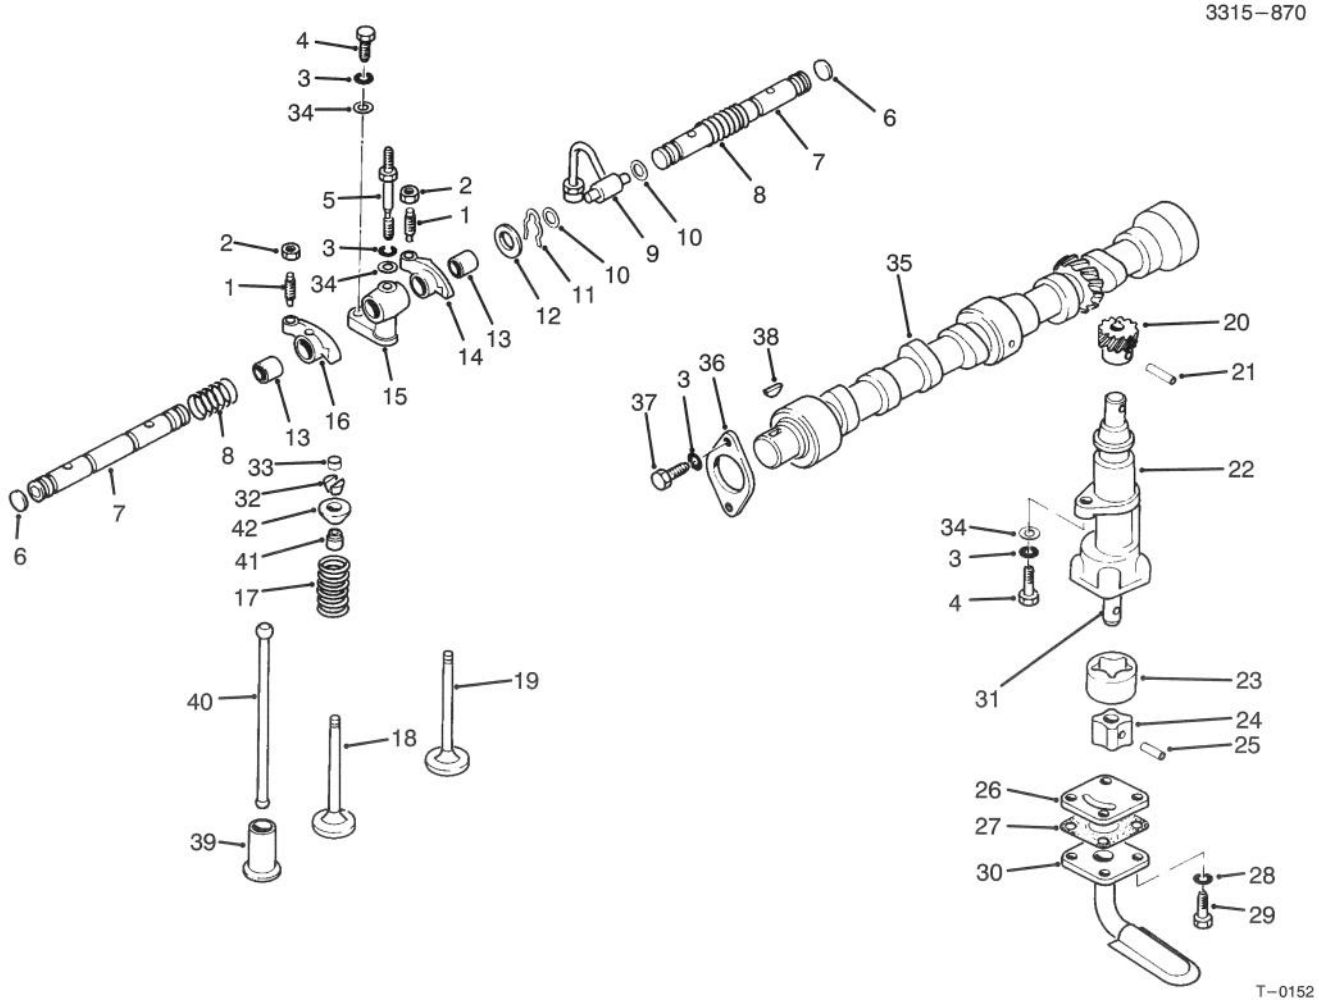


T–0152

VALVE, CAMSHAFT & PUMP COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	51–5130	Screw – Adjusting	8
2	51–5210	Nut – Jam	8
3	51–7250	Washer – Spring	11
4	60–7370	Bolt	5
5	51–5190	Bolt	4
6	51–5090	Plug – Expansion	2
7	51–5080	Rocker Shaft Assembly (Incl. Ref. #6)	2
8	51–5100	Spring – Rocker Shaft	2
9	51–5250	Pipe – Oil	1
‡10	51–5240	Seal – O–Ring	2
11	51–5260	Ring – Snap	4
12	51–5270	Washer	4
13	51–5120	Bushing – Rocker	8
14	51–5200	Rocker Assembly (Incl. Ref. #1, 2 & 13)	4
15	51–5150	Bracket – Rocker Shaft	4
16	51–5110	Rocker Assembly (Incl. Ref. #1, 2 & 13)	4
17	51–5320	Spring – Valve	8
18	51–5340	Valve – Inlet	4
19	51–5330	Valve – Exhaust	4
20	51–6680	Gear – Pump Drive	1
21	51–6690	Pin	1

Ref. No.	Part No.	Description	No. Used
22	51–6670	Oil Pump Assembly (Incl. Ref. #20, 21, 23–26, 28–29 & 31)	1
†23		Rotor – Outer	1
†24		Rotor – Inner	1
†25		Pin	1
26	51–6720	Cover – Oil Pump Case	1
‡27	51–6760	Gasket	1
28	51–7400	Washer – Spring	4
29	60–7290	Bolt	4
30	51–6750	Strainer – Oil	1
†31		Shaft – Pump Main	1
32	51–5290	Keeper – Valve	16
33	51–5280	Cap	8
34	51–5160	Washer – Flat	9
35	51–5450	Camshaft	1
36	51–5470	Plate – Thrust	1
37	60–7110	Bolt	2
38	51–5460	Key – Woodruff	1
39	86–6220	Tappet	8
40	51–5430	Pushrod	8
41	51–5310	Seal – Valve Stem	8
42	86–6210	Retainer – Upper	8
*	51–6700	Oil Pump Rotor Assembly (Incl. Ref. #23–25 & 31)	1

*Not Illustrated
†Not Serviceable Separately ‡Included in Engine Gasket Kit

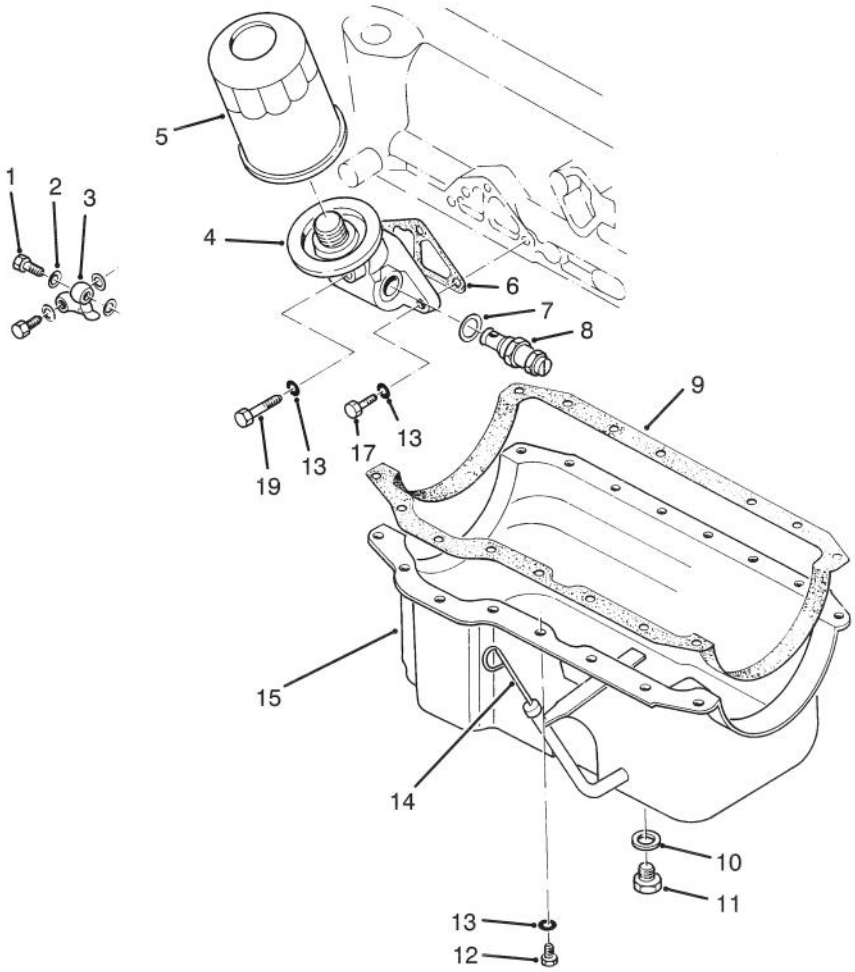


T–0153

OIL PAN & OIL FILTER

Ref. No.	Part No.	Description	No. Used
1	51–6880	Bolt – Joint	2
‡2	51–6890	Gasket	4
3	51–6900	Pipe – Oil	1
4	51–6800	Oil Filter Assembly (Incl. Ref. #5 & 7–8)	1
5	49–2500	Element – Filter	1
‡6	51–6870	Gasket	1
‡7	51–6820	Washer – Gasket	1
8	51–6830	Relief Valve Assembly	1
‡9	68–6410	Gasket	1

Ref. No.	Part No.	Description	No. Used
‡10	68–6430	Gasket	1
11	68–6420	Plug	1
12	60–7110	Bolt	16
13	51–7250	Washer – Spring	19
14	68–6440	Dipstick	1
15	68–6400	Oil Pan Assembly (Incl. Ref. #10 & 11)	1
17	60–7370	Bolt	2
19	60–7360	Bolt	1

‡Included in Engine Gasket Kit

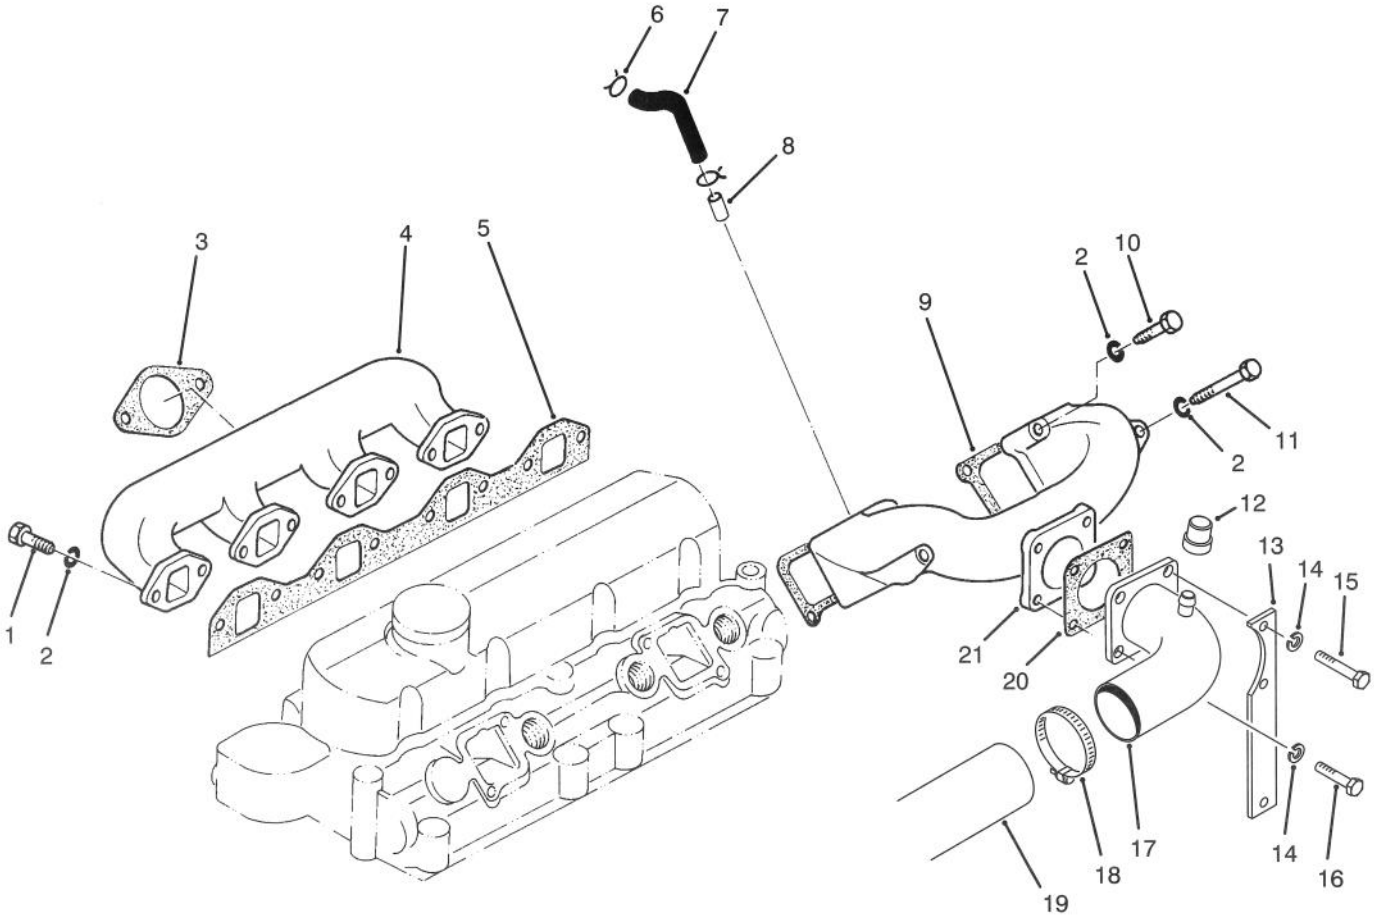


T–1686

INTAKE & EXHAUST MANIFOLD

Ref. No.	Part No.	Description	No. Used
1	60–7280	Bolt	8
2	51–7250	Washer – Spring	12
‡3	51–6630	Gasket – Exhaust Pipe	1
4	51–6620	Manifold – Exhaust	1
‡5	51–6660	Gasket – Exhaust Manifold	1
6	51–6600	Clamp	2
7	51–7190	Hose – Rubber	1
8	51–7170	Pipe	1
‡9	51–6500	Gasket – Intake Manifold	2
10	60–7040	Bolt	2
11	60–7300	Bolt	2

Ref. No.	Part No.	Description	No. Used
12	69–1940	Indicator – Electrical	1
13	92–4754	Bracket – Cable	1
14	43–5930	Washer – Lock	4
15	48–7630	Screw – Cap Hex. Hd.	2
16	48–7620	Screw – Cap Hex. Hd.	2
17	92–4731	Pipe – Intake	1
18	2412–42	Clamp – Hose	1
19	92–4752	Hose – Intake	1
‡20	51–6550	Gasket – Intake Pipe	1
21	51–6540	Manifold – Inlet	1

‡Included in Engine Gasket Kit

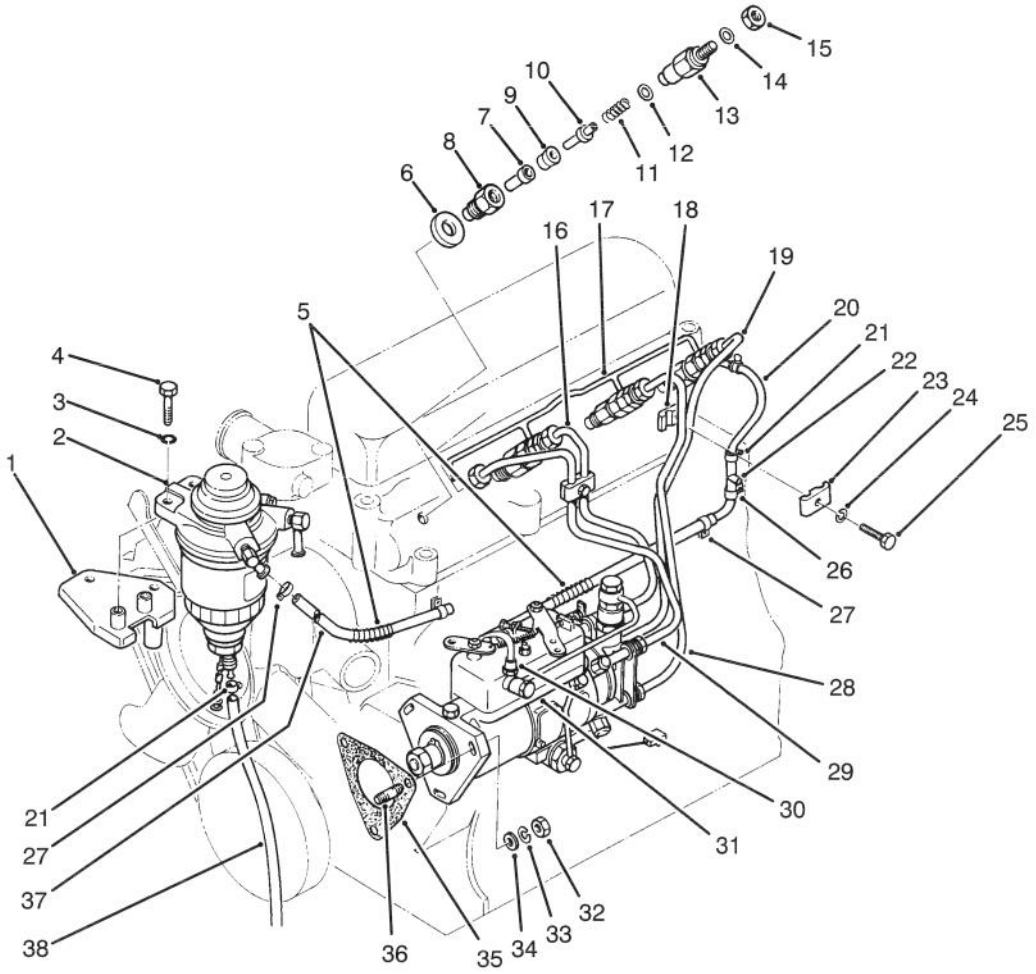


T–0155

INJECTION PUMP & NOZZLE COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	60–5000	Bracket	1
2	60–5010	Fuel Filter Assembly	1
3	51–7250	Washer	2
4	60–7050	Bolt	2
5	60–5030	Wrap – Spiral	2
‡6	72–0140	Gasket	4
7	72–0160	Nozzle Tip Assembly	4
8	72–0270	Nut – Retaining	4
9	72–0280	Spacer	4
10	72–0290	Pin – Pressure	4
11	72–0300	Spring – Pressure	4
12	51–7490	Shim – 1.0mm	A/R
*	51–8390	Shim – 1.05mm	A/R
*	51–8400	Shim – 1.10mm	A/R
*	51–8410	Shim – 1.15mm	A/R
*	51–8420	Shim – 1.20mm	A/R
*	51–8430	Shim – 1.25mm	A/R
*	51–8440	Shim – 1.30mm	A/R
*	51–8450	Shim – 1.35mm	A/R
*	51–8460	Shim – 1.40mm	A/R
*	51–8470	Shim – 1.45mm	A/R
*	51–8480	Shim – 1.50mm	A/R
*	51–8490	Shim – 1.55mm	A/R
*	51–8500	Shim – 1.60mm	A/R
*	51–8510	Shim – 1.65mm	A/R

Ref. No.	Part No.	Description	No. Used
*12	51–8520	Shim – 1.70mm	A/R
*	51–8530	Shim – 1.75mm	A/R
*	51–8540	Shim – 1.80mm	A/R
*	51–8550	Shim – 1.85mm	A/R
*	51–8560	Shim – 1.90mm	A/R
*	51–8570	Shim – 1.95mm	A/R
13	72–0320	Nozzle – Body	4
14	72–0330	Packing	4
15	72–0310	Nut	4
*	72–0150	Nozzle Assembly (Complete) (Incl. Ref. #7–15)	4
16	72–0180	Pipe – Injector No. 2	1
17	72–0210	Pipe – Fuel Leak–Off	1
18	60–5090	Clamp – Lower	2
19	72–0200	Pipe – Injector No. 4	1
20	60–5150	Hose – Rubber	1
21	60–5160	Clip	3
22	60–5170	Connector	1
23	60–5210	Clamp – Upper	2
24	51–7400	Washer – Spring	2
25	60–7290	Bolt	2
26	60–5180	Clip	1
27	60–5020	Clip	4
28	72–0190	Pipe – Injector No.3	1

*Not Illustrated
‡Included in Engine Gasket Kit

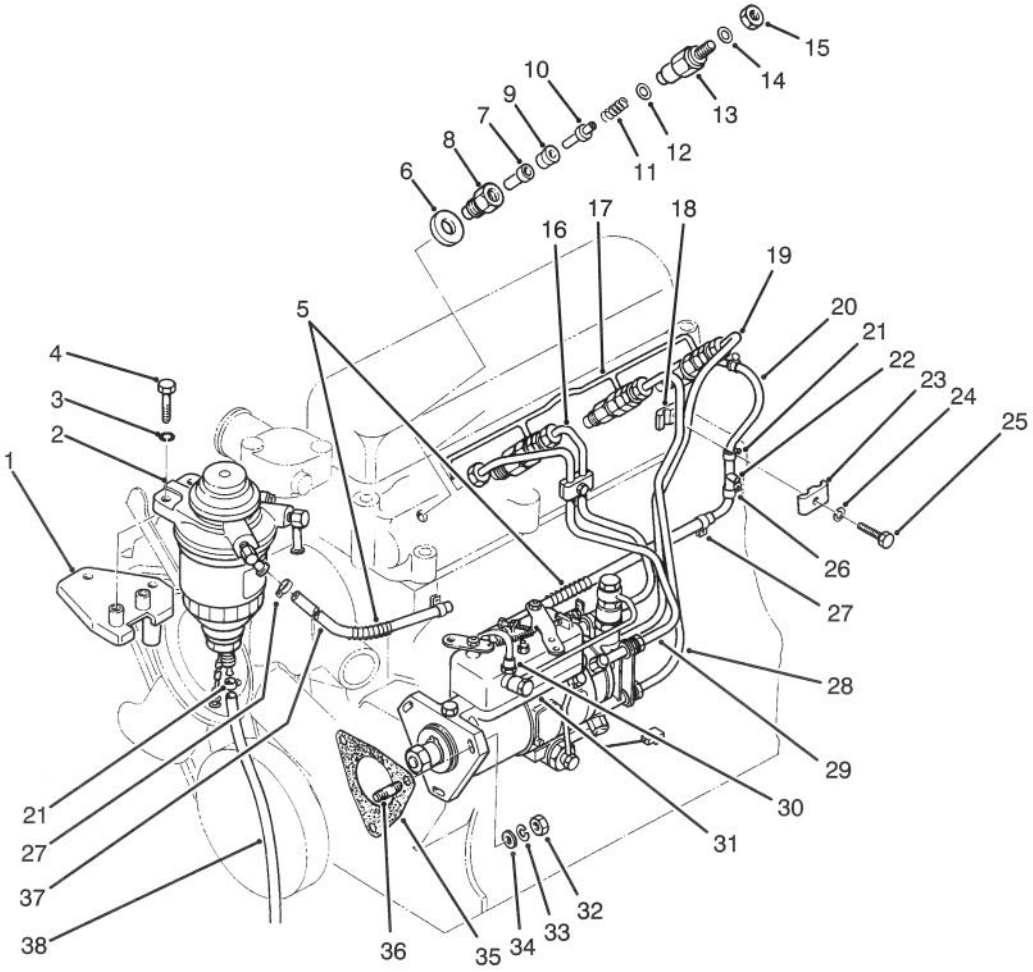

T–0155


INJECTION PUMP & NOZZLE COMPONENTS (Continued)

Ref. No.	Part No.	Description	No. Used
29	72–0170	Pipe – Injector No. 1	1
30	60–5070	Pipe – Fuel	1
31	60–5100	Injection Pump Assembly (Complete)	1
32	60–7120	Nut	3
33	51–7250	Washer – Spring	3

Ref. No.	Part No.	Description	No. Used
34	86–6380	Washer	3
‡35	60–7190	Gasket	1
36	86–6390	Stud	3
37	60–5040	Hose – Fuel Feed	1
38	60–2780	Tube – Drain	1

‡Included in Engine Gasket Kit


3315–870

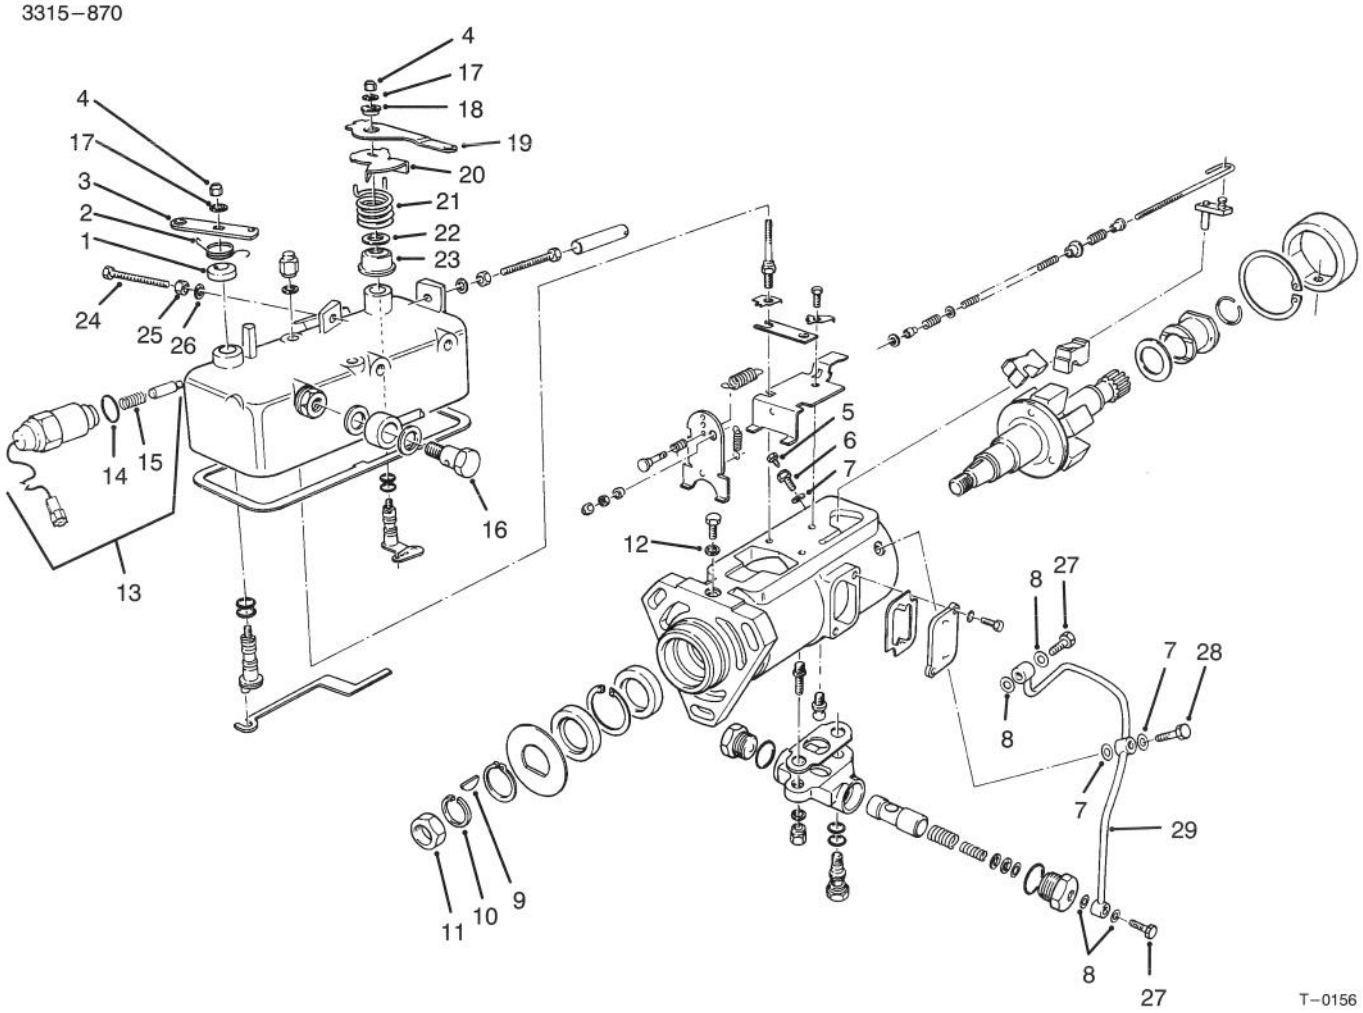

FUEL INJECTION PUMP NO. 60–5100

Ref. No.	Part No.	Description	No. Used
1	86–6760	Guide	1
2	63–4560	Spring	1
3	63–4570	Lever	1
4	63–4580	Nut	2
5	63–4590	Screw – Vent	1
6	63–4600	Body – Screw Vent	1
7	63–4610	Washer	3
8	63–4620	Washer	4
9	63–4630	Key	1
10	63–4640	Washer – Lock	1
11	60–7260	Nut – Hex	1
12	60–3060	Washer	1
13	60–3160	Solenoid (Incl. Ref. #14 & 15)	1
14	60–3150	Sealing Ring	1
15	60–3140	Spring	1

Ref. No.	Part No.	Description	No. Used
16	86–6650	Bolt – Outlet	1
17	86–6750	Washer	2
18	86–6700	Bushing	1
19	86–6690	Lever	1
20	86–6710	Arm	1
21	86–6730	Spring	1
22	86–6720	Washer	1
23	86–6740	Guide	1
24	86–6770	Screw	1
25	86–6680	Nut	1
26	86–6790	Washer	1
27	86–6820	Bolt	2
28	86–6800	Bolt	1
29	86–6810	Pipe Assembly	1
*	86–6680	Lever Assembly (Incl. Ref. #17–23)	1

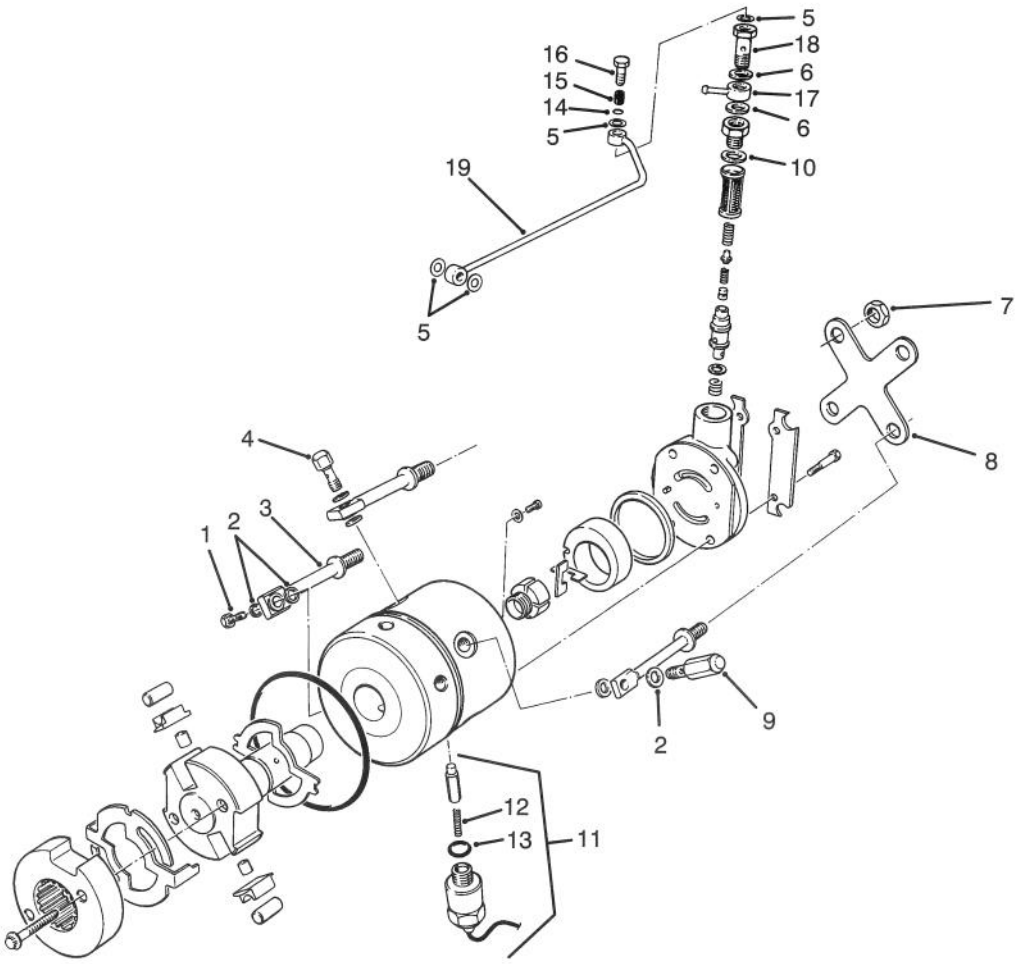


T–0157

FUEL INJECTION PUMP NO. 60–5100 (Continued)

Ref. No.	Part No.	Description	No. Used
1	60–3070	Valve – Pressure	1
2	60–3060	Washer	8
3	60–3090	Banjo	4
4	63–4670	Valve – Pressure	2
5	63–4660	Washer	4
6	63–4650	Washer	2
7	60–3120	Nut	4
8	60–3130	Plate – Clamping	1
9	60–3100	Valve – Pressure	1
10	60–3110	Washer	1

Ref. No.	Part No.	Description	No. Used
11	60–3160	Solenoid (Incl. Ref. #12 & 13)	1
12	60–3140	Spring	1
13	60–3150	Ring – Sealing	1
14	86–6640	Seal O–Ring	1
15	86–6630	Seal – Rubber	1
16	86–6620	Bolt	1
17	86–6660	Joint	1
18	86–6610	Bolt – Inlet	1
19	86–6670	Tube – Fuel	1

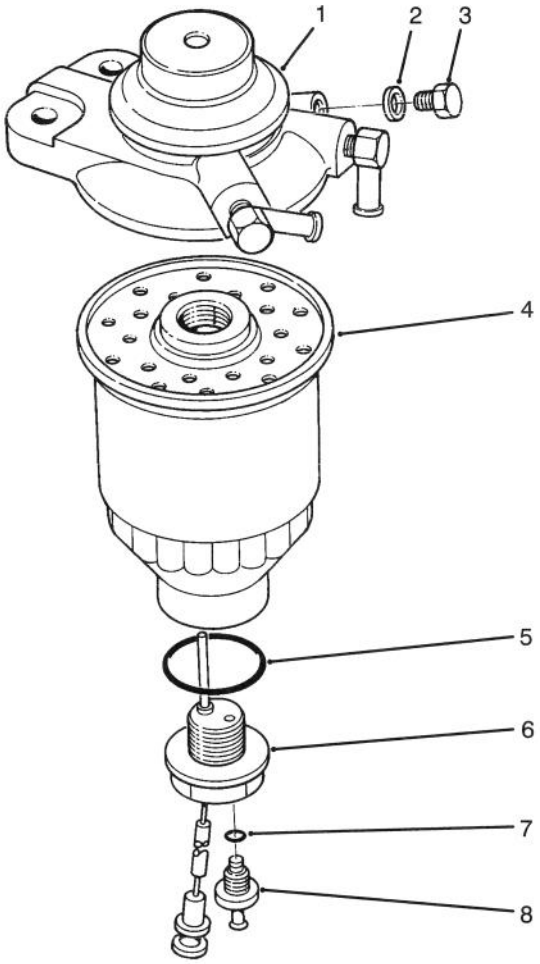


T–0158

FUEL FILTER ASSEMBLY NO. 60–5010

Ref. No.	Part No.	Description	No. Used
*1		Body Assembly	1
*2		Seal	1
3	60–5450	Plug – Air (Incl. Ref. #2)	1
4	60–5470	Filter Element Assembly (Incl. Ref. #5)	1

Ref. No.	Part No.	Description	No. Used
*5		O–Ring	1
6	60–5480	Sensor – Water	1
*7		O–Ring	1
8	60–5490	Kit – Drain Plug (Incl. Ref. #7)	1

*Not Serviceable Separately

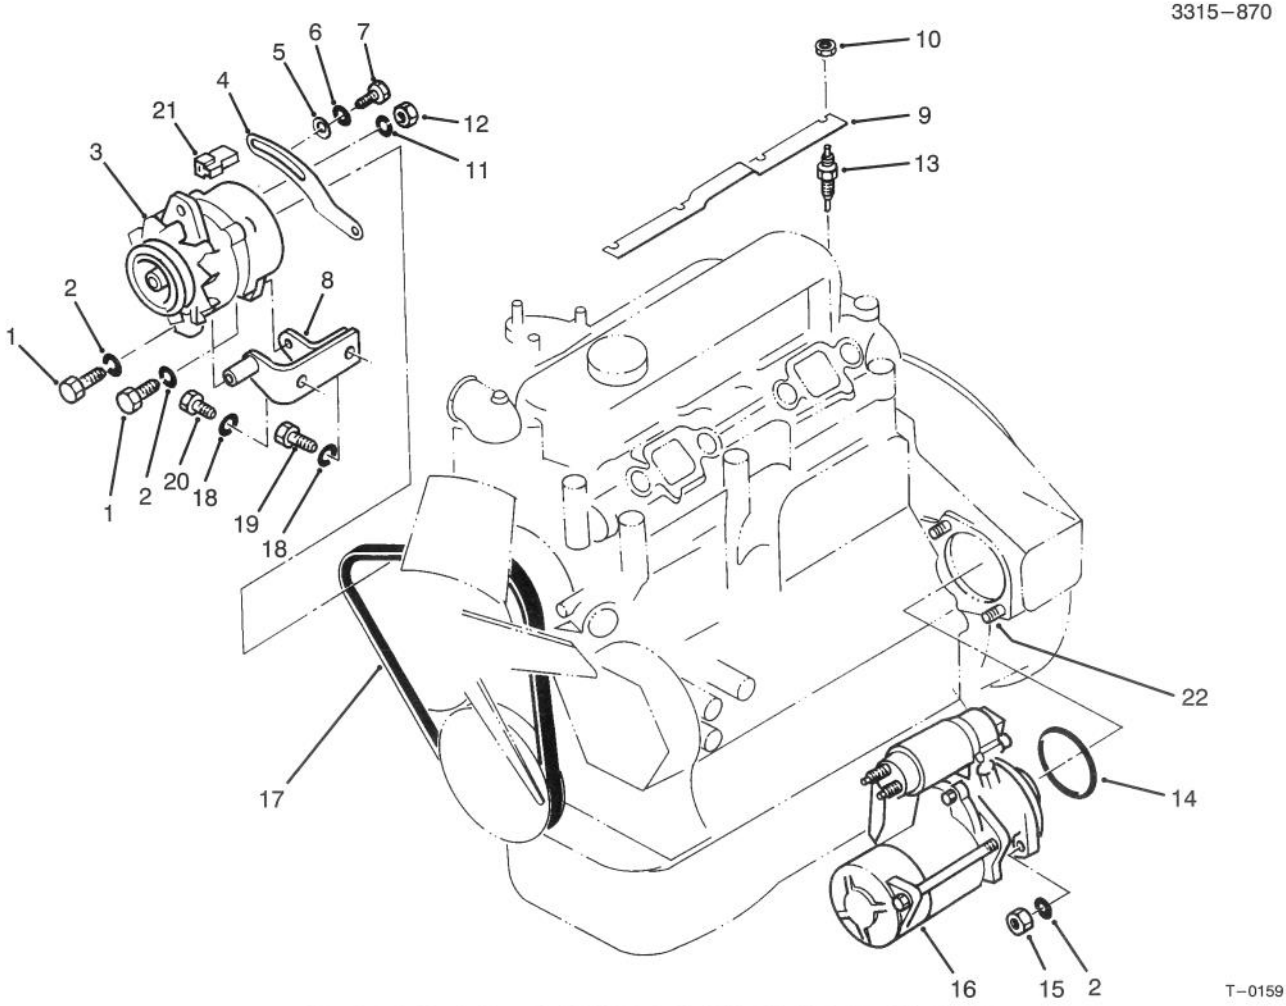


ELECTRICAL COMPONENT PARTS

Ref. No.	Part No.	Description	No. Used
1	51–8640	Bolt	2
2	51–6390	Washer – Spring	4
3	60–5421	Alternator	1
4	51–8580	Plate – Adjusting	1
5	51–8590	Washer – Flat	1
6	51–7250	Washer – Spring	1
7	60–7370	Bolt	1
8	51–8600	Bracket – Alternator	1
9	51–8650	Plate – Connection	1
*10		Nut	4
11	48–8000	Washer – Spring	1
12	48–7880	Nut	1

Ref. No.	Part No.	Description	No. Used
13	51–8660	Plug – Glow (Incl. Ref. #10)	4
‡14	60–5430	O–Ring	1
15	51–5970	Nut	2
16	51–7590	Motor – Starter	1
17	49–2520	Belt	1
18	51–8610	Washer – Spring	2
19	51–8620	Bolt	1
20	51–8630	Bolt	1
21	86–6400	Diode	1
22	51–5950	Stud	2

*Not Serviceable Separately
‡Included in Engine Gasket Kit

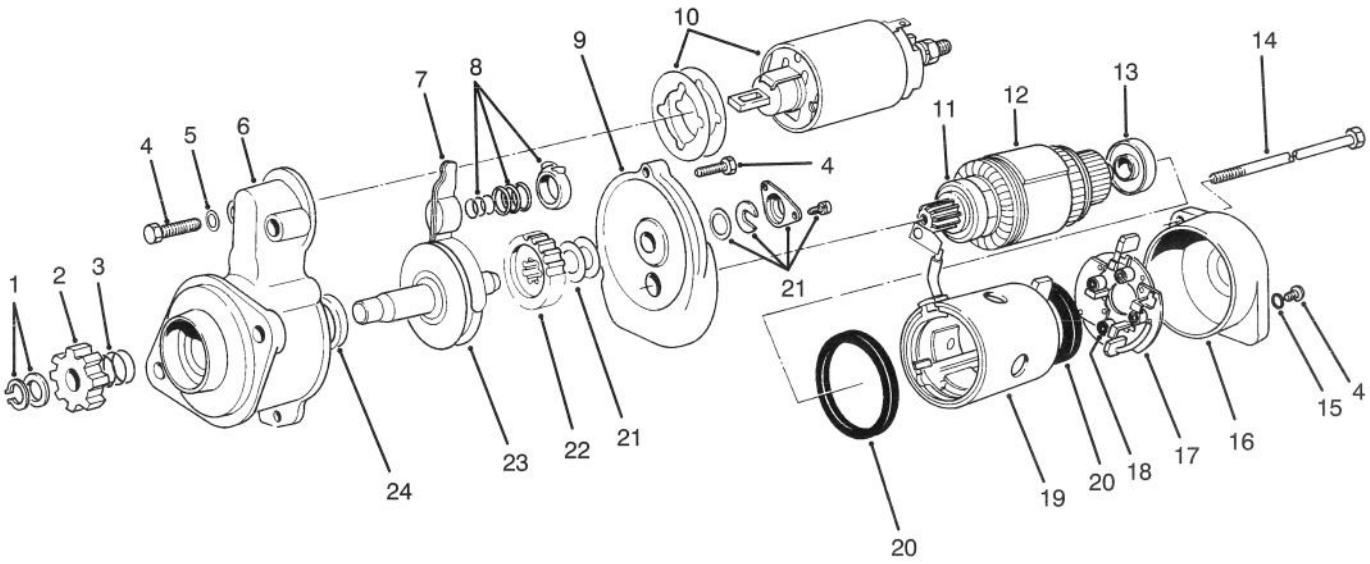


T–0160

STARTER MOTOR ASSEMBLY NO. 51–7590

Ref. No.	Part No.	Description	No. Used
1	51–7740	Retaining Ring Assembly	1
2	51–7730	Pinion Gear Assembly (Incl. Ref. #1 & 3)	1
†3		Spring	1
4	51–7600	Screw – Set	1
5	51–7610	Packing	2
6	51–7620	Front Cover Assembly (Incl. Ref. #24)	1
7	51–7640	Lever Assembly	1
8	51–7650	Spring Assembly	1
9	51–7660	Center Bracket Assembly	1
10	51–7670	Solenoid	1
11	51–7690	Bearing	1
12	51–7680	Armature Assembly (Incl. Ref. #11 & 13)	1
13	51–7700	Bearing	1

Ref. No.	Part No.	Description	No. Used
14	51–7710	Bolt Set	1
15	51–7840	Ring – Rubber	2
16	51–7830	Cover – Rear	1
17	51–7810	Brush Holder Assembly (Incl. Ref. #18)	1
18	51–7820	Spring – Brush	4
19	51–7800	Yoke Assembly	1
20	51–7790	Packing	2
21	51–7780	Cover Set	1
22	51–7770	Gear – Pinion	1
23	51–7760	Shaft Assembly	1
24	51–7630	Seal – Oil	1
*	51–7750	Gear Assembly (Incl. Ref. #22 & 23)	1
*	51–7720	Clutch Shaft Assembly (Incl. Ref. #1–3 & 21–24)	1

*Not Illustrated
†Not Serviceable Separately

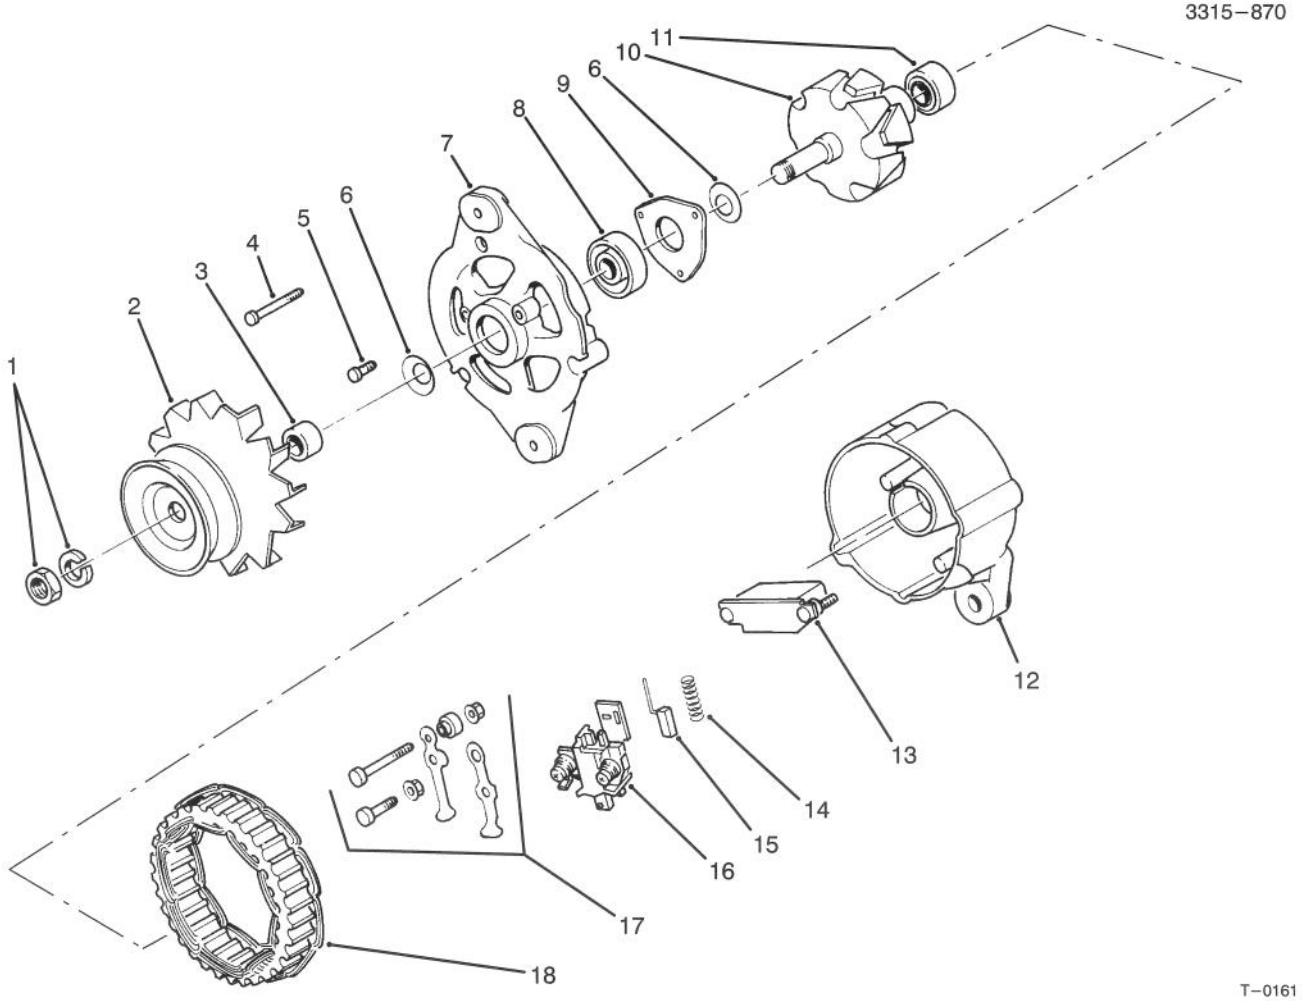


T–0161

ALTERNATOR ASSEMBLY NO. 60–5421

Ref. No.	Part No.	Description	No. Used
1	51–7850	Nut Assembly	1
2	60–5330	Pulley Assembly (Incl. Ref. #3)	1
†3		Collar – Shaft	1
4	51–7870	Screw – Set	1
5	51–7890	Screw – Set	1
†6		Spring Washer	2
7	60–5340	Front Cover Assembly (Incl. Ref. #5, 6, 8 & 9)	1
8	60–5350	Bearing	1
†9		Plate – Bearing Retainer	1

Ref. No.	Part No.	Description	No. Used
10	51–7910	Rotor Assembly (Incl. Ref. #11)	1
11	60–5360	Bearing	1
12	86–6430	Rear Cover Assembly (Incl. Ref. #13–17)	1
13	86–6440	Rectifier Assembly	1
14	51–7980	Spring – Return	2
15	51–7970	Brush	2
16	51–7960	Regulator Assembly (Incl. Ref. #14 & 15)	1
17	51–7950	Terminal Assembly	1
18	51–7930	Stator	1

*Not Serviceable Separately

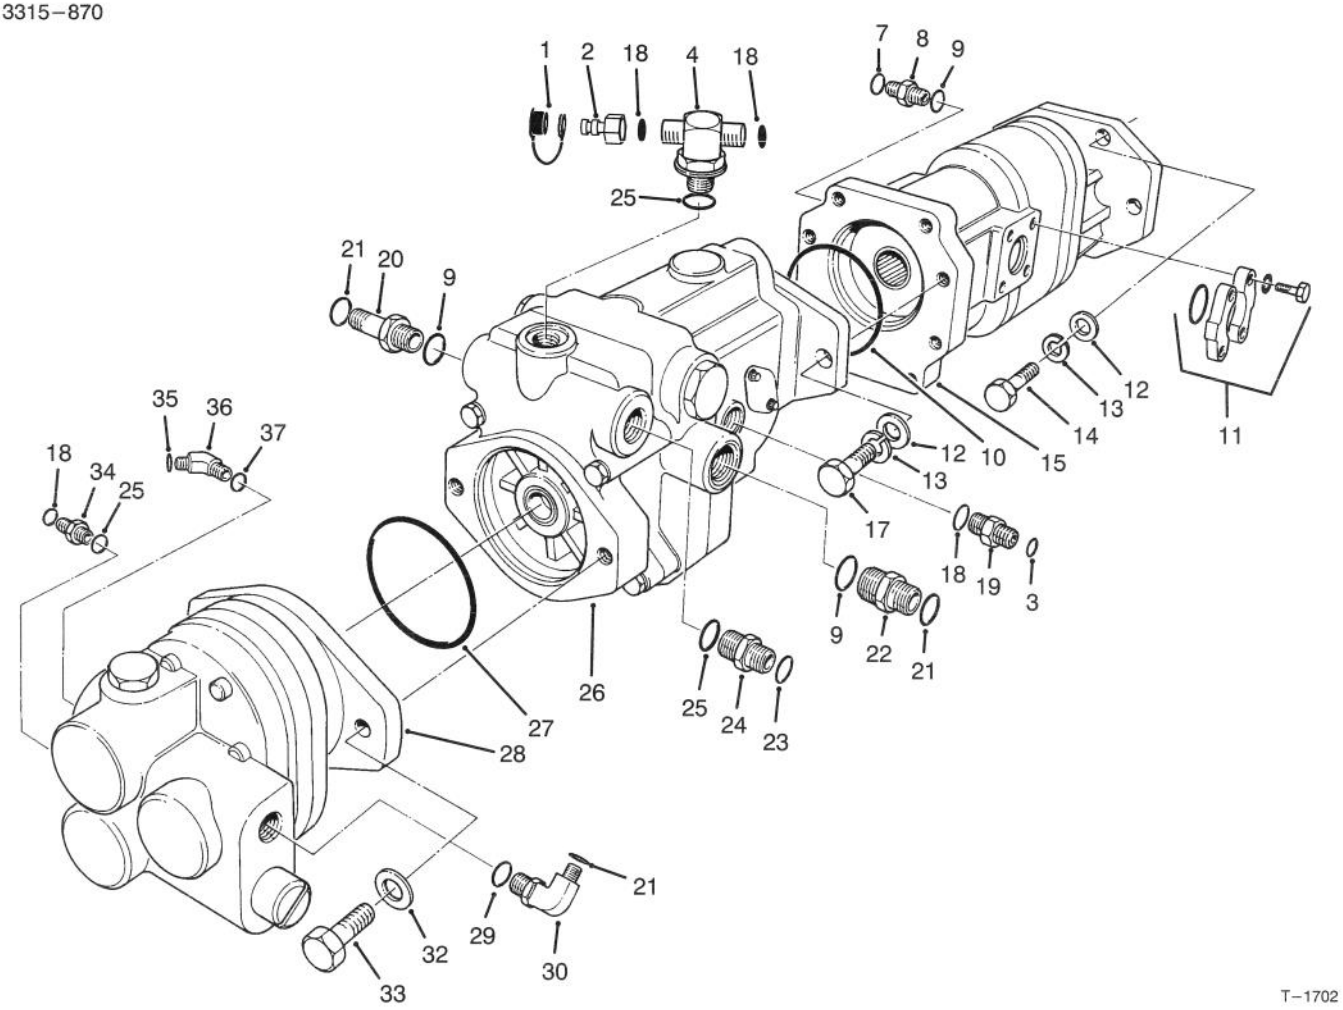


T–1702

HYDRAULIC PUMP COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	353–947	Cap – Dust	1
2	86–5480	Fitting – Diagnostic	1
3	237–42	O–Ring	1
4	92–4799	Fitting – Hydraulic Tee (Incl. Ref. #18 & 25)	1
7	237–65	O–Ring	1
8	340–8	Fitting (Incl. Ref. #7 & 9)	1
9	237–81	O–Ring	3
10	59–8550	O–Ring	1
11	340–62	Kit – Flange	1
12	3256–26	Washer – Flat	6
13	3253–7	Washer – Lock	6
14	3213–2	Bolt	4
15	86–6000	Gear Pump Assembly (Incl. Ref. #10) (Model 03704)	1
15	86–6001	Gear Pump Assembly (Incl. Ref. #10) (Model 03705)	1
17	325–5	Bolt	2
18	237–22	O–Ring	4
19	340–2	Fitting (Incl. Ref. #3 & 18)	1

Ref. No.	Part No.	Description	No. Used
20	340–11	Fitting – Long (Incl. Ref. #9 & 21)	1
21	237–58	O–Ring	3
22	340–9	Fitting (Incl. Ref. #9 & 21)	1
23	237–30	O–Ring	1
24	340–4	Fitting (Incl. Ref. #23 & 25)	1
25	237–79	O–Ring	3
26	58–5660	Pump – Piston	1
27	60–3520	O–Ring	1
28	58–5650	Pump – Gear	1
29	237–146	O–Ring	1
30	340–15	Fitting 90° (Incl. Ref. #21 & 29)	1
32	60–3540	Washer	2
33	60–3530	Bolt	2
34	340–3	Fitting (Incl. Ref. #18 & 25)	1
35	237–30	O–Ring	1
36	340–89	Fitting 45° (Incl. Ref. #35 & 37)	1
37	237–80	O–Ring	1

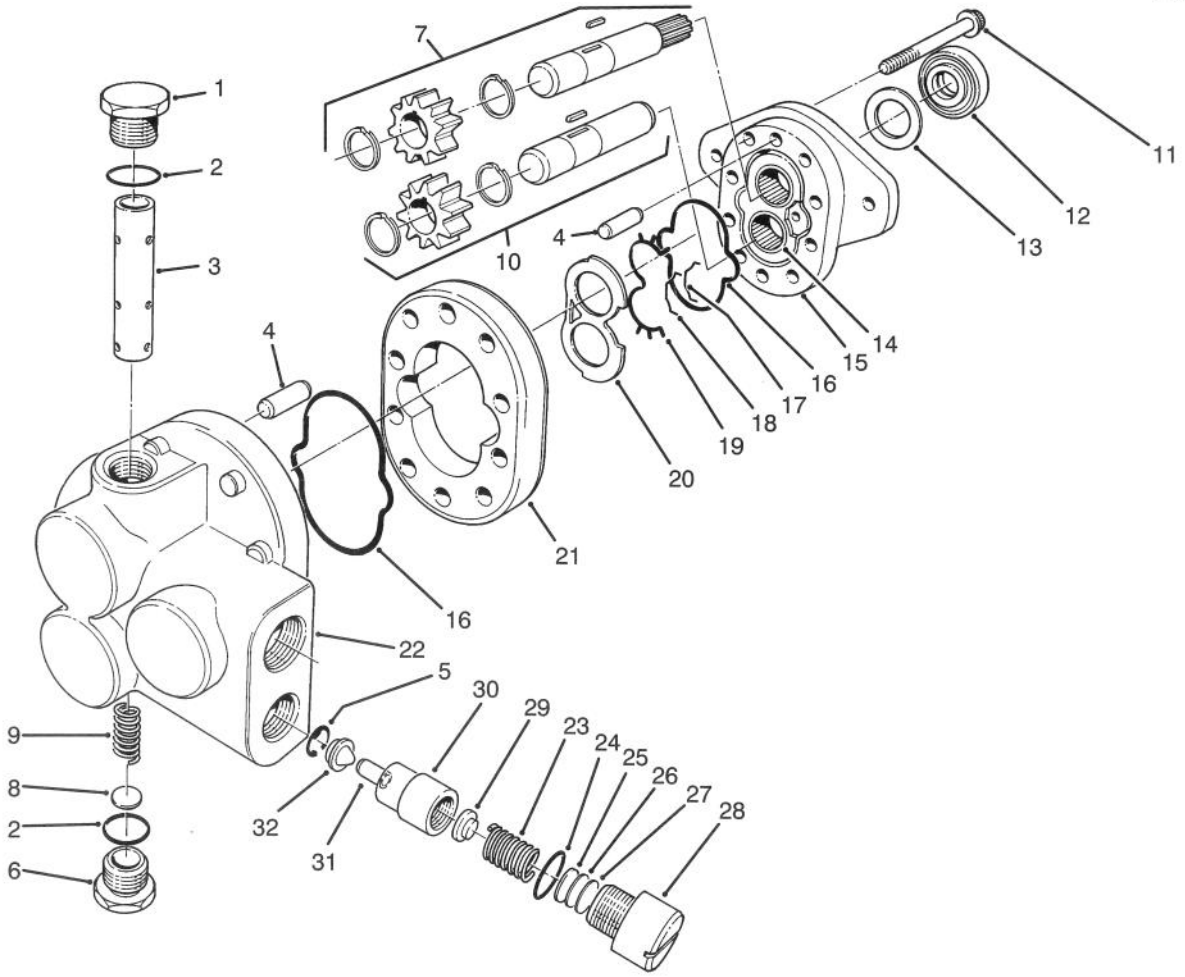


T–0163

GEAR PUMP ASSEMBLY NO. 58–5650

Ref. No.	Part No.	Description	No. Used
1	60–5860	Plug (Incl. Ref. #2)	1
2	60–5720	O–Ring	2
†3		Spool	1
4	60–5760	Pin – Dowel	4
†5		Ring – Retaining	1
6	60–5710	Plug (Incl. Ref. #2)	1
7	60–5780	Drive Gear Assembly (Incl. Ref. #5–8)	1
8	60–5730	Disc	A/R
9	60–5820	Spring	1
10	60–5770	Idler Gear Assembly	1
11	42–3140	Screw – Cap Hex. Hd.	8
12	49–2640	Seal – Shaft	1
13	60–5890	Washer	1
14		Bushing	2
15	49–2660	Front Plate Assembly (Incl. Ref. #14)	1
16	42–3120	O–Ring	2
17	49–2680	O–Ring – Molded	1
18	49–2700	Seal – Bearing	1
19	49–2690	Gasket – Backup	1
20	49–2670	Plate – Wear	1
21	60–5740	Body Assembly (Incl. Ref. #4)	1
†22		Back Plate Assembly	1
23	60–5790	Spring	1
24	60–5880	O–Ring	1
25	60–5830	Washer	A/R
26	60–5840	Washer	A/R
27	60–5850	Washer	A/R
28	60–5870	Plug Assembly (Incl. Ref. #24)	1
29	60–5810	Plug – Seat	1
†30		Cartridge Assembly	1
31	60–5800	Seat	1
†32		Poppet	1
*	60–5910	Kit – Repair, Back Plate	1
*	60–5900	Kit – Seal Repair (Incl. Ref. #2, 12, 13, 16–20 & 24)	1

*Not Illustrated
†Not Serviceable Separately

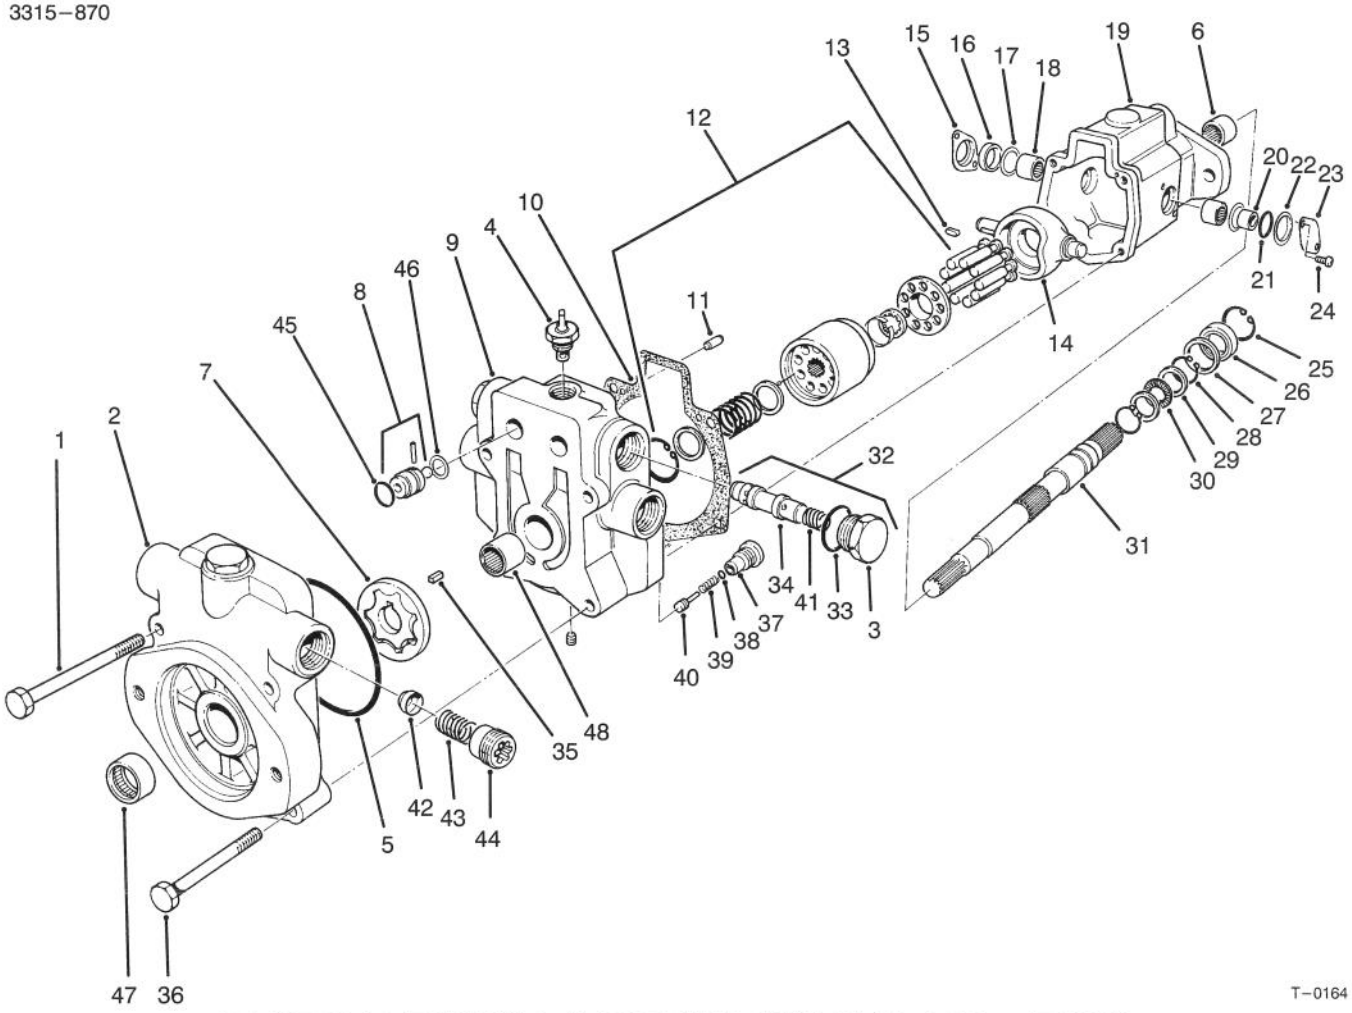


T–0164

PISTON PUMP ASSEMBLY NO. 58–5660

Ref. No.	Part No.	Description	No. Used
1	60–6230	Screw – Cap Hex. Hd.	2
2	60–6200	Charge Pump Adptr. Assy. (Incl. Ref. #42–44 & 47)	1
3	70–1240	Plug Assembly (Incl. Ref. #33)	2
†4	39–2080	Tow Valve Assembly	1
5	60–6180	O–Ring	1
6	63–4390	Bearing – Needle	1
7	60–6350	Gerotor Gear Assembly	1
8	33–4970	Check Valve Assembly (Incl. Ref. #45 & 46)	2
9	60–6040	Back Plate Assembly (Incl. Ref. #4, 37–40 & 48)	1
10	60–6130	Gasket – Housing	1
11	60–6370	Pin – Dowel	2
12	60–6030	Rotating Kit Assembly	1
13	60–6310	Key	1
14	60–6020	Camplate	1
15	60–6120	Cover – Seal	1
16	42–2720	Seal – Shaft	1
17	60–6250	Washer	2
18	60–6110	Bearing – Needle	2
19	60–6000	Housing Assembly (Incl. Ref. #6)	1
20	60–5990	Race – Inner	1

Ref. No.	Part No.	Description	No. Used
21	60–6190	O–Ring	1
22	60–6210	Cover – O–Ring	1
23	60–6010	Cover – Trunion	1
24	60–6330	Screw	4
25	60–6260	Ring – Retaining	1
26	60–6300	Seal – Shaft	1
27	60–6240	Washer	1
28	60–6270	Ring – Retaining	2
29	60–6160	Race – Thrust	2
30	60–6170	Bearing – Needle, Thrust	1
31	60–6140	Shaft – Drive	1
32	68–6460	Kit – Relief Valve (Incl. Ref. #3, 34 & 41)	2
33	60–5980	O–Ring	2
34		Relief Valve Assembly	2
35	60–6320	Key	1
36	60–6220	Screw – Cap Hex. Hd.	2
37	60–6060	Cartridge	1
38	60–6080	O–Ring	1
39	60–6090	Spring	1
40	60–6070	Poppet	1
41		Spring	1
42	33–4990	Poppet	1
43	39–2140	Spring	2
44	39–2130	Retainer – Spring	1

*Not Illustrated
†Used on Units With Pump Serial No. 70591 & Up

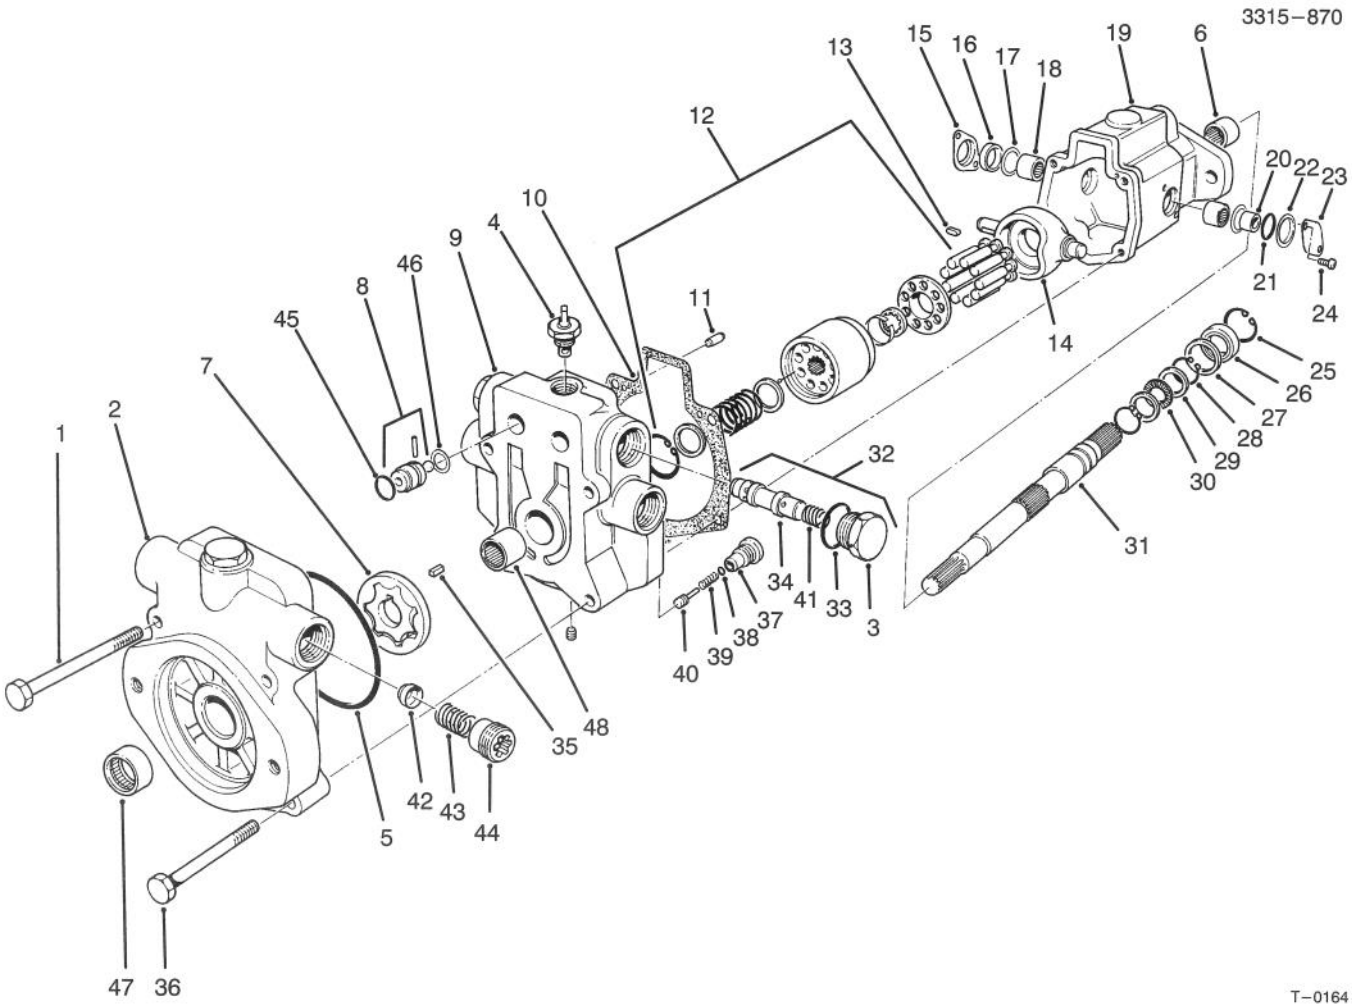


PISTON PUMP ASSEMBLY NO. 58–5660 (Continued)

Ref. No.	Part No.	Description	No. Used
45	237–114	O–Ring	2
46	60–5950	Washer – Backup	2
47	60–6150	Bearing	1
48	60–6050	Bearing	1

Ref. No.	Part No.	Description	No. Used
*	60–6400	Kit – Seal (Incl. Ref. #5, 10, 16, 21, 26, 28, 29, 33, 38, 45 & 46)	1
*	60–6360	Kit – Charge Relief Spring	1
*	60–6340	Kit – Bleed–Off Valve	1

*Not Illustrated

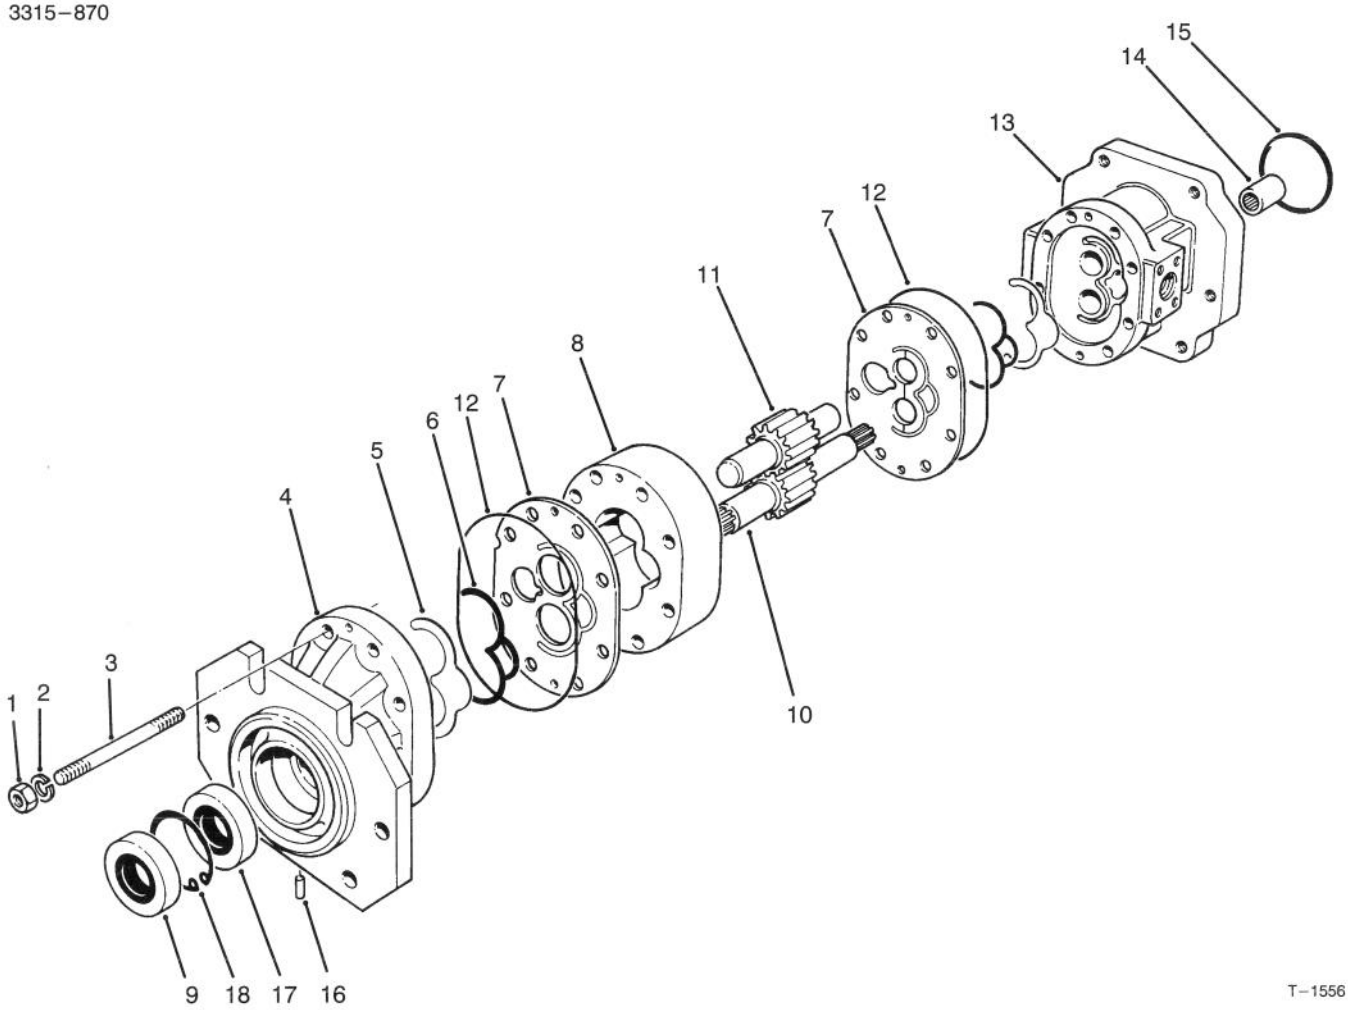


T–1556

PUMP ASSEMBLY NO. 86–6000 (Model 03704) & 86–6001 (Model 03705)

Ref. No.	Part No.	Description	No. Used
1	59–7580	Nut	8
2	59–7590	Washer – Lock	8
3	59–7970	Stud (Model 03704)	8
*	74–3210	Stud (Model 03705)	8
4	86–6010	Cover – Front	1
5	59–7990	Seal – Gland	2
6	59–8470	Retainer – Seal	2
7	86–6070	Plate – Wear	2
8	86–6020	Center S/A Section (Model 03704)	1
*	86–6060	Center S/A Section (Model 03705)	1
9	59–8590	Seal – Shaft	1

Ref. No.	Part No.	Description	No. Used
10	59–8500	Drive Gear – Spline (Model 03704)	1
*	74–3230	Drive Gear – Spline (Model 03705)	1
11	59–8600	Driven Gear (Model 03704)	1
11	74–3240	Driven Gear (Model 03705)	1
12	86–6080	O–Ring Seal	2
13	86–6030	Port Section – Rear	1
14	59–8540	Coupling	1
15	86–6040	O–Ring	1
16	86–6050	Plug	1
17	59–8570	Seal – Shaft	1
18	59–8580	Ring – Retaining	1
*	86–6450	Kit – Seal (Incl. Ref. #5, 6, 9 & 17)	1

*Not Illustrated

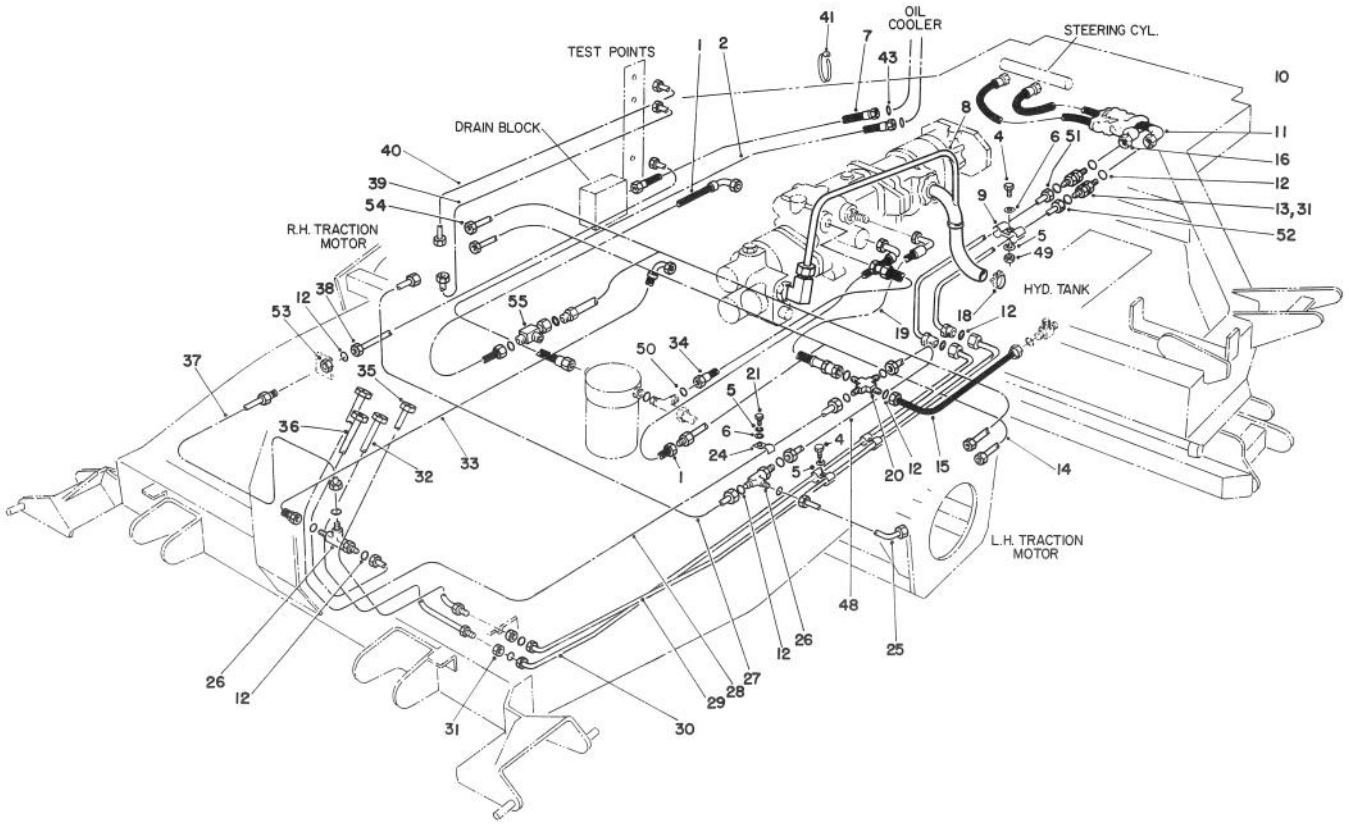


T–1703

HYDRAULIC CIRCUIT
FRONT WHEEL DRIVE & STEERING

Ref. No.	Part No.	Description	No. Used
1	58–5860	Hose Assembly	2
2	75–8200	Hose Assembly	1
4	48–7640	Screw – Cap Hex. Hd.	4
5	43–5930	Washer – Lock	5
6	48–8010	Washer	3
7	75–8210	Hose Assembly	1
8	60–1900	Tube Assembly	1
9	58–3880	Clamp	3
10	60–2010	Sleeve – Protective	1
11	82–9841	Hose Assembly	1
12	237–22	O–Ring	22
13	340–71	Fitting – Hydraulic Bulkhead (Incl. Ref. #12 & 31)	2
14	92–4726	Tube Assembly	1
15	92–5694	Hose Assembly	1
16	82–9840	Hose Assembly	1
18	2412–132	Clamp	1
19	60–1250	Hose Assembly	1
20	340–23	Fitting – Hydraulic Cross (Incl. Ref. #12)	1
21	48–7700	Screw – Cap Hex. Hd.	1
22	48–8020	Washer – Lock	1
24	60–1360	Clamp	1
25	58–4790	Tube Assembly	1
26	340–68	Fitting – Hydraulic Tee (Incl. Ref. #12)	2
27	58–4860	Tube Assembly	1

Ref. No.	Part No.	Description	No. Used
28	74–2820	Tube Assembly	1
29	68–6310	Tube Kit (Incl. Ref. #12 & 52)	1
30	68–6340	Tube Kit (Incl. Ref. #12 & 51)	1
31	340–70	Nut – Bulkhead	4
32	74–2780	Tube Assembly	1
33	58–5720	Hose Assembly	1
34	58–5870	Hose Assembly	1
35	74–2810	Tube Assembly	1
36	74–2790	Tube Assembly	1
37	58–7780	Tube Assembly (Incl. Ref. #12)	1
38	58–7750	Tube Assembly	1
39	58–7770	Tube Assembly	1
40	58–7760	Tube Assembly	1
41	48–4480	Strap – Tie	3
43	340–65	O–Ring	2
48	58–4710	Tube Assembly	1
49	48–7890	Nut – Hex	1
50	237–30	O–Ring	1
51		Tube Assembly	1
52		Tube Assembly	1
53	340–78	Nut – Bulkhead	1
54	92–5677	Tube Assembly	1
55	92–4748	Fitting – Hydraulic Tee	1

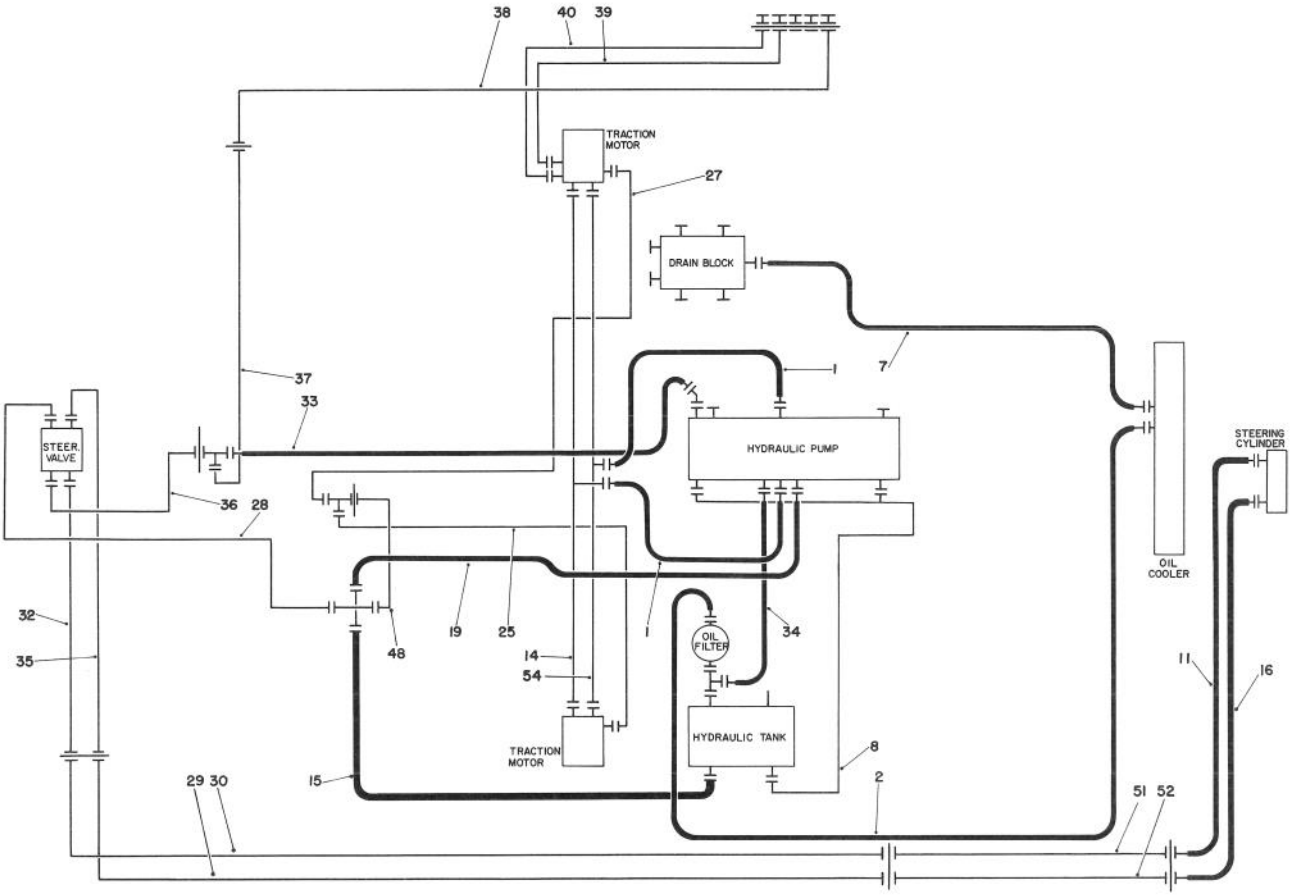


T–1704

HYDRAULIC SCHEMATIC
FRONT WHEEL DRIVE & STEERING

Ref. No.	Part No.	Description	No. Used
1	58–5860	Hose Assembly	2
2	75–8200	Hose Assembly	1
7	75–8210	Hose Assembly	1
8	60–1900	Tube Assembly	1
11	82–9841	Hose Assembly	1
14	92–4726	Tube Assembly	1
15	92–5694	Hose Assembly	1
16	82–9840	Hose Assembly	1
19	60–1250	Hose Assembly	1
25	58–4790	Tube Assembly	1
27	58–4860	Tube Assembly	1
28	74–2820	Tube Assembly	1
29	68–6310	Tube Kit (Incl. Ref. #12 & 52)	1

Ref. No.	Part No.	Description	No. Used
30	68–6340	Tube Kit (Incl. Ref. #12 & 51)	1
32	74–2780	Tube Assembly	1
33	58–5720	Hose Assembly	1
34	58–5870	Hose Assembly	1
35	74–2810	Tube Assembly	1
36	74–2790	Tube Assembly	1
37	58–7780	Tube Assembly	1
38	58–7750	Tube Assembly	1
39	58–7770	Tube Assembly	1
40	58–7760	Tube Assembly	1
48	58–4710	Tube Assembly	1
51		Tube Assembly	1
52		Tube Assembly	1
54	92–5677	Tube Assembly	1


*Not Illustrated

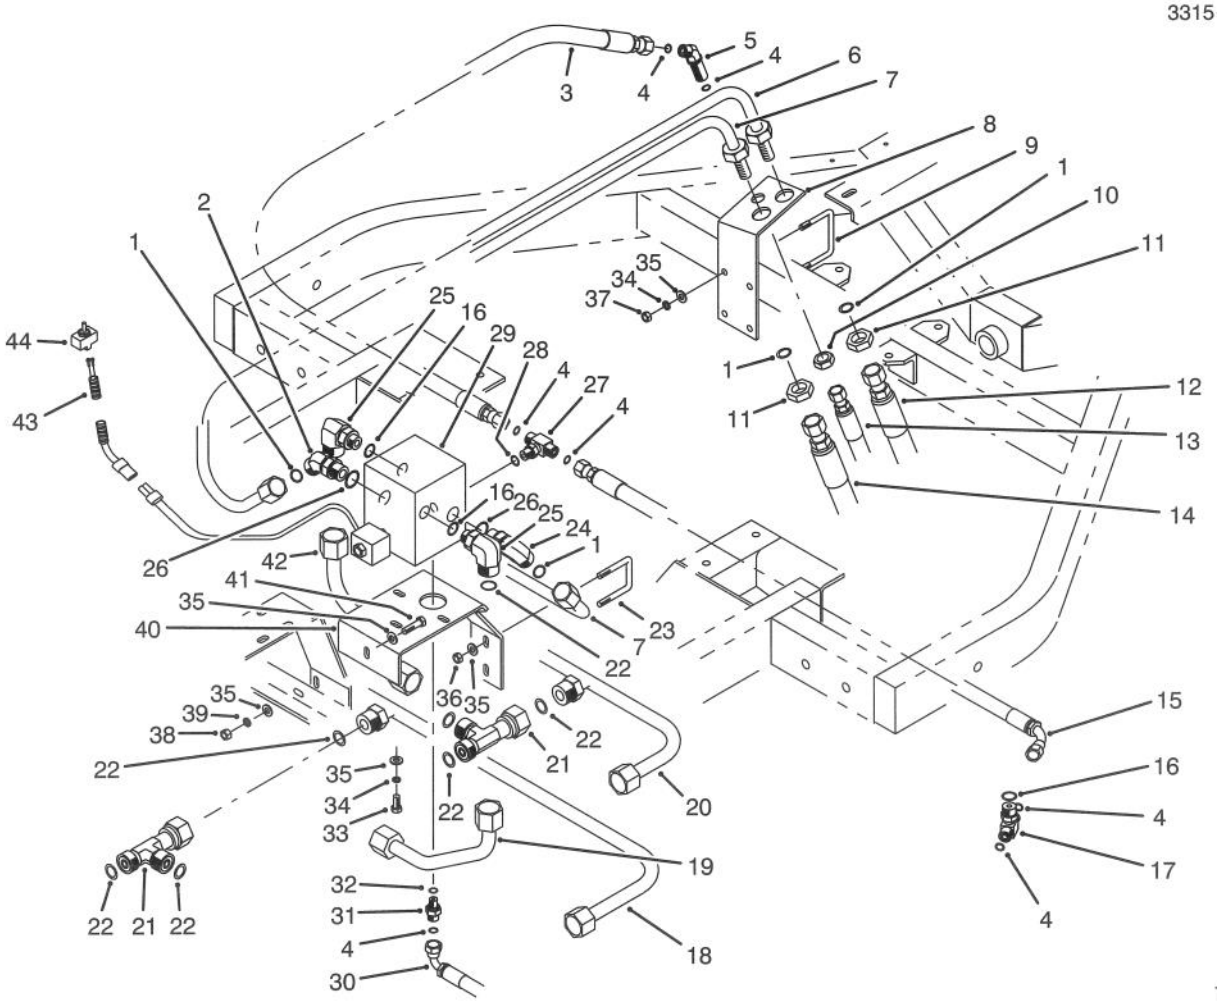

HYDRAULIC CIRCUIT – REAR WHEEL DRIVE

Ref. No.	Part No.	Description	No. Used
1	237–65	Seal – O–Ring	4
2	340–14	Fitting – Hydraulic 45° (Incl. Ref. #1 & 26)	1
3	92–5691	Hose – Hydraulic	1
4	237–22	Seal – O–Ring	6
5	340–69	Fitting – Hydraulic Bulkhead (Incl. Ref. #3)	1
6	92–5689	Tube Assembly (Incl. Ref. #1)	1
7	92–5690	Tube Assembly (Incl. Ref. #1)	1
8	92–5693	Bracket – Bulkhead	1
9	92–5692	Bolt – U	2
10	340–70	Nut – Bulkhead	1
11	340–74	Nut – Bulkhead	2
12	92–5698	Hose – Hydraulic	1
13	92–5688	Hose – Hydraulic	1
14	92–5686	Hose – Hydraulic	1
15	92–4725	Hose – Hydraulic	1
16	237–79	Seal – O–Ring	3
17	92–4799	Fitting – Hydraulic Tee (Incl. Ref. #4 & 16)	1
18	92–4726	Tube Assembly (Incl. Ref. #22)	1
19	92–4728	Tube – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
20	92–5677	Tube Assembly (Incl. Ref. #22)	1
21	92–4748	Fitting – Hydraulic Tee (Incl. Ref. #22)	2
22	237–58	Seal – O–Ring	8
23	66–5560	Bolt – U	1
24	340–17	Fitting – Hydraulic 90° (Incl. Ref. #1 & 26)	1
25	92–5696	Fitting – Hydraulic 90° (Incl. Ref. #16 & 22)	2
26	237–80	Seal – O–Ring	3
27	340–94	Fitting – Hydraulic Tee (Incl. Ref. #4 & 28)	1
28	237–42	Seal – O–Ring	1
29	92–2982	Control Block Assembly	1
30	92–5687	Hose – Hydraulic	
31	340–88	Fitting – Hydraulic Straight (Incl. Ref. #4 & 32)	1
32	237–78	Seal – O–Ring	1
33	322–3	Screw – Cap Hex. Hd.	3
34	3253–4	Washer – Lock	7
35	3256–23	Washer – Flat	11
36	3296–29	Nut – Lock	2
37	3217–6	Nut – Hex.	4
38	48–7930	Nut – Hex.	1

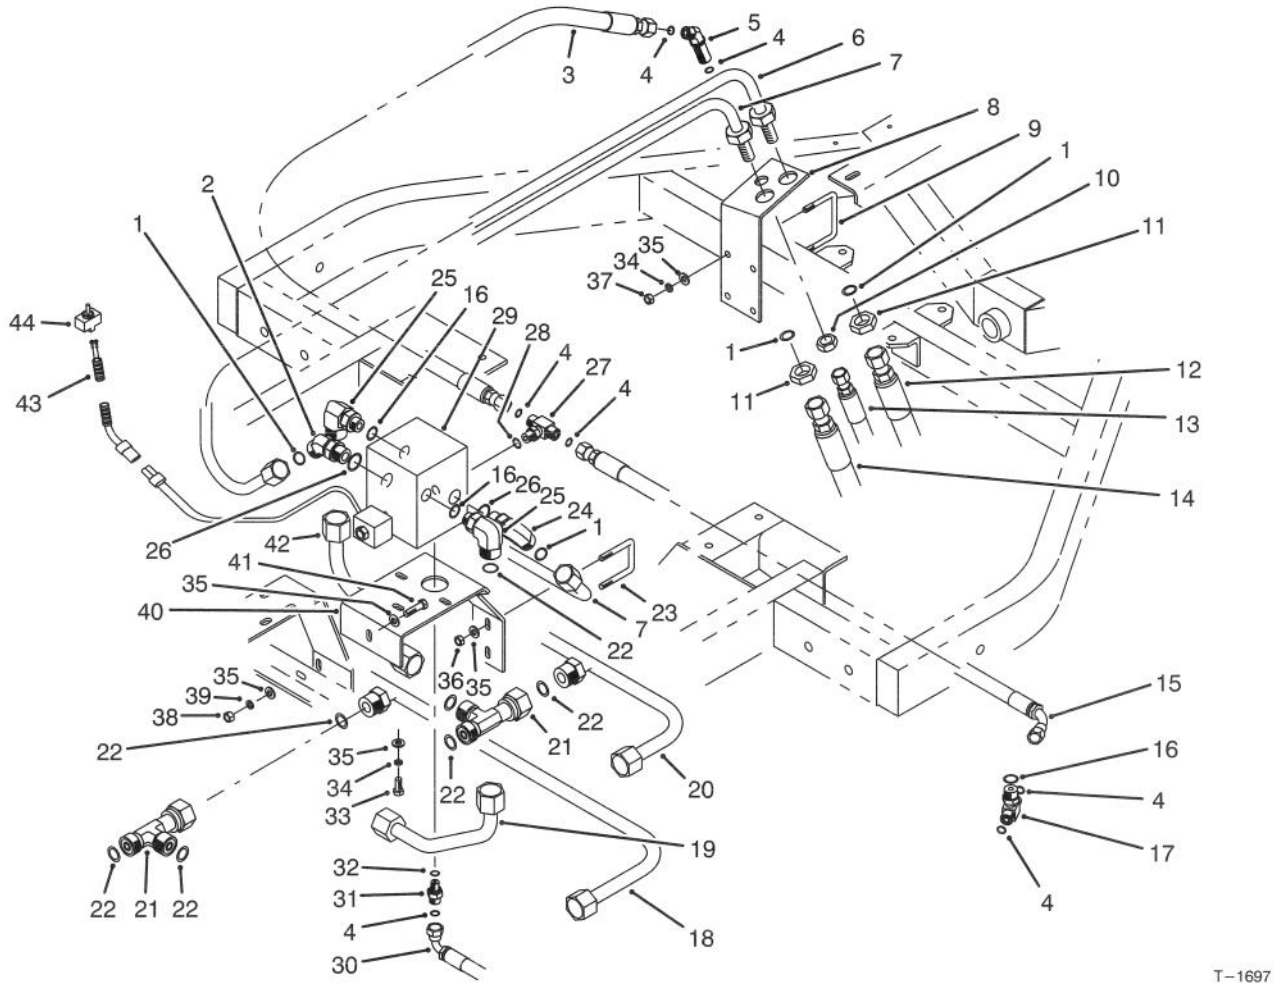


HYDRAULIC CIRCUIT – REAR WHEEL DRIVE (Continued)

Ref. No.	Part No.	Description	No. Used
39	48–9570	Washer – Lock	1
40	86–6460	Bracket – Control Block	1
41	322–6	Screw – Cap Hex. Hd.	1
42	92–4727	Tube – Hydraulic	1

Ref. No.	Part No.	Description	No. Used
43	92–5669	Harness – Switch	1
44	69–9740	Switch	1
*	3290–378	Tie – Cable	1

*Not Illustrated

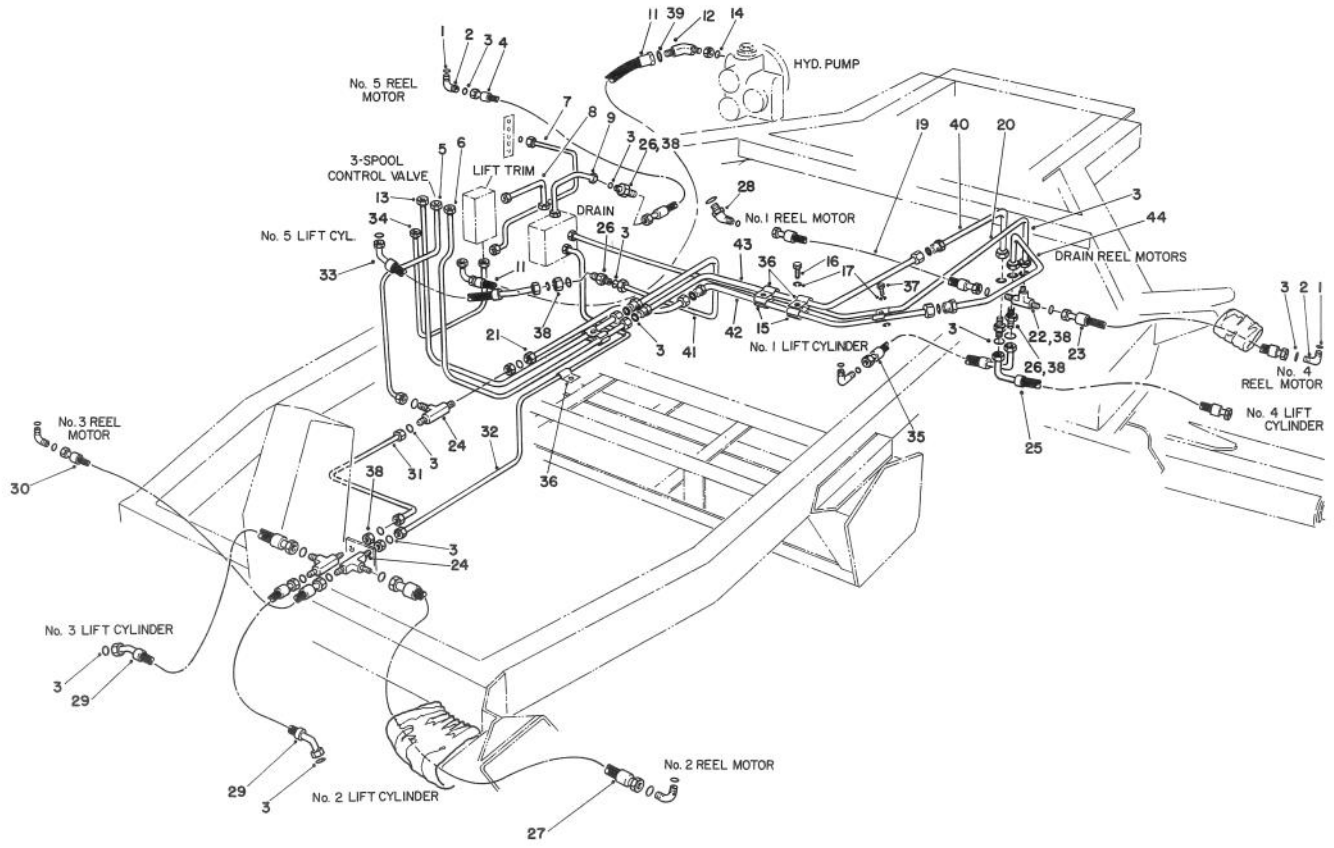


T–0168

HYDRAULIC CIRCUIT – LIFT ARMS

Ref. No.	Part No.	Description	No. Used
1	237–42	O–Ring	7
2	340–77	Fitting – Hydraulic 90° (Incl. Ref. #1 & 3)	4
3	237–22	O–Ring	31
4	84–6240	Hose Assembly	1
5	58–4750	Tube Assembly	1
6	68–6230	Tube Kit (Incl. Ref. #3, 40 & 43)	1
7	58–7730	Tube Assembly	1
8	63–4680	Tube Assembly	1
9	58–4780	Tube Assembly	1
11	58–5710	Hose Assembly	1
12	340–89	Fitting – Hydraulic 45° (Incl. Ref. #14 & 39)	1
13	68–6370	Tube Kit (Incl. Ref. #3 & 41)	1
14	237–80	O–Ring	1
15	58–3880	Clamp – Tube	5
16	60–6650	Screw – Cap Hex. Hd.	2
17	43–5930	Washer – Lock	6
18	48–8010	Washer	2
19	58–5840	Hose Assembly	1
20	58–4850	Tube Assembly	1
21	68–6270	Tube Kit (Incl. Ref. #3, 42 & 44)	1
22	60–2180	Fitting – Tee	1

Ref. No.	Part No.	Description	No. Used
23	58–5820	Hose Assembly	1
24	340–68	Fitting – Hydraulic Tee (Incl. Ref. #3)	3
25	60–1630	Hose Assembly	1
26	340–71	Fitting – Hydraulic Straight (Incl. Ref. #3)	4
27	58–6670	Hose Assembly	1
28	340–87	Fitting – Hydraulic 45° (Incl. Ref. #1 & 3)	1
29	58–5850	Hose Assembly	2
30	58–5830	Hose Assembly	1
31	58–4760	Tube Assembly	1
32	58–4880	Tube Assembly	1
33	84–6230	Hose Assembly	1
34	58–4870	Tube Assembly	1
35	58–5800	Hose Assembly	1
36	60–1360	Clamp – Tube	3
37	48–7640	Screw – Cap Hex. Hd.	5
38	340–70	Nut – Bulkhead	8
39	237–30	Seal – O–Ring	1
40		Tube Assembly	1
41		Tube Assembly	1
42		Tube Assembly	1
43		Tube Assembly	1
44		Tube Assembly	1

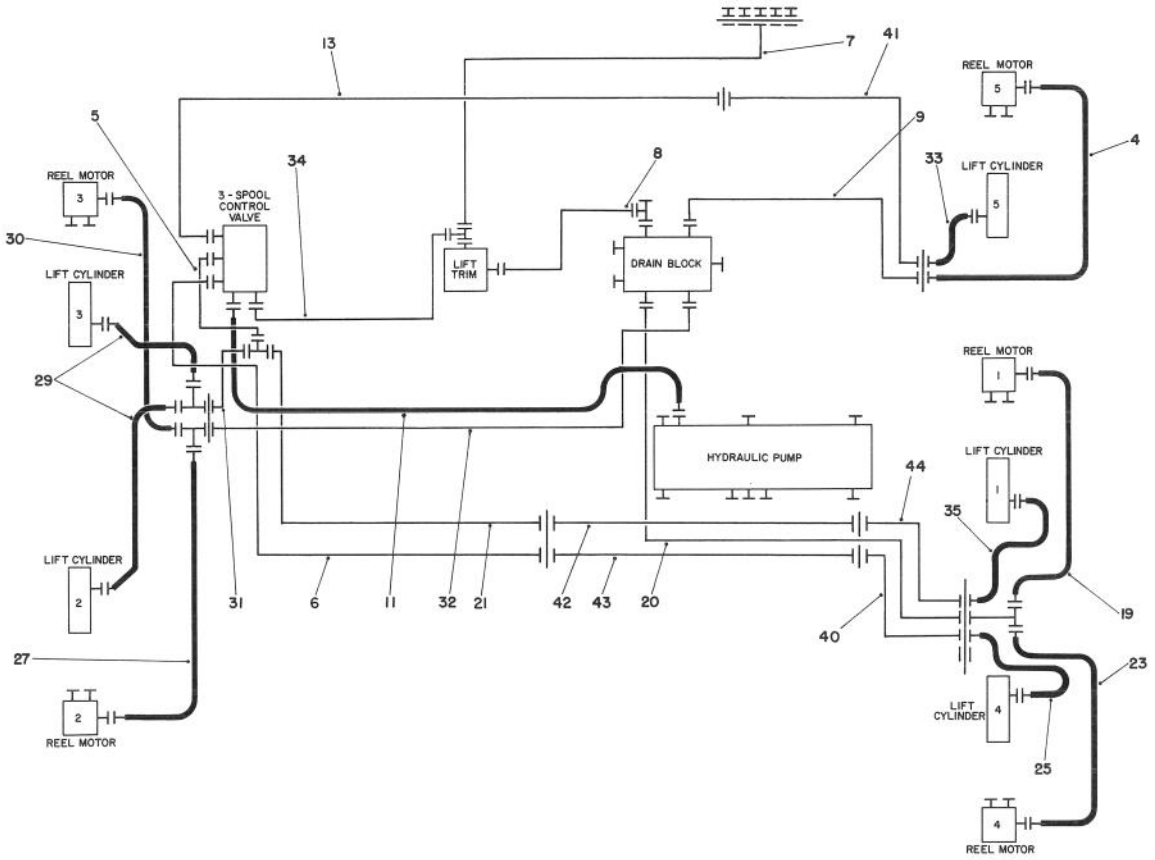


T–0169

HYDRAULIC SCHEMATIC – LIFT ARMS

Ref. No.	Part No.	Description	No. Used
4	84–6240	Hose Assembly	1
5	58–4750	Tube Assembly	1
6	68–6230	Tube Kit (Incl. Ref. #40 & 43)	1
7	58–7730	Tube Assembly	1
8	63–4680	Tube Assembly	1
9	58–4780	Tube Assembly	1
11	58–5710	Hose Assembly	1
13	68–6370	Tube Kit (Incl. Ref. #41)	1
19	58–5840	Hose Assembly	1
20	58–4850	Tube Assembly	1
21	68–6270	Tube Kit (Incl. Ref. #42 & 44)	1
23	58–5820	Hose Assembly	1


Ref. No.	Part No.	Description	No. Used
25	60–1630	Hose Assembly	1
27	58–6670	Hose Assembly	1
29	58–5850	Hose Assembly	2
30	58–5830	Hose Assembly	1
31	58–4760	Tube Assembly	1
32	58–4880	Tube Assembly	1
33	84–6230	Hose Assembly	1
34	58–4870	Tube Assembly	1
35	58–5800	Hose Assembly	1
40		Tube Assembly	1
41		Tube Assembly	1
42		Tube Assembly	1
43		Tube Assembly	1
44		Tube Assembly	1

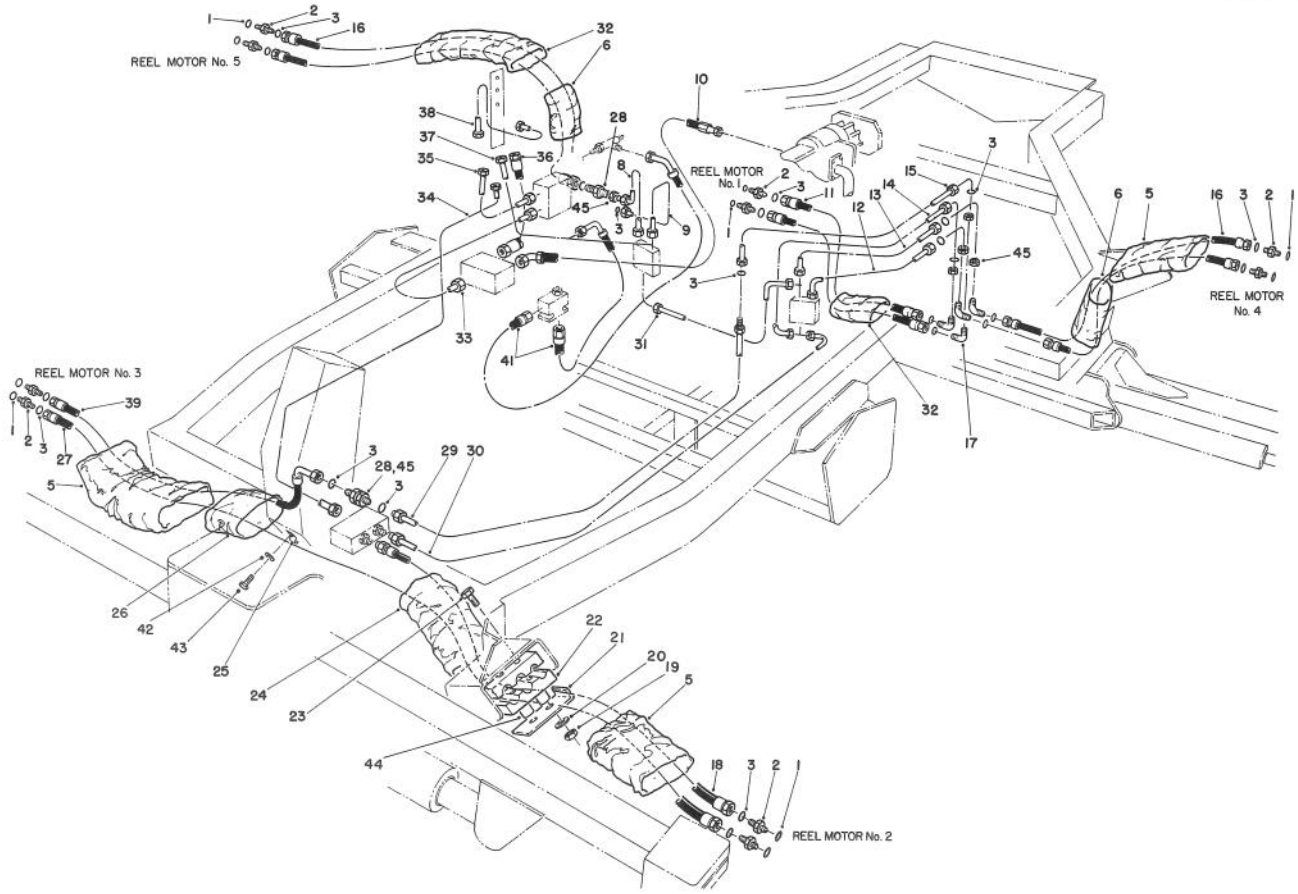

T–0170

HYDRAULIC CIRCUIT – CUTTING UNITS

Ref. No.	Part No.	Description	No. Used
1	237–81	O–Ring	10
2	340–8	Fitting – Hydraulic Straight (Incl. Ref. #1 & 3)	10
3	237–65	O–Ring	26
5	59–7190	Sleeve – Protective	4
6	59–7260	Sleeve – Protective	2
8	58–4960	Tube Assembly	1
9	58–4970	Tube Assembly	1
10	58–5730	Hose Assembly	1
11	58–5790	Hose Assembly	2
12	58–5060	Tube Assembly	1
13	58–5000	Tube Assembly	1
14	58–5020	Tube Assembly	1
15	58–5040	Tube Assembly	1
16	58–5780	Hose Assembly	4
17	340–72	Fitting – Hydraulic 90° (Incl. Ref. #3)	4
18	58–5750	Hose Assembly	1
19	3296–8	Nut – Lock	4
20	3256–16	Washer – Flat	4
21	74–2750	Retainer	2
22	74–2710	Clamp – Split	4
23	321–14	Screw – Cap Hex. Hd.	4
24	60–5650	Sleeve – Protective	1
25	60–2080	Clamp – Hose	1
26	60–5660	Sleeve – Protective	1
27	58–5740	Hose Assembly	1
28	340–76	Fitting – Adapter	3
29	58–4990	Tube Assembly (Incl. Ref. #3)	1
30	58–5070	Tube Assembly	1
31	58–4950	Tube Assembly	1
32	59–7200	Sleeve – Protective	1
33	58–5050	Tube Assembly	1
34	58–5030	Tube Assembly	1
35	58–4980	Tube Assembly	1
36	60–3340	Hose Assembly	1
37	63–4710	Tube Assembly	1
38	58–7740	Tube Assembly	1
39	58–5760	Hose Assembly	1
41	60–1250	Hose Assembly	2
42	48–9570	Washer – Lock	1
43	48–7680	Screw – Cap Hex. Hd.	1
44	74–2730	Spacer	4
45	340–74	Nut – Bulkhead	7

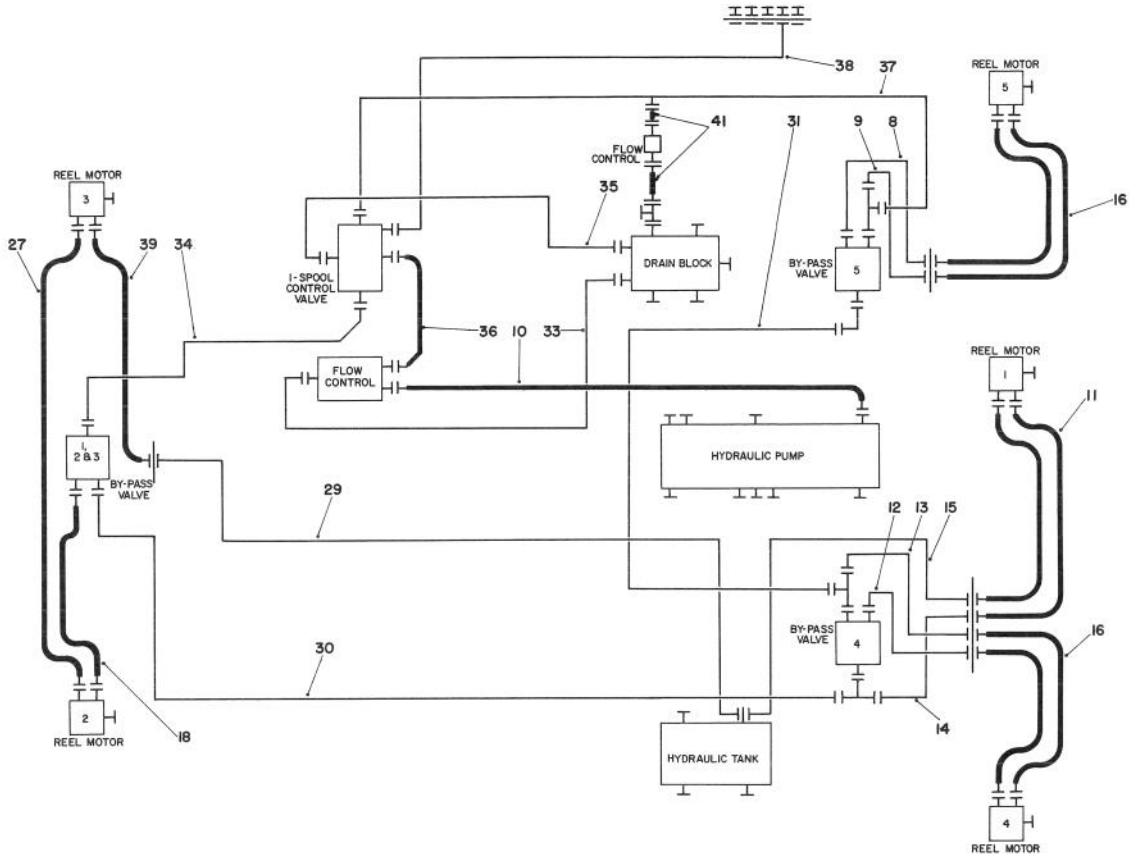


T–0171

HYDRAULIC SCHEMATIC – CUTTING UNITS

Ref. No.	Part No.	Description	No. Used
8	58–4960	Tube Assembly	1
9	58–4970	Tube Assembly	1
10	58–5730	Hose Assembly	1
11	58–5790	Hose Assembly	2
12	58–5060	Tube Assembly	1
13	58–5000	Tube Assembly	1
14	58–5020	Tube Assembly	1
15	58–5040	Tube Assembly	1
16	58–5780	Hose Assembly	4
18	58–5750	Hose Assembly	1
27	58–5740	Hose Assembly	1


Ref. No.	Part No.	Description	No. Used
29	58–4990	Tube Assembly	1
30	58–5070	Tube Assembly	1
31	58–4950	Tube Assembly	1
33	58–5050	Tube Assembly	1
34	58–5030	Tube Assembly	1
35	58–4980	Tube Assembly	1
36	60–3340	Hose Assembly	1
37	63–4710	Tube Assembly	1
38	58–7740	Tube Assembly	1
39	58–5760	Hose Assembly	1
41	60–1250	Hose Assembly	2

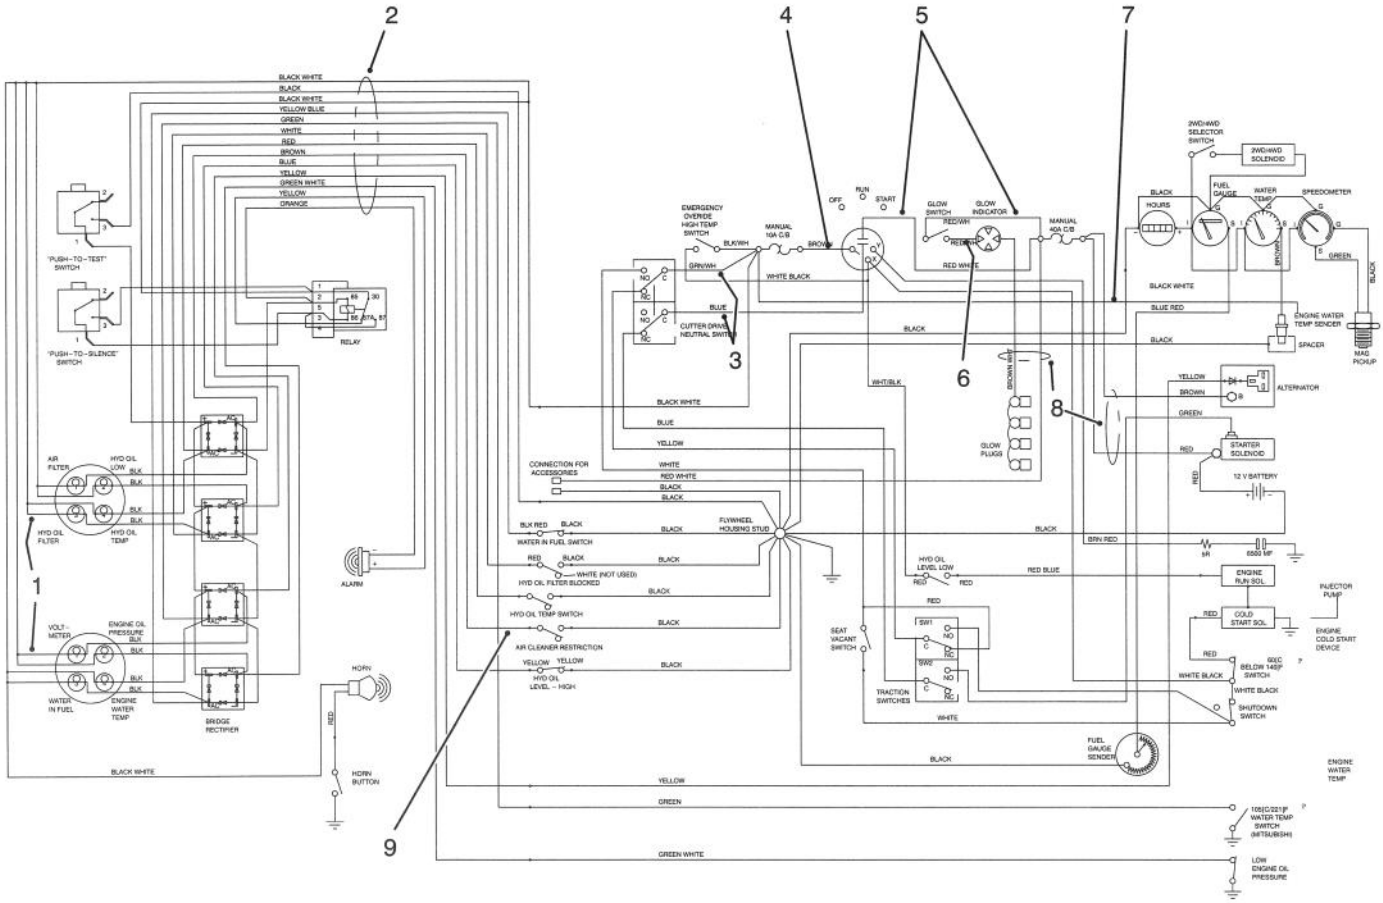

T–1716

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	82–9230	Harness – Wire (Indicator Lamp)	2
2	82–9820	Harness – Wire (Light Cluster)	1
3	82–9780	Harness – Wire (Interlock)	1
4	82–5940	Wire – Jumper	1
5	82–9730	Wire – Jumper	2
6	82–5930	Wire – Jumper	1
7	82–9740	Wire – Jumper (Gauges)	1
8	82–9770	Harness – Wire (Glow Plugs)	1
9	86–5990	Harness – Hyd. Filter	1

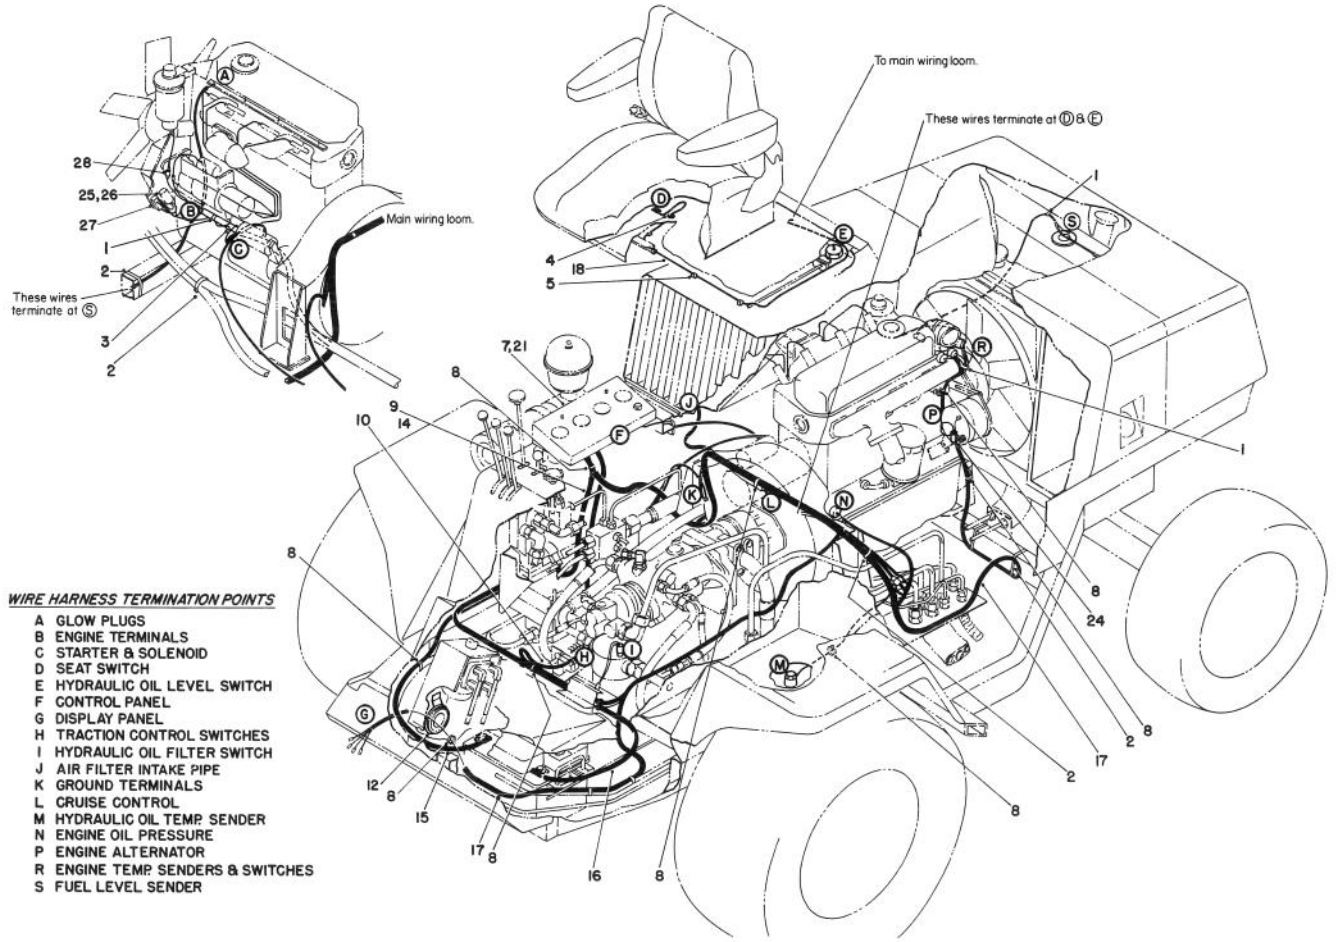


T–0173

ELECTRICAL SYSTEM DIAGRAM

Ref. No.	Part No.	Description	No. Used
1	3290–378	Tie – Cable	7
2	250–1	Tie – Cable	4
3	2412–109	Clip	1
4	237–100	Grommet	1
5	60–0930	Clip	3
7	82–9760	Harness – Wiring Gauges	1
8	3290–378	Tie – Cable	12
9	82–9790	Harness – Wiring Valve	1
10	82–9810	Harness – Wiring Traction Control Switches	1
12	82–9940	Harness – Wire Horn	1

Ref. No.	Part No.	Description	No. Used
14	82–9800	Harness – Wire Speedometer	1
15	58–3850	Cable – Neg. Battery	1
16	58–3840	Cable – Pos. Battery	1
17	92–5685	Harness – Wiring Main	1
18	82–9750	Jumper Assembly	1
21	2412–131	Clamp–R	3
24	86–6400	Diode	1
25	2412–74	Clamp–R	1
26	37–2690	Capacitor	1
27	38–2860	Resistor – 5 Ohm	1
28	58–6860	Connector	1

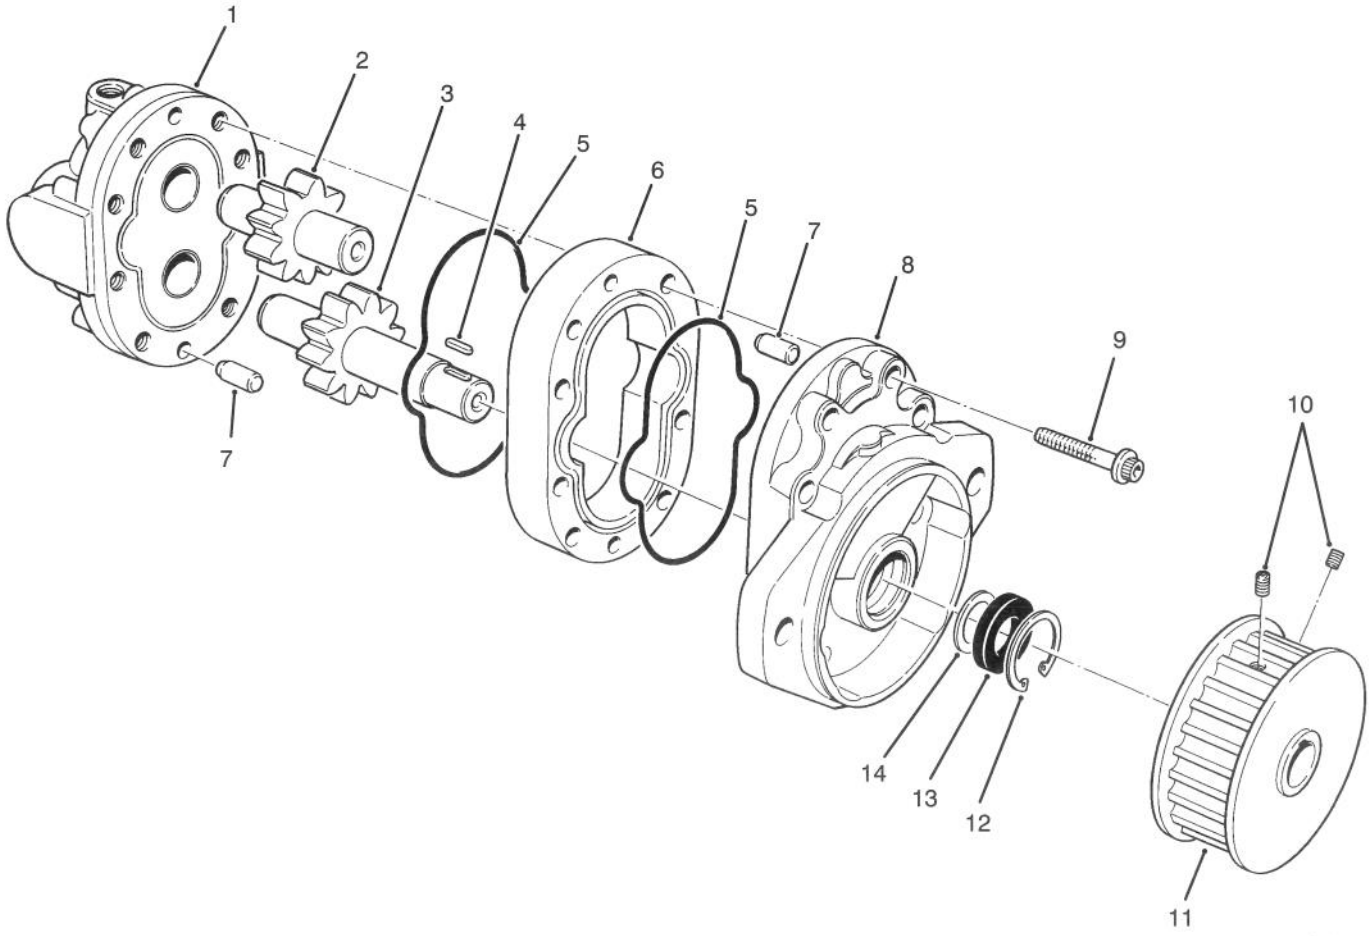

T–0174

REEL MOTOR ASSEMBLY NO. 66–5700


Ref. No.	Part No.	Description	No. Used
1	66–5720	Housing/Bushings Assembly	1
2	66–5750	Gear – Idler	1
3	66–5760	Gear – Drive	1
4	47–2380	Key	1
5	59–8420	O–Ring	2
6	66–5740	Body	1
7	42–2010	Pin – Dowel	2
8	66–5730	Plate & Bushings Assembly (Front)	1
9	66–5770	Screw – Cap Soc. Hd.	8

Ref. No.	Part No.	Description	No. Used
10	3246–17	Screw – Set	2
11	47–7150	Pulley – Drive	1
12	59–8320	Ring – Retaining	1
13	66–5710	Seal – Shaft	1
14	60–5890	Washer – Backup	1
*	66–5700	Reel Motor Assembly (Incl. Ref. #1–9, 12–14)	1
*	66–5690	Kit – Seal Repair (Incl. Ref. #5, 12–14)	1

*Not Illustrated

SPECIAL TOOLS


GAUGE BAR ASSEMBLY NO. 59–7900

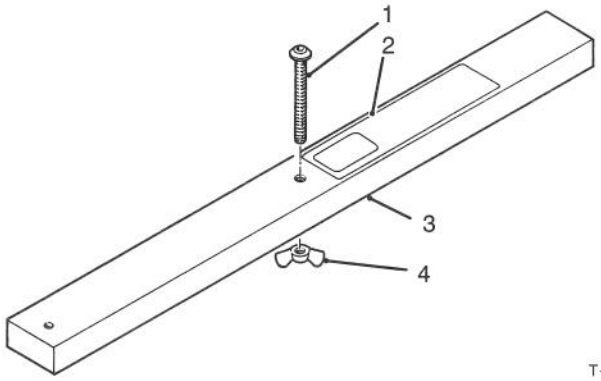

T–0191

Ref. No.	Part No.	Description	No. Used
1	32122–54	Screw – Mach. Slot. Hd.	1
2	59–7930	Decal	1
3		Bar	1
4	32103–3	Nut – Wing	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

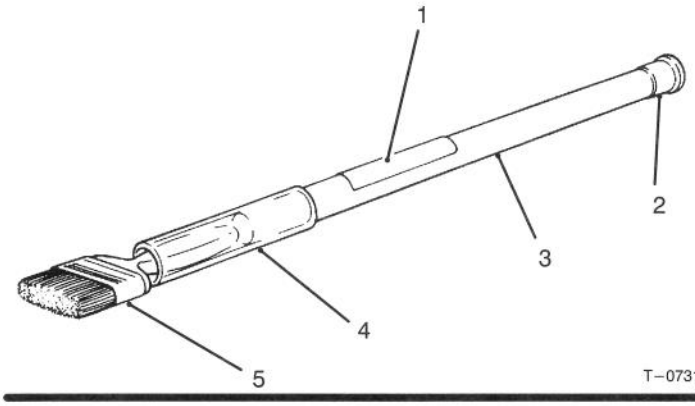

T–0731

Ref. No.	Part No.	Description	No. Used
1	12–9140	Decal	1
2	2410–18	Plug	1
3	29–9080	Handle	1
4	29–9090	Hose – Handle	1
5	36–4310	Brush	1


BEDKNIFE SCREW TOOL NO. *TOR510880

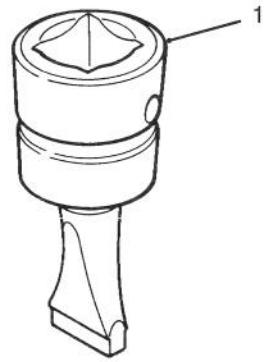

T–0729

Ref. No.	Part No.	Description	No. Used
1	51–0880	Tool – Bedknife Screw	1

TOW BAR ASSEMBLY NO. 58–7020

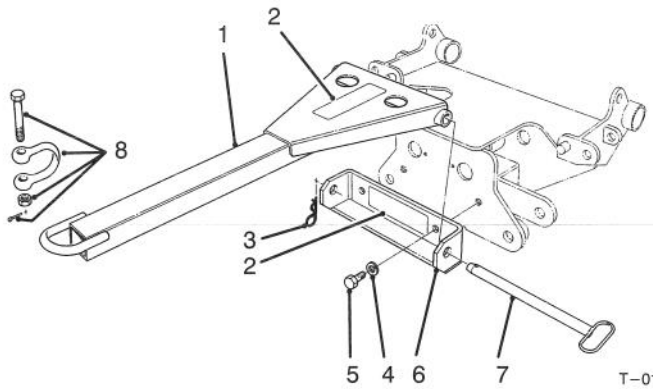

T–0190

Ref. No.	Part No.	Description	No. Used
1	12–7579	Tow Bar (Incl. Ref. #2)	1
2	63–4380	Decal – Instruction	2
3	60–4150	Pin – Retaining	1
4	48–8070	Washer – Lock	2
5	48–7830	Screw – Cap Hex. Hd.	2
6	12–7589	Tow Bar Bracket Assy. (Incl. Ref. #2)	1
7	60–4120	Pin – Tow Bar	1
8	60–4480	Shackle Assembly	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1–800–533–0492 (in Minnesota and Canada 1–507–455–7050) Fax. 507–455–7011.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–2858	Disc – Friction	1	9	1
3–7877	Grip	2	49	1
11–5790	Key	34	4	1
11–5790	Key	33	41	2
11–5800	Nut – Slotted	34	13	1
11–5800	Nut – Slotted	33	39	2
12–7579	Tow Bar	70	1	1
12–7589	Tow Bar Bracket Assy.	70	6	1
12–9140	Decal	70	1	1
21–4191	Seat Belt Assembly	17	3	1
23–1840	Bushing	29	5	2
25–8640	Screw	9	8	1
25–9090	Swivel	9	9	1
26–4840	Spacer	15	32	4
27–2360	Key Switch Assembly	8	18	1
27–7100	Air Cleaner Assembly	19	32	1
27–7100	Air Filter Assembly	20	*	1
27–7110	Element Assembly	20	8	1
27–7120	Nut	20	3	1
27–7130	Clamp Assembly	20	4	1
27–7140	Baffle	20	2	1
27–7150	Cup Assembly	20	1	1
27–7160	Decal – Instruction	19	31	1
27–7160	Decal – Instructions	20	14	1
27–7170	Band – Mounting	19	30	2
27–7170	Band Assembly	20	7	2
27–7220	Soap – Air Cleaner	20	*	1
29–1060	Bracket	29	29	2
29–1070	Lever Assembly	29	34	2
29–1080	Pad	29	39	4
29–6163	Switch	1	26	2
29–9080	Handle	70	3	1
29–9090	Hose – Handle	70	4	1
33–1260	Cover Assembly	20	12	1
33–1270	Bowl	20	11	1
33–3410	Spring	34	7	2
33–3570	Pin	34	6	2
33–3720	Washer	30	12	1
33–4970	Check Valve Assembly	56	8	2
33–4990	Poppet	56	42	1
36–4310	Brush	70	5	1
37–2690	Capacitor	68	26	1
37–7600	Rectifier	5	8	4
38–2860	Resistor – 5 Ohm	68	27	1
39–2080	Tow Valve Assembly	56	4	1
39–2130	Retainer – Spring	56	44	1
39–2140	Spring	56	43	2
42–1220	O–Ring	12	7	1
42–2010	Pin – Dowel	69	7	2
42–2720	Seal – Shaft	56	16	1
42–3120	O–Ring	55	16	2
42–3140	Screw – Cap Hex. Hd.	55	11	8
43–4000	Breaker – Circuit, 40 Amp.	8	25	1
43–4001	Breaker – Circuit, 10 Amp.	8	20	1
43–5930	Washer – Lock	59	5	5
43–5930	Washer – Lock	7	13	12
43–5930	Washer – Lock	45	14	4
43–5930	Washer – Lock	63	17	6
43–5930	Washer – Lock	4	18	2
43–5930	Washer – Lock	21	32	1
43–5930	Washer – Lock	10	46	4
43–6280	Button – Push	5	3	2
43–6280	Button – Push	8	10	2
43–6290	Switch	5	11	2
43–6420	Bezel	8	12	2
43–6420	Bezel – Locking	5	4	2
46–0670	Screw	15	15	6
46–6550	Elbow	21	5	1
46–6560	Grommet	21	4	3
47–2380	Key	69	4	1
47–2550	Grip – Handle	19	16	2
47–6990	Nut – Hex.	4	2	1
47–7010	Bushing	23	5	2
47–7030	Bushing – Rubber	1	13	1
47–7150	Pulley – Drive	69	11	1
48–3250	Mount – Rubber	37	1	4
48–3280	Bumper	27	16	2
48–3380	Leg – Support	37	5	2
48–4480	Strap – Tie	59	41	3
48–4590	Horn	4	15	1
48–6260	Coupling – Spring Center	37	16	1
48–6640	Bushing – Flange	24	13	2
48–6640	Bushing – Flange	32	15	2
48–6660	Washer – Thrust	32	16	2
48–6780	Spring	22	5	2
48–6790	Bushing – Flanged	1	6	4
48–6900	Screw	21	38	4
48–6900	Screw – Hex Hd.	22	32	6
48–6900	Screw – Self–Tap	7	22	4
48–6940	Spring	9	28	1
48–6940	Spring	2	39	1
48–7080	Cap	22	19	3
48–7100	Dampener	1	19	1
48–7120	Element – Suction	7	50	1
48–7430	Pre–Cleaner Assembly	20	*	1
48–7430	Pre–Cleaner Assembly	19	33	1
48–7570	Bolt	37	10	2
48–7610	Screw – Cap Hex. Hd.	4	17	2
48–7620	Bolt	7	12	10
48–7620	Bolt	10	47	2
48–7620	Bolt – Hex. Flange Hd.	3	7	3
48–7620	Screw – Cap Hex. Hd.	45	16	2
48–7630	Screw	21	29	1
48–7630	Screw – Cap Hex. Hd.	45	15	2
48–7640	Screw – Cap Hex. Hd.	59	4	4
48–7640	Screw – Cap Hex. Hd.	63	37	5
48–7680	Screw – Cap Hex Hd.	22	36	1
48–7680	Screw – Cap Hex. Hd.	19	17	2
48–7680	Screw – Cap Hex. Hd.	65	43	1
48–7700	Bolt	9	1	2
48–7700	Bolt	27	19	4
48–7700	Screw – Cap Hex. Hd.	59	21	1
48–7730	Screw – Cap Hex. Hd.	15	33	4
48–7740	Bolt	1	18	3
48–7780	Bolt	37	6	6
48–7830	Bolt	37	4	8
48–7830	Screw – Cap Hex. Hd.	70	5	2
48–7880	Nut	51	12	1
48–7880	Nut – Hex.	9	34	2
48–7890	Nut	7	44	10
48–7890	Nut – Hex	59	49	1
48–7890	Nut – Hex.	21	31	1
48–7890	Nut – Hex.	11	51	1
48–7930	Nut – Hex.	1	7	7
48–7930	Nut – Hex.	27	9	2
48–7930	Nut – Hex.	37	13	3
48–7930	Nut – Hex.	1	15	3
48–7930	Nut – Hex.	9	16	4
48–7930	Nut – Hex.	15	27	10
48–7930	Nut – Hex.	61	38	1
48–7960	Nut – Hex.	37	9	2
48–8000	Washer – Lock	9	35	2
48–8000	Washer – Spring	51	11	1
48–8010	Washer	59	6	3
48–8010	Washer	4	16	2
48–8010	Washer	10	17	4
48–8010	Washer	63	18	2
48–8010	Washer	22	33	2
48–8020	Washer – Lock	59	22	1
48–8030	Washer	9	19	6
48–8030	Washer	15	29	6
48–8030	Washer	2	43	6
48–8030	Washer – Flat	18	42	6
48–8070	Washer – Lock	37	3	12
48–8070	Washer – Lock	70	4	2
48–8830	Pin – Roll	22	26	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
48-8850	Washer – Bevel	22	27	3
48-9460	Bolt	37	11	1
48-9460	Screw – Cap Hex. Hd.	18	40	6
48-9470	Bolt	37	2	7
48-9470	Bolt	26	4	2
48-9470	Bolt	22	9	2
48-9470	Screw – Cap Hex. Hd.	15	20	2
48-9480	Bolt	37	23	1
48-9490	Bolt	26	11	1
48-9510	Nut – Hex.	1	14	1
48-9510	Nut – Lock	18	37	2
48-9520	Nut – Lock	26	8	2
48-9530	Nut – Hex.	27	10	2
48-9540	Nut	26	30	1
48-9570	Washer – Lock	9	2	2
48-9570	Washer – Lock	1	8	15
48-9570	Washer – Lock	27	8	4
48-9570	Washer – Lock	37	12	2
48-9570	Washer – Lock	15	28	10
48-9570	Washer – Lock	22	35	1
48-9570	Washer – Lock	62	39	1
48-9570	Washer – Lock	18	41	6
48-9570	Washer – Lock	65	42	1
48-9580	Washer	15	5	2
48-9580	Washer	37	26	1
48-9580	Washer	26	35	2
48-9590	Washer – Lock	37	7	16
48-9590	Washer – Lock	15	21	2
48-9600	Washer	26	29	1
49-0170	Kit – Seal	6	*	1
49-2280	Decal – Diesel Fuel	18	11	1
49-2500	Element – Filter	44	5	1
49-2520	Belt	51	17	1
49-2640	Seal – Shaft	55	12	1
49-2660	Front Plate Assembly	55	15	1
49-2670	Plate – Wear	55	20	1
49-2680	O-Ring – Molded	55	17	1
49-2690	Gasket – Backup	55	19	1
49-2700	Seal – Bearing	55	18	1
51-0880	Tool – Bedknife Screw	70	1	1
51-2060	Washer	22	23	8
51-2070	Nut	22	21	3
51-4910	Bolt	40	36	2
51-4920	Bolt	40	37	1
51-4930	Bolt	40	38	1
51-4940	Cap – Sealing	42	13	10
51-4970	Insert – Valve Seat, Exhaust	42	27	4
51-4980	Insert – Valve Seat, Inlet	42	28	4
51-5030	Bolt – Cylinder Head	42	2	5
51-5040	Bolt – Cylinder Head	42	3	10
51-5050	Connector – Fitting	42	4	1
51-5080	Rocker Shaft Assembly	43	7	2
51-5090	Plug – Expansion	43	6	2
51-5100	Spring – Rocker Shaft	43	8	2
51-5110	Rocker Assembly	43	16	4
51-5120	Bushing – Rocker	43	13	8
51-5130	Screw – Adjusting	43	1	8
51-5150	Bracket – Rocker Shaft	43	15	4
51-5160	Washer	39	5	2
51-5160	Washer – Flat	43	34	9
51-5190	Bolt	43	5	4
51-5200	Rocker Assembly	43	14	4
51-5210	Nut – Jam	43	2	8
51-5240	Seal – O-Ring	43	10	2
51-5250	Pipe – Oil	43	9	1
51-5260	Ring – Snap	43	11	4
51-5270	Washer	43	12	4
51-5280	Cap	43	33	8
51-5290	Keeper – Valve	43	32	16
51-5310	Seal – Valve Stem	43	41	8
51-5320	Spring – Valve	43	17	8
51-5330	Valve – Exhaust	43	19	4
51-5340	Valve – Inlet	43	18	4
51-5350	Cap – Oil Fill	42	6	1
51-5360	Nut – Cap	42	7	4
51-5370	Gasket	42	8	4
51-5380	Rocker Cover Assembly	42	9	1
51-5390	Washer – Sealing	42	15	1
51-5400	Connector	42	16	1
51-5410	Cover	42	5	1
51-5420	Gasket – Rocker Cover	42	11	1
51-5430	Pushrod	43	40	8
51-5450	Camshaft	43	35	1
51-5460	Key – Woodruff	41	1	2
51-5460	Key – Woodruff	43	38	1
51-5470	Plate – Thrust	43	36	1
51-5500	Bushing – Camshaft No. 1	38	2	1
51-5510	Bushing – Camshaft No. 2	38	3	1
51-5520	Bushing – Camshaft No. 3	38	4	1
51-5530	Cap – Sealing	38	6	2
51-5530	Cap – Sealing	42	12	6
51-5540	Pin – Dowel, Gear Case	38	7	2
51-5560	Pipe – Oil	38	15	1
51-5580	Hanger	38	9	2
51-5590	Cap – Sealing	38	21	3
51-5600	Cap – Sealing	38	11	3
51-5610	Pin – Dowel	38	20	8
51-5640	Idler Gear Shaft Assembly	38	33	1
51-5650	Pin – Spring	38	34	1
51-5660	Plug – Expansion	38	22	1
51-5670	Cap – Sealing	38	12	2
51-5690	Cap	38	8	1
51-5730	Gasket	38	1	1
51-5770	Bearing Set Std.	38	30	1
51-5820	Gasket	39	22	1
51-5840	Washer – Sealing	39	29	1
51-5850	Cover	39	27	1
51-5860	Gasket	39	26	1
51-5870	Seal	39	25	1
51-5900	Case – Seal, Oil	41	14	1
51-5910	O-Ring	41	15	1
51-5940	Housing – Flywheel	41	21	1
51-5950	Stud	51	22	2
51-5970	Nut	51	15	2
51-6010	Cover	41	7	1
51-6020	Gasket	41	8	1
51-6030	Plug	41	23	1
51-6100	Gasket – Housing, Flywheel	41	22	1
51-6180	Pin – Piston	42	22	4
51-6190	Ring – Snap	42	18	8
51-6200	Connecting Rod Assembly	42	20	4
51-6210	Bushing	42	23	4
51-6220	Bolt	42	21	8
51-6230	Nut	42	26	8
51-6240	Bearing – Connecting Rod	42	24	8
51-6270	Washer	41	3	1
51-6300	Pin – Dowel	41	20	2
51-6310	Pulley – Crankshaft	41	4	1
51-6320	Plate – Baffle	41	28	1
51-6330	Plate – Thrust	41	27	1
51-6340	Flywheel Assembly	41	18	1
51-6350	Gear – Ring	41	19	1
51-6360	Washer – Lock	41	17	2
51-6370	Bolt – Seal	41	16	4
51-6390	Washer	39	20	1
51-6390	Washer – Spring	51	2	4
51-6390	Washer – Spring	41	9	7
51-6390	Washer – Spring	40	35	4
51-6400	Plate – Thrust	39	19	1
51-6410	Gear – Camshaft	39	8	1
51-6450	Gear – Crankshaft	39	17	1
51-6480	Cover	38	18	1
51-6490	Gasket	38	19	1
51-6500	Gasket – Intake Manifold	45	9	2
51-6540	Manifold – Inlet	45	21	1
51-6550	Gasket – Intake Pipe	45	20	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
51–6600	Clamp	45	6	2
51–6620	Manifold – Exhaust	45	4	1
51–6630	Gasket – Exhaust Pipe	45	3	1
51–6660	Gasket – Exhaust Manifold	45	5	1
51–6670	Oil Pump Assembly	43	22	1
51–6680	Gear – Pump Drive	43	20	1
51–6690	Pin	43	21	1
51–6700	Oil Pump Rotor Assembly	43	*	1
51–6720	Cover – Oil Pump Case	43	26	1
51–6750	Strainer – Oil	43	30	1
51–6760	Gasket	43	27	1
51–6800	Oil Filter Assembly	44	4	1
51–6820	Washer – Gasket	44	7	1
51–6830	Relief Valve Assembly	44	8	1
51–6870	Gasket	44	6	1
51–6880	Bolt – Joint	44	1	2
51–6890	Gasket	44	2	4
51–6890	Gasket	42	32	1
51–6900	Pipe – Oil	44	3	1
51–6910	Nut – Jam	40	5	1
51–6920	Washer – Spring	40	6	1
51–6930	Spacer – Water Pump	40	8	2
51–6940	Ring – Retaining	40	9	1
51–6950	Bearing – Ball	40	10	1
51–6960	Key – Woodruff	40	11	1
51–6980	Bearing – Ball	40	13	1
51–7010	Gasket	40	16	1
51–7020	Fitting – Grease	40	15	1
51–7030	Seal Unit	40	18	1
51–7050	Cover	40	20	1
51–7080	Gasket	40	34	1
51–7130	Pulley –Water Pump	40	7	1
51–7160	Elbow Assembly	40	40	1
51–7170	Pipe	45	8	1
51–7170	Pipe	40	30	1
51–7190	Hose – By–Pass	40	32	1
51–7190	Hose – Rubber	45	7	1
51–7200	Clamp – Hose	40	31	2
51–7210	Gasket	40	25	2
51–7220	Gasket	40	24	1
51–7230	Thermostat	40	23	1
51–7250	Washer	46	3	2
51–7250	Washer	38	5	5
51–7250	Washer – Lock	40	2	6
51–7250	Washer – Spring	39	2	17
51–7250	Washer – Spring	45	2	12
51–7250	Washer – Spring	43	3	11
51–7250	Washer – Spring	41	6	2
51–7250	Washer – Spring	51	6	1
51–7250	Washer – Spring	44	13	19
51–7250	Washer – Spring	47	33	3
51–7400	Washer – Spring	41	11	8
51–7400	Washer – Spring	46	24	2
51–7400	Washer – Spring	43	28	4
51–7490	Shim – 1.0mm	46	12	A/R
51–7590	Motor – Starter	51	16	1
51–7600	Screw – Set	52	4	1
51–7610	Packing	52	5	2
51–7620	Front Cover Assembly	52	6	1
51–7630	Seal – Oil	52	24	1
51–7640	Lever Assembly	52	7	1
51–7650	Spring Assembly	52	8	1
51–7660	Center Bracket Assembly	52	9	1
51–7670	Solenoid	52	10	1
51–7680	Armature Assembly	52	12	1
51–7690	Bearing	52	11	1
51–7700	Bearing	52	13	1
51–7710	Bolt Set	52	14	1
51–7720	Clutch Shaft Assembly	52	*	1
51–7730	Pinion Gear Assembly	52	2	1
51–7740	Retaining Ring Assembly	52	1	1
51–7750	Gear Assembly	52	*	1
51–7760	Shaft Assembly	52	23	1
51–7770	Gear – Pinion	52	22	1
51–7780	Cover Set	52	21	1
51–7790	Packing	52	20	2
51–7800	Yoke Assembly	52	19	1
51–7810	Brush Holder Assembly	52	17	1
51–7820	Spring – Brush	52	18	4
51–7830	Cover – Rear	52	16	1
51–7840	Ring – Rubber	52	15	2
51–7850	Nut Assembly	53	1	1
51–7870	Screw – Set	53	4	1
51–7890	Screw – Set	53	5	1
51–7910	Rotor Assembly	53	10	1
51–7930	Stator	53	18	1
51–7950	Terminal Assembly	53	17	1
51–7960	Regulator Assembly	53	16	1
51–7970	Brush	53	15	2
51–7980	Spring – Return	53	14	2
51–8100	Bearing Set 0.25mm U.S.	38	*	1
51–8110	Bearing Set 0.50mm U.S.	38	*	1
51–8120	Bearing Set 0.75mm U.S.	38	*	1
51–8190	Bearing – Connecting Rod	42	*	8
51–8200	Bearing – Connecting Rod	42	*	8
51–8210	Bearing – Connecting Rod	42	*	8
51–8240	Water Pump Assembly	40	14	1
51–8260	Switch – Indicator,	38	13	1
51–8270	Washer – Sealing	38	23	1
51–8280	Bolt	38	24	1
51–8310	Bolt	39	12	1
51–8390	Shim – 1.05mm	46	*	A/R
51–8400	Shim – 1.10mm	46	*	A/R
51–8410	Shim – 1.15mm	46	*	A/R
51–8420	Shim – 1.20mm	46	*	A/R
51–8430	Shim – 1.25mm	46	*	A/R
51–8440	Shim – 1.30mm	46	*	A/R
51–8450	Shim – 1.35mm	46	*	A/R
51–8460	Shim – 1.40mm	46	*	A/R
51–8470	Shim – 1.45mm	46	*	A/R
51–8480	Shim – 1.50mm	46	*	A/R
51–8490	Shim – 1.55mm	46	*	A/R
51–8500	Shim – 1.60mm	46	*	A/R
51–8510	Shim – 1.65mm	46	*	A/R
51–8520	Shim – 1.70mm	46	*12	A/R
51–8530	Shim – 1.75mm	46	*	A/R
51–8540	Shim – 1.80mm	46	*	A/R
51–8550	Shim – 1.85mm	46	*	A/R
51–8560	Shim – 1.90mm	46	*	A/R
51–8570	Shim – 1.95mm	46	*	A/R
51–8580	Plate – Adjusting	51	4	1
51–8590	Washer – Flat	51	5	1
51–8600	Bracket – Alternator	51	8	1
51–8610	Washer – Spring	51	18	2
51–8620	Bolt	51	19	1
51–8630	Bolt	51	20	1
51–8640	Bolt	51	1	2
51–8650	Plate – Connection	51	9	1
51–8660	Plug – Glow	51	13	4
52–6180	Washer	26	6	A/R
52–6430	Washer	9	36	2
52–6430	Washer	11	54	6
52–9230	Ring – Retaining	6	2	1
52–9240	Bushing – Seal Gland	6	3	1
52–9250	Kit – Bearing, Needle	6	*	1
52–9260	Screw – Set	6	28	1
52–9270	Seat – Check Ball	6	26	1
52–9280	Ball – Check	6	24	1
52–9290	Retainer – Ball, Check	6	23	1
52–9590	Latch	21	27	4
53–5940	Bolt	27	44	1
53–6070	Brake – Parking	9	3	1
55–4330	Arm Rest – L.H.	16	14	1
55–4331	Arm Rest – R.H.	16	*	1
56–3850	Screw – Mach. Hex. Hd.	16	13	4
56–3880	Washer	16	31	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
56–3890	Nut	16	30	1
56–3940	Washer	16	40	1
56–4150	Grip – Handle	16	6	1
56–4170	Clevis – Threaded	16	29	1
56–6860	Shaft Sub–Assembly	34	5	1
56–6890	Kit – Seal	34	*	1
58–0070	Disc – Brake	29	9	1
58–0110	Bracket	29	32	2
58–0400	Shroud – Front	2	45	1
58–0500	Cover	4	19	1
58–0660	Foot – Front	37	8	1
58–0800	Lever – Neutral Lock	2	36	1
58–0980	Fender – LH	7	25	1
58–1480	Pin – Cotter	10	22	8
58–1510	Shaft	10	34	1
58–1520	Pin – Pivot	10	6	1
58–1530	Coupling	11	53	1
58–1540	Spacer	11	59	4
58–1560	Link	10	50	6
58–1570	Link	10	21	2
58–1580	Seat Frame Assembly	15	30	1
58–1640	Pin – Seat Pivot	15	25	1
58–1650	Rod – Seat	15	9	1
58–1750	Panel – Access	7	37	1
58–1970	Hinge – LH	18	5	1
58–1980	Hinge – RH	18	*	1
58–2040	Indicator – Glow Plug	8	17	1
58–2110	Housing – Thermostat	40	29	1
58–2150	Manifold	10	40	1
58–2170	Bar	9	17	1
58–2270	Rod Assembly	9	24	1
58–2300	Link – Brake	29	37	4
58–2720	Pin – Cylinder Mount	23	14	2
58–2720	Pin – Pivot	27	40	3
58–2800	Bushing	22	1	4
58–2810	Rod	22	3	2
58–3570	Spring – Compression	27	46	2
58–3590	Dowel	37	15	2
58–3780	Spacer	29	28	8
58–3810	Pin – Clevis	10	49	3
58–3830	Pin – Clevis	10	16	5
58–3840	Cable – Pos. Battery	68	16	1
58–3850	Cable – Neg. Battery	68	15	1
58–3880	Clamp	59	9	3
58–3880	Clamp – Tube	63	15	5
58–3910	Pin – Hinge	18	9	2
58–3930	Bushing – Flange	18	3	2
58–4310	Ring	1	21	2
58–4380	Pin – Pivot	26	15	2
58–4380	Pin – Pivot	27	26	3
58–4450	Lever	10	18	1
58–4460	Clevis	10	20	1
58–4710	Tube Assembly	59	48	1
58–4710	Tube Assembly	60	48	1
58–4750	Tube Assembly	63	5	1
58–4750	Tube Assembly	64	5	1
58–4760	Tube Assembly	63	31	1
58–4760	Tube Assembly	64	31	1
58–4780	Tube Assembly	63	9	1
58–4780	Tube Assembly	64	9	1
58–4790	Tube Assembly	59	25	1
58–4790	Tube Assembly	60	25	1
58–4850	Tube Assembly	63	20	1
58–4850	Tube Assembly	64	20	1
58–4860	Tube Assembly	59	27	1
58–4860	Tube Assembly	60	27	1
58–4870	Tube Assembly	63	34	1
58–4870	Tube Assembly	64	34	1
58–4880	Tube Assembly	63	32	1
58–4880	Tube Assembly	64	32	1
58–4950	Tube Assembly	65	31	1
58–4950	Tube Assembly	66	31	1
58–4960	Tube Assembly	65	8	1
58–4960	Tube Assembly	66	8	1
58–4970	Tube Assembly	65	9	1
58–4970	Tube Assembly	66	9	1
58–4980	Tube Assembly	65	35	1
58–4980	Tube Assembly	66	35	1
58–4990	Tube Assembly	65	29	1
58–4990	Tube Assembly	66	29	1
58–5000	Tube Assembly	65	13	1
58–5000	Tube Assembly	66	13	1
58–5020	Tube Assembly	65	14	1
58–5020	Tube Assembly	66	14	1
58–5030	Tube Assembly	65	34	1
58–5030	Tube Assembly	66	34	1
58–5040	Tube Assembly	66	15	1
58–5040	Tube Assembly	65	15	1
58–5050	Tube Assembly	65	33	1
58–5050	Tube Assembly	66	33	1
58–5060	Tube Assembly	65	12	1
58–5060	Tube Assembly	66	12	1
58–5070	Tube Assembly	65	30	1
58–5070	Tube Assembly	66	30	1
58–5100	Washer	1	22	2
58–5100	Washer	37	27	2
58–5330	Spacer – Hinge	18	4	A/R
58–5350	Spacer – Hinge	18	*	A/R
58–5380	Latch – Draw	18	22	2
58–5420	Cap – Radiator	19	9	1
58–5430	Motor – Wheel	29	12	2
58–5460	Valve – Shut–Off	27	2	2
58–5460	Valve – Shutoff	24	5	1
58–5490	Valve – Flow Control	11	56	1
58–5491	Valve – Flow Control	11	*	1
58–5520	Valve	10	28	1
58–5540	Cooler – Hydraulic Oil	19	11	1
58–5570	Tire	32	*	2
58–5590	Rim	32	*	2
58–5600	Tire (Model 03705)	29	*	2
58–5610	Rim	29	24	2
58–5620	Tube – Inner	29	25	2
58–5650	Pump – Gear	54	28	1
58–5660	Pump – Piston	54	26	1
58–5710	Hose Assembly	63	11	1
58–5710	Hose Assembly	64	11	1
58–5720	Hose Assembly	59	33	1
58–5720	Hose Assembly	60	33	1
58–5730	Hose Assembly	65	10	1
58–5730	Hose Assembly	66	10	1
58–5740	Hose Assembly	65	27	1
58–5740	Hose Assembly	66	27	1
58–5750	Hose Assembly	65	18	1
58–5750	Hose Assembly	66	18	1
58–5760	Hose Assembly	65	39	1
58–5760	Hose Assembly	66	39	1
58–5780	Hose Assembly	65	16	4
58–5780	Hose Assembly	66	16	4
58–5790	Hose Assembly	65	11	2
58–5790	Hose Assembly	66	11	2
58–5800	Hose Assembly	63	35	1
58–5800	Hose Assembly	64	35	1
58–5820	Hose Assembly	63	23	1
58–5820	Hose Assembly	64	23	1
58–5830	Hose Assembly	63	30	1
58–5830	Hose Assembly	64	30	1
58–5840	Hose Assembly	63	19	1
58–5840	Hose Assembly	64	19	1
58–5850	Hose Assembly	63	29	2
58–5850	Hose Assembly	64	29	2
58–5860	Hose Assembly	59	1	2
58–5860	Hose Assembly	60	1	2
58–5870	Hose Assembly	59	34	1
58–5870	Hose Assembly	60	34	1
58–5910	Decal – Tire Pressure	22	17	2
58–5940	Sight Glass	7	21	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
58–5960	Column – Steering	4	4	1
58–6290	Poppet Assembly	13	33	3
58–6310	Spacer	13	26	3
58–6320	Wiper – Seal	13	38	3
58–6330	Seat Assembly	13	35	3
58–6340	O–Ring	13	36	3
58–6350	Plug Assembly	13	11	3
58–6370	Washer – Backup	13	10	6
58–6370	Washer – Backup	14	15	1
58–6380	Assembly – Plug	13	30	3
58–6400	Bushing	13	23	3
58–6410	Spring	13	31	3
58–6420	Assembly – Cap	13	28	3
58–6440	Poppet	13	20	1
58–6450	O–Ring	13	22	6
58–6460	Ring – Retaining	13	27	3
58–6470	Washer	13	16	A/R
58–6480	Washer	13	17	A/R
58–6490	Washer	13	18	A/R
58–6510	Foot Pad – R.H.	3	2	1
58–6520	Decal – Grease	22	16	3
58–6520	Decal – Grease	23	21	1
58–6520	Decal – Grease	33	43	2
58–6530	Decal – Hydraulic Oil	15	23	1
58–6540	Decal – Operator Warning	7	32	1
58–6560	Panel – Side, Control	9	30	1
58–6580	Fitting	7	11	5
58–6620	Foot Pad – L.H.	3	8	1
58–6630	Foot Pad – Center	3	5	1
58–6670	Hose Assembly	63	27	1
58–6670	Hose Assembly	64	27	1
58–6680	Panel – Test Ports	7	6	1
58–6700	Washer	13	24	3
58–6710	Plug Assembly	13	6	3
58–6720	O–Ring	13	7	3
58–6730	Spring	13	25	3
58–6750	O–Ring	13	15	1
58–6760	Spring	13	3	3
58–6770	Detent Plunger	13	4	3
58–6780	Plug Assembly	13	1	3
58–6790	O–Ring	13	5	3
58–6800	Filler Cap Assembly	15	*	1
58–6820	Gasket	15	17	2
58–6860	Connector	68	28	1
58–6940	Decal – Coolant Only	18	1	1
58–7030	Cable – Brake	9	13	1
58–7070	Spacer	18	23	2
58–7190	Spring	10	12	1
58–7270	Bar – Clamp	3	13	1
58–7390	Foot Rest Assembly	3	4	1
58–7730	Tube Assembly	63	7	1
58–7730	Tube Assembly	64	7	1
58–7740	Tube Assembly	65	38	1
58–7740	Tube Assembly	66	38	1
58–7750	Tube Assembly	59	38	1
58–7750	Tube Assembly	60	38	1
58–7760	Tube Assembly	59	40	1
58–7760	Tube Assembly	60	40	1
58–7770	Tube Assembly	59	39	1
58–7770	Tube Assembly	60	39	1
58–7780	Tube Assembly	59	37	1
58–7780	Tube Assembly	60	37	1
58–7800	Lever Pump	1	28	1
58–9010	Block	1	24	1
58–9160	Drain Plug Assembly	7	47	1
58–9210	Cam	27	42	2
58–9580	Foot Rest	1	1	1
58–9630	Sleeve – Protector	27	48	2
58–9830	Plate – Seat	15	31	1
59–81 20	O–Ring	12	33	1
59–6730	Race – Bearing	6	6	2
59–6740	Bearing – Needle, Thrust	6	7	1
59–6820	Kit – Centering Spring	6	10	1
59–6830	Kit – Pin, Centering	6	19	1
59–6860	Drive	6	14	1
59–6870	Gerotor	6	15	1
59–6890	Cap – End	6	16	1
59–6900	Screw – Cap	6	18	7
59–7130	Knob	10	33	1
59–7140	Bumper	24	9	1
59–7140	Bumper	27	47	2
59–7190	Sleeve – Protective	65	5	4
59–7200	Sleeve – Protective	65	32	1
59–7220	Switch – Glow Plug	8	14	1
59–7240	Throttle Assembly	9	4	1
59–7260	Sleeve – Protective	65	6	2
59–7280	Foot Pad – Traction	3	1	1
59–7290	Decal – Hyd. Fill	7	20	1
59–7410	Fitting – Diagnostic	7	9	5
59–7410	Fitting – Diagnostic	11	62	1
59–7580	Nut	58	1	8
59–7590	Washer – Lock	58	2	8
59–7600	Plug Assembly	14	1	2
59–7610	O–Ring	14	2	2
59–7640	O–Ring	14	5	1
59–7650	O–Ring	14	6	1
59–7670	Metering Stem	14	8	1
59–7680	Pin – Groove	14	9	1
59–7690	Shim	14	10	A/R
59–7700	Shim	14	11	A/R
59–7710	Shim	14	12	A/R
59–7720	Shim	14	13	A/R
59–7740	Plug – Metering	14	16	1
59–7750	Shim	14	17	A/R
59–7760	Shim	14	18	A/R
59–7770	Spring	14	19	1
59–7780	O–Ring	25	7	2
59–7780	O–Ring	14	14	1
59–7780	O–Ring	12	32	1
59–7810	Circlip	25	1	2
59–7820	Washer	25	2	2
59–7840	Spring	25	4	1
59–7850	Wiper	25	5	2
59–7860	Backup Washer	25	6	2
59–7860	Washer – Backup	12	6	1
59–7890	Seal Kit	25	*	1
59–7910	Grommet	10	35	1
59–7930	Decal	70	2	1
59–7950	Switch – Cold Start	42	10	1
59–7960	Decal – Latch	3	6	1
59–7970	Stud	58	3	8
59–7990	Seal – Gland	58	5	2
59–8040	Spring	12	29	1
59–8050	Spring – Detent	12	10	2
59–8060	Plug – Detent	12	9	1
59–8070	Washer – Lock	12	23	2
59–8080	Washer – Deep	12	30	1
59–8100	Washer – Shallow	12	27	1
59–8140	O–Ring	12	3	1
59–8150	Pawl – Detent	12	11	3
59–8160	Plug	12	4	1
59–8170	Washer – Wire	12	28	1
59–8180	Washer	12	31	1
59–8190	Wiper	12	34	1
59–8230	Plug	12	16	1
59–8250	Kit – Seal	12	*	1
59–8260	O–Ring	30	6	1
59–8270	Back Plate Assembly	30	5	1
59–8280	Screw – Cap Hex. Hd.	30	2	3
59–8290	Screw – Cap Hex. Hd.	30	1	3
59–8300	Housing Assembly	30	17	1
59–8320	Ring – Retaining	69	12	1
59–8340	Rotating Assembly	30	19	1
59–8350	Camplate Assembly	30	18	1
59–8360	Shaft – Drive	30	10	1
59–8370	Seal – Shaft	30	11	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
59-8380	Key	30	8	1
59-8390	Kit – Seal Repair	30	*	1
59-8420	O-Ring	69	5	2
59-8440	Decal – Warning	19	10	1
59-8470	Retainer – Seal	58	6	2
59-8500	Drive Gear – Spline	58	10	1
59-8540	Coupling	58	14	1
59-8550	O-Ring	54	10	1
59-8570	Seal – Shaft	58	17	1
59-8580	Ring – Retaining	58	18	1
59-8590	Seal – Shaft	58	9	1
59-8600	Driven Gear	58	11	1
60-0050	Spring	15	24	1
60-0080	Bushing – Flanged	27	43	2
60-0090	Pin – #1 Lift Arm Pivot	27	17	1
60-0090	Pin – Lift Arm, Pivot	23	17	2
60-0100	Pin – #4 & 5 Lift Arm Pivot	27	21	2
60-0160	Pin – Roller Rear	22	24	2
60-0190	Retainer	23	20	1
60-0190	Retainer – #1 & 4 Pivot Pin	27	18	1
60-0300	Rod	24	11	1
60-0440	A-Frame	26	10	1
60-0550	Bushing	10	23	1
60-0600	Bracket	2	47	1
60-0670	Spring – Compression	23	11	2
60-0730	Bracket – Lock, Neutral	2	35	1
60-0760	Clevis	2	42	1
60-0790	Grommet	4	27	1
60-0930	Clip	19	5	2
60-0930	Clip	68	5	3
60-1010	Lug – Angle	37	22	1
60-1050	Bracket	27	15	2
60-1110	Bushing	2	48	2
60-1130	Lever	1	10	1
60-1240	Spring	22	6	2
60-1250	Hose Assembly	59	19	1
60-1250	Hose Assembly	60	19	1
60-1250	Hose Assembly	65	41	2
60-1250	Hose Assembly	66	41	2
60-1280	Pin – Roll	27	27	3
60-1280	Pin – Roll	26	14	2
60-1340	Rod – Push RH	27	45	1
60-1350	Rod – Push LH	27	*	1
60-1360	Clamp	59	24	1
60-1360	Clamp – Tube	63	36	3
60-1630	Hose Assembly	63	25	1
60-1630	Hose Assembly	64	25	1
60-1640	Retainer – #5 Pivot Pin	27	*	1
60-1740	Nut – Spring	29	36	4
60-1750	Lever – R.H.	23	3	1
60-1780	Lever – L.H.	23	8	1
60-1820	Shaft – Pivot	23	6	1
60-1900	Tube Assembly	59	8	1
60-1900	Tube Assembly	60	8	1
60-1990	Bushing – Flange	23	4	2
60-2000	Pin – Dowel	23	2	6
60-2010	Sleeve – Protective	59	10	1
60-2020	Shield – Heat	7	40	1
60-2080	Clamp – Hose	65	25	1
60-2080	Clamp – Hose	22	34	1
60-2110	Pin – Roll	1	5	5
60-2110	Pin – Roll	22	25	8
60-2110	Pin – Spirol	10	36	2
60-2140	Spring	9	23	2
60-2160	Wire – Retaining	15	3	1
60-2170	Screw – Pan Hd.	8	21	2
60-2180	Fitting – Tee	63	22	1
60-2780	Tube – Drain	47	38	1
60-3060	Washer	49	2	8
60-3060	Washer	48	12	1
60-3070	Valve – Pressure	49	1	1
60-3090	Banjo	49	3	4
60-3100	Valve – Pressure	49	9	1
60-3110	Washer	49	10	1
60-3120	Nut	49	7	4
60-3130	Plate – Clamping	49	8	1
60-3140	Spring	49	12	1
60-3140	Spring	48	15	1
60-3150	Ring – Sealing	49	13	1
60-3150	Sealing Ring	48	14	1
60-3160	Solenoid	49	11	1
60-3160	Solenoid	48	13	1
60-3250	Washer – Rubber	26	7	1
60-3260	Screw	4	10	1
60-3340	Hose Assembly	65	36	1
60-3340	Hose Assembly	66	36	1
60-3380	Bearing	30	16	1
60-3520	O-Ring	54	27	1
60-3530	Bolt	54	33	2
60-3540	Washer	54	32	2
60-3590	Bearing	30	7	1
60-3610	Ring – Snap	28	6	1
60-3620	Seal	28	5	1
60-3630	Wiper	28	4	1
60-3650	Washer	28	2	1
60-3660	Screw – Bleed	28	1	1
60-3670	Pin – Roll	33	46	1
60-3680	Hose – Overflow	19	6	1
60-3720	Pin – Roll	22	2	2
60-3780	Kit – Seal	13	*	1
60-3800	Coupling	31	1	1
60-3810	Shaft – Input	31	2	1
60-3820	Spindle	31	3	1
60-3830	Seal – Oil	31	4	1
60-3840	Cone – Bearing	31	5	1
60-3850	Cup – Bearing	31	6	2
60-3860	Bolt – Wheel	31	7	9
60-3870	Hub	31	8	1
60-3880	Cone – Bearing	31	9	1
60-3890	Bolt – Hex. Hd.	31	10	6
60-3900	Gear – Ring	31	24	1
60-3910	Washer – Flat	31	11	6
60-3930	Ring – Retaining	31	29	1
60-3940	Washer	31	26	2
60-3950	Spring – Disengage	31	27	1
60-3960	Primary Carrier Assembly	31	15	1
60-3970	Gear – Primary Sun	31	13	1
60-3980	Washer – Thrust	31	12	1
60-3990	Washer – Thrust	31	23	1
60-4000	Secondary Carrier Assembly	31	20	1
60-4010	Plunger – Disengage	31	22	1
60-4020	O-Ring	31	21	1
60-4030	Bolt – Hex Hd.	31	17	8
60-4040	Plug – Pipe	31	16	1
60-4050	Cover – Large	31	19	1
60-4060	Cover – Disengage	31	18	1
60-4070	Bolt – Hex. Hd.	31	14	2
60-4120	Pin – Tow Bar	70	7	1
60-4150	Pin – Retaining	70	3	1
60-4190	Grass Shield – L.H.	22	30	1
60-4200	Grass Shield – R.H.	22	31	1
60-4480	Shackle Assembly	70	8	1
60-4540	Bolt	37	14	1
60-4550	Switch – Micro	12	19	1
60-5000	Bracket	46	1	1
60-5010	Fuel Filter Assembly	46	2	1
60-5020	Clip	46	27	4
60-5030	Wrap – Spiral	46	5	2
60-5040	Hose – Fuel Feed	47	37	1
60-5070	Pipe – Fuel	47	30	1
60-5090	Clamp – Lower	46	18	2
60-5100	Injection Pump Assembly	47	31	1
60-5150	Hose – Rubber	46	20	1
60-5160	Clip	46	21	3
60-5170	Connector	46	22	1
60-5180	Clip	46	26	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
60–5210	Clamp – Upper	46	23	2
60–5220	Nut	41	2	1
60–5330	Pulley Assembly	53	2	1
60–5340	Front Cover Assembly	53	7	1
60–5350	Bearing	53	8	1
60–5360	Bearing	53	11	1
60–5421	Alternator	51	3	1
60–5430	O–Ring	51	14	1
60–5450	Plug – Air	50	3	1
60–5470	Filter Element Assembly	50	4	1
60–5480	Sensor – Water	50	6	1
60–5490	Kit – Drain Plug	50	8	1
60–5580	Switch – Temperature	15	19	1
60–5590	Switch – Temp.	40	21	1
60–5650	Sleeve – Protective	65	24	1
60–5660	Sleeve – Protective	65	26	1
60–5690	Clip – Safety	10	5	3
60–5700	Spring	1	23	2
60–5710	Plug	55	6	1
60–5720	O–Ring	55	2	2
60–5720	O–Ring	13	9	6
60–5730	Disc	55	8	A/R
60–5740	Body Assembly	55	21	1
60–5760	Pin – Dowel	55	4	4
60–5770	Idler Gear Assembly	55	10	1
60–5780	Drive Gear Assembly	55	7	1
60–5790	Spring	55	23	1
60–5800	Seat	55	31	1
60–5810	Plug – Seat	55	29	1
60–5820	Spring	55	9	1
60–5830	Washer	55	25	A/R
60–5840	Washer	55	26	A/R
60–5850	Washer	55	27	A/R
60–5860	Plug	55	1	1
60–5870	Plug Assembly	55	28	1
60–5880	O–Ring	55	24	1
60–5890	Washer	55	13	1
60–5890	Washer – Backup	69	14	1
60–5900	Kit – Seal Repair	55	*	1
60–5910	Kit – Repair, Back Plate	55	*	1
60–5950	Washer – Backup	14	7	1
60–5950	Washer – Backup	57	46	2
60–5980	O–Ring	56	33	2
60–5990	Race – Inner	56	20	1
60–6000	Housing Assembly	56	19	1
60–6010	Cover – Trunion	56	23	1
60–6020	Camplate	56	14	1
60–6030	Rotating Kit Assembly	56	12	1
60–6040	Back Plate Assembly	56	9	1
60–6050	Bearing	57	48	1
60–6060	Cartridge	56	37	1
60–6070	Poppet	56	40	1
60–6080	O–Ring	56	38	1
60–6090	Spring	56	39	1
60–6110	Bearing – Needle	56	18	2
60–6120	Cover – Seal	56	15	1
60–6130	Gasket – Housing	56	10	1
60–6140	Shaft – Drive	56	31	1
60–6150	Bearing	57	47	1
60–6160	Race – Thrust	56	29	2
60–6170	Bearing – Needle, Thrust	56	30	1
60–6180	O–Ring	56	5	1
60–6190	O–Ring	56	21	1
60–6200	Charge Pump Adptr. Assy.	56	2	1
60–6210	Cover – O–Ring	56	22	1
60–6220	Screw – Cap Hex. Hd.	56	36	2
60–6230	Screw – Cap Hex. Hd.	56	1	2
60–6240	Washer	56	27	1
60–6250	Washer	56	17	2
60–6260	Ring – Retaining	56	25	1
60–6270	Ring – Retaining	56	28	2
60–6300	Seal – Shaft	56	26	1
60–6310	Key	56	13	1
60–6320	Key	56	35	1
60–6330	Screw	56	24	4
60–6340	Kit – Bleed–Off Valve	57	*	1
60–6350	Gerotor Gear Assembly	56	7	1
60–6360	Kit – Charge Relief Spring	57	*	1
60–6370	Pin – Dowel	56	11	2
60–6400	Kit – Seal	57	*	1
60–6440	Eyelet	13	32	3
60–6450	Disc	13	2	A/R
60–6540	Bolt	1	25	1
60–6650	Bolt	11	60	2
60–6650	Screw – Cap Hex. Hd.	63	16	2
60–6660	Nut – Hex	22	7	2
60–6740	Washer	2	38	3
60–6870	Bolt	22	18	3
60–6870	Bolt	37	21	4
60–6990	Washer	29	19	18
60–6990	Washer	1	29	1
60–7040	Bolt	39	4	1
60–7040	Bolt	45	10	2
60–7050	Bolt	46	4	2
60–7050	Bolt	39	7	8
60–7060	O–Ring	39	6	1
60–7110	Bolt	41	5	2
60–7110	Bolt	44	12	16
60–7110	Bolt	38	17	2
60–7110	Bolt	43	37	2
60–7110	Screw – Cap Hex. Hd.	40	46	2
60–7120	Nut	39	16	3
60–7120	Nut	47	32	3
60–7150	Stud	39	13	3
60–7160	Rivet	39	24	2
60–7170	Pointer	39	30	1
60–7180	Bolt	39	28	1
60–7190	Gasket	47	35	1
60–7200	Plate – Flange	39	11	1
60–7210	Bolt	39	21	1
60–7260	Nut – Hex	48	11	1
60–7280	Bolt	45	1	8
60–7280	Bolt	38	16	2
60–7290	Bolt	46	25	2
60–7290	Bolt	43	29	4
60–7300	Bolt	45	11	2
60–7310	Bolt	38	35	1
60–7360	Bolt	44	19	1
60–7370	Bolt	43	4	5
60–7370	Bolt	51	7	1
60–7370	Bolt	44	17	2
60–7430	Oil Seal Assembly	41	13	1
60–7480	Bolt	41	10	7
60–7490	Bolt	41	12	8
61–3610	Decal	26	32	2
61–3610	Decal	27	52	3
62–6290	Decal – Lift Lever	7	26	1
62–6300	Sleeve Assembly	20	10	1
62–6320	Screw – Brass	40	33	1
62–6370	Kit – Seal	28	*	1
62–6410	Primary Carrier Assembly	31	*	1
62–6420	Secondary Carrier Assembly	31	*	1
62–6430	Gear – Primary Sun	31	*	1
62–6440	Foot Pad	3	3	1
62–6450	Kit – Retaining Ring	31	28	1
62–6460	Tube – RW Sealant	31	*	1
62–7400	Decal – Toro	2	46	1
62–7650	Gasket – Fuel Sender	21	9	1
63–4380	Decal – Instruction	70	2	2
63–4390	Bearing – Needle	56	6	1
63–4440	O–Ring	12	5	1
63–4480	Tire (Model 03704)	29	26	2
63–4510	Spring	12	15	1
63–4520	Kit – Seal	14	*	1
63–4530	Decal – Ground Speed	4	*	1
63–4540	Decal – Ground Speed	4	20	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
63–4560	Spring	48	2	1
63–4570	Lever	48	3	1
63–4580	Nut	48	4	2
63–4590	Screw – Vent	48	5	1
63–4600	Body – Screw Vent	48	6	1
63–4610	Washer	48	7	3
63–4620	Washer	48	8	4
63–4630	Key	48	9	1
63–4640	Washer – Lock	48	10	1
63–4650	Washer	49	6	2
63–4660	Washer	49	5	4
63–4670	Valve – Pressure	49	4	2
63–4680	Tube Assembly	63	8	1
63–4680	Tube Assembly	64	8	1
63–4690	Bracket – Valve	11	67	1
63–4700	Valve – Flow Regulator	11	72	1
63–4701	Valve – Flow Regulator	11	*	1
63–4710	Tube Assembly	65	37	1
63–4710	Tube Assembly	66	37	1
63–4740	Bolt –Cylinder Head	42	33	2
63–4780	Valve – Relief	12	8	1
63–4800	Valve – Control	10	9	1
63–4820	Detent – Block	12	25	1
63–4830	Screw – Cap Hd.	12	22	2
63–4840	Spool – Screw	12	26	1
63–4850	Plunger	12	18	1
63–4860	Circlip	12	14	1
63–7430	Gauge – Temperature	8	5	1
63–7590	Relay	5	10	1
63–7640	Sender – Fuel	21	8	1
63–8360	Key – Ignition	8	8	2
63–8410	Washer – Flat	21	25	2
65–5870	Tube – Manual	15	11	1
65–5890	Cap – Tube	15	8	2
66–2940	Gauge – Fuel	8	6	1
66–2950	Hourmeter	8	7	1
66–3160	Bolt	2	44	11
66–3160	Screw – Cap Hex. Hd.	15	2	6
66–5410	Orifice	10	41	1
66–5420	Sleeve	12	17	1
66–5430	Screw – Machine	12	21	2
66–5440	Nut – Lock	12	12	2
66–5560	Bolt – U	61	23	1
66–5580	Kit – Seal Repair	11	*	1
66–5590	Kit – Seal	11	*	1
66–5690	Kit – Seal Repair	69	*	1
66–5700	Reel Motor Assembly	69	*	1
66–5710	Seal – Shaft	69	13	1
66–5720	Housing/Bushings Assembly	69	1	1
66–5730	Plate & Bushings Assembly	69	8	1
66–5740	Body	69	6	1
66–5750	Gear – Idler	69	2	1
66–5760	Gear – Drive	69	3	1
66–5770	Screw – Cap Soc. Hd.	69	9	8
66–5840	Kit – Seal Repair	30	*	1
66–5860	Adapter – 45°	11	55	1
66–6140	Decal – TORO	21	16	1
68–6030	Bolt	40	26	2
68–6040	Bracket – Latch	18	26	2
68–6150	Breather	7	15	1
68–6230	Tube Kit	63	6	1
68–6230	Tube Kit	64	6	1
68–6270	Tube Kit	63	21	1
68–6270	Tube Kit	64	21	1
68–6310	Tube Kit	59	29	1
68–6310	Tube Kit	60	29	1
68–6340	Tube Kit	59	30	1
68–6340	Tube Kit	60	30	1
68–6370	Tube Kit	63	13	1
68–6370	Tube Kit	64	13	1
68–6400	Oil Pan Assembly	44	15	1
68–6410	Gasket	44	9	1
68–6420	Plug	44	11	1
68–6430	Gasket	44	10	1
68–6440	Dipstick	44	14	1
68–6460	Kit – Relief Valve	56	32	2
68–6480	Bushing	26	2	4
68–6480	Bushing	27	23	6
68–7575	Strip – Sealing	19	12	3
68–7810	Panel – Lining	7	48	1
68–7840	Strip – Foam	7	33	1
68–7850	Strip – Foam	15	26	1
68–8080	Wheel – Steering	4	3	1
69–1830	Plug Assembly	13	14	1
69–1940	Indicator – Electrical	45	12	1
69–4780	Clamp – Gauge	5	15	2
69–6470	Bushing – Flange	32	22	4
69–8890	Cap – Spindle	32	19	2
69–9550	Plate – Pump Adapter	37	17	1
69–9740	Switch	62	44	1
69–9810	Ball Joint Assembly	32	8	1
69–9880	Tire	32	27	2
70–1240	Plug Assembly	56	3	2
70–2860	Bolt	39	1	4
70–2990	Washer	39	14	3
70–8290	Washer – Sealing	6	17	7
71–4200	Cluster – Warning Lights	5	2	1
71–4210	Cluster – Warning Lights	5	1	1
72–0090	Cap – Fuel	21	13	1
72–0130	Button – Horn	4	1	1
72–0140	Gasket	46	6	4
72–0150	Nozzle Assembly	46	*	4
72–0160	Nozzle Tip Assembly	46	7	4
72–0170	Pipe – Injector No. 1	47	29	1
72–0180	Pipe – Injector No. 2	46	16	1
72–0190	Pipe – Injector No.3	46	28	1
72–0200	Pipe – Injector No. 4	46	19	1
72–0210	Pipe – Fuel Leak–Off	46	17	1
72–0270	Nut – Retaining	46	8	4
72–0280	Spacer	46	9	4
72–0290	Pin – Pressure	46	10	4
72–0300	Spring – Pressure	46	11	4
72–0310	Nut	46	15	4
72–0320	Nozzle – Body	46	13	4
72–0330	Packing	46	14	4
72–9760	Switch – Override	8	19	1
74–2710	Clamp – Split	65	22	4
74–2720	Valve – Steering	4	6	1
74–2730	Spacer	65	44	4
74–2750	Retainer	65	21	2
74–2780	Tube Assembly	59	32	1
74–2780	Tube Assembly	60	32	1
74–2790	Tube Assembly	59	36	1
74–2790	Tube Assembly	60	36	1
74–2810	Tube Assembly	59	35	1
74–2810	Tube Assembly	60	35	1
74–2820	Tube Assembly	59	28	1
74–2820	Tube Assembly	60	28	1
74–2920	Carrier – Front	23	7	1
74–3090	Spring	6	20	2
74–3100	Plate – Spacer	6	13	1
74–3130	Plug – Retainer	6	21	2
74–3140	Ball – Check	6	22	2
74–3150	Plug – Metering	14	16	1
74–3170	Linkage – Cross Cut Control	11	74	1
74–3190	Lever – Lift	10	2	3
74–3210	Stud	58	*	8
74–3230	Drive Gear – Spline	58	*	1
74–3240	Driven Gear	58	11	1
74–9100	Pad – Forward	1	3	1
74–9110	Pad – Reverse	1	4	1
75–6700	Sensor – Magnetic	29	45	1
75–7790	Handle	19	15	2
75–8200	Hose Assembly	59	2	1
75–8200	Hose Assembly	60	2	1
75–8210	Hose Assembly	59	7	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
75–8210	Hose Assembly	60	7	1
76–2290	Spacer	19	19	2
76–3280	Pedal – Traction	1	2	1
76–3330	Spacer	2	62	1
76–3340	Link	2	61	1
76–3350	Spacer	2	53	1
76–3370	Bushing	2	58	1
76–3430	Rod	2	54	1
76–3470	Tube – Exhaust	22	8	1
76–3560	Clamp – Exhaust	22	41	1
76–8750	Plate – Caution	19	27	1
77–3620	Knob – Retainer	18	10	2
77–4830	Decal	4	5	1
77–4840	Speedometer	8	4	1
80–3330	Gasket	20	13	1
80–9330	Alarm – Audio	5	6	1
82–2710	Screw	16	35	1
82–2720	Frame – Seat	16	23	1
82–2730	Kit – Wear Parts	16	4	1
82–2740	Spring Set – Tension	16	5	1
82–2750	Spindle Adj. Assembly	16	34	1
82–2760	Kit – Bushing	16	41	1
82–2770	Shock Absorber Assembly	16	38	1
82–2790	Rail – Adjust. R.H.	16	21	1
82–2800	Cushion – Backrest	16	12	1
82–2810	Switch Assembly	16	25	1
82–2820	Swing Arm Assembly	16	20	1
82–2830	Clamp	16	37	2
82–2840	Cushion – Bottom	16	15	1
82–2850	Plate	16	1	1
82–2860	Spring Set – Tension	16	33	1
82–2870	Lever – Adjust	16	7	1
82–2880	Weight Adj. Assembly	16	*	1
82–3110	Sender – Temp.	40	22	1
82–4910	Roller	22	22	8
82–5730	Rod Tie, End	35	17	1
82–5740	Nut – Jam	35	16	1
82–5750	Nut – Lock	35	14	1
82–5760	Piston	35	13	1
82–5770	Rod	35	3	1
82–5780	Cap – Threaded	35	2	1
82–5790	Head – Cap	35	6	1
82–5800	Kit – Repair, Seal	35	*	1
82–5890	Panel – Display	4	26	1
82–5930	Wire – Jumper	67	6	1
82–5940	Wire – Jumper	67	4	1
82–8700	Ring – Retaining	31	25	2
82–9210	Shaft – Pivot	33	45	1
82–9230	Harness – Wire	67	1	2
82–9250	Stud – Threaded	23	1	2
82–9260	Tie Rod Assembly	33	38	1
82–9270	Disc – 27 Hole	29	*	1
82–9280	Disc – 22 Hole	29	42	1
82–9310	Panel – Display	4	25	1
82–9330	Bracket – Sensor	29	4	1
82–9340	Switch – Oil Level	15	10	1
82–9360	Rod – Latch	23	13	2
82–9370	Pad – Step	23	9	1
82–9540	Lift Arm No. 1	27	41	1
82–9550	No. 2 Lift Arm	26	12	1
82–9560	No. 3 Lift Arm	26	1	1
82–9570	Lift Arm No. 4	27	24	1
82–9580	Lift Arm No. 5	27	*	1
82–9600	Decal – Side Panel RH	21	*	1
82–9610	Decal – Side Panel LH	21	48	1
82–9620	Washer – Spring	16	26	2
82–9630	Nut	16	27	2
82–9640	Screw	16	24	2
82–9650	Nut	16	19	4
82–9660	Washer	16	18	4
82–9670	Nut	16	39	1
82–9680	Rivet	16	2	2
82–9690	Screw	16	17	4
82–9700	Screw	16	3	1
82–9710	Trim – Bottom	16	22	1
82–9720	Trim – Backrest	16	32	1
82–9730	Wire – Jumper	67	5	2
82–9740	Wire – Jumper	67	7	1
82–9750	Jumper Assembly	68	18	1
82–9760	Harness – Wiring Gauges	68	7	1
82–9770	Harness – Wire	67	8	1
82–9780	Harness – Wire	67	3	1
82–9790	Harness – Wiring Valve	68	9	1
82–9800	Harness – Wire	68	14	1
82–9810	Harness – Wiring Traction	68	10	1
82–9820	Harness – Wire	67	2	1
82–9840	Hose Assembly	59	16	1
82–9840	Hose Assembly	60	16	1
82–9841	Hose Assembly	59	11	1
82–9841	Hose Assembly	60	11	1
82–9940	Harness – Wire Horn	68	12	1
84–6200	Valve – Lift Control	10	15	1
84–6210	Hydraulic Cylinder Assembly	27	28	3
84–6210	Hydraulic Cylinder Assembly	26	31	2
84–6230	Hose Assembly	63	33	1
84–6230	Hose Assembly	64	33	1
84–6240	Hose Assembly	63	4	1
84–6240	Hose Assembly	64	4	1
84–6400	Orifice – .047 Dia.	13	39	2
84–6401	Orifice – .052 Dia.	13	40	1
84–6420	Plunger	13	37	2
84–6430	Plunger	13	29	1
84–6440	Shield – Grass	30	20	1
84–6450	Spring	13	19	1
84–6470	Bracket – Filter	9	32	1
84–6480	Plate – Decal	23	24	1
86–5480	Fitting – Diagnostic	54	2	1
86–5990	Harness – Hyd. Filter	67	9	1
86–6000	Gear Pump Assembly	54	15	1
86–6001	Gear Pump Assembly	54	15	1
86–6010	Cover – Front	58	4	1
86–6020	Center S/A Section	58	8	1
86–6030	Port Section – Rear	58	13	1
86–6040	O–Ring	58	15	1
86–6050	Plug	58	16	1
86–6060	Center S/A Section	58	*	1
86–6070	Plate – Wear	58	7	2
86–6080	O–Ring Seal	58	12	2
86–6090	Hydraulic Oil Filter Assembly	9	22	1
86–6100	Switch – Filter Warning	9	21	1
86–6110	Element Assembly	9	11	1
86–6120	Decal – Towing	23	15	1
86–6130	Stud – Ball	18	12	4
86–6200	Guide – Valve	42	14	8
86–6210	Retainer – Upper	43	42	8
86–6220	Tappet	43	39	8
86–6230	Bolt	38	29	6
86–6240	Plug – Taper	38	28	3
86–6250	Plate – Front	38	36	1
86–6260	Case – Timing Gear	39	23	1
86–6270	Gasket	41	24	1
86–6280	Crankshaft Assembly	41	25	1
86–6290	Idler Gear Assembly	39	9	1
86–6300	Bushing	39	18	1
86–6310	Gear – Injector Pump	39	15	1
86–6320	Shaft	40	12	1
86–6330	Pipe	40	17	1
86–6340	Impeller	40	19	1
86–6350	Ring – Retaining	40	43	1
86–6360	Washer	40	42	1
86–6370	Spacer	40	41	1
86–6380	Washer	47	34	3
86–6390	Stud	47	36	3
86–6400	Diode	51	21	1
86–6400	Diode	68	24	1
86–6430	Rear Cover Assembly	53	12	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
86–6440	Rectifier Assembly	53	13	1
86–6450	Kit – Seal	58	*	1
86–6460	Bracket – Control Block	62	40	1
86–6470	Decal – RM4500D	18	31	2
86–6490	Decal – 4wd RH	7	*	1
86–6520	Switch – Temp. Warning	42	1	1
86–6560	Washer – Thrust	32	24	2
86–6570	Lever	22	20	1
86–6580	Lever – RH	22	45	1
86–6590	Lever – LH	22	28	1
86–6610	Bolt – Inlet	49	18	1
86–6620	Bolt	49	16	1
86–6630	Seal – Rubber	49	15	1
86–6640	Seal O–Ring	49	14	1
86–6650	Bolt – Outlet	48	16	1
86–6660	Joint	49	17	1
86–6670	Tube – Fuel	49	19	1
86–6680	Lever Assembly	48	*	1
86–6680	Nut	48	25	1
86–6690	Lever	48	19	1
86–6700	Bushing	48	18	1
86–6710	Arm	48	20	1
86–6720	Washer	48	22	1
86–6730	Spring	48	21	1
86–6740	Guide	48	23	1
86–6750	Washer	48	17	2
86–6760	Guide	48	1	1
86–6770	Screw	48	24	1
86–6790	Washer	48	26	1
86–6800	Bolt	48	28	1
86–6810	Pipe Assembly	48	29	1
86–6820	Bolt	48	27	2
88–6760	Spring – Gas	18	17	2
92–2950	Spacer	22	47	1
92–2951	Rail – Adjust. L.H.	16	16	1
92–2961	Fan	40	4	1
92–2982	Control Block Assembly	61	29	1
92–2986	Engine – Complete	38	*	1
92–2987	R.O.P.S. Frame Assembly	17	17	1
92–3044	Clamp – Tube	22	46	2
92–4703	Lower Body Assembly	21	19	1
92–4712	Canopy – Front	18	32	1
92–4724	Hydraulic Motor Assembly	32	1	2
92–4725	Hose – Hydraulic	61	15	1
92–4725	Hose – Hydraulic	7	34	1
92–4726	Tube Assembly	61	18	1
92–4726	Tube Assembly	59	14	1
92–4726	Tube Assembly	60	14	1
92–4727	Tube – Hydraulic	62	42	1
92–4728	Tube – Hydraulic	61	19	1
92–4729	Radiator Assembly	19	20	1
92–4730	Plate – Floor	2	40	1
92–4731	Pipe – Intake	45	17	1
92–4740	Console – Center	7	7	1
92–4746	Fender – RH	7	38	1
92–4748	Fitting – Hydraulic Tee	61	21	2
92–4748	Fitting – Hydraulic Tee	59	55	1
92–4749	Hub – Wheel	32	26	2
92–4750	Bolt – Wheel	32	29	10
92–4751	Tube – Breather	7	16	1
92–4752	Hose – Intake	45	19	1
92–4752	Hose – Intake	19	25	1
92–4753	Strap – Oil Cooler	19	14	2
92–4754	Bracket – Cable	45	13	1
92–4754	Bracket – Cable	9	43	1
92–4755	Axle – Rear	32	23	1
92–4760	Spacer – Fan	40	44	1
92–4761	Chassis	22	29	1
92–4766	Hose – Fuel	21	1	2
92–4779	Housing – Motor LH	32	25	1
92–4787	Housing – Motor RH	32	*	1
92–4790	Tank – Fuel	21	15	1
92–4792	Canopy – Center	18	43	1
92–4793	Screen – Rear	18	6	1
92–4795	Hose – Radiator Lower	19	3	1
92–4796	Hose – Radiator Upper	19	7	1
92–4797	Hose – Fuel Fill	21	14	1
92–4798	Shroud – Fan	19	24	1
92–4799	Fitting – Hydraulic Tee	61	17	1
92–4799	Fitting – Hydraulic Tee	7	42	1
92–4799	Fitting – Hydraulic Tee	54	4	1
92–5253	Strip – Sealing	18	7	1
92–5254	Clutch – Fan	40	3	1
92–5256	Bushing – Universal	8	27	2
92–5257	Plate	8	28	1
92–5258	Shield – Glow Plug Indicator	8	29	1
92–5259	Piston Std.	42	19	4
92–5260	Piston .05 0.25mm	42	*	4
92–5261	Piston .05 0.5mm	42	*	4
92–5262	Piston Ring Set Std.	42	17	1
92–5263	Piston Ring Set 0.5. 0.25mm	42	*	1
92–5264	Piston Ring Set 0.5. 0.50mm	42	*	1
92–5265	Jet – Combustion Std.	42	29	4
92–5266	Gasket – Cylinder Head	42	30	1
92–5267	Cylinder Head Assembly	42	31	1
92–5268	Engine Gasket Kit	38	*	1
92–5269	Bellows	21	37	1
92–5270	Baffle – Lower Body	18	18	1
92–5273	Muffler	22	11	1
92–5652	Bracket – Gas Spring	18	38	2
92–5653	Ring – Clamp	21	36	1
92–5654	Panel – Clean–Out	21	34	1
92–5655	Spacer	18	2	2
92–5656	Plate – Face, Instrument	8	3	1
92–5657	Panel – Instrument	8	11	1
92–5659	Hydraulic Tube Assembly	36	18	1
92–5660	Hydraulic Tube Assembly	36	19	1
92–5661	Hydraulic Tube Assembly	36	21	1
92–5662	Hose – Hydraulic	36	12	2
92–5662	Hose – Hydraulic	33	48	2
92–5663	Hose – Hydraulic	32	7	2
92–5663	Hose – Hydraulic	36	14	2
92–5664	Hose – Hydraulic	36	13	2
92–5664	Hose – Hydraulic	33	47	2
92–5665	Hose – Hydraulic	36	11	1
92–5666	Bracket – Bulkhead	36	17	1
92–5669	Harness – Switch	62	43	1
92–5670	Strip – Sealing	21	18	2
92–5671	Strip – Sealing	21	17	1
92–5672	Support – Foam Top/Side	18	35	1
92–5673	Support – Foam Front	18	33	1
92–5674	Neck – Fuel Fill	21	12	1
92–5675	Grommet	21	11	1
92–5677	Tube Assembly	61	20	1
92–5677	Tube Assembly	59	54	1
92–5677	Tube Assembly	60	54	1
92–5678	Foam – Top	18	36	1
92–5679	Foam – Front	18	34	1
92–5680	Foam – Side RH	18	*	1
92–5681	Foam – Side LH	18	30	1
92–5682	Seal	7	23	1
92–5685	Harness – Wiring Main	68	17	1
92–5686	Hose – Hydraulic	36	6	1
92–5686	Hose – Hydraulic	61	14	1
92–5687	Hose – Hydraulic	61	30	
92–5688	Hose – Hydraulic	36	8	1
92–5688	Hose – Hydraulic	61	13	1
92–5689	Tube Assembly	61	6	1
92–5690	Tube Assembly	61	7	1
92–5691	Hose – Hydraulic	61	3	1
92–5692	Bolt – U	61	9	2
92–5693	Bracket – Bulkhead	61	8	1
92–5694	Hose – Hydraulic	7	35	1
92–5694	Hose Assembly	59	15	1
92–5694	Hose Assembly	60	15	1
92–5696	Fitting – Hydraulic 90°	61	25	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
92–5697	Screw – Hex. Socket Hd.	40	45	4
92–5698	Hose – Hydraulic	36	7	1
92–5698	Hose – Hydraulic	61	12	1
92–5699	Decal – 4wd LH	7	51	1
92–6050	Guard – Hose	17	6	1
92–6051	Bracket – Bumper	17	11	2
92–6052	Bumper – Rear	17	5	1
92–6057	Hydraulic Cylinder Assembly	32	12	1
92–6058	Fitting	29	44	2
92–6060	Strip – Sealing	18	39	1
92–6061	Standpipe	21	3	2
92–6062	Foam – Radiator Seal	19	13	1
92–6064	Clamp – R	21	44	2
92–6065	Shield	19	34	1
92–6068	Hose – Vent	21	45	1
92–6069	Shield – Exhaust	21	22	1
92–6075	Bolt	34	8	4
217–116	Rim	32	28	2
218–446	Nut – Switch	8	15	1
218–447	Washer – Lock, Switch	8	16	1
218–498	Nut – Hex.	5	12	2
218–498	Nut – Hex.	8	13	2
219–17	Bulb – Warning Light	5	*	8
2116–3	Joint – Ball LH	32	*	1
2116–4	Joint – Ball RH	32	34	1
232–27	Valve – Stem	32	32	2
233–10	Knob	10	19	1
233–25	Knob	9	15	1
233–39	Knob	10	1	3
237–21	O–Ring	29	1	2
237–21	O–Ring	10	11	1
237–21	O–Ring	7	27	5
237–22	O–Ring	63	3	31
237–22	O–Ring	29	6	2
237–22	O–Ring	4	9	4
237–22	O–Ring	59	12	22
237–22	O–Ring	54	18	4
237–22	O–Ring	26	27	2
237–22	O–Ring	10	30	15
237–22	O–Ring	27	38	3
237–22	Seal – O–Ring	36	2	9
237–22	Seal – O–Ring	61	4	6
237–22	Seal – O–Ring	32	10	4
237–22	Seal – O–Ring	7	39	2
237–30	O–Ring	54	23	1
237–30	O–Ring	54	35	1
237–30	O–Ring	59	50	1
237–30	Seal – O–Ring	32	6	4
237–30	Seal – O–Ring	36	23	8
237–30	Seal – O–Ring	63	39	1
237–42	O–Ring	63	1	7
237–42	O–Ring	54	3	1
237–42	O–Ring	29	8	2
237–42	O–Ring	7	10	5
237–42	O–Ring	26	25	2
237–42	O–Ring	10	32	11
237–42	O–Ring	11	61	1
237–42	O–Ring SAE	27	36	3
237–42	Seal – O–Ring	61	28	1
237–58	O–Ring	29	15	4
237–58	O–Ring	54	21	3
237–58	Seal – O–Ring	61	22	8
237–65	O–Ring	24	2	3
237–65	O–Ring	65	3	26
237–65	O–Ring	27	4	9
237–65	O–Ring	54	7	1
237–65	O–Ring	7	17	1
237–65	O–Ring	10	45	9
237–65	Seal – O–Ring	61	1	4
237–65	Seal – O–Ring	36	20	2
237–78	O–Ring	10	27	1
237–78	Seal – O–Ring	32	2	4
237–78	Seal – O–Ring	61	32	1
237–79	O–Ring	4	7	4
237–79	O–Ring	54	25	3
237–79	O–Ring	11	58	2
237–79	Seal – O–Ring	61	16	3
237–79	Seal – O–Ring	7	36	1
237–80	O–Ring	24	4	3
237–80	O–Ring	63	14	1
237–80	O–Ring	54	37	1
237–80	O–Ring	10	43	9
237–80	O–Ring	7	46	1
237–80	O–Ring SAE	27	6	6
237–80	Seal – O–Ring	32	3	4
237–80	Seal – O–Ring	61	26	3
237–81	O–Ring	65	1	10
237–81	O–Ring	54	9	3
237–81	O–Ring	29	13	4
237–100	Grommet	68	4	1
237–114	O–Ring	57	45	2
237–118	O–Ring	29	11	2
237–118	Seal – O–Ring	30	4	2
237–123	O–Ring	9	25	2
237–123	O–Ring	10	39	1
237–141	Grommet	18	27	4
237–146	O–Ring	54	29	1
240–9	Grommet	21	39	3
240–11	Grommet	21	24	2
2410–18	Plug	70	2	1
2411–44	Rod End – Ball Joint	2	52	1
2412–7	Clamp Assembly	32	36	2
2412–31	Clip	9	12	1
2412–42	Clamp – Hose	21	10	2
2412–42	Clamp – Hose	45	18	1
2412–42	Clamp – Hose	19	26	2
2412–74	Clamp–R	68	25	1
2412–92	Clamp – Hose	19	4	4
2412–102	R–Clamp	15	34	2
2412–106	Clamp – R	7	2	2
2412–108	Clamp – Hose	21	2	5
2412–109	Clip	68	3	1
2412–131	Clamp–R	68	21	3
2412–132	Clamp	22	13	1
2412–132	Clamp	59	18	1
250–1	Tie – Cable	68	2	4
252–66	Bearing – Thrust	30	15	1
252–71	Race – Thrust	30	14	1
256–304	Washer – Thrust	32	21	2
281–2	Plug Pipe	19	8	1
281–7	Plug	40	28	1
283–67	Pin – Clevis	29	38	4
302–5	Fitting – Grease	32	9	3
302–5	Fitting – Grease	23	16	2
302–5	Fitting – Grease	27	20	3
302–11	Fitting – Grease	33	44	1
302–33	Fitting – Grease	32	35	2
302–66	Fitting – Grease	12	24	1
304–46	Valve – Drain	19	35	1
321–2	Screw – Cap Hex. Hd.	21	21	9
321–3	Screw – Cap Hex Hd.	11	64	2
321–3	Screw – Cap Hex. Hd.	7	1	2
321–4	Screw – Cap Hex. Hd.	9	44	1
321–9	Screw – Cap Hex. Hd.	22	49	1
321–11	Screw– Cap Hex. Hd.	11	71	2
321–14	Screw – Cap Hex. Hd.	65	23	4
321–24	Screw – Cap Hex. Hd.	7	45	2
322–2	Screw – Cap Hex. Hd.	40	1	8
322–2	Screw – Cap Hex. Hd.	23	18	2
322–3	Screw – Cap Hex. Hd.	19	1	14
322–3	Screw – Cap Hex. Hd.	29	2	6
322–3	Screw – Cap Hex. Hd.	4	13	1
322–3	Screw – Cap Hex. Hd.	18	24	5
322–3	Screw – Cap Hex. Hd.	61	33	3
322–3	Screw – Cap Hex. Hd.	21	42	2
322–4	Screw – Cap Hex. Hd.	3	10	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
322–5	Screw – Cap Hex. Hd.	18	15	4
322–6	Bolt	9	29	2
322–6	Screw – Cap Hex. Hd.	62	41	1
322–9	Bolt	10	29	1
322–12	Bolt	27	1	4
322–12	Bolt	10	7	4
322–12	Screw – Cap Hex Hd.	24	1	2
323–4	Bolt	9	14	3
323–4	Screw – Cap Hex. Hd.	36	4	2
323–5	Screw – Cap Hex. Hd.	21	26	2
323–6	Bolt	27	11	2
323–6	Screw – Cap Hex. Hd.	37	29	4
323–7	Screw – Cap Hex. Hd.	37	28	4
323–8	Screw – Cap Hex. Hd.	4	23	4
323–13	Bolt	27	25	9
323–13	Bolt	26	34	6
323–18	Bolt	29	16	4
323–19	Screw – Cap Hex. Hd.	17	8	4
323–19	Screw – Cap Hex. Hd.	22	12	4
323–20	Bolt	29	27	4
324–5	Screw – Cap Hex. Hd.	17	4	2
325–2	Screw – Cap Hex. Hd.	23	22	2
325–5	Bolt	54	17	2
325–8	Screw – Cap Hex. Hd.	2	50	1
325–9	Bolt	1	12	1
325–12	Screw – Cap Hex. Hd.	17	14	6
325–17	Bolt	26	3	2
327–3	Bolt	29	20	16
3211–6	Screw – Cap Hex. Hd.	2	56	1
3213–2	Bolt	54	14	4
3213–20	Bolt	37	19	2
3217–5	Nut – Hex.	9	5	1
3217–5	Nut – Hex.	22	51	1
3217–5	Nut – Hex.	11	66	2
3217–6	Nut	4	11	1
3217–6	Nut – Hex.	61	37	4
3217–6	Nut – Hex	24	8	2
3217–6	Nut – Hex.	10	24	5
3217–6	Nut – Hex.	9	41	2
3217–6	Nut – Hex.	27	54	4
3217–7	Nut – Hex.	37	31	8
3217–9	Nut – Hex.	1	16	2
3217–29	Nut – Hex.	1	31	2
3219–5	Nut – Hex.	1	20	1
3219–5	Nut – Hex.	29	23	18
3220–11	Nut – Hex.	7	28	5
3231–25	Bolt – Carriage	17	9	12
3234–4	Screw – Hex. Flange Hd.	21	33	4
3234–5	Screw – Cap Hex. Hd.	21	46	2
3234–11	Screw – Hex. Flange Hd.	19	18	2
3234–12	Screw – Hex. Flange Hd.	32	18	2
3234–13	Screw – Hex. Flange Hd.	18	13	9
3245–44	Screw – Set	11	73	1
3245–45	Screw – Set	11	75	2
3246–17	Screw – Set	69	10	2
3247–10	Screw – Set	29	22	4
3250–18	Screw – Mach. Pan Hd.	8	24	2
3250–25	Screw – Pan Hd.	18	20	4
3250–31	Screw – Pan Hd.	21	6	5
3250–31	Screw – Pan Hd.	18	25	8
3250–40	Screw	1	27	2
3251–1	Screw – Pan Hd.	5	9	1
3251–4	Screw – Pan Hd.	5	7	4
3253–2	Washer – Lock	21	7	5
3253–2	Washer – Lock	18	21	4
3253–3	Washer – Lock	9	6	1
3253–3	Washer – Lock	22	50	1
3253–3	Washer – Lock	11	65	2
3253–4	Washer – Lock	19	2	6
3253–4	Washer – Lock	29	3	6
3253–4	Washer – Lock	24	7	2
3253–4	Washer – Lock	3	11	2
3253–4	Washer – Lock	4	12	1
3253–4	Washer – Lock	10	14	5
3253–4	Washer – Lock	23	19	2
3253–4	Washer – Lock	40	27	10
3253–4	Washer – Lock	61	34	7
3253–4	Washer – Lock	27	53	6
3253–5	Washer – Lock	29	17	4
3253–5	Washer – Lock	4	22	4
3253–5	Washer – Lock	37	30	8
3253–5	Washer – Lock	2	33	2
3253–5	Washer – Lock	9	37	3
3253–5	Washer – Lock	27	50	2
3253–7	Washer – Lock	54	13	6
3253–7	Washer – Lock	37	20	2
3253–7	Washer – Lock	23	23	2
3253–15	Washer – Lock	15	7	6
3253–19	Washer – Lock	12	13	2
3253–21	Washer – Lock	36	5	2
3255–5	Washer – Lock	40	39	1
3255–8	Washer – Lock	37	24	2
3255–9	Washer – Lock	37	25	1
3255–24	Washer – Lock	1	30	2
3256–3	Washer	27	12	2
3256–3	Washer – Flat	9	18	3
3256–3	Washer – Flat	29	40	4
3256–7	Washer – Flat	22	4	4
3256–13	Washer – Flat	12	20	2
3256–16	Washer – Flat	3	14	3
3256–16	Washer – Flat	65	20	4
3256–16	Washer – Flat	21	30	5
3256–21	Washer – Flat	18	28	8
3256–22	Washer – Flat	7	3	2
3256–22	Washer – Flat	9	7	1
3256–22	Washer – Flat	22	48	1
3256–22	Washer – Flat	7	49	16
3256–22	Washer – Flat	11	70	2
3256–23	Washer	27	7	4
3256–23	Washer – Flat	24	6	2
3256–23	Washer – Flat	10	13	5
3256–23	Washer – Flat	18	19	6
3256–23	Washer – Flat	61	35	11
3256–23	Washer – Flat	9	39	4
3256–23	Washer – Flat	21	47	2
3256–24	Washer	2	34	2
3256–24	Washer – Flat	17	7	4
3256–24	Washer – Flat	19	21	2
3256–24	Washer – Flat	4	21	4
3256–24	Washer – Flat	15	35	4
3256–24	Washer – Flat	22	40	4
3256–24	Washer – Flat	11	76	2
3256–25	Washer – Flat	17	2	6
3256–26	Washer – Flat	54	12	6
3256–26	Washer – Flat	17	13	12
3256–26	Washer – Flat	26	16	2
3256–26	Washer – Flat	2	51	1
3256–27	Washer – Flat	29	41	16
3256–45	Washer – Flat	2	57	2
3256–51	Washer – Flat	21	40	4
3256–56	Washer – Flat	26	9	6
3256–56	Washer – Flat	27	51	9
3256–68	Washer	24	10	A/R
3256–71	Washer – Flat	19	23	4
3256–76	Washer – Flat	2	59	2
3258–19	Screw – Machine	20	6	2
3272–6	Pin – Cotter	29	35	4
3272–11	Pin – Cotter	15	4	2
3272–13	Pin – Cotter	32	14	4
3272–13	Pin – Cotter	32	31	2
3274–5	Screw – Socket Hd.	33	42	8
3274–7	Bolt	1	32	2
3274–68	Screw – Hex. Button Hd.	4	28	4
3274–68	Screw – Mach.	8	2	4
3274–90	Screw	8	23	4
3285–11	Pin – Roll	27	39	3

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
3285–11	Pin – Spirol	23	10	2
3289–25	Screw – Socket Flat Hd.	17	16	4
3290–250	Pin – Hair, Cotter	15	6	2
3290–271	Rivet – Pop	19	28	2
3290–355	Clip – Retaining	15	1	1
3290–355	Pin – Hair Cotter	18	8	2
3290–378	Tie – Cable	62	*	1
3290–378	Tie – Cable	68	1	7
3290–378	Tie – Cable	68	8	12
3290–482	Washer	1	17	2
3290–483	Washer	1	11	3
3296–2	Nut – Hex.	5	16	2
3296–6	Nut – Lock	2	63	1
3296–8	Nut – Lock	65	19	4
3296–8	Nut – Lock	11	68	2
3296–12	Nut – Lock	21	28	4
3296–13	Nut – Hex.	9	10	1
3296–19	Nut – Lock	2	37	1
3296–23	Nut – Lock	26	5	2
3296–23	Nut – Lock	17	15	10
3296–23	Nut – Lock	32	33	8
3296–25	Nut – Lock	2	55	1
3296–27	Nut – Hex.	18	29	8
3296–29	Nut – Lock	18	14	9
3296–29	Nut – Lock	19	29	8
3296–29	Nut – Lock	61	36	2
3296–29	Nut – Lock	21	43	4
3296–39	Nut – Lock	17	10	12
3296–39	Nut – Lock	17	12	4
3296–39	Nut – Lock	27	13	9
3296–39	Nut – Lock	19	22	2
3296–39	Nut – Lock	29	33	4
3296–39	Nut – Lock	26	37	6
3296–39	Nut – Lock	22	39	2
3296–42	Nut – Lock	7	4	2
3296–42	Nut – Lock	8	22	4
3296–42	Nut – Lock	4	30	4
3296–42	Nut – Lock	7	43	2
3296–48	Nut – Lock	17	1	2
3296–49	Nut – Lock	32	17	1
3296–56	Nut – Lock	18	16	5
3296–56	Nut – Lock	21	35	6
32103–3	Nut – Wing	70	4	1
32105–1	Screw – Cap Hex. Hd.	5	14	2
32107–11	Nut – Square	20	5	2
32121–11	Pin – Roll	2	60	2
32121–44	Pin – Roll	35	18	1
32121–118	Pin – Roll	10	26	2
32122–54	Screw – Mach. Slot. Hd.	70	1	1
32128–33	Nut – Flange Lock	21	23	3
32136–2	Nut – Castle	33	40	2
32136–13	Nut – Castle	32	13	2
32144–1	Screw – Cap Hex. Hd.	21	41	4
32144–39	Screw – Cap Hex. Hd.	5	13	4
32144–73	Screw – Cap Hex. Hd.	8	26	2
32148–9	Nut – Insert	21	20	2
32151–10	Ring – Retaining	32	20	2
32151–13	Ring – Retaining	30	9	1
32151–29	Ring – Retaining	30	13	2
3334–945	Cable – Tie	9	38	1
340–2	Adapter	26	26	2
340–2	Fitting	29	7	2
340–2	Fitting	54	19	1
340–2	Fitting	10	31	8
340–3	Fitting	54	34	1
340–3	Fitting	11	57	2
340–4	Fitting	54	24	1
340–7	Fitting	27	5	2
340–7	Fitting	10	44	6
340–7	Fitting – Straight	24	3	3
340–8	Fitting	54	8	1
340–8	Fitting – Hydraulic Straight	65	2	10
340–9	Fitting	29	14	2
340–9	Fitting	54	22	1
340–10	Adapter	9	33	1
340–11	Fitting – Long	54	20	1
340–14	Fitting – Hydraulic 45°	61	2	1
340–15	Fitting 90°	54	30	1
340–17	Fitting	10	48	2
340–17	Fitting	27	49	1
340–17	Fitting – Hydraulic 90°	61	24	1
340–18	Fitting	4	8	4
340–22	Fitting – Tee	27	3	2
340–23	Fitting – Hydraulic Cross	59	20	1
340–54	Fitting – Hydraulic 45°	32	4	2
340–62	Kit – Flange	54	11	1
340–64	O–Ring	9	31	1
340–64	O–Ring	10	37	1
340–65	O–Ring	9	27	1
340–65	O–Ring	59	43	2
340–68	Fitting – Hydraulic Tee	63	24	3
340–68	Fitting – Hydraulic Tee	59	26	2
340–69	Fitting – Hydraulic Bulkhead	61	5	1
340–70	Nut – Bulkhead	36	9	3
340–70	Nut – Bulkhead	61	10	1
340–70	Nut – Bulkhead	59	31	4
340–70	Nut – Bulkhead	63	38	8
340–71	Fitting – Hydraulic Bulkhead	36	3	2
340–71	Fitting – Hydraulic Bulkhead	59	13	2
340–71	Fitting – Hydraulic Straight	63	26	4
340–72	Fitting – Hydraulic 90°	65	17	4
340–74	Nut – Bulkhead	61	11	2
340–74	Nut – Bulkhead	36	16	2
340–74	Nut – Bulkhead	65	45	7
340–76	Fitting – Adapter	65	28	3
340–77	Elbow – 90°	11	69	1
340–77	Fitting	27	37	3
340–77	Fitting – Hydraulic 90°	63	2	4
340–78	Nut – Bulkhead	59	53	1
340–80	Adapter	9	26	1
340–80	Fitting	10	38	1
340–86	Fitting – Hydraulic Tee	11	52	2
340–87	Fitting – Hydraulic 45°	63	28	1
340–88	Fitting – Hydraulic Straight	61	31	1
340–89	Fitting – Hydraulic 45°	32	5	4
340–89	Fitting – Hydraulic 45°	63	12	1
340–89	Fitting 45°	54	36	1
340–90	Fitting	29	43	2
340–92	Fitting	10	10	1
340–93	Fitting – Tee	27	14	1
340–94	Fitting – Hydraulic Tee	61	27	1
340–97	Fitting – Hydraulic 90°	32	11	2
340–115	Fitting – Hydraulic Tee	36	10	2
340–117	Fitting – Hydraulic Cap	36	1	1
340–127	Nut – Bulkhead	36	15	4
340–161	Fitting – Hydraulic Bulkhead	36	22	4
353–947	Cap – Dust	54	1	1
353–947	Cap – Dust	7	8	5
353–947	Cap – Dust	11	63	1
353–948	Plug	30	3	2
353–949	O–Ring	29	18	2

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 4500D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the center console near the floor plate on RH side. In any correspondence concerning the Reelmaster 4500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:
1. Model and serial number of the Reelmaster 4500D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Foot Rest & Pedal Assembly	1–2
Foot Pads & Battery	3
Steering Tower	4
Steering Tower – Electrical Assembly	5
Power Steering Valve Assembly No. 74–2720	6
Fenders & Center Console Assembly	7
Instrument Panel	8
Parking Brake, Throttle & Oil Filter Assembly	9
Valve Controls Assembly	10–11
Reel Control Valve Assembly No. 63–4800	12
Control Valve Assembly 84–6200	13
Priority Flow Control Valve Assy. No. 58–5490 & 58–5491	14
Seat Platform & Filler Cap Assembly	15
Suspension Seat Assembly	16
R.O.P.S. Assembly	17
Front & Rear Canopy Assembly	18
Radiator, Oil Cooler & Air Cleaner Assembly	19
Air Cleaner Assembly	20
Fuel Tank & Lower Body Assembly	21
Chassis & Muffler Assembly	22
Front Carrier Assembly	23
Push Rod Assembly	24
Reel Shut–Off Valve No. 58–5460	25
No. 2 & 3 Lift Arms Assembly	26
No. 1, 4 & 5 Lift Arms Assembly	27
Hydraulic Cylinder Assembly No. 84–6210	28
Traction Drive Assembly	29
Wheel Motor No. 58–5430	30
Planetary Gear Drive Assembly	31
Steering Axle	32–33
Hydraulic Motor Assembly No. 92–4724	34
Hydraulic Cylinder No. 92–6057	35
Rear Axle Plumbing Assembly	36
Engine Installation Assembly	37
Crankcase Assembly	38
Timing Gear & Case Components	39
Water Pump & Thermostat Housing Assy.	40
Crankshaft & Flywheel Housing Components	41
Cylinder Head & Piston Components	42
Valve, Camshaft & Oil Pump Components	43
Oil Pan & Oil Filter	44
Intake & Exhaust Manifold	45
Injection Pump & Nozzle Components	46–47
Fuel Injection Pump No. 60–5100	48–49
Fuel Filter Assembly No. 60–5010	50
Electrical Component Parts	51
Starter Motor Assembly No.51–7590	52
Alternator Assembly No. 60–5421	53
Hydraulic Pump Connections	54
Gear Pump Assembly No. 58–5650	55
Piston Pump Assembly 58–5660	56–57
Pump Assembly No. 86–6000 & 86–6001	58
Hydraulic Circuit Front Wheel Drive & Steering	59
Hydraulic Schematic Front Wheel Drive & Steering	60
Hydraulic Circuit – Rear Wheel Drive	61–62
Hydraulic Circuit – Lift Arms	63
Hydraulic Schematic – Lift Arms	64
Hydraulic Circuit – Cutting Units	65
Hydraulic Schematic – Cutting Units	66
Electrical Schematic	67
Electrical System Diagram	68
Reel Motor Assembly No. 66–5700	69
Special Tools	70
Numerical Index	71–83

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.
LTS 303425