FORM NO. 3315–904


TORO®

MODEL NO. 30162 – 390001 & UP

PARTS CATALOG

62" SIDE DISCHARGE DECK

ProLine Cutting Unit

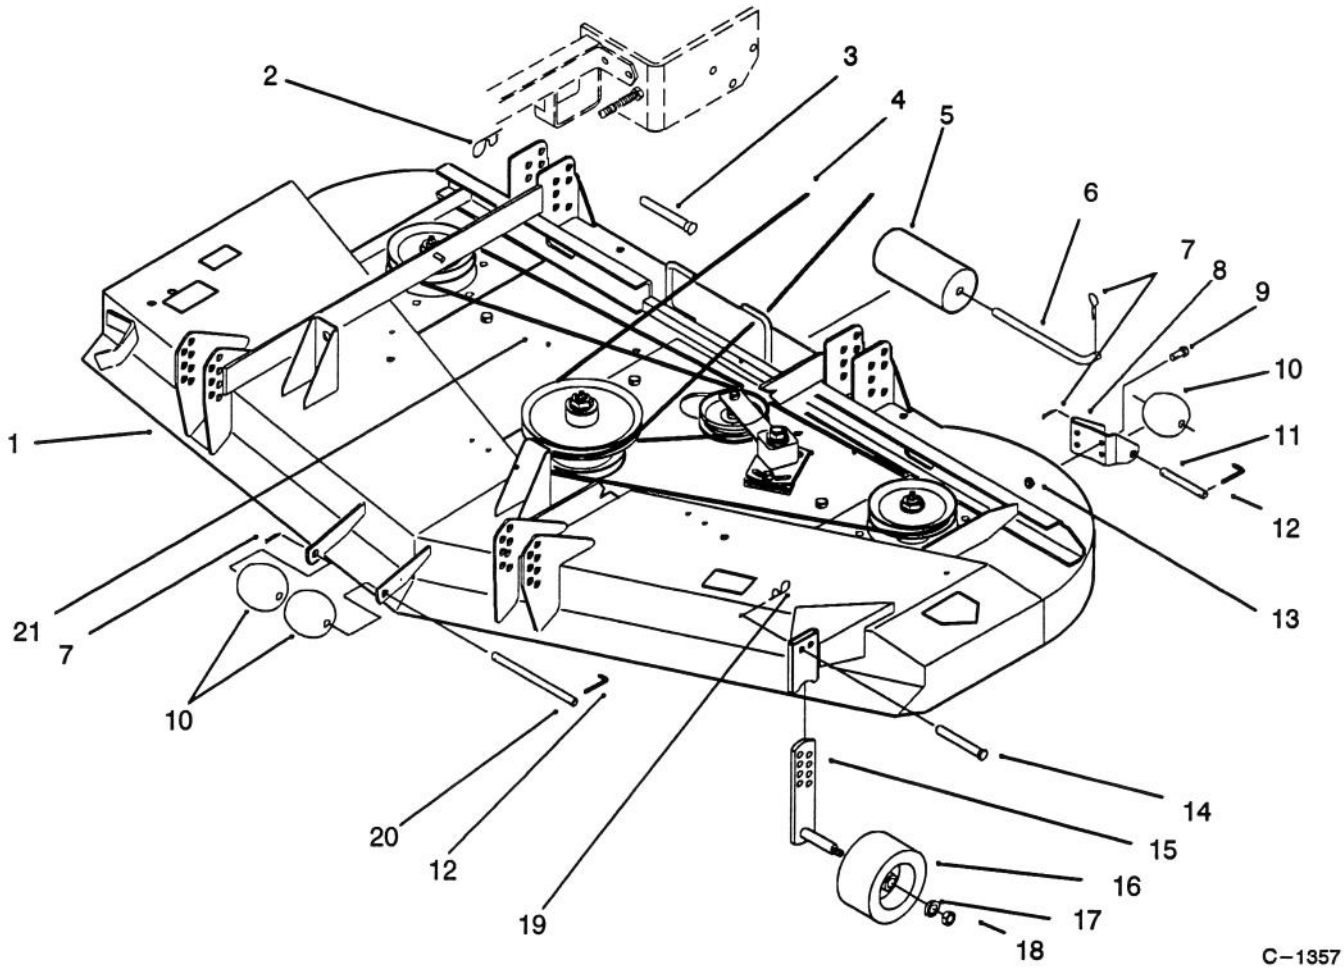

BELTS, ROLLERS AND GAGE WHEEL

Ref. No.	Part No.	Description	No. Used
1	14–1519	Deck Assembly (Incl. Decals on page 2)	1
2	3290–355	Pin –Cotter	4
3	283–55	Pin – Clevis	4
4	74–1330	"V"Belt – Deck Drive	1
5	36–1740	Roller – Deck, Rear	
6	40–0340	Shaft – Roller	1
7	3272–11	Pin – Cotter	3
8	57–0580	Bracket – Roller	1
9	323–6	Screw – Hex. Hd.	2
10	29–4820	Roller	3


Ref. No.	Part No.	Description	No. Used
11	57–0680	Shaft – Roller	1
12	57–0690	Pin – Special	2
13	3290–357	Nut – Flange Lock	2
14	283–2	Pin – Clevis	1
15	68–2350	Plate – Gauge Wheel	1
16	68–2730	Wheel – Gauge	1
17	3256–24	Washer – Flat	1
18	3296–39	Nut – Lock	1
19	3290–467	Pin – Cotter	1
20	40–6400	Shaft – Roller	1
21	44–6260	"V"Belt – Deck	1

*Not Illustrated

TPS

Copyright 1993 The Toro Company

3315–904

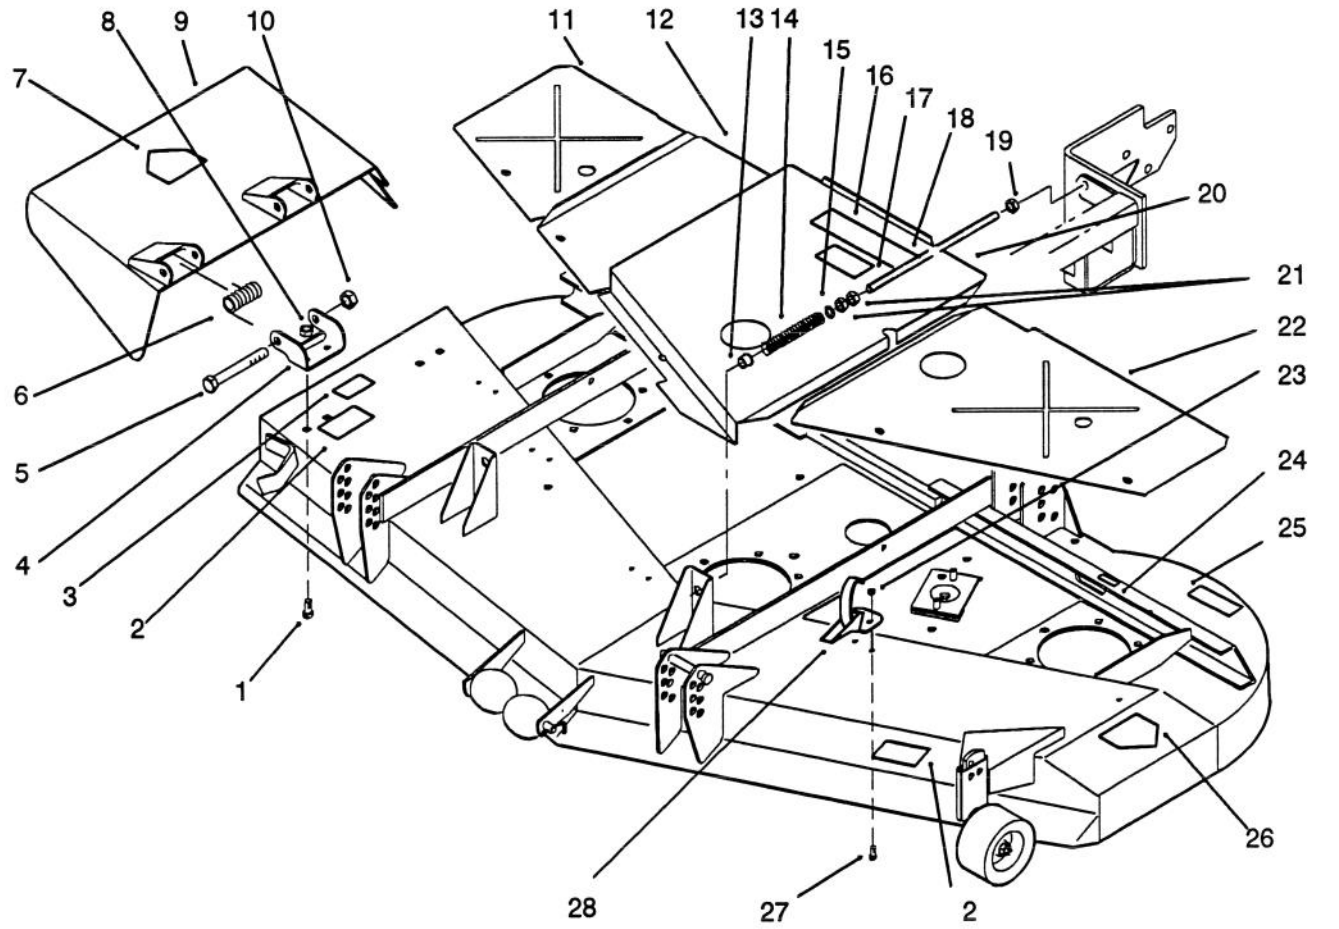


C–1358

GRASS DEFLECTOR, BELT COVERS & DECALS

Ref. No.	Part No.	Description	No. Used
1	3231–27	Bolt – Carriage	4
2	66–1340	Decal – Danger	2
3	66–6380	Decal – Deflector Missing	1
4	51–1530	Bracket – Hinge	2
5	325–17	Screw – Hex. Hd.	2
6	51–1550	Spring	1
7	54–9220	Decal	1
8	3290–357	Nut – Flange Lock	4
9	14–0909	Deflector Assembly (Incl. Ref.#7 & 26)	1
10	32153–5	Nut – Lock	2
11	63–9830	Cover – Deck R.H.	1
12	74–1310	Cover – Deck, Center R.H.	1
13	256–156	Bushing	2
14	74–0290	Spring – Compression	2

Ref. No.	Part No.	Description	No. Used
15	41–8440	Spacer – Hardened	2
16	74–2080	Decal – Proline	1
17	66–1630	Decal – 62"	1
18	74–0311	Shaft – Adjusting	2
19	3296–45	Nut – Lock	2
20	74–1320	Cover – Deck, Center L.H.	1
21	3218–5	Nut – Lock	4
22	44–6291	Cover – Deck L.H.	1
23	32128–17	Nut – Lock	10
24	67–5360	Decal – Shield Missing	2
25	68–8340	Decal – Blade Torque	1
26	43–8480	Decal – Danger	2
27	3290–321	Screw – Hex. Hd. Mach.	10
28	249–21	Latch – Draw	5

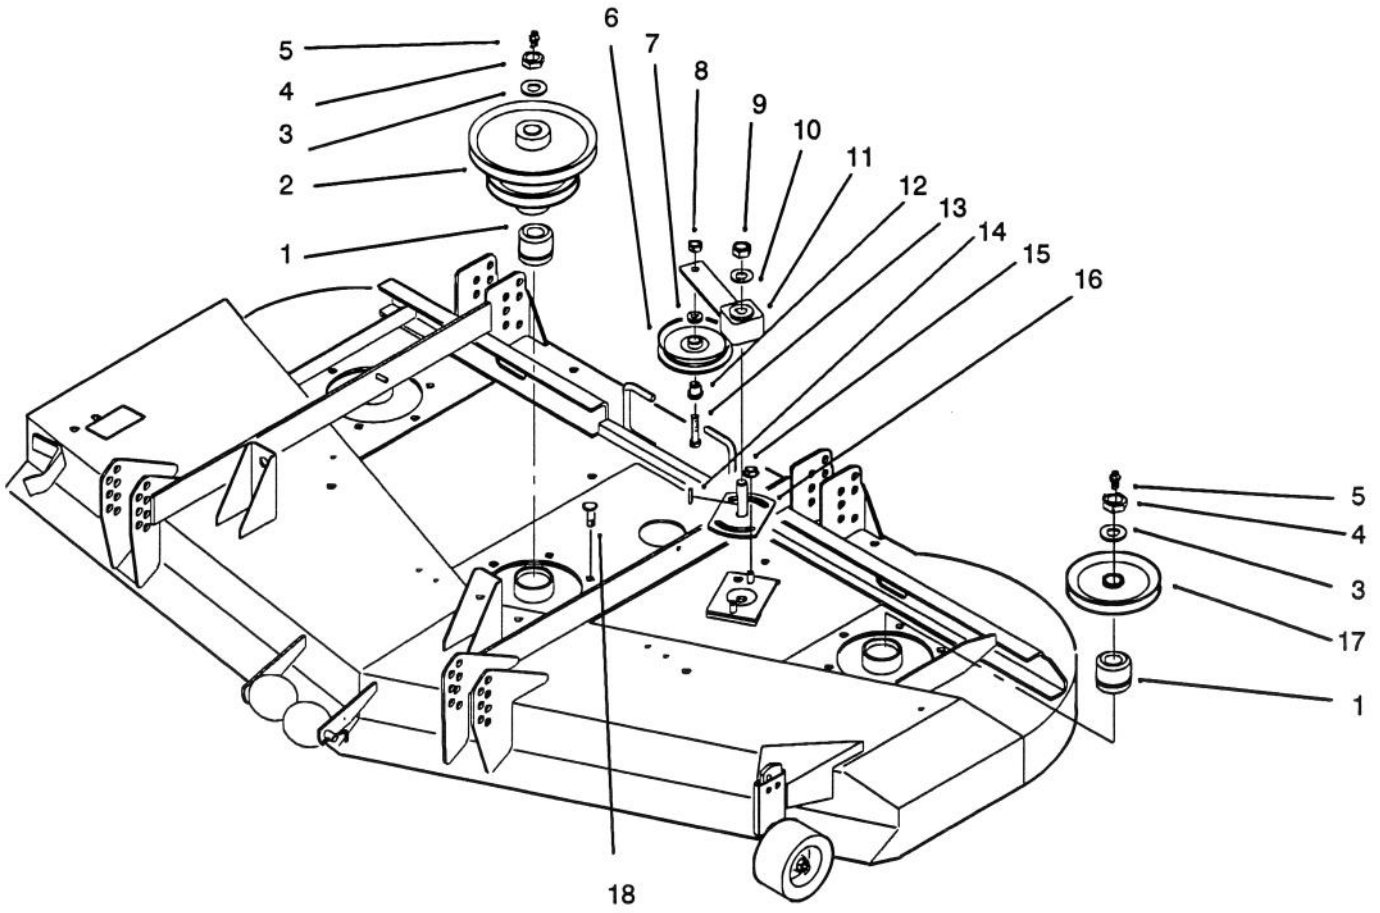


C–1361

PULLEYS AND IDLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46–8530	Bearing Assembly	3
2	74–1230	Pulley & Hub Assembly	1
3	7–4150	Washer – Thrust	3
4	32146–20	Nut – Lock	1
5	302–2	Fitting – Grease	3
6	65–5940	Pulley – Idler	1
7	7–0081	Washer – Special	1
8	3296–1	Nut – Lock	1
9	3296–71	Nut – Lock	1

Ref. No.	Part No.	Description	No. Used
10	3256–27	Washer – Flat	1
11	27–8580	Idler Socket Assembly	1
12	65–5950	Bushing – Pulley	
13	3211–8	Screw – Hex. Hd.	1
14	5–1077	Key – Square	1
15	3290–357	Nut – Flange Lock	1
16	44–6301	Plate Assembly Idler	1
17	44–6340	Pulley Hub Assembly	2
18	3231–22	Bolt – Carriage	18

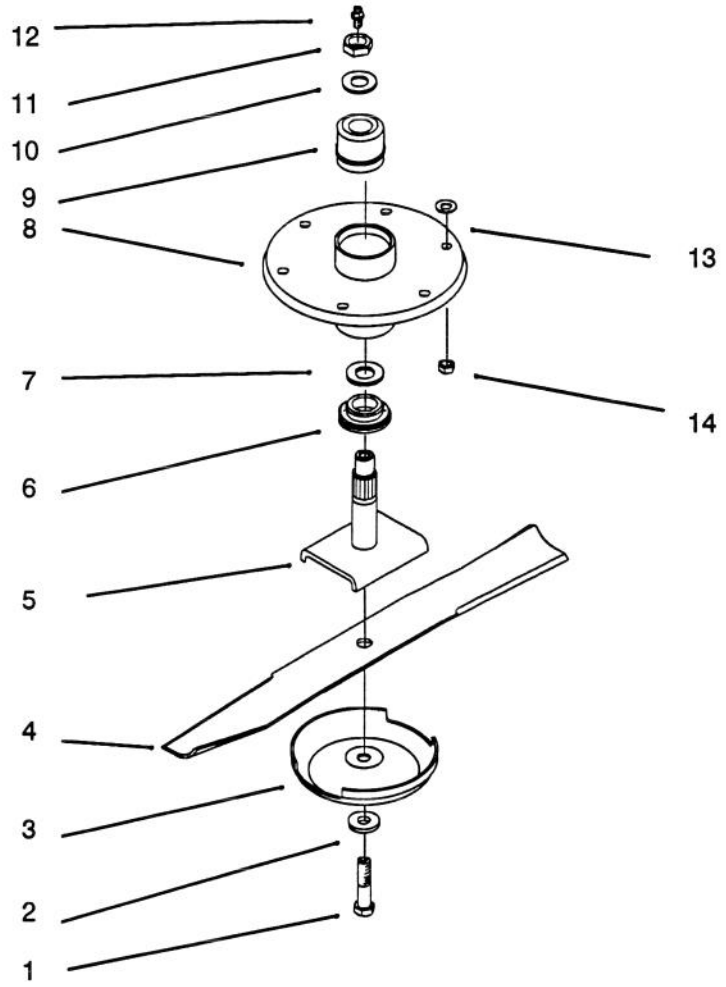


C–1362

SPINDLE ASSEMBLY & BLADE

Ref. No.	Part No.	Description	No. Used
1	44–2200	Screw – Blade	3
2	67–5770	Washer – Flat	3
3	72–9361	Cup – Anti Scalp	3
4	44–6250	Blade	3
5	51–3551	Shaft – Spindle (Center)	1
*	27–0920	Shaft – Spindle (Outer)	2
6	27–0950	Spacer – Spindle Bearing	3
7	253–139	Seal – Wave	6
8	61–4160	Spindle	3

Ref. No.	Part No.	Description	No. Used
9	46–8530	Bearing Assembly	3
10	7–4150	Washer – Thrust	3
11	32146–20	Nut – Lock	1
12	302–2	Fitting – Grease	3
13	3256–24	Washer – Flat	A/R
14	32128–21	Nut – Lock	18
*	44–6370	Spindle Housing Assembly (Incl. Ref.# 6–8, 9 & 11–13)	2

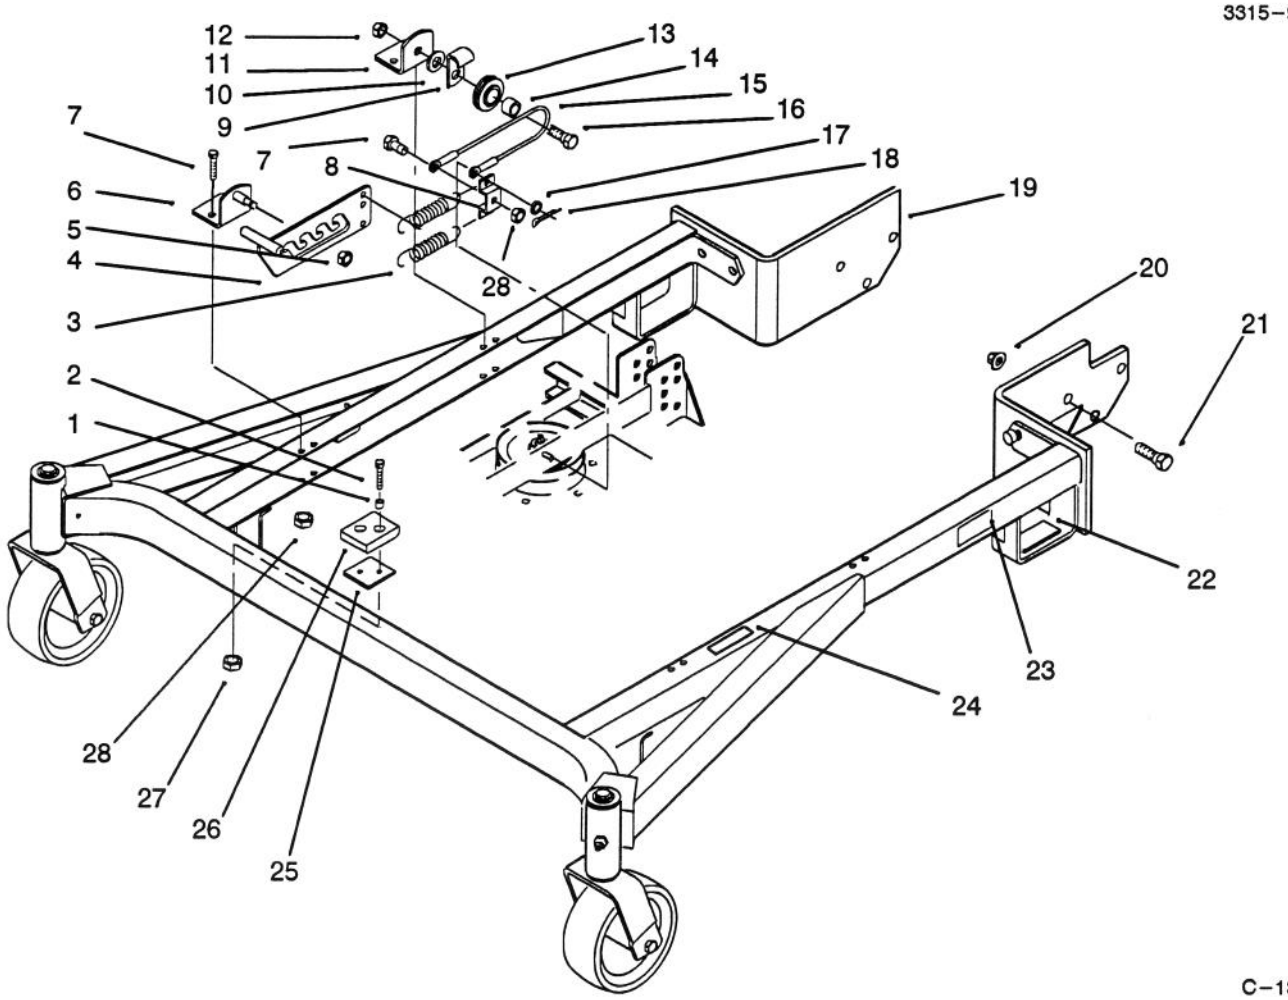


C–1363

CARRIER FRAME

Ref. No.	Part No.	Description	No. Used
1	40–9520	Spacer	4
2	32122–28	Screw – Hex. Hd. Mach.	4
3	56–2770	Spring – Extension	3
4	56–3330	Tension Adjusting Control	2
5	32128–13	Nut – Lock	2
6	56–3340	Bracket – Tension Adjusting	2
7	321–4	Screw – Hex	9
8	59–5390	Bracket – Spring	2
9	56–2780	Retainer – Cable	2
10	252–98	Washer – Thrust	3
11	56–3360	Bracket – Pulley	2
12	3296–42	Nut – Lock	2
13	3–8775	Pulley Assembly (Incl. Ref.#14)	2
14	256–159	Bushing	2
15	56–3350	Cable	2

Ref. No.	Part No.	Description	No. Used
16	59–5400	Bolt – Shoulder	2
17	3256–1	Washer – Flat	2
18	3290–307	Pin – Cotter	2
19	16–2009	Carrier Frame Assembly (Incl. Ref. #23, 24)	1
20	32128–23	Nut – Lock	6
21	3234–6	Screw – Hex. Flange Hd.	6
22	92–5416	Pad – Rubber	2
23	68–8360	Decal – H.O.C. L. H.	1
*	74–0940	Decal – H.O.C. R. H.	1
24	55–4300	Decal – Warning	2
25	92–5418	Shim – Front Cushion	3
26	92–5417	Cushion – Rubber, Front	2
27	3296–42	Nut – Lock	9
28	3296–2	Nut – Lock	4

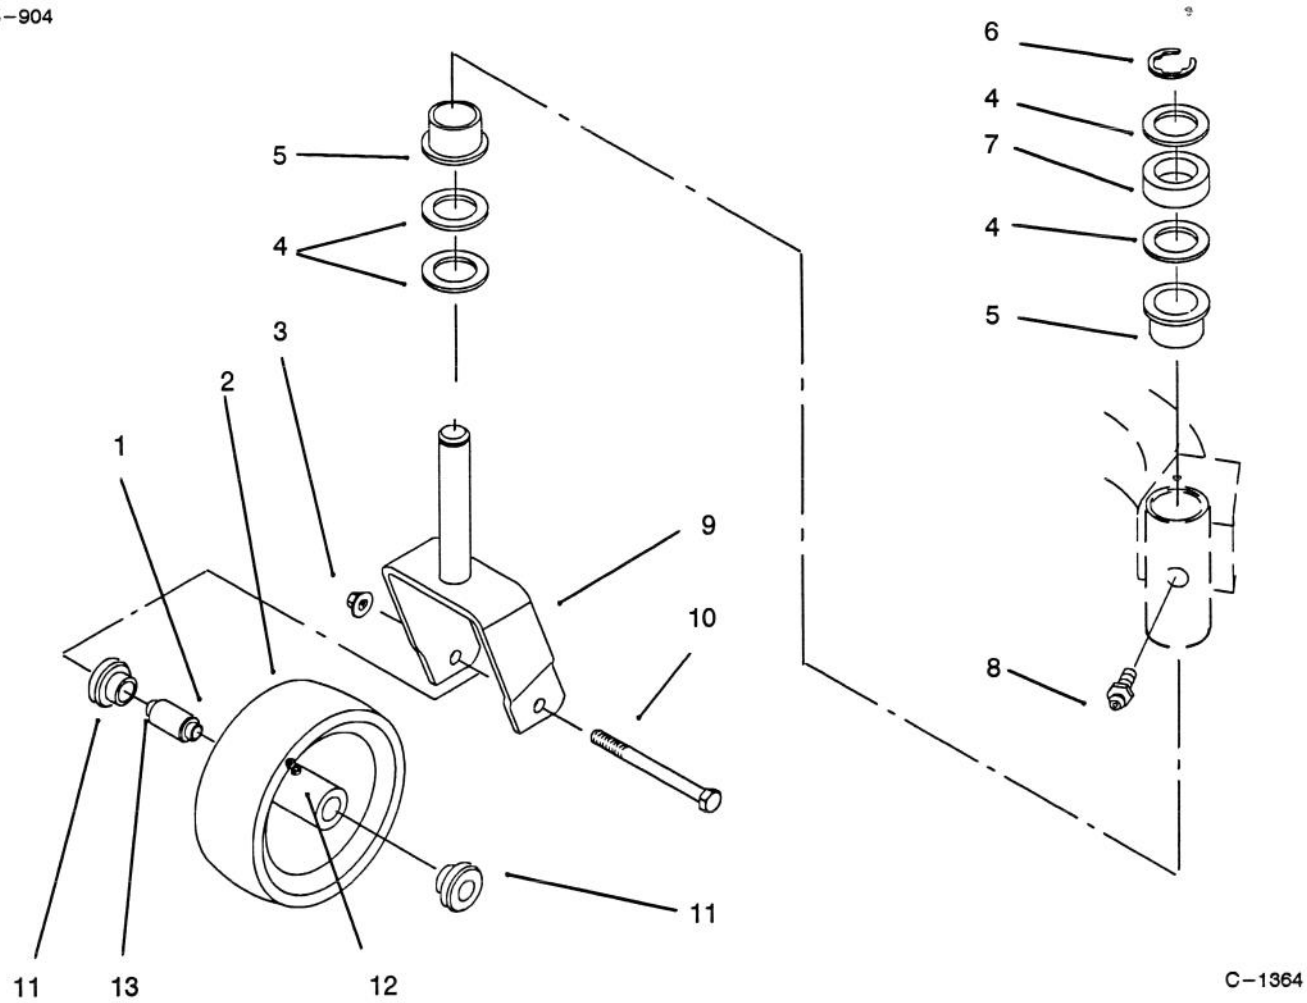

CASTER FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	83–4740	Bearing – Roller	2
2	85–5760	Wheel & Tire Assembly (Incl. Ref. #1 & 11–13)	2
3	32153–5	Nut – Lock	2
4	3–6781	Washer – Thrust	8
5	28–9290	Bushing – Special	4
6	32151–91	Ring – Retaining	2
7	63–0070	Spacer	4

Ref. No.	Part No.	Description	No. Used
8	302–5	Fitting – Grease	2
9	92–5408	Fork – Castor	2
10	325–22	Bolt – Wheel	1
11	62–5580	Bushing	4
12	302–40	Fitting – Grease	2
13	62–4340	Bushing – Spanner	2

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3-6781	Washer – Thrust	6	4	8
3-8775	Pulley Assembly	5	13	2
5-1077	Key – Square	3	14	1
7-0081	Washer – Special	3	7	1
7-4150	Washer – Thrust	3	3	3
7-4150	Washer – Thrust	4	10	3
14-0909	Deflector Assembly	2	9	1
14-1519	Deck Assembly	1	1	
16-2009	Carrier Frame Assembly	5	19	
27-0920	Shaft – Spindle (Outer)	4	*	2
27-0950	Spacer – Spindle Bearing	4	6	3
27-8580	Idler Socket Assembly	3	11	1
28-9290	Bushing – Special	6	5	4
29-4820	Roller	1	10	3
36-1740	Roller – Deck, Rear	1	5	
40-0340	Shaft – Roller	1	6	1
40-6400	Shaft – Roller	1	20	1
40-9520	Spacer	5	1	4
41-8440	Spacer – Hardened	2	15	2
43-8480	Decal – Danger	2	26	2
44-2200	Screw – Blade	4	1	3
44-6250	Blade	4	4	3
44-6260	VBelt – Deck	1	21	1
44-6291	Cover – Deck L.H.	2	22	1
44-6301	Plate Assembly Idler	3	16	1
44-6340	Pulley Hub Assembly	3	17	2
44-6370	Spindle Housing Assembly	4	*	2
46-8530	Bearing Assembly	3	1	3
51-1530	Bracket – Hinge	2	4	2
51-1550	Spring	2	6	2
51-3551	Shaft – Spindle (Center)	4	5	1
54-9220	Decal – Danger	2	7	1
55-4300	Decal – Warning	5	24	2
56-2770	Spring – Extension	5	3	3
56-2780	Retainer – Cable	5	9	2
56-3330	Tension Adjusting Control	5	4	2
56-3340	Bracket – Tension Adjusting	5	6	2
56-3350	Cable	5	15	2
56-3360	Bracket – Pulley	5	11	2
57-0580	Bracket – Roller	1	8	1
57-0680	Shaft – Roller	1	11	1
57-0690	Pin – Special	1	12	2
59-5390	Bracket – Spring	5	8	2
59-5400	Bolt – Shoulder	5	16	2
61-4160	Spindle	4	8	3
62-4340	Bushing – Spanner	6	13	2
62-5580	Bushing	6	11	4
63-0070	Spacer	6	7	4
63-9830	Cover – Deck R.H.	2	11	1
65-5940	Pulley – Idler	3	6	1
65-5950	Bushing – Pulley	3	12	
66-1340	Decal – Danger	2	2	2
66-1630	Decal – 62"	2	17	1
66-6380	Decal – Deflector Missing	2	3	1
67-5360	Decal – Shield Missing	2	24	2
67-5770	Washer – Flat	4	2	3
68-2350	Plate – Gauge Wheel	1	15	1
68-2730	Wheel – Gauge	1	16	1
68-8340	Decal – Blade Torque	2	25	1
68-8360	Decal – H.O.C. L. H.	5	23	1
72-9361	Cup – Anti Scale	4	3	3
74-0290	Spring – Compression	2	14	2
74-0311	Shaft – Adjusting	2	18	2
74-0940	Decal – H.O.C. R. H.	5	23	1
74-1230	Pulley & Hub Assembly	3	2	1
74-1310	Cover – Deck, Center R.H.	2	12	1
74-1320	Cover – Deck, Center L.H.	2	20	1
74-1330	VBelt – Deck Drive	1	4	1
74-2080	Decal – Proline	2	16	1
83-4740	Bearing – Roller	6	1	2
85-5760	Wheel & Tire Assembly	6	2	2
92-5408	Fork – Castor	6	9	2
92-5416	Pad – Rubber	5	22	2
92-5417	Cushion – Rubber, Front	5	27	2
92-5418	Shim – Front Cushion	5	26	3
249-21	Latch – Draw	2	28	5
252-98	Washer – Thrust	5	10	3
253-139	Seal – Wave	4	7	6
256-156	Bushing	2	13	2
256-159	Bushing	5	14	2
283-2	Pin – Clevis	1	14	1
283-55	Pin – Clevis	1	3	4
302-2	Fitting – Grease	3	5	3
302-2	Fitting – Grease	4	12	3
302-5	Fitting – Grease	6	8	2
302-40	Fitting – Grease	6	12	2
321-4	Screw – Hex	5	7	9
323-6	Screw – Hex. Hd.	1	9	2
325-17	Screw – Hex. Hd.	2	5	2
325-22	Bolt – Wheel	6	10	1
3211-8	Screw – Hex. Hd.	3	13	1
3218-5	Nut – Lock	2	21	4
3231-22	Bolt – Carriage	3	18	18
3231-27	Bolt – Carriage	2	1	4
3234-6	Screw – Hex. Flange Hd.	5	21	6
3256-1	Washer – Flat	5	17	2
3256-24	Washer – Flat	4	13	A/R
3256-24	Washer – Flat	1	17	1
3256-27	Washer – Flat	3	10	1
3272-11	Pin – Cotter	1	7	3
3290-307	Pin – Cotter	5	18	2
3290-321	Screw – Hex. Hd. Mach.	2	27	10
3290-355	Pin –Cotter	1	2	4
3290-357	Nut – Flange Lock	2	8	4
3290-357	Nut – Flange Lock	1	13	2
3290-357	Nut – Flange Lock	3	15	1
3290-467	Pin – Cotter	1	19	1
3296-1	Nut – Lock	3	8	1
3296-2	Nut – Lock	5	29	4
3296-39	Nut – Lock	1	18	1
3296-42	Nut – Lock	5	12	2
3296-42	Nut – Lock	5	28	9
3296-45	Nut – Lock	2	19	2
3296-71	Nut – Lock	3	9	1
32122-28	Screw – Hex. Hd. Mach.	5	2	4
32128-13	Nut – Lock	5	5	2
32128-17	Nut – Lock	2	23	10
32128-21	Nut – Lock	4	14	18
32128-23	Nut – Lock	5	20	6
32146-20	Nut – Lock	3	4	1
32146-20	Nut – Lock	4	11	1
32151-91	Ring – Retaining	6	6	2
32153-5	Nut – Lock	6	3	2
32153-5	Nut – Lock	2	10	2

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

Litho in U.S.A.