
FORM NO. 3315–955C

TORO®

MODEL NO. 79401–390001 Thru
690001 & UP

PARTS CATALOG

ProLine® 42" Vac Bagger
600 Series Zero–Radius Tractors

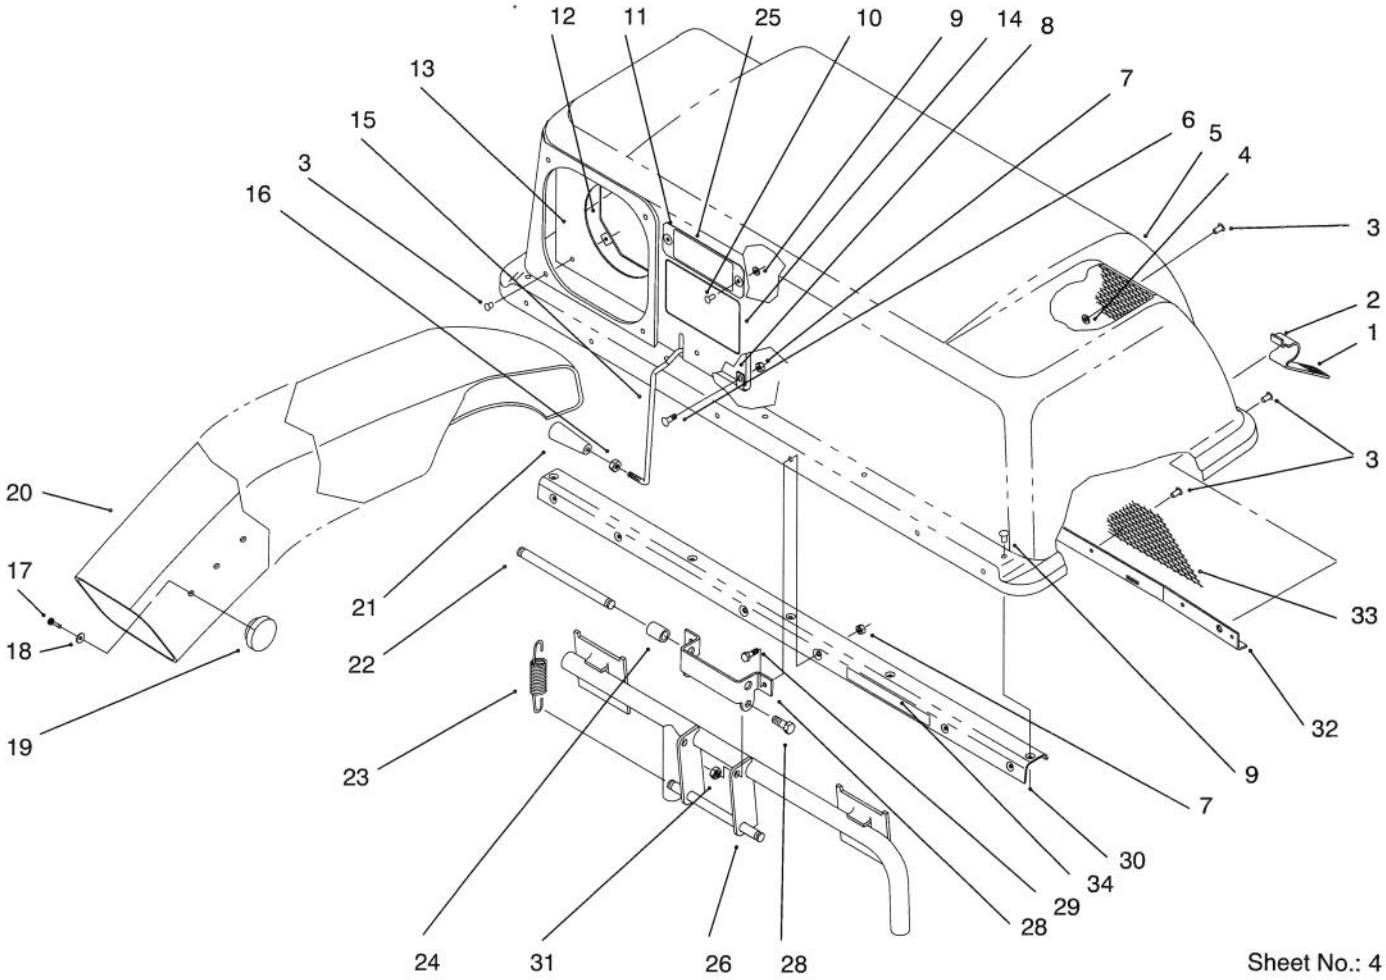

Sheet No.: 4


BAG ASSEMBLY–TOP

Ref. No.	Part No.	Description	No. Used
1	115880	Grip – Latch	2
2	115481	Latch – Bag Top	2
3	114439	Rivet – Pop	24
4	9202704	Washer	4
5	92–1159	Bag Top Assembly (Incl. Ref. # 9, 10, & 25)	1
6	9108372	Screw	2
7	3296–42	Nut – Lock	4
8	2412–91	Clip	2
9	3269–26	Washer – Backup	2
10	3269–19	Rivet – Pop	2
11	79–7590	Plate – Decal Mtg.	1
12	114966	Clamp – Seal	1
13	117239	Seal – Chute	1
14	116347	Decal – Easy Twin	1
15	114969	Feeler – Full Bag	1
16	3218–1	Nut	1
17	32144–8	Screw	1

Ref. No.	Part No.	Description	No. Used
18	3256–49	Washer – Flat	1
19	233–68	Knob	1
20	79–7240	Chute – Discharge	1
21	118320	Handle	1
22	114960	Pin – Spring	1
23	114962	Spring – Extension	2
24	9790944	Spacer	2
25	79–3970	Decal – Danger	1
26	114955	Frame – Bagger	1
27	323–6	Screw – Hex. Hd.	2
28	114961	Hinge – Bagger Top	1
29	321–4	Screw – Hex. Hd.	2
30	88–9570	Stiffener Assembly (Incl. Ref. #34)	1
31	3296–39	Nut – Lock	2
32	92–1736	Support – Screen	1
33	114967	Screen – Bagger	1
34	92–7113	Decal – Caution	1

© The TORO Company –1995
All Rights Reserved

TPS

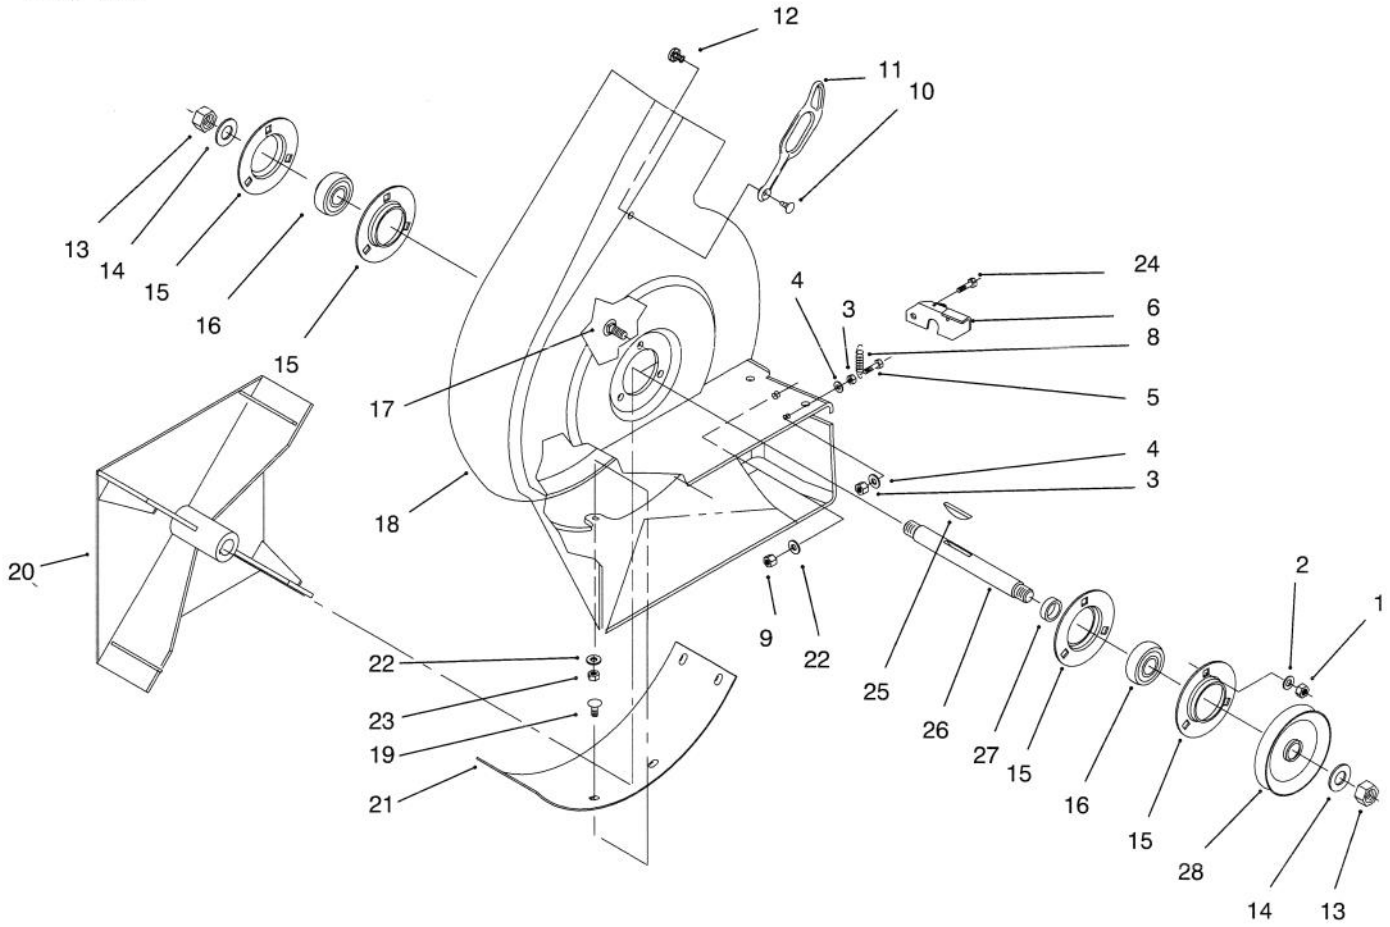


Sheet No.: 3

BLOWER HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3217–6	Nut – Hex	6
2	3253–4	Washer – Lock	6
3	3217–26	Nut – Hex	2
4	3256–14	Washer – Flat	2
5	32105–13	Screw – Hex Hd.	1
6	79–7220	Latch – Deck	1
8	79–7390	Spring – Extension	1
9	3296–42	Nut – Lock	1
10	3290–479	Fastener – Panel	1
11	82–5690	Retainer	1
12	22–9741	Spacer – Flanged	1
13	3220–6	Nut –	2
14	3253–8	Washer – Lock	2
15	251–341	Bearing – Flanged	4

Ref. No.	Part No.	Description	No. Used
16	251–288	Bearing – Ball	2
17	3230–16	Bolt – Carriage	6
18	79–6890	Housing – Blower	1
19	3229–22	Bolt – Carriage	6
20	79–4300	Impeller	1
21	79–7170	Cover – Blower Bottom	1
22	3256–22	Washer – Flat	7
23	3296–56	Nut – Lock	6
24	321–4	Screw – Hex. Hd.	1
25	3257–40	Key – Woodruff	1
26	79–1470	Shaft – Blower	1
27	7038	Spacer	1
28	79–1460	Pulley – Blower	1

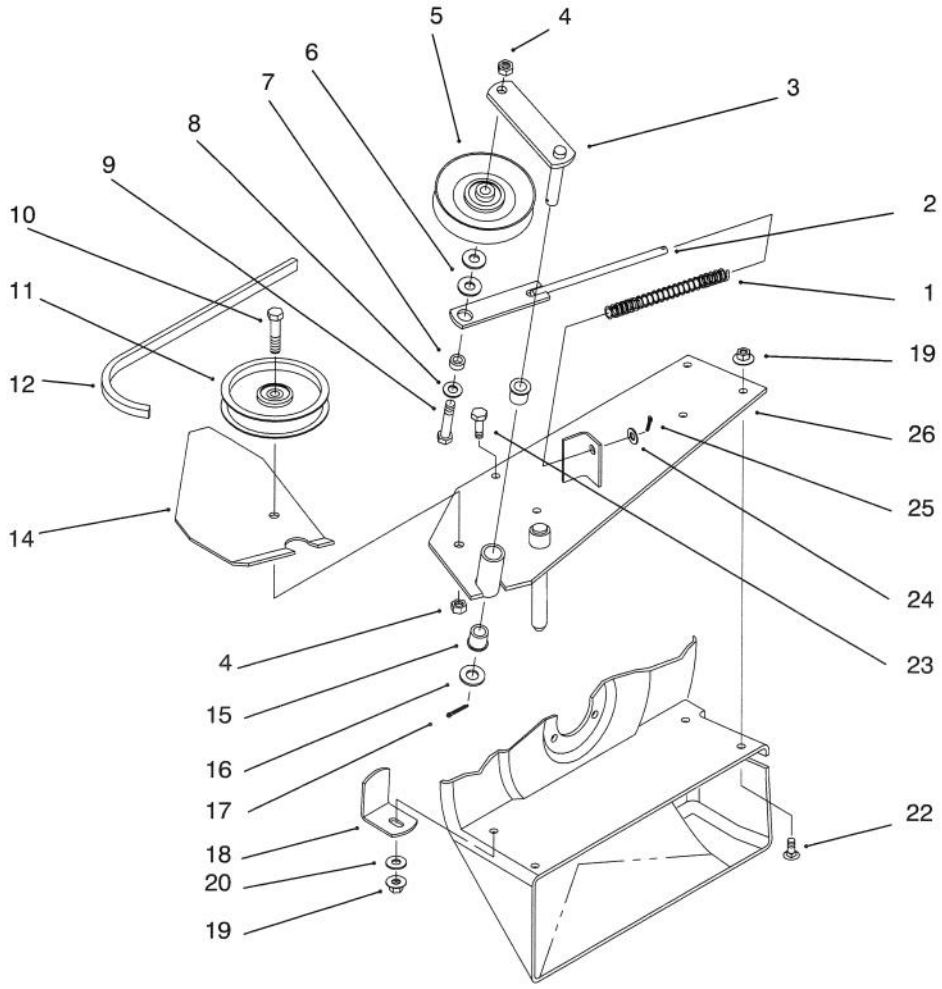


Sheet No.: 2

DRIVE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	79–7110	Spring – Compression	1
2	79–2020	Rod – Compression	1
3	79–1970	Arm – Idler	1
4	3296–39	Nut – Lock	2
5	92–7099	Pulley – V–Idler	1
6	3256–4	Washer	2
7	107213	Spacer – Pivot Link	1
8	3256–24	Washer – Flat	1
9	323–10	Screw – Hex. Hd.	1
10	323–9	Screw – Hex. Hd.	1
11	93–1622	Pulley – Flat Idler	1
12	79–7480	Belt – 71”	1

Ref. No.	Part No.	Description	No. Used
14	79–7280	Support – Belt Shield	1
15	100284	Bushing	2
16	3256–26	Washer – Flat	1
17	3272–7	Pin – Cotter	1
18	79–7440	Bracket – Housing Support	1
19	32128–20	Nut – Flange Lock	4
20	3256–3	Washer – Flat	1
22	3230–1	Bolt – Carriage	3
23	322–5	Screw – Hex. Hd.	1
24	3256–23	Washer	1
25	3272–10	Pin – Cotter	1
26	79–1380	Plate – Blower Mounting	1

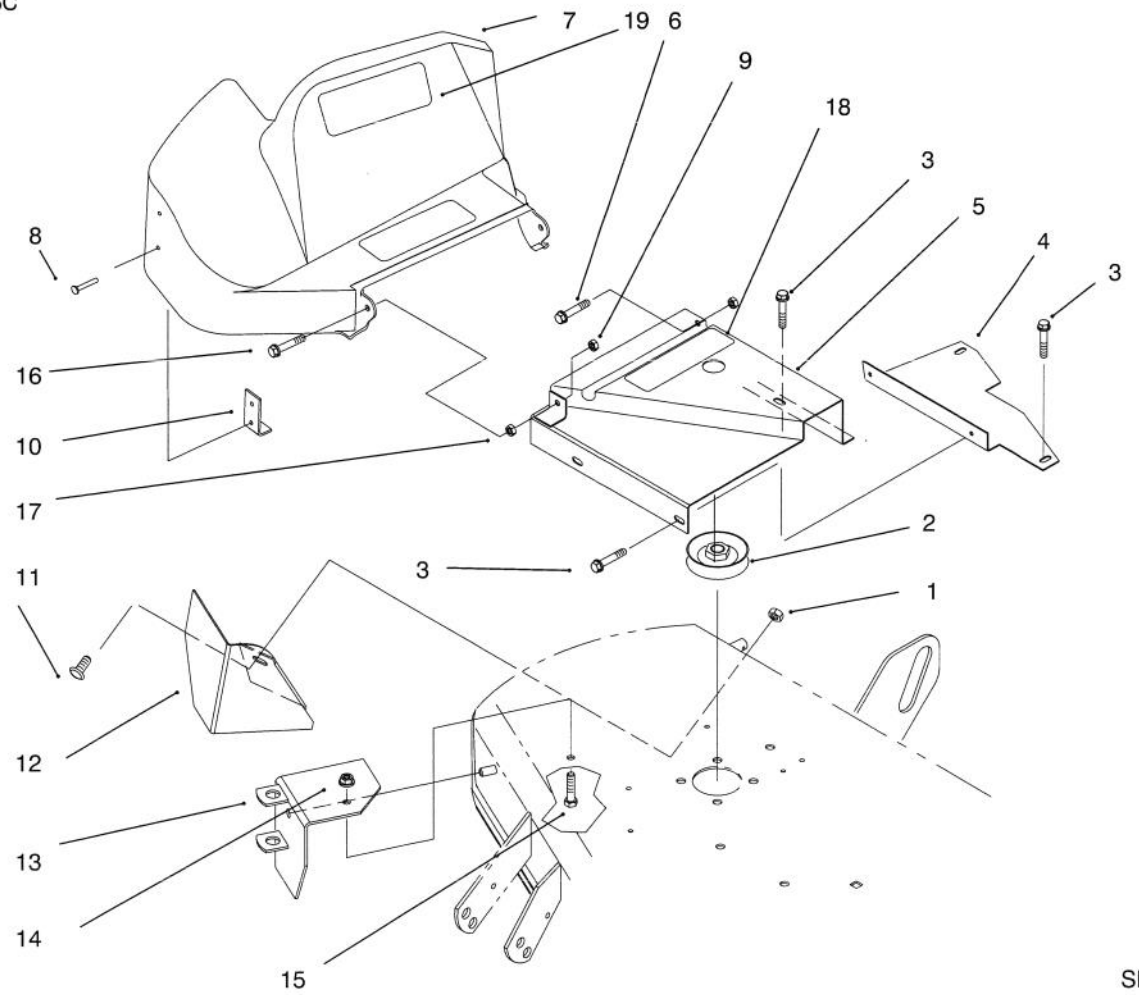


Sheet No.: 5

42" DECK COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296–39	Nut – Lock	1
2	79–7150	Pulley	1
3	32144–4	Screw – Hex Flange Hd.	6
4	79–7120	Adapter – Shield	1
5	92–1158	Inner Shield Asm. (Incl. Ref. #18)	1
6	321–3	Screw – Hex. Hd.	1
7	86–9300	Shield – Belt	1
8	79–0470	Rivet – Pop	4
9	3296–42	Nut – Lock	2
10	88–1870	Bracket – Shield Support	2

Ref. No.	Part No.	Description	No. Used
11	3231–22	Bolt – Carriage	1
12	79–7300	Deflector	1
13	79–7000	Support – Pivot	1
14	32128–20	Nut – Flange Lock	1
15	322–3	Screw – Hex. Hd.	1
16	321–9	Screw – Hex. Hd.	1
17	3217–5	Nut – Hex	1
18	79–7610	Decal – Danger	1
19	79–7620	Decal – Danger	1
*	92–1164	Belt Shield Asm. (Incl. Ref. #1 & 19)	1

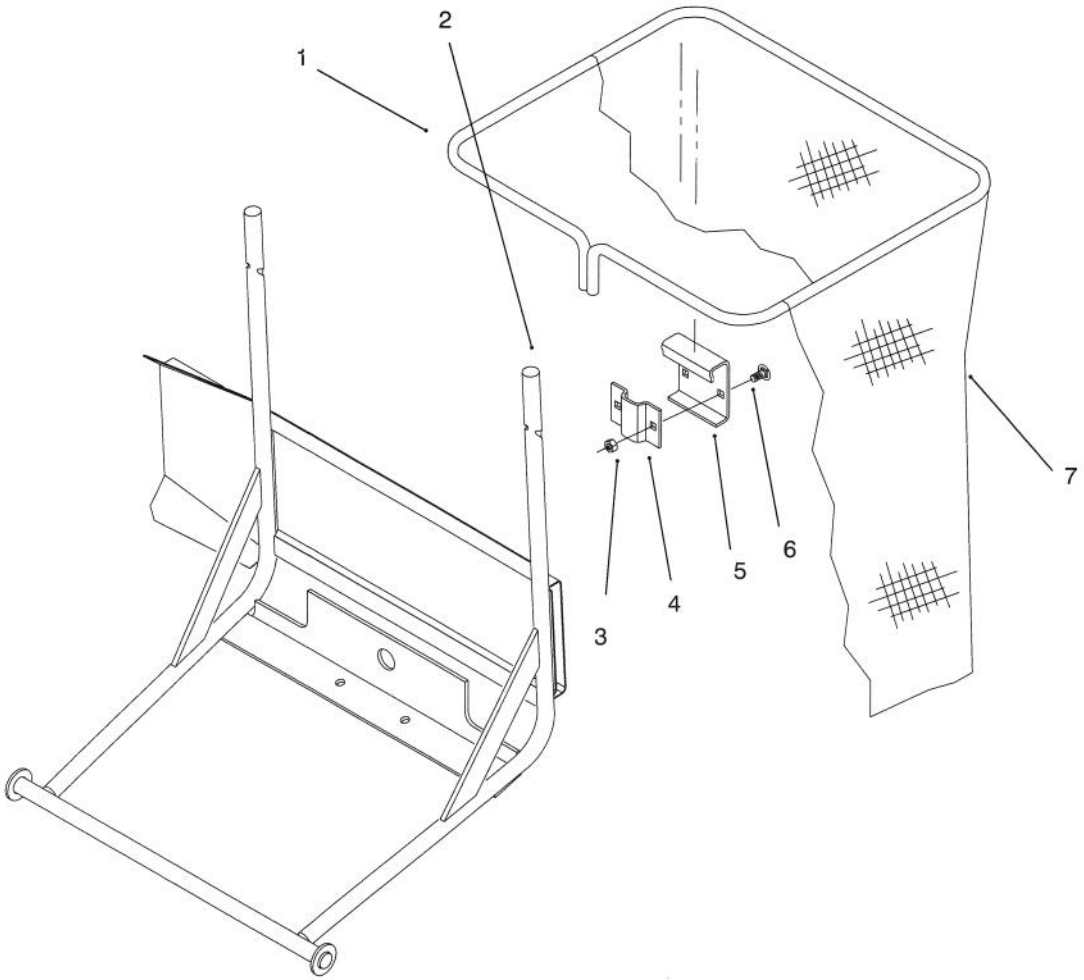

Sheet No.: 6

BAG & FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	114972	Frame – Bag	2
2	79–1860	Bracket – Quick Attach	1
3	3296–29	Nut – Lock	4
4	114974	Clamp	2

Ref. No.	Part No.	Description	No. Used
5	114973	Hanger – Bag	2
6	3230–1	Bolt – Carriage	4
7	93–1623	Bag	2

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
7038	Spacer	2	27	1
100284	Bushing	3	15	2
107213	Spacer – Pivot Link	3	7	1
114439	Rivet – Pop	1	3	24
114955	Frame – Bagger	1	26	1
114960	Pin – Spring	1	22	1
114961	Hinge – Bagger Top	1	28	1
114962	Spring – Extension	1	23	2
114966	Clamp – Seal	1	12	1
114967	Screen – Bagger	1	33	1
114969	Feeler – Full Bag	1	15	1
114972	Frame – Bag	5	1	2
114973	Hanger – Bag	5	5	2
114974	Clamp	5	4	2
115481	Latch – Bag Top	1	2	2
115880	Grip – Latch	1	1	2
116347	Decal – Easy Twin	1	14	1
117239	Seal – Chute	1	13	1
118320	Handle	1	21	1
9108372	Screw	1	6	2
9202704	Washer	1	4	4
9790944	Spacer	1	24	2
3296–39	Nut – Lock	4	1	1
22–9741	Spacer – Flanged	2	12	1
79–0470	Rivet – Pop	4	8	4
79–1380	Plate – Blower Mounting	3	26	1
79–1460	Pulley – Blower	2	28	1
79–1470	Shaft – Blower	2	26	1
79–1860	Bracket – Quick Attach	5	2	1
79–1970	Arm – Idler	3	3	1
79–2020	Rod – Compression	3	2	1
79–3970	Decal – Danger	1	25	1
79–4300	Impeller	2	20	1
79–6890	Housing – Blower	2	18	1
79–7000	Support – Pivot	4	13	1
79–7110	Spring – Compression	3	1	1
79–7120	Adapter – Shield	4	4	1
79–7150	Pulley	4	2	1
79–7170	Cover – Blower Bottom	2	21	1
79–7220	Latch – Deck	2	6	1
79–7240	Chute – Discharge	1	20	1
79–7280	Support – Belt Shield	3	14	1
79–7300	Deflector	4	12	1
79–7390	Spring – Extension	2	8	1
79–7440	Bracket – Housing Support	3	18	1
79–7480	Belt – 71"	3	12	1
79–7590	Plate – Decal Mtg.	1	11	1
79–7610	Decal – Danger	4	18	1
79–7620	Decal – Danger	4	19	1
82–5690	Retainer	2	11	1
86–9300	Shield – Belt	4	7	1
88–1870	Bracket – Shield Support	4	10	2
88–9570	Stiffener Assembly	1	30	1
92–1158	Inner Shield Asm.	4	5	1
92–1159	Bag Top Assembly	1	5	1
92–1164	Belt Shield Asm.	4	*	1
92–1736	Support – Screen	1	32	1
92–7099	Pulley – V–Idler	3	5	1
92–7113	Decal – Caution	1	34	1
93–1622	Pulley – Flat Idler	3	11	1
93–1623	Bag	5	7	2
233–68	Knob	1	19	1
2412–91	Clip	1	8	2
251–288	Bearing – Ball	2	16	2
251–341	Bearing – Flanged	2	15	4
321–3	Screw – Hex. Hd.	4	6	1
321–4	Screw – Hex. Hd.	2	24	1
321–4	Screw – Hex. Hd.	1	29	2
321–9	Screw – Hex. Hd.	4	16	1
322–3	Screw – Hex. Hd.	4	15	1
322–5	Screw – Hex. Hd.	3	23	1
323–6	Screw – Hex. Hd.	1	27	2
323–9	Screw – Hex. Hd.	3	10	1
323–10	Screw – Hex. Hd.	3	9	1
3217–5	Nut – Hex	4	17	1
3217–6	Nut – Hex	2	1	6
3217–26	Nut – Hex	2	3	2
3218–1	Nut	1	16	1
3220–6	Nut –	2	13	2
3229–22	Bolt – Carriage	2	19	6
3230–1	Bolt – Carriage	5	6	4
3230–1	Bolt – Carriage	3	22	3
3230–16	Bolt – Carriage	2	17	6
3231–22	Bolt – Carriage	4	11	1
3253–4	Washer – Lock	2	2	6
3253–8	Washer – Lock	2	14	2
3256–3	Washer – Flat	3	20	1
3256–4	Washer	3	6	2
3256–14	Washer – Flat	2	4	2
3256–22	Washer – Flat	2	22	7
3256–23	Washer	3	24	1
3256–24	Washer – Flat	3	8	1
3256–26	Washer – Flat	3	16	1
3256–49	Washer – Flat	1	18	1
3257–40	Key – Woodruff	2	25	1
3269–19	Rivet – Pop	1	10	2
3269–26	Washer – Backup	1	9	2
3272–7	Pin – Cotter	3	17	1
3272–10	Pin – Cotter	3	25	1
3290–479	Fastener – Panel	2	10	1
3296–29	Nut – Lock	5	3	4
3296–39	Nut – Lock	3	4	2
3296–39	Nut – Lock	1	31	2
3296–42	Nut – Lock	1	7	4
3296–42	Nut – Lock	2	9	1
3296–42	Nut – Lock	4	9	2
3296–56	Nut – Lock	2	23	6
32105–13	Screw – Hex Hd.	2	5	1
32128–20	Nut – Flange Lock	4	14	1
32128–20	Nut – Flange Lock	3	19	4
32144–4	Screw – Hex Flange Hd.	4	3	6
32144–8	Screw	1	1	17

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

MAINTENANCE RECORD

Date								