Form Number 3360-673 Rev A

Z Master® G3 Riding Mower
with 72in TURBO FORCE® Side Discharge Mower

Model No. 74967CP - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Front Frame, Caster Whee and Z Stand Assembly	4
Roll-Over Protection System Assembly No. 116-0232	5
Caster Wheel and Fork Assembly	6
Z Stand Assembly	7
Hydraulic Pump, Idler and Belt Assembly	8
Pump IIder Assembly No. 116-1255	9
LH Hydro Assembly No. 116-1382	10
RH Hydro Assembly No. 116-1383	11
Rear Wheel and Park Brake Assembly	12
Brake Handle Assembly No. 116-1878	13
Fuel System Assembly	14
Fuel Tank Assembly No. 109-9357	15
Seat Mounting Assembly	16
Seat Assembly No.109-9903	17
Motion Control Assembly	18
Fender, Console and Control Assembly	19
LH Console Assembly No. 115-7401	20
RH Console Assembly No. 115-7400	21
Electrical System Assembly	22
Deck Lift Assembly	23
Height-of-Cut Assembly No. 109-7438	24
Engine, Muffler and Clutch Assembly	25
Deck Assembly	26
Deck Decal Assembly No. 112-4195	28
Idler Assembly	29
Spindle Assembly No. 117-3840	30
Lever Assembly No. 107-1664	31
Rubber Deflector Assembly No. 108-2792	32
Cylinder and Crankcase Assembly Kawasaki FXT00V-AS06	33
Piston and Crankshaft Assembly Kawasaki FXT00V-AS06	34
Valve and Camshaft Assembly Kawasaki FXT00V-AS06	35
Lubrication Equipment Assembly Kawasaki FXT00V-AS06	36
Cooling Equipment Assembly Kawasaki FXT00V-AS06	37
Electric Equipment Assembly Kawasaki FXT00V-AS06	38
Control Equipment Assembly Kawasaki FXT00V-AS06	39
Carburetor Assembly Kawasaki FXT00V-AS06	40
Air Filter and Muffler Assembly Kawasaki FXT00V-AS06	41
Fuel Tank and Fuel Valve Assembly Kawasaki FXT00V-AS06	42
Starter Assembly Kawasaki FXT00V-AS06	43
Label Set Kawasaki FXT00V-AS06	44
Attachments and Accessories List	45


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Obtain parts from www.kawpowerepc.com

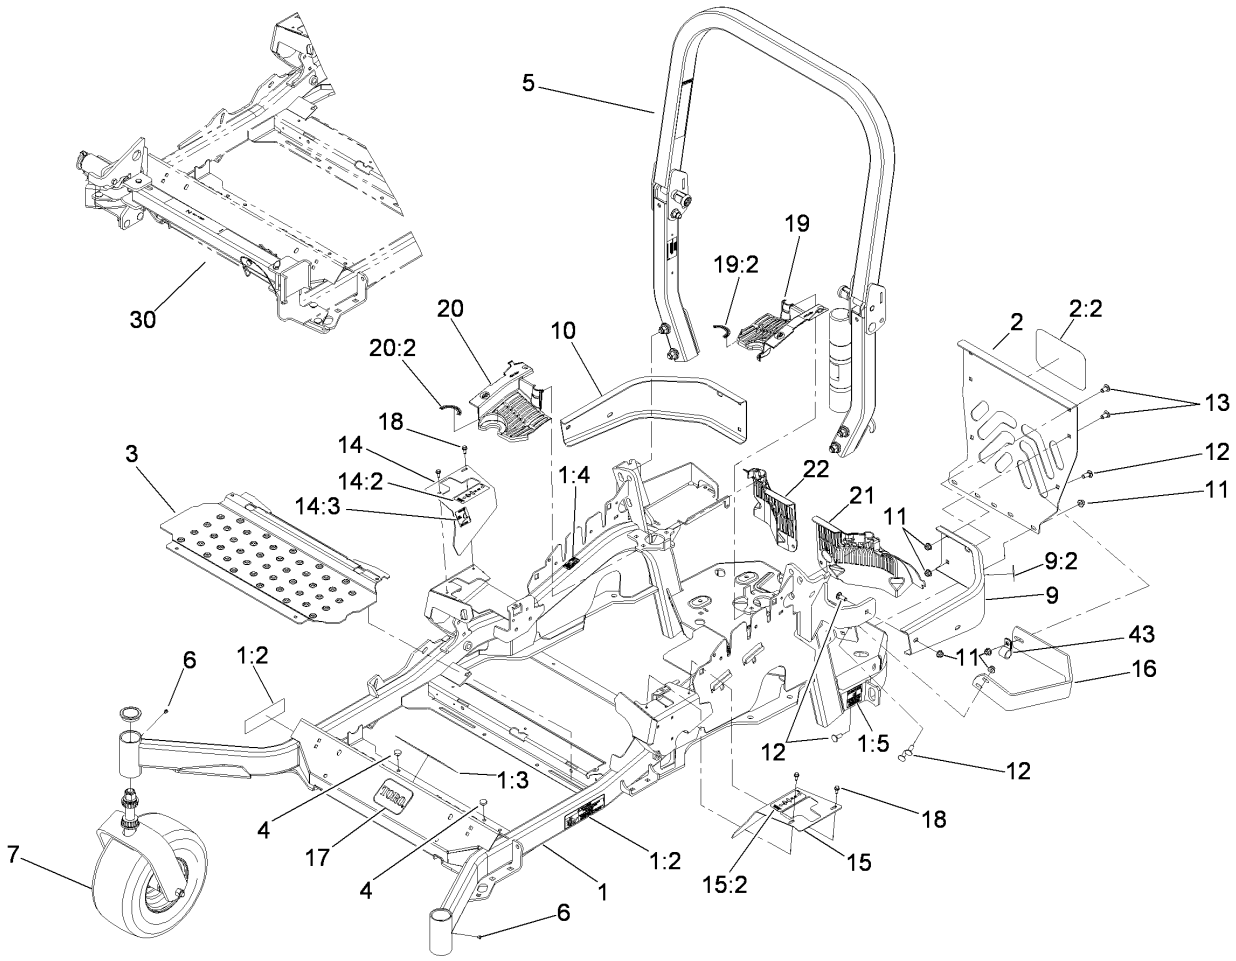

Front Frame, Caster Whee and Z Stand Assembly


Ref	Part No.	Qty.	Description
1	109-7349	1	Main Frame ASM
1:2	109-9477	2	Decal-Warning
1:3	107-2112	1	Decal-Warning
1:4	103-2076	2	Decal-Caution
1:5	116-0205	2	Decal-Belt Drive
2	115-7410	1	Rear Guard ASM
2:2	67-7320	1	Decal
3	116-0024-01	1	Floorpan
4	1-513658	2	Bumper
5	116-0232	1	ROPS ASM
6	1-811010	2	Plug
❷7		2	Caster Wheel ASM
9	116-0180	1	LH Bumper ASM
9:2	103-2076	1	Decal-Caution
10	116-0057-03	1	Bumper-RH
11	104-8301	11	Nut-Flange, NI
12	3231-22	7	Screw-CARR
13	3231-21	4	Screw-CARR
14	116-0579	1	RH Motion Control Cover ASM
14:2	109-7232	1	Decal-Motion Control
14:3	109-7929	1	Decal-Park Brake
15	116-0580	1	LH Motion Control Cover ASM
15:2	109-7232	1	Decal-Motion Control
16	116-0043-03	1	Guard-Muffler

Ref	Part No.	Qty.	Description
17	68-3640	1	Decal
18	32144-10	4	Screw-HWH
19	116-0170	1	LH Hydro Guard ASM
19:2	116-0157	1	Decal-Hydro Oil
20	116-0171	1	RH Hydro Guard ASM
20:2	116-0157	1	Decal-Hydro Oil
21	109-9057	1	Guard-Hydro, Rear LH
22	109-9058	1	Guard-Hydro, Rear RH
❷30		1	Z Stand ASM
43	1-633396	1	Clip-Loom

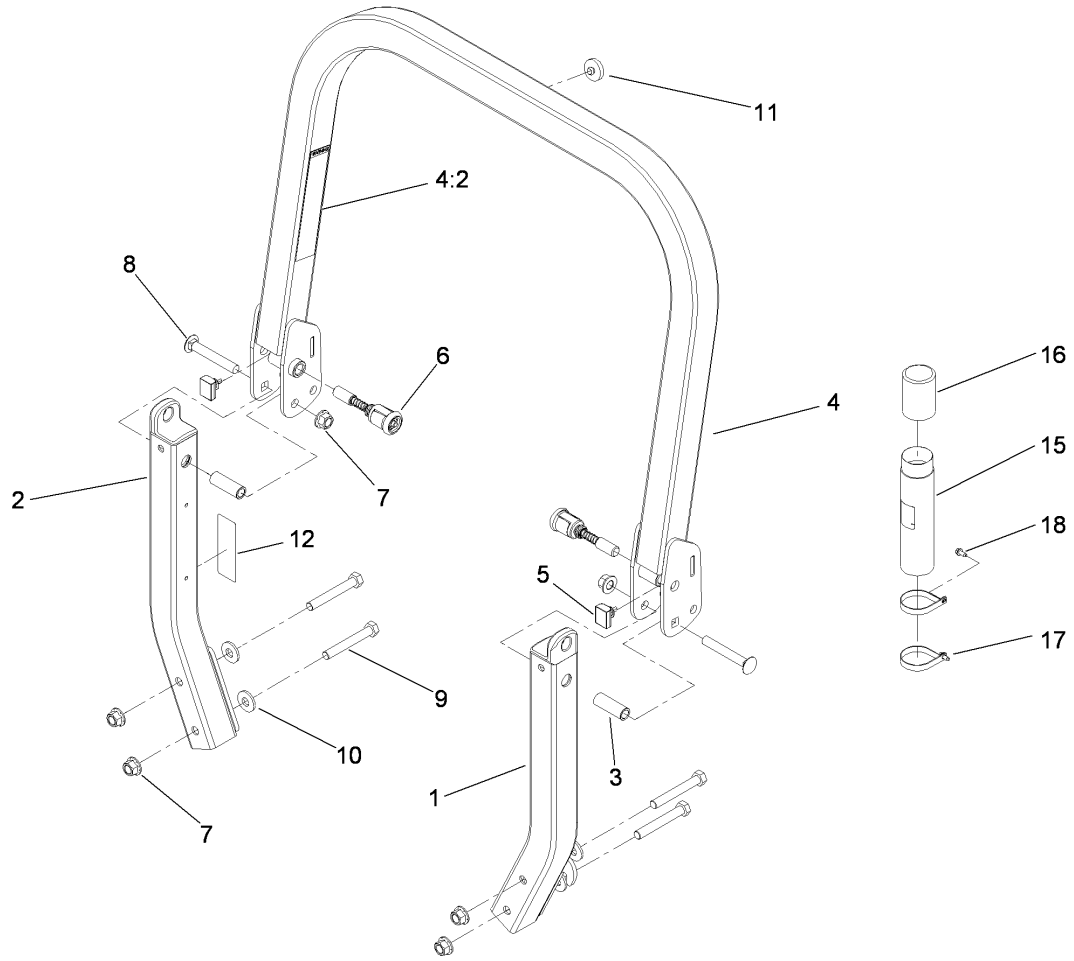


Roll-Over Protection System Assembly No. 116-0232

Ref	Part No.	Qty.	Description
❷1		1	Leg-ROPS, LH
❷2		1	Leg-ROPS, RH
3	109-6653	2	Spacer
❷4		1	Upper ROPS ASM
4:2	107-3069	1	Decal-Warning, Folding ROPS
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Spring Pin ASM
7	99-5107	6	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-17	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
15	104-7050	1	Tube-Manual
16	104-7048	1	Cap-Housing
17	107-1865	2	R-Clamp
18	32144-10	2	Screw-HWH

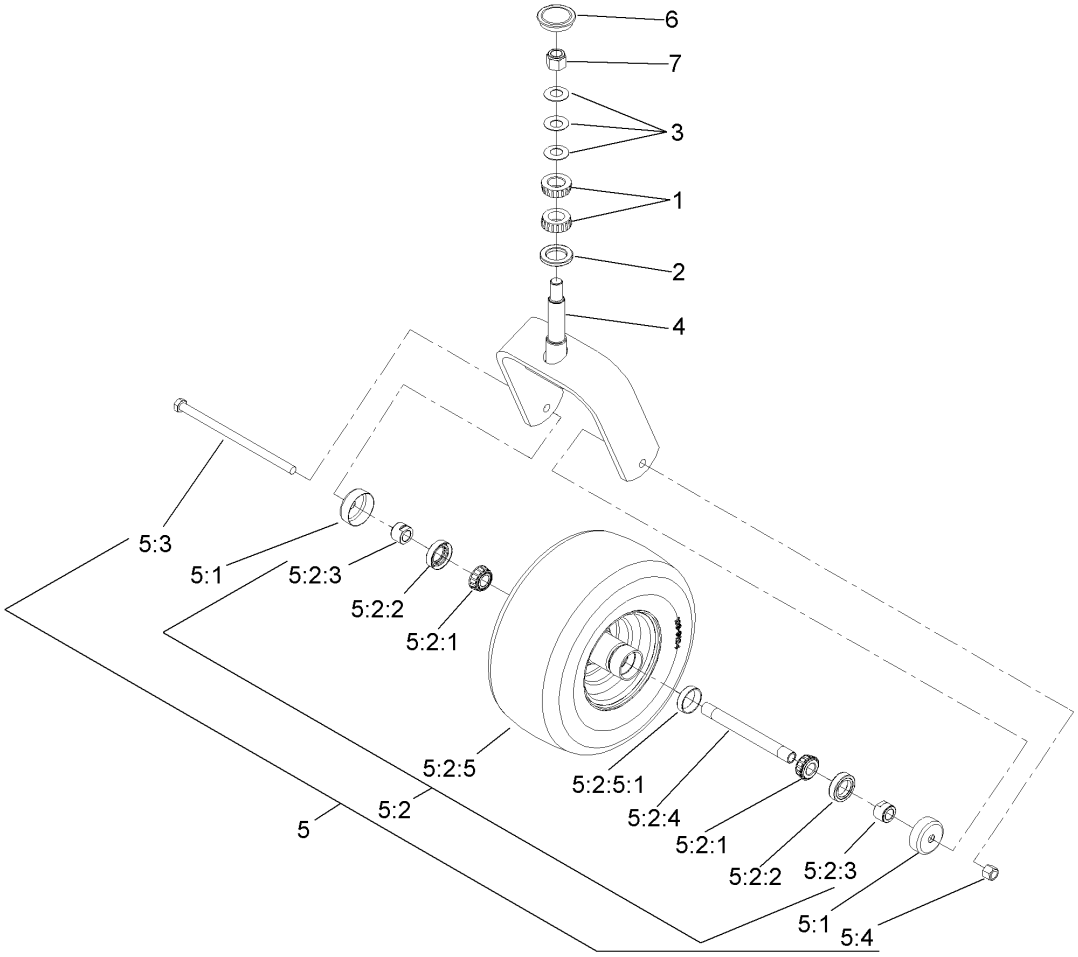


Caster Wheel and Fork Assembly

Ref	Part No.	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	1-543511	1	Seal-Grease
3	1-633508	3	Washer-Bellville
4	103-1474-01	1	Caster-Fork
5	109-9127	1	Wheel And Tire ASM
5:1	103-2768	2	Guard-Seal
❷5:2		1	Wheel And Tire ASM
5:2:1	1-633585	2	Bearing-Cone, Taper
5:2:2	103-0063	2	Seal-Caster
5:2:3	103-3051	2	Spacer-Nut
5:2:4	103-5156	1	Axle-Caster
5:2:5	109-9124	1	Wheel And Tire ASM
5:2:5:1	1-633584	1	Bearing-Cup
5:3	325-39	1	Screw-HH
5:4	3296-23	1	Nut-Lock, NI
6	103-4882	1	Cap-Grease
7	3296-51	1	Nut-Lock, NI

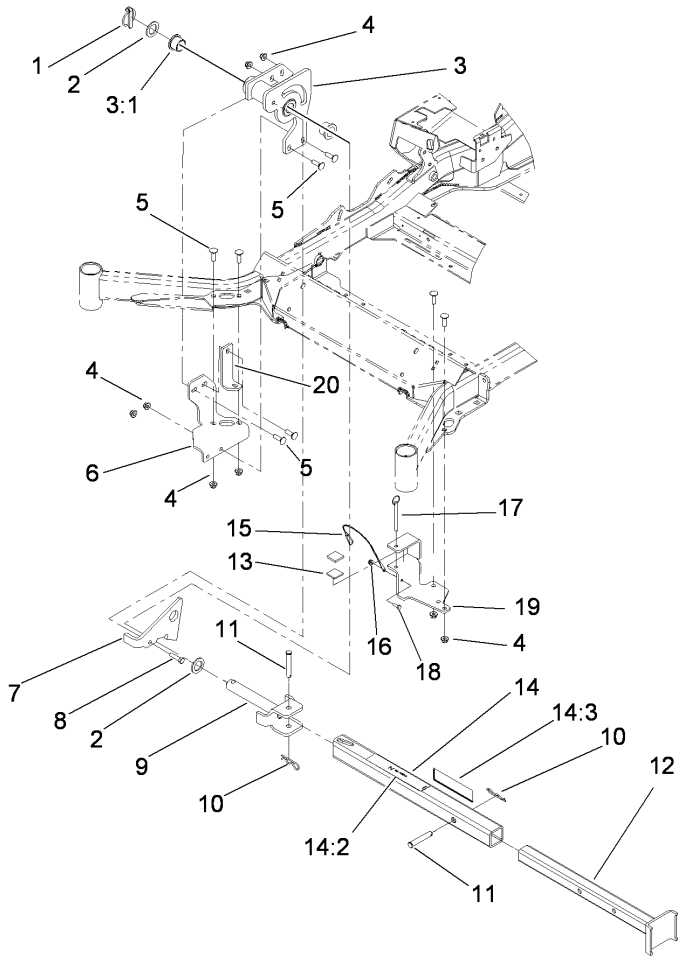


Z Stand Assembly

Ref	Part No.	Qty.	Description
1	283-71	1	Pin-Lynch
2	3-6781	2	Washer-Thrust
3	117-0353	1	Z Stand Pivot ASM
3:1	94-1291	2	Bushing
4	104-8301	9	Nut-Flange, NI
5	3231-25	8	Screw-CARR
6	117-0351-01	1	Bracket-Z Stand, Pivot Mount
7	100-9686-01	1	Bracket-Latch
8	323-8	1	Screw-HH
9	100-9692-01	1	Pivot Pin ASM
10	3290-355	2	Pin-Hair
11	283-55	2	Pin-Clevis
12	115-3631-01	1	Inner Tube ASM
13	115-3613	2	Cushion Rubber
14	117-0360	1	Outer Tube ASM
14:2	106-7464	1	Decal-Z Stand
14:3	107-3969	1	Decal-Warning
15	100-9385	1	Lanyard-Nylon
16	104-7201	1	Nut-HF
17	105-1647	1	Pin-Hitch, Cotterless
18	321-4	1	Screw-HH
19	115-3625-01	1	Z Stand Cradle ASM
20	117-0398-01	1	Bracket-Support

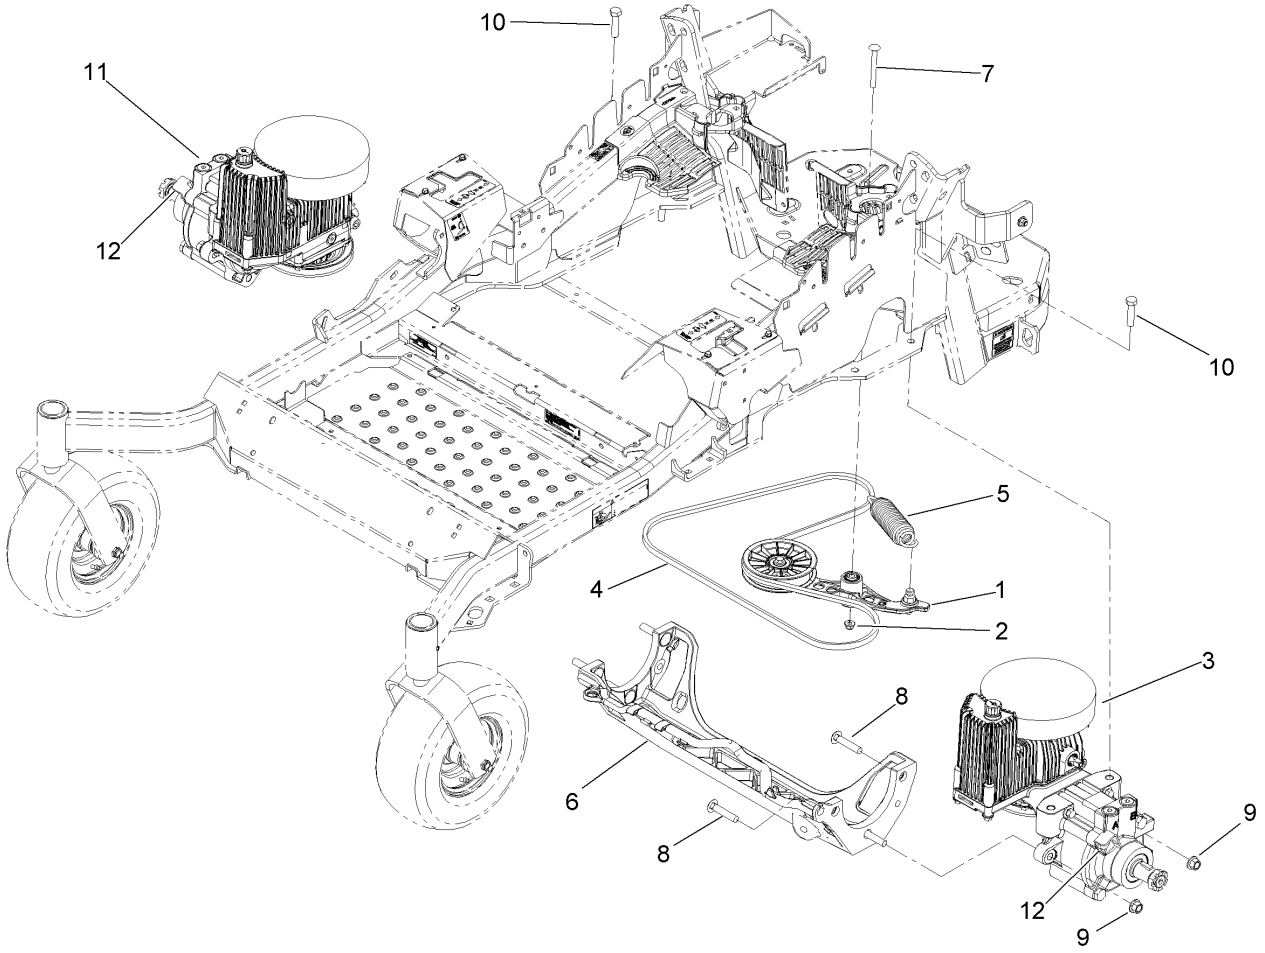


Hydraulic Pump, Idler and Belt Assembly

Ref	Part No.	Qty.	Description
1	116-1255	1	Pump Idler ASM
2	109-6658	1	Nut-Flange, NI (Split)
3	116-1382	1	LH Hydro ASM (16Cc W/Shock)
4	109-3388	1	Belt
5	116-0133	1	Extension-Spring
6	109-9375	1	Cradle-Hydro, Machined
7	3231-41	1	Bolt-Carriage
8	3233-34	6	Screw-CARR
9	99-5107	6	Nut-Lock
10	325-8	4	Screw-HH
11	116-1383	1	RH Hydro ASM (16Cc W/Shock)
12	116-1758	2	Bracket-Anchor, Cable
❶99	114-4713	1	Hypr-Oil 500 (Quart)
❶99	114-4714	1	Hypr-Oil 500 (Gallon)
❶99	114-4715	1	Hypr-Oil 500-5 (5 Gallon)
❶99	117-0390	1	Filter-Hydro

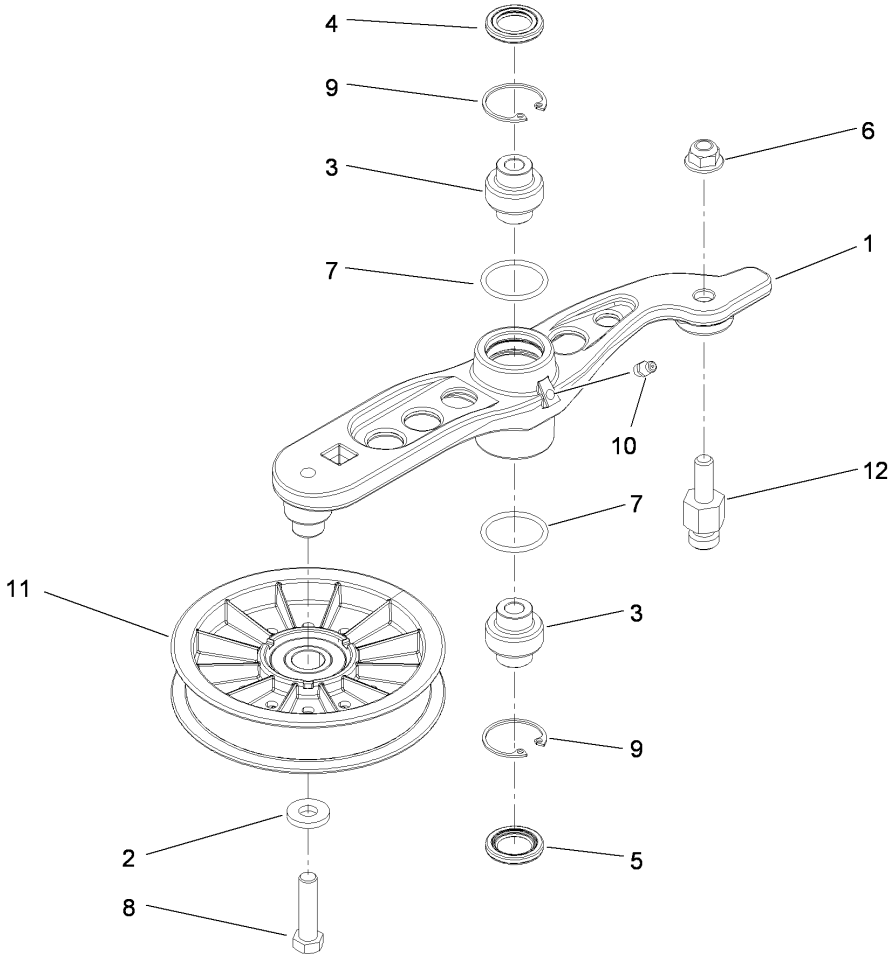


Pump Ilder Assembly No. 116-1255

Ref	Part No.	Qty.	Description
❷1		1	Arm-Pump, Idler
2	43-0940	1	Spacer-Hub, Blower
3	103-3504	2	Bearing-Spherical
4	103-3505	1	Seal-Double Lip
5	103-3506	1	Seal-Single Lip
6	109-6658	1	Nut-Flange, NI (Split)
7	106-7159	2	O-Ring
8	323-8	1	Screw-HH
9	32120-10	2	Ring-Snap
10	302-19	1	Fitting-Grease
11	109-8076	1	Pulley-Idler
12	109-7399	1	Pin-Anchor, Spring

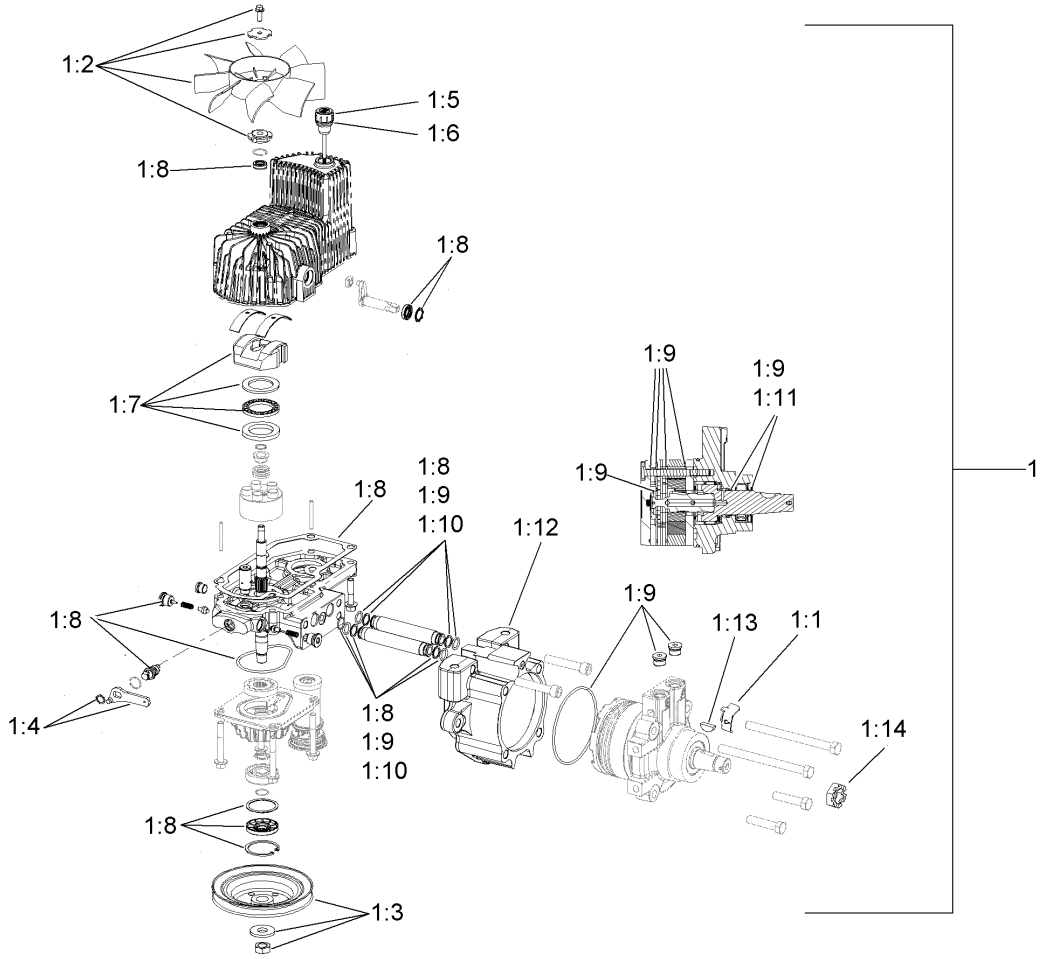


LH Hydro Assembly No. 116-1382

Ref	Part No.	Qty.	Description
❷1		1	Hydro-LH
1:1	116-1758	1	Bracket-Anchor, Cable
1:2	116-0233	1	Fan Kit
1:3	116-0234	1	Pulley Kit
1:4	116-0235	1	Handle-Bypass Valve, Hydro
1:5	116-0236	1	Dipstick-Hydro W/Gasket
1:6	116-0237	1	Gasket-Dipstick, Hydro
1:7	116-1367	1	Swash Block Kit
1:8	116-1368	1	Pump Seal Kit
1:9	116-1369	1	Motor Seal Kit
1:10	116-1370	1	Tube Seal Kit
1:11	116-1371	1	Output Shaft Seal Kit
1:12	116-1372	1	Cup-Nose
1:13	3257-42	1	Key-Woodruff
1:14	1-809036	1	Nut-HH
❶1:99	116-1373	1	Flow Test Kit

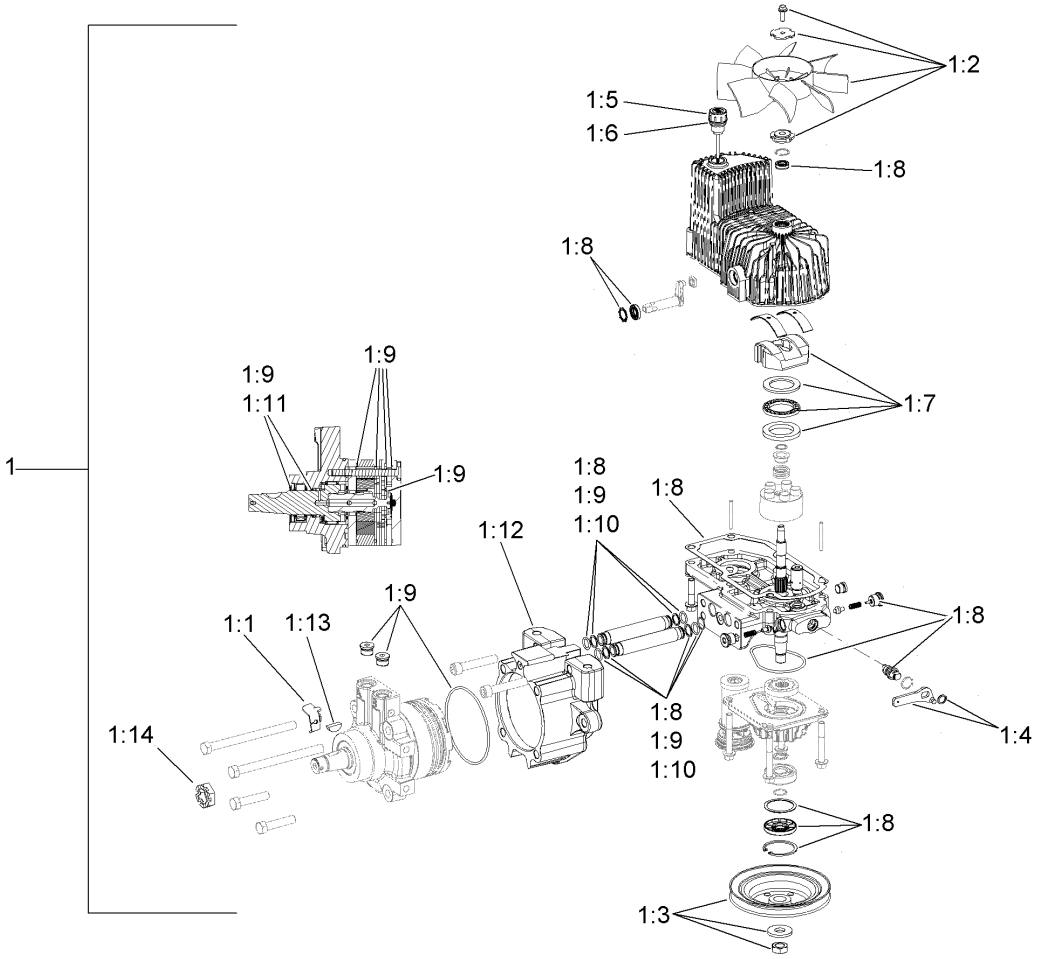

RH Hydro Assembly No. 116-1383


Ref	Part No.	Qty.	Description
❷1		1	Hydro-RH
1:1	116-1758	1	Bracket-Anchor, Cable
1:2	116-0233	1	Fan Kit
1:3	116-0234	1	Pulley Kit
1:4	116-0235	1	Handle-Bypass Valve, Hydro
1:5	116-0236	1	Dipstick-Hydro W/Gasket
1:6	116-0237	1	Gasket-Dipstick, Hydro
1:7	116-1367	1	Swash Block Kit
1:8	116-1368	1	Pump Seal Kit
1:9	116-1369	1	Motor Seal Kit
1:10	116-1370	1	Tube Seal Kit
1:11	116-1371	1	Output Shaft Seal Kit
1:12	116-1372	1	Cup-Nose
1:13	3257-42	1	Key-Woodruff
1:14	1-809036	1	Nut-HH
❶1:99	116-1373	1	Flow Test Kit

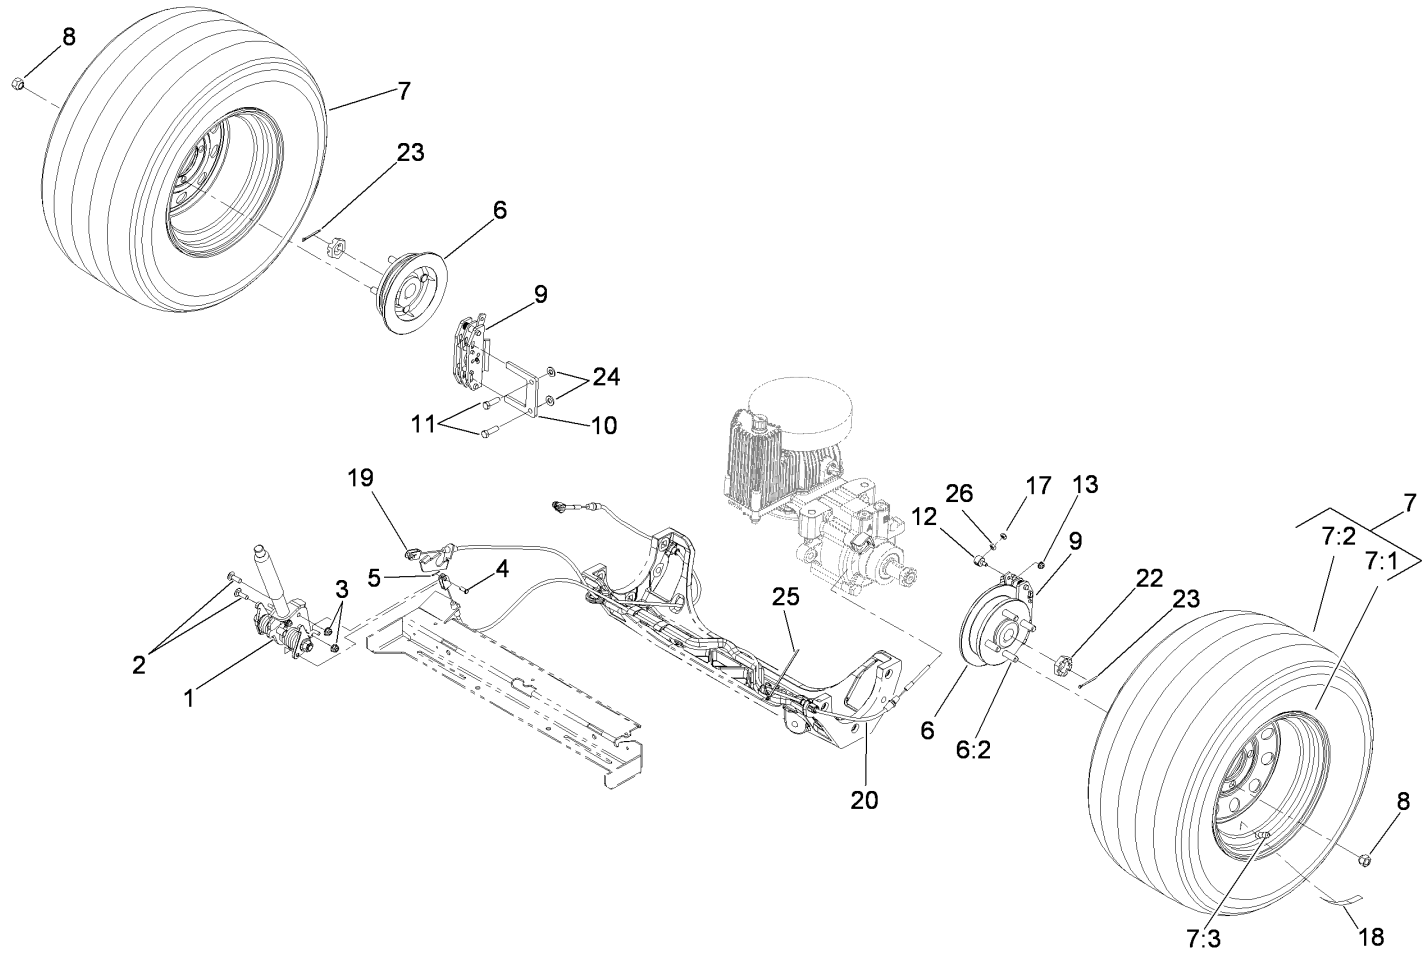

Rear Wheel and Park Brake Assembly


Ref	Part No.	Qty.	Description
1	116-1878	1	Brake Handle ASM
2	3230-2	2	Bolt-CARR
3	104-8300	2	Nut-Flange, NI
4	60-1730	2	Pin-Clevis
5	3272-1	2	Pin-Cotter
6	117-6163	2	Wheel Hub And Stud ASM
6:2	1-633926	4	Stud-Wheel
7	109-3158	2	Wheel & Tire ASM
7:1	109-3156	1	Rim ASM
7:2	103-2744	1	Tire
7:3	232-27	1	Stem-Valve
8	242-50	8	Nut-Lug
9	109-2889	2	Caliper-Brake
10	109-0958	2	Plate-Mount, Brake
11	323-7	4	Screw-HH
12	112-8379	2	Swivel
13	104-7201	2	Nut-HF
17	3296-13	2	Nut-Lock NI
18	116-0165	2	Decal-Hub, Wheel
19	115-3584	1	Cable
20	115-3585	1	Cable
22	1-809036	2	Nut-HH
23	1-806800	2	Pin-Cotter
24	3256-24	4	Washer-Flat

Ref	Part No.	Qty.	Description
25	116-0940	1	Tie-Cable
26	3219-1	2	Nut-Hex

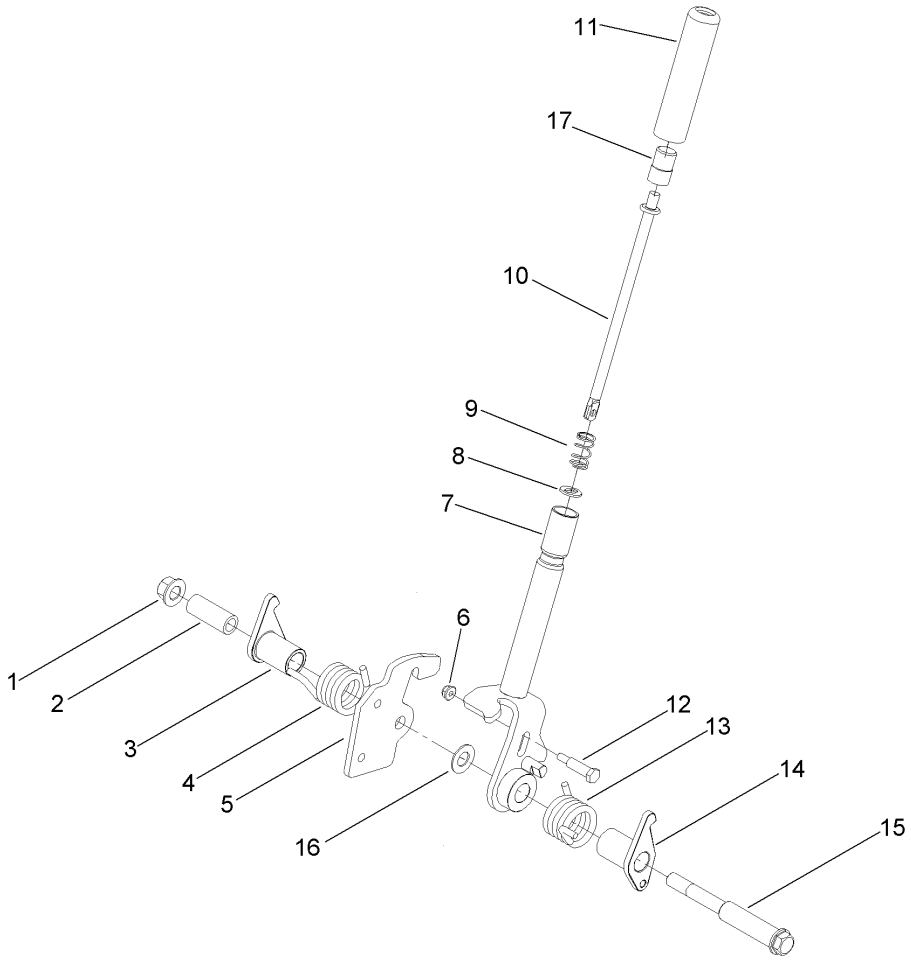


Brake Handle Assembly No. 116-1878

Ref	Part No.	Qty.	Description
1	99-5107	1	Nut-Lock
2	117-0380	1	Spacer
3	115-3580	1	Arm-Brake, LH
4	117-0376	1	Spring-Torsion, RH
5	115-3574	1	Plate-Latch
6	104-7201	1	Nut-HF
7	116-1876-03	1	Brake Handle ASM
8	114-1207	1	Washer-Special
9	114-8187	1	Spring-Compression
10	115-3581	1	Rod-Release, Brake
11	115-3592	1	Grip
12	112-8387	1	Bolt-Shoulder
13	117-0375	1	Spring-Torsion, LH
14	115-3579	1	Arm-Brake, RH
15	117-0379	1	Bolt-Shoulder
16	117-0378	1	Washer
17	115-2750	1	Knob

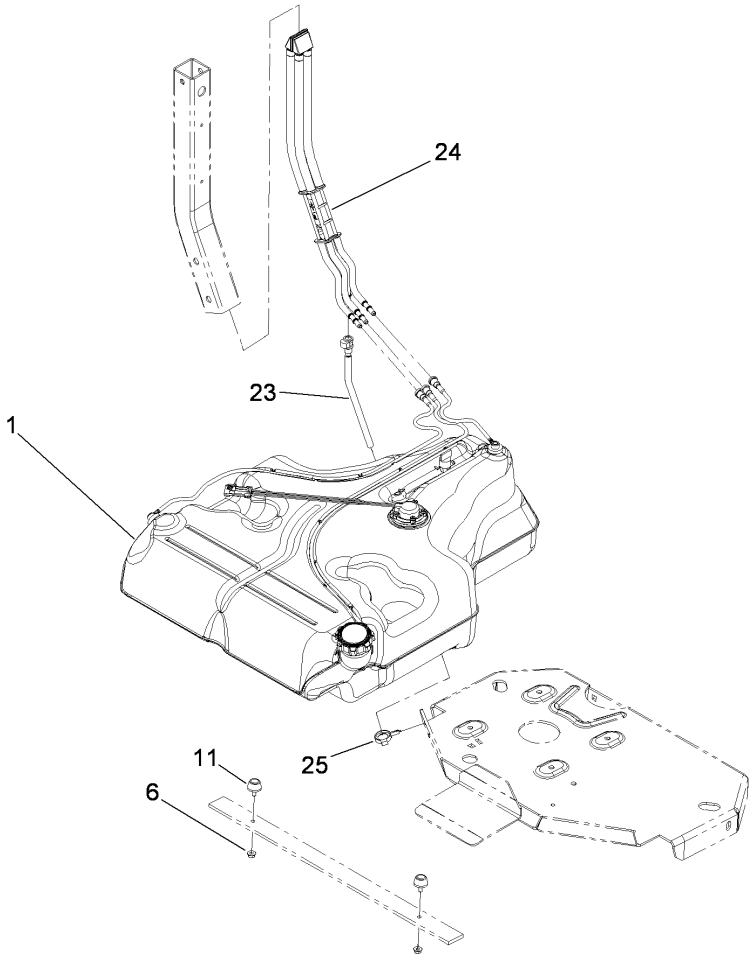


Fuel System Assembly

Ref	Part No.	Qty.	Description
1	109-9656	1	Fuel Tank ASM (W/O Sender)
1	109-9357	1	Fuel Tank ASM
6	32128-33	2	Nut-HF
11	109-2365	2	Bumper-Rubber (W/Stud)
23	109-9450	1	Tube-Vent, Fuel Drain
24	109-9491	1	Fuel Manifold Vent ASM
25	105-1853	1	Clamp-Hose

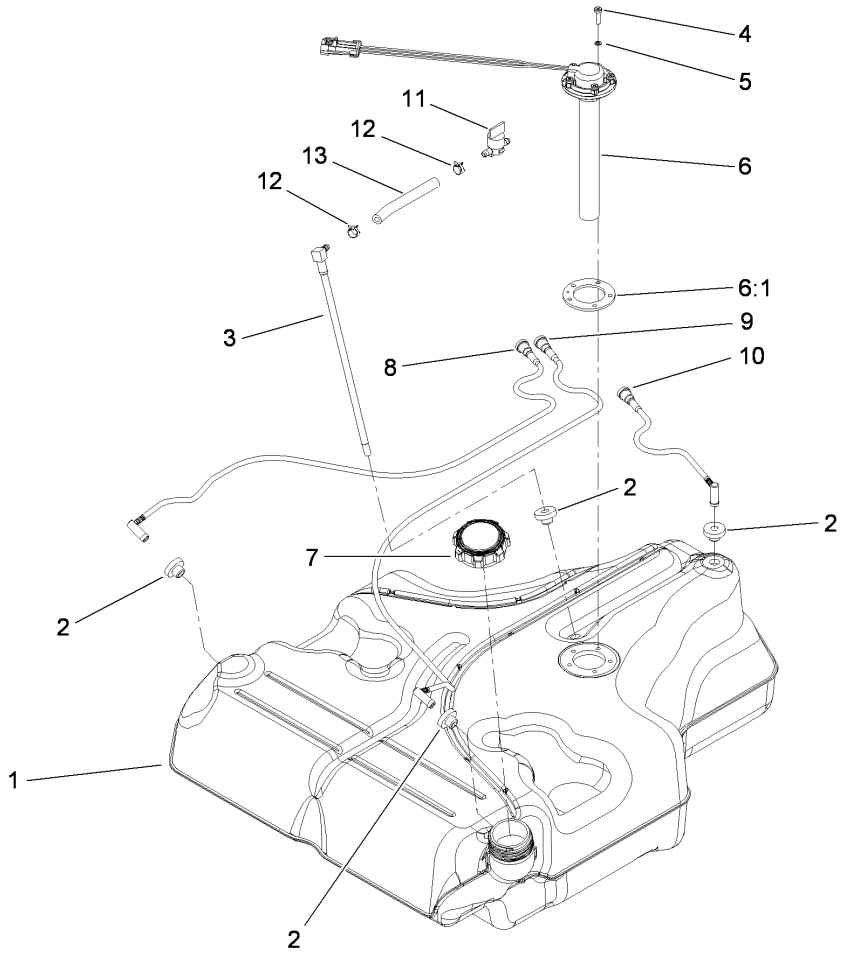


Fuel Tank Assembly No. 109-9357

Ref	Part No.	Qty.	Description
❷1		1	Tank-Fuel, Belly
2	46-6560	4	Bushing
3	109-9364	1	Fitting-Fuel (W/Line And Screen)
4	9107944	5	Screw-Pan
5	3253-17	5	Washer-Lock
6	116-0003	1	Sender-Fuel Level
6:1	109-9620	1	Gasket-Sender, Fuel
7	109-9619	1	Cap-Fuel
8	109-9447	1	Tube-Vent, RH
9	109-9448	1	Tube-Vent, LH
10	109-9449	1	Tube-Vent, Rear
11	1-603770	1	Valve-Fuel
12	2412-98	2	Clamp
13	109-0650	1	Hose-Fuel

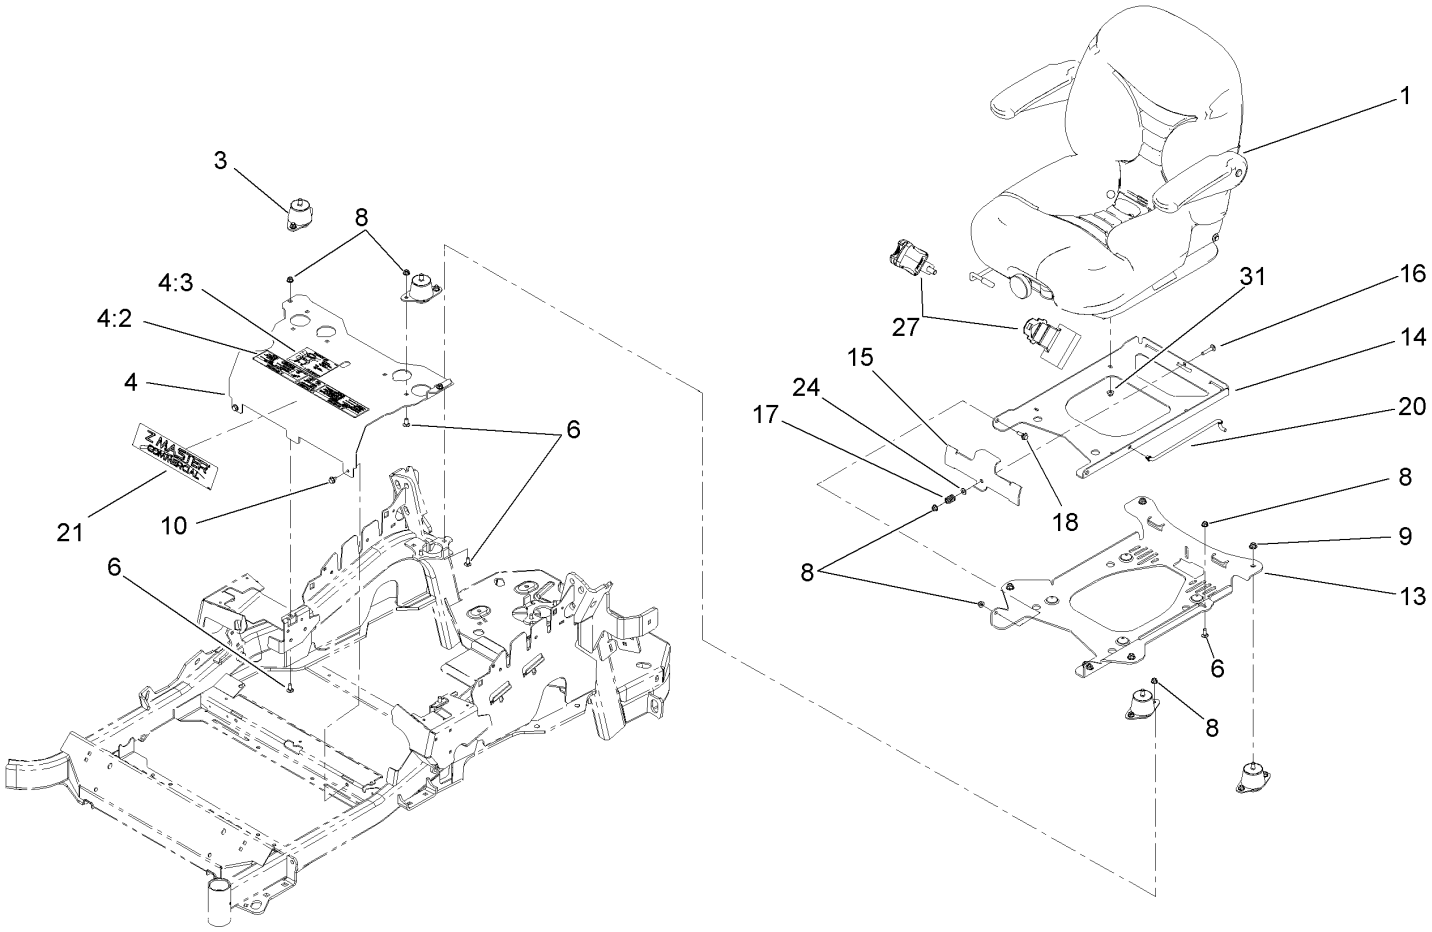


Seat Mounting Assembly

Ref	Part No.	Qty.	Description
1	109-9903	1	Seat ASM
3	109-9034	4	Isolator-Seat
4	109-9036	1	Mount-Seat
4:2	109-7069	1	Decal-Console
4:3	116-0211	1	Decal-Service Aid
6	3230-23	11	Screw-CARR
8	104-8300	14	Nut-Flange, NI
9	104-8301	4	Nut-Flange, NI
10	9266934	2	Screw
13	116-0181-03	1	Plate-Support, Seat Tilt
14	116-0179-03	1	Plate-Frame, Seat Tilt
15	109-9881-03	1	Plate-Latch, Seat
16	3230-4	1	Screw-CARR
17	107-3017	1	Spring-Compression
18	116-1297	2	Screw, Shoulder
20	116-0070	1	Rod-Prop
21	114-5878	1	Decal-Dash
24	3256-23	1	Washer-Flat
27	116-0751	1	Seat Belt Kit (Short)
31	32128-25	4	Nut-HF

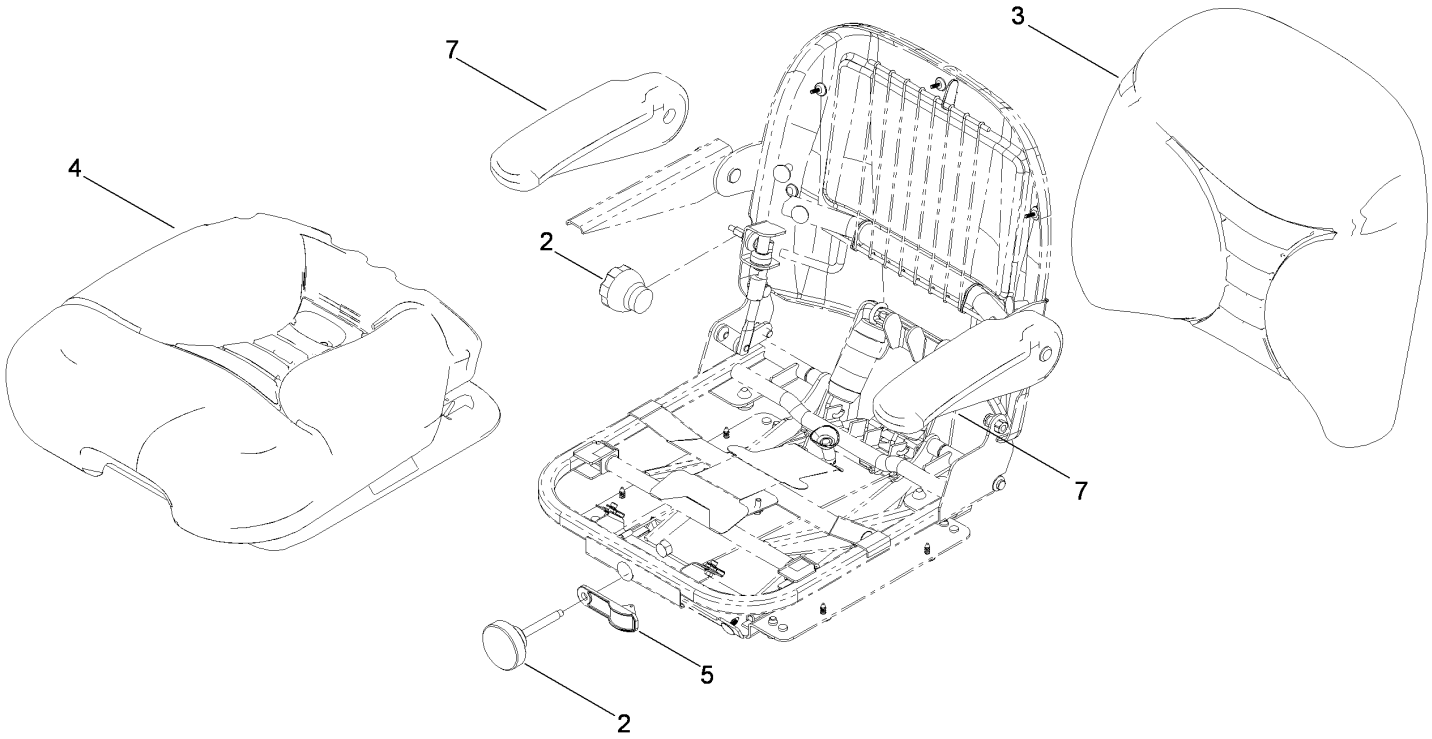

Seat Assembly No.109-9903


Ref	Part No.	Qty.	Description
2	107-1881	1	Knob Kit
3	107-1882	1	Back Cushion Kit
4	107-1883	1	Bottom Cushion Kit
5	107-1885	1	Weight Indicator Kit
7	107-1887	1	Armrest Kit

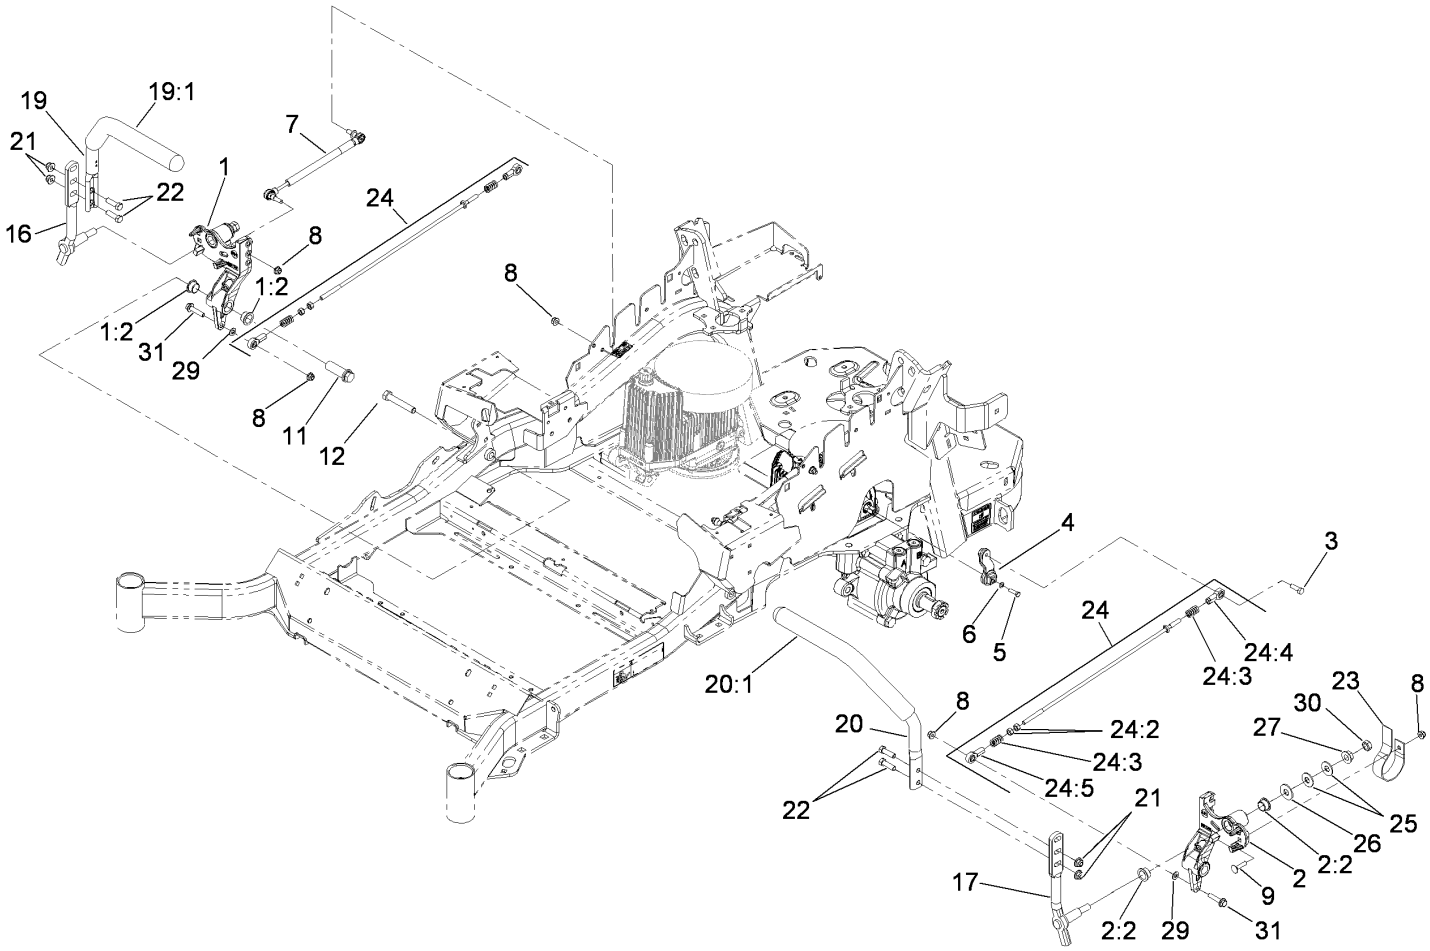

Motion Control Assembly


Ref	Part No.	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	116-0648	2	Screw-Thread Locking
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH
6	1-303435	2	Washer-Spring
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-Flange, NI
9	3230-2	2	Bolt-CARR
11	109-5891	2	Hub-Threaded
12	325-12	2	Screw-HH
16	116-0039	1	Lever-Control Motion, RH
17	116-0040	1	Lever-Control Motion, LH
19	109-6591	1	RH Steering Handle ASM
19:1	106-9987	1	Grip-Control, Motion
20	109-6592	1	LH Steering Handle ASM
20:1	106-9987	1	Grip-Control, Motion
21	104-8301	4	Nut-Flange, NI
22	323-7	4	Screw-HH
23	109-5575	2	Spring-Leaf

Ref	Part No.	Qty.	Description
24	109-8106	2	Front Pump Linkage ASM
24:2	3219-2	2	Nut-Hex
24:3	1-323245	2	Spring-Compression
24:4	1-633152	1	Balljoint-LH
24:5	1-543017	1	Balljoint-RH
25	109-9505	4	Washer-Spring
26	3256-6	2	Washer-Flat
27	32128-56	2	Nut-HF
29	3256-23	2	Washer-Flat
30	3218-5	2	Nut-Jam
31	115-1794	2	Screw-HHF

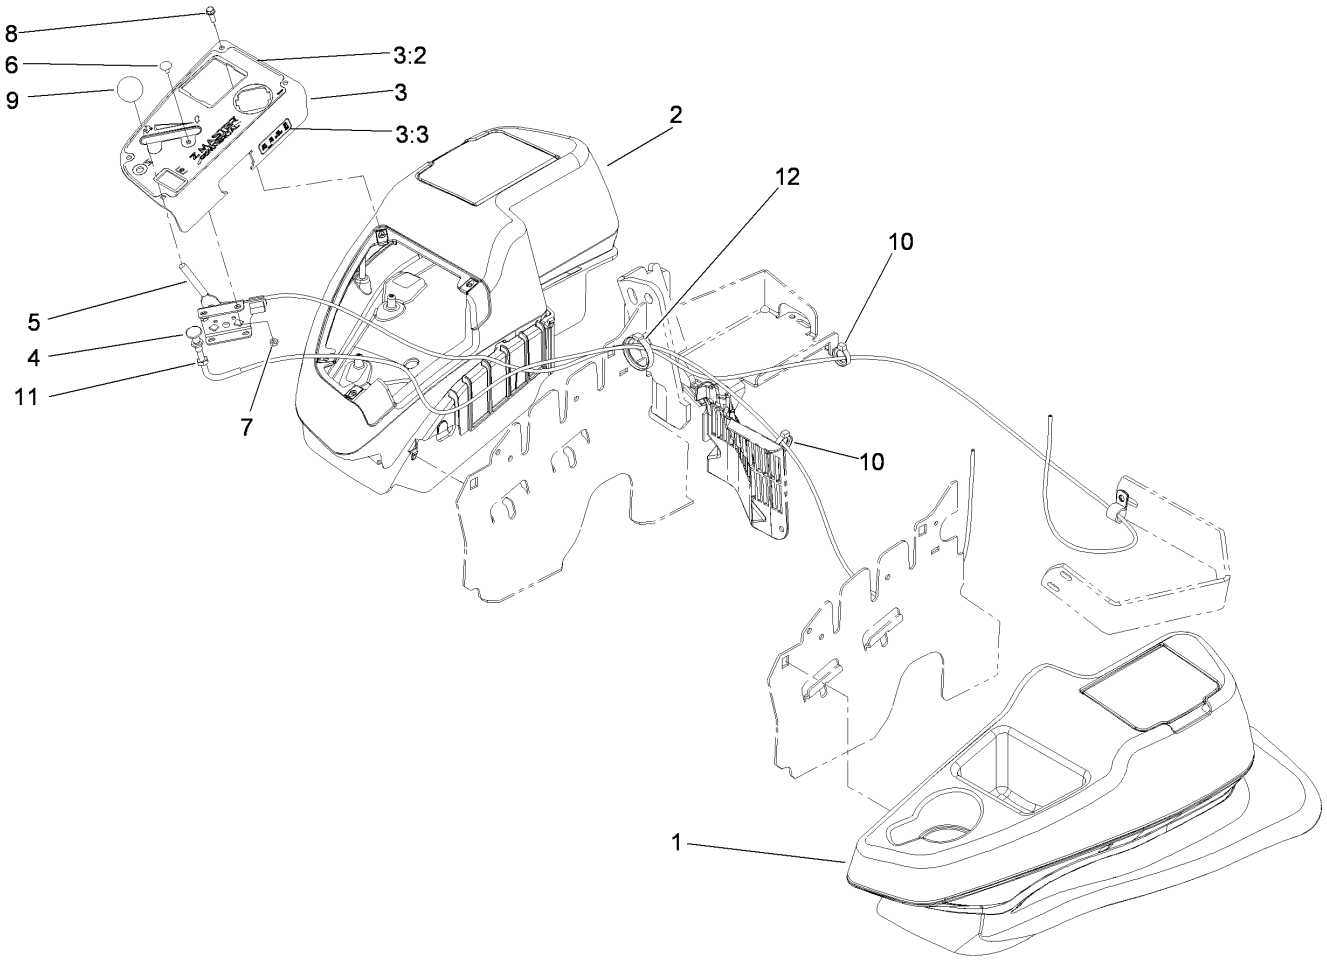


Fender, Console and Control Assembly

Ref	Part No.	Qty.	Description
1	115-7401	1	LH Wide Fender/Console ASM
2	115-7400	1	RH Wide Fender/Console ASM
3	114-9836	1	Control Panel ASM
3:2	114-9834	1	Decal-Panel, Control
3:3	114-4466	1	Decal-Fuses
4	115-2754	1	Control-Choke ASM
5	115-2751	1	Control-Throttle ASM
6	1-807513	2	Bolt-CARR
7	3296-2	2	Nut-Lock, NI
8	32105-15	4	Screw
9	1-603175	1	Knob-Ball
10	105-1853	2	Clamp-Hose
11	3220-3	1	Nut-HJ
12	117-7817	1	Clamp-Harness

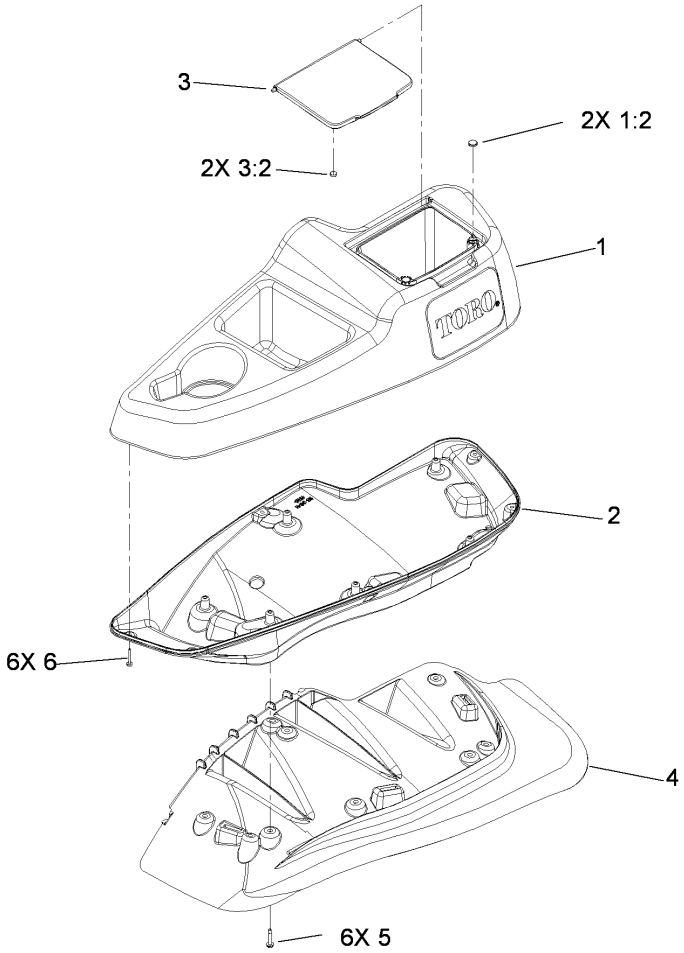


LH Console Assembly No. 115-7401

Ref	Part No.	Qty.	Description
1	114-1539	1	LH Wide Console Top ASM
1:2	117-0883	2	Puck
2	115-3641	1	Console-Lwr, LH Wide
3	114-1537	1	Wide Lid ASM
3:2	114-5896	2	Magnet
4	109-9085	1	Fender-Wide, LH
5	32144-89	6	Screw-Thread Forming
6	117-0347	6	Screw-Fillister Head

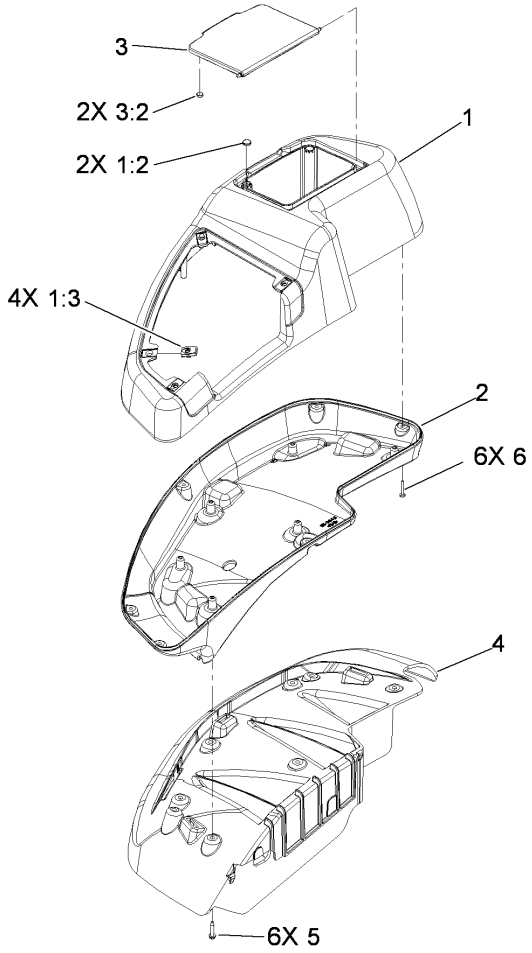

RH Console Assembly No. 115-7400


Ref	Part No.	Qty.	Description
1	114-1538	1	RH Wide Top Console ASM
1:2	117-0883	2	Puck
1:3	107069	4	Clip
2	115-3643	1	Console-Lwr, RH Wide
3	114-1537	1	Wide Lid ASM
3:2	114-5896	2	Magnet
4	109-9083	1	Fender-Wide, RH
5	32144-89	6	Screw-Thread Forming
6	117-0347	6	Screw-Fillister Head

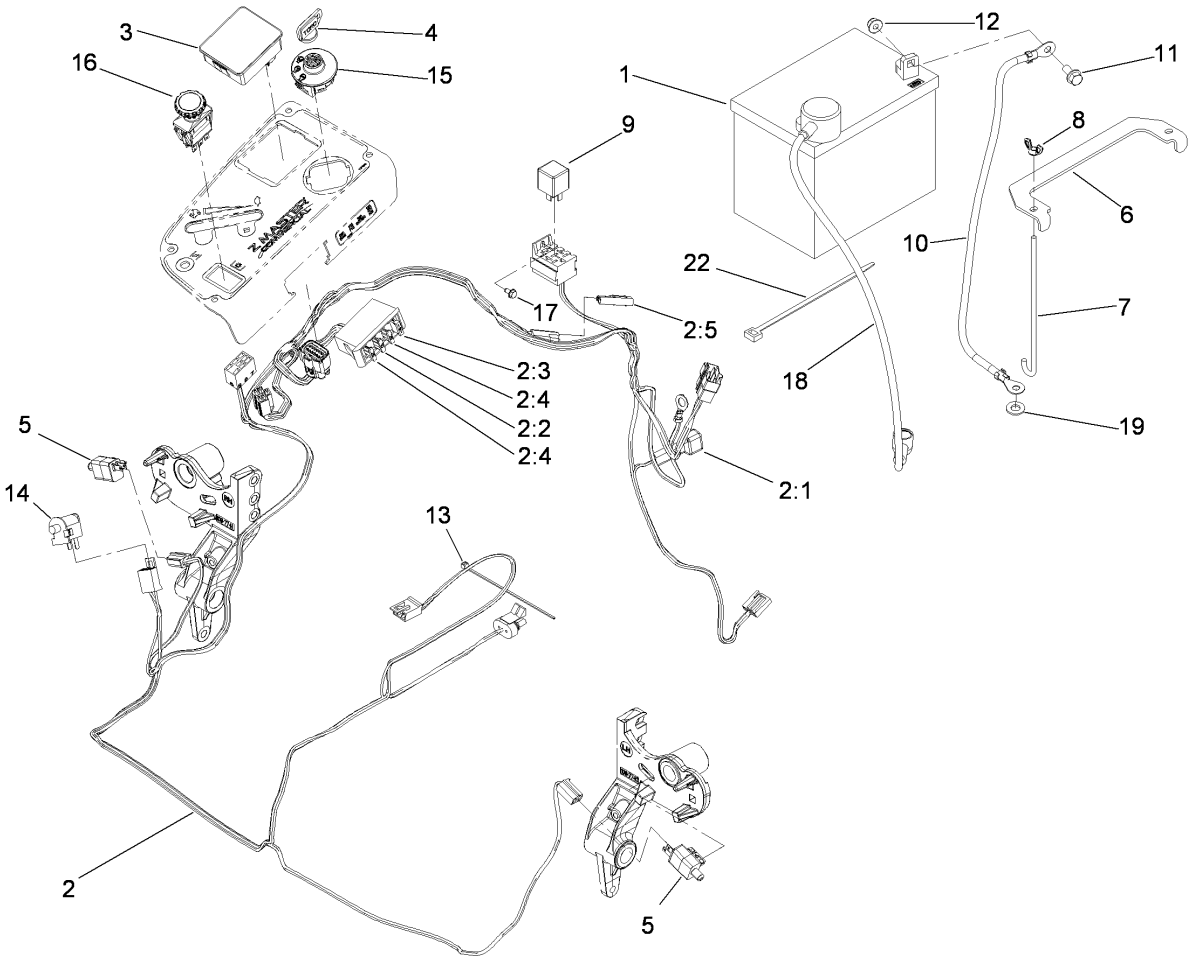

Electrical System Assembly

Ref	Part No.	Qty.	Description
1	104-2492	1	Battery
2	115-2796	1	Harness-Wire, Main
2:1	103-3895	1	Diode-Tvs
2:2	218-578	1	Fuse-10 Amp
2:3	109355	1	Fuse-15 Amp
2:4	109102	2	Fuse-25 Amp
2:5	116-0053	1	Cap-Plug
3	116-0916	1	Module-Meter, Hour
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch-Single Pole No
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut
9	1-643275	1	Relay
10	114-1218	1	Cable-Battery, Negative
11	3234-5	2	Screw-HHF
12	104-8300	2	Nut-Flange, NI
13	1-303287	3	Tie-Plastic
14	82-2190	1	Switch-Bail
15	116-0229	1	Switch-Ignition
16	116-0124	1	Switch-PTO, 10A
17	104-2065	1	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
19	3256-24	1	Washer-Flat


Ref	Part No.	Qty.	Description
22	1-303335	1	Tie-Plastic

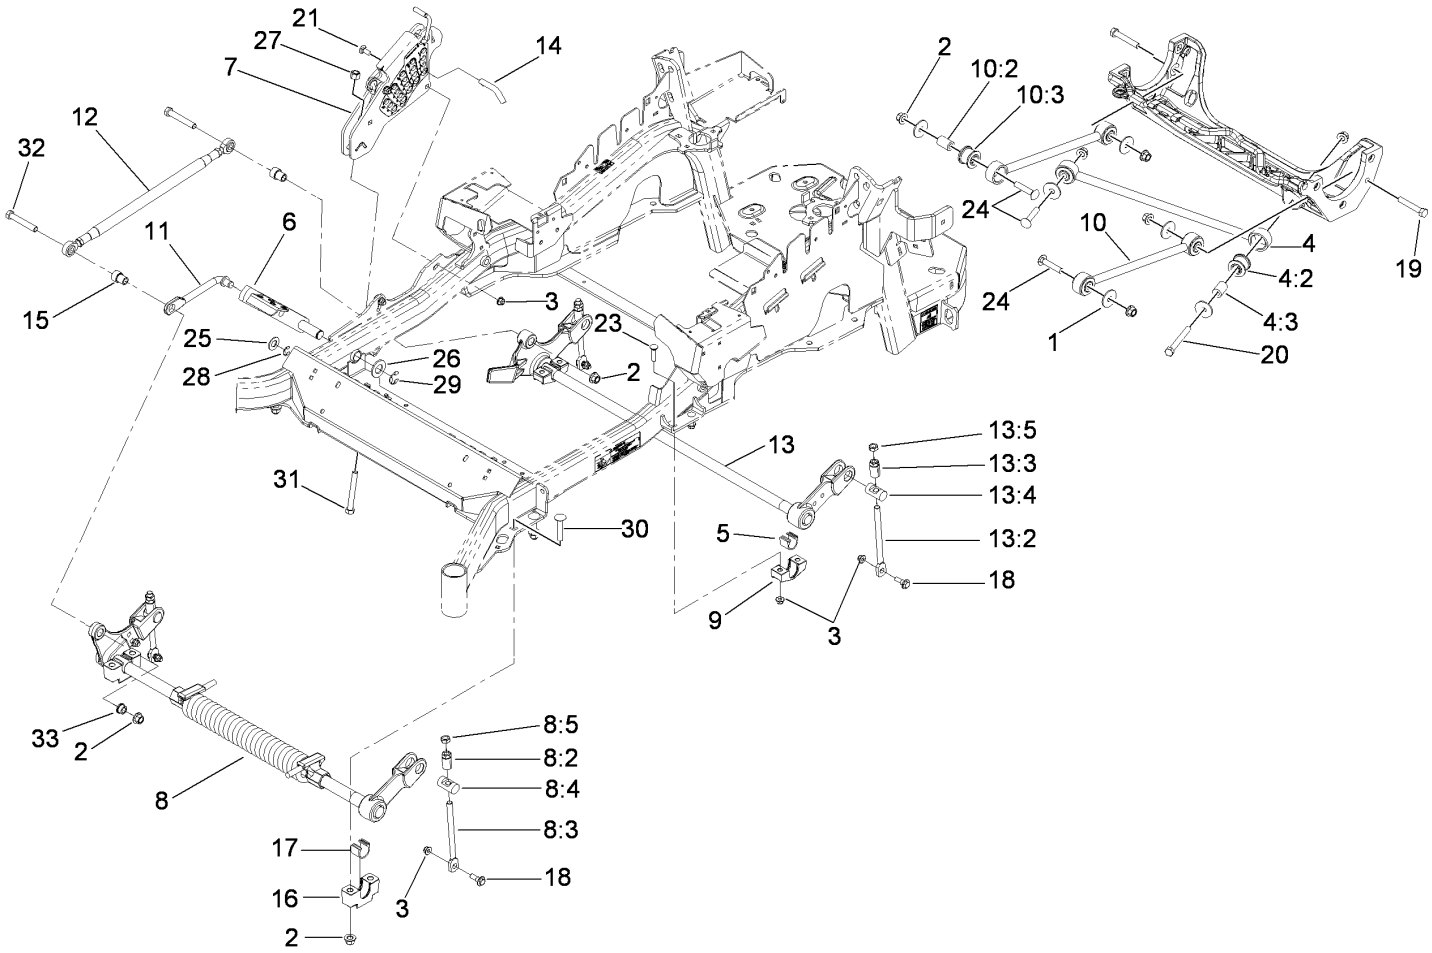

Deck Lift Assembly


Ref	Part No.	Qty.	Description
1	86-1990	6	Washer
2	99-5107	12	Nut-Lock
3	104-8301	10	Nut-Flange, NI
4	109-5013	1	Panhard Rod ASM
4:2	109-5009	2	Bushing-Suspension, Rubber
4:3	109-5010	2	Spacer
5	109-7173	2	Bearing-Cross, Rear Shaft
6	109-7202-01	1	Lever-Foot
7	109-7438	1	HOC ASM
8	116-1651	1	Front Cross Shaft ASM
8:2	109-7840	2	Adjuster-Lift, Deck
8:3	109-8007	2	Link-Adjuster, Deck Lift
8:4	109-8353	2	Trunnion
8:5	3218-5	2	Nut-Jam
9	116-0818-03	2	Support-Bearing, Cross Shaft Rear
10	109-7952	2	Deck Strut ASM
10:2	109-5009	2	Bushing-Suspension, Rubber
10:3	109-5010	2	Spacer
11	109-8004	1	Link-Lever, Foot
12	116-0806	1	Side Link ASM
13	116-1619	1	Rear Cross Shaft ASM
13:2	109-8007	2	Link-Adjuster, Deck Lift
13:3	109-7840	2	Adjuster-Lift, Deck

Ref	Part No.	Qty.	Description
13:4	109-8353	2	Trunnion
13:5	3218-5	2	Nut-Jam
14	109-8757	1	Pin-HOC
15	116-0795	2	Bushing-Flange
16	109-9409	2	Support-Cross Shaft, Bearing Front
17	109-9410	2	Bearing-Shaft Front, Cross
18	109-9840	4	Screw-Shoulder, HHF
19	325-12	2	Screw-HH
20	325-17	1	Screw-HH
21	3231-2	2	Screw-CARR
23	3231-5	4	Screw-CARR
24	3233-34	3	Screw-CARR
25	3256-27	1	Washer-Flat
26	3256-29	1	Washer-Flat
27	3296-23	1	Nut-Lock, NI
28	32120-19	1	E-Ring
29	32151-103	1	Ring-Retaining, EXT
30	3233-37	4	Screw-CARR, Short Neck
31	116-0559	1	Bolt-TAP
32	325-13	2	Screw-HH
33	116-0796	1	Bushing-Flange

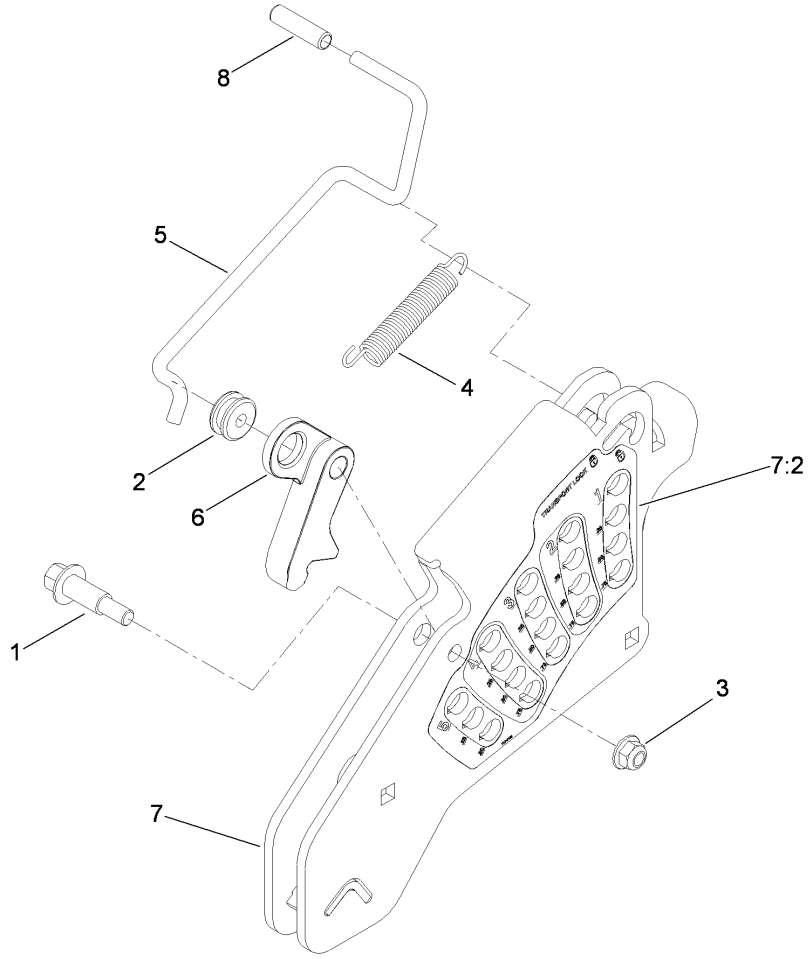


Height-of-Cut Assembly No. 109-7438

Ref	Part No.	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-Flange, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	109-7335	1	HOC Plate ASM
7:2	116-0752	1	Decal-HOC
8	109-8250	1	Grip-Lever

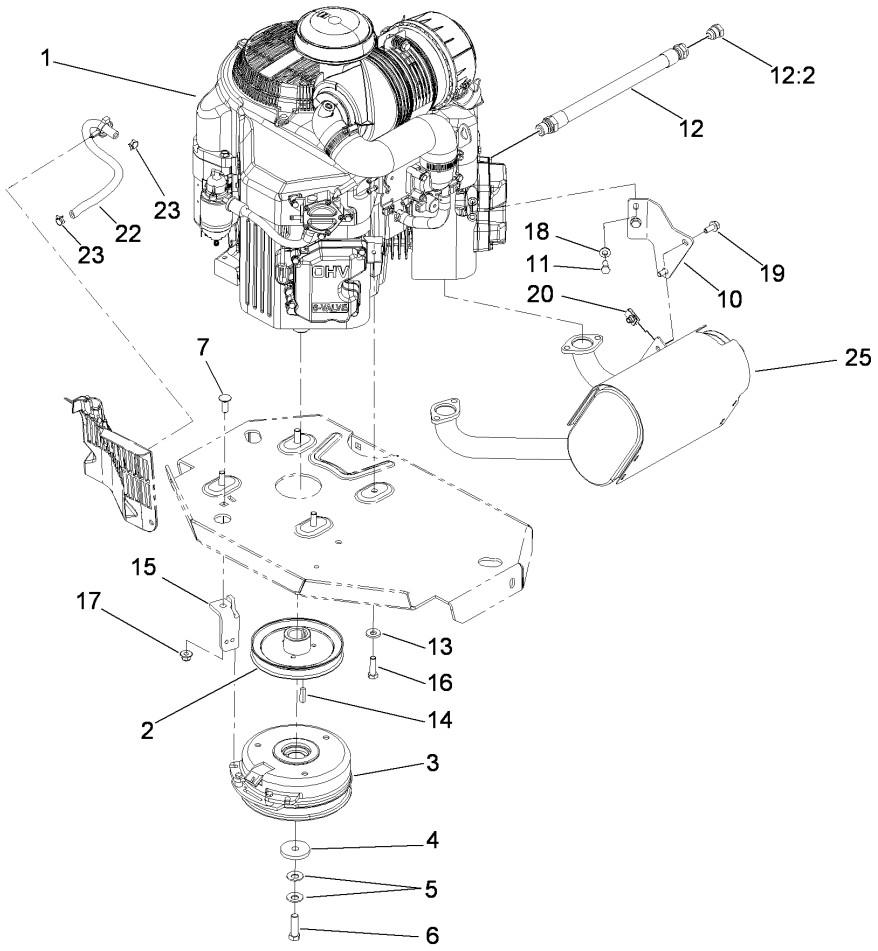

Engine, Muffler and Clutch Assembly


Ref	Part No.	Qty.	Description
❷❸1		1	Engine-Kawasaki, Fxt00V-As06
2	109-9905	1	Sheave
3	116-1621	1	Clutch Kit
4	109-6919	1	Washer-Clutch
5	1-603610	2	Washer-Spring
6	109-9761	1	Screw-HH W/Loctite
7	3231-22	1	Screw-CARR
10	116-1587	1	Bracket-Muffler
11	33114-020	2	Screw-HH
12	109-4490	1	Oil Drain Hose ASM
12:2	109-1012	1	Plug
13	98-5975	4	Washer-Belleville
14	1-807259	1	Key
15	109-8138-01	1	Anchor-Clutch
16	323-7	4	Screw-HH
17	104-8301	1	Nut-Flange, NI
18	1-303334	2	Washer-Spring
19	3234-5	2	Screw-HHF
20	94-2413	2	U-Nut
22	109-0296	1	Hose-Fuel
23	2412-98	2	Clamp
25	116-1707	1	Muffler-Big Block, Kawasaki

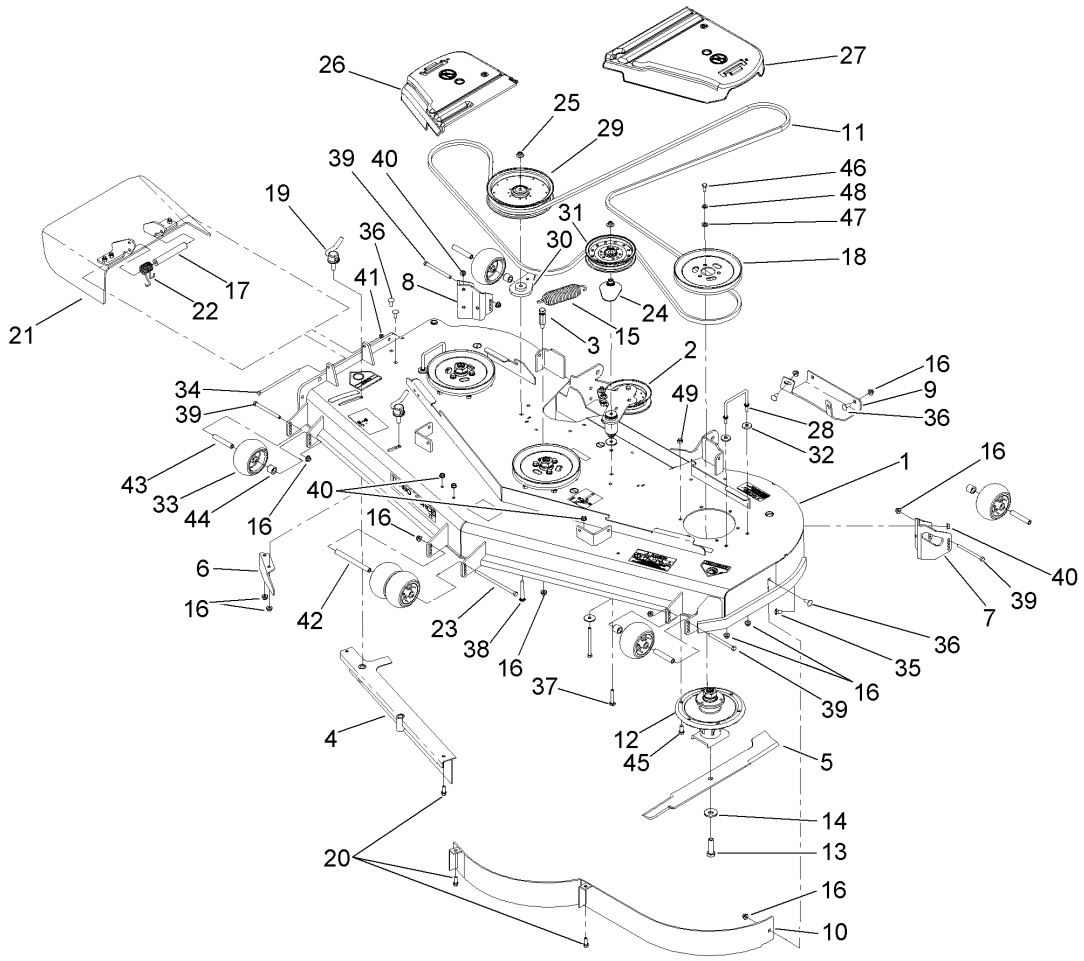

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-4195	1	Deck And Decal ASM
2	114-5875	1	Idler Arm ASM
3	114-5867	1	Anchor-Spring, Tall
4	105-7669-01	1	Baffle ASM
5	105-7784-03	3	Blade-Hi Flow, 24.5 Inch
6	106-3216-01	1	Baffle-Discharge
7	106-7354-01	1	Mount-Wheel, LH
8	106-7355-01	1	Mount-Wheel, RH
9	112-4230-01	1	Plate-Skid
10	114-5843-01	1	Baffle ASM
11	114-5859	1	Belt-V
12	117-3840	3	Spindle ASM
13	51-4060	3	Screw-Blade
14	103-0865	3	Washer-Blade Bolt, Heavy
15	116-0133	1	Extension-Spring
16	104-8301	17	Nut-Flange, NI
17	105-4622	1	Spacer
18	105-7733	3	Pulley
19	107-1664	2	Lever ASM
20	92-1624	3	Screw-HWH
21	108-2792	1	Rubber Deflector ASM
22	108-4052	1	Spring-Torsion
23	108-5388	1	Screw-HH
24	109-2872	1	Spacer-Pulley

Ref	Part No.	Qty.	Description
25	109-6658	2	Nut-Flange, NI (Split)
26	116-0094	1	Cover-Belt, RH
27	109-6938	1	Cover-Belt, LH
28	109-6982	2	Wireform-Cover
29	109-8590	1	Pulley-Idler
30	109-9416	1	Spacer-Idler
31	114-5895	1	Pulley-Idler, Flat
32	1-373034	4	Washer
33	1-603299	6	Roller-Scalp, Anti
34	322-50	1	Screw-HH
35	3231-1	6	Screw-CARR
36	3231-27	7	Screw-CARR
37	3231-40	1	Bolt-CARR
38	3231-42	1	Screw-CARR
39	323-23	4	Screw-HH
40	3290-357	9	Nut-HHF, Whiz
41	3296-47	1	Nut-Lock, NI
42	98-5967	1	Spacer-Wheel
43	98-7912	4	Tube-Spanner
44	98-7913	4	Tube-Spacer
45	33115-025	18	Screw-HH
46	323-4	9	Screw-HH
47	3256-24	9	Washer-Flat
48	3290-455	9	Washer-Belleville

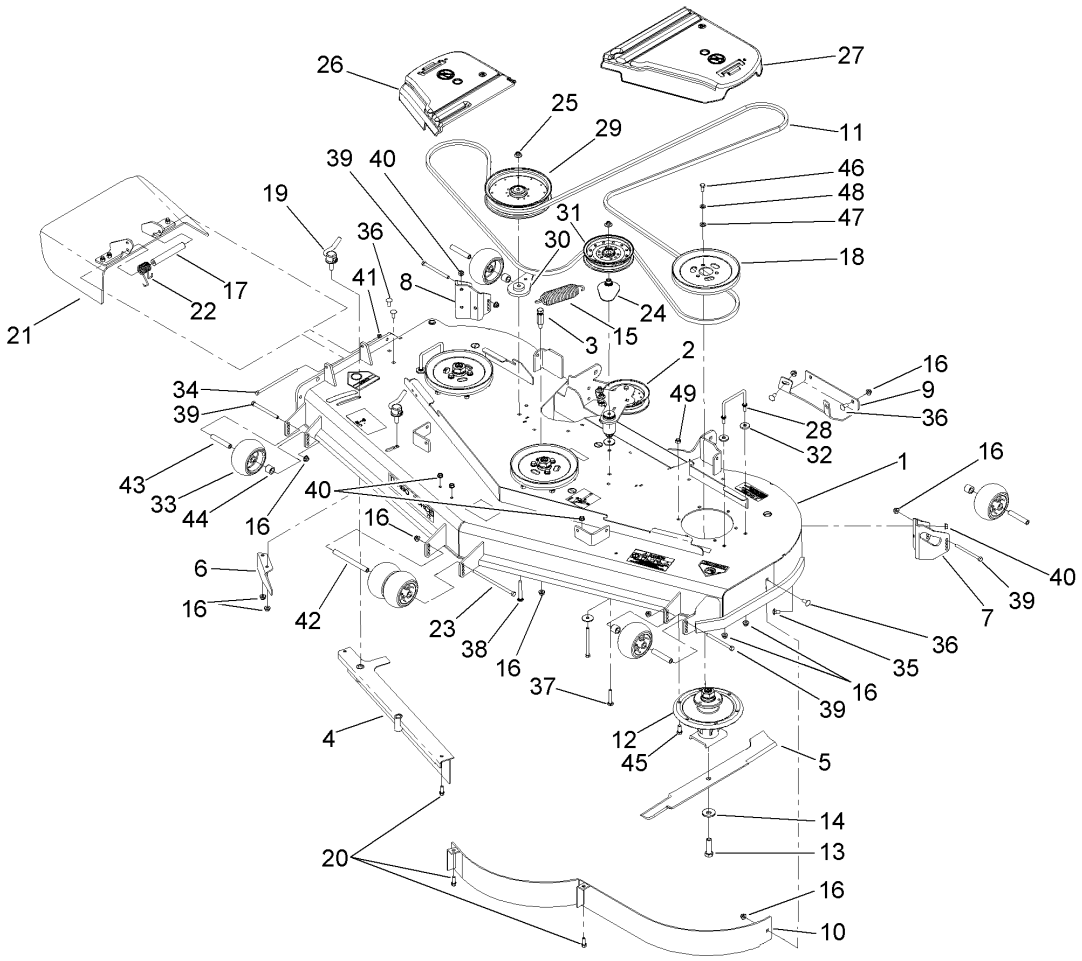


Deck Assembly (continued)

Ref	Part No.	Qty.	Description
49	33025-00	18	Nut-Lock

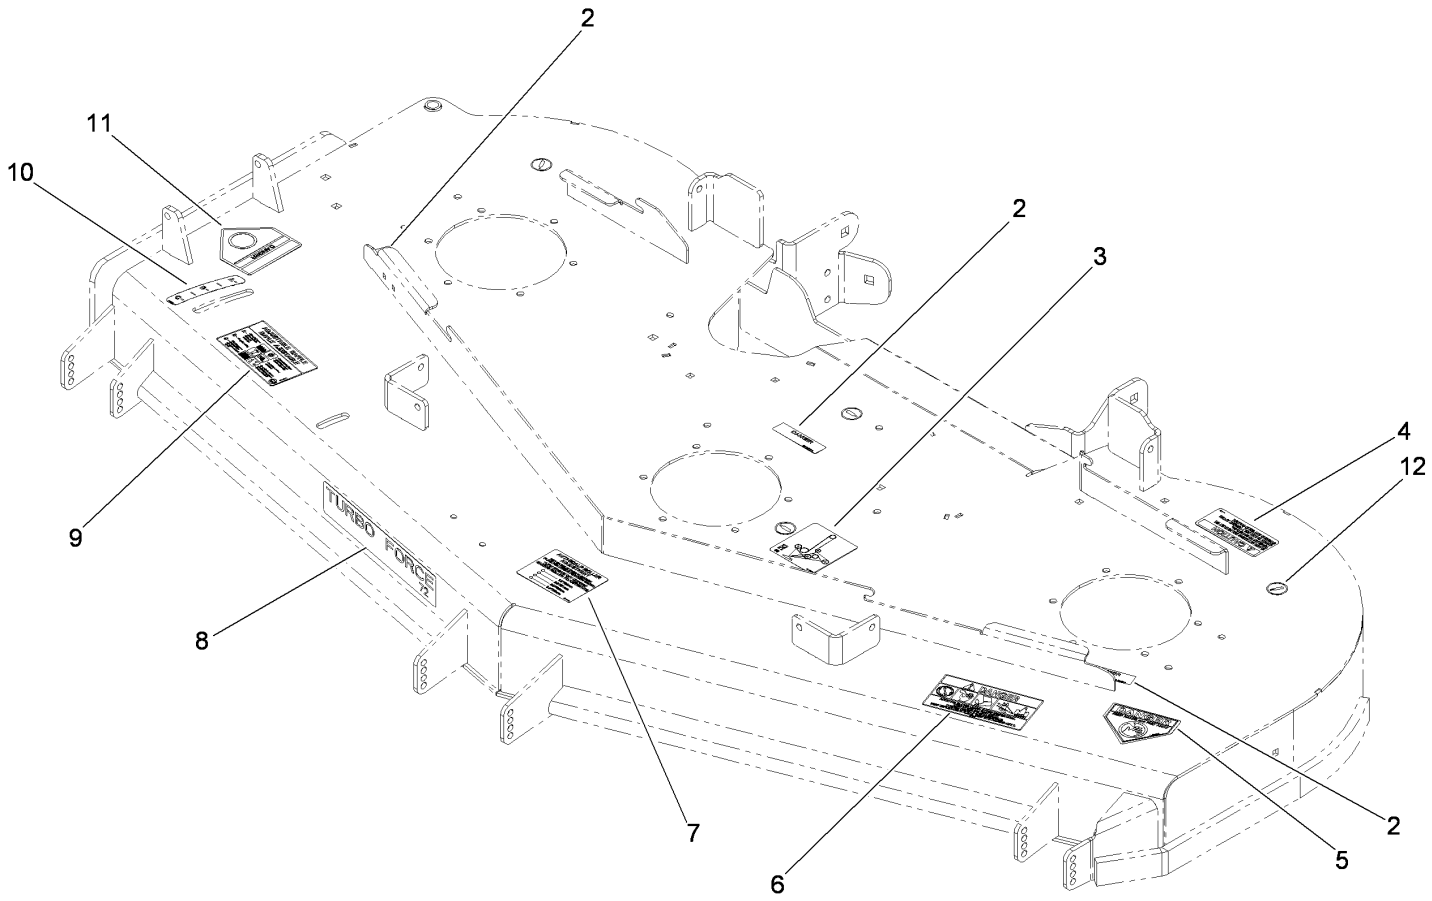


Deck Decal Assembly No. 112-4195

Ref	Part No.	Qty.	Description
2	98-5954	3	Decal-Cover, Missing
3	115-7445	1	Decal-Routing, Deck Belt
4	68-8340	1	Decal-Torque
5	1-403005	1	Decal-Danger
6	66-1340	1	Decal-Danger, Thrown Object
7	105-7798	1	Decal-Scalp, Anti
8	107-1620	1	Decal
9	110-2068	1	Decal-Adjustment, Baffle
10	110-2067	1	Decal-Setting, Baffle
11	54-9220	1	Decal-Danger
12	58-6520	4	Decal-Grease

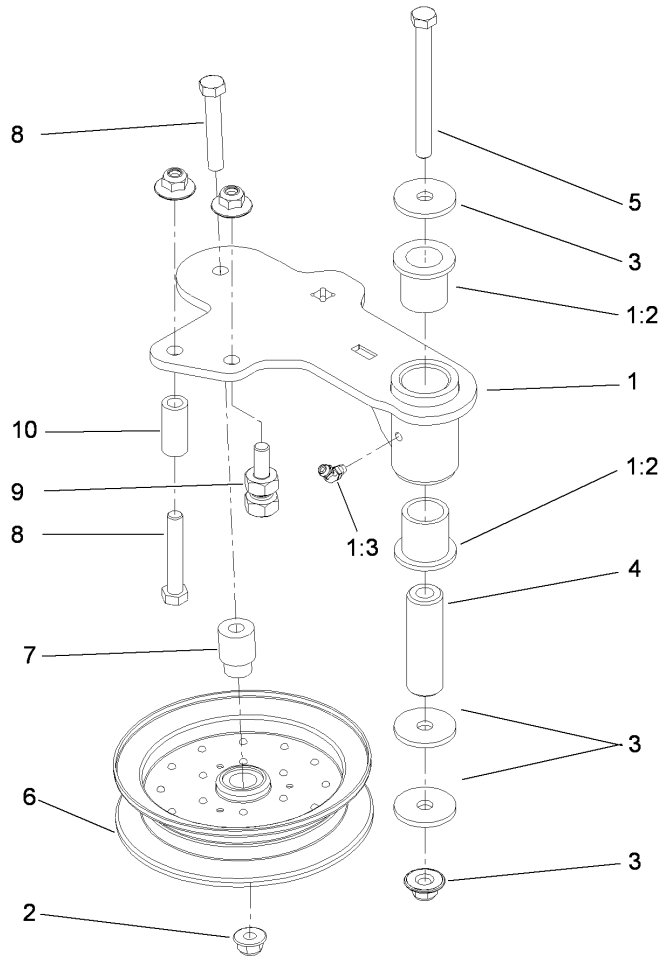


Idler Assembly

Ref	Part No.	Qty.	Description
1	114-5870	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	4	Nut-Flange, NI (Split)
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	103-8743	1	Pulley-Idler, Flanged
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
9	114-5866	1	Anchor-Spring, Short
10	104-0151	1	Spacer

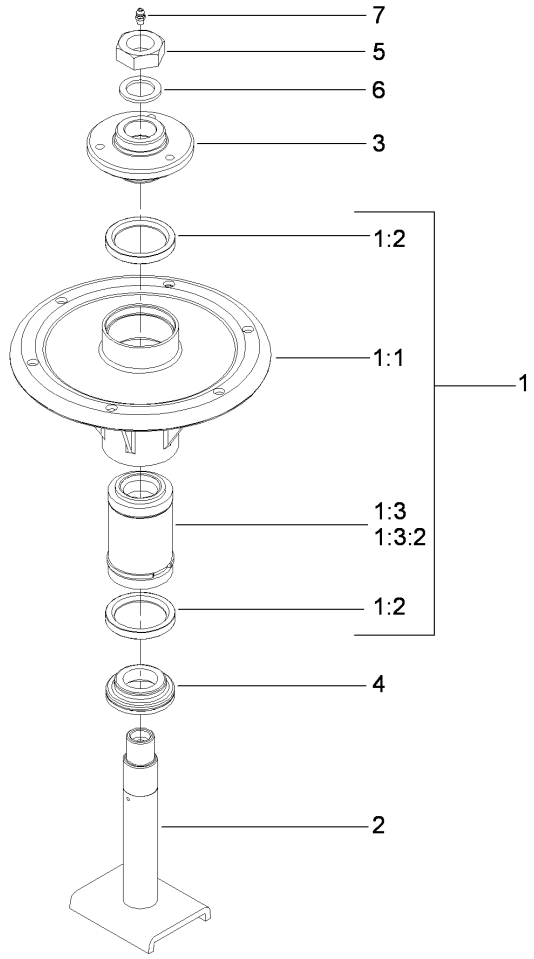


Spindle Assembly No. 117-3840

Ref	Part No.	Qty.	Description
❷1		1	Spindle Bearing ASM
❷1:1		1	Housing-Spindle
1:2	253-154	2	Seal-Oil
1:3	71-2530	1	Bearing/Spacer Kit
❷1:3:2		1	Spacer-Bearing
2	117-3841	1	Spindle Shaft ASM
3	114-1161	1	Hub-Spline
4	69-6950	1	Spacer-Shaft, Spindle
5	3296-49	1	Nut-Lock, NI
6	3-8514	1	Washer-Thrust
7	302-57	1	Fitting-Grease

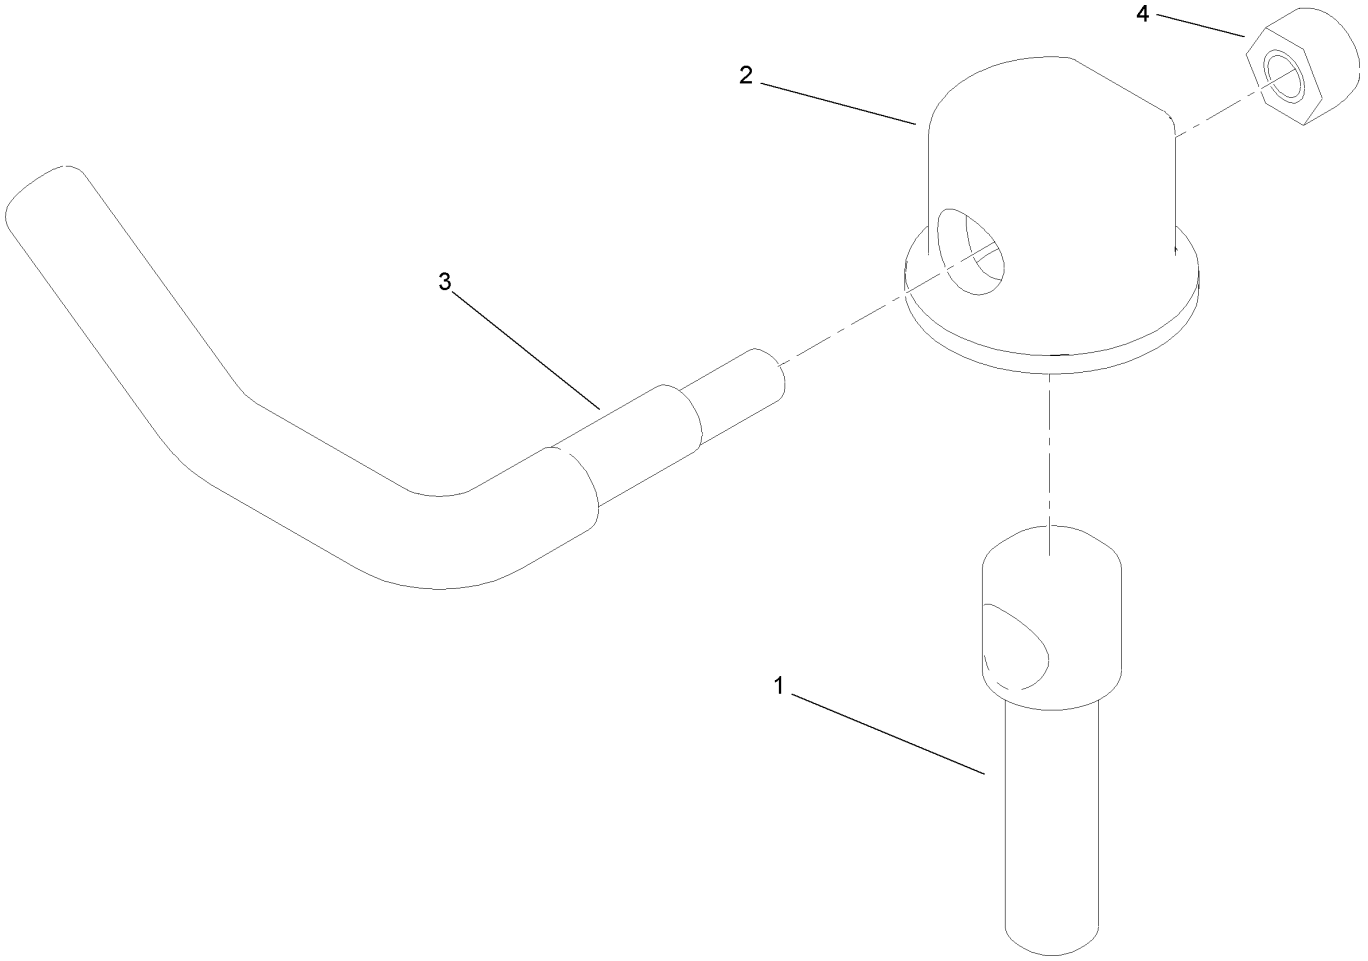


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

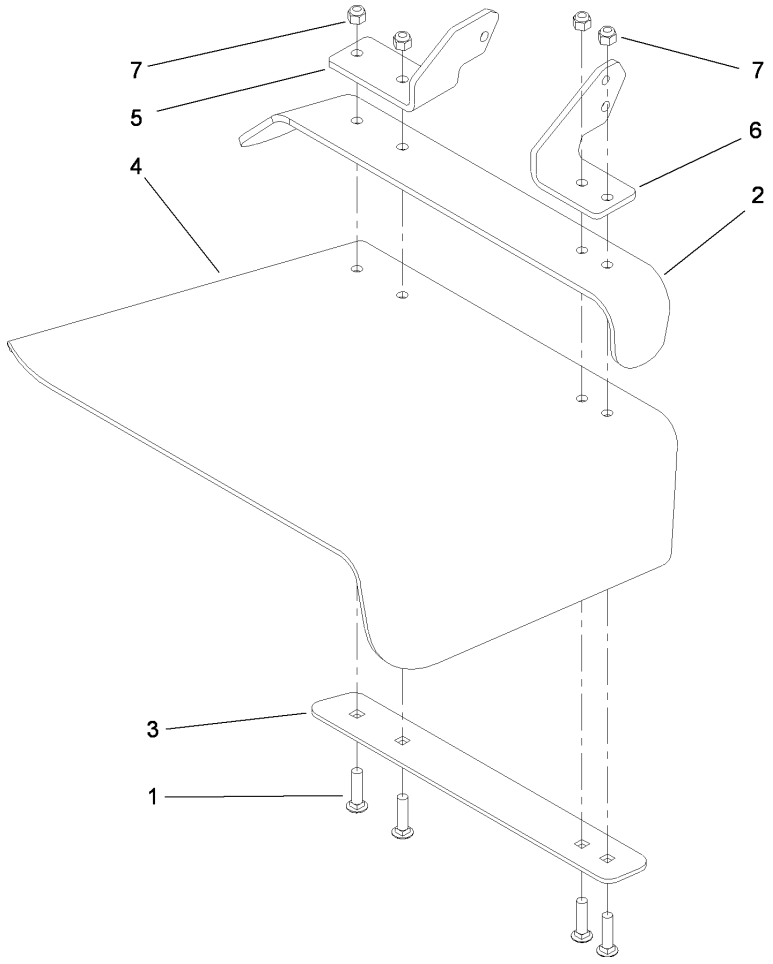

Rubber Deflector Assembly No. 108-2792


Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	3296-39	4	Nut-Lock, NI

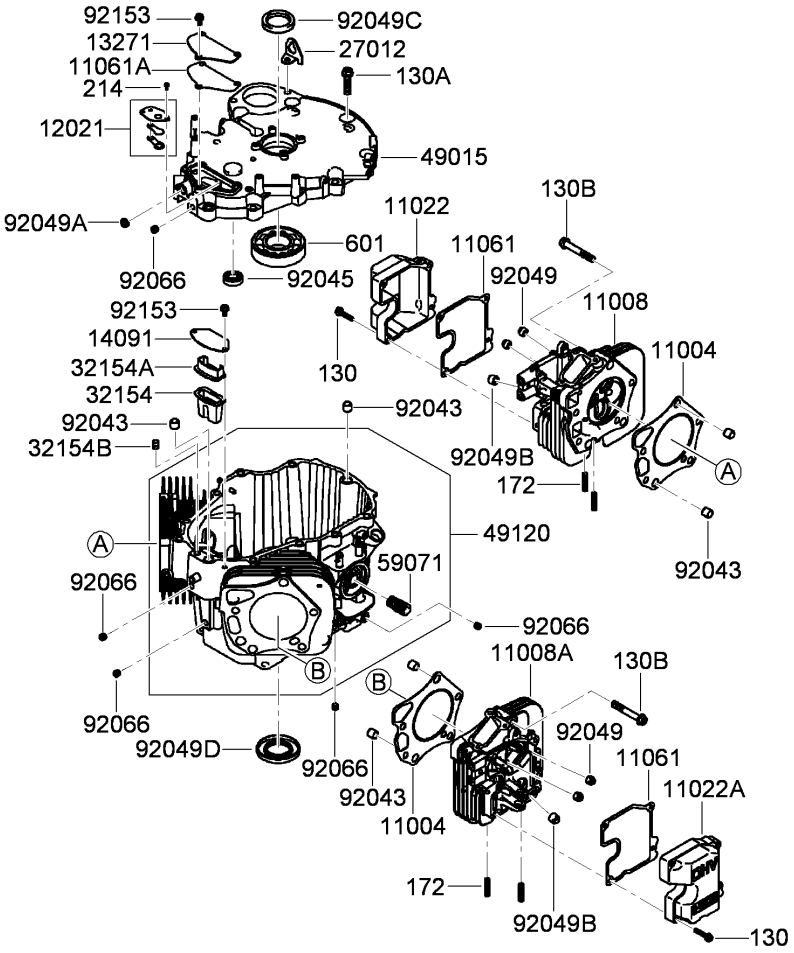

Cylinder and Crankcase Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description
❸130	130AA0630	8	Bolt-Flanged (6X30)
❸130A	130CA1040	11	Bolt-Flanged (10X40)
❸130B	130CA1065	10	Bolt-Flanged (10X65)
❸172	172BA0818	4	Bolt-Stud (8X18)
❸214	214AA0408	2	Screw-Pan +-(4X8)
❸601	601A6308	1	Bearing-Ball
❸11004	11004-7023	2	Gasket-Head
❸11008	11008-7034	1	Head-Cylinder, No.1
❸11008A	11008-7035	1	Head-Cylinder, No.2
❸11022	11022-7012	1	Case-Rocker, No.1
❸11022A	11022-7013	1	Case-Rocker, No.2
❸11061	11061-7055	2	Gasket-Case, Rocker
❸11061A	11061-7065	1	Gasket-Cover, Breather
❸12021	12021-7003	1	Breather Reed Valve ASM
❸13271	13271-7037	1	Plate-Cover, Breather
❸14091	14091-7052	1	Cover-Breather
❸27012	27012-7004	1	Hook
❸32154	32154-7014	1	Pipe-Breather
❸32154A	32154-7015	1	Pipe-Breather
❸32154B	32154-7019	1	Pipe
❸49015	49015-7060	1	Cover-Crankcase
❸49120	49120-6174	1	Crankcase
❸59071	59071-2079	1	Joint
❸92043	92043-1266	6	Pin

Ref	Part No.	Qty.	Description
❸92045	92045-7002	1	Bearing-Ball, A (15X32X9 6002)
❸92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❸92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S)
❸92049B	92049-7020	2	Seal-Oil (7X15X13)
❸92049C	92049-7024	1	Seal-Oil, S D (40X54X9 R Hs)
❸92049D	92049-7025	1	Seal-Oil, S D (40X72X8 L Vs)
❸92066	92066-7002	5	Plug
❸92153	92153-7043	5	Bolt (6X12)

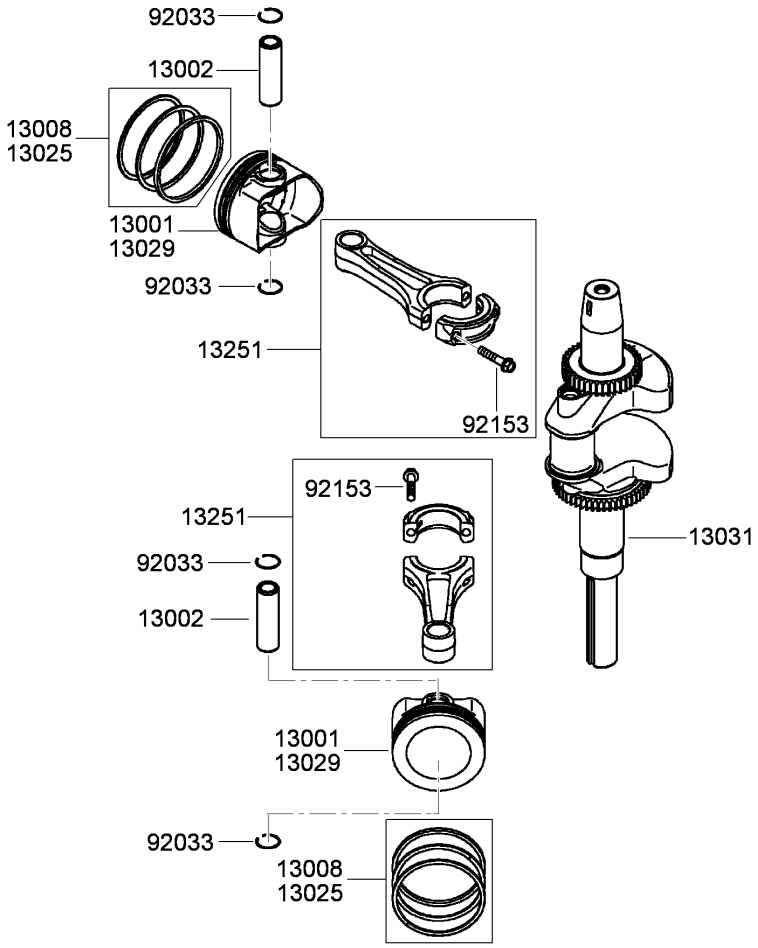

Piston and Crankshaft Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description
❸13001	13001-7021	2	Piston-Engine
❸13002	13002-7004	2	Pin-Piston
❸13008	13008-7004	2	Piston Ring Set
❸13025	13025-7008	1	Piston Ring Set (L, 0.5)
❸13029	13029-7009	1	Piston-Engine (L, 0.5)
❸13031	13031-7080	1	Crankshaft
❸13251	13251-7018	2	Connecting Rod ASM
❸92033	92033-2176	4	Ring-Snap
❸92153	92153-2054	4	Bolt (7X35.2)

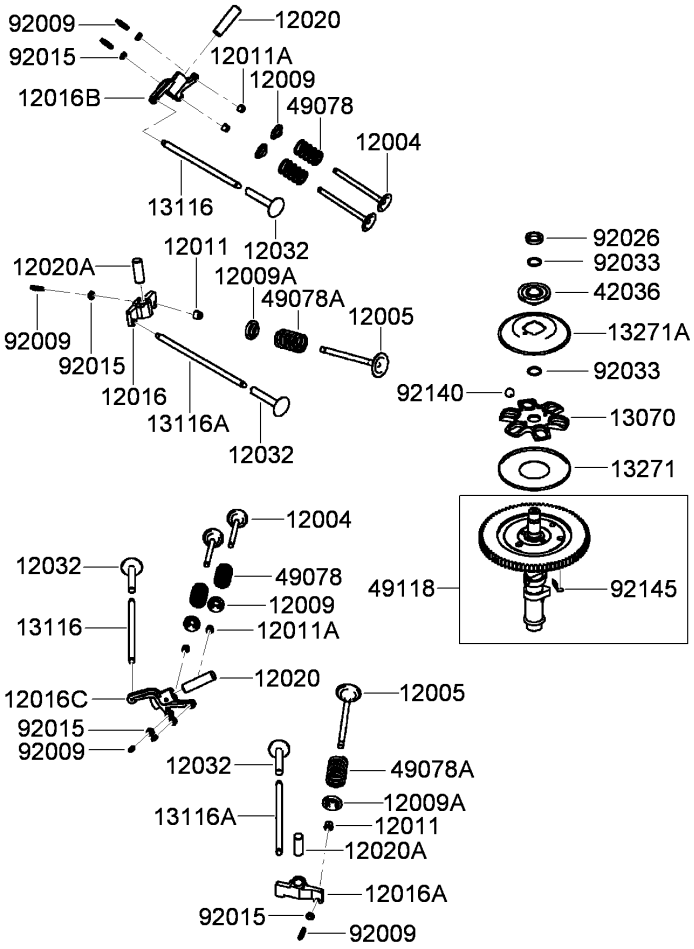

Valve and Camshaft Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description
❸12004	12004-7006	4	Valve-Intake
❸12005	12005-7007	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Spring, Valve
❸12009A	12009-7002	2	Retainer-Spring, Valve
❸12011	12011-2052	4	Collet
❸12011A	12011-2056	8	Collet
❸12016	12016-7011	1	Arm-Rocker (No.1 Ex)
❸12016A	12016-7013	1	Arm-Rocker (No.2 Ex)
❸12016B	12016-7014	1	Arm-Rocker (No.1 Intake)
❸12016C	12016-7015	1	Arm-Rocker (No.2 Intake)
❸12020	12020-7001	2	Shaft-Rocker (Intake)
❸12020A	12020-7002	2	Shaft-Rocker (Ex)
❸12032	12032-7002	4	Tappet
❸13070	13070-7004	1	Guide
❸13116	13116-2054	2	Rod-Push
❸13116A	13116-7005	2	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036	42036-7010	1	Sleeve
❸49078	49078-7002	4	Spring-Valve, Engine (Intake)
❸49078A	49078-7004	2	Spring-Valve, Engine (Exhaust)
❸49118	49118-7018	1	Camshaft ASM
❸92009	92009-1109	6	Screw
❸92015	92015-1137	6	Nut

Ref	Part No.	Qty.	Description
❸92026	92026-7019	1	Spacer
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7005	6	Ball
❸92145	92145-7001	1	Spring

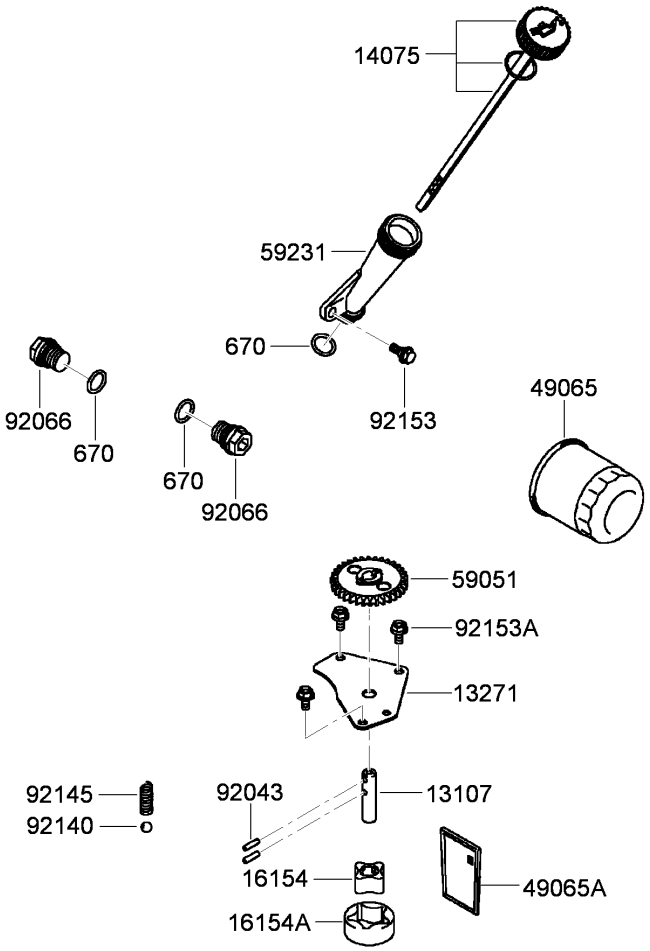


Lubrication Equipment Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❸670	670D2016	3	O-Ring (16Mm)
❸13107	13107-7009	1	Shaft
❸13271	13271-7034	1	Plate-Rotor, Pump
❸14075	14075-7011	1	Cap ASM
❸16154	16154-7007	1	Rotor-Pump (In)
❸16154A	16154-7008	1	Rotor-Pump (Out)
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7026	1	Gear-Spur, Oil Pump
❸59231	59231-7011	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7046	1	Spring
❸92153	92153-7007	1	Bolt
❸92153A	92153-7043	3	Bolt (6X12)

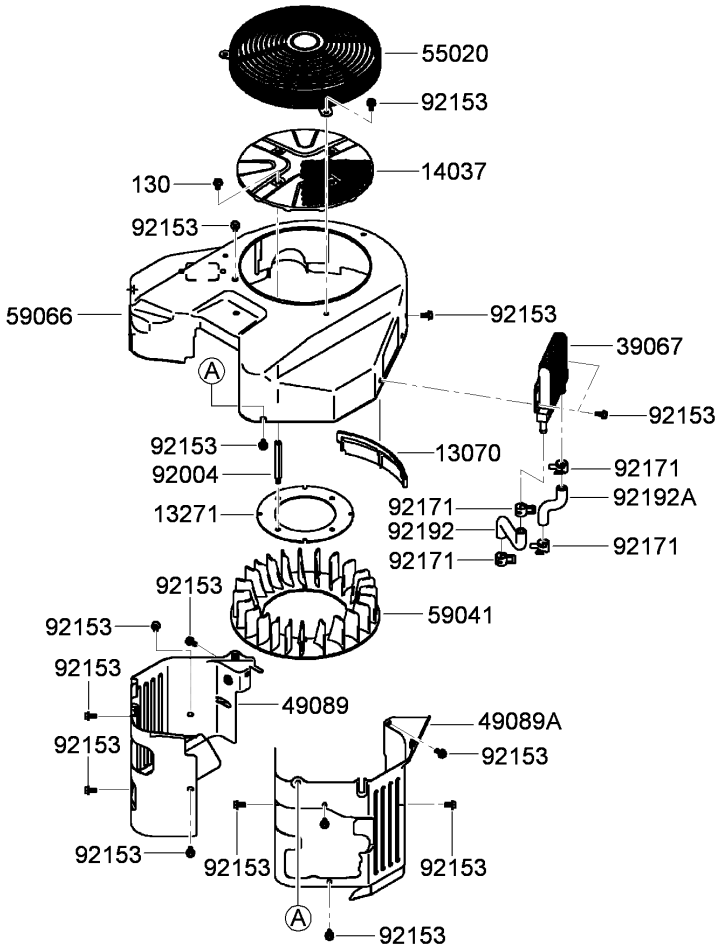


Cooling Equipment Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❸130	130AA0610	4	Bolt-Flanged (6X10)
❸13070	13070-7013	1	Guide
❸13271	13271-7035	1	Plate-Fan
❸14037	14037-7029-9H	1	Screen
❸39067	39067-7007	1	Cooler-Oil
❸49089	49089-7062-753	1	Shroud-Engine
❸49089A	49089-7063-753	1	Shroud-Engine
❸55020	55020-7010	1	Guard
❸59041	59041-7013	1	Fan
❸59066	59066-7040-753	1	Housing-Fan
❸92004	92004-7021	4	Stud-Screen
❸92153	92153-7043	18	Bolt (6X12)
❸92171	92171-7015	4	Clamp
❸92192	92192-7078	1	Tube
❸92192A	92192-7079	1	Tube

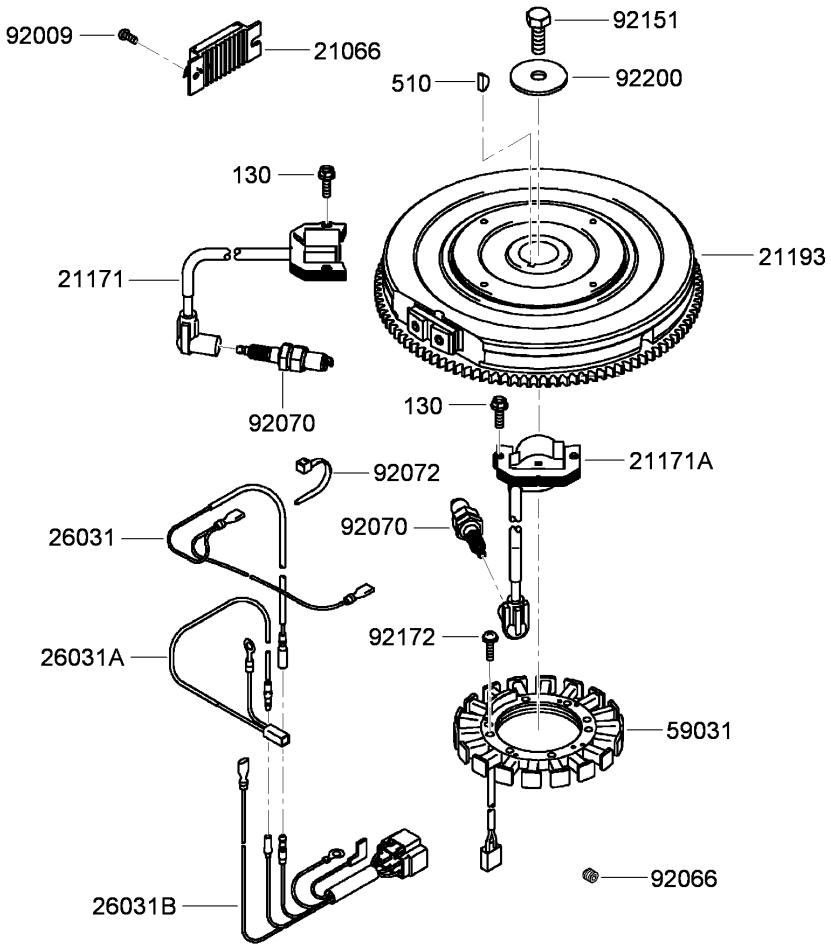


Electric Equipment Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❸130	130AA0620	4	Bolt-Flanged (6X20)
❸510	510A5100	1	Key-Woodruff
❸21066	21066-7011	1	Regulator-Voltage
❸21171	21171-7028	1	Coil-Ignition (No.1 Cyl)
❸21171A	21171-7029	1	Coil-Ignition (No.2 Cyl)
❸21193	21193-7034	1	Flywheel ASM
❸26031	26031-7033	1	Harness
❸26031A	26031-7034	1	Harness
❸26031B	26031-7039	1	Harness
❸59031	59031-7009	1	Coil-Charging
❸92009	92009-2308	2	Screw
❸92066	92066-7002	1	Plug
❸92070	92070-2088	2	Spark Plug, B P R 5E S (N G K) Solid
❸92072	92072-7003	3	Band
❸92151	92151-2097	1	Bolt (12X30)
❸92172	92172-7018	4	Screw (5X20)
❸92200	92200-7040	1	Washer (12.2X46X3)

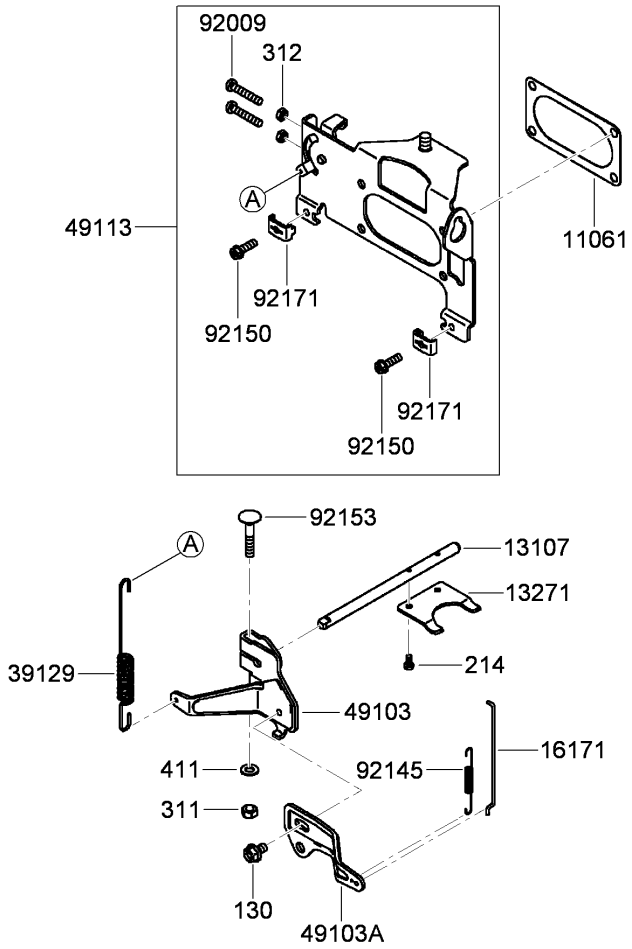

Control Equipment Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description
❸130	130BA0610	1	Bolt-Flanged (6X10)
❸214	214AA0408	2	Screw-Pan +-(4X8)
❸311	311B0600	1	Nut-Hex (6Mm)
❸312	312B0500	2	Nut-Hex (5Mm)
❸411	411B0600	1	Washer-Plain (6Mm)
❸11061	11061-7056	1	Gasket-Pipe, Intake
❸13107	13107-7040	1	Shaft
❸13271	13271-7038	1	Plate
❸16171	16171-7018	1	Link
❸39129	39129-7017	1	Spring-Governor
❸49103	49103-7009	1	Arm-Governor
❸49103A	49103-7010	1	Arm-Governor
❸49113	49113-7048	1	Control Panel ASM
❸92009	92009-2381	2	Screw (5X30)
❸92145	92145-7050	1	Spring
❸92150	92150-2182	2	Bolt (5X18)
❸92153	92153-7033	1	Bolt (6X35)
❸92171	92171-7018	2	Clamp

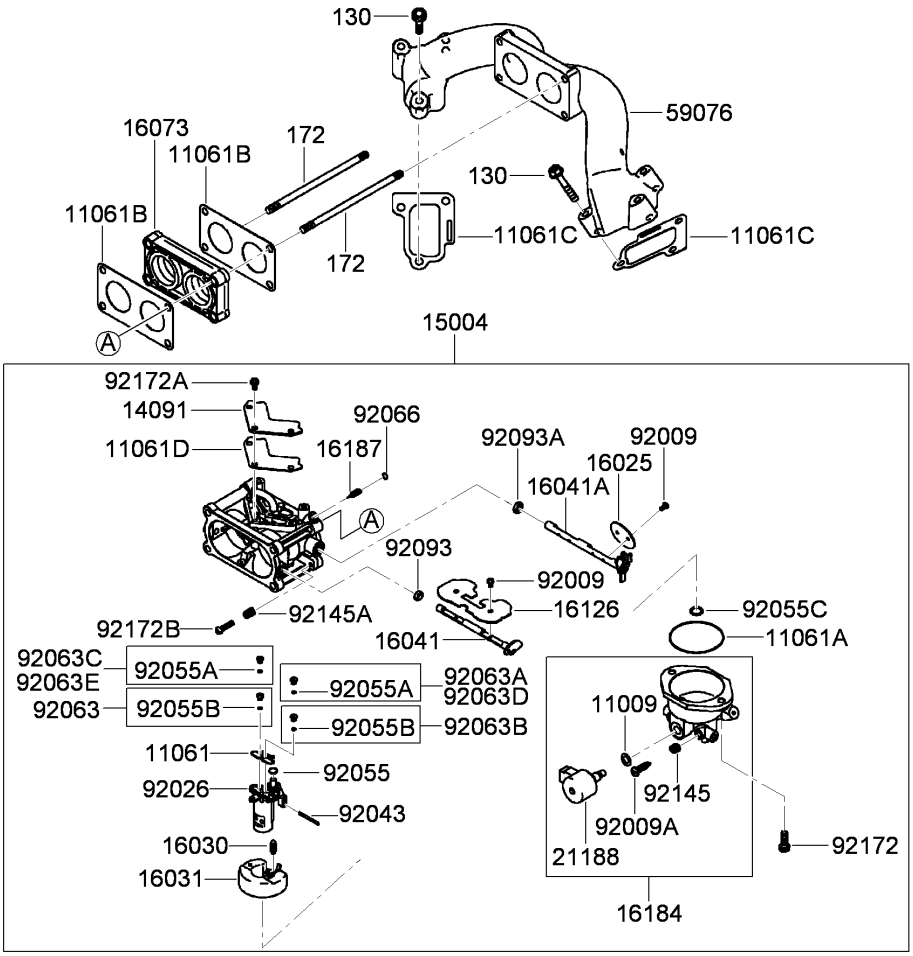

Carburetor Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❸130	130AA0635	6	Bolt-Flanged (6X35)
❸172	172BA06120	2	Bolt-Stud (6X120)
❸11009	11009-2056	1	Gasket
❸11061	11061-7037	1	Gasket
❸11061A	11061-7038	1	Gasket
❸11061B	11061-7057	2	Gasket-Insulator
❸11061C	11061-7062	2	Gasket-Manifold
❸11061D	11061-7067	1	Gasket
❸14091	14091-7059	1	Cover
❸15004	15004-7037	1	Carburetor ASM
❸16025	16025-7012	2	Valve-Throttle
❸16030	16030-7004	1	Valve-Float
❸16031	16031-7003	1	Float
❸16041	16041-7035	1	Shaft-Chock, Carburetor
❸16041A	16041-7036	1	Shaft-Throttle, Carburetor
❸16073	16073-7010	1	Insulator
❸16126	16126-7019	1	Valve-Chock
❸16184	16184-7021	1	Float Chamber ASM
❸16187	16187-7005	2	Needle-Jet
❸21188	21188-7003	1	Solenoid
❸59076	59076-7010	1	Manifold-Intake
❸92009	92009-7003	6	Screw
❸92009A	92009-7006	1	Screw-Drain
❸92026	92026-7022	1	Spacer


Ref	Part No.	Qty.	Description
❸92043	92043-7014	1	Pin
❸92055	92055-7012	1	O-Ring
❸92055A	92055-7013	1	O-Ring
❸92055B	92055-7013	2	O-Ring
❸92055C	92055-7016	1	O-Ring
❸92063	92063-7099	1	Jet-Main (No.134, 6560 Ft)
❸92063A	92063-7099	1	Jet-Main (No.134, 6560 Ft)
❸92063B	92063-7100	1	Jet-Main (No.140)
❸92063C	92063-7101	1	Jet-Main (No.131, 3280 Ft)
❸92063D	92063-7102	1	Jet-Main (No.137, 3280 Ft)
❸92063E	92063-7103	1	Jet-Main (No.128, 6560 Ft)
❸92066	92066-7009	2	Plug-Expansion
❸92093	92093-7001	1	Seal (I D 5.9)
❸92093A	92093-7002	1	Seal (I D 6.9)
❸92145	92145-7011	1	Spring
❸92145A	92145-7039	1	Spring
❸92172	92172-7005	2	Screw (M5)
❸92172A	92172-7006	3	Screw (M4)
❸92172B	92172-7031	1	Screw-Adjust, Throttle

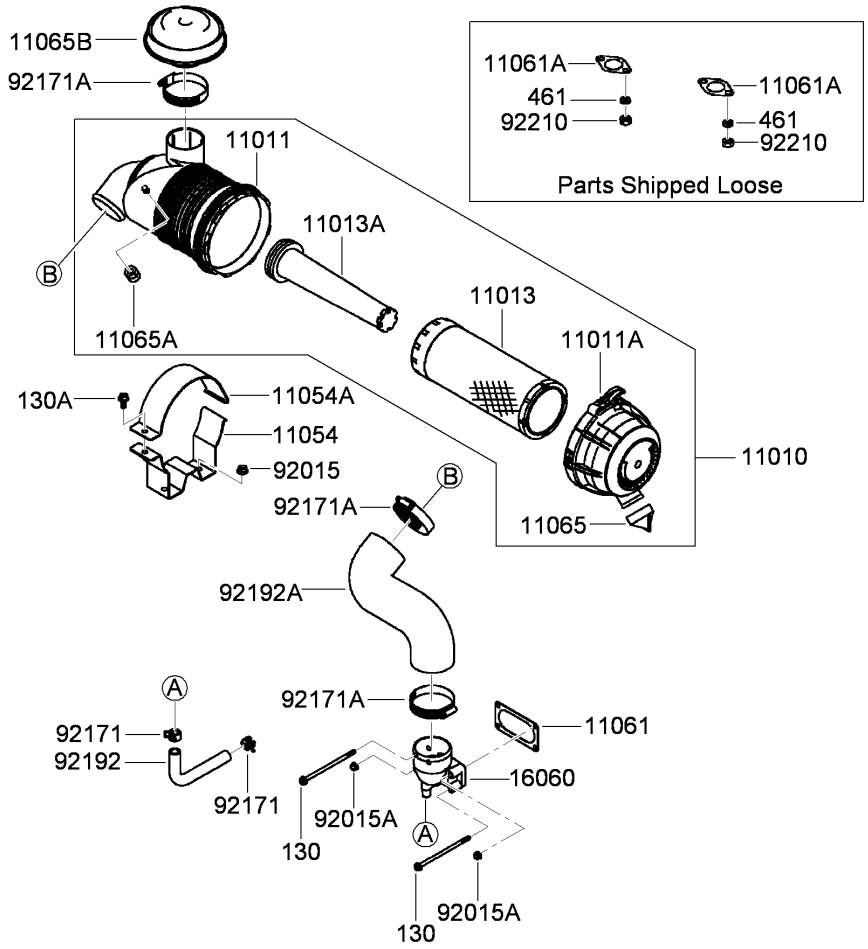

Air Filter and Muffler Assembly
Kawasaki FXT00V-AS06


Ref	Part No.	Qty.	Description
❸130	130AA06120	2	Bolt-Flanged (6X120)
❸130A	130AA0816	1	Bolt-Flanged (8X16)
❸461	461F0800	4	Washer-Spring (8Mm)
❸11010	11010-7020	1	Air Filter ASM
❸11011	11011-7047	1	Case-Filter, Air
❸11011A	11011-7050	1	Case-Filter, Air
❸11013	11013-7038	1	Element-Filter, Air
❸11013A	11013-7039	1	Element-Filter, Air
❸11054	11054-7012-9X	1	Bracket
❸11054A	11054-7013-9X	1	Bracket
❸11061	11061-7056	1	Gasket-Pipe, Intake
❸11061A	11061-7061	2	Gasket-Muffler
❸11065	11065-7008	1	Cap
❸11065A	11065-7009	1	Cap
❸11065B	11065-7017	1	Cap
❸16060	16060-6006	1	Pipe-Intake
❸92015	92015-1143	2	Nut
❸92015A	92015-1193	2	Nut
❸92171	92171-7013	2	Clamp
❸92171A	92171-7023	3	Clamp-Filter, Air
❸92192	92192-7075	1	Tube (12.6X18.6X183)
❸92192A	92192-7096	1	Tube-Filter, Air

Ref	Part No.	Qty.	Description
❸92210	92210-7027	4	Nut (M8)

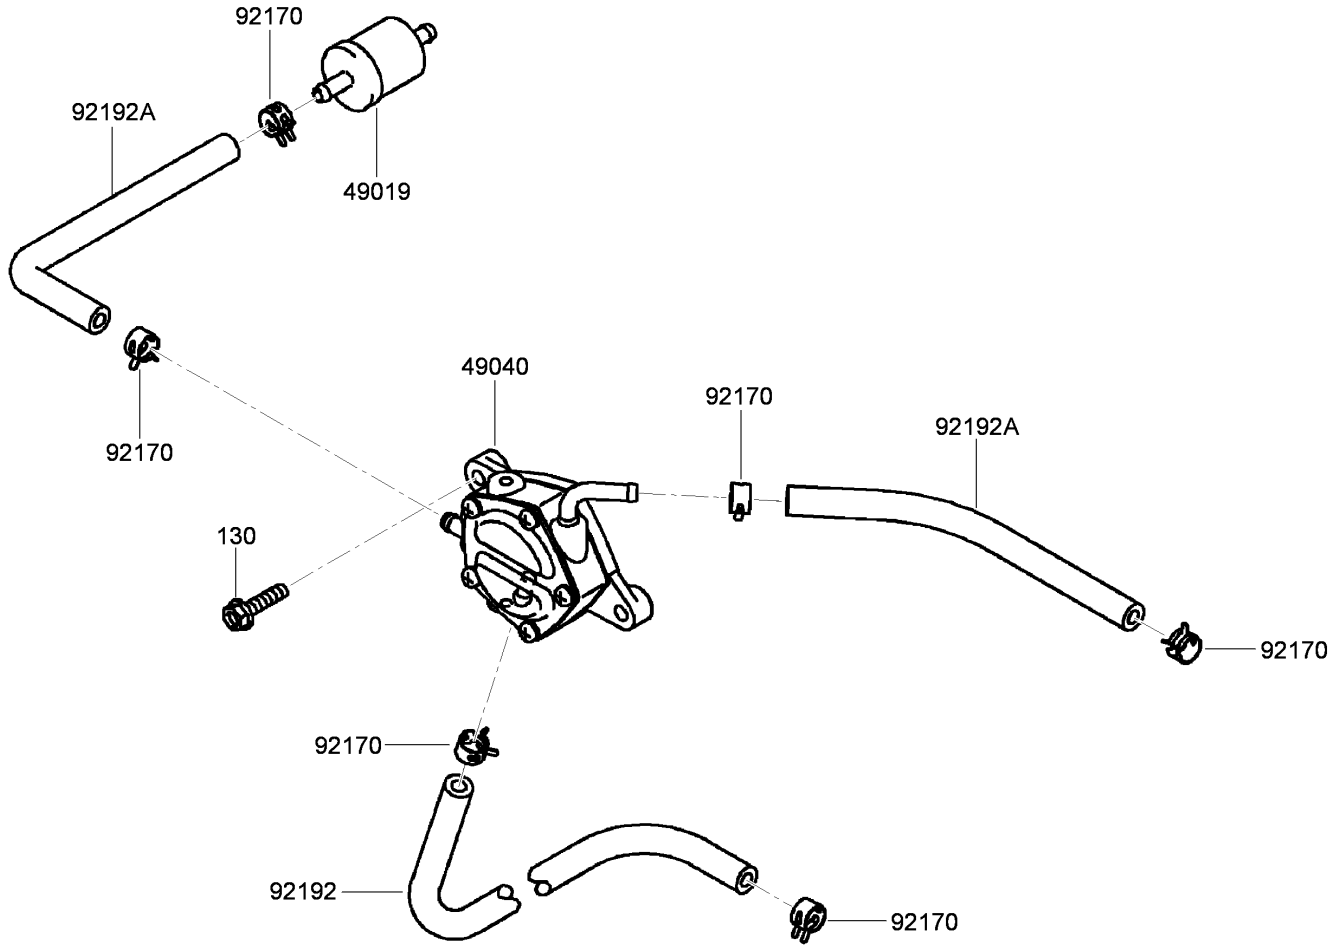

Fuel Tank and Fuel Valve Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❸130	130AA0625	2	Bolt-Flanged (6X25)
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7006	1	Pump-Fuel
❸92170	92170-2088	6	Clamp
❸92192	92192-7077	1	Tube (6.4X12.7X318)
❸92192A	92192-7101	2	Tube (6.35X12.7X185)

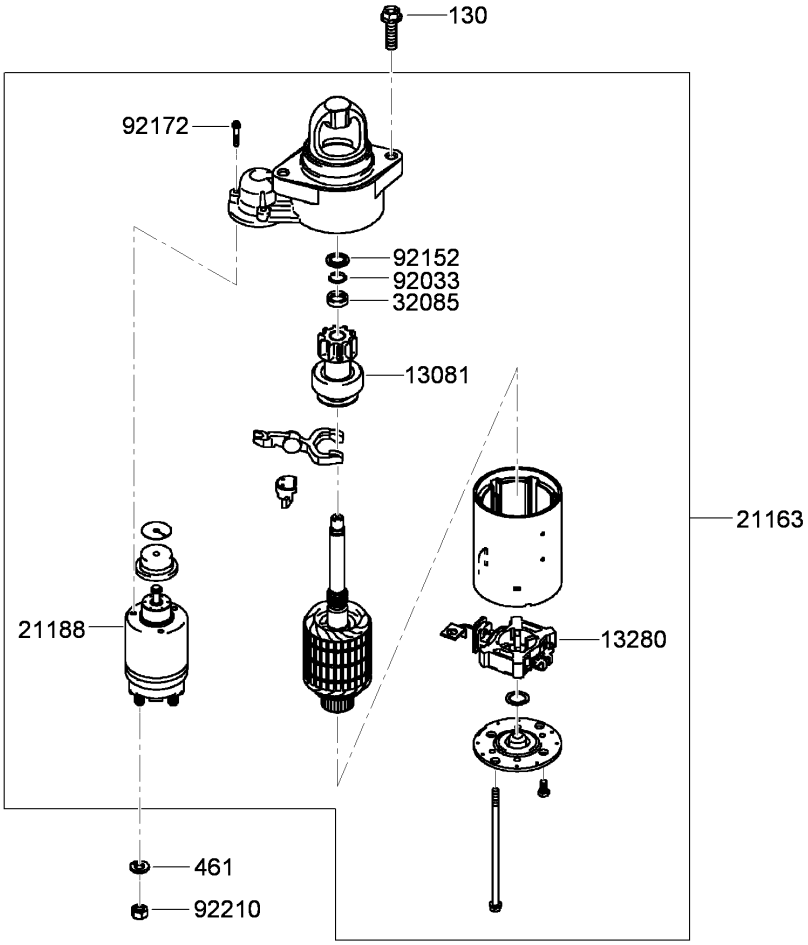


Starter Assembly
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❸130	130AA0830	2	Bolt-Flanged (8X30)
❸461	461DA0800	1	Washer-Spring (8Mm)
❸13081	13081-7001	1	Clutch ASM
❸13280	13280-7002	1	Holder
❸21163	21163-7021	1	Starter-Electric
❸21188	21188-7005	1	Solenoid
❸32085	32085-7001	1	Stopper
❸92033	92033-7014	1	Ring-Snap
❸92152	92152-7013	1	Collar
❸92172	92172-7032	3	Screw
❸92210	92210-7027	1	Nut (M8)

56014



56033

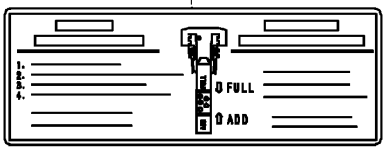

56070



Label Set
Kawasaki FXT00V-AS06

Ref	Part No.	Qty.	Description
❸56014	56014-7001	1	Emblem
❸56033	56033-7002	1	Label-Manual
❸56070	56070-7001	1	Label-Warning

Attachments and Accessories

For 74967CP - Z Master G3 Riding Mower, with 72in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Blade-Mid Flow, 24.5 Inch	105-7711-03
Blade-Lo Flow, 24.5 Inch	105-7712-03
Blade-Atomic, 24.5 Inch	105-7719-03
Blade-Recyler, 24.5 Inch	105-7778-03
Blade-Hi Flow, 24.5 Inch	105-7784-03
6 Pack Blade, 24.5 Inch Hi-Flow	108-1120
6 Pack Blade, 24.5 Inch Atomic	108-1126
Hitch Kit	109-9487
6 Pack-Blade, 24.5 Inch Mid-Flow	110-0404
6 Pack-Blade, 24.5 Inch Lo-Flow	110-0410
6 Pack-Blade, 24.5 Inch Recycler	110-0411
HYPR-OIL 500 (Quart)	114-4713
HYPR-OIL 500 (Gallon)	114-4714
HYPR-OIL 500-5 (5 Gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Recycler Kit	115-7469
Light Kit	116-1154
Z Stand Kit	117-0354
Operator-Controlled Discharge Chute Kit	117-3600
Blower and Drive Kit	78554
E-Z Vac Triple Bagging System	78564
E-Z Vac DFS Collection System	78568
Trash Holder Kit	TC26

NOTES

NOTES


TORO®