FORM NO. 3315–992


TORO®

MODEL NO. 20434–3900001 & UP

PARTS CATALOG

21" RECYCLER®
Mower

ONLY COPY
DO NOT REMOVE
Tech. Publications

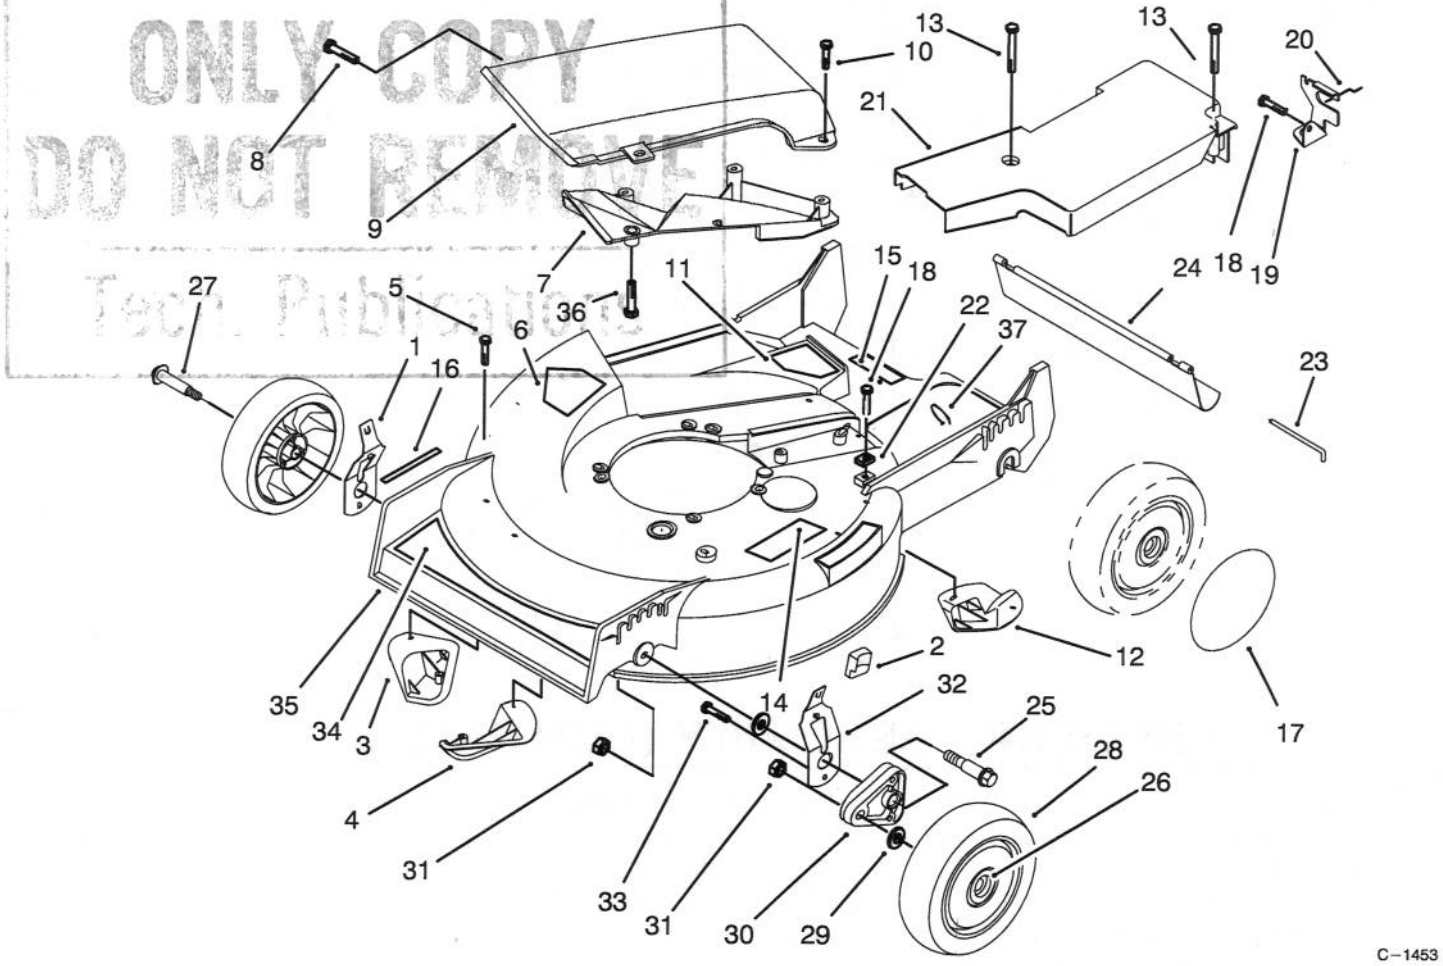

C–1453


HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71–0560	Spring Arm Ass'y R.H.	1
2	25–7740	Knob – Arm	2
3	92–1720	Plate – Kicker Right Front	1
4	92–1730	Plate – Kicker Left Front	1
5	32144–111	Screw – Plastite	6
6	39–5770	Decal – Danger	1
7		Deflector – Recycler	1
8	46–6810	Screw & Washer Assembly	1
9	14–4069	Recycler Cover Assembly (Incl. Ref. #7 & 36)	1
10	46–6811	Screw & Washer Assembly	3
11	82–8450	Decal – Danger	1
12	92–1750	Plate – Kicker Left Rear	1
13	37–7260	Screw – Hex Hd. Tapping	1
14	71–1280	Decal – Danger	1
15	92–1779	Decal – Warning	1

Ref. No.	Part No.	Description	No. Used
16	92–2279	Decal – H.O.C.	4
17	91–2253	Cover – Wheel	1
18	32144–70	Screw – Thread Forming Hex Washer Hd.	2
19	82–5680	Bracket – Traction Adj.	1
20	46–7030	Retainer – Cable	1
21	52–7406	Cover – Belt Ass'y	1
22	62–3720	Clamp – Cable	1
23	33–3208	Rod – Shield	1
24	44–0580	Shield – Trailing	1
25	66–0560	Screw – Shoulder	2
26	27–6250	Bushing – Wheel	4
27	27–6232	Bolt – Wheel	2
28	11–9509	Wheel & Tire Assembly (Incl Ref. #26)	2
29	40–1940	Washer – Wheel Bolt	4

© The TORO Company –1993
All Rights Reserved

TPS

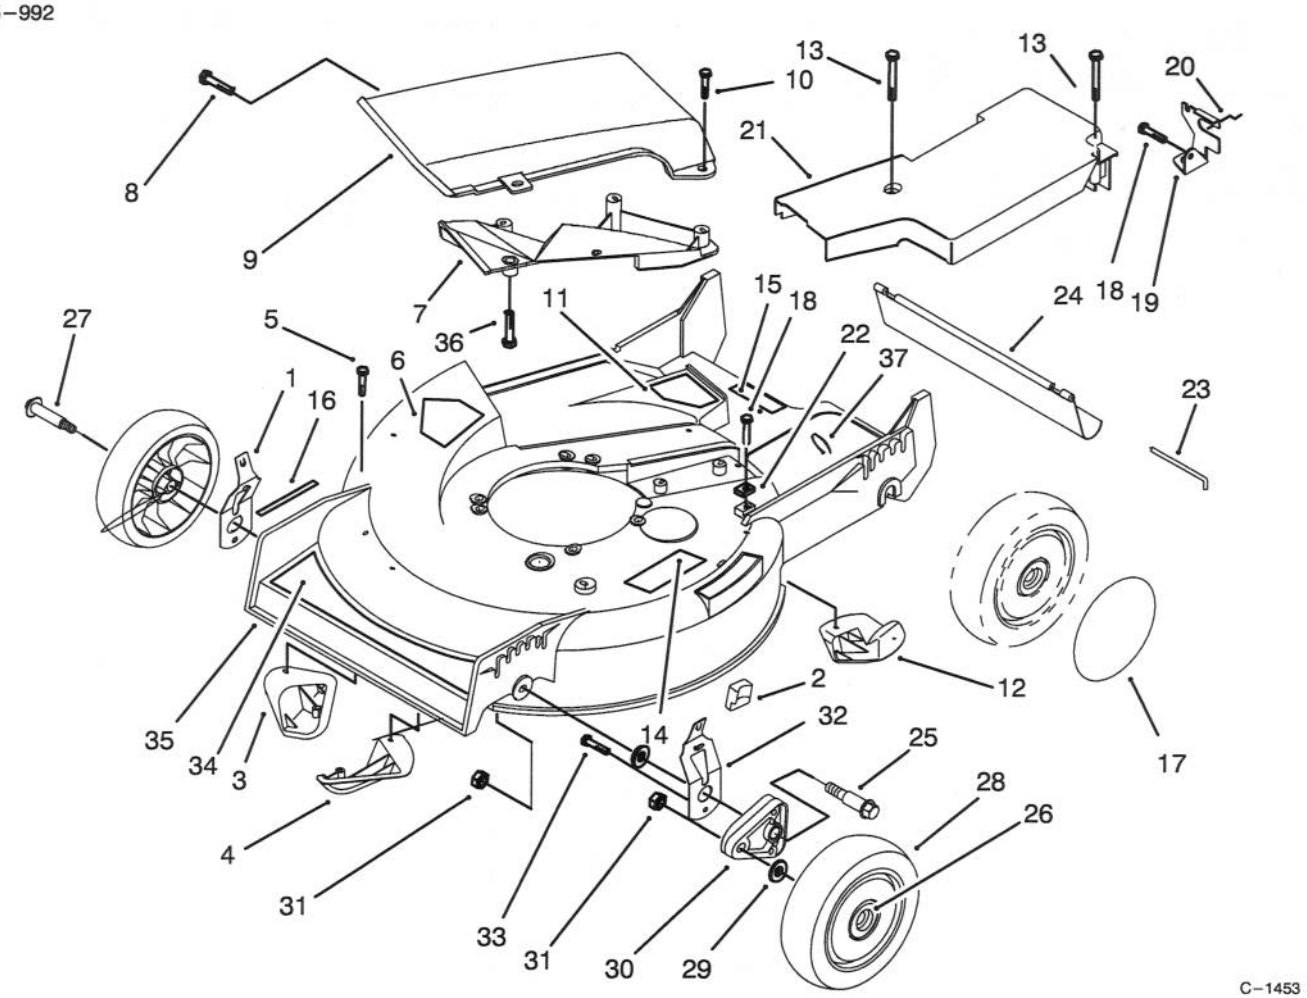


C–1453

HOUSING ASSEMBLY (CONTINUED)

Ref. No.	Part No.	Description	No. Used
30	66–0580	Arm – Pivot	2
31	3296–6	Nut – Lock	4
32	71–0570	Spring Arm Assembly L.H.	1
33	32144–85	Screw – Thread Forming	2
34	92–2283	Decal – Deck	1
35	16–1599	Housing (Incl. Ref. #3–6, 11, 12, & 14–16 pg. 1) (Incl. Ref. #6, & 7 pg.3)	1

Ref. No.	Part No.	Description	No. Used
36		Screw – Plastite	5
37	3290–378	Tie – Cable	1

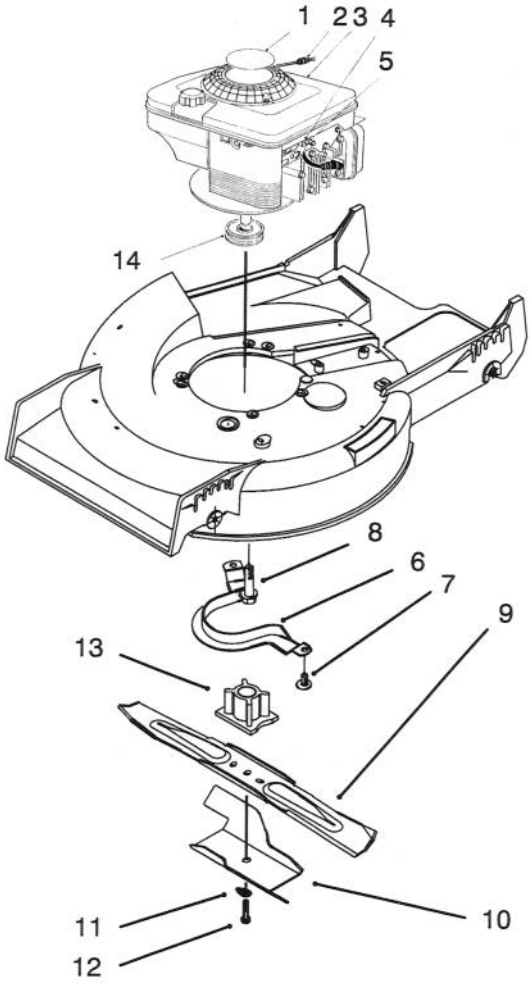


C–1393

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–2294	Decal – Engine	1
† 2	2210–316	Stop – Rope	1
3		Engine	1
† 4	2210–249	Clamp – Casing	1
† 5	2210–313	Screw – Clamp	1
6	66–0570	Guide – Belt	1
7	32144–70	Screw – Thread Forming Hex Washer Head	2

Ref. No.	Part No.	Description	No. Used
8	32144–102	Screw – Thread Forming	3
9	14–9419	Blade – 21"	1
10	92–1599	Stiffener – Blade	1
11	3253–22	Lockwasher	1
12	26–0670	Screw – Blade	1
13	62–7540	Retainer – Blade	1
14	62–7550	Pulley – Driver	1

†Provided with Engine

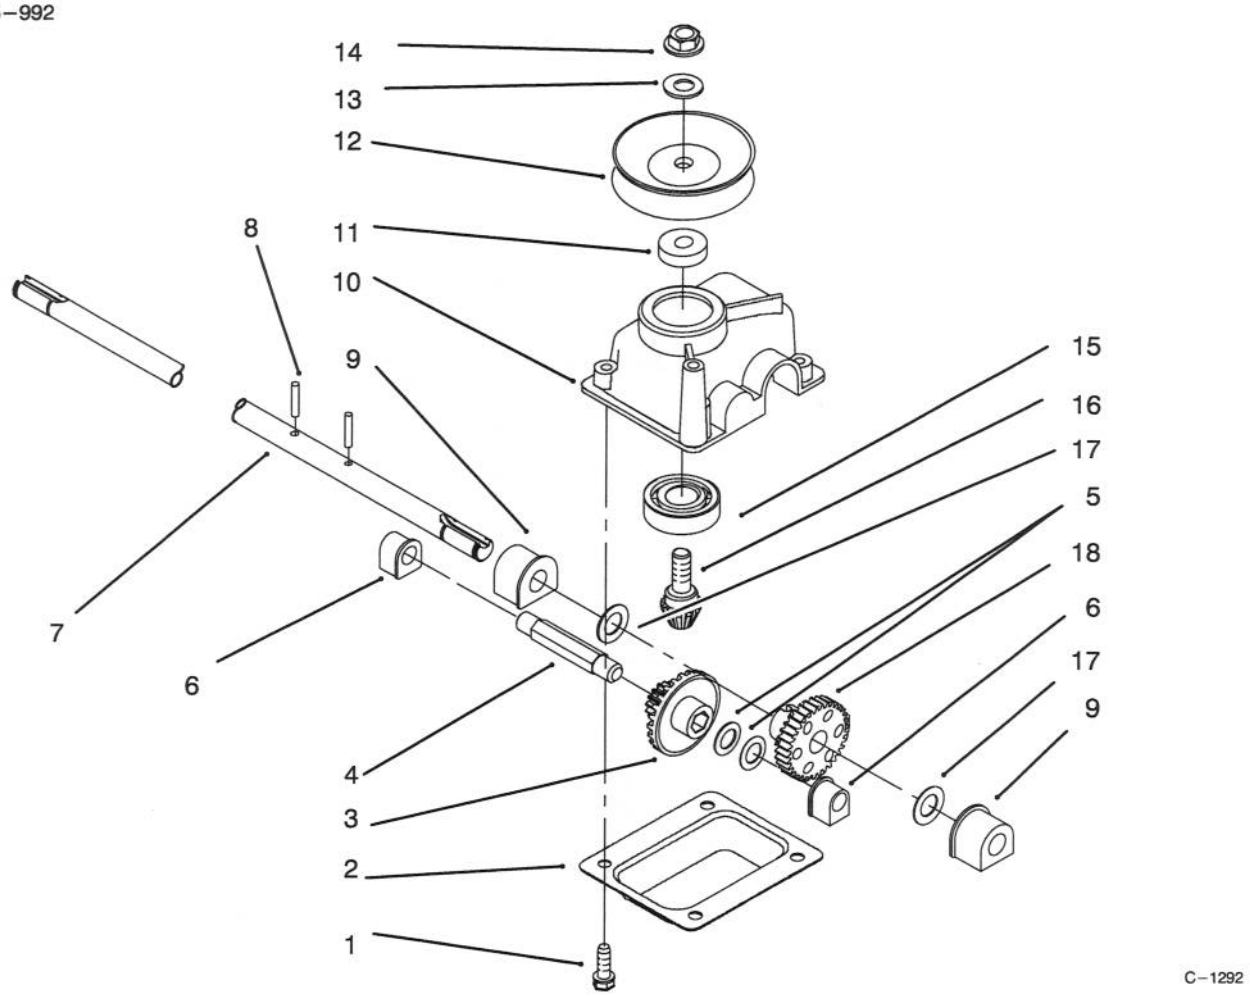


GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49–2040	Screw – Taptite	4
2	614668	Cover – Gear Case	1
3	55–3760	Pinion – 15 Tooth	1
4	614696	Shaft – Intermediate	1
5	36–4791	Washer	2
6	60–8750	Bushing	2
7	92–3131	Shaft – Output	1
8	3285–19	Pin – Groove	2
9	60–8850	Bushing – Output	2
10	614578	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62–6660	Spacer	1
12	60–8840	Pulley – Half	2
13	3256–24	Washer	1
14	3296–5	Nut	1
15	38–7820	Bearing – Ball	1
16	60–8890	Gear – Bevel Pinion	1
17	36–4780	Washer – Thrust	2
18	614596	Gear 34 Tooth	1
*	92–2259	Gearcase Ass'y Complete	1

*Not Illustrated

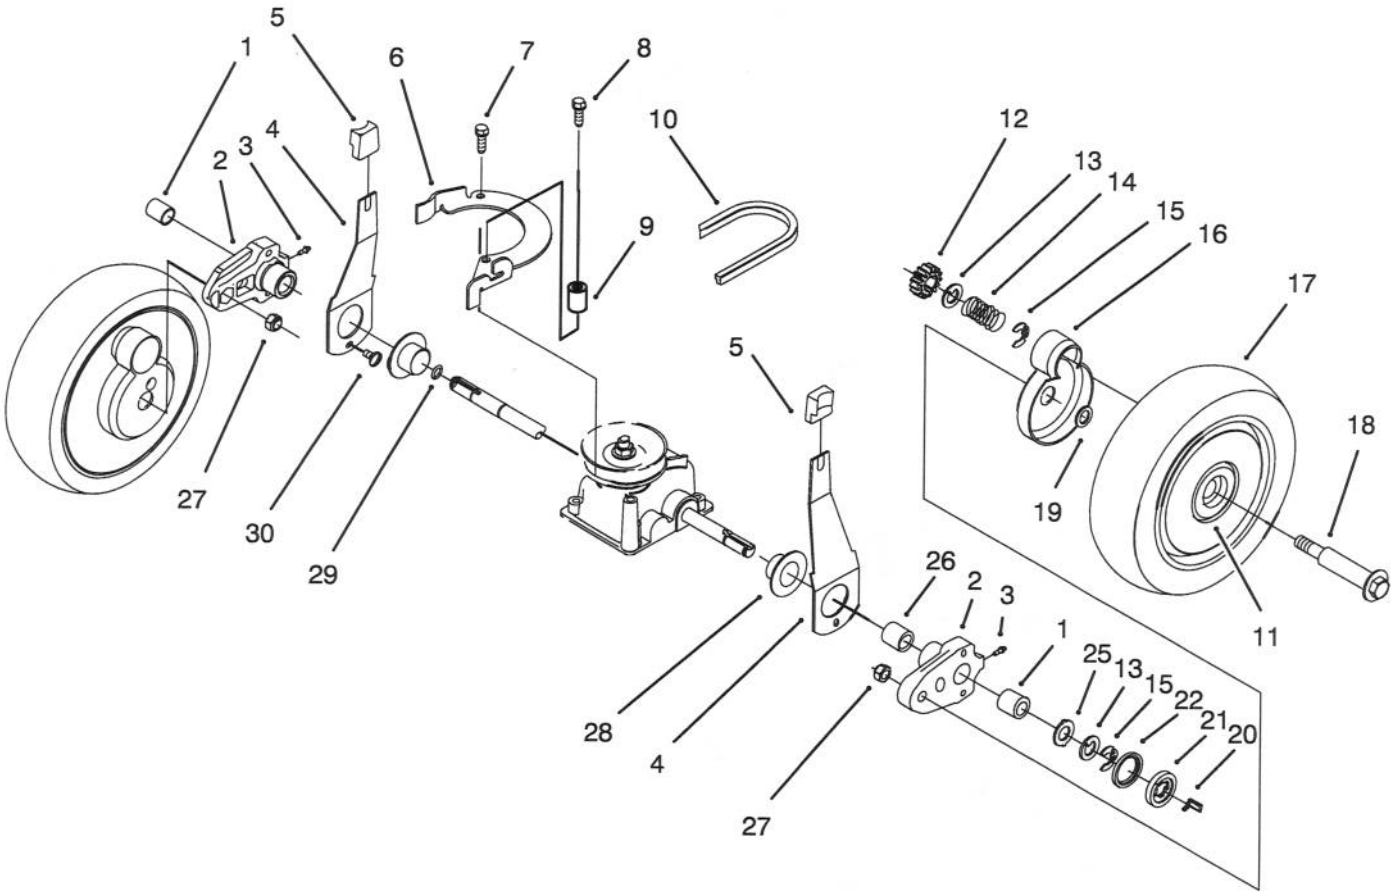


C–1439

REAR AXLE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	48–2060	Bearing – Needle	2
2	63–8701	Pivot Arm Assembly (Incl. Ref. #1, 3, & 26)	2
3	302–56	Fitting – Grease	2
4	63–8720	Spring Arm Assembly	2
5	25–7740	Knob – Arm	2
6	92–2264	Bracket – Belt Guide	1
7	49–2040	Screw – Self Tapping	1
8	92–1616	Screw – Taptite	1
9	614673	Bushing	1
10	91–2258	V–Belt	1
11	27–6250	Bushing – Wheel	4
12	65–4750	Pinion	2
13	65–4740	Thrust Washer	4
14	65–4720	Spring	2
15	65–2720	Ring – Retaining	4

Ref. No.	Part No.	Description	No. Used
16	74–1660	Cover – Wheel	2
17	11–9519	Wheel – Tire & Gear Ass'y (Incl. Ref. #11)	2
18	27–6232	Bolt – Wheel	2
19	74–1671	Spacer – Wheel Cover	2
20	66–6050	Key – Rocker L.H.	1
*	66–6040	Key – Rocker R.H.	2
21	65–4760	Washer – Clutch	2
22	65–4710	Ring – Friction	2
25	65–4730	Thrust Washer	2
26	70–9760	Bushing	2
27	3296–6	Locknut	2
28	42–3520	Cap – End	2
29	237–153	O–Ring	2
30	32144–85	Screw	2

*Not Illustrated

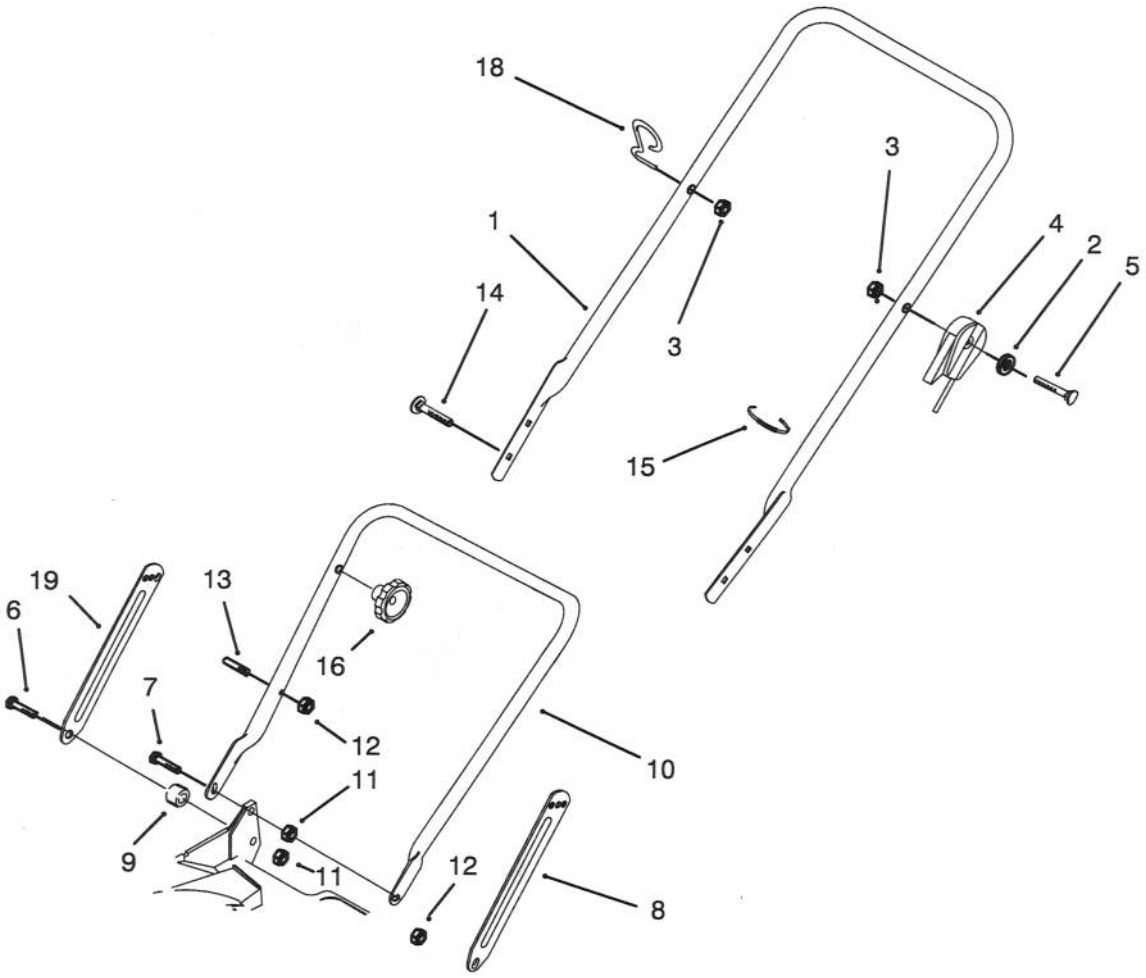


C–1440

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–3136	Handle – Upper	1
2	3256–1	Washer – Flat	1
3	3296–73	Nut – Lock	2
4	92–4069	Control – Throttle (Bend Type #3) (Sheath Lg. 47") (Wire Lg. 1–3/4")	
5	321–48	Screw – Hex Hd. Cap	1
6	27–7210	Screw – Shoulder	2
7	27–7211	Screw – Shoulder	2
8	84–8360	Latch – Handle L.H.	1
9	3–3287	Spacer	2
10	82–5530	Lower Handle Assembly	1
11	3296–72	Nut – Lock	3
†12	3296–47	Nut – Lock	3
†13	49–2750	Pin – Handle	2
14	92–2260	Screw – Handle	2
15	3290–378	Tie – Cable	2
16	19–4050	Knob – Handle Release	2
18	86–9671	Guide – Rope	1
19	84–8400	Latch – Handle R.H.	1

†Service Replacement Part

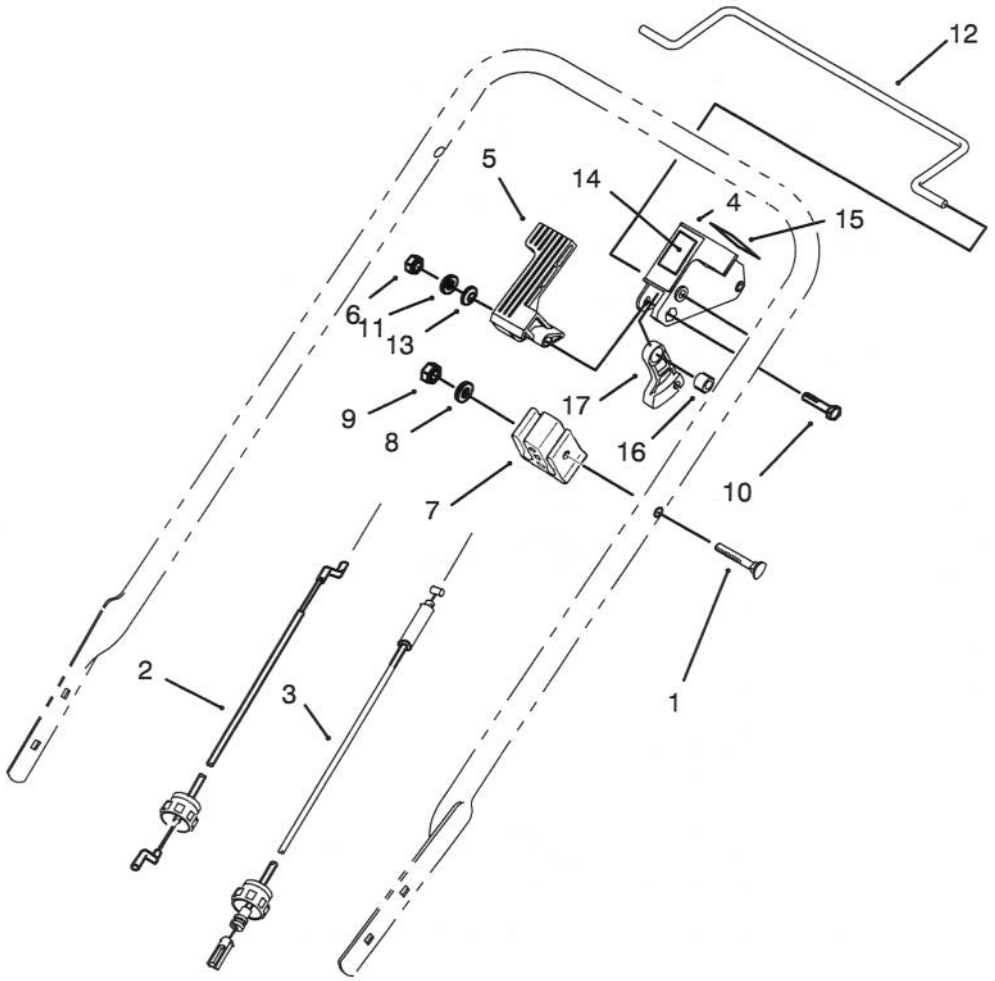


C–1444

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92–2269	Screw – Handle	1
2	92–4066	Cable – Brake	1
3	46–5481	Cable – Traction	1
4	92–2265	Stop – Pivot	1
5	92–2299	Lever – Shift	1
6	3296–2	Nut – Lock	1
7	46–6980	Support – Cable	1
8	3256–1	Washer – Flat	1
9	3296–73	Nut – Lock	1

Ref. No.	Part No.	Description	No. Used
10	92–3132	Bolt – Shoulder	1
11	3256–49	Washer – Flat	1
12	92–3135	Bar – Control	1
13	92–2298	Washer – Spring	1
14	92–2280	Decal – Instruction	1
15	92–2292	Decal – Instruction	1
16	92–3133	Spacer – Traction Lever	1
17	46–5520	Lever – Traction	1

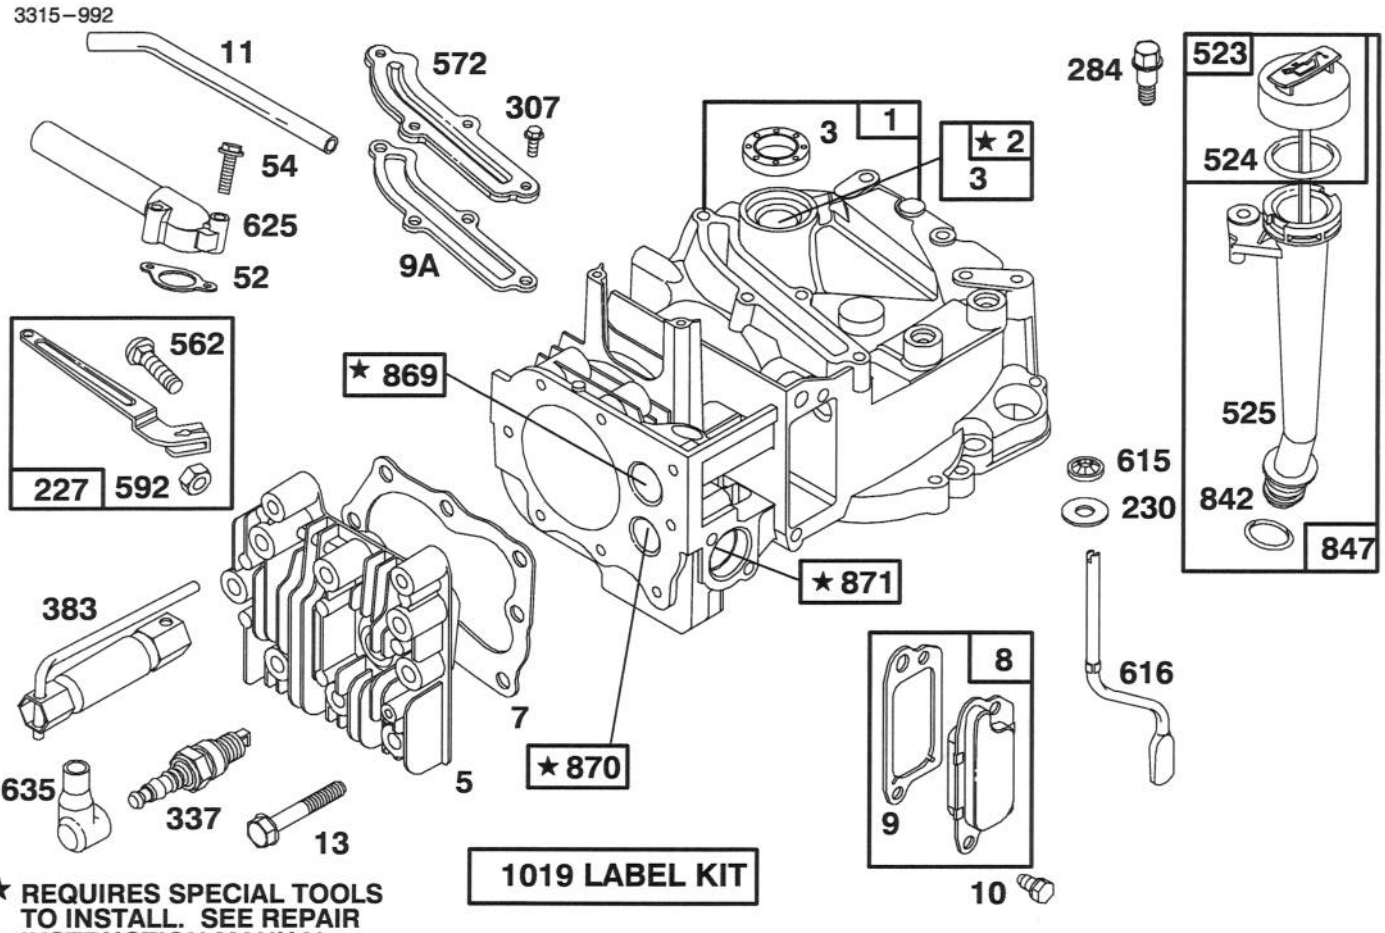

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


Assemblies include all parts shown in frames

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing–Cylinder	1
★3	299819	Seal–Oil	1
5	213861	Head–Cylinder	1
★7	272200	Gasket–Cylinder Head	1
8	495786	Breather–Valve Chamber	1
★9	272481	Gasket–Valve Cover	1
★9A	272238	Gasket–Baffle Plate	1
10	94650	Screw–Breather Mtg.	1
11	231685	Tube–Breather	1
13	94547	Screw–Cylinder Head	1
★52	272199	Gasket–Intake Elbow	1
54	94526	Screw–Intake Elbow Mtg.	1
227	492349	Lever Assembly–Gov.	1
230	67072	Washer–Gov. Crank	1
284	94511	Screw–Hex. Head	1
307	94515	Screw–Hex. Head	1
337	802592	Plug–Spark	1
383	89838	Wrench–Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick–Oil Filler	1
★524	280393	Seal–Filler Tube	1
525	495265	Tube–Oil Filler	1
562	92613	Bolt–Governor Lever	1
572	224328	Baffle–Cylinder	1
592	231082	Nut–Hex.	1
615	94474	Pushnut (Governor Crank)	1
616	262578	Crank–Governor	1
625	492717	Tube–Fuel Intake	1
635	66538	Elbow–Spark Plug	1
★842	280966	Seal–O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat–Intake Valve	1
870	213513	Seat–Exhaust Valve	1
871	262001	Guide–Exhaust Valve **Note:** 63709 Guide–Intake Valve	1
1019	494256	Label Kit	1

★ Included in Gasket Set–Part No. 493263.

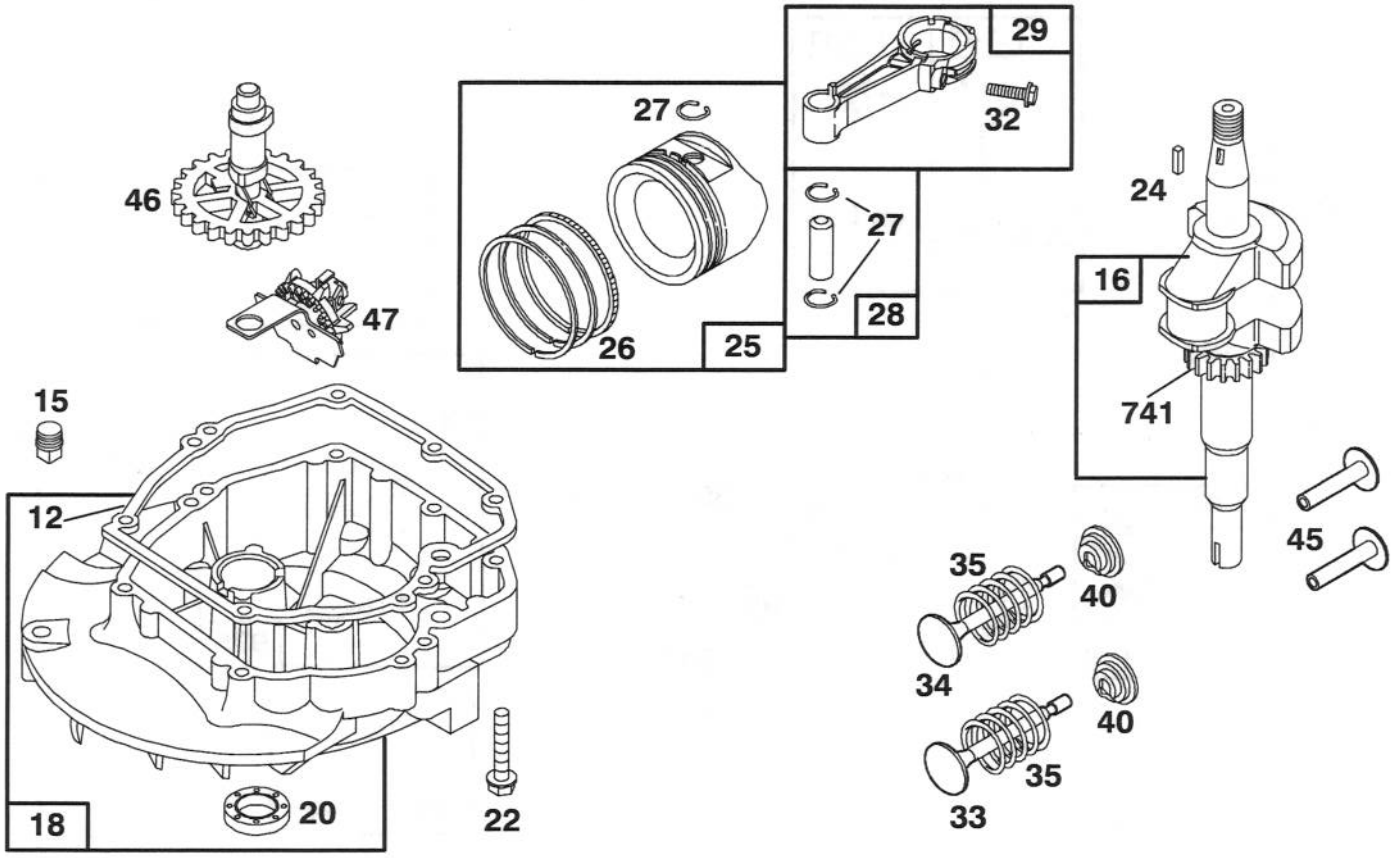

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket–Crankcase	1
15	94720	Plug–Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	1
18	493279	Sump–Engine	1
★20	399781	Seal–Oil	1
22	94220	Screw–Sump Mounting Sem	1
		Note: 94612 Screw–Sump Mtg. (One (1) Used in Hole Nearest Breather.)	1
24	222698	Key–Flywheel	1
25	493262	Piston Assy. (Std.)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set–Piston (Standard)	1
	493388	Ring Set–Piston (.010" O.S.)	1
	493389	Ring Set–Piston (.020" O.S.)	1
	493390	Ring Set–Piston (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock–Piston Pin	1
28	298909	Pin Assembly–Piston (Standard)	1
	298908	Pin Assembly–Piston (.005" O.S.)	1
29	490566	Rod Assembly– Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing– Order No. 490743.	1
32	94405	Screw–Connecting Rod	1
33	262651	Valve–Exhaust	1
34	262652	Valve–Intake	1
35	262224	Spring–Valve	1
40	93312	Retainer–Valve Spring	1
45	262204	Tappet–Valve	1
46	492828	Gear–Cam	1
47	493737	Oil Slinger Gear and Bracket	1
741	262598	Gear–Timing	1

★ Included in Gasket Set–Part No. 493263.

3315–992

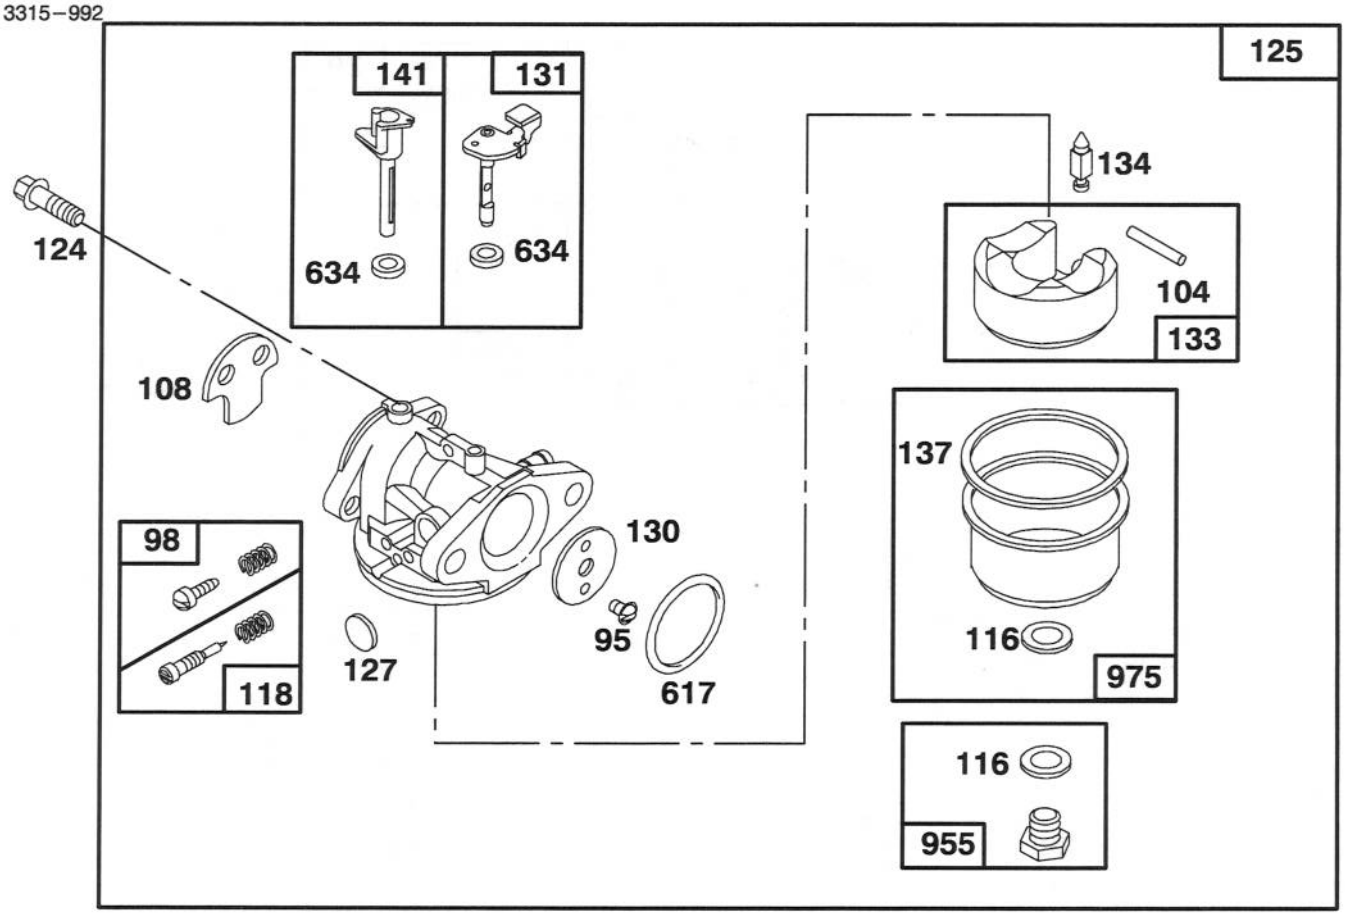


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw–Throttle Valve Mtg.	1
98	398185	Screw–Idle Adjustment	1
●104	231371	Pin–Float Hinge	1
108	223471	Valve–Choke	1
●◆116		Gasket–Sealing (Sold in Kit Only).	1
●118	493765	Valve and Spring– Needle	1
124	94525	Screw–Carburetor Mtg.	1
125	494216	Carburetor Assembly	1
●127		Plug–Welch (Sold in Kit Only).	1
130	223470	Valve–Throttle	1

Ref. No.	Part No.	Description	No. Used
131	493267	Shaft and Lever–Throttle	1
133	398187	Float Assy.–Carburetor	1
●134	398188	Valve–Inlet (Includes Seat)	1
●◆137		Gasket–Bowl (Sold in Kit Only).	1
141	494218	Shaft–Choke	1
●◆617	270344	Seal–Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only).	1
955	493763	Screw–Bowl Mtg.	1
975	493640	Bowl Assy.–Carburetor	1

● Included in Carburetor Overhaul Kit–Part No. 493762.
◆ Included in Carburetor Gasket Set–Part No. 490937.

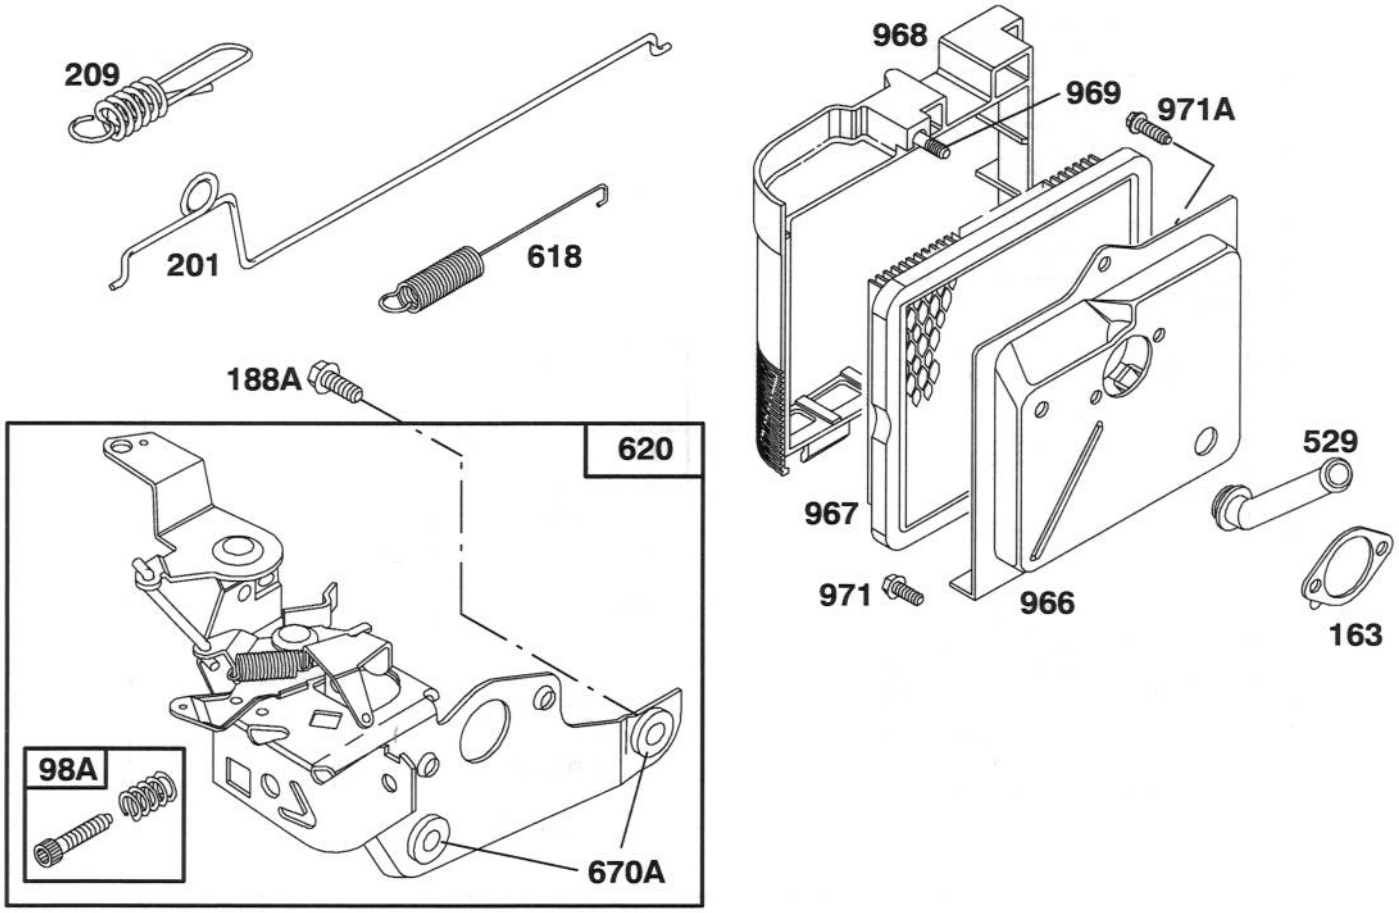


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
98A	493280	Screw Assy.–Speed Adjust	1
★163	272296	Gasket–Air Cleaner	1
188A	94644	Screw–Hex. Head	1
201	262579	Link–Governor	1
209	262661	Spring–Governor	1
529	280943	Grommet–Breather	1
618	262749	Spring–Choke Return	1
620	493894	Bracket Assembly–Carburetor Control	1

Ref. No.	Part No.	Description	No. Used
670A	493823	Spacer–Carburetor Bracket	1
966	492363	Base–Air Cleaner	1
967	491588	Filter–Air	1
968	280937	Cover–Air Cleaner	1
969	94120	Screw–Cover Mtg.	1
971	94269	Screw–Air Cleaner	1
971A	94121	Screw–Base to Carb.	1

★ Included in Gasket Set–Part No. 493263.

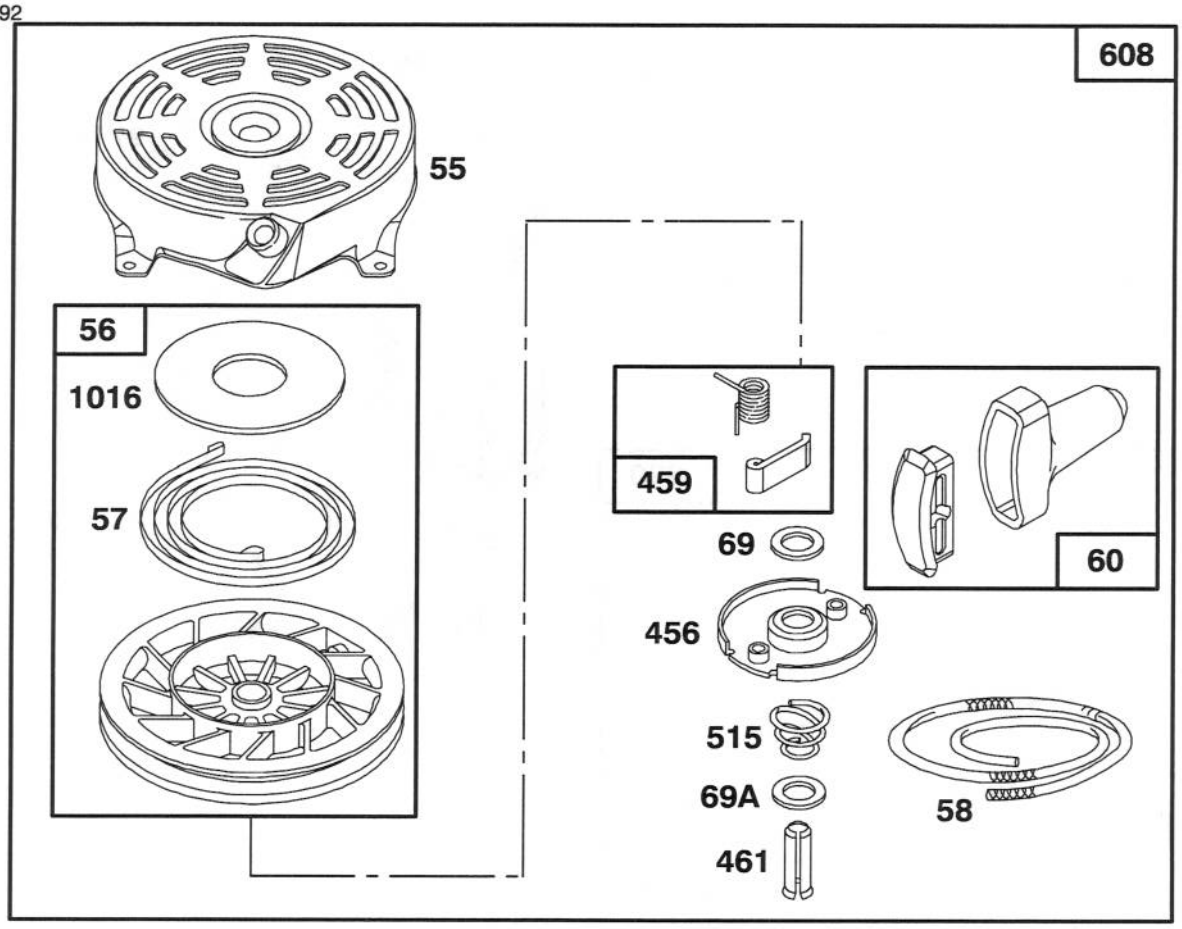


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing–Rewind Starter	1
56	492832	Pulley–Rewind Starter	1
57	262594	Spring–Rewind Starter	1
58	280399	Rope–Rewind Starter	1
60	393152	Handle–Rewind Starter	1
69	280973	Washer–Rewind Starter	1
69A	224322	Washer–Rewind Starter	1
456	224321	Retainer–Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl–Starter	1
461	262626	Pin–Starter	1
515	262625	Spring–Torsion	1
608	493295	Starter Assy.–Rewind **Includes:** 94128 Screw–Hex. Head 92987 Nut–Hex.	1
1016	224278	Cover–Rewind Starter	1

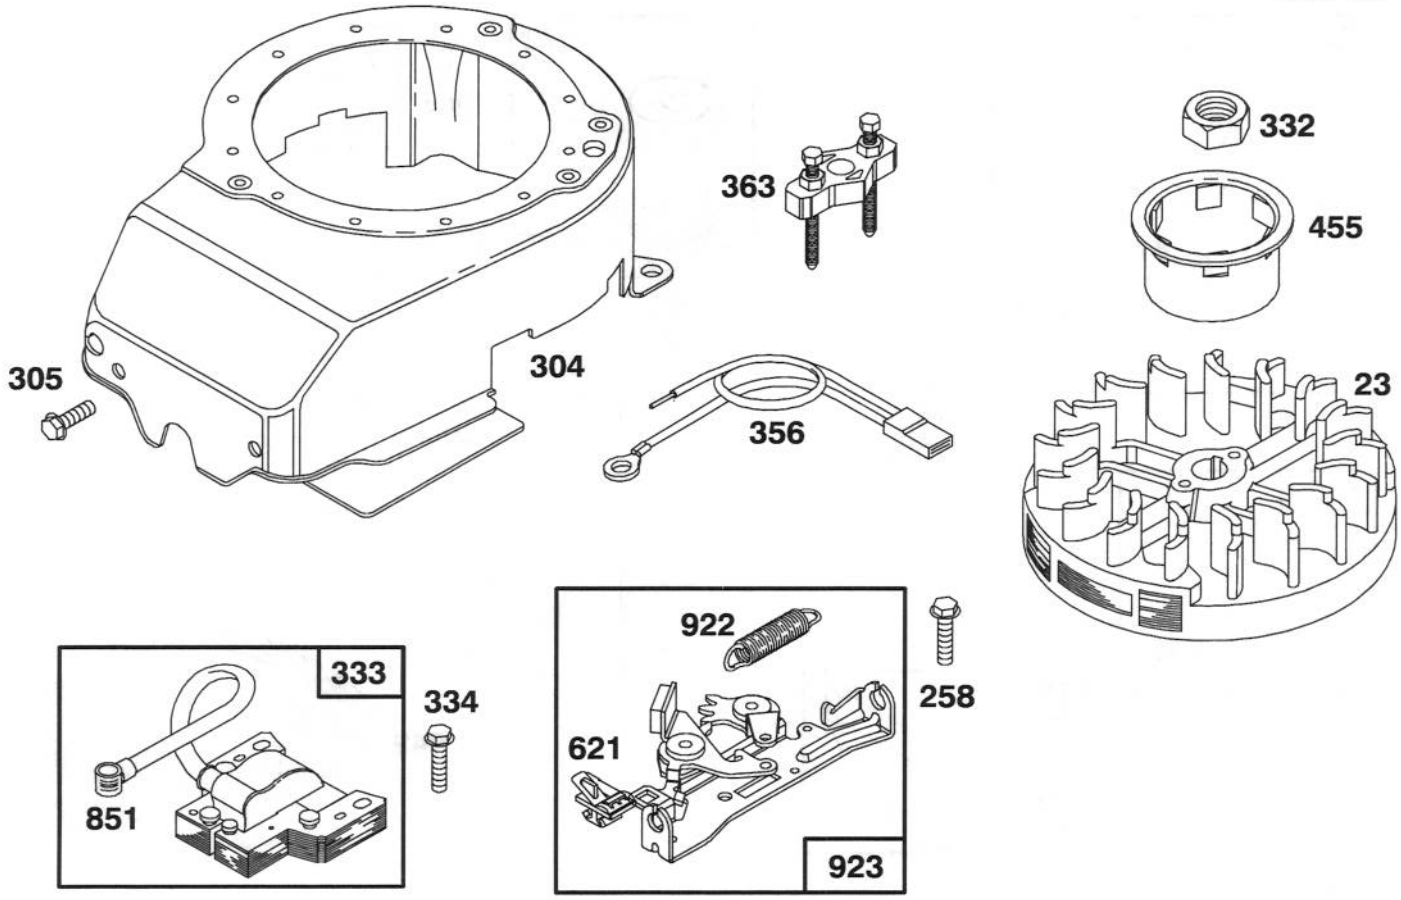


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel–Magneto	1
258	94512	Screw–Hex. Head	1
304	493293	Housing–Blower	1
305	94513	Screw–Hex. Head Sem	1
332	92284	Nut–Flywheel	1
333	802574	Armature–Magneto	1
334	94731	Screw–Armature Mtg.	1
356	398808	Wire–Ground	1

Ref. No.	Part No.	Description	No. Used
363	19069	Puller–Flywheel (Optional Accessory)	1
455	224250	Cup–Starter	1
621	396847	Switch–Stop	1
851	221798	Terminal–Ignition Cable	1
922	262640	Spring–Brake	1
923	492918	Brake Assembly	1

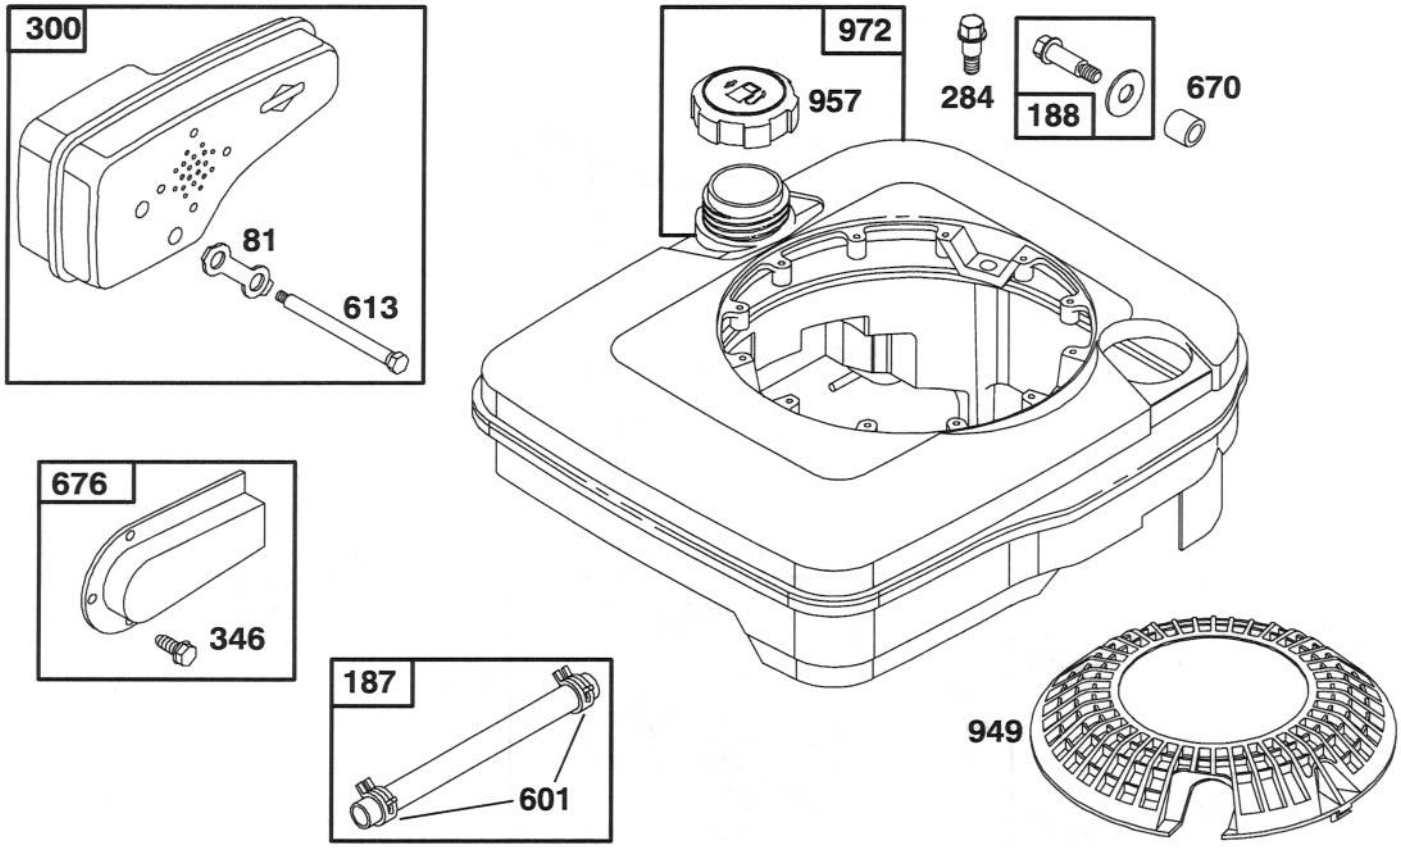


Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock–Muffler Screw	1
187	492790	Hose–Fuel (Cut To Suit)	1
188	398540	Screw–Tank Mounting (Includes Washer)	1
284	94511	Screw–Hex. Head	1
300	490547	Muffler–Exhaust	1
346	93705	Screw–Hex. Head	1


Ref. No.	Part No.	Description	No. Used
601	93807	Clamp–Hose	1
613	94231	Screw–Muffler Mtg.	1
670	280512	Spacer–Fuel Tank	1
676	493871	Deflector–Muffler	1
949	281136	Guard–Finger	1
957	397974	Cap Assy.–Fuel	1
972	494358	Tank Assembly–Fuel	1

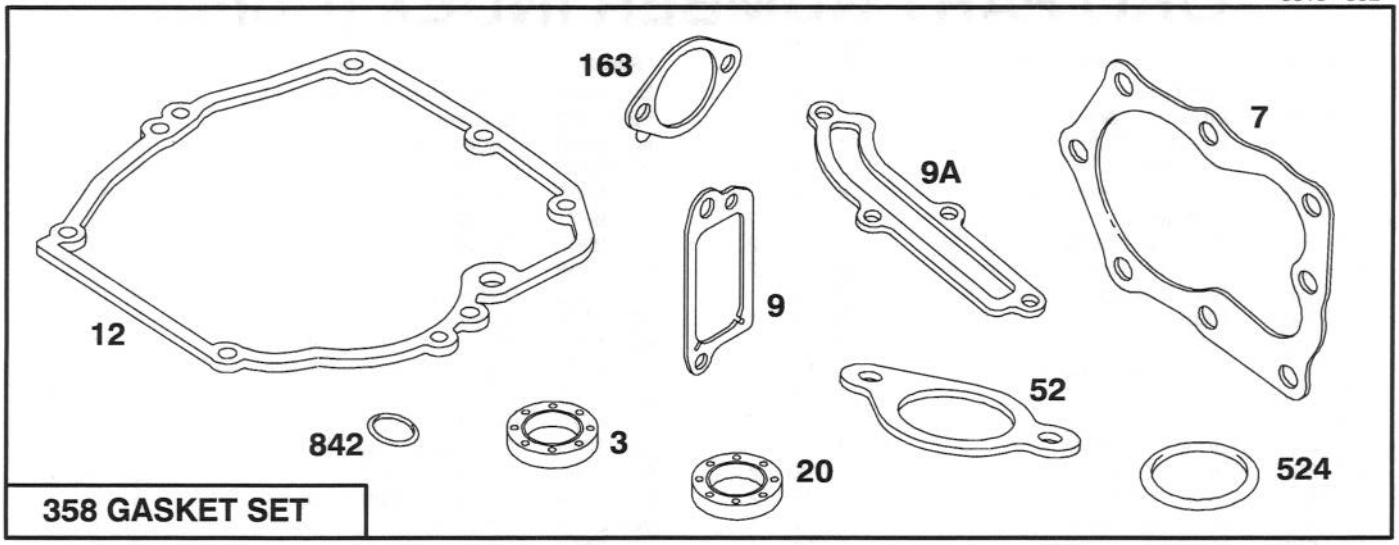

358 GASKET SET

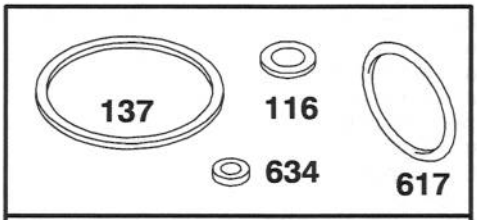

977 CARBURETOR GASKET SET

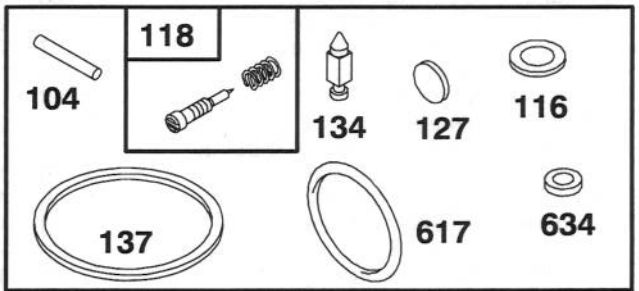

121 CARBURETOR OVERHAUL KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 122702-3171-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal–Oil	1
★7	272200	Gasket–Cylinder Hd.	1
★9	272481	Gasket–Valve Cover	1
★9A	272238	Gasket–Baffle Plate	1
★12	272198	Gasket–Crankcase	1
★20	399781	Seal–Oil	1
★52	272199	Gasket–Intake Elbow	1
●104	231371	Pin–Float Hinge	1
●◆116		Gasket–Sealing (Sold in Kit Only).	1
●118	493765	Valve and Spring–Needle	1
121	493762	Carburetor Overhaul Kit	1
●127		Plug–Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve–Inlet (Includes Seat)	1
●◆137		Gasket–Bowl (Sold in Kit Only).	1
★163	272296	Gasket–Air Cleaner	1
358	493263	Gasket Set	1
★524	280393	Seal–Filler Tube	1
●◆617	270344	Seal–Fuel Intake Tube	1
●◆634		Washer–Shaft (Sold in Kit Only).	1
★842	280966	Seal–O-Ring	1
977	490937	Gasket Set–Carburetor	1

● Included in Carburetor Overhaul Kit–Part No. 493762.
◆ Included in Carburetor Gasket Set–Part No. 490937.
★ Included in Gasket Set–Part No. 493263.

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
614578	Gearcase	4	10	1
614596	Gear 34 Tooth	4	18	1
614668	Cover – Gear Case	4	2	1
614673	Bushing	5	9	1
614696	Shaft – Intermediate	4	4	1
3-3287	Spacer	6	9	2
11-9509	Wheel & Tire Assembly	1	28	2
11-9519	Wheel – Tire & Gear Ass'y	5	17	2
14-4069	Recycler Cover Assembly	1	9	1
14-9419	Blade – 21	3	9	1
16-1599	Housing	2	35	1
19-4050	Knob – Handle Release	6	16	2
25-7740	Knob – Arm	1	2	2
25-7740	Knob – Arm	5	5	2
26-0670	Screw – Blade	3	12	1
27-6232	Bolt – Wheel	5	18	2
27-6232	Bolt – Wheel	1	27	2
27-6250	Bushing – Wheel	5	11	4
27-6250	Bushing – Wheel	1	26	4
27-7210	Screw – Shoulder	6	6	2
27-7211	Screw – Shoulder	6	7	2
33-3208	Rod – Shield	1	23	1
36-4780	Washer – Thrust	4	17	2
36-4791	Washer	4	5	2
37-7260	Screw – Hex Hd. Tapping	1	13	1
38-7820	Bearing – Ball	4	15	1
39-5770	Decal – Danger	1	6	1
40-1940	Washer – Wheel Bolt	1	29	4
42-3520	Cap – End	5	28	2
44-0580	Shield – Trailing	1	24	1
46-5481	Cable – Traction	7	3	1
46-5520	Lever – Traction	7	17	1
46-6810	Screw & Washer Assembly	1	8	1
46-6811	Screw & Washer Assembly	1	10	3
46-6980	Support – Cable	7	7	1
46-7030	Retainer – Cable	1	20	1
48-2060	Bearing – Needle	5	1	2
49-2040	Screw – Self Tapping	5	7	1
49-2040	Screw – Taptite	4	1	4
49-2750	Pin – Handle	6	13	2
52-7406	Cover – Belt Ass'y	1	21	1
55-3760	Pinion – 15 Tooth	4	3	1
60-8750	Bushing	4	6	2
60-8840	Pulley – Half	4	12	2
60-8850	Bushing – Output	4	9	2
60-8890	Gear – Bevel Pinion	4	16	1
62-3720	Clamp – Cable	1	22	1
62-6660	Spacer	4	11	1
62-7540	Retainer – Blade	3	13	1
62-7550	Pulley – Driver	3	14	1
63-8701	Pivot Arm Assembly	5	2	2
63-8720	Spring Arm Assembly	5	4	2
65-2720	Ring – Retaining	5	15	4
65-4710	Ring – Friction	5	22	2
65-4720	Spring	5	14	2
65-4730	Thrust Washer	5	25	2
65-4740	Thrust Washer	5	13	4
65-4750	Pinion	5	12	2
65-4760	Washer – Clutch	5	21	2
66-0560	Screw – Shoulder	1	25	2
66-0570	Guide – Belt	3	6	1
66-0580	Arm – Pivot	2	30	2
66-6040	Key – Rocker R.H.	5	*	2
66-6050	Key – Rocker L.H.	5	20	1
70-9760	Bushing	5	26	2
71-0560	Spring Arm Ass'y R.H.	1	1	1
71-0570	Spring Arm Assembly L.H.	2	32	1
71-1280	Decal – Danger	1	14	1
74-1660	Cover – Wheel	5	16	2
74-1671	Spacer – Wheel Cover	5	19	2

Part No.	Description	Pg. No.	Ref. No.	Qty.
82-5530	Lower Handle Assembly	6	10	1
82-5680	Bracket – Traction Adj.	1	19	1
82-8450	Decal – Danger	1	11	1
84-8360	Latch – Handle L.H.	6	8	1
84-8400	Latch – Handle R.H.	6	19	1
86-9671	Guide – Rope	6	18	1
91-2253	Cover – Wheel	1	17	1
91-2258	V-Belt	5	10	1
92-1599	Stiffener – Blade	3	10	1
92-1616	Screw – Taptite	5	8	1
92-1720	Plate – Kicker Right Front	1	3	1
92-1730	Plate – Kicker Left Front	1	4	1
92-1750	Plate – Kicker Left Rear	1	12	1
92-1779	Decal – Warning	1	15	1
92-2259	Gearcase Ass'y Complete	4	*	1
92-2260	Screw – Handle	6	14	2
92-2264	Bracket – Belt Guide	5	6	1
92-2265	Stop – Pivot	7	4	1
92-2269	Screw – Handle	7	1	1
92-2279	Decal – H.O.C.	1	16	4
92-2280	Decal – Instruction	7	14	1
92-2283	Decal – Deck	2	34	1
92-2292	Decal – Instruction	7	15	1
92-2294	Decal – Engine	3	1	1
92-2298	Washer – Spring	7	13	1
92-2299	Lever – Shift	7	5	1
92-3131	Shaft – Output	4	7	1
92-3132	Bolt – Shoulder	7	10	1
92-3133	Spacer – Traction Lever	7	16	1
92-3135	Bar – Control	7	12	1
92-3136	Handle – Upper	6	1	1
92-4066	Cable – Brake	7	2	1
92-4069	Control – Throttle	6	4	
2210-249	Clamp – Casing	3	4	1
2210-313	Screw – Clamp	3	5	1
2210-316	Stop – Rope	3	2	1
237-153	O-Ring	5	29	2
302-56	Fitting – Grease	5	3	2
321-48	Screw – Hex Hd. Cap	6	5	1
3253-22	Lockwasher	3	11	1
3256-1	Washer – Flat	6	2	1
3256-1	Washer – Flat	7	8	1
3256-24	Washer	4	13	1
3256-49	Washer – Flat	7	11	1
3285-19	Pin – Groove	4	8	2
3290-378	Tie – Cable	6	15	2
3290-378	Tie – Cable	2	37	1
3296-2	Nut – Lock	7	6	1
3296-5	Nut	4	14	1
3296-6	Locknut	5	27	2
3296-6	Nut – Lock	2	31	4
3296-47	Nut – Lock	6	12	3
3296-72	Nut – Lock	6	11	3
3296-73	Nut – Lock	6	3	2
3296-73	Nut – Lock	7	9	1
32144-70	Screw – Thread Forming	3	7	2
32144-70	Screw – Thread Forming	1	18	2
32144-85	Screw	5	30	2
32144-85	Screw – Thread Forming	2	33	2
31244-102	Screw – Thread Forming	3	8	3
32144-111	Screw – Plastite	1	5	6

OPTIONAL EQUIPMENT

Recycler Side Discharge Kit .... Model No. 59189
Wear Plate Kit ..... Part No. 49-4080
Recycler Bagging Kit ..... Model No. 59174
Dethatcher Kit ..... Model No. 59131

*Not Illustrated