FORM NO. 3316–129

LAWN-BOY®

19" S SERIES
WALK–BEHIND MOWER

MODEL NO. 10725–3900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN–BOY owners as quickly as possible, minor changes are incorporated into LAWN–BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN–BOY Distributor or his Authorized LAWN–BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck . In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:
1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.


TABLE OF CONTENTS

Description	Page	Description	Page
Engine, Shroud and Muffler Plate	1	Carburetor Assembly	5
Deck, Muffler Cover, Blade & Wheels	2	Engine Assembly	6
Handle	3	Numeric Parts Index	8
Starter	4		

Accessories

Description	Model / Part No.	Description	Model / Part No.
Mulch Plate	89862	Leaf Shredder	681683

©Lawn-Boy Inc. – 1993
All Rights Reserved

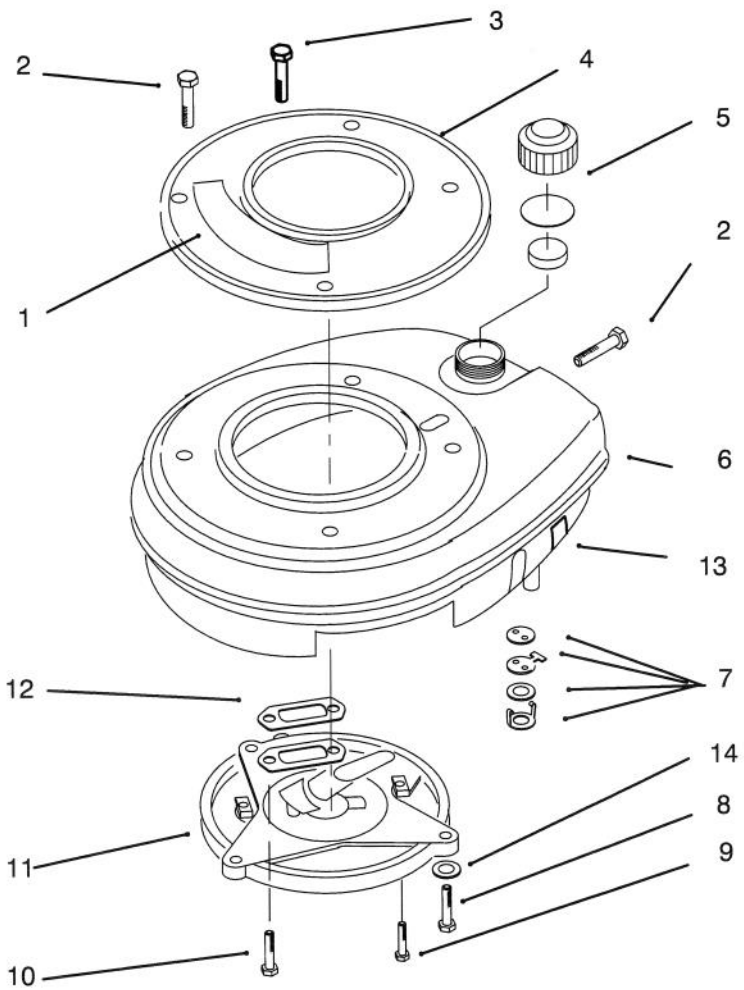


C–1441a

ENGINE SHROUD AND MUFFLER PLATE

Ref. No.	Part No.	Description	No. Used
1	614265	Applique	1
2	611395	Screw	5
3	612428	Screw – Starter Mounting	4
4	684570	Starter Base	1
5	682755	Fuel Cap (Includes both of the following items)	1
*	607213	Gasket	1
*	609150	Baffle	1
6	92–1084	Shroud – Engine	1

Ref. No.	Part No.	Description	No. Used
7	681818	Fuel Shut–Off Assembly	1
8	92–1648	Screw – Muffler Plt. to Hsg.	3
9	613500	Screw – Muffler Plt. to Block	1
10	607601	Screw – Muffler Plt. to Block	3
11	92–1054	Plate – Muffler	1
12	609420	Gasket – Exhaust	1
13	611564	Decal – Fuel Shut–0ff Assy.	1
14	3256–56	Washer – Muffler Plt. to Hsg.	3

*Not illustrated

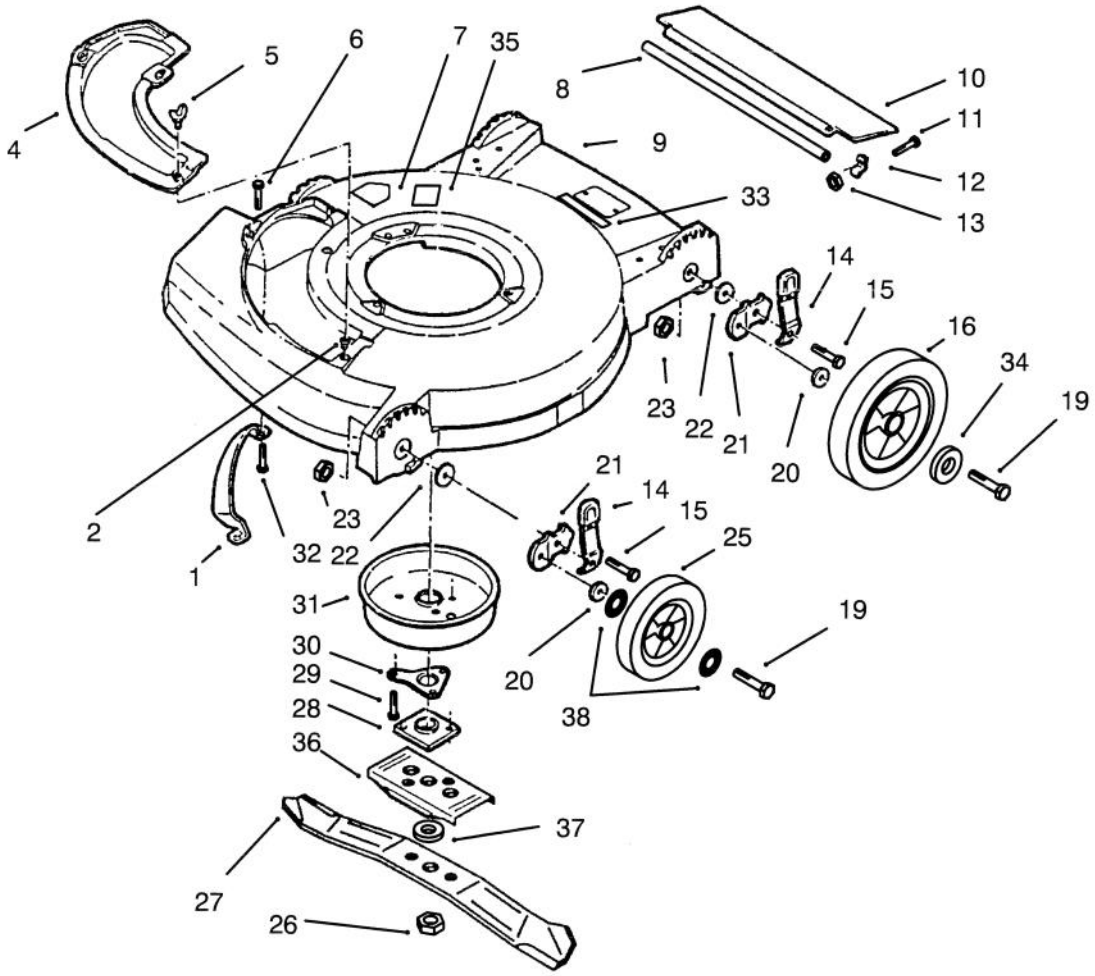


C–1442

DECK,MUFFLER COVER, BLADE & WHEELS

Ref. No.	Part No.	Description	No. Used
1	608159	Toe Bar	1
2	604604	Grommet	3
4	607560	Cover Plate	1
5	606452	Screw – Cover Plate	1
6	607809	Screw – Plate Mounting	2
7	39–5770	Decal –Danger (English)	1
8	608160	Rod – Trailing Shield	1
9	16–2289	Housing Assembly (Incl. Ref. # 2, 7, 33 & 35))	1
10	611014	Shield – Trailing	1
11	609891	Screw – Trailing Shield	2
12	608161	Clamp	2
13	602315	Nut	3
14	153444	Knob and Spring Assembly	4
15	610646	Bolt – Shoulder	4
16	682974	Wheel – Rear 8”	2
19	603441	Bolt – Wheel	4
20	603620	Washer	4

Ref. No.	Part No.	Description	No. Used
21	608833	Bracket – Wheel Ht. Adjust	4
22	608834	Washer – Wheel Ht. Adjust	4
23	603773	Nut – Wheel Ht. Adjust	4
25	678636	Wheel – Front 6”	2
26	603164	Nut	1
27	603409	Blade 19”	1
28	677525	Collar and Plate Assembly	1
29	609471	Screw – Muff. to Muff. Plate	3
30	609786	Support – Crankshaft	1
31	682876	Muffler Cover Assembly	1
32	46–6811	Screw	2
33	92–2940	Decal – Warning (English)	1
*	92–5434	Kit – Decal, French	1
34	605256	Washer – Wheel Bolt	4
35	613121	Decal – Spark Plug	1
36	603541	Stiffener – Blade	1
37	605058	Washer	2
38	605255	Washer – Felt	8


*Not Illustrated

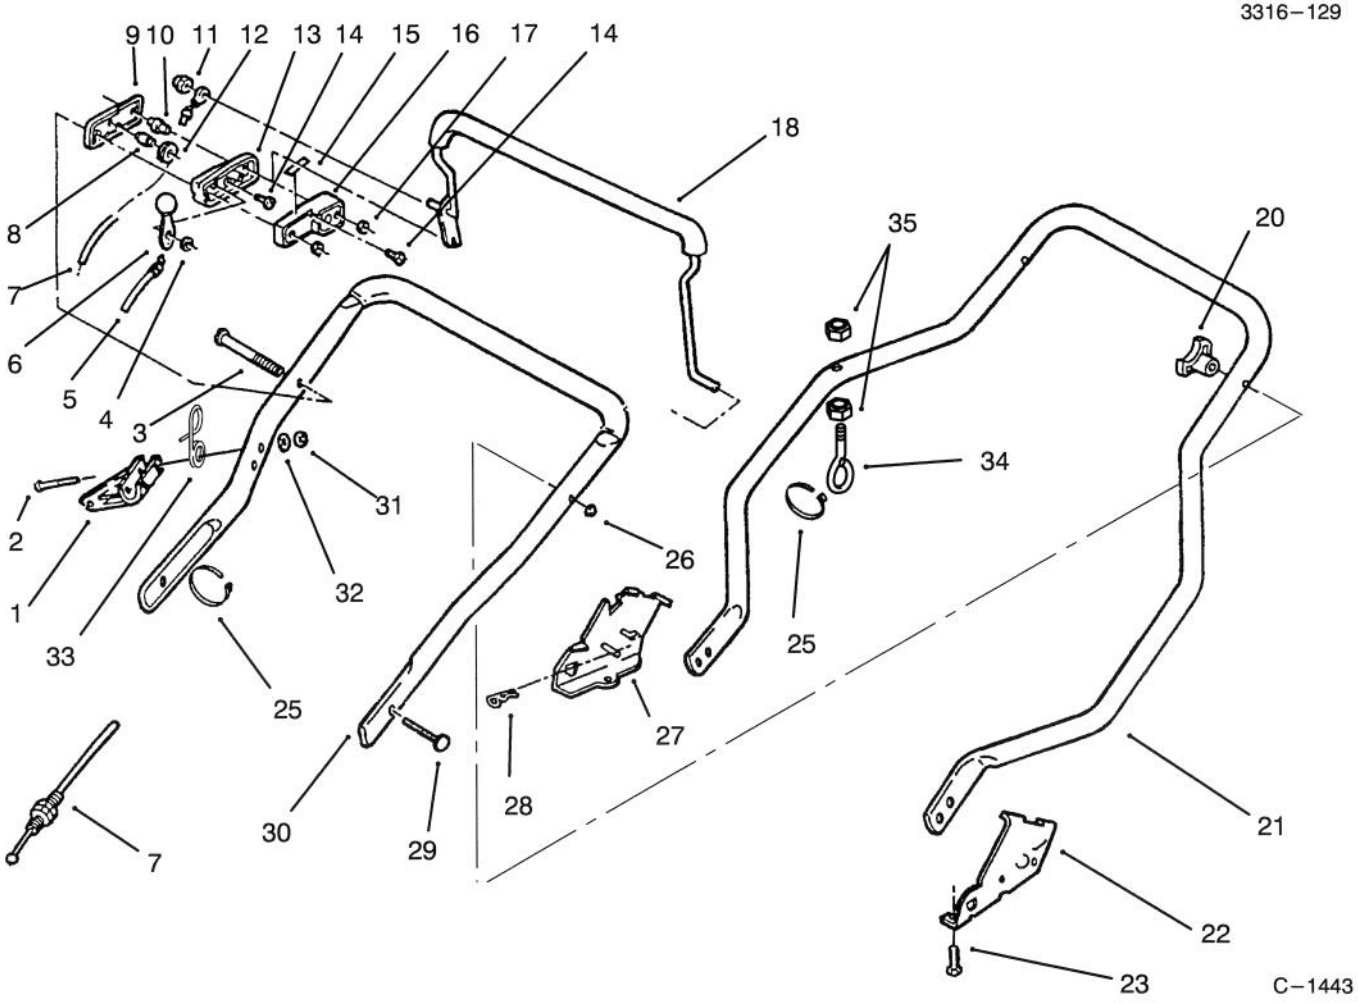

HANDLE

Ref. No.	Part No.	Description	No. Used
1	153254	Rope Guide Assembly	1
2	611233	Screw – Truss Head	2
3	611799	Screw	2
4	612586	Washer	2
5	612588	Cable – Throttle	1
6	683663	Lever & Knob Assembly	1
7	683041	Control Cable Assembly	1
8	611542	Pin	1
9	611777	Control Case Outer	1
10	611541	Column	1
11	612168	Nut – Acorn	1
12	612564	Pulley	1
13	612633	Case – Throttle, Center	1
14	611543	Screw	2
15	612698	Decal – Throttle	1
16	612634	Case – Throttle, Inner	1
17	611258	Nut	2

Ref. No.	Part No.	Description	No. Used
18	683478	Lever – Control	1
20	614243	Knob	2
21	613363	Handle – Lower	1
22	683925	Bracket – Handle L.H.	1
23	607188	Screw	4
25	614249	Tie Strap	2
26	605546	Nut – Push	1
27	683926	Bracket – Handle R.H.	1
28	605803	Pin – Cotter	2
29	614697	Screw	2
30	612683	Handle Assembly – Top	1
31	602315	Nut – Lock	2
32	602945	Washer	2
33	92–2930	Rope Stop	1
34	611571	Eyebolt	1
35	602315	Nut – Lock	2

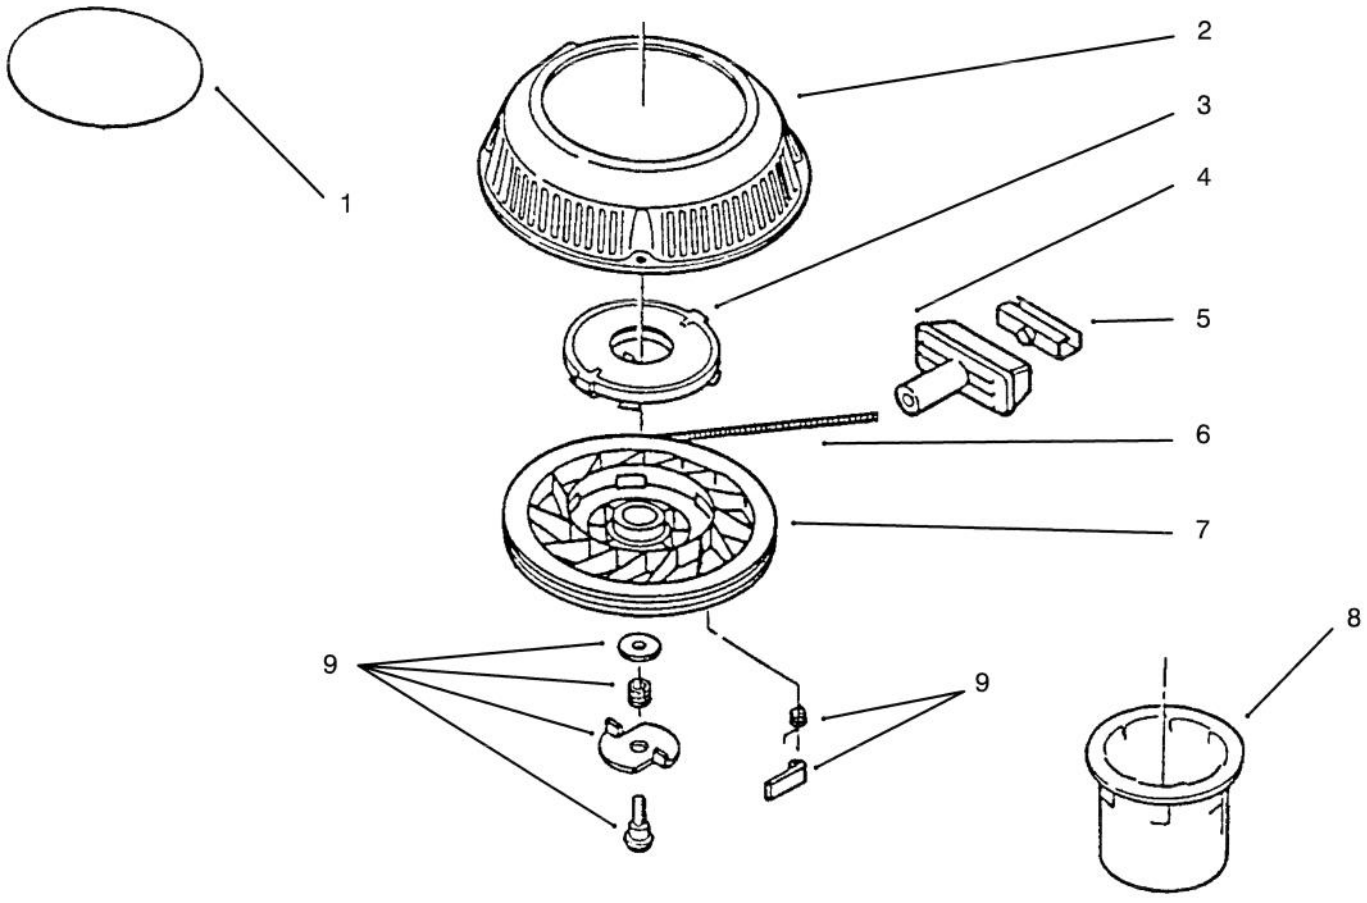


C–1337

STARTER

Ref. No.	Part No.	Description	No. Used
*	684622	Starter Assembly (Incl. Ref. #3, 6, 7 & 9)	1
1	614196	Decal – Recoil	1
2	684567	Starter Housing & Shaft	1
3	683897	Spring & Keeper	1
4	612825	Handle – Starter	1

Ref. No.	Part No.	Description	No. Used
5	612824	Clip – Rope	1
6	612432	Rope	1
7	612950	Pulley	1
8	612949	Hub – Starter	1
9	683899	Kit – Dog	1
*	47–2480	Stop – Rope	1

*Not Illustrated

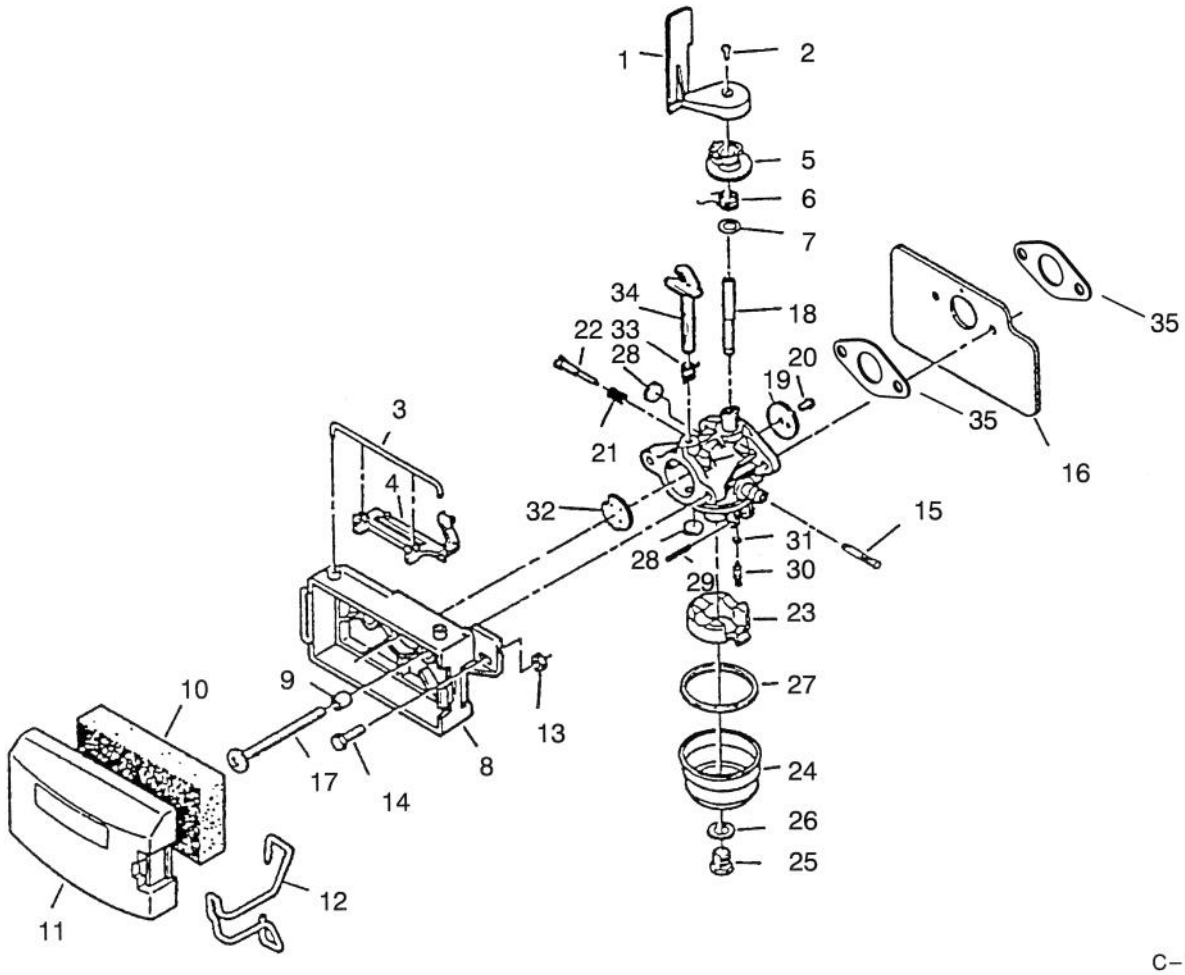


C–1340

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
*	684334	Body – Carburetor (Incl. Ref. #18–34)	1
1	612505	Vane – Air	1
2	605522	Screw	1
3	610165	Retainer – Speed Control Lever	1
4	612502	Lever – Governor Control	1
5	612757	Collar	1
6	613142	Spring	1
7	308052	Washer	1
8	612504	Base – Air Filter	1
9	612503	Spacer – Filter Base	1
10	609493	Element – Air Filter	1
11	611377	Cover – Air Filter	1
12	610383	Retainer – Cover	1
13	328712	Nut	1
14	314576	Screw	1
15	612974	Filter – Fuel	1
16	614380	Heat Shield & Gasket	1
17	612507	Screw	2
*	612783	Line – Fuel	1
*	684286	Kit – Throttle (Incl. Ref. #18–20)	1
18		Shaft – Throttle	1
19		Vane – Throttle	1
20		Screw	1
*	684285	Kit – Idle Needle (Incl. Ref.# 21–22)	1
21		Spring – Needle	1
22		Needle – Idle	1
23	683783	Kit – Float Assembly	1
*	683782	Kit – Bowl (Incl. Ref. #24 &25)	1
24		Bowl – Fuel	1
25		Screw	1
*		Kit – Gasket	1
*	683778	Kit – Gasket (Incl. Ref. #26 & 27)	1
26		Gasket – Bowl Retainer	1
27		Gasket – Bowl	1
*	683777	Kit – Repair (Incl. Ref. #28–31)	1
28		Plug – Welch	2
29		Shaft – Float	1
30		Inlet – Needle Valve	1
31		Seat – Valve	1
*		Kit – Gasket	1
*	683781	Kit – Choke (Incl. Ref. #32–34)	1
32		Valve – Choke	1
33		Spring – Return	1
34		Shaft – Choke	1
35	612574	Gasket – Carburetor	2

ENGINE ASSEMBLY

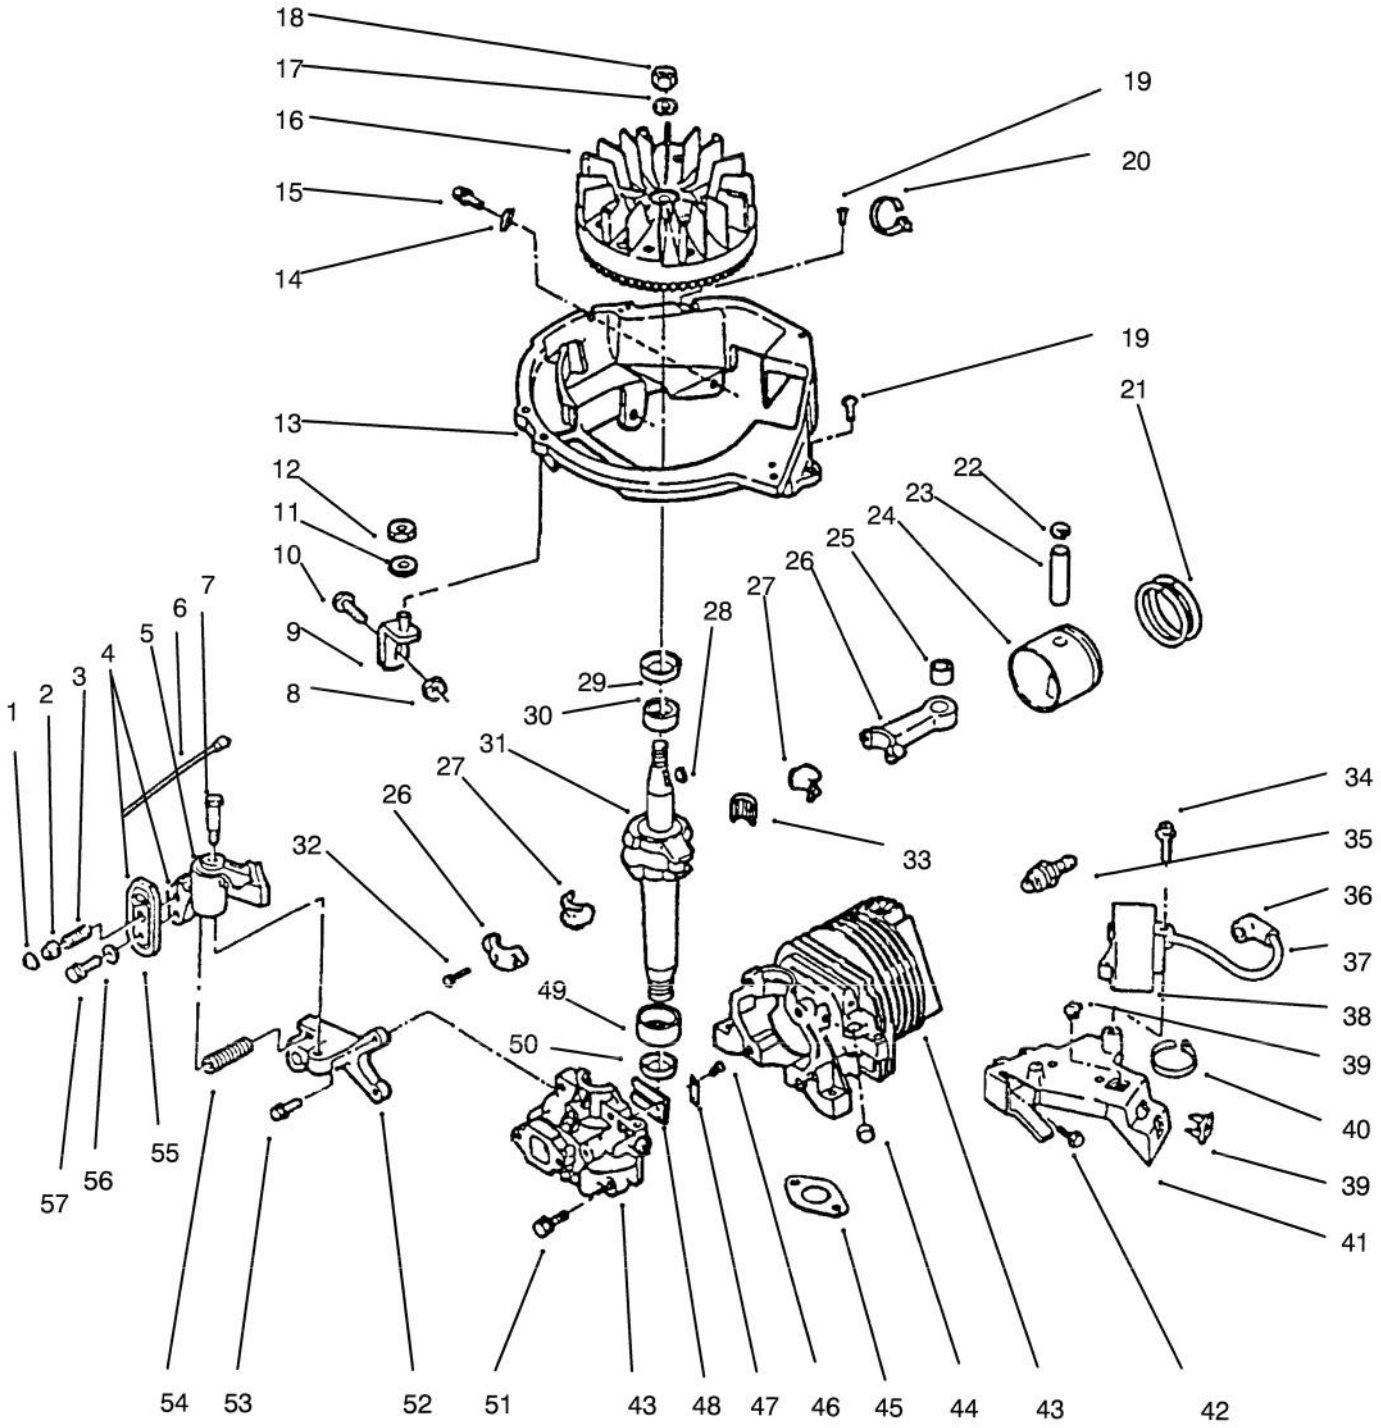

C–1338

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611213	Retainer	1
2	611509	Actuator – Brake Lever	1
3	611214	Spring – Cable, Return	1
4	683819	Switch Assembly (Incl. ref. #1, 6, 20, 56–58)	1
5	682683	Brake Assembly	1
6	683821	Wire Lead	1
7	613529	Bolt – Shoulder	1
8	608311	Nut	1
9	683581	Brace Assembly	1
10	603014	Bolt	1
11	603093	Washer	1
12	602315	Nut	1
13	612427	Shroud – Base	1
14	611191	"J"Clip	1
15	609947	Screw	3
16	683580	Flywheel Assembly	1
17	316959	Washer – Lock	1
18	130743	Nut – Flywheel	1
19	609808	Screw	2
20	317893	Tie Strap	1
21	681737	Set – Ring	1
22	303712	Ring – Retaining	2
23	606608	Pin – Wrist	1
24	92–4934	Piston & Connecting Rod Assembly (Incl. Ref. #20, 24–27 & 32–33)	1
*	682986	Set – Piston & Ring (Incl. Ref.# 21–23)	1
25	679144	Bearing Assembly	1
26	682678	Connecting Rod Assembly (Incl. Ref. #25, 27, 32 & 33)	1
27	603954	Liner – Split	2
28	607199	Key – Flywheel	1

Ref. No.	Part No.	Description	No. Used
29	611396	Seal – Oil	1
30	681830	Bearing – Main	1
31	610747	Crankshaft	1
32	611393	Screw	2
33	92–4927	Set – Needle Bearing	1
34	607526	Screw	2
35	614008	Spark Plug	1
36	684698	Cover – Terminal	1
37	681678	Wire Lead	1
38	683215	C. D. Ignition Module (Incl. Ref. #36, 37)	1
39	605120	Grommet	2
40	614249	Tie Strap	1
41	613072	Bracket – C. D.	1
42	614343	Screw	2
43	683694	Cylinder & Crankcase Cover Assembly (Incl. Ref. # 46–48, 51 & 58)	1
44	609123	Plug	4
45	609420	Gasket – Exhaust	1
46	612872	Screw	2
47	602587	Plate – Reed	1
48	602588	Reed	1
49	681831	Bearing – Main	1
50	611396	Seal – Oil	1
51	613110	Screw	2
52	611192	Bracket – Brake	1
53	613233	Screw	2
54	611211	Spring – Brake	1
55	683819	Case Assembly	1
56	306407	Washer	1
57	609891	Screw	1
*	609629	Dowel	1
*	92–6350	Short Block	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut – Flywheel	6	18	1
153254	Rope Guide Assembly	3	1	1
153444	Knob and Spring Assembly	2	14	4
303712	Ring – Retaining	6	22	2
306407	Washer	6	56	1
308052	Washer	4	7	1
314576	Screw	4	14	1
316959	Washer – Lock	6	17	1
317893	Tie Strap	6	20	1
328712	Nut	4	13	1
602315	Nut	6	12	1
602315	Nut	2	13	3
602315	Nut – Lock	3	31	2
602315	Nut – Lock	3	35	2
602587	Plate – Reed	6	47	1
602588	Reed	6	48	1
602945	Washer	3	32	2
603014	Bolt	6	10	1
603093	Washer	6	11	1
603164	Nut	2	26	1
603409	Blade 19"	2	27	1
603441	Bolt – Wheel	2	19	4
603541	Stiffener – Blade	2	36	1
603620	Washer	2	20	4
603773	Nut – Wheel Ht. Adjust	2	23	4
603954	Liner – Split	6	27	2
604604	Grommet	2	2	3
605058	Washer	2	37	2
605120	Grommet	6	39	2
605255	Washer – Felt	2	38	8
605256	Washer – Wheel Bolt	2	34	4
605522	Screw	4	2	1
605546	Nut – Push	3	26	1
605803	Pin – Cotter	3	28	2
606452	Screw – Cover Plate	2	5	1
606608	Pin – Wrist	6	23	1
607188	Screw	3	23	4
607199	Key – Flywheel	6	28	1
607213	Gasket	1		1
607526	Screw	6	34	2
607560	Cover Plate	2	4	1
607601	Screw – Muffler Plt. to Block	1	10	3
607809	Screw – Plate Mounting	2	6	2
608159	Toe Bar	2	1	1
608160	Rod – Trailing Shield	2	8	1
608161	Clamp	2	12	2
608311	Nut	6	8	1
608311	Nut – Muffler Plt. to Hsg.	2	24	3
608833	Bracket – Wheel Ht. Adjust	2	21	4
608834	Washer – Wheel Ht. Adjust	2	22	4
609123	Plug	6	44	4
609150	Baffle	1		1
609420	Gasket – Exhaust	1	12	1
609420	Gasket – Exhaust	6	45	1
609471	Screw – Muff. to Muff. Plate	2	29	3
609493	Element – Air Filter	4	10	1
609629	Dowel	6	58	1
609786	Support – Crankshaft	2	30	1
609808	Screw	6	19	2
609891	Screw	6	57	1
609891	Screw – Trailing Shield	2	11	2
609947	Screw	6	15	3
610165	Retainer – Speed	4	3	1
610383	Retainer – Cover	4	12	1
610646	Bolt – Shoulder	2	15	4
610747	Crankshaft	6	31	1
611014	Shield – Trailing	2	10	1
611191	"J"Clip	6	14	1
611192	Bracket – Brake	6	52	1
611211	Spring – Brake	6	54	1
611213	Retainer	6	1	1
611214	Spring – Cable, Return	6	3	1
611233	Screw – Truss Head	3	2	2
611258	Nut	3	17	2
611377	Cover – Air Filter	4	11	1
611393	Screw	6	32	2
611395	Screw	1	2	5
611396	Seal – Oil	6	29	1
611396	Seal – Oil	6	50	1
611509	Actuator – Brake Lever	6	2	1
611541	Column	3	10	1
611542	Pin	3	8	1
611543	Screw	3	14	2
611564	Decal – Fuel Shut–Off Assy.	1	13	1
611571	Eyebolt	3	34	1
611777	Control Case Outer	3	9	1
611799	Screw	3	3	2
612168	Nut – Acorn	3	11	1
612427	Shroud – Base	6	13	1
612428	Screw – Starter Mounting	1	3	4
612432	Rope	7	6	1
612502	Lever – Governor Control	4	4	1
612503	Spacer – Filter Base	4	9	1
612504	Base – Air Filter	4	8	1
612505	Vane – Air	4	1	1
612507	Screw	4	17	2
612564	Pulley	3	12	1
612574	Gasket – Carburetor	4	35	2
612586	Washer	3	4	2
612588	Cable – Throttle	3	5	1
612633	Case – Throttle, Center	3	13	1
612634	Case – Throttle, Inner	3	16	1
612683	Handle Assembly – Top	3	30	1
612698	Decal – Throttle	3	15	1
612757	Collar	4	5	1
612783	Line – Fuel	4	*	1
612824	Clip – Rope	7	5	1
612825	Handle – Starter	7	4	1
612872	Screw	6	46	2
612949	Hub – Starter	7	8	1
612950	Pulley	7	7	1
612974	Filter – Fuel	4	15	1
613072	Bracket – C. D.	6	41	1
613110	Screw	6	51	2
613121	Decal – Spark Plug	2	35	1
613142	Spring	4	6	1
613233	Screw	6	53	2
613363	Handle – Lower	3	21	1
613500	Screw – Muffler Plt. to Block	1	9	1
613529	Bolt – Shoulder	6	7	1
614008	Spark Plug	6	35	1
614196	Decal – Recoil	7	1	1
614243	Knob	3	20	2
614249	Tie Strap	3	25	2
614249	Tie Strap	6	40	1
614265	Applique	1	1	1
614343	Screw	6	42	2
614380	Heat Shield & Gasket	4	16	1
614697	Screw	3	29	2
677525	Collar and Plate Assembly	2	28	1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
678636	Wheel – Front 6"	2	25	2
679144	Bearing Assembly	6	25	1
681678	Wire Lead	6	37	1
681737	Set – Ring	6	21	1
681818	Fuel Shut–Off Assembly	1	7	1
681830	Bearing – Main	6	30	1
681831	Bearing – Main	6	49	1
682678	Connecting Rod Assembly	6	26	1
682683	Brake Assembly	6	5	1
682755	Fuel Cap	1	5	1
682876	Muffler Cover Assembly	2	31	1
682974	Wheel – Rear 8"	2	16	2
682986	Set – Piston & Ring	6	*	1
683041	Control Cable Assembly	3	7	1
683215	C. D. Ignition Module	6	38	1
683478	Lever – Control	3	18	1
683580	Flywheel Assembly	6	16	1
683581	Brace Assembly	6	9	1
683663	Lever & Knob Assembly	3	6	1
683694	Cylinder & Crankcase Cover	6	43	1
683777	Kit – Repair	4	*	1
683778	Kit – Gasket	4	*	1
683781	Kit – Choke	4	*	1
683782	Kit – Bowl	4	*	1
683783	Kit – Float Assembly	4	23	1
683819	Case Assembly	6	55	1
683819	Switch Assembly	6	4	1
683821	Wire Lead	6	6	1
683897	Spring & Keeper	7	3	1
683899	Kit – Dog	7	9	1
683925	Bracket – Handle L.H.	3	22	1
683926	Bracket – Handle R.H.	3	27	1
684285	Kit – Idle Need	4	*	1
684286	Kit – Throttle	4	*	1
684334	Body – Carburetor	4	*	1
684567	Starter Housing & Shaft	7	2	1
684570	Starter Base	1	4	1
684622	Starter Assembly	7	*	1
684698	Cover – Terminal	6	36	1
16–2289	Housing Assembly	2	9	1
39–5770	Decal –Danger	2	7	1
46–6811	Screw	2	32	2
47–2480	Stop – Rope	7	*	1
92–1054	Plate – Muffler	1	11	1
92–1084	Shroud – Engine	1	6	1
92–1648	Screw – Muffler Plt. to Hsg.	1	8	3
92–2930	Rope Stop	3	33	1
92–2940	Decal – Warning (English)	2	33	1
92–4927	Set – Needle Bearing	6	33	1
92–4934	Piston & Connecting Rod	6	24	1
92–5434	Kit – Decal, French	2	*	1
92–6350	Short Block	6	*	1
3256–56	Washer – Muffler Plt. to Hsg.	1	14	3

*Not Illustrated

MAINTENANCE RECORD

Date								