Form Number 3354-757 Rev B

DH 220 Lawn Tractor

Model No. 74591 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame and Seat Assembly	4
Front Axle Assembly	6
Steering Assembly	7
Body and Hood Assembly	8
Engine, Muffler and Fuel Tank Assembly	9
Operation - Brake and Bypass Assembly	10
Operation and Travel Pedal Assembly	11
Transmission Drive Assembly	12
Control Shaft Assembly Transmission Assembly No. 104-2889	14
Differential Gear Assembly Transmission Assembly No. 104-2889	15
Final Pinion Assembly Transmission Assembly No. 114-3155	16
Axle Shaft Assembly Transmission Assembly No. 114-3155	17
Brake Assembly Transmission Assembly No. 104-2889	18
Fan Pulley Assembly Transmission Assembly No. 114-3155	19
Range Shift Assembly Transmission Assembly No. 114-3155	20
Center Case Assembly Transmission Assembly No. 114-3155	21
Pump Shaft Assembly Transmission Assembly No. 114-3155	22
Motor Shaft Assembly Transmission Assembly No. 114-3155	23
Transaxle Case Assembly Transmission Assembly No. 114-3155	24
Grass Collector Assembly No. 106-5760	25
Collector Assembly	26
Cutting Pan, Mower Housing Assembly	27
Cutting Pan and Bag on Demand Assembly	28
Belt Cover and Drive System Assembly	29
Mower Lift Assembly	31
Battery and Electrical Harness Assembly	32
Electrical Switch Assembly No. 1	33
Electrical Switch Assembly No. 2	34
Electrical Switch Assembly No. 3	35
Cylinder Assembly Briggs and Stratton 441577-0120-E1	36
Head Assembly Briggs and Stratton 441577-0120-E1	37
Crankshaft Assembly Briggs and Stratton 441577-0120-E1	38
Crankcase Assembly Briggs and Stratton 441577-0120-E1	39
Oil Filter, Tube and Pump Assembly Briggs and Stratton 441577-0120-E1	40
Carburetor Assembly Briggs and Stratton 441577-0120-E1	41
Air Cleaner Assembly Briggs and Stratton 441577-0120-E1	42
Governor Assembly Briggs and Stratton 441577-0120-E1	43
Flywheel Assembly Briggs and Stratton 441577-0120-E1	44
Starter Assembly Briggs and Stratton 441577-0120-E1	45
358 Engine and 1095 Valve Gasket Sets Briggs and Stratton 441577-0120-E1	46
977 Carburetor Gasket Set and 121 Carburetor Overhaul Kit Briggs and Stratton 441577-0120-E1	47


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not serviced separately
❷ Obtain from your local Briggs & Stratton dealer
❸ Included in Carburetor Overhaul Kit (Ref. No. 121)
❹ Included in Engine Gasket Set (Ref. No. 358)
❺ Included in Carburetor Gasket Set (Ref. No. 977)
❻ Included in Valve Gasket Set (Ref. No. 1095)

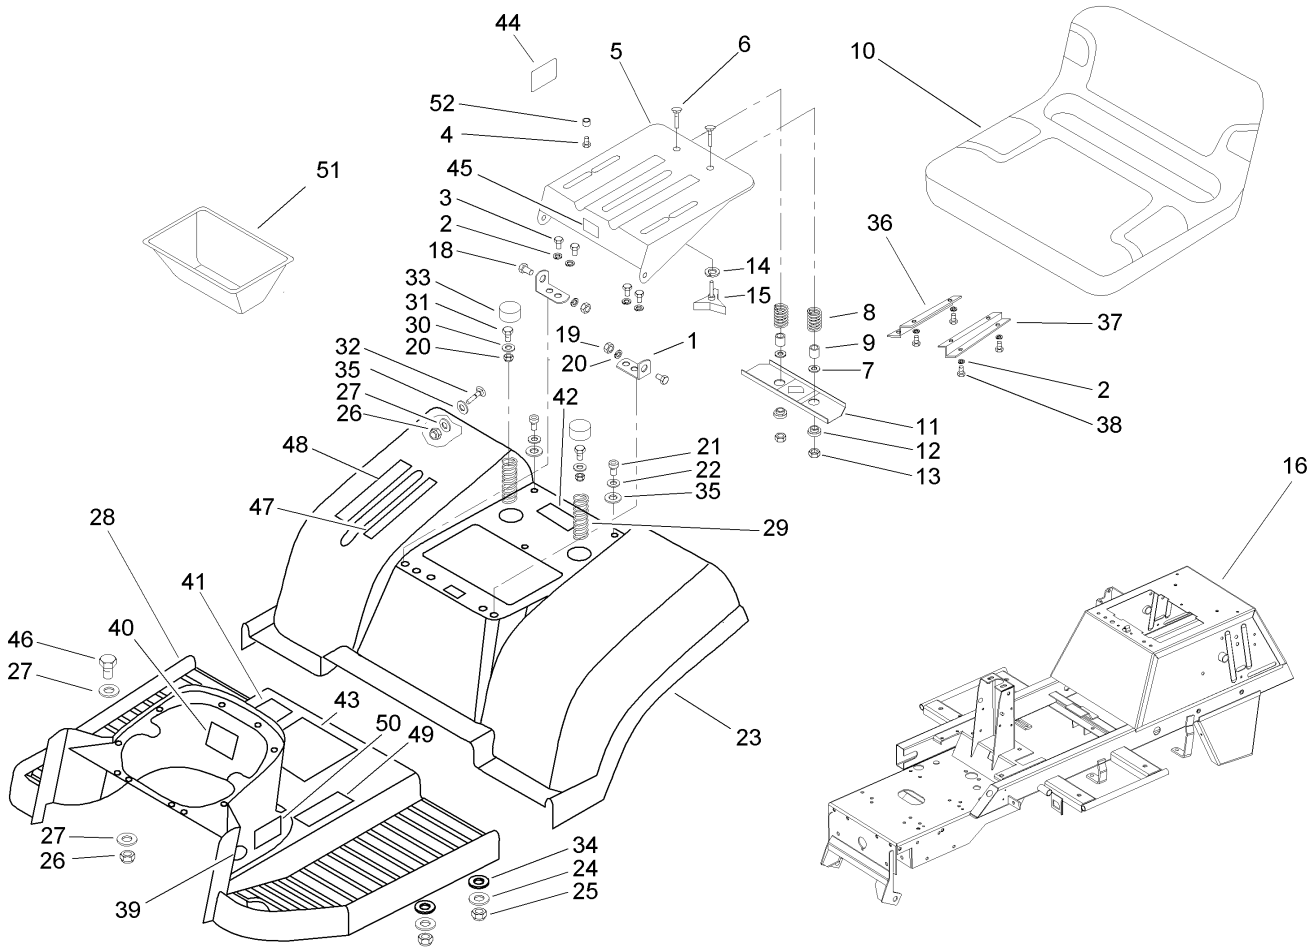

Frame and Seat Assembly


Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	42-9850	8	Washer-Lock, Spring
3	33114-025	10	Screw-HH
4	322-3	2	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2213	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	6	Washer-Plain
20	33024-00	8	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	106-5752	1	Fender
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock

Ref	Part No.	Qty.	Description
26	87-5140	6	Nut-Lock
27	104-2943	6	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	6	Washer-Plain
31	33114-020	2	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	2	Washer-Rubber
35	104-2952	2	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	4	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation

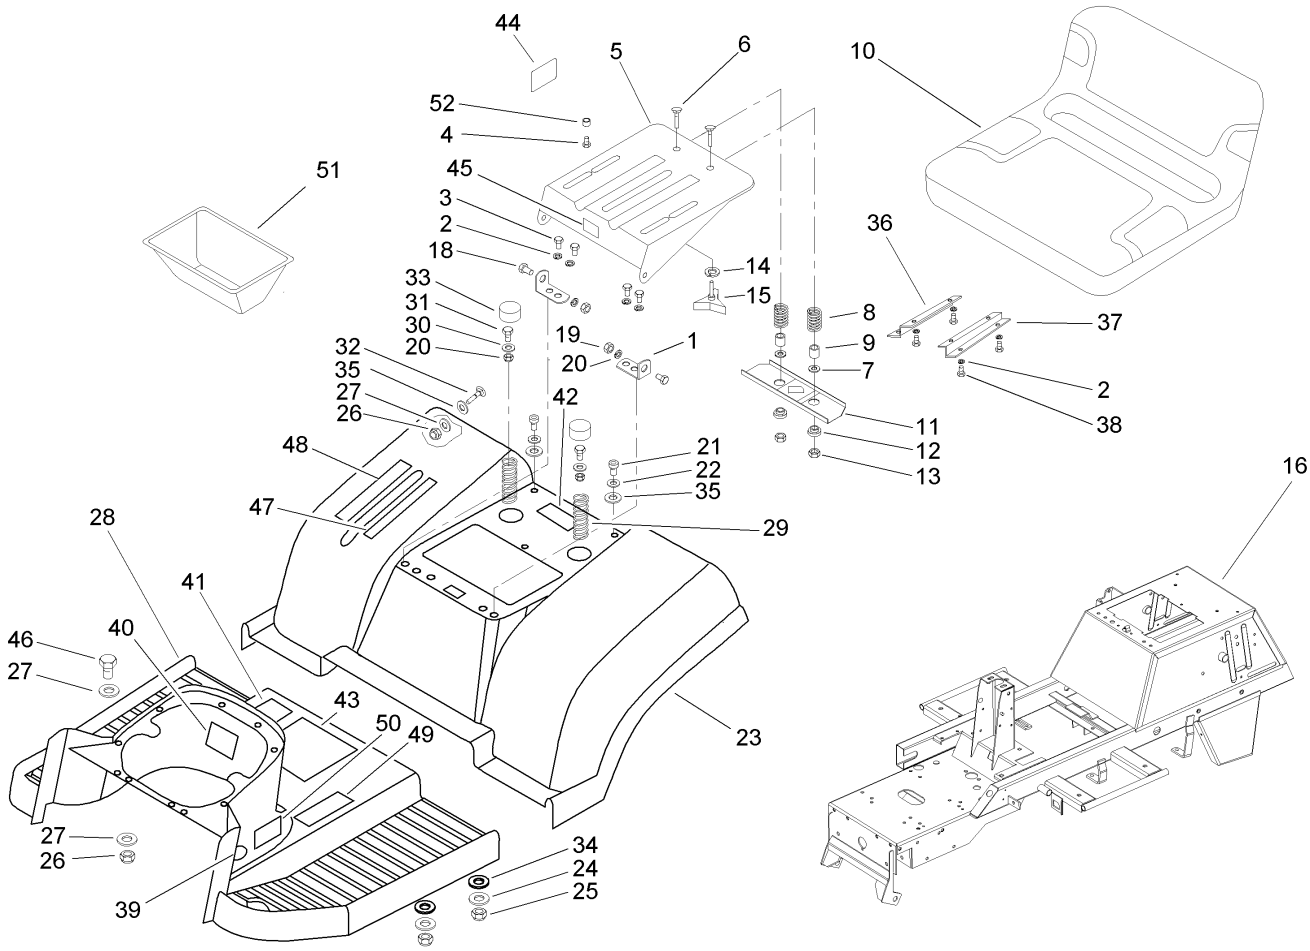

Frame and Seat Assembly (continued)


Ref	Part No.	Qty.	Description
50	107-8976	2	Decal-Tower
51	106-5756	1	Box-Battery
52	107-8924	2	Shim-Seat

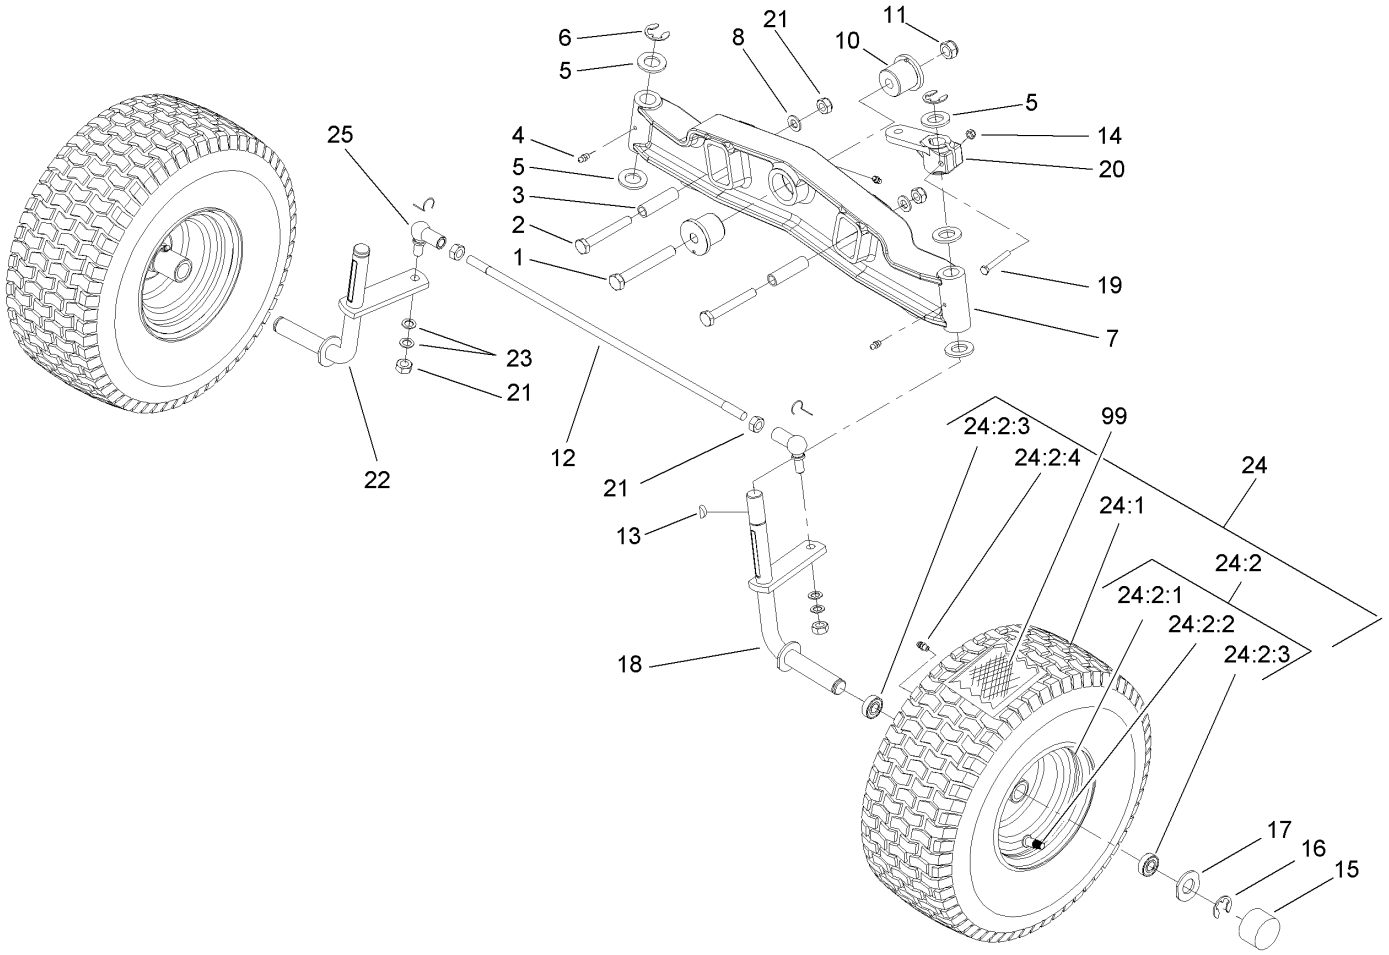

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	5	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Self Locking
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	108-8773	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	110-9084	1	Spindle-RH
23	106-5757	4	Washer
24	110-9085	2	Wheel/Tire ASM
24:1	99-3696	1	Tire

Ref	Part No.	Qty.	Description
24:2	110-9086	1	Wheel ASM
❶24:2:1		1	Rim
24:2:2	106-8596	1	Valve-Tire
24:2:3	110513	2	Bearing-Wheel
❶24:2:4		1	Fitting-Grease
25	104-2876	2	Joint-Ball, Angle
99	112819	1	Tube-Inner

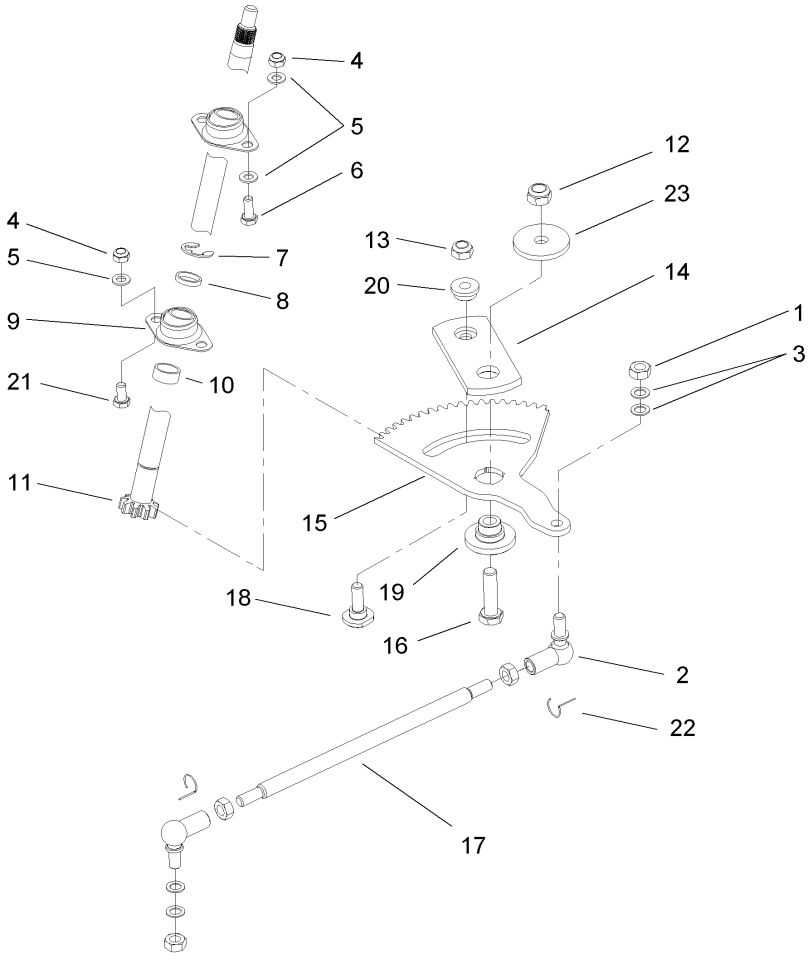

Steering Assembly


Ref	Part No.	Qty.	Description
1	33025-00	4	Nut-Lock
2	104-2876	2	Joint-Ball, Angle
3	106-5757	4	Washer
4	33024-00	4	Nut-Lock
5	33094-00	6	Washer-Plain
6	33114-020	2	Screw-HH
7	104-2891	1	Clip-Spring
8	104-2877	1	Spacer-Upper
9	104-2878	2	Bearing-Spherical
10	104-2879	1	Spacer-Lower
11	106-5773	1	Shaft-Steering
12	33026-00	1	Nut-Lock
13	33025-00	1	Nut-Lock
14	105-1238	1	Plate-Steering
15	104-2883	1	Gear-Sector
16	104-2910	1	Screw-Hex
17	104-2886	1	Link-Drag
18	105-1239	1	Bolt-Shoulder
19	105-1240	1	Pivot-Steering
20	105-1241	1	Bushing
21	33114-016	2	Screw-HH
23	108-8892	1	Washer

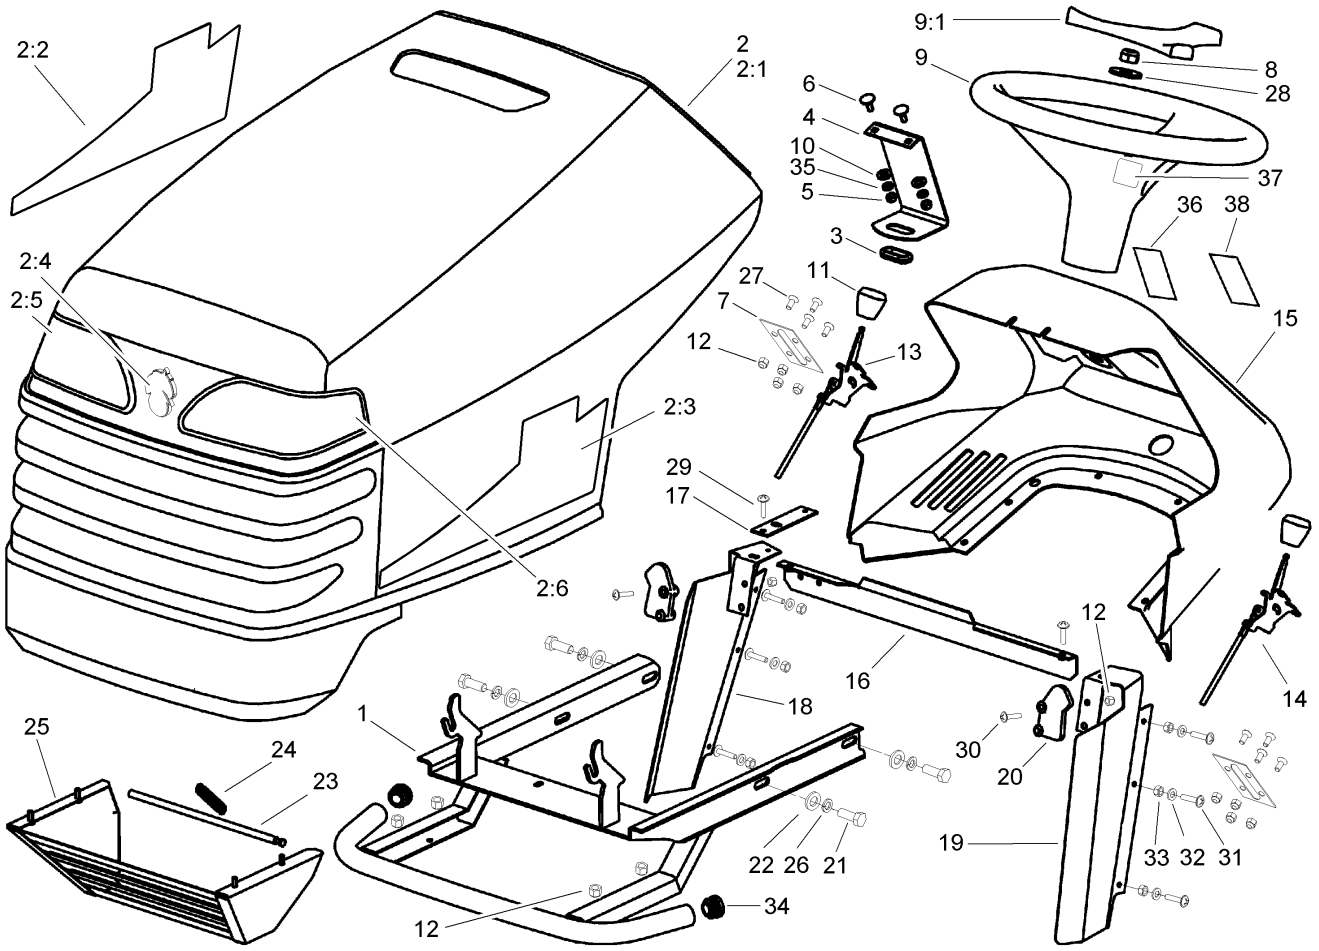

Body and Hood Assembly

Ref	Part No.	Qty.	Description
2	107-8990	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Decal
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	104-2959	1	Bushing
4	104-2960	1	Holder-Tank, Fuel
5	33023-00	2	Nut-Lock
6	104-2961	2	Screw
7	104-2962	2	Brace
8	33026-00	1	Nut-Lock
9	98-1472	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
10	33094-00	2	Washer-Plain
11	66-0120	2	Knob
12	87-5140	18	Nut-Lock
13	92-6784	1	Control-Throttle, Twin
14	92-6783	1	Control-Choke, Twin
15	104-2968	1	Panel-Dash
16	104-2970	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left


Ref	Part No.	Qty.	Description
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	104-2974	1	Bar-Safety
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	8	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
30	104-2981	4	Screw
31	107-8918	6	Screw
32	104-3175	6	Washer
33	104-2985	6	Nut-Hex
34	107-8943	2	End Cap-Tube
35	43-5930	2	Washer-Spring
36	104-3234	1	Decal
37	98-1459	1	Decal
38	104-3233	1	Decal-Choke/PTO

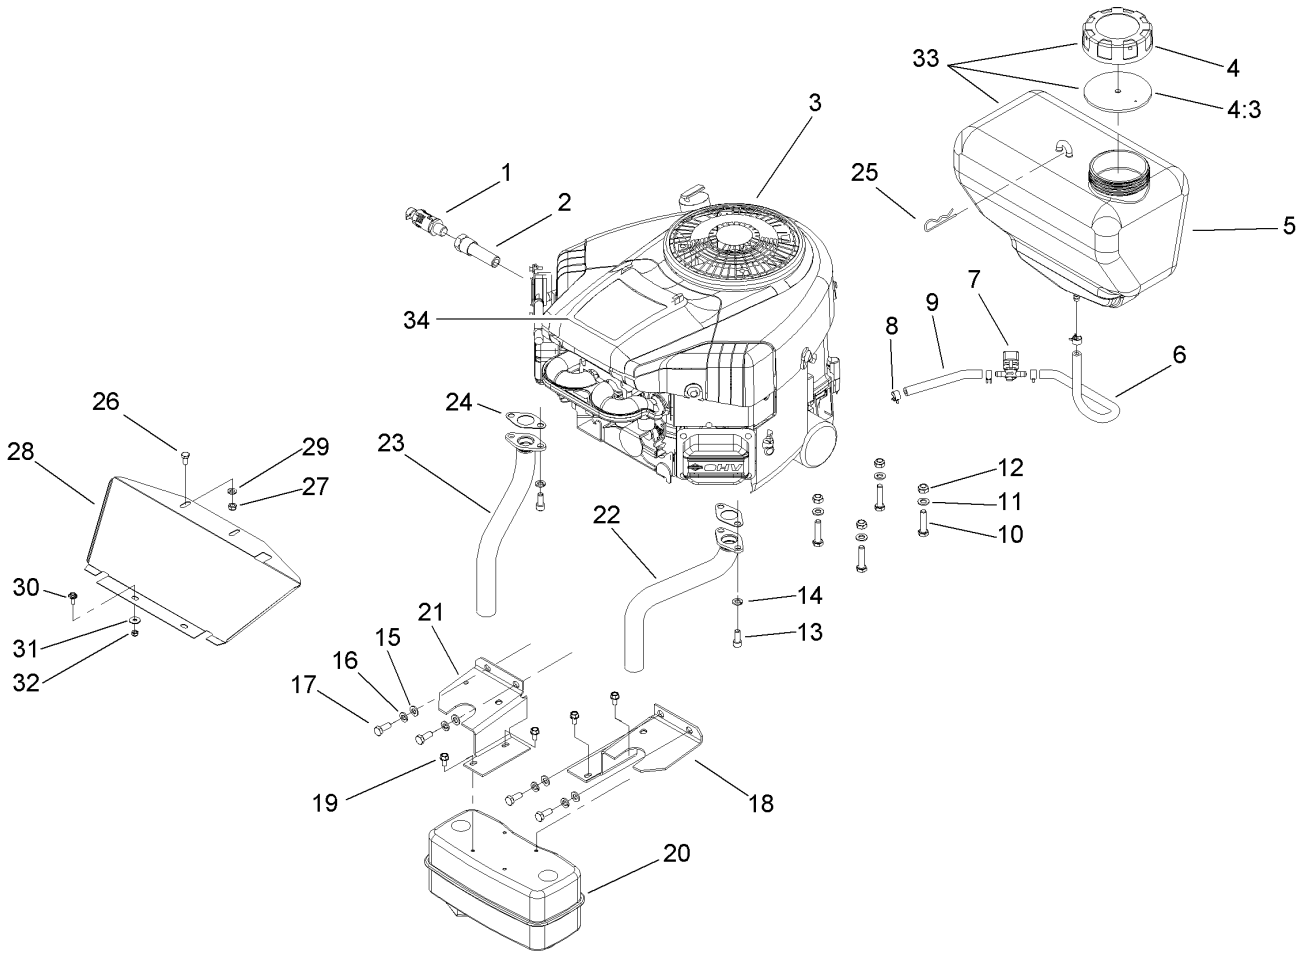

Engine, Muffler and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	104-3208	1	Valve-Oil Drain
2	106-5764	1	Coupler-Oil Drain
❶❷3		1	Engine- Briggs And Stratton, 441577-0120-E1
4	88-3980	1	Gas Cap ASM
4:3	88-4010	1	Gasket-Cap, Gas
5	104-3057	1	Tank-Fuel
6	106-0890	1	Line-Fuel
7	104-3224	1	Valve-Tank, Fuel
8	104-3212	4	Clamp-Line, Fuel
9	106-0891	1	Line-Fuel
10	33114-035	4	Screw-HH
11	33094-00	4	Washer-Plain
12	33024-00	4	Nut-Lock
13	104-2927	4	Washer-Spring
14	322-3	4	Screw-HH
15	33094-00	4	Washer-Plain
16	104-2927	4	Washer-Spring
17	33114-020	4	Screw-HH
18	104-3214	1	Guard-Muffler, LH
19	106-5763	4	Screw
20	104-3225	1	Muffler
21	104-3215	1	Guard-Muffler, RH
22	104-3216	1	Tube-Exhaust, LH


Ref	Part No.	Qty.	Description
23	104-3217	1	Tube-Exhaust, RH
24	104-3226	2	Gasket-Exhaust
25	104-3144	1	Pin-Hair
26	33113-012	2	Screw-HH
27	33023-00	2	Nut-Lock
28	104-3219	1	Shield-Heat
29	33093-00	2	Washer-Flat
30	104-2980	2	Screw
31	104-2943	2	Washer-Flat
32	87-5140	2	Nut-Lock
33	104-3220	1	Tank-Fuel W/Cap
34	110-6516	1	Decal

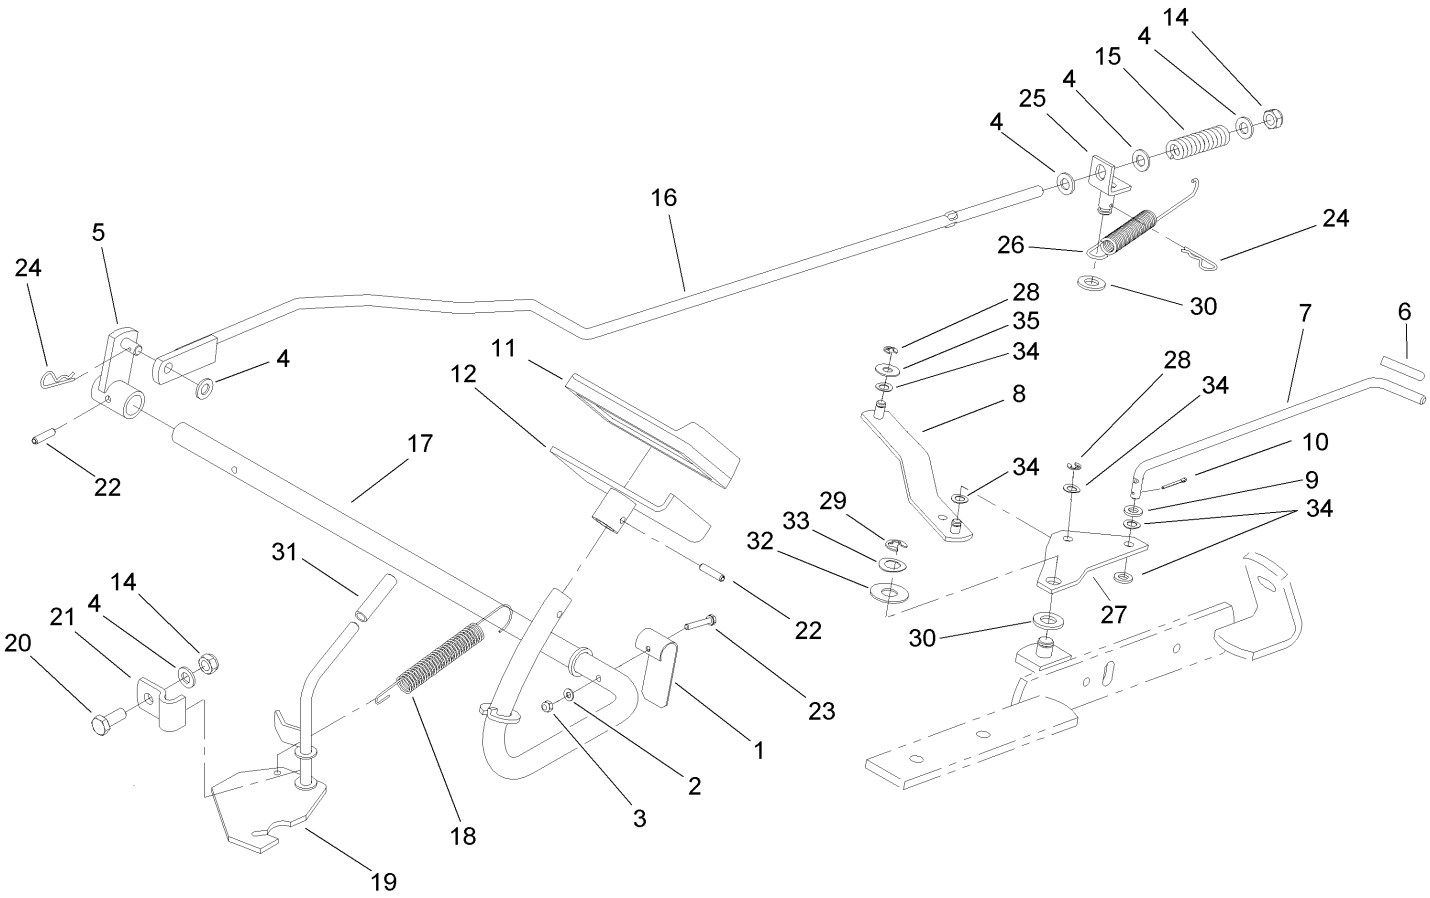

Operation - Brake and Bypass Assembly


Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	104-3324	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-2998	1	Pad-Pedal
12	104-2999	1	Pedal
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3246	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

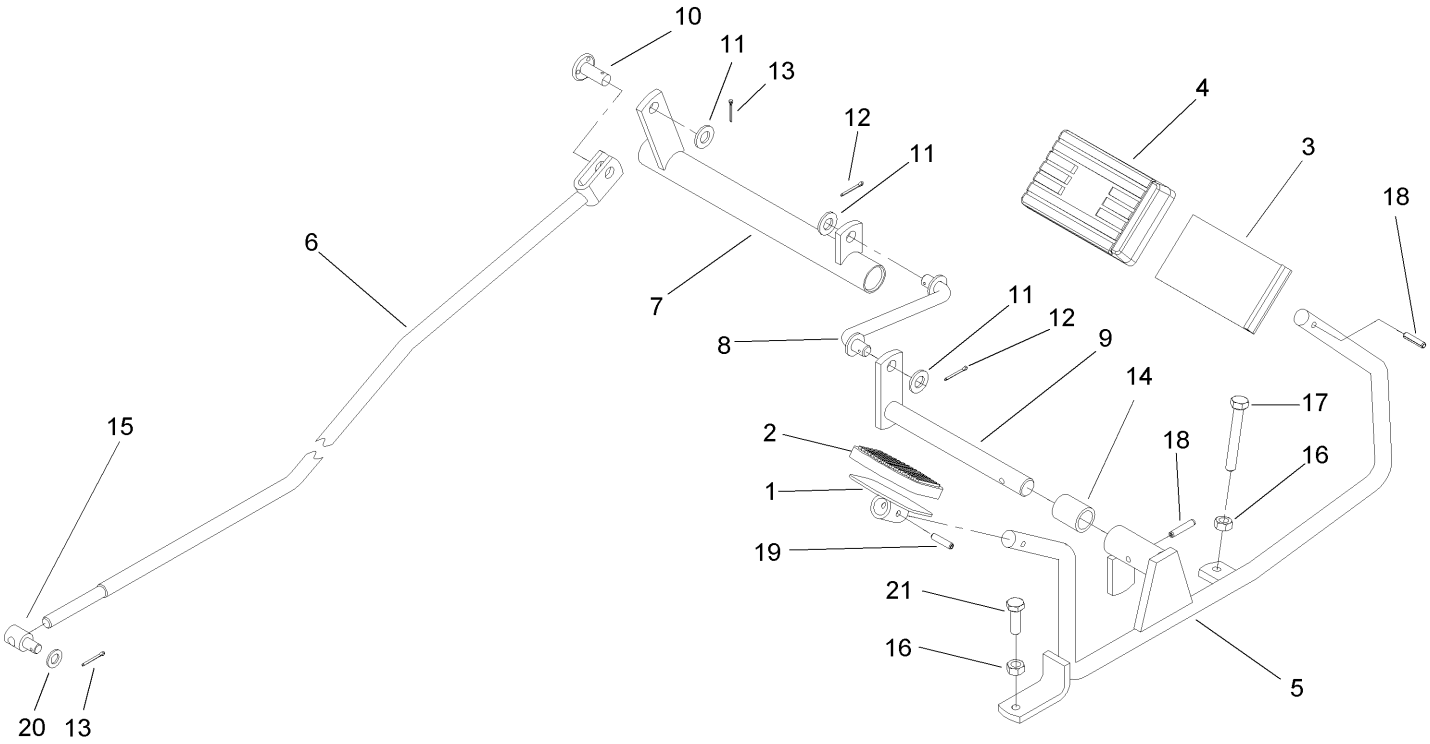

Operation and Travel Pedal Assembly


Ref	Part No.	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	1	Pad-Pedal
3	104-3019	1	Pedal-Travel, Front
4	104-3020	1	Pad-Pedal, Front
5	104-3021	1	Pad-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	104-3026	1	Pin
11	33095-00	3	Washer-Flat
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	2	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer
21	33114-025	1	Screw-HH

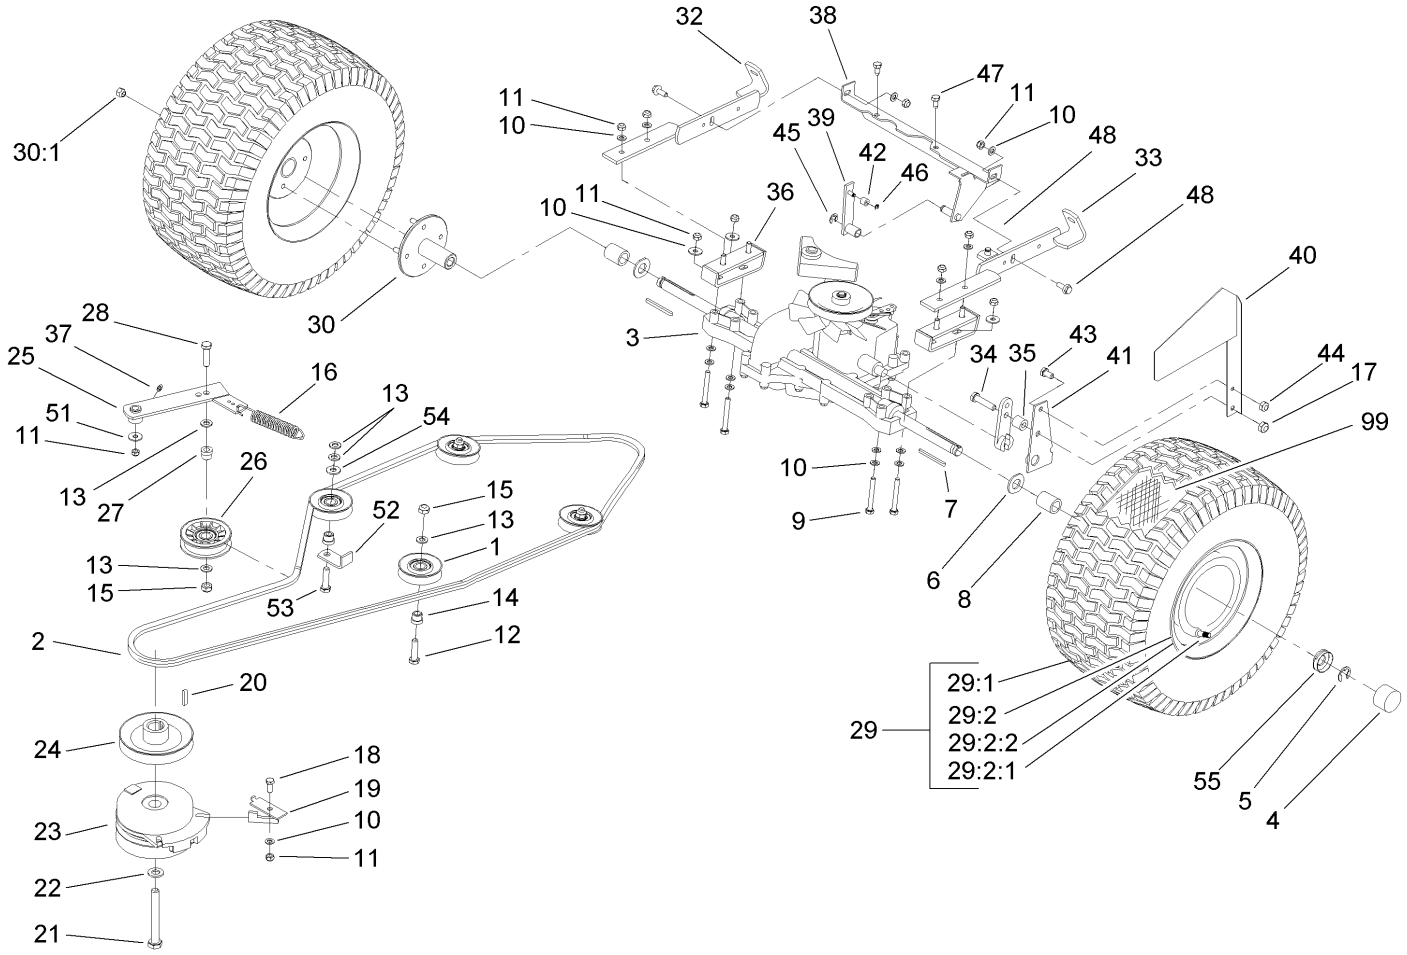

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	104-2889	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	10	Washer-Plain
11	33024-00	8	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
29	107-8929	2	Tire And Wheel ASM
29:1	99-2994	1	Tire
29:2	107-8932	1	Wheel ASM
❶29:2:1		1	Rim
29:2:2	106-8596	1	Valve-Tire
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	104-3343	2	Plate-Reinforcing
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
40	104-3325	1	Arm-Control, Cruise
41	104-3326	1	Tenon
42	104-3329	1	Roller
43	33114-010	1	Screw-HH
45	104-3341	1	Stirrup

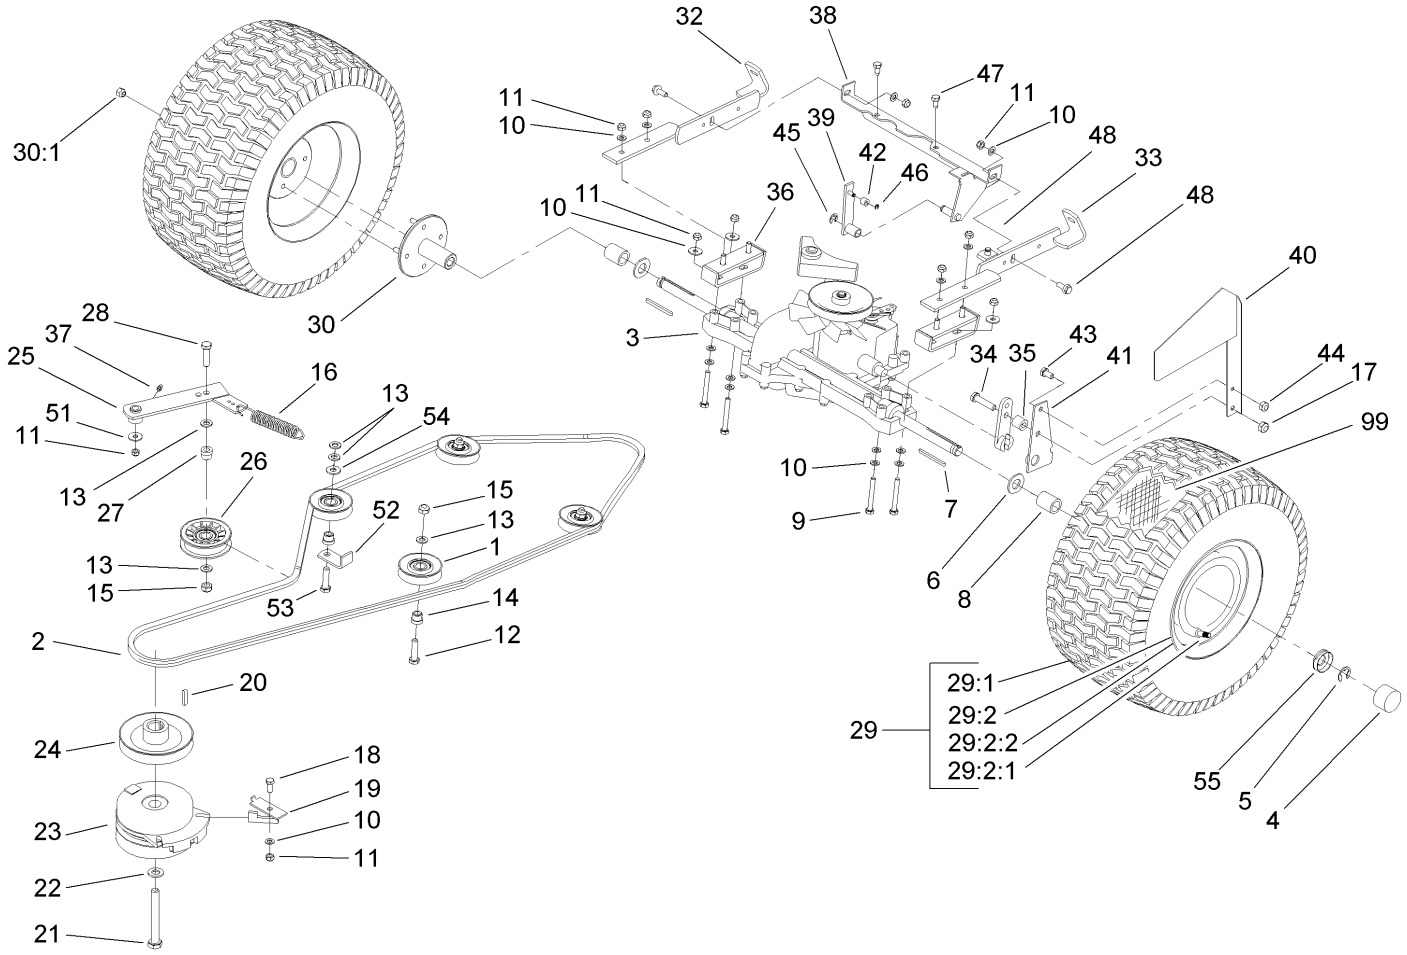


Transmission Drive Assembly (continued)

Ref	Part No.	Qty.	Description
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming
48	104-3065	2	Screw-Hex
51	104-2946	2	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	107-8998	2	Retainer-Cap, Hub
99	232-37	1	Tube

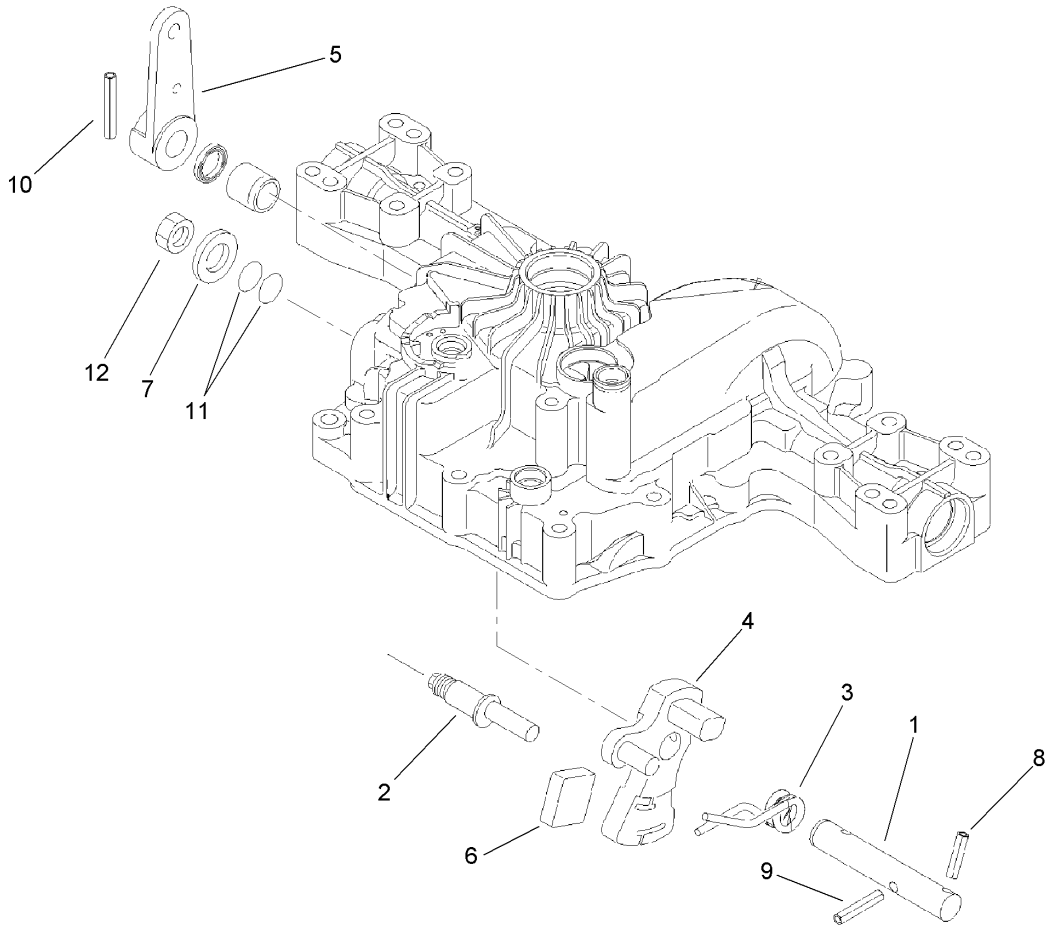


Control Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	104-3293	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

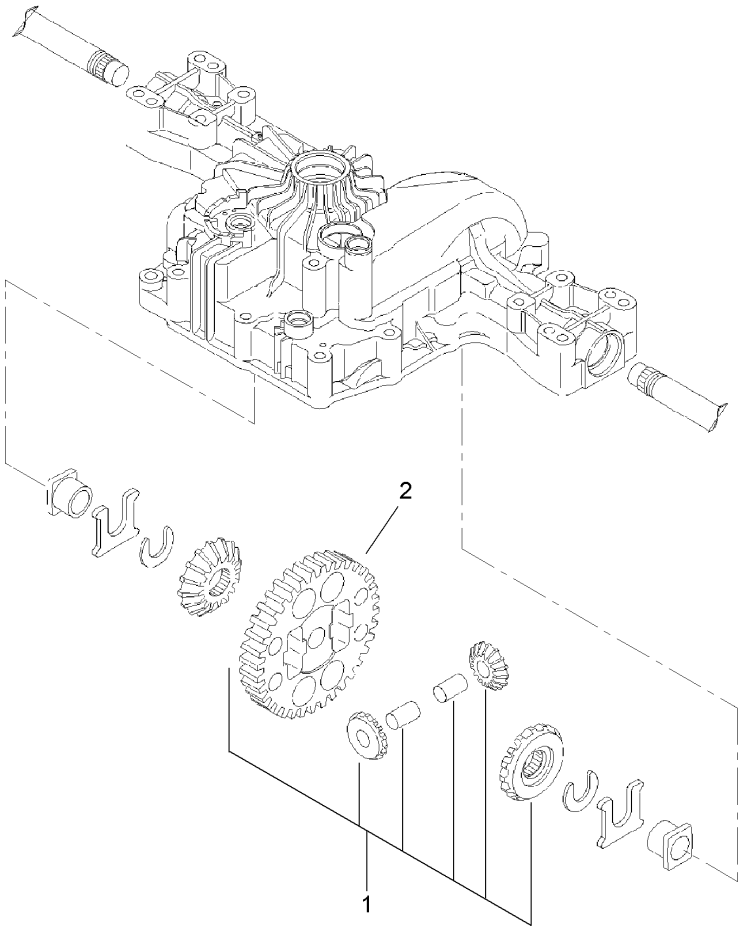


Differential Gear Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

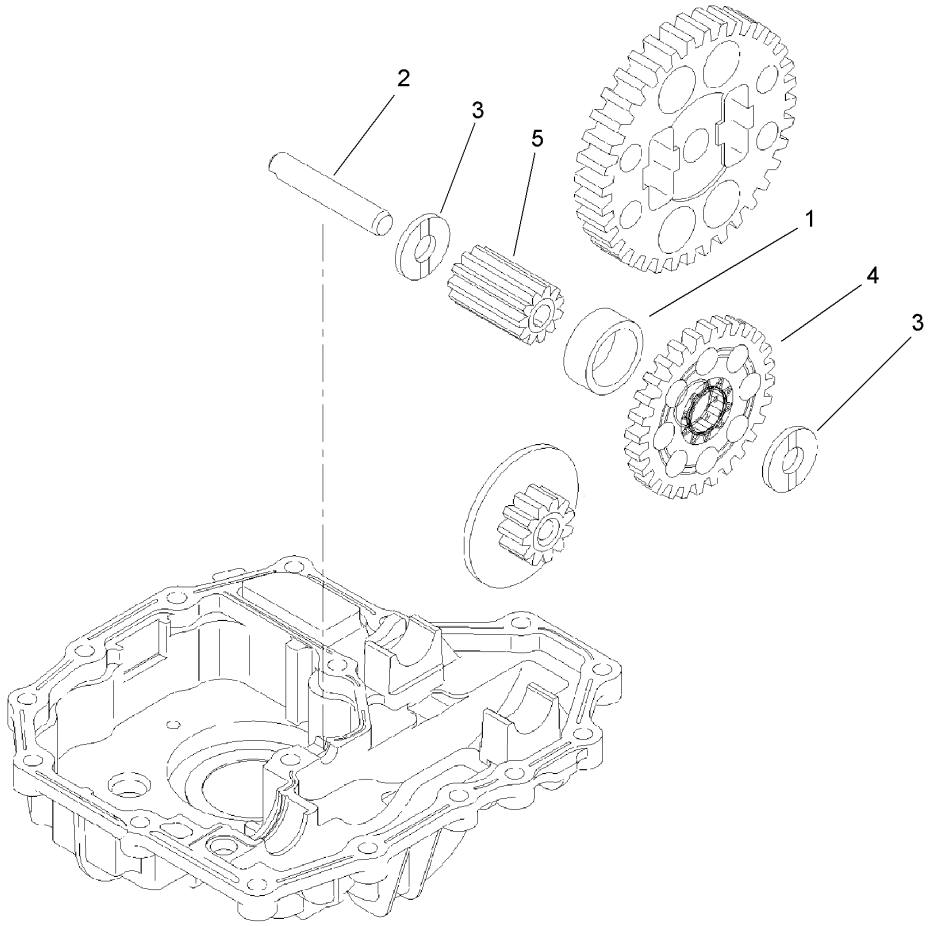


Final Pinion Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

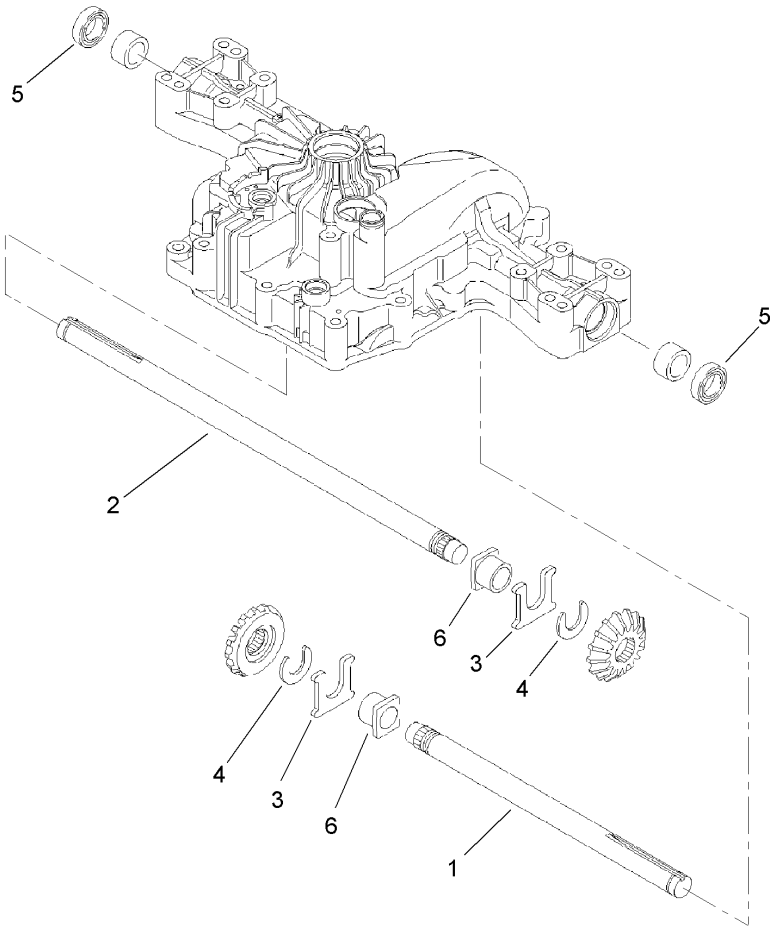


Axle Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

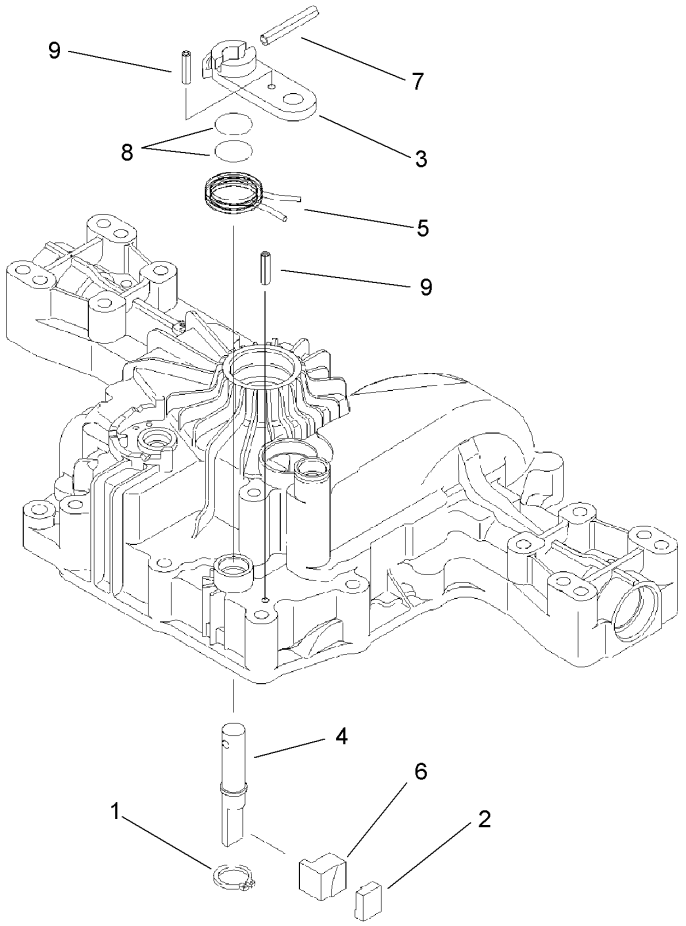


Brake Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	92-0786	2	O-Ring
9	104-3319	2	Pin

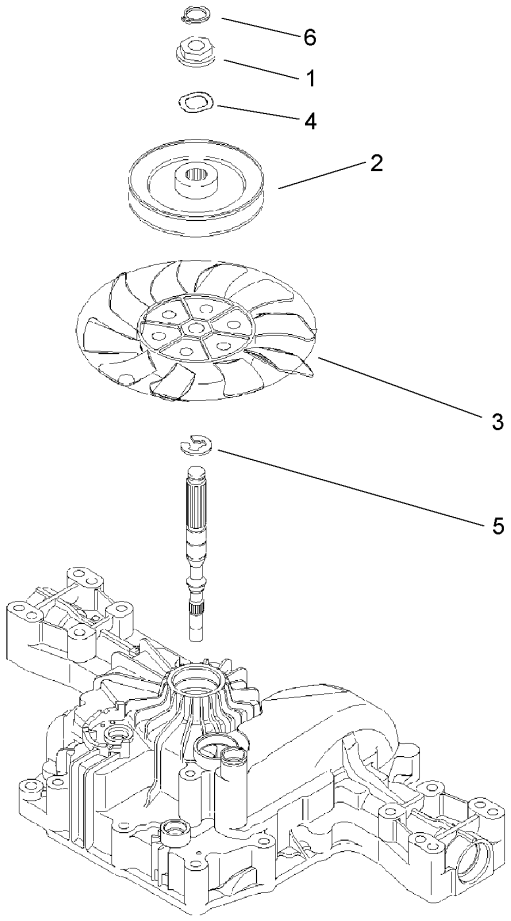


Fan Pulley Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan- Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

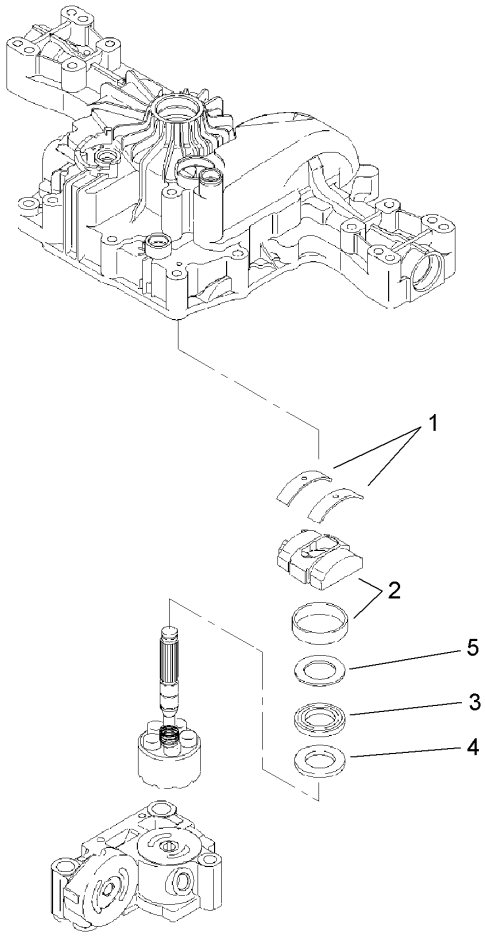


Range Shift Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

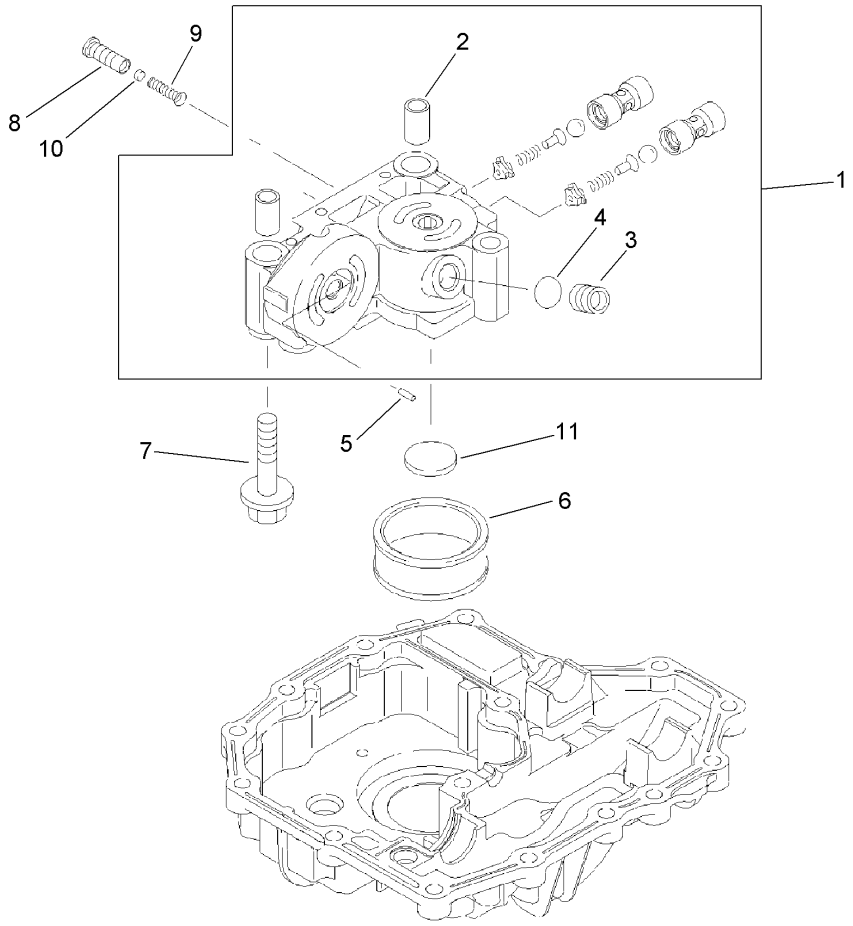


Center Case Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

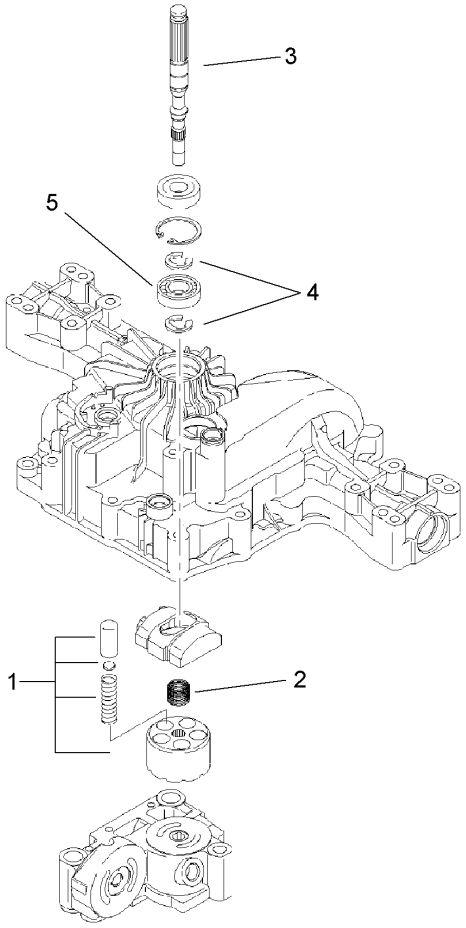


Pump Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

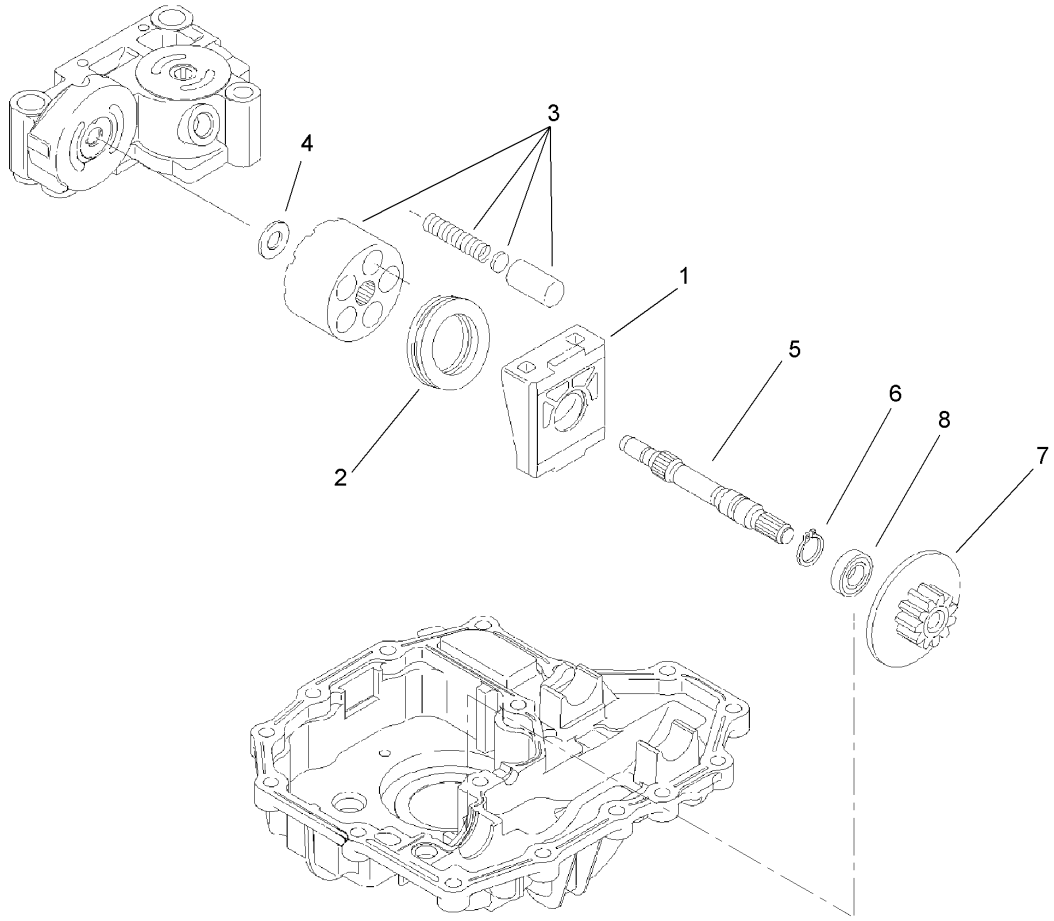


Motor Shaft Assembly
Transmission Assembly No. 114-3155

Ref	Part No.	Qty.	Description
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

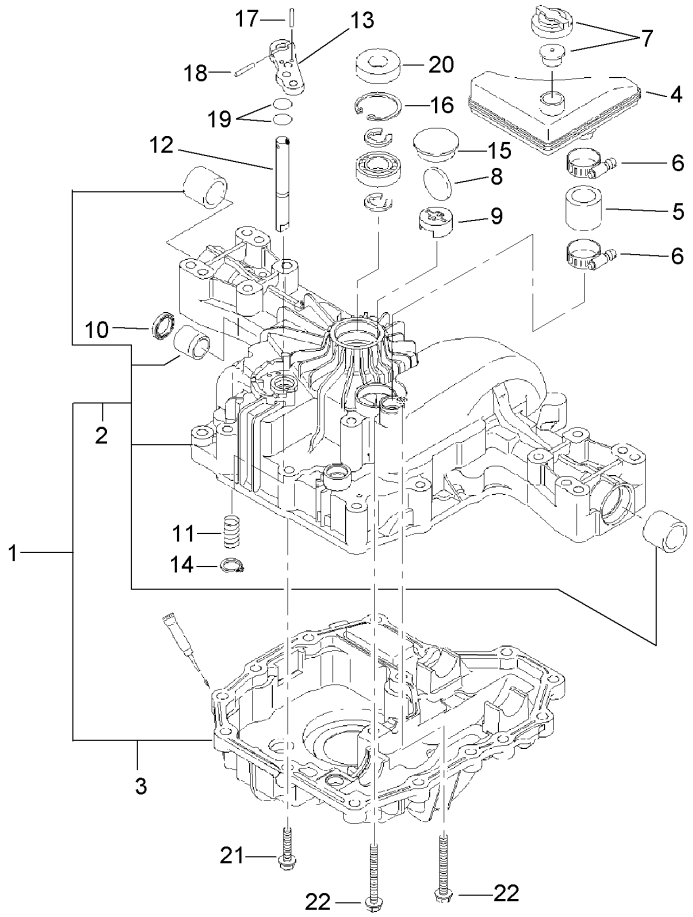

Transaxle Case Assembly
Transmission Assembly No. 114-3155


Ref	Part No.	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Tank-Reservoir, With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-TAP

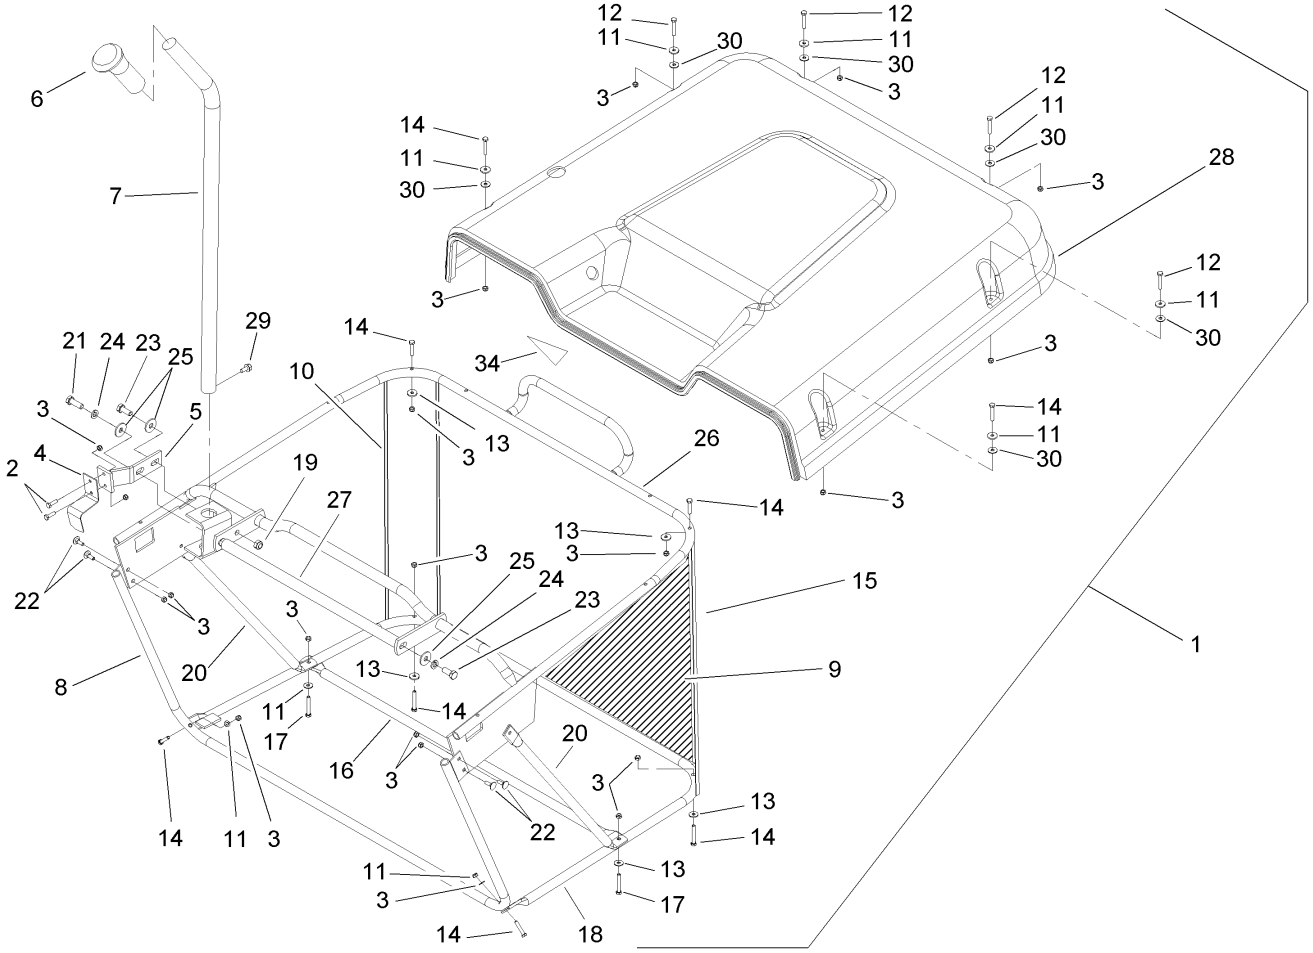

Grass Collector Assembly No. 106-5760

Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring


Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

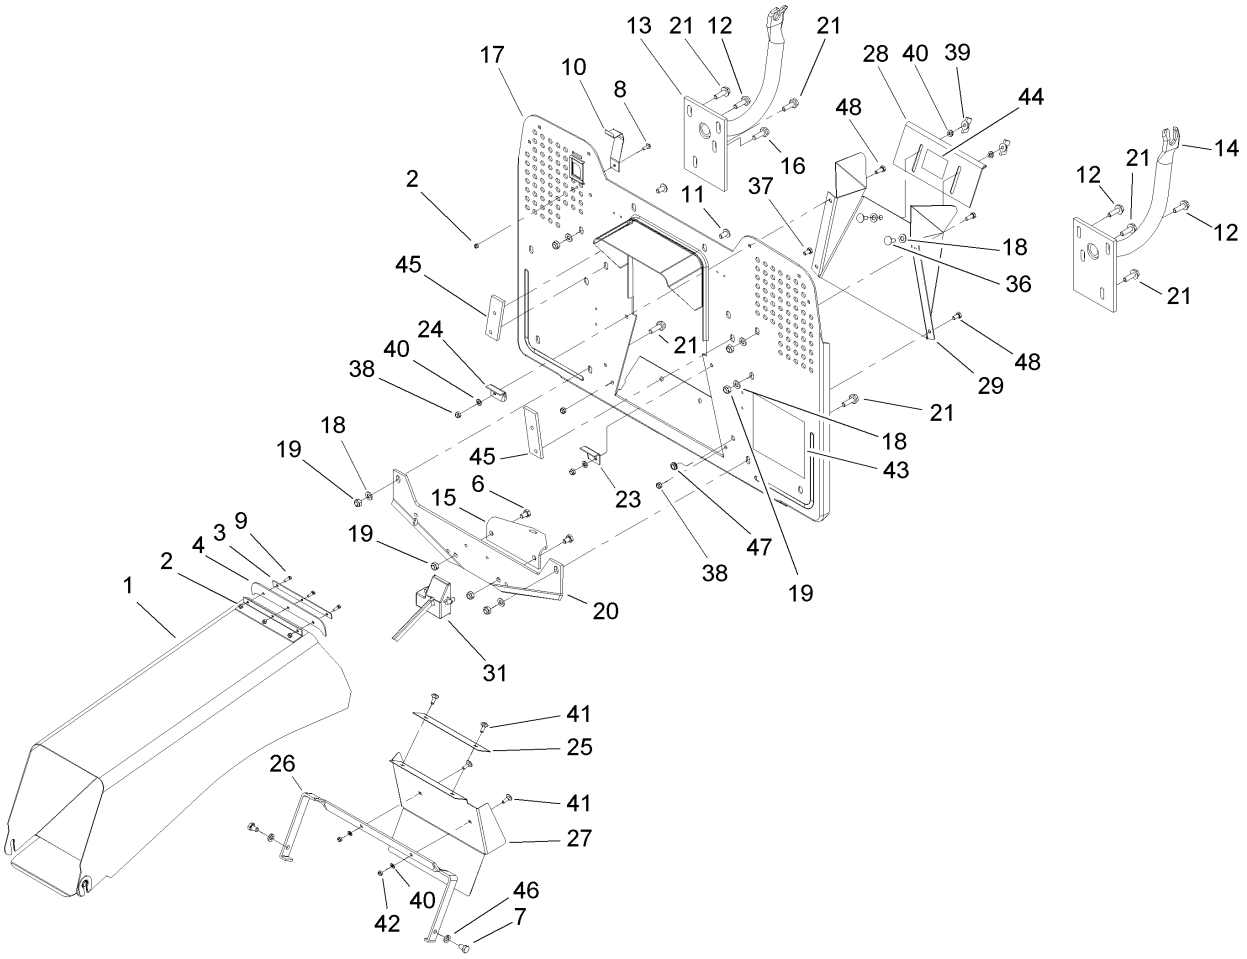

Collector Assembly

Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	104-3059	1	Cover-Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
16	104-3065	6	Screw-Hex
17	104-3066	1	Collector Plate ASM
18	33095-00	9	Washer-Flat
19	33024-00	9	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective


Ref	Part No.	Qty.	Description
27	104-3070	1	Shield-Protective
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	2	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	4	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH

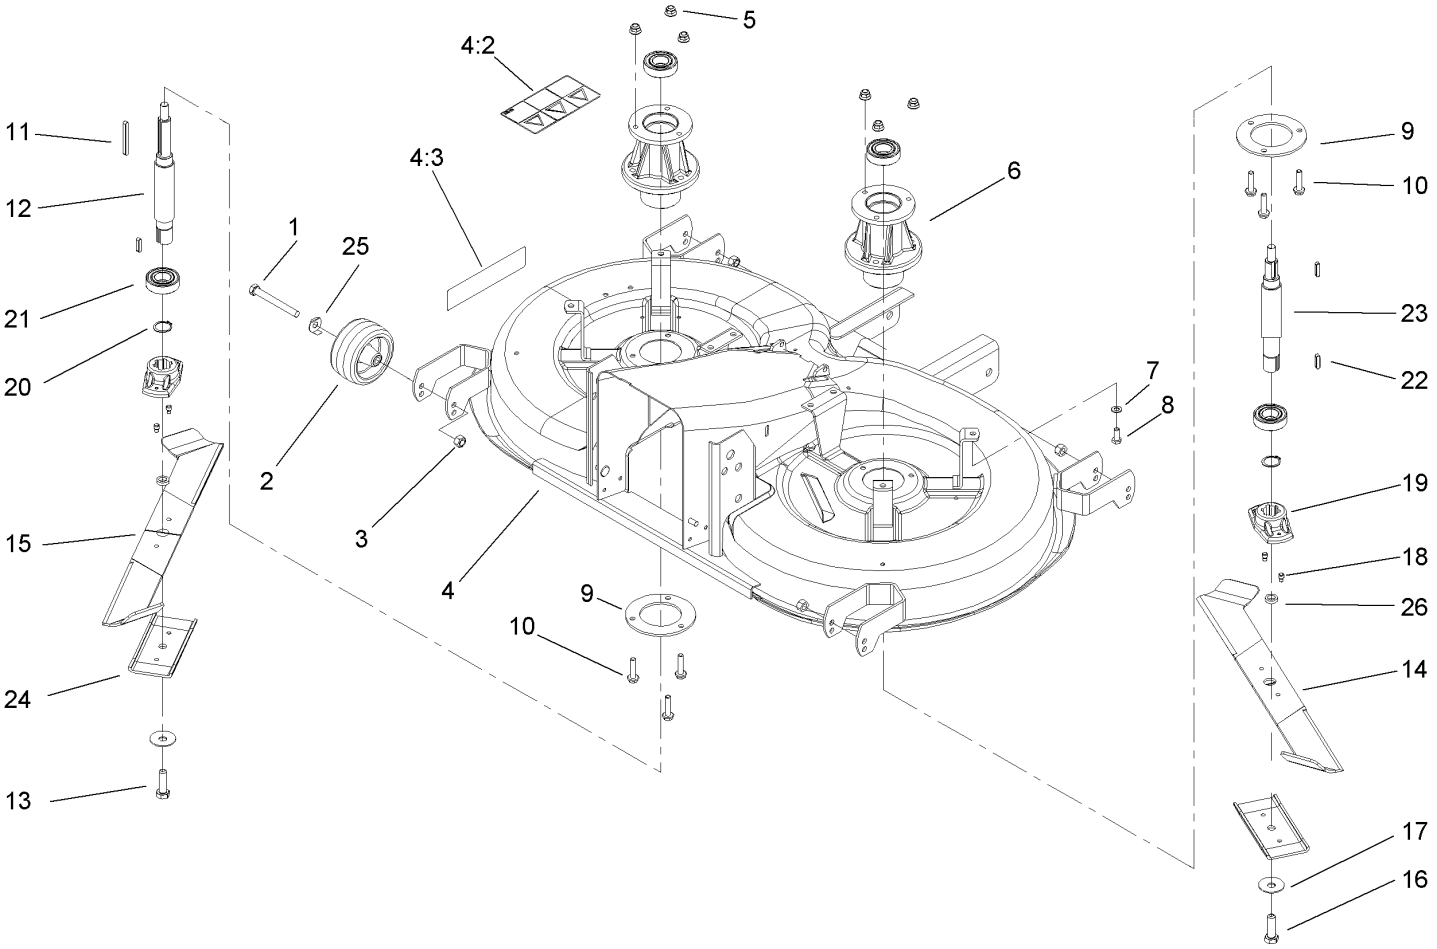

Cutting Pan, Mower Housing Assembly

Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH
2	104-3080	4	Wheel-Gauge
3	33025-00	4	Nut-Lock
4	110-9071	1	Deck ASM
4:2	93-7824	2	Decal-Danger
4:3	106-8563	1	Decal-Recycler
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
7	33094-00	8	Washer-Plain
8	33114-020	8	Screw-HH
9	104-3084	2	Support-Ring
10	104-3085	6	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square


Ref	Part No.	Qty.	Description
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade
25	106-5767	4	Washer
26	106-6530	2	Spacer

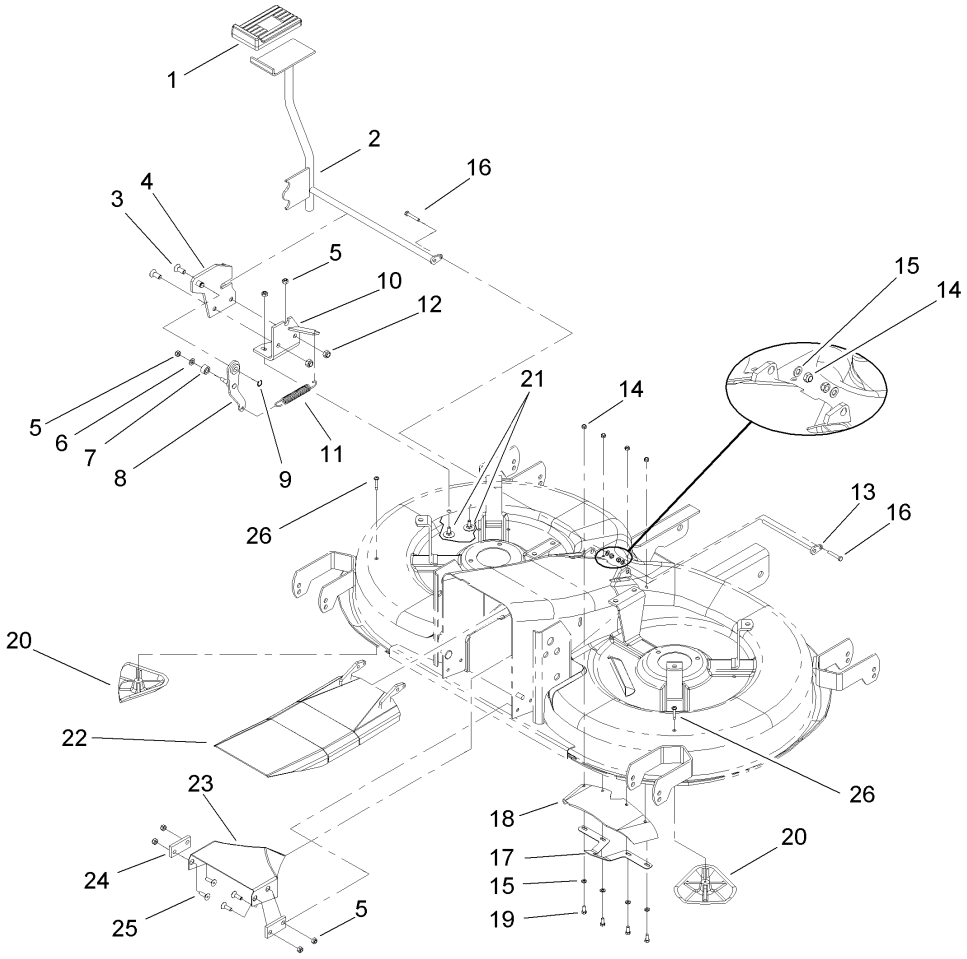

Cutting Pan and Bag on Demand Assembly

Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	1	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center


Ref	Part No.	Qty.	Description
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

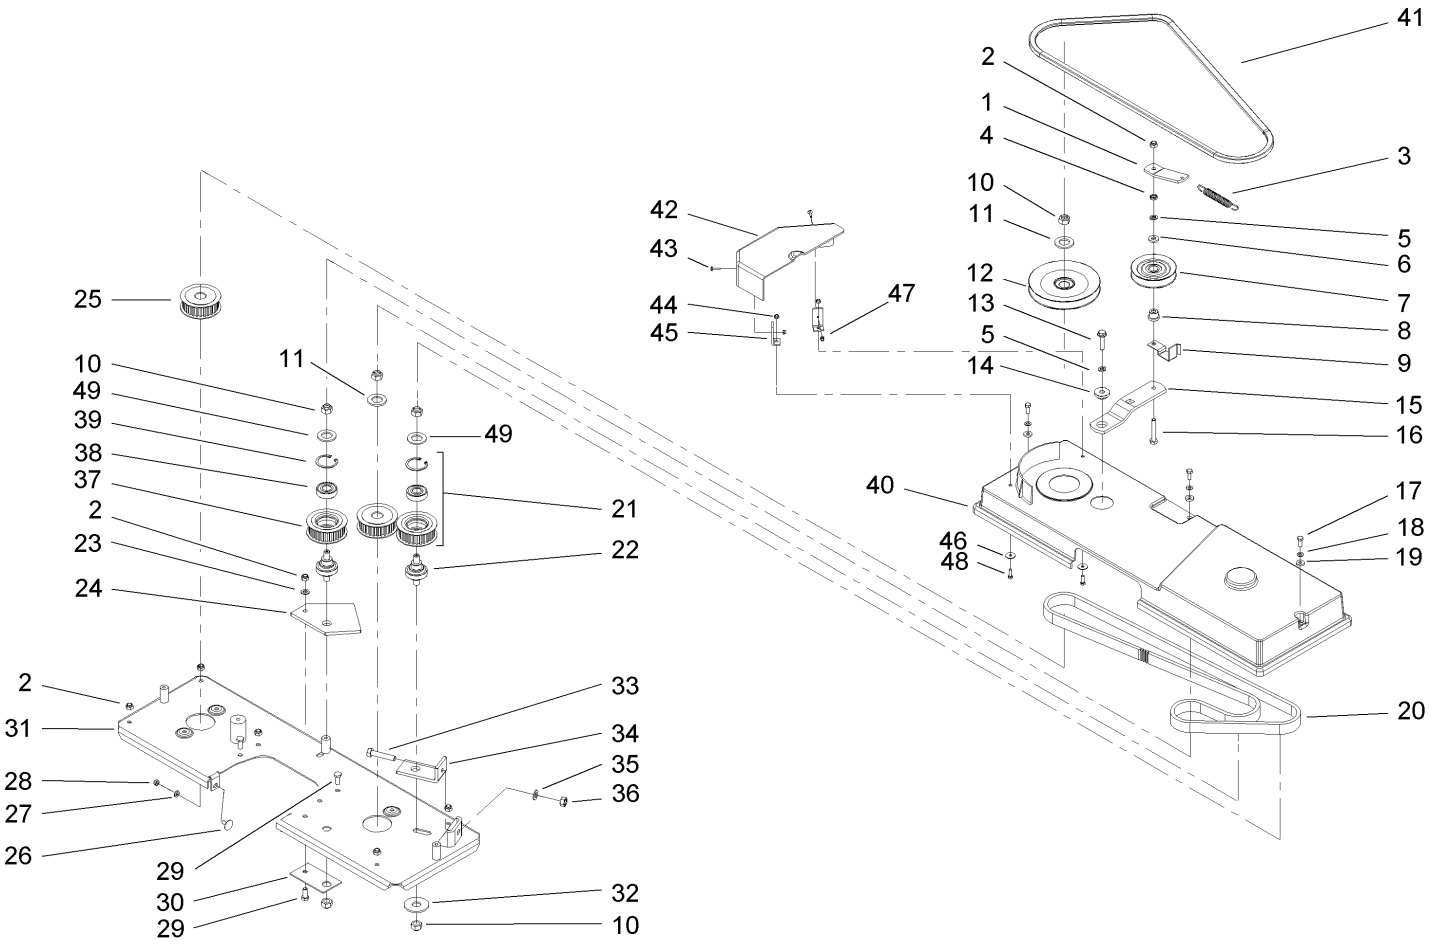

Belt Cover and Drive System Assembly


Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley

Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	1	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3126	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

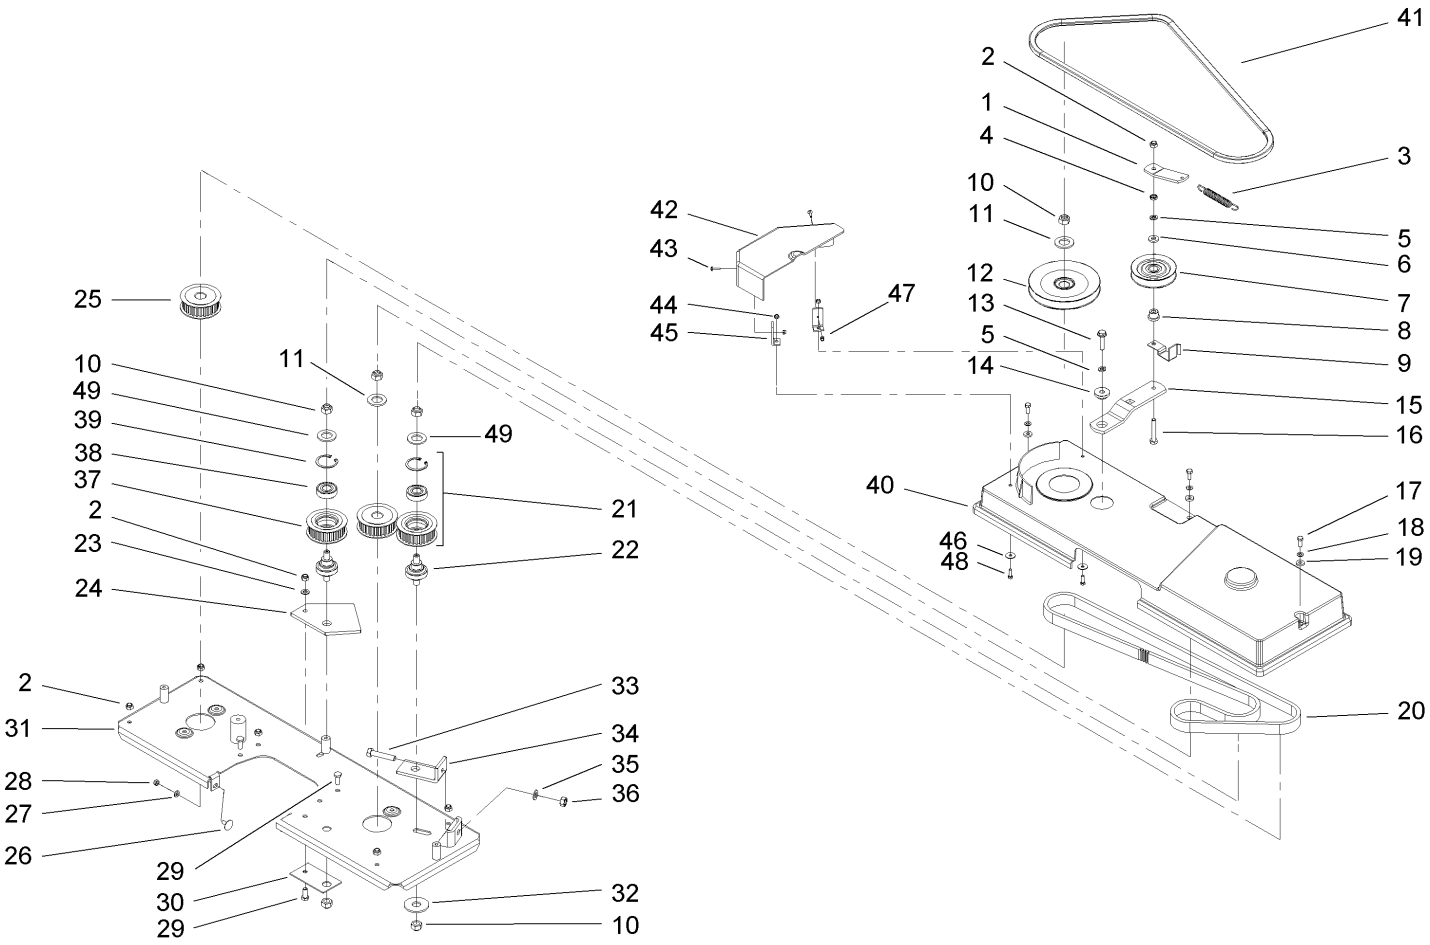

Belt Cover and Drive System Assembly (continued)


Ref	Part No.	Qty.	Description
49	33096-00	2	Washer-Flat

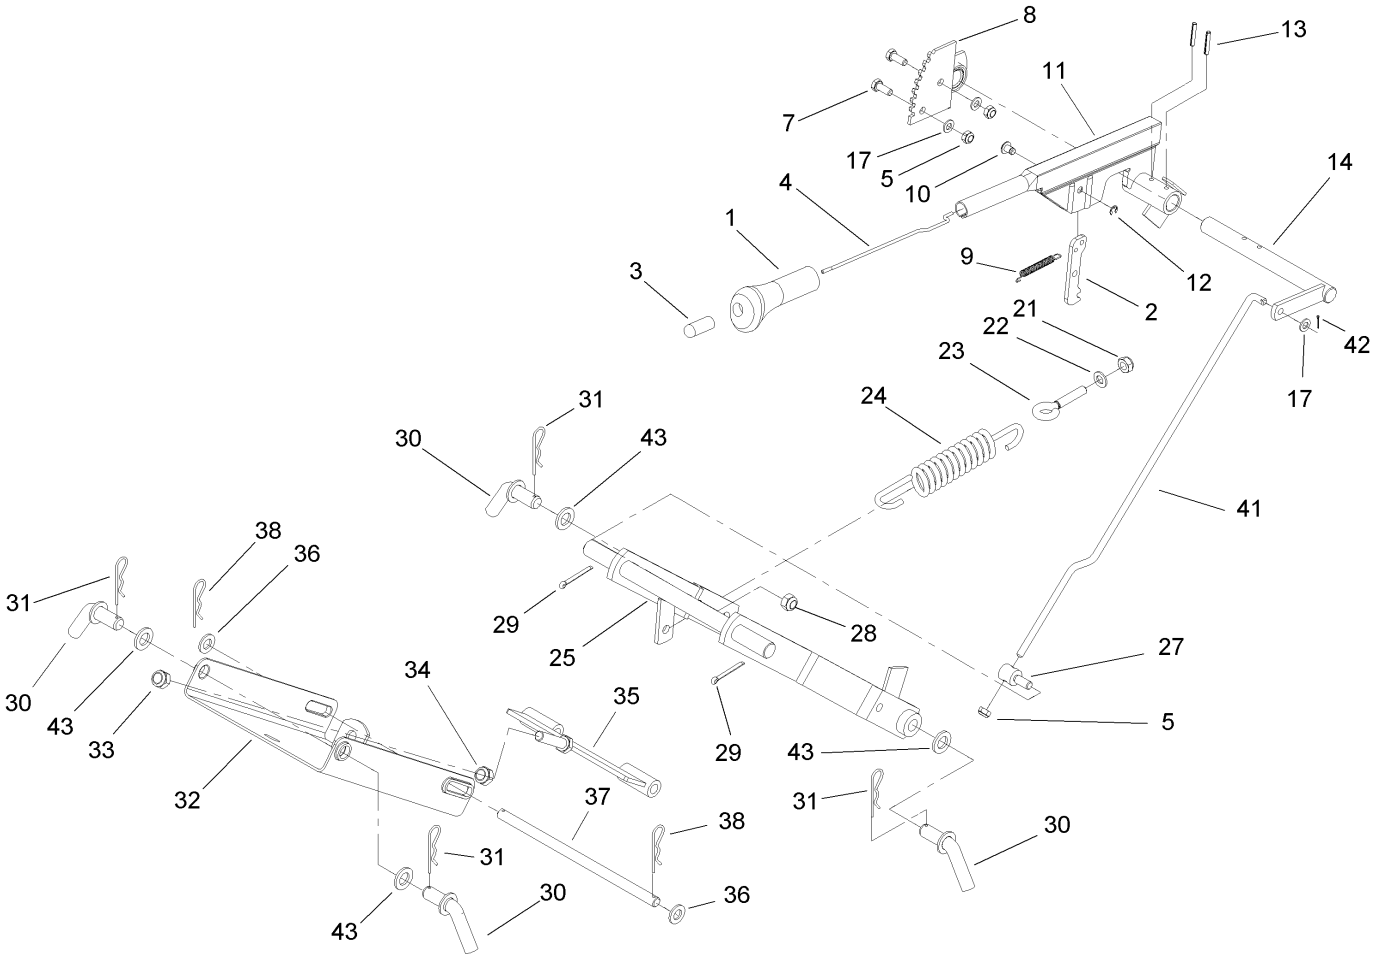

Mower Lift Assembly


Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	104-3133	1	Segment-Gear
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	104-3138	1	Shaft-Height Adj.
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair

Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Clip-Hair Pin
41	104-3149	1	Rod-Height Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

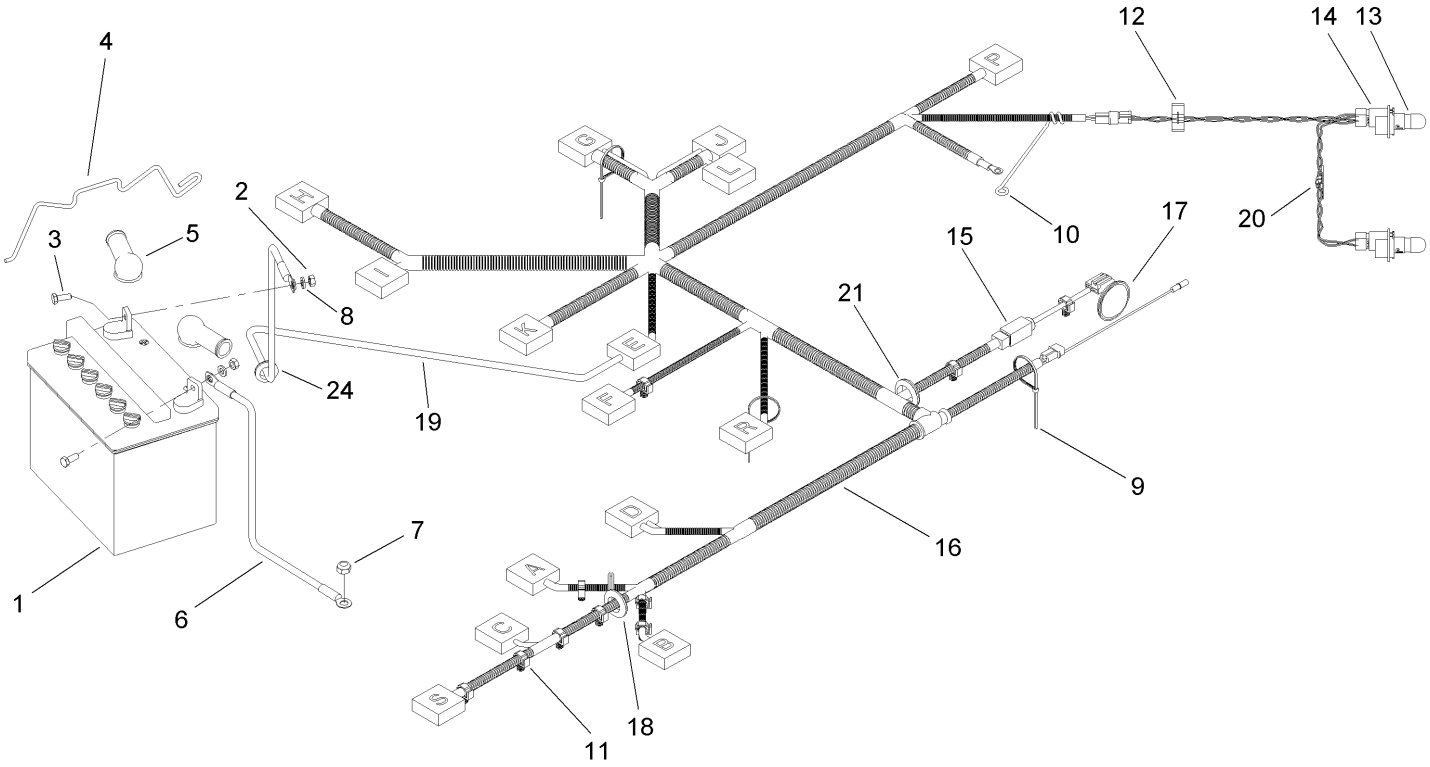


Battery and Electrical Harness Assembly


Ref	Part No.	Qty.	Description
1	104-3152	1	Battery-12V
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	104-3153	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	104-3155	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable
10	104-3156	1	Holder- Harness, Wiring
11	104-3157	10	Clip-Snap
12	88-4320	1	Harness-Wire, Lights
13	104-3158	2	Bulb-Light
14	104-3159	2	Socket-Light
15	104-3160	1	Harness-Clutch
16	108-8750	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	104-3166	1	Cable-Battery Positive
20	104-3167	2	Clip-Nylon
21	104-3168	1	Bushing
24	107-8950	1	Grommet

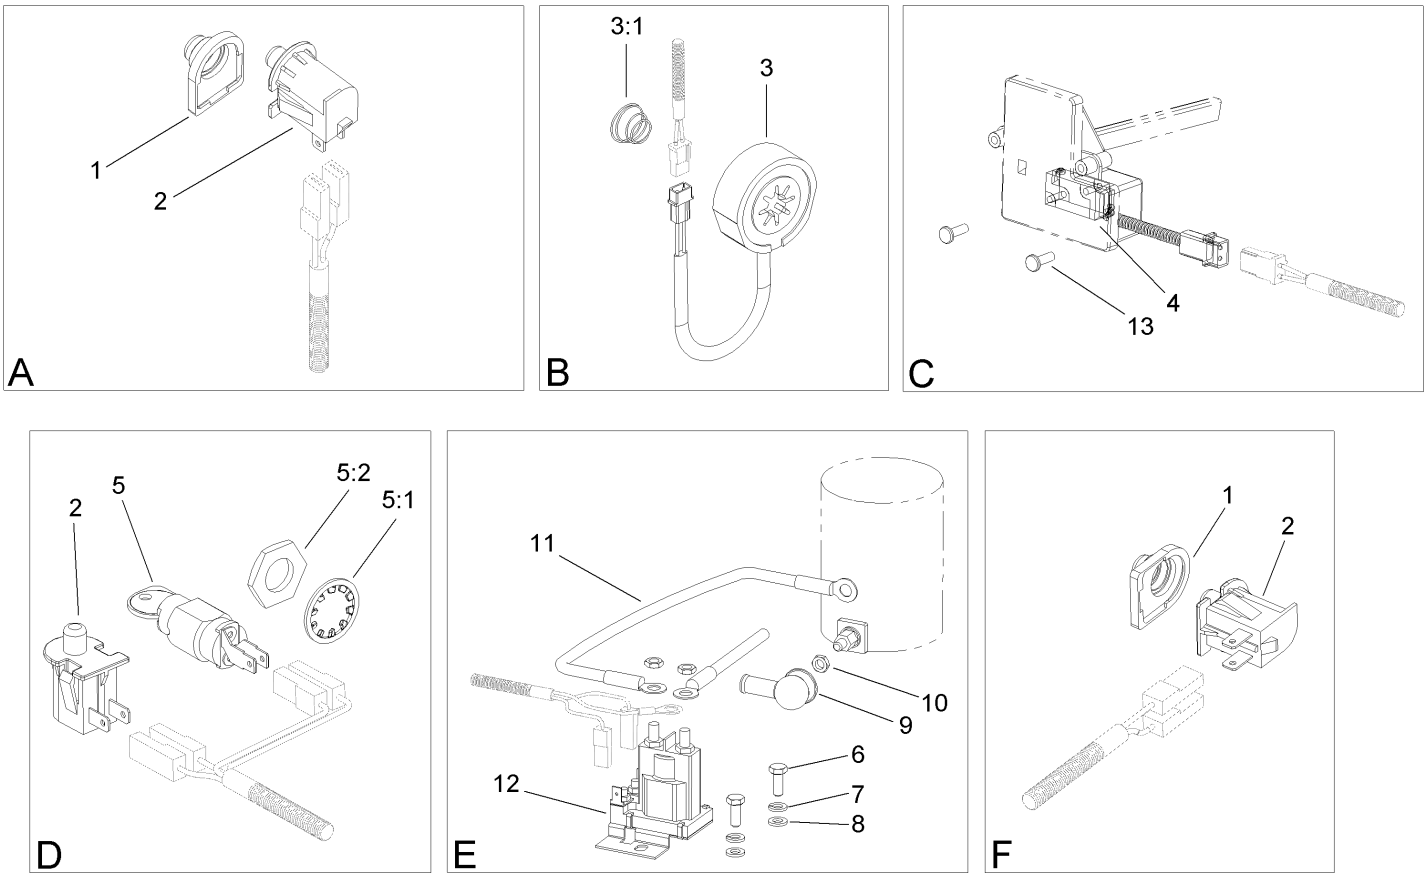

Electrical Switch Assembly No. 1


Ref	Part No.	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
3	99-8090	1	Magnet ASM
3:1	93-6601	1	Spring-Compression
4	104-3185	1	Switch-Omron
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	104-3189	1	Solenoid
13	104-3349	2	Screw

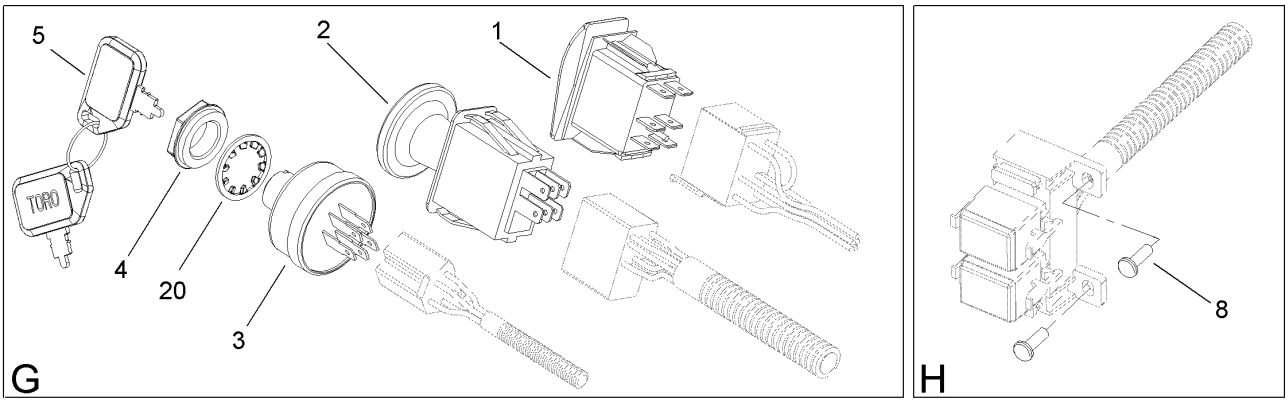


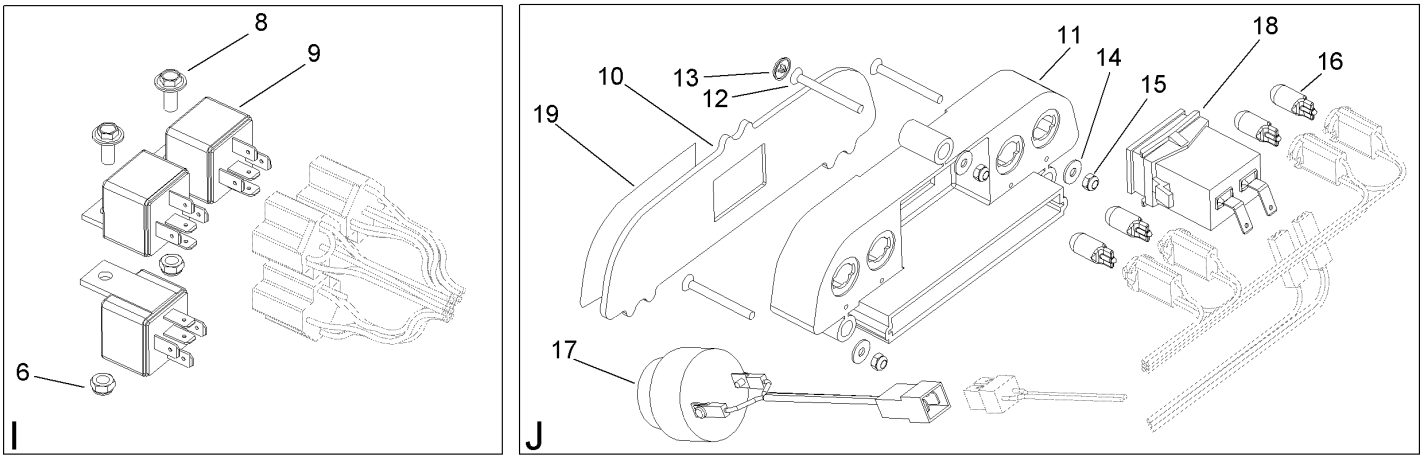



Electrical Switch Assembly No. 2


Ref	Part No.	Qty.	Description
1	93-0527	1	Switch-Cruise
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	218-461	1	Nut-HH
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	3	Relay
10	92-6705	1	Lens-Dash
11	92-6732	1	Housing-Light, Indicator
12	104-3191	3	Screw
13	104-3174	3	Screw-Cap
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	4	Bulb
17	104-3177	1	Buzzer
18	94-4208	1	Hourmeter
19	104-2854	1	Decal-Dash
20	3254-5	1	Washer-Tooth

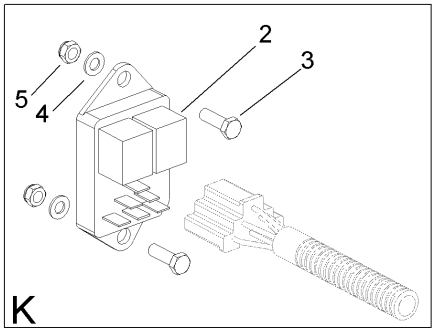

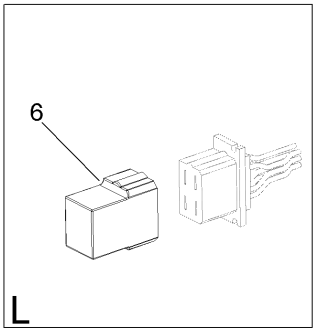

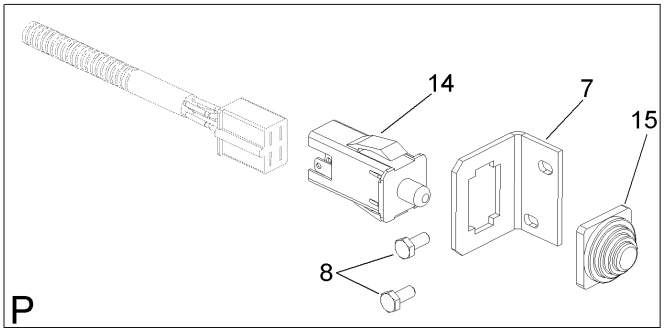

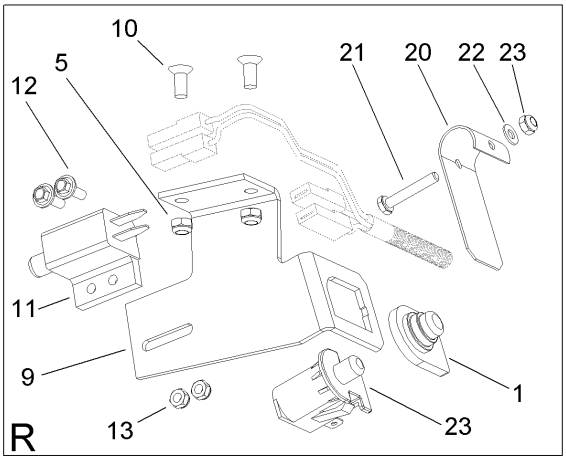


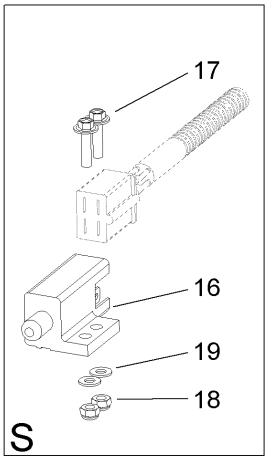

Electrical Switch Assembly No. 3


Ref	Part No.	Qty.	Description
1	104-3178	1	Cover-Protective
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	104-3333	1	Holder-Switch
8	104-3190	2	Screw
9	104-3332	1	Holder-Switch
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw
13	104-2985	3	Nut-Hex
14	104-3338	1	Switch-Delta
15	104-3339	1	Cover-Switch
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer
20	106-5765	1	Lever-Spring
21	104-3009	1	Screw-Hex
22	106-5766	1	Washer
23	104-3179	1	Switch-Delta

48 SHORT BLOCK

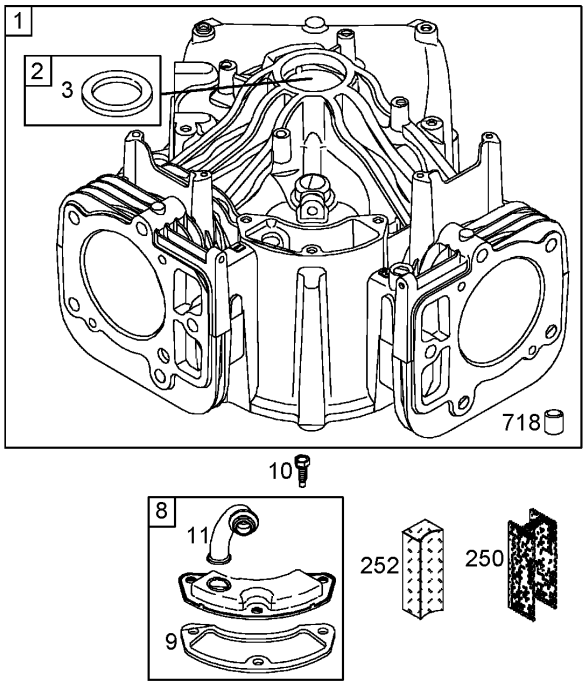

Cylinder Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷1	699753	1	Cylinder ASM
❷2	499585	1	Bushing And Seal Kit
❷❹3	391086s	1	Seal-Oil
❷8	792185	1	Breather ASM
❷❹9	690937	1	Gasket-Breather
❷10	691108	1	Screw
❷11	690942	1	Tube-Breather
❷48	698172	1	Short Block
❷250	690957	1	Retainer-Breather
❷252	690956	1	Collector-Oil
❷718	690959	1	Pin-Locating

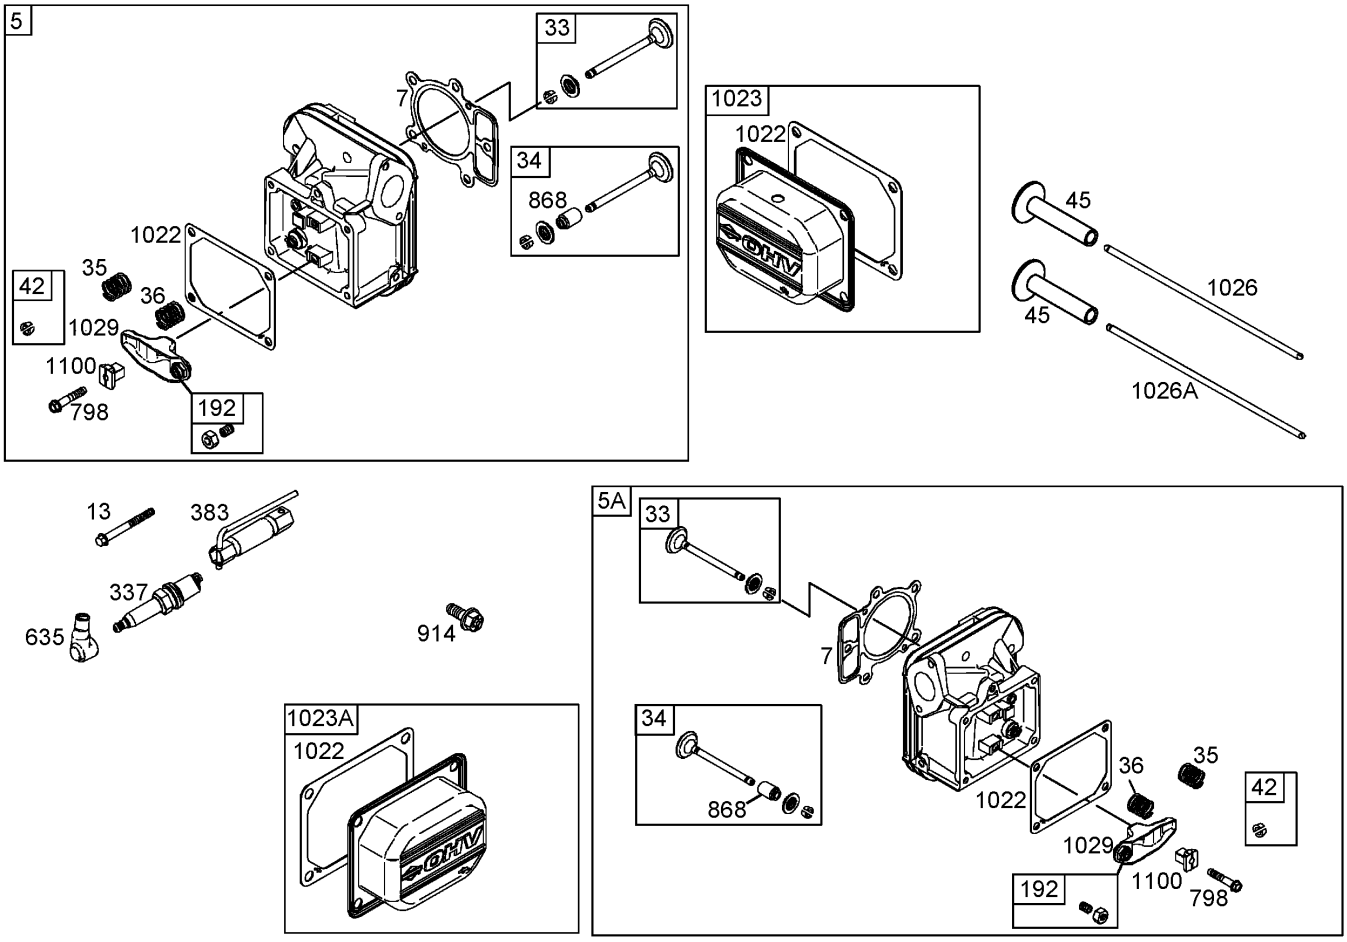

Head Assembly
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description
❷5	693998	1	Head-Cylinder
❷5A	693999	1	Head-Cylinder
❷❹7 ❻	693997	1	Gasket-Head, Cylinder
❷13	791130	1	Screw
❷33	499596	1	Valve-Exhaust
❷34	697464	1	Valve-Intake
❷35	690963	1	Spring-Valve
❷36	690963	1	Spring-Valve
❷42	499586	1	Keeper-Valve
❷45	690977	1	Tappet-Valve
❷192	690083	1	Adjuster-Arm, Rocker
❷337	691043	1	Spark Plug
❷383	19374s	1	Wrench-Spark Plug
❷635	66538s	1	Boot-Spark Plug
❷798	697890	1	Screw
❷❹868 ❻	690968	1	Seal-Valve
❷914	691127	1	Screw
❷❹1022 ❻	690971	1	Gasket-Cover, Rocker
❷1023	499599	1	Cover-Rocker
❷1023A	499600	1	Cover-Arm, Rocker
❷1026	690981	1	Rod-Push (Steel)
❷1026A	690982	1	Rod-Push (Aluminum)


Ref	Part No.	Qty.	Description
❷1029	690972	1	Arm-Rocker
❷1100	791959	1	Pivot-Arm, Rocker

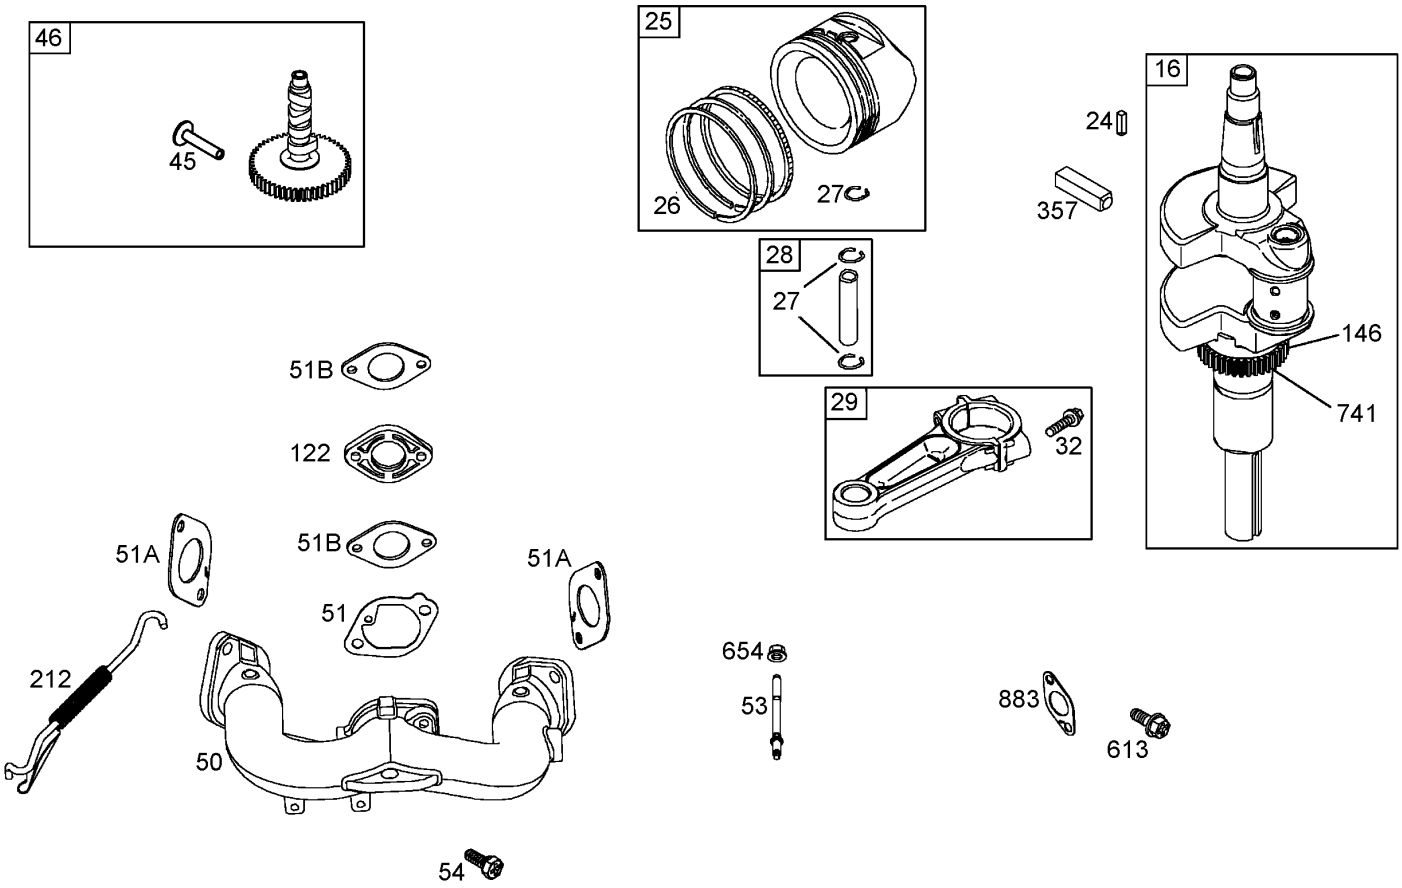

Crankshaft Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷16	699700	1	Crankshaft
❷24	222698s	1	Key-Flywheel
❷25	792117	1	Piston ASM (STD)
❷25	792144	1	Piston ASM (.020 O S)
❷26	792026	1	Ring Set (STD)
❷26	792073	1	Ring Set (.020 O S)
❷27	690975	1	Lock-Pin, Piston
❷28	690229	1	Pin-Piston (STD)
❷29	699699	1	Rod-Connecting
❷32	690976	1	Screw
❷45	690977	1	Tappet-Valve
❷46	790562	1	Camshaft
❷50	699801	1	Manifold-Intake
❷❸51 ❹	690949	1	Gasket-Intake
❷❸51A ❹	699800	1	Gasket-Intake
❷❸51B ❹	699803	1	Gasket-Intake
❷53	690951	1	Stud
❷54	699816	1	Screw
❷122	699802	1	Spacer-Carburetor
❷146	690979	1	Key-Timing
❷212	792265	1	Link-Throttle
❷357	691483	1	Key–Pulley, Drive

Ref	Part No.	Qty.	Description
❷613	690341	1	Screw (Muffler)
❷654	690958	1	Nut
❷741	690980	1	Gear-Timing
❷❹883 ❻	690970	1	Gasket-Exhaust

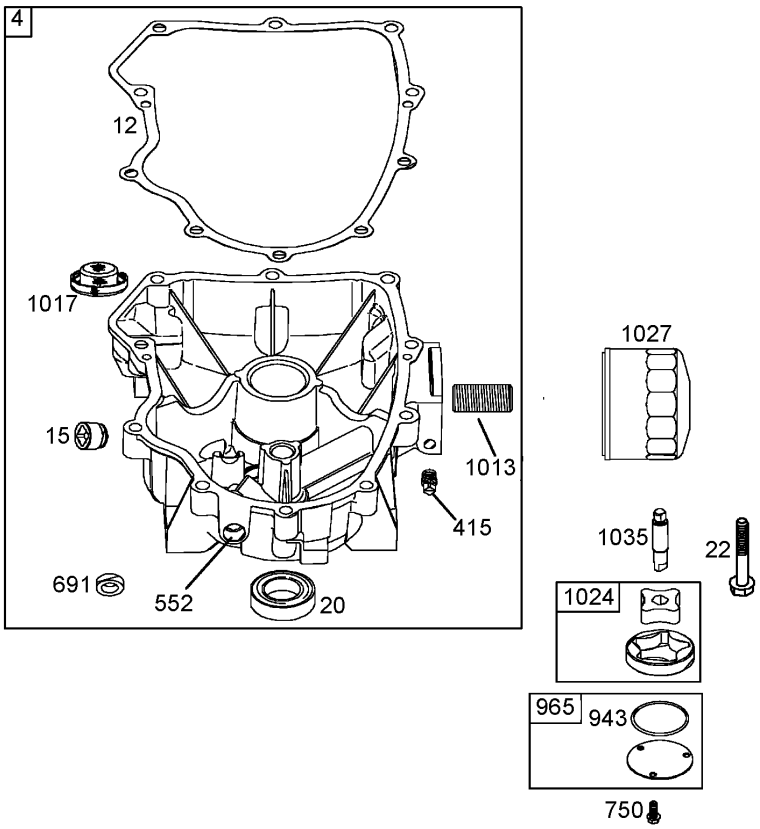


Crankcase Assembly
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description
❷4	699747	1	Sump-Engine
❷❹12	697227	1	Gasket-Crankcase
❷15	690946	1	Plug-Drain, Oil
❷❹20	690947	1	Seal-Oil
❷22	694966	1	Screw
❷415	91488	1	Plug-Oil
❷552	690552	1	Bushing-Crank, Governor
❷❹691	790574	1	Seal-Shaft, Governor
❷750	696999	1	Screw
❷❹943	690589	1	Seal-O Ring
❷965	499613	1	Cover-Pump, Oil
❷1013	690954	1	Nipple-Filter, Oil
❷1017	690770	1	Screen-Pump, Oil
❷1024	499054	1	Pump-Oil
❷1027	492932s	1	Filter-Oil
❷1035	691042	1	Shaft-Pump, Oil

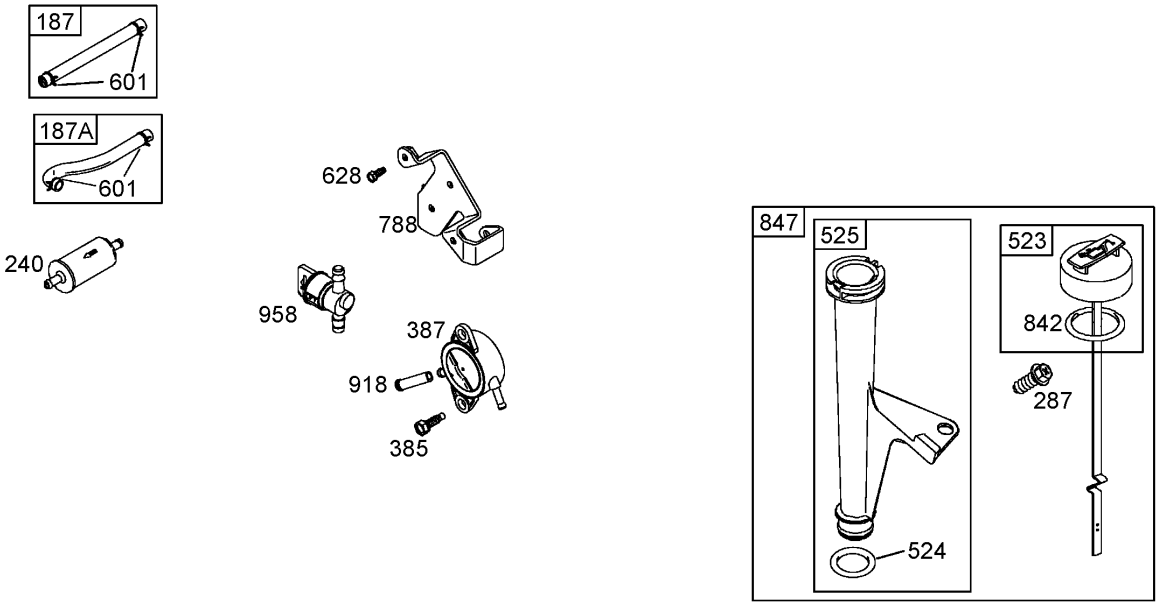

Oil Filter, Tube and Pump Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷187	791744	1	Line-Fuel
❷187A	791872	1	Line-Fuel (Molded)
❷240	691035	1	Filter-Fuel
❷287	691108	1	Screw
❷385	691108	1	Screw
❷387	808656	1	Pump-Fuel
❷523	691036	1	Dipstick
❷❹524	691032	1	Seal-O Ring
❷525	691037	1	Tube-Dipstick
❷601	691038	1	Clamp-Hose
❷628	691108	1	Screw
❷788	691039	1	Bracket-Pump, Fuel
❷❹842	691031	1	Seal-O Ring
❷847	499602	1	Dipstick And Tube ASM
❷918	694000	1	Hose-Vacuum
❷958	698183	1	Valve–Shut Off, Fuel

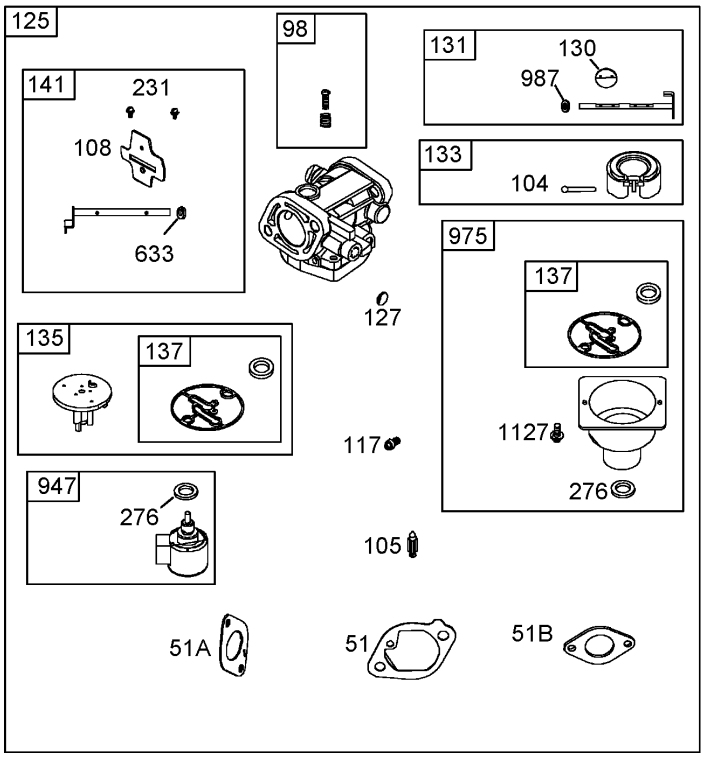

Carburetor Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷❸51 ❹	690949	1	Gasket-Intake
❷❸51A ❹	699800	1	Gasket-Intake
❷❸51B ❹	699803	1	Gasket-Intake
❷98	699721	1	Idle Speed Kit
❷❸104	694918	1	Pin-Hinge, Float
❷❸105	698537	1	Valve-Needle, Float
❷108	699808	1	Valve-Choke
❷117	791406	1	Jet-Main (Standard)
❷125	699807	1	Carburetor
❷127	699810	1	Plug-Welch
❷130	699809	1	Valve-Throttle
❷131	499812	1	Carburetor Gasket Set
❷133	694914	1	Carburetor Float ASM
❷135	792022	1	Tube-Transfer, Fuel
❷❸137	698781	1	Gasket-Bowl, Float
❷141	699811	1	Choke Shaft Kit
❷231	690718	1	Screw
❷❸276	695410	1	Washer-Sealing
❷❸633	695414	1	Seal-Shaft, Choke And Throttle
❷947	699728	1	Solenoid-Fuel
❷975	699502	1	Bowl-Float
❷❸987	699813	1	Seal-Shaft, Throttle

Ref	Part No.	Qty.	Description
❷1127	695407	1	Screw

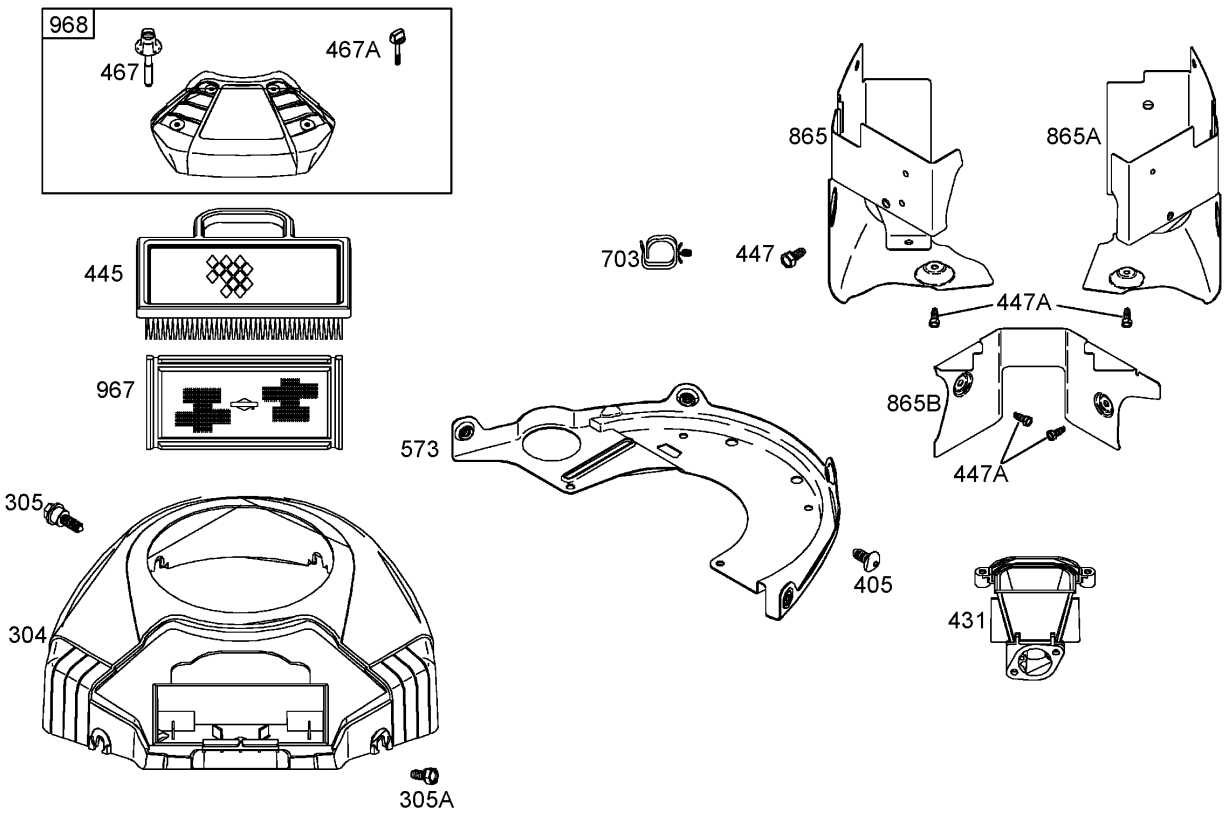

Air Cleaner Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷304	790688	1	Housing-Blower
❷305	691005	1	Screw
❷305A	790690	1	Screw
❷405	697820	1	Screw
❷431	790628	1	Elbow-Cleaner, Air
❷445	499486s	1	Filter-Cartridge, Air Cleaner
❷447	691003	1	Screw
❷447A	691108	1	Screw
❷467	790697	1	Knob-Cleaner, Air
❷467A	691008	1	Knob-Cleaner, Air
❷573	790444	1	Plate-Back
❷703	691010	1	Clip
❷865	691012	1	Cover-Guide, Air
❷865A	691014	1	Cover-Guide, Air (Cylinder 2)
❷865B	691015	1	Cover-Guide, Air (Valley)
❷967	273638s	1	Filter-Pre Cleaner
❷968	790689	1	Cover-Cleaner, Air

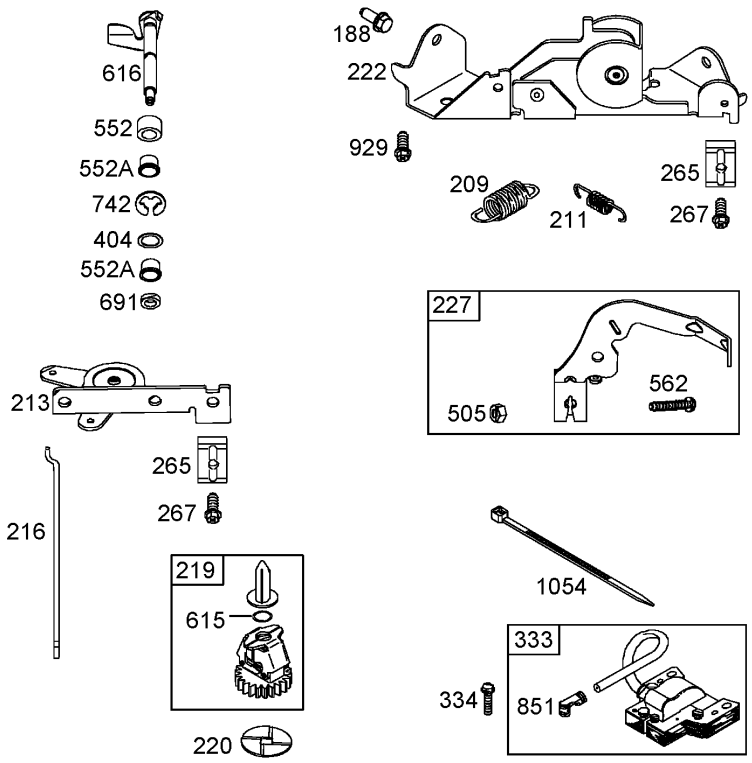

Governor Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷188	691108	1	Screw
❷209	697674	1	Spring–Governor
❷211	691019	1	Spring-Idle, Governed
❷213	691021	1	Bracket-Control, Choke
❷216	691022	1	Link-Choke
❷219	698231	1	Gear-Governor
❷220	690412	1	Washer
❷222	698761	1	Bracket-Control
❷227	792492	1	Lever-Control, Governor
❷265	691024	1	Clamp-Casing
❷267	691044	1	Screw (Casing Clamp)
❷333	691060	1	Armature-Magneto
❷334	691061	1	Screw
❷404	690442	1	Washer
❷505	691029	1	Nut
❷552	690552	1	Bushing-Crank, Governor
❷552A	690553	1	Bushing-Crank, Governor
❷562	690311	1	Bolt
❷615	698290	1	Retainer-Shaft, Governor
❷616	691045	1	Crank-Governor
❷❹691	790574	1	Seal-Shaft, Governor
❷742	690328	1	Retainer-E Ring
❷851	493880s	1	Terminal-Spark Plug
❷929	691003	1	Screw

Ref	Part No.	Qty.	Description
❷1054	280275	1	Tie-Cable

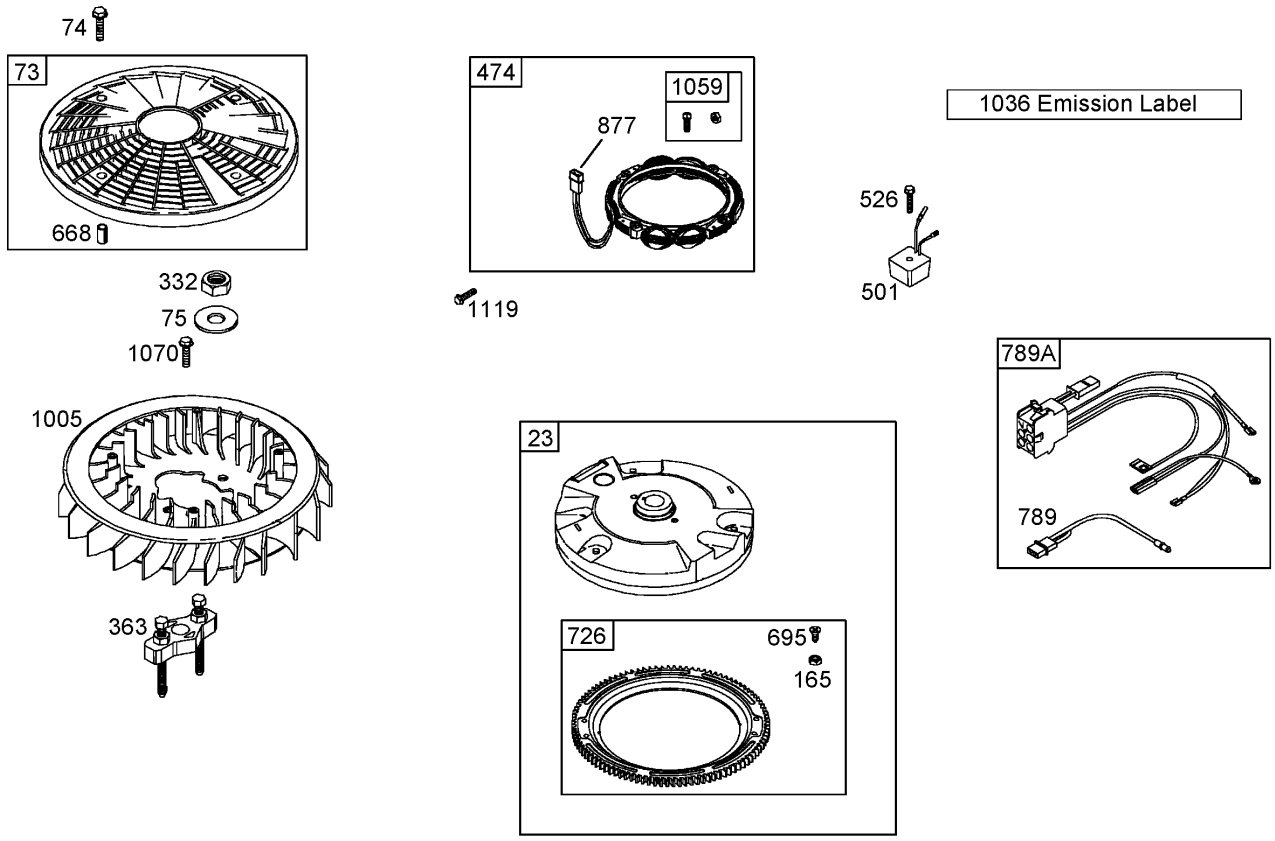


Flywheel Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷23	691053	1	Flywheel
❷73	494439	1	Screen-Rotating
❷74	698425	1	Screw
❷75	691056	1	Washer
❷165	693148	1	Nut
❷332	691059	1	Nut
❷363	19203	1	Puller-Flywheel
❷474	696457	1	Alternator
❷501	691188	1	Regulator
❷526	691129	1	Screw
❷668	691500	1	Spacer
❷695	693149	1	Screw
❷726	499612	1	Gear-Ring
❷789	790544	1	Harness-Wiring
❷789A	698330	1	Harness-Wiring
❷877	393537	1	Connector-Wire, Tri Circuit
❷1005	790698	1	Fan-Flywheel
❷1036	792577	1	Label-Emissions
❷1059	698516	1	Screw And Washer Kit
❷1070	690372	1	Screw
❷1119	691183	1	Screw

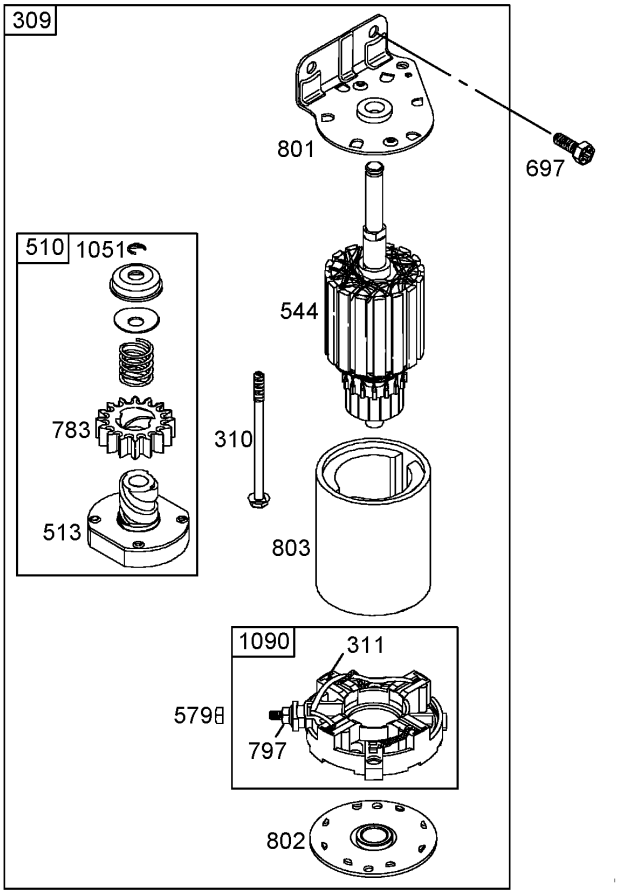

Starter Assembly
Briggs and Stratton 441577-0120-E1


Ref	Part No.	Qty.	Description
❷309	499521	1	Motor-Starter
❷310	691263	1	Bolt
❷311	497608	1	Brush Set
❷510	696541	1	Drive-Starter
❷513	692024	1	Clutch-Drive
❶❷544		1	Armature-Starter (Service With 499521 Starter Motor)
❷579	691029	1	Nut
❷697	690372	1	Screw
❷783	693058	1	Gear-Pinion
❷797	693167	1	Nut
❷801	691283	1	Cap-Drive
❷802	691286	1	Cap-End
❶❷803		1	Housing-Starter (Service With 499521 Starter Motor)
❷1051	691265	1	Ring-Retaining
❷1090	691293	1	Retainer-Brush

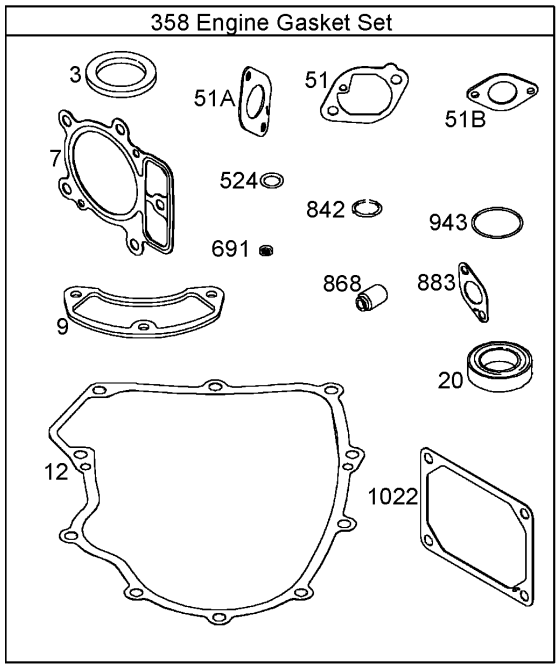


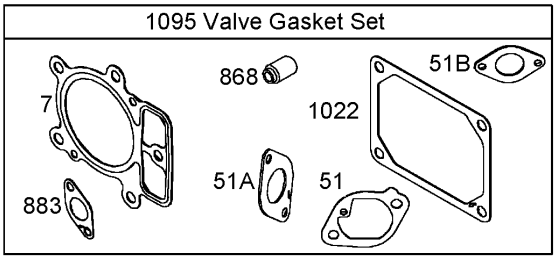

358 Engine and 1095 Valve Gasket Sets
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description
❷3	391086s	1	Seal-Oil
❷7	693997	1	Gasket-Head, Cylinder
❷9	690937	1	Gasket-Breather
❷12	697227	1	Gasket-Crankcase
❷20	690947	1	Seal-Oil
❷❸51❺	690949	1	Gasket-Intake
❷❸51A	699800	1	Gasket-Intake
❷❸51B	699803	1	Gasket-Intake
❷358	699823	1	Engine Gasket Set
❷524	691032	1	Seal-O Ring
❷691	790574	1	Seal-Shaft, Governor
❷842	691031	1	Seal-O Ring
❷868	690968	1	Seal-Valve
❷883	690970	1	Gasket-Exhaust
❷943	690589	1	Seal-O Ring
❷1022	690971	1	Gasket-Cover, Rocker
❷1095	699822	1	Valve Gasket Set

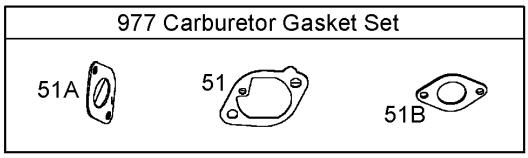

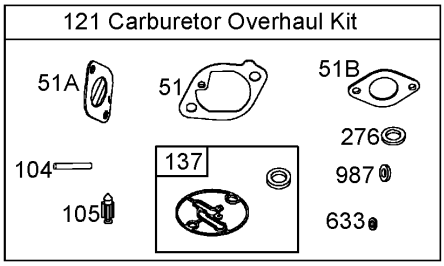

977 Carburetor Gasket Set and 121 Carburetor Overhaul Kit
Briggs and Stratton 441577-0120-E1

Ref	Part No.	Qty.	Description
❷❸51 ❺	690949	1	Gasket-Intake
❷❸51A ❺	699800	1	Gasket-Intake
❷❸51B ❺	699803	1	Gasket-Intake
❷104	694918	1	Pin-Hinge, Float
❷105	698537	1	Valve-Needle, Float
❷121	699814	1	Carburetor Overhaul Kit
❷137	698781	1	Gasket-Bowl, Float
❷276	695410	1	Washer-Sealing
❷633	695414	1	Seal-Shaft, Choke And Throttle
❷977	699815	1	Carburetor Gasket Set
❷987	699813	1	Seal-Shaft, Throttle


TORO®