Form Number 3360-567 Rev B

Emotion 43cm Lawn Mower

Model No. 21027 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Deck Assembly	3
Drive Assembly	4
Front Wheel Assembly	5
Engine Assembly	6
Lower Handle Assembly	7
Upper Handle Assembly	8
Grass Bag Assembly	9
Cylinder Assembly Briggs and Stratton 122T07-2058-B1	10
Crankshaft Assembly Briggs and Stratton 122T07-2058-B1	11
Crankcase Assembly Briggs and Stratton 122T07-2058-B1	12
Cylinder Assembly Briggs and Stratton 122T07-2058-B1	13
Air Cleaner Assembly Briggs and Stratton 122T07-2058-B1	14
Governor, Controls, Brake and Ignition Assembly Briggs and Stratton 122T07-2058-B1	15
Muffler and Fuel Tank Assembly Briggs and Stratton 122T07-2058-B1	16
Blower Housing and Flywheel Assembly Briggs and Stratton 122T07-2058-B1	17
Rewind Starter Assembly Briggs and Stratton 122T07-2058-B1	18
Electric Starter Assembly Briggs and Stratton 122T07-2058-B1	19
Engine and Valve Gaskets and Carburetor Overhaul Kit Briggs and Stratton 122T07-2058-B1	20

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes


❶ Not serviced separately

❷ Obtain from your local Briggs & Stratton dealer

❸ Included in Carburetor Overhaul Kit (Ref. No. 121)

❹ Included in Engine Gasket Set (Ref. No. 358)


❺ Included in Valve Gasket Set (Ref. No. 1095)

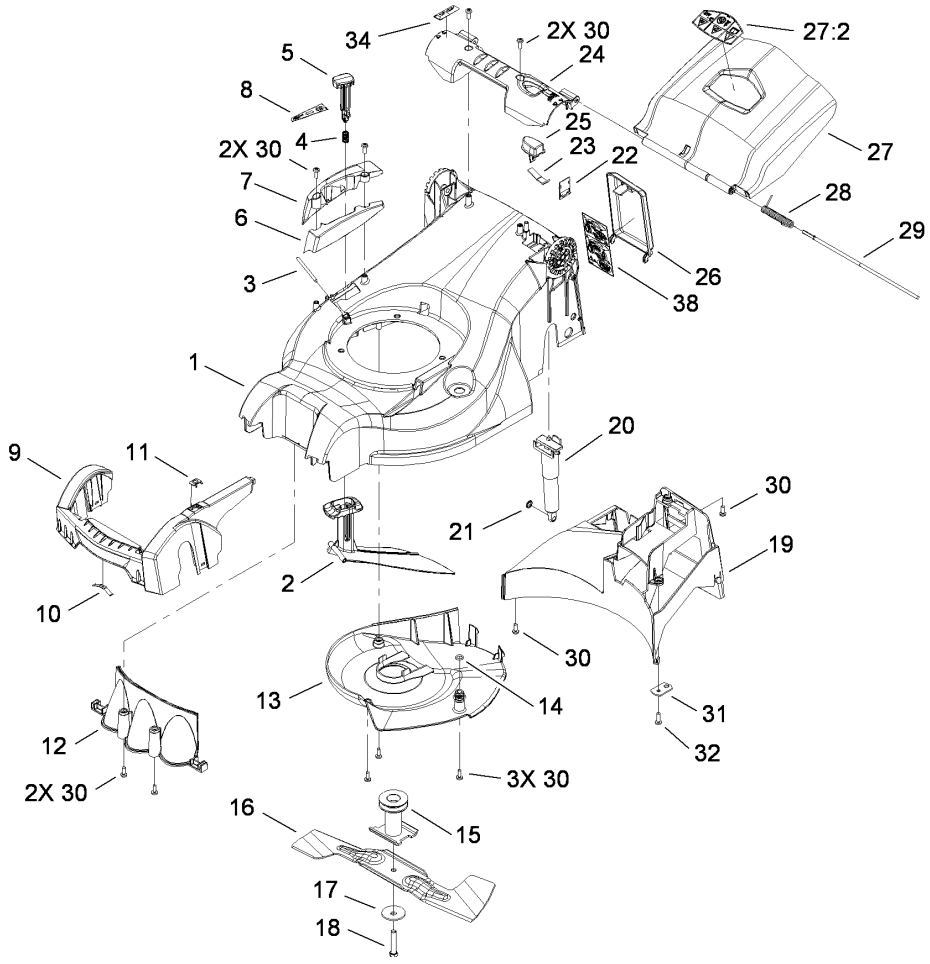

Deck Assembly

Ref	Part No.	Qty.	Description
1	112-8550	1	Deck ASM
2	110-9269	1	Door-Rod
3	110-9271	1	Pin-Door, Rod
4	110-9274	1	Spring-Door, Rod
5	110-9270	1	Button-Rod
6	110-9272	1	Cover-Rod, Left
7	110-9273	1	Cover-Rod, Right
8	110-9333	1	Decal
9	112-8600	1	Bumper-Front
10	110-9305	1	Spring-Leaf, Front
11	110-9259	1	Lense-HOC
12	110-9257	1	Baffle-Front
13	112-8609	1	Cover-Deck
14	46-6290	1	O-Ring
15	110-9291	1	Blade Driver ASM
16	110-9289	1	Blade-Rotary
17	95-6727	1	Washer-Spring
18	115-3129	1	Screw-HH
19	110-9397	1	Baffle-Rear
20	112-8612	1	HOC Cylinder ASM
21	115-3125	1	Clip-Push
22	110-9295	1	Plate-Locking
23	112-8620	1	Lever-Button, HOC
24	110-9267	1	Handle-Deck, Rear


Ref	Part No.	Qty.	Description
25	110-9277	1	Button-HOC
26	110-9285	1	Cover-Battery
27	114-5361	1	Rear Door ASM
27:2	115-3114	1	Decal-Warning
28	110-9276	1	Spring-Door, Rear
29	110-9275	1	Pin-Door, Rear
30	114-5356	11	Screw-SPH, Thread Roll
31	110-9332	1	Support-Cable, Traction
32	93-4095	1	Screw-RH
34	112-8554	1	Decal
38	115-3116	1	Decal

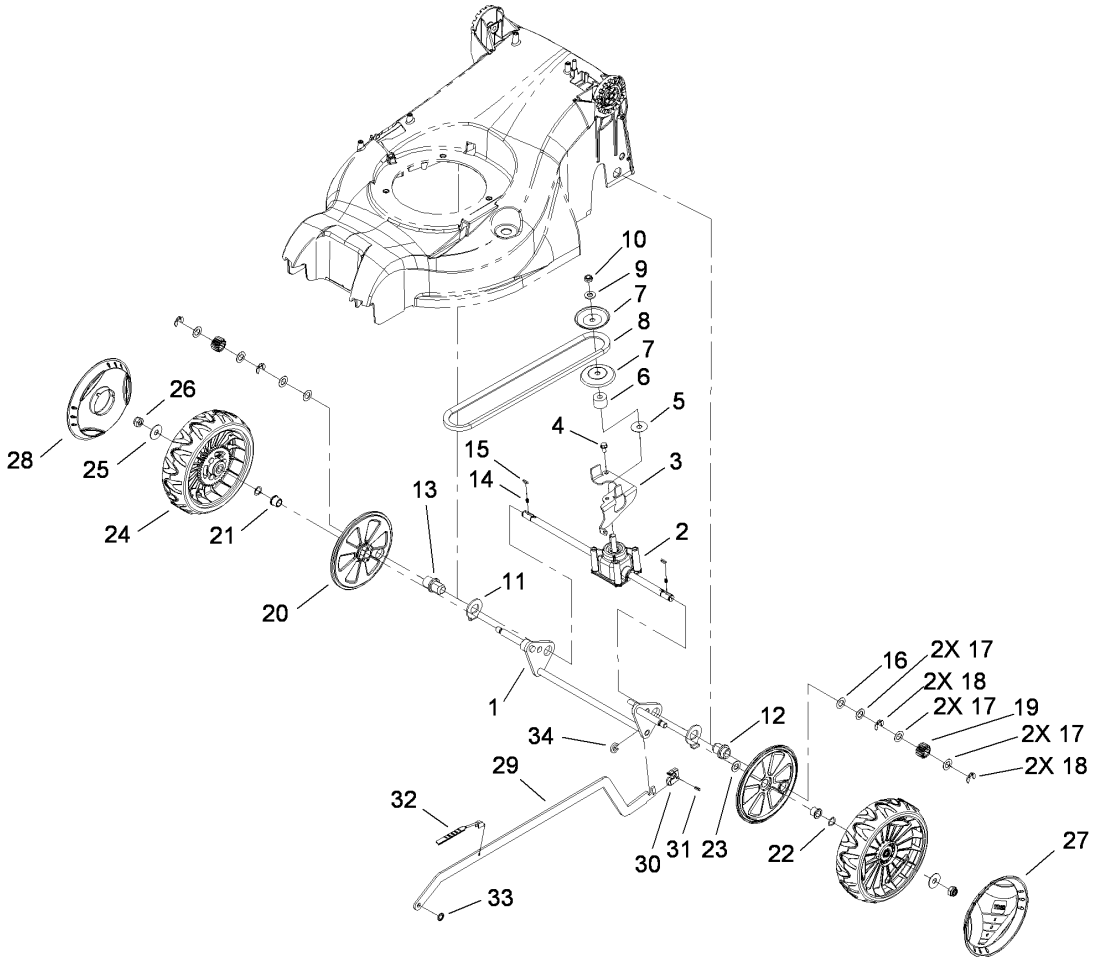

Drive Assembly


Ref	Part No.	Qty.	Description
1	112-8577	1	Pivot Bar ASM
2	108-8757	1	Transmission ASM
3	110-9292	1	Bracket-Case, Gear
4	32144-4	2	Screw-HWH
5	105-6814	1	Washer-Plain
6	92-5791	1	Spacer
7	100-1176	2	Pulley-Half
8	36-8070	1	V-Belt
9	3256-24	1	Washer-Flat
10	3296-5	1	Nut-Lock
11	112-8591	2	Clip-Bushing
12	112-8589	1	Bushing-Wheel, Left
13	112-8590	1	Bushing-Wheel, Right
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	36-4780	2	Washer-Plain
17	105-6840	6	Washer-Thrust
18	65-2720	4	Ring-Clip, Locking
19	105-3040	2	Gear-Pinion, 15T
20	110-9284	2	Cover-Wheel, Inner
21	110-9312	2	Hub-Axle, Rear
22	99-1713	2	Washer-Spring
23	112-8616	1	Washer-Plain
24	95-6994	2	Rear Wheel ASM

Ref	Part No.	Qty.	Description
25	114-5360	2	Washer-Plain
26	93-4098	2	Nut-HH
27	112-8598	1	Cover-Wheel, Smart Wheel
28	110-9250	1	Cover-Wheel, Rear
29	110-9282	1	Bar-Connection, HOC
30	110-9283	1	Clip-Bar, Connection
31	112-8573	1	Pin-Groove
32	112-8614	1	Scale-HOC
33	115-3125	1	Clip-Push
34	112-8618	1	Ring-Fixing

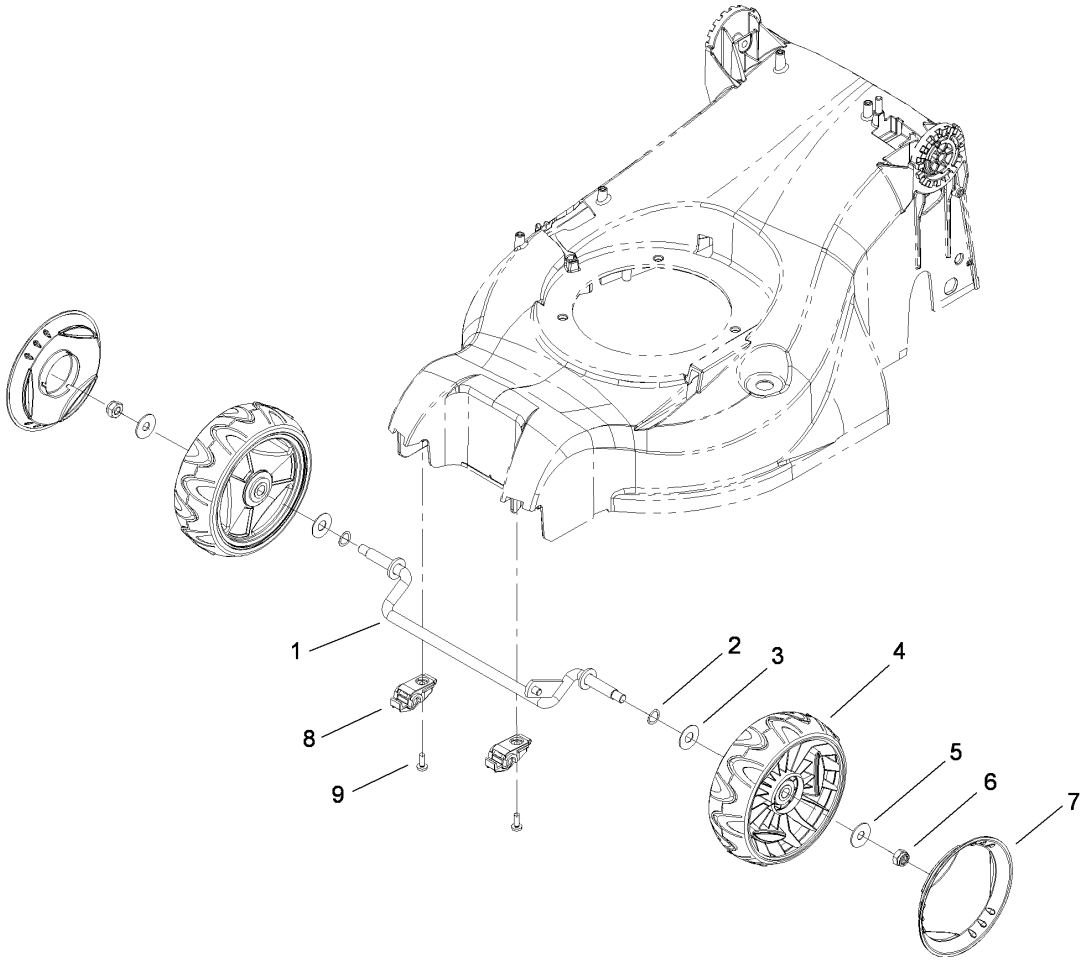


Front Wheel Assembly

Ref	Part No.	Qty.	Description
1	110-9266	1	Front Axle ASM
2	99-1713	2	Washer-Spring
3	114-5351	2	Washer-Plain
4	95-6993	2	Front Wheel ASM
5	114-5360	2	Washer-Plain
6	93-4098	2	Nut-HH
7	110-9253	2	Cover-Wheel, Front
8	110-9261	2	Clamp-Axle, Front
9	114-5356	2	Screw-SPH, Thread Roll

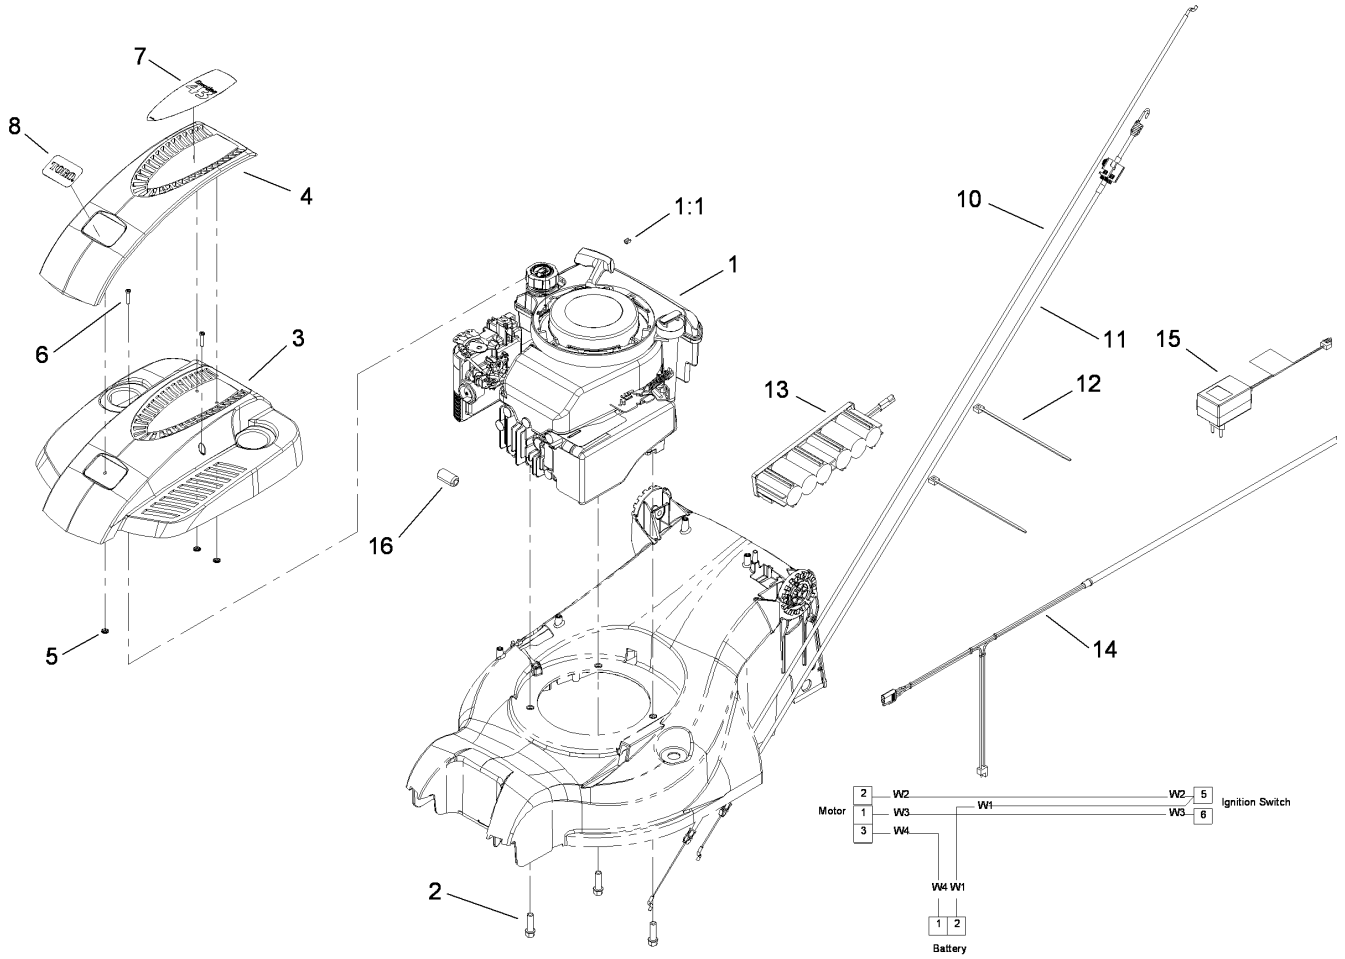


Engine Assembly

Ref	Part No.	Qty.	Description
❶❷1		1	Engine-Briggs And Stratton, 122T07-2058-B1
1:1	2210-316	1	Stop-Rope
2	95-1727	3	Screw-Taptite
3	110-9156	1	Shroud-Engine
4	110-9157	1	Cover-Shroud
5	110-9350	3	Clip-Push
6	93-0231	2	Screw-PPH
7	110-9399	1	Decal
8	115-3112	1	Decal
10	110-9324	1	Cable-Brake
11	110-9326	1	Cable-Traction
12	115-3113	2	Tie-Cable
13	99-5296	1	Battery
14	110-9286	1	Harness-Wiring
15	98-2391	1	Charger-European, 12V Dc
16	112-1540	1	Ferrite-Snap On

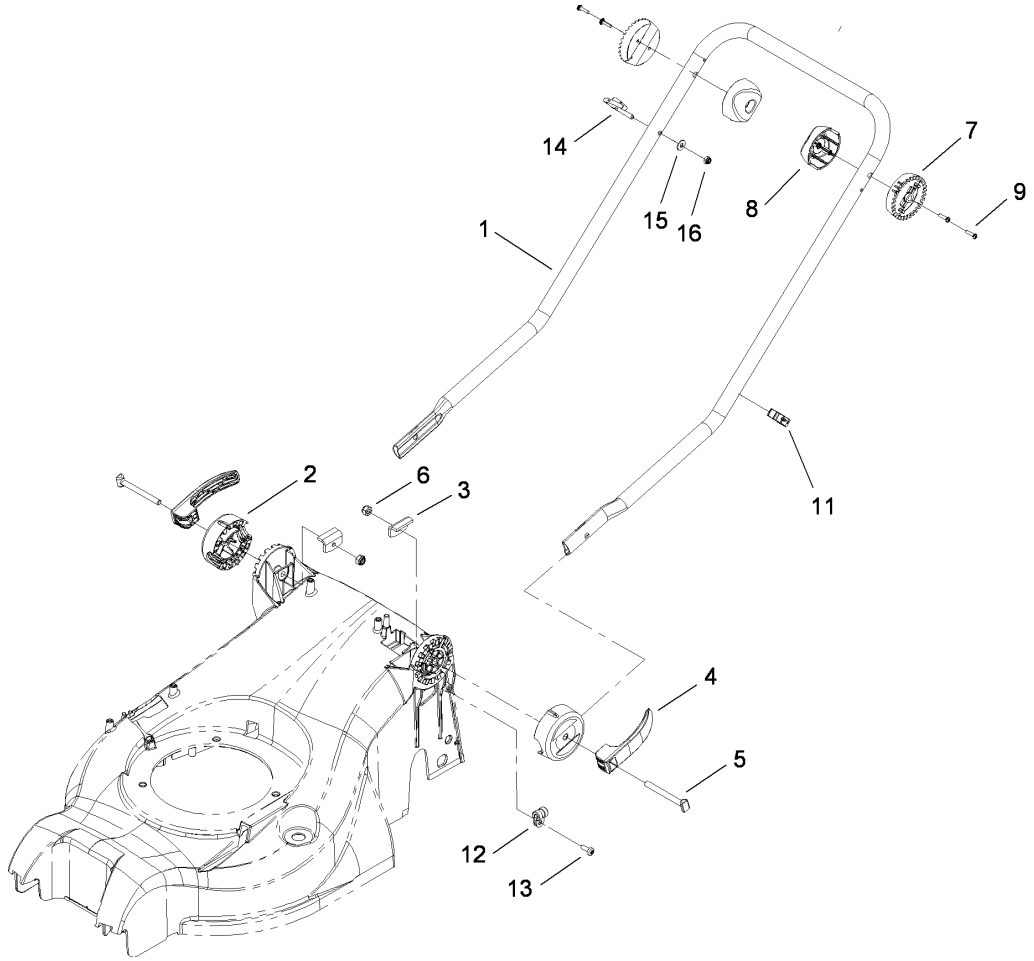

Lower Handle Assembly


Ref	Part No.	Qty.	Description
1	110-9297	1	Handle-Lower
2	110-9351	2	Disc-Handle, Lower
3	110-9376	2	Bracket-Adjust, Handle
4	110-9296	2	Lever-Locking, Handle
5	95-6988	2	Bolt-T Head, Lower
6	106-4757	2	Nut-Hex
7	110-9314	2	Mount-Handle
8	110-9315	2	Clamp-Handle
9	95-6598	4	Screw
11	110-9293	1	Cable-Guide
12	115-3126	1	Clamp-Cable
13	114-5356	1	Screw-SPH, Thread Roll
14	112-8586	1	Guide-Rope
15	3256-1	1	Washer-Flat
16	106-8576	1	Nut-Hex

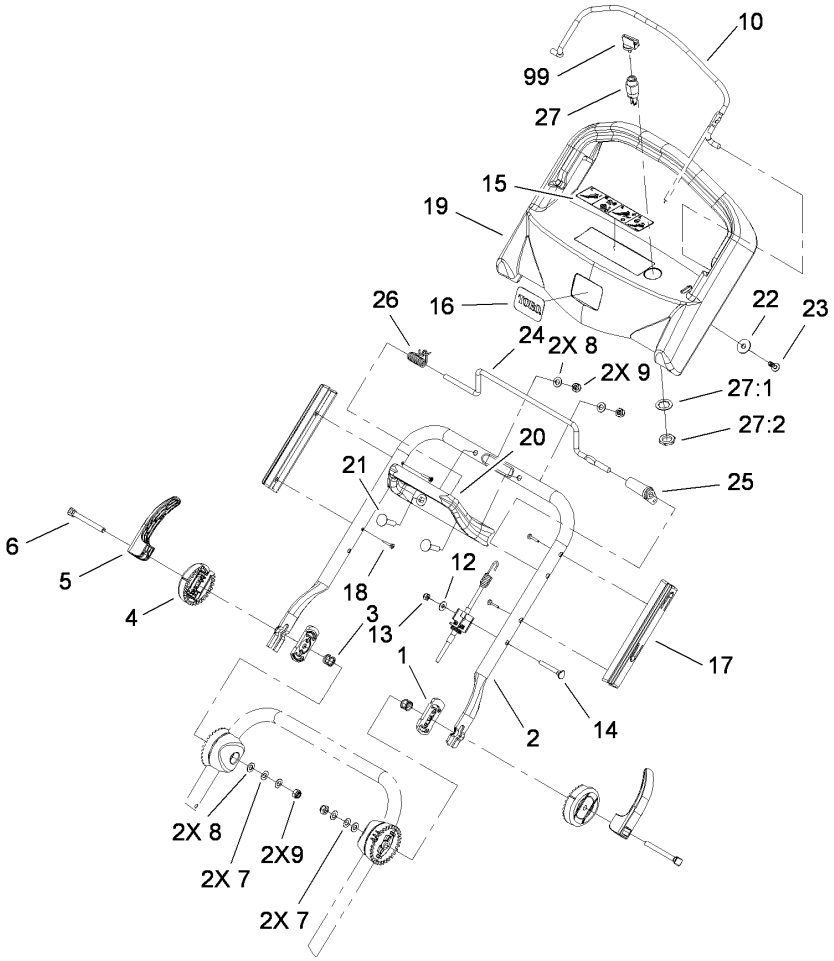

Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	110-9313	2	Plate-Adjust, Handle
2	110-9317	1	Handle-Upper
3	110-9392	2	Spring-Adjust, Handle
4	110-9316	2	Mount-Handle, Upper
5	110-9296	2	Lever-Locking, Handle
6	95-6996	2	Bolt-T Head, Upper
7	110-9335	4	Washer-Spring
8	106-4756	4	Washer-Plain
9	106-4757	4	Nut-Hex
10	110-9359	1	Bail-Brake
12	3256-1	1	Washer-Flat
13	106-8576	1	Nut-Hex
14	114-5350	1	Bolt-Carriage
15	110-9329	1	Decal
16	115-3112	1	Decal
17	99-1590	2	Guide-Handle, Control
18	94-4496	4	Screw-PPH
19	95-6998	1	Handle-Control
20	99-1591	1	Handle-Assist, Traction
21	106-4755	2	Bolt-RH
22	104-2946	1	Washer-Plain
23	110-9352	1	Screw-Round Head, Pozidrive
24	110-9304	1	Bar-Control, Traction
25	99-1589	1	Lever-Traction

Ref	Part No.	Qty.	Description
26	95-6849	1	Spring-Torsion
27	46-5780	1	Switch-Starter
27:1	3254-5	1	Washer-Tooth
27:2	218-461	1	Nut-HH
99	63-8360	1	Key-Ignition

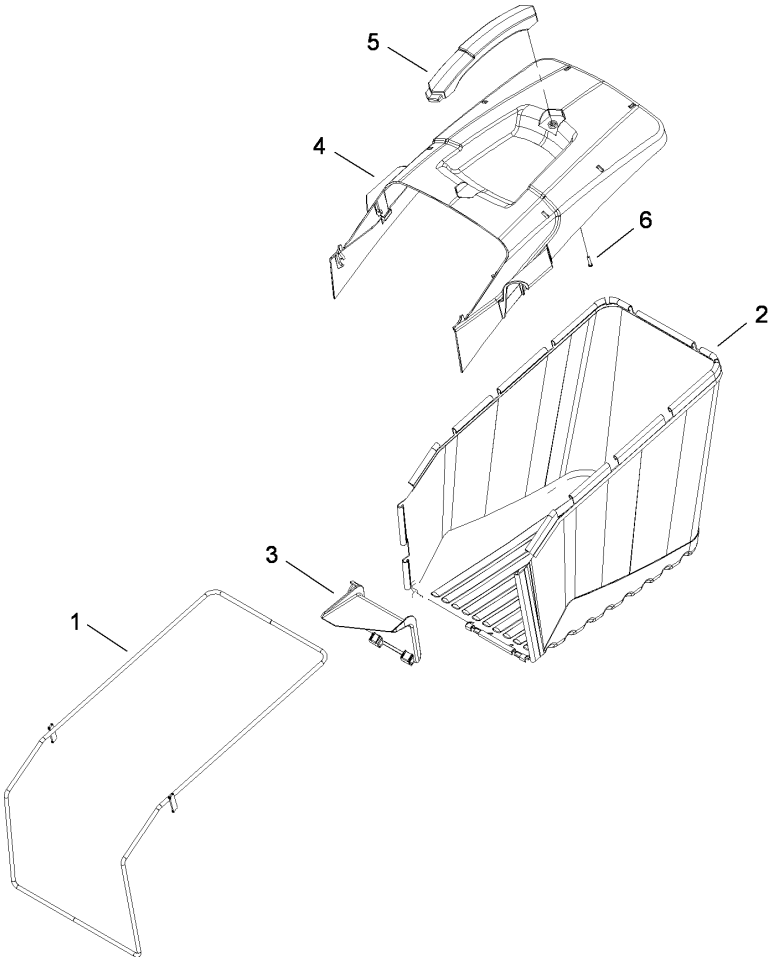


Grass Bag Assembly

Ref	Part No.	Qty.	Description
1	112-8552	1	Bag Frame ASM
2	112-8602	1	Lower Bag ASM
3	110-9371	1	Lip-Bag, Grass
4	110-9298	1	Cover-Bag
5	110-9299	1	Handle-Bag
6	95-6560	1	Screw-Button Head, Torx

1058 Operator Manual

1330 Repair Manual

48 Short Block

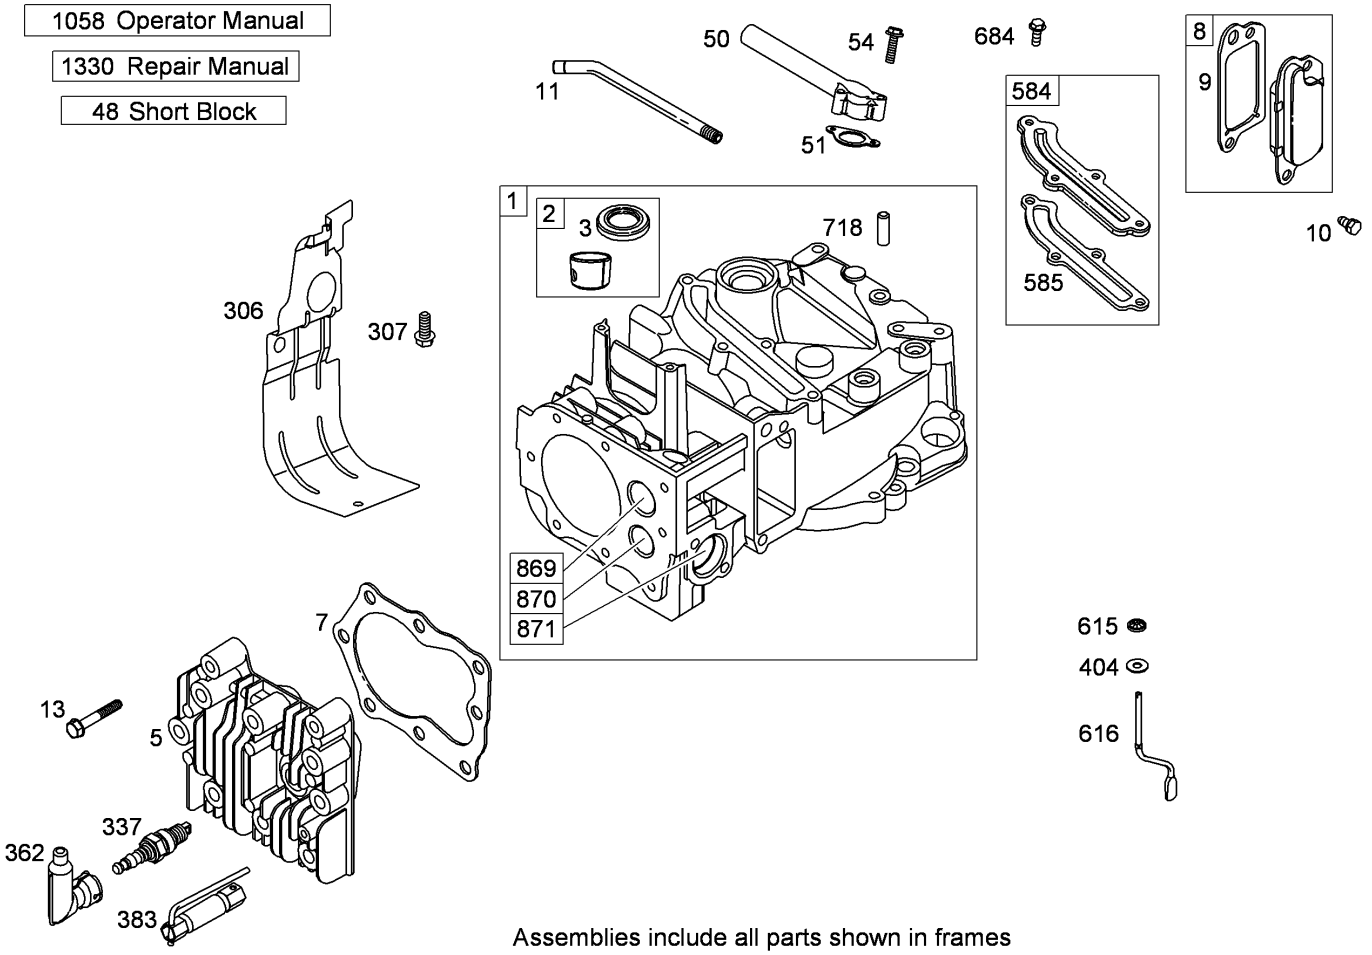


Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
❷1	697322	1	Cylinder ASM
❷2	399269	1	Bushing And Seal Kit
❷❹3	299819s	1	Seal-Oil (Magneto Side)
❷5	691160	1	Head-Cylinder
❷❹7	692249	1	Gasket-Head, Cylinder
❺			
❷8	695250	1	Breather ASM
❷❹9	699472	1	Gasket-Breather
❺			
❷10	691125	1	Screw (Breather ASM)
❷11	691781	1	Tube-Breather
❷13	690912	1	Screw (Cylinder Head)
❷48	792741	1	Short Block
❷50	497465	1	Manifold-Intake
❷❹51	272199s	1	Gasket-Intake
❷54	691650	1	Screw (Intake Manifold)
❷306	790836	1	Shield-Cylinder
❷307	690345	1	Screw (Cylinder Shield)
❷337	802592s	1	Plug-Spark
❷362	793351	1	Boot-Spark Plug
❷383	89838s	1	Wrench-Spark Plug
❷404	690272	1	Washer (Governor Crank)
❷584	697734	1	Cover-Passage, Breather
❷❹585	691879	1	Gasket-Passage, Breather


Ref	Part No.	Qty.	Description
❷615	690340	1	Retainer-Shaft, Governor
❷616	698801	1	Crank-Governor
❷684	690345	1	Screw (Breather Passage Cover)
❷718	690959	1	Pin-Locating
❷869	691155	1	Seat-Valve (Intake)
❷870	690380	1	Seat-Valve (Exhaust)
❷871	262001	1	Bushing-Guide (Exhaust)
❷871	63709	1	Bushing-Guide (Intake)
❷1058	277039	1	Operator Manual
❷1330	270962	1	Repair Manual

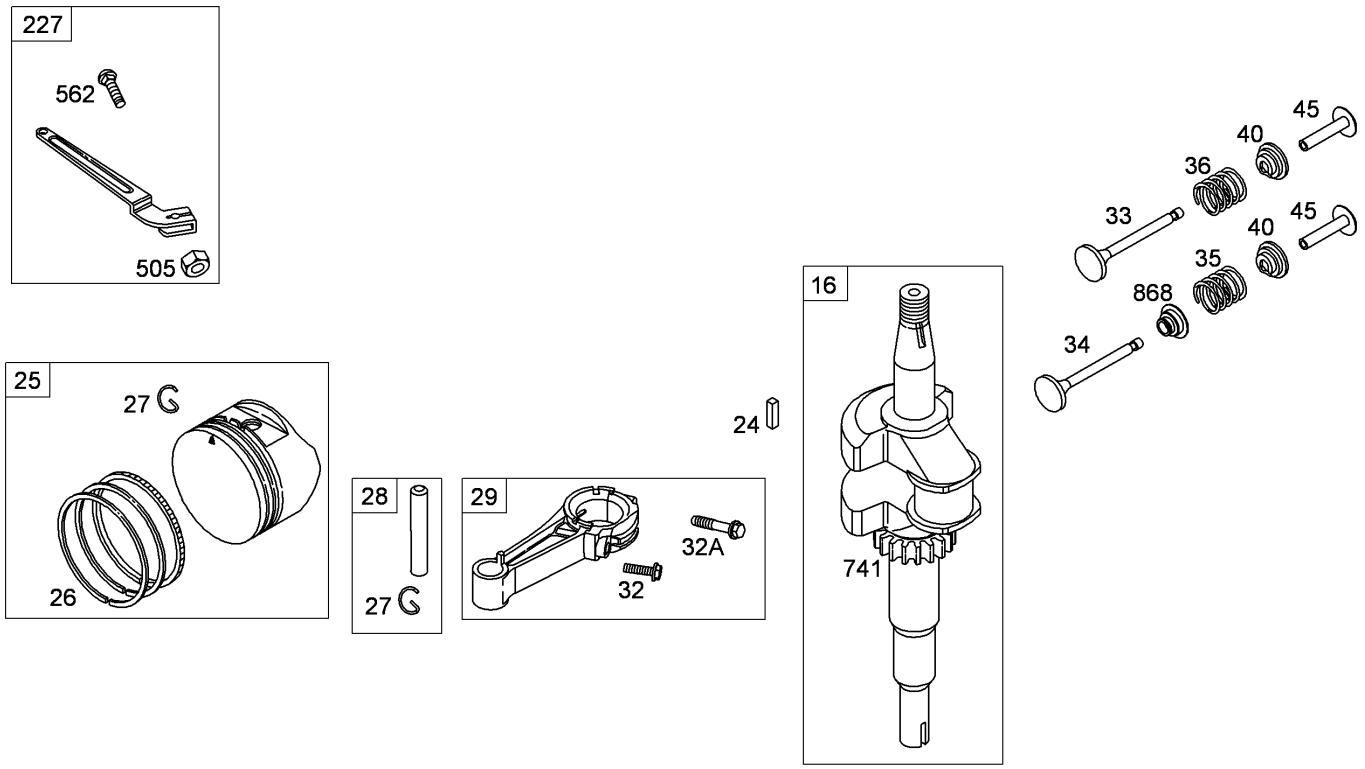

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description
❷16	691450	1	Crankshaft
❷24	222698s	1	Key-Flywheel
❷25	795429	1	Piston ASM (Standard)
❷25	795430	1	Piston ASM (.020 Oversize)
❷26	795431	1	Ring Set (Standard)
❷26	795432	1	Ring Set (.020 Oversize)
❷27	691866	1	Lock-Pin, Piston
❷28	499423	1	Pin-Piston
❷29	499424	1	Rod-Connecting
❷32	691664	1	Screw (Connecting Rod) (Short)
❷32A	695759	1	Screw (Connecting Rod) (Long)
❷33	262651s	1	Valve-Exhaust
❷34	262652s	1	Valve-Intake
❷35	691270	1	Spring-Valve (Intake)
❷36	691270	1	Spring-Valve (Exhaust)
❷40	692194	1	Retainer-Valve
❷45	690548	1	Tappet-Valve
❷227	690783	1	Lever-Control, Governor
❷505	691251	1	Nut (Governor Control Lever)
❷562	92613	1	Bolt (Governor Control Lever)
❷741	795755	1	Gear-Timing
❷868	697338	1	Seal-Valve

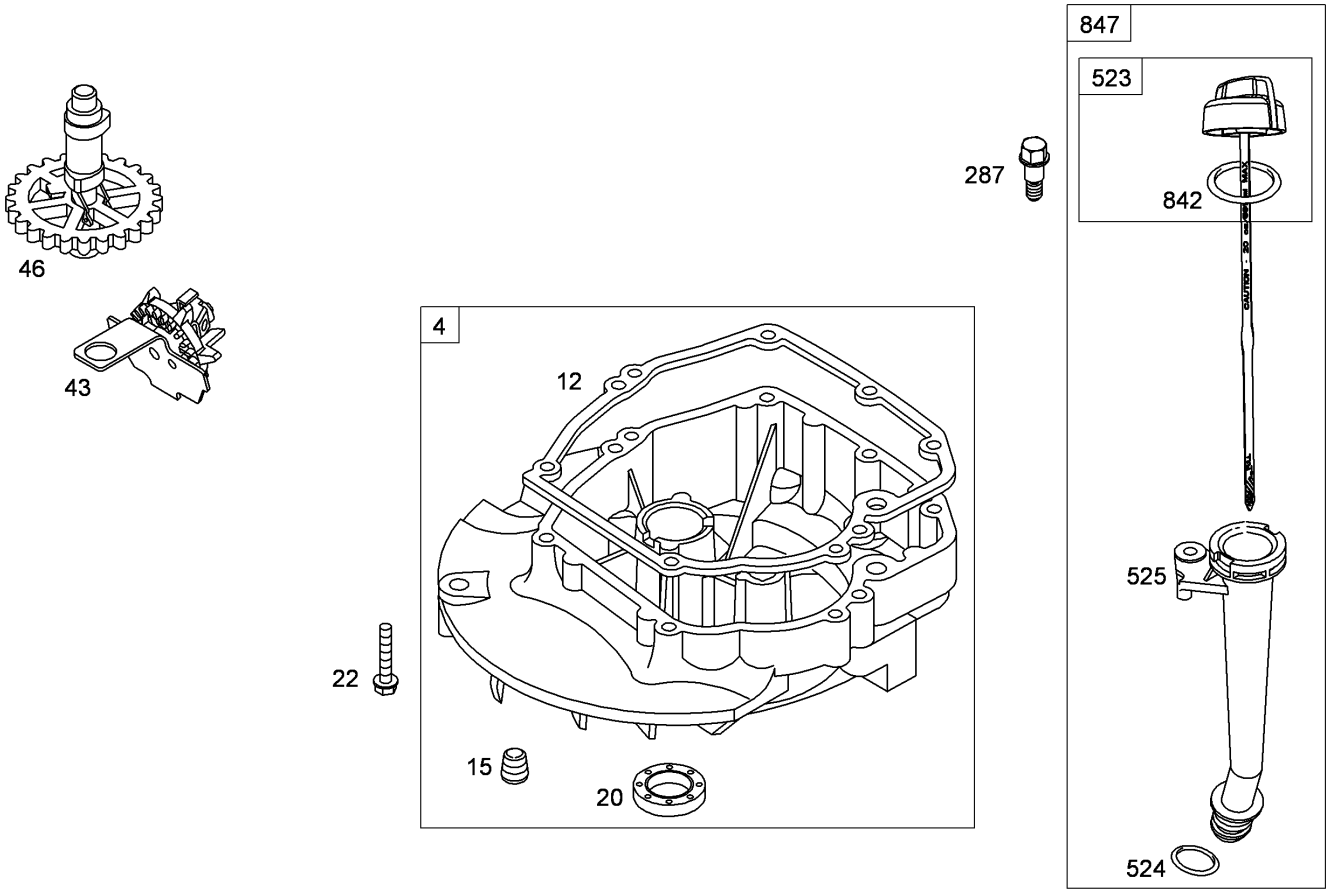

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description
❷4	493279	1	Sump-Engine
❷❹12	692232	1	Gasket-Crankcase
❷15	691680	1	Plug-Drain, Oil
❷❹20	399781s	1	Seal-Oil (PTO Side)
❷22	691092	1	Screw (Crankcase Cover/Sump)
❷43	691997	1	Slinger-Oil, Governor
❷46	691449	1	Camshaft
❷287	690940	1	Screw (Dipstick Tube)
❷523	499621	1	Dipstick
❷❹524	692296	1	Seal-O Ring (Dipstick Tube)
❷525	495265	1	Tube-Dipstick
❷❹842	691031	1	Seal-O Ring (Dipstick Tube)
❷847	692047	1	Dipstick Tube ASM

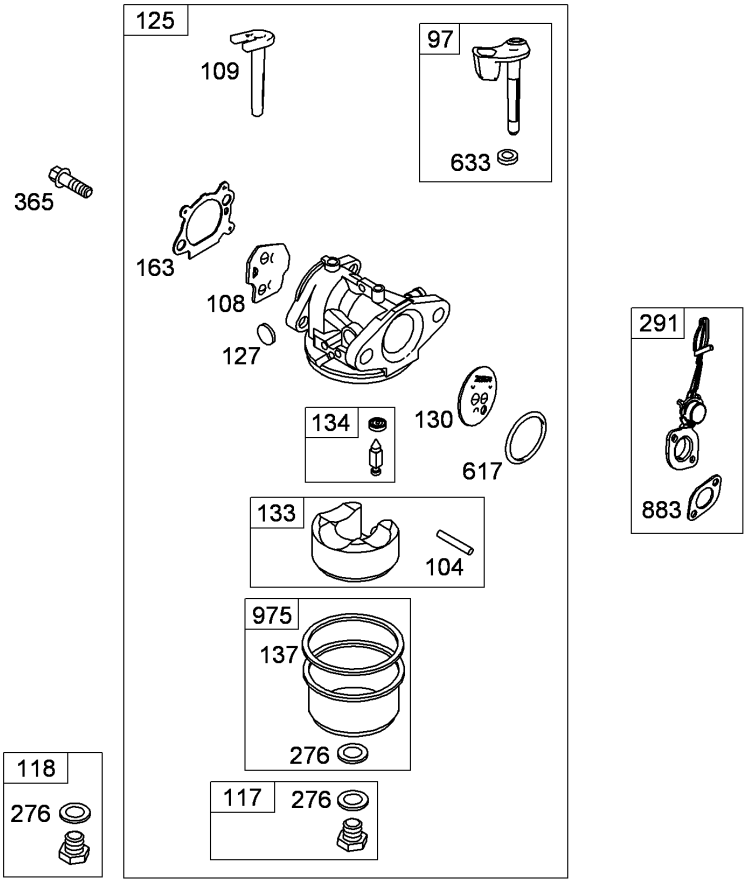


Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
❷97	696565	1	Shaft-Throttle
❷❸104	691242	1	Pin-Hinge, Float
❷108	795935	1	Valve-Choke
❷109	494218	1	Shaft-Choke
❷117	697355	1	Jet-Main (Standard)
❷118	692677	1	Jet-Main (High Altitude)
❷125	790845	1	Carburetor
❷❸127	694468	1	Plug-Welch
❷130	696564	1	Valve-Throttle
❷133	398187	1	Float-Carburetor
❷❸134	398188	1	Needle And Seat Kit
❷❸137	693981	1	Gasket-Bowl, Float
❷❸163❹	272653s	1	Gasket-Cleaner, Air
❷❸276	271716	1	Washer-Sealing
❷291	790830	1	Thermostat
❷365	691688	1	Screw (Carburetor)
❷❸617	270344s	1	Seal-O Ring (Intake Manifold)
❷❸633	691321	1	Seal-Shaft, Choke Throttle
❷❹883❺	691881	1	Gasket-Exhaust
❷975	493640	1	Bowl-Float

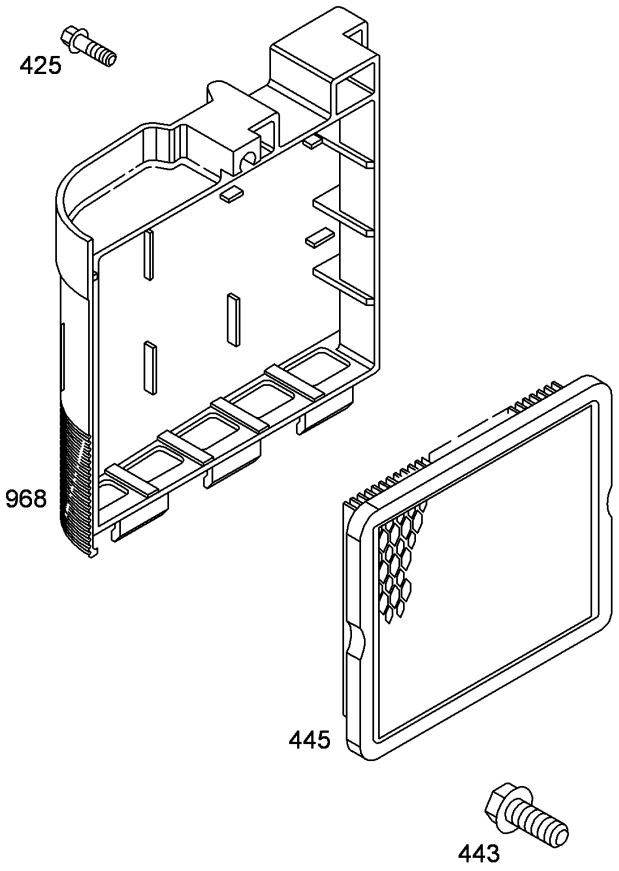


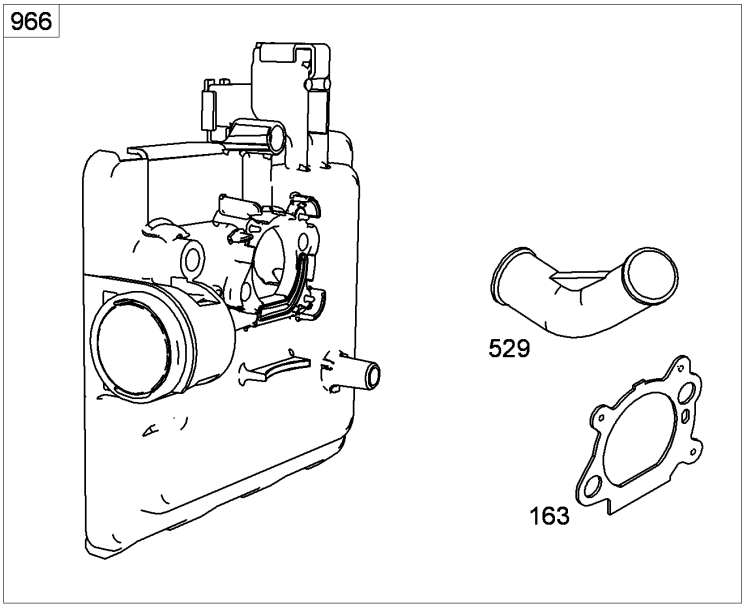

Assemblies include all parts shown in frames

Air Cleaner Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
❷❸163 ❹	272653s	1	Gasket-Cleaner, Air
❷425	690670	1	Screw (Air Cleaner Cover)
❷443	692523	1	Screw (Air Cleaner Primer Base)
❷445	491588s	1	Filter-Cartridge, Air Cleaner
❷529	691923	1	Grommet (Air Cleaner Backplate)
❷966	496116	1	Base-Primer, Air Cleaner
❷968	692298	1	Cover-Cleaner, Air

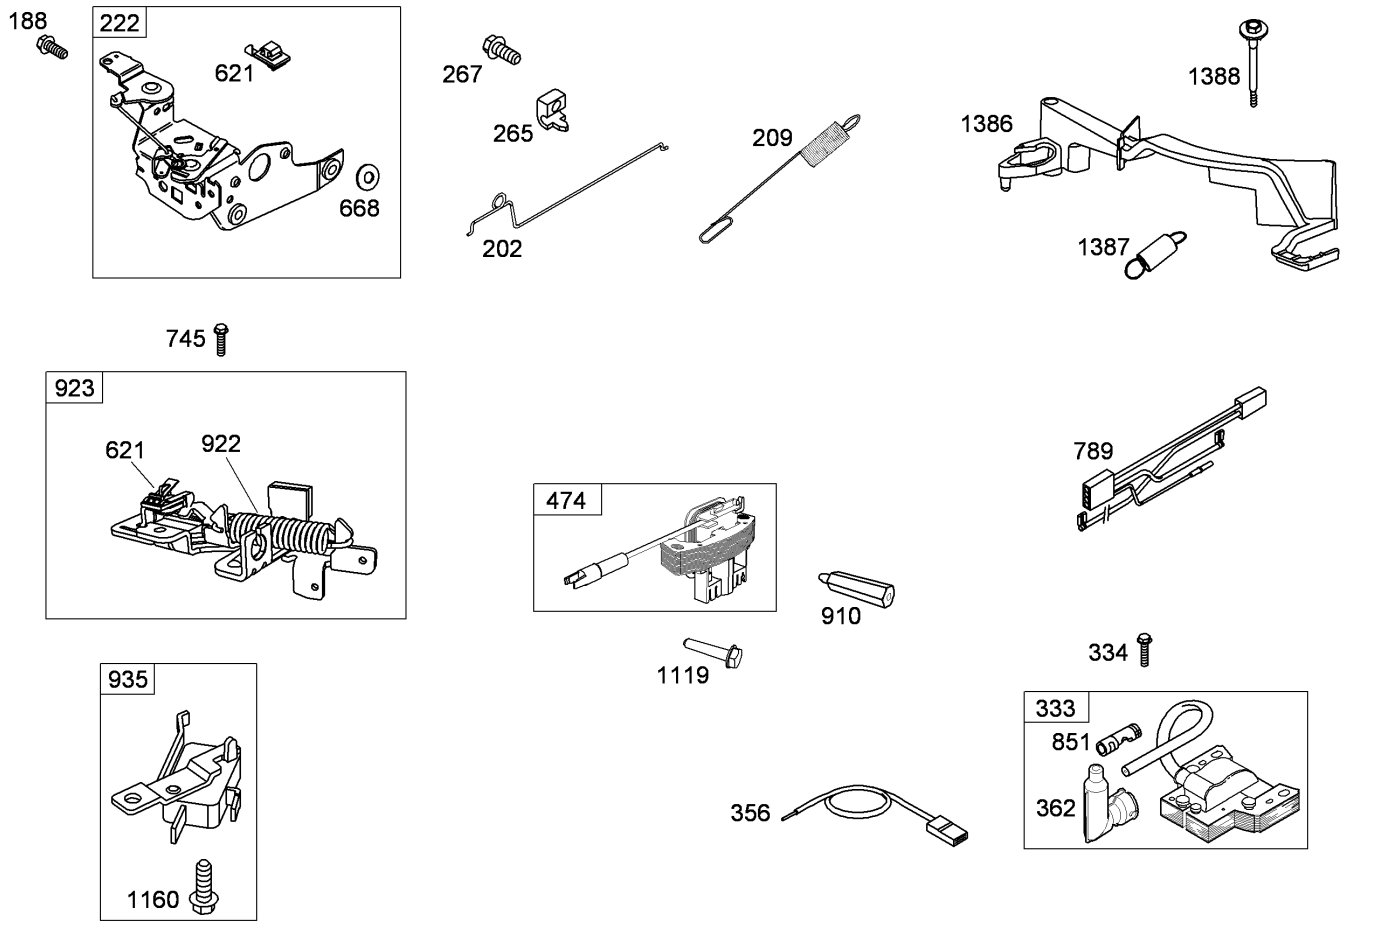


Assemblies include all parts shown in frames

Governor, Controls, Brake and Ignition Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
❷188	693399	1	Screw (Control Bracket)
❷202	691829	1	Link-Governor, Mechanical
❷209	691292	1	Spring-Governor (Brown)
❷222	790143	1	Bracket-Control
❷265	690798	1	Clamp-Casing
❷267	691044	1	Screw (Casing Clamp)
❷333	793353	1	Armature-Magneto
❷334	691061	1	Screw (Magneto Armature)
❷356	692390	1	Wire-Stop
❷362	793351	1	Boot-Spark Plug
❷474	691991	1	Alternator
❷621	692310	1	Switch-Stop
❷❹668	493823	1	Spacer (Control Bracket)
❷745	691648	1	Screw (Brake)
❷789	792685	1	Harness-Wiring
❷851	692424	1	Terminal–Spark Plug
❷910	691094	1	Stud (Alternator)
❷922	692135	1	Spring-Brake
❷923	796136	1	Brake
❷935	499421	1	Switch-Interlock
❷1119	692979	1	Screw (Alternator)
❷1160	691627	1	Screw (Interlock Switch)
❷1386	790848	1	Vane-Air
❷1387	790849	1	Spring-Vane, Air


Ref	Part No.	Qty.	Description
❷1388	790850	1	Screw (Air Vane)

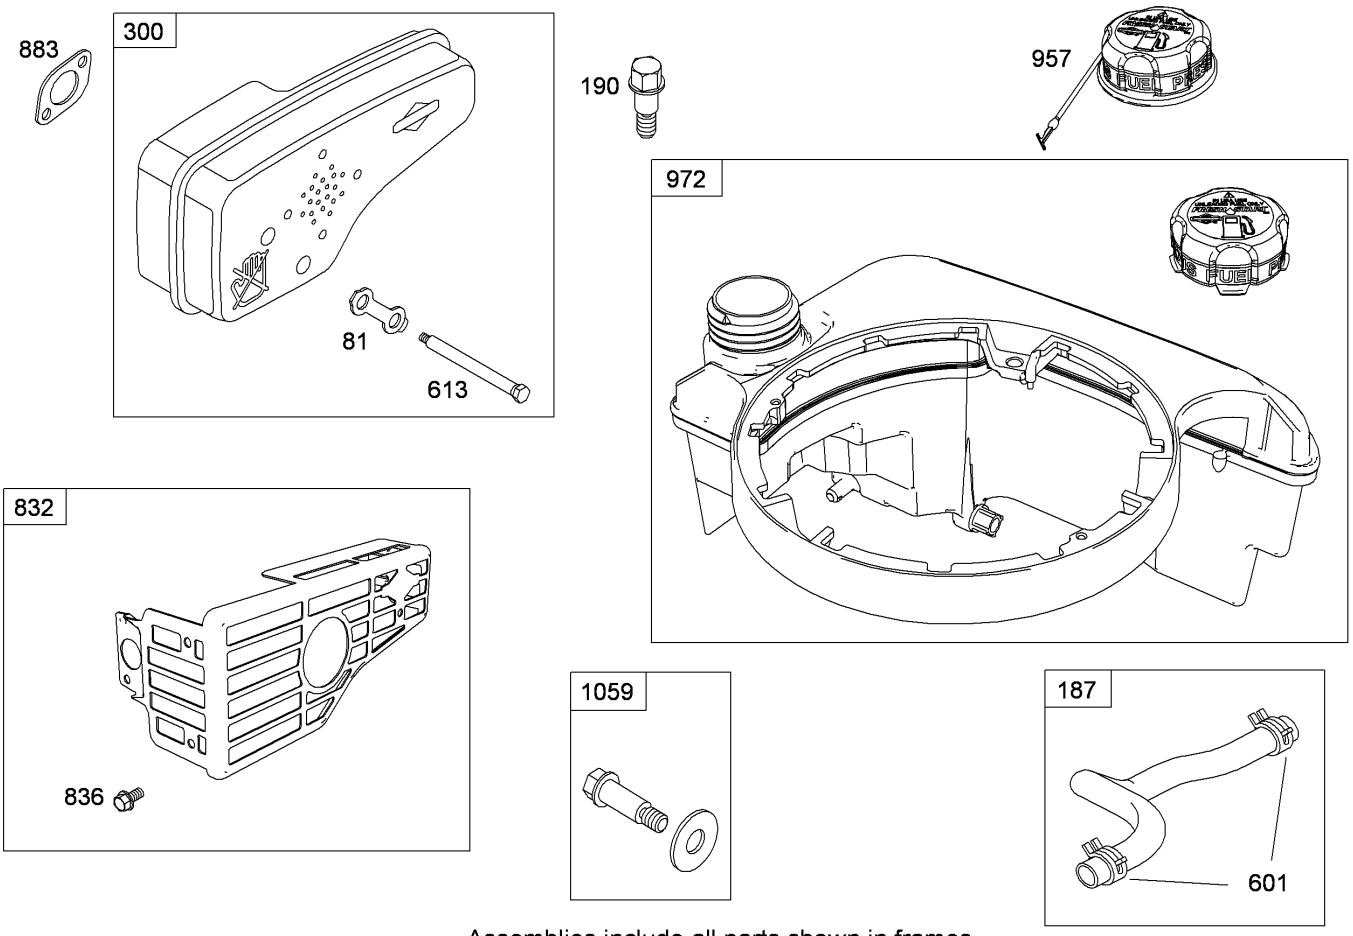


Assemblies include all parts shown in frames


Muffler and Fuel Tank Assembly
Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description
❷81	691740	1	Lock-Screw, Muffler
❷187	791766	1	Line-Fuel (Cut To Required Length)
❷190	690940	1	Screw (Fuel Tank)
❷300	790828	1	Muffler
❷601	791850	1	Clamp-Hose
❷613	790663	1	Screw (Muffler)
❷832	499034	1	Guard-Muffler
❷836	690664	1	Screw (Muffler Guard)
❷❹❺883	691881	1	Gasket-Exhaust
❷957	793606	1	Cap-Tank, Fuel (Fuel Fresh)
❷972	699374	1	Tank-Fuel
❷1059	692311	1	Screw And Washer Kit

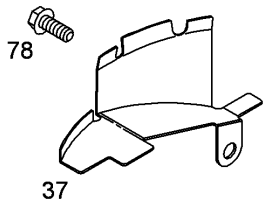


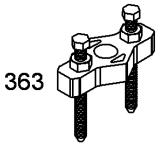





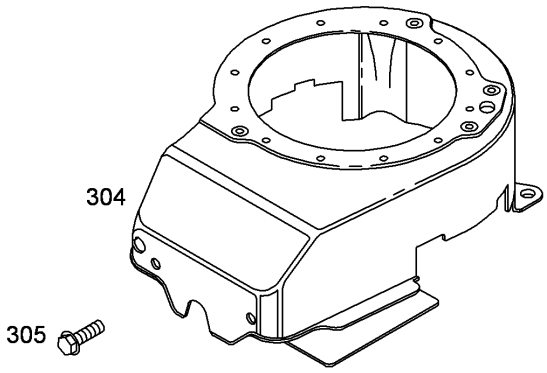

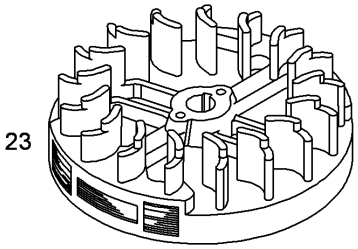


1036	Emissions Label

Assemblies include all parts shown in frames

Blower Housing and Flywheel Assembly
Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description
❷23	691987	1	Flywheel
❷37	793756	1	Guard-Flywheel
❷78	691108	1	Screw (Flywheel Guard)
❷304	790826	1	Housing-Blower
❷305	691108	1	Screw (Blower Housing)
❷332	690662	1	Nut (Flywheel)
❷363	19069	1	Puller-Flywheel
❷455	791760	1	Cup-Flywheel
❷1036		1	Label-Emissions

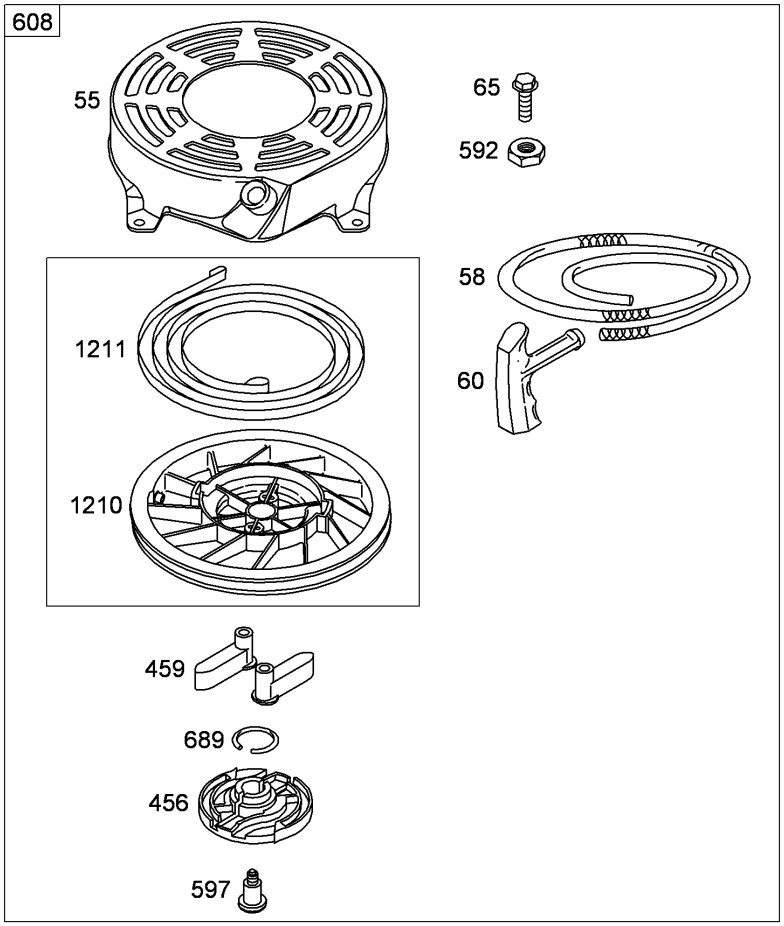

Assemblies include all parts shown in frames

Rewind Starter Assembly
Briggs and Stratton 122T07-2058-B1


Ref	Part No.	Qty.	Description
❷55	691421	1	Housing-Starter, Rewind
❷58	697316	1	Rope-Starter (Cut To Required Length)
❷60	281434s	1	Grip-Rope, Starter
❷65	690837	1	Screw (Rewind Starter)
❷456	692299	1	Plate-Friction, Pawl
❷459	281505s	1	Ratchet-Pawl
❷592	690800	1	Nut (Rewind Starter)
❷597	691696	1	Screw (Pawl Friction Plate)
❷608	497680	1	Starter-Rewind
❷689	691855	1	Spring-Friction
❷1210	498144	1	Pulley And Spring ASM (Pulley)
❷1211	498144	1	Pulley And Spring ASM (Spring)

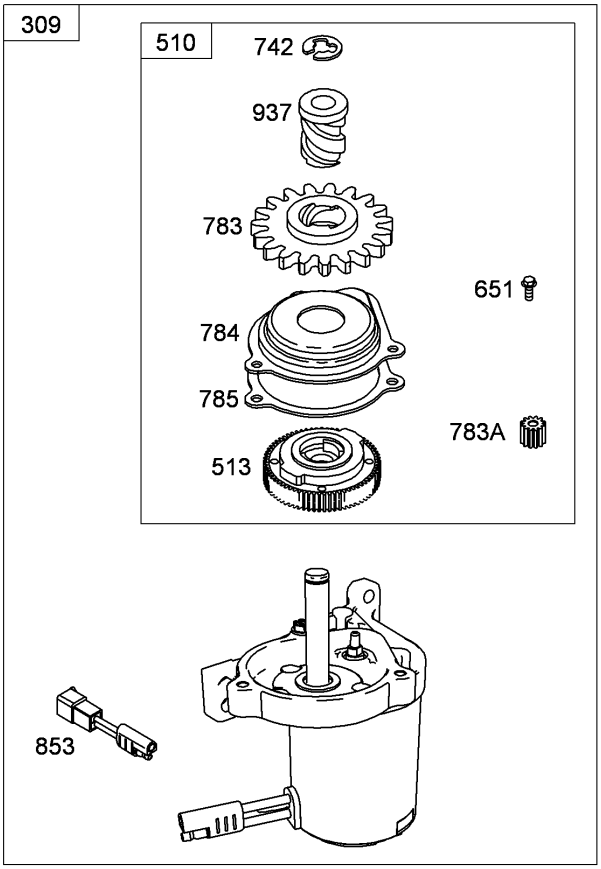



Assemblies include all parts shown in frames

Electric Starter Assembly
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
❷309	795092	1	Motor-Starter
❷510	795093	1	Drive-Starter
❷513	795100	1	Clutch-Drive
❷651	690345	1	Screw (Starter Gear Cover)
❷742	795094	1	Retainer-E Ring
❷783	795096	1	Gear-Pinion
❷783A	691269	1	Gear-Pinion
❷784	795095	1	Cover-Starter Gear
❷785	795097	1	Gasket-Starter Cover
❷853	695268	1	Adapter-Wire
❷937	795098	1	Spline-Starter
❷1009	691127	1	Screw (Starter Motor)

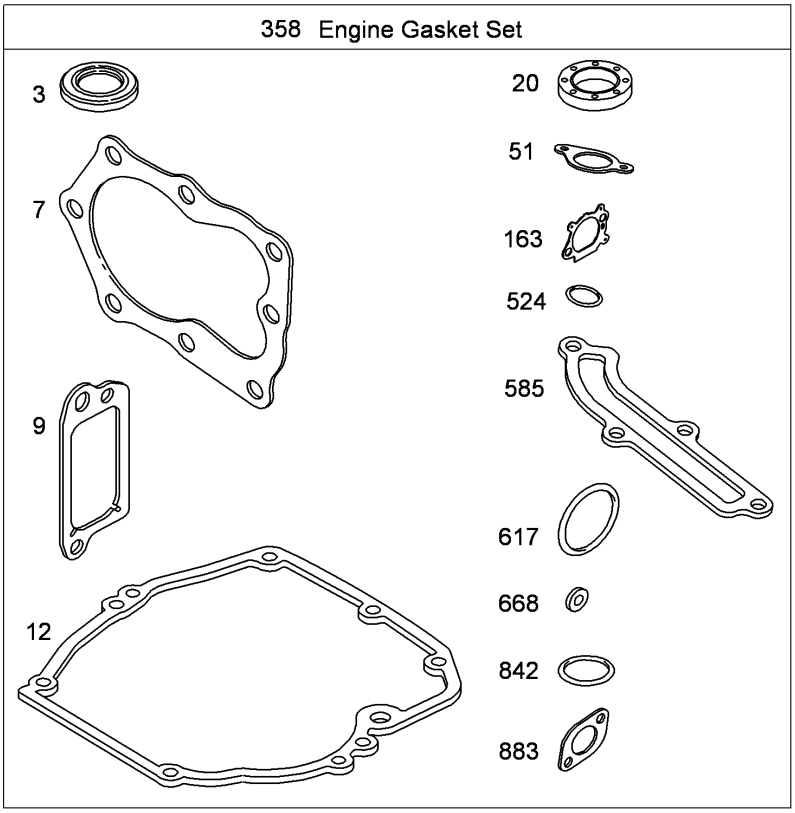

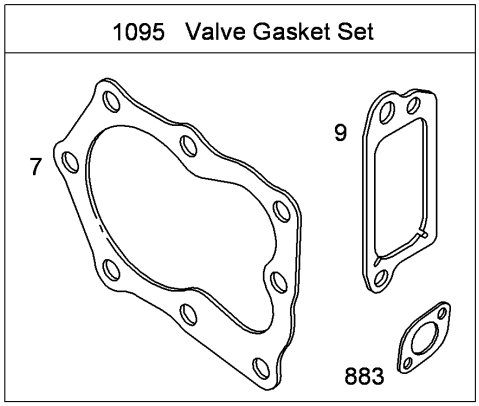

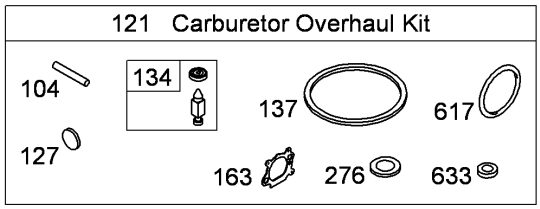

Assemblies include all parts shown in frames

Engine and Valve Gaskets and Carburetor Overhaul Kit
Briggs and Stratton 122T07-2058-B1

Ref	Part No.	Qty.	Description
❷❹3	299819s	1	Seal-Oil (Magneto Side)
❷❹7 ❺	692249	1	Gasket-Head, Cylinder
❷❹9 ❺	699472	1	Gasket-Breather
❷❹12	692232	1	Gasket-Crankcase
❷❹20	399781s	1	Seal-Oil (PTO Side)
❷❹51	272199s	1	Gasket-Intake
❷❺104	691242	1	Pin-Hinge, Float
❷121	498260	1	Carburetor Overhaul Kit
❷❺127	694468	1	Plug-Welch
❷❺134	398188	1	Needle And Seat Kit
❷❺137	693981	1	Gasket-Bowl, Float
❷❺163 ❹	272653s	1	Gasket-Cleaner, Air
❷❺276	271716	1	Washer-Sealing
❷358	497316	1	Engine Gasket Set
❷❹524	692296	1	Seal-O Ring (Dipstick Tube)
❷❹585	691879	1	Gasket-Passage, Breather
❷❺617	270344s	1	Seal-O Ring (Intake Manifold)
❷❺633	691321	1	Seal-Shaft, Choke Throttle
❷❹668	493823	1	Spacer (Control Bracket)
❷❹842	691031	1	Seal-O Ring (Dipstick)
❷❹883 ❺	691881	1	Gasket-Exhaust

Ref	Part No.	Qty.	Description
❷1095	498528	1	Valve Gasket Set

NOTES

NOTES

NOTES


TORO®