Form Number 3352-915 Rev A

DH 210 Lawn Tractor

Model No. 74570 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame and Seat Assembly	4
Front Axle Assembly	6
Steering Assembly	7
Body and Hood Assembly	8
Engine, Muffler and Fuel Tank Assembly	9
Operation - Brake and Bypass Assembly	10
Operation - Travel Pedal Assembly	11
Transmission Drive Assembly	12
Control Shaft Assembly Transmission Assembly No. 104-2889	14
Motor Shaft Assembly Transmission Assembly No. 104-2889	15
Transaxle Case Assembly Transmission Assembly No. 104-2889	16
Differential Gear Assembly Transmission Assembly No. 104-2889	17
Final Pinion Assembly Transmission Assembly No. 104-2889	18
Axle Shaft Assembly Transmission Assembly No. 104-2889	19
Brake Assembly Transmission Assembly No. 104-2889	20
Fan Pulley Assembly Transmission Assembly No. 104-2889	21
Range Shift Assembly Transmission Assembly No. 104-2889	22
Center Case Assembly Transmission Assembly No. 104-2889	23
Pump Shaft Assembly Transmission Assembly No. 104-2889	24
Grass Collector Assembly No. 106-5760	25
Collector Assembly	26
Cutting Pan, Mower Housing Assembly	27
Cutting Pan and Bag on Demand Assembly	28
Cutting Pan and Drive System Assembly	29
Mower Lift Assembly	30
Electrical Assembly	31
Electrical Switch Assembly No. 1	32
Electrical Switch Assembly No. 2	33
Electrical Switch Assembly No. 3	34
Cylinder Assembly Briggs and Stratton 311777-0151-E1	35
Carburetor Overhaul Kit Assembly Briggs and Stratton 311777-0151-E1	36
Cylinder Head Assembly Briggs and Stratton 311777-0151-E1	37
Crankcase Assembly Briggs and Stratton 311777-0151-E1	38
Carburetor Assembly Briggs and Stratton 311777-0151-E1	39
Governor Assembly Briggs and Stratton 311777-0151-E1	40
Oil Filter, Tube, and Pump Assembly Briggs and Stratton 311777-0151-E1	41
Air Cleaner Assembly Briggs and Stratton 311777-0151-E1	42
Blower Housing Assembly Briggs and Stratton 311777-0151-E1	43
Starter Assembly Briggs and Stratton 311777-0151-E1	44


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Included in Gasket Set-Ref. 358.
❹ Included in Carburetor Kit-Ref. 121
❺ Included in Valve Overhaul Kit-Ref. 1033.
❻ Included in Carburetor Gasket Set-Ref. 977.
❼ Obtain from your local Briggs & Stratton dealer

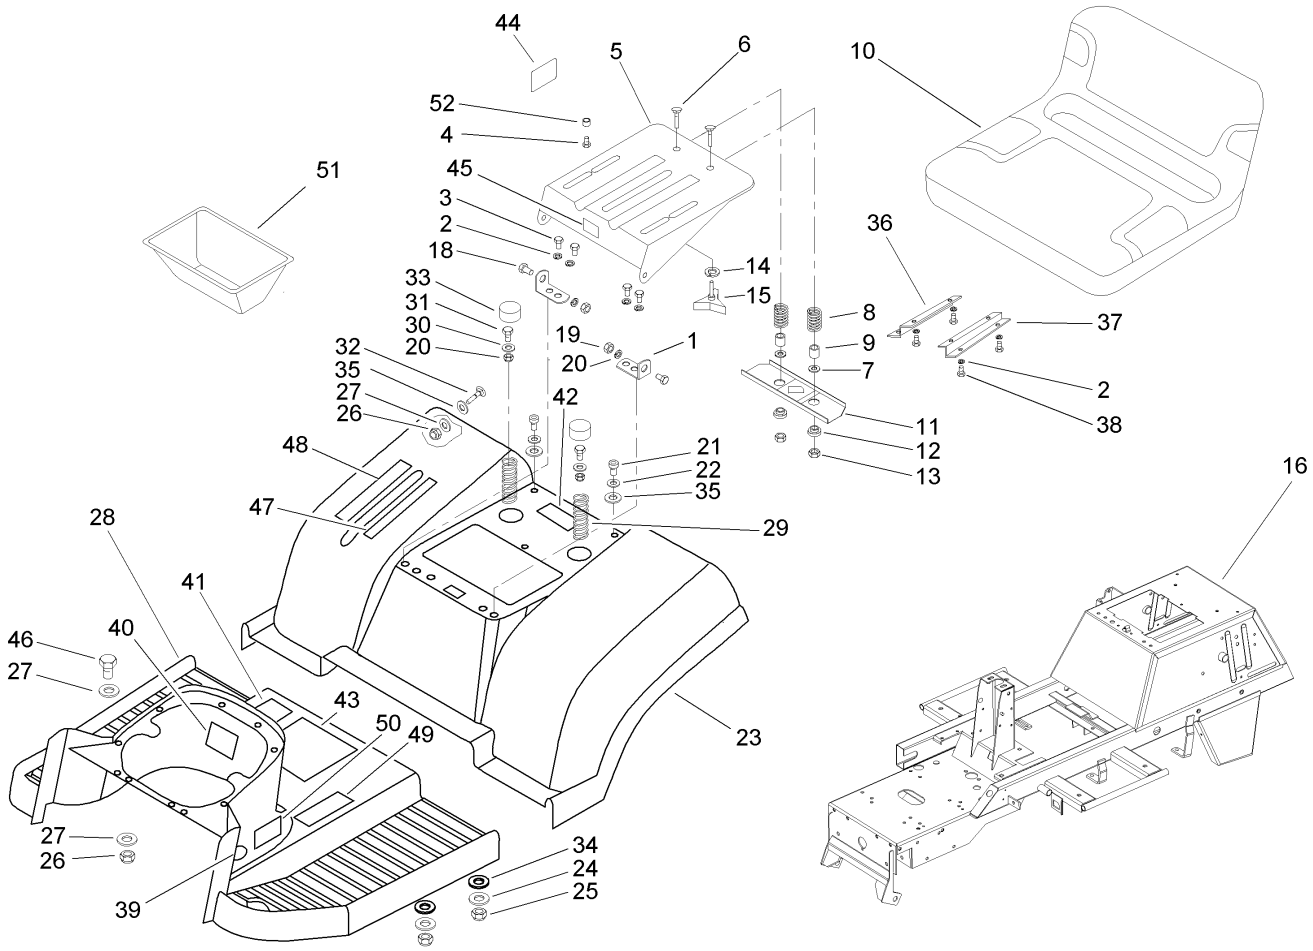

Frame and Seat Assembly


Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	42-9850	8	Washer-Lock, Spring
3	33114-025	10	Screw-HH
4	322-3	2	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2214	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	6	Washer-Plain
20	33024-00	8	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	106-5752	1	Fender
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock

Ref	Part No.	Qty.	Description
26	87-5140	6	Nut-Lock
27	104-2943	6	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	6	Washer-Plain
31	33114-020	2	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	2	Washer-Rubber
35	104-2952	2	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	4	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation

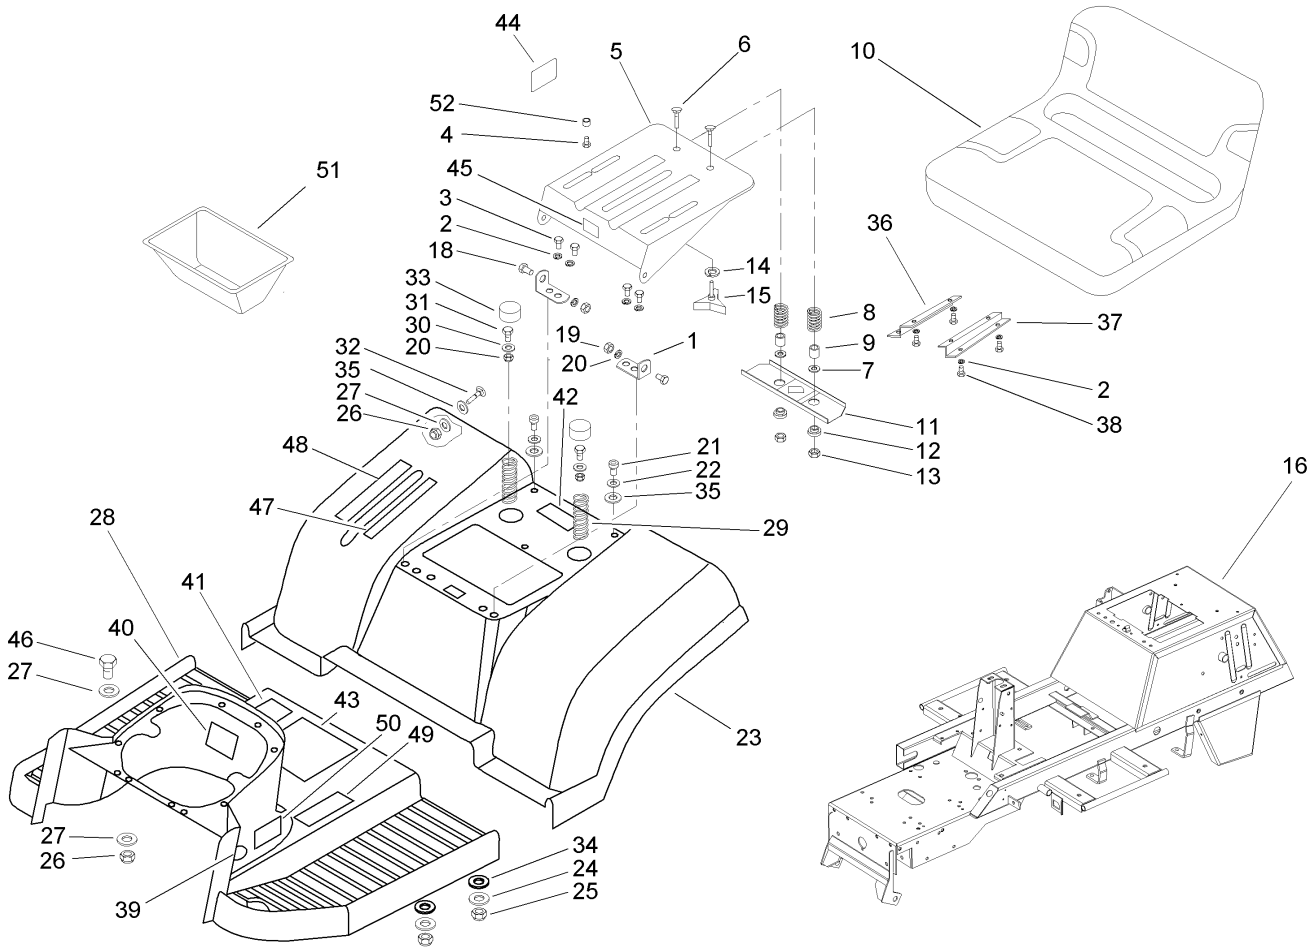

Frame and Seat Assembly (continued)


Ref	Part No.	Qty.	Description
50	107-8975	2	Decal-Tower
51	106-5756	1	Box-Battery
52	107-8924	2	Shim-Seat

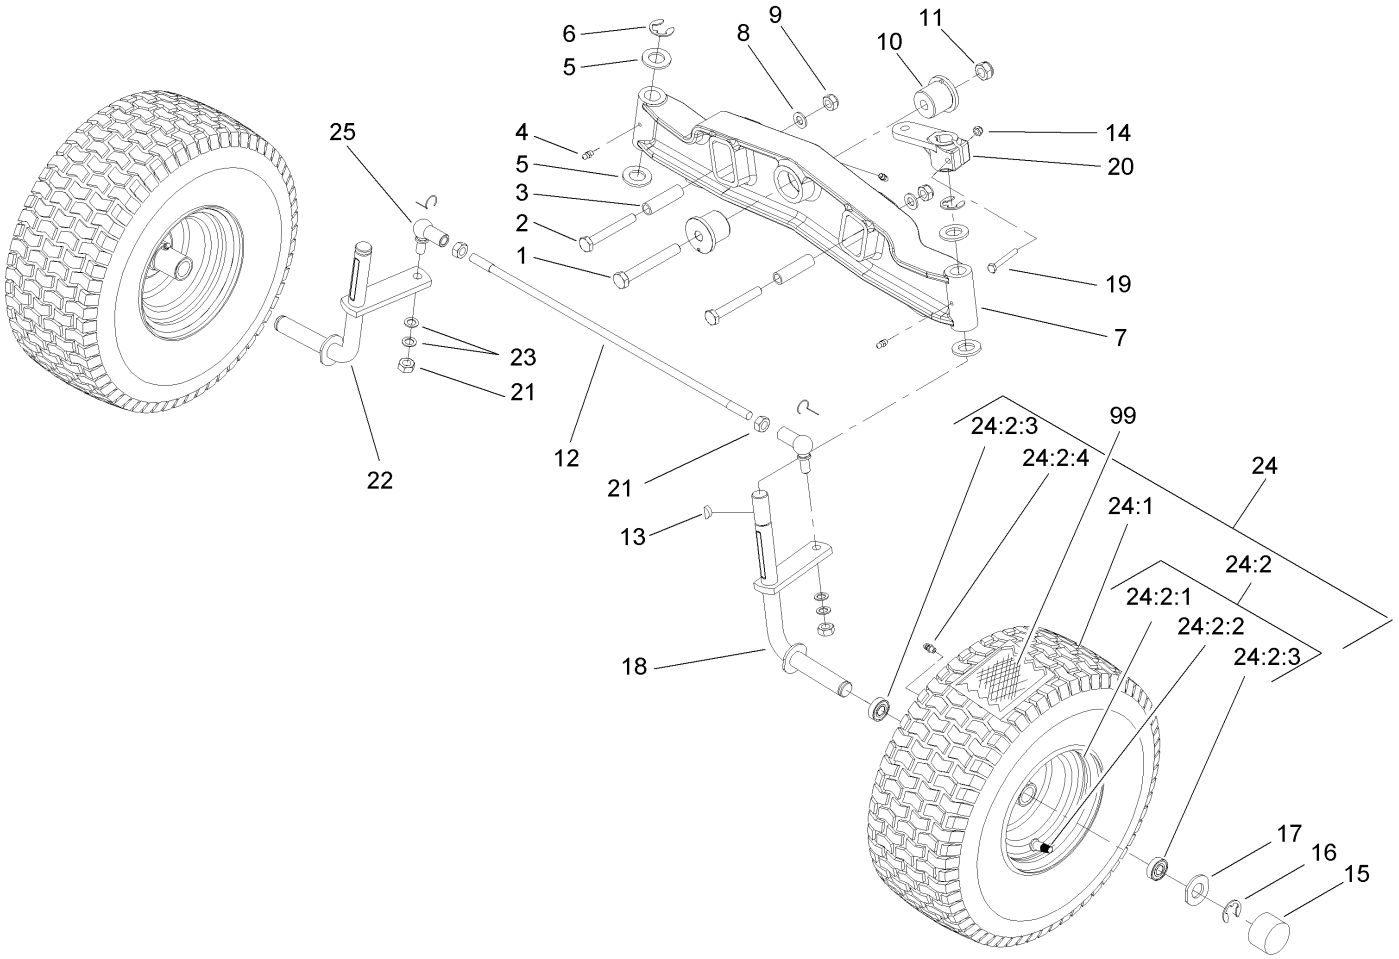

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
9	33025-00	2	Nut-Lock
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Self Locking
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	104-2861	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	4	Nut-Lock
22	104-2867	1	Spindle-RH
23	106-5757	4	Washer
24	107-8930	2	Tire And Wheel ASM

Ref	Part No.	Qty.	Description
24:1	99-3696	1	Tire
24:2	108-8705	1	Wheel ASM
❷24:2:1		1	Rim
24:2:2	106-8596	1	Valve-Tire
24:2:3	110513	2	Bearing-Wheel
❷24:2:4		1	Fitting-Grease
25	104-2876	2	Joint-Ball, Angle
99	112819	1	Tube-Inner

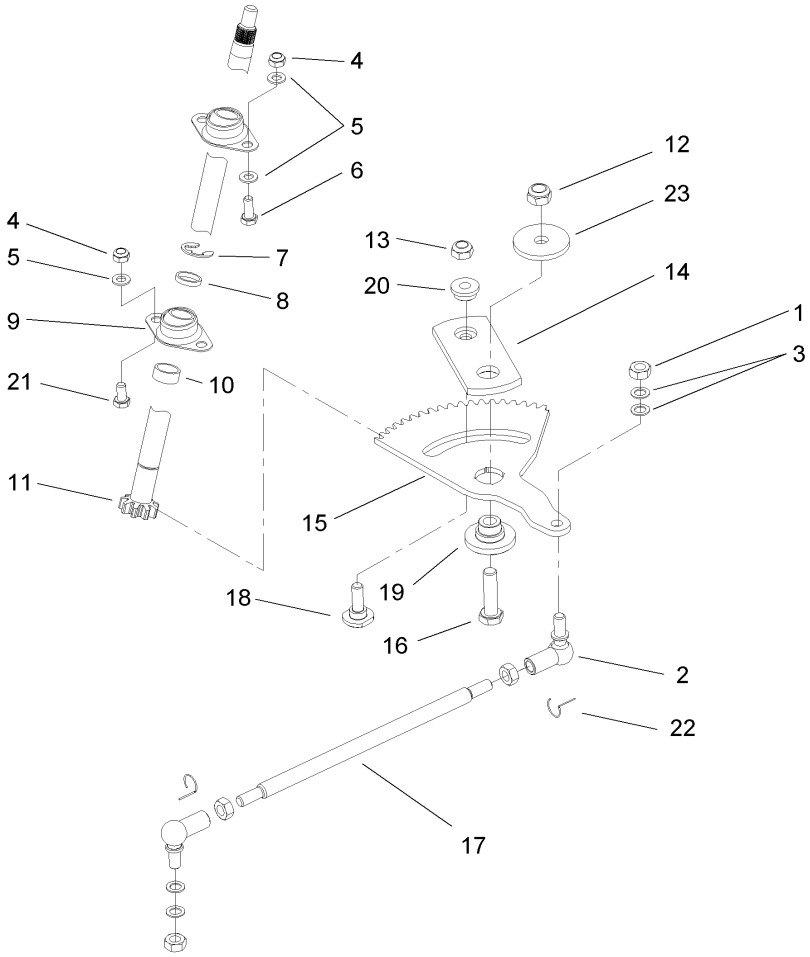

Steering Assembly


Ref	Part No.	Qty.	Description
1	33025-00	4	Nut-Lock
2	104-2876	2	Joint-Ball, Angle
3	106-5757	4	Washer
4	33024-00	4	Nut-Lock
5	33094-00	6	Washer-Plain
6	33114-020	2	Screw-HH
7	104-2891	1	Clip-Spring
8	104-2877	1	Spacer-Upper
9	104-2878	2	Bearing-Spherical
10	104-2879	1	Spacer-Lower
11	106-5773	1	Shaft-Steering
12	33026-00	1	Nut-Lock
13	33025-00	1	Nut-Lock
14	105-1238	1	Plate-Steering
15	104-2883	1	Gear-Sector
16	104-2910	1	Screw-Hex
17	104-2886	1	Link-Drag
18	105-1239	1	Bolt-Shoulder
19	105-1240	1	Pivot-Steering
20	105-1241	1	Bushing
21	33114-016	2	Screw-HH
22	104-2865	2	Stirrups-Locking
23	108-8892	1	Washer

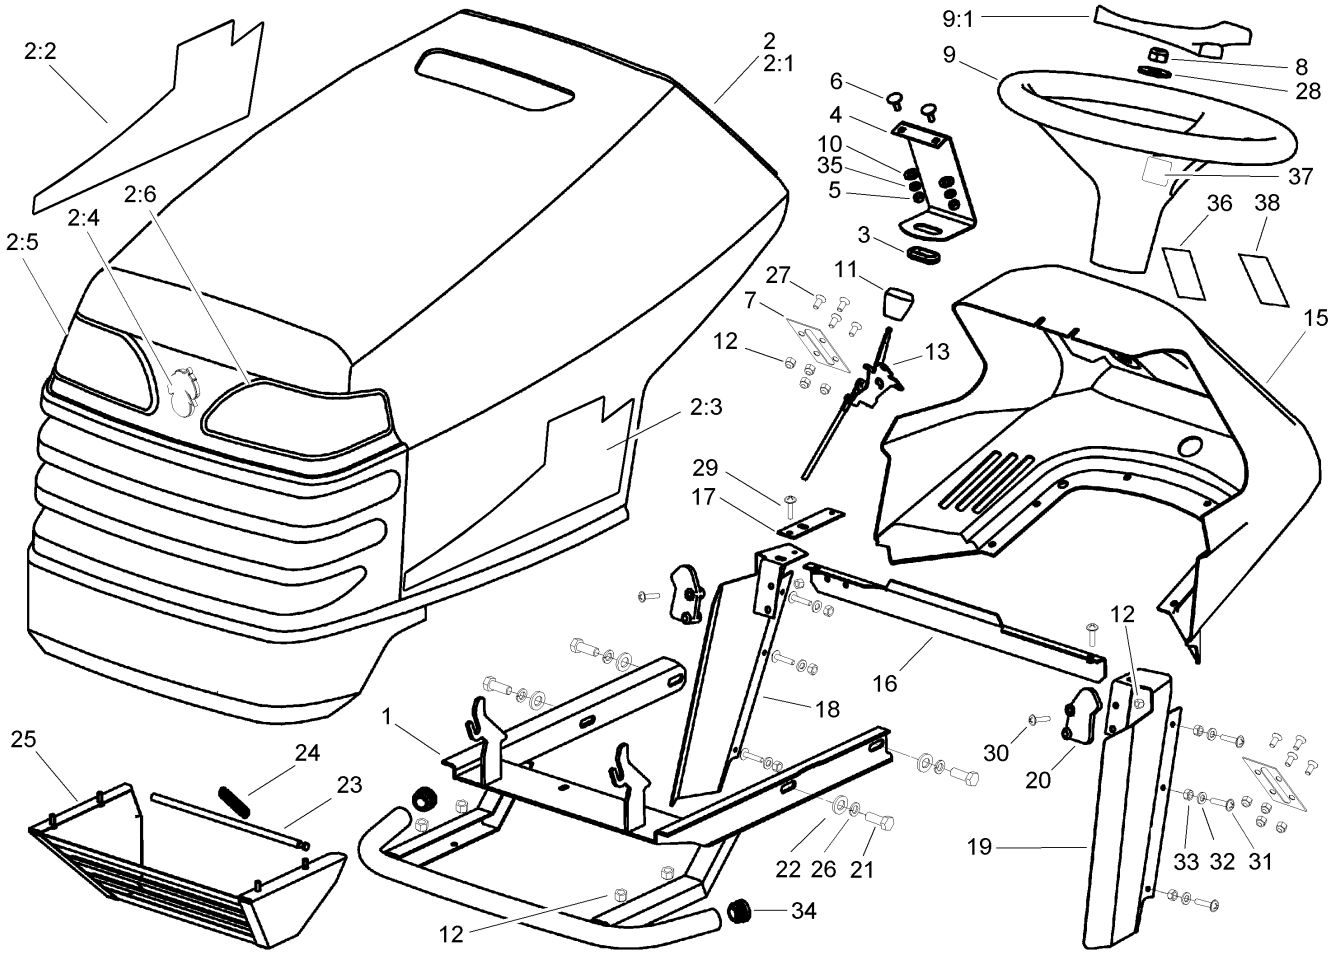

Body and Hood Assembly

Ref	Part No.	Qty.	Description
1	107-2216	1	Support-Bumper
❶2	107-8988	1	Hood-Assembly
3	104-2959	1	Bushing
4	104-2960	1	Holder-Tank, Fuel
5	33023-00	2	Nut-Lock
6	104-2961	2	Screw
7	104-2962	1	Brace
8	33026-00	1	Nut-Lock
9	98-1471	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
10	33094-00	2	Washer-Plain
11	66-0120	1	Knob
12	87-5140	14	Nut-Lock
13	106-4166	1	Cable-Throttle And Choke
15	104-2968	1	Panel-Dash
16	104-2970	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain
23	104-2974	1	Bar-Safety
24	104-2975	1	Spring-Hood


Ref	Part No.	Qty.	Description
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	4	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
30	104-2981	4	Screw
31	107-8918	6	Screw
32	104-3175	6	Washer
33	104-2985	6	Nut-Hex
34	107-8943	2	End Cap-Tube
35	43-5930	2	Washer-Spring
36	104-3236	1	Decal-Choke/Throttle/Key
37	98-1459	1	Decal
38	104-3235	1	Decal-PTO

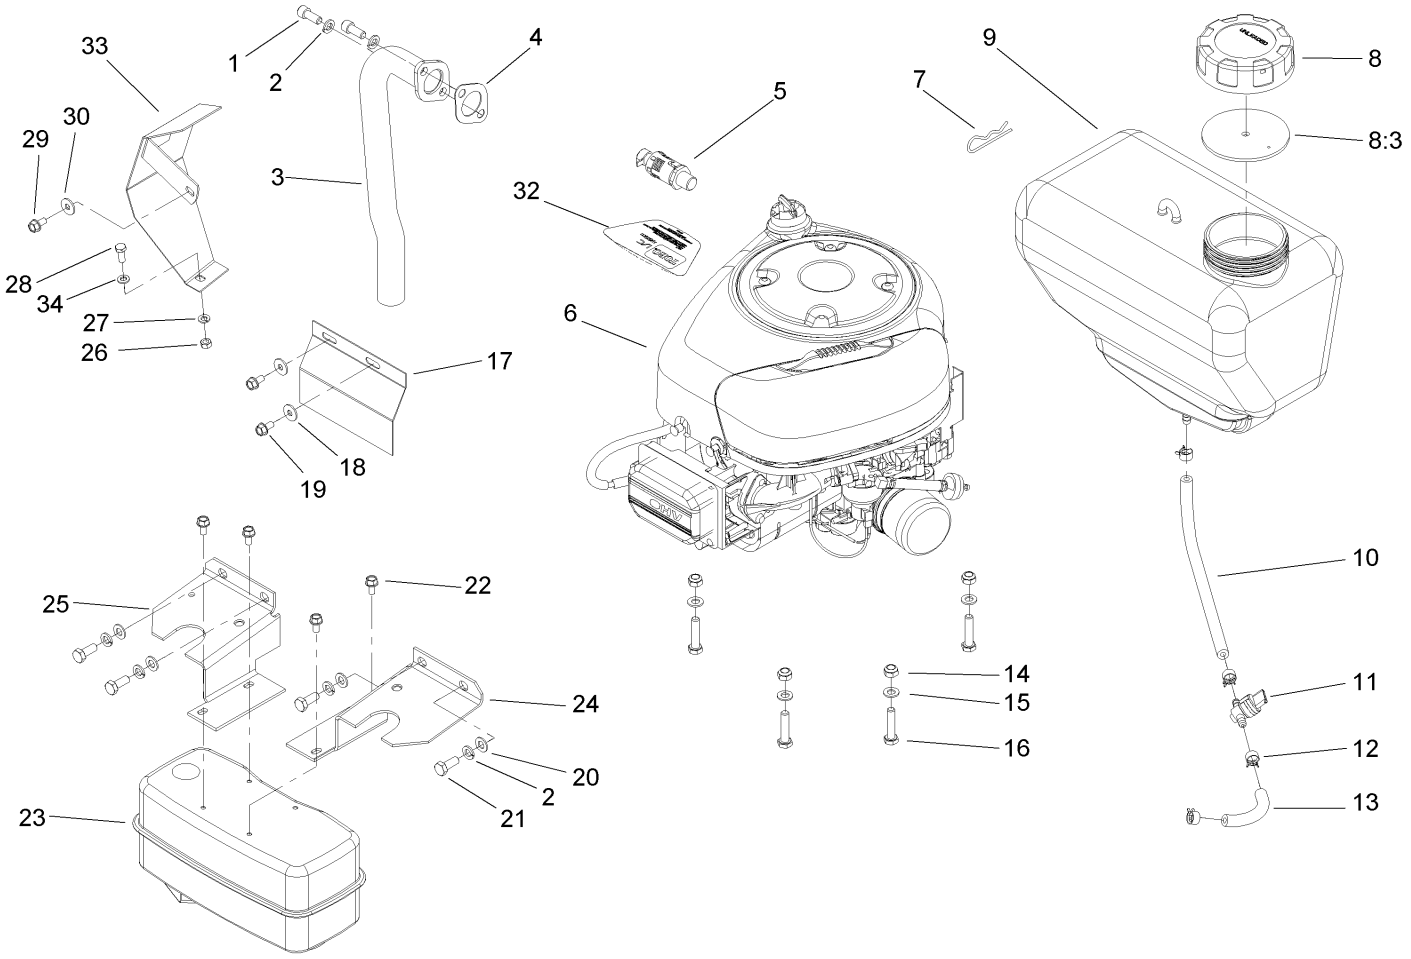

Engine, Muffler and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	322-3	2	Screw-HH
2	42-9850	6	Washer-Lock, Spring
3	104-3221	1	Tube-Exhaust
4	88-4410	1	Gasket-Muffler
5	104-3208	1	Valve-Oil Drain
❷❼6		1	Engine-Briggs And Stratton, 311777-0151-E1
7	104-3144	1	Pin-Hair
8	88-3980	1	Gas Cap ASM
8:3	88-4010	1	Gasket-Cap, Gas
9	104-3057	1	Tank-Fuel
10	104-3211	1	Line-Fuel
11	104-3224	1	Valve-Tank, Fuel
12	104-3212	4	Clamp-Line, Fuel
13	104-3213	1	Line-Fuel
14	33024-00	4	Nut-Lock
15	33094-00	4	Washer-Plain
16	33114-035	4	Screw-HH
17	104-3222	1	Cover-Front
18	104-2931	2	Washer-Flat
19	106-5763	2	Screw
20	33094-00	4	Washer-Plain
21	33114-020	4	Screw-HH
22	106-5763	4	Screw


Ref	Part No.	Qty.	Description
23	104-3229	1	Muffler
24	104-3214	1	Guard-Muffler, LH
25	104-3215	1	Guard-Muffler, RH
26	33013-00	1	Nut-Hex
27	104-3186	1	Washer-Spring
28	33113-016	1	Screw-HH
29	106-5763	1	Screw
30	104-2931	1	Washer-Flat
32	107-4906	1	Decal-Engine
33	105-1242	1	Cover-Manifold, Exhaust
34	33093-00	1	Washer-Flat

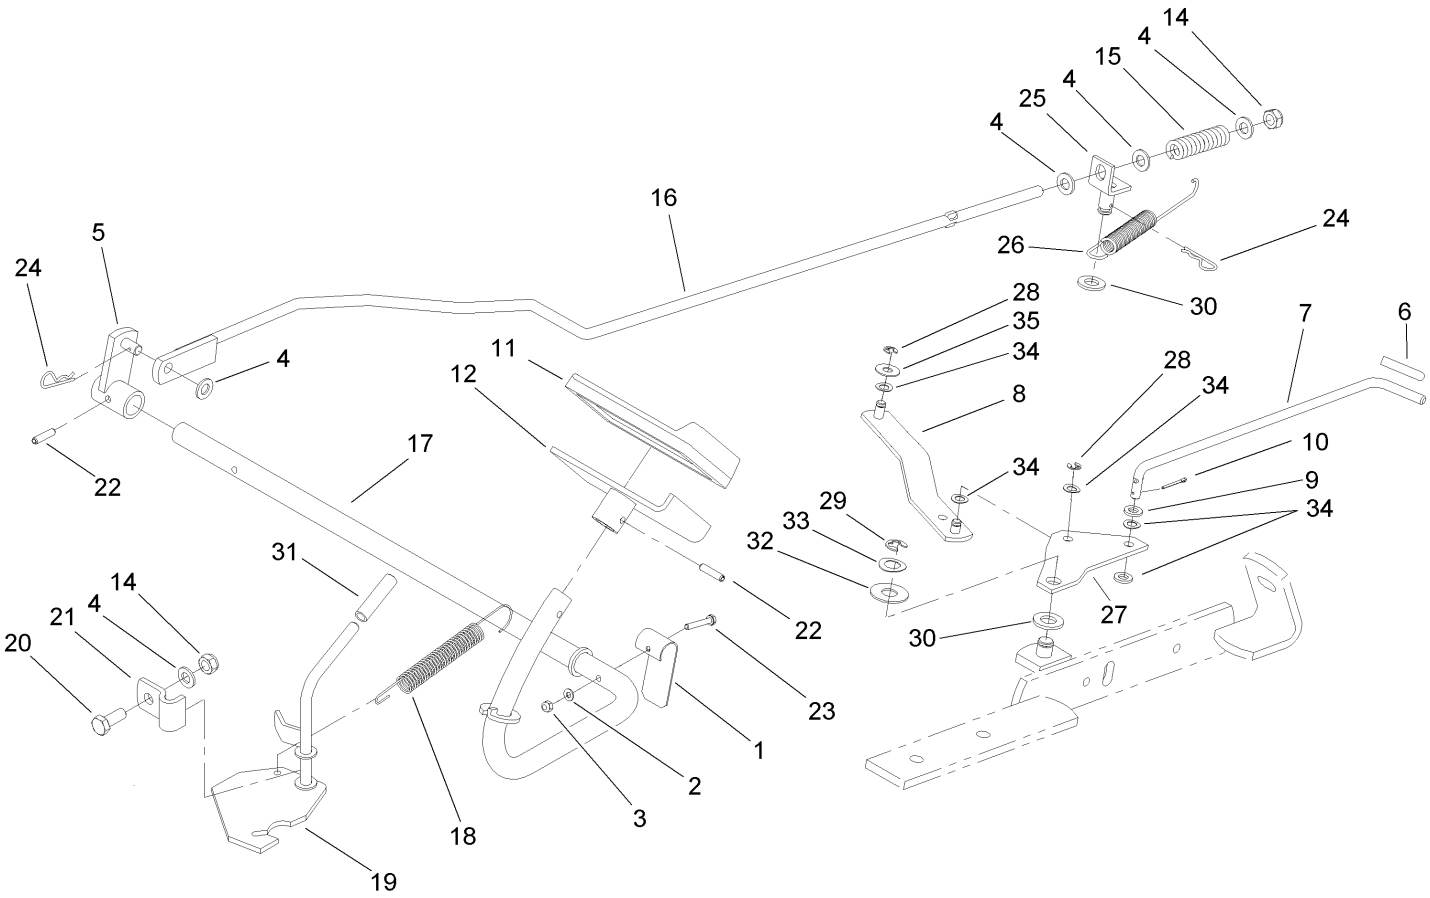

Operation - Brake and Bypass Assembly


Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	104-3324	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-2998	1	Pad-Pedal
12	104-2999	1	Pedal
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3004	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

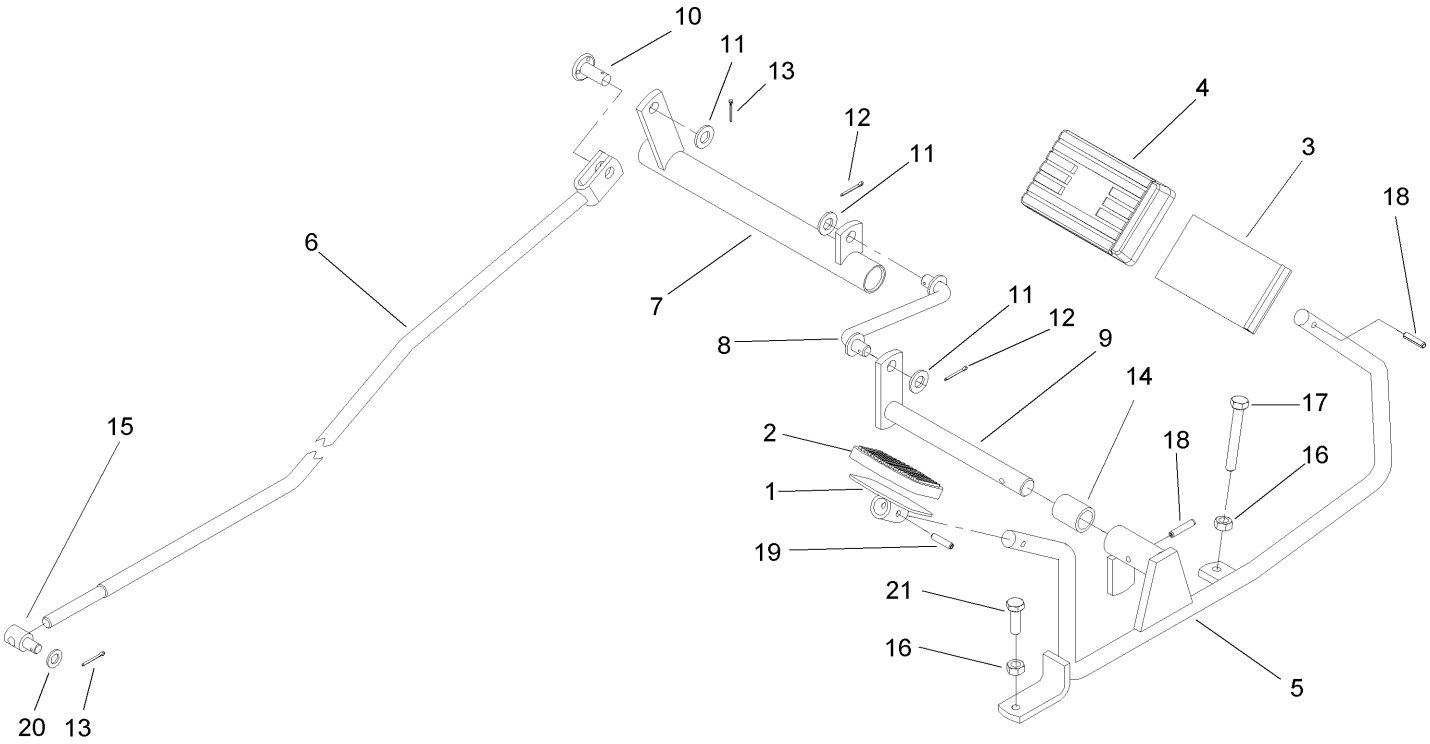

Operation - Travel Pedal Assembly


Ref	Part No.	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	1	Pad-Pedal
3	104-3019	1	Pedal-Travel, Front
4	104-3020	1	Pad-Pedal, Front
5	104-3021	1	Pad-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	104-3026	1	Pin
11	33095-00	3	Washer-Flat
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	2	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer
21	33114-025	1	Screw-HH

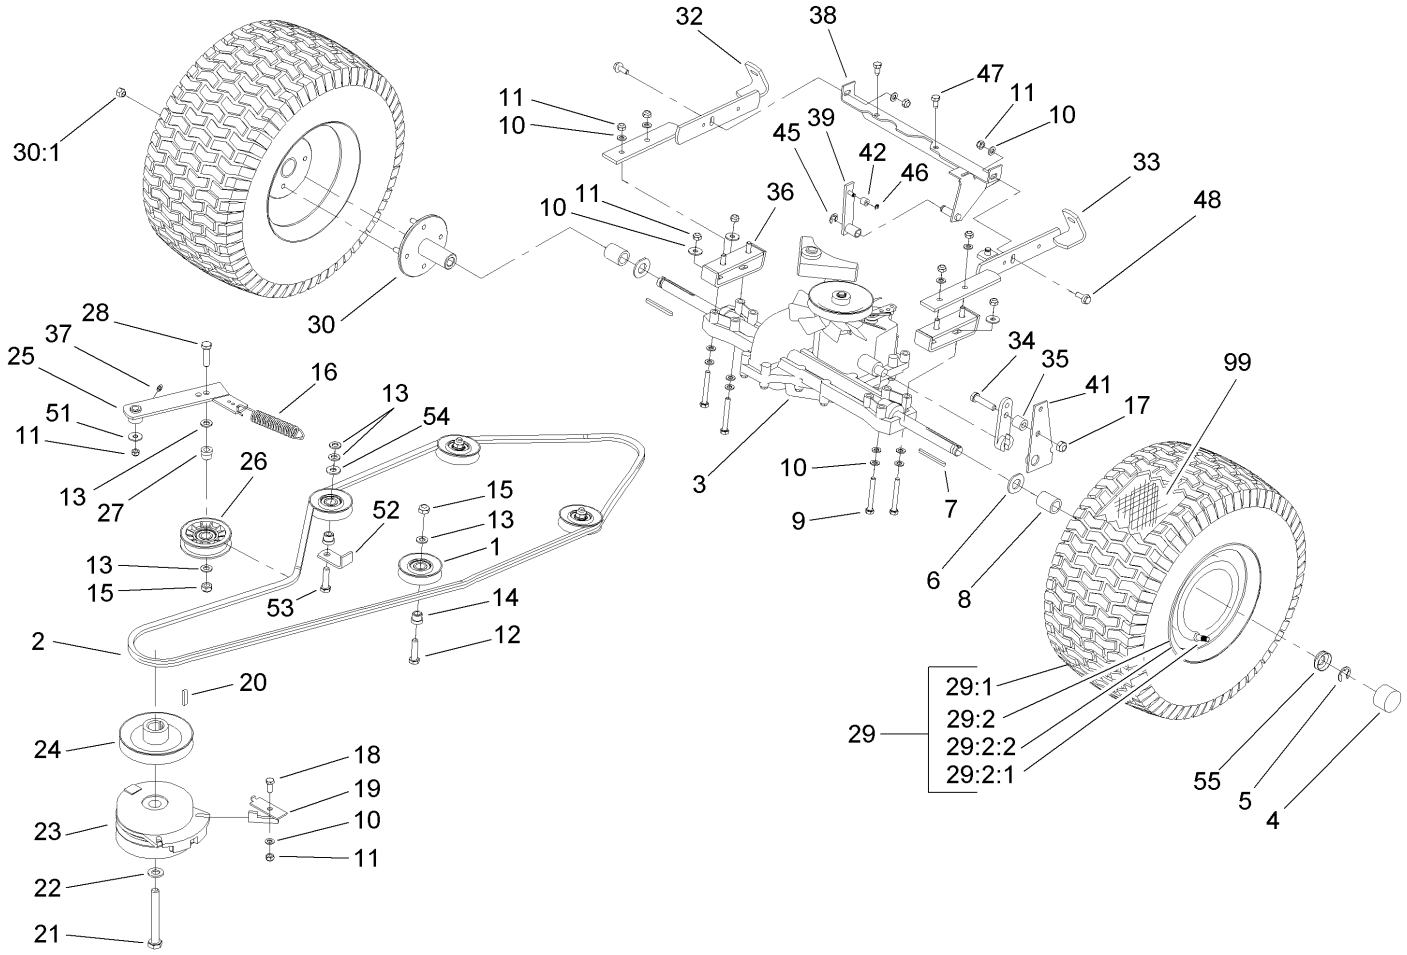

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	104-2889	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	10	Washer-Plain
11	33024-00	6	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	7	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
❶29	107-8929	2	Tire And Wheel ASM
29:1	99-2994	1	Tire
29:2	107-8932	1	Wheel ASM
❷29:2:1		1	Rim
29:2:2	106-8596	1	Valve-Tire
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	104-3343	2	Plate-Reinforcing
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
41	104-3326	1	Tenon
42	104-3329	1	Roller
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming

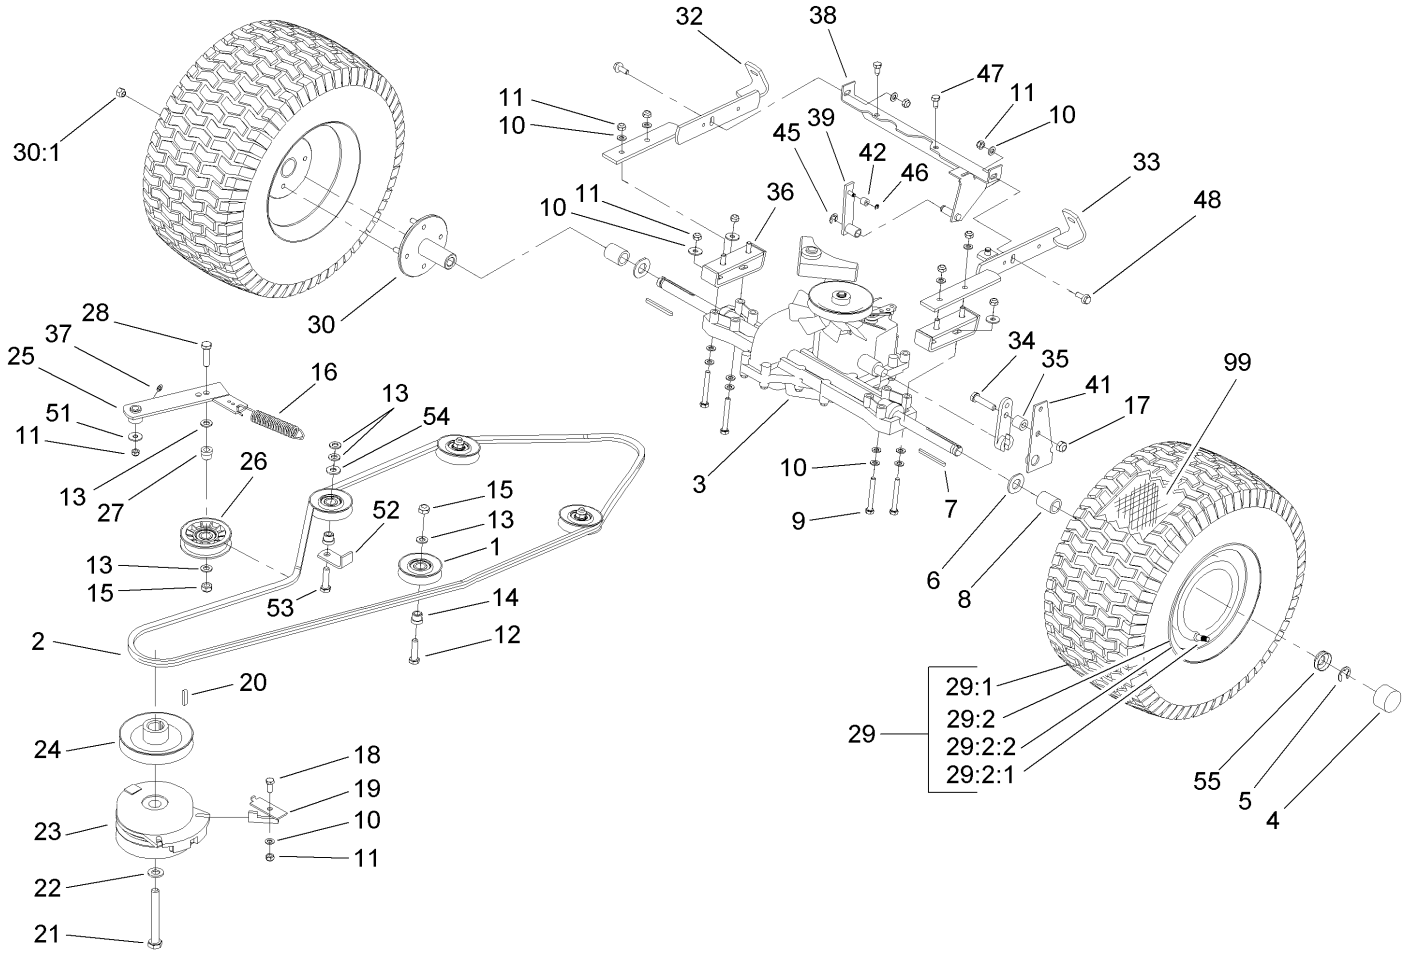


Transmission Drive Assembly (continued)

Ref	Part No.	Qty.	Description
48	104-3065	2	Screw-Hex
51	104-2946	2	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	107-8998	2	Retainer-Cap, Hub
99	232-37	1	Tube

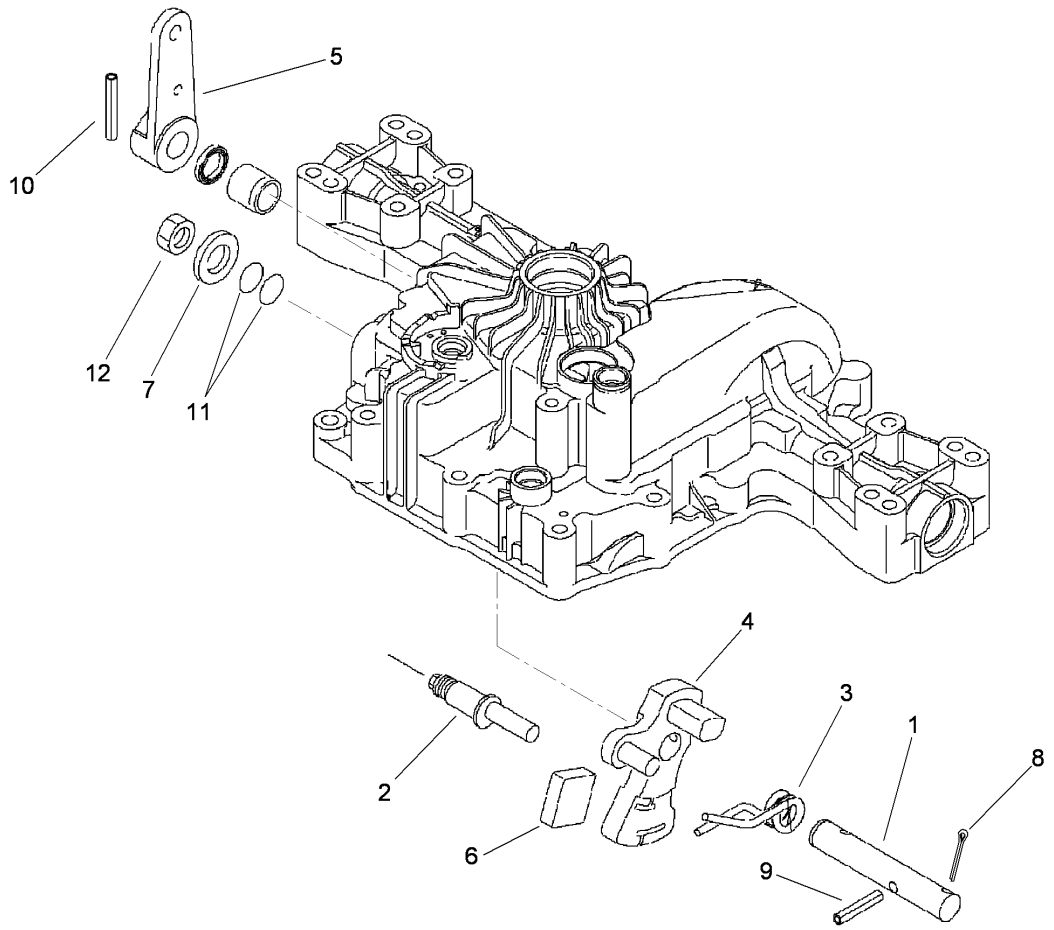


Control Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	104-3293	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

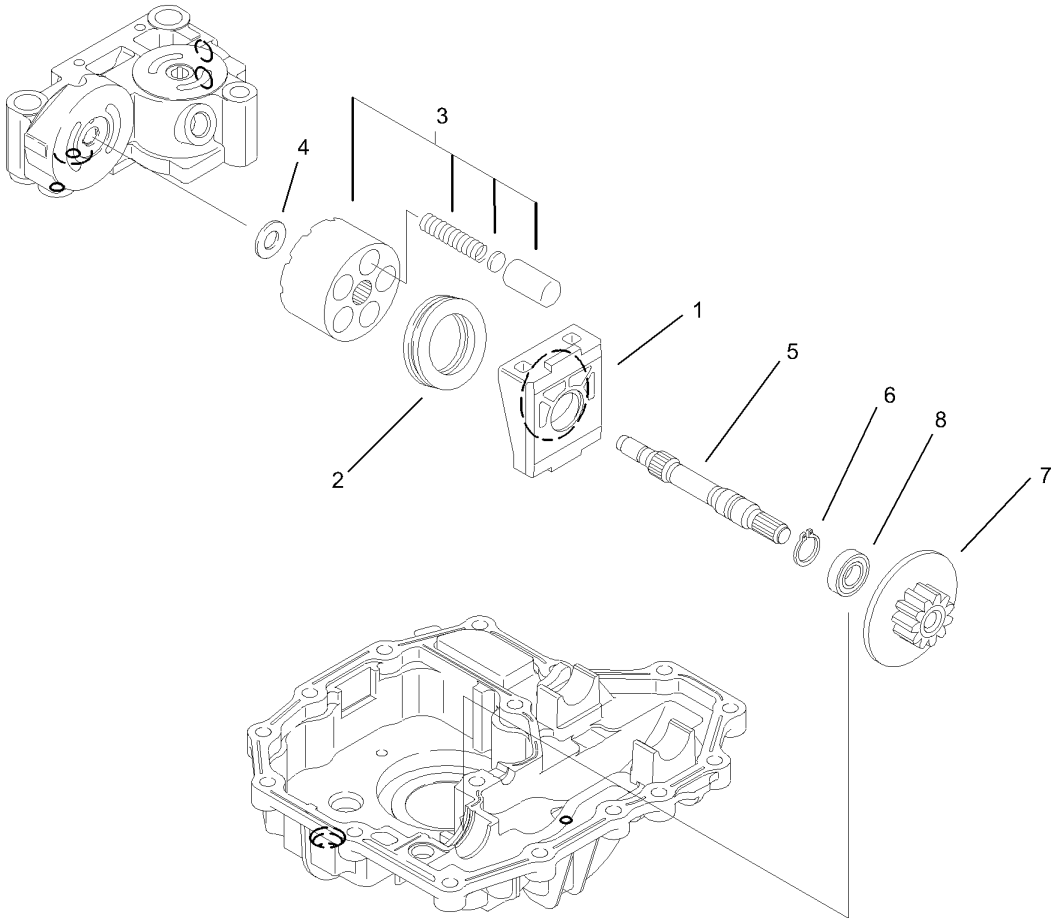


Motor Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

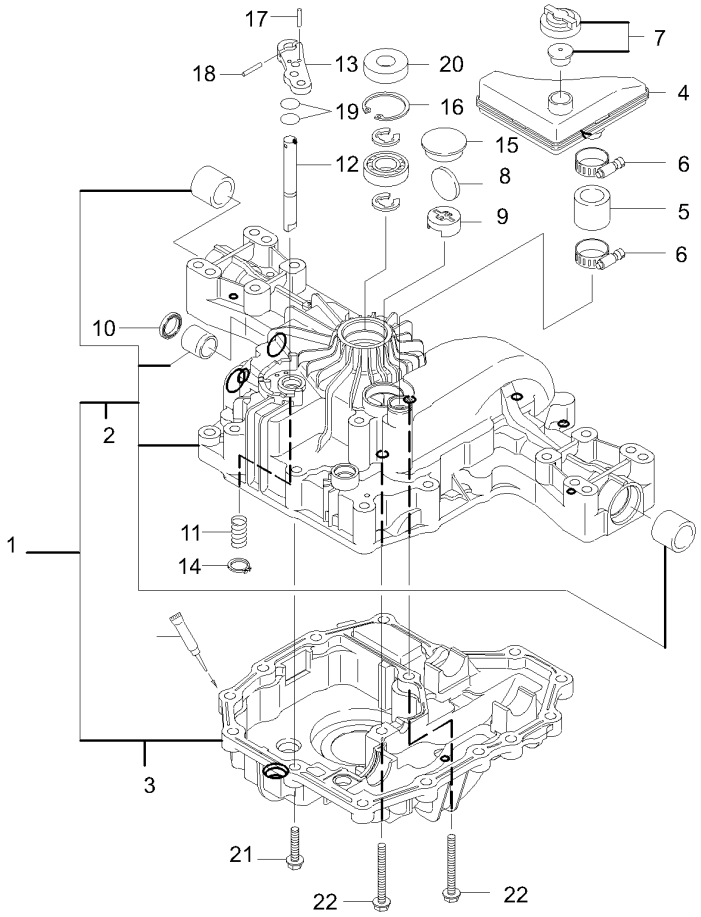


Transaxle Case Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Tank-Reservoir, With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-TAP

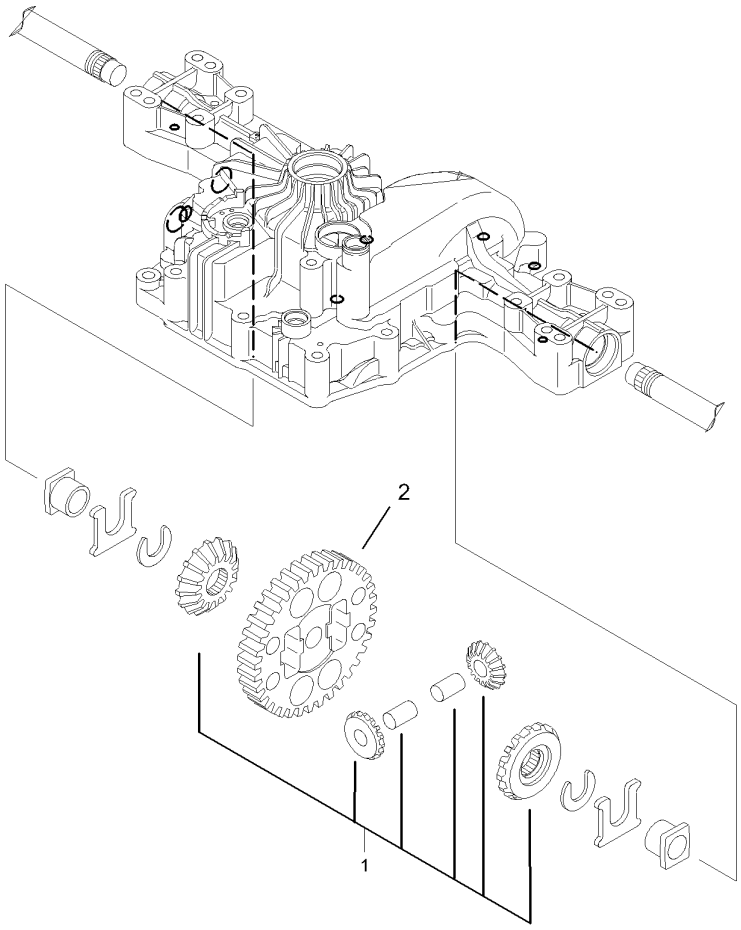


Differential Gear Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

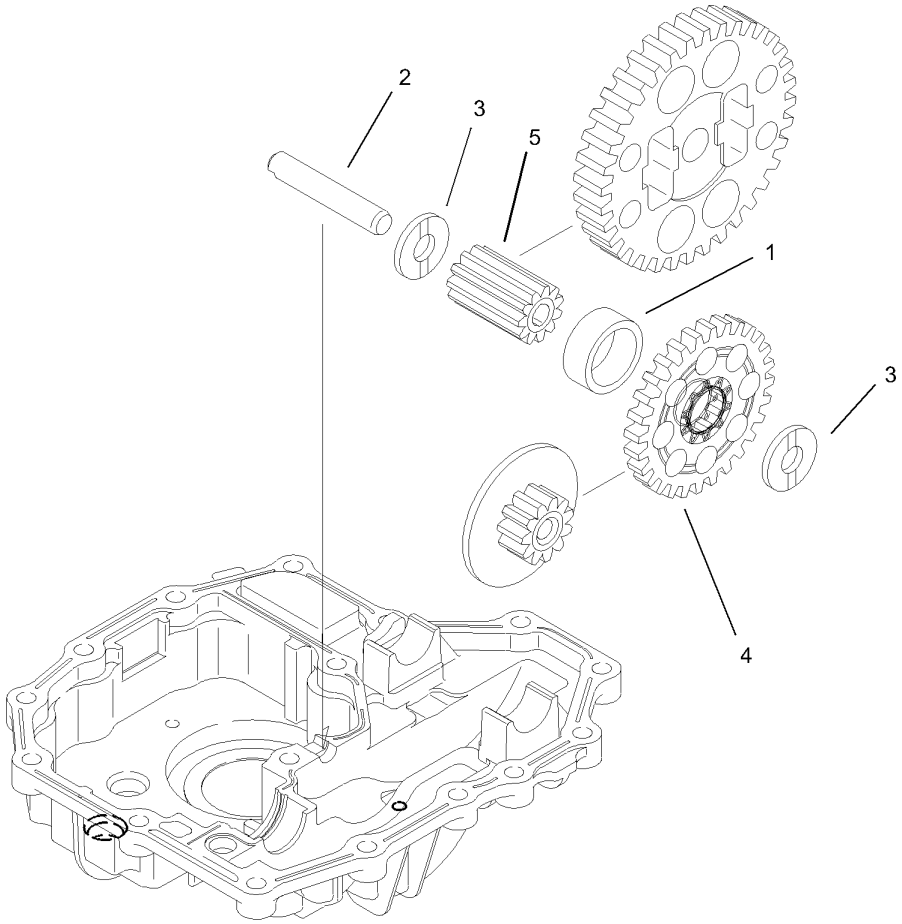


Final Pinion Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

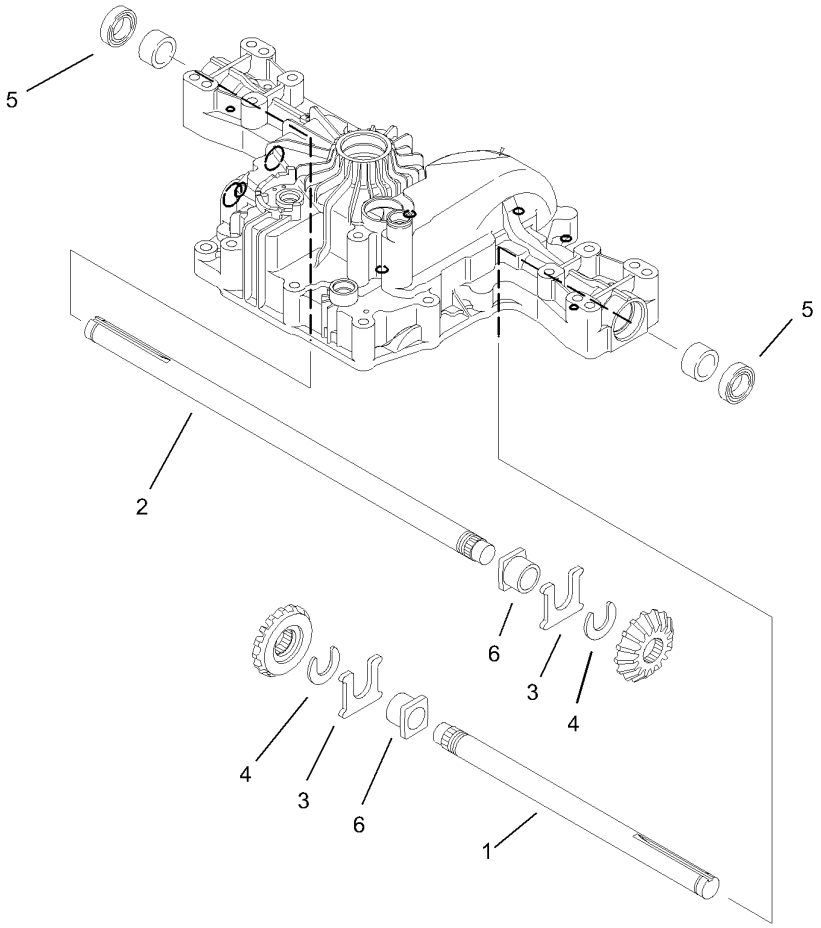


Axle Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

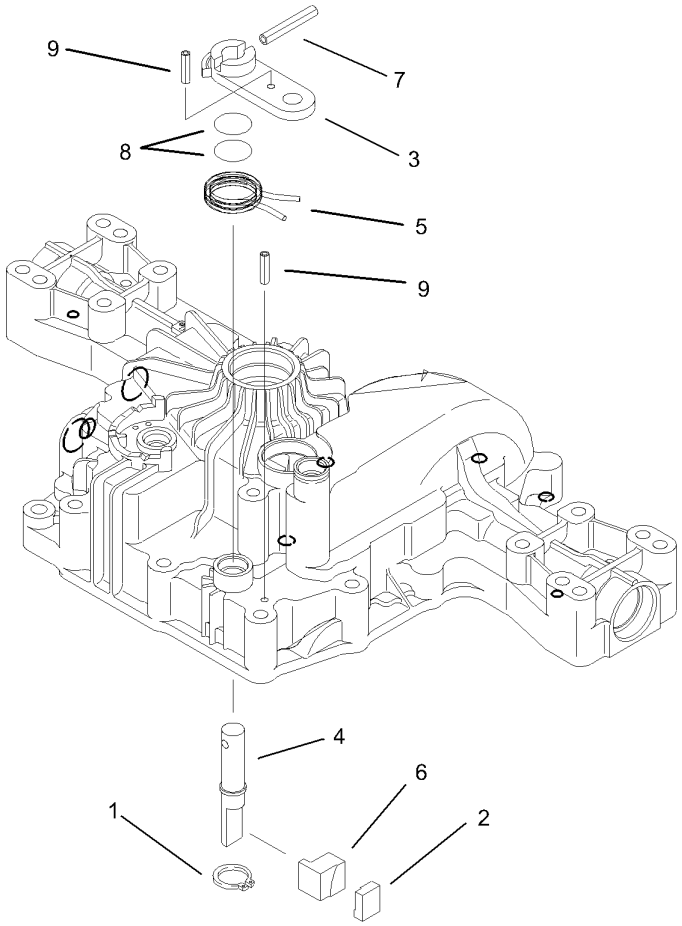


Brake Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	92-0786	2	O-Ring
9	104-3319	2	Pin

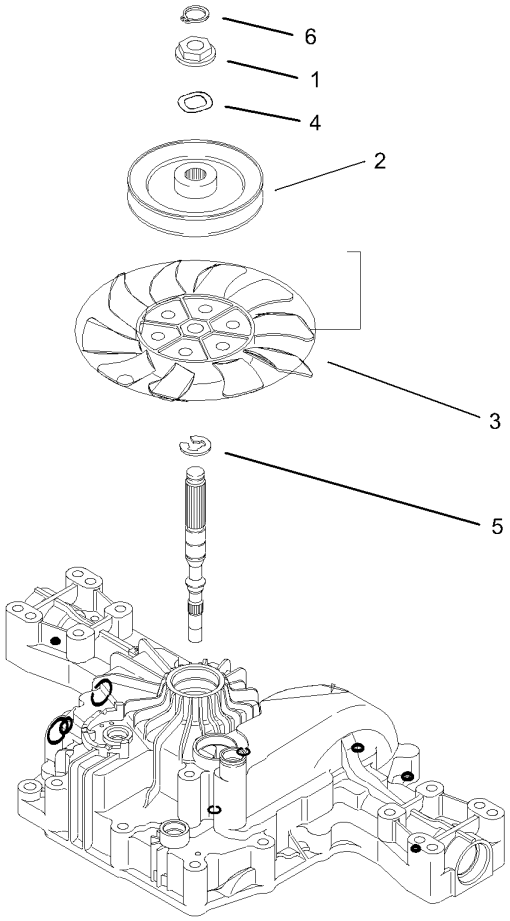


Fan Pulley Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan- Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

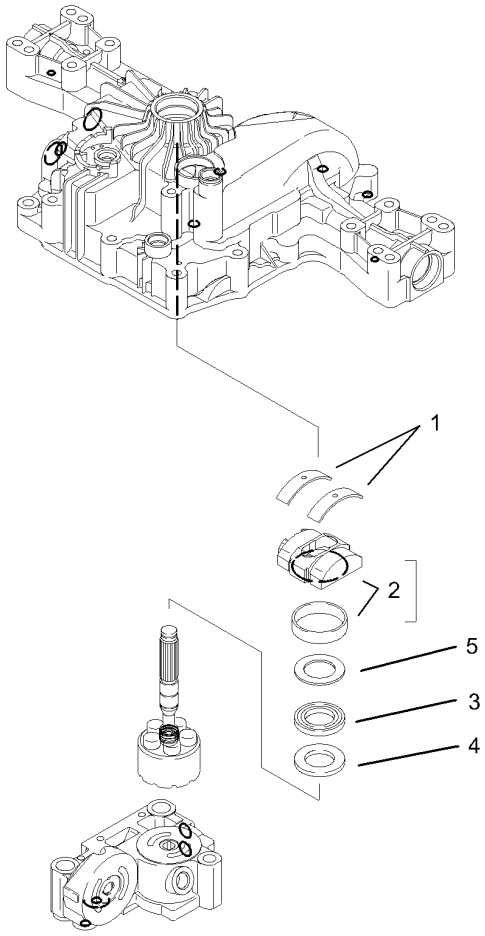


Range Shift Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

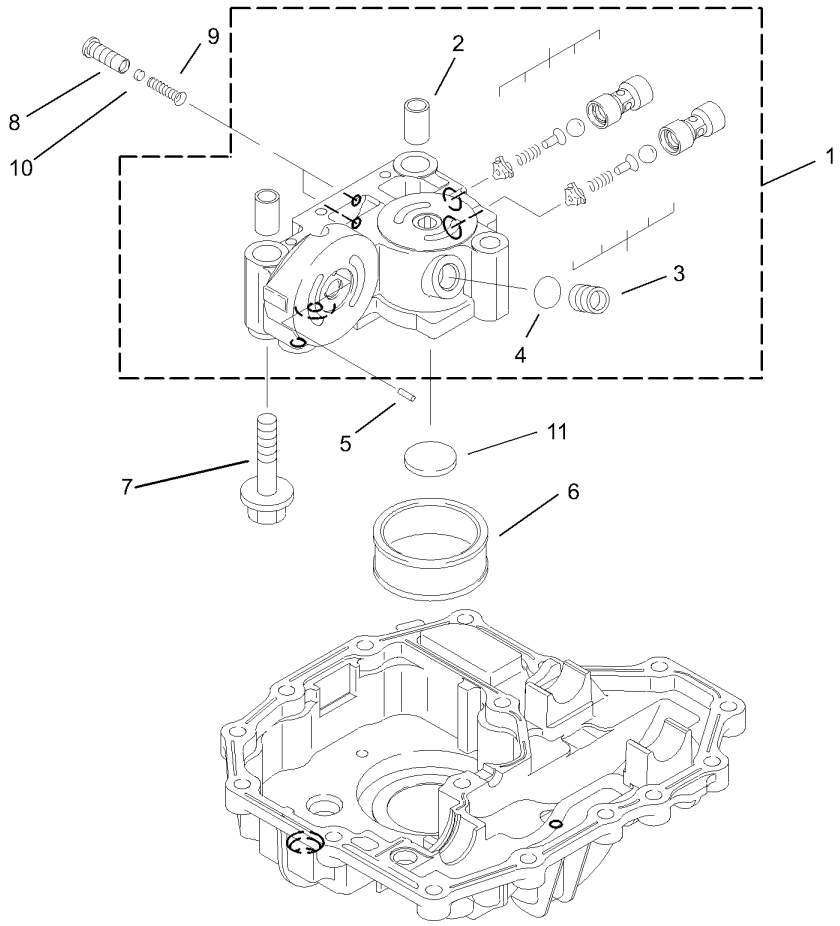


Center Case Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

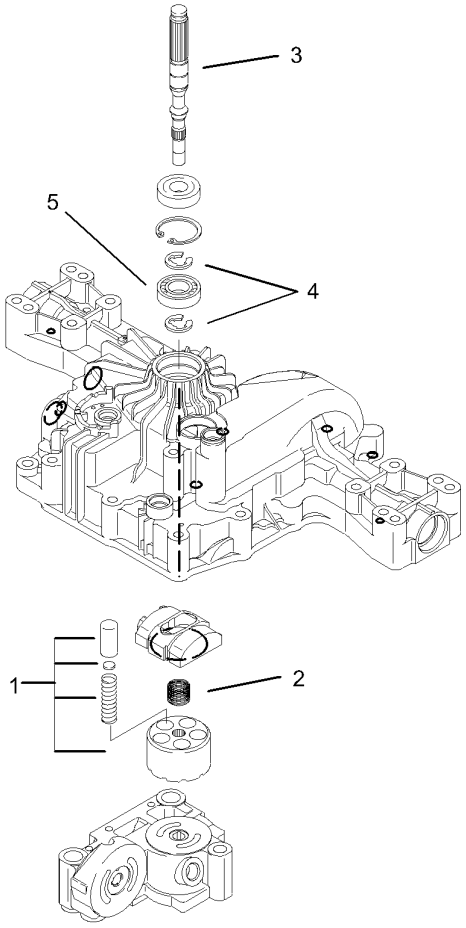

Pump Shaft Assembly
Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

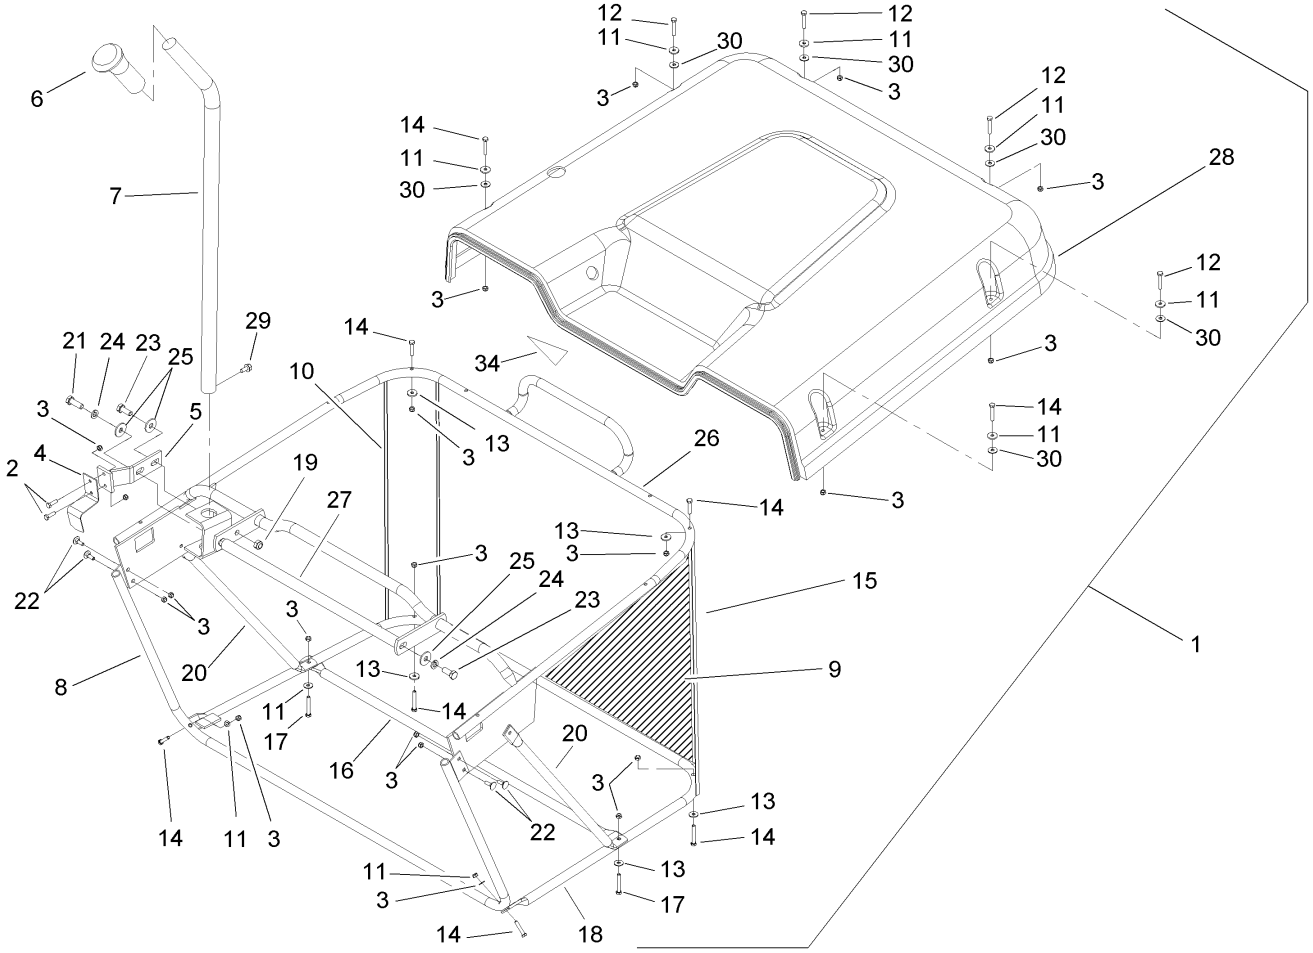

Grass Collector Assembly No. 106-5760

Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring


Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

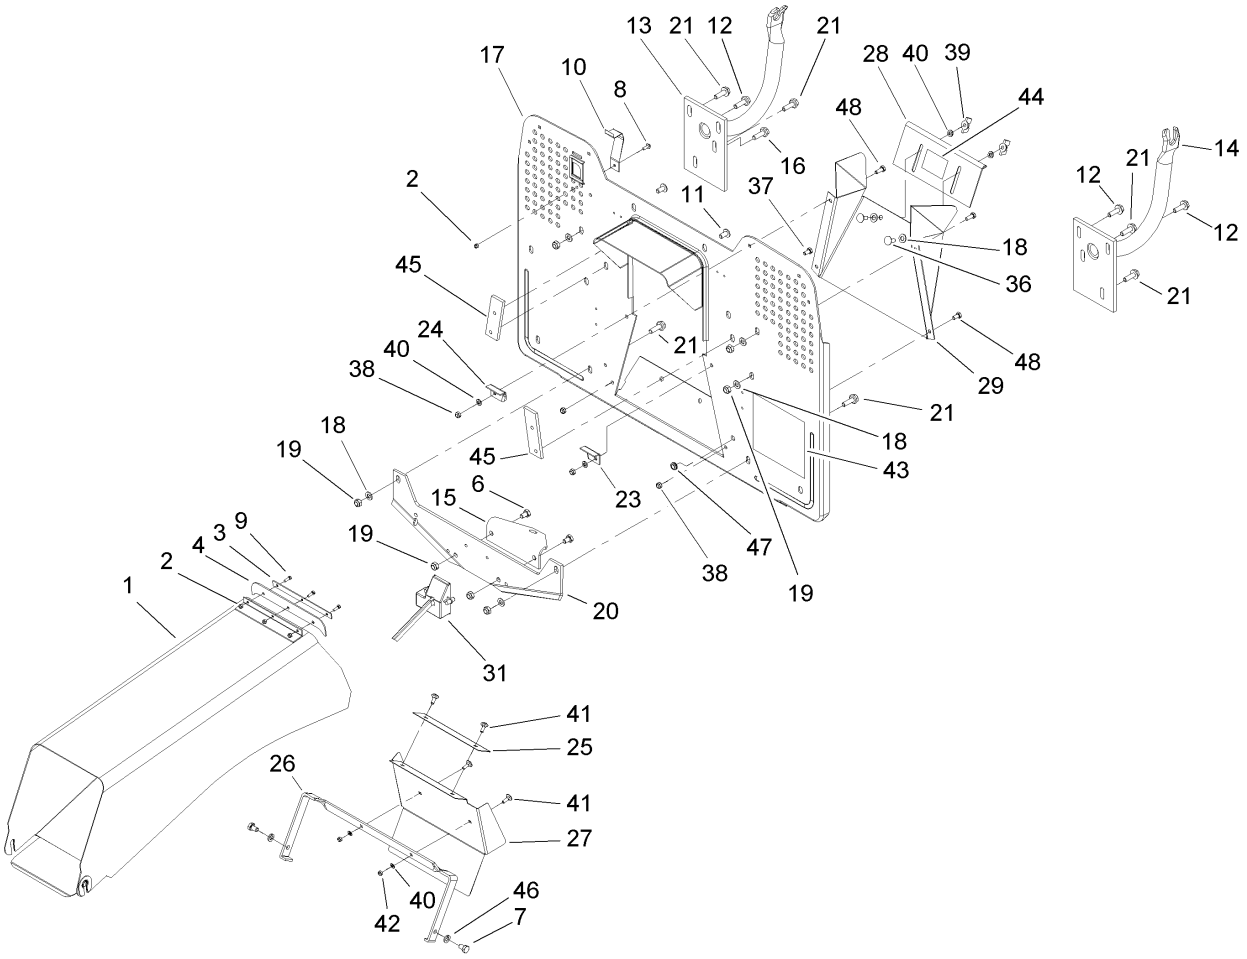

Collector Assembly

Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	104-3059	1	Cover-Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
16	104-3065	6	Screw-Hex
17	104-3066	1	Collector Plate ASM
18	33095-00	9	Washer-Flat
19	33024-00	9	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective


Ref	Part No.	Qty.	Description
27	104-3070	1	Shield-Protective
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
❶31	106-8595	1	Cutting System, Complete
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	2	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	4	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH

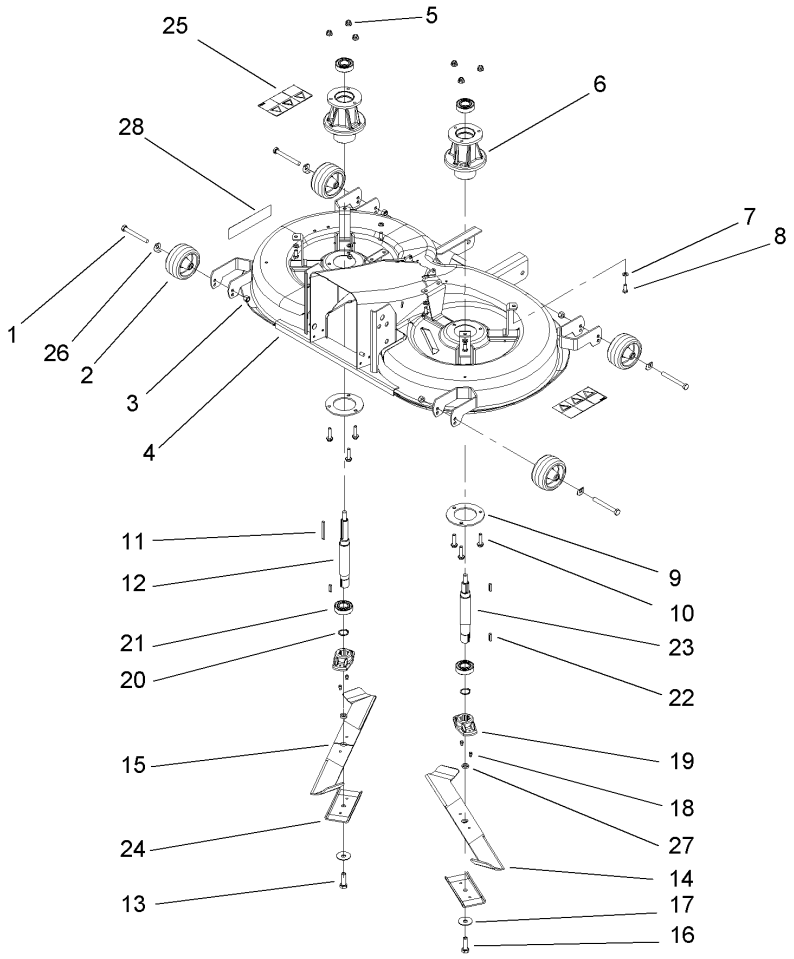

Cutting Pan, Mower Housing Assembly

Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH
2	104-3080	4	Wheel-Gauge
3	33025-00	4	Nut-Lock
4	107-8991	1	Housing-Mower
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
7	33094-00	8	Washer-Plain
8	33114-020	8	Screw-HH
9	104-3084	2	Support-Ring
10	104-3085	6	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade


Ref	Part No.	Qty.	Description
25	93-7824	2	Decal-Danger
26	106-5767	4	Washer
27	106-6530	2	Spacer
28	106-8563	1	Decal-Recycler

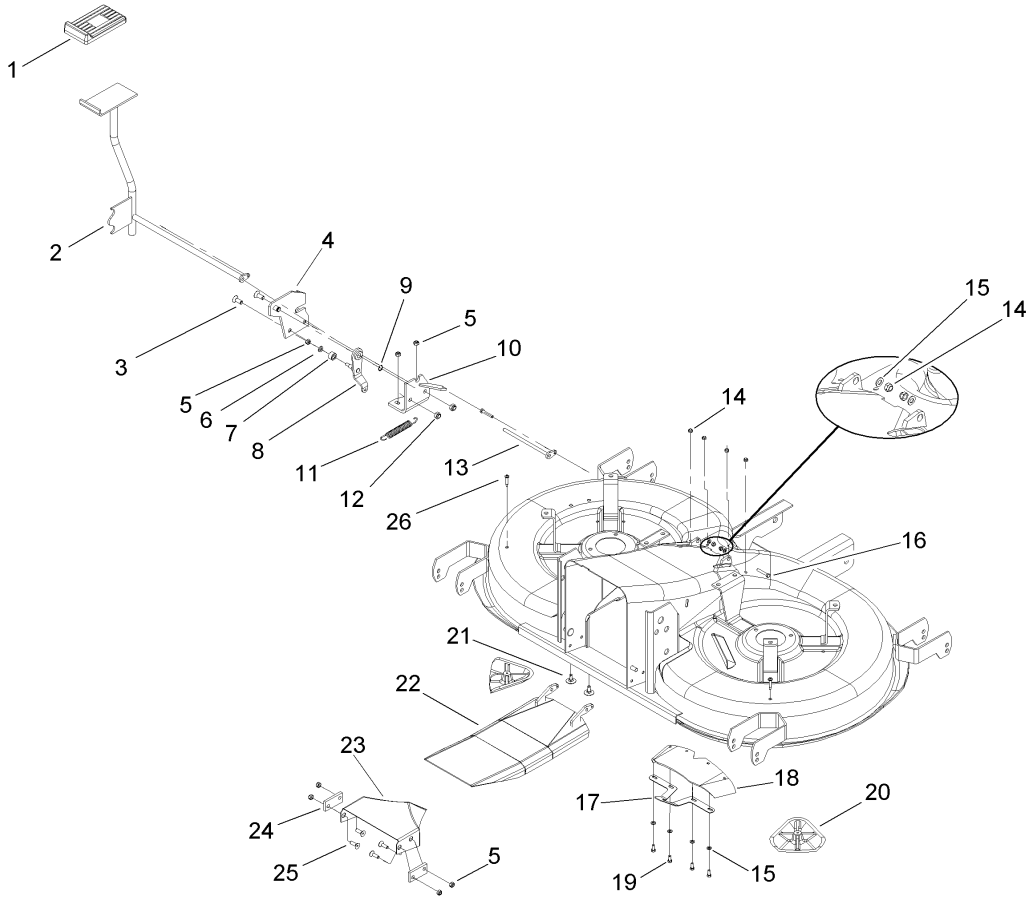

Cutting Pan and Bag on Demand Assembly

Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	1	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center


Ref	Part No.	Qty.	Description
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

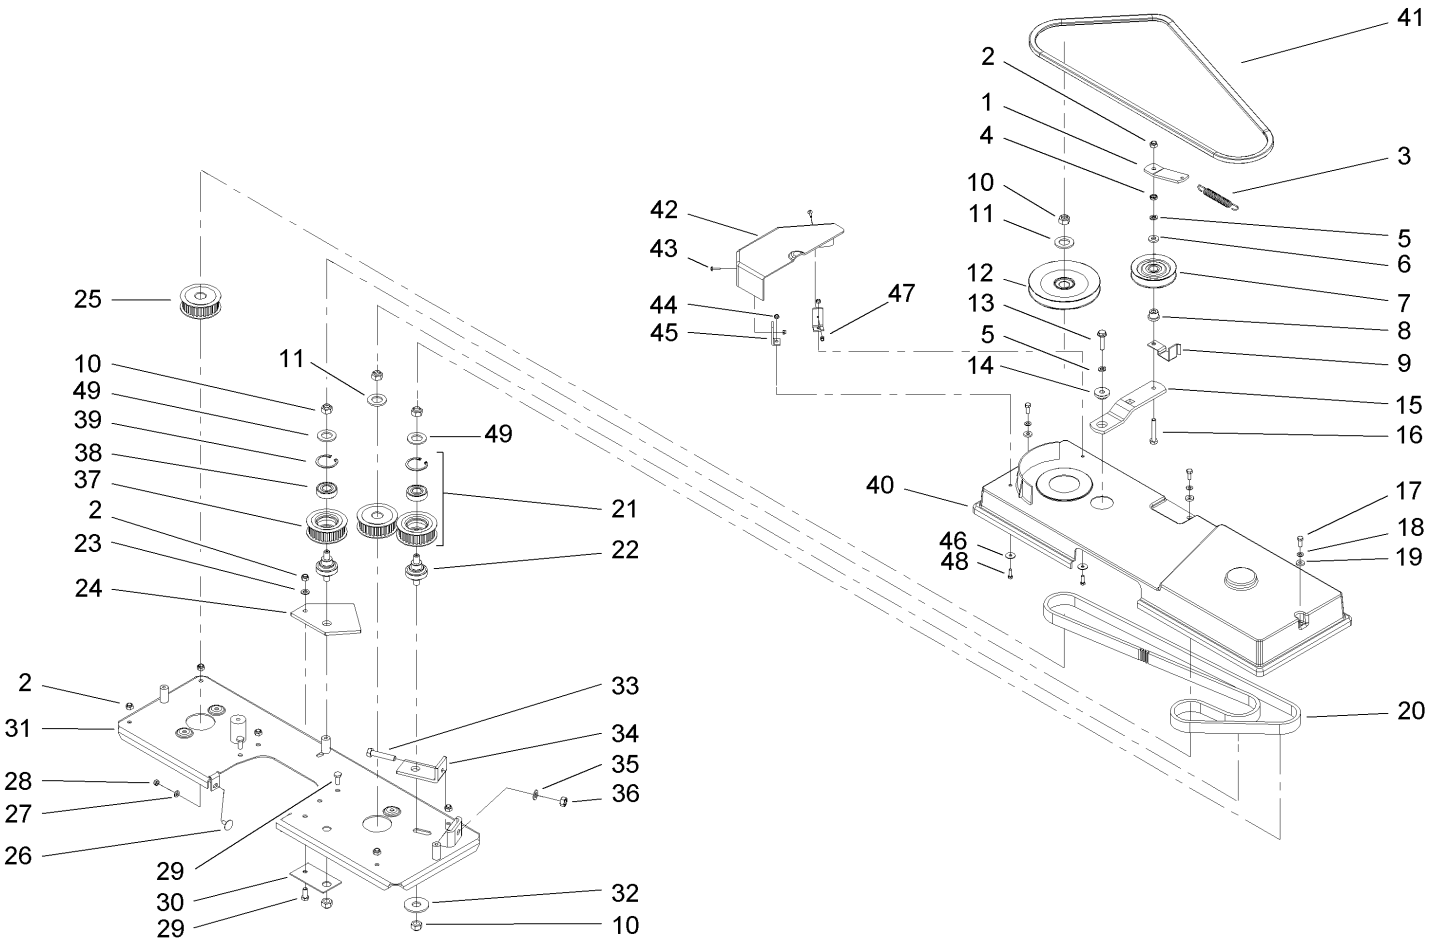

Cutting Pan and Drive System Assembly

Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley


Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	2	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3127	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

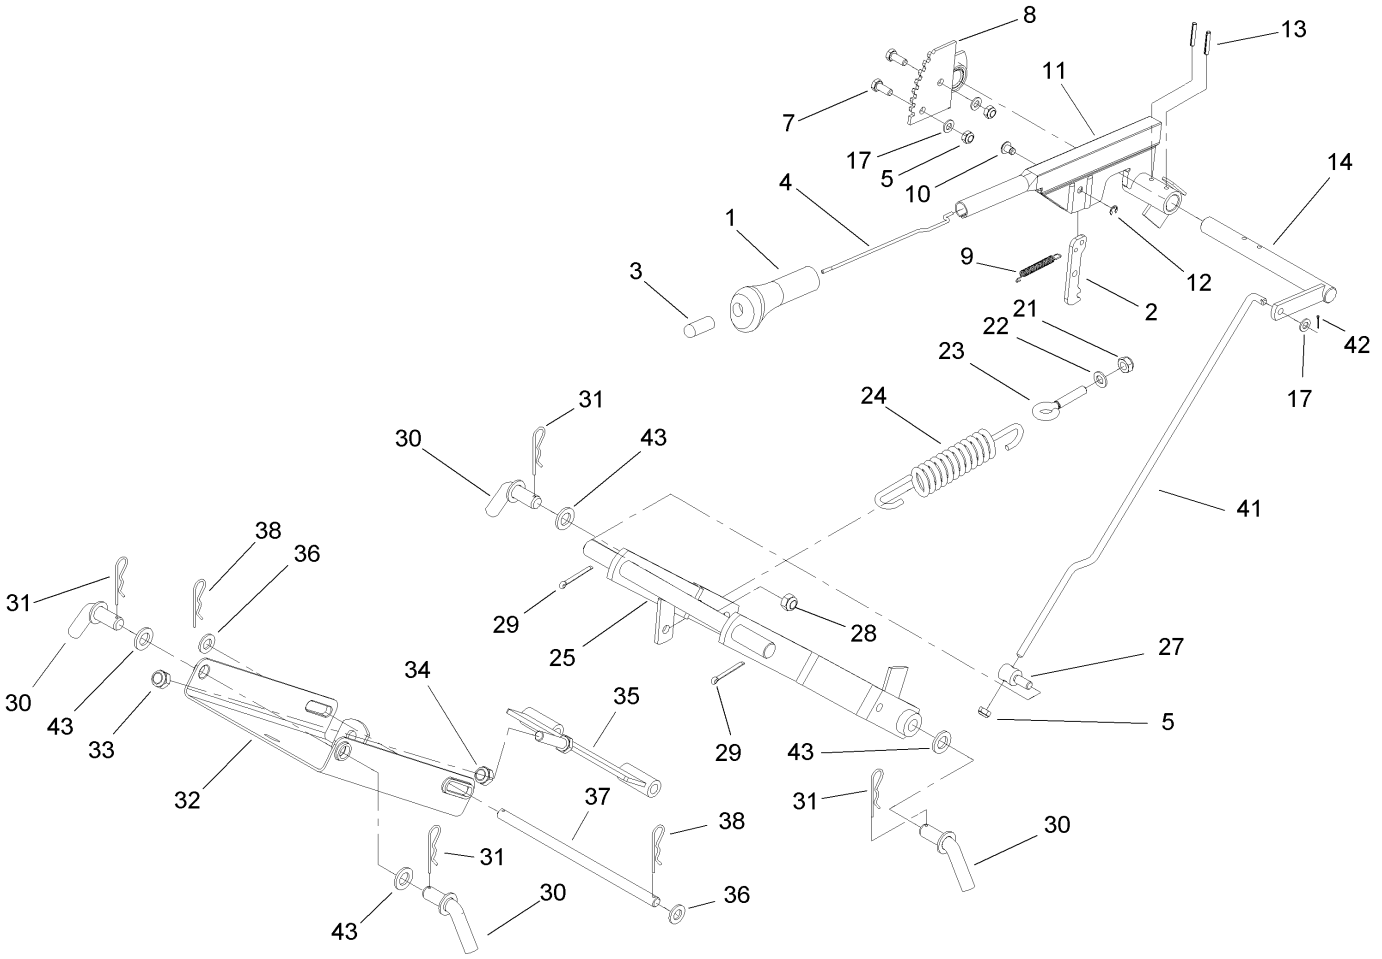

Mower Lift Assembly


Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	104-3133	1	Segment-Gear
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	104-3138	1	Shaft-Height Adj.
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair


Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Clip-Hair Pin
41	104-3149	1	Rod-Height Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

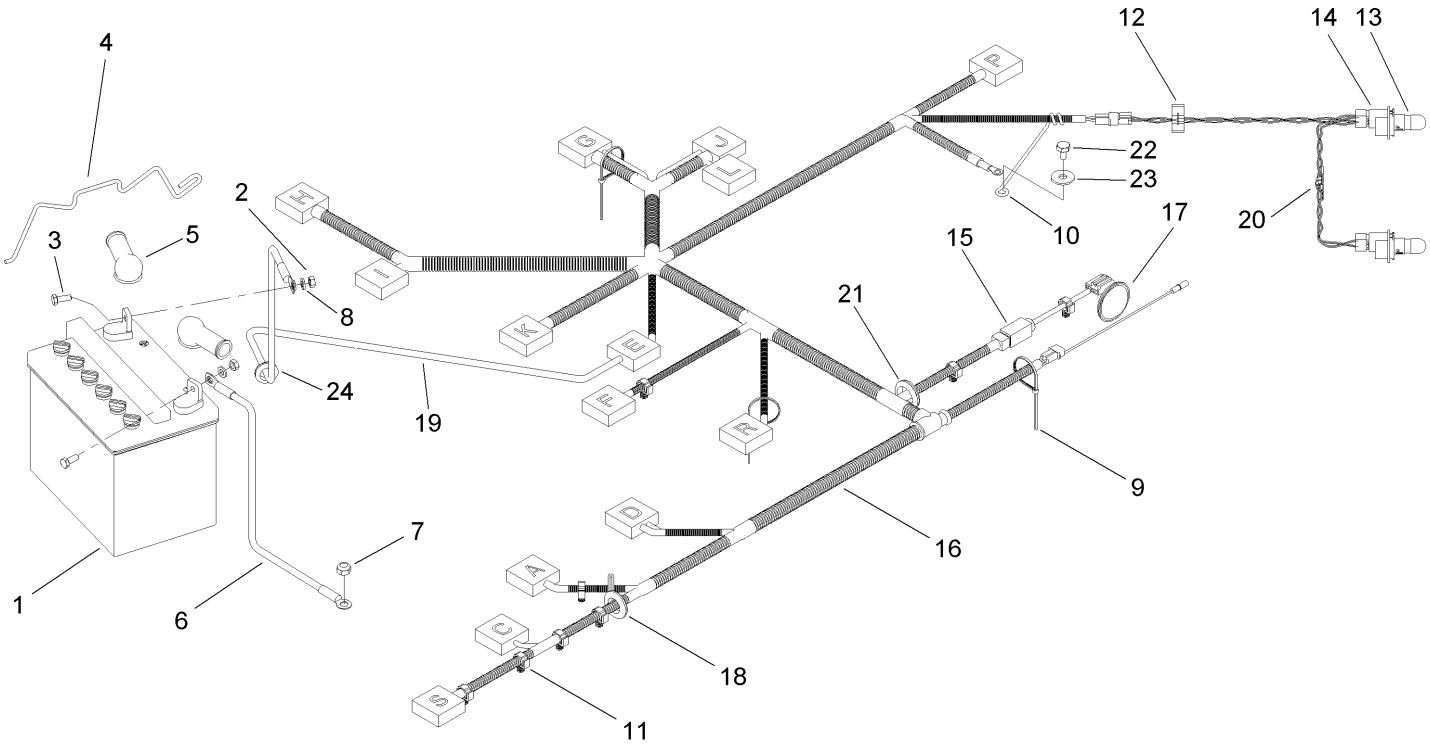



Electrical Assembly


Ref	Part No.	Qty.	Description
1	104-3152	1	Battery-12V
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	104-3153	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	104-3155	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable
10	104-3156	1	Holder- Harness, Wiring
11	104-3157	8	Clip-Snap
12	88-4320	1	Harness-Wire, Lights
13	104-3158	2	Bulb-Light
14	104-3159	2	Socket-Light
15	104-3160	1	Harness-Clutch
16	104-3337	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	104-3166	1	Cable-Battery Positive
20	104-3167	2	Clip-Nylon
21	104-3168	1	Bushing
22	33114-020	1	Screw-HH
23	33094-00	1	Washer-Plain
24	107-8950	1	Grommet

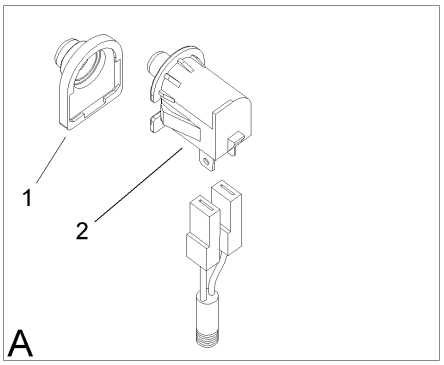

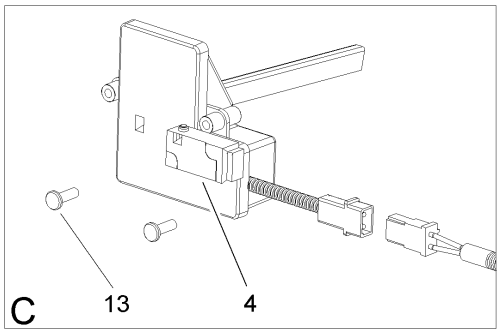

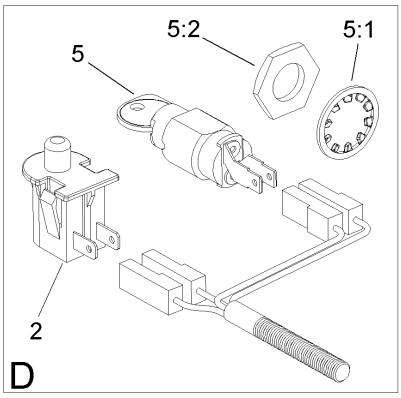


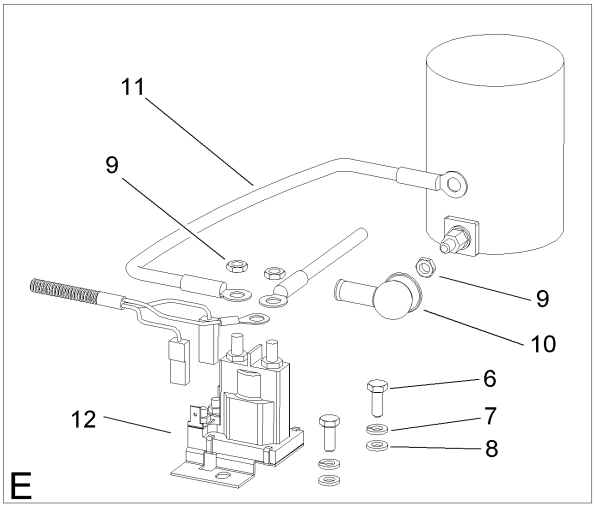


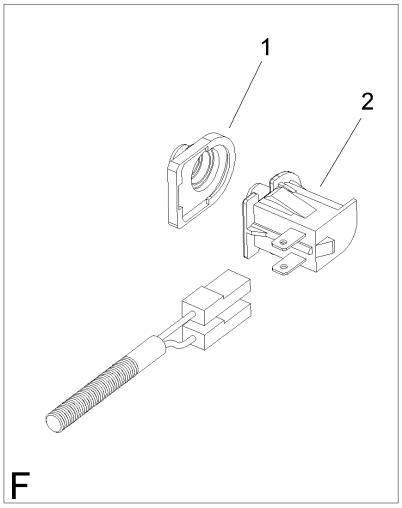



Electrical Switch Assembly No. 1

Ref	Part No.	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
4	104-3185	1	Switch-Omron
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	47-1910	1	Solenoid
13	104-3349	2	Screw

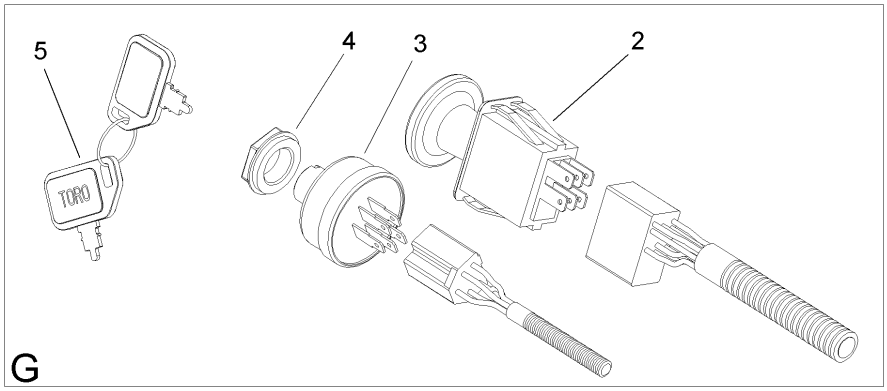

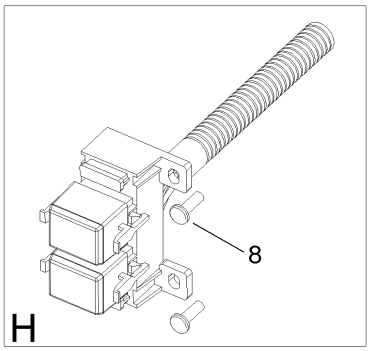


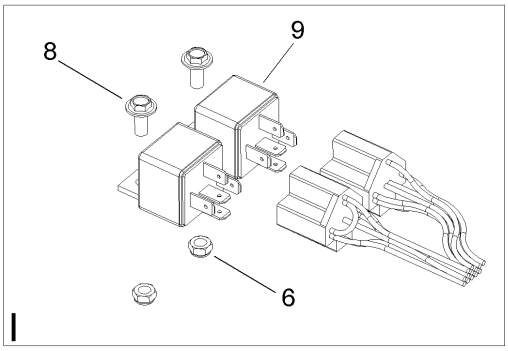


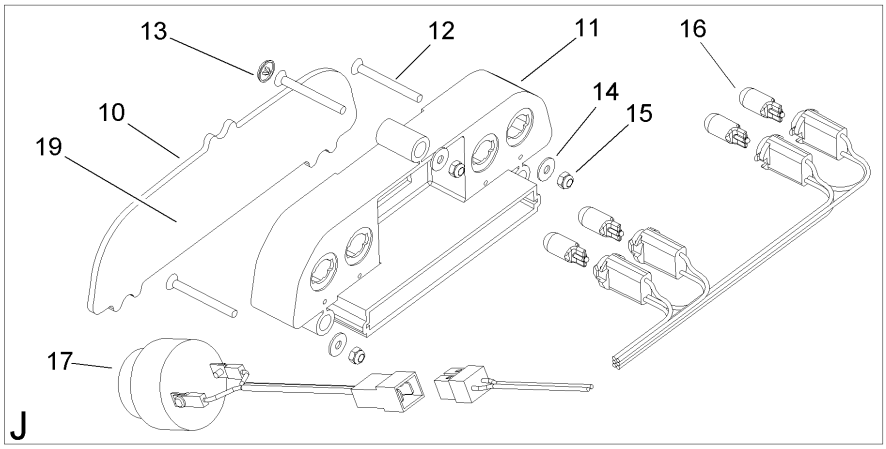



Electrical Switch Assembly No. 2


Ref	Part No.	Qty.	Description
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	104-3172	1	Nut-Hex
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	2	Relay
10	92-6705	1	Lens-Dash
11	92-6732	1	Housing-Light, Indicator
12	104-3191	3	Screw
13	104-3174	3	Screw-Cap
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	4	Bulb
17	104-3177	1	Buzzer
19	104-3194	1	Decal-Dash

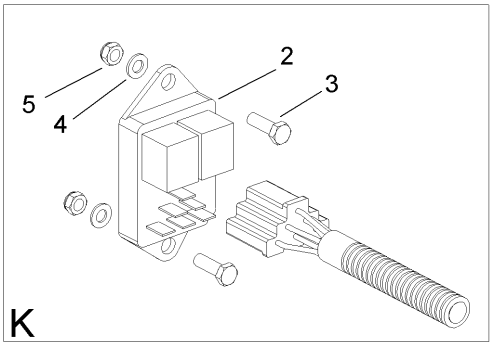

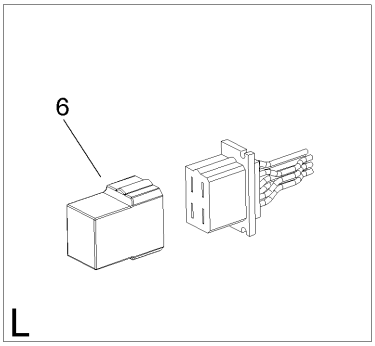

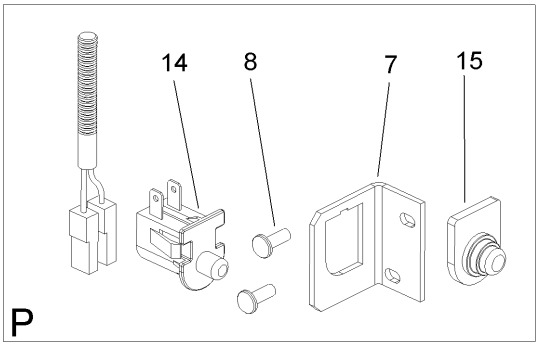


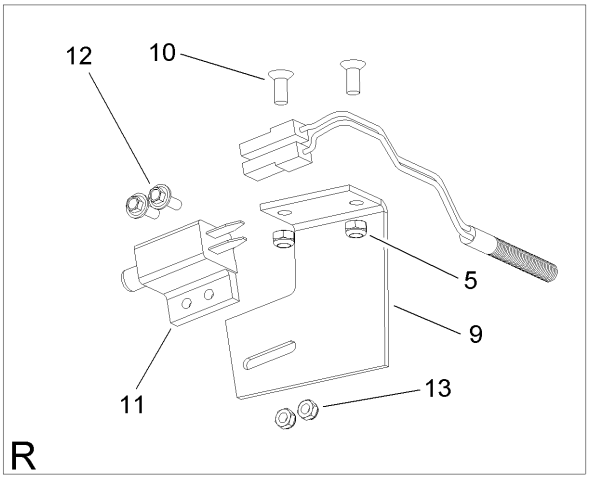

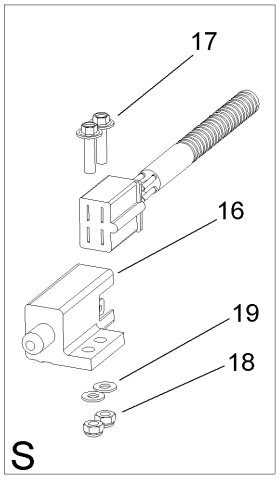

Electrical Switch Assembly No. 3

Ref	Part No.	Qty.	Description
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	104-3333	1	Holder-Switch
8	104-3190	2	Screw
9	107-8955	1	Holder-Switch
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw
13	104-2985	2	Nut-Hex
14	104-3338	1	Switch-Delta
15	104-3339	1	Cover-Switch
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer

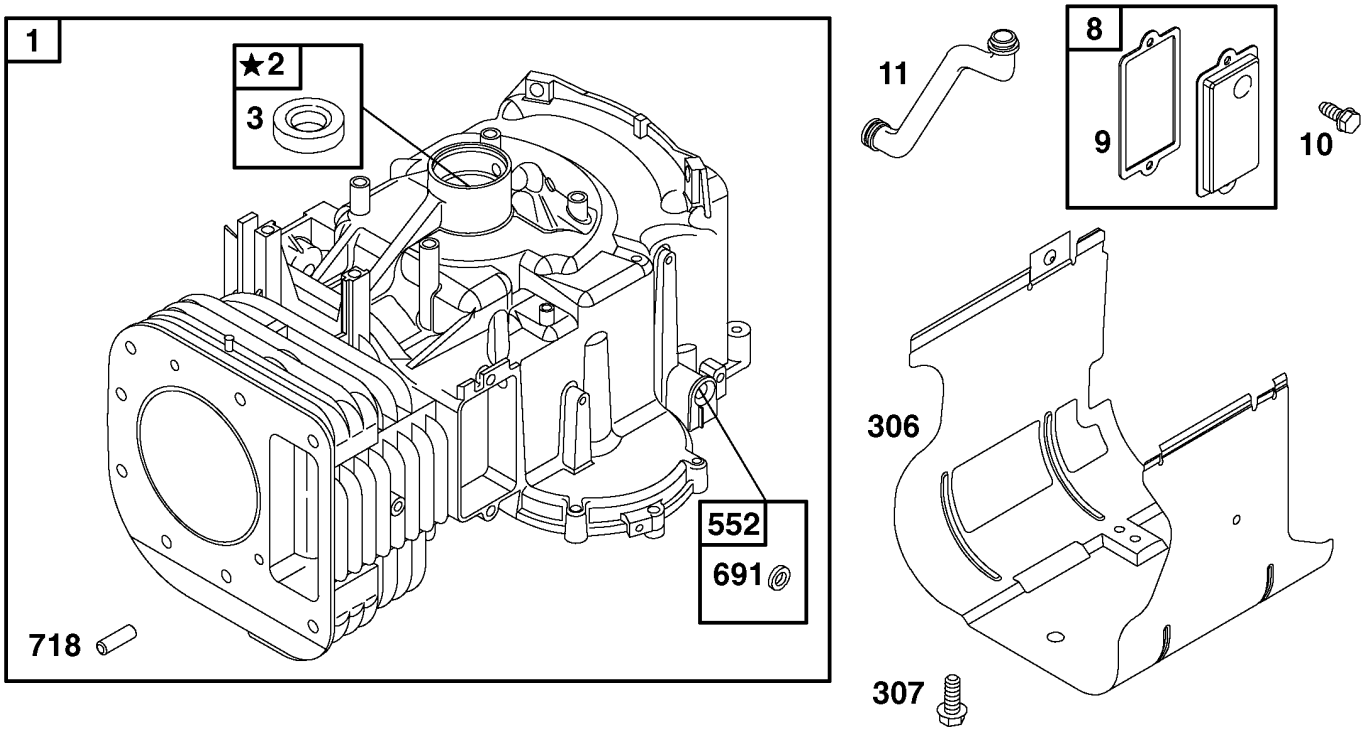


★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❼1	690156	1	Cylinder Assembly
❼2	399265	1	Bushing And Seal Kit
❸❼3	391086	1	Seal-Oil
❼8	495735	1	Breather ASM
❸❼9	27803	1	Gasket-Breather
❼10	691666	1	Screw-Hex.
❼11	691328	1	Breather Tube
❼306	690499	1	Cylinder Shield
❼307	94930	1	Screw-Hex
❼552	491986	1	Bushing-Crank, Governor
❸❼691	491323	1	Seal-Oil
❼718	690959	1	Pin-Locating

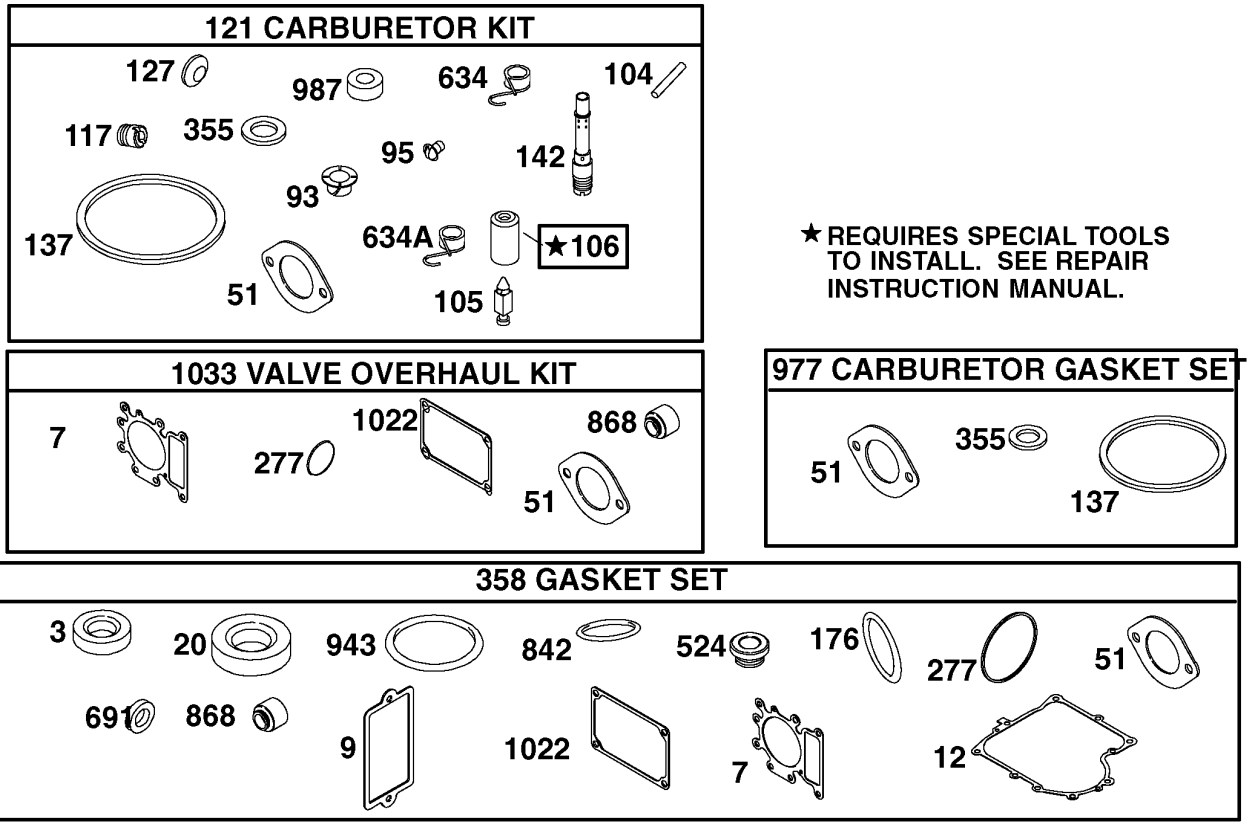


Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❸3	391086	0	Seal-Oil
❸❺7	692410	0	Gasket-Cylinder Head
❸9	27803	0	Gasket-Breather
❸12	271916	0	Gasket-Crankcase (1/64")
❸	271997	0	Gasket-Crankcase (.005")
❸	271996	0	Gasket-Crankcase (.009")
❸20	291675	0	Seal-Oil
❸❹51	273650	0	Gasket-Intake
❺❻			
❹93	281346	0	Bushing-Throttle
❹95	94098	0	Valve-Choke
❹104	231789	0	Pin-Hinge, Float
❹105	231855	0	Valve-Needle, Float
❹106	231854	0	Seat-Inlet
❹117	232118	0	Jet-Main
121	690191	0	Carburetor Kit
❹127		0	Welch Plug Sold In Kit Only
❹❻137	281165	0	Gasket-Bowl, Float
❹142	232117	0	Carburetor Nozzle
❸176	281106	0	O-Ring
❸❺277	692138	0	Seal-O Ring
❹❻355	281164	0	Washer
358	690189	0	Gasket Set
❸524	281370	0	Seal

Ref	Part No.	Qty.	Description
❹634	494453	0	Seal-Choke Shaft
❹634A	494455	0	Seal-Choke Shaft
❸691	491323	0	Seal-Oil
❸842	270920	0	O-Ring
❸❺868	499236	0	Seal-Valve
❸943	280801	0	O-Ring Seal
977	690192	0	Carburetor Gasket Set
❹987	281166	0	Seal-Shaft
❸❺1022	272475	0	Gasket-Cover, Rocker
1033	690190	0	Set-Valve Gasket

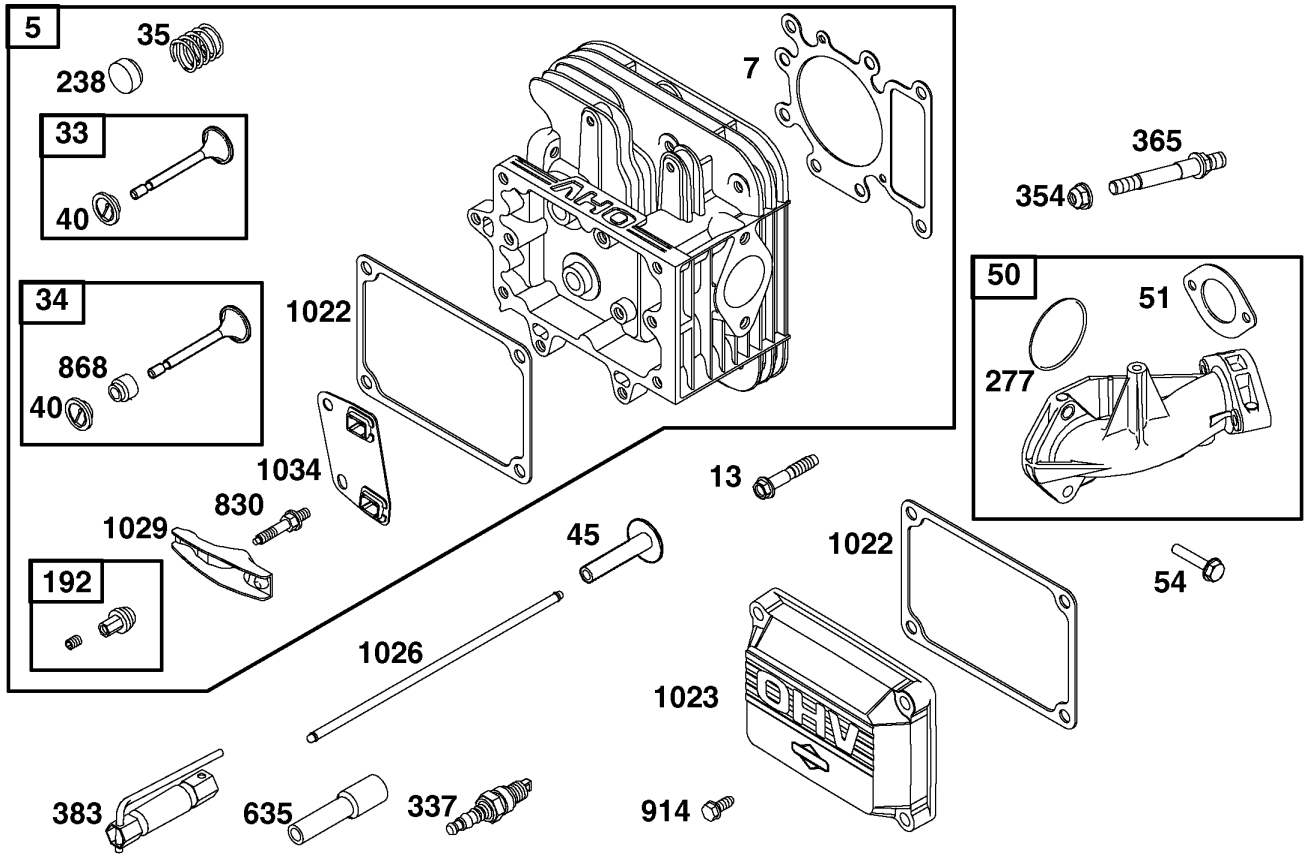


Assemblies include all parts shown in frames.

Cylinder Head Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❼5	690188	1	Cylinder Head
❸❹7❼	692410	1	Gasket-Cylinder Head
❼13	690360	1	Screw
❼33	495856	1	Valve-Exhaust
❼34	495857	1	Valve-Intake
❼35	691279	1	Spring-Valve
❼40	224641	1	Retainer-Valve
❼45	690564	1	Tappet-Valve
❼50	690193	1	Manifold-Intake
❸❹51❺❻	273650	1	Gasket-Intake
❼54	691148	1	Screw
❼192	492160	1	Adjuster-Valve
❼238	691843	1	Cap-Valve
❸❺277❼	692138	1	Seal-O Ring
❼337	491055	1	Plug-Spark
❼354	94010	1	Nut
❼365	690227	1	Stud
❼383	89838	1	Wrench-Plug, Spark
❼635	280872	1	Boot-Spark Plug
❼830	696095	1	Stud (Rocker Arm)
❸❺868❼	499236	1	Seal-Valve

Ref	Part No.	Qty.	Description
❼914	690690	1	Seal-O Ring
❸❺1022❼	272475	1	Gasket-Cover, Rocker
❼1023	692492	1	Cover-Rocker
❼1026	494432	1	Guide-Push Rod
❼	495136	1	Push Rod (Exhaust)
❼1029	691751	1	Arm-Rocker
❼1034	495248	1	Guide-Push Rod

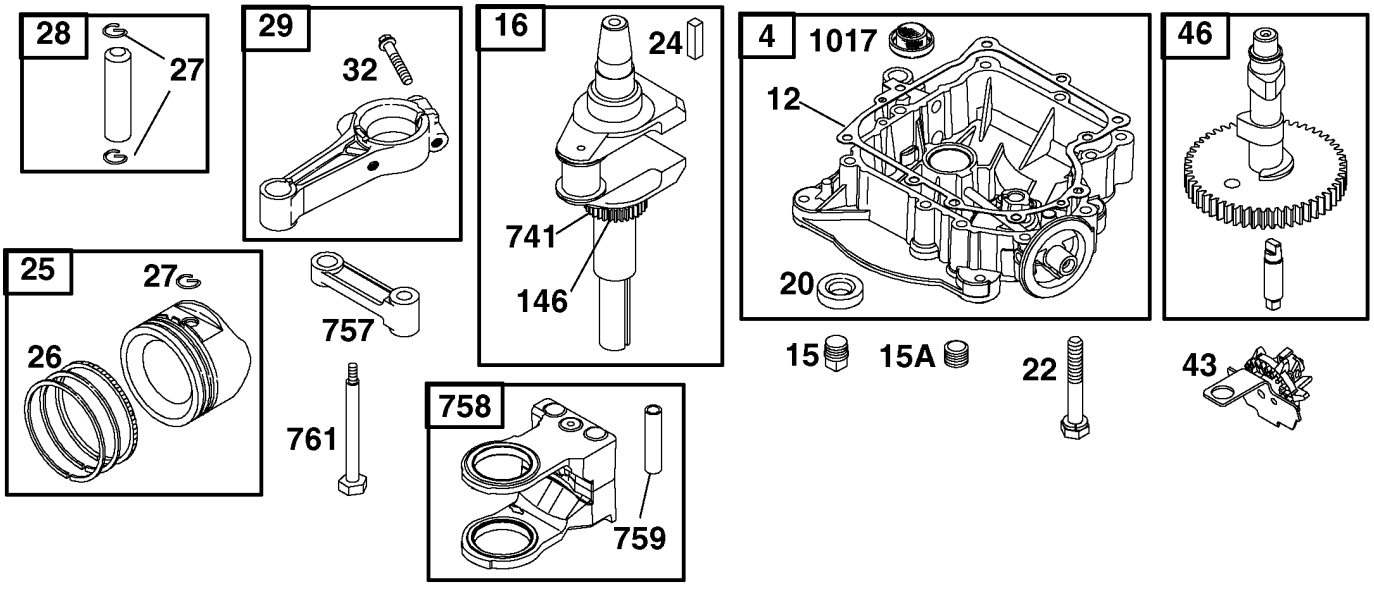


Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❼4	693582	1	Enginesump
❸❼12	271916	1	Gasket-Crankcase (1/64")
❸❼	271997	1	Gasket-Crankcase (.005")
❸❼	271996	1	Gasket-Crankcase (.009")
❼15	94239	1	Plug-Pipe
❼15A	91488	1	Plug-Oil
❼16	690136	1	Crankshaft
❸❼20	291675	1	Seal-Oil
❼22	692125	1	Screw
❼24	222698	1	Key
❼25	692271	1	Piston Assembly (Standard)
❼	692272	1	Piston Assy. (.010" O.S.)
❼	692273	1	Piston Assy. (.O2O" O.S.)
❼	692274	1	Piston Assy. (.030" O.S.)
❼26	690162	1	Ring Set (STD)
❼	690164	1	Ring Set (.010" O.S.)
❼	690166	1	Ring Set (.020" O.S.)
❼	690168	1	Ring Set (.030" O.S.)
❼	690168	1	Ring Set (.030" O.S.)
❼27	691299	1	Lock-Piston Pin
❼28	498319	1	Pin-Piston (STD.)
❼	498320	1	Pin-Piston (.005 O.S.)
❼29	692419	1	Connecting Rod (STD)
❼	499940	1	Connecting Rod (.020" Undersize)

Ref	Part No.	Qty.	Description
❼32	692852	1	Screw
❼43	490815	1	Gear-Governor
❼46	693930	1	Cam Shaft
❼146	94196	1	Key-Timing
❼741	691284	1	Gear-Timing
❼757	213998	1	Link-Counteweight
❼758	692423	1	Counterweight
❼759	230787	1	Pin-Counterweight
❼761	691096	1	Screw (Counterweight)
❼1017	690770	1	Screen-Pump, Oil

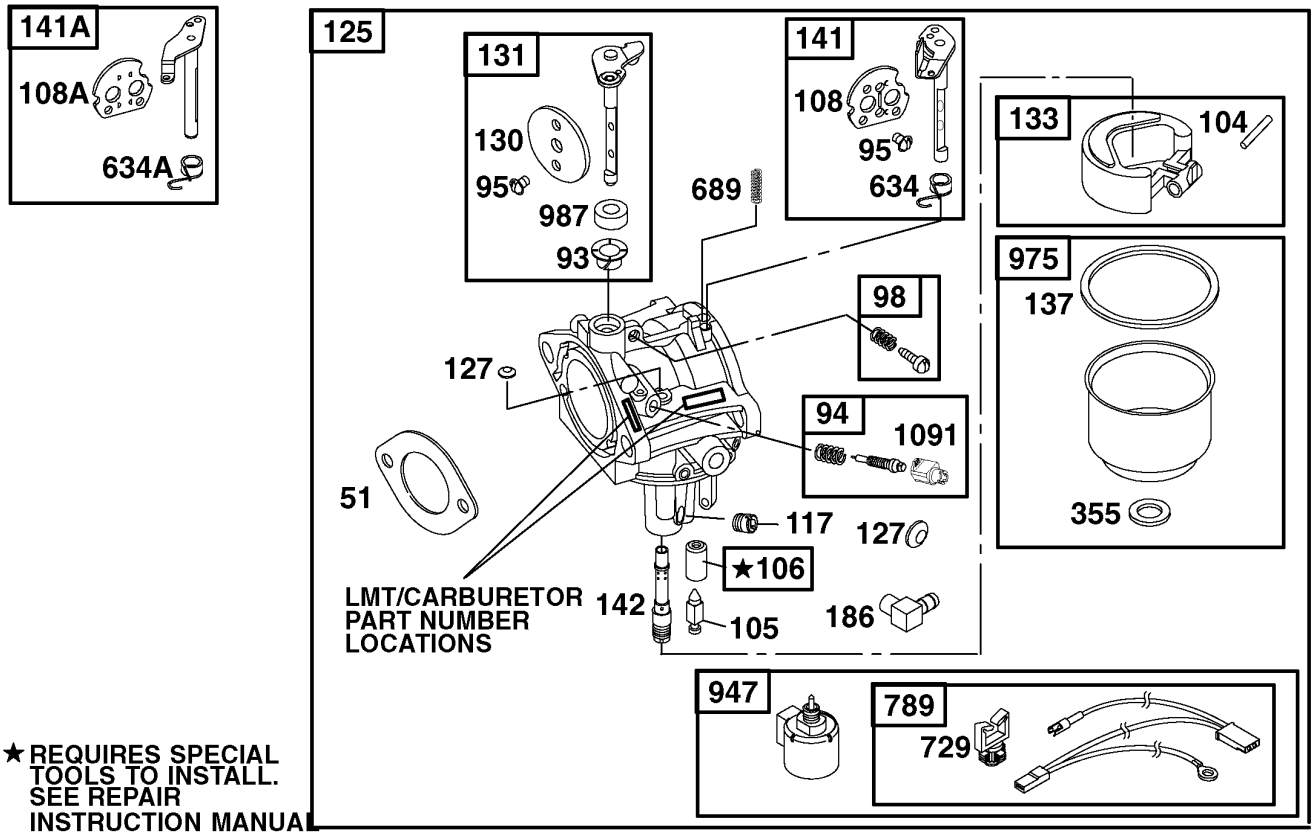


Assemblies include all parts shown in frames.

Carburetor Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❸❹51 ❺❻	273650	1	Gasket-Intake
❹❼93	281346	1	Bushing-Throttle
❼94	498030	1	Idle Mixture Kit
❹❼95	94098	1	Valve-Choke
❼98	495800	1	Idle Speed Kit
❹❼104	231789	1	Pin-Hinge, Float
❹❼105	231855	1	Valve-Needle, Float
❹❼106	231854	1	Seat-Inlet
❼108	224558	1	Valve-Choke
❼108A	224540	1	Valve-Choke
❹❼117	232118	1	Jet-Main
❼	495136	1	Push Rod (Exhaust)
❼125	499153	1	Carburetor
❹❼127		1	Welch Plug(Sold In Kit Only)
❼130	224539	1	Valve-Throwe
❼131	494379	1	Throttle Shaft Kit
❼133	494381	1	Float-Carburetor
❹❻137 ❼	281165	1	Gasket-Bowl, Float
❼141	495097	1	Choke Shaft Kit
❼141A	495931	1	Choke Shaft Kit
❹❼142	232117	1	Carburetor Nozzle
❼186	493496	1	Connector-Fuel


Ref	Part No.	Qty.	Description
❹❻355 ❼	281164	1	Washer
❹❼634	494453	1	Seal-Choke Shaft
❹❼634A	494455	1	Seal-Choke Shaft
❼689	262715	1	Friction Spring
❼729	281390	1	Clip-Wire
❼789	497708	1	Wire Stop
❼947	497672	1	Solenoid
❼975	495933	1	Bowl-Float
❹❼987	281166	1	Seal-Shaft
❼1091	691333	1	Cap-Limiter

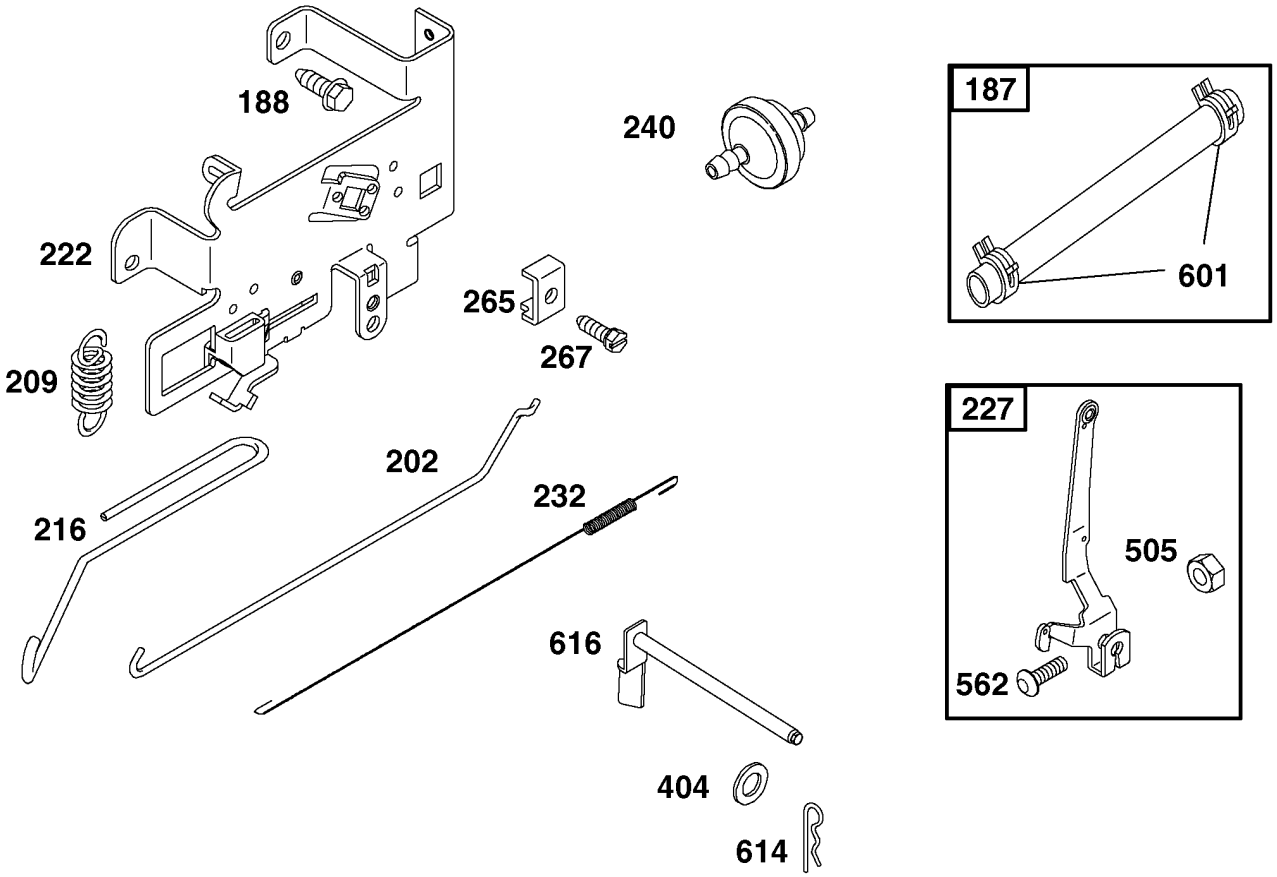

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❼187	492790	1	Hose-Fuel
❼188	94929	1	Screw
❼202	262767	1	Choke Link
❼209	692208	1	Spring-Governor
❼216	691840	1	Link-Choke
❼222	694042	1	Bracket-Control
❼227	493935	1	Lever-Governor
❼232	262785	1	Spring-Link
❼240	394358	1	Filter-Fuel
❼265	221535	1	Clamp-Casing
❼267	94906	1	Screw-Sem
❼404	94927	1	Washer
❼505	231978	1	Nut-Hex
❼562	94907	1	Bolt-Carriage
❼601	95162	1	Clamp-Hose
❼614	93306	1	Pin-Cotter
❼616	495157	1	Crank-Governor

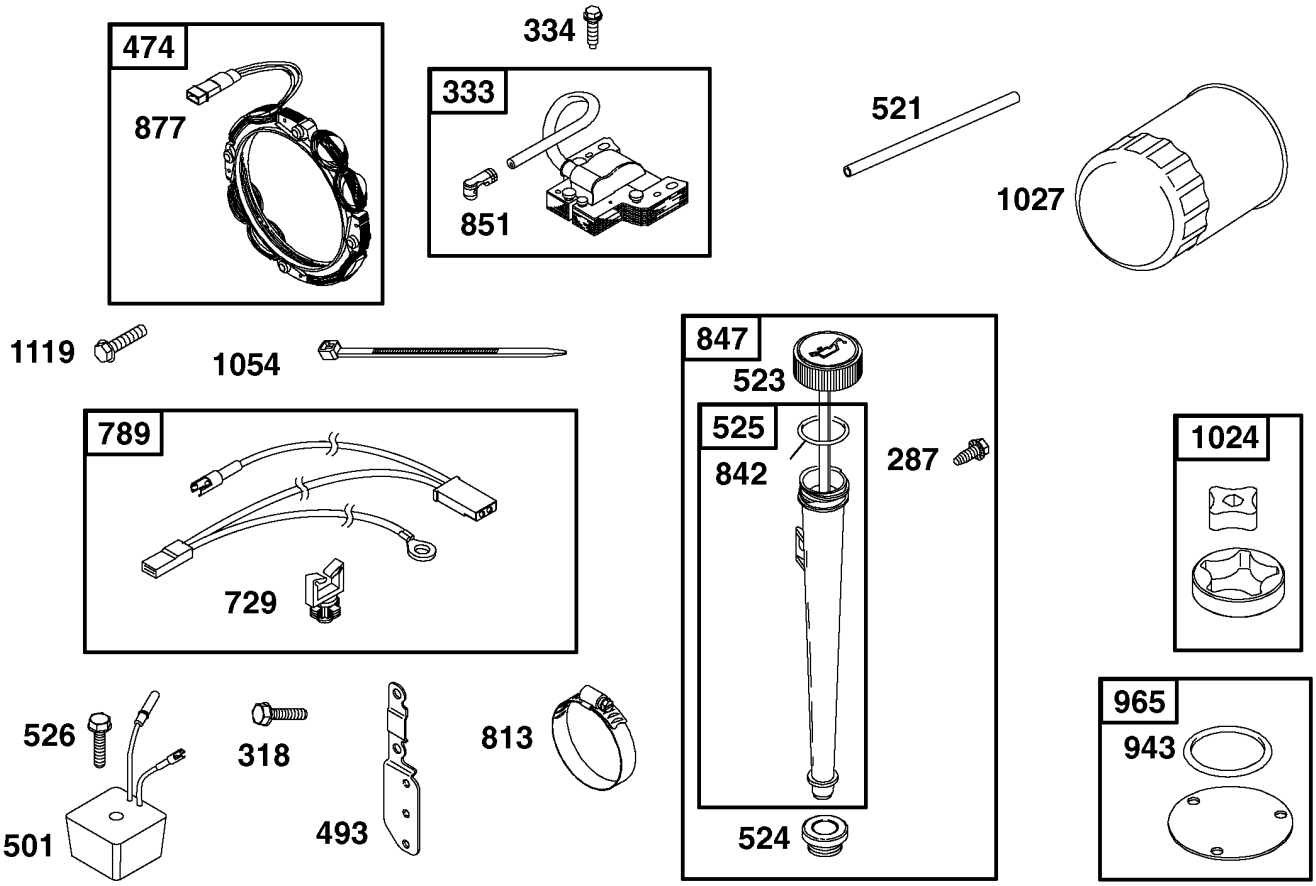


Assemblies include all parts shown in frames.

Oil Filter, Tube, and Pump Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❼287	94903	1	Screw-Shoulder
❼318	694476	1	Screw
❼333	495859	1	Armature-Magneto
❼334	691061	1	Screw
❼474	691065	1	Alternator
❼493	694475	1	Bracket-Mounting
❼501	491546	1	Regulator
❼521	690581	1	Shield-Cable
❼523	692014	1	Dipstick
❸❼524	281370	1	Seal
❼525	691398	1	Dipstick Tube
❼526	690326	1	Screw (Regulator)
❼729	281390	1	Clip-Wire
❼750	691033	1	Screw
❼789	497708	1	Wire Stop
❼813	690635	1	Clamp
❸❼842	270920	1	O-Ring
❼847	496415	1	Fill Group-Oil
❼851	224110	1	Cable Terminal
❼877	393456	1	Wire-Connector / Alternator
❸❼943	280801	1	O-Ring Seal
❼965	499613	1	Cover-Pump, Oil
❼1024	499054	1	Pump-Oil
❼1027	492932	1	Filter-Oil


Ref	Part No.	Qty.	Description
❼1054	280275	1	Tie-Cable
❼1119	93621	1	Screw

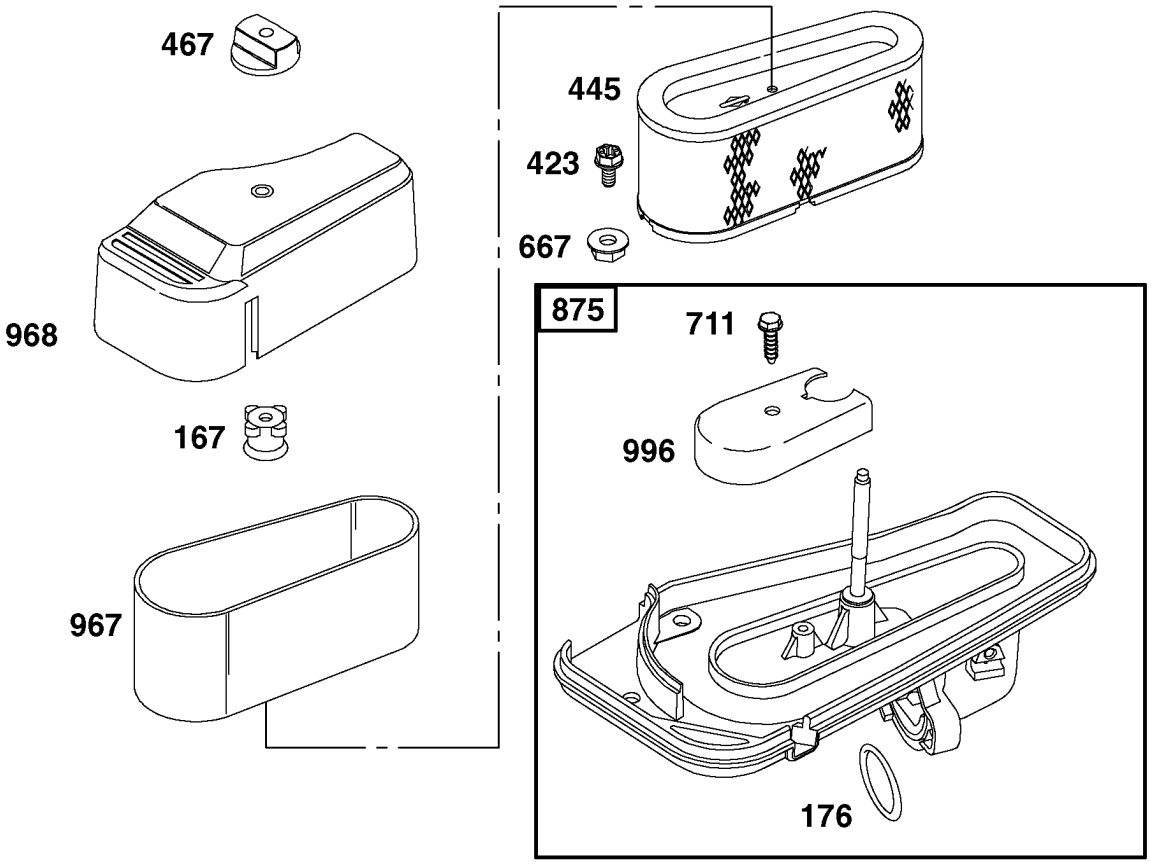

Assemblies include all parts shown in frames.

Air Cleaner Assembly
Briggs and Stratton 311777-0151-E1


Ref	Part No.	Qty.	Description
❼167	281051	1	Nut
❸❼176	281106	1	O-Ring
❼423	692129	1	Screw-Torx Hex.
❼467	493903	1	Knob
❼445	496894	1	Filter-Air
❼667	94010	1	Nut
❼711	94704	1	Screw
❼875	693686	1	Air Cleaner Base
❼967	272403	1	Filter-Air
❼968	692502	1	Air Cleaner Cover
❼996	690678	1	Carburetor Shield

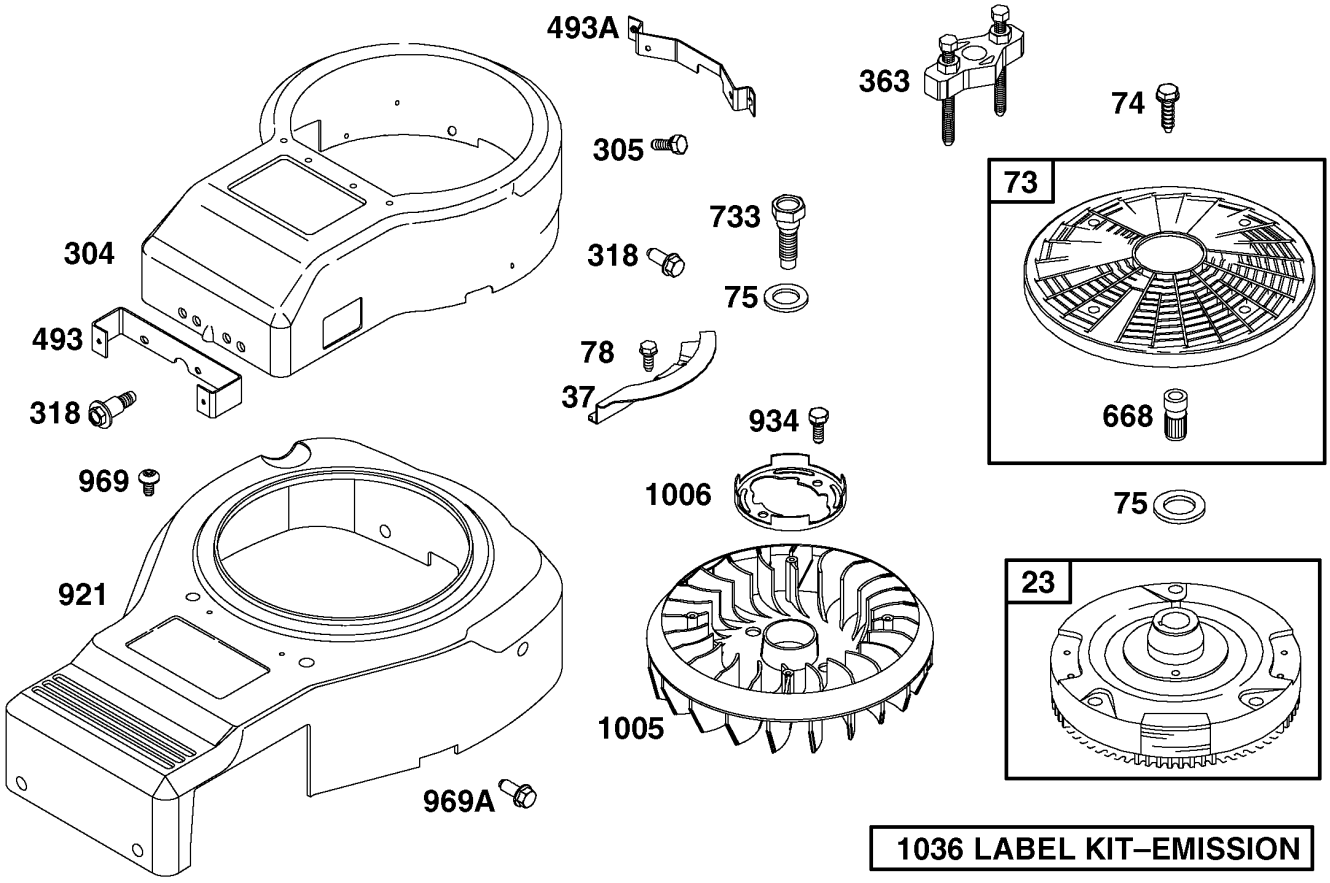

Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❼23	693557	1	Flywheel
❼37	690456	1	Flywheel Guard
❼73	494439	1	Screen-Rotating
❼74	94821	1	Screw-Sem
❼75	225136	1	Washer
❼78	94896	1	Screw
❼304	690497	1	Blower Housing
❼305	690960	1	Screw
❼318	692127	1	Screw (Fuel Tank)
❼363	19203	1	Puller-Flywheel
❼493	690493	1	Bracket-Mounting (Front)
❼493A	690494	1	Bracket-Mounting (Rear)
❼668	805402	1	Spacer
❼733	94673	1	Screw-Hex.Head
❼921	692679	1	Blower Housing Cover
❼934	94627	1	Screw
❼969	690365	1	Screw-Torxê
❼969A	690960	1	Screw
❼1005	281400	1	Fan-Flywheel
❼1006	690452	1	Retainer-Fan
❼1036	694332	1	Emission Label Kit

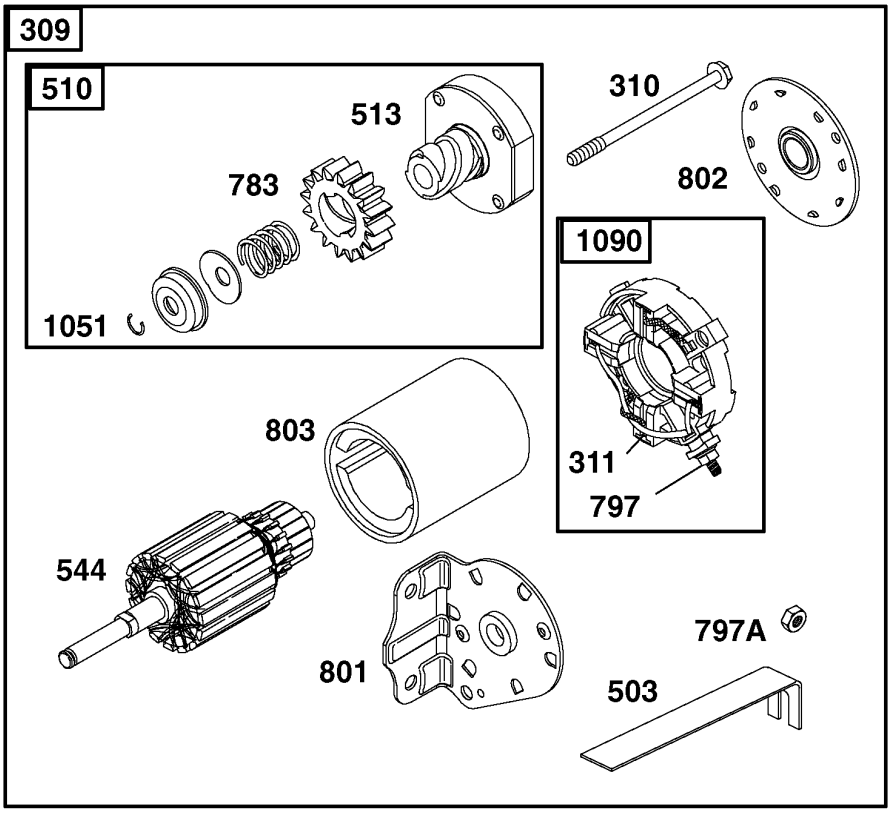





Starter Assembly
Briggs and Stratton 311777-0151-E1

Ref	Part No.	Qty.	Description
❼309	693551	1	Motor-Starter
❼310	690323	1	Bolt
❼311	497608	1	Brush Set
❼503	691532	1	Strap-Starter
❼510	693699	1	Drive-Starter
❼513	398003	1	Clutch ASM
❼544	497603	1	Armature-Starter
❼697	690372	1	Screw
❼729A	691224	1	Clip-Wire
❼783	693713	1	Gear-Pinion
❼797	693167	1	Nut
❼797A	92278	1	Nut-Hex
❼801	691429	1	Cap-Drive
❼802	497607	1	Cap-End
❼803	691427	1	Starter Housing
❼1051	263080	1	Retainer
❼1090	691293	1	Retainer-Brush

NOTES

NOTES

NOTES


TORO®