Form Number 3357-828 Rev B

DH 220 Lawn Tractor

Model No. 74592 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Frame Assembly	4
Front Axle Assembly	6
Steering Assembly	7
Hood Assembly	8
Engine Assembly	9
Operation - Brake and Bypass Assembly	10
Operation and Travel Pedal Assembly	11
Transmission Assembly	12
Control Shaft Assembly Transmission Assembly No. 104-2889	14
Motor Shaft Assembly Transmission Assembly No. 104-2889	15
Transaxle Case Assembly Transmission Assembly No. 104-2889	16
Differential Gear Assembly Transmission Assembly No. 104-2889	17
Final Pinion Assembly Transmission Assembly No. 104-2889	18
Axle Shaft Assembly Transmission Assembly No. 104-2889	19
Brake Assembly Transmission Assembly No. 104-2889	20
Fan Pulley Assembly Transmission Assembly No. 104-2889	21
Range Shift Assembly Transmission Assembly No. 104-2889	22
Center Case Assembly Transmission Assembly No. 104-2889	23
Pump Shaft Assembly Transmission Assembly No. 104-2889	24
Grass Collector Assembly No. 106-5760	25
Tunnel Assembly	26
Deck Housing Assembly	27
Cutting Pan and Bag on Demand Assembly	28
Belt Cover and Drive System Assembly	29
Mower Lift Assembly	31
Harness Assembly	32
Electrical Starter Assembly	33
Electrical Switch Assembly No. 2	34
Electrical Switch Assembly No. 3	35
Cylinder Assembly Briggs and Stratton 441677-0136-E1	36
Cylinder Head Assembly Briggs and Stratton 441677-0136-E1	37
Crankshaft Assembly Briggs and Stratton 441677-0136-E1	38
Crankcase Assembly Briggs and Stratton 441677-0136-E1	39
Carburetor Assembly Briggs and Stratton 441677-0136-E1	40
Governor Assembly Briggs and Stratton 441677-0136-E1	41
Blower Housing Assembly Briggs and Stratton 441677-0136-E1	42
Flywheel Assembly Briggs and Stratton 441677-0136-E1	43
Fuel Line and Pump Assembly Briggs and Stratton 441677-0136-E1	44
Starter Motor Assembly Briggs and Stratton 441677-0136-E1	45
Gasket Set Briggs and Stratton 441677-0136-E1	46
Carburetor Overhaul Kit Briggs and Stratton 441677-0136-E1	47
Attachments and Accessories List	48


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Obtain from your local Briggs & Stratton dealer
❹ Included in Carburetor Overhaul Kit (Ref. No. 121)
❺ Included in Engine Gasket Set (Ref. No. 358)
❻ Included in Carburetor Gasket Set (Ref. No. 977)
❼ Included in Valve Gasket Set (Ref. No. 1095)

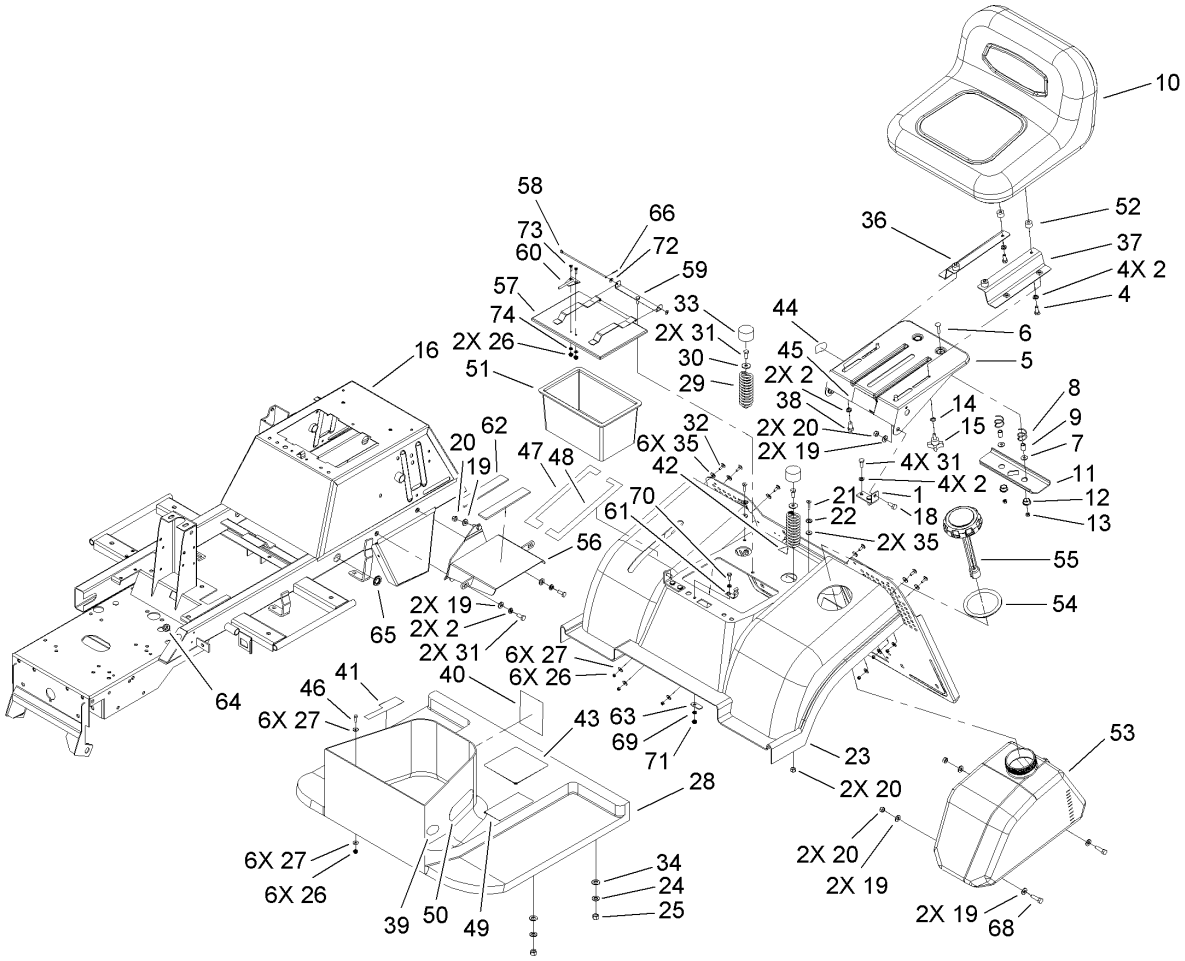

Frame Assembly


Ref	Part No.	Qty.	Description
1	104-2926	2	Bracket-Support, Seat
2	42-9850	12	Washer-Lock, Spring
4	322-3	4	Screw-HH
5	104-2929	1	Support-Seat
6	104-2930	2	Bolt-Carriage
7	104-2931	2	Washer-Flat
8	104-2932	2	Spring-Seat
9	104-2933	2	Spacer-Split
10	107-2213	1	Seat ASM
11	104-2934	1	Bracket
12	104-2935	2	Bushing
13	33023-00	2	Nut-Lock
14	104-2936	2	Washer-Spring
15	104-2937	2	Knob-Adj.
16	107-8948	1	Chassis-Frame
18	104-2939	2	Screw-Support, Seat
19	33094-00	9	Washer-Plain
20	33024-00	7	Nut-Lock
21	104-2940	2	Screw-HSFH
22	104-2941	2	Washer-Finish
23	110-8668	1	Fender-Rear
24	33095-00	4	Washer-Flat
25	33025-00	4	Nut-Lock
26	87-5140	14	Nut-Lock

Ref	Part No.	Qty.	Description
27	104-2943	18	Washer-Flat
28	104-2944	1	Footrest ASM
29	104-2945	2	Spring-Seat
30	104-2946	2	Washer-Plain
31	33114-020	8	Screw-HH
32	104-2948	6	Bolt-Carriage
33	104-2857	2	Cap-Hub
34	104-2951	4	Washer-Rubber
35	104-2952	8	Washer-Rubber
36	107-8915	1	Bracket-Seat, RH
37	107-8916	1	Bracket-Seat, LH
38	104-3195	2	Screw
39	104-3237	1	Decal-Brake, Parking
40	104-3238	1	Decal-Starting
41	104-3241	1	Decal-Operation, Hydro
42	104-3242	1	Decal-Bag To Frame
43	104-2903	1	Decal-Instruction
44	99-5340	1	Decal-Switch
45	93-7276	1	Decal-Danger
46	60-6910	6	Screw
47	104-3239	1	Decal-HOC, LH
48	104-3240	1	Decal-HOC, RH
49	106-8552	1	Decal-Operation
50	107-8976	2	Decal-Tower

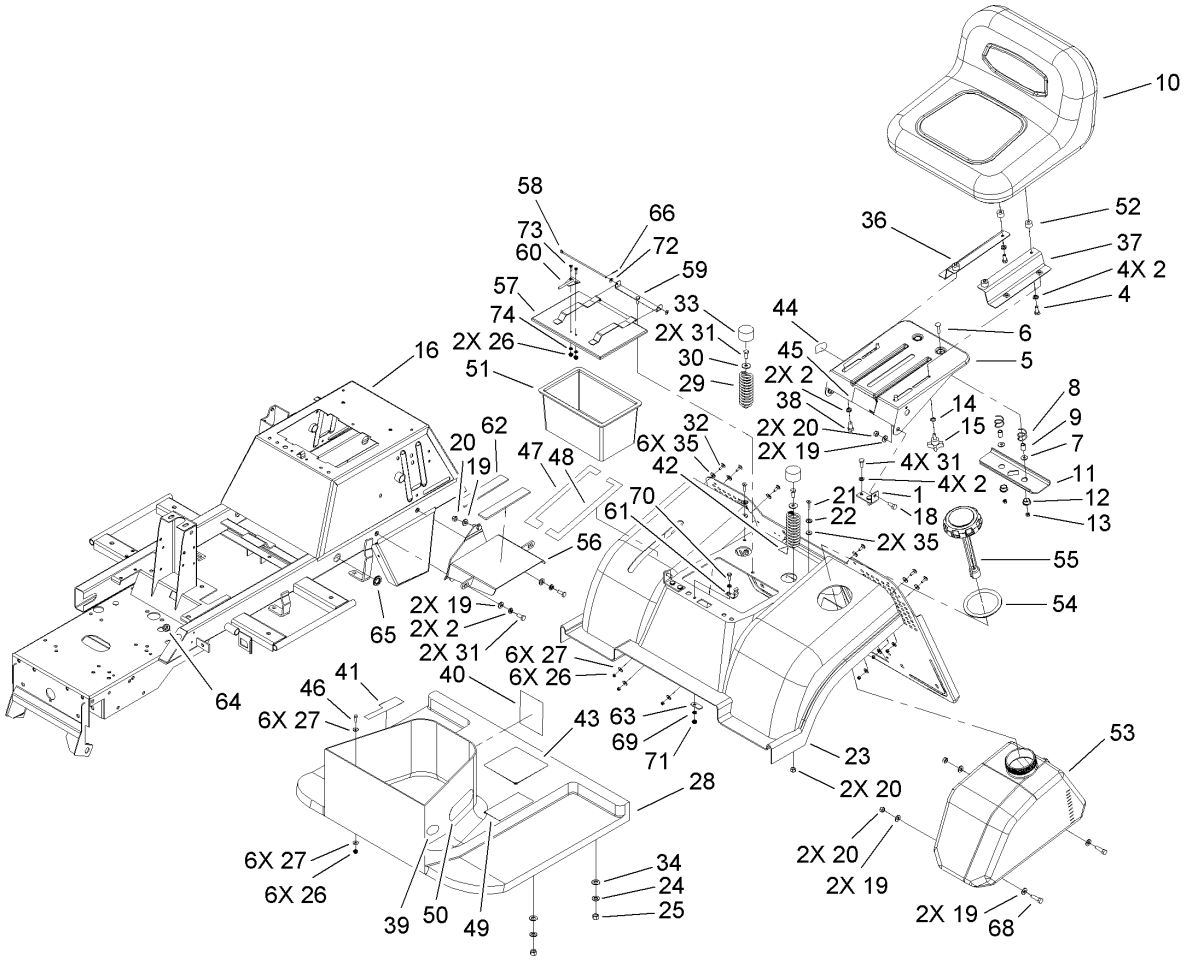

Frame Assembly (continued)


Ref	Part No.	Qty.	Description
51	106-5756	1	Box-Battery
52	107-8924	2	Shim-Seat
53	110-8689	1	Tank-Fuel
54	110-8691	1	Protector-Filler Neck
55	110-8697	1	Cap-Fuel, Assembly
56	110-8684	1	Bracket-Fuel, Tank
57	110-8669	1	Cover-Storage
58	110-8662	1	Hinge-Storage, Cover
59	110-8671	1	Bracket-Storage, Hinge
60	110-8670	1	Latch-Storage, Cover
61	110-8667	1	Catch-Storage, Latch
62	110-8690	2	Strip-Rubber, Fuel Tank
63	110-8666	1	Support-Latch
64	107-8950	1	Grommet
65	110-8683	1	Grommet
66	3272-1	1	Pin-Cotter
68	33114-030	2	Screw-HH
69	33093-00	2	Washer-Flat
70	33113-016	1	Screw-HH
71	33013-00	1	Nut-Hex
72	104-3175	2	Washer
73	106-5759	2	Screw
74	52-6430	2	Washer

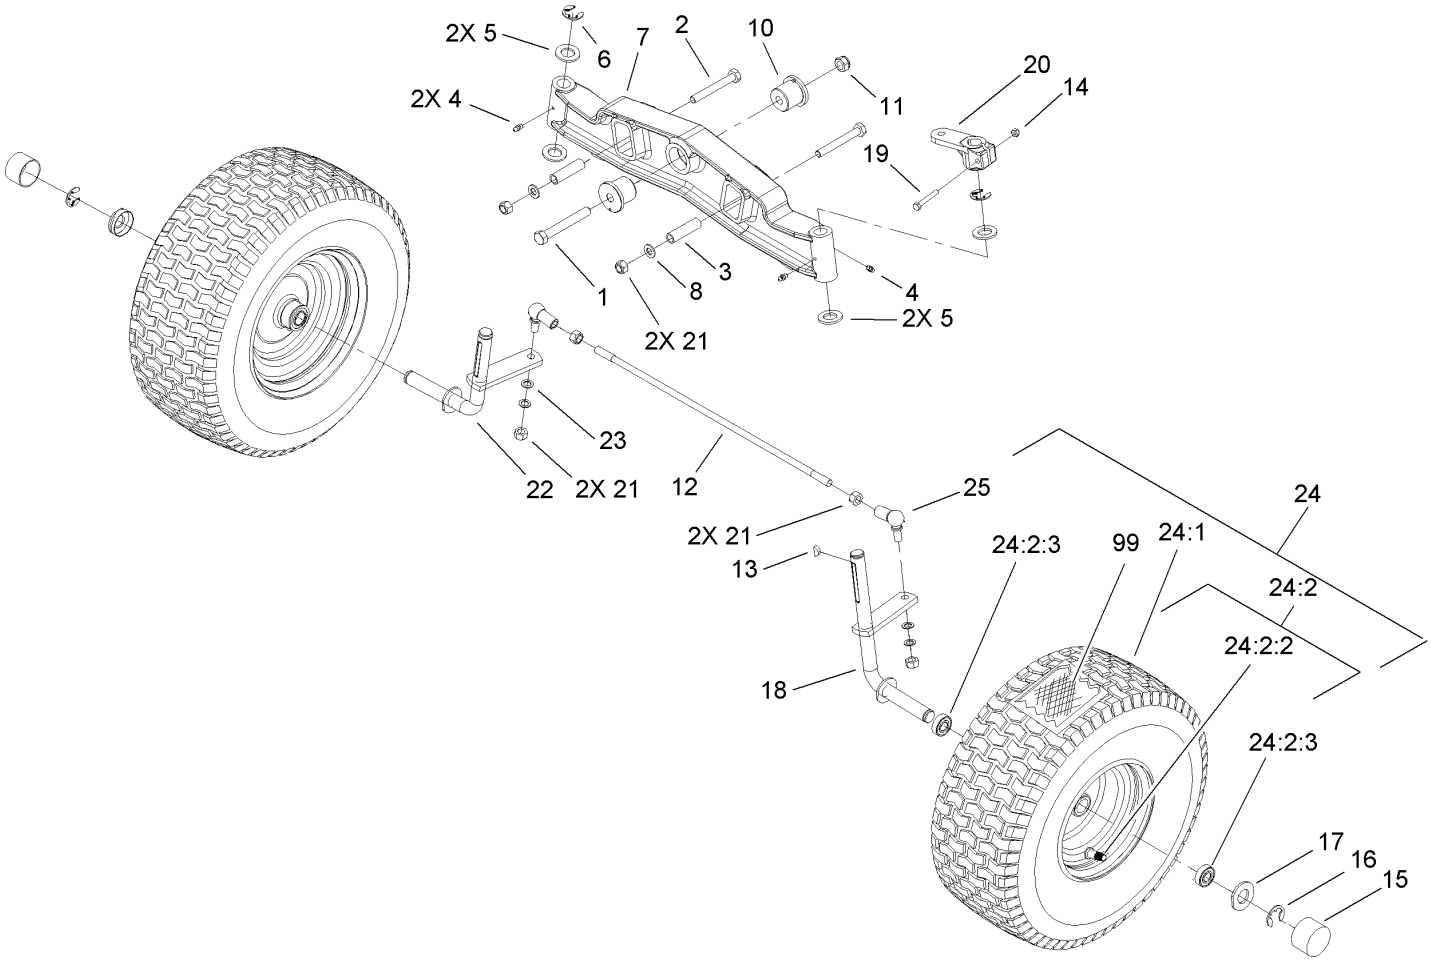

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	4	Washer-Flat
6	104-2891	2	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Self Locking
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
14	33023-00	1	Nut-Lock
15	104-2857	2	Cap-Hub
16	104-2891	2	Clip-Spring
17	107-8998	2	Retainer-Cap, Hub
18	108-8773	1	Spindle-LH
19	33113-045	1	Screw-HH
20	104-2862	1	Lever-Spindle, Steering
21	33025-00	6	Nut-Lock
22	110-9084	1	Spindle-RH
23	106-5757	4	Washer
24	110-9085	2	Wheel/Tire ASM
24:1	99-3696	1	Tire

Ref	Part No.	Qty.	Description
24:2	110-9086	1	Wheel ASM
24:2:2	106-8596	1	Valve-Tire
24:2:3	110513	2	Bearing-Wheel
25	104-2876	2	Joint-Ball, Angle
99	112819	1	Tube-Inner

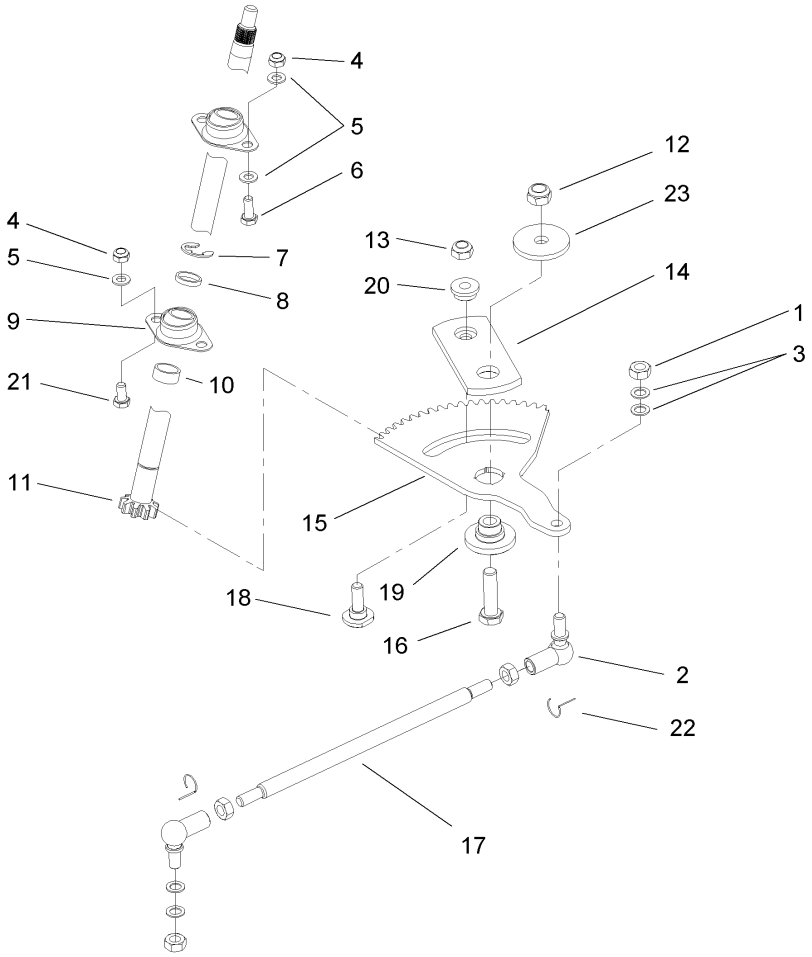

Steering Assembly


Ref	Part No.	Qty.	Description
1	33025-00	4	Nut-Lock
2	104-2876	2	Joint-Ball, Angle
3	106-5757	4	Washer
4	33024-00	4	Nut-Lock
5	33094-00	6	Washer-Plain
6	33114-020	2	Screw-HH
7	104-2891	1	Clip-Spring
8	104-2877	1	Spacer-Upper
9	104-2878	2	Bearing-Spherical
10	104-2879	1	Spacer-Lower
11	106-5773	1	Shaft-Steering
12	33026-00	1	Nut-Lock
13	33025-00	1	Nut-Lock
14	105-1238	1	Plate-Steering
15	104-2883	1	Gear-Sector
16	104-2910	1	Screw-Hex
17	104-2886	1	Link-Drag
18	105-1239	1	Bolt-Shoulder
19	105-1240	1	Pivot-Steering
20	105-1241	1	Bushing
21	33114-016	2	Screw-HH
22	104-2865	2	Stirrups-Locking
23	108-8892	1	Washer

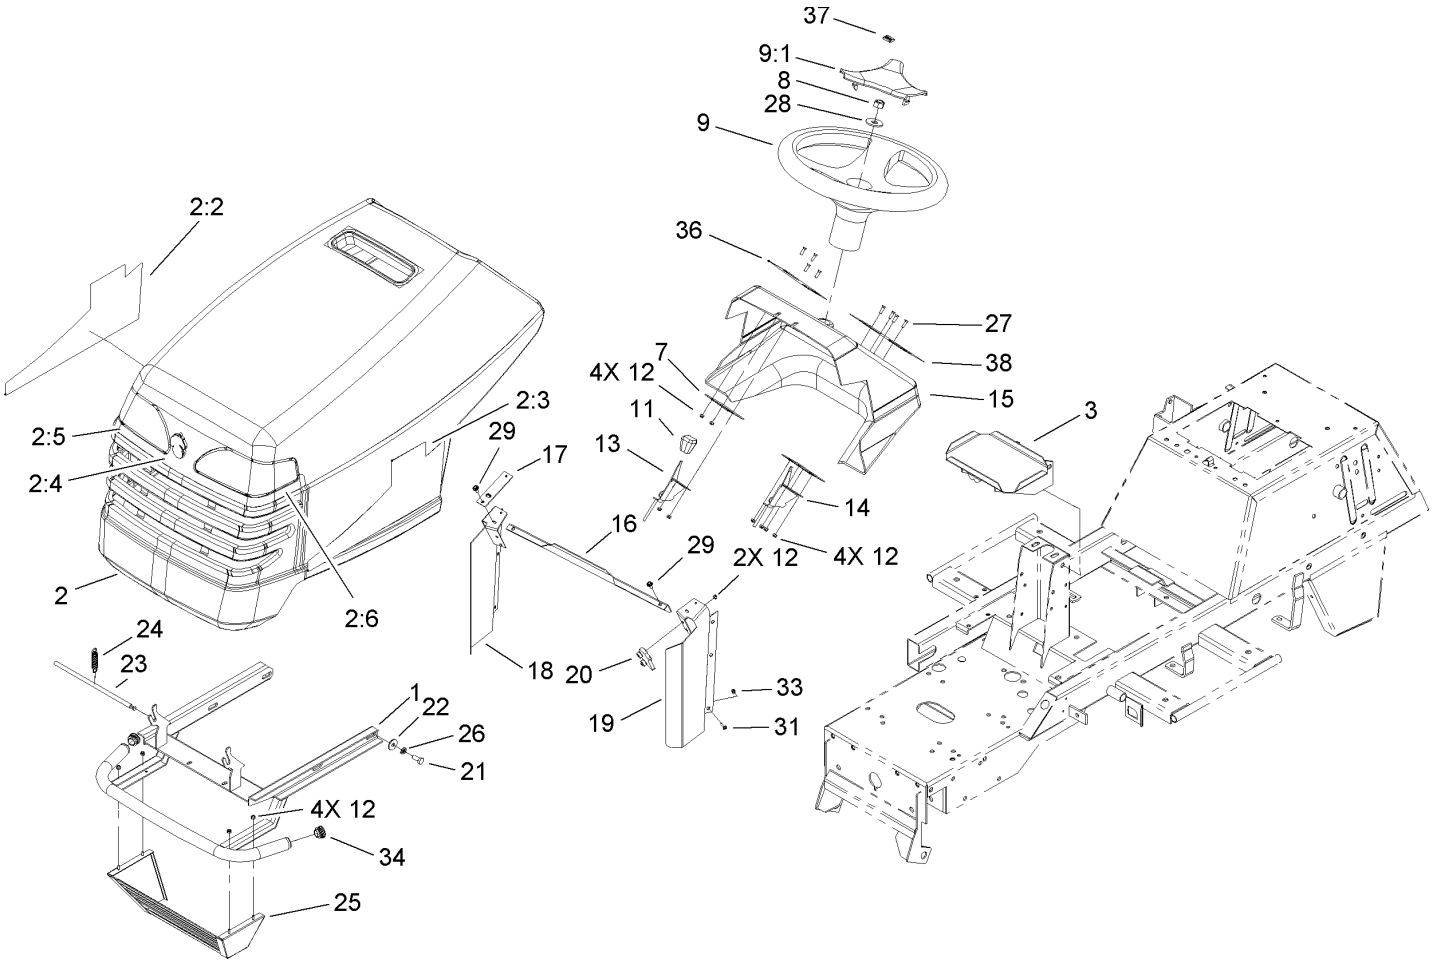

Hood Assembly

Ref	Part No.	Qty.	Description
1	107-2216	1	Support-Bumper
2	107-8990	1	Hood-Assembly
2:2	107-8913	1	Decal-Hood, RH
2:3	107-8902	1	Decal-Hood, LH
2:4	95-4248	1	Decal
2:5	107-8983	1	Lens-Headlamp, RH
2:6	107-8984	1	Lens-Headlamp, LH
3	110-8679	1	Tray-Battery
7	104-2962	2	Brace
8	33026-00	1	Nut-Lock
9	98-1472	1	Wheel-Steering
9:1	98-1468	1	Cover-Wheel, Steering
11	66-0120	2	Knob
12	87-5140	14	Nut-Lock
13	92-6784	1	Control-Throttle, Twin
14	92-6783	1	Control-Choke, Twin
15	104-2968	1	Panel-Dash
16	104-2970	1	Brace
17	104-2971	1	Bracket
18	104-2972	1	Panel-Right
19	104-2973	1	Panel-Left
20	92-6960	2	Latch-Hood
21	33114-020	4	Screw-HH
22	104-2946	4	Washer-Plain


Ref	Part No.	Qty.	Description
23	104-2974	1	Bar-Safety
24	104-2975	1	Spring-Hood
25	107-2218	1	Guard-Muffler
26	42-9850	4	Washer-Lock, Spring
27	106-5759	8	Screw
28	106-5758	1	Washer
29	104-2980	2	Screw
31	107-8918	6	Screw
33	104-2985	6	Nut-Hex
34	107-8943	2	End Cap-Tube
36	104-3234	1	Decal
37	98-1459	1	Decal
38	104-3233	1	Decal-Choke/PTO

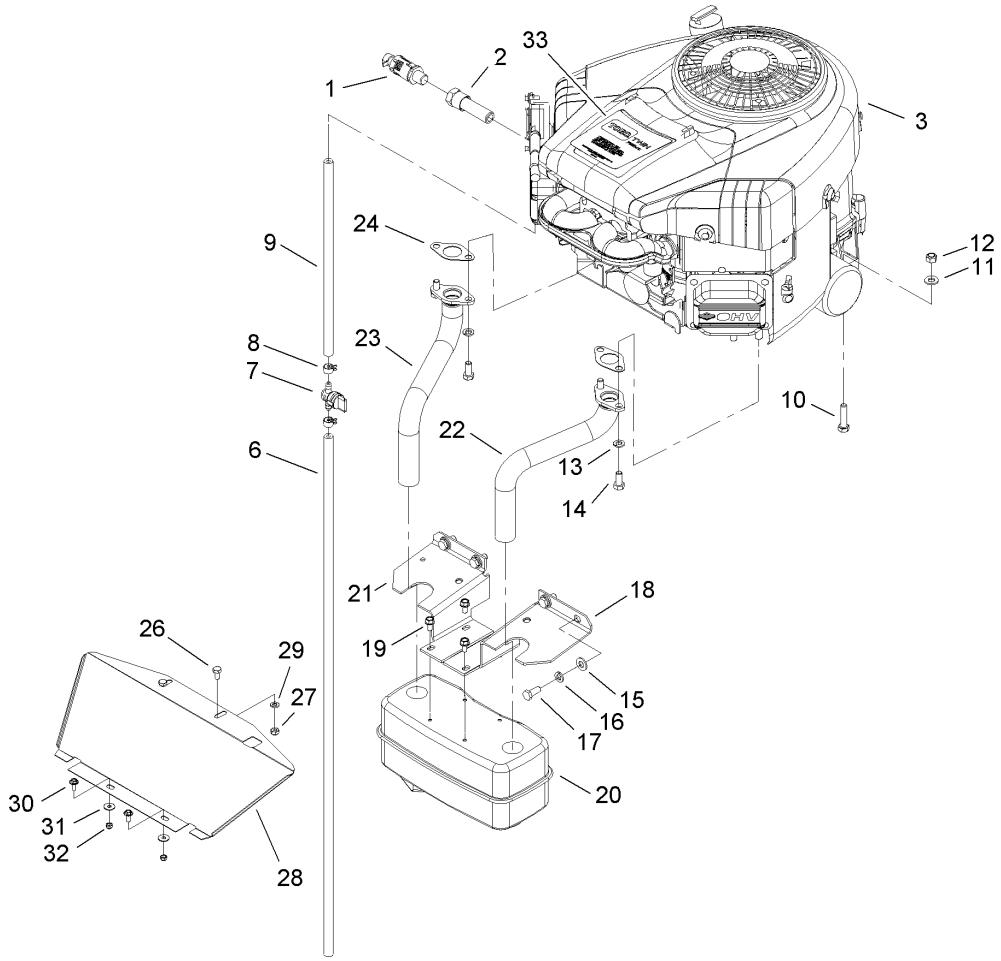

Engine Assembly

Ref	Part No.	Qty.	Description
1	104-3208	1	Valve-Oil Drain
2	106-5764	1	Coupler-Oil Drain
❷❸3		1	Engine-Briggs And Stratton, 441677-0136-E1
6	110-8692	1	Line-Fuel
7	104-3224	1	Valve-Tank, Fuel
8	104-3212	4	Clamp-Line, Fuel
9	110-8696	1	Line-Fuel
10	33114-035	4	Screw-HH
11	33094-00	4	Washer-Plain
12	33024-00	4	Nut-Lock
13	104-2927	4	Washer-Spring
14	322-3	4	Screw-HH
15	33094-00	4	Washer-Plain
16	104-2927	4	Washer-Spring
17	33114-020	4	Screw-HH
18	104-3214	1	Guard-Muffler, LH
19	106-5763	4	Screw
20	104-3225	1	Muffler
21	104-3215	1	Guard-Muffler, RH
22	104-3216	1	Tube-Exhaust, LH
23	104-3217	1	Tube-Exhaust, RH
24	104-3226	2	Gasket-Exhaust
26	33113-012	2	Screw-HH


Ref	Part No.	Qty.	Description
27	33023-00	2	Nut-Lock
28	104-3219	1	Shield-Heat
29	33093-00	2	Washer-Flat
30	104-2980	2	Screw
31	104-2943	2	Washer-Flat
32	87-5140	2	Nut-Lock
33	110-6516	1	Decal

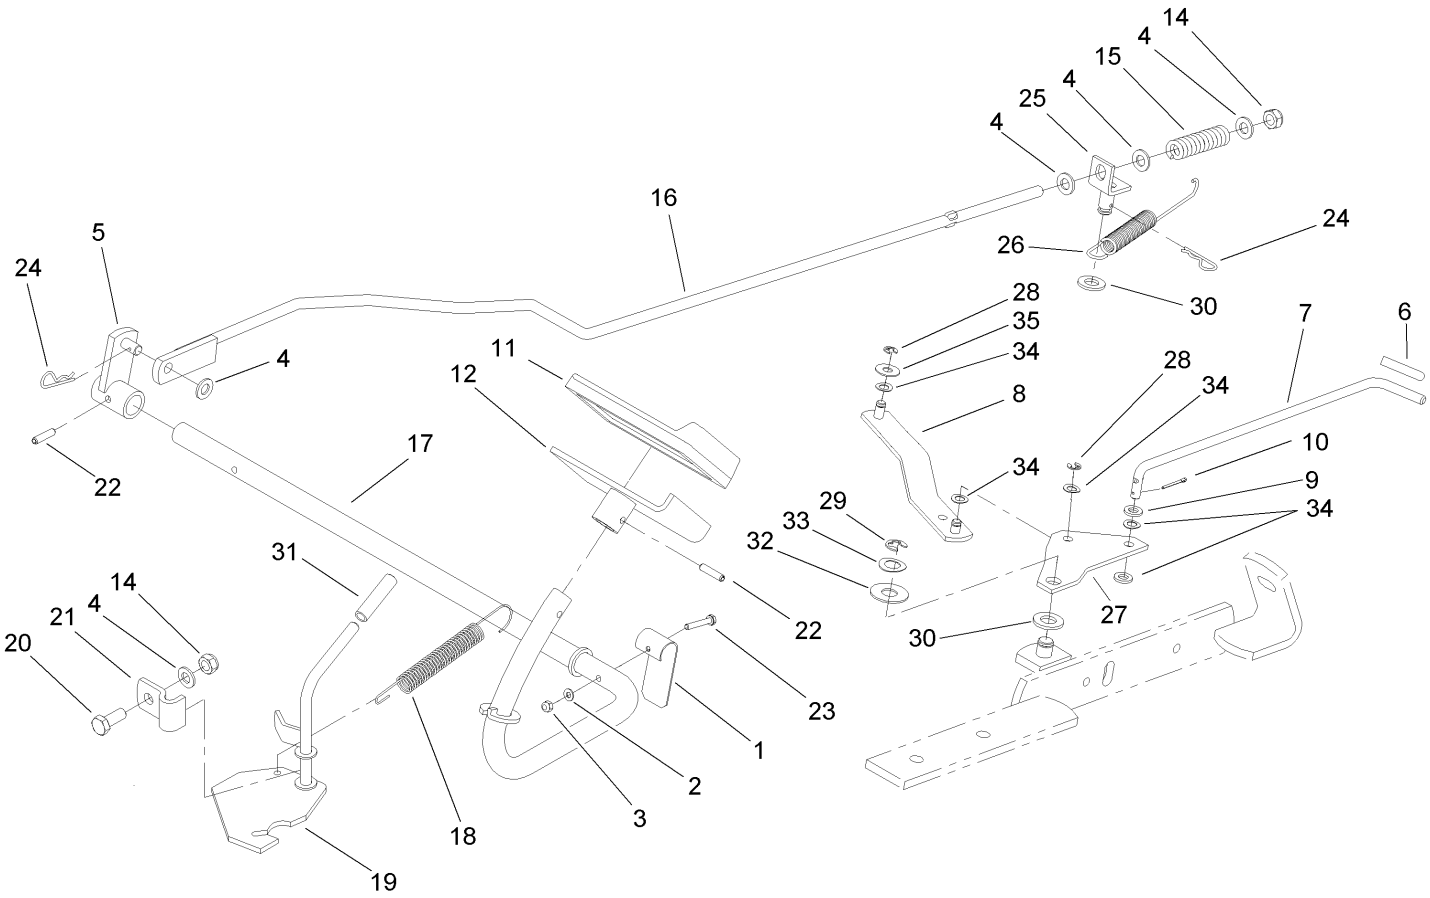

Operation - Brake and Bypass Assembly


Ref	Part No.	Qty.	Description
1	104-2992	1	Lever-Spring
2	104-2984	1	Washer
3	104-2985	1	Nut-Hex
4	33094-00	5	Washer-Plain
5	104-2993	1	Bracket-Rod, Brake
6	108-8708	1	Cap-Bypass Lever, Hydro
7	104-2995	1	Rod-Lever, Bypass
8	104-3324	1	Lever-Bypass
9	104-3193	2	Washer
10	104-2997	1	Pin-Cotter
11	104-2998	1	Pad-Pedal
12	104-2999	1	Pedal
14	33024-00	2	Nut-Lock
15	104-3002	1	Spring-Brake
16	104-3003	1	Rod-Connecting, Brake
17	104-3246	1	Shaft-Brake
18	104-3005	1	Spring-Brake, Hand
19	104-3006	1	Lever-Brake, Hand
20	33114-020	1	Screw-HH
21	104-3007	1	Clamp-Lever, Parking Brake
22	104-3008	2	Pin-Spring
23	104-3009	1	Screw-Hex
24	104-3016	2	Pin-Cotter
25	104-3011	1	Bracket-Rod, Brake

Ref	Part No.	Qty.	Description
26	104-3012	1	Spring
27	104-3323	1	Plate-Bypass
28	104-3014	2	Stirrup
29	104-3015	1	Stirrup
30	33095-00	2	Washer-Flat
31	104-3247	1	Cap
32	106-5768	1	Washer
33	106-5769	1	Washer
34	106-5770	4	Washer
35	106-5771	1	Washer

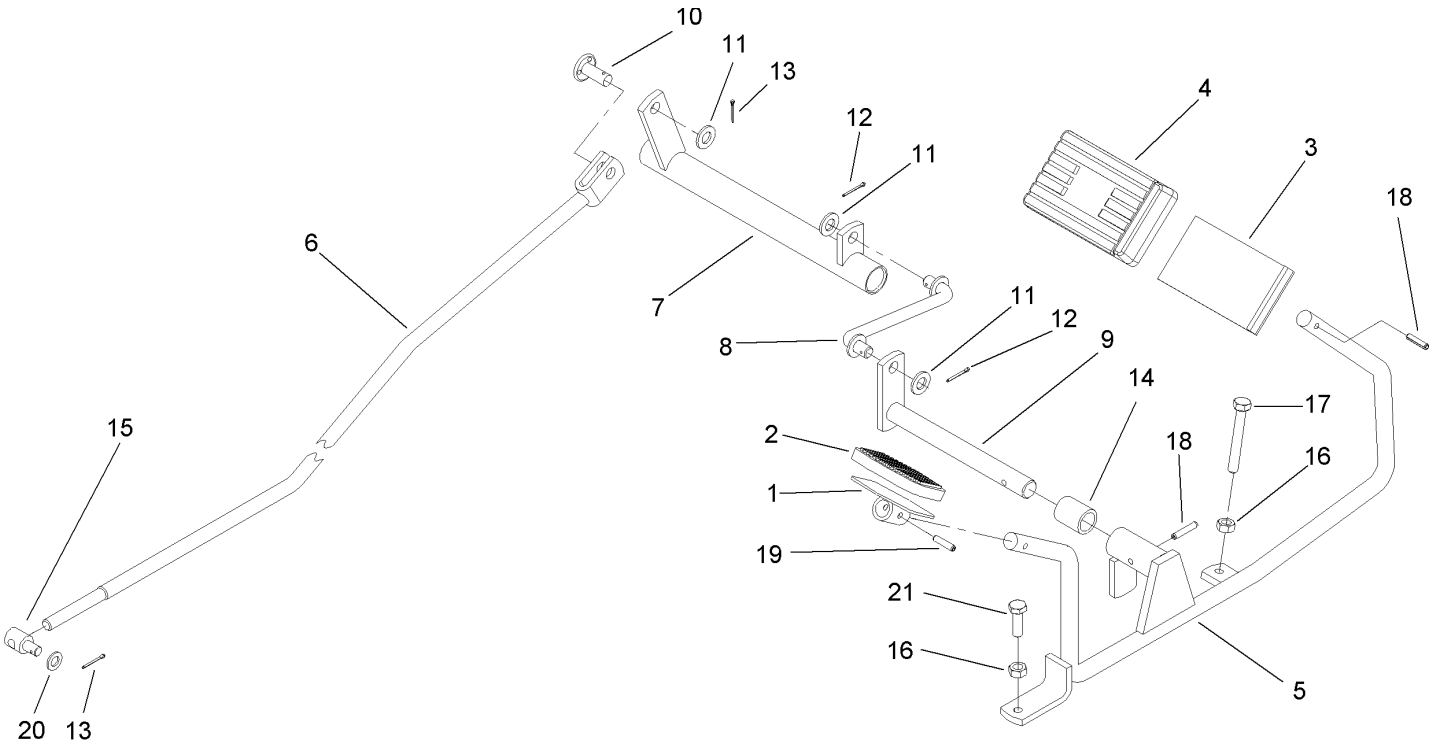

Operation and Travel Pedal Assembly


Ref	Part No.	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	1	Pad-Pedal
3	104-3019	1	Pedal-Travel, Front
4	104-3020	1	Pad-Pedal, Front
5	104-3021	1	Pad-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	104-3026	1	Pin
11	33095-00	3	Washer-Flat
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	2	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer
21	33114-025	1	Screw-HH

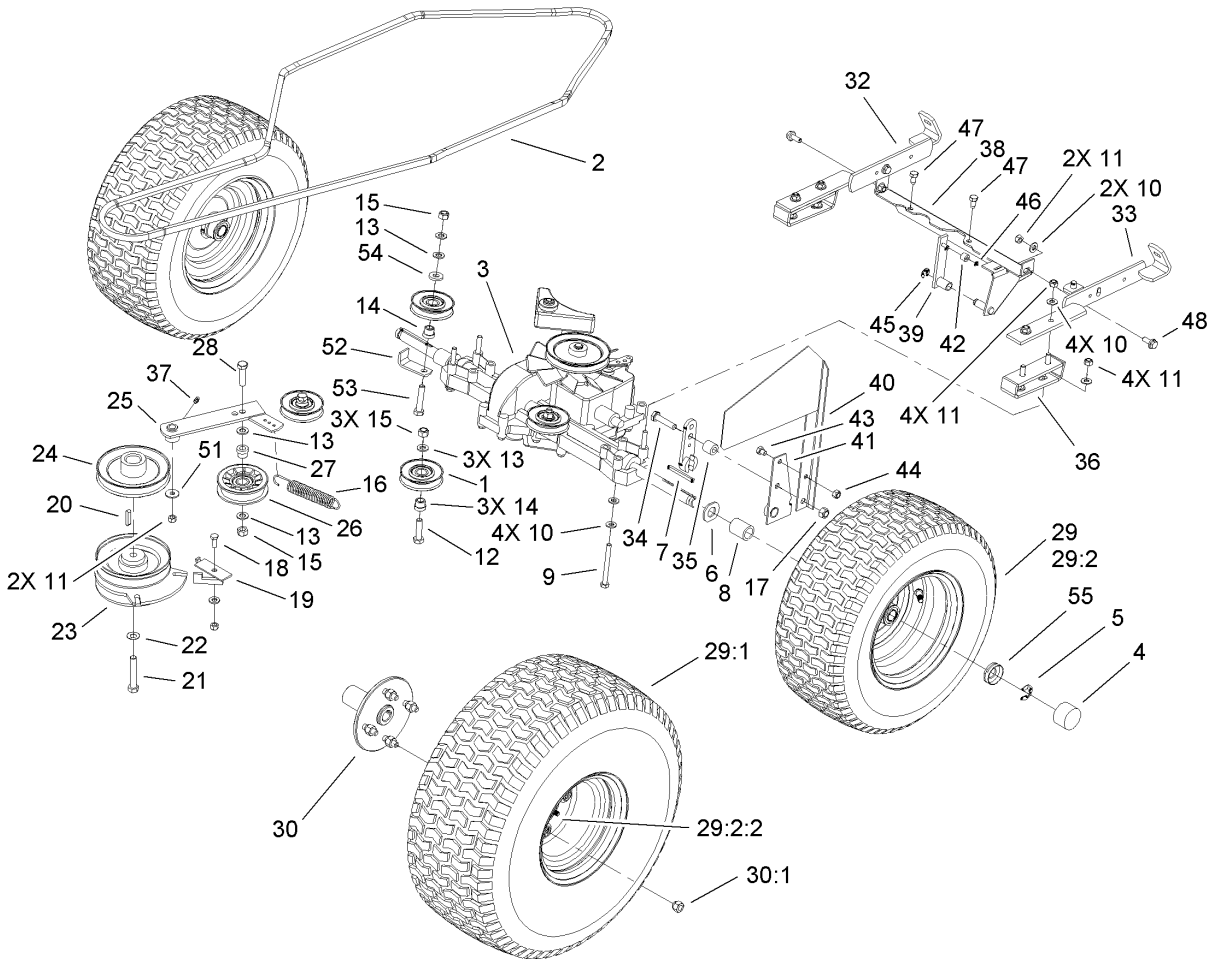

Transmission Assembly


Ref	Part No.	Qty.	Description
1	104-2887	4	Pully-Idler
2	104-2888	1	V-Belt-Traction
3	104-2889	1	Transmission
4	104-2857	2	Cap-Hub
5	104-2891	2	Clip-Spring
6	104-3206	2	Washer
7	104-2892	2	Key-Square
8	104-2895	2	Spacer-Axle
9	33114-080	4	Screw-HH
10	33094-00	10	Washer-Plain
11	33024-00	12	Nut-Lock
12	33115-040	3	Screw-HH
13	33095-00	6	Washer-Flat
14	104-2896	4	Bushing-Idler
15	33025-00	5	Nut-Lock
16	104-2897	1	Spring
17	33025-00	1	Nut-Lock
18	33114-020	1	Screw-HH
19	104-2898	1	Retainer
20	104-2899	1	Key-Square
21	3212-10	1	Screw-HH
22	93-9043	1	Washer-Spring, Belleville
23	104-3334	1	Clutch-Electric
24	104-2911	1	Pulley-Engine

Ref	Part No.	Qty.	Description
25	104-2912	1	Arm-Idler
26	104-2913	1	Pulley-Idler
27	104-2896	1	Bushing-Idler
28	33115-040	1	Screw-HH
29	107-8929	2	Tire And Wheel ASM
29:1	99-2994	1	Tire
29:2	107-8932	1	Wheel ASM
❶❷29:2:1		1	Rim
29:2:2	106-8596	1	Valve-Tire
30	108-8718	2	Hub-Wheel
30:1	108-8717	4	Nut-Lug
32	106-8594	1	Bracket-Right
33	106-8593	1	Bracket-Left
34	33115-045	1	Screw-HH
35	104-2925	1	Sleeve
36	104-3343	2	Plate-Reinforcing
37	104-2904	1	Fitting-Grease
38	104-3327	1	Bar ASM
39	104-3328	1	Arm-Switch
40	104-3325	1	Arm-Control, Cruise
41	104-3326	1	Tenon
42	104-3329	1	Roller
43	33114-010	1	Screw-HH
44	33024-00	1	Nut-Lock

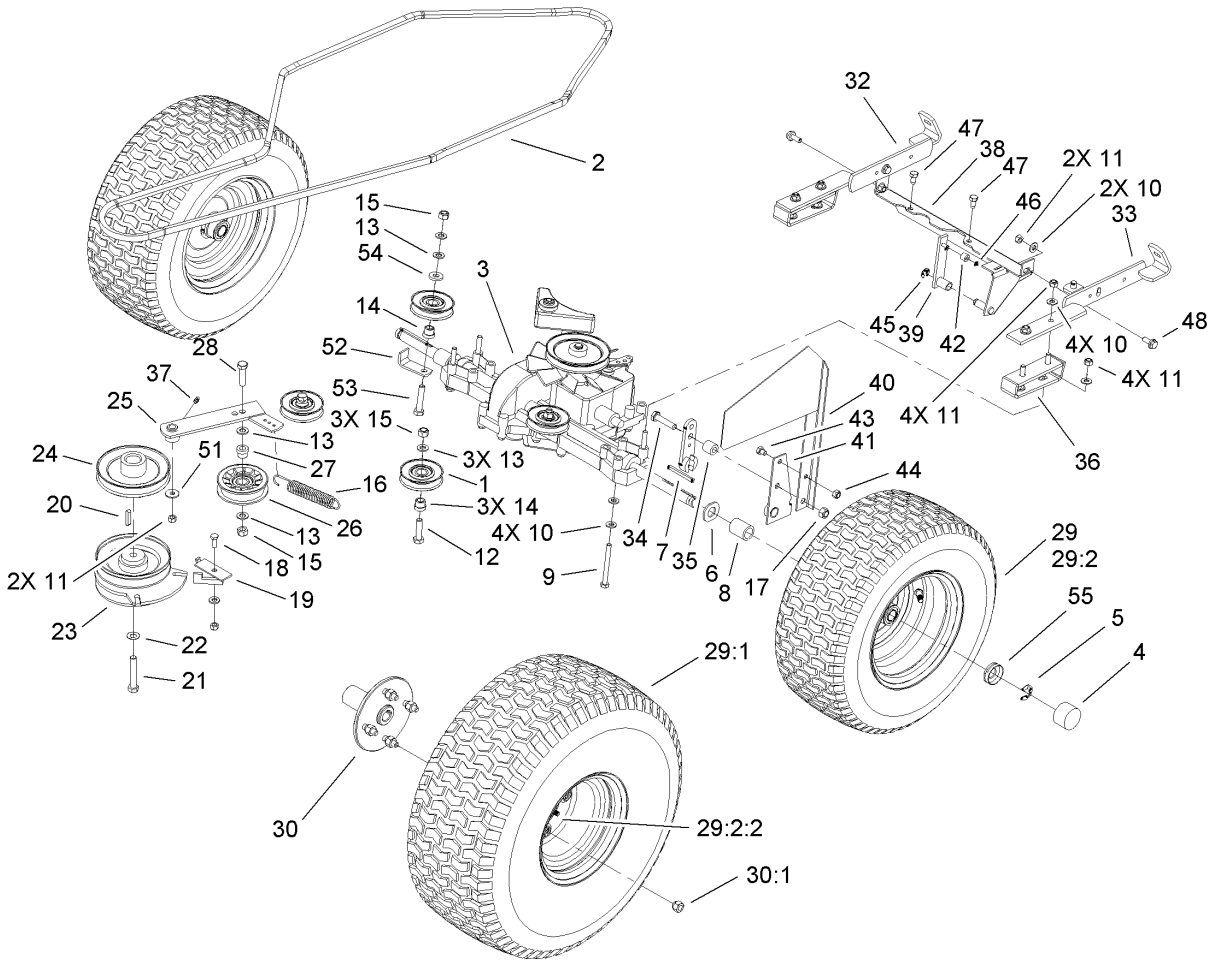


Transmission Assembly (continued)

Ref	Part No.	Qty.	Description
45	104-3341	1	Stirrup
46	104-3014	1	Stirrup
47	104-3344	2	Screw-Thread Forming
48	104-3065	2	Screw-Hex
51	104-2946	2	Washer-Plain
52	108-8732	1	Retainer-Belt
53	33115-050	1	Screw-HH
54	108-8709	1	Washer-Flat
55	107-8998	2	Retainer-Cap, Hub
❶99	232-37	1	Tube

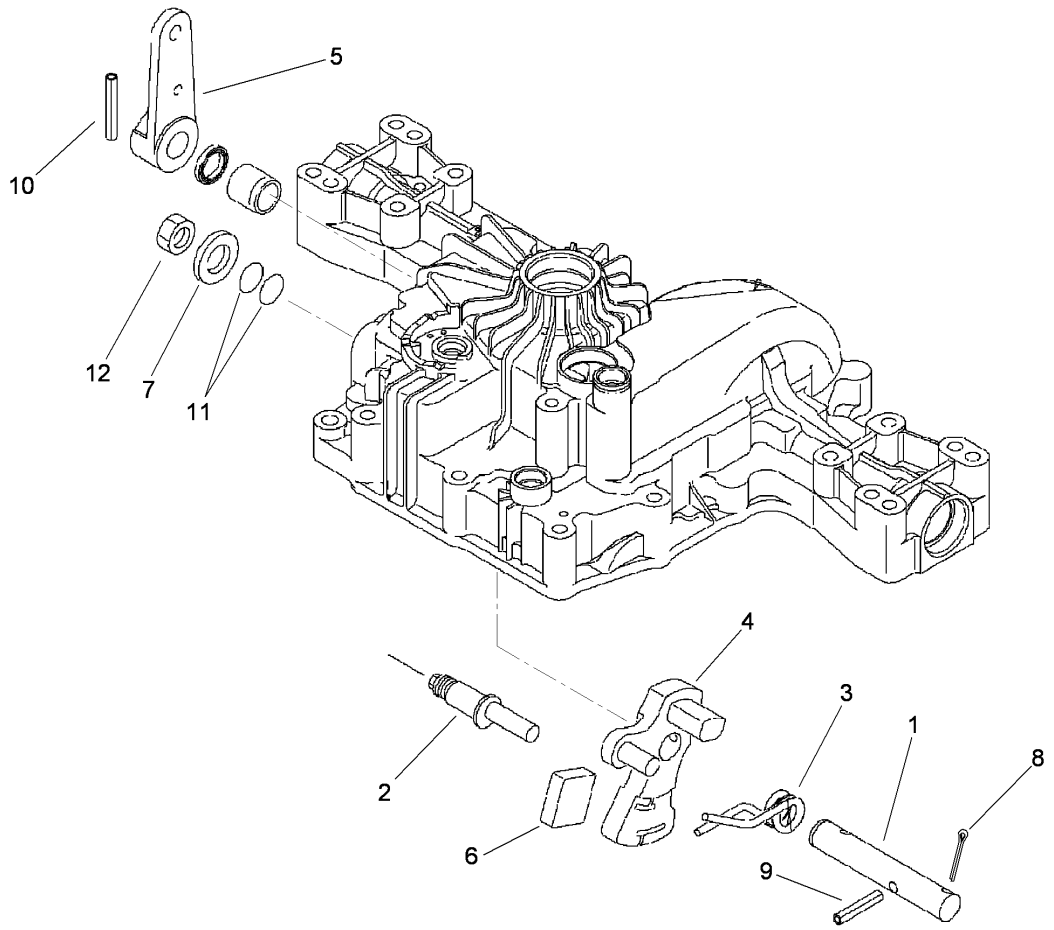


Control Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	104-3293	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

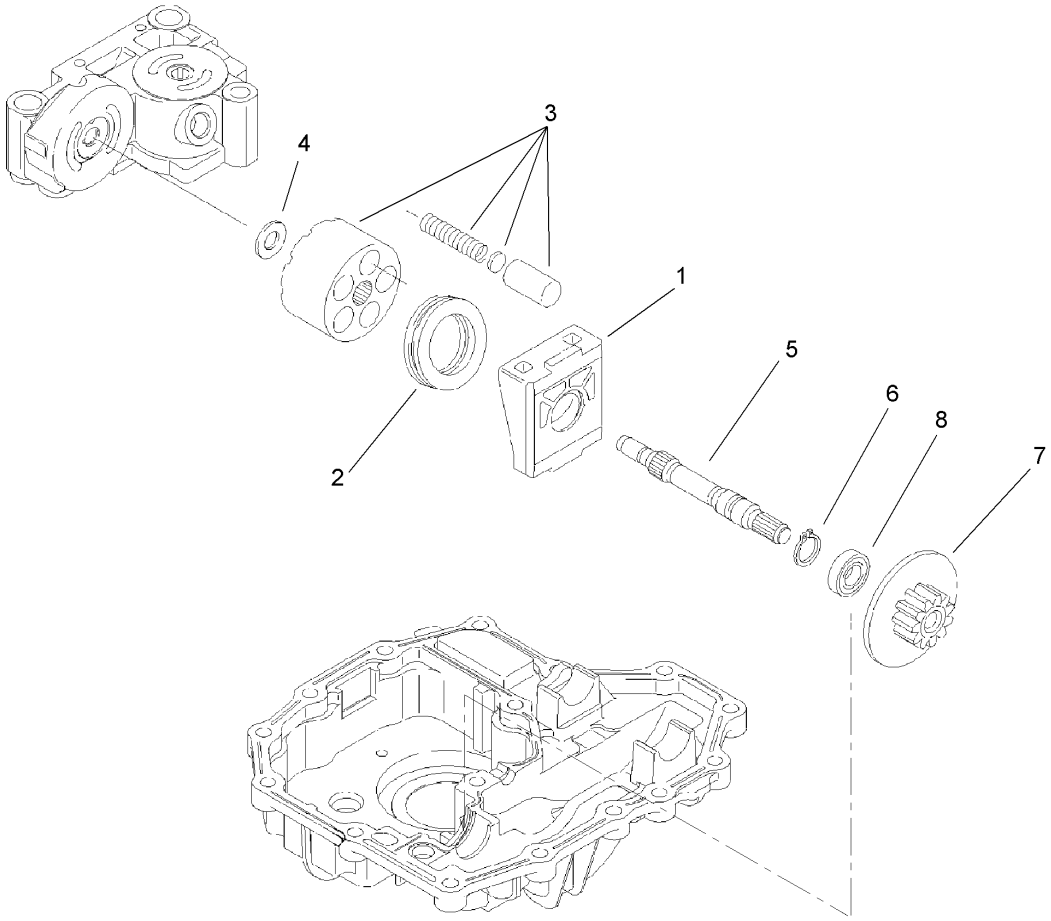


Motor Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

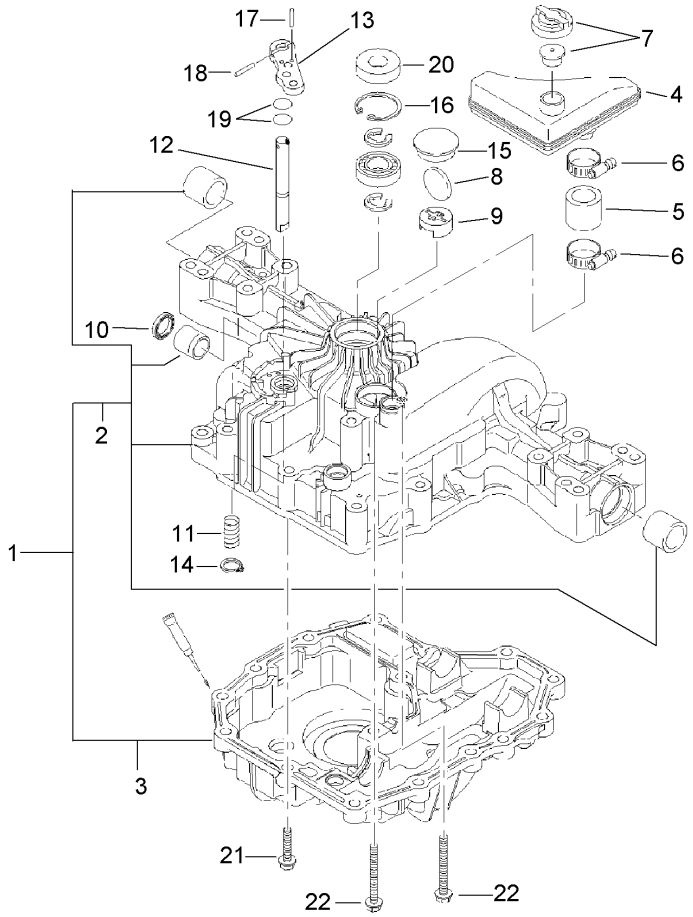


Transaxle Case Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Tank-Reservoir, With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-TAP

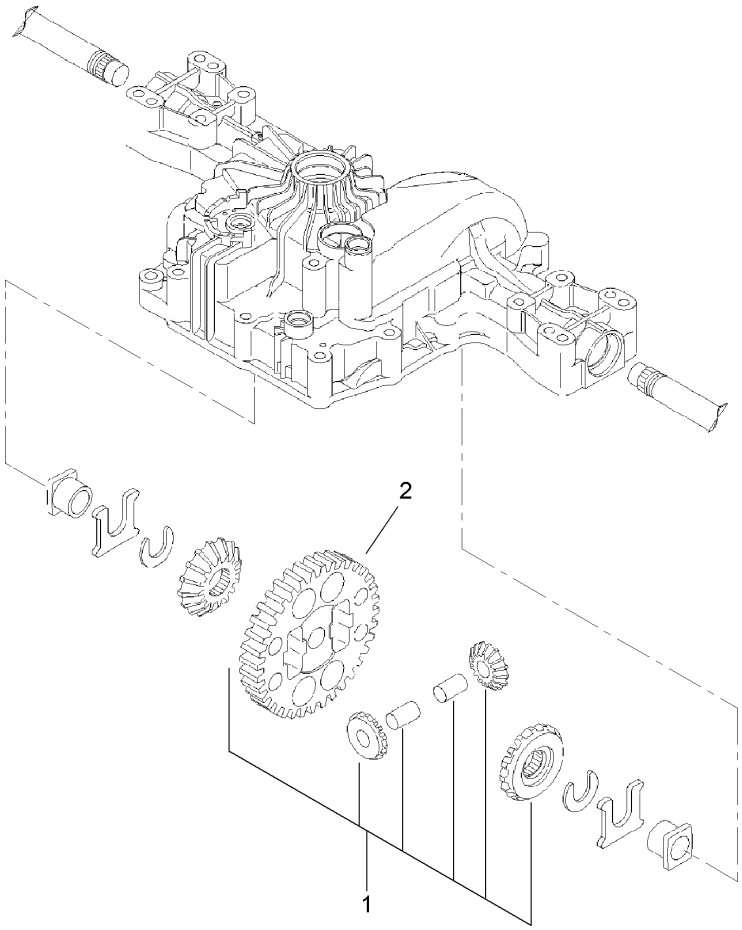


Differential Gear Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

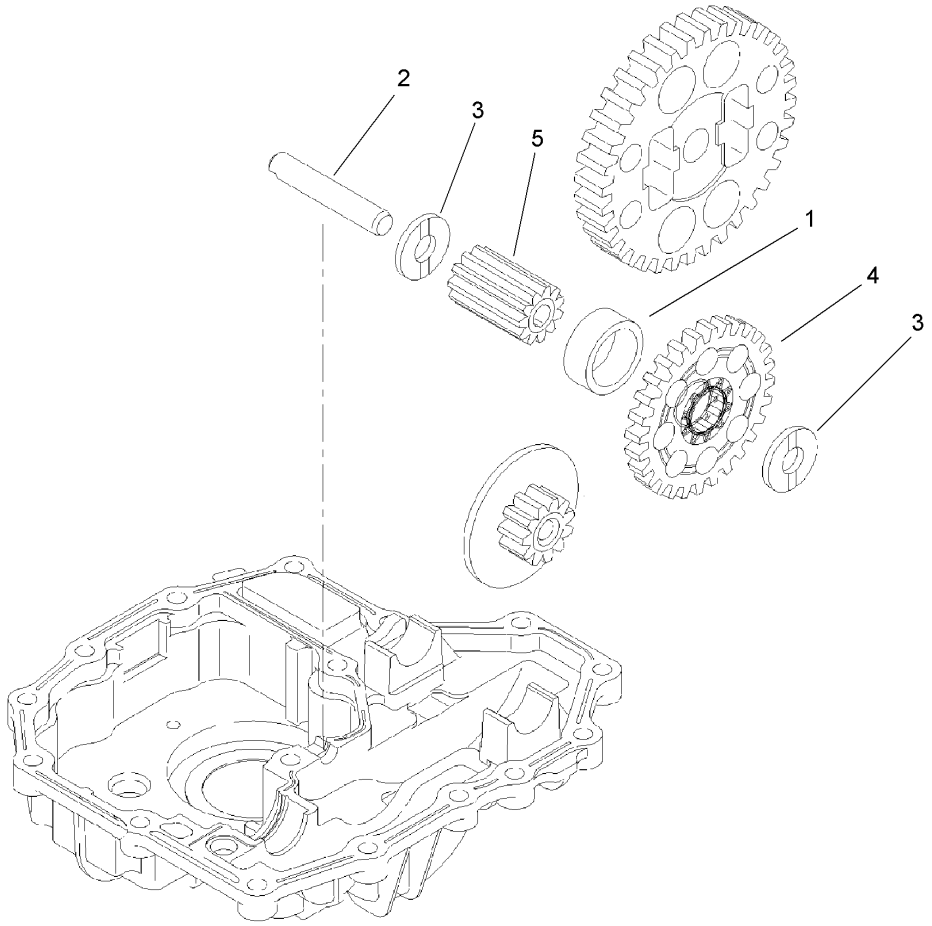


Final Pinion Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3302	1	Collar-Final Pinion
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

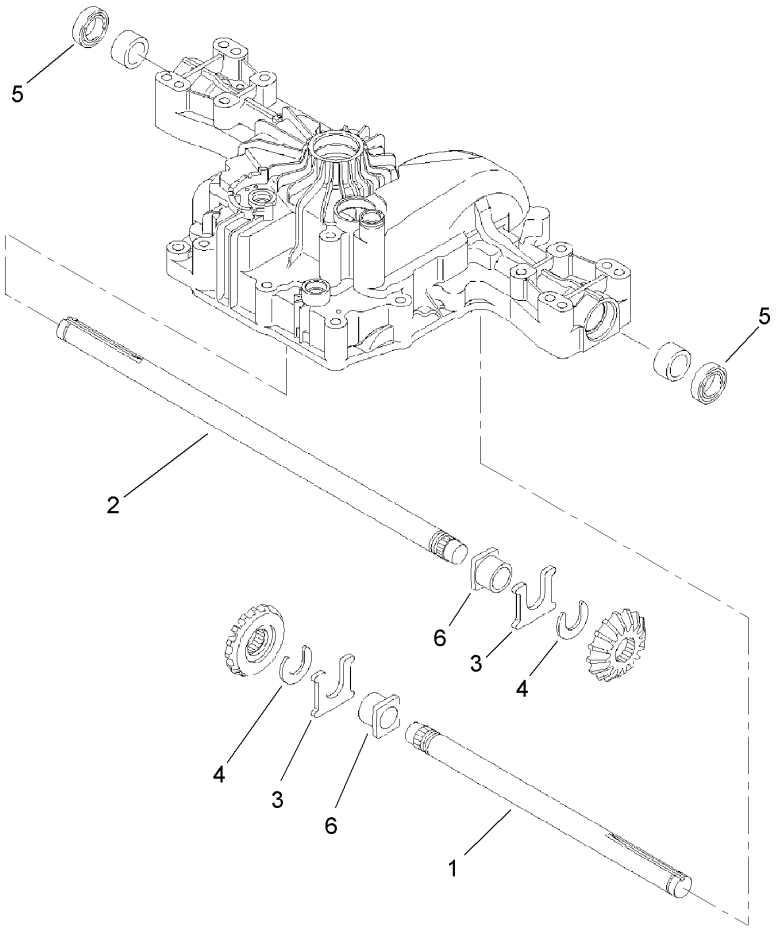


Axle Shaft Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3307	1	Shaft-Axle, LH
2	104-3308	1	Shaft-Axle, RH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

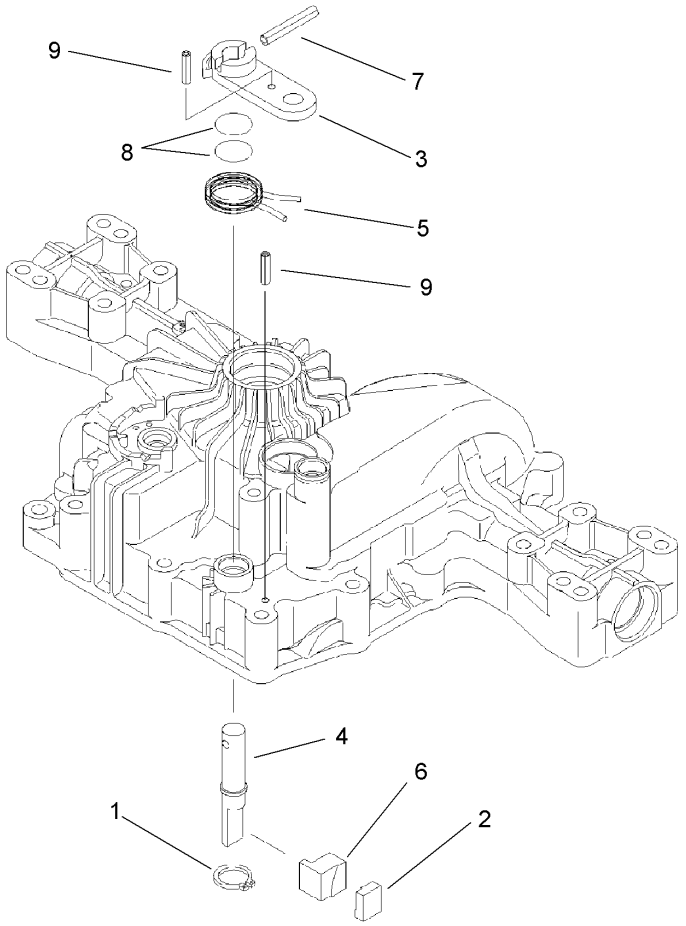


Brake Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	92-0786	2	O-Ring
9	104-3319	2	Pin

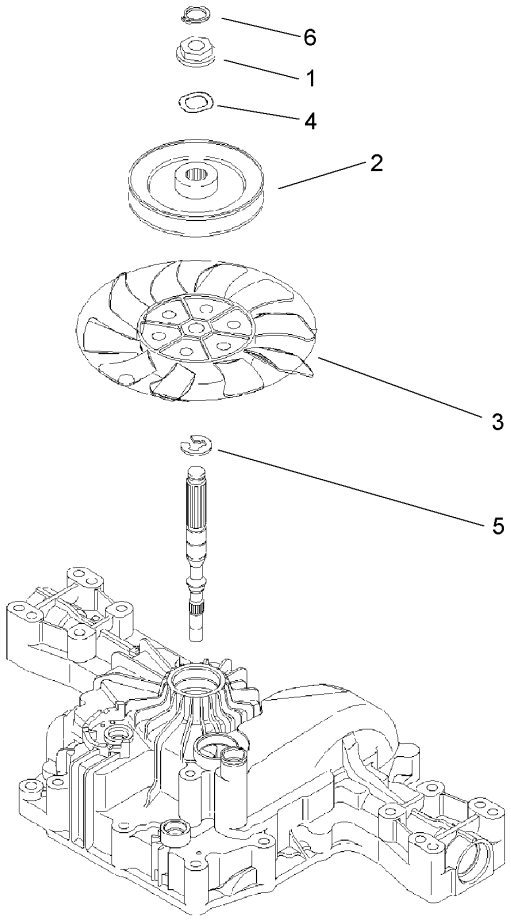


Fan Pulley Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan- Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

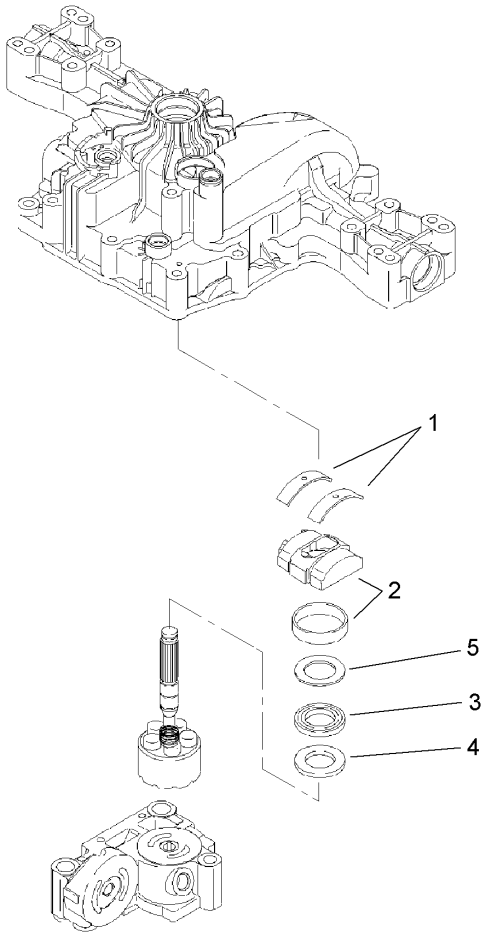


Range Shift Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

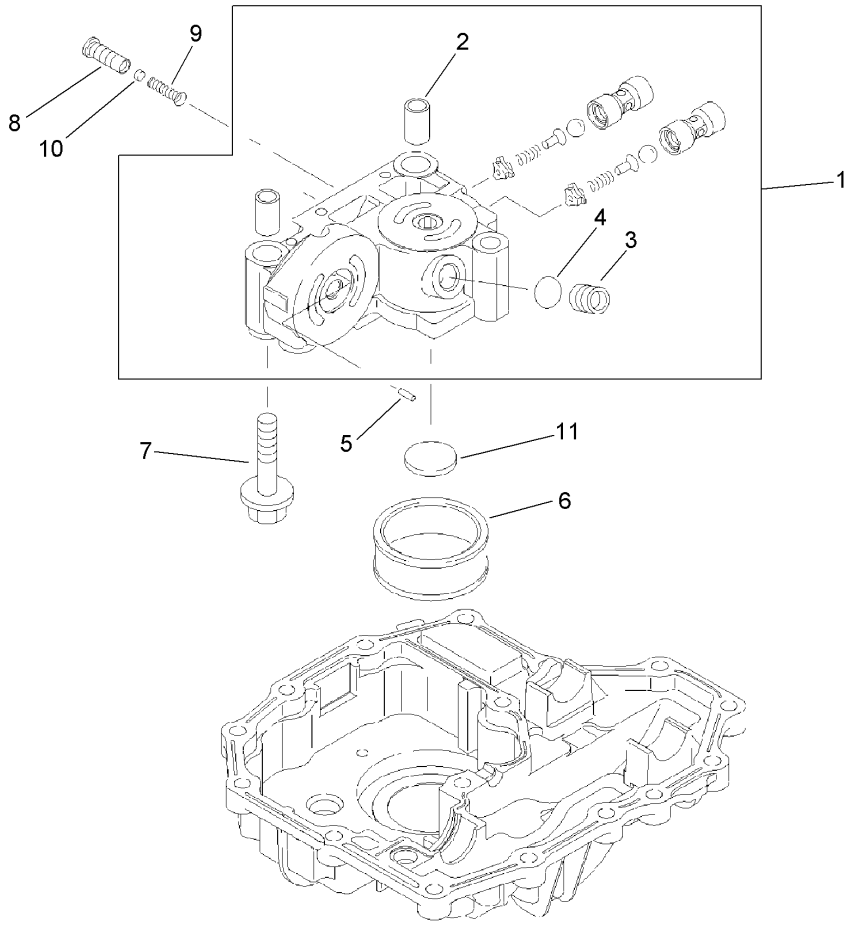


Center Case Assembly
Transmission Assembly No. 104-2889

Ref	Part No.	Qty.	Description
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

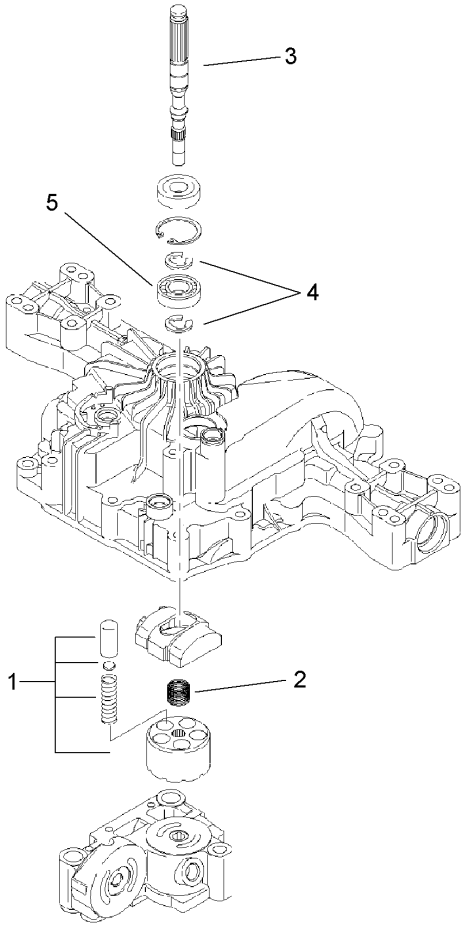

Pump Shaft Assembly
Transmission Assembly No. 104-2889


Ref	Part No.	Qty.	Description
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

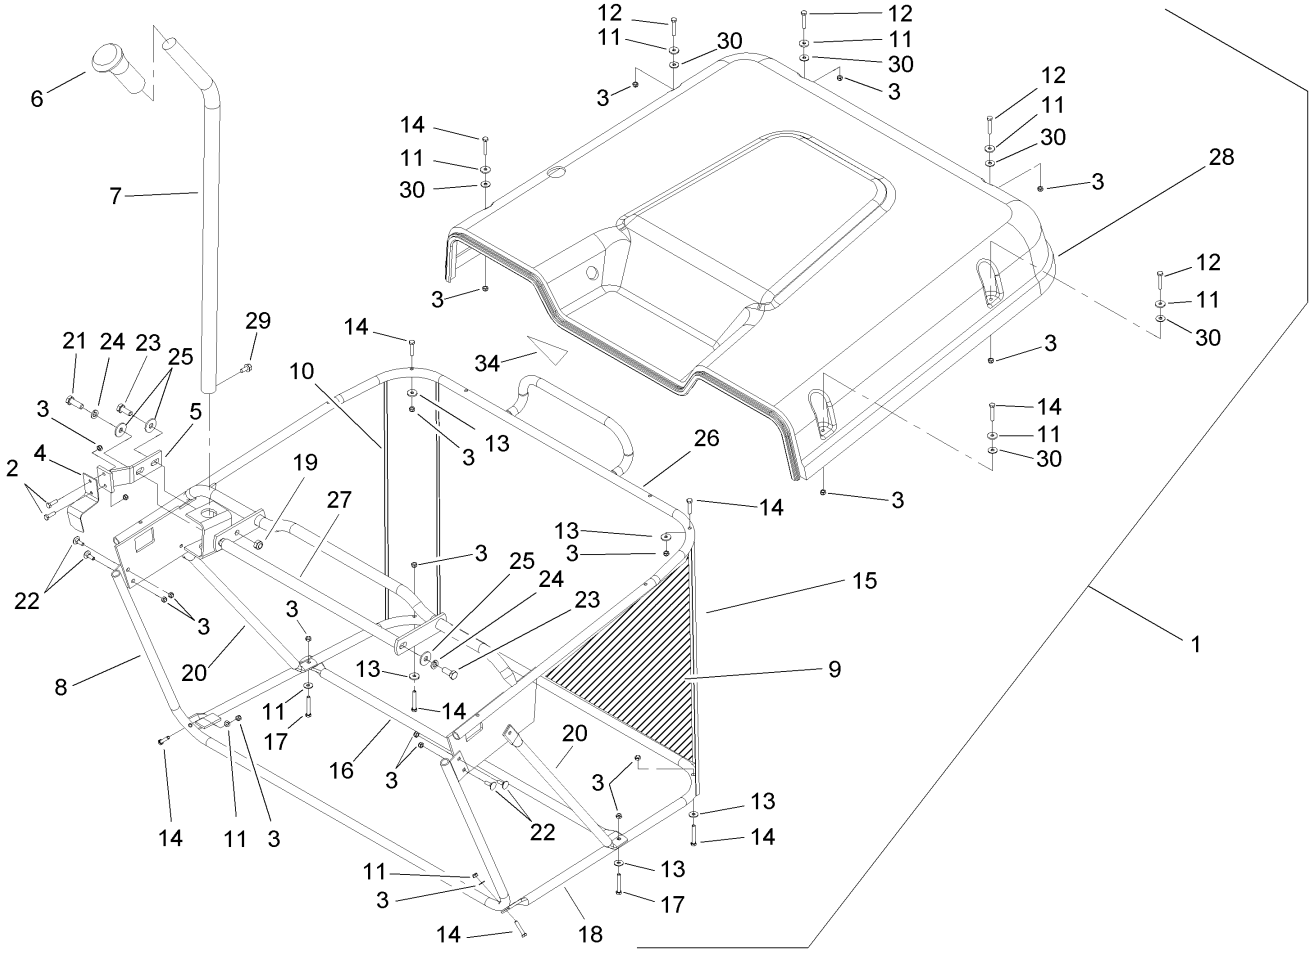

Grass Collector Assembly No. 106-5760

Ref	Part No.	Qty.	Description
1	106-5760	1	Collector ASM
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	42-9850	2	Washer-Lock, Spring


Ref	Part No.	Qty.	Description
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

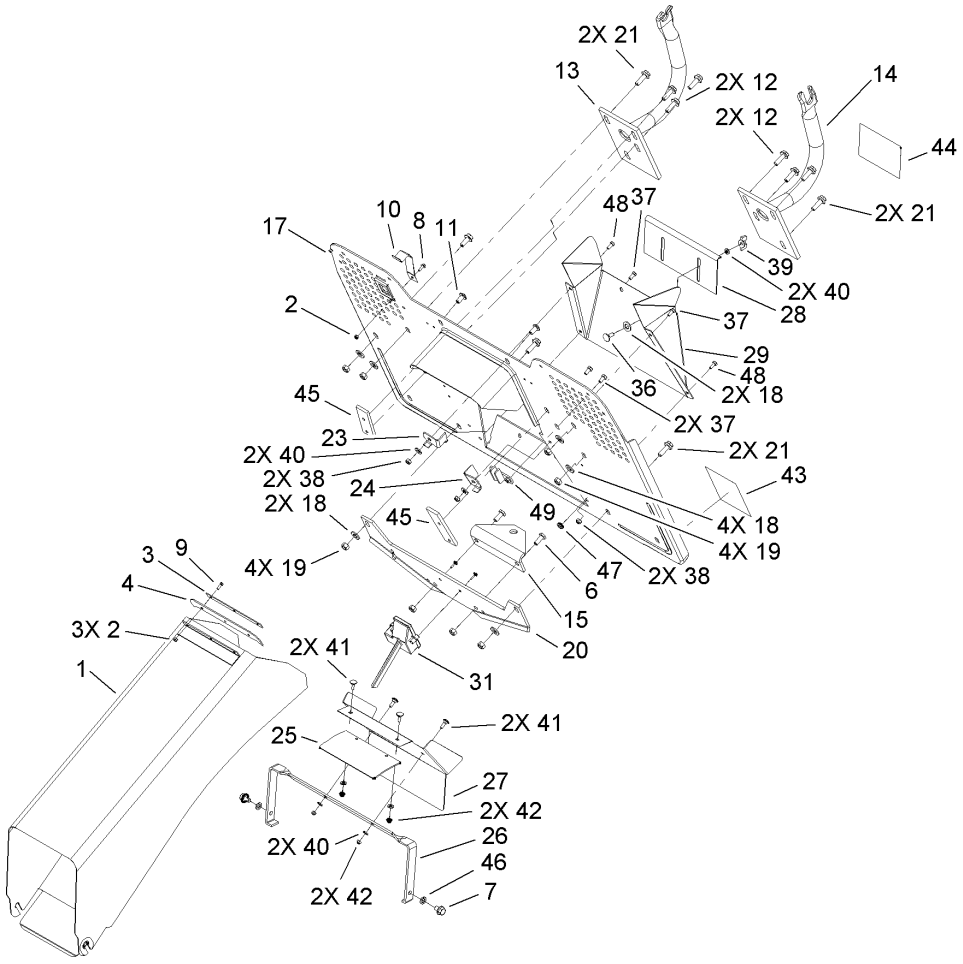

Tunnel Assembly

Ref	Part No.	Qty.	Description
1	106-8562	1	Tunnel
2	104-2985	4	Nut-Hex
3	104-3055	1	Plate-Support
4	104-3056	1	Seal-Rubber
6	33114-020	2	Screw-HH
7	68-9410	2	Screw-Flange
8	104-2983	1	Screw
9	104-3058	3	Screw-SFH
10	104-3059	1	Cover-Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	104-3064	1	Hitch-Tow
17	104-3066	1	Collector Plate ASM
18	33095-00	8	Washer-Flat
19	33024-00	8	Nut-Lock
20	104-3067	1	Support-Hitch, Tow
21	104-3068	6	Screw-Hex
23	106-8597	1	Support-Tunnel, Left
24	106-8598	1	Support-Tunnel, Right
25	106-8599	1	Shield-Rubber
26	104-3069	1	Bracket-Shield, Protective
27	104-3070	1	Shield-Protective


Ref	Part No.	Qty.	Description
28	104-3336	1	Shield-Adjustable
29	104-3335	1	Hopper-Receiving
31	104-3074	1	Overload Switch ASM
36	104-2961	2	Screw
37	33113-012	4	Screw-HH
38	33023-00	4	Nut-Lock
39	32103-28	2	Nut-Wing
40	33093-00	6	Washer-Flat
41	104-2948	4	Bolt-Carriage
42	87-5140	4	Nut-Lock
43	104-3243	1	Decal-Bypass, Hydro
44	104-2853	1	Decal-Position, Bagging
45	104-3347	2	Plate-Reinforcing
46	104-3348	2	Washer-Spring
47	106-5772	1	Bushing
48	106-8575	2	Screw-HH
49	110-8688	1	Bracket-Support, Fuel Tank

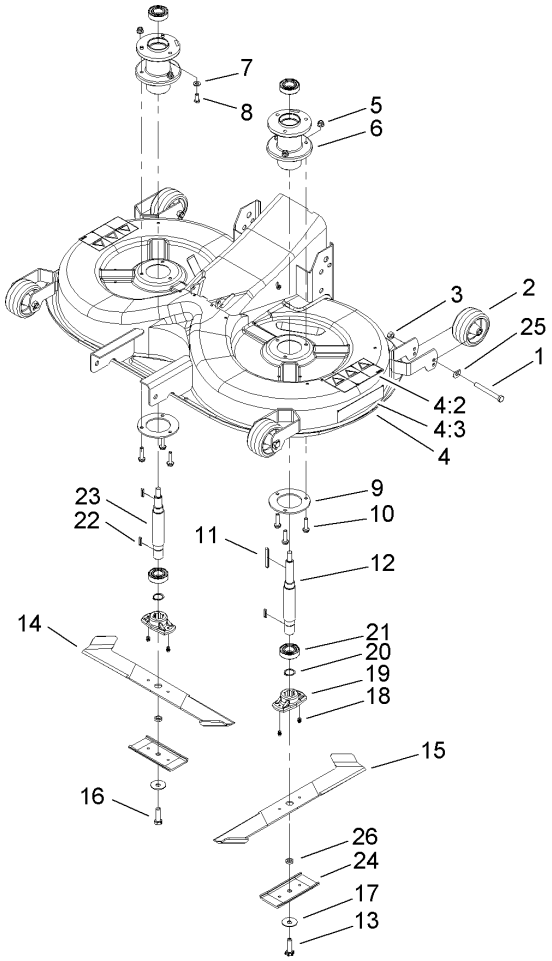

Deck Housing Assembly

Ref	Part No.	Qty.	Description
1	33115-090	4	Screw-HH
2	104-3080	4	Wheel-Gauge
3	33025-00	4	Nut-Lock
4	110-9071	1	Deck ASM
4:2	93-7824	2	Decal-Danger
4:3	106-8563	1	Decal-Recycler
5	104-3082	6	Nut-Lock, HF
6	107-8992	2	Housing-Spindle
7	33094-00	6	Washer-Plain
8	33114-020	6	Screw-HH
9	104-3084	2	Support-Ring
10	104-3085	6	Bolt-HHF
11	104-3086	1	Key
12	106-8565	1	Shaft-Blade, Left
13	106-5797	1	Bolt-HH, Blade
14	106-8557	1	Blade-RH
15	106-8558	1	Blade-LH
16	106-5798	1	Bolt-Blade, HH
17	106-6532	2	Washer-Blade
18	104-3093	4	Pin-Shear, Grooved
19	106-4185	2	Adapter-Blade
20	104-3095	2	Ring-Locking
21	104-6325	4	Bearing-Ball
22	104-3097	3	Key-Square


Ref	Part No.	Qty.	Description
23	106-8566	1	Shaft-Blade, Right
24	106-6533	2	Stiffener-Blade
25	106-5767	4	Washer
26	106-6530	2	Spacer

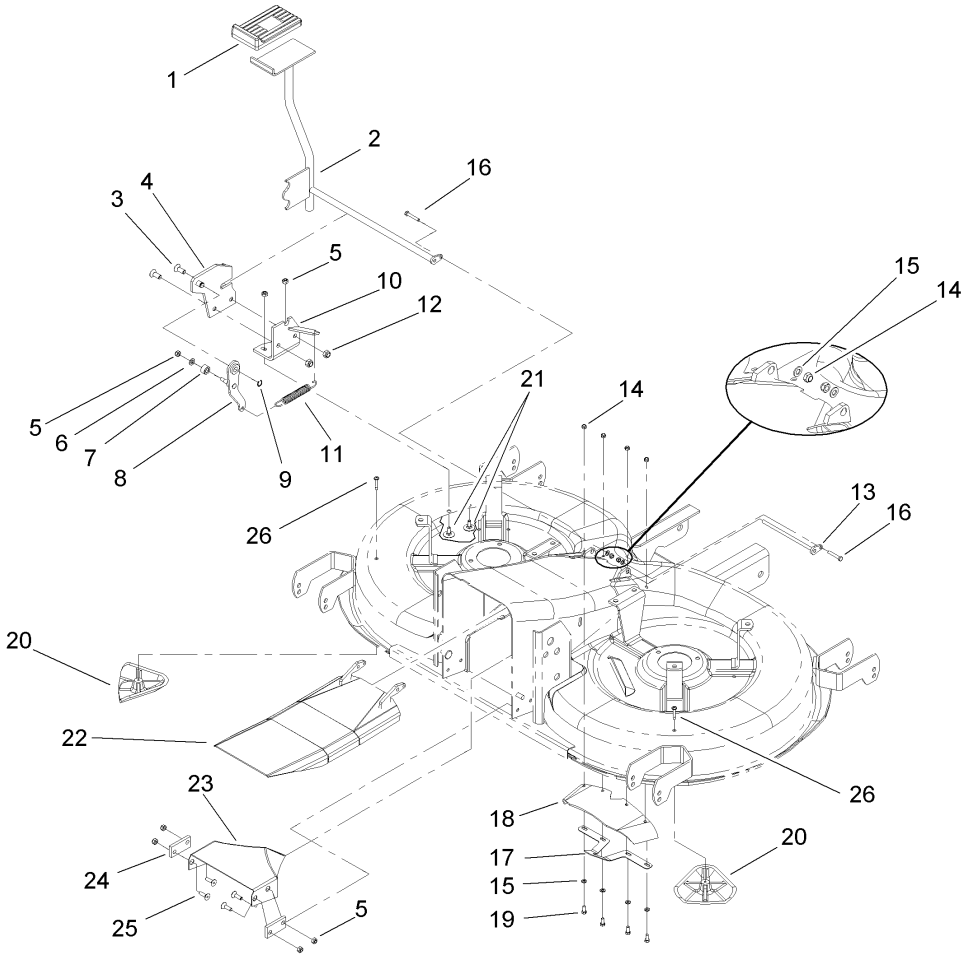

Cutting Pan and Bag on Demand Assembly

Ref	Part No.	Qty.	Description
1	106-8583	1	Cover-Lever, Foot
2	106-8582	1	Lever-Foot
3	100-8159	2	Screw-HSFH
4	106-8578	1	Plate-Stop
5	33023-00	7	Nut-Lock
6	33093-00	1	Washer-Flat
7	106-8581	1	Roller
8	106-8579	1	Lever-Spring
9	106-8592	1	Ring-Locking
10	106-8577	1	Bracket-Mounting
11	106-8580	1	Spring
12	48-9510	2	Nut
13	106-8585	1	Rod-Door, Mulch
14	87-5140	6	Nut-Lock
15	52-6430	6	Washer
16	87-5150	2	Bolt
17	106-8567	2	Guide
18	106-8586	1	Gasket-Door, Mulch
19	106-8575	4	Screw-HH
20	106-8587	1	Kicker
21	33123-016	2	Screw-CARR
22	107-8968	1	Door-Mulch
23	106-8573	1	Baffle-Center
24	106-8572	2	Plate-Baffel, Center


Ref	Part No.	Qty.	Description
25	106-8574	4	Screw
26	104-1451	2	Screw-TAP, PPH

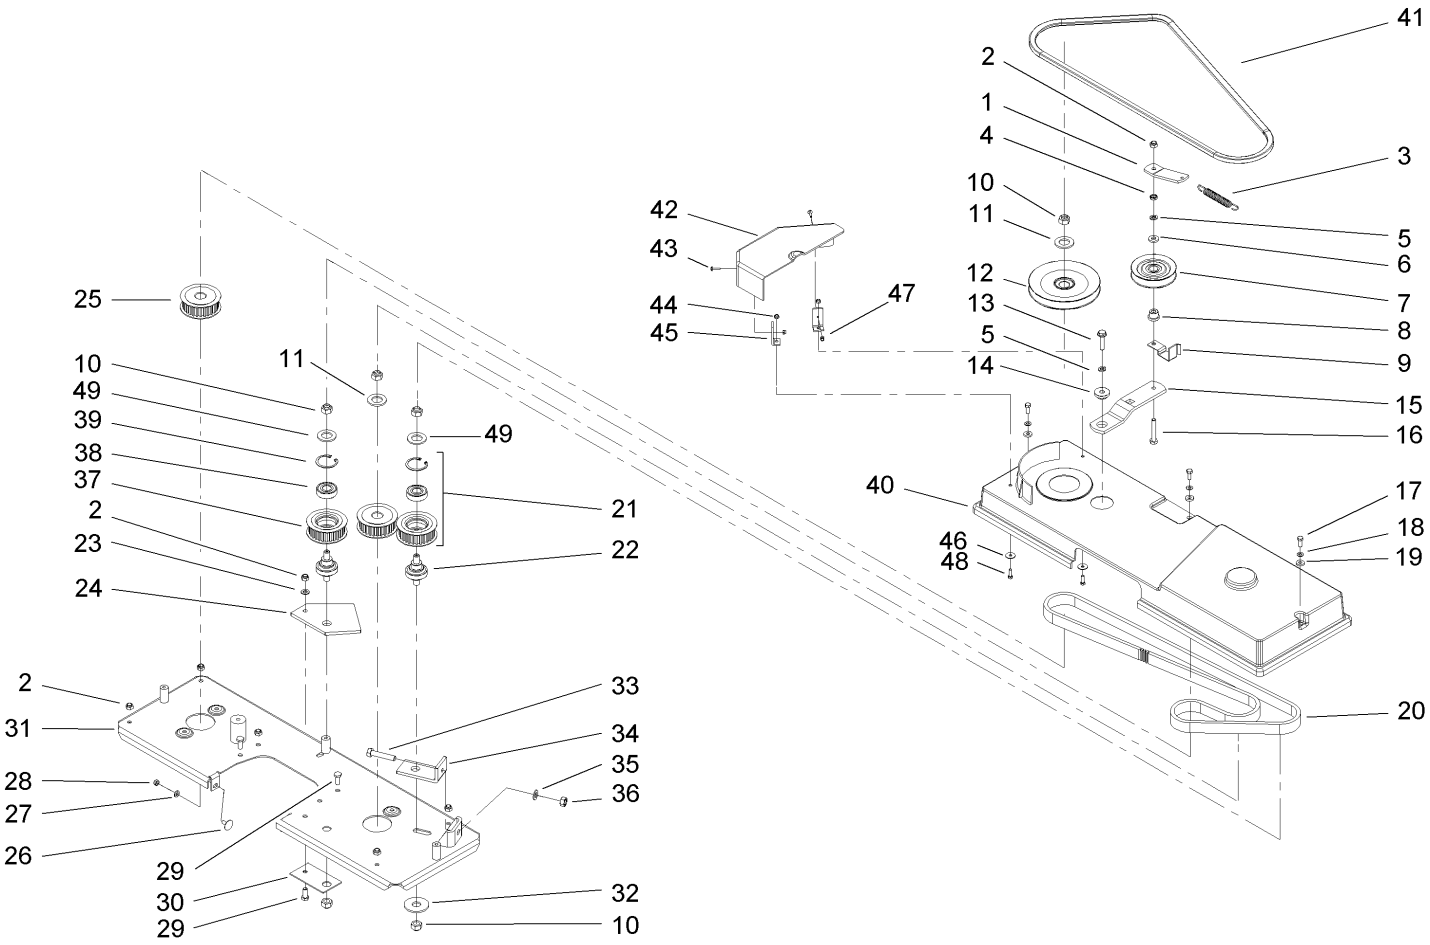

Belt Cover and Drive System Assembly


Ref	Part No.	Qty.	Description
1	104-3099	1	Lever-Engagement
2	48-9510	8	Nut
3	104-3101	1	Spring
4	57-6390	1	Nut-Jam
5	42-9850	1	Washer-Lock, Spring
6	106-8588	1	Washer-Flat
7	104-3103	1	Pulley-Idler
8	104-3104	1	Bushing
9	104-3105	1	Retainer-Belt
10	48-9540	6	Nut-Lock, Hex NI
11	33099-00	4	Washer-Flat
12	104-3107	1	Pulley-Drive
13	33105-025	1	Screw-HHF
14	107-8995	1	Shim-Arm, Idler
15	104-3109	1	Arm-Idler
16	33114-050	1	Screw-HH
17	33113-016	3	Screw-HH
18	106-8568	3	Washer-Flat
19	83-7420	3	Washer-Rubber
20	106-8591	1	Belt-Cog
21	104-3113	2	Cog Pulley ASM
22	104-3114	2	Pin-Pulley, Cog
23	33094-00	1	Washer-Plain
24	104-3115	1	Support-Pulley

Ref	Part No.	Qty.	Description
25	104-3116	2	Pulley-Cog, Drive
26	33123-016	2	Screw-CARR
27	33093-00	2	Washer-Flat
28	33023-00	2	Nut-Lock
29	33114-025	3	Screw-HH
30	104-3117	1	Plate-Anchor
31	107-8996	1	Plate-Drive, Blade
32	104-2909	1	Washer
33	33115-050	1	Screw-HH
34	104-3120	1	Bracket-Idler
35	108-8709	1	Washer-Flat
36	48-9520	1	Nut
37	104-3121	1	Pulley-Cog
38	100-1048	1	Bearing-Ball
39	104-3123	1	Ring-Locking
40	106-8589	1	Belt-Cover
41	104-3126	1	V-Belt
42	107-8941	1	Guard-Belt
43	60-6910	2	Screw
44	87-5140	2	Nut-Lock
45	107-8940	2	Bracket
46	3256-61	4	Washer-Flat
47	46-0430	2	Nut-Lock
48	107-8918	2	Screw

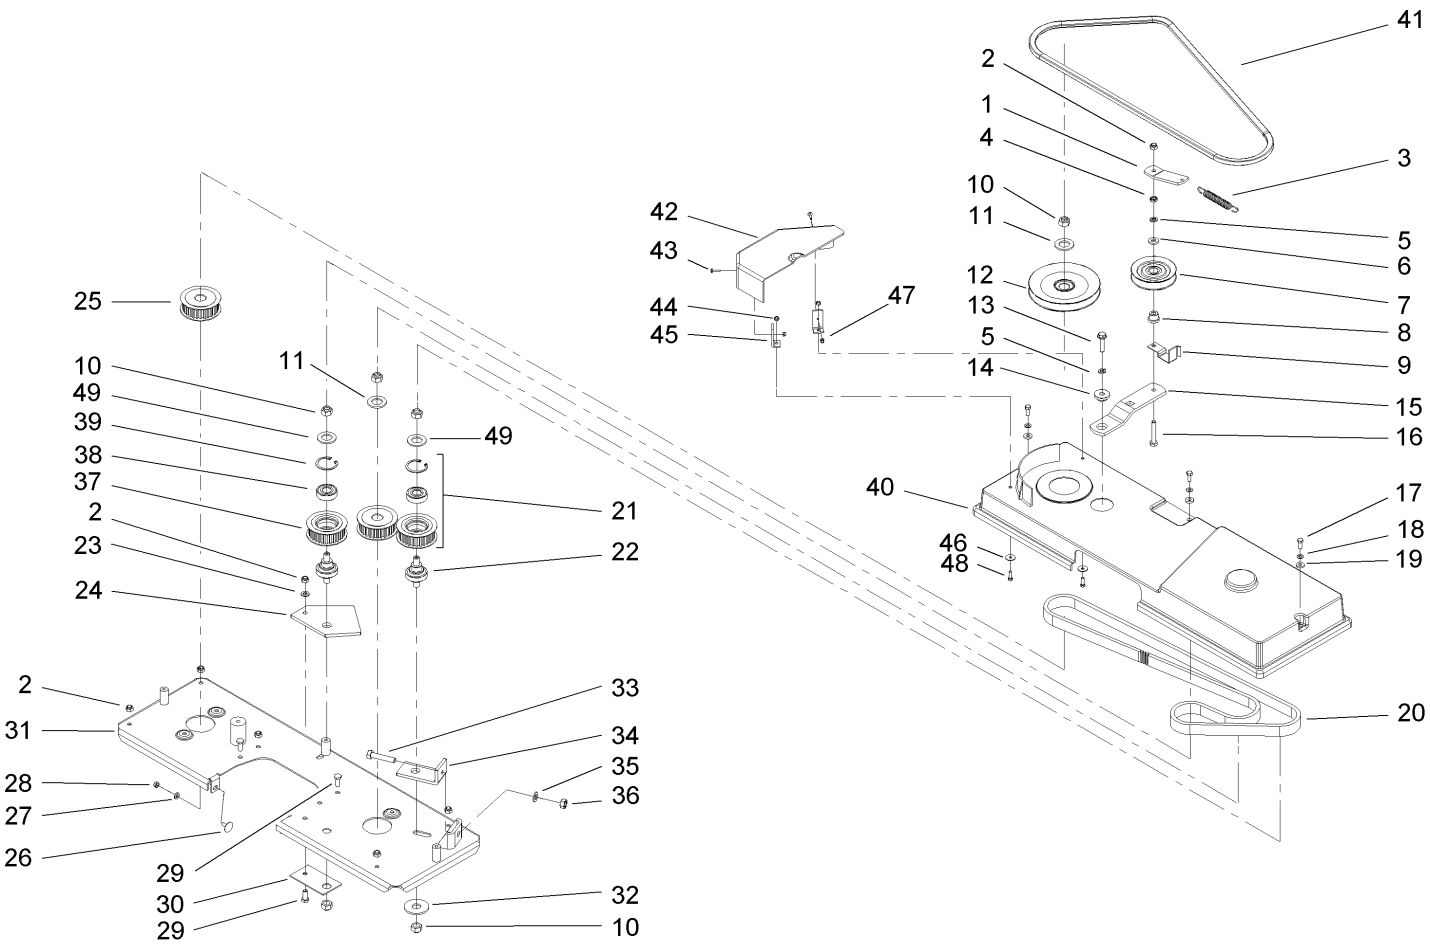

Belt Cover and Drive System Assembly (continued)


Ref	Part No.	Qty.	Description
49	33096-00	2	Washer-Flat

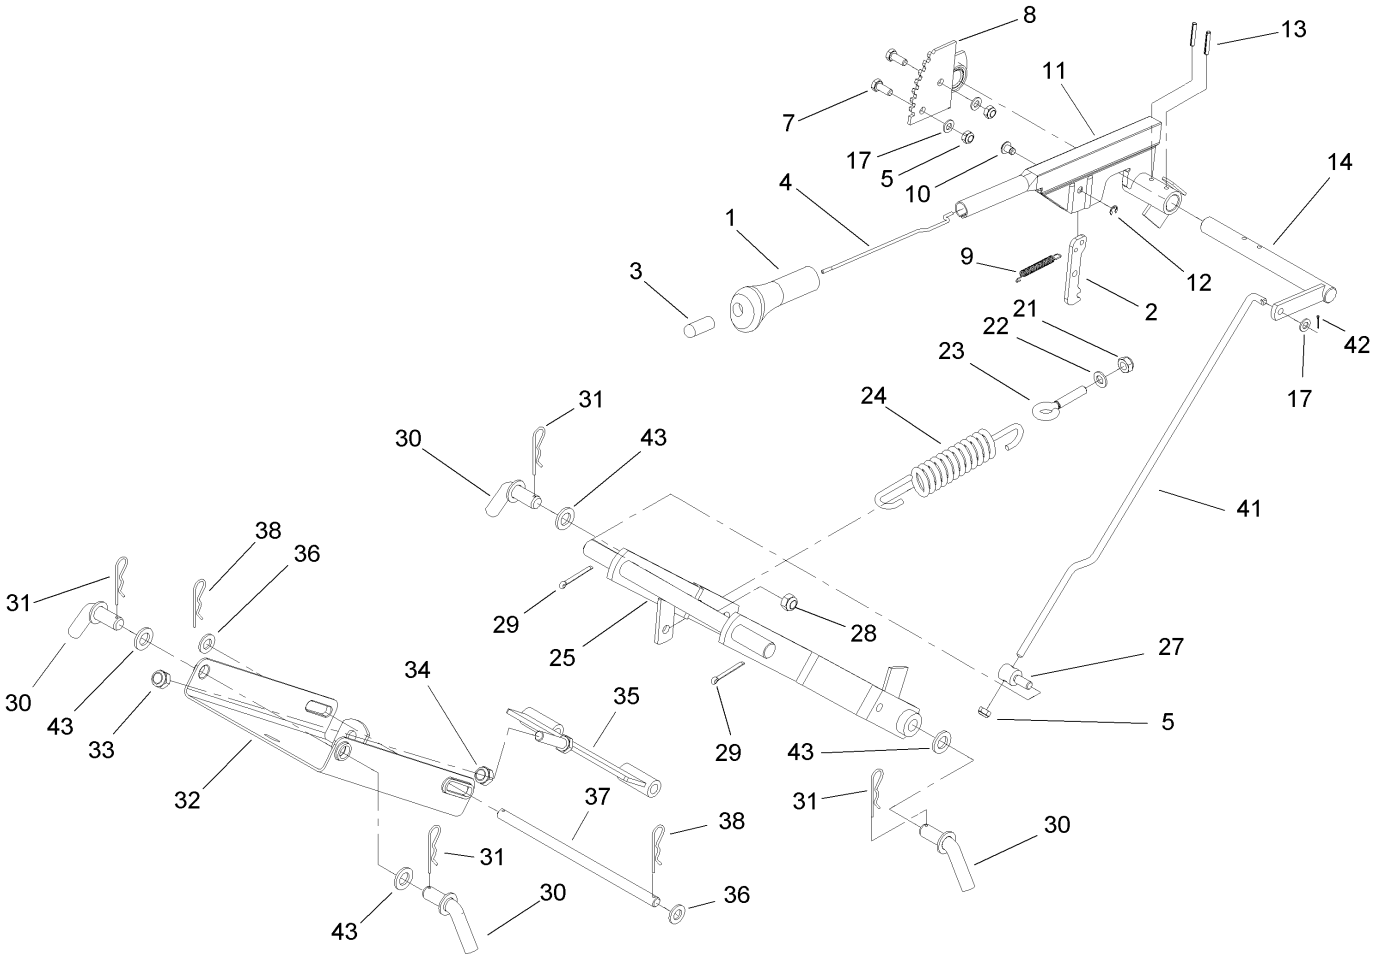

Mower Lift Assembly


Ref	Part No.	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	104-3133	1	Segment-Gear
9	104-3134	1	Spring
10	104-3135	1	Pin-Arm Lever
11	104-3136	1	Lever-Arm, Height Adj.
12	104-3137	1	Clip-Pin
13	104-2994	2	Pin-Spring
14	104-3138	1	Shaft-Height Adj.
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock
29	104-3016	2	Pin-Cotter
30	104-3143	4	Pin-Bent
31	104-3144	4	Pin-Hair

Ref	Part No.	Qty.	Description
32	104-3145	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	104-3146	1	Holder-Front
36	104-3124	2	Washer-Flat
37	104-3147	1	Pin
38	104-3148	2	Clip-Hair Pin
41	104-3149	1	Rod-Height Adj.
42	104-3151	1	Pin-Cotter
43	34-9270	4	Washer-Hose

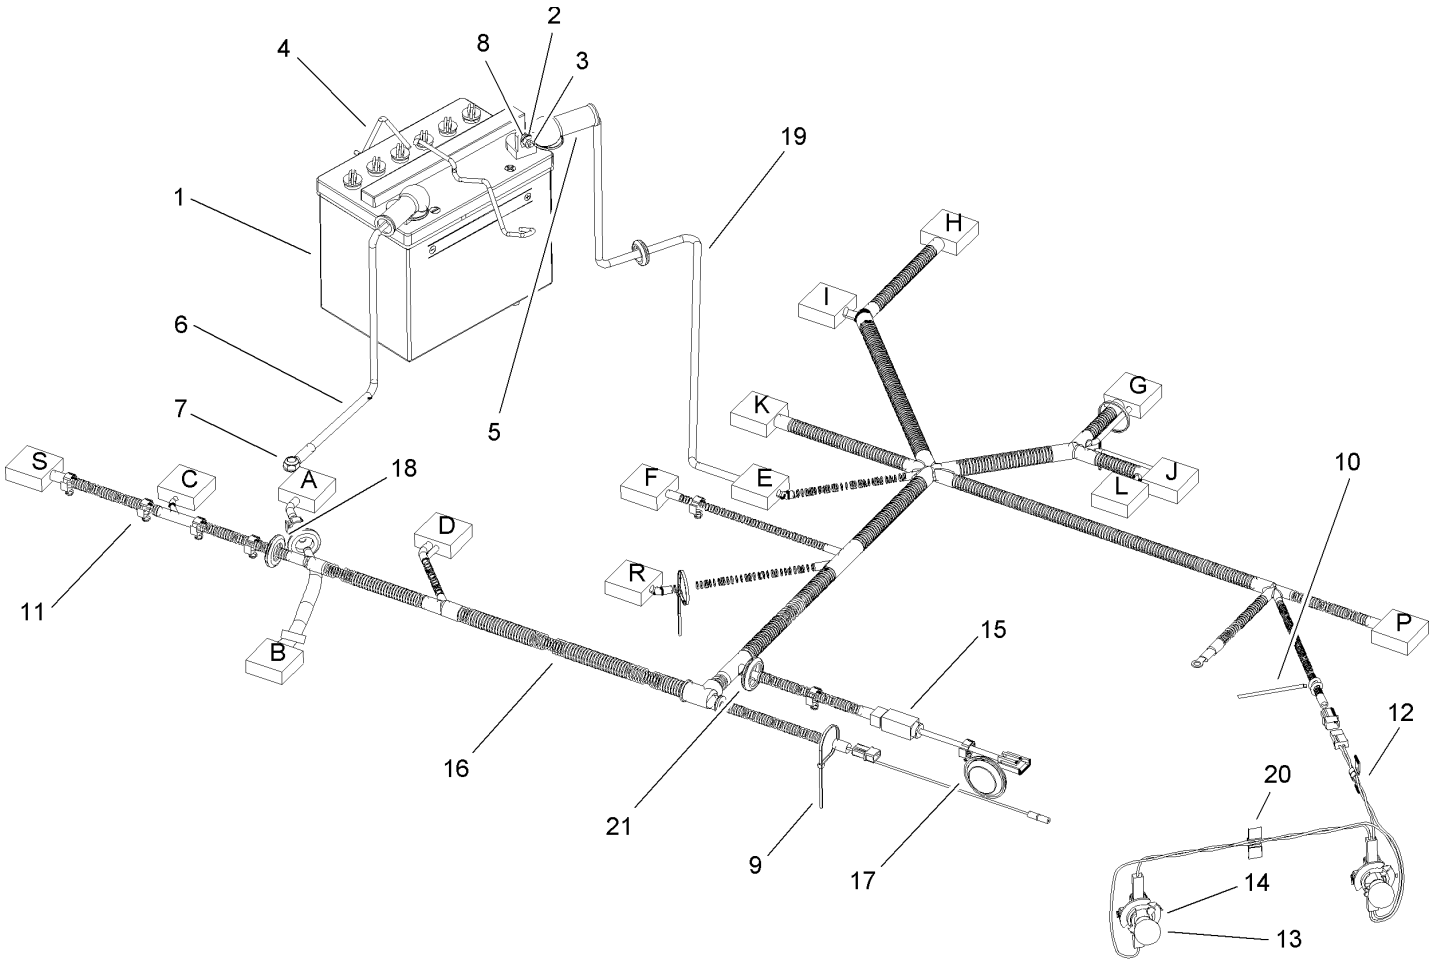


Harness Assembly

Ref	Part No.	Qty.	Description
1	104-2491	1	Battery
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	110-8676	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	110-8678	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Tie-Cable
10	104-3156	1	Holder- Harness, Wiring
11	104-3157	10	Clip-Snap
12	88-4320	1	Harness-Wire, Lights
13	104-3158	2	Bulb-Light
14	104-3159	2	Socket-Light
15	104-3160	1	Harness-Clutch
16	108-8750	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	110-8677	1	Cable-Battery, Positive
20	104-3167	2	Clip-Nylon
21	104-3168	1	Bushing

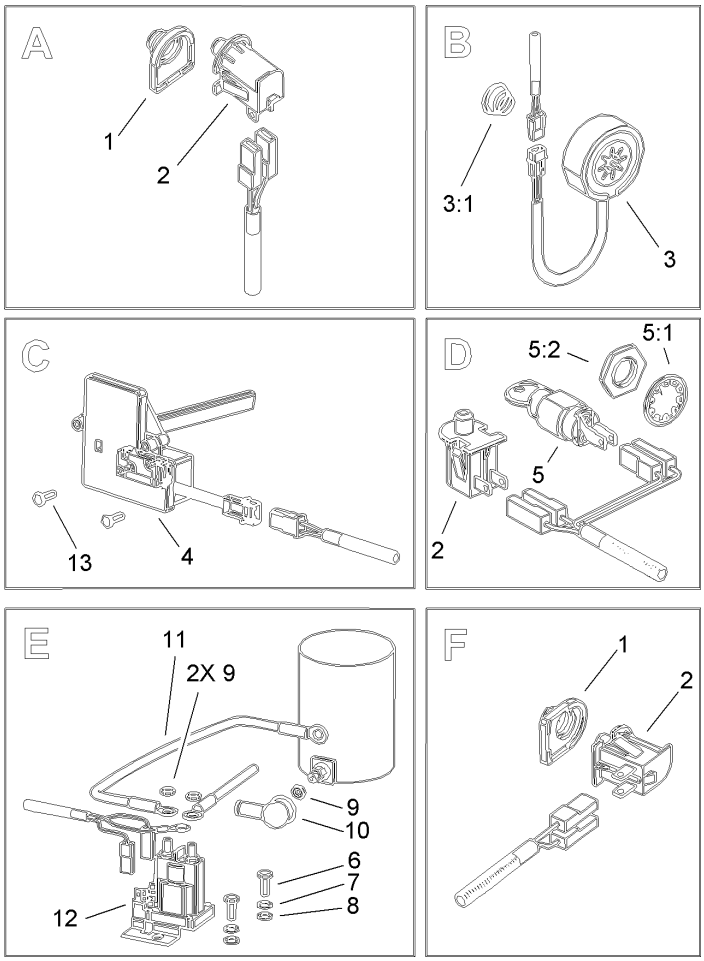


Electrical Starter Assembly


Ref	Part No.	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
3	99-8090	1	Magnet ASM
3:1	93-6601	1	Spring-Compression
4	104-3185	1	Switch-Omron
5	46-5780	1	Switch-Starter
5:1	3254-5	1	Washer-Tooth
5:2	218-461	1	Nut-HH
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	104-3189	1	Solenoid
13	104-3349	2	Screw

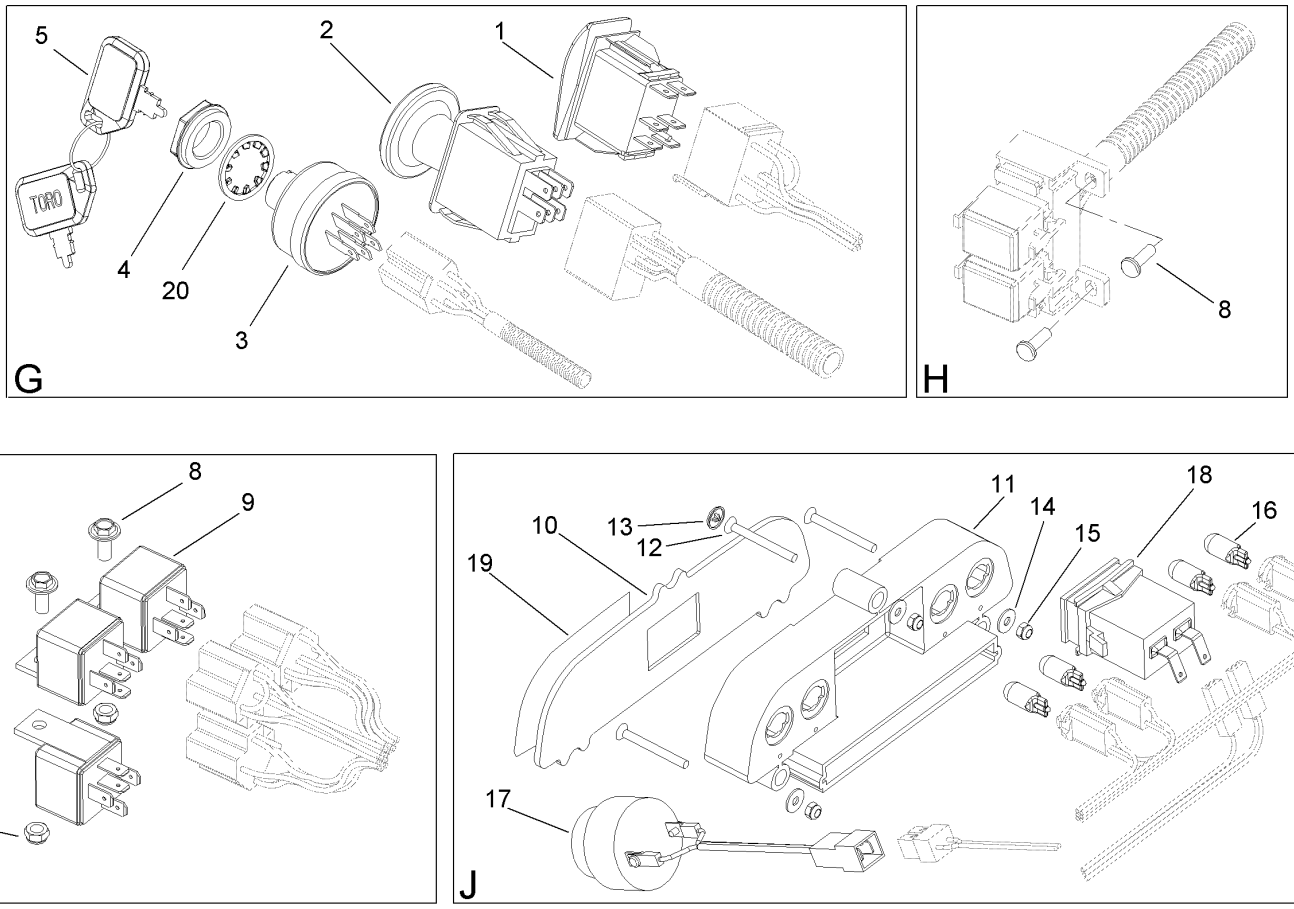



Electrical Switch Assembly No. 2


Ref	Part No.	Qty.	Description
1	93-0527	1	Switch-Cruise
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	218-461	1	Nut-HH
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	3	Relay
10	92-6705	1	Lens-Dash
11	92-6732	1	Housing-Light, Indicator
12	104-3191	3	Screw
13	104-3174	3	Screw-Cap
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	4	Bulb
17	104-3177	1	Buzzer
18	94-4208	1	Hourmeter
19	104-2854	1	Decal-Dash
20	3254-5	1	Washer-Tooth

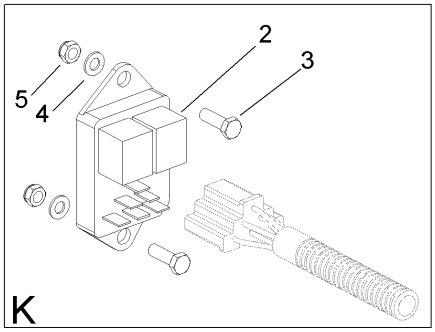

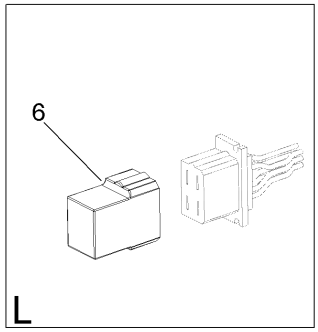

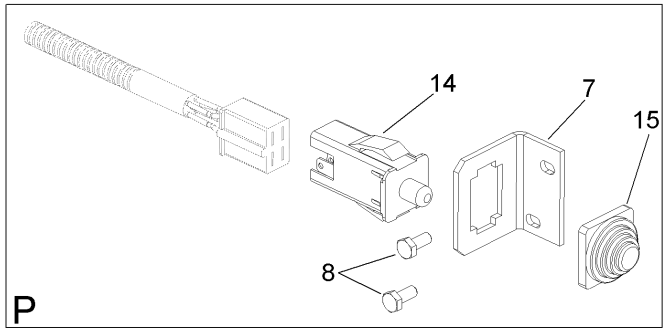

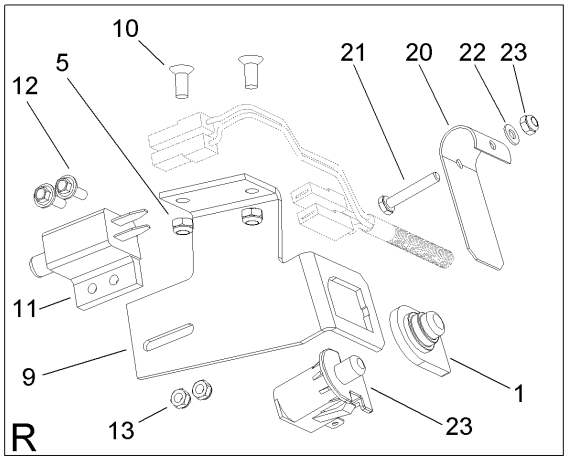


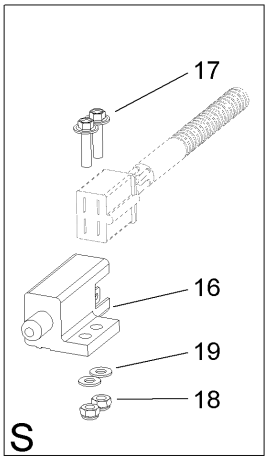

Electrical Switch Assembly No. 3

Ref	Part No.	Qty.	Description
1	104-3178	1	Cover-Protective
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	104-3333	1	Holder-Switch
8	104-3190	2	Screw
9	104-3332	1	Holder-Switch
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw
13	104-2985	3	Nut-Hex
14	104-3338	1	Switch-Delta
15	104-3339	1	Cover-Switch
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer
20	106-5765	1	Lever-Spring
21	104-3009	1	Screw-Hex
22	106-5766	1	Washer
23	104-3179	1	Switch-Delta


48 SHORT BLOCK

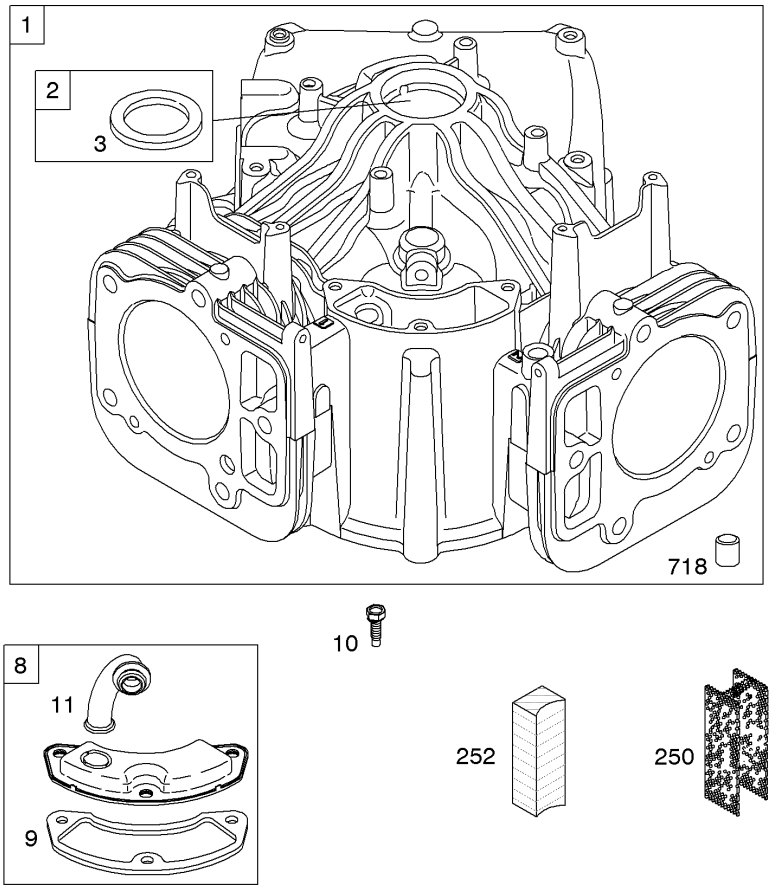


Assemblies include all parts shown in frames


Cylinder Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
❸1	699753	1	Cylinder ASM
❸2	499585	1	Bushing And Seal Kit (Magneto Side)
❸❺3	391086s	1	Seal-Oil (Magneto Side)
❸8	792185	1	Breather ASM
❸❺9	690937	1	Gasket-Breather
❸10	691108	1	Screw (Breather ASM)
❸11	792184	1	Tube-Breather
❸48	698172	1	Short Block
❸250	690957	1	Retainer-Breather
❸252	690956	1	Collector-Oil
❸718	690959	1	Pin-Locating

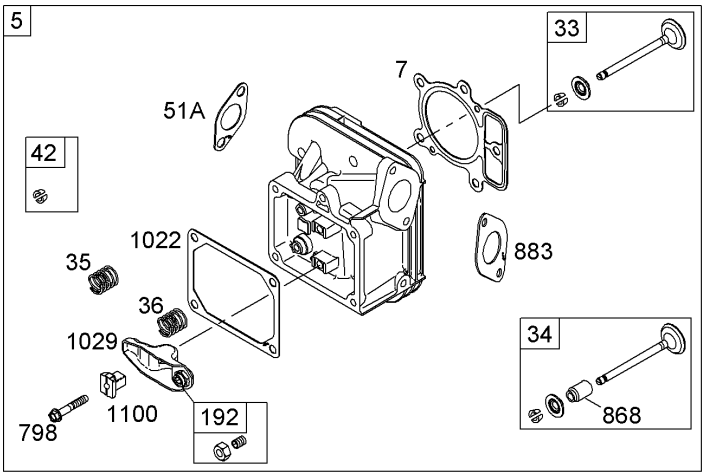





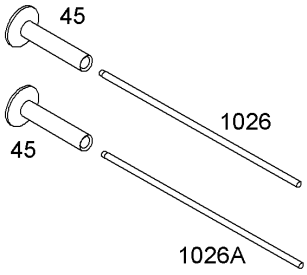

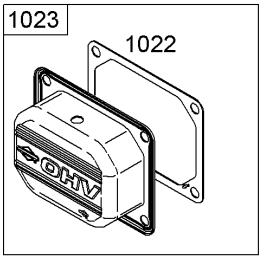

Assemblies include all parts shown in frames

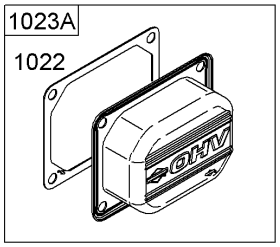


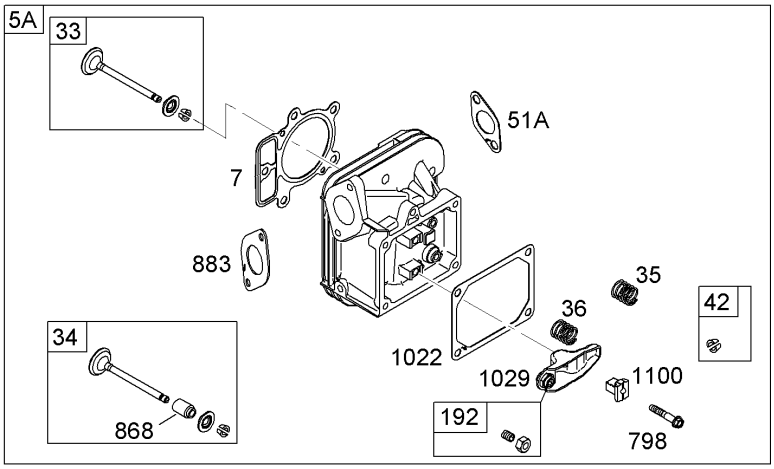



Cylinder Head Assembly
Briggs and Stratton 441677-0136-E1


Ref	Part No.	Qty.	Description
❸5	792299	1	Head-Cylinder (Cylinder No.1)
❸5A	792300	1	Head-Cylinder (Cylinder No.2)
❸❺7❼	693997	1	Gasket-Head, Cylinder
❸13	791130	1	Screw (Cylinder Head)
❸33	499596	1	Valve-Exhaust
❸34	792200	1	Valve-Intake
❸35	694865	1	Spring-Valve (Intake)
❸36	694865	1	Spring-Valve (Exhaust)
❸42	499586	1	Keeper-Valve
❸45	690977	1	Tappet-Valve
❸❺51A❻	690949	1	Gasket-Intake
❸192	690083	1	Adjuster-Arm, Rocker
❸337	691043	1	Spark Plug
❸635	66538s	1	Boot-Spark Plug
❸798	697890	1	Screw (Rocker Arm)
❸❺868❼	690968	1	Seal-Valve
❸❺883❼	690970	1	Gasket-Exhaust
❸914	691127	1	Screw (Rocker Cover)
❸❺1022❼	690971	1	Gasket-Cover, Rocker
❸1023	793146	1	Cover-Arm, Rocker

Ref	Part No.	Qty.	Description
❸1023A	499600	1	Cover-Arm, Rocker (Cylinder No.2)
❸1026	690981	1	Rod-Push (Steel) (Intake)
❸1026A	690982	1	Rod-Push (Aluminum) (Exhaust)
❸1029	690972	1	Arm-Rocker
❸1100	791959	1	Pivot-Arm, Rocker

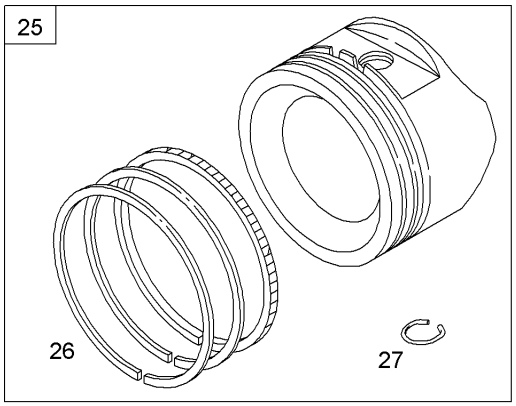

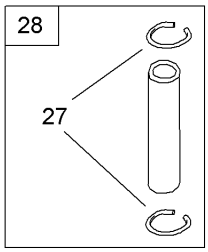

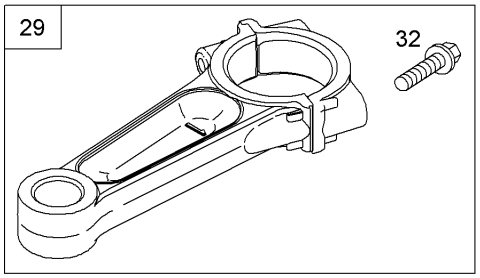


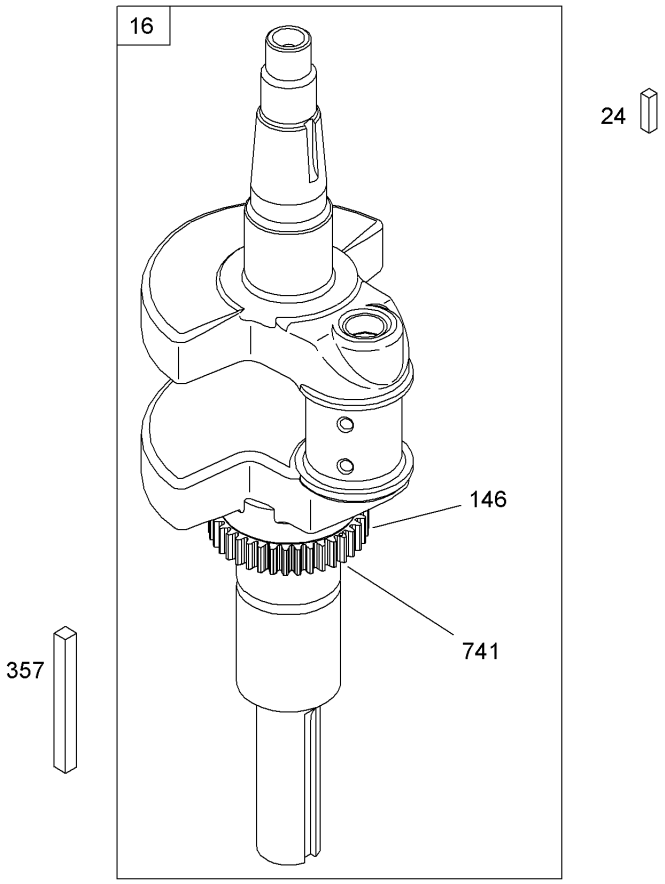

Assemblies include all parts shown in frames

Crankshaft Assembly
Briggs and Stratton 441677-0136-E1


Ref	Part No.	Qty.	Description
❸16	699700	1	Crankshaft
❸24	222698s	1	Key-Flywheel
❸25	792023	1	Piston ASM (STD)
❸25	792072	1	Piston ASM (.020 O S)
❸26	792026	1	Ring Set (STD)
❸26	792073	1	Ring Set (.020 O S)
❸27	690975	1	Lock-Pin, Piston
❸28	690229	1	Pin-Piston (STD)
❸29	699699	1	Rod-Connecting
❸32	690976	1	Screw (Connecting Rod)
❸146	690979	1	Key-Timing
❸357	691483	1	Key–Pulley, Drive
❸741	690980	1	Gear-Timing

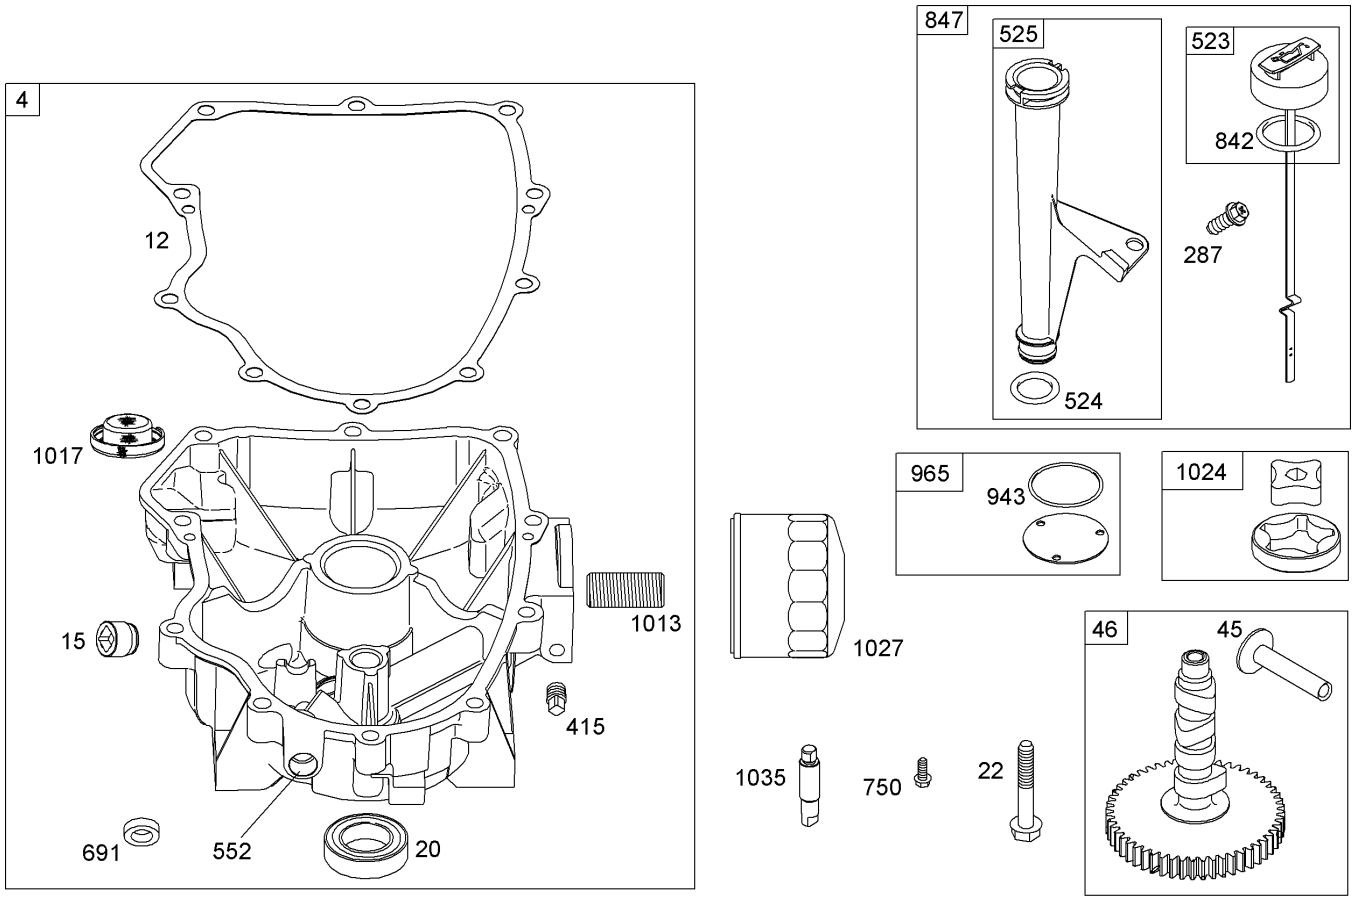

Assemblies include all parts shown in frames

Crankcase Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
❸4	699747	1	Sump-Engine
❸❺12	697227	1	Gasket-Crankcase
❸15	690946	1	Plug-Drain, Oil
❸❺20	791892	1	Seal-Oil (P-T-O Side)
❸22	694966	1	Screw (Crankcase Sump Cover)
❸45	690977	1	Tappet-Valve
❸46	792555	1	Camshaft
❸287	691108	1	Screw (Dipstick And Tube ASM)
❸415	91488	1	Plug-Oil
❸523	691036	1	Dipstick
❸❺524	691032	1	Seal, O-Ring (Dipstick Tube)
❸525	691037	1	Tube-Dipstick
❸552	690552	1	Bushing-Crank, Governor
❸❺691	790574	1	Seal-Shaft, Governor
❸750	696999	1	Screw (Oil Pump Cover)
❸❺842	691031	1	Seal, O-Ring (Dipstick)
❸847	499602	1	Dipstick And Tube ASM
❸❺943	690589	1	Seal, O-Ring (Oil Pump Cover)
❸965	499613	1	Cover-Pump, Oil
❸1013	690954	1	Nipple-Filter, Oil
❸1017	690770	1	Screen-Pump, Oil
❸1024	499054	1	Pump-Oil
❸1027	492932s	1	Filter-Oil
❸1035	691042	1	Shaft-Pump, Oil

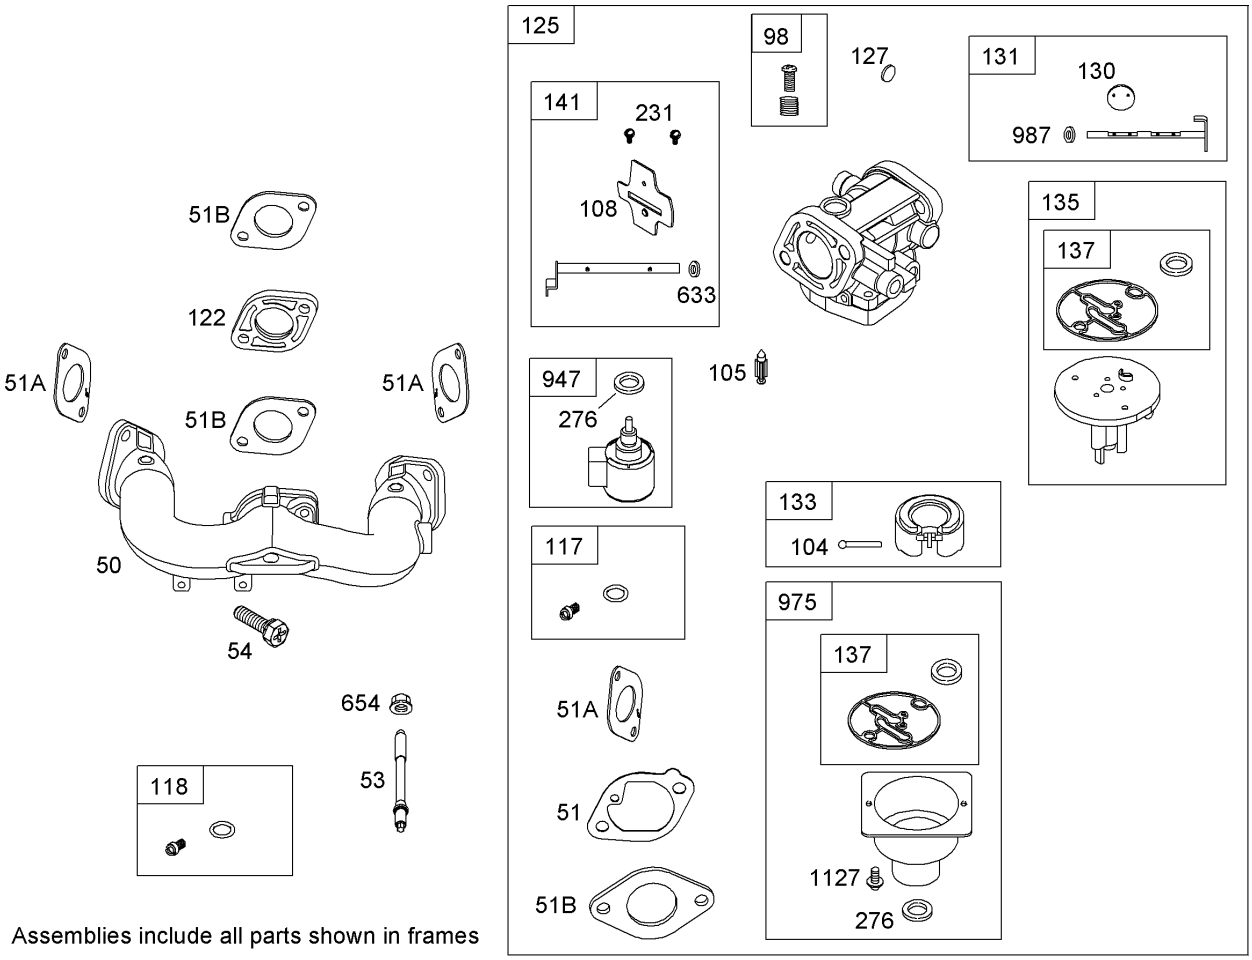


Assemblies include all parts shown in frames

Carburetor Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
❸50	699801	1	Manifold-Intake
❹❺51 ❻	699800	1	Gasket-Intake
❸❺51A ❻	690949	1	Gasket-Intake
❹❺51B ❻	699803	1	Gasket-Intake
❸53	690951	1	Stud (Carburetor)
❸54	699816	1	Screw (Intake Manifold)
❸98	699721	1	Idle Speed Kit
❸❹104	694918	1	Pin-Hinge, Float
❸105	698537	1	Valve-Needle, Float
❸108	699808	1	Valve-Choke
❸117	791406	1	Jet-Main (Standard)
❸118	699820	1	Jet-Main (High Altitude)
❸122	699802	1	Spacer-Carburetor
❸125	699807	1	Carburetor
❸127	699810	1	Plug-Welch
❸130	699809	1	Valve-Throttle
❸131	699812	1	Throttle Shaft Kit
❸133	694914	1	Carburetor Float ASM
❸135	792022	1	Tube-Transfer, Fuel
❸❹137	698781	1	Gasket-Bowl, Float
❸141	699811	1	Choke Shaft Kit
❸231	690718	1	Screw (Choke Valve)

Ref	Part No.	Qty.	Description
❸❹276	695410	1	Washer-Sealing
❸❹633	695414	1	Seal-Shaft, Choke And Throttle
❸654	690958	1	Nut (Carburetor)
❸947	699728	1	Solenoid-Fuel
❸975	699502	1	Bowl-Float
❸❹987	699813	1	Seal-Shaft, Throttle
❸1127	695407	1	Screw (Float Bowl)

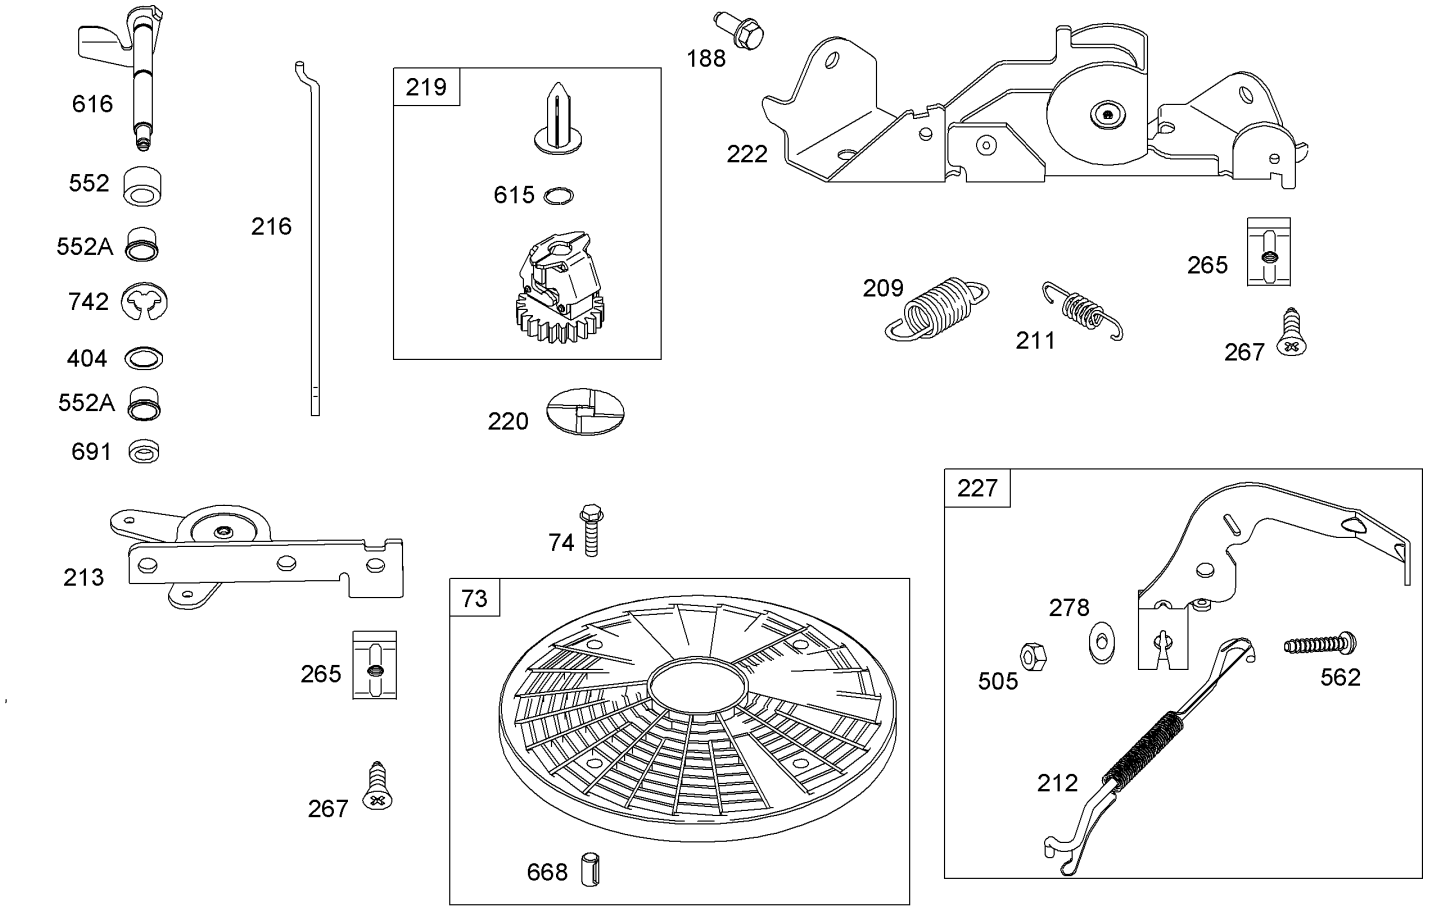


Assemblies include all parts shown in frames

Governor Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
❸73	494439	1	Screen-Rotating
❸74	698425	1	Screw (Rotating Screen)
❸188	691108	1	Screw (Control Bracket)
❸209	793527	1	Spring-Governor
❸211	691019	1	Spring-Idle, Governed
❸212	792265	1	Link-Throttle
❸213	691021	1	Bracket-Control, Choke
❸216	691022	1	Link-Choke
❸219	793338	1	Gear-Governor
❸220	690412	1	Washer (Governor Gear)
❸222	698761	1	Bracket-Control
❸227	792492	1	Lever-Control, Governor
❸265	691024	1	Clamp-Casing
❸267	792629	1	Screw (Casing Clamp)
❸278	792651	1	Washer (Governor Control Lever)
❸404	690442	1	Washer (Governor Crank)
❸505	691029	1	Nut (Governor Control Lever)
❸552	690552	1	Bushing-Crank, Governor
❸552A	690553	1	Bushing-Crank, Governor
❸562	690311	1	Bolt (Governor Control Lever)
❸615	698290	1	Retainer-Shaft, Governor
❸616	691045	1	Crank-Governor
❸668	691215	1	Spacer
❸❺691	790574	1	Seal-Shaft, Governor


Ref	Part No.	Qty.	Description
❸742	690328	1	Retainer-E Ring

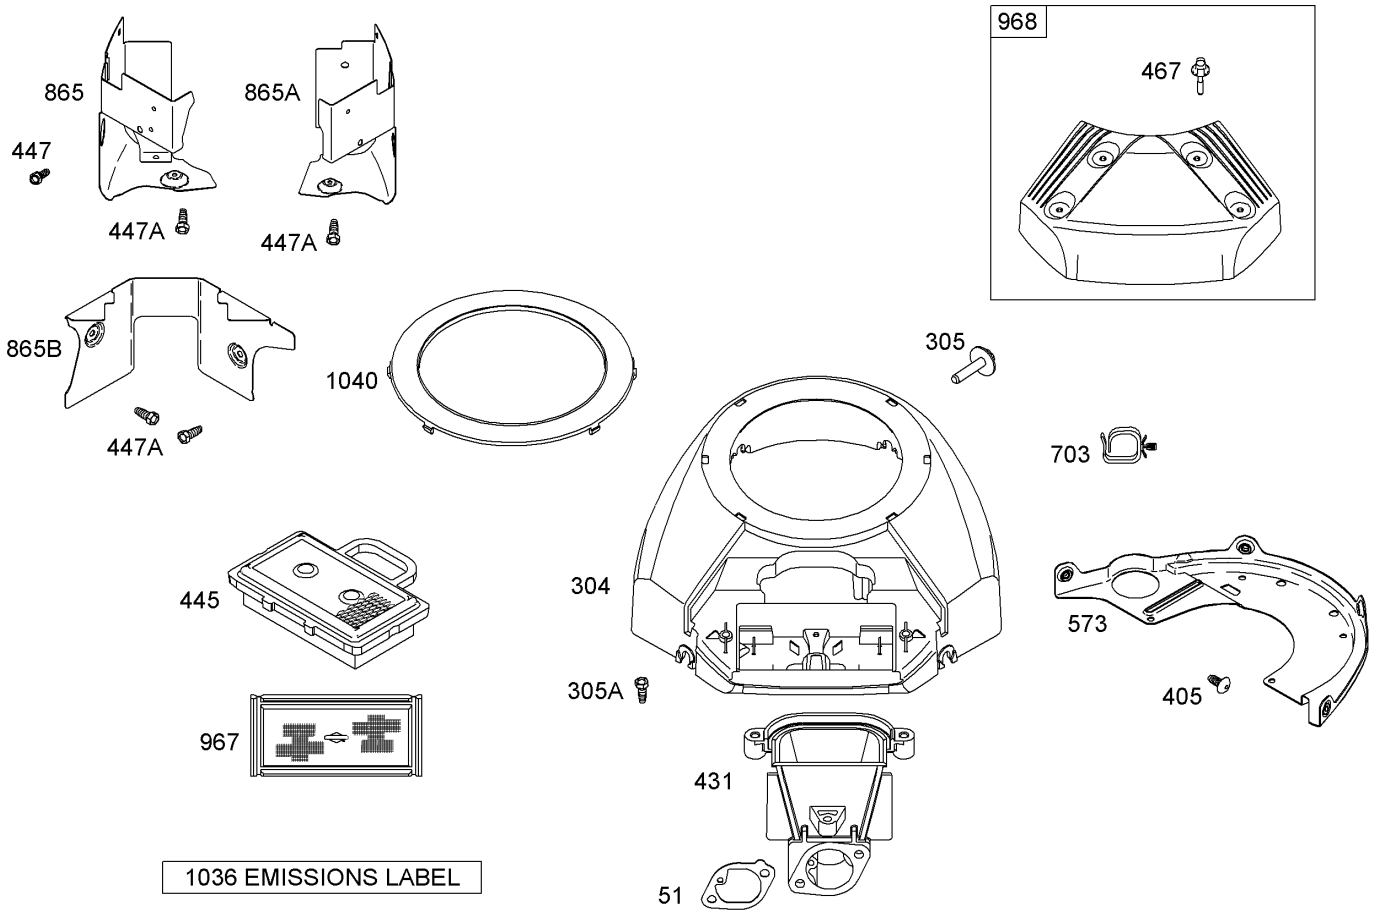

Assemblies include all parts shown in frames

Blower Housing Assembly
Briggs and Stratton 441677-0136-E1


Ref	Part No.	Qty.	Description
❹❺51 ❻	699800	1	Gasket-Intake
❸304	791243	1	Housing-Blower
❸305	691005	1	Screw (Blower Housing)
❸305A	790690	1	Screw (Blower Housing)
❸405	697820	1	Screw (Backplate)
❸431	790628	1	Elbow-Cleaner, Air
❸445	499486s	1	Filter-Cartridge, Air Cleaner
❸447	691108	1	Screw (Air Guide Cover)
❸447A	691003	1	Screw (Air Guide Cover)
❸467	691008	1	Knob-Cleaner, Air
❸573	790444	1	Plate-Back
❸703	691010	1	Clip
❸865	691012	1	Cover-Guide, Air
❸865A	793205	1	Cover-Guide, Air
❸865B	691015	1	Cover-Guide, Air (Valley)
❸967	273638s	1	Filter-Cleaner, Pre
❸968	791242	1	Cover-Cleaner, Air
❸1036		1	Label-Emissions
❸1040	791237	1	Plate-Trim

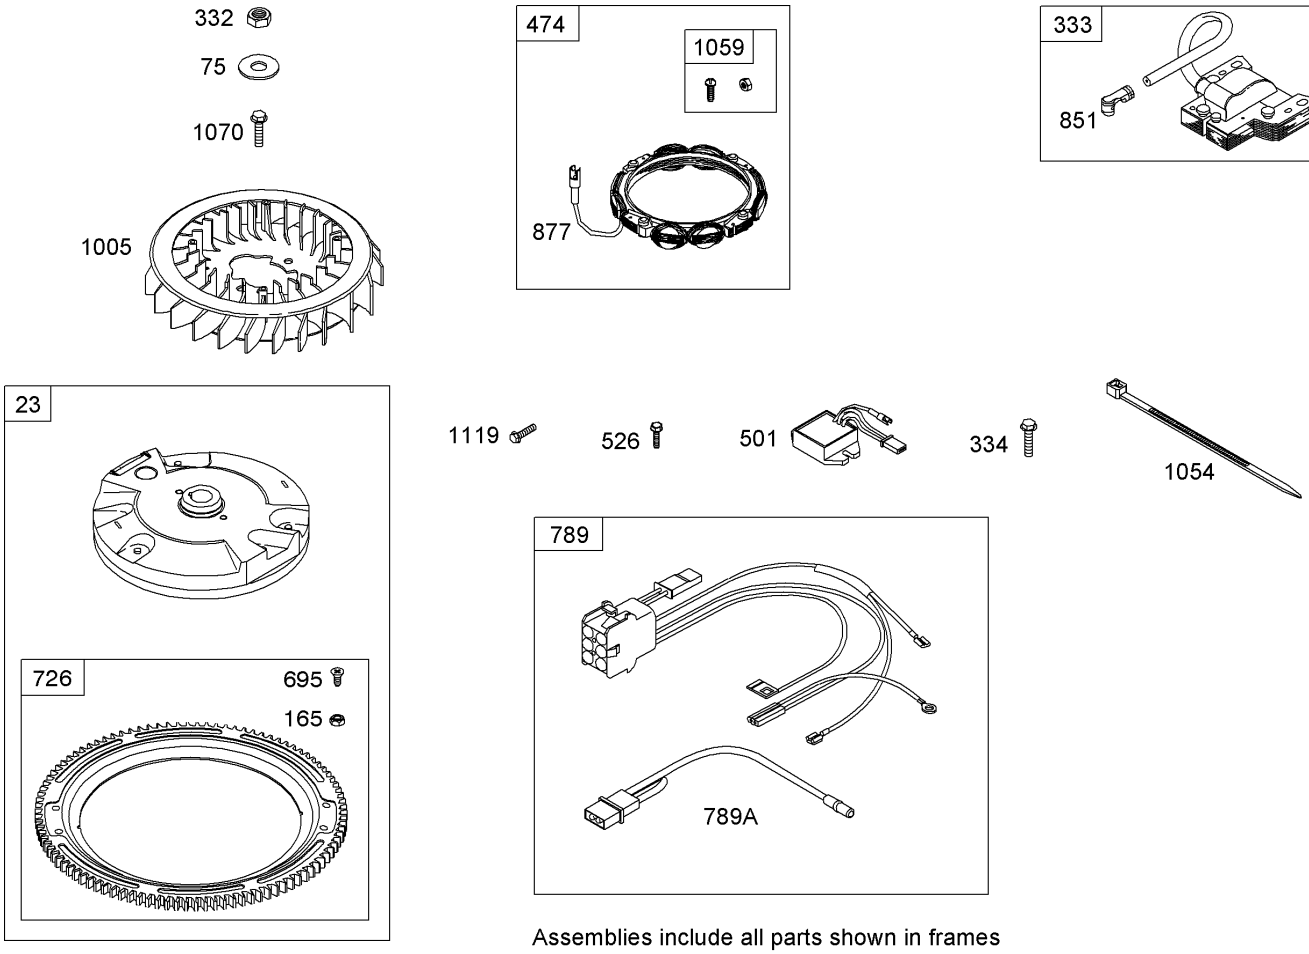



Assemblies include all parts shown in frames


Flywheel Assembly
Briggs and Stratton 441677-0136-E1


Ref	Part No.	Qty.	Description
❸23	691053	1	Flywheel
❸75	691056	1	Washer (Flywheel)
❸165	693148	1	Nut (Ring Gear)
❸332	691059	1	Nut (Flywheel)
❸333	691060	1	Armature-Magneto
❸334	691061	1	Screw (Magneto Armature)
❸474	696457	1	Alternator
❸501	691188	1	Regulator
❸526	691129	1	Screw (Regulator)
❸695	693149	1	Screw (Ring Gear)
❸726	499612	1	Gear-Ring
❸789	698330	1	Harness-Wiring
❸789A	790544	1	Harness-Wiring
❸851	493880s	1	Terminal-Spark Plug
❸877	393537	1	Connector-Wire, Tri Circuit (Alternator)
❸1005	791236	1	Fan-Flywheel
❸1054	280275	1	Tie-Cable
❸1059	698516	1	Screw And Washer Kit
❸1070	690372	1	Screw (Flywheel Fan)
❸1119	691183	1	Screw (Alternator)

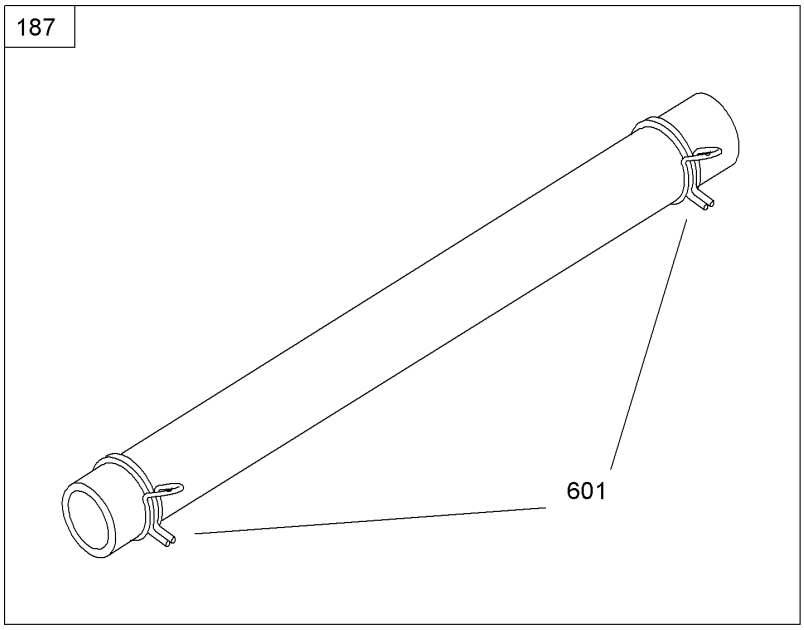


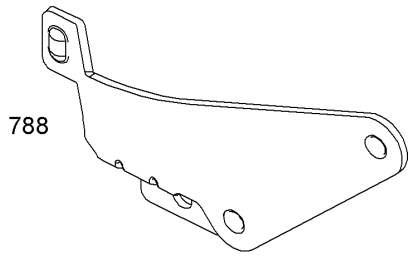

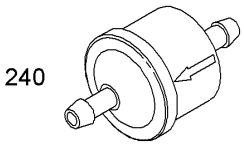

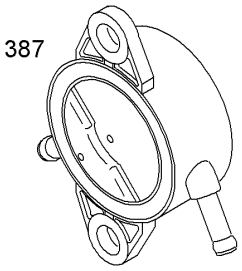






Assemblies include all parts shown in frames

Fuel Line and Pump Assembly
Briggs and Stratton 441677-0136-E1


Ref	Part No.	Qty.	Description
❸187	791766	1	Line-Fuel (Cut To Required Length)
❸240	691035	1	Filter-Fuel
❸385	691108	1	Screw (Fuel Pump Bracket)
❸387	808656	1	Pump-Fuel
❸601	791850	1	Clamp-Hose
❸788	793145	1	Bracket-Pump, Fuel
❸918	793147	1	Hose-Vacuum

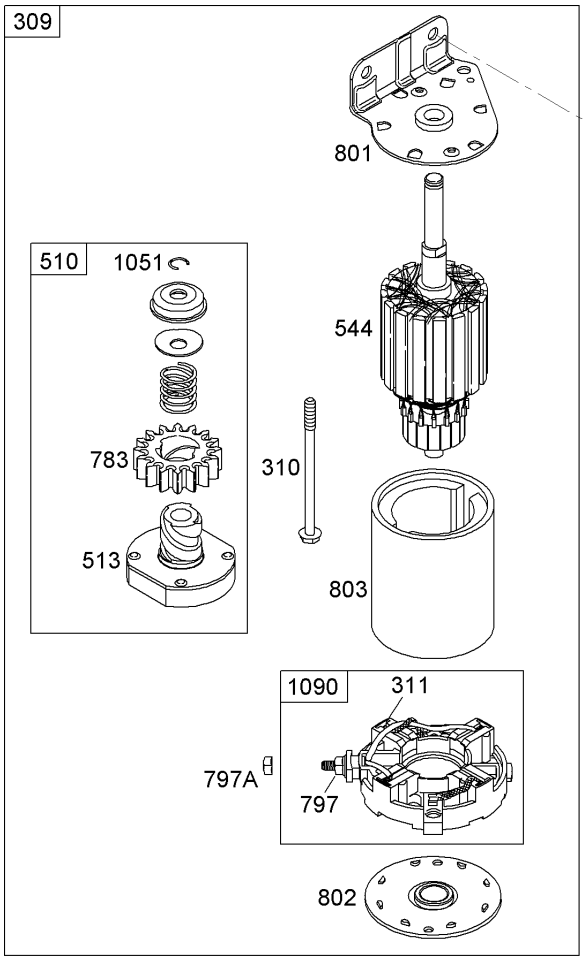


Assemblies include all parts shown in frames

Starter Motor Assembly
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
❸309	499521	1	Motor-Starter
❸310	691263	1	Bolt (Starter Motor)
❸311	497608	1	Brush Set
❸510	696541	1	Drive-Starter
❸513	692024	1	Clutch-Drive
❸544		1	Armature-Starter (For Service Order 499521, Starter Motor)
❸697	690372	1	Screw (Drive Cap)
❸783	695708	1	Gear-Pinion
❸797	691029	1	Nut (Brush Retainer)
❸797A	693167	1	Nut (Brush Retainer)
❸801	691283	1	Cap-Drive
❸802	691286	1	Cap-End
❸803		1	Housing-Starter (For Service Order 499521, Starter Motor)
❸1051	691265	1	Ring-Retaining
❸1090	691293	1	Retainer-Brush

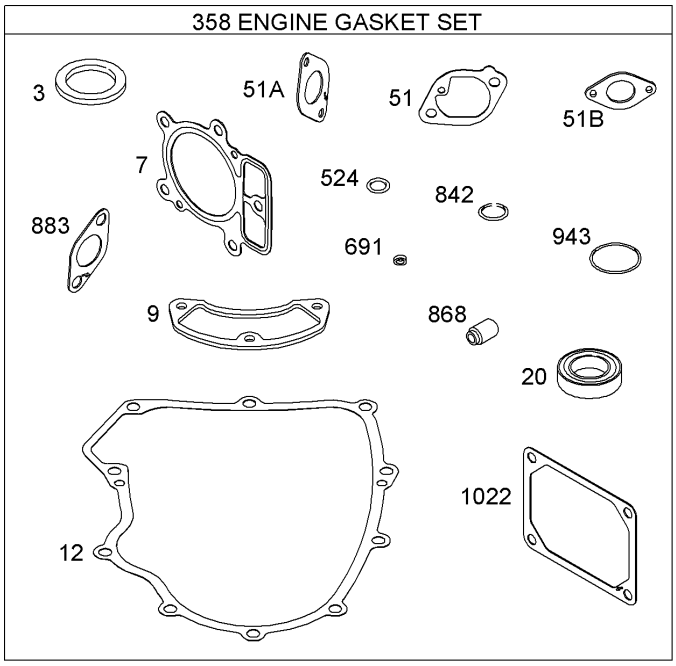


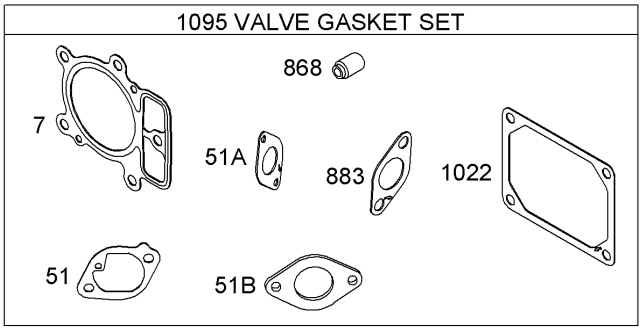


Assemblies include all parts shown in frames

Gasket Set
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
❸❺3	391086s	1	Seal-Oil (Magneto Side)
❸❺7 ❼	693997	1	Gasket-Head, Cylinder
❸❺9	690937	1	Gasket-Breather
❸❺12	697227	1	Gasket-Crankcase
❸❺20	791892	1	Seal-Oil (P-T-O Side)
❹❺51 ❻	699800	1	Gasket-Intake
❸❺51A ❻	690949	1	Gasket-Intake
❹❺51B ❻	699803	1	Gasket-Intake
❸358	699823	1	Engine Gasket Set
❸❺524	691032	1	Seal, O-Ring (Dipstick Tube)
❸❺691	790574	1	Seal-Shaft, Governor
❸❺842	691031	1	Seal, O-Ring (Dipstick)
❸❺868 ❼	690968	1	Seal-Valve
❸❺883 ❼	690970	1	Gasket-Exhaust
❸❺943	690589	1	Seal, O-Ring (Oil Pump Cover)
❸❺1022 ❼	690971	1	Gasket-Cover, Rocker
❸1095	699822	1	Valve Gasket Set

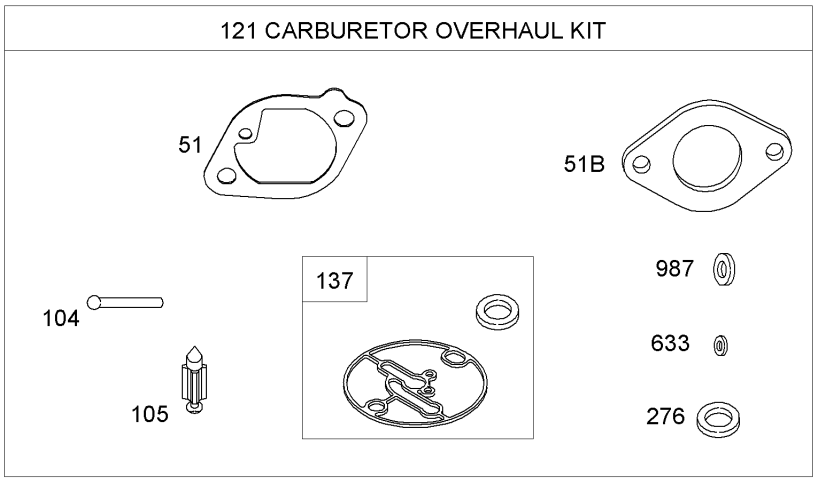

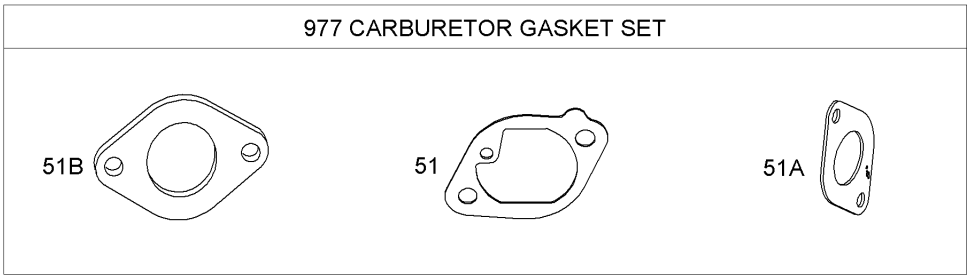

Assemblies include all parts shown in frames

Carburetor Overhaul Kit
Briggs and Stratton 441677-0136-E1

Ref	Part No.	Qty.	Description
❹❺51 ❻	699800	1	Gasket-Intake
❸❺51A ❻	690949	1	Gasket-Intake
❹❺51B ❻	699803	1	Gasket-Intake
❸❹104	694918	1	Pin-Hinge, Float
❸❹105	698537	1	Valve-Needle, Float
❸121	699814	1	Carburetor Overhaul Kit
❸❹137	698781	1	Gasket-Bowl, Float
❸❹276	695410	1	Washer-Sealing
❸❹633	695414	1	Seal-Shaft, Choke And Throttle
❸977	699815	1	Carburetor Gasket Set
❸❹987	699813	1	Seal-Shaft, Throttle

Attachments and Accessories

For 74592 - DH 220 Lawn Tractor

Product Name	Model/Part
Rear Discharge Kit	79471

NOTES

NOTES

NOTES


TORO®