Form Number 3360-316 Rev C

LX426 Lawn Tractor

Model No. 13AL60RG048 - 1L107H10100 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2008
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Front and Rear Wheel Assembly	3
Steering Shaft and Front Axle Assembly	4
Frame, Battery and PTO Engage Assembly	5
Seat and Fender Assembly	6
Fuel Tank, Hood and Dash Assembly	7
Transimission, Brake and Traction Pedal Assembly	8
Single Speed Transmission Assembly No. 112-6083	10
Deck Assembly	12
Muffler and Guard Assembly	14
Cylinder Assembly Briggs and Stratton 331777-0946-B2	15
Cylinder Head Assembly Briggs and Stratton 331777-0946-B2	16
Crankshaft and Piston/Ring Assembly Briggs and Stratton 331777-0946-B2	17
Crankcase Cover/Sump Assembly Briggs and Stratton 331777-0946-B2	18
Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2	19
Governor Control Assembly Briggs and Stratton 331777-0946-B2	20
Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 331777-0946-B2	21
Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2	22
Engine Gasket and Carburetor Overhaul Kit Briggs and Stratton 331777-0946-B2	23
Attachments and Accessories List	24

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes


❶ Not illustrated

❷ Obtain from your local Briggs & Stratton dealer

❸ Included in Carburetor Overhaul Kit (Ref. No. 121)


❹ Included in Engine Gasket Set (Ref. No. 358)

❺ Included in Valve Gasket Set (Ref. No. 1095)

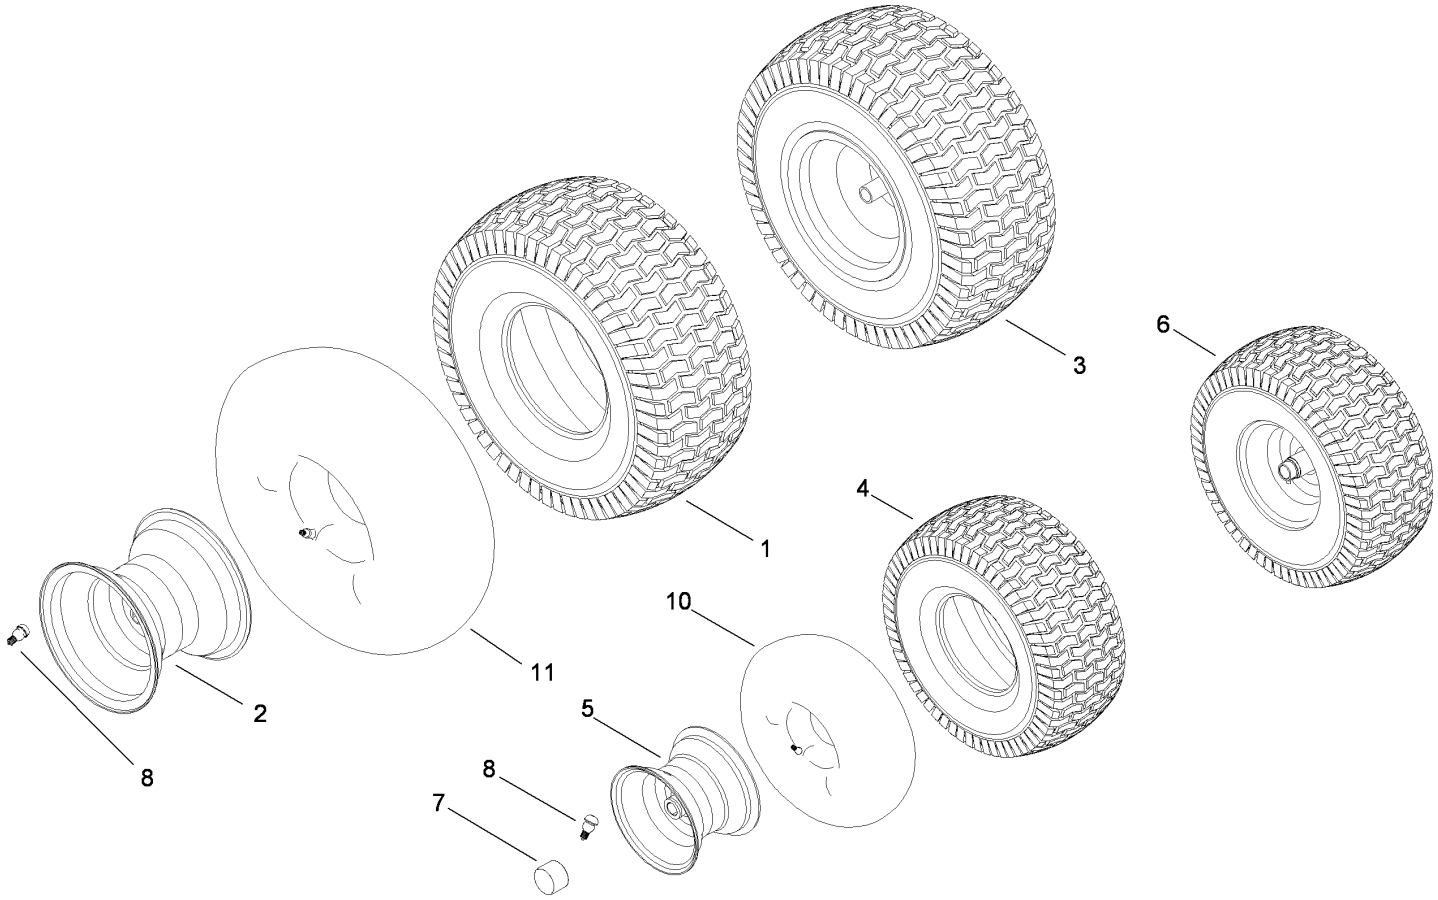

Front and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	112-0713	1	Tire-Multi Trac
2	112-6093	1	Rim-Wheel, Rear
3	112-0496	1	Rear Wheel ASM
4	112-0576	1	Tire-Front
5	112-0468	1	Rim-Wheel, Front
6	112-0491	1	Front Wheel ASM
7	112-5968	1	Cap-Hub
8	112-0503	1	Valve-Air, Tubeless
10	232-39	1	Tube-Inner
11	93-3893	1	Tube-Inner

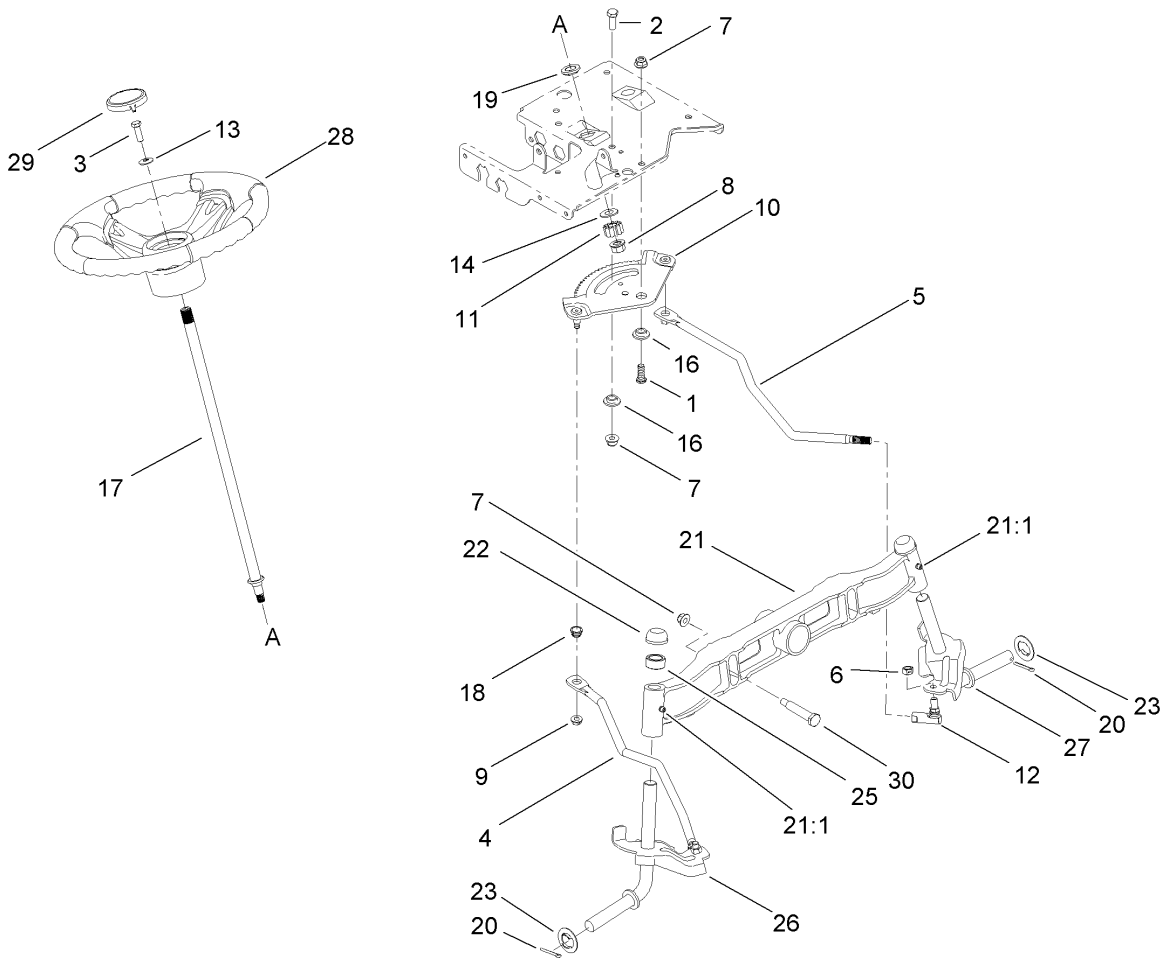

Steering Shaft and Front Axle Assembly

Ref	Part No.	Qty.	Description
1	112-0631	1	Screw-HH
2	112-0492	1	Screw-HH
3	112-0473	1	Screw-HH
4	112-0355	1	Link-Drag, RH
5	112-0346	1	Link-Drag, LH
6	112-0483	1	Nut-Hex, Lock
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	112-0862	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0924	1	Washer-Flat
14	112-0925	1	Washer-Flat
16	112-0881	1	Spacer-Shoulder
17	112-6097	1	Shaft-Steering
18	112-0929	1	Bushing
19	112-6098	1	Bearing-Flange, Hex
20	112-0860	1	Pin-Cotter
21	112-6099	1	Pivot-Axle, Cast Iron
21:1	112-0926	1	Fitting-Grease
22	112-0323	1	Cap
23	112-5972	1	Washer-Flat
25	112-6136	1	Spacer


Ref	Part No.	Qty.	Description
26	112-0547	1	RH Axle ASM
27	112-0562	1	LH Axle ASM
28	112-6100	1	3 Spoke Wheel Steering ASM
29	112-3734	1	Cap-Wheel, Steering
30	112-0699	1	Bolt-Shoulder

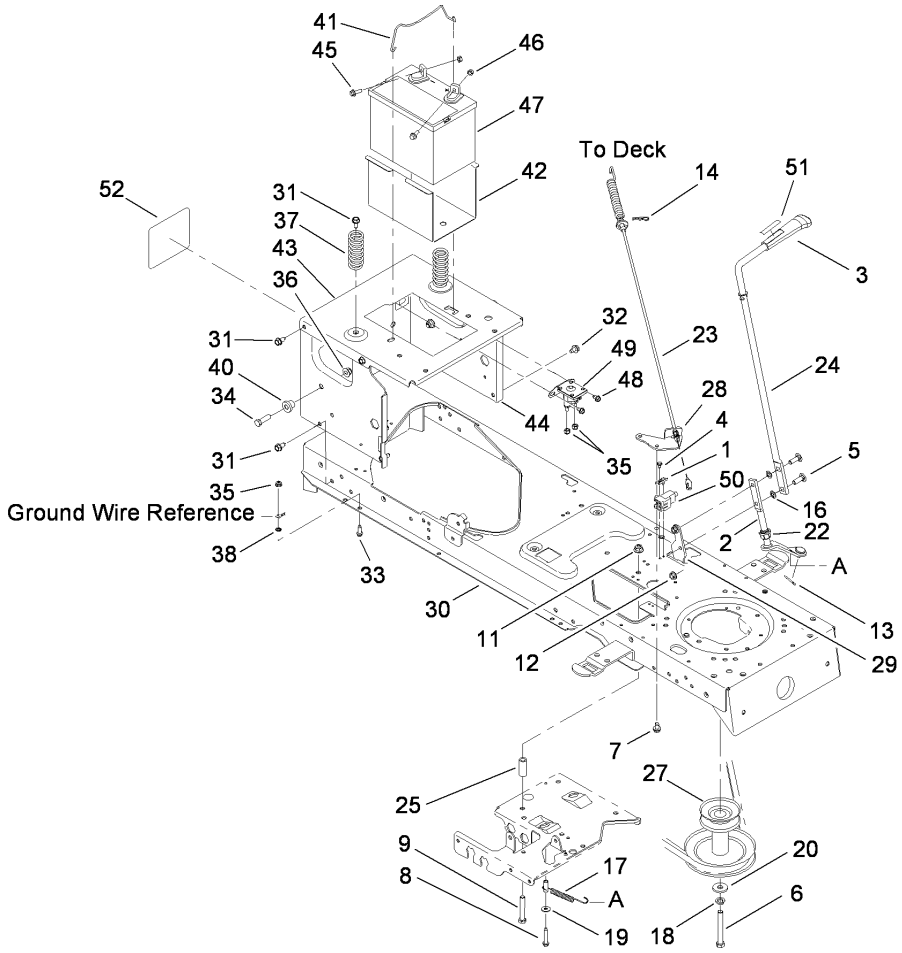

Frame, Battery and PTO Engage Assembly

Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-6007	1	Lever-Engage, PTO
3	112-6011	1	Knob-PTO
4	112-0651	1	Screw-TAP
5	112-0598	1	Bolt-CARR
6	112-6008	1	Screw-HH
7	112-0676	1	Screw-TAP
8	112-0843	1	Screw-HWH
9	112-0700	1	Screw-HH
11	112-0668	1	Nut-Lock, Flange
12	112-0511	1	Nut-Lock, Flange
13	112-6010	1	Pin-Cotter
14	112-0398	1	Pin-Click
16	112-0645	1	Nut-Push
17	112-0567	1	Spring-Extension
18	112-0428	1	Washer-Lock
19	112-3695	1	Washer-Flat
20	112-0380	1	Washer-Flat
22	112-0384	1	Bearing-Flange, Hex (Split)
23	112-6137	1	Cable-Engage, Deck
24	112-0393	1	Handle-Engage, Deck
25	112-0433	1	Spacer
27	112-0333	1	Pulley-Engine
28	112-6105	1	Bracket-Mount, Cable


Ref	Part No.	Qty.	Description
29	112-0516	1	Bracket-Stop
30	112-5974	1	Lower Frame ASM
31	112-6070	1	Screw-TAP
32	112-0676	1	Screw-TAP
33	112-0587	1	Screw-TAP
34	112-0557	1	Screw-HH
35	112-0636	1	Nut-Lock, Flange
36	112-0668	1	Nut-Lock, Flange
37	112-0501	1	Spring-Compression
38	112-0703	1	Washer-Lock, External
40	112-0661	1	Spacer-Shoulder
41	112-0581	1	Rod-Holddown, Battery
42	112-0570	1	Tray-Battery
43	112-0647	1	Bracket-Frame, Seat
44	112-6107	1	Frame-Upper
45	112-1070	1	Bolt-Carriage
46	112-0546	1	Nut-Sems
47	112-0425	1	Battery-245, Cca (Dry Flat Top)
48	112-6108	1	Screw-TAP
49	112-6073	1	Solenoid-12V, 2 Post 2 Tab
50	112-0455	1	Switch-Interlock
51	112-1274	1	Decal-PTO, Manual
52	112-1284	1	Decal

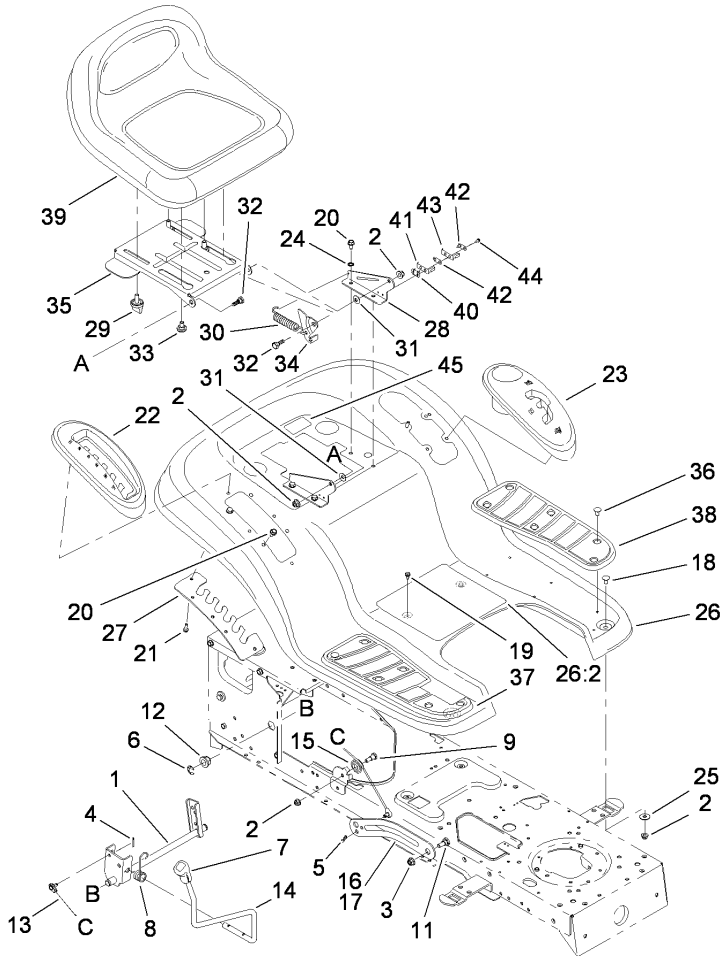

Seat and Fender Assembly

Ref	Part No.	Qty.	Description
1	112-5969	1	Lift Shaft ASM
2	112-0650	1	Nut-Lock, Flange
3	112-0668	1	Nut-Lock, Flange
4	112-0459	1	Pin-Cotter
5	112-0568	1	Pin-Cotter
6	112-0586	1	Ring-E
7	112-0585	1	Grip-Handle
8	112-0477	1	Spring-Torsion
9	112-0443	1	Bolt-Shoulder
11	112-0669	1	Bolt-Shoulder
12	112-0347	1	Bearing-Flange
13	112-0374	1	Cable-Lift
14	112-5970	1	Handle-Lift
15	112-0502	1	Pulley-Roller
16	112-6109	1	Arm-Lift, RH
❶17	112-6110	1	Arm-Lift, LH
18	112-0426	1	Bolt-CARR
19	112-0524	1	Screw-HWHTF
20	112-6070	1	Screw-TAP
21	112-0509	1	Screw-TAP
22	112-0869	1	Cover-Lever, Lift
23	112-6111	1	Cover-Holder (W/Cup)
24	112-0517	1	Washer-Lock, External
25	112-0582	1	Washer-Flat

Ref	Part No.	Qty.	Description
26	112-6112	1	Fender
26:2	112-1262	1	Decal-Danger
27	112-0629	1	Bracket-Adjusting, Lift
28	112-6046	1	Bracket-Mount, Seat
29	112-0409	1	Knob
30	112-0616	1	Spring-Extension
31	112-0435	1	Washer-Bell
32	112-0575	1	Bolt-Shoulder
33	112-0554	1	Bolt-Shoulder
34	112-0646	1	Bracket-Lift, LH
35	112-6113	1	Bracket-Pivot, Seat
36	112-0549	1	Clip-Ratchet, Fastener
37	112-0540	1	Pad-Foot, RH
38	112-0545	1	Pad-Foot, LH
39	112-6114	1	Seat-Medium
40	112-0637	1	Plate-Boss, Insulator
41	112-0532	1	Switch-Spring, Inner
42	112-0635	1	Plate-Insulator
43	112-0529	1	Switch-Spring
44	112-0626	1	Screw-HWHTF
45	112-1260	1	Decal-Service (Toro Hotline)

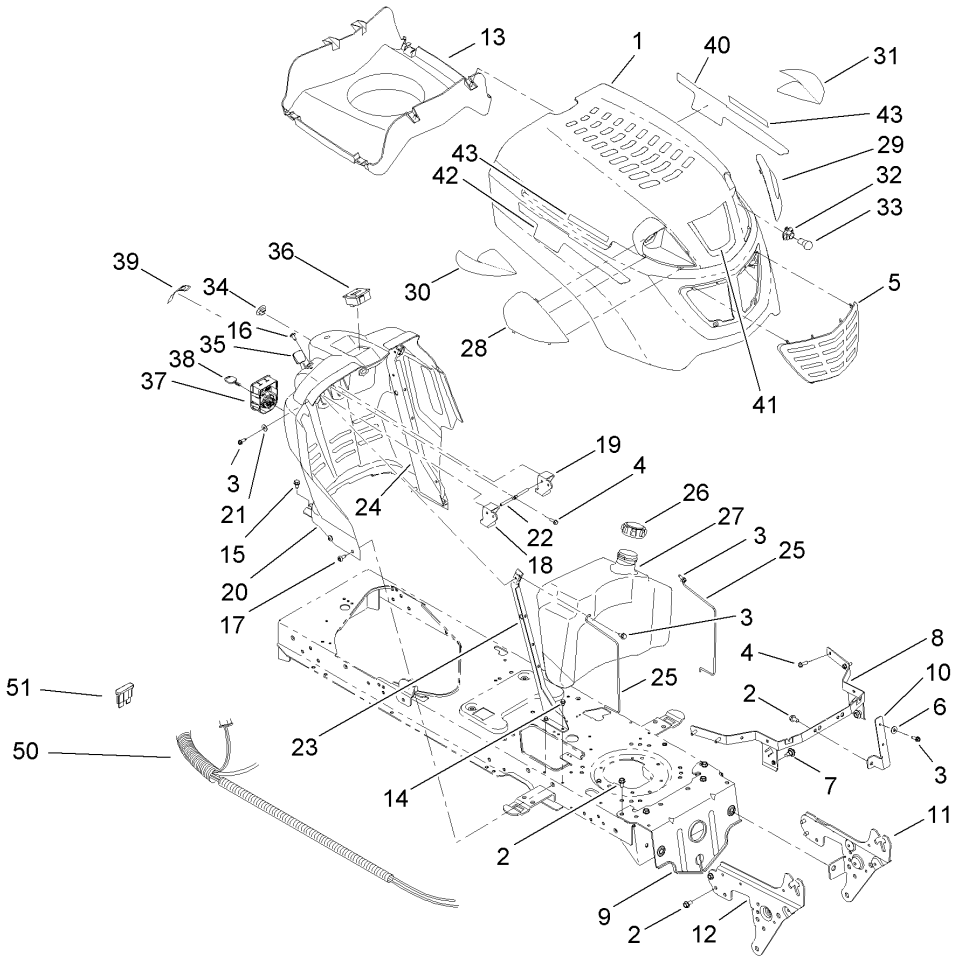


Fuel Tank, Hood and Dash Assembly

Ref	Part No.	Qty.	Description
1	112-0444	1	Hood
2	112-6070	1	Screw-TAP
3	112-0587	1	Screw-TAP
4	112-0509	1	Screw-TAP
5	112-0381	1	Grill
6	112-3695	1	Washer-Flat
7	112-6128	1	Bolt-Shoulder, TAP
8	112-5985	1	Bracket-Pivot
9	112-6127	1	Bracket-Pivot
10	112-5986	1	Bracket-Support, Hood
11	112-6126	1	Bracket-Pivot, Support (LH)
12	112-6125	1	Bracket-Pivot, Support (RH)
13	112-6124	1	Plenium-Hood
14	112-3696	1	Screw-TAP
15	112-0676	1	Screw-TAP
16	112-0550	1	Screw-TAP
17	112-0563	1	Screw-TAP
18	112-0526	1	Lever-Cruise
19	112-0580	1	Lever-Brake
20	112-6123	1	Dash-Manual, PTO
21	112-0485	1	Washer-Spring
22	112-0604	1	Rod-Lever, Bent
23	112-6122	1	Support-Dash, RH
24	112-6121	1	Support-Dash, LH

Ref	Part No.	Qty.	Description
25	112-0678	1	Rod-Support
26	112-6120	1	Cap-Fuel
27	112-6119	1	Tank-Fuel, 3 Gal
28	112-0447	1	Lens-RH
29	112-0446	1	Lens-LH
30	112-5810	1	Reflector-RH
31	112-5811	1	Reflector-LH
32	112-0408	1	Socket-Headlight
33	112-0402	1	Lamp-12V, Miniature
34	112-0535	1	Plug-Choke
35	112-6118	1	Cable-Throttle / Choke
36	112-6117	1	Meter-Hour
37	112-6116	1	Module-Switch, Ignition
38	112-6115	1	Key-Ignition
39	112-1271	1	Decal-Throttle, Dash
40	112-5952	1	Decal-Hood, Left Side
41	112-3716	1	Decal-Hood
42	112-5953	1	Decal-Hood, Right Side
43	112-6189	1	Decal
50	112-6187	1	Harness-Wire
51	112-5943	1	Fuse-20 Amp

Transimission, Brake and Traction Pedal Assembly

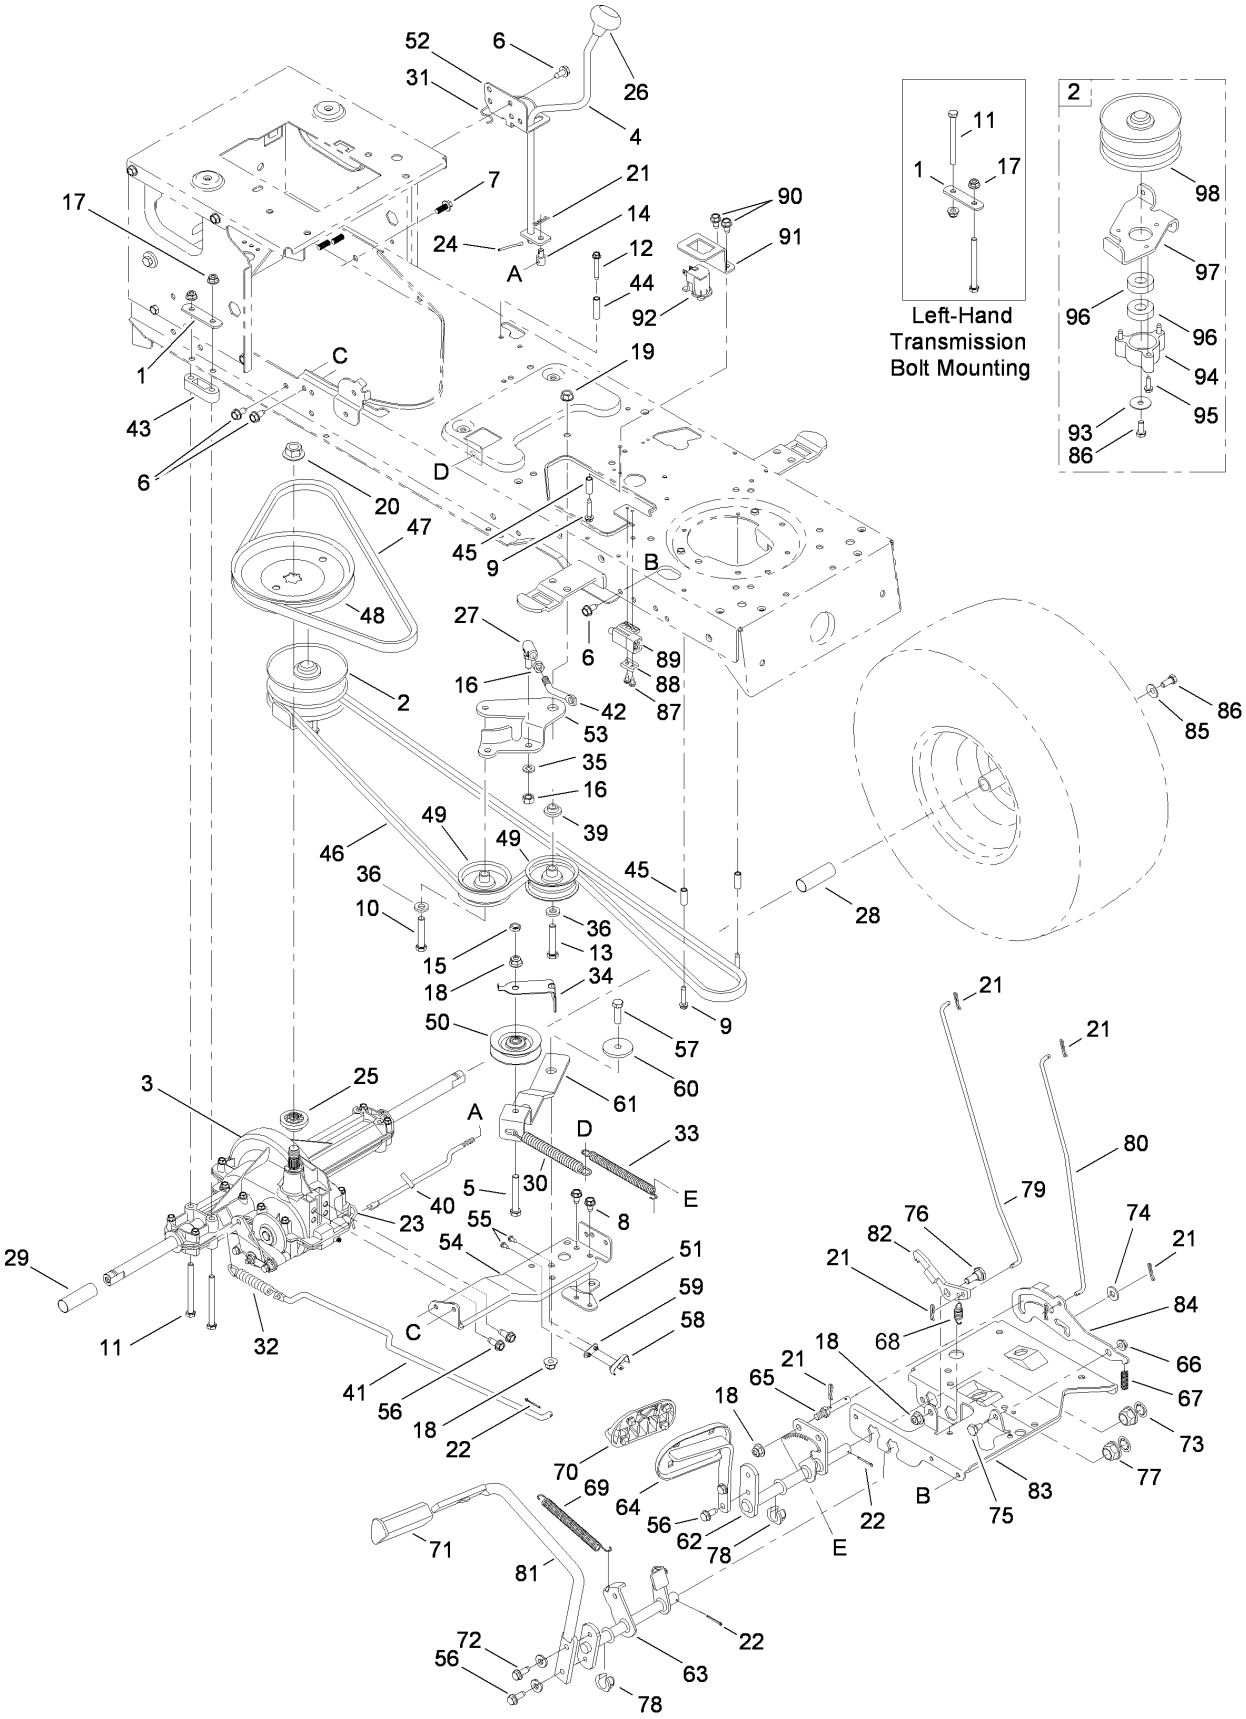


Transimission, Brake and Traction Pedal Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
2	112-6129	1	Pulley ASM
3	112-6083	1	Single Speed Transaxle ASM
4	112-0627	1	Shift Lever ASM
5	112-6130	1	Screw-HH
6	112-6070	1	Screw-TAP
7	112-6131	1	Screw-HH
8	112-0676	1	Screw-TAP
9	112-0603	1	Screw-HH
10	112-0469	1	Screw-TAP
11	112-0667	1	Screw-HH
12	112-0839	1	Screw-TAP
13	112-0421	1	Screw-HH
14	112-0592	1	Ferrule-Adjustable
15	112-6132	1	Nut-Jam, Lock
16	112-0343	1	Nut-Hex
17	112-0650	1	Nut-Lock, Flange
18	112-0668	1	Nut-Lock, Flange
19	112-0385	1	Nut-Lock, Flange
20	112-0451	1	Nut-Flange
21	112-0459	1	Pin-Cotter
22	112-0568	1	Pin-Cotter
23	112-0639	1	Pin-Hair
24	112-0412	1	Pin-Cotter
25	112-0450	1	Hub-Pulley
26	112-0514	1	Knob-Shift
27	112-0306	1	Ball Joint ASM
28	112-0670	1	Sleeve
29	112-0683	1	Sleeve
30	112-5991	1	Spring-Extension
31	112-0357	1	Clip-Spring, Shifter
32	112-0350	1	Spring-Extension
33	112-0348	1	Spring-Extension
34	112-5883	1	Guide-Belt, Traction
35	112-0415	1	Washer-Lock
36	112-0544	1	Washer-Flat
39	112-0345	1	Spacer-Shoulder
40	112-5992	1	Rod-Shift
41	112-0655	1	Rod-Brake
42	112-0538	1	Rod-Adjustment, Idler
43	112-0673	1	Spacer-Transaxle
44	112-5831	1	Spacer
45	112-0644	1	Spacer
46	112-0301	1	Belt-Drive, Variable Speed
47	112-0305	1	Belt-Drive, Transmission
48	112-0379	1	Pulley-V (W/Hub)
49	112-0313	1	Pulley-Idler, Flat
50	112-6133	1	Pulley-Idler, V-Type
51	112-0701	1	Bracket-Shift
52	112-0638	1	Bracket-Shift
53	112-0525	1	Bracket-Idler, Center Double
54	112-6134	1	Bracket ASM

Ref	Part No.	Qty.	Description
55	112-0626	1	Screw-HWHTF
56	112-0395	1	Screw-HWH
57	112-0557	1	Screw-HH
58	112-0602	1	Switch-Spring, Short
59	112-0625	1	Plate-Insulator
60	112-0584	1	Spacer-Shoulder
61	112-6135	1	Bracket-Idler
62	112-0539	1	Speed Control ASM
63	112-5998	1	Speed Control ASM
64	112-0680	1	Pedal ASM
65	112-0599	1	Pin
66	112-0511	1	Nut-Lock, Flange
67	112-0506	1	Spring
68	112-0510	1	Spring-Extension
69	112-0348	1	Spring-Extension
70	112-0543	1	Pad-Pedal
71	112-6001	1	Pad-Brake
72	112-0366	1	Washer-Lock
73	112-0339	1	Washer-Flat
74	112-0541	1	Washer-Flat
75	112-0542	1	Bolt-Shoulder
76	112-0442	1	Bolt-Shoulder
77	112-0347	1	Bearing-Flange
78	112-0387	1	Bearing-Flange, Hex (Split)
79	112-0675	1	Rod-Brake, Lock Control
80	112-0662	1	Rod-Control, Cruise
81	112-6005	1	Pedal-Brake
82	112-6004	1	Latch-Cruise
83	112-0681	1	Bracket-Support, Steering
84	112-0679	1	Bracket-Lockout
85	112-0435	1	Washer-Bell
86	112-0551	1	Screw-HH
87	112-0651	1	Screw-TAP
88	112-0671	1	Plate-Switch
89	112-0455	1	Switch-Interlock
90	112-0524	1	Screw-HWHTF
91	112-3737	1	Bracket-Switch, Parking Brake
92	112-0441	1	Switch-Mount, Snap
93	112-0500	1	Washer-Flat
94	112-5996	1	Cup-Bearing
95	112-0843	1	Screw-HWH
96	112-0928	1	Bearing-Ball
97	112-5995	1	Bracket-Pulley
98	112-6129	1	Pulley ASM


Single Speed Transmission Assembly No. 112-6083

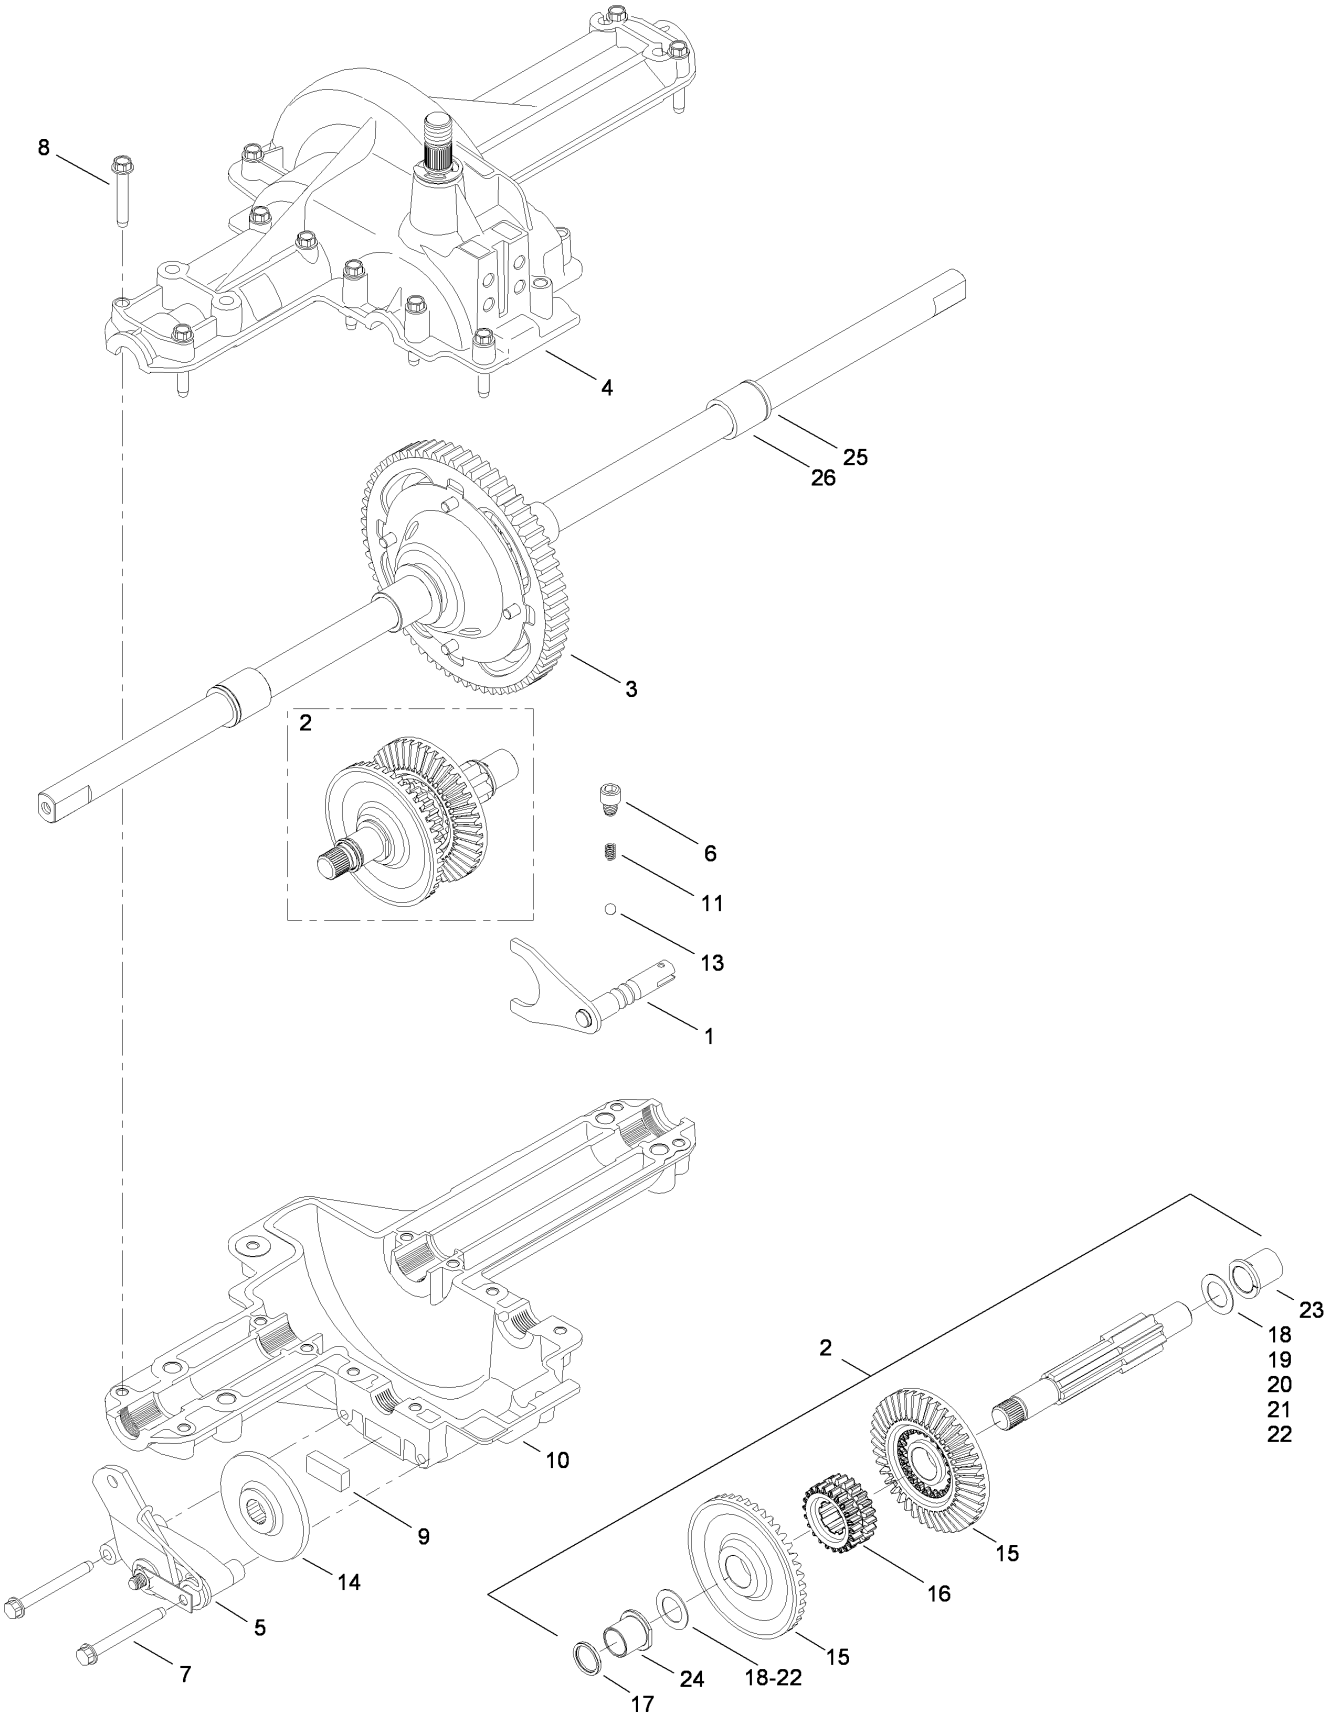

Single Speed Transmission Assembly No. 112-6083

Ref	Part No.	Qty.	Description
1	112-0806	1	Shift Fork ASM
2	112-6084	1	Drive Shaft ASM
3	112-6085	1	Differential ASM
4	112-6086	1	Upper Housing ASM
5	112-0832	1	Brake ASM
6	112-6087	1	Screw-TAP
7	112-0698	1	Screw-HWH
8	112-0839	1	Screw-TAP
9	112-0741	1	Puck-Brake
10	112-6088	1	Housing-Lower
11	112-0801	1	Spring-Detent
13	112-0799	1	Ball-Detent
14	112-0817	1	Disc-Brake
15	112-6089	1	Gear-Bevel, 42T (Spline)
16	112-6090	1	Collar-Cluster
17	112-6091	1	Seal
18	112-0748	1	Washer-Flat
19	112-0750	1	Washer-Flat
20	112-0745	1	Washer-Flat
21	112-0773	1	Washer-Thrust
22	112-0755	1	Washer-Thrust
23	112-0794	1	Bearing-Flange
24	112-0795	1	Bearing-Flange
25	112-0800	1	Seal
26	112-6092	1	Bearing-Sleeve


Deck Assembly

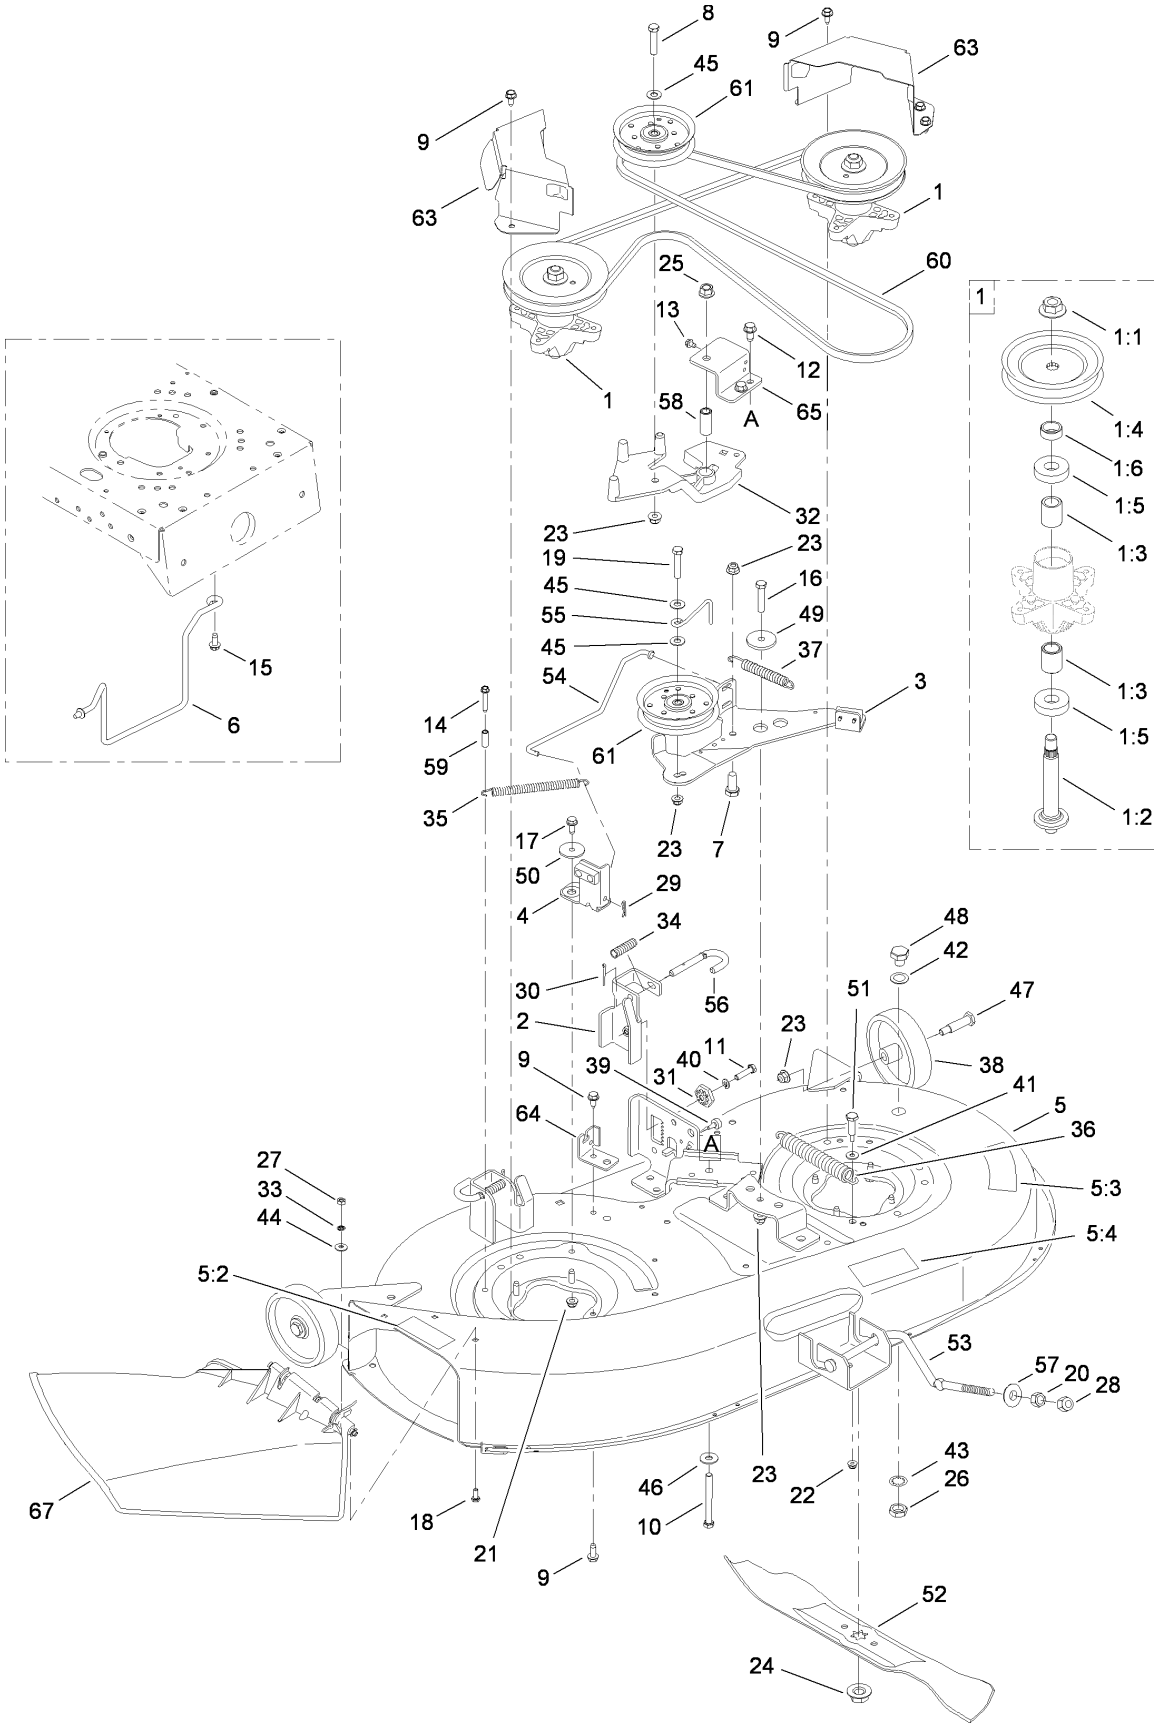

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-6063	1	Spindle ASM
1:1	112-0330	1	Nut-Flange, Hex
1:2	112-6062	1	Shaft-Spindle
1:3	112-0389	1	Spacer
1:4	112-0613	1	Pulley-Deck
1:5	112-0377	1	Bearing-Ball
1:6	112-6061	1	Spacer
2	112-0413	1	LH Hanger Bracket ASM
3	112-0606	1	Deck Brake ASM
4	112-3742	1	Brake ASM
5	112-5857	1	Deck And Decal ASM
5:2	112-1267	1	Decal-Danger
5:3	112-1265	1	Decal-Danger
5:4	112-1270	1	Decal-Routing, Belt
6	112-6071	1	Rod-Keeper, Belt
7	112-0855	1	Screw-HH
8	112-0513	1	Screw-HH
9	112-6070	1	Screw-TAP
10	112-3745	1	Screw-HH
11	112-0373	1	Screw-HH
12	112-0906	1	Screw-HWHTF
13	112-6022	1	Screw-TAP
14	112-0843	1	Screw-HWH
15	112-0395	1	Screw-HWH
16	112-0557	1	Screw-HH
17	112-1090	1	Screw-HH
18	112-0499	1	Screw-HH
19	112-0421	1	Screw-HH
20	112-0458	1	Nut-Hex
21	112-0650	1	Nut-Lock, Flange
22	112-0636	1	Nut-Lock, Flange
23	112-0668	1	Nut-Lock, Flange
24	112-0330	1	Nut-Flange, Hex
25	112-0859	1	Nut-Lock, Flange
26	112-0351	1	Nut-Hex
27	112-0522	1	Nut-Hex
28	112-0476	1	Nut-Lock, Hex (Nylon)
29	112-0459	1	Pin-Cotter
30	112-0412	1	Pin-Cotter
31	112-0327	1	Gear-Adjustment, Deck
32	112-6069	1	Bracket-Idler
33	112-0623	1	Retainer-Bolt
34	112-0406	1	Spring-Compression
35	112-0528	1	Spring-Extension
36	112-6043	1	Spring-Extension
37	112-3746	1	Spring-Extension
38	112-0337	1	Wheel-Deck, Rear
39	112-1016	1	Bumper
40	112-0366	1	Washer-Lock
41	112-3695	1	Washer-Flat
42	112-0339	1	Washer-Flat
43	112-0643	1	Washer-Lock

Ref	Part No.	Qty.	Description
44	112-0485	1	Washer-Spring
45	112-0572	1	Washer-Flat
46	112-0380	1	Washer-Flat
47	112-0334	1	Bolt-Shoulder
48	112-0577	1	Plug
49	112-0584	1	Spacer-Shoulder
50	112-3747	1	Spacer-Shoulder
51	112-6068	1	Bolt-Shoulder
52	112-0315	1	Blade
53	112-0607	1	Rod-Deck, Front Adjustment
54	112-3748	1	Rod-Brake
55	112-5879	1	Rod-Keeper, Belt
56	112-0436	1	Pin-Handle, Deck Release
57	112-0641	1	Cup-Pivot, Lift
58	112-3749	1	Spacer
59	112-0644	1	Spacer
60	112-5800	1	Belt-V Type
61	112-0314	1	Pulley-Idler
63	112-6067	1	Cover-Belt
64	112-0718	1	Bracket-Cable, Deck
65	112-6066	1	Support-Bracket, Pivot
67	112-0353	1	Discharge Chute ASM

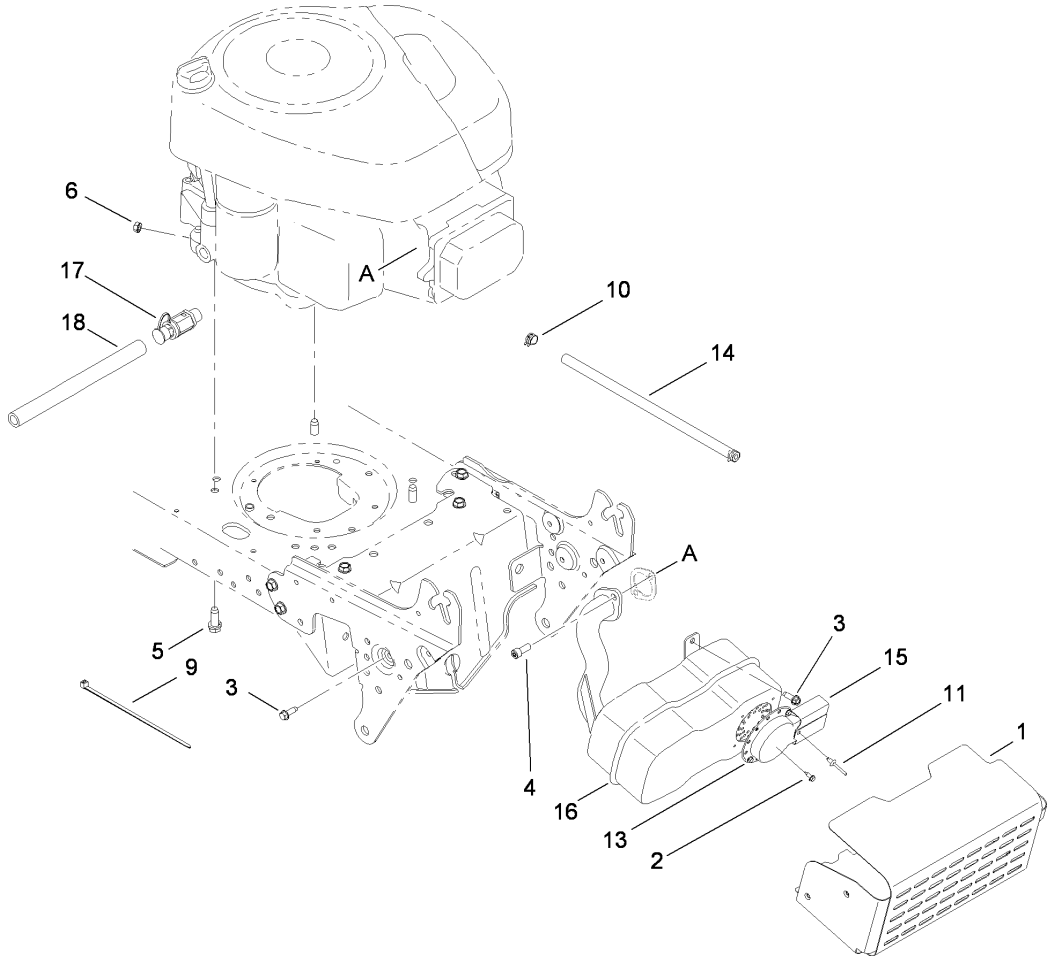

Muffler and Guard Assembly

Ref	Part No.	Qty.	Description
1	112-6096	1	Shield-Muffler
2	112-0626	1	Screw-HWHTF
3	112-0587	1	Screw-TAP
4	112-6012	1	Screw-HSH
5	112-0487	1	Screw-TAP
6	112-0546	1	Nut-Sems
9	112-0527	1	Tie-Cable
10	112-0573	1	Clamp-Hose
11	112-3741	1	Rivet-Pop
13	112-0453	1	Deflector-Muffler
14	112-0720	1	Hose-Fuel
15	112-0730	1	Deflector-Muffler, Long
16	112-6095	1	Muffler-Single Inlet
17	112-6094	1	Drain-Oil
18	112-0553	1	Hose-Drain

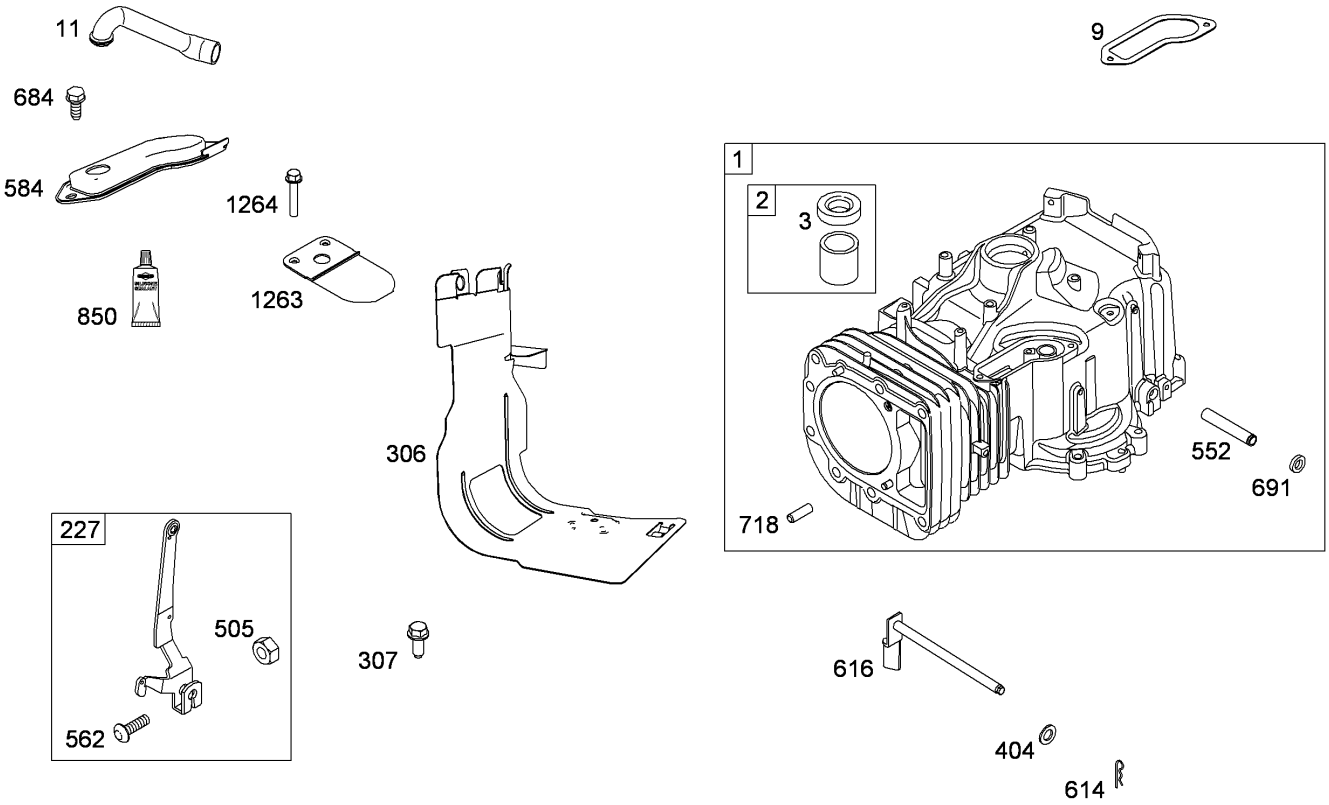

1330 Repair Manual

48 Short Block


1058 Operator Manual

Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷1	794128	1	Cylinder Assembly
❷2	399265	1	Bushing And Seal Kit (Magneto Side)
❷❹3	391086s	1	Seal-Oil (Magneto Side)
❷9	697109	1	Gasket-Breather
❷11	794683	1	Tube-Breather
❷48	795446	1	Short Block
❷227	691374	1	Lever-Control, Governor
❷306	794953	1	Shield-Cylinder
❷307	691003	1	Screw (Cylinder Shield)
❷404	691691	1	Washer (Governor Crank)
❷505	691251	1	Nut (Governor Control Lever)
❷552	697144	1	Bushing-Crank, Governor
❷562	691119	1	Bolt (Governor Control Lever)
❷584	794682	1	Cover-Passage, Breather (Use With Liquid Sealant, Ref 850)
❷614	691620	1	Pin-Cotter
❷616	692012	1	Crank-Governor
❷684	697157	1	Screw (Breather Passage Cover)
❷❹691	692407	1	Seal-Shaft, Governor
❷718	690959	1	Pin-Locating
❷850	100106	1	Sealant-Liquid
❷1058	276352	1	Operator Manual
❷1263	697124	1	Reed-Breather

Ref	Part No.	Qty.	Description
❷1264	697104	1	Screw (Breather Reed)
❷1330	273521	1	Repair Manual

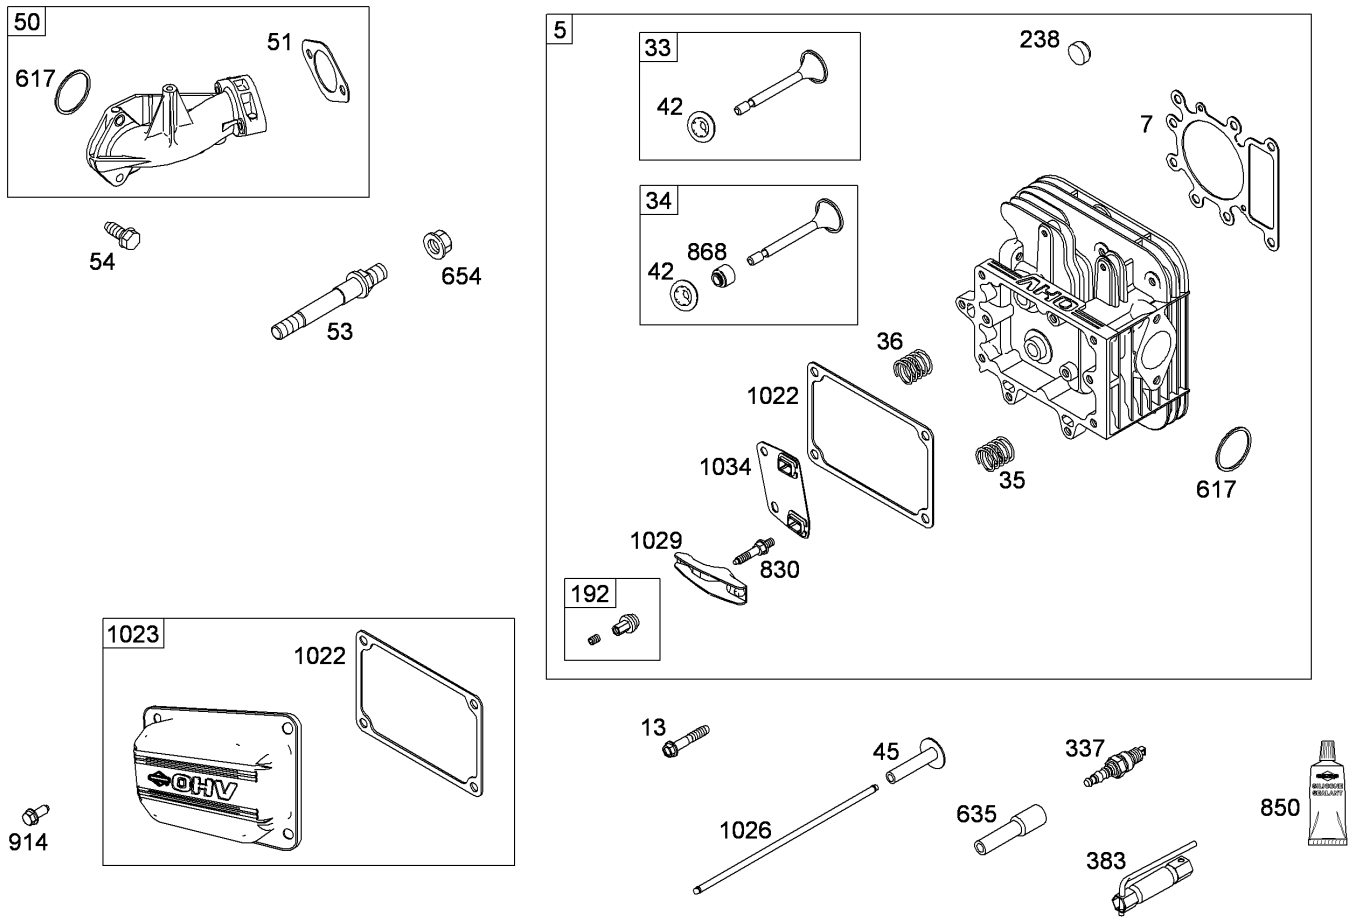


Assemblies include all parts shown in frames

Cylinder Head Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷5	796005	1	Head-Cylinder
❷❹7 ❺	794114	1	Gasket-Head, Cylinder
❷13	793988	1	Screw (Cylinder Head)
❷33	792688	1	Valve-Exhaust
❷34	791935	1	Valve-Intake
❷35	691279	1	Spring-Valve (Intake)
❷36	691279	1	Spring-Valve (Exhaust)
❷42	499586	1	Keeper-Valve
❷45	690564	1	Tappet-Valve
❷50	690193	1	Manifold-Intake
❷❸51 ❹❺	692137	1	Gasket-Intake
❷53	690227	1	Stud (Carburetor)
❷54	691148	1	Screw (Intake Manifold)
❷192	691986	1	Adjustor-Arm, Rocker
❷238	691843	1	Cap-Valve
❷337	491055s	1	Plug-Spark
❷383	89838s	1	Wrench-Spark Plug
❷❸617 ❹	692138	1	Seal-O Ring (Intake Manifold) (Red)
❷635	691909	1	Boot-Spark Plug
❷654	690958	1	Nut (Carburetor)
❷830	691095	1	Stud-Arm, Rocker


Ref	Part No.	Qty.	Description
❷850	100106	1	Sealant-Liquid (Use To Install Rocker Cover)
❷❹868 ❺	690968	1	Seal-Valve
❷914	697551	1	Screw (Rocker Cover)
❷❹1022 ❺	272475s	1	Gasket-Cover, Rocker
❷1023	791079	1	Cover-Rocker (Use With Liquid Sealant, Ref 850)
❷1026	692003	1	Rod-Push (Intake)
❷1026	692011	1	Rod-Push (Exhaust)
❷1029	691751	1	Arm-Rocker
❷1034	690822	1	Guide-Rod, Push

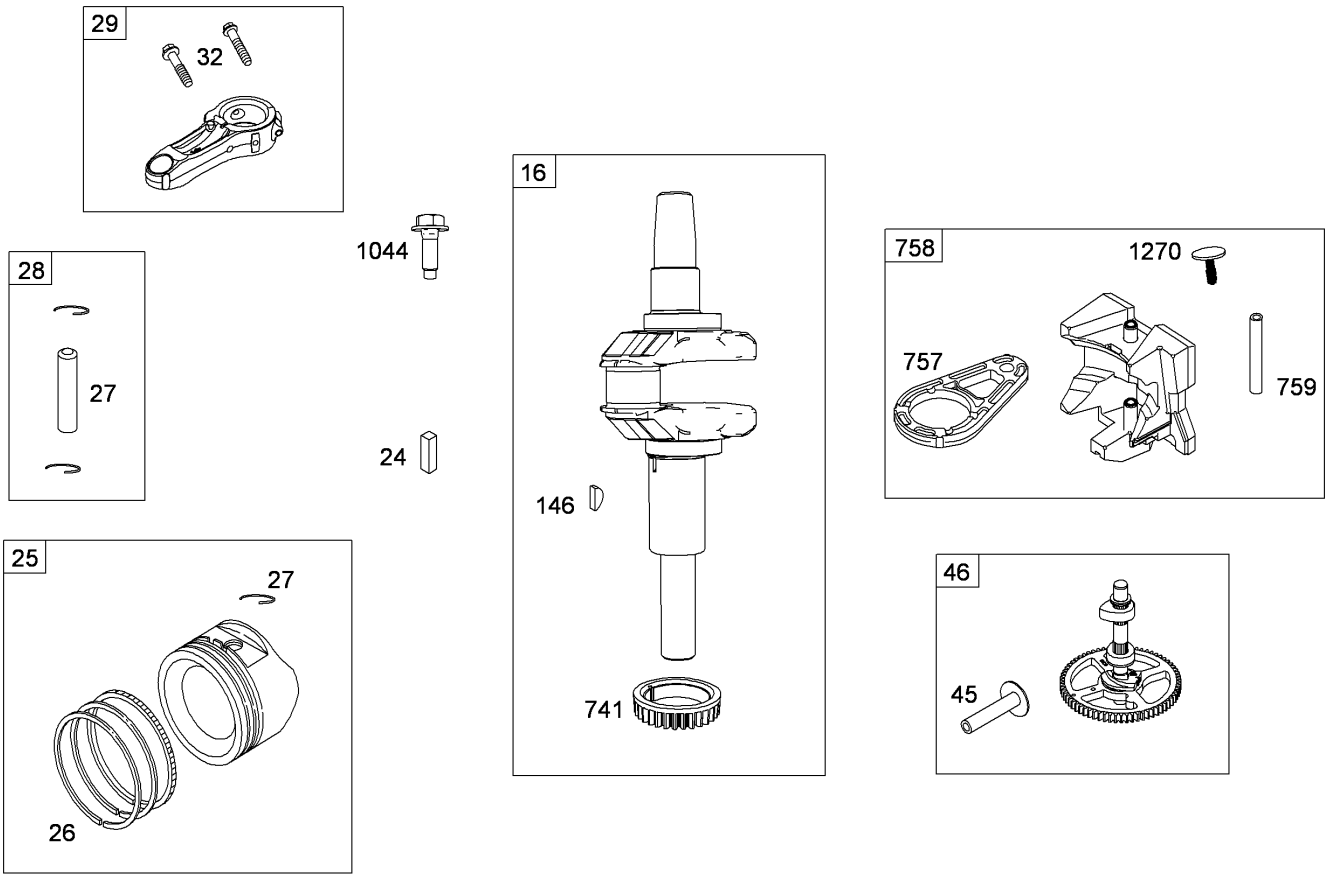

Assemblies include all parts shown in frames

Crankshaft and Piston/Ring Assembly
Briggs and Stratton 331777-0946-B2


Ref	Part No.	Qty.	Description
❷16	697127	1	Crankshaft
❷24	222698s	1	Key-Flywheel
❷25	794124	1	Piston ASM (Standard)
❷25	794125	1	Piston ASM (.020 Oversize)
❷26	794126	1	Ring Set (Standard)
❷26	794127	1	Ring Set (.020 Oversize)
❷27	698469	1	Lock-Pin, Piston
❷28	794143	1	Pin-Piston
❷29	794122	1	Rod-Connecting
❷32	791118	1	Screw (Connecting Rod)
❷45	690564	1	Tappet-Valve
❷46	793880	1	Camshaft
❷146	691639	1	Key-Timing
❷741	697128	1	Gear-Timing
❷757	793242	1	Link-Counterweight
❷758	793763	1	Counterweight
❷759	697392	1	Pin-Counterweight
❷1044	698139	1	Screw (Flywheel)
❷1270	793243	1	Plug-Counterweight, A V S

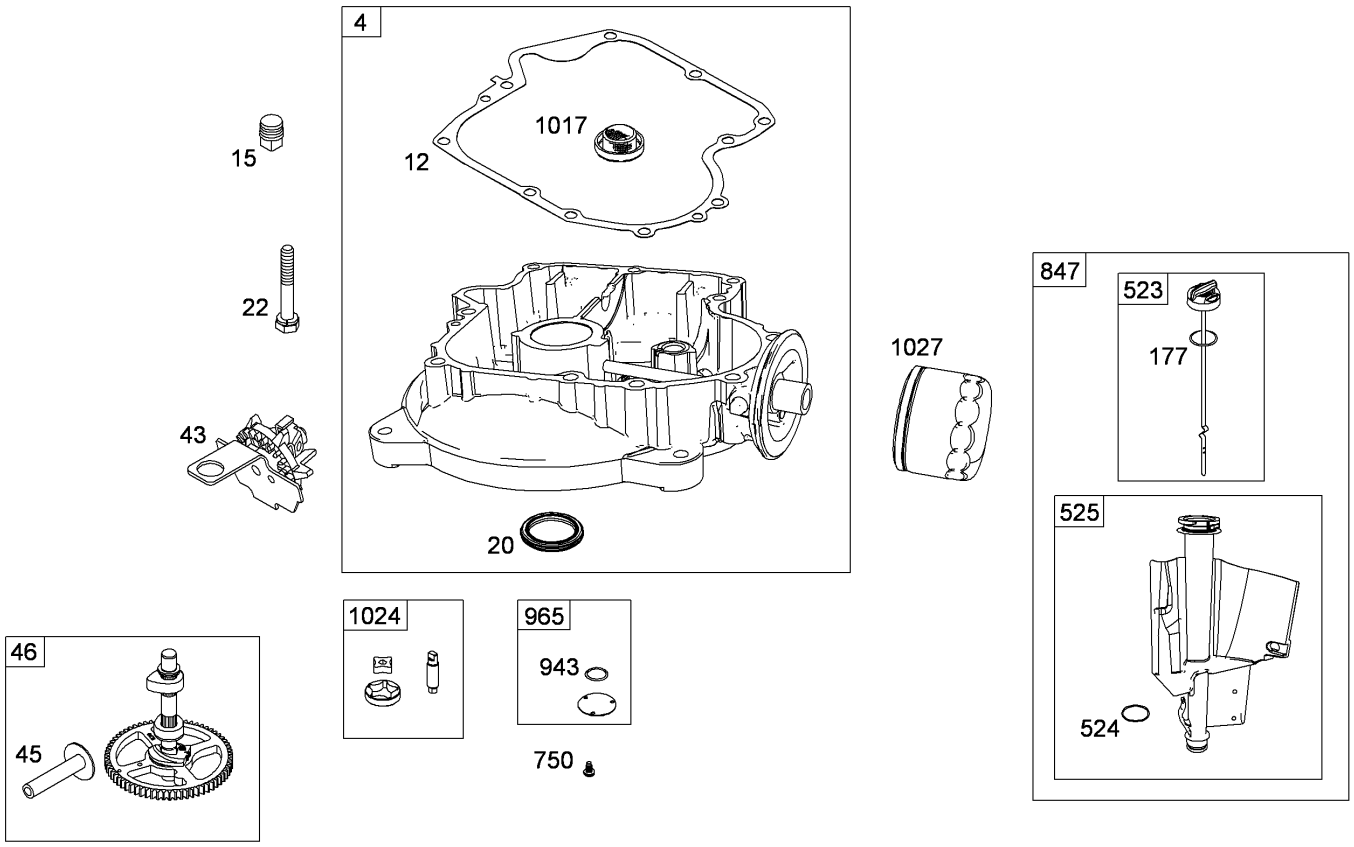

Assemblies include all parts shown in frames

Crankcase Cover/Sump Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷4	795993	1	Sump-Engine
❷❹12	697110	1	Gasket-Crankcase
❷15	690946	1	Plug-Drain, Oil
❷❹20	795387	1	Seal-Oil (PTO Side)
❷22	692125	1	Screw (Crankcase/Cover/Sump)
❷43	691968	1	Slinger-Governor, Oil
❷45	690564	1	Tappet-Valve
❷46	793880	1	Camshaft
❷❹177	691031	1	Seal-O Ring (Dipstick Tube)
❷523	699908	1	Dipstick
❷❹524	691032	1	Seal-O Ring (Dipstick Tube)
❷525	697184	1	Tube-Dipstick
❷750	790832	1	Screw (Oil Pump Cover)
❷847	790442	1	Dipstick And Tube ASM
❷❹943	690589	1	Seal-O Ring (Oil Pump Cover)
❷965	499613	1	Cover-Pump, Oil
❷1017	690770	1	Screen-Pump, Oil
❷1024	794644	1	Pump-Oil
❷1027	492932s	1	Filter-Oil

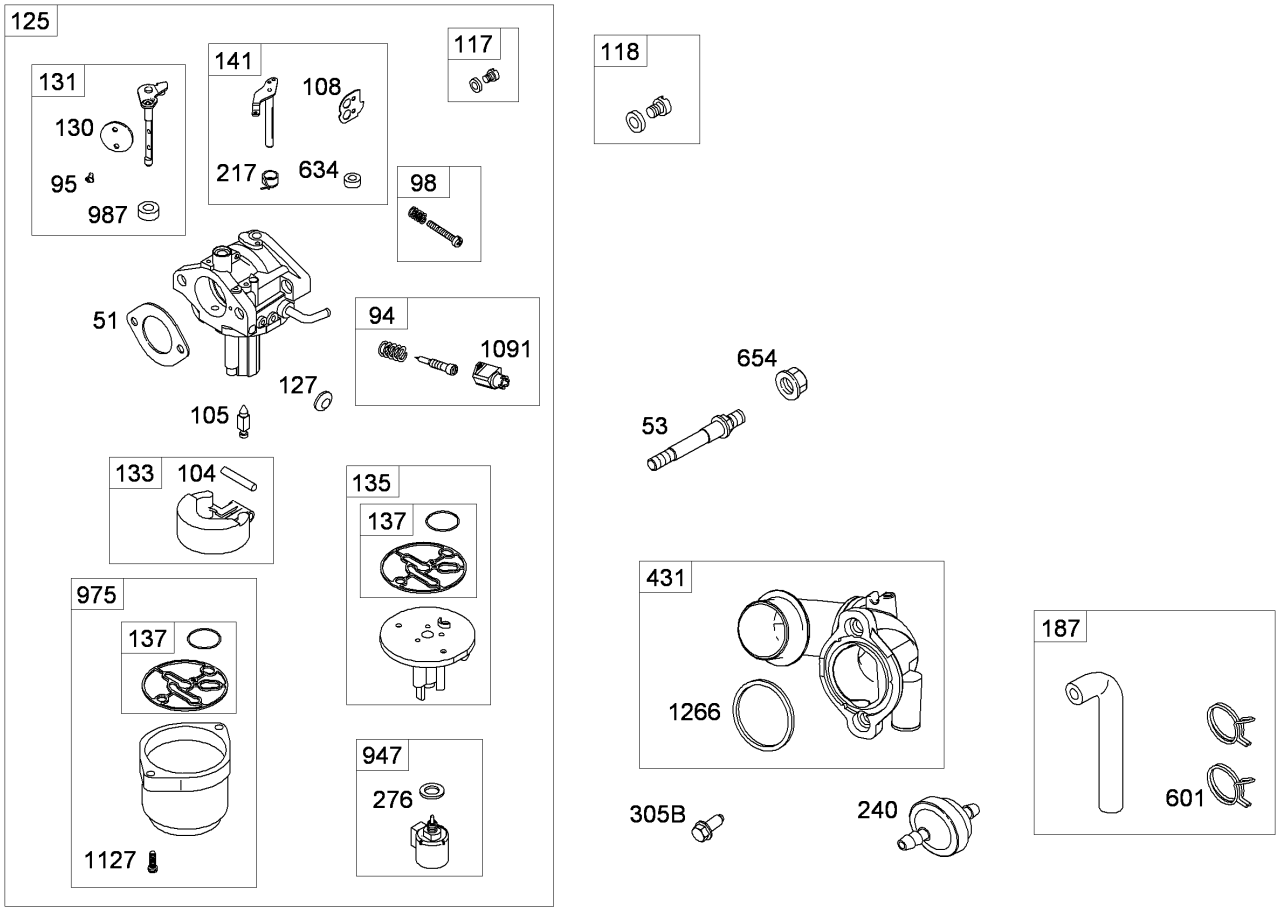


Assemblies include all parts shown in frames

Carburetor and Fuel Pump Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷❸51 ❹❺	692137	1	Gasket-Intake
❷53	690227	1	Stud (Carburetor)
❷94	793610	1	Idle Mixture Kit
❷❸95	690718	1	Screw (Throttle Valve)
❷98	695408	1	Idle Speed Kit
❷❸104	694918	1	Pin-Hinge, Float
❷❸105	696136	1	Valve-Float, Needle
❷108	695419	1	Valve-Choke
❷117	791501	1	Jet-Main (Standard)
❷118	843099	1	Jet-Main (High Altitude)
❷125	794136	1	Carburetor
❷❸127	690727	1	Plug-Welch
❷130	792747	1	Valve-Throttle
❷131	792765	1	Throttle Shaft Kit
❷133	694914	1	Carburetor Float ASM
❷135	698780	1	Fuel Transfer Tube ASM
❷❸137	698781	1	Gasket-Bowl, Float
❷141	792777	1	Choke Shaft Kit
❷187	791805	1	Line-Fuel (Formed) (Cut To Required Length)
❷❸217	695409	1	Spring-Return, Choke
❷240	394358s	1	Filter-Fuel
❷276	695410	1	Washer-Sealing

Ref	Part No.	Qty.	Description
❷305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)
❷431	794145	1	Elbow-Intake
❷601	791850	1	Clamp-Hose
❷634	698779	1	Spring And Seal ASM (Choke Shaft)
❷654	690958	1	Nut (Carburetor)
❷947	699915	1	Solenoid, Fuel
❷975	699502	1	Bowl-Float
❷❸987	698777	1	Seal-Shaft, Throttle
❷1091	691333	1	Cap-Limiter
❷1127	695407	1	Screw (Float Bowl)
❷❸1266 ❹	691917	1	Seal-O Ring (Intake Elbow) (Red)

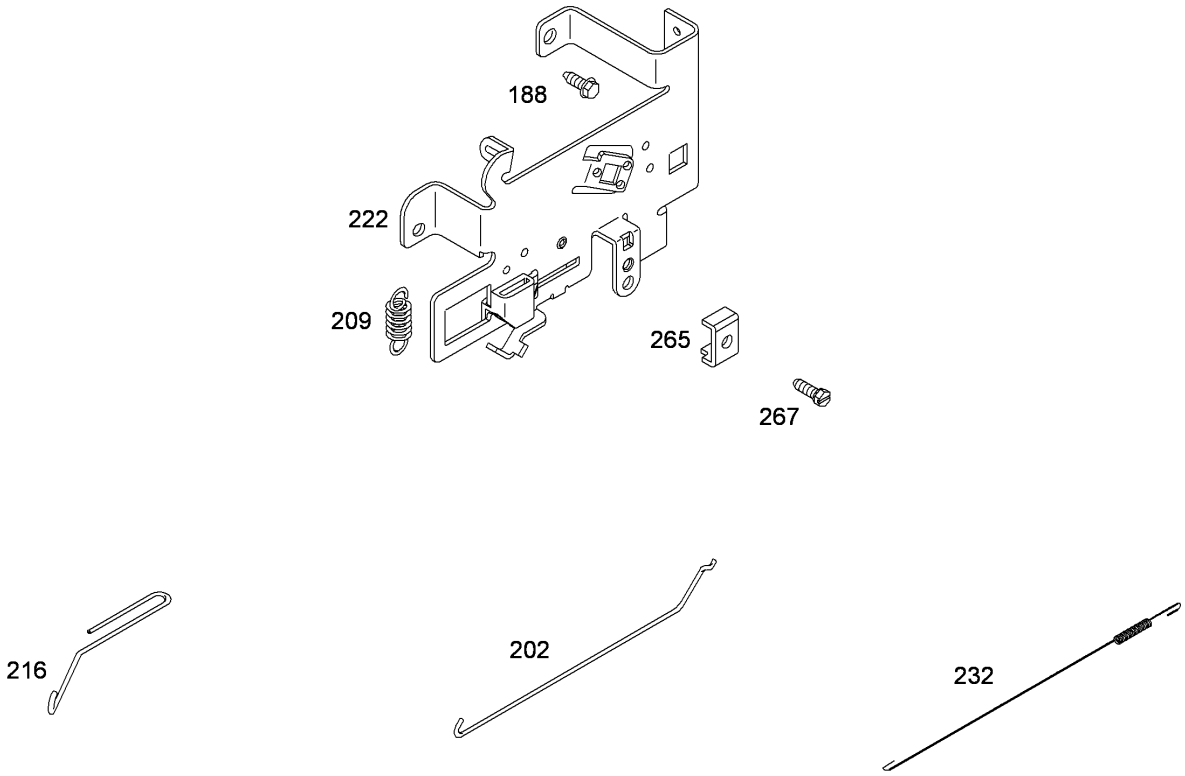


Assemblies include all parts shown in frames

Governor Control Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷188	691693	1	Screw (Control Bracket)
❷202	691841	1	Link-Governor, Mechanical
❷209	692208	1	Spring-Governor (Green)
❷216	691840	1	Link-Choke
❷222	694042	1	Bracket-Control
❷232	691842	1	Spring-Link, Governor
❷265	691024	1	Clamp-Casing
❷267	794904	1	Screw (Casing Clamp)


1036 Emissions Label

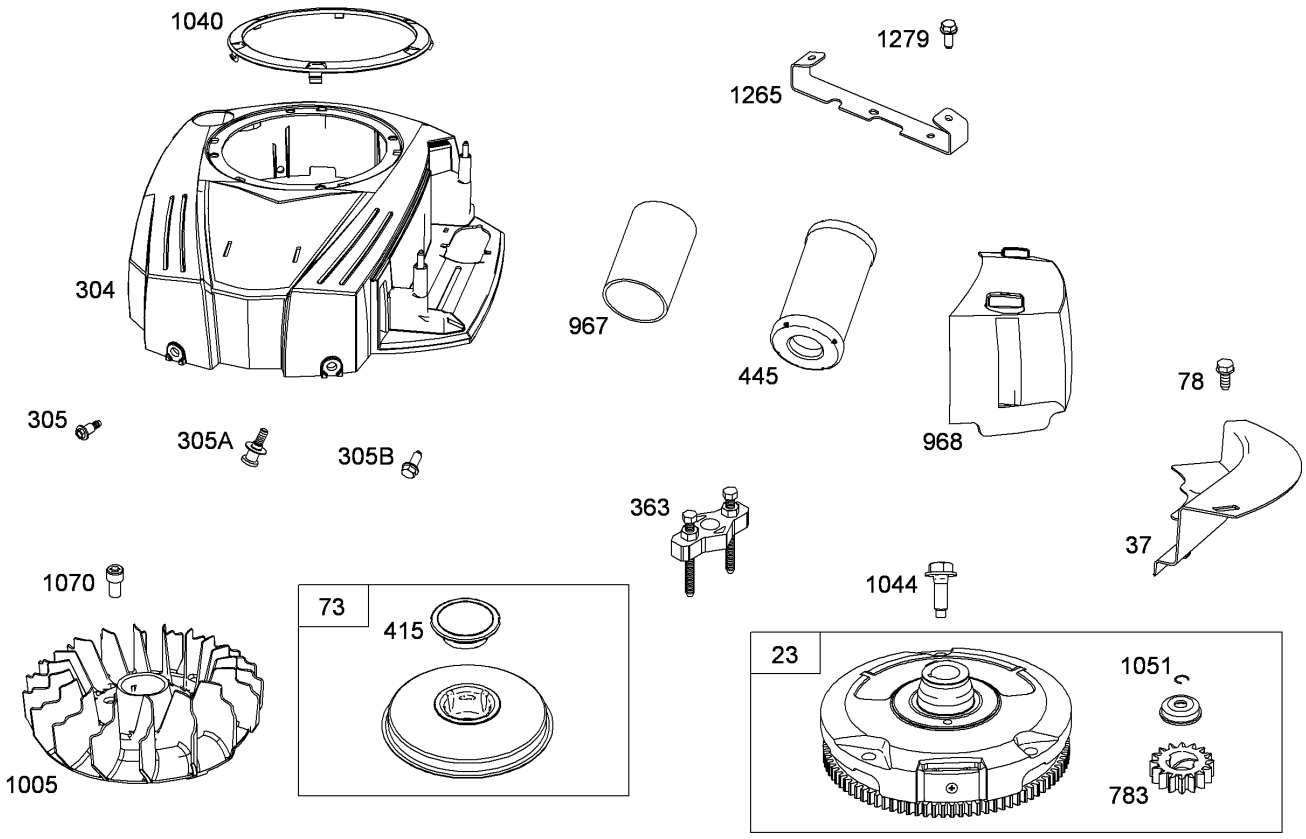

Assemblies include all parts shown in frames

Blower Housing, Flywheel and Air Guide Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷23	693557	1	Flywheel
❷37	699882	1	Guard-Flywheel
❷73	794357	1	Screen-Rotating
❷78	691003	1	Screw (Flywheel Guard)
❷304	794918	1	Housing-Blower
❷305	697102	1	Screw (Blower Housing)
❷305A	793376	1	Screw (Blower Housing)
❷305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)
❷363	19203	1	Puller-Flywheel
❷415	794129	1	Plug (Rotating Screen)
❷445	793569	1	Filter-Cartridge, Air Cleaner
❷783	693713	1	Gear-Pinion
❷967	693958	1	Filter-Cleaner, Pre
❷968	794140	1	Cover-Cleaner, Air
❷1005	794121	1	Fan-Flywheel
❷1036		1	Label-Emissions
❷1040	698368	1	Plate-Trim
❷1044	698139	1	Screw (Flywheel)
❷1051	691265	1	Ring-Retaining
❷1070	690363	1	Screw (Flywheel Fan)
❷1265	794151	1	Support-Housing, Blower
❷1279	697551	1	Screw (Blower Housing Support)

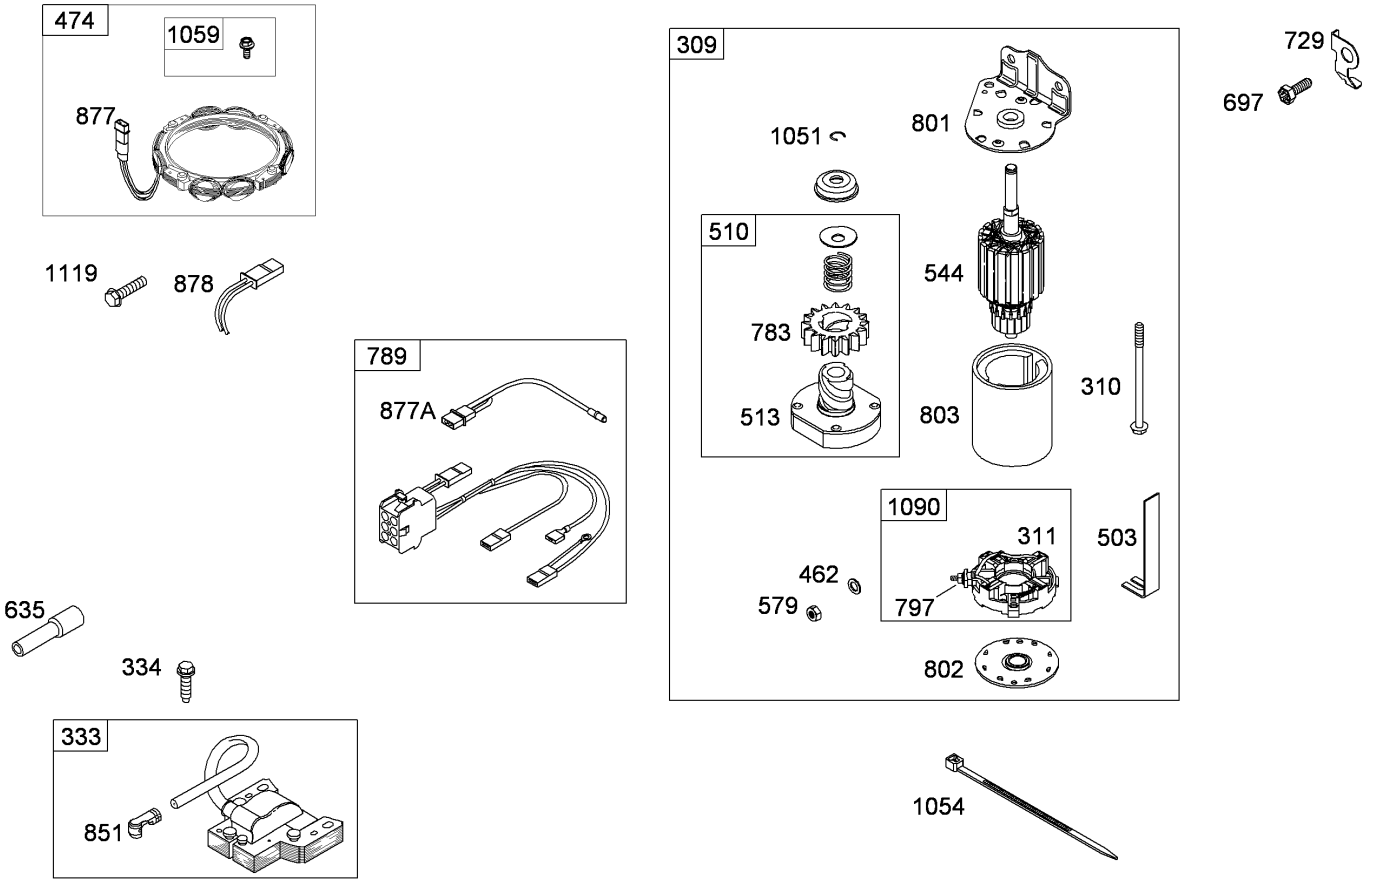



Assemblies include all parts shown in frames


Electric Starter and Alternator Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷309	693551	1	Motor-Starter
❷310	690323	1	Screw (Starter Motor)
❷311	497608	1	Brush Set
❷333	795315	1	Armature-Magneto
❷334	691061	1	Screw (Magneto Armature)
❷462	691261	1	Washer (Starter Cable)
❷474	696459	1	Alternator
❷503	691532	1	Strap-Starter
❷510	693699	1	Drive-Starter
❷513	692024	1	Clutch-Drive
❷544	692034	1	Armature-Starter
❷579	691029	1	Nut (Starter Cable)
❷635	691909	1	Boot-Spark Plug
❷697	690372	1	Screw (Drive Cap)
❷729	691224	1	Clip-Wire
❷783	693713	1	Gear-Pinion
❷789	698330	1	Harness-Wiring
❷797	693167	1	Nut (Brush Retainer)
❷801	691283	1	Cap-Drive
❷802	691286	1	Cap-End
❷803		1	Housing-Starter (Serviced By Ref 309, 693551-Starter Motor)
❷851	692424	1	Terminal–Spark Plug
❷877	393456	1	Wire-Connector / Alternator

Ref	Part No.	Qty.	Description
❷877A	790544	1	Harness-Wiring
❷878	398661	1	Harness-Alternator
❷1051	691265	1	Ring-Retainer (Starter Motor)
❷1054	280275	1	Tie-Cable
❷1059	698516	1	Screw And Washer Kit
❷1090	691293	1	Retainer-Brush
❷1119	691183	1	Screw (Alternator)

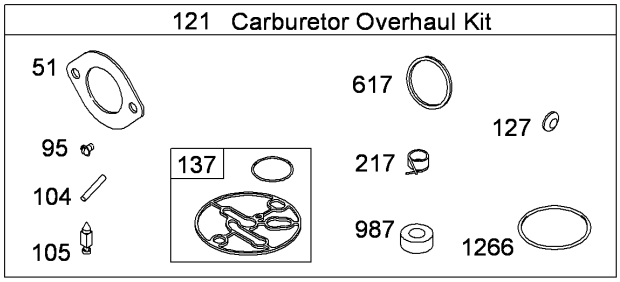

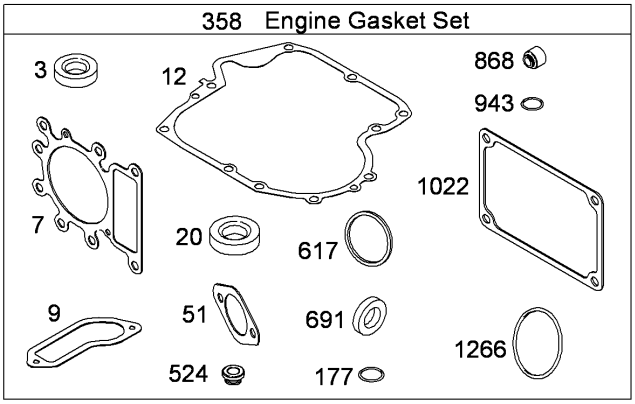

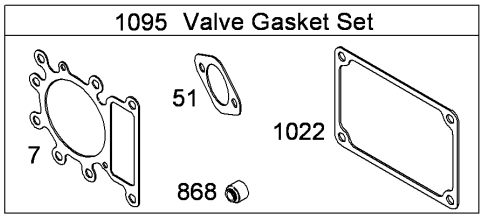

Assemblies include all parts shown in frames

Engine Gasket and Carburetor Overhaul Kit
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❷❹3	391086s	1	Seal-Oil (Magneto Side)
❷❹7 ❺	794114	1	Gasket-Head, Cylinder
❷❹9	697109	1	Gasket-Breather
❷❹12	697110	1	Gasket-Crankcase
❷❹20	795387	1	Seal-Oil (PTO Side)
❷❸51 ❹❺	692137	1	Gasket-Intake
❷❸95	690718	1	Screw (Throttle Valve)
❷❸104	694918	1	Pin-Hinge, Float
❷❸105	696136	1	Valve-Float, Needle
❷121	792369	1	Carburetor Overhaul Kit
❷❸127	690727	1	Plug-Welch
❷❸137	698781	1	Gasket-Bowl, Float
❷❹177	691031	1	Seal-O Ring (Dipstick Tube)
❷❸217	695409	1	Spring-Return, Choke
❷358	794150	1	Engine Gasket Set
❷❹524	691032	1	Seal-O Ring (Dipstick Tube)
❷❸617 ❹	692138	1	Seal-O Ring (Intake Manifold) (Red)
❷❹691	692407	1	Seal-Shaft, Governor
❷❹868 ❺	690968	1	Seal-Valve
❷❹943	690589	1	Seal-O Ring (Oil Pump Cover)
❷❸987	698777	1	Seal-Shaft, Throttle

Ref	Part No.	Qty.	Description
❷❹1022 ❺	272475s	1	Gasket-Cover, Rocker
❷1095	794158	1	Valve Gasket Set
❷❸1266 ❹	691917	1	Seal-O Ring (Intake Elbow) (Red)

Attachments and Accessories

For 13AL60RG048 - LX426 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
Blade Kit, Extreme (42 Inch)	112-6048
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Blade Kit (2 Blades, 42 Inch Decks)	98022

NOTES

NOTES

NOTES


TORO®