Form Number 3360-318 Rev C

LX426 Lawn Tractor

Model No. 13AL60RG544 - 1L107H10100 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Register your product at www.Toro.com

© The Toro Company - 2008
All Rights Reserved

Contents

Description	Page
Front and Rear Wheel Assembly	3
Steering Shaft and Front Axle Assembly	4
Frame, Battery and PTO Engage Assembly	5
Seat and Fender Assembly	6
Dash, Fuel Tank and Hood Assembly	7
Transmission, Brake and Traction Pedal Assembly	8
Single Speed Transmission Assembly No. 112-6083	10
Deck Assembly	12
Muffler and Guard Assembly	14
Cylinder Assembly Briggs and Stratton 331777-0946-B2	15
Cylinder Head Assembly Briggs and Stratton 331777-0946-B2	16
Crankshaft and Piston/Ring Assembly Briggs and Stratton 331777-0946-B2	17
Crankcase Cover/Sump Assembly Briggs and Stratton 331777-0946-B2	18
Carburetor and Fuel Pump Assembly Briggs and Stratton 331777-0946-B2	19
Governor Control Assembly Briggs and Stratton 331777-0946-B2	20
Blower Housing, Flywheel and Air Guide Assembly Briggs and Stratton 331777-0946-B2	21
Electric Starter and Alternator Assembly Briggs and Stratton 331777-0946-B2	22
Engine Gasket and Carburetor Overhaul Kit Briggs and Stratton 331777-0946-B2	23
Attachments and Accessories List	24


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head


Footnotes

❶ Obtain from your local Briggs & Stratton dealer
❷ Included in Carburetor Overhaul Kit (Ref. No. 121)
❸ Included in Engine Gasket Set (Ref. No. 358)
❹ Included in Valve Gasket Set (Ref. No. 1095)

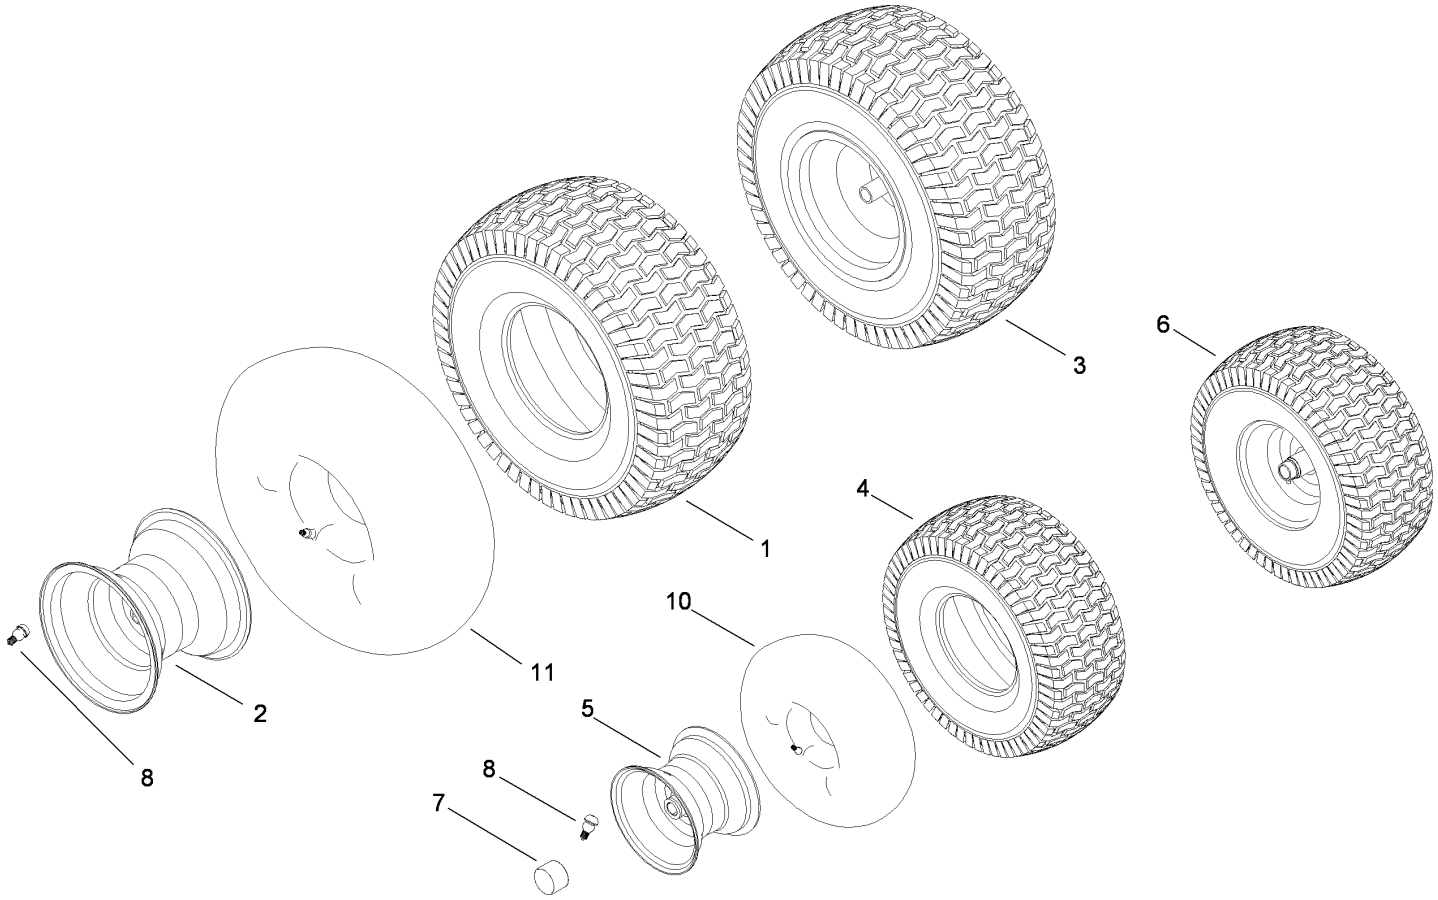

Front and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	112-0713	1	Tire-Multi Trac
2	112-6093	1	Rim-Wheel, Rear
3	112-0496	1	Rear Wheel ASM
4	112-0576	1	Tire-Front
5	112-0468	1	Rim-Wheel, Front
6	112-0491	1	Front Wheel ASM
7	112-5968	1	Cap-Hub
8	112-0503	1	Valve-Air, Tubeless
10	232-39	1	Tube-Inner
11	93-3893	1	Tube-Inner

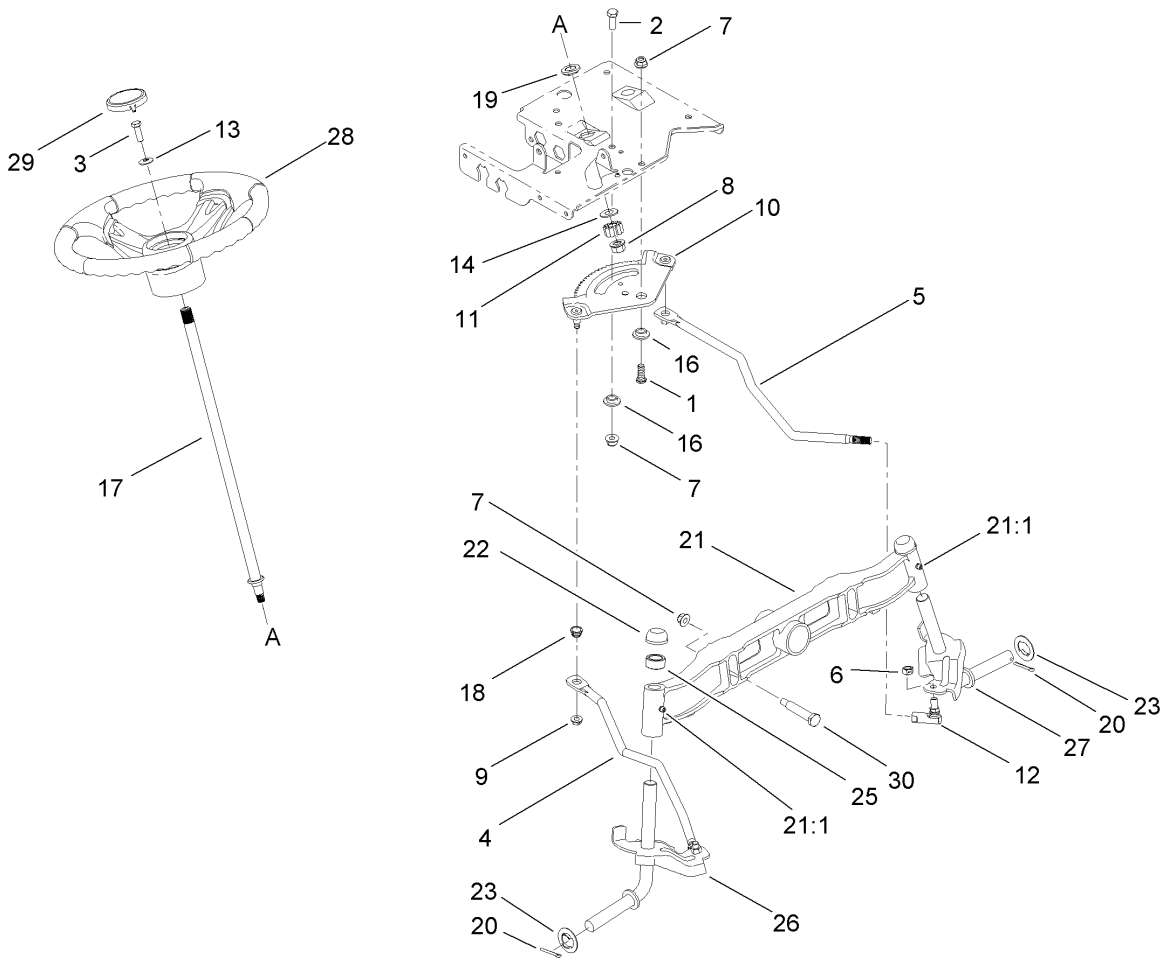

Steering Shaft and Front Axle Assembly

Ref	Part No.	Qty.	Description
1	112-0631	1	Screw-HH
2	112-0492	1	Screw-HH
3	112-0473	1	Screw-HH
4	112-0355	1	Link-Drag, RH
5	112-0346	1	Link-Drag, LH
6	112-0483	1	Nut-Hex, Lock
7	112-0668	1	Nut-Lock, Flange
8	112-0859	1	Nut-Lock, Flange
9	112-0511	1	Nut-Lock, Flange
10	112-0862	1	Gear-Steering
11	112-0863	1	Gear-Pinion, Steering
12	112-0917	1	Ball Joint ASM
13	112-0924	1	Washer-Flat
14	112-0925	1	Washer-Flat
16	112-0881	1	Spacer-Shoulder
17	112-6097	1	Shaft-Steering
18	112-0929	1	Bushing
19	112-6098	1	Bearing-Flange, Hex
20	112-0860	1	Pin-Cotter
21	112-6099	1	Pivot-Axle, Cast Iron
21:1	112-0926	1	Fitting-Grease
22	112-0323	1	Cap
23	112-5972	1	Washer-Flat
25	112-6136	1	Spacer


Ref	Part No.	Qty.	Description
26	112-0547	1	RH Axle ASM
27	112-0562	1	LH Axle ASM
28	112-6100	1	3 Spoke Wheel Steering ASM
29	112-3734	1	Cap-Wheel, Steering
30	112-0699	1	Bolt-Shoulder

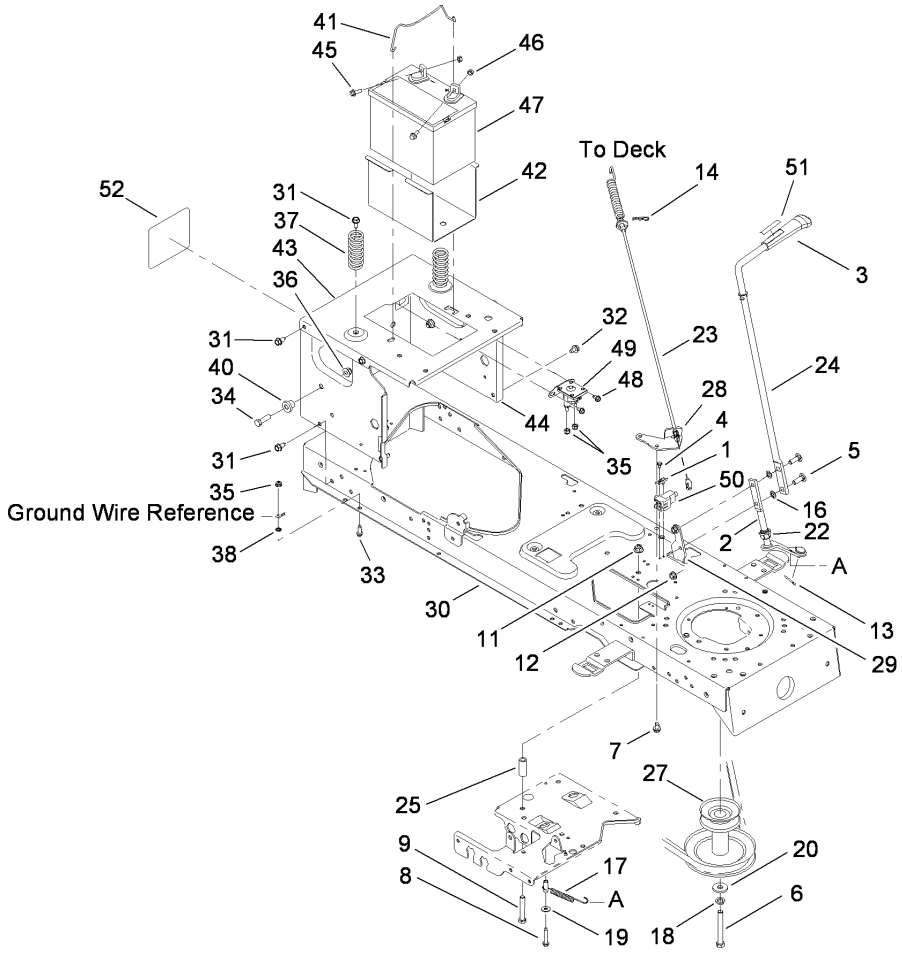

Frame, Battery and PTO Engage Assembly

Ref	Part No.	Qty.	Description
1	112-0671	1	Plate-Switch
2	112-6007	1	Lever-Engage, PTO
3	112-6011	1	Knob-PTO
4	112-0651	1	Screw-TAP
5	112-0598	1	Bolt-CARR
6	112-6008	1	Screw-HH
7	112-0676	1	Screw-TAP
8	112-0843	1	Screw-HWH
9	112-0700	1	Screw-HH
11	112-0668	1	Nut-Lock, Flange
12	112-0511	1	Nut-Lock, Flange
13	112-6010	1	Pin-Cotter
14	112-0398	1	Pin-Click
16	112-0645	1	Nut-Push
17	112-0567	1	Spring-Extension
18	112-0428	1	Washer-Lock
19	112-3695	1	Washer-Flat
20	112-0380	1	Washer-Flat
22	112-0384	1	Bearing-Flange, Hex (Split)
23	112-6137	1	Cable-Engage, Deck
24	112-0393	1	Handle-Engage, Deck
25	112-0433	1	Spacer
27	112-0333	1	Pulley-Engine
28	112-6105	1	Bracket-Mount, Cable


Ref	Part No.	Qty.	Description
29	112-0516	1	Bracket-Stop
30	112-5974	1	Lower Frame ASM
31	112-6070	1	Screw-TAP
32	112-0676	1	Screw-TAP
33	112-0587	1	Screw-TAP
34	112-0557	1	Screw-HH
35	112-0636	1	Nut-Lock, Flange
36	112-0668	1	Nut-Lock, Flange
37	112-0501	1	Spring-Compression
38	112-0703	1	Washer-Lock, External
40	112-0661	1	Spacer-Shoulder
41	112-0581	1	Rod-Holddown, Battery
42	112-0570	1	Tray-Battery
43	112-0647	1	Bracket-Frame, Seat
44	112-6107	1	Frame-Upper
45	112-1070	1	Bolt-Carriage
46	112-0546	1	Nut-Sems
47	112-0425	1	Battery-245, Cca (Dry Flat Top)
48	112-6108	1	Screw-TAP
49	112-6073	1	Solenoid-12V, 2 Post 2 Tab
50	112-0455	1	Switch-Interlock
51	112-1274	1	Decal-PTO, Manual
52	112-1284	1	Decal

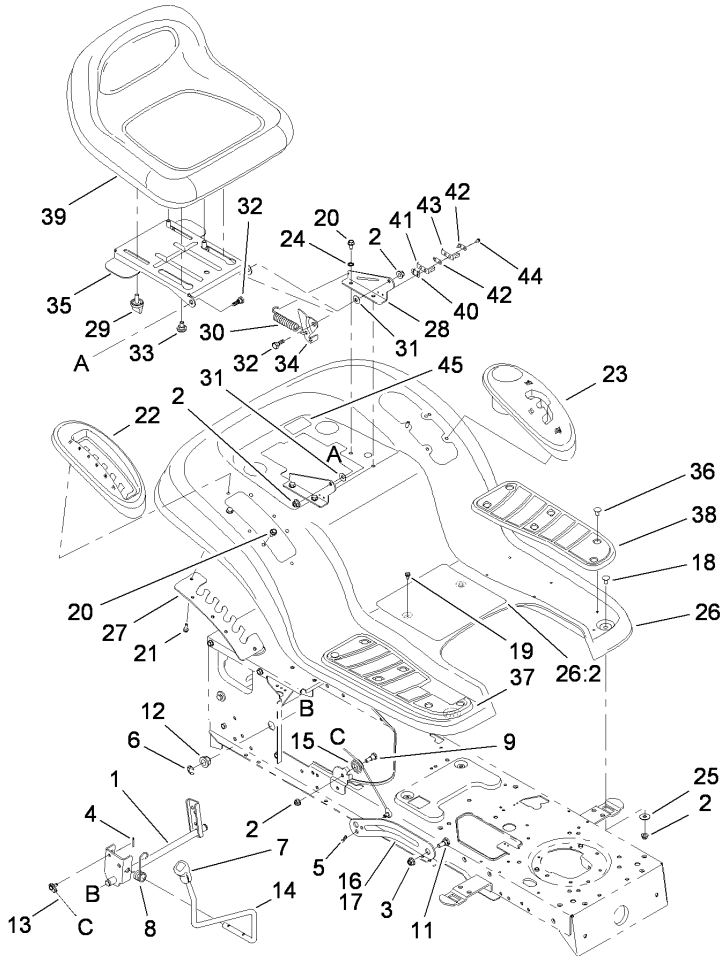

Seat and Fender Assembly

Ref	Part No.	Qty.	Description
1	112-5969	1	Lift Shaft ASM
2	112-0650	1	Nut-Lock, Flange
3	112-0668	1	Nut-Lock, Flange
4	112-0459	1	Pin-Cotter
5	112-0568	1	Pin-Cotter
6	112-0586	1	Ring-E
7	112-0585	1	Grip-Handle
8	112-0477	1	Spring-Torsion
9	112-0443	1	Bolt-Shoulder
11	112-0669	1	Bolt-Shoulder
12	112-0347	1	Bearing-Flange
13	112-0374	1	Cable-Lift
14	112-5970	1	Handle-Lift
15	112-0502	1	Pulley-Roller
16	112-6109	1	Arm-Lift, RH
17	112-6110	1	Arm-Lift, LH
18	112-0426	1	Bolt-CARR
19	112-0524	1	Screw-HWHTF
20	112-6070	1	Screw-TAP
21	112-0509	1	Screw-TAP
22	112-0869	1	Cover-Lever, Lift
23	112-6111	1	Cover-Holder (W/Cup)
24	112-0517	1	Washer-Lock, External
25	112-0582	1	Washer-Flat

Ref	Part No.	Qty.	Description
26	112-6112	1	Fender
26:2	112-1262	1	Decal-Danger
27	112-0629	1	Bracket-Adjusting, Lift
28	112-6046	1	Bracket-Mount, Seat
29	112-0409	1	Knob
30	112-0616	1	Spring-Extension
31	112-0435	1	Washer-Bell
32	112-0575	1	Bolt-Shoulder
33	112-0554	1	Bolt-Shoulder
34	112-0646	1	Bracket-Lift, LH
35	112-6113	1	Bracket-Pivot, Seat
36	112-0549	1	Clip-Ratchet, Fastener
37	112-0540	1	Pad-Foot, RH
38	112-0545	1	Pad-Foot, LH
39	112-6114	1	Seat-Medium
40	112-0637	1	Plate-Boss, Insulator
41	112-0532	1	Switch-Spring, Inner
42	112-0635	1	Plate-Insulator
43	112-0529	1	Switch-Spring
44	112-0626	1	Screw-HWHTF
45	112-1260	1	Decal-Service (Toro Hotline)

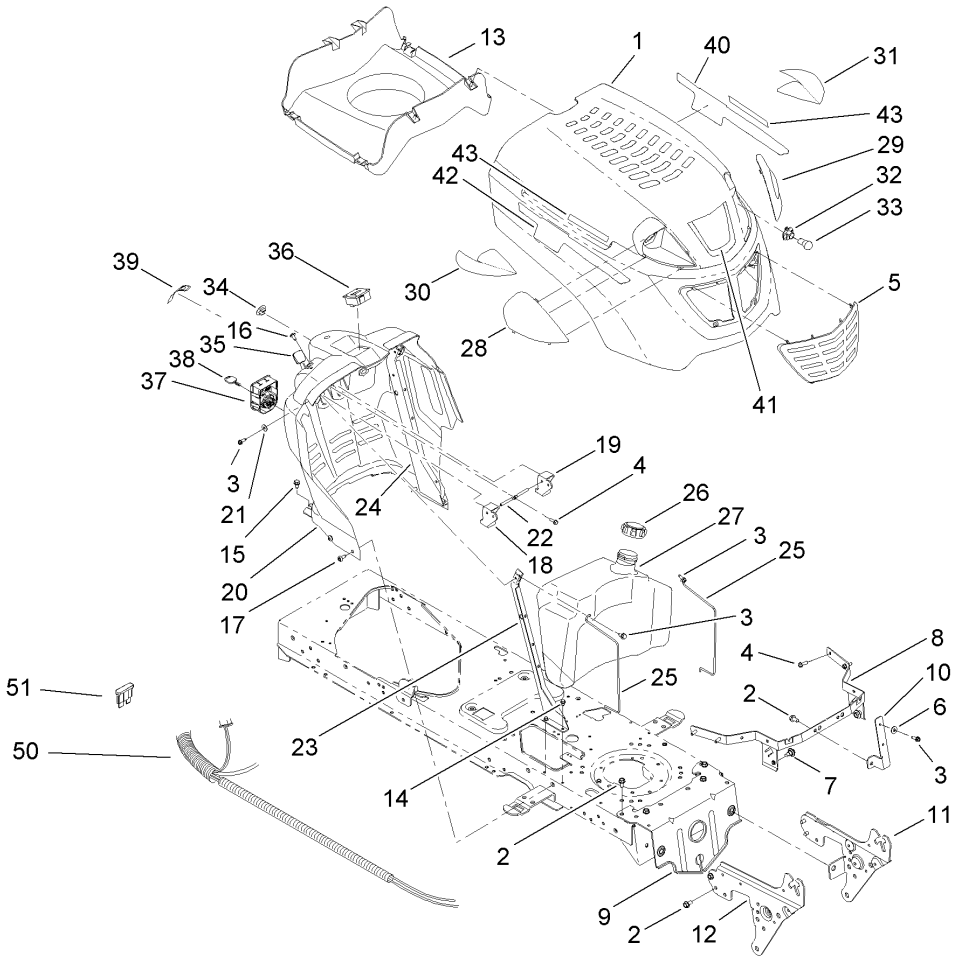


Dash, Fuel Tank and Hood Assembly

Ref	Part No.	Qty.	Description
1	112-0444	1	Hood
2	112-6070	1	Screw-TAP
3	112-0587	1	Screw-TAP
4	112-0509	1	Screw-TAP
5	112-0381	1	Grill
6	112-3695	1	Washer-Flat
7	112-6128	1	Bolt-Shoulder, TAP
8	112-5985	1	Bracket-Pivot
9	112-6127	1	Bracket-Pivot
10	112-5986	1	Bracket-Support, Hood
11	112-6126	1	Bracket-Pivot, Support (LH)
12	112-6125	1	Bracket-Pivot, Support (RH)
13	112-6124	1	Plenium-Hood
14	112-3696	1	Screw-TAP
15	112-0676	1	Screw-TAP
16	112-0550	1	Screw-TAP
17	112-0563	1	Screw-TAP
18	112-0526	1	Lever-Cruise
19	112-0580	1	Lever-Brake
20	112-6123	1	Dash-Manual, PTO
21	112-0485	1	Washer-Spring
22	112-0604	1	Rod-Lever, Bent
23	112-6122	1	Support-Dash, RH
24	112-6121	1	Support-Dash, LH

Ref	Part No.	Qty.	Description
25	112-0678	1	Rod-Support
26	112-6120	1	Cap-Fuel
27	112-6119	1	Tank-Fuel, 3 Gal
28	112-0447	1	Lens-RH
29	112-0446	1	Lens-LH
30	112-5810	1	Reflector-RH
31	112-5811	1	Reflector-LH
32	112-0408	1	Socket-Headlight
33	112-0402	1	Lamp-12V, Miniature
34	112-0535	1	Plug-Choke
35	112-6118	1	Cable-Throttle / Choke
36	112-6117	1	Meter-Hour
37	112-6116	1	Module-Switch, Ignition
38	112-6115	1	Key-Ignition
39	112-3702	1	Decal-Throttle
40	112-5952	1	Decal-Hood, Left Side
41	112-3716	1	Decal-Hood
42	112-5953	1	Decal-Hood, Right Side
43	112-6189	1	Decal
50	112-6187	1	Harness-Wire
51	112-5943	1	Fuse-20 Amp

Transmission, Brake and Traction Pedal Assembly

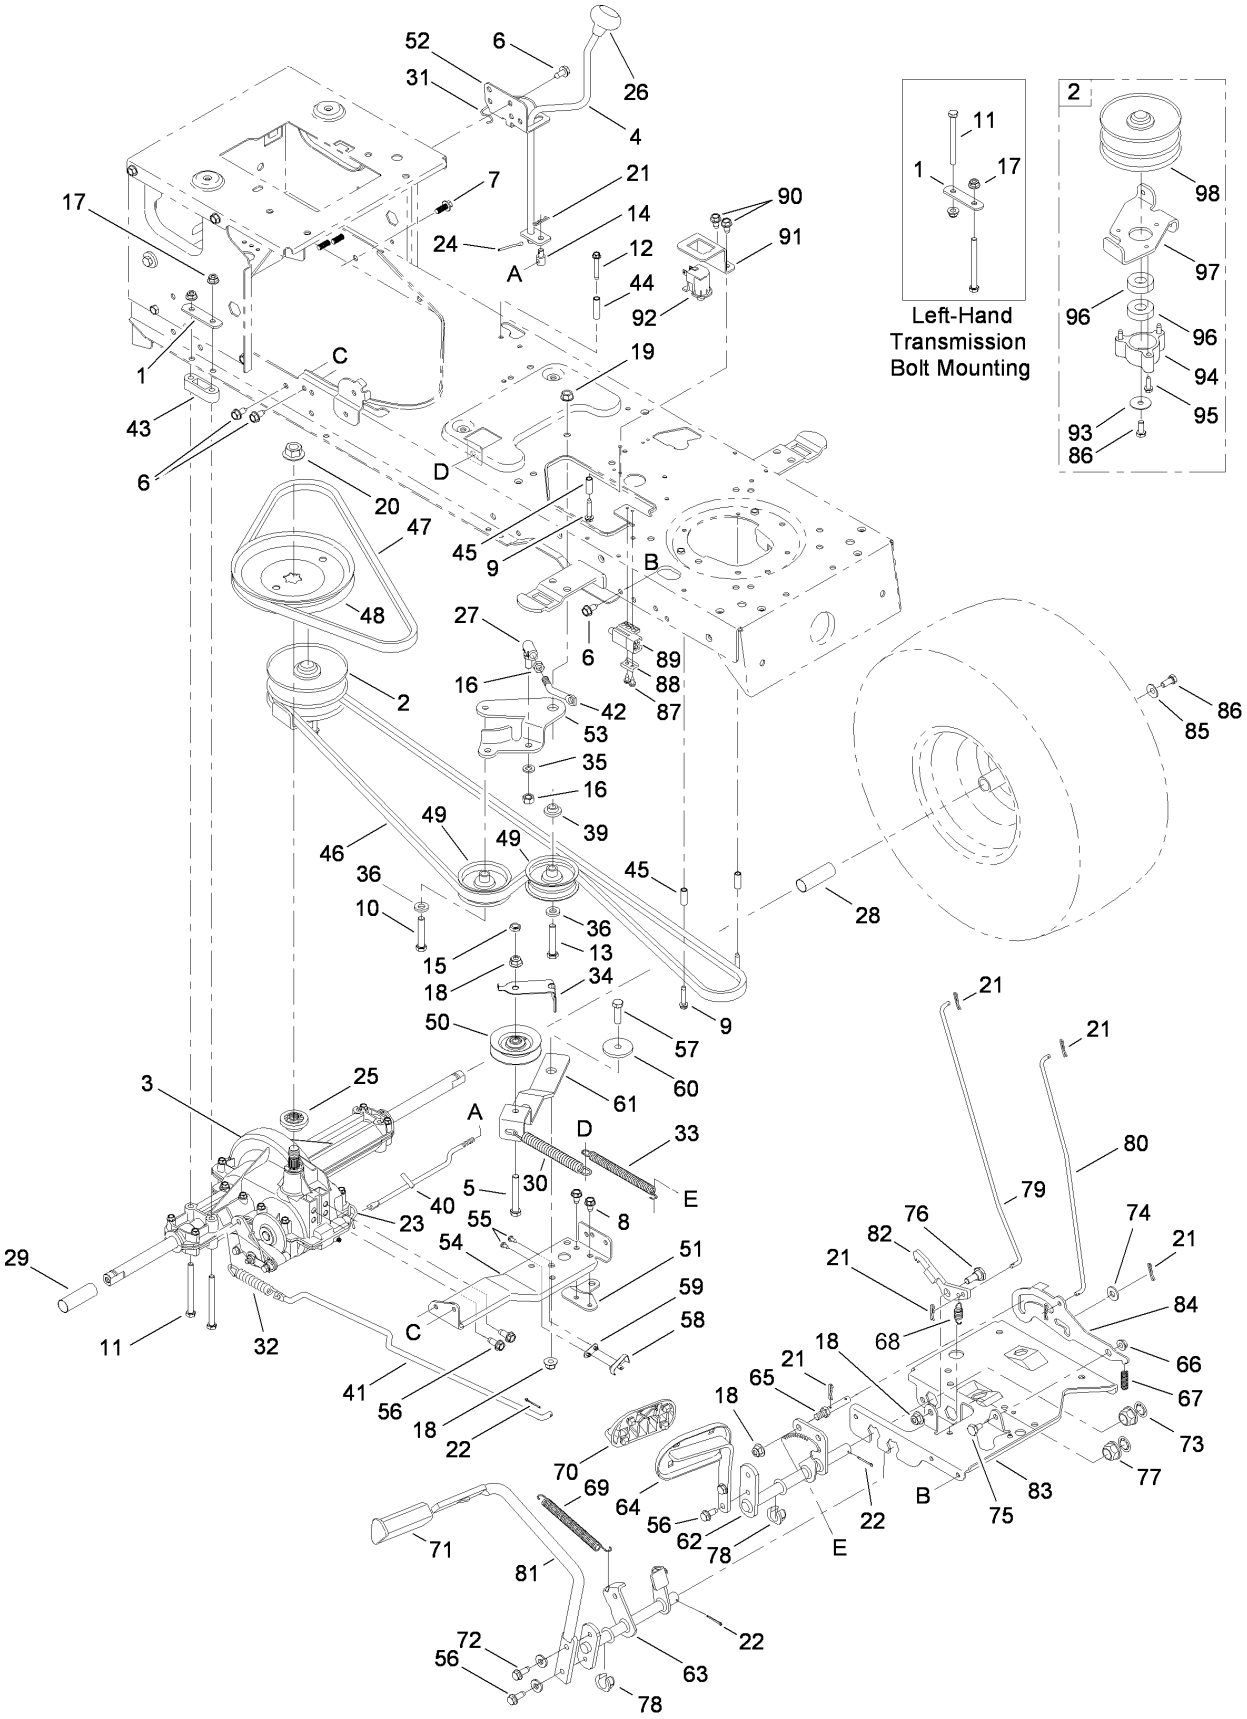


Transmission, Brake and Traction Pedal Assembly

Ref	Part No.	Qty.	Description
1	112-0628	1	Bracket-Mounting, Transmission
2	112-6129	1	Pulley ASM
3	112-6083	1	Single Speed Transaxle ASM
4	112-0627	1	Shift Lever ASM
5	112-6130	1	Screw-HH
6	112-6070	1	Screw-TAP
7	112-6131	1	Screw-HH
8	112-0676	1	Screw-TAP
9	112-0603	1	Screw-HH
10	112-0469	1	Screw-TAP
11	112-0667	1	Screw-HH
12	112-0839	1	Screw-TAP
13	112-0421	1	Screw-HH
14	112-0592	1	Ferrule-Adjustable
15	112-6132	1	Nut-Jam, Lock
16	112-0343	1	Nut-Hex
17	112-0650	1	Nut-Lock, Flange
18	112-0668	1	Nut-Lock, Flange
19	112-0385	1	Nut-Lock, Flange
20	112-0451	1	Nut-Flange
21	112-0459	1	Pin-Cotter
22	112-0568	1	Pin-Cotter
23	112-0639	1	Pin-Hair
24	112-0412	1	Pin-Cotter
25	112-0450	1	Hub-Pulley
26	112-0514	1	Knob-Shift
27	112-0306	1	Ball Joint ASM
28	112-0670	1	Sleeve
29	112-0683	1	Sleeve
30	112-5991	1	Spring-Extension
31	112-0357	1	Clip-Spring, Shifter
32	112-0350	1	Spring-Extension
33	112-0348	1	Spring-Extension
34	112-5883	1	Guide-Belt, Traction
35	112-0415	1	Washer-Lock
36	112-0544	1	Washer-Flat
39	112-0345	1	Spacer-Shoulder
40	112-5992	1	Rod-Shift
41	112-0655	1	Rod-Brake
42	112-0538	1	Rod-Adjustment, Idler
43	112-0673	1	Spacer-Transaxle
44	112-5831	1	Spacer
45	112-0644	1	Spacer
46	112-0301	1	Belt-Drive, Variable Speed
47	112-0305	1	Belt-Drive, Transmission
48	112-0379	1	Pulley-V (W/Hub)
49	112-0313	1	Pulley-Idler, Flat
50	112-6133	1	Pulley-Idler, V-Type
51	112-0701	1	Bracket-Shift
52	112-0638	1	Bracket-Shift
53	112-0525	1	Bracket-Idler, Center Double
54	112-6134	1	Bracket ASM

Ref	Part No.	Qty.	Description
55	112-0626	1	Screw-HWHTF
56	112-0395	1	Screw-HWH
57	112-0557	1	Screw-HH
58	112-0602	1	Switch-Spring, Short
59	112-0625	1	Plate-Insulator
60	112-0584	1	Spacer-Shoulder
61	112-6135	1	Bracket-Idler
62	112-0539	1	Speed Control ASM
63	112-5998	1	Speed Control ASM
64	112-0680	1	Pedal ASM
65	112-0599	1	Pin
66	112-0511	1	Nut-Lock, Flange
67	112-0506	1	Spring
68	112-0510	1	Spring-Extension
69	112-0348	1	Spring-Extension
70	112-0543	1	Pad-Pedal
71	112-6001	1	Pad-Brake
72	112-0366	1	Washer-Lock
73	112-0339	1	Washer-Flat
74	112-0541	1	Washer-Flat
75	112-0542	1	Bolt-Shoulder
76	112-0442	1	Bolt-Shoulder
77	112-0347	1	Bearing-Flange
78	112-0387	1	Bearing-Flange, Hex (Split)
79	112-0675	1	Rod-Brake, Lock Control
80	112-0662	1	Rod-Control, Cruise
81	112-6005	1	Pedal-Brake
82	112-6004	1	Latch-Cruise
83	112-0681	1	Bracket-Support, Steering
84	112-0679	1	Bracket-Lockout
85	112-0435	1	Washer-Bell
86	112-0551	1	Screw-HH
87	112-0651	1	Screw-TAP
88	112-0671	1	Plate-Switch
89	112-0455	1	Switch-Interlock
90	112-0524	1	Screw-HWHTF
91	112-3737	1	Bracket-Switch, Parking Brake
92	112-0441	1	Switch-Mount, Snap
93	112-0500	1	Washer-Flat
94	112-5996	1	Cup-Bearing
95	112-0843	1	Screw-HWH
96	112-0928	1	Bearing-Ball
97	112-5995	1	Bracket-Pulley
98	112-6129	1	Pulley ASM


Single Speed Transmission Assembly No. 112-6083

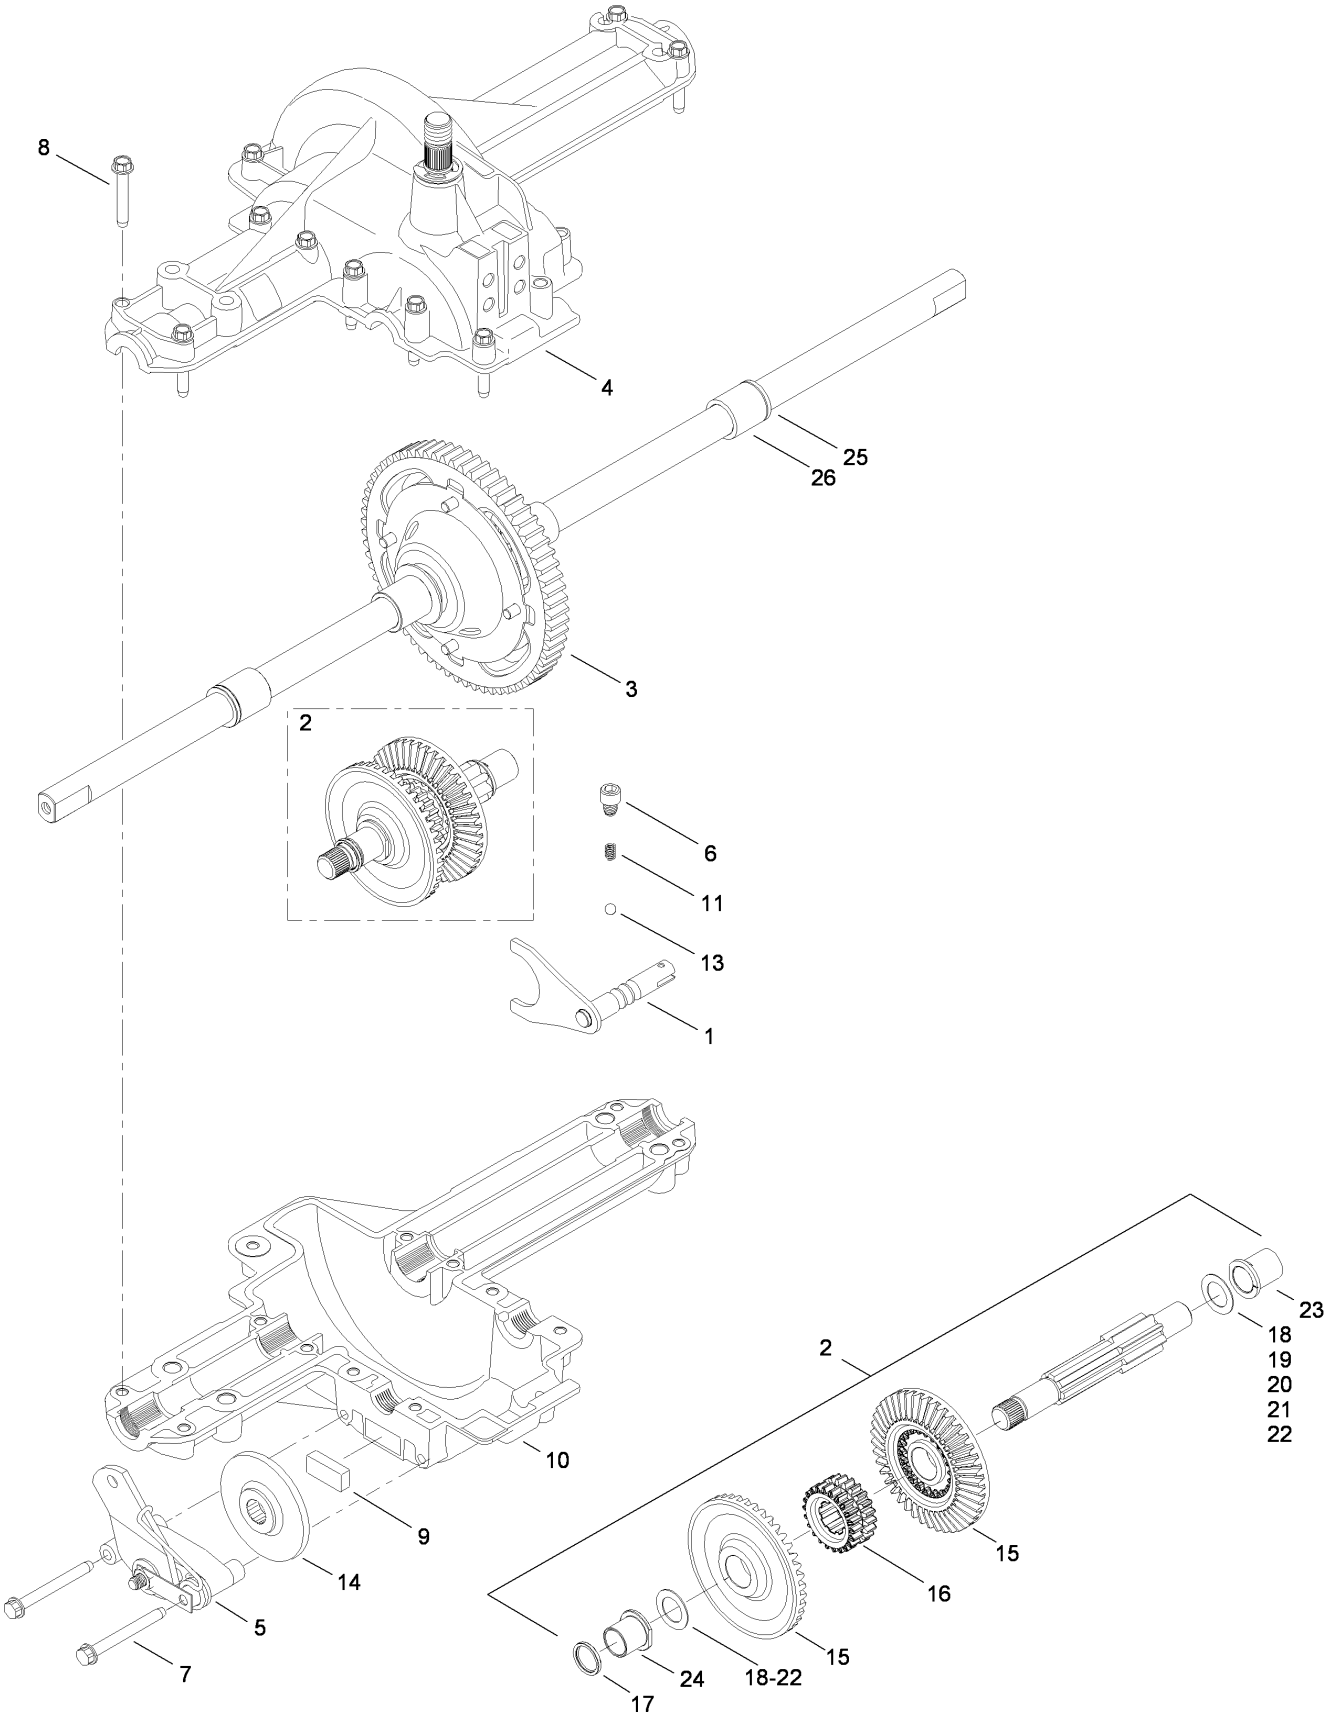

Single Speed Transmission Assembly No. 112-6083

Ref	Part No.	Qty.	Description
1	112-0806	1	Shift Fork ASM
2	112-6084	1	Drive Shaft ASM
3	112-6085	1	Differential ASM
4	112-6086	1	Upper Housing ASM
5	112-0832	1	Brake ASM
6	112-6087	1	Screw-TAP
7	112-0698	1	Screw-HWH
8	112-0839	1	Screw-TAP
9	112-0741	1	Puck-Brake
10	112-6088	1	Housing-Lower
11	112-0801	1	Spring-Detent
13	112-0799	1	Ball-Detent
14	112-0817	1	Disc-Brake
15	112-6089	1	Gear-Bevel, 42T (Spline)
16	112-6090	1	Collar-Cluster
17	112-6091	1	Seal
18	112-0748	1	Washer-Flat
19	112-0750	1	Washer-Flat
20	112-0745	1	Washer-Flat
21	112-0773	1	Washer-Thrust
22	112-0755	1	Washer-Thrust
23	112-0794	1	Bearing-Flange
24	112-0795	1	Bearing-Flange
25	112-0800	1	Seal
26	112-6092	1	Bearing-Sleeve


Deck Assembly

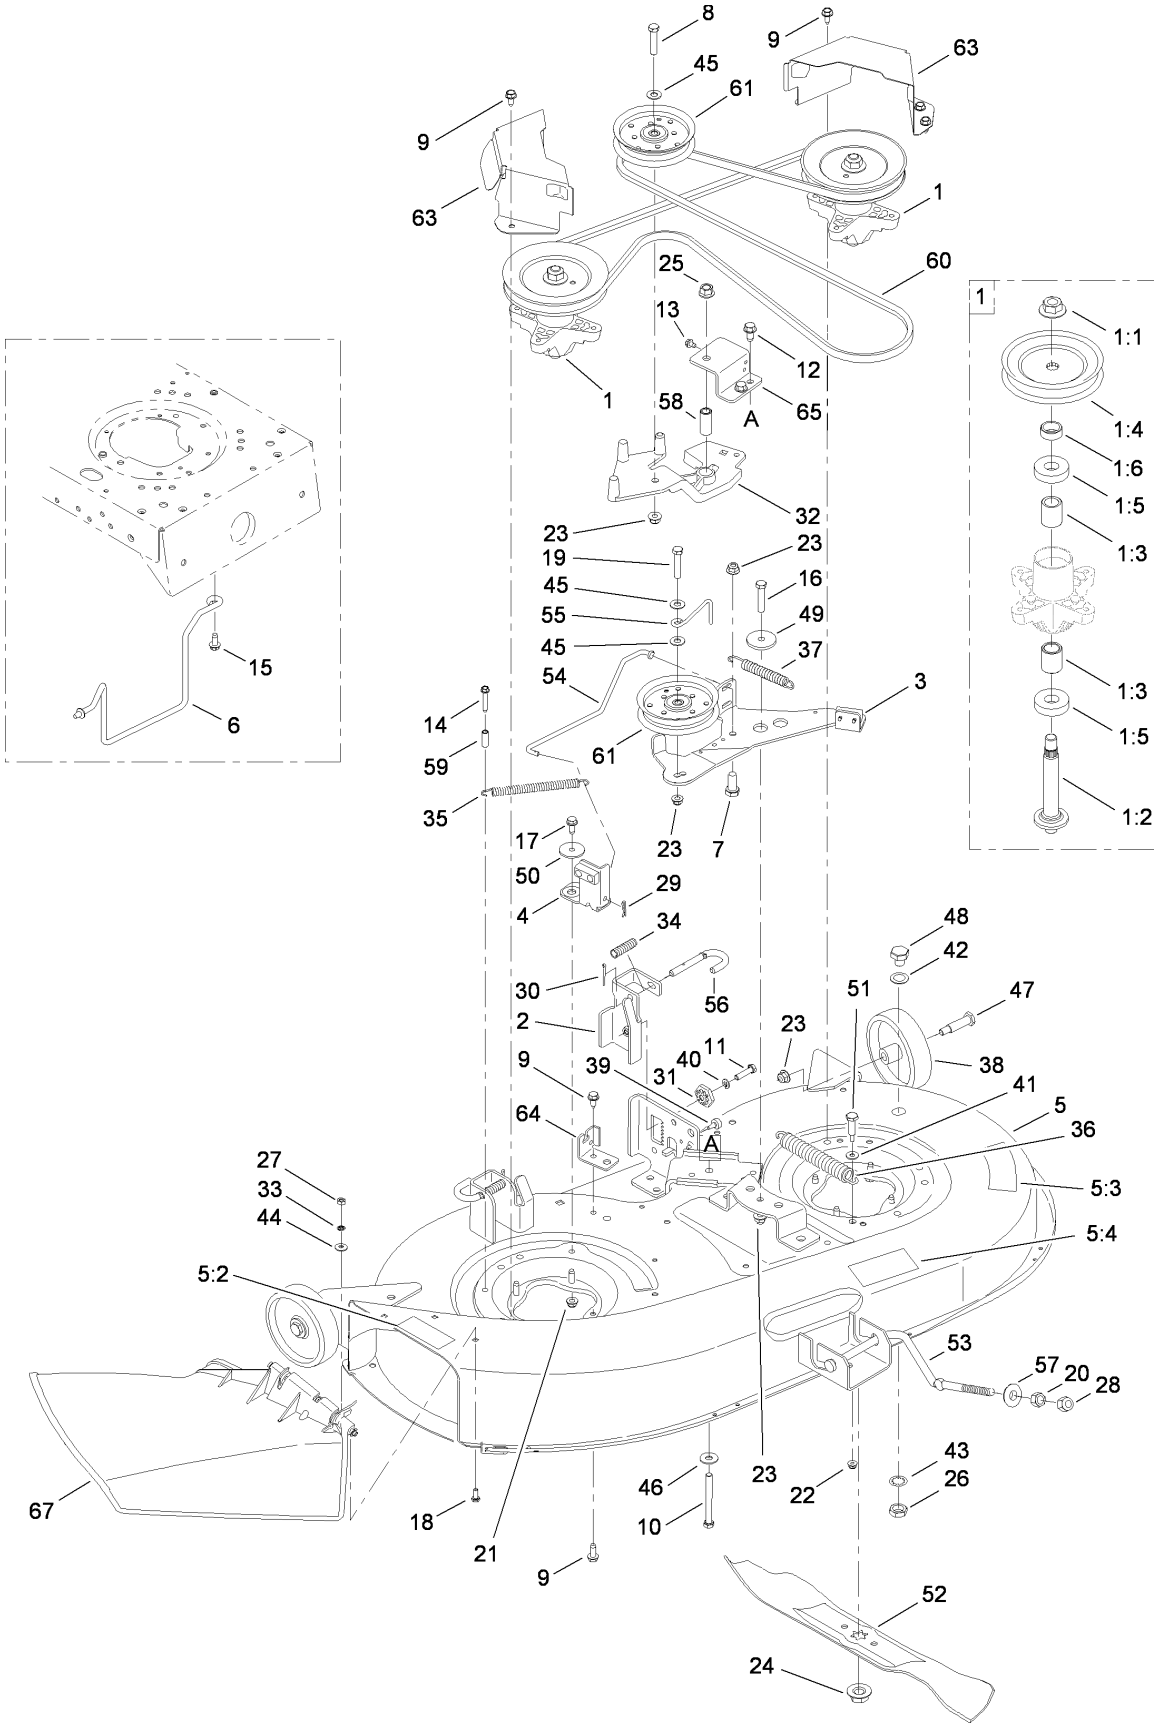

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-6063	1	Spindle ASM
1:1	112-0330	1	Nut-Flange, Hex
1:2	112-6062	1	Shaft-Spindle
1:3	112-0389	1	Spacer
1:4	112-0613	1	Pulley-Deck
1:5	112-0377	1	Bearing-Ball
1:6	112-6061	1	Spacer
2	112-0413	1	LH Hanger Bracket ASM
3	112-0606	1	Deck Brake ASM
4	112-3742	1	Brake ASM
5	112-5857	1	Deck And Decal ASM
5:2	112-1267	1	Decal-Danger
5:3	112-1265	1	Decal-Danger
5:4	112-1270	1	Decal-Routing, Belt
6	112-6071	1	Rod-Keeper, Belt
7	112-0855	1	Screw-HH
8	112-0513	1	Screw-HH
9	112-6070	1	Screw-TAP
10	112-3745	1	Screw-HH
11	112-0373	1	Screw-HH
12	112-0906	1	Screw-HWHTF
13	112-6022	1	Screw-TAP
14	112-0843	1	Screw-HWH
15	112-0395	1	Screw-HWH
16	112-0557	1	Screw-HH
17	112-1090	1	Screw-HH
18	112-0499	1	Screw-HH
19	112-0421	1	Screw-HH
20	112-0458	1	Nut-Hex
21	112-0650	1	Nut-Lock, Flange
22	112-0636	1	Nut-Lock, Flange
23	112-0668	1	Nut-Lock, Flange
24	112-0330	1	Nut-Flange, Hex
25	112-0859	1	Nut-Lock, Flange
26	112-0351	1	Nut-Hex
27	112-0522	1	Nut-Hex
28	112-0476	1	Nut-Lock, Hex (Nylon)
29	112-0459	1	Pin-Cotter
30	112-0412	1	Pin-Cotter
31	112-0327	1	Gear-Adjustment, Deck
32	112-6069	1	Bracket-Idler
33	112-0623	1	Retainer-Bolt
34	112-0406	1	Spring-Compression
35	112-0528	1	Spring-Extension
36	112-6043	1	Spring-Extension
37	112-3746	1	Spring-Extension
38	112-0337	1	Wheel-Deck, Rear
39	112-1016	1	Bumper
40	112-0366	1	Washer-Lock
41	112-3695	1	Washer-Flat
42	112-0339	1	Washer-Flat
43	112-0643	1	Washer-Lock

Ref	Part No.	Qty.	Description
44	112-0485	1	Washer-Spring
45	112-0572	1	Washer-Flat
46	112-0380	1	Washer-Flat
47	112-0334	1	Bolt-Shoulder
48	112-0577	1	Plug
49	112-0584	1	Spacer-Shoulder
50	112-3747	1	Spacer-Shoulder
51	112-6068	1	Bolt-Shoulder
52	112-0315	1	Blade
53	112-0607	1	Rod-Deck, Front Adjustment
54	112-3748	1	Rod-Brake
55	112-5879	1	Rod-Keeper, Belt
56	112-0436	1	Pin-Handle, Deck Release
57	112-0641	1	Cup-Pivot, Lift
58	112-3749	1	Spacer
59	112-0644	1	Spacer
60	112-5800	1	Belt-V Type
61	112-0314	1	Pulley-Idler
63	112-6067	1	Cover-Belt
64	112-0718	1	Bracket-Cable, Deck
65	112-6066	1	Support-Bracket, Pivot
67	112-0353	1	Discharge Chute ASM

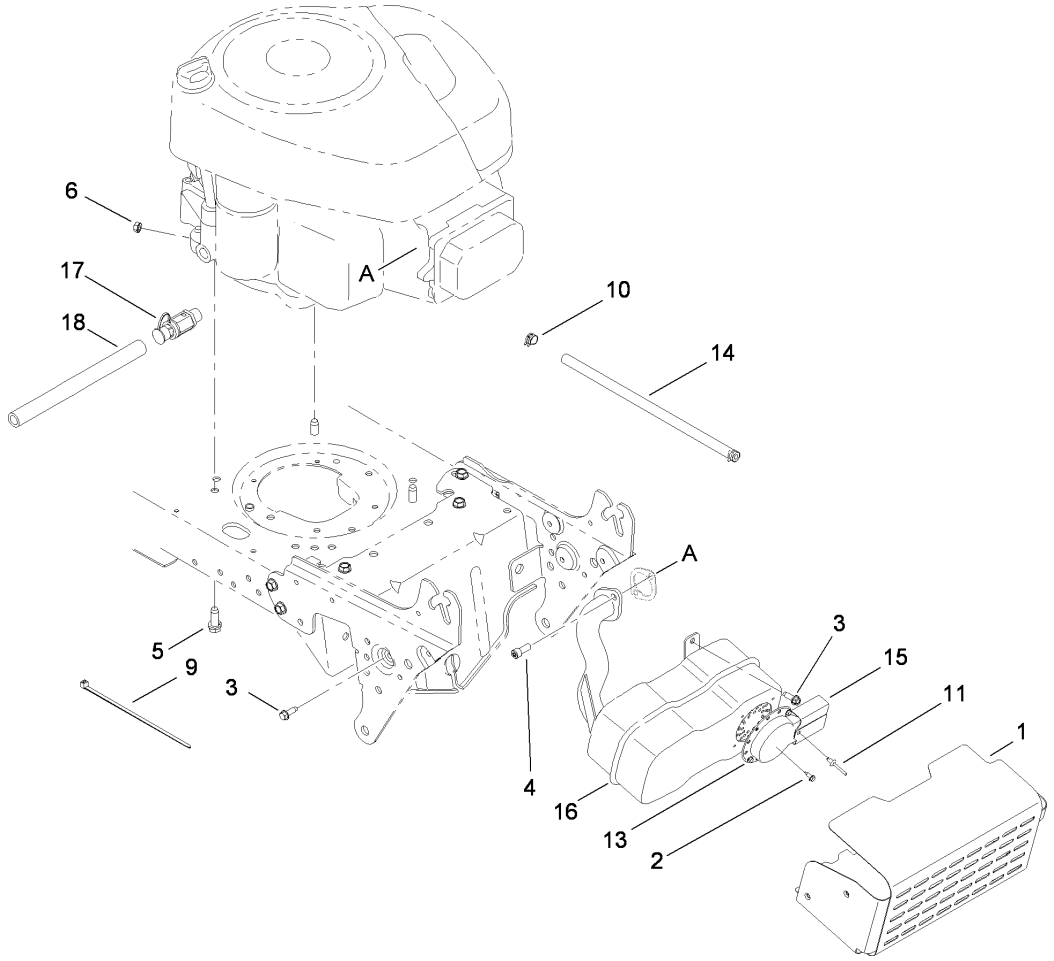

Muffler and Guard Assembly

Ref	Part No.	Qty.	Description
1	112-6096	1	Shield-Muffler
2	112-0626	1	Screw-HWHTF
3	112-0587	1	Screw-TAP
4	112-6012	1	Screw-HSH
5	112-0487	1	Screw-TAP
6	112-0546	1	Nut-Sems
9	112-0527	1	Tie-Cable
10	112-0573	1	Clamp-Hose
11	112-3741	1	Rivet-Pop
13	112-0453	1	Deflector-Muffler
14	112-0720	1	Hose-Fuel
15	112-0730	1	Deflector-Muffler, Long
16	112-6095	1	Muffler-Single Inlet
17	112-6094	1	Drain-Oil
18	112-0553	1	Hose-Drain

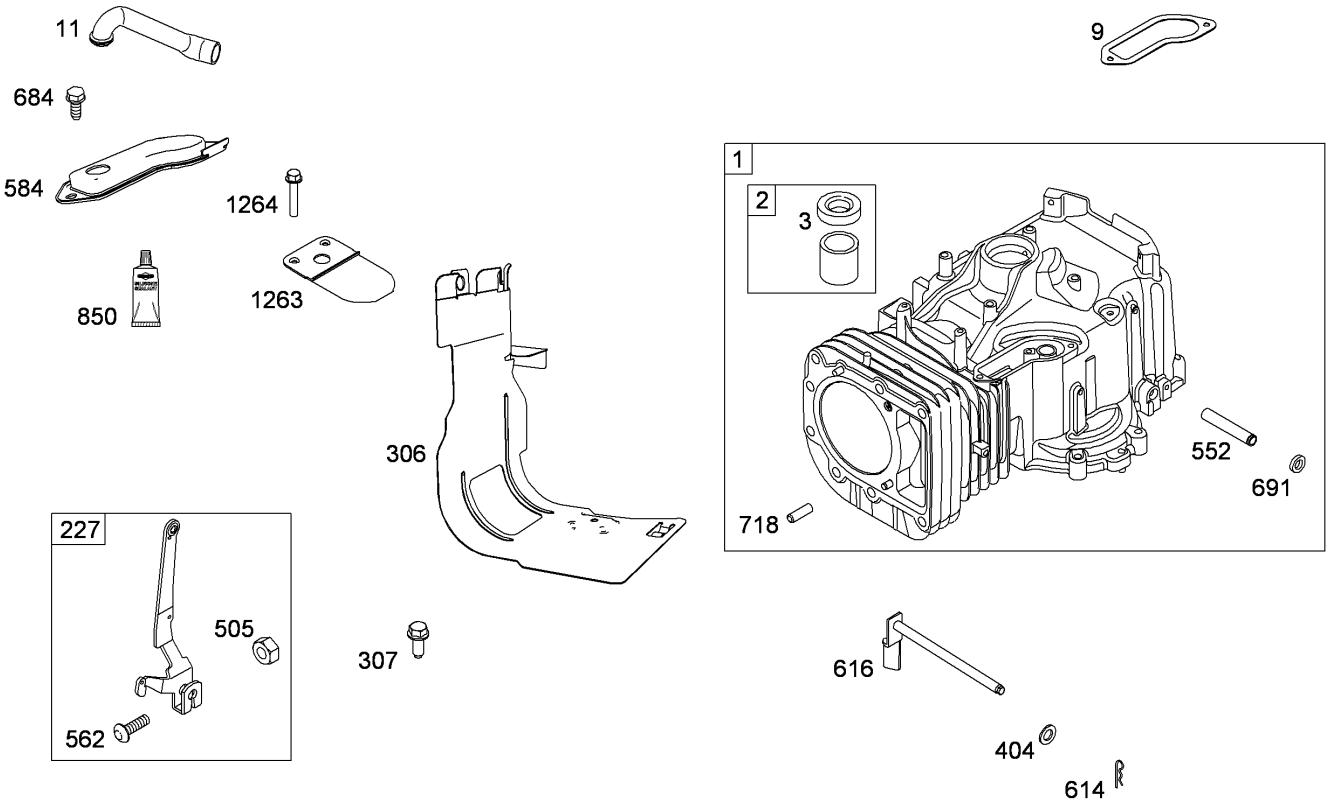


Assemblies include all parts shown in frames

Cylinder Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶1	794128	1	Cylinder Assembly
❶2	399265	1	Bushing And Seal Kit (Magneto Side)
❶❸3	391086s	1	Seal-Oil (Magneto Side)
❶9	697109	1	Gasket-Breather
❶11	794683	1	Tube-Breather
❶48	795446	1	Short Block
❶227	691374	1	Lever-Control, Governor
❶306	794953	1	Shield-Cylinder
❶307	691003	1	Screw (Cylinder Shield)
❶404	691691	1	Washer (Governor Crank)
❶505	691251	1	Nut (Governor Control Lever)
❶552	697144	1	Bushing-Crank, Governor
❶562	691119	1	Bolt (Governor Control Lever)
❶584	794682	1	Cover-Passage, Breather (Use With Liquid Sealant, Ref 850)
❶614	691620	1	Pin-Cotter
❶616	692012	1	Crank-Governor
❶684	697157	1	Screw (Breather Passage Cover)
❶❸691	692407	1	Seal-Shaft, Governor
❶718	690959	1	Pin-Locating
❶850	100106	1	Sealant-Liquid
❶1058	276352	1	Operator Manual
❶1263	697124	1	Reed-Breather

Ref	Part No.	Qty.	Description
❶1264	697104	1	Screw (Breather Reed)
❶1330	273521	1	Repair Manual

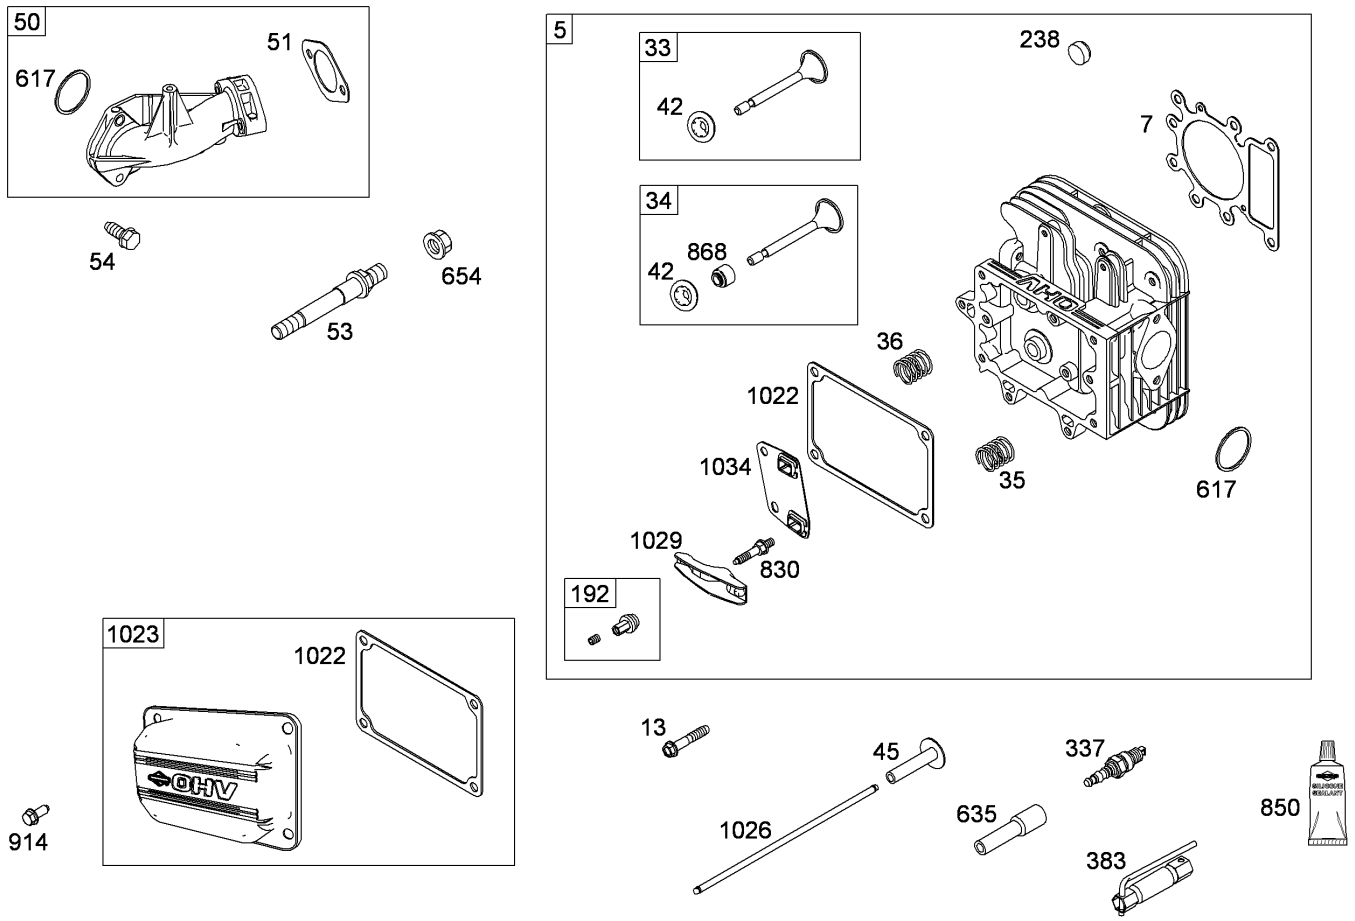


Assemblies include all parts shown in frames

Cylinder Head Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶5	796005	1	Head-Cylinder
❶❸7 ❹	794114	1	Gasket-Head, Cylinder
❶13	793988	1	Screw (Cylinder Head)
❶33	792688	1	Valve-Exhaust
❶34	791935	1	Valve-Intake
❶35	691279	1	Spring-Valve (Intake)
❶36	691279	1	Spring-Valve (Exhaust)
❶42	499586	1	Keeper-Valve
❶45	690564	1	Tappet-Valve
❶50	690193	1	Manifold-Intake
❶❷51 ❸❹	692137	1	Gasket-Intake
❶53	690227	1	Stud (Carburetor)
❶54	691148	1	Screw (Intake Manifold)
❶192	691986	1	Adjustor-Arm, Rocker
❶238	691843	1	Cap-Valve
❶337	491055s	1	Plug-Spark
❶383	89838s	1	Wrench-Spark Plug
❶❷617 ❸	692138	1	Seal-O Ring (Intake Manifold) (Red)
❶635	691909	1	Boot-Spark Plug
❶654	690958	1	Nut (Carburetor)
❶830	691095	1	Stud-Arm, Rocker


Ref	Part No.	Qty.	Description
❶850	100106	1	Sealant-Liquid (Use To Install Rocker Cover)
❶❸868 ❹	690968	1	Seal-Valve
❶914	697551	1	Screw (Rocker Cover)
❶❸1022 ❹	272475s	1	Gasket-Cover, Rocker
❶1023	791079	1	Cover-Rocker (Use With Liquid Sealant, Ref 850)
❶1026	692003	1	Rod-Push (Intake)
❶1026	692011	1	Rod-Push (Exhaust)
❶1029	691751	1	Arm-Rocker
❶1034	690822	1	Guide-Rod, Push

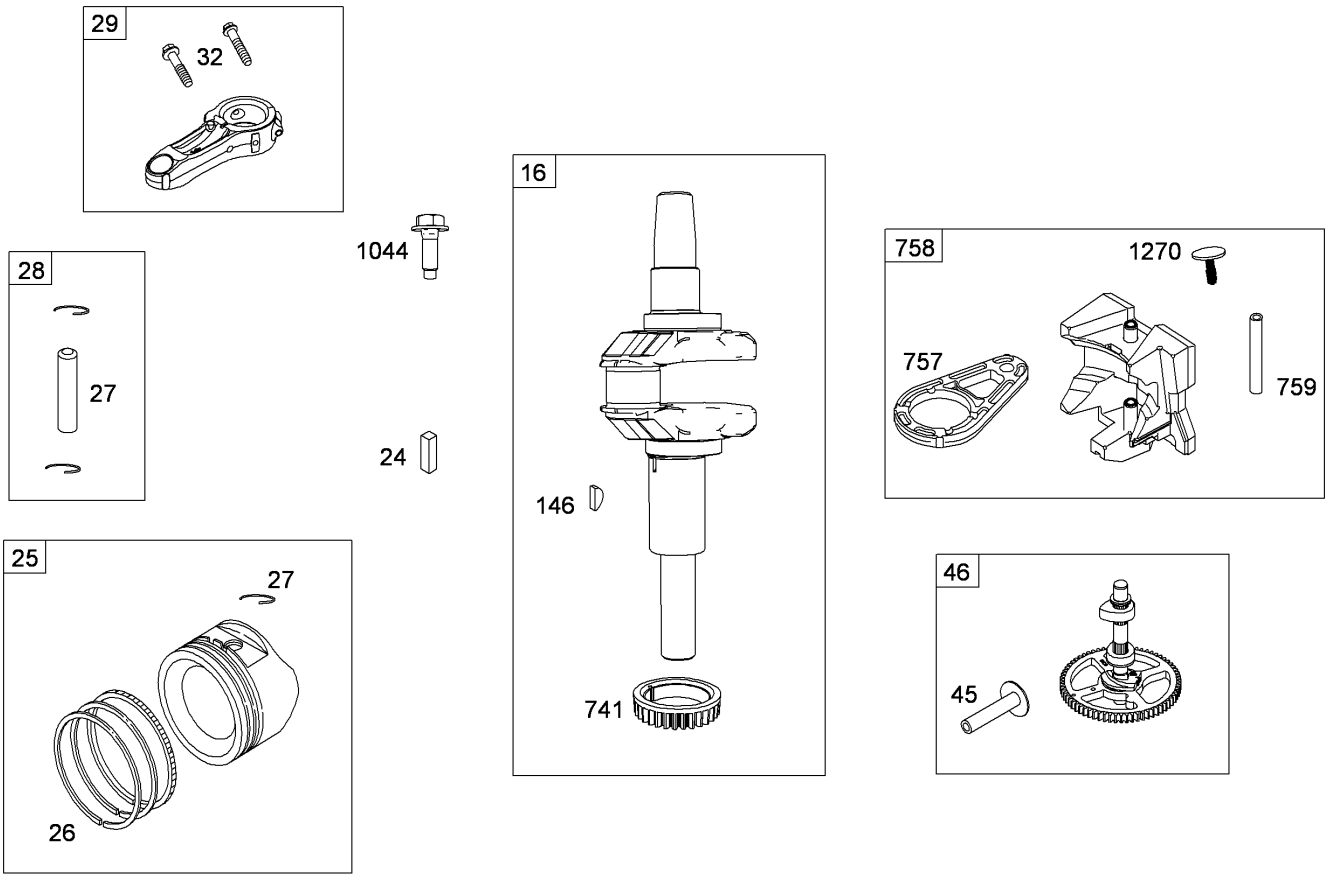

Assemblies include all parts shown in frames

Crankshaft and Piston/Ring Assembly
Briggs and Stratton 331777-0946-B2


Ref	Part No.	Qty.	Description
❶16	697127	1	Crankshaft
❶24	222698s	1	Key-Flywheel
❶25	794124	1	Piston ASM (Standard)
❶25	794125	1	Piston ASM (.020 Oversize)
❶26	794126	1	Ring Set (Standard)
❶26	794127	1	Ring Set (.020 Oversize)
❶27	698469	1	Lock-Pin, Piston
❶28	794143	1	Pin-Piston
❶29	794122	1	Rod-Connecting
❶32	791118	1	Screw (Connecting Rod)
❶45	690564	1	Tappet-Valve
❶46	793880	1	Camshaft
❶146	691639	1	Key-Timing
❶741	697128	1	Gear-Timing
❶757	793242	1	Link-Counterweight
❶758	793763	1	Counterweight
❶759	697392	1	Pin-Counterweight
❶1044	698139	1	Screw (Flywheel)
❶1270	793243	1	Plug-Counterweight, A V S

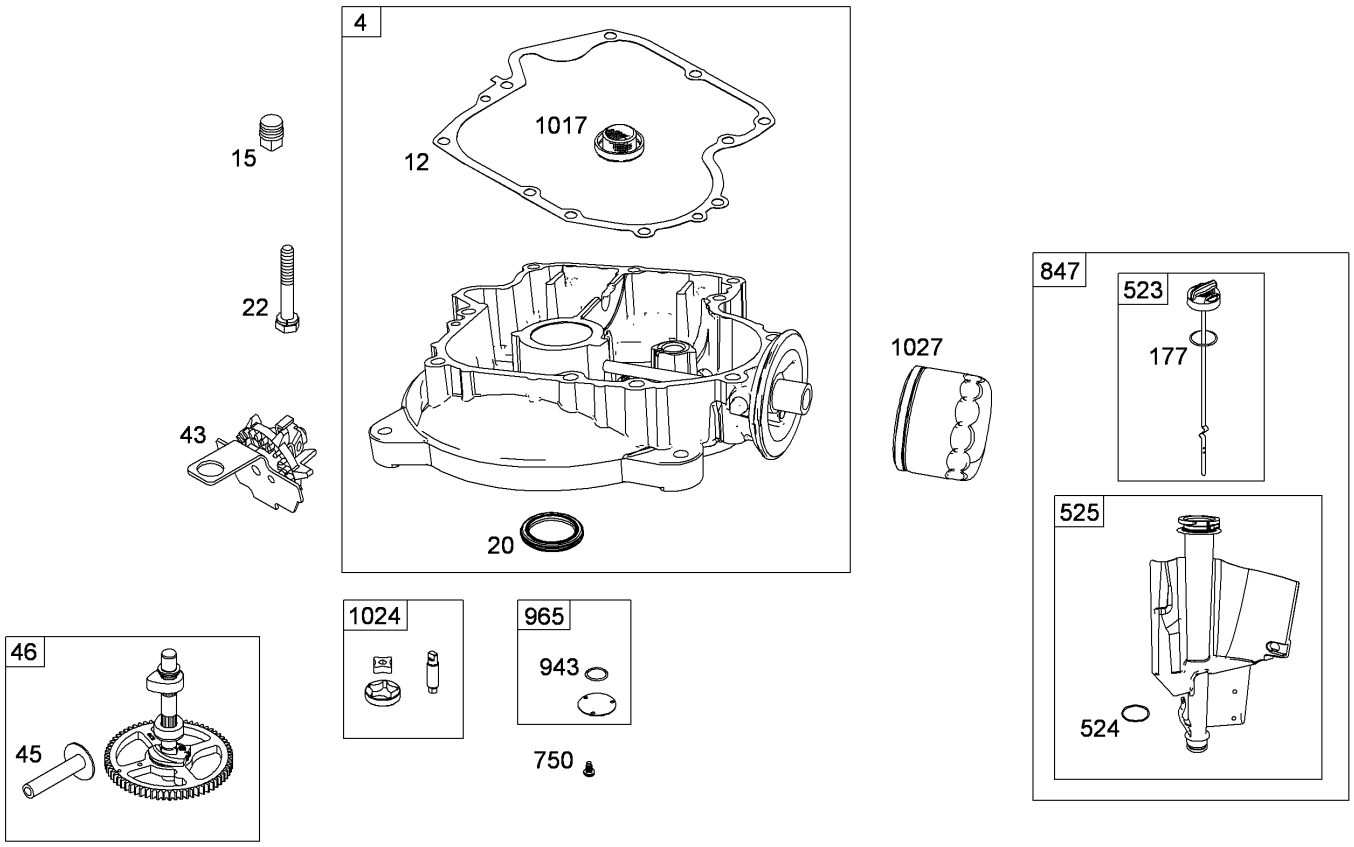

Assemblies include all parts shown in frames

Crankcase Cover/Sump Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶4	795993	1	Sump-Engine
❶❸12	697110	1	Gasket-Crankcase
❶15	690946	1	Plug-Drain, Oil
❶❸20	795387	1	Seal-Oil (PTO Side)
❶22	692125	1	Screw (Crankcase/Cover/Sump)
❶43	691968	1	Slinger-Governor, Oil
❶45	690564	1	Tappet-Valve
❶46	793880	1	Camshaft
❶❸177	691031	1	Seal-O Ring (Dipstick Tube)
❶523	699908	1	Dipstick
❶❸524	691032	1	Seal-O Ring (Dipstick Tube)
❶525	697184	1	Tube-Dipstick
❶750	790832	1	Screw (Oil Pump Cover)
❶847	790442	1	Dipstick And Tube ASM
❶❸943	690589	1	Seal-O Ring (Oil Pump Cover)
❶965	499613	1	Cover-Pump, Oil
❶1017	690770	1	Screen-Pump, Oil
❶1024	794644	1	Pump-Oil
❶1027	492932s	1	Filter-Oil

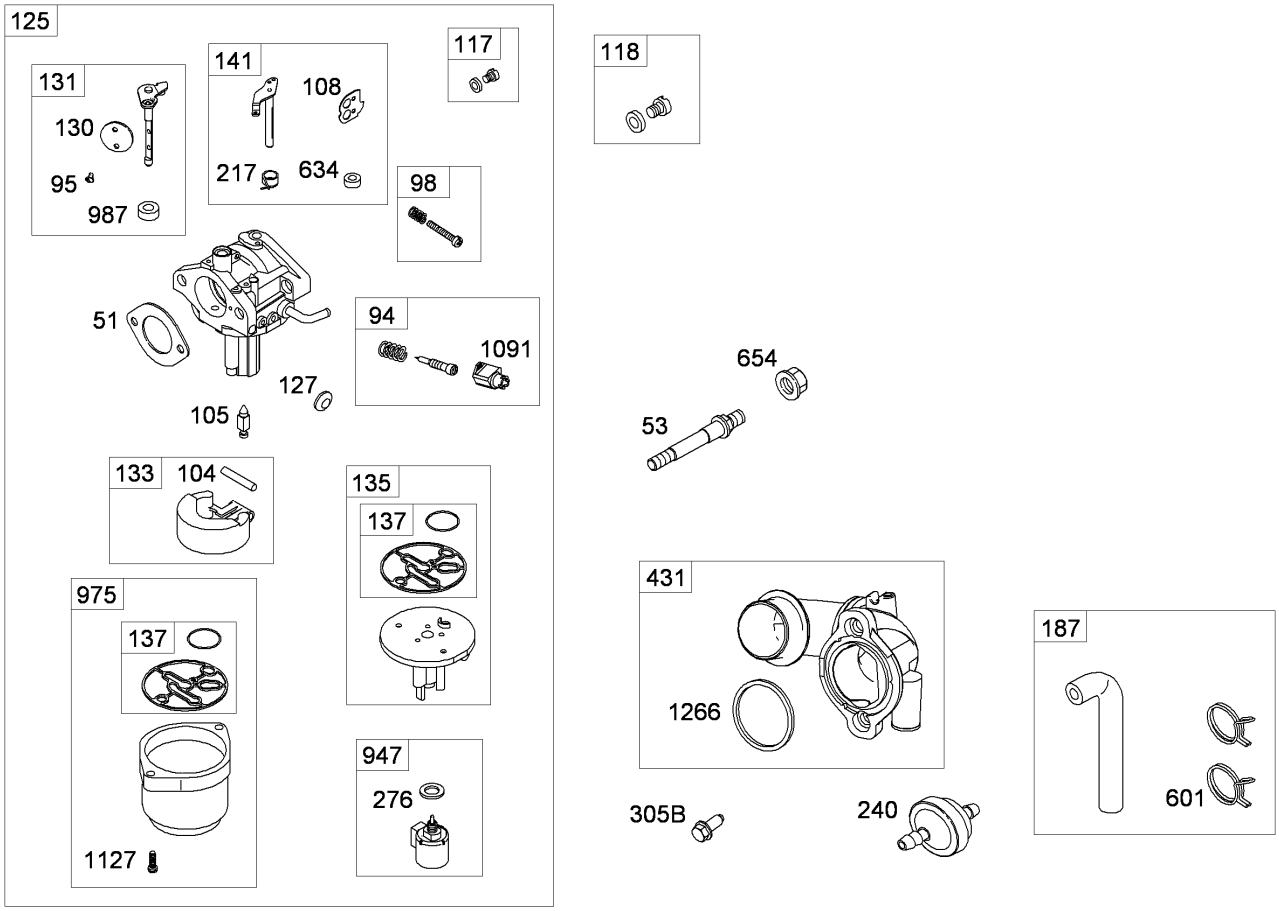


Assemblies include all parts shown in frames

Carburetor and Fuel Pump Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶❷51 ❸❹	692137	1	Gasket-Intake
❶53	690227	1	Stud (Carburetor)
❶94	793610	1	Idle Mixture Kit
❶❷95	690718	1	Screw (Throttle Valve)
❶98	695408	1	Idle Speed Kit
❶❷104	694918	1	Pin-Hinge, Float
❶❷105	696136	1	Valve-Float, Needle
❶108	695419	1	Valve-Choke
❶117	791501	1	Jet-Main (Standard)
❶118	843099	1	Jet-Main (High Altitude)
❶125	794136	1	Carburetor
❶❷127	690727	1	Plug-Welch
❶130	792747	1	Valve-Throttle
❶131	792765	1	Throttle Shaft Kit
❶133	694914	1	Carburetor Float ASM
❶135	698780	1	Fuel Transfer Tube ASM
❶❷137	698781	1	Gasket-Bowl, Float
❶141	792777	1	Choke Shaft Kit
❶187	791805	1	Line-Fuel (Formed) (Cut To Required Length)
❶❷217	695409	1	Spring-Return, Choke
❶240	394358s	1	Filter-Fuel
❶276	695410	1	Washer-Sealing

Ref	Part No.	Qty.	Description
❶305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)
❶431	794145	1	Elbow-Intake
❶601	791850	1	Clamp-Hose
❶634	698779	1	Spring And Seal ASM (Choke Shaft)
❶654	690958	1	Nut (Carburetor)
❶947	699915	1	Solenoid, Fuel
❶975	699502	1	Bowl-Float
❶❷987	698777	1	Seal-Shaft, Throttle
❶1091	691333	1	Cap-Limiter
❶1127	695407	1	Screw (Float Bowl)
❶❷1266 ❸	691917	1	Seal-O Ring (Intake Elbow) (Red)

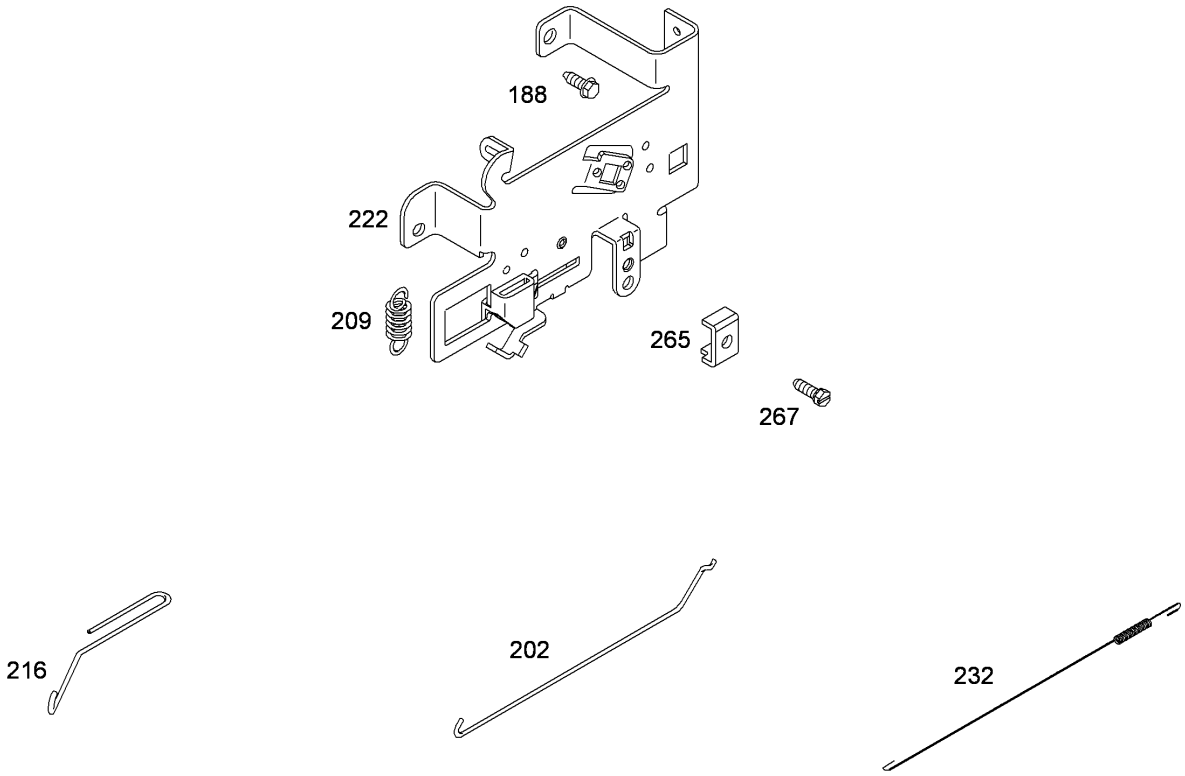


Assemblies include all parts shown in frames

Governor Control Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶188	691693	1	Screw (Control Bracket)
❶202	691841	1	Link-Governor, Mechanical
❶209	692208	1	Spring-Governor (Green)
❶216	691840	1	Link-Choke
❶222	694042	1	Bracket-Control
❶232	691842	1	Spring-Link, Governor
❶265	691024	1	Clamp-Casing
❶267	794904	1	Screw (Casing Clamp)


1036 Emissions Label

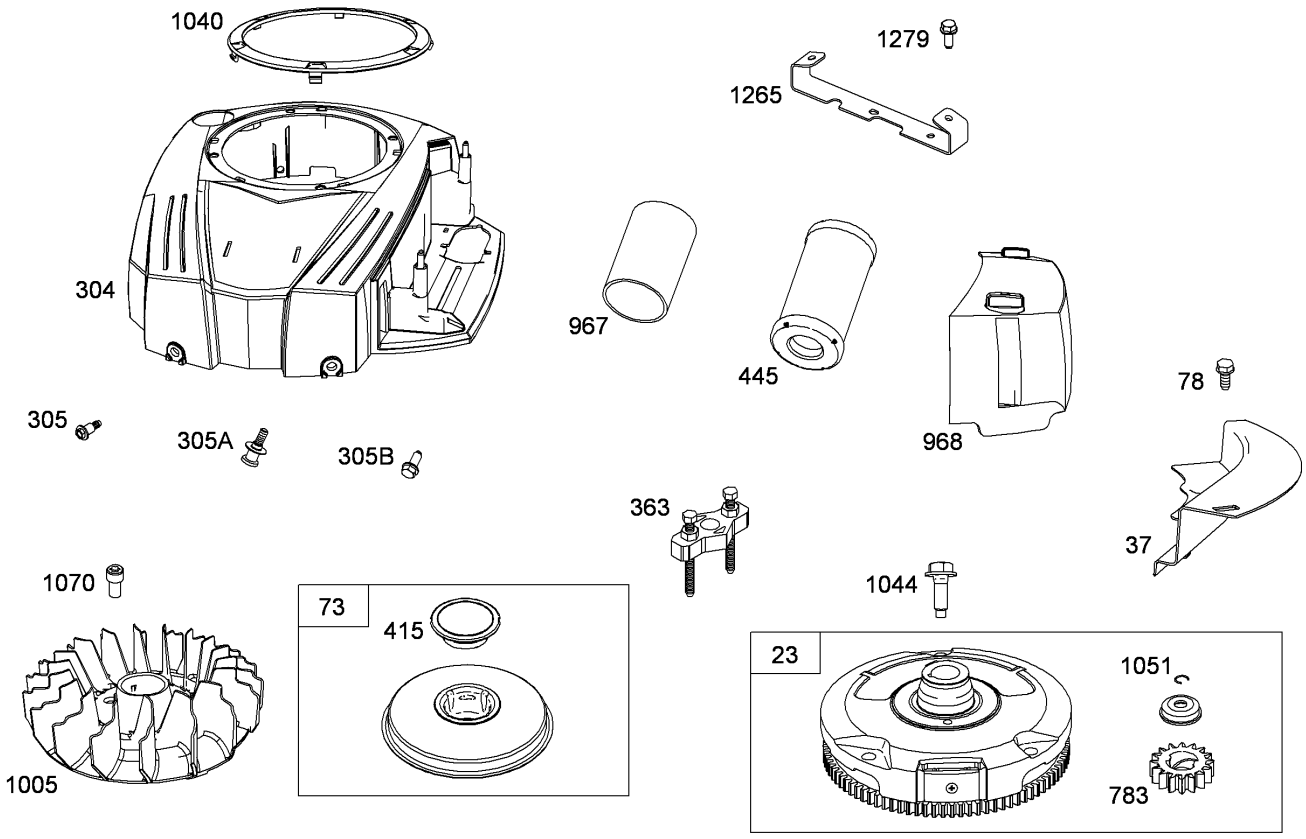

Assemblies include all parts shown in frames

Blower Housing, Flywheel and Air Guide Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶23	693557	1	Flywheel
❶37	699882	1	Guard-Flywheel
❶73	794357	1	Screen-Rotating
❶78	691003	1	Screw (Flywheel Guard)
❶304	794918	1	Housing-Blower
❶305	697102	1	Screw (Blower Housing)
❶305A	793376	1	Screw (Blower Housing)
❶305B	795891	1	Screw (Blower Housing) (Blower Housing To Intake Elbow)
❶363	19203	1	Puller-Flywheel
❶415	794129	1	Plug (Rotating Screen)
❶445	793569	1	Filter-Cartridge, Air Cleaner
❶783	693713	1	Gear-Pinion
❶967	693958	1	Filter-Cleaner, Pre
❶968	794140	1	Cover-Cleaner, Air
❶1005	794121	1	Fan-Flywheel
❶1036		1	Label-Emissions
❶1040	698368	1	Plate-Trim
❶1044	698139	1	Screw (Flywheel)
❶1051	691265	1	Ring-Retaining
❶1070	690363	1	Screw (Flywheel Fan)
❶1265	794151	1	Support-Housing, Blower
❶1279	697551	1	Screw (Blower Housing Support)

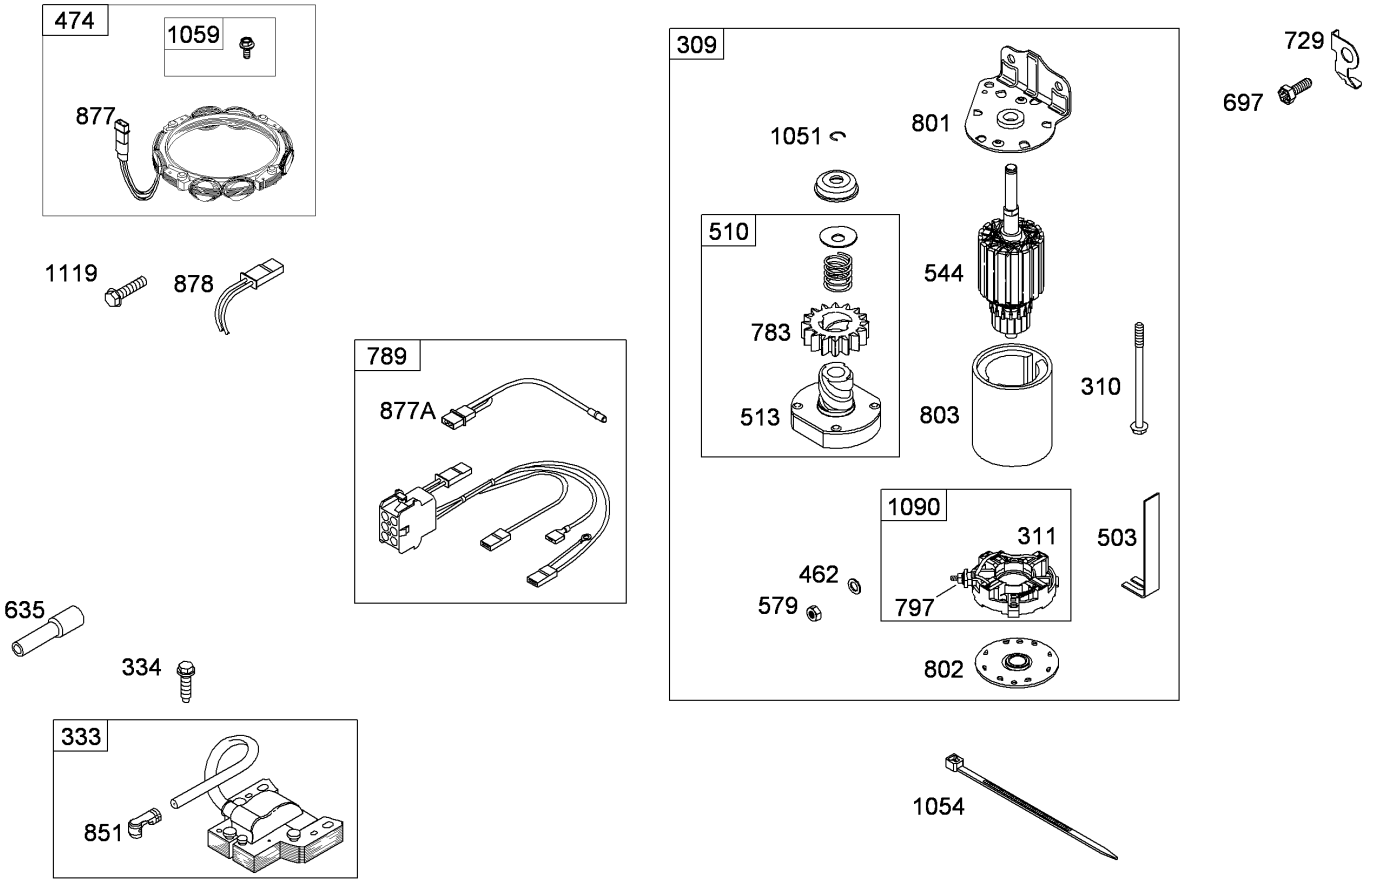



Assemblies include all parts shown in frames


Electric Starter and Alternator Assembly
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶309	693551	1	Motor-Starter
❶310	690323	1	Screw (Starter Motor)
❶311	497608	1	Brush Set
❶333	795315	1	Armature-Magneto
❶334	691061	1	Screw (Magneto Armature)
❶462	691261	1	Washer (Starter Cable)
❶474	696459	1	Alternator
❶503	691532	1	Strap-Starter
❶510	693699	1	Drive-Starter
❶513	692024	1	Clutch-Drive
❶544	692034	1	Armature-Starter
❶579	691029	1	Nut (Starter Cable)
❶635	691909	1	Boot-Spark Plug
❶697	690372	1	Screw (Drive Cap)
❶729	691224	1	Clip-Wire
❶783	693713	1	Gear-Pinion
❶789	698330	1	Harness-Wiring
❶797	693167	1	Nut (Brush Retainer)
❶801	691283	1	Cap-Drive
❶802	691286	1	Cap-End
❶803		1	Housing-Starter (Serviced By Ref 309, 693551-Starter Motor)
❶851	692424	1	Terminal–Spark Plug
❶877	393456	1	Wire-Connector / Alternator

Ref	Part No.	Qty.	Description
❶877A	790544	1	Harness-Wiring
❶878	398661	1	Harness-Alternator
❶1051	691265	1	Ring-Retainer (Starter Motor)
❶1054	280275	1	Tie-Cable
❶1059	698516	1	Screw And Washer Kit
❶1090	691293	1	Retainer-Brush
❶1119	691183	1	Screw (Alternator)

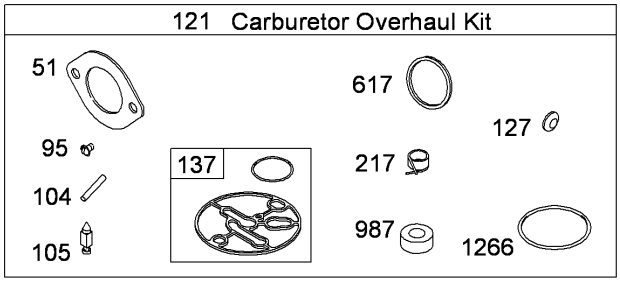

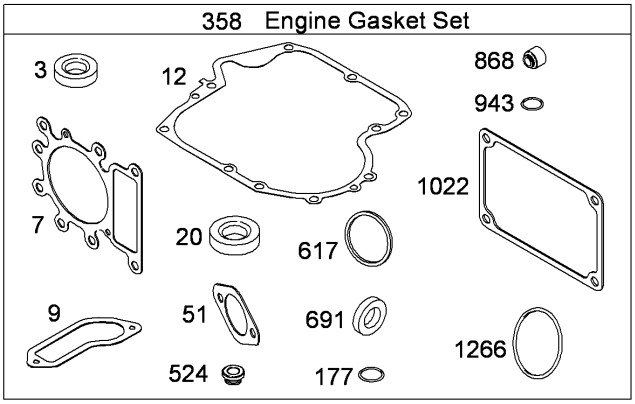

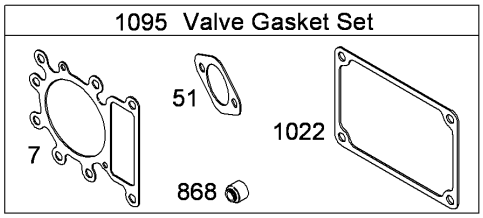

Assemblies include all parts shown in frames

Engine Gasket and Carburetor Overhaul Kit
Briggs and Stratton 331777-0946-B2

Ref	Part No.	Qty.	Description
❶❸3	391086s	1	Seal-Oil (Magneto Side)
❶❸7 ❹	794114	1	Gasket-Head, Cylinder
❶❸9	697109	1	Gasket-Breather
❶❸12	697110	1	Gasket-Crankcase
❶❸20	795387	1	Seal-Oil (PTO Side)
❶❷51 ❸❹	692137	1	Gasket-Intake
❶❷95	690718	1	Screw (Throttle Valve)
❶❷104	694918	1	Pin-Hinge, Float
❶❷105	696136	1	Valve-Float, Needle
❶121	792369	1	Carburetor Overhaul Kit
❶❷127	690727	1	Plug-Welch
❶❷137	698781	1	Gasket-Bowl, Float
❶❸177	691031	1	Seal-O Ring (Dipstick Tube)
❶❷217	695409	1	Spring-Return, Choke
❶358	794150	1	Engine Gasket Set
❶❸524	691032	1	Seal-O Ring (Dipstick Tube)
❶❷617 ❸	692138	1	Seal-O Ring (Intake Manifold) (Red)
❶❸691	692407	1	Seal-Shaft, Governor
❶❸868 ❹	690968	1	Seal-Valve
❶❸943	690589	1	Seal-O Ring (Oil Pump Cover)
❶❷987	698777	1	Seal-Shaft, Throttle

Ref	Part No.	Qty.	Description
❶❸1022 ❹	272475s	1	Gasket-Cover, Rocker
❶1095	794158	1	Valve Gasket Set
❶❷1266 ❸	691917	1	Seal-O Ring (Intake Elbow) (Red)

Attachments and Accessories

For 13AL60RG544 - LX426 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
Blade Kit, Extreme (42 Inch)	112-6048
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Blade Kit (2 Blades, 42 Inch Decks)	98022

Attachments and Accessories

For 13RL60RG544 - LX426 Lawn Tractor

Product Name	Model/Part
Washout Port Kit	112-5803
Blade Kit, Extreme (42 Inch)	112-6048
42 Inch Two-Stage Snowthrower	190-032-101
42 Inch Twin Bagger	190-180-190
46 Inch Front Blade	190-833-000
8 Inch Rear Wheel Weight Kit	59159
Mulch Kit (42 Inch Deck)	77210
10 cu. ft. Dump Cart	79901
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tire Chain Kit	82722
Blade Kit (2 Blades, 42 Inch Decks)	98022

NOTES

NOTES

NOTES


TORO®